



53cm RECYCLER[®] /RB MOWER

Model No. 20776 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Bag Assembly	6
Engine Assembly	2	Engine Briggs & Stratton	
Rear Axle Assembly	3	Model 12F802–1750–E1	7–15
Gear Case Assembly	4	Toro Part Number Index	16–17
Handle Assembly	5		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Chute Kit	Model No. 59113	Spark Arrestor	Part No. 94–1681
Dethatcher Kit	Model No. 59131		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

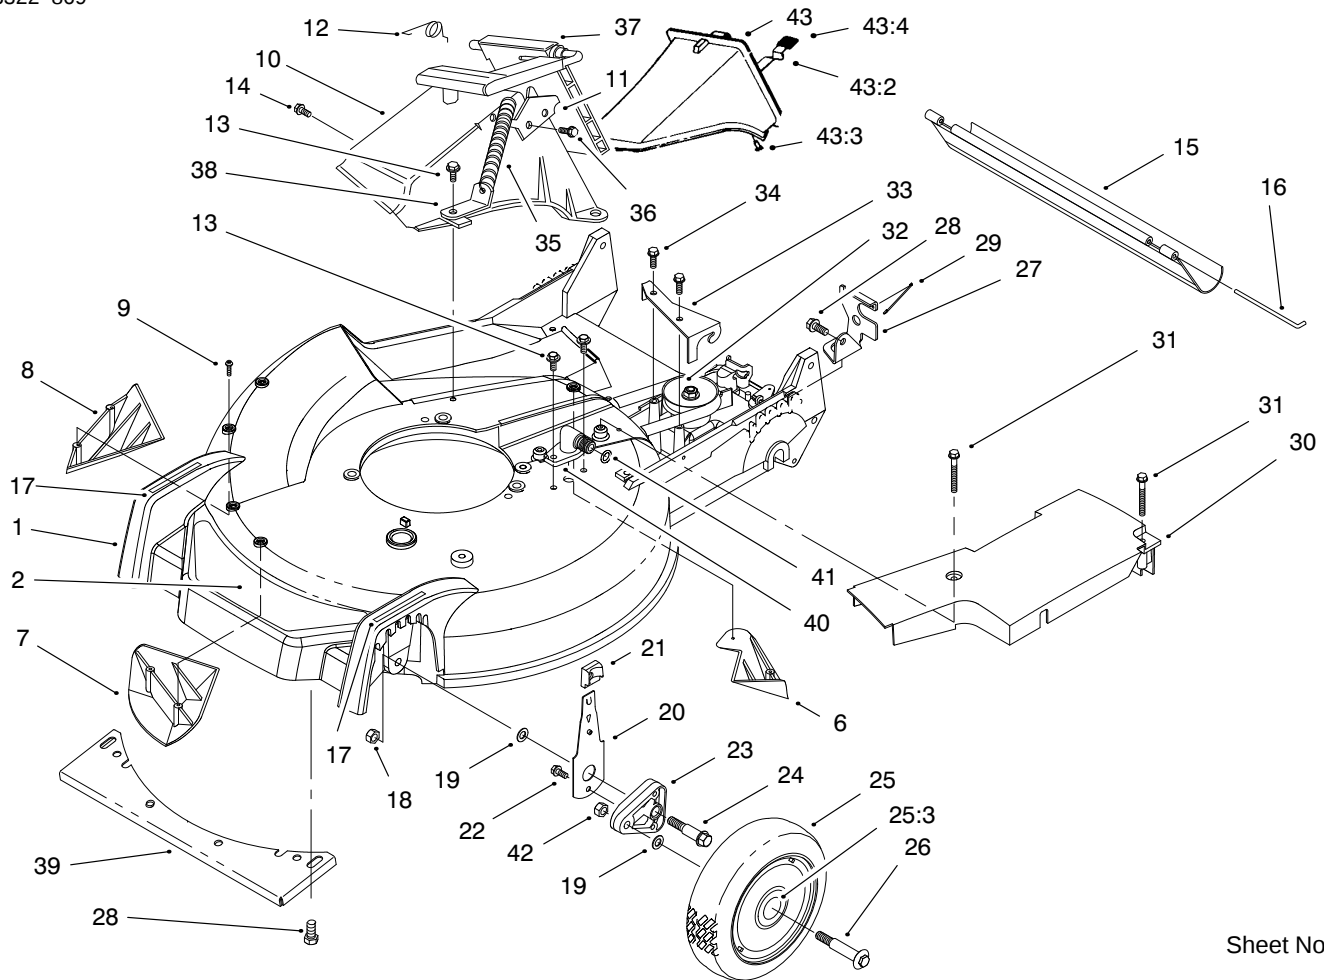


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	95-5615	1	Housing-Rwd
2	94-5407	1	Decal-Deck
6	92-1750	1	Plate-Kicker Rear
7	92-1720	1	Kicker-RH
8	92-1730	1	Kicker-LH
9	32144-111	6	Screw - PPH
10	82-9151	1	Tunnel-Discharge
11	93-3154	1	Plate-Latch
12	80-3770	1	Retainer-Door
13	46-6811	5	Screw-HWH
14	46-6810	1	Screw HWH
15	44-0580	1	Shield-Trailing
16	33-3208	1	Rod-Shield
18	3296-6	2	Nut-Lock
19	40-1940	4	Washer
20	66-0541	2	ASM-Spring Arm
21	25-7740	2	Knob-Arm
22	32144-85	2	Screw-HH
23	66-0580	2	Arm-Pivot
24	66-0560	2	Screw-Shoulder
25	92-9592	2	Assembly-8" Wheel
25:3	27-6250	4	Bushing
26	92-1057	2	Bolt-Shoulder
27	82-5680	1	Bracket-Adjustment
28	32144-70	5	Screw-TAP
29	46-7030	1	Retainer-Cable


Ref. No.	Part No.	Qty.	Description
30	98-1502	1	Cover-Belt
31	37-7260	2	Screw-TAP
32	62-6673	1	ASM-Gearcase
33	62-4320	1	Bracket-Guide
34	49-2040	2	Screw-HH
35	76-4660	1	Spring-Extension
36	46-8090	2	Screw-Tapping
37	93-7351	1	ASM-Door
38	71-9350	1	Spring-Bracket
39	46-5400	1	Shield-Front
40	95-2747	1	Fitting-Washout
41	46-6290	1	O-Ring
42	603773	2	Nut-Lock
43	77-0502	1	ASM-Plug
43:2	76-4640	1	Latch Discharge Plug
43:3	3295-35	1	Rivet Solid
43:4	76-4650	1	Grip Latch

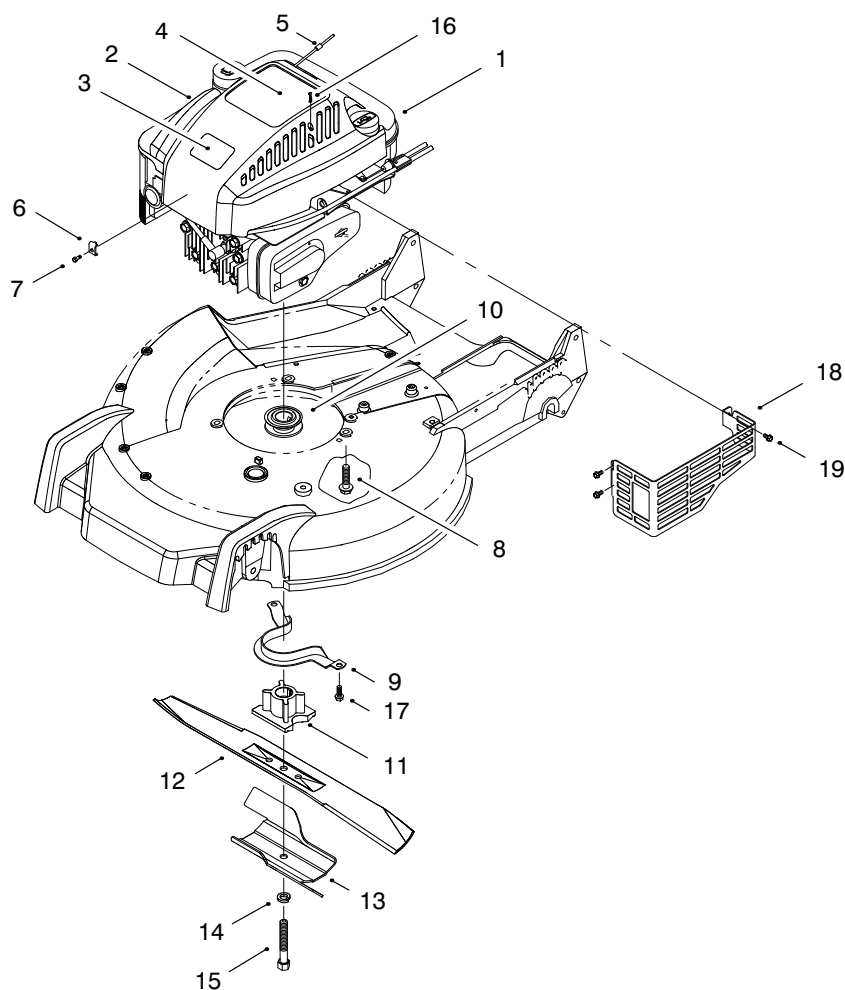

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine—Quantum 5.0 Hp
2	93—0243	1	Shroud
3	98—3206	1	Plate—Logo
4	93—4354	1	Decal—Engine
5	2210—316	1	Rope—Stop
6	2210—249	1	Clamp—Casing
7	93—8470	1	Screw—Clamp
8	32144—102	3	Screw
9	66—0570	1	Guide—Belt
10	62—7550	1	Pulley—Driver
11	93—4107	1	Retainer—Blade
12	93—4106	1	Blade—Generation Iii
13	94—1608	1	Stiffener—Blade
14	3253—22	1	Washer—Lock
15	26—0670	1	Bolt—Blade
16	32144—121	2	Screw
17	32144—70	2	Screw—TAP
18	82—8550	1	Shield—Muffler
19	32144—73	3	Screw—HWHTF

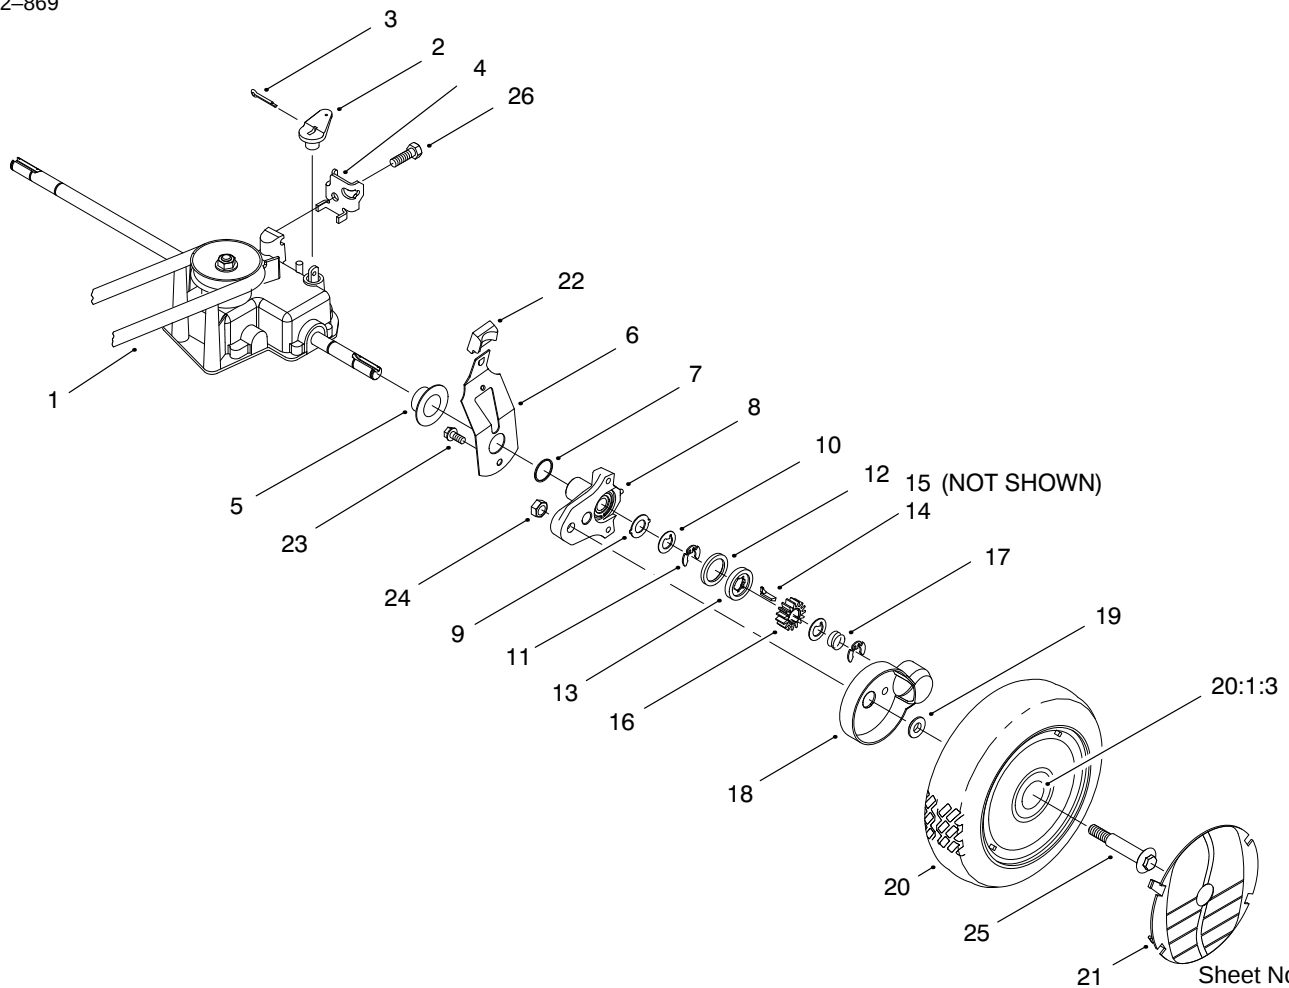


Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	62-3900	1	V-Belt
2	60-8821	1	Lever-Shift
3	3272-10	1	Pin-Cotter
4	82-8780	1	Retainer-Cable
5	42-3520	2	Cap-End
6	63-8721	2	ASM-Arm
7	237-153	2	O-Ring
8	63-8701	2	ASM
9	65-4730	2	Washer-Thrust
10	65-4740	4	Washer-Thrust
11	65-2720	4	Ring-Retaining
12	65-4710	2	Ring-Friction
13	65-4760	2	Washer
14	66-6050	1	Key-Rocking LH
15	66-6040	1	Key-Locking RH
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover
20	99-8136	2	Wheel ASM
*20:1		2	Assembly-8" Wheel
20:1:3	27-6250	4	Bushing
21	92-7663	1	Cover-Wheel
22	25-7740	2	Knob-Arm
23	32144-85	2	Screw-HH
24	603773	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
25	92-1057	2	Bolt-Shoulder
26	32144-70	1	Screw-TAP


* Not illustrated

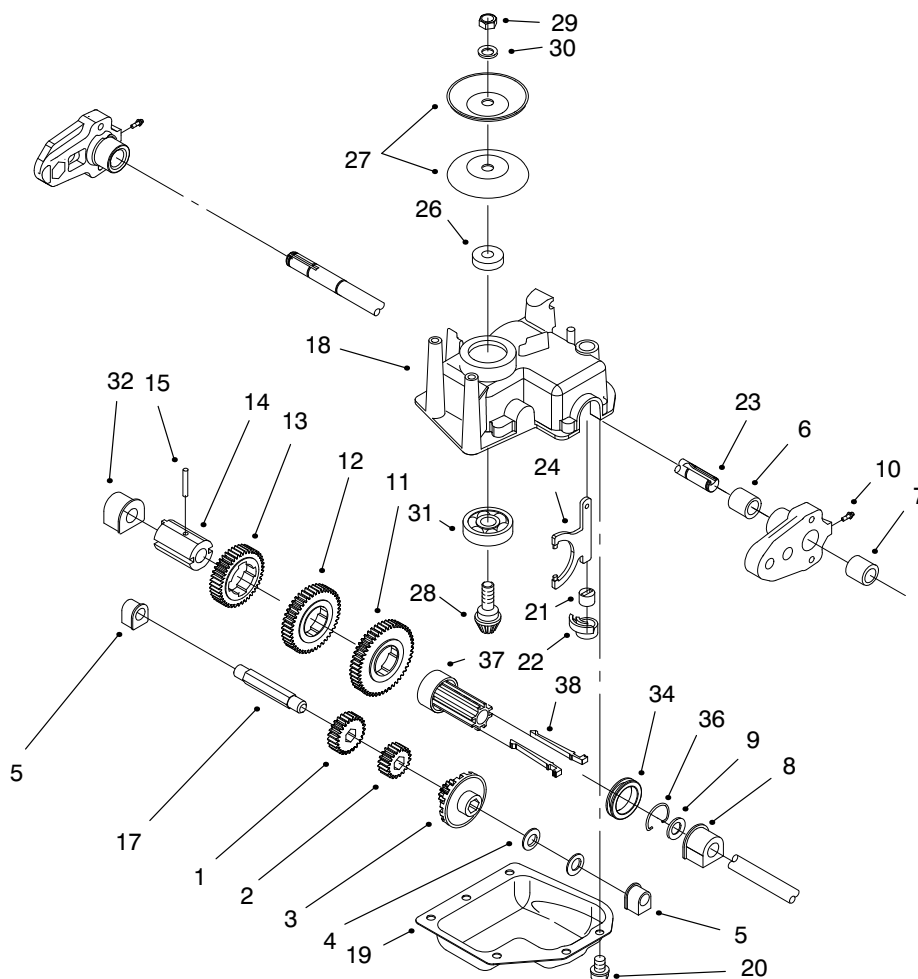

Sheet No.:1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear	28	60-8890	1	Gear-Pinnion
2	55-3780	1	Pinion 20t 2nd Gear	29	3296-5	1	Nut-Lock
3	55-3760	1	15 T Pinion	30	3256-24	1	Washer-Flat
4	36-4791	2	Washer-Thrust	31	38-7820	1	Bearing-Ball
5	60-8750	2	Bushing	32	60-8850	1	Bushing-Output
6	70-9760	2	Bushing	34	76-0770	1	Collar-Shift
7	48-2060	2	Bearing-Caged Needle	36	65-5250	1	Clip-Spring
8	60-8770	1	Bushing-Output Shaft	37	76-0780	1	Sleeve-Shift Key
9	36-4780	1	Washer-Thrust	38	76-0760	2	Key-Shift
10	302-56	2	Fitting-Grease				
11	55-3770	1	Gear 49t 1st Gear				
12	55-3790	1	Gear 44t 2nd Gear				
13	55-3810	1	Gear 39t 3rd Gear				
14	60-8790	1	Sleeve-Gear				
15	32121-120	1	Pin-Coil				
17	60-8800	1	Shaft-Intermediate				
18	60-8710	1	Gearcase-Upper 3 Sp				
19	60-8730	1	Cover-Gearcase				
20	49-2040	6	Screw-HH				
21	29-9570	1	Bushing-Yoke				
22	60-8810	1	Retainer-Shift-Fork				
23	65-4770	1	Shaft-Output				
24	60-8870	1	Yoke-Shift				
26	62-6660	1	Spacer-Pulley				
27	100-1176	2	Pulley-Half				

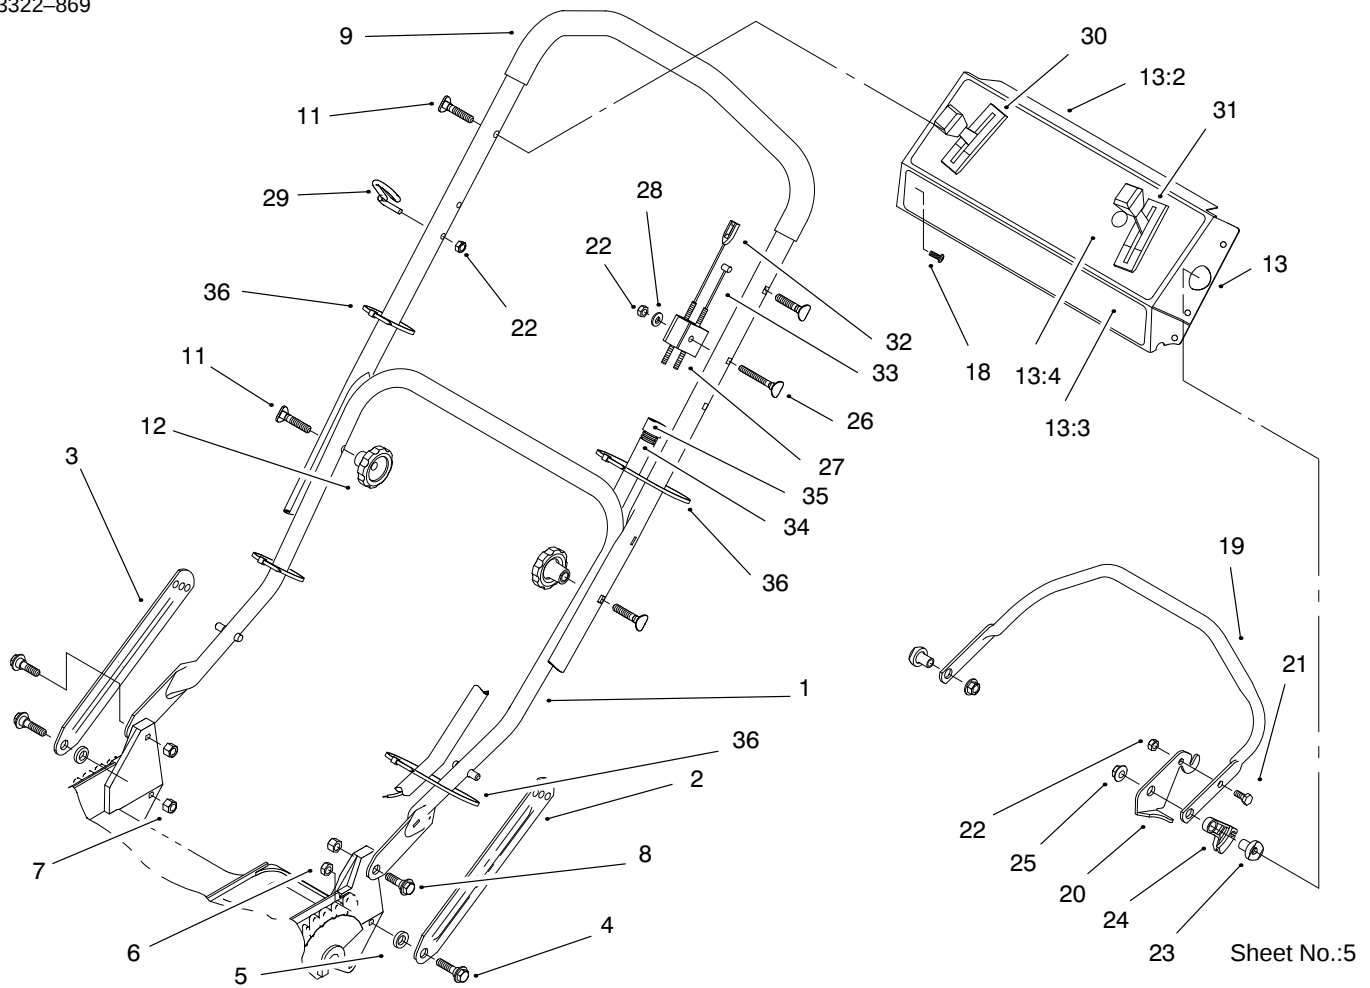


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	43-1362	1	ASM-Handle
2	84-8361	1	Latch-Handle
3	84-8401	1	Latch-Handle
4	27-7210	2	Screw-Shoulder
5	3-3287	2	Spacer
6	3296-47	1	Nut-Lock
7	3296-72	3	Nut-Lock
8	27-7211	2	Screw-Shoulder
9	94-4922	1	ASM-Handle
11	92-2260	4	Screw-Handle
12	19-4050	2	Knob
13	98-7143	1	Panel-Control
13:2	93-6655	1	Decal-Danger
13:3	95-7077	1	Decal-Panel
13:4	98-2020	1	Decal-Instruction
18	92-9665	5	Screw-Phil
19	52-7430	1	Bar-Control
20	66-5351	1	Lever-Control
21	321-39	1	Screw-HH
22	3296-73	3	Nut-Lock
23	49-1630	2	Spacer-Support
24	46-5520	1	Lever-Traction
25	3296-74	2	Nut-Flange
26	92-2269	1	Screw-Handle
27	46-6980	1	Support-Cable
28	3256-1	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description
29	86-9671	1	Guide-Rope
30	76-2712	1	Control-Speed
31	93-4186	1	Cable-Throttle
32	93-4187	1	Cable-Brake
33	46-5481	1	Cable-Traction
34	46-6440	1	Cover-Cables
35	2412-50	4	Clip-Tubing
36	3290-378	3	Tie-Cable

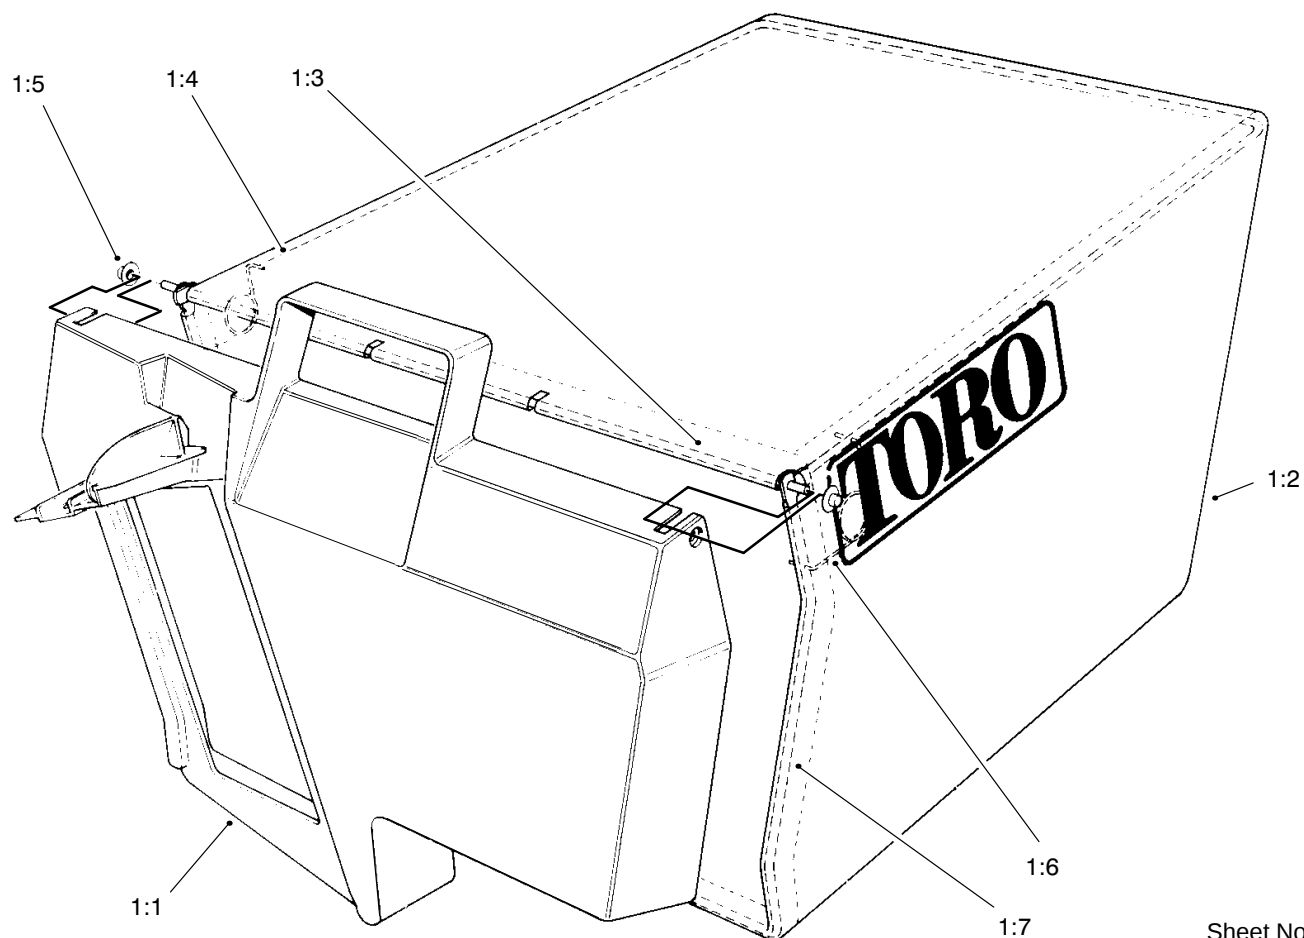


Sheet No.:6

Bag Assembly

Ref. No.	Part No.	Qty.	Description
*	11-0189	1	ASM-Bag
1:1	37-1393	1	Door-Bag
1:2	44-0524	1	Bag-Grass
1:3	33-4820	1	Hinge-Door
1:4	42-4030	1	Frame-Bag
1:5	3290-422	2	Nut-Push
1:6	36-6910	2	Spring
1:7	42-4020	1	Frame-Bag

Ref. No.	Part No.	Qty.	Description

* Not illustrated

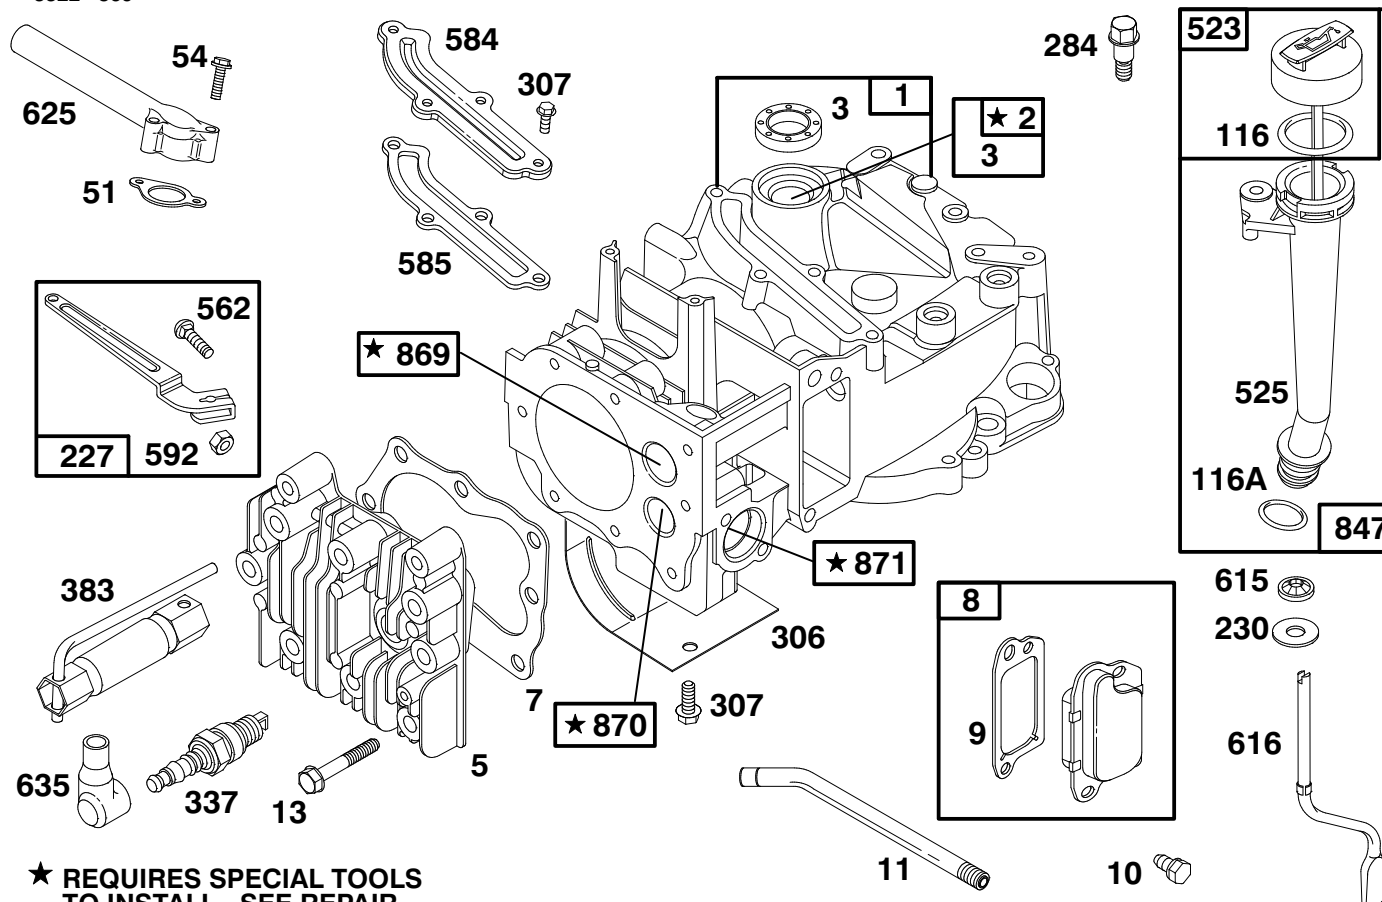


ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal – Oil	1
5	214626	Head – Cylinder	1
†★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket – Breather	1
10	94650	Screw – Hex.	1
11	231933	Tube – Breather	1
13	94547	Screw – Hex.	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Hex	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex.	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex.	1

★Included in Gasket Set – Part No. 497316.

Ref. No.	Part No.	Description	No. Used
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube – Oil Filler	1
562	94582	Screw – Hex.	1
584	224328	Baffle – Cylinder	1
★585	272238	Gasket – Breather	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Bushing – Guide (Exhaust)	1
		Note: 63709 Bushing – Guide (Intake)	1

† Included in Valve Overhaul Gasket Set – Part No. 498528.

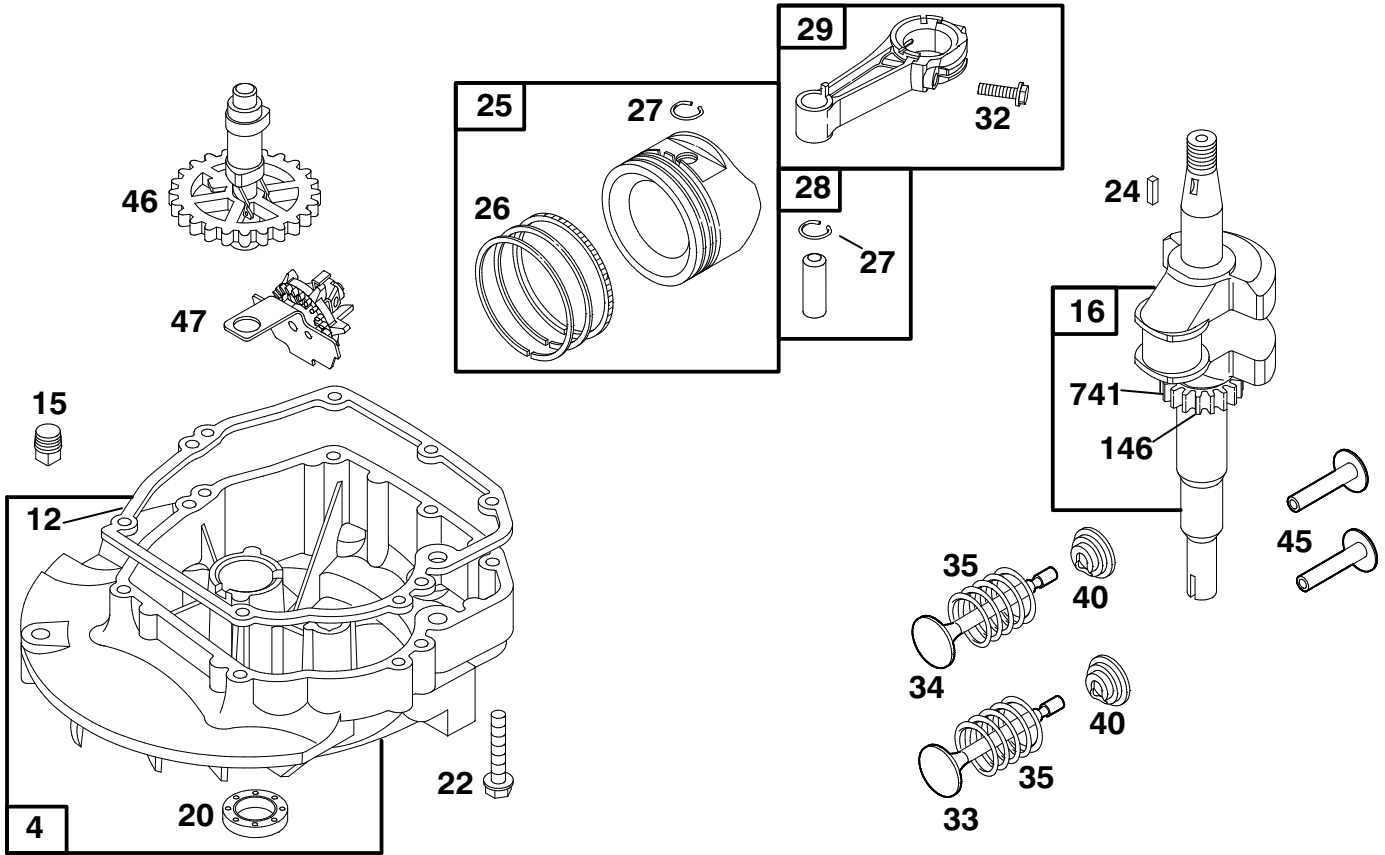


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1	26	499425	Ring Set (Standard)	1
★12	272198	Gasket – Crankcase	1		499426	Ring Set (0.010" O.S.)	1
15	94880	Plug – Oil Drain	1		499427	Ring Set (0.020" O.S.)	1
16	498573	Crankshaft	1		499428	Ring Set (0.030" O.S.)	1
★20	399781	Seal – Oil	1	27	263190	Lock – Piston Pin	1
22	94220	Screw – Hex.	1	28	499423	Pin – Piston (Standard)	1
		Note: 94612		29	499424	Rod Assembly – Connecting	1
		Screw – Hex.		32	94699	Screw – Connecting Rod	1
		(One (1) Used in Hole		33	262651	Valve – Exhaust	1
		Nearest Breather.)	1	34	262652	Valve – Intake	1
24	222698	Key – Flywheel	1	35	262224	Spring – Valve	1
25	499429	Piston Assy. (Standard)	1	40	93312	Retainer – Valve Spring	1
	499430	Piston Assy. (0.010" O.S.)	1	45	262204	Tappet – Valve	1
	499431	Piston Assy. (0.020" O.S.)	1	46	498275	Gear – Cam	1
	499432	Piston Assy. (0.030" O.S.)	1	47	493737	Slinger – Oil	1
				146	94388	Key – Timing	1
				741	262598	Gear – Timing	1

★Included in Gasket Set–Part No. 497316.

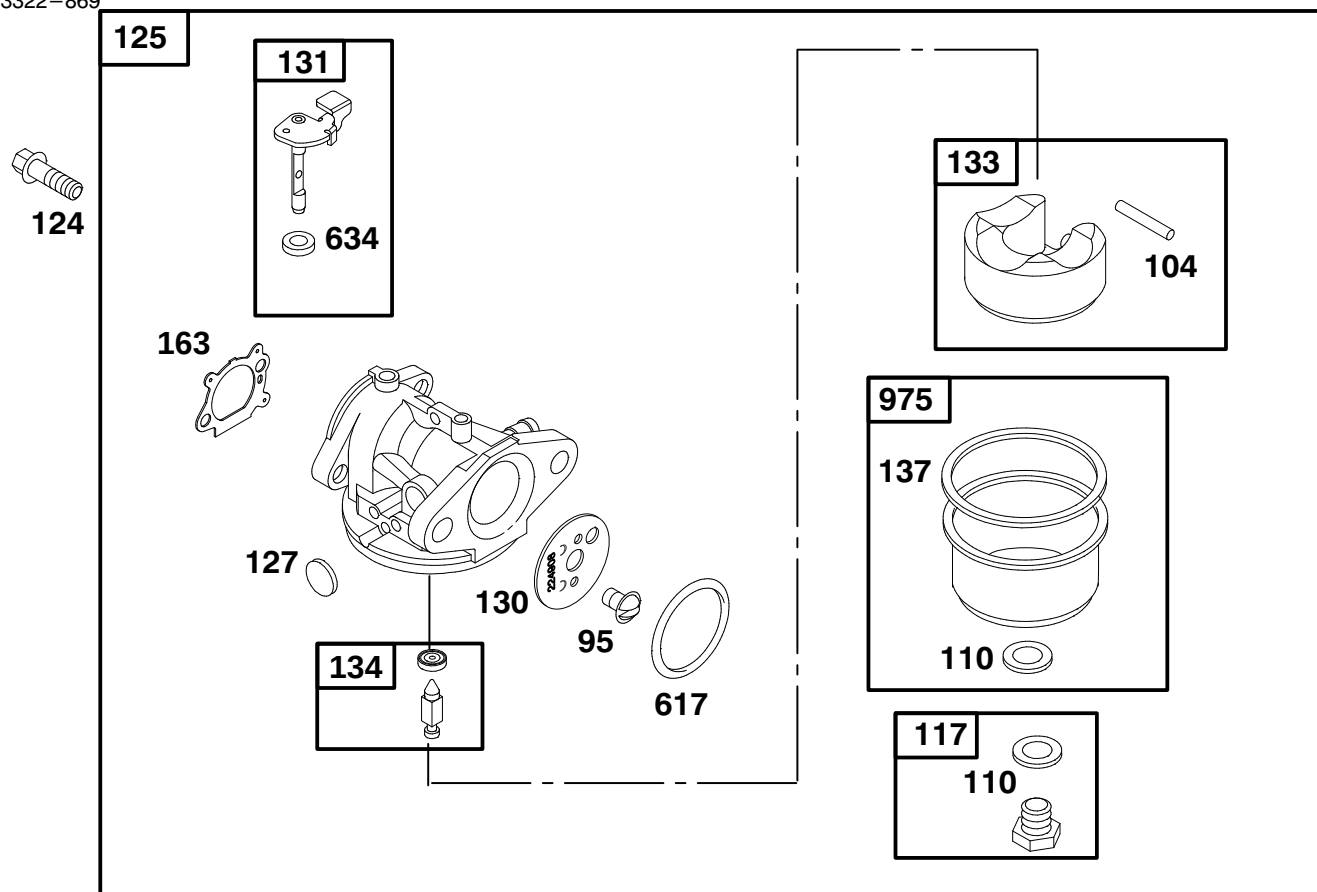

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1



Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Slotted	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
117	494870	Jet – Main (Std.)	1
		Note: 497315 Jet – Main (High Altitude)	1
124	94840	Screw – Hex	1
125	498170	Carburetor	1
●127		Plug – Welch (Sold in Kit Only).	1
130	224908	Valve – Throttle	1

Ref. No.	Part No.	Description	No. Used
131	493267	Shaft – Throttle	1
133	398187	Float – Carburetor	1
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆★163	272653	Gasket – Air Cleaner	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam (Sold in Kit Only).	1
975	493640	Bowl – Float	1

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

★Included in Gasket Set–Part No. 497316.

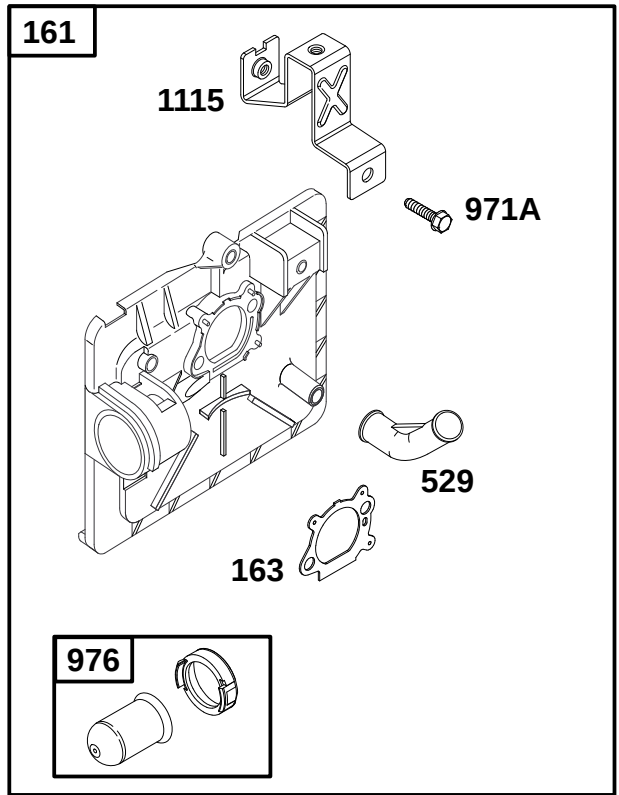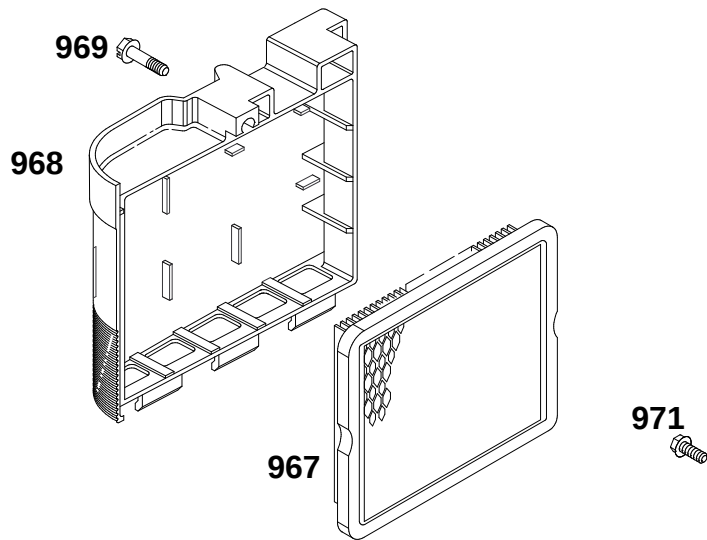

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

◆Included in Carburetor Kit—Part No. 498260.
◆Included in Carburetor Gasket Set—Part No. 498261.

★Included in Gasket Set—Part No. 497316.

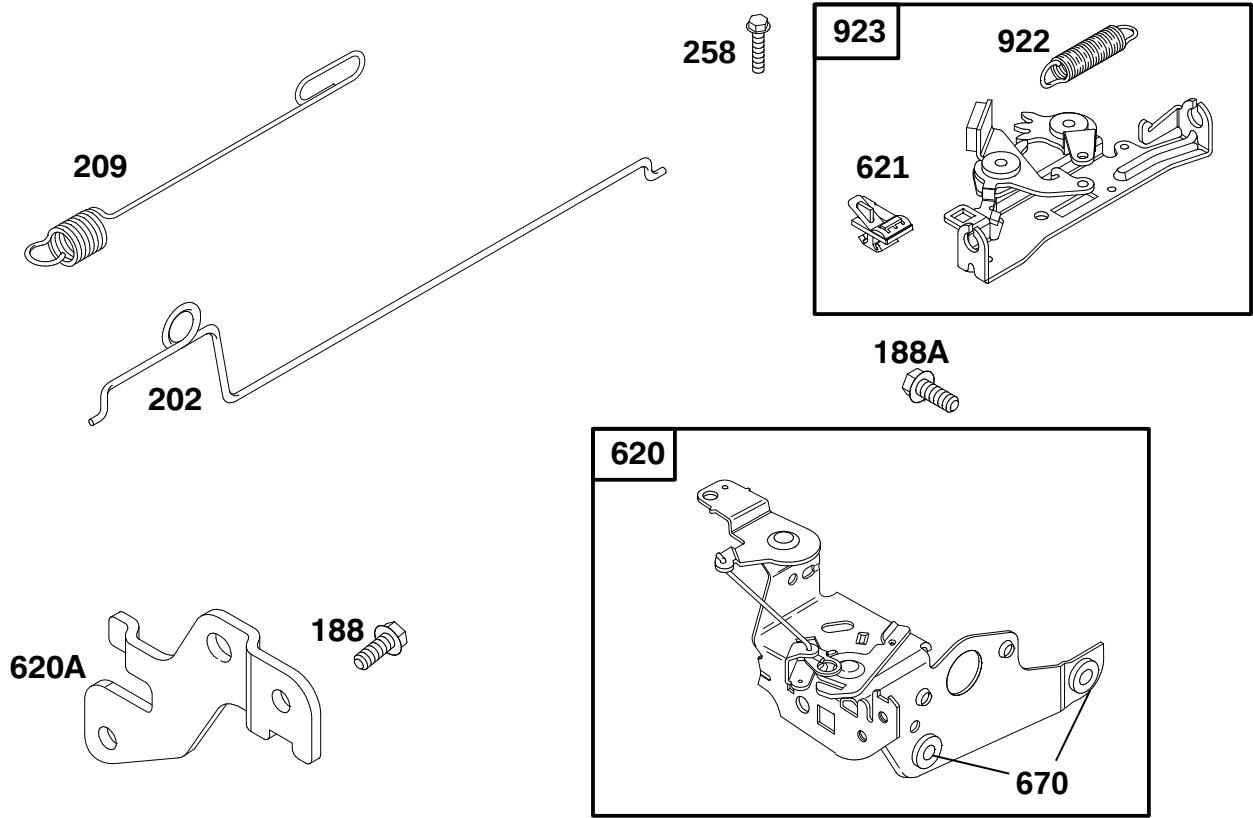





Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex.	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
★670	493823	Spacer – Bracket	1
		Note: Includes Two	
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

★Included in Gasket Set–Part No. 497316.

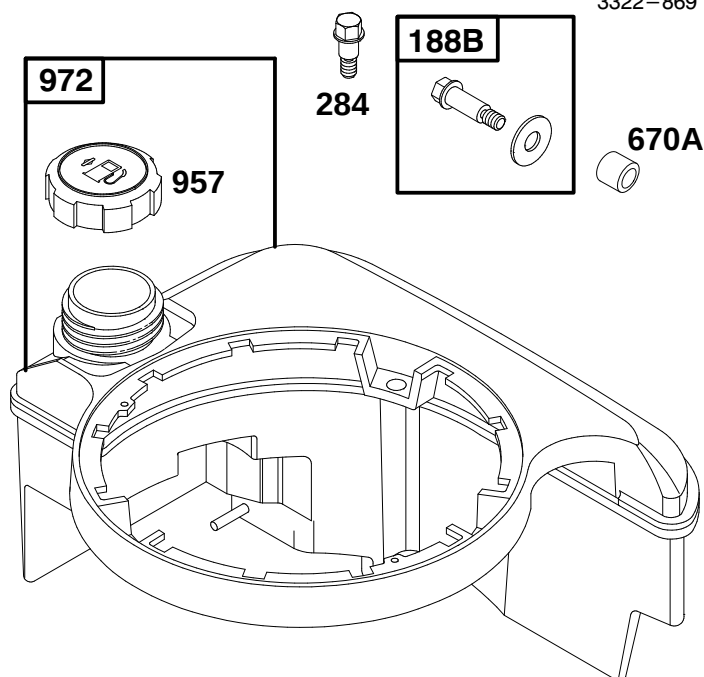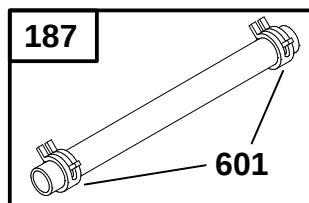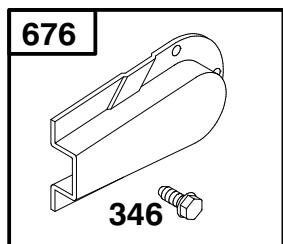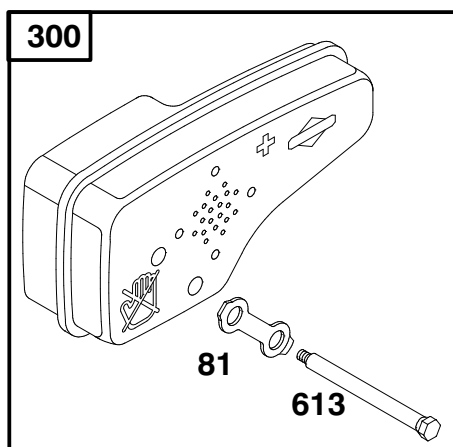


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Line – Fuel (Cut to Required Length)	1
188B	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	94896	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
601	95162	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank – Fuel	1

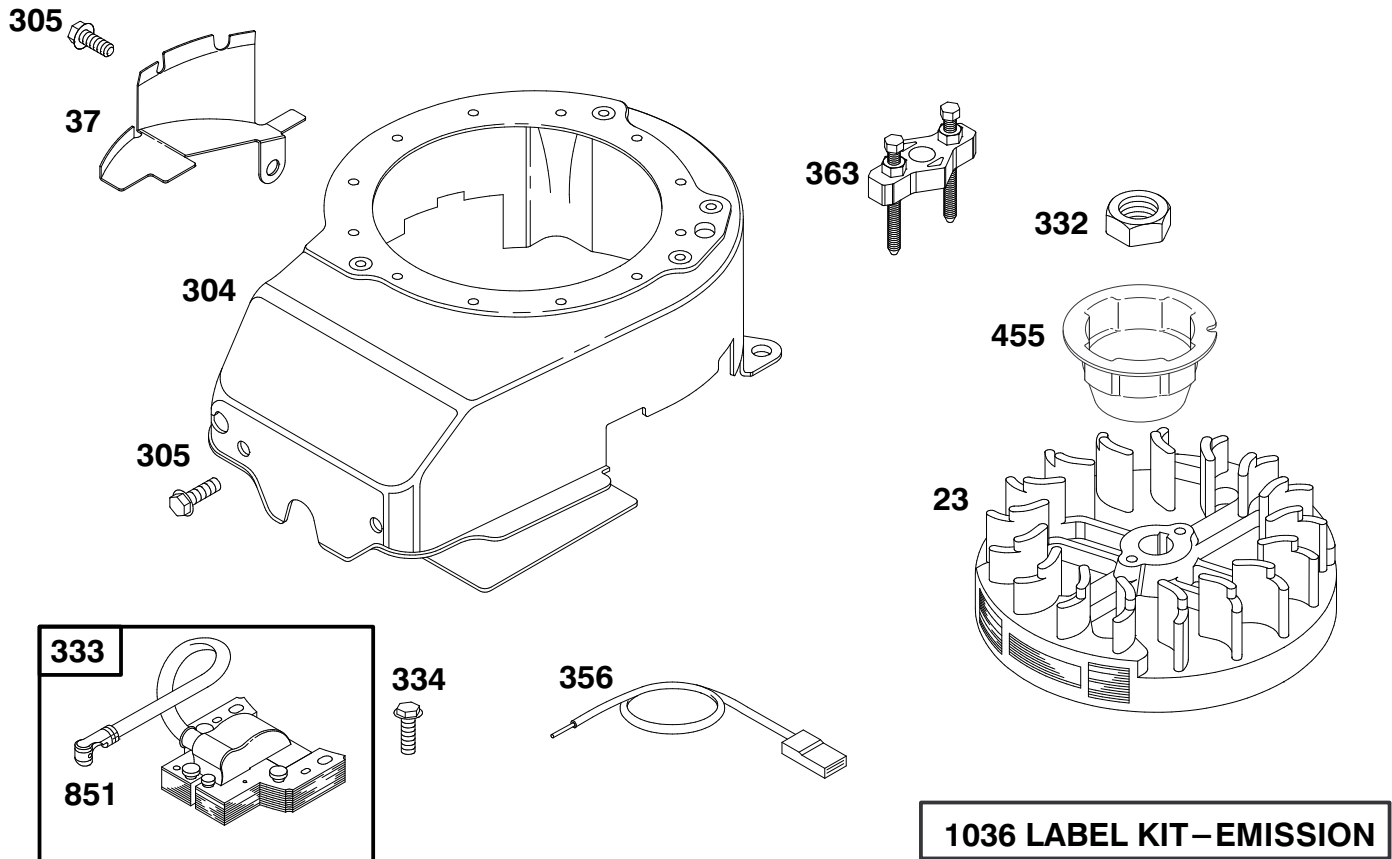


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Hex.	1
332	94877	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Hex.	1
356	497833	Wire – Stop	1
363	19069	Puller – Flywheel	1
455	225121	Cup – Flywheel	1
851	493880	Terminal – Cable	1
1036	499341	Label Kit – Emission	1




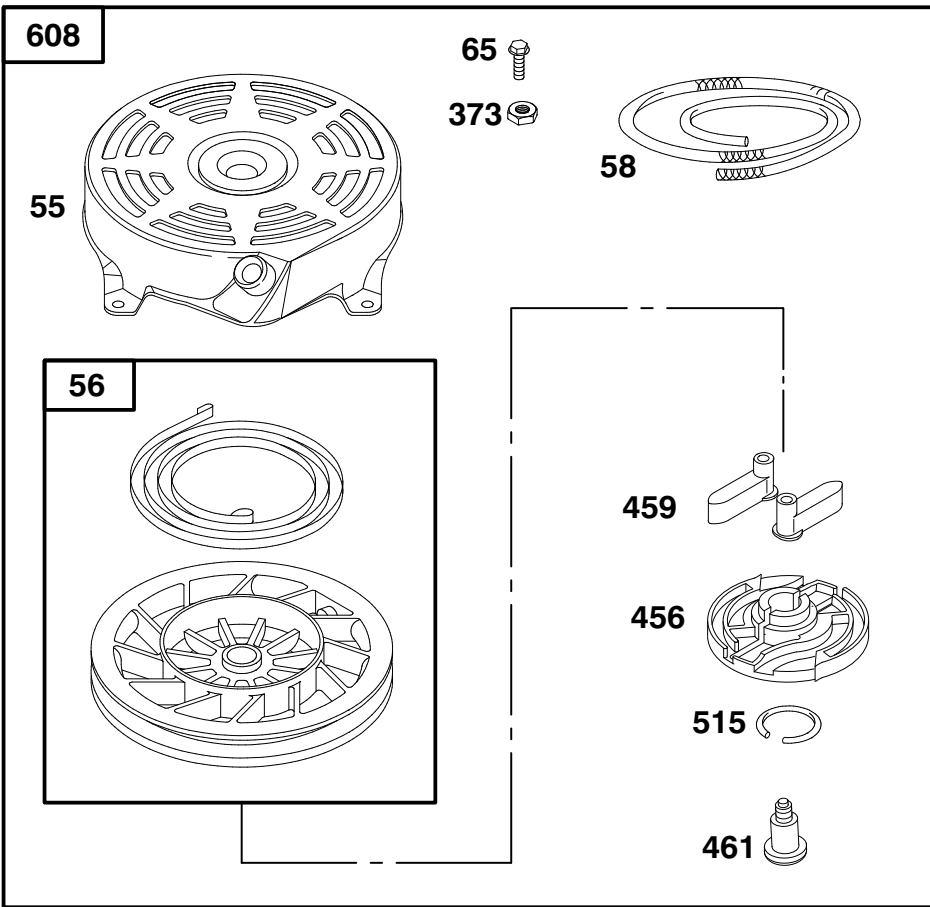


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Starter	1
58	280399	Rope – Starter	1
59	224467	Insert – Starter Grip	1
60	493926	Grip – Starter Rope	1
65	94904	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
373	94908	Nut – Hex.	1
456	281503	Retainer – Spring	1
459	281505	Pawl – Ratchet	1
461	94943	Screw – Shoulder	1
515	263073	Spring – Friction	1
608	497680	Starter – Rewind	1

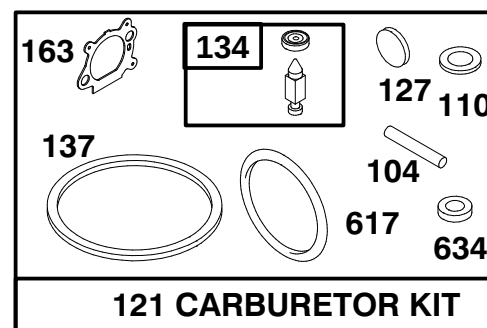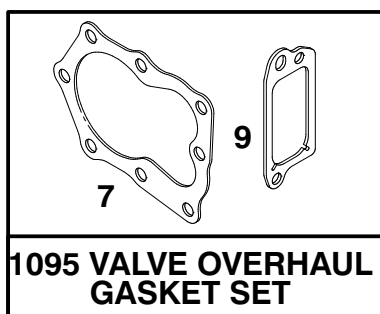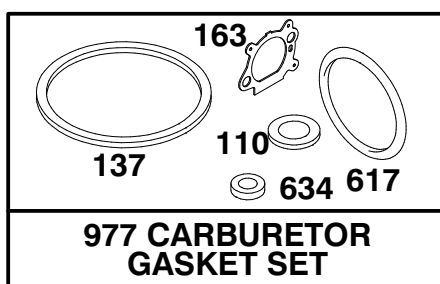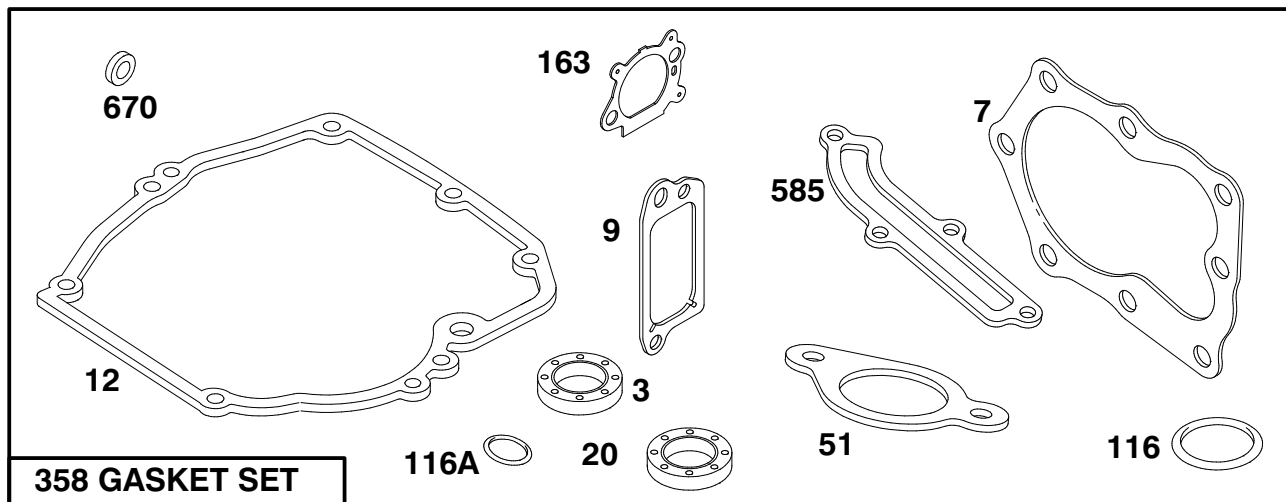

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
†★7	272916	Gasket – Cylinder Head	1
†★9	272481	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Gasket – Breather	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket Note: Includes Two	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

●Included in Carburetor Kit—Part No. 498260.

◆Included in Carburetor Gasket Set—Part No. 498261.

★Included in Gasket Set—Part No. 497316.

†Included in Valve Overhaul Gasket Set—Part No. 498528.

Toro Part Number Index

3322-869

Part No.	Pg. No.	Ref. No.	Qty.	Description	Part No.	Pg. No.	Ref. No.	Qty.	Description
603773	1	42	2	Nut-Lock	65-4770	4	23	1	Shaft-Output
603773	3	24	2	Nut-Lock	65-5250	4	36	1	Clip-Spring
3-3287	5	5	2	Spacer	66-0541	1	20	2	ASM-Spring Arm
11-0189	6	*	1	ASM-Bag	66-0560	1	24	2	Screw-Shoulder
19-4050	5	12	2	Knob	66-0570	2	9	1	Guide-Belt
25-7740	1	21	2	Knob-Arm	66-0580	1	23	2	Arm-Pivot
25-7740	3	22	2	Knob-Arm	66-5351	5	20	1	Lever-Control
26-0670	2	15	1	Bolt-Blade	66-6040	3	15	1	Key-Locking RH
27-6250	1	25:3	4	Bushing	66-6050	3	14	1	Key-Rocking LH
27-6250	320:1:3		4	Bushing	70-9760	4	6	2	Bushing
27-7210	5	4	2	Screw-Shoulder	71-9350	1	38	1	Spring-Bracket
27-7211	5	8	2	Screw-Shoulder	74-1660	3	18	2	Cover-Wheel
29-9570	4	21	1	Bushing-Yoke	74-1671	3	19	2	Spacer-Cover
33-3208	1	16	1	Rod-Shield	76-0760	4	38	2	Key-Shift
33-4820	6	1:3	1	Hinge-Door	76-0770	4	34	1	Collar-Shift
36-4780	4	9	1	Washer-Thrust	76-0780	4	37	1	Sleeve-Shift Key
36-4791	4	4	2	Washer-Thrust	76-2712	5	30	1	Control-Speed
36-6910	6	1:6	2	Spring	76-4640	1	43:2	1	Latch Discharge Plug
37-1393	6	1:1	1	Door-Bag	76-4650	1	43:4	1	Grip Latch
37-7260	1	31	2	Screw-TAP	76-4660	1	35	1	Spring-Extension
38-7820	4	31	1	Bearing-Ball	77-0502	1	43	1	ASM-Plug
40-1940	1	19	4	Washer	80-3770	1	12	1	Retainer-Door
42-3520	3	5	2	Cap-End	82-5680	1	27	1	Bracket-Adjustment
42-4020	6	1:7	1	Frame-Bag	82-8550	2	18	1	Shield-Muffler
42-4030	6	1:4	1	Frame-Bag	82-8780	3	4	1	Retainer-Cable
43-1362	5	1	1	ASM-Handle	82-9151	1	10	1	Tunnel-Discharge
44-0524	6	1:2	1	Bag-Grass	84-8361	5	2	1	Latch-Handle
44-0580	1	15	1	Shield-Trailing	84-8401	5	3	1	Latch-Handle
46-5400	1	39	1	Shield-Front	86-9671	5	29	1	Guide-Rope
46-5481	5	33	1	Cable-Traction	92-1057	1	26	2	Bolt-Shoulder
46-5520	5	24	1	Lever-Traction	92-1057	3	25	2	Bolt-Shoulder
46-6290	1	41	1	0-Ring	92-1720	1	7	1	Kicker-RH
46-6440	5	34	1	Cover-Cables	92-1730	1	8	1	Kicker-LH
46-6810	1	14	1	Screw HWH	92-1750	1	6	1	Plate-Kicker Rear
46-6811	1	13	5	Screw-HWH	92-2260	5	11	4	Screw-Handle
46-6980	5	27	1	Support-Cable	92-2269	5	26	1	Screw-Handle
46-7030	1	29	1	Retainer-Cable	92-7663	3	21	1	Cover-Wheel
46-8090	1	36	2	Screw-Tapping	92-9592	1	25	2	Assembly-8" Wheel
48-2060	4	7	2	Bearing-Caged Needle	92-9665	5	18	5	Screw-Phil
49-1630	5	23	2	Spacer-Support	93-0243	2	2	1	Shroud
49-2040	1	34	2	Screw-HH	93-3154	1	11	1	Plate-Latch
49-2040	4	20	6	Screw-HH	93-4106	2	12	1	Blade-Generation Iii
52-7430	5	19	1	Bar-Control	93-4107	2	11	1	Retainer-Blade
55-3760	4	3	1	15 T Pinion	93-4186	5	31	1	Cable-Throttle
55-3770	4	11	1	Gear 49t 1st Gear	93-4187	5	32	1	Cable-Brake
55-3780	4	2	1	Pinion 20t 2nd Gear	93-4354	2	4	1	Decal-Engine
55-3790	4	12	1	Gear 44t 2nd Gear	93-6655	5	13:2	1	Decal-Danger
55-3800	4	1	1	Pinion 25t 3rd Gear	93-7351	1	37	1	ASM-Door
55-3810	4	13	1	Gear 39t 3rd Gear	93-8470	2	7	1	Screw-Clamp
60-8710	4	18	1	Gearcase-Upper 3 Sp	94-1608	2	13	1	Stiffener-Blade
60-8730	4	19	1	Cover-Gearcase	94-4922	5	9	1	ASM-Handle
60-8750	4	5	2	Bushing	94-5407	1	2	1	Decal-Deck
60-8770	4	8	1	Bushing-Output Shaft	95-2747	1	40	1	Fitting-Washout
60-8790	4	14	1	Sleeve-Gear	95-5615	1	1	1	Housing-Rwd
60-8800	4	17	1	Shaft-Intermediate	95-7077	5	13:3	1	Decal-Panel
60-8810	4	22	1	Retainer-Shift-Fork	98-1502	1	30	1	Cover-Belt
60-8821	3	2	1	Lever-Shift	98-2020	5	13:4	1	Decal-Instruction
60-8850	4	32	1	Bushing-Output	98-3206	2	3	1	Plate-Logo
60-8870	4	24	1	Yoke-Shift	98-7143	5	13	1	Panel-Control
60-8890	4	28	1	Gear-Pinnion	99-8136	3	20	2	Wheel ASM
62-3900	3	1	1	V-Belt	100-1176	4	27	2	Pulley-Half
62-4320	1	33	1	Bracket-Guide	2210-249	2	6	1	Clamp-Casing
62-6660	4	26	1	Spacer-Pulley	2210-316	2	5	1	Rope-Stop
62-6673	1	32	1	ASM-Gearcase	237-153	3	7	2	0-Ring
62-7550	2	10	1	Pulley-Driver	2412-50	5	35	4	Clip-Tubing
63-8701	3	8	2	ASM	302-56	4	10	2	Fitting-Grease
63-8721	3	6	2	ASM-Arm	321-39	5	21	1	Screw-HH
65-2720	3	11	4	Ring-Retaining	3253-22	2	14	1	Washer-Lock
65-4710	3	12	2	Ring-Friction	3256-1	5	28	1	Washer-Flat
65-4720	3	17	2	Spring-Compression	3256-24	4	30	1	Washer-Flat
65-4730	3	9	2	Washer-Thrust	3272-10	3	3	1	Pin-Cotter
65-4740	3	10	4	Washer-Thrust	3290-378	5	36	3	Tie-Cable
65-4750	3	16	2	Gear-Pinion	3290-422	6	1:5	2	Nut-Push
65-4760	3	13	2	Washer	3295-35	1	43:3	1	Rivet Solid

*Not Illustrated

Toro Part Number Index (Continued)

Part No.	Pg. No.	Ref. No.	Qty.	Description	Part No.	Pg. No.	Ref. No.	Qty.	Description
3296-5	4	29	1	Nut-Lock	32144-70	2	17	2	Screw-TAP
3296-6	1	18	2	Nut-Lock	32144-70	3	26	1	Screw-TAP
3296-47	5	6	1	Nut-Lock	32144-73	2	19	3	Screw-HWHTF
3296-72	5	7	3	Nut-Lock	32144-85	1	22	2	Screw-HH
3296-73	5	22	3	Nut-Lock	32144-85	3	23	2	Screw-HH
3296-74	5	25	2	Nut-Flange	32144-102	2	8	3	Screw
32121-120	4	15	1	Pin-Coil	32144-111	1	9	6	Screw - PPH
32144-70	1	28	5	Screw-TAP	32144-121	2	16	2	Screw