

LAWN-BOY®

48cm REAR BAGGING MOWER

MODEL NO. 10915-9900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.


To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS


Description	Page	Description	Page
Housing Assembly	3	Carburetor Assembly	10
Engine Assembly	4	Rear Axle Assembly	11
Blade Assembly	5	Gear Case Assembly	12
Shroud & Block Assembly	6	Handle Assembly	13
Brake & Muffler Assembly	7	Bag Assembly	14
Block Assembly	8	Numeric Parts Index	15-16
Recoil Starter Assembly	9		

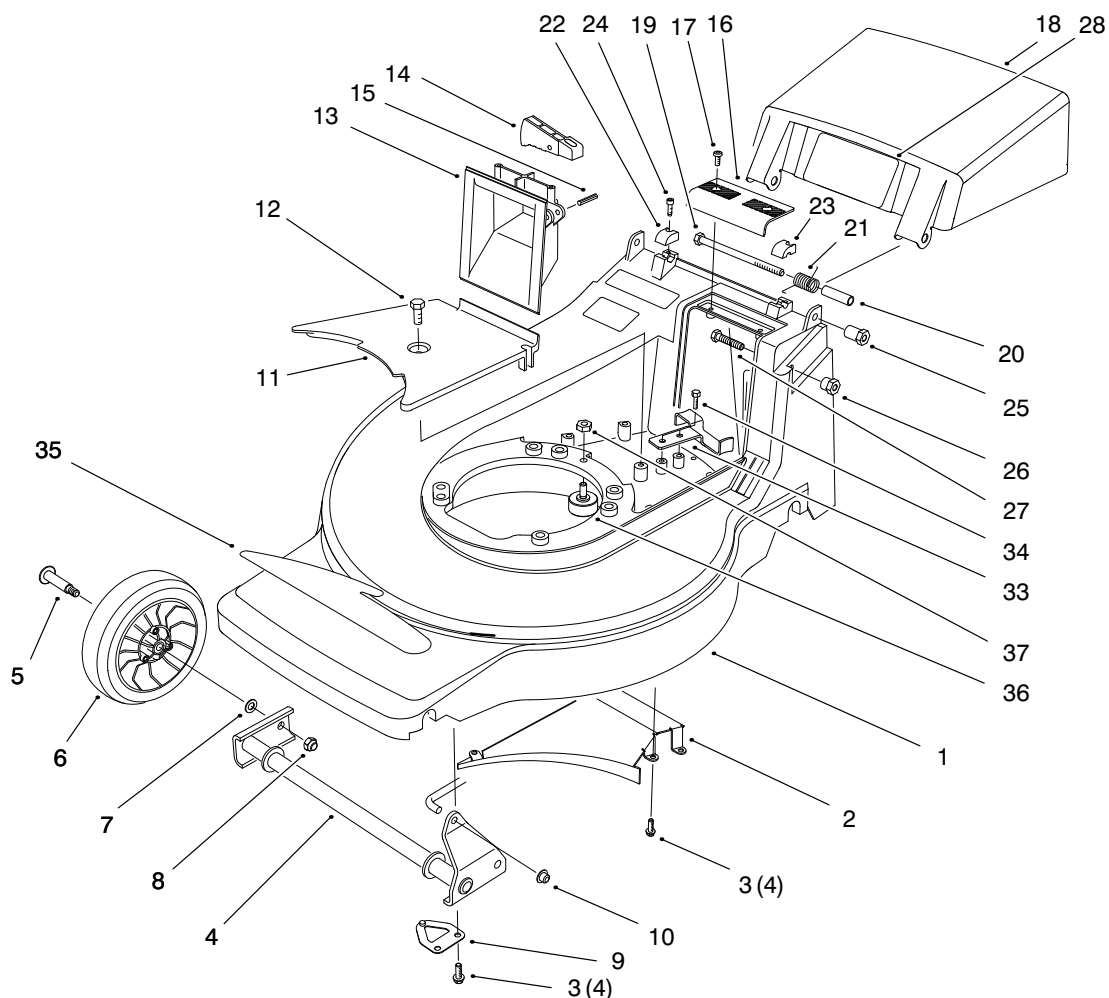

C-2671

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	16-8889	Housing – Deck (Incl. Ref. # 35)	1	18	17-1569	Door – Discharge (Incl. Ref. # 28)	1
2	71-7990	Ramp – Discharge	1	19	92-8806	Screw – HH	2
3	32144-4	Screw – HH Tap	8	20	92-9313	Spacer – Door	2
4	92-9304	Pivot – Front	1	21	71-9840	Spring – Door	2
5	92-8811	Bolt – Wheel	2	22	71-7910	Cap – Bolt Hinge (RH)	1
6	92-8810	Wheel & Tire Assembly	2	23	71-7900	Cap – Bolt Hinge (LH)	1
7	40-1940	Washer	2	24	65-5210	Screw – Thread Forming	2
8	92-8819	Nut – Lock	2	25	93-7161	Spacer – Handle	2
9	71-8830	Shaft Retainer Assembly	2	26	93-7162	Spacer – Handle	2
10	32112-1	Nut – Push	1	27	92-8818	Screw – HH	2
11	71-7920	Cover – Belt	1	28	93-4105	Decal – Danger	1
12	32144-70	Screw – Tap	1	33	71-7890	Guide – Belt Rear	1
13	71-7870	Grip – Lower	1	34	32144-4	Screw – HH Tap	2
14	71-7930	Trigger – Hoc	1	35	92-8837	Decal – Deck	1
15	3284-5	Pin – Groove	1	36	92-8808	Ball – Bearing, Stud	1
16	71-7860	Grip – Upper	1	37	3296-29	Nut – Hex Lock	1
17	32144-97	Screw – PPH	2				

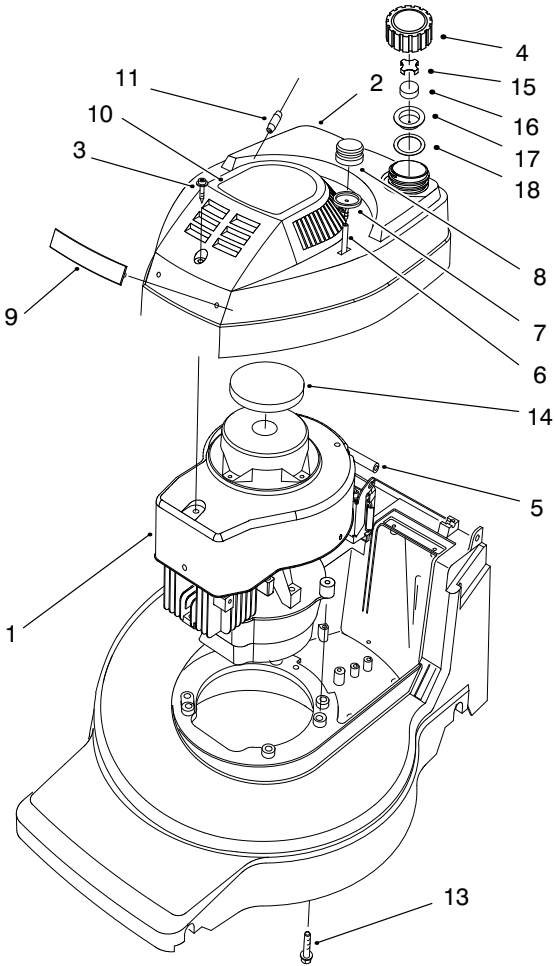

C-2672

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Engine Assembly	1	10	92-8828	Decal - Shroud Top	1
2	92-8898	Shroud & Tank Assembly	1	11	92-1701	Rope - Stop	1
3	93-4302	Screw	3	13	32144-102	Screw	3
4	93-3660	Fuel Cap Assembly	1	14	93-1201	Disc - Foam	1
5	612782	Gas Line	1	15	93-3175	Baffle	1
6	44-3174	Hose Primer	1	16	609150	Baffle - Foam	1
7	44-2750	Body - Primer	1	17	93-1230	Cover	1
8	66-7460	Bulb - Primer	1	18	613311	Gasket	1
9	92-8615	Applique - Shroud	1				

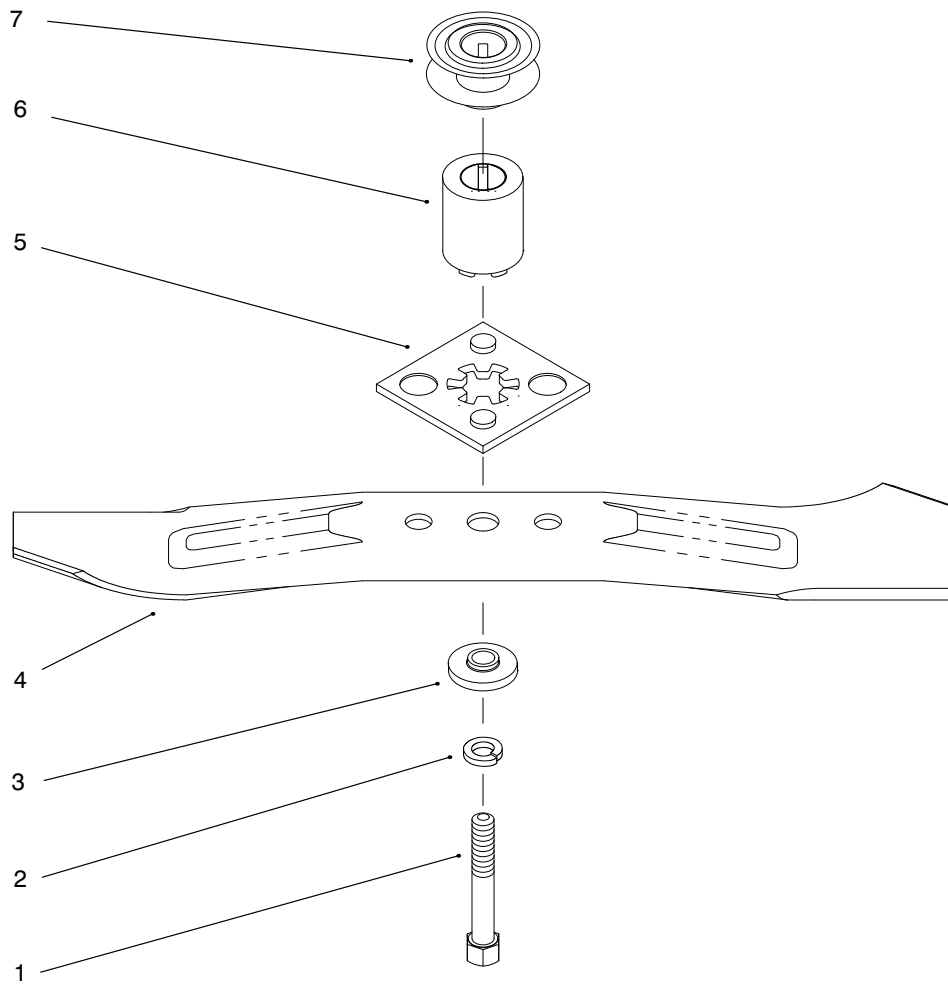


C-1887

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	26-0670	Bolt - Blade	1
2	3253-22	Washer - Lock	1
3	92-8626	Spacer - Blade	1
4	612079	Blade 19"	1

Ref. No.	Part No.	Description	No. Used
5	146046	Plate - Blade Driver	1
6	92-8807	Hub - Blade Driver	1
7	93-0278	Pulley - Driver	1

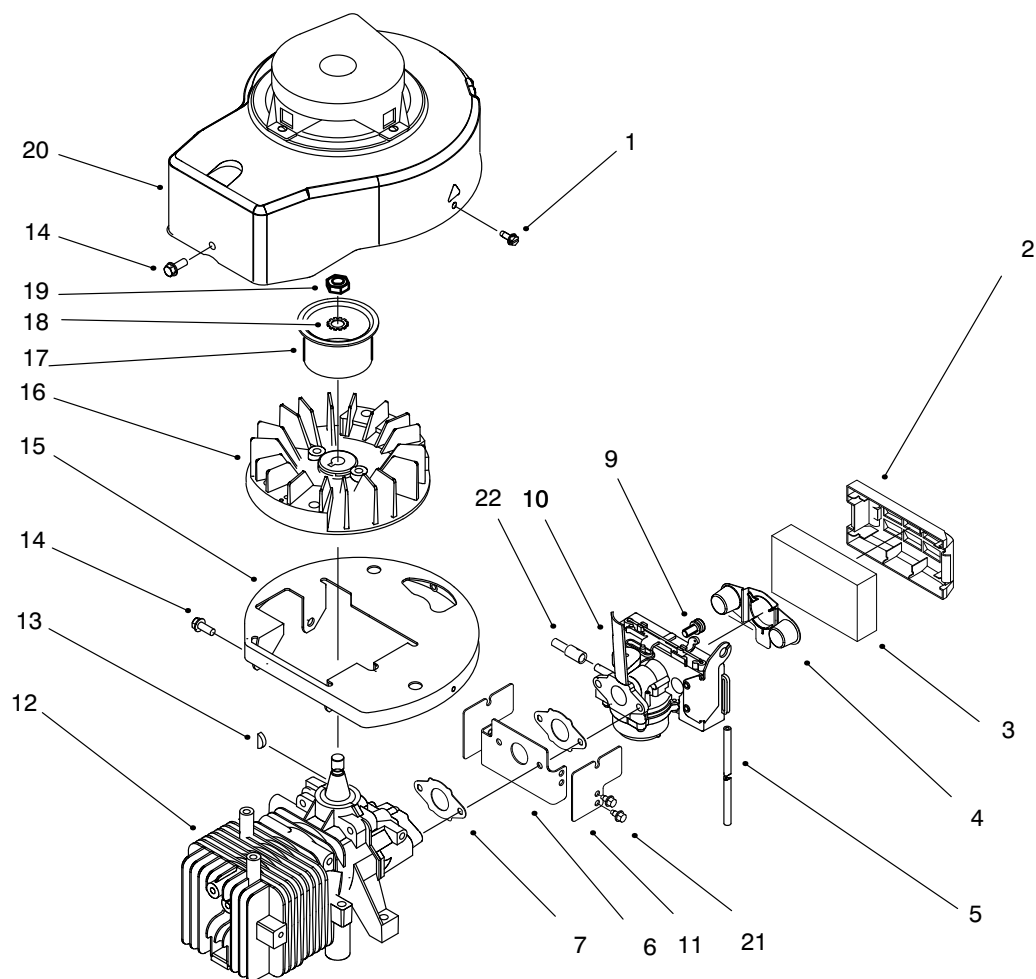


C-2438

SHROUD & BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	93-4303	Cover - Air Filter	1
3	609493	Element - Air Filter	1
4	93-4320	Shield - Fuel	1
5	44-3174	Hose - Primer	1
6	93-4315	Shield - Carburetor	1
7	92-4948	Gasket - Carburetor	2
9	609482	Screw	2
10	94-4331	Carburetor Assembly	1
11	93-4316	Shield - Governor	2
12	94-5731	Short Block Assembly	1


Ref. No.	Part No.	Description	No. Used
13	607199	Key	1
14	614702	Screw	4
15	93-1216	Base - Shroud	1
16	684743	Flywheel Assembly	1
17	614640	Hub - Starter	1
18	316959	Washer - Lock	1
19	130743	Nut	1
20	93-4304	Shroud	1
21	613269	Screw	4
22	92-6398	Cap	13

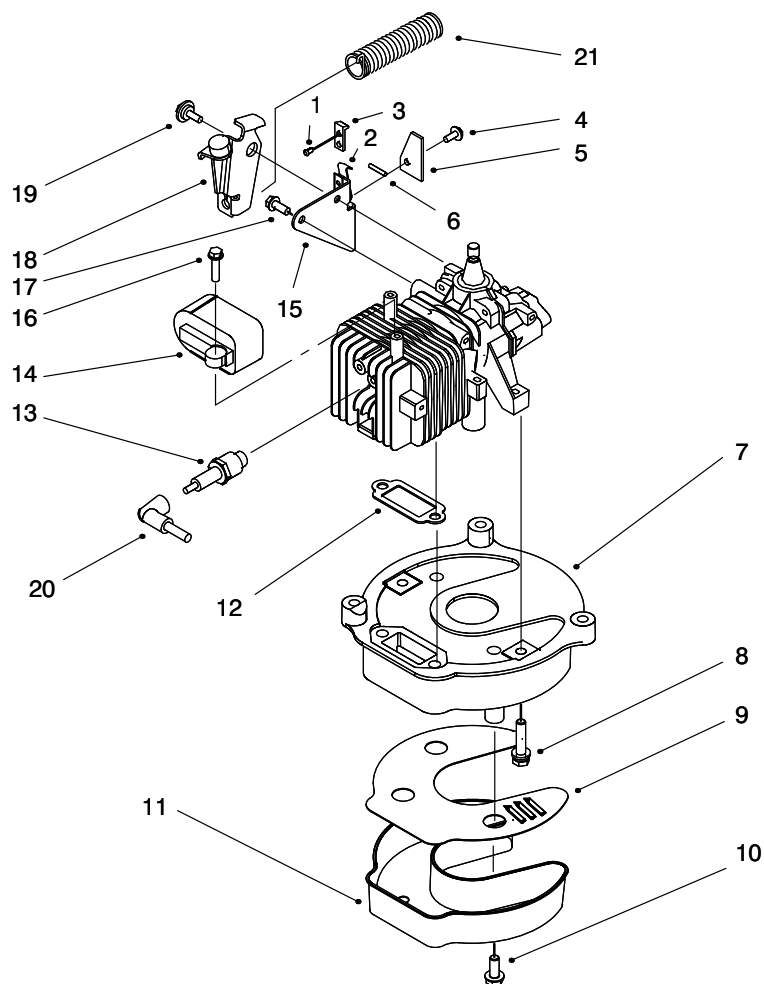

C-1899

BRAKE & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-459	Rivet	2	12	93-1233	Gasket - Exhaust	1
2	60-9010	Strap - Ground	1	13	614008	Plug - Spark	1
3	92-2925	Strap - Insulation	1	14	684049	Ignition Assembly (Incl. Ref. #20)	1
4	12-5450	Screw - Thread Forming	1	15	84-7820	Plate - Brake Mount	1
5	53-4690	Stop - Ground Strap	1	16	613208	Screw - Hex Washer Hd.	2
6	92-1156	Wire - Brake Switch Lead	1	17	614702	Screw	1
7	614654	Plate - Muffler	1	18	66-5380	Plate - Brake Assembly	1
8	607601	Screw	4	19	92-9698	Screw - Shoulder	1
9	93-1217	Baffle	1	20	684179	Lead & Cover Assembly	1
10	609471	Screw	3	21	93-4306	Spring - Compression	1
11	93-1108	Cover - Muffler	1				

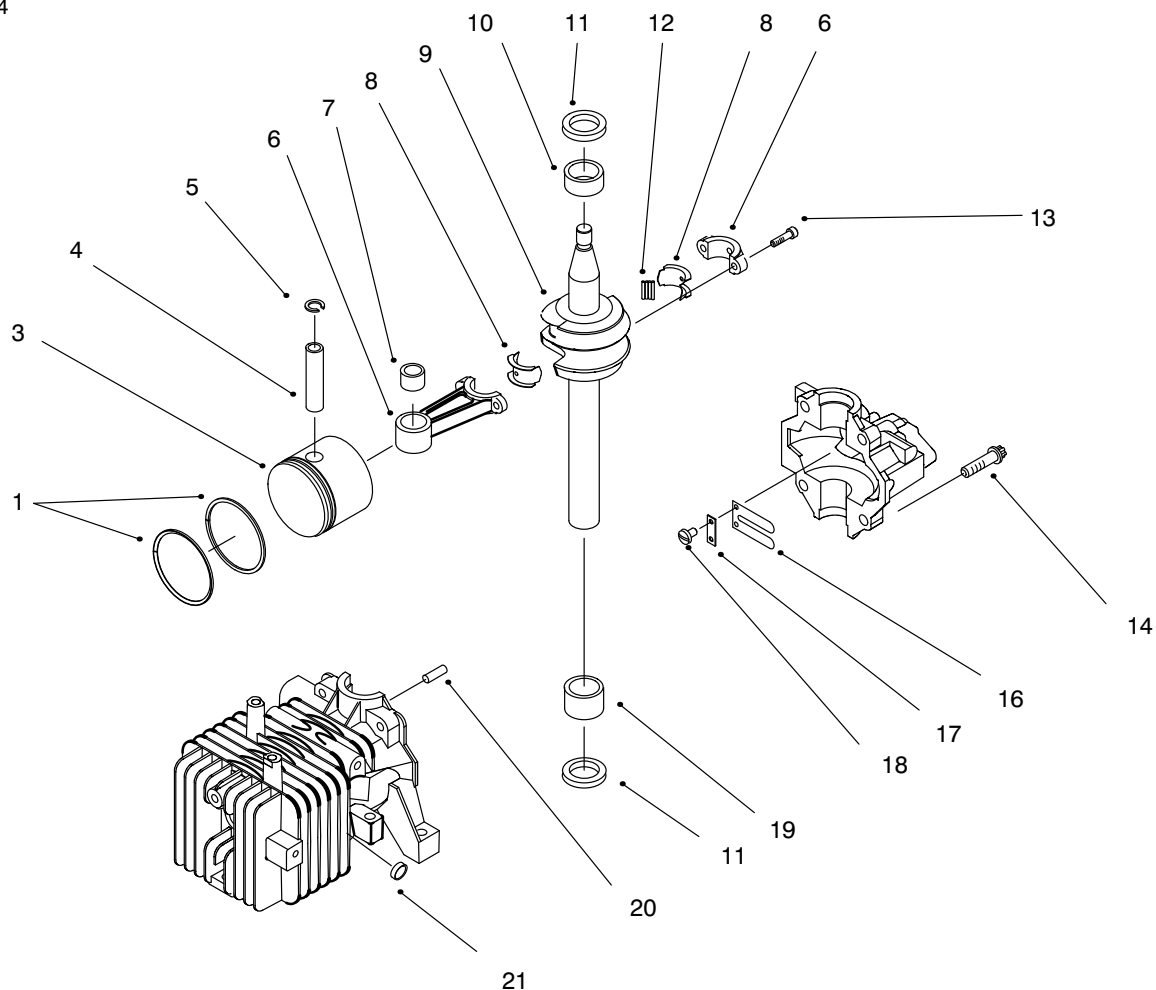


C-1295A

BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Rings, Piston	1
3	92-4925	Piston & Connecting Rod (Incl. Ref. #1, 3-7 & 13)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)	1
7	92-4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	92-6379	Crankshaft	1
10	681830	Bearing – Upper Main	1
11	611396	Seal – Oil	2

Ref. No.	Part No.	Description	No. Used
12	683911	Bearing – Needle	1
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Hex. Washer Hd.	4
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4
22	252-76	Bearing – Thrust	1
23	252-80	Washer – Thrust	1
*	684725	Cylinder & Crankcase Asm.	1

* Not Illustrated

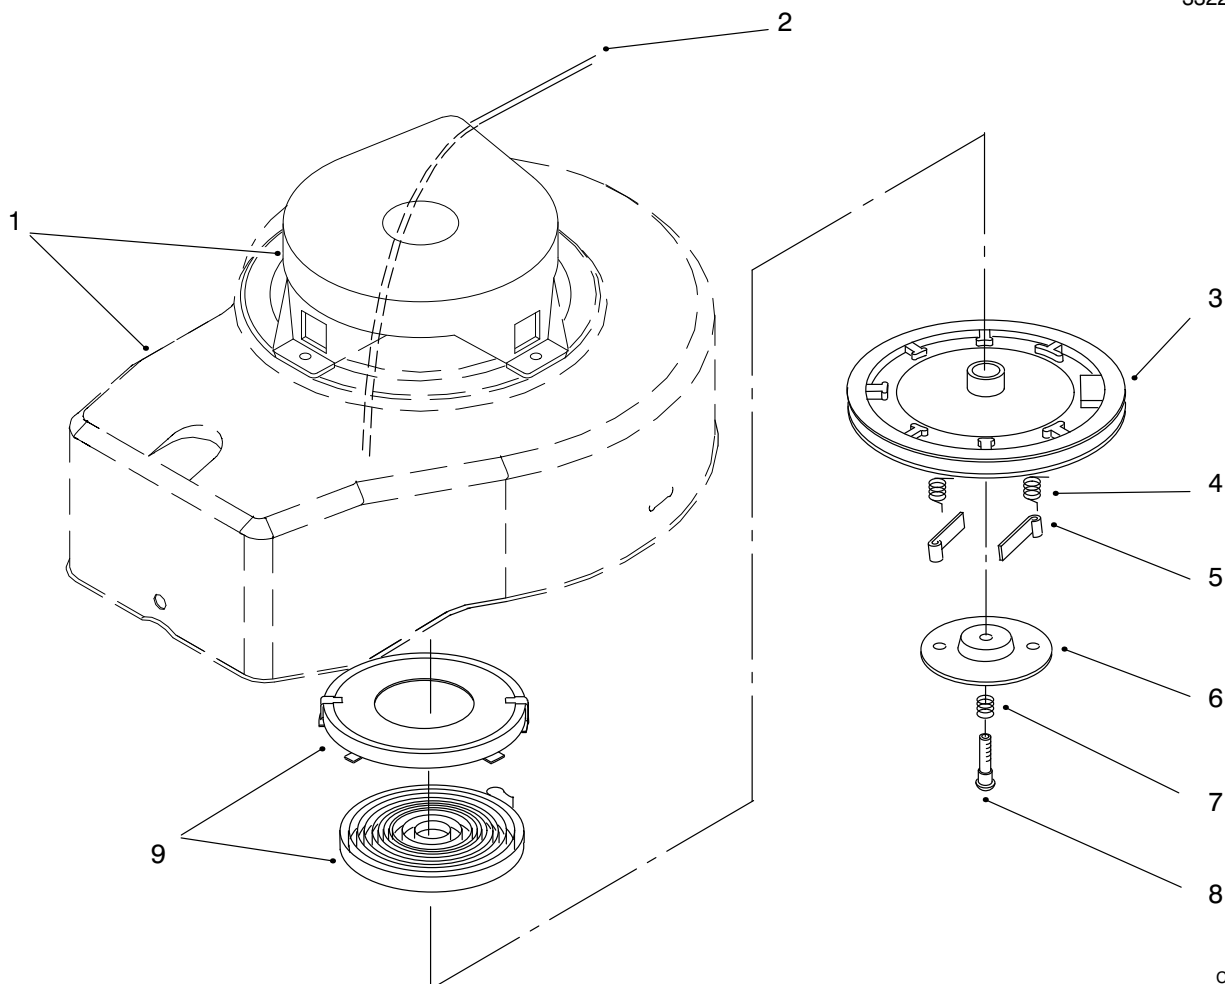


C-1309

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4304	Housing Assembly	1
2	93-4305	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92-9692	Retainer	1
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1

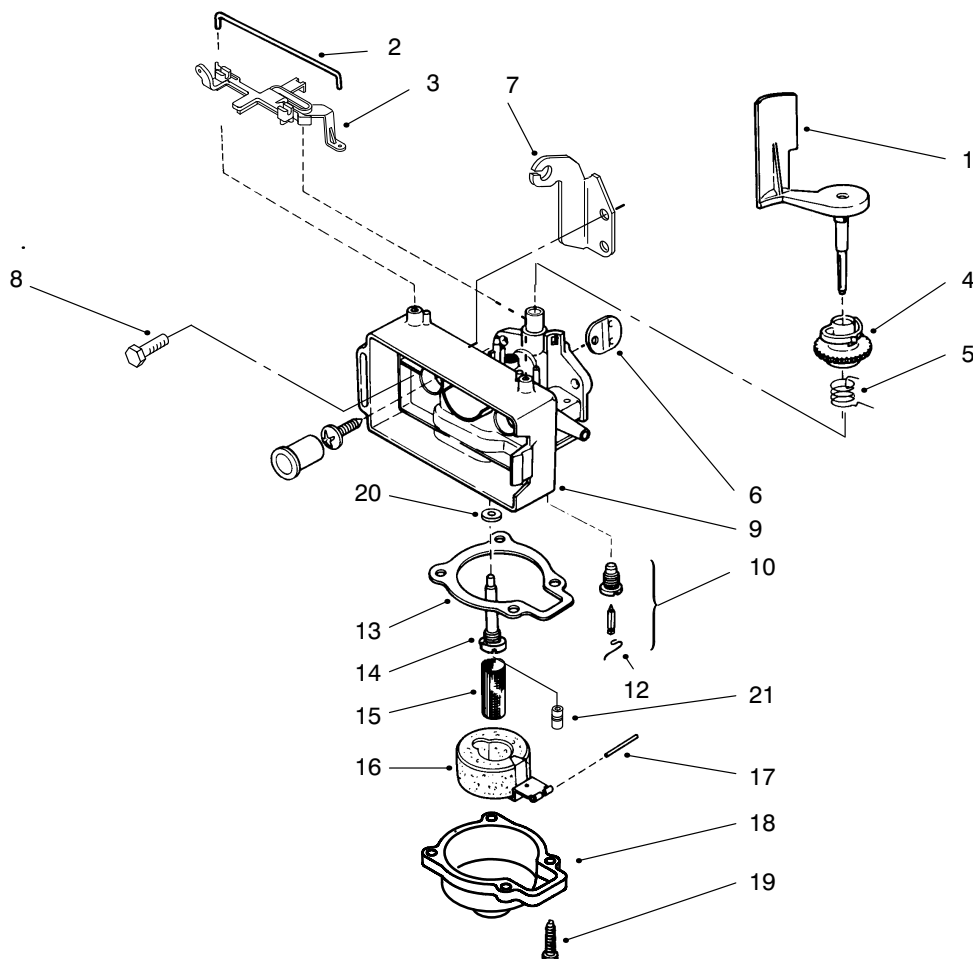


C-2130A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	13	602850	Gasket	1
2	610165	Retainer - Speed Control	1	14	92-6371	Nozzle	1
3	93-1225	Lever - Speed Adjust	1	15	611071	Filter - Fuel	1
4	610834	Collar - Air Vane	1	16	678113	Float & Arm Assembly	1
5	92-4944	Spring - Governor	1	17	92-6389	Pin	1
6	92-6373	Disc - Throttle	1	18	92-9691	Float Chamber	1
7	92-4949	Bracket - Throttle Control	1	19	608850	Screw	4
8	613269	Screw	2	20	612383	Washer	1
9	93-4324	Carburetor Body	1	21	92-6370	Main Jet	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12)	1	*	92-6385	Jet - High Altitude	1
12	603145	Spring	1	*	93-4331	Carburetor Assembly (Incl. Ref. #7 pg.6)	1


*Not Illustrated

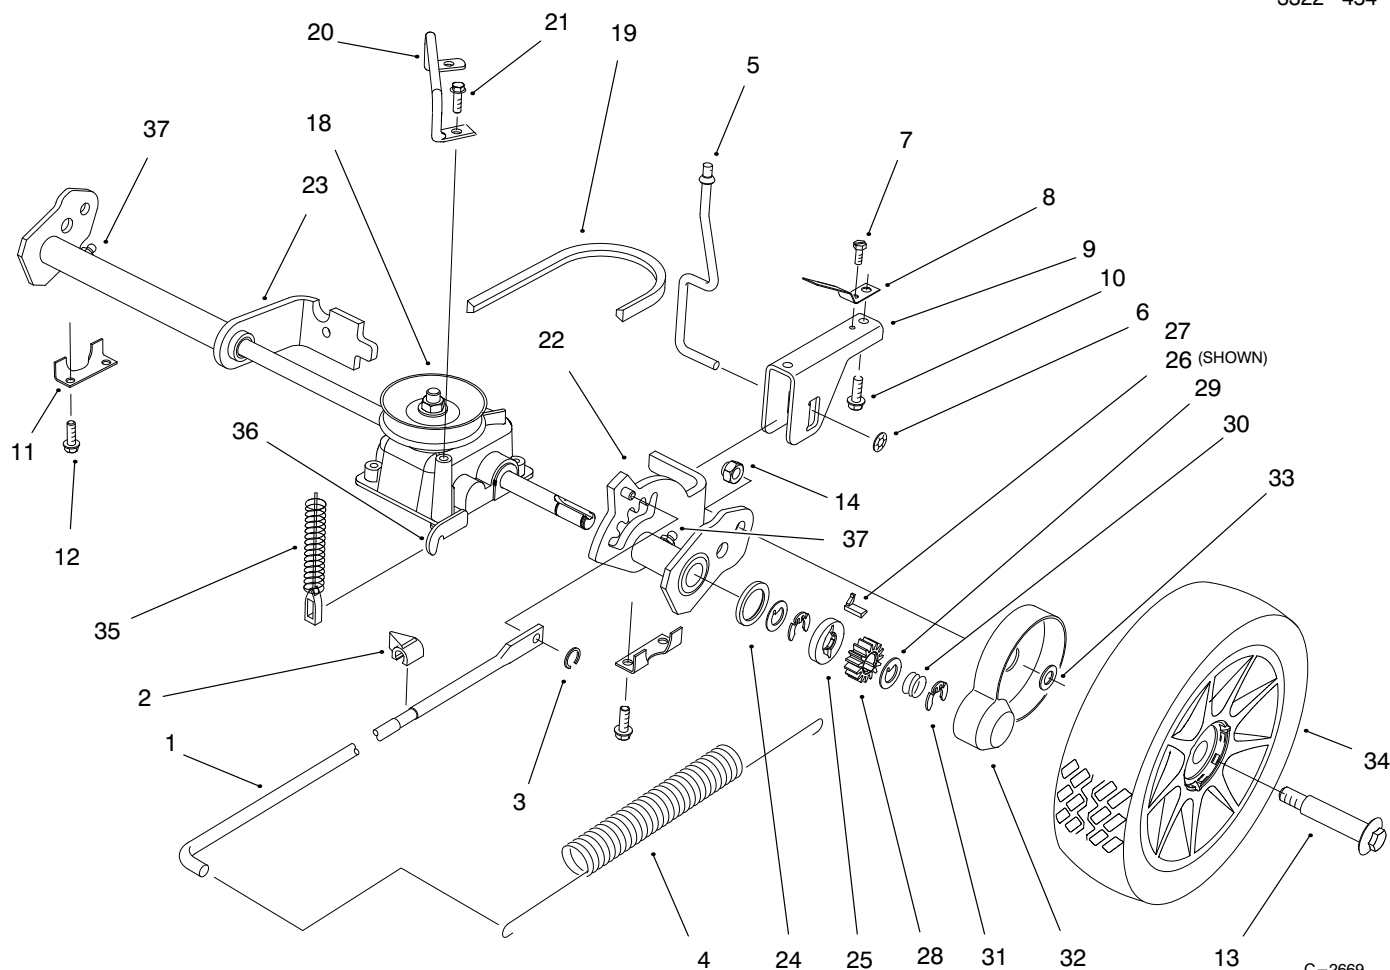

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-9301	Rod -Link	1	22	92-9311	Pivot Arm Assembly LH	1
2	71-7980	Indicator - HOC	1	23	92-9310	Pivot Arm Assembly RH	1
3	32151-93	Ring - Grip	1	24	65-4710	Ring - Friction	2
4	92-9300	Spring - Counterbalance	1	25	65-4760	Washer	2
5	71-7840	Rod -Trigger	1	26	66-6050	Key - Rocking LH	1
6	32112-13	Nut - Push	1	*27	66-6040	Key - Rocking RH	1
7	32144-31	Screw	1	28	65-4750	Gear - Pinion	2
8	71-8060	Spring - Trigger Retainer	2	29	65-4740	Washer - Thrust	4
9	71-8080	Saddle - HOC	1	30	65-4720	Spring - Compression	2
10	63-8590	Screw	2	31	65-2720	Ring - Retaining	4
11	71-7770	Plate - Securing	2	32	74-1660	Cover - Wheel	2
12	32144-4	Screw-HH Tap	4	33	74-1670	Spacer - Wheel	2
13	92-1057	Bolt - Shoulder	2	34	92-9318	Wheel & Tire Assembly	2
14	3296-59	Nut-Lock	2	35	71-8310	Spring - Compression	1
18	71-9600	Gear Case Assembly	1	36	98-2039	Bracket - Traction (Incl. with 71-9600)	1
19	71-9450	V-Belt	1	37	302-26	Grease Zerk	2
20	95-2740	Retainer - Belt	1				
21	32144-4	Screw - HH Tap	2				

* Not Illustrated

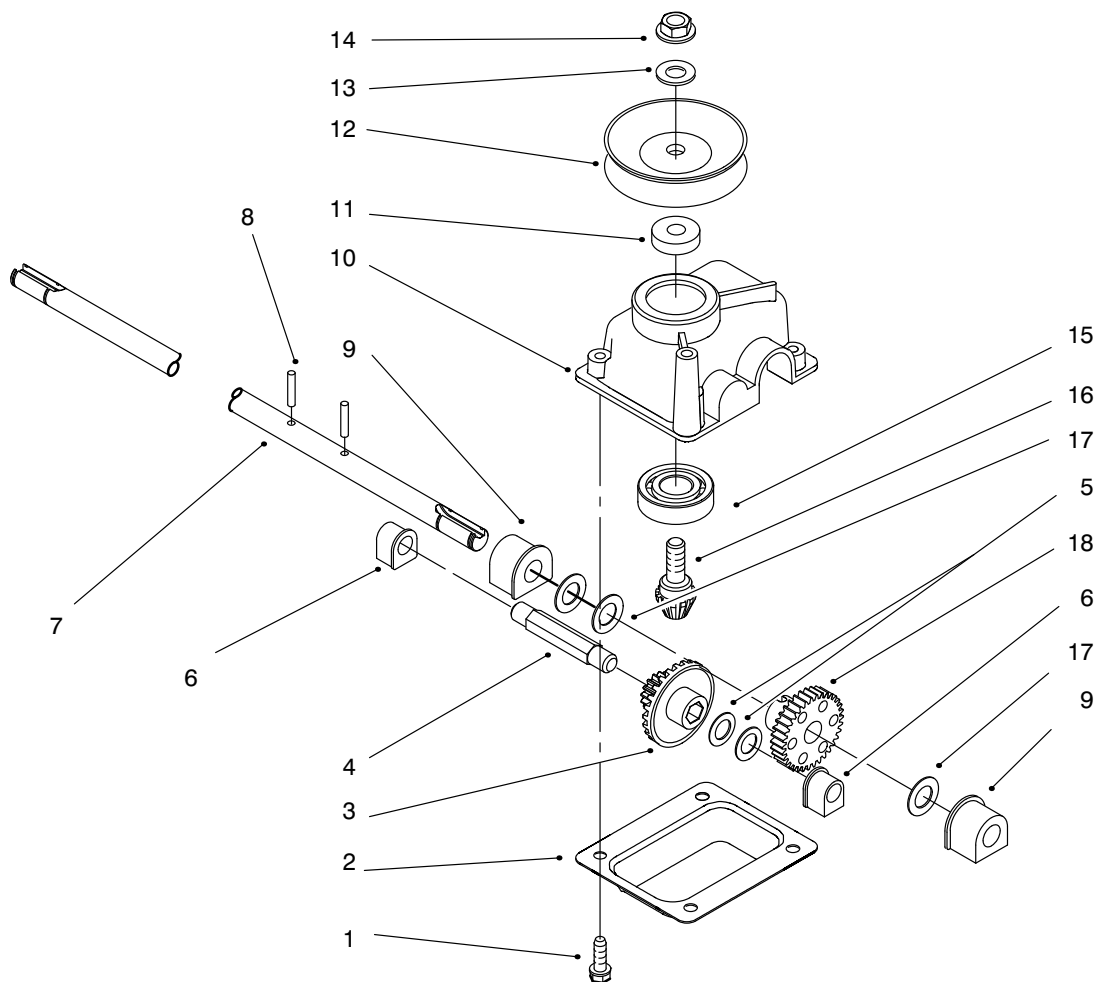


C-1292

GEAR CASE ASSEMBLY #71-9600

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Cover - Gear Case	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
*	71-9600	Gear Case Ass'y Complete	1


* Not Illustrated

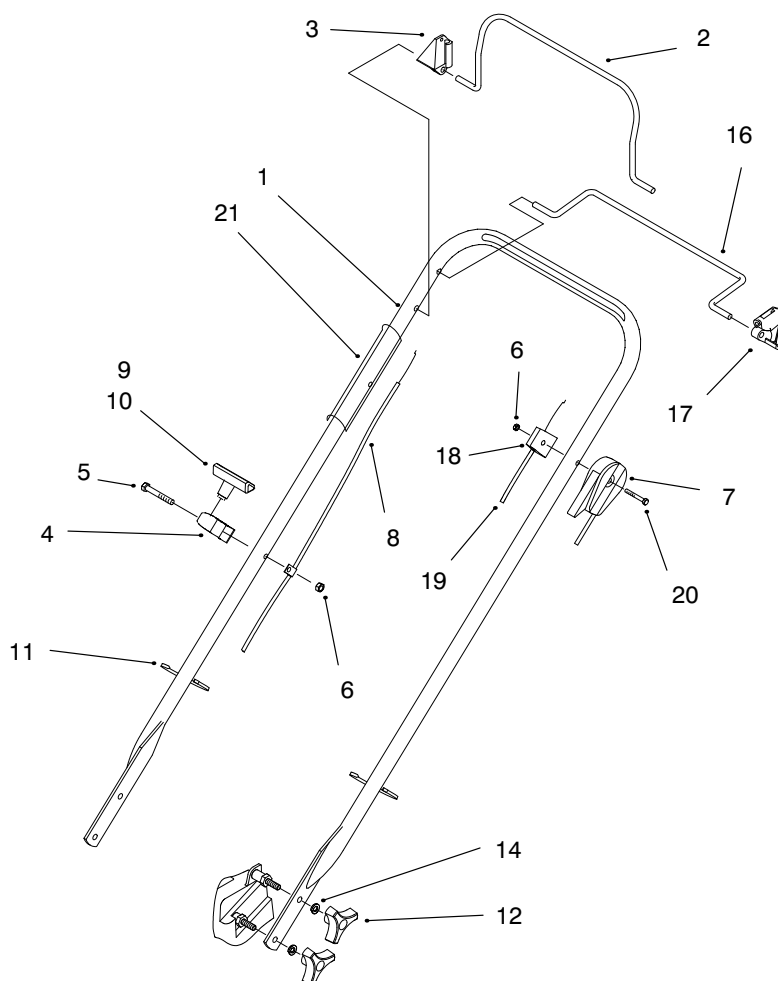

C-2673

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-8800	Handle	1	11	3290-378	Tie - Cable	2
2	92-1002	Bail - Fly Wheel Brake	1	12	93-7159	Knob	4
3	92-5412	Stop - Pivot	1	14	3253-33	Washer - Lock	4
4	93-7383	Guide - Rope	1	16	92-1001	Bail - Control	1
5	321-53	Screw - HH	1	17	92-5412	Stop - Pivot	1
6	3296-73	Nut - Lock Insert	2	18	92-7729	Anchor - Cable	1
7	92-9327	Cable - Throttle	1	19	92-9316	Cable - Traction	1
8	92-9328	Cable - Brake	1	20	321-57	Screw - HH	1
9	612824	Clip - Rope Insert	1	21	93-7266	Decal - Operation	1
10	612825	Handle - Starter	1				

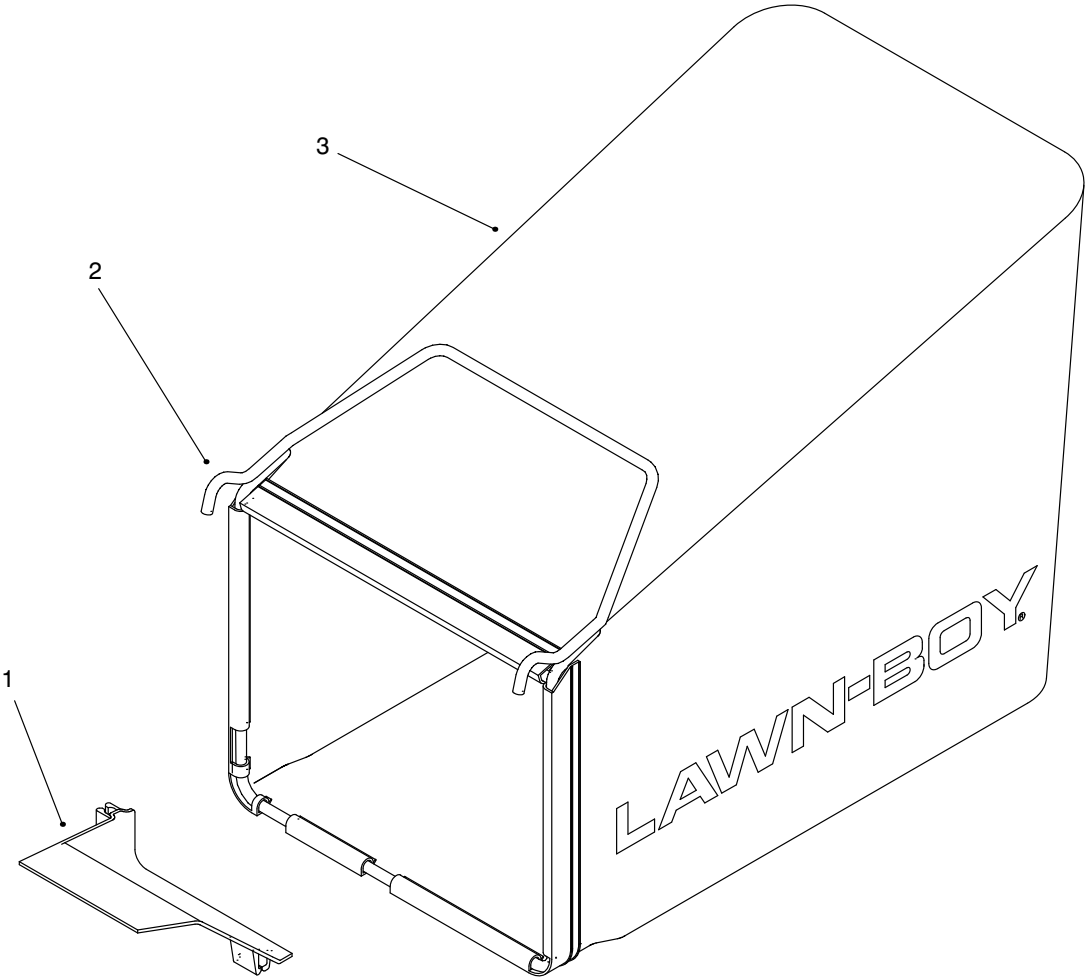

C-1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp - Grass Bag	1
2	71-8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92-8890	Bag - Grass	1

TORO PART NUMBER INDEX

3322-454

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut	6 19 1	62-6660	Spacer	12 11 1
146046	Plate - Blade Driver	5 5 1	63-8590	Screw	11 10 2
303712	Ring - Retaining	8 5 2	65-2720	Ring - Retaining	11 31 4
316959	Washer - Lock	6 18 1	65-4710	Ring - Friction	11 24 2
602587	Reed - Backup Plate	8 17 1	65-4720	Spring - Compression	11 30 2
602588	Reed - Carburetor	8 16 1	65-4740	Washer - Thrust	11 29 4
602850	Gasket	10 13 1	65-4750	Gear - Pinion	11 28 2
603145	Spring	10 12 1	65-4760	Washer	11 25 2
606608	Pin - Wrist	8 4 1	65-5210	Screw - Thread Forming	3 24 2
607199	Key	6 13 1	93-4306	Spring - Compression	7 21 1
607601	Screw	7 8 4	66-5380	Plate - Brake Assembly	7 18 1
608850	Screw	10 19 4	66-6040	Key - Rocking RH	11 *27 1
609123	Plug - Core	8 21 4	66-6050	Key - Rocking LH	11 26 1
609150	Baffle - Foam	4 16 1	66-7460	Bulb - Primer	4 8 1
609471	Screw	7 10 3	71-3750	Ramp - Grass Bag	14 1 1
609482	Screw	6 9 2	71-7770	Plate - Securing	11 11 2
609493	Element - Air Filter	6 3 1	71-7840	Rod - Trigger	11 5 1
609629	Dowel	8 20 1	71-7860	Grip - Upper	3 16 1
610165	Retainer - Speed Control	10 2 1	71-7870	Grip - Lower	3 13 1
610834	Collar - Air Vane	10 4 1	71-7890	Guide - Belt Rear	3 33 1
611071	Filter - Fuel	10 15 1	71-7900	Cap - Bolt Hinge (LH)	3 23 1
611393	Screw - Hex. Hd.	8 13 2	71-7910	Cap - Bolt Hinge (RH)	3 22 1
611396	Seal - Oil	8 11 2	71-7920	Cover - Belt	3 11 1
612079	Blade 19	5 4 1	71-7930	Trigger - Hoc	3 14 1
612383	Washer	10 20 1	71-7980	Indicator - HOC	11 2 1
612782	Gas Line	4 5 1	71-7990	Ramp - Discharge	3 2 1
612824	Clip - Rope Insert	13 9 1	71-8060	Spring - Trigger Retainer	11 8 2
612825	Handle - Starter	13 10 1	71-8080	Saddle - HOC	11 9 1
612872	Screw	8 18 2	71-8180	Frame	14 2 1
613208	Screw - Hex Washer Hd.	7 16 2	71-8310	Spring - Compression	11 35 1
613269	Screw	10 8 2	71-8830	Shaft Retainer Assembly	3 9 2
613269	Screw	6 21 4	71-9450	V-Belt	11 19 1
613311	Gasket	4 18 1	71-9600	Gear Case Ass'y Complete	12 * 1
614008	Plug - Spark	7 13 1	71-9600	Gear Case Assembly	11 18 1
614578	Cover - Gear Case	12 10 1	71-9610	Pulley - Half	12 12 2
614596	Gear 34 Tooth	12 18 1	71-9620	Shaft - Output	12 7 1
614636	Screw - Hex. Washer Hd.	8 14 4	71-9840	Spring - Door	3 21 2
614640	Hub - Starter	6 17 1	74-1660	Cover - Wheel	11 32 2
614654	Plate - Muffler	7 7 1	74-1670	Spacer - Wheel	11 33 2
614668	Cover - Gear Case	12 2 1	84-7820	Plate - Brake Mount	7 15 1
614696	Shaft - Intermediate	12 4 1	92-1001	Bail - Control	13 16 1
614699	Screw	6 1 3	92-1002	Bail - Fly Wheel Brake	13 2 1
614702	Screw	6 14 4	92-1057	Bolt - Shoulder	11 13 2
614702	Screw	7 17 1	92-1156	Wire - Brake Switch Lead	7 6 1
677982	Liner - Split (Set of 2)	8 8 1	92-1701	Rope - Stop	4 11 1
678113	Float & Arm Assembly	10 16 1	92-2925	Strap - Insulation	7 3 1
681737	Set - Rings, Piston	8 1 1	92-4921	Connecting Rod Assembly	8 6 1
681830	Bearing - Upper Main	8 10 1	92-4925	Piston & Connecting Rod	8 3 1
681831	Bearing - Needle	8 19 1	92-4927	Bearing	8 7 1
683911	Bearing - Needle	8 12 1	92-4929	Pulley Assembly	9 3 1
684049	Ignition Assembly	7 14 1	92-4930	Spring - Dog	9 4 2
684179	Lead & Cover Assembly	7 20 1	92-4931	Dog	9 5 2
684725	Cylinder & Crankcase Asm.	8 * 1	92-4933	Screw	9 7 1
684743	Flywheel Assembly	6 16 1	92-4934	Spring	9 8 1
12-5450	Screw - Thread Forming	7 4 1	92-4935	Spring Keeper Assembly	9 9 1
16-8889	Housing - Deck	3 1 1	92-4944	Spring - Governor	10 5 1
17-1569	Door - Discharge	3 18 1	92-4948	Gasket - Carburetor	6 7 2
26-0670	Bolt - Blade	5 1 1	92-4949	Bracket - Throttle Control	10 7 1
36-4780	Washer - Thrust	12 17 3	92-5412	Stop - Pivot	13 3 1
36-4791	Washer	12 5 2	92-5412	Stop - Pivot	13 17 1
38-7820	Bearing - Ball	12 15 1	92-6370	Main Jet	10 21 1
40-1940	Washer	3 7 2	92-6371	Nozzle	10 14 1
44-2750	Body - Primer	4 7 1	92-6373	Disc - Throttle	10 6 1
44-3174	Hose - Primer	6 5 1	92-6376	Air Vane & Shaft	10 1 1
44-3174	Hose Primer	4 6 1	92-6379	Crankshaft	8 9 1
49-2040	Screw - Taptite	12 1 4	92-6385	Jet - High Altitude	10 * 1
53-4690	Stop - Ground Strap	7 5 1	92-6389	Pin	10 17 1
55-3760	Pinion - 15 Tooth	12 3 1	92-6398	Cap	6 22 1
60-8750	Bushing	12 6 2	92-7729	Anchor - Cable	13 18 1
60-8850	Bushing - Output	12 9 2	92-8615	Applique - Shroud	4 9 1
60-8890	Gear - Bevel Pinion	12 16 1	92-8626	Spacer - Blade	5 3 1
60-9010	Strap - Ground	7 2 1	92-8800	Handle	13 1 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-8806	Screw - HH	3 19 2	93-4315	Shield - Carburetor	6 6 1
92-8807	Hub - Blade Driver	5 6 1	93-4316	Shield - Governor	6 11 2
92-8808	Ball - Bearing, Stud	3 36 1	93-4320	Shield - Fuel	6 4 1
92-8810	Wheel & Tire Assembly	3 6 2	93-4324	Carburetor Body	10 9 1
92-8811	Bolt - Wheel	3 5 2	93-4331	Carburetor Assembly	10 * 1
92-8818	Screw - HH	3 27 2	93-7159	Knob	13 12 4
92-8819	Nut - Lock	3 8 2	93-7161	Spacer - Handle	3 25 2
92-8828	Decal - Shroud Top	4 10 1	93-7162	Spacer - Handle	3 26 2
92-8837	Decal - Deck	3 35 1	93-7266	Decal - Operation	13 21 1
92-8890	Bag - Grass	14 3 1	93-7383	Guide - Rope	13 4 1
92-8898	Shroud & Tank Assembly	4 2 1	94-4331	Carburetor Assembly	6 10 1
92-9300	Spring - Counterbalance	11 4 1	94-5731	Short Block Assembly	6 12 1
92-9301	Rod - Link	11 1 1	95-2740	Retainer - Belt	11 20 1
92-9304	Pivot - Front	3 4 1	98-2039	Bracket - Traction	11 36 1
92-9310	Pivot Arm Assembly RH	11 23 1	252-76	Bearing - Thrust	8 22 1
92-9311	Pivot Arm Assembly LH	11 22 1	252-80	Washer - Thrust	8 23 1
92-9313	Spacer - Door	3 20 2	302-26	Grease Zerk	11 37 2
92-9316	Cable - Traction	13 19 1	321-53	Screw - HH	13 5 1
92-9318	Wheel & Tire Assembly	11 34 2	321-57	Screw - HH	13 20 1
92-9327	Cable - Throttle	13 7 1	3253-22	Washer - Lock	5 2 1
92-9328	Cable - Brake	13 8 1	3253-33	Washer - Lock	13 14 4
92-9691	Float Chamber	10 18 1	3256-24	Washer	12 13 1
92-9692	Retainer	9 6 1	3284-5	Pin - Groove	3 15 1
92-9697	Kit - Float Valve, Body	10 10 1	3290-378	Tie - Cable	13 11 2
92-9698	Screw - Shoulder	7 19 1	3290-459	Rivet	7 1 2
93-0278	Pulley - Driver	5 7 1	3296-5	Nut	12 14 1
93-1108	Cover - Muffler	7 11 1	3296-29	Nut - Hex Lock	3 37 1
93-1201	Disc - Foam	4 14 1	3296-59	Nut - Lock	11 14 2
93-1216	Base - Shroud	6 15 1	3296-73	Nut - Lock Insert	13 6 2
93-1217	Baffle	7 9 1	32112-1	Nut - Push	3 10 1
93-1225	Lever - Speed Adjust	10 3 1	32112-13	Nut - Push	11 6 1
93-1230	Cover	4 17 1	32121-114	Pin - Groove	12 8 2
93-1233	Gasket - Exhaust	7 12 1	32144-4	Screw - HH Tap	3 3 8
93-3175	Baffle	4 15 1	32144-4	Screw - HH Tap	11 21 2
93-3660	Fuel Cap Assembly	4 4 1	32144-4	Screw - HH Tap	3 34 2
93-4105	Decal - Danger	3 28 1	32144-4	Screw - HH Tap	11 12 4
93-4302	Screw	4 3 3	32144-31	Screw	11 7 1
93-4303	Cover - Air Filter	6 2 1	32144-70	Screw - Tap	3 12 1
93-4304	Housing Assembly	9 1 1	32144-97	Screw - PPH	3 17 2
93-4304	Shroud	6 20 1	32144-102	Screw	4 13 3
93-4305	Rope - Starter	9 2 1	32151-93	Ring - Grip	11 3 1
93-4306	Spring - Compression	7 21 1			

*Not Illustrated