

LAWN-BOY®

53 cm Side Discharge Walk-Behind Mower

Model No. 10800 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Carburetor Assembly	7
Engine Assembly	2	Recoil Assembly	8
Handle Assembly	3	Piston & Connecting Assembly	9
Engine & Carburetor Assembly	4	Cylinder & Crankcase Assembly	10
Brake & Muffler Assembly	5	Lawn–Boy Part Number Index	11–13
Crankshaft Assembly	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSN	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

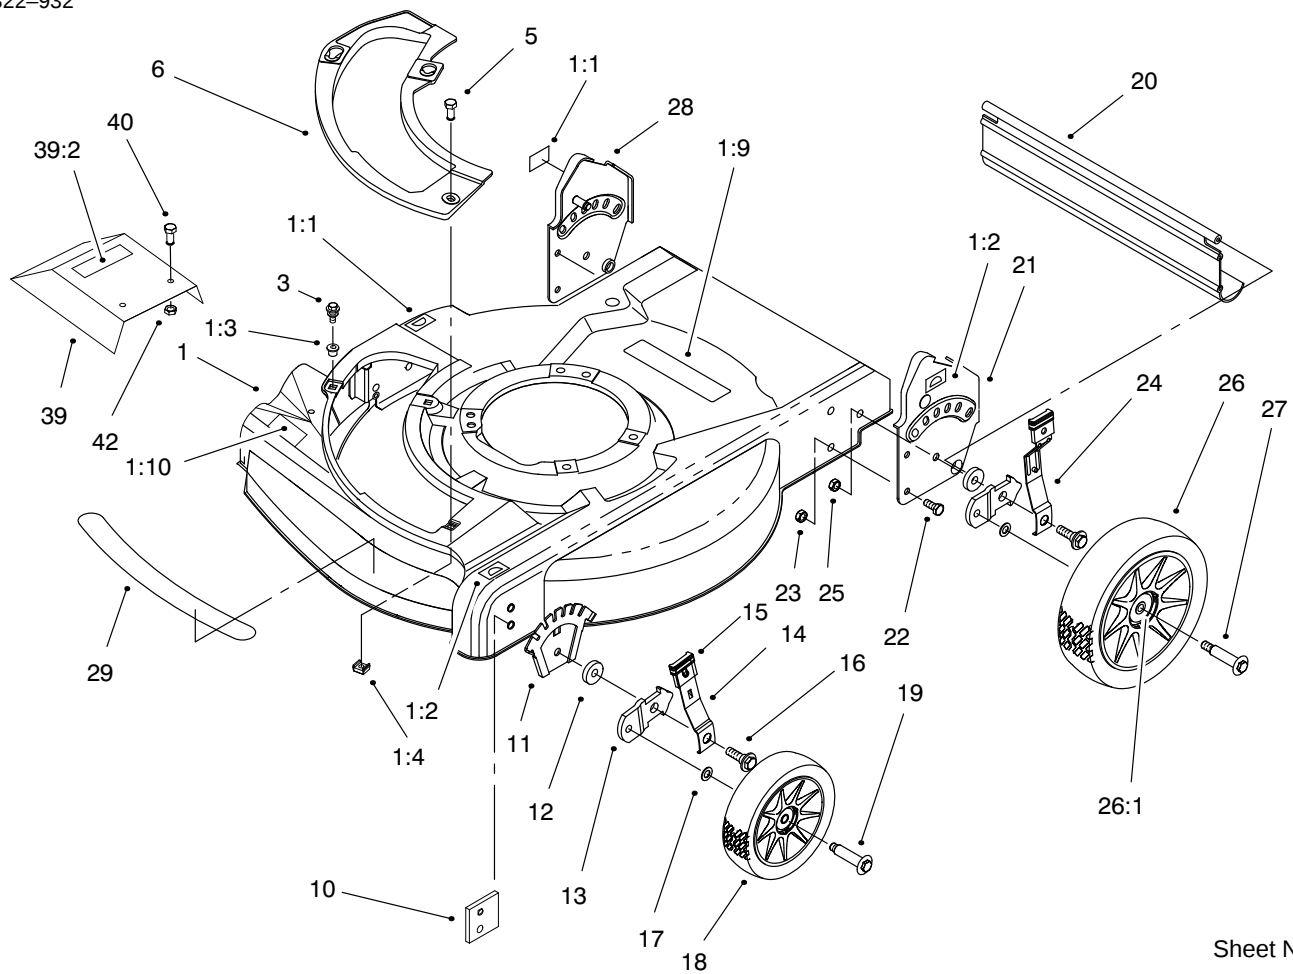


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6275	1	Housing ASM
1:1	93-6671	2	Decal-HOC
1:2	93-6670	2	Decal-HOC
1:3	94-1610	2	Grommet-Plastic
1:4	613765	1	Nut-Cage
1:9	93-6657	1	Decal-Danger
1:10	93-6667	2	Decal-Danger
3	614677	2	Screw-Sems
5	49-2040	1	Screw-HH
6	607560	1	Plate-Cover
10	92-7731	2	Plate-Baffle
11	92-4881-03	2	Plate-Height Adjust
12	92-4890	4	Washer
13	95-7403-03	4	Bracket-Wheel Height Adj
14	614687	2	Spring Arm-Front
15	92-1008	4	Knob-Height Adjust
16	614672	4	Bolt-Shoulder
17	40-1940	5	Washer
18	92-8885	2	Wheel & Tire ASM
19	92-1099	2	Bolt-Shoulder
20	92-8647	1	Shield-Trailing
21	92-7743	1	Handle Bracket ASM
22	322-3	4	Screw-HH
23	3296-29	4	Nut-Lock
24	92-1005	2	ASM-Spring Arm


Ref. No.	Part No.	Qty.	Description
25	3296-39	2	Nut-Lock
26	92-8887	2	ASM-Wheel
26:1	27-6250	4	Bushing
27	614650	2	Bolt-Shoulder
28	92-7742	1	RH Handle Bracket ASM
29	92-8833	1	Decal-Deck 345vp
39	99-6274	1	Guard-Plate
39:2	93-6667	1	Decal-Warning
40	32105-15	2	Screw-HH
42	3296-42	2	Nut-Lock

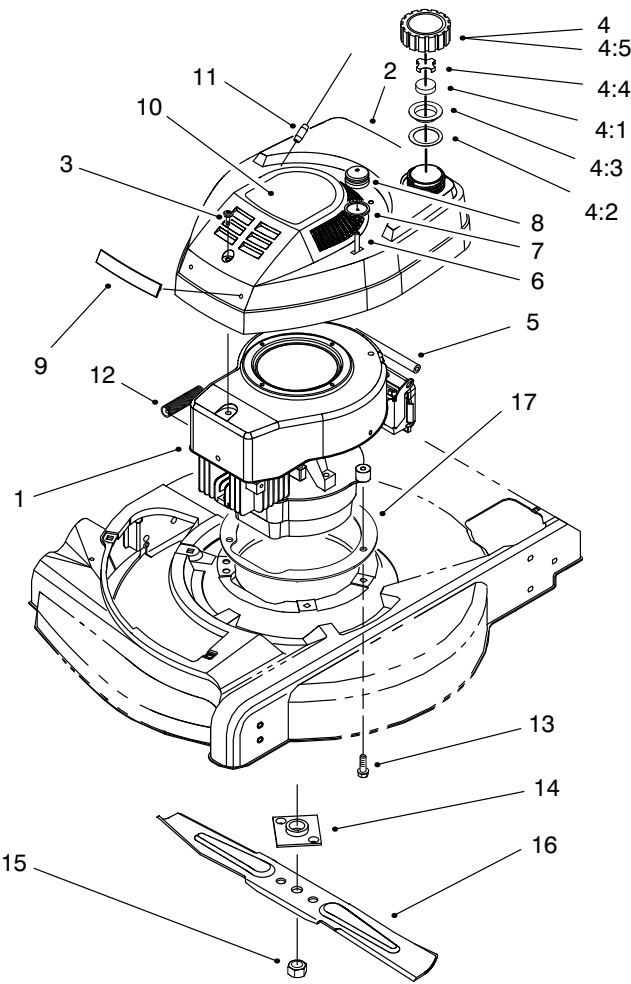

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1		1	Engine ASM				
2	92-8619	1	Tank & Shroud ASM				
3	93-4302	3	Screw-Sems				
4	98-8344	1	Fuel/Oil Cap ASM				
4:1	609150	1	Foam Baffle				
4:2	613311	1	Gasket-Fuel Cap				
4:3	93-1230	1	Cover-Fuel Cap Baffle				
4:4	93-3175	1	Baffle-Gas Cap				
4:5	98-8345	1	Cap-Fuel/Oil				
5	612782	1	Gas Line				
6	44-3174	1	Hose-Primer				
7	44-2750	1	Body-Primer				
8	66-7460	1	Bulb-Primer				
9	92-8615	1	Applique-Shroud				
10	92-8828	1	Decal-Shroud Top				
11	92-1701	1	Rope-Stop				
12	93-4306	1	Spring-Compression				
13	95-1726	3	Screw-Engine Mount				
14	677525	1	Plate & Collar ASM				
15	612543	1	Blade-21" Whirl				
16	603164	1	Nut-Blade				
17	93-7152	1	Plate-Engine				

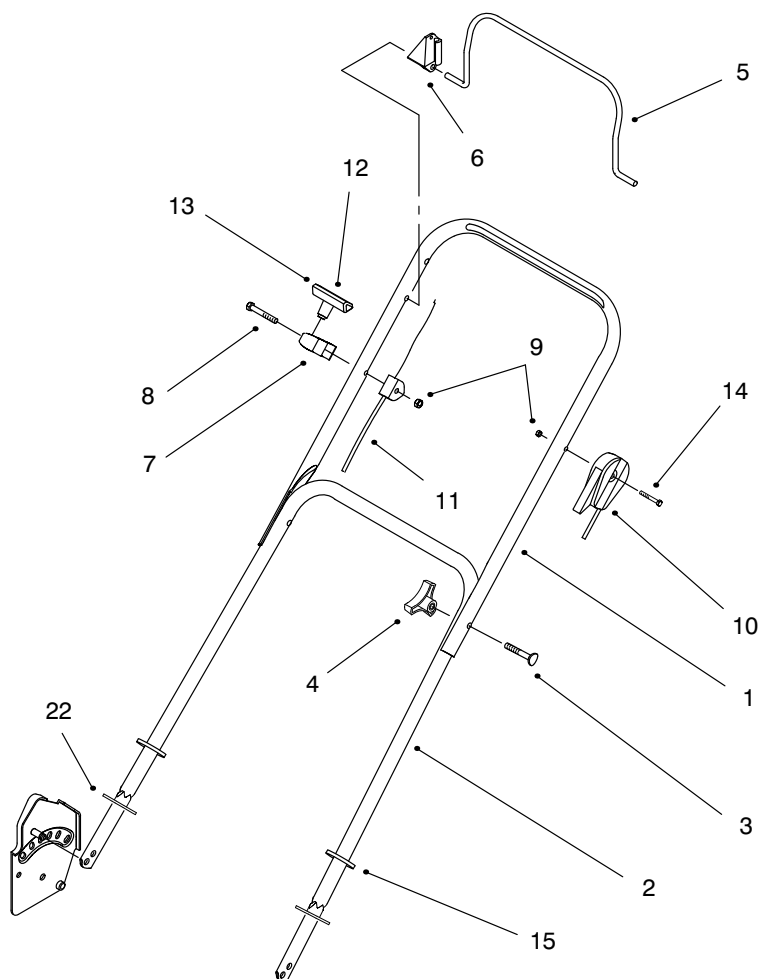


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	95-1713-05	1	Handle Section-Upper
2	614643-05	1	Handle Section-Lower
3	614697	2	Screw-Handle
4	98-7134	2	Knob
5	93-4184-03	1	Bail-Flywheel Brake
6	92-5412	1	Stop-Pivot
7	93-7383	1	Guide-Rope
8	321-50	1	Screw
9	3296-73	2	Nut-Lock
10	92-9326	1	Cable-Throttle
11	92-7738	1	Cable-Flywheel Brake
12	612824	1	Clip-Rope
13	612825	1	Handle-Starter
14	321-53	1	Screw-HH
15	3290-378	2	Tie-Cable
22	93-3653	2	Handle-Guard


Ref. No.	Part No.	Qty.	Description

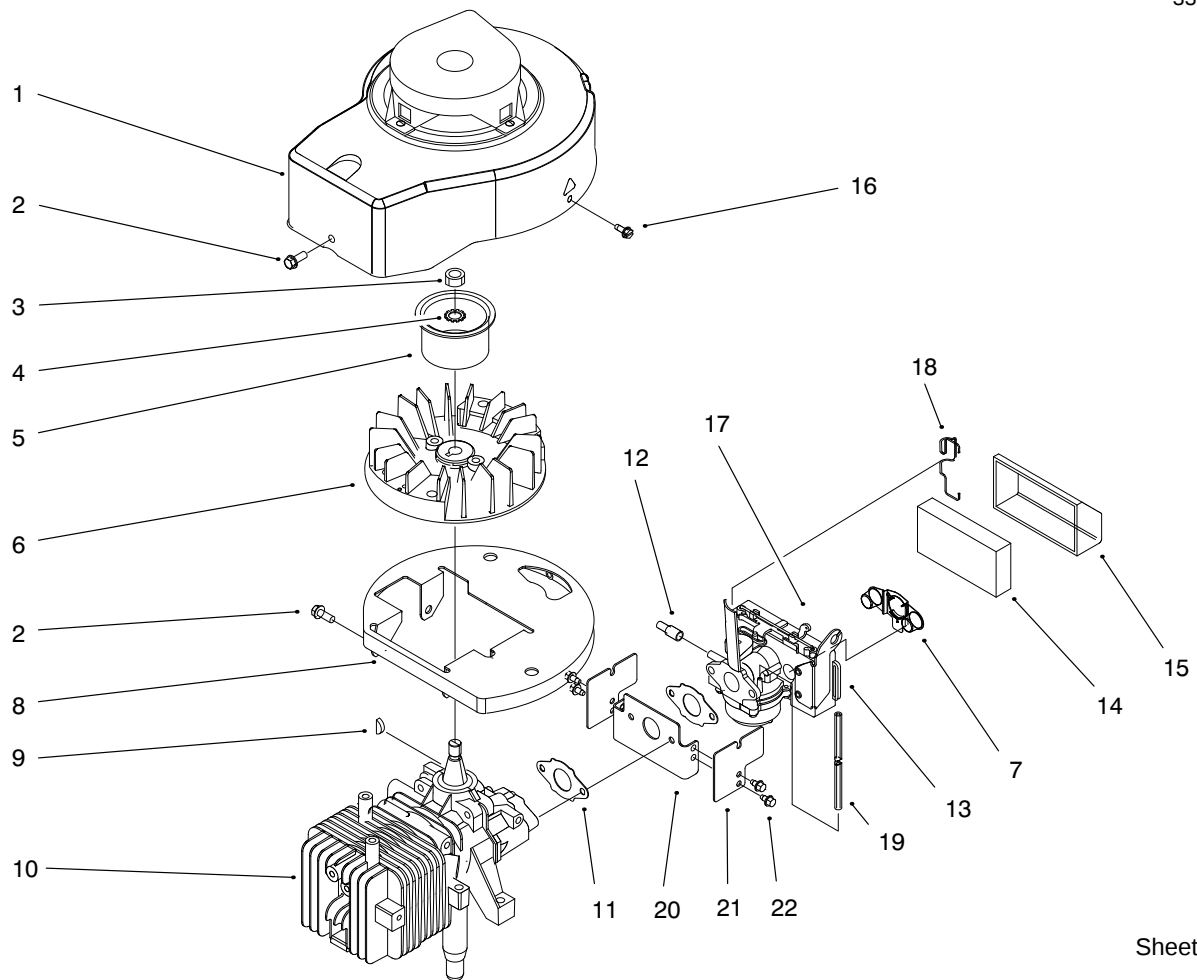

Sheet No.:102

Engine & Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-4304	1	Shroud & Recoil ASM				
2	614702	4	Screw				
3	130743	1	Nut				
4	316959	1	Washer-Lock				
5	614640	1	Hub-Starter				
6	684743	1	Flywheel ASM				
7	93-4320	1	Shield-Fuel				
8	93-1216	1	Base-Shroud				
9	607199	1	Key				
10	93-4349	1	Short Block V ASM				
11	92-4948	2	Gasket-Carburetor				
13	93-4331	1	ASM-Carburetor				
14	609493	1	Element-Filter				
15	93-1231	1	Cover-Air Filter				
16	614699	3	Screw				
17	609482	2	Screw				
18	610383	1	Retainer-Filter				
19	44-3174	1	Hose-Primer				
20	93-4315	1	Shield-Carburetor				
21	93-4316	2	Shield-Governor				
22	613269	4	Screw				

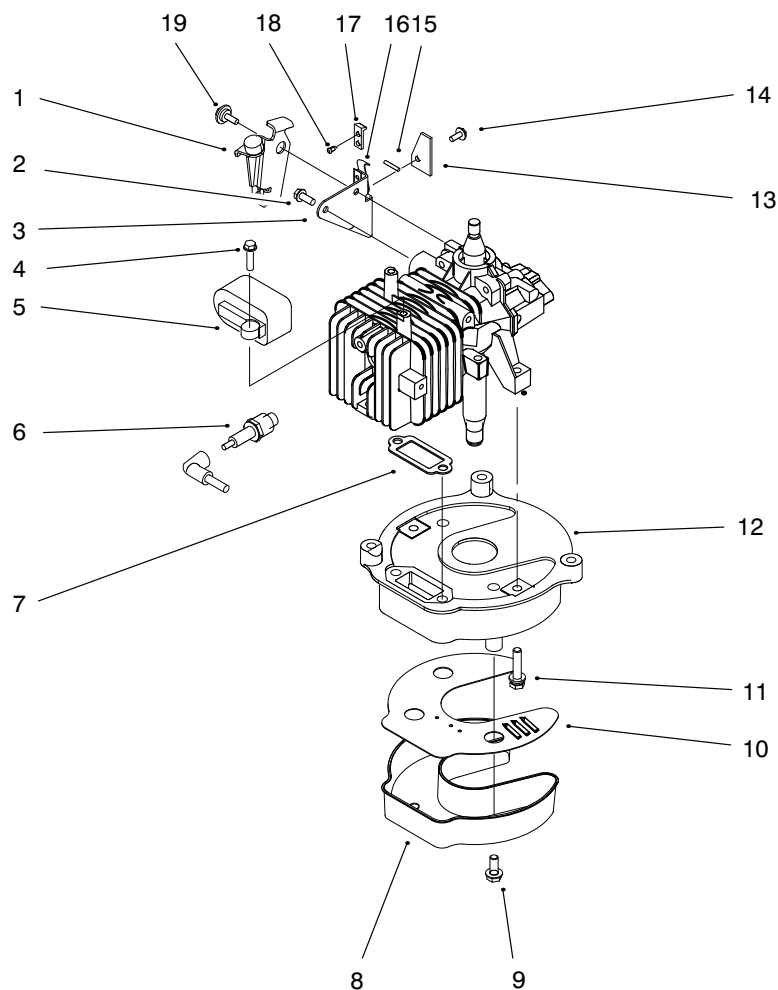


Sheet No.:103

Brake & Muffler Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4312	1	Brake Plate ASM
2	614702	1	Screw
3	84-7820	1	Plate-Mount Brake
4	613208	2	Screw-HWH
5	684049	1	Ignition ASM
6	614009	1	Plug-Spark
7	93-1233	1	Gasket-Exhaust
8	614674-03	1	Cover-Muffler
9	609471	3	Screw
10	93-4343	1	Baffle
11	607601	4	Screw
12	614654	1	Plate-Muffler
13	53-4690	1	Stop-Ground Strap
14	12-5450	1	Screw-Thread Forming
15	92-1156	1	Brake Switch Lead Wire
16	60-9010	1	Strap-Ground
17	92-2925	1	Strap-Insulation
18	3290-459	2	Rivet-Self Expanding
19	92-9698	1	Screw-Shoulder

Ref. No.	Part No.	Qty.	Description

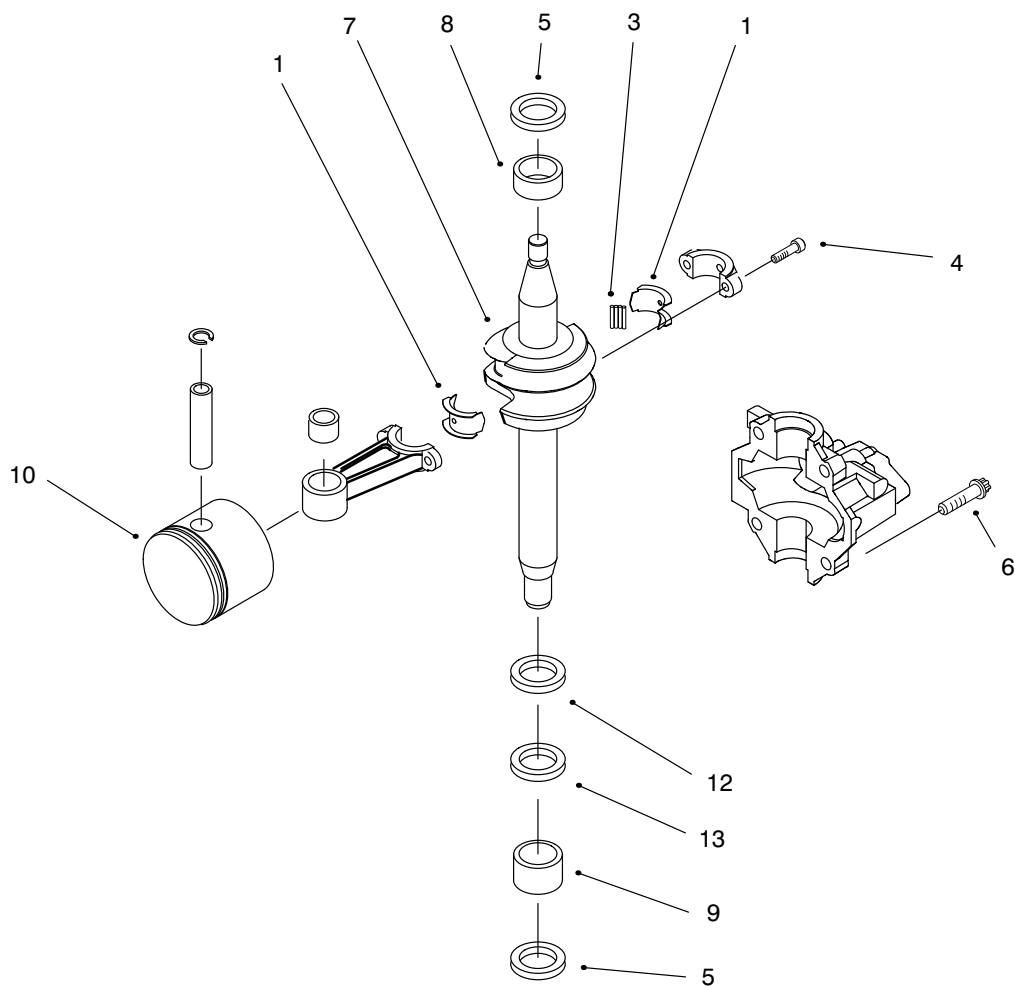


Sheet No.:200

Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	2	Split Liner
3	609754	1	Roller Strip
4	611393	2	Screw
5	611396	2	Oil Seal
6	614636	3	Screw-HWH
7	94-5713	1	Crankshaft
8	681830	1	Bearing (Upper)
9	681831	1	Bearing
10	92-4925	1	Piston & Connecting Rod ASM
12	252-76	1	Bearing-Thrust
13	252-80	1	Washer-Thrust

Ref. No.	Part No.	Qty.	Description

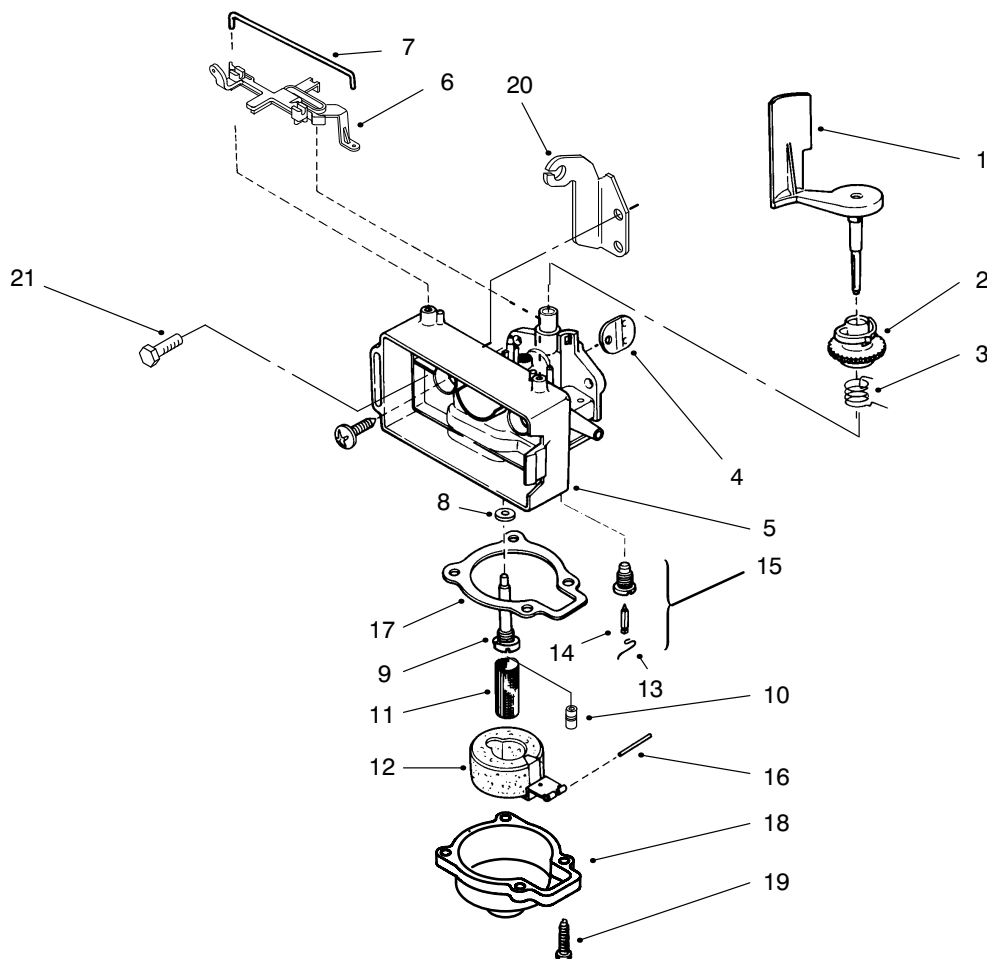


Sheet No.:300

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6376	1	Air Vane & Shaft
2	610834	1	Collar Adjustment
3	92-4944	1	Spring Governor
4	92-6373	1	Disc Throttle
5	93-4324	1	Carburetor Body
6	93-1225	1	Lever-Speed Adjust
7	610165	1	Retainer
8	612383	1	Washer
9	92-6371	1	Nozzle
10	92-6370	1	Mainjet
11	611071	1	Filter-Fuel
12	678113	1	Float & Arm ASM
13	603145	1	Clip
14	678278	1	Float ASM
15	92-6372	1	Seat ASM
16	92-6389	1	Pin
17	602850	1	Gasket-Float Chamber
18	92-9691	1	Float Chamber
19	608850	4	Screw
20	92-4949	1	Throttle Control Bracket
21	613269	2	Screw

Ref. No.	Part No.	Qty.	Description

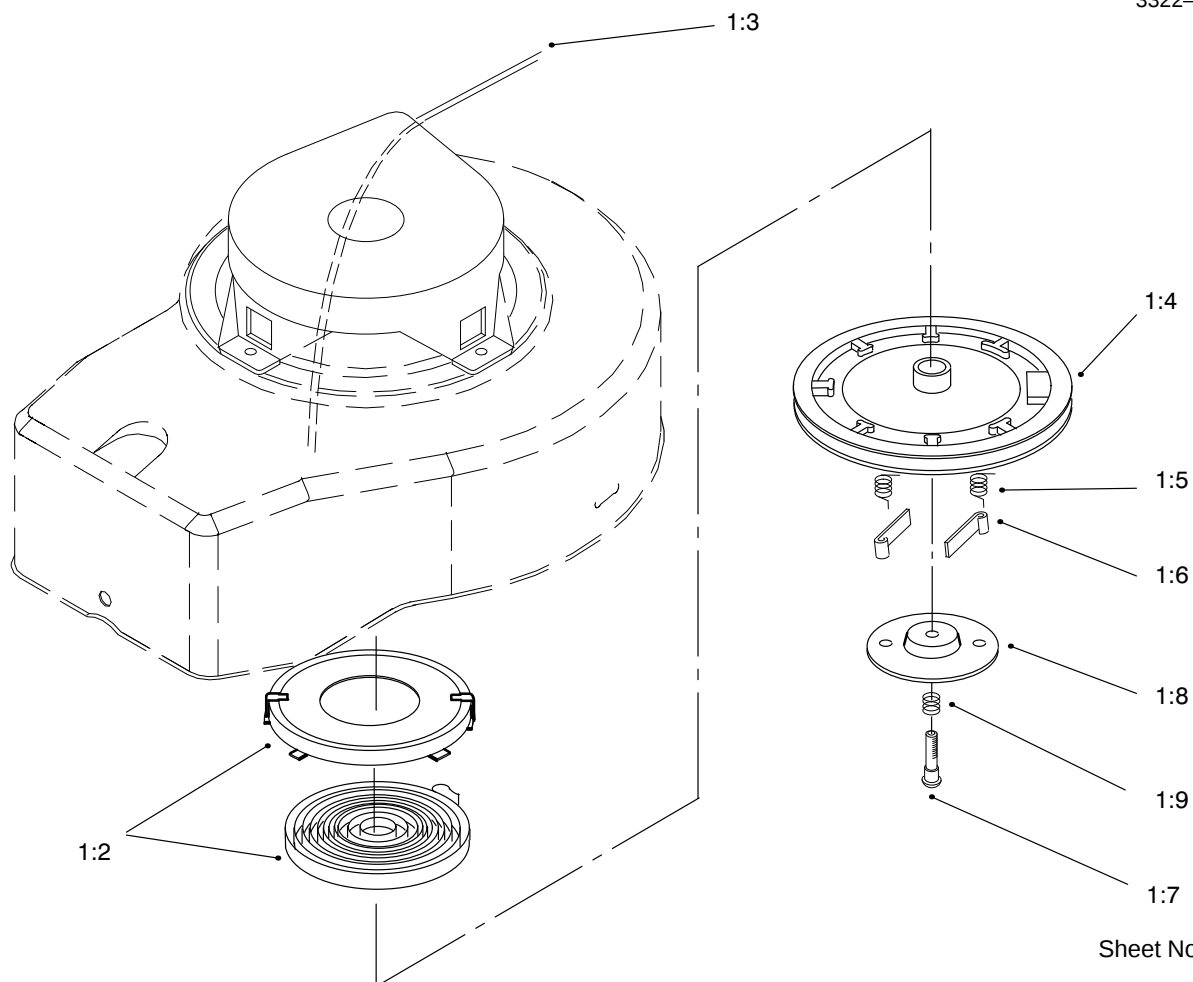


Sheet No.:400

Recoil Assembly

Ref. No.	Part No.	Qty.	Description
*1	93-1236	1	Recoil ASM
1:2	92-4935	1	Keeper ASM
1:3	93-4305	1	88 5/8 Grey Rope
1:4	92-4929	1	Pulley ASM
1:5	92-4930	2	Spring-Dog
1:6	92-4931	2	Dog
1:7	92-4934	1	Spring-Brake
1:8	92-9692	1	Retainer
1:9	92-4933	1	Screw-Center

Ref. No.	Part No.	Qty.	Description

* Not illustrated

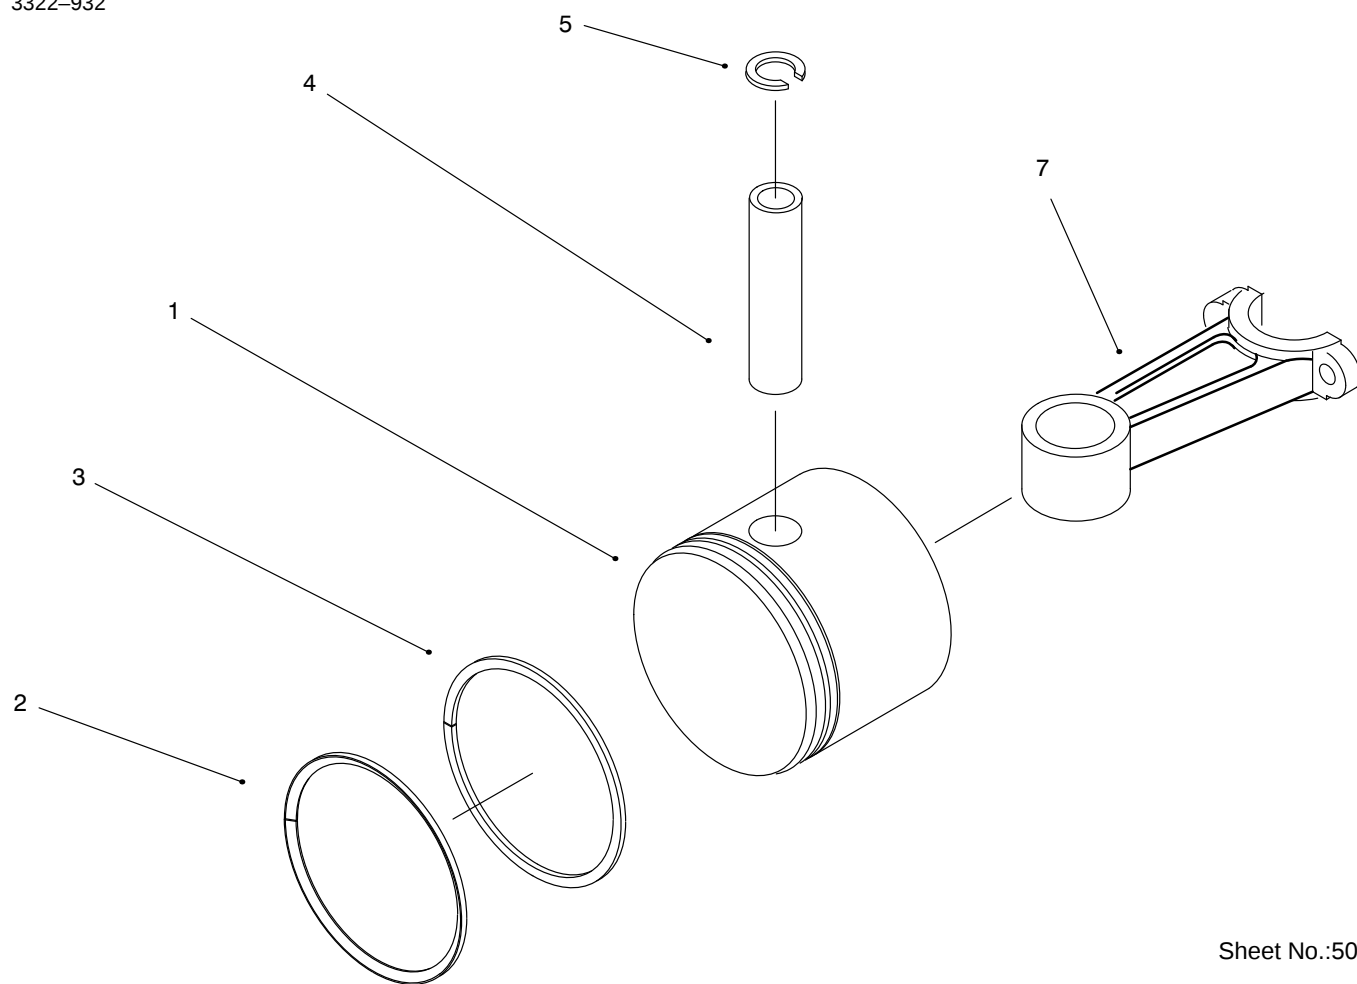


Sheet No.:500

Piston & Connecting Assembly

Ref. No.	Part No.	Qty.	Description
1	92-4924	1	Piston
2	681737	1	Ring-Piston
3	678422	1	Ring-Piston
4	606608	1	Pin-Wrist
5	303712	2	Ring-Retaining
7	92-4921	1	Connecting Rod ASM

Ref. No.	Part No.	Qty.	Description

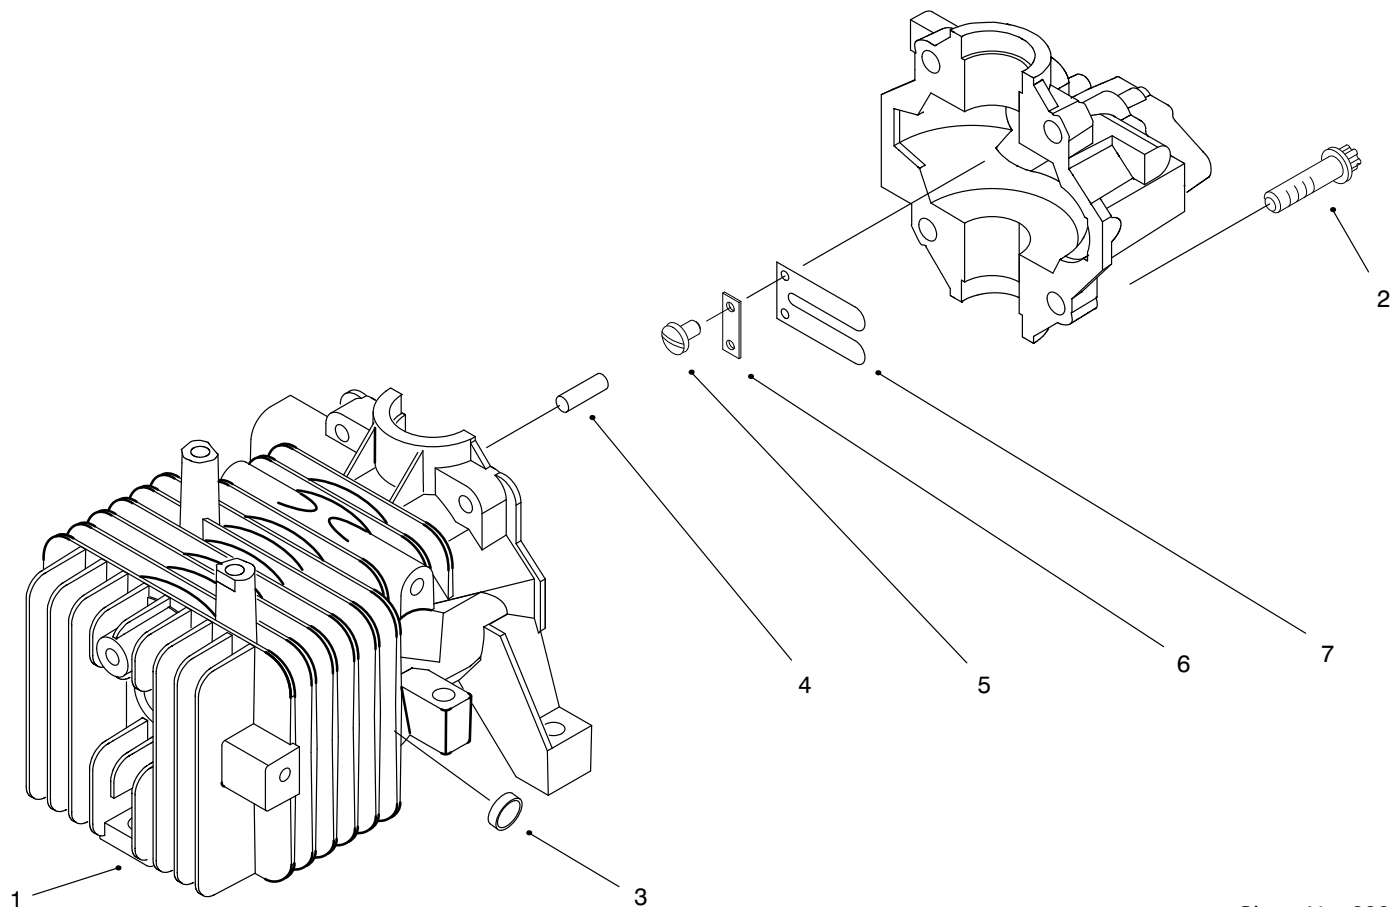

Sheet No.:600

Cylinder & Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4347	1	Cyl & Crankcase ASM
2	614636	1	Screw-HWH
3	609123	4	Plug-Core
4	609629	1	Dowel
5	612872	2	Screw-Slotted Head
6	602587	1	Reed-Backup Plate
7	602588	1	Reed-Carburetor

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	4	3	1	Nut
303712	9	5	2	Ring—Retaining
316959	4	4	1	Washer—Lock
602587	10	6	1	Reed—Backup Plate
602588	10	7	1	Reed—Carburetor
602850	7	17	1	Gasket—Float Chamber
603145	7	13	1	Clip
603164	2	16	1	Nut—Blade
606608	9	4	1	Pin—Wrist
607199	4	9	1	Key
607560	1	6	1	Plate—Cover
607601	5	11	4	Screw
608850	7	19	4	Screw
609123	10	3	4	Plug—Core
609150	2	4:1	1	Foam Baffle
609471	5	9	3	Screw
609482	4	17	2	Screw
609493	4	14	1	Element—Filter
609629	10	4	1	Dowel
609754	6	3	1	Roller Strip
610165	7	7	1	Retainer
610383	4	18	1	Retainer—Filter
610834	7	2	1	Collar Adjustment
611071	7	11	1	Filter—Fuel
611393	6	4	2	Screw
611396	6	5	2	Oil Seal
612383	7	8	1	Washer
612543	2	15	1	Blade—21" Whirl
612782	2	5	1	Gas Line
612824	3	12	1	Clip—Rope
612825	3	13	1	Handle—Starter
612872	10	5	2	Screw—Slotted Head
613208	5	4	2	Screw—HWH
613269	4	22	4	Screw
613269	7	21	2	Screw
613311	2	4:2	1	Gasket—Fuel Cap
613765	1	1:4	1	Nut—Cage
614009	5	6	1	Plug—Spark
614636	6	6	3	Screw—HWH
614636	10	2	1	Screw—HWH
614640	4	5	1	Hub—Starter
614650	1	27	2	Bolt—Shoulder
614654	5	12	1	Plate—Muffler
614672	1	16	4	Bolt—Shoulder
614677	1	3	2	Screw—Sems
614687	1	14	2	Spring Arm—Front
614697	3	3	2	Screw—Handle
614699	4	16	3	Screw
614702	4	2	4	Screw
614702	5	2	1	Screw
677525	2	14	1	Plate & Collar ASM
677982	6	1	2	Split Liner
678113	7	12	1	ASM—Float & Arm
678278	7	14	1	ASM—Float
678422	9	3	1	Ring—Piston
681737	9	2	1	Ring—Piston
681830	6	8	1	Bearing (Upper)
681831	6	9	1	Bearing
684049	5	5	1	Ignition ASM
684743	4	6	1	ASM—Flywheel
12-5450	5	14	1	Screw—Thread Forming
27-6250	1	26:1	4	Bushing

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
40-1940	1	17	5	Washer
44-2750	2	7	1	Body-Primer
44-3174	2	6	1	Hose-Primer
44-3174	4	19	1	Hose-Primer
49-2040	1	5	1	Screw-HH
53-4690	5	13	1	Stop-Ground Strap
60-9010	5	16	1	Strap-Ground
66-7460	2	8	1	Bulb-Primer
84-7820	5	3	1	Plate-Mount Brake
92-1005	1	24	2	ASM-Spring Arm
92-1008	1	15	4	Knob-Height Adjust
92-1099	1	19	2	Bolt-Shoulder
92-1156	5	15	1	Brake Switch Lead Wire
92-1701	2	11	1	Rope-Stop
92-2925	5	17	1	Strap-Insulation
92-4881-03	1	11	2	Plate-Height Adjust
92-4890	1	12	4	Washer
92-4921	9	7	1	ASM-Connecting Rod
92-4924	9	1	1	Piston
92-4925	6	10	1	ASM-Piston & Conn Rod
92-4929	8	1:4	1	ASM-Pulley
92-4930	8	1:5	2	Spring-Dog
92-4931	8	1:6	2	Dog
92-4933	8	1:9	1	Screw-Center
92-4934	8	1:7	1	Spring-Brake
92-4935	8	1:2	1	ASM-Keeper
92-4944	7	3	1	Spring Governor
92-4948	4	11	2	Gasket-Carburetor
92-4949	7	20	1	Throttle Control Brkt
92-5412	3	6	1	Stop-Pivot
92-6370	7	10	1	Mainjet
92-6371	7	9	1	Nozzle
92-6372	7	15	1	ASM-Seat
92-6373	7	4	1	Disc Throttle
92-6376	7	1	1	Air Vane & Shaft
92-6389	7	16	1	Pin
92-7731	1	10	2	Plate-Baffle
92-7738	3	11	1	Cable-Flywheel Brake
92-7742	1	28	1	RH Handle Bracket ASM
92-7743	1	21	1	Handle Bracket ASM
92-8615	2	9	1	Applique-Shroud
92-8619	2	2	1	Tank & Shroud ASM
92-8647	1	20	1	Shield-Trailing
92-8828	2	10	1	Decal-Shroud Top
92-8833	1	29	1	Decal-Deck 345vp
92-8885	1	18	2	Wheel & Tire ASM
92-8887	1	26	2	ASM-Wheel
92-9326	3	10	1	Cable-Throttle
92-9691	7	18	1	Float Chamber
92-9692	8	1:8	1	Retainer
92-9698	5	19	1	Screw-Shoulder
93-1216	4	8	1	Base-Shroud
93-1225	7	6	1	Lever-Speed Adjust
93-1230	2	4:3	1	Cover-Fuel Cap Baffle
93-1231	4	15	1	Cover-Air Filter
93-1233	5	7	1	Gasket-Exhaust
93-1236	8	1	1	ASM-Recoil
93-3175	2	4:4	1	Baffle-Gas Cap
93-3653	3	22	2	Handle-Guard
93-4184-03	3	5	1	Bail-Flywheel Brake
93-4302	2	3	3	Screw-Sems
93-4304	4	1	1	ASM-Shroud & Recoil

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-4305	8	1:3	1	88 5/8 Grey Rope
93-4306	2	12	1	Spring-Compression
93-4312	5	1	1	ASM-Brake Plate
93-4315	4	20	1	Shield-Carb(Int'l)
93-4316	4	21	2	Shield-Governor V(Int'l)
93-4320	4	7	1	Shield-Fuel
93-4324	7	5	1	Carburetor Body
93-4331	4	13	1	ASM-Carburetor
93-4343	5	10	1	Baffle
93-4347	10	1	1	Cyl & Crankcase ASM
93-4349	4	10	1	ASM-Short Block V
93-6657	1	1:9	1	Decal-Danger
93-6667	1	1:10	2	Decal-Danger
93-6667	1	39:2	1	Decal-Warning
93-6670	1	1:2	2	Decal-HOC
93-6671	1	1:1	2	Decal-HOC
93-7152-02	2	17	1	Plate-Engine
93-7172	1	1	1	Housing ASM
93-7383	3	7	1	Guide-Rope
94-1610	1	1:3	2	Grommet-Plastic
94-5713	6	7	1	Crankshaft
95-1713-05	3	1	1	Handle Section-Upper
95-1726	2	13	3	Screw-Engine Mount
95-7403-03	1	13	4	Bracket-Wheel Height Adj
98-7134	3	4	2	Knob
98-8344	2	4	1	Fuel/Oil Cap ASM
98-8345	2	4:5	1	Cap-Fuel/Oil
99-6274	1	39	1	Guard-Plate
252-76	6	12	1	Bearing-Thrust
252-80	6	13	1	Washer-Thrust
321-50	3	8	1	Screw
321-53	3	14	1	Screw-HH
322-3	1	22	4	Screw-HH
3290-378	3	15	2	Tie-Cable
3290-459	5	18	2	Rivet-Self Expand Plas
3296-29	1	23	4	Nut-Lock
3296-39	1	25	2	Nut-Lock
3296-42	1	42	2	Nut-Lock
3296-73	3	9	2	Nut-Lock
32105-15	1	40	2	Screw-HH
614643-05	3	2	1	Handle Section-Lower
614674-03	5	8	1	Cover-Muffler