

LAWN-BOY®

Silver Series Walk-Behind Mower

Model No. 10335-9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing & Wheel Assembly	1	Engine LEV120-361003A	7-9
Gearcase Assembly	2	Recoil Starter Assembly 590702	10
Wheel Assembly	3	Recoil Starter Assembly 590739 (Optional)	11
Engine & Blade Assembly	4	Lawn-Boy Part Number Index	12
Handle Assembly	5	Maintenance	13
Carburetor No. 640119	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89817	Leaf Shredder Kit	Model No. 89860
Leaf Bag	Model No. 89804	Leaf Bag Kit w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

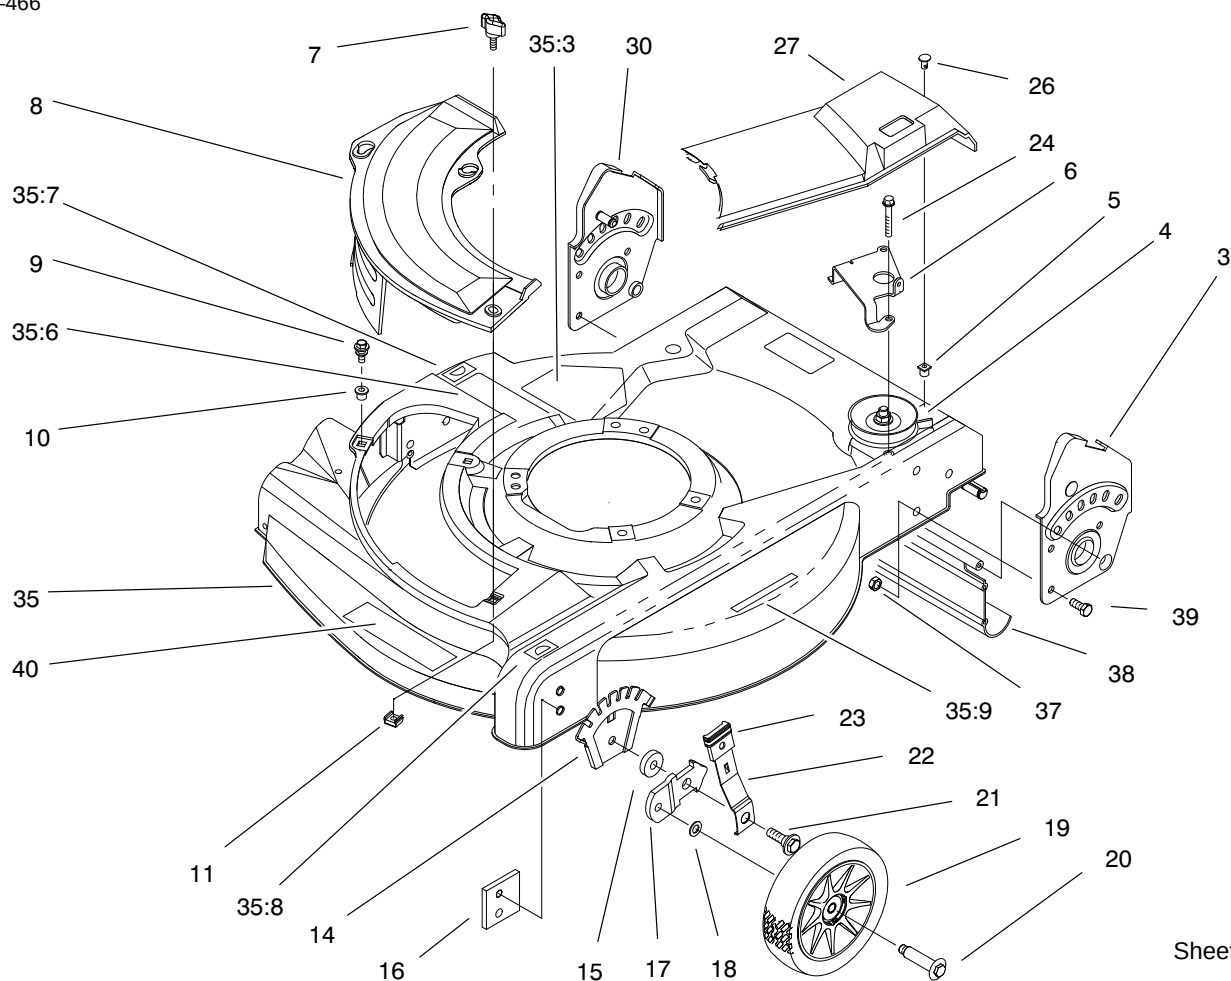


Sheet No.: 2

Housing & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
3	92-7724	1	LH Handle Brkt ASM
4	92-7735	1	Gear Case Assembly
5	605120	1	Grommet
6	92-7728-03	1	Guide - Transmission
7	98-8332	1	Knob
8	92-8630	1	Plate-Mulch
9	614677	2	Screw- Sems
10	94-1610	2	Grommet - Plastic
11	613765	1	Nut-Cage
14	92-4881-03	2	Plate - Hght Adj
15	92-4890	2	Washer - Wheel
16	92-7731	2	Plate - Baffle
17	95-7403-03	2	Bracket-Wheel Ht Adj
18	40-1940	2	Washer-Wheel Bolt
19	684776	2	6" Wheel & Tire ASM
20	92-1099	2	Bolt-Shoulder 6" Wheel
21	614672	2	Bolt-Shoulder
22	614687	2	Arm-Front Spring
23	92-1008	4	Knob-Height Adj Lever
24	65-5221	2	Screw-Thread Forming
26	92-9665	1	Screw-PTH
27	95-7068	1	Cover - Drive
30	92-7723	1	RH Handle Brkt ASM

Ref. No.	Part No.	Qty.	Description
35	98-4477	1	ASM-Hsg/Baffle w/Decals
35:3	43-8480	1	Decal-Danger
35:6	99-6018	1	Decal - Warning
35:7	92-2914	1	Decal - HOC R
35:8	92-2915	1	Decal - HOC L
35:9	93-7250	1	Decal - Safety Instruct
37	3296-29	6	Nut-Lock NI
38	92-8647	1	Shield - Trailing
39	322-3	6	Screw-HH
40	98-1567	1	Decal - Deck
*99	614249	4	Strap-Tie Sm
*99	95-7052	1	Plate - Chute Opening


* Not illustrated

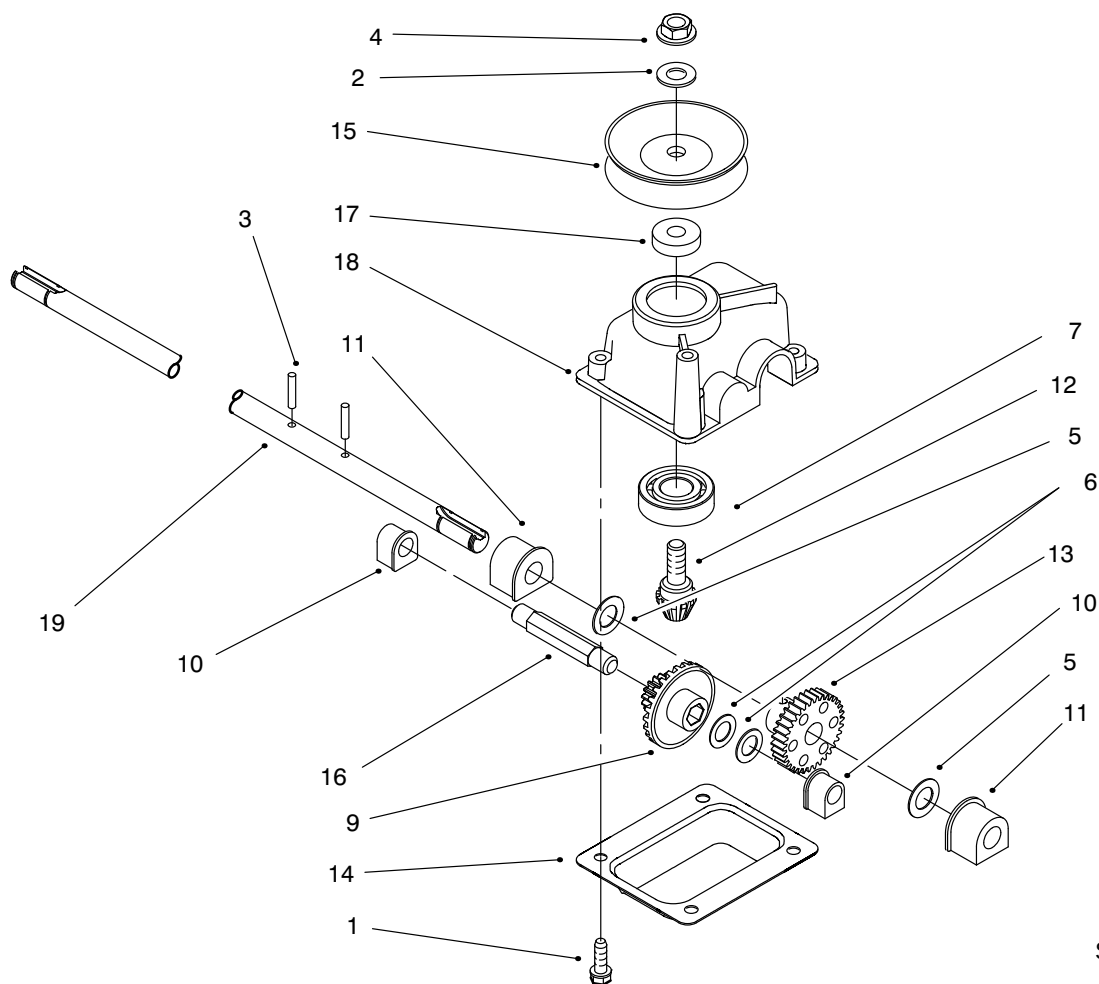

Sheet No.: A1

Gearcase Assembly


Ref. No.	Part No.	Qty.	Description
1	32144-4	4	Screw-HH
2	3256-24	1	Washer-Flat
3	3285-19	2	Pin-Groove
4	3296-5	1	Nut-Lock NI
5	36-4780	2	Washer
6	36-4791	2	Thrust Washer
7	38-7820	1	Bearing-Ball
9	55-3760	1	Gear-15T Spur, 37T Bevel
10	60-8750	2	Bushing
11	60-8850	2	Bushing-Output
12	60-8890	1	Bevel Pinion Gear
13	614596	1	Gear -34T
14	614668-03	1	Gear Case Cover
15	614669	2	Pulley Half
16	614696	1	Shaft-Intermediate
17	62-6660	1	Spacer
18	92-7727	1	Gearcase
19	93-0239	1	Shaft - Output

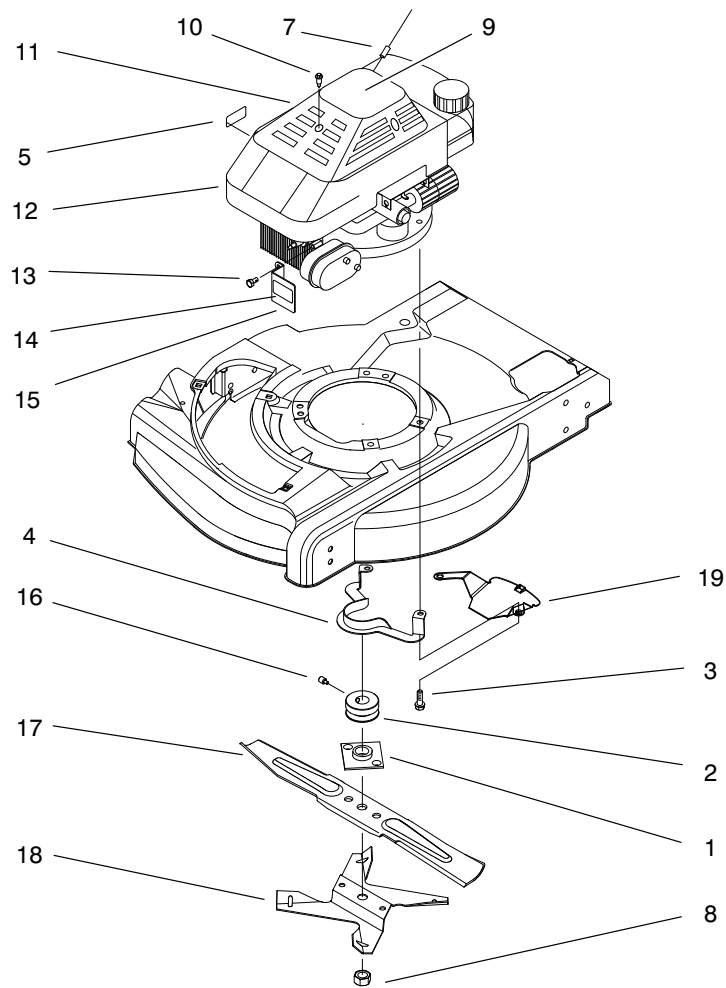

Sheet No.: 4

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM				
2	92-9575	1	Pulley				
3	95-1726	3	Screw-Taptite w/Patch				
4	92-1024-03	1	Belt Guide				
5	92-4851	1	Decal- Oil Instr.				
7	92-1701	1	Rope - Stop				
8	603164	1	Nut-Blade				
9	95-5591	1	Decal - Recoil				
10	92-4852	4	Screw - Recoil Cover				
11	92-4854	1	Cover - Starter				
12	94-6088-02	1	Shroud - Engine				
13	32144-85	1	Screw-TAP				
14	65-2690	1	Decal-Hot Surface				
14	95-5569	1	ASM - Muffler Guard				
15	94-6066-03	1	Guard - Muffler				
16	613227	1	Screw - Set				
17	612543	1	Blade-21" Whirl				
18	99-6351-03	1	Fan - Mulching				
19	93-4196-03	1	Shield - Grass				

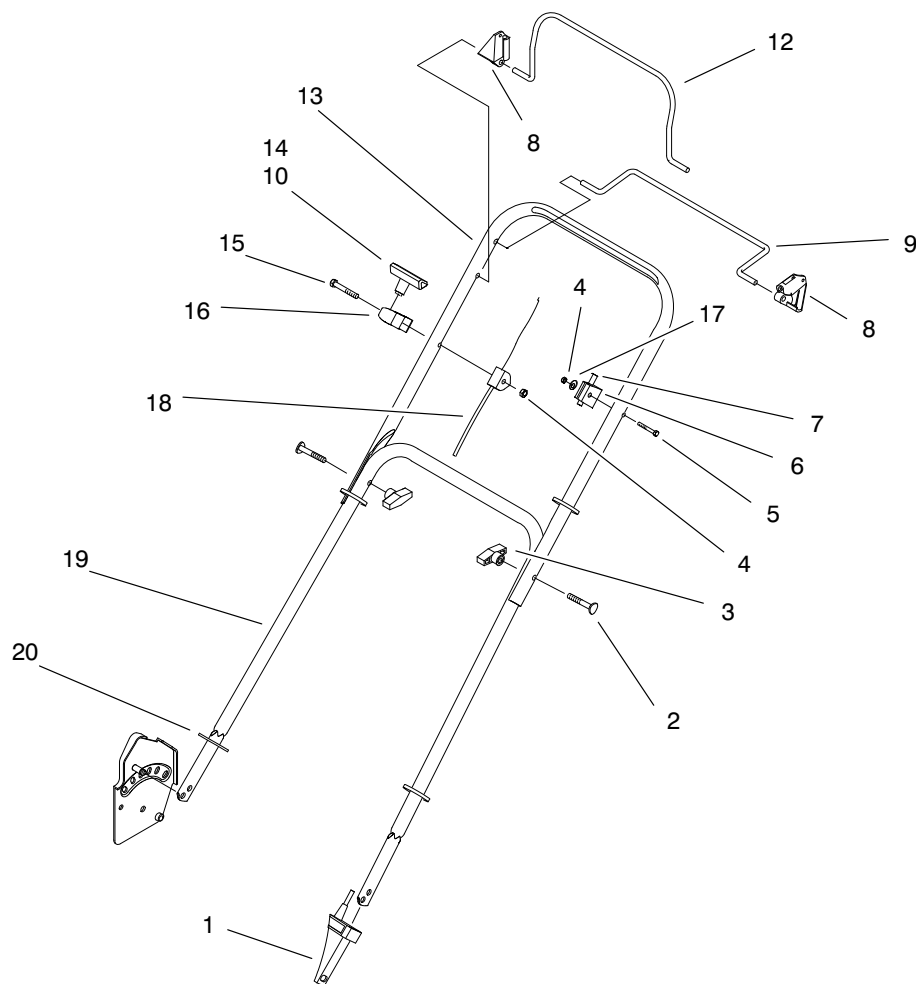


Sheet No.: 5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor – Cable
2	614697	2	Screw-HH
3	98-7134	2	Knob-Handle
4	3296-73	2	Nut-Lock
5	92-2266	1	Screw-Handle
6	92-7729	1	Anchor-Upper Sp Cable
7	92-7726	1	Cable – Traction
8	92-5412	2	Stop-Pivot
9	92-1001-03	1	Bail-Sp Control
10	92-5424	1	Handle Staple
12	93-4184-03	1	Bail – Brake
13	95-1713-05	1	Handle – Upper
14	92-4853	1	Handle-Starter
15	321-50	1	Screw-HH
16	93-7383	1	Rope – Guide
17	3256-1	1	Washer-Flat
18	98-1560	1	ASM Brake Cable
19	614643-05	1	Section-Lower Handle
20	93-3653	1	Guard – Handle
*99	613455	1	Wire Hanger,
*99	613462-03	2	Clamp-Hanger
*99	684728	1	Bag & Adapter ASM
*99	684729	1	Chute & Support

Ref. No.	Part No.	Qty.	Description


* Not illustrated

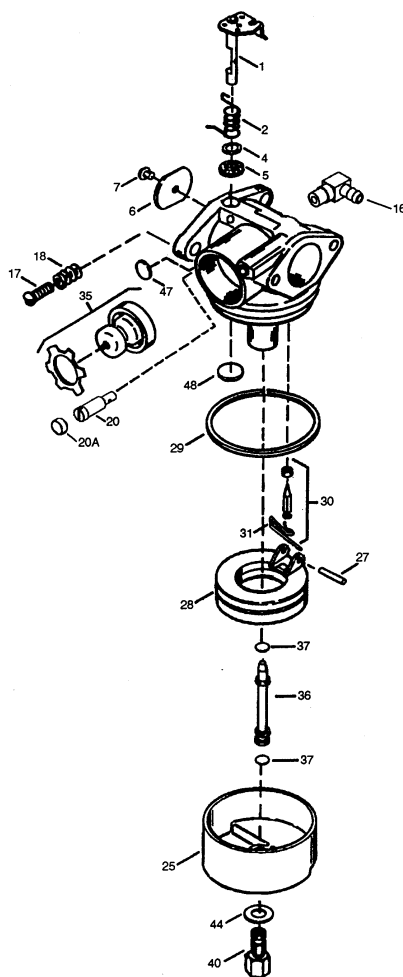

Carburetor No. 640119


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	640119	1	Carburetor	37	632547	2	O-Ring, Main Nozzle Tube
1	631615	1	Throttle Shaft & Lever Assembly	40	640028	1	High Speed Bowl Nut
2	631767	1	Throttle Return Spring	44	27110	1	Bowl Nut Washer
4	631184	1	Dust Seal Washer	47	630748	1	Welch Plug, Idle Mixture Well
5	631183	1	Dust Seal (Throttle)	48	631027	1	Welch Plug, Atmospheric Vent
6	640070	1	Throttle Shutter				
7	650506	1	Shutter Screw				
16	631807	1	Fuel Fitting				
17	651025	1	Throttle Crack Screw/Idle Speed Screw				
18	630766	1	Tension Spring				
20	640016	1	Idle Restrictor Screw				
20A	640053	1	Idle Restrictor Screw Cap				
25	631867	1	Float Bowl				
27	631024	1	Float Shaft				
28	632019	1	Float				
29	631028	1	Float Bowl "O" Ring				
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)				
31	631022	1	Spring Clip				
35	36045A	1	Primer Bulb/Retainer Ring				
36	632735	1	Main Nozzle Tube				

Engine LEV120-361003A

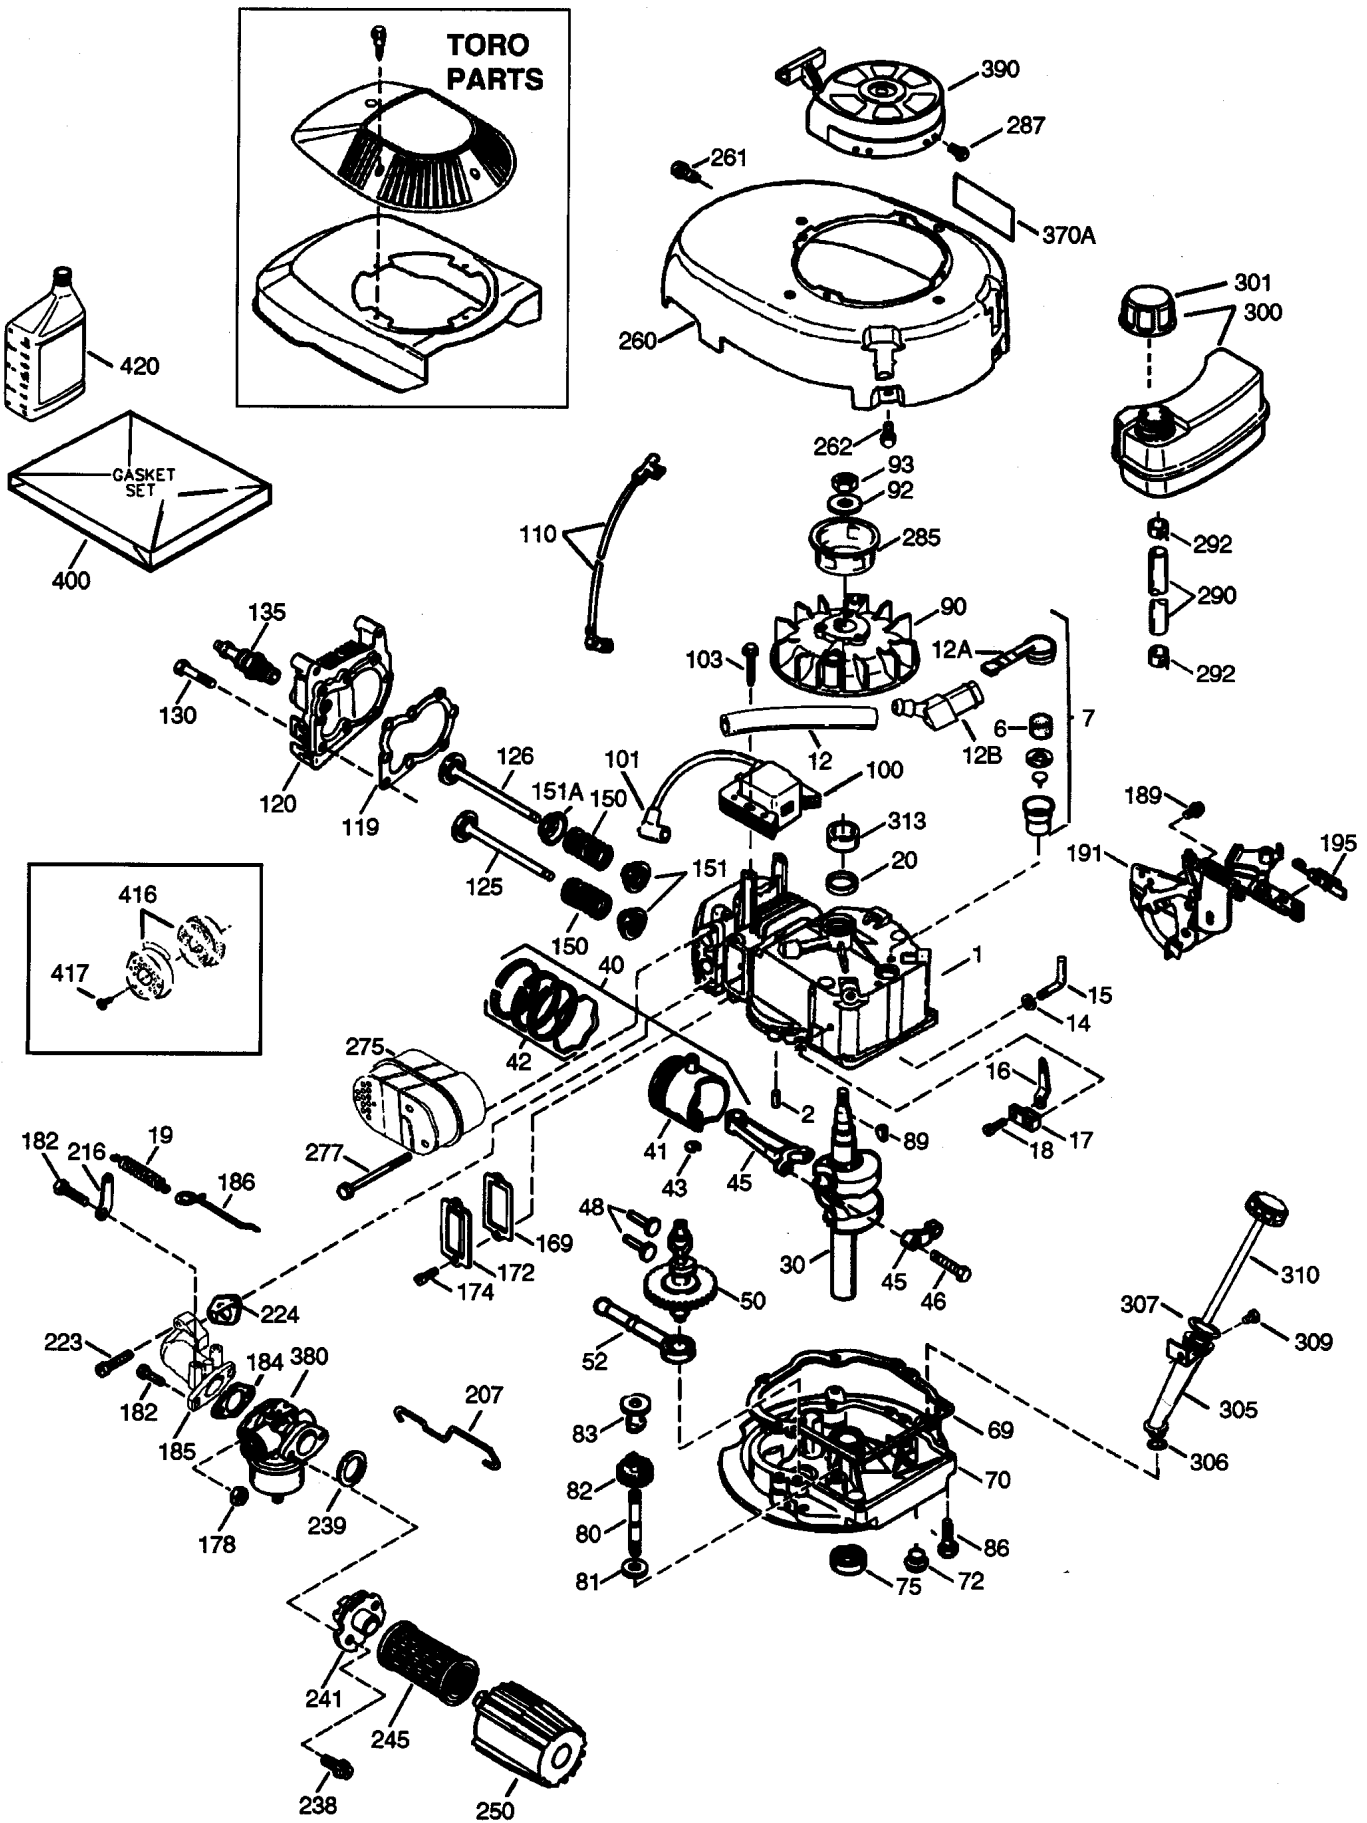


Engine LEV120-361003A

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	36774	1	Cylinder (Incl. 2 & 20)	125	36779	1	Exhaust Valve (Std.) (Incl. 151)
2	26727	2	Dowel Pin	125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)
6	33734	1	Breather Element	126	36781	1	Intake Valve (Std.) (Incl. 151)
7	36557	1	Breather Body ASM (Incl. 6 & 12A)	126	36782	1	Intake Valve (1/32" OS) (Incl. 151)
12	36775	1	Breather Tube	130	6021A	6	Screw
12A	36558	1	Breather Cover & Tube (Incl. 12B)	135	35395	1	Resistor Spark Plug (RJ19LM)
12B	36694	1	Breather Tube Elbow	150	35991	2	Valve Spring
14	28277	1	Washer	151	31673	2	Valve Spring Cap
15	30589	1	Governor Rod (Incl. 14)	151A	40017	1	Intake Valve Seal
16	34839A	1	Governor Lever	169	36783	1	Valve Cover Gasket
17	31335	1	Governor Lever Clamp	172	36784	1	Valve Cover
18	651018	1	Screw	174	30200	2	Screw
19	36281	1	Extension Spring	178	29752	2	Nut & Lock Washer
20	32600	1	Oil Seal	182	6201	2	Screw
30	36597	1	Crankshaft	184	26756	1	Carburetor To Intake Pipe Gasket
40	40027	1	Piston, Pin & Ring Set (Std.)	185	36785	1	Intake Pipe
40	40028	1	Piston, Pin & Ring Set (.010" OS)	186	32653	1	Governor Link
41	40025	1	Piston & Pin ASM (Std.) (Incl. 43)	189	650839	2	Screw
41	40026	1	Piston & Pin ASM (.010" OS) (Incl. 43)	191	36559	1	S.E. Brake Bracket (Incl. 195)
42	40006	1	Ring Set (Std.)	195	610973	1	Terminal
42	40007	1	Ring Set (.010" OS)	207	34336	1	Throttle Link
43	20381	2	Piston Pin Retaining Ring	216	33086	1	R.P.M. Adjusting Lever
45	36777	1	Connecting Rod ASM (Incl. 46)	223	650451	2	Screw
46	32610A	2	Connecting Rod Bolt	224	36786	1	Intake Pipe Gasket
48	27241	2	Valve Lifter	238	650932	2	Screw
50	36778	1	Camshaft (MCR)	239	34338	1	Air Cleaner Gasket
52	29914	1	Oil Pump ASM	241	35797	1	Air Cleaner Collar
69	35261	1	Mounting Flange Gasket	245	35066	1	Air Cleaner Filter
70	36995	1	Mounting Flange (Incl. 72 thru 83)	250	35986	1	Air Cleaner Cover
72	36083	1	Oil Drain Plug	260	36999	1	Blower Housing
75	27897	1	Oil Seal	261	30200	2	Screw
80	30574A	1	Governor Shaft	262	650831	2	Screw
81	30590A	1	Washer	275	36790	1	Muffler
82	30591	1	Governor Gear ASM (Incl. 81)	277	650988	2	Screw
83	30588A	1	Governor Spool	285	35000A	1	Starter Cup
86	650488	6	Screw	287	650926	2	Screw
89	611004	1	Flywheel Key	290	34357	1	Fuel Line
90	611112	1	Flywheel	292	26460	2	Fuel Line Clamp
92	650815	1	Belleville Washer	300	35586	1	Fuel Tank (Incl. 292 & 301)
93	650816	1	Flywheel Nut	301	36246	1	Fuel Cap
100	34443B	1	Solid State Ignition	305	35819A	1	Oil Fill Tube
101	610118	1	Spark Plug Cover	306	36996	1	"O"-Ring
103	651007	2	Screw, Torx T-15	307	35499	1	"O"-Ring
110	37047	1	Ground Wire	309	651014	1	Screw
119	36787	1	Cylinder Head Gasket	310	36259	1	Dipstick
120	36825	1	Cylinder Head	313	34080	1	Spacer
				370A	36261	1	Lubrication Decal
				380	640119	1	Carburetor (Incl. 184)

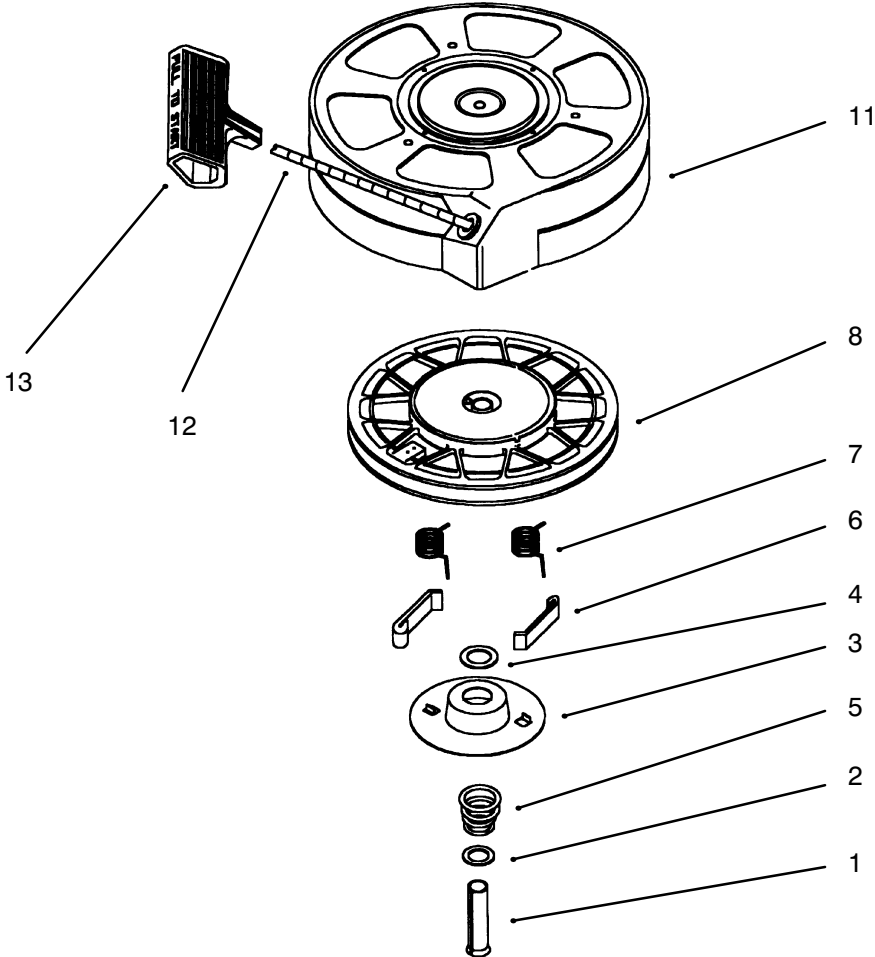

Recoil Starter Assembly 590702

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	590702	1	Recoil Starter				
1	590599A	1	Spring Pin (Incl. 4)				
2	590600	1	Washer				
3	590696	1	Retainer				
4	590601	2	Washer				
5	590697	1	Brake Spring				
6	590698	2	Starter Dog				
7	590699	2	Dog Spring				
8	590700	1	Pulley & Rewind Spring ASM				
11	590703	1	Starter Housing ASM (40 degree grommet)				
12	590535	1	Starter Rope (98" X 9/64" dia.)				
13	590701	1	Starter Handle				

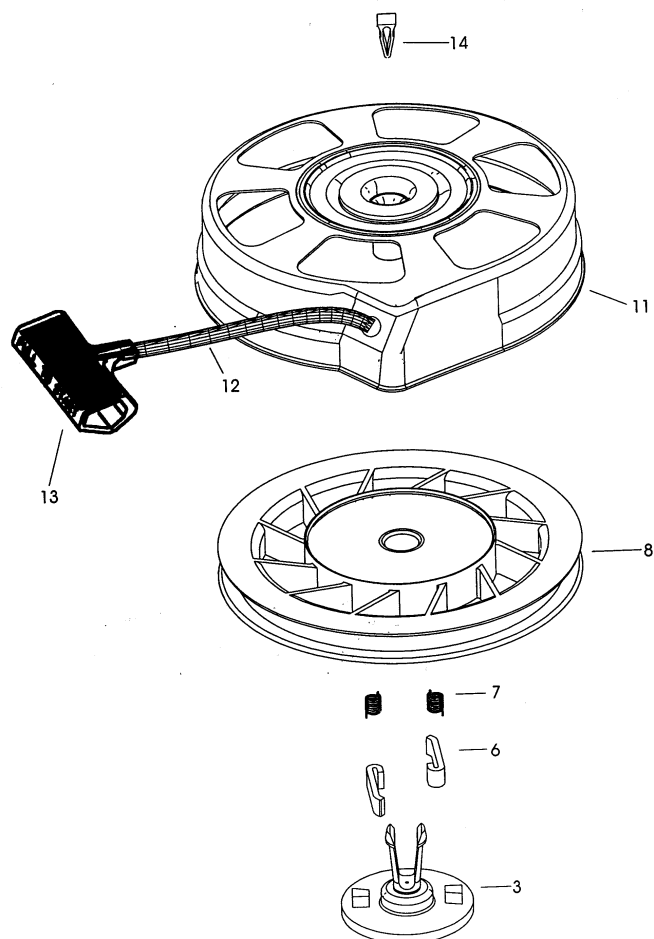

Recoil Starter Assembly 590739 (Optional)

Ref. No.	Part No.	Qty.	Description
0	590739	1	Rewind Starter
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A	1	Pulley & Rewind Spring ASM
11	590638	1	Starter Housing ASM (40 degree grommet)
12	590535	1	Starter Rope (Length 98" x 9/64" dia.)
13	590701	1	Starter Handle
14	590741	1	Locking Tab

Ref. No.	Part No.	Qty.	Description

Lawn – Boy Part Number Index

Part No.	Pg. No.	Ref. No.	Qty.	Description	Part No.	Pg. No.	Ref. No.	Qty.	Description
603164	4	8	1	Nut – Blade	92-4854	4	11	1	Cover – Starter
605120	1	5	1	Grommet	92-4881-03	1	14	2	Plate – Hght Adj
610358	3	13	2	Nut – Jam, Locking	92-4890	1	15	2	Washer – Wheel
612543	4	17	1	Blade – 21" Whirl	92-5412	5	8	2	Stop – Pivot
613227	4	16	1	Screw – Set	92-5424	5	10	1	Handle Staple
613455	5	99	1	Wire Hanger,	92-7723	1	30	1	RH Handle Brkt ASM
613765	1	11	1	Nut – Cage	92-7724	1	3	1	LH Handle Brkt ASM
614249	1	99	4	Strap – Tie Sm	92-7726	5	7	1	Cable – Traction
614426	3	19	2	Washer – Stepped	92-7727	2	18	1	Gearcase
614447	3	9	2	Spacer – Axle Shaft	92-7728-03	1	6	1	Guide – Transmission
614596	2	13	1	Gear – 34T	92-7729	5	6	1	Anchor – Upper Sp Cable
614669	2	15	2	Pulley Half	92-7731	1	16	2	Plate – Baffle
614672	1	21	2	Bolt – Shoulder	92-7735	1	4	1	Gear Case Assembly
614677	1	9	2	Screw – Sems	92-7746	3	8	2	ASM – Hgt Adj Arm, Rear
614687	1	22	2	Arm – Front Spring	92-8630	1	8	1	Plate – Mulch
614696	2	16	1	Shaft – Intermediate	92-8647	1	38	1	Shield – Trailing
614697	5	2	2	Screw – HH	92-9575	4	2	1	Pulley
677525	4	1	1	Plate & Collar ASM	92-9665	1	26	1	Screw – PTH
684728	5	99	1	Bag & Adapter ASM	93-0239	2	19	1	Shaft – Output
684729	5	99	1	Chute & Support	93-3653	5	20	1	Guard – Handle
684776	1	19	2	6" Wheel & Tire ASM	93-4184-03	5	12	1	Bail – Brake
27-6250	32:3:1	2	2	Bushing	93-4196-03	4	19	1	Shield – Grass
36-4780	2	5	2	Washer	93-7250	1	35:9	1	Decal – Safety Instruct
36-4791	2	6	2	Thrust Washer	93-7380	5	1	1	Anchor – Cable
38-7820	2	7	1	Bearing – Ball	93-7381	3	10	1	V – Belt
40-1940	1	18	2	Washer – Wheel Bolt	93-7383	5	16	1	Rope – Guide
43-8480	1	35:3	1	Decal – Danger	94-1609	3	18	2	Cover – Wheel
47-2900	3	8:2	1	Bushing	94-1610	1	10	2	Grommet – Plastic
55-3760	2	9	1	Gear – 15T Spur, 37T Bevel	94-6066-03	4	15	1	Guard – Muffler
60-8750	2	10	2	Bushing	94-6088-02	4	12	1	Shroud – Engine
60-8850	2	11	2	Bushing – Output	95-1713-05	5	13	1	Handle – Upper
60-8890	2	12	1	Bevel Pinion Gear	95-1726	4	3	3	Screw – Tapite w/Patch
62-6660	2	17	1	Spacer	95-5569	4	14	1	ASM – Muffler Guard
65-2690	4	14	1	Decal – Hot Surface	95-5591	4	9	1	Decal – Recoil
65-2720	3	3	4	Klip Ring – Special	95-7052	1	99	1	Plate – Chute Opening
65-4710	3	7	2	Ring – Friction	95-7068	1	27	1	Cover – Drive
65-4720	3	17	2	Spring – Compression	95-7403-03	1	17	2	Bracket – Wheel Ht Adj
65-4730	3	14	2	Washer – Pivot Arm	98-1560	5	18	1	ASM Brake Cable
65-4740	3	4	4	Washer – Keyed Thrust	98-1567	1	40	1	Decal – Deck
65-4750	3	16	2	Pinion – Gear, 15T	98-4477	1	35	1	ASM – Hsg/Baffle w/Decals
65-4760	3	15	2	Washer	98-7134	5	3	2	Knob – Handle
65-5221	1	24	2	Screw – Thread Forming	98-8332	1	7	1	Knob
66-6040	3	6	1	Key – Rocking	99-6018	1	35:6	1	Decal – Warning
66-6050	3	5	1	Key – Rocking LH	99-6351-03	4	18	1	Fan – Mulching
70-9760	3	8:3	1	Bushing	302-56	3	8:1	1	Fitting – Zerk
92-1001-03	5	9	1	Bail – Sp Control	321-50	5	15	1	Screw – HH
92-1004	3	12	2	Spring Arm ASM – Rear	322-3	1	39	6	Screw – HH
92-1008	1	23	4	Knob – Height Adj Lever	3256-1	5	17	1	Washer – Flat
92-1024-03	4	4	1	Belt Guide	3256-24	2	2	1	Washer – Flat
92-1042	3	2	2	8" Wheel & Tire ASM.	3285-19	2	3	2	Pin – Groove
92-1057	3	1	2	Shoulder Bolt	3296-5	2	4	1	Nut – Lock NI
92-1099	1	20	2	Bolt – Shoulder 6" Wheel	3296-29	1	37	6	Nut – Lock NI
92-1701	4	7	1	Rope – Stop	3296-73	5	4	2	Nut – Lock
92-2266	5	5	1	Screw – Handle	32144-4	2	1	4	Screw – HH
92-2914	1	35:7	1	Decal – HOC R	32144-85	3	11	2	Screw – TAP
92-2915	1	35:8	1	Decal – HOC L	32144-85	4	13	1	Screw – TAP
92-4851	4	5	1	Decal – Oil Instr.	613462-03	5	99	2	Clamp – Hanger
92-4852	4	10	4	Screw – Recoil Cover	614643-05	5	19	1	Section – Lower Handle
92-4853	5	14	1	Handle – Starter	614668-03	2	14	1	Gear Case Cover

*Not Illustrated

[illegible]