



Proline 21"

Recycler[®] /Rear Bagging Mower

Model No. 22170 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Piston/Crankshaft	12
Housing Assembly (cont.)	2	Air Filter/Muffler	13
Wheel & Tire Assembly	3	Cooling Equipment	14
Engine & Blade Assembly	4	Lubrication Equipment	15
Cylinder/Crankcase	5	Starter	16
Valve/Camshaft	6	Handle Assembly	17
Control Equipment	7	Bagging Assembly	18
Brake/Cover	8	Toro Part Number Index	19-24
Fuel Tank/Fuel Valve	9	Maintenance	25
Electric Equipment	10		
Carburetor	11		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Kit	Model No. 59199		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

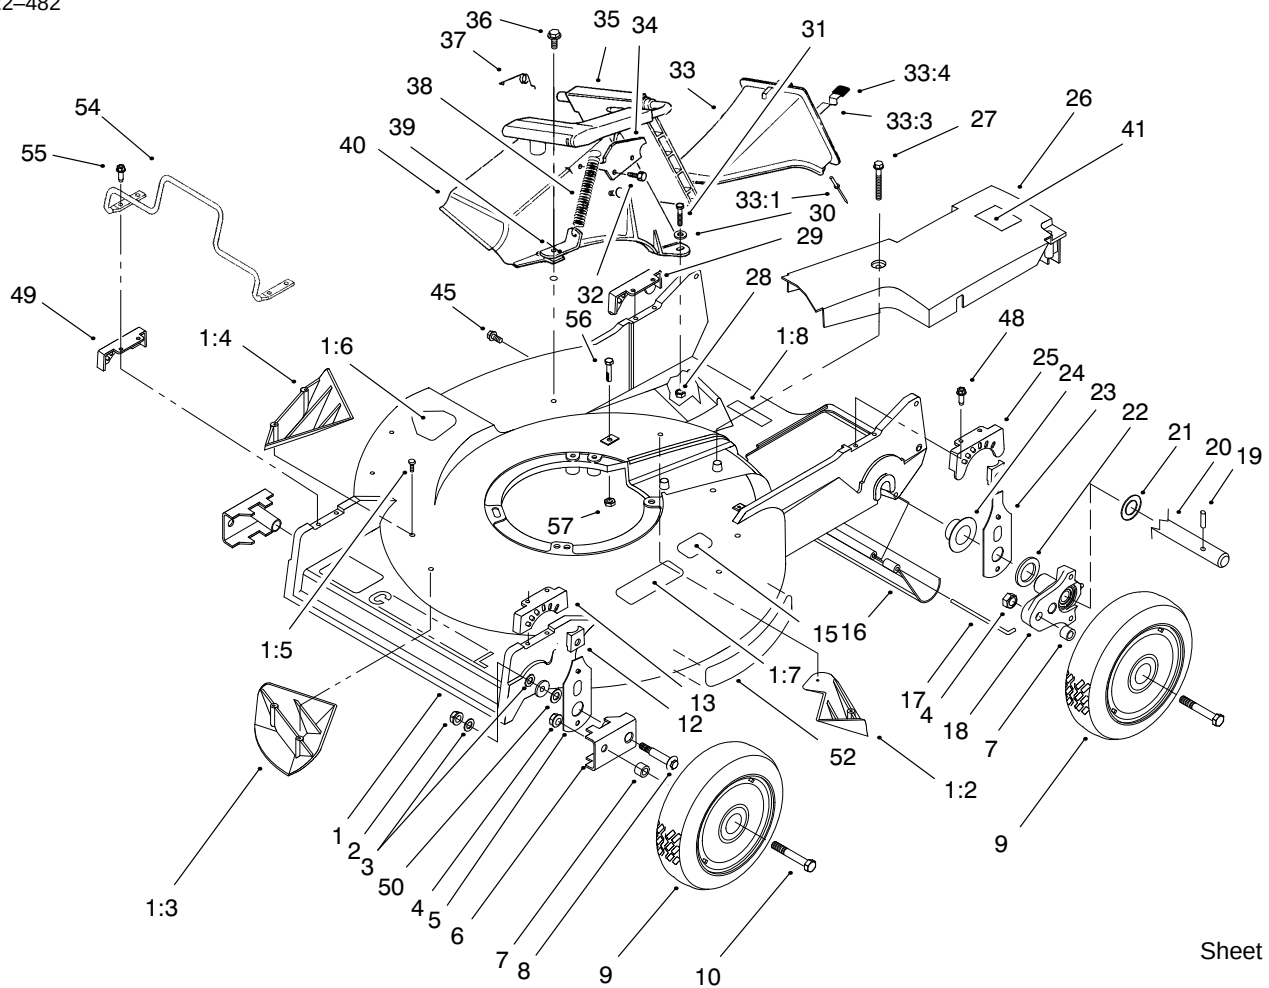


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7139	1	Housing – Service
1:2	92-1750	1	Kicker – Rear, Sp
1:3	92-1720	1	Kicker – Front
1:4	92-1730	1	Kicker – R.h.
1:5	32144-111	6	Screw-Plask
1:6	39-5770	1	Decal – Cut Finger
1:7	71-1280	1	Decal – Safety Instruct
1:8	92-1779	1	Decal-Warning
2	3296-6	2	Nut-Lock Ni
3	40-1940	4	Washer-Wheel Bolt
4	32152-2	4	Nut-Conelock
5	66-7560	2	Front Spring Arm ASM
6	61-8300	2	Pivot Arm Wa – Front
7	52-2480	4	Spacer-Wheel
8	27-6232	2	Bolt-Wheel
9	53-7720	4	Wheel & Tire ASM
10	323-12	4	Screw-HH
12	25-7740	4	Knob-Arm
13	49-8760	1	Quadrant-LH Front
15	88-1270	1	Decal-Safety STD
16	44-0580	1	Shield – Trailing
17	33-3208	1	Rod-Shield
18	42-3510	2	Pivot Arm ASM
19	32121-108	2	Pin-Spirol
20	49-8790	1	Shaft-Rear Axle
21	36-4780	2	Washer


Ref. No.	Part No.	Qty.	Description
22	74-1810	2	Washer
23	66-7561	2	Rear Spring Arm ASM
24	48-2170	2	Cap-End
25	49-8740	1	Quadrant-LH Rear
26	99-6296	1	Cover-Belt,HP (Commercial)
27	37-7260	2	Screw-HH
28	3296-42	2	Nut-Lock Ni
29	49-8750	1	Quadrant-RH Rear
30	3256-22	2	Washer-Flat
31	321-7	2	Screw-HH
32	46-8090	2	Screw-Plastite
33	77-0500	1	Discharge Plug Assembly
33:1	3295-35	1	Rivet-Alum
33:3	76-4640	1	Latch-Disc. Plug +
33:4	76-4650	1	Grip-Latch
34	93-3154	1	Latch-Plate
35	93-7351	1	ASM – Discharge Door
36	46-6811	1	Screw/Washer V
37	80-3770	1	Spring-Door Ret
38	76-4660	1	Spring-Door
39	71-9350	1	Bracket-Spring
40	82-9152	1	Tunnel-Discharge
41	52-2610	1	Label-HP Grease

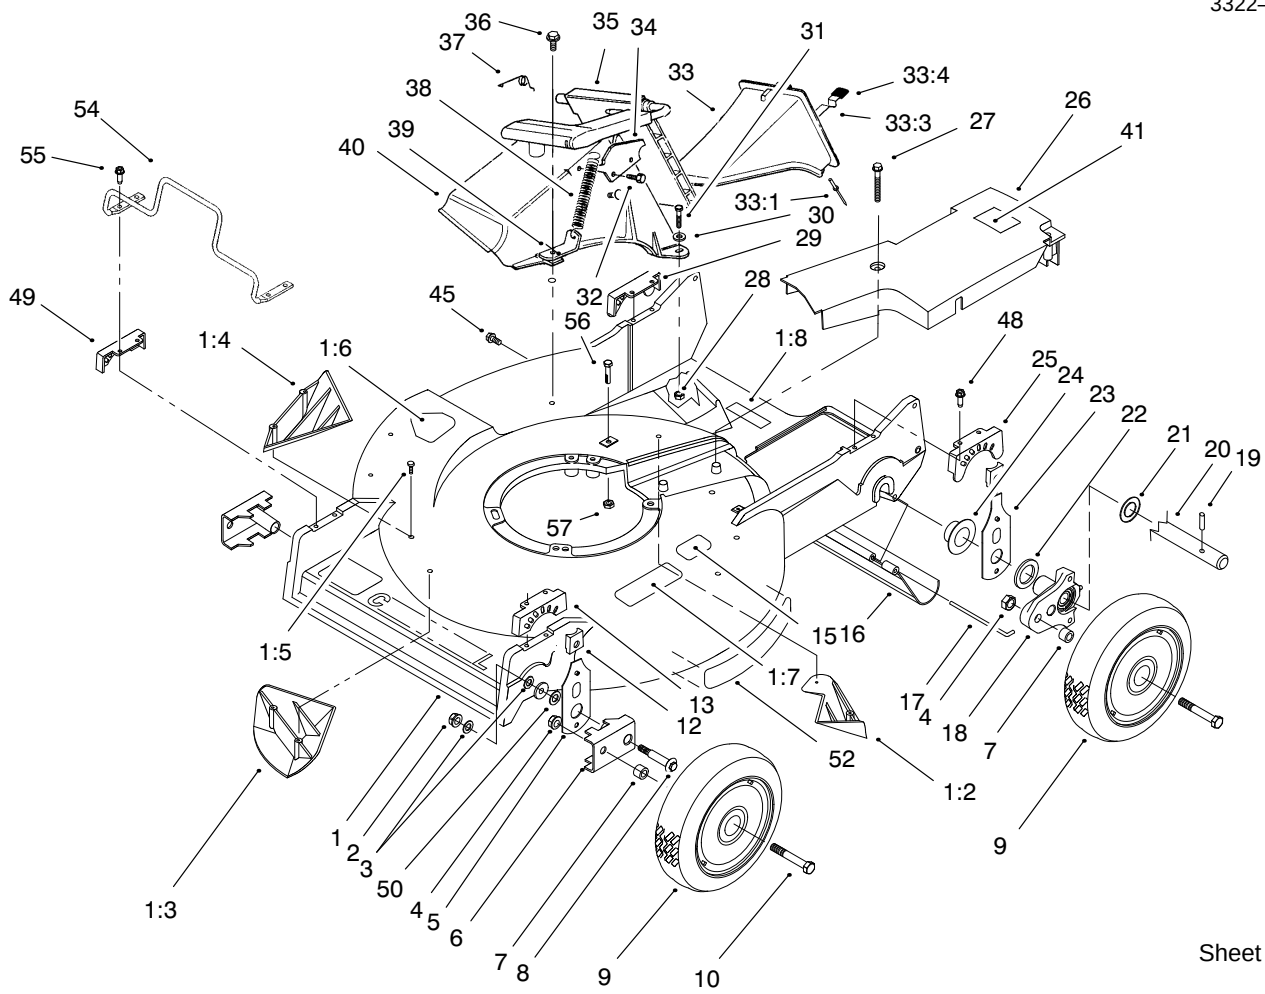 

Sheet No.:2

Housing Assembly (cont.)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
45	46-6810	1	Screw & Washer ASM				
48	49-2040	4	Screw-Taptite				
49	49-8770	1	Quadrant-RH Front				
50	257-3	2	Washer-Thrust				
52	92-7988	1	Decal - Recycler				
54	99-6722	1	Guard Engine				
55	32144-86	4	Screw-HH				
56	323-6	2	Screw-HH				
57	3296-39	2	Nut-Lock Ni				

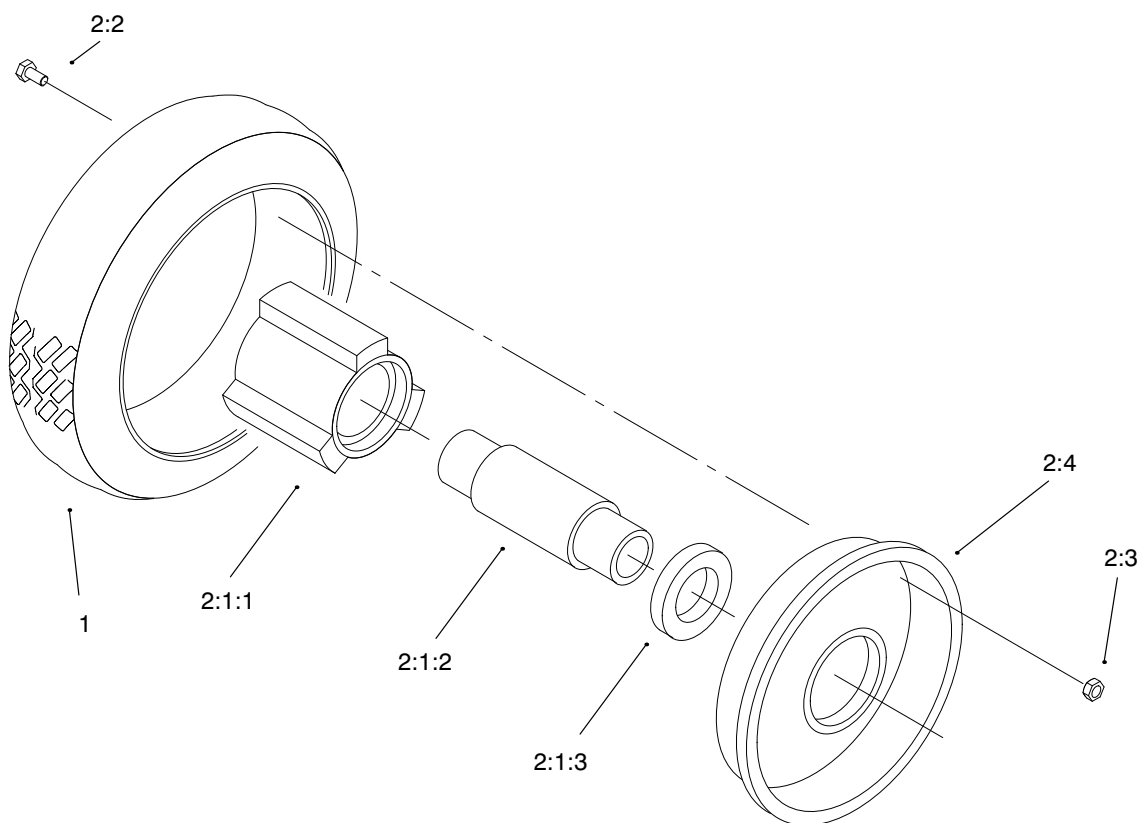 


Sheet No.:2a

Wheel & Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
*		1	Wheel ASM HP
*		1	Hub & Brg ASM
2:1:1	52-2410	1	Hub-Bearing Supt
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock Ni
2:4	53-7780-06	2	Plate-Wheel Half


Ref. No.	Part No.	Qty.	Description

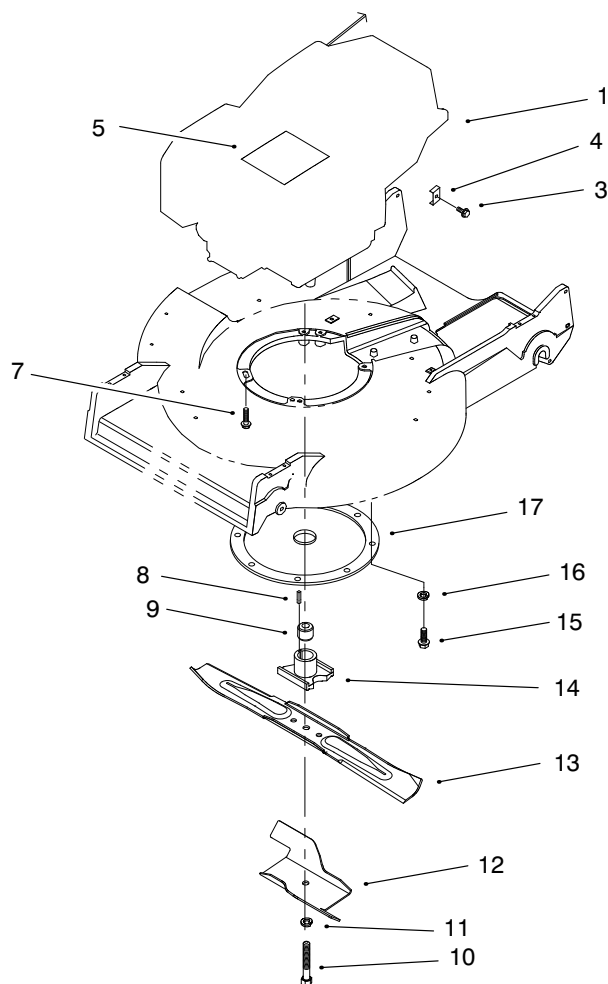 

Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine-4cyc Zs
3	95-9853	1	Bolt
4	95-9849	1	Clamp
5	99-6297	1	Decal Engine
7	100-2835	3	Screw-Engine Mount
8	27-8590	1	Key-Square
9	99-6279	1	Spacer-Blade Retainer
10	26-0670	1	Screw-Blade
11	3253-22	1	Washer-Lock/Sp
12	92-1599-03	1	Stiffener-Blade
13	14-9419	1	Blade w/Decal
14	99-6283	1	Blade Retainer W.a.
15	32144-70	3	Screw-Taptite
16	3254-6	3	Washer-Lock/Int
17	48-2591	1	Crankshaft Protector As

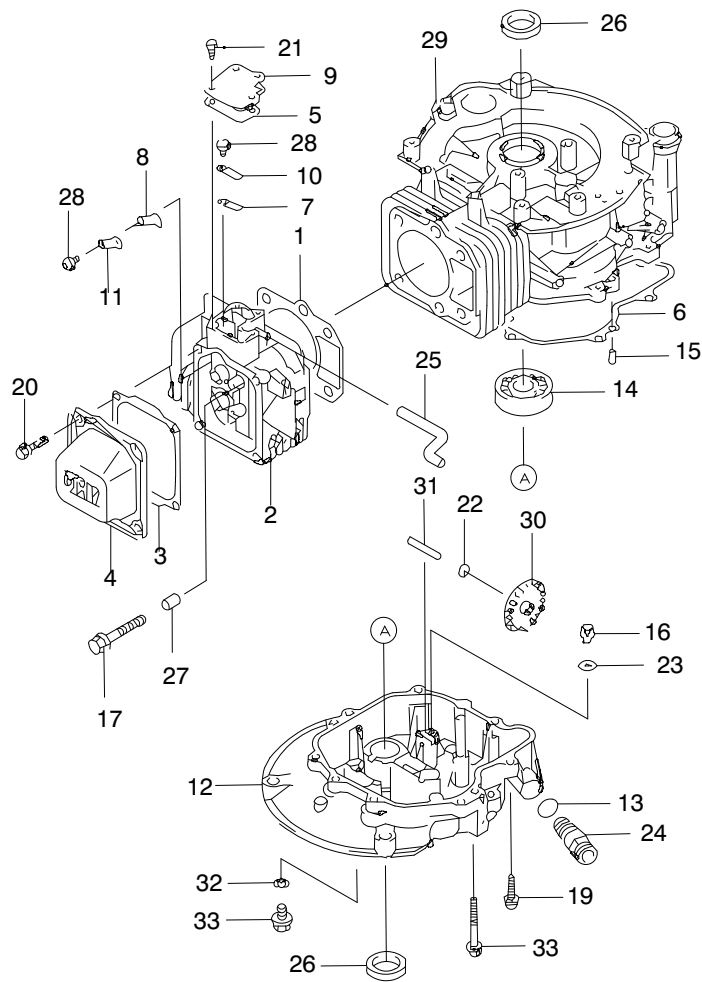 


Sheet No.:3a

Cylinder/Crankcase

Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head
2	100-2743	1	Head-Complete-Cyl nder
3	100-2744	1	Gasket Rocker Case
4	100-2745	1	Case-Rocker
5	100-2746	1	Gasket Cover
6	100-2747	1	Gasket Crankcase Cover
7	100-2748	1	Plate
8	100-2749	1	Plate
9	100-2779	1	Cover
10	100-2780	1	Valve
11	100-2781	1	Valve
12	100-2782	1	Cover-Crankcase
13	100-2840	1	O-Ring
14	100-2841	1	Ball Bearing
15	93-8516	2	Pin
16	100-2842	1	Bolt Upset Wsp
17	Kw10035	4	Bolt, Flanged 8x45
18	Kw10033	1	Bolt, Flanged 8x12
19	100-2610	6	Bolt Flanged
20	100-2804	4	Bolt-Flanged
21	100-2609	4	Bolt Flanged
22	100-2843	1	Washer 6x12x1.6
23	100-2844	1	Washer 5x16x0.8
24	100-2854	1	Plug


Ref. No.	Part No.	Qty.	Description
25	100-2846	1	Tube
26	100-2847	2	Seal Oil
27	100-2848	2	Pin
28	93-8549	2	Screw
29	100-2849	1	Crankcase Complete
30	99-6728	1	Oil Slinger
31	99-6729	1	Shaft
32	99-6730	1	Gasket
33	100-2855	1	Bolt Flanged

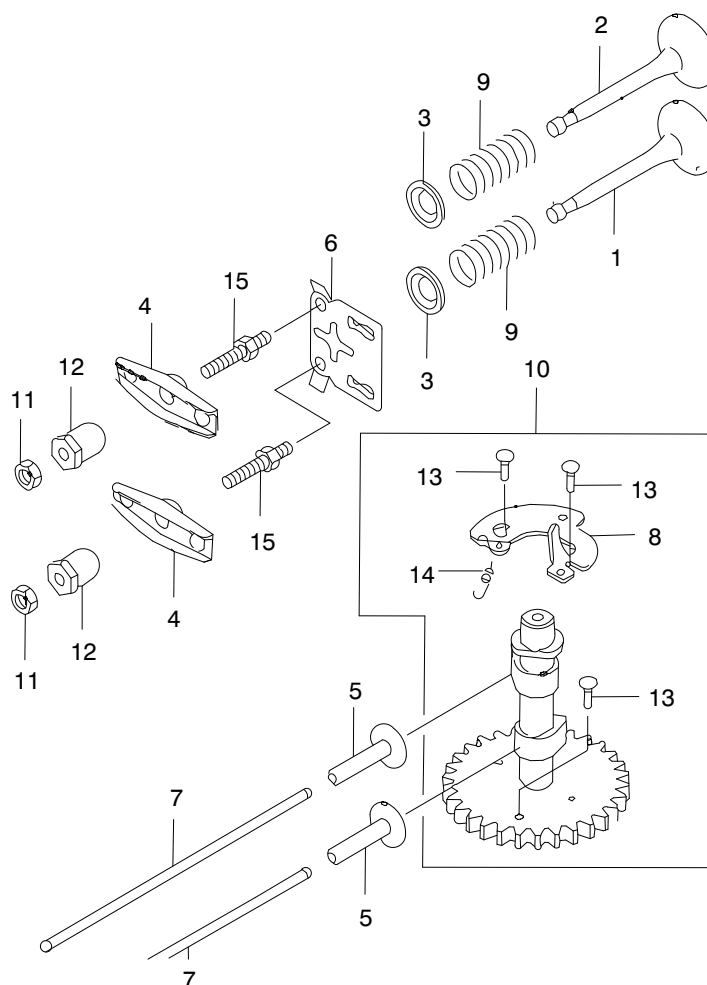 

Sheet No.:3b

Valve/Camshaft


Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Valve Spring
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Engine Valve
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

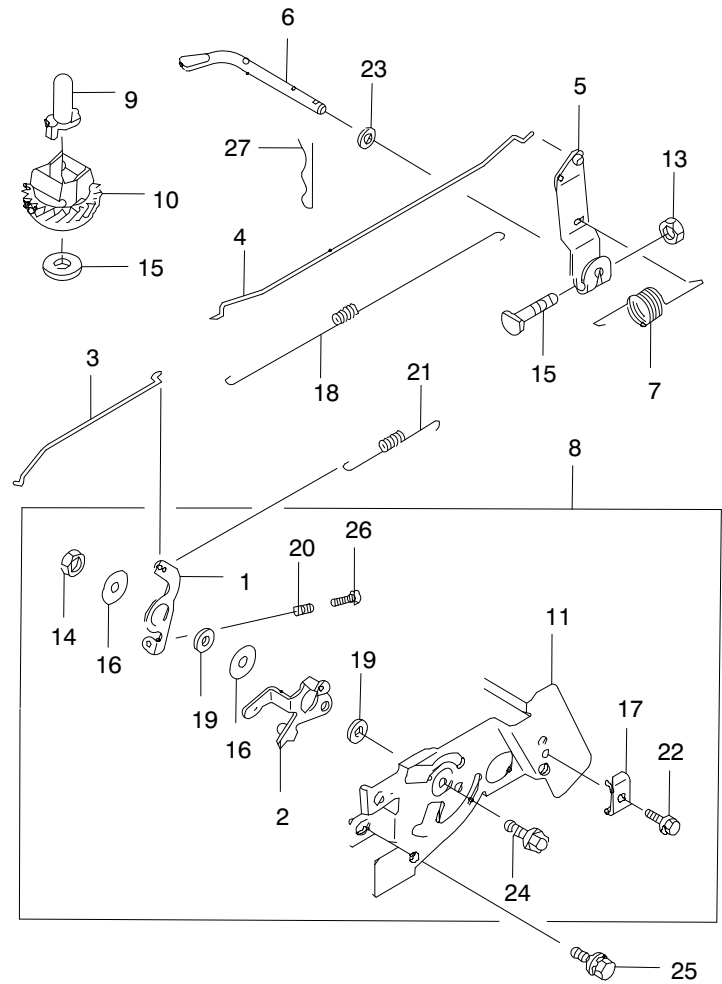 

Sheet No.:3c

Control Equipment

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever				
2	100-2701	1	Lever				
3	100-2702	1	Link-Choke				
4	100-2703	1	Link				
5	100-2704	1	Arm-ASM				
6	100-2705	1	Arm-Pivot				
7	100-2706	1	Spring-Governor				
8	100-2707	1	Panel-ASM Control				
9	100-2708	1	Sleeve				
10	93-8611	1	Governor ASM				
11	100-2710	1	Panel-Control				
12	93-8608	1	Washer				
13	93-8631	3	Nut				
14	93-8595	1	Nut				
15	94-6842	1	Washer				
16	100-2715	2	Washer 6x9x1.2				
17	95-9849	1	Clamp				
18	100-2717	1	Spring Link				
19	100-2718	2	Collar 6x13x2.3				
20	93-8588	1	Spring				
22	95-9853	1	Bolt				
23	93-8608	1	Washer				
24	95-9837	1	Bolt - Flanged				
25	100-2724	2	Bolt-Upset-Wsp				
26	100-2725	1	Screw-Pan				
27	93-8607	1	Pin-Snap				

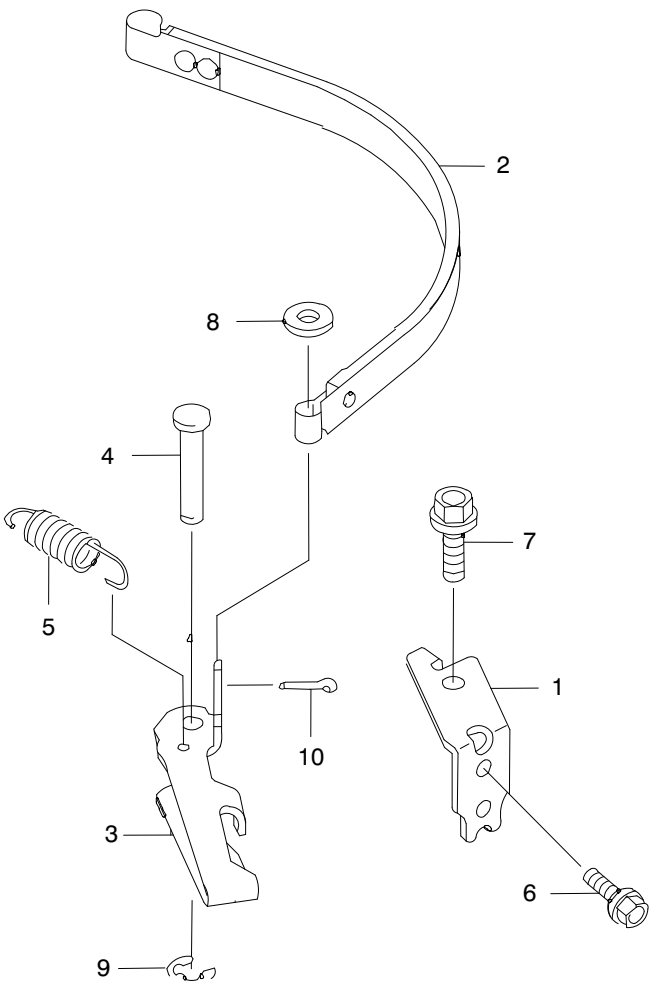 


Sheet No.:3d

Brake/Cover

Ref. No.	Part No.	Qty.	Description
1	100-2783	1	Bracket
2	100-2784	1	Band-Brake
3	100-2785	1	Lever-Brake
4	100-2786	1	Pin
5	100-2787	1	Spring
6	100-2609	1	Bolt Flanged
7	Kw10029	1	Bolt, Flanged 6x10
8	100-2671	1	Washer Plain S
9	100-2791	1	Circlip-Type-E
10	100-2792	2	Pin Cotter

Ref. No.	Part No.	Qty.	Description

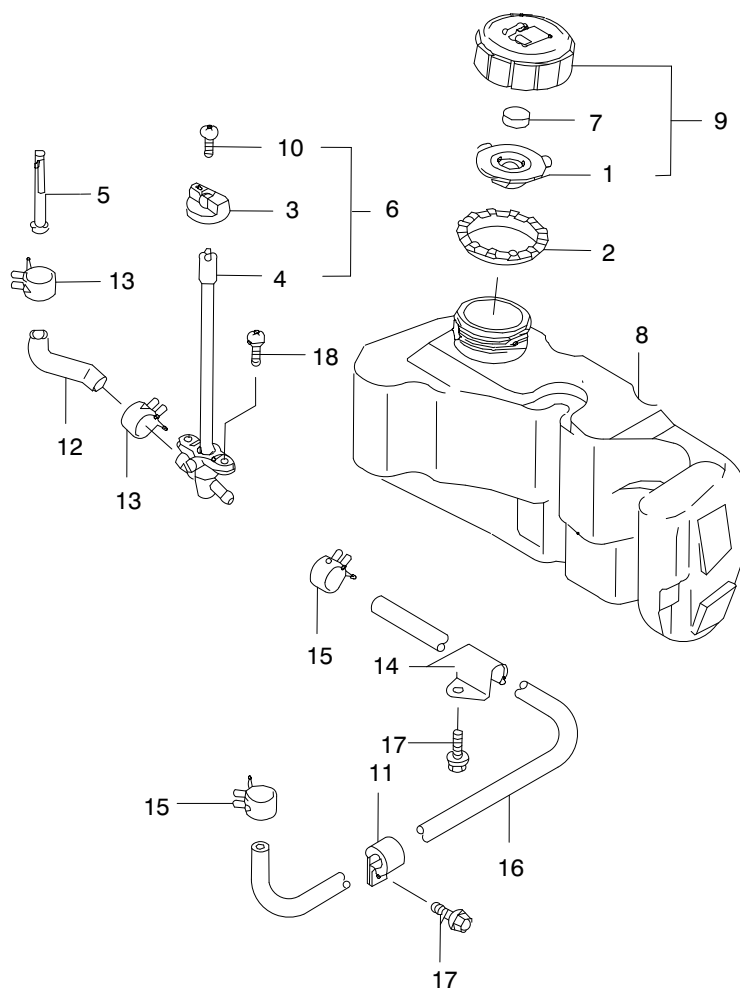 


Sheet No.:3e

Fuel Tank/Fuel Valve

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter Complete
5	100-2812	1	Filter Fuel
6	100-2814	1	Filter Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank Complete Fuel
9	100-2816	1	Cap-ASM-Tank
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube 4.8x10.3x433
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan-Wp


Ref. No.	Part No.	Qty.	Description

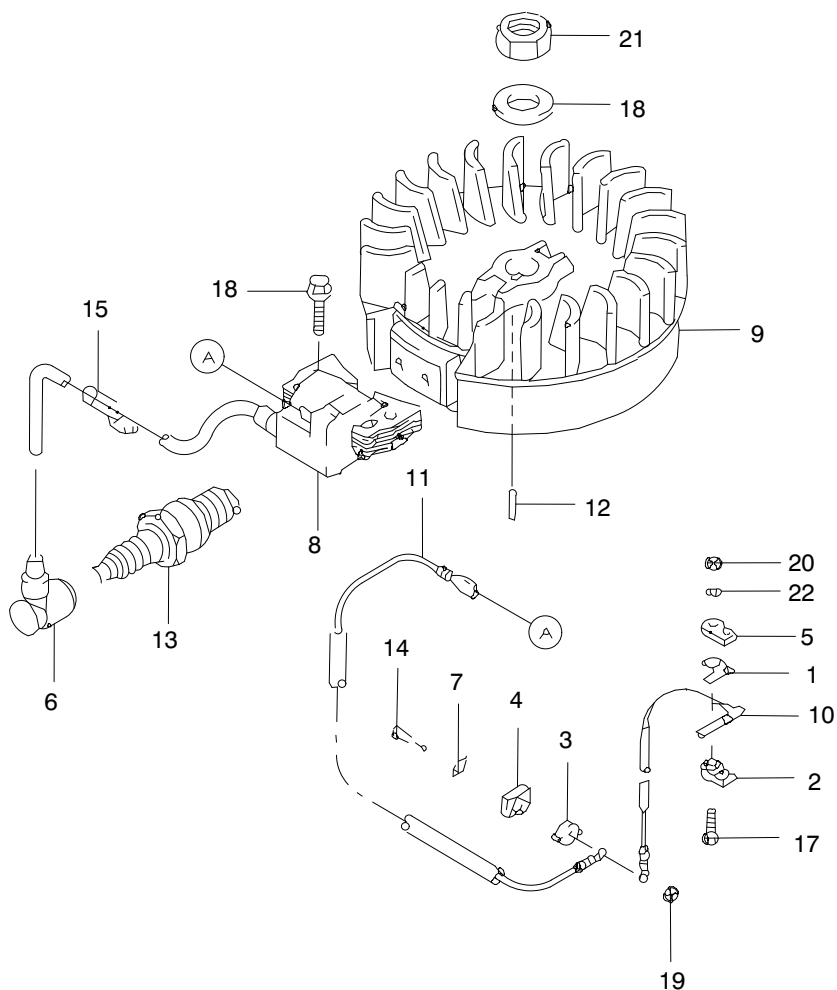 

Sheet No.:3f

Electric Equipment


Ref. No.	Part No.	Qty.	Description
1	100-2650	1	Plate
2	100-2651	1	Cover
3	100-2652	1	Cover
4	100-2653	1	Insulator
5	100-2654	1	Insulator
6	Kw10087	1	Cap Plug
7	100-2656	1	Terminal
8	100-2657	1	Coil ASM Ignition
9	100-2658	1	Flywheel Complete
10	100-2659	1	Wire Lead
11	100-2660	1	Wire Lead L=300mm
12	93-8571	1	Key
13	100-2662	1	Plug-Spark Bpr5es(Ngk)
14	100-2663	1	Bolt 4x20
15	100-2664	1	Clamp
16	100-2665	1	Washer
17	100-2666	1	Bolt Upset
18	100-2610	2	Bolt Flanged
19	100-2668	1	Nut Hex
20	100-2669	1	Nut Hex
21	93-8568	1	Nut
22	100-2671	1	Washer Plain S

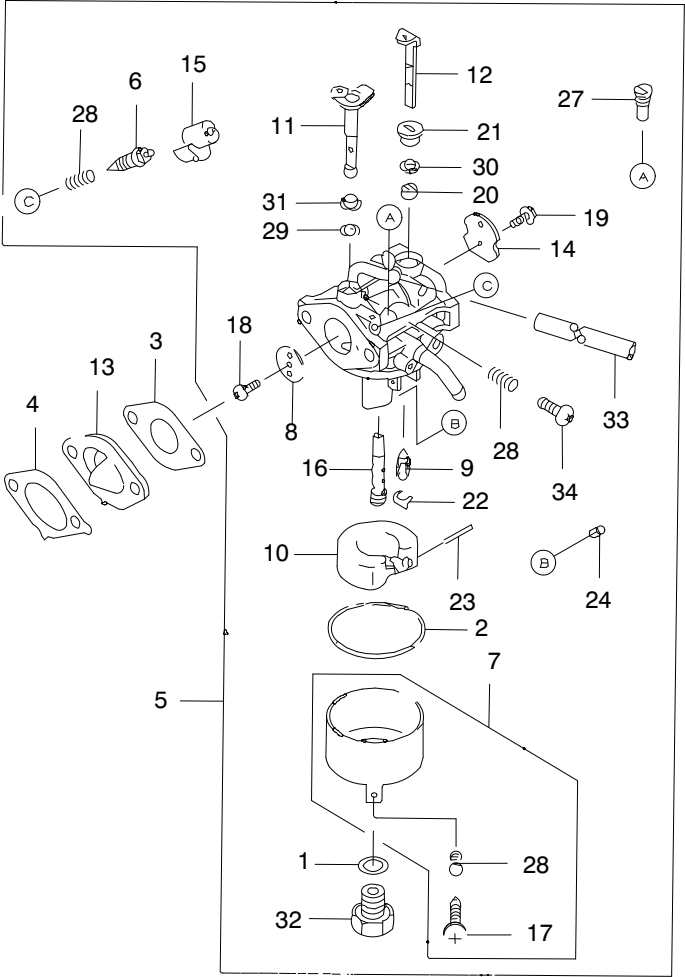 

Sheet No.:3n

Carburetor

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket	27	100-2635	1	Jet Pilot #37.5
2	100-2612	1	Gasket	28	100-2636	3	Spring
3	100-2613	1	Gasket Carburetor	29	100-2637	1	Seal
4	100-2614	1	Gasket Insulator	30	100-2638	1	Seal
5	100-2615	1	Carburetor ASM	31	100-2639	1	Collar
6	100-2616	1	Screw Pilot Air	32	100-2640	1	Bolt
7	100-2617	1	Chamber Float	33	100-2641	1	Tube 4x7x125
8	100-2618	1	Valve Throttle	34	100-2642	1	Screw Pan
9	100-2619	1	Valve Float				
10	100-2620	1	Float				
11	100-2621	1	Shaft Carburetor Throttle				
12	100-2622	1	Shaft Carburetor Choke				
13	100-2623	1	Insulator				
14	100-2624	1	Valve				
15	100-2625	1	Limiter				
16	100-2626	1	Nozzle Main				
17	100-2627	1	Screw				
18	100-2628	1	Screw				
19	100-2629	2	Screw				
20	100-2630	1	Collar				
21	100-2631	1	Collar				
22	Kw10297	1	Clip				
23	100-2633	1	Pin				
24	100-2634	1	Jet Main #62.5				

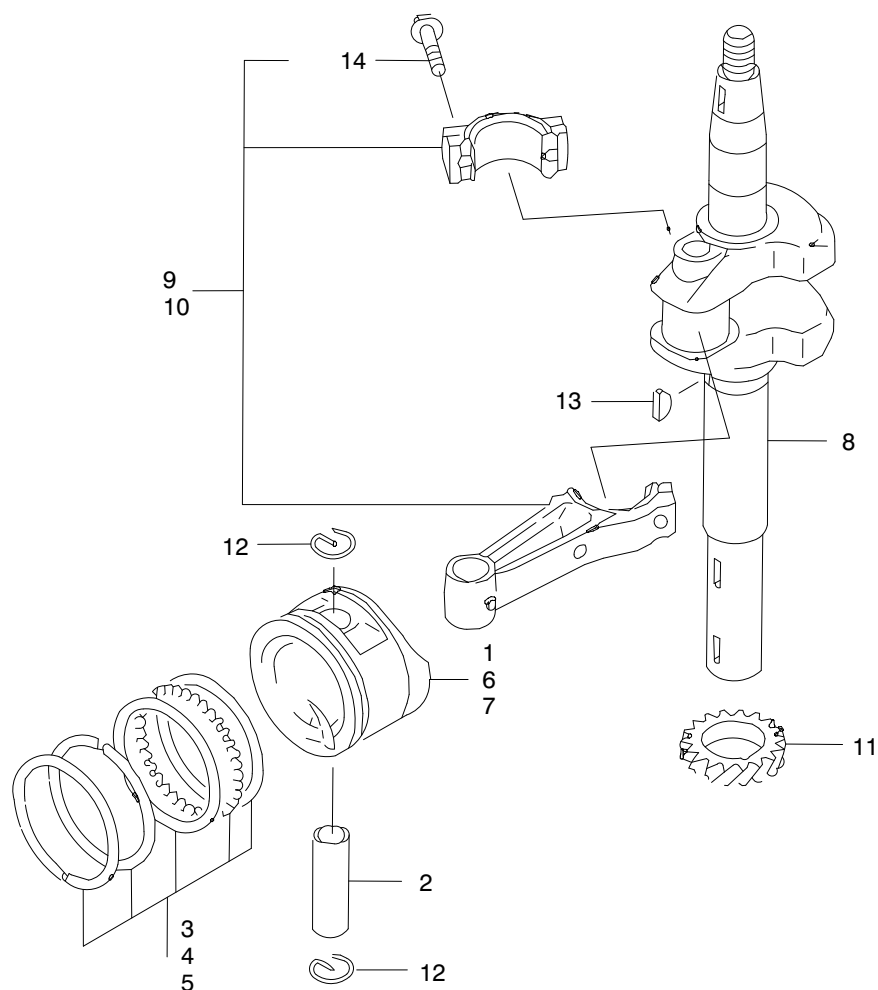 


Sheet No.:3i

Piston/Crankshaft

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Ring Set Piston
4	100-2675	1	Ring Set Piston L0.25
5	100-2676	1	Ring Set Piston L0.50
6	100-2677	1	Piston Engine L0.25
7	100-2678	1	Piston Engine L0.50
8	100-2679	1	Crankshaft
9	100-2680	1	Rod ASM Connecting
10	100-2681	1	Rod ASM Connecting U/S=0.50
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod

Ref. No.	Part No.	Qty.	Description

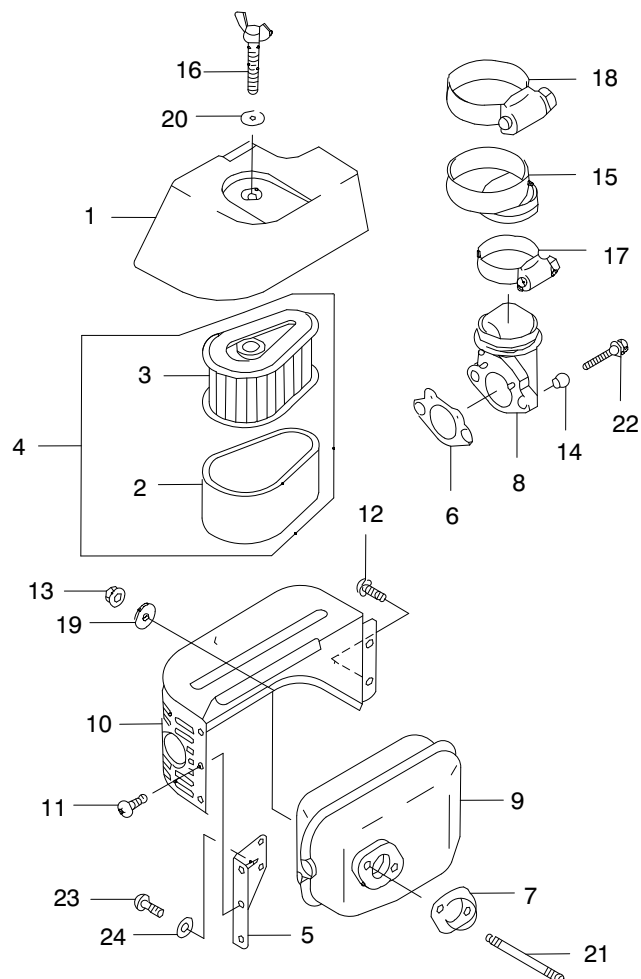 


Sheet No.:3j

Air Filter/Muffler

Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap Air Filter
2	100-2692	1	Element Air Filter
3	100-2693	1	Element Air Filter
4	100-2694	1	Element ASM Air Filter
5	100-2695	1	Bracket
6	100-2696	1	Gasket Intake Pipe
7	100-2697	1	Gasket Muffler
8	100-2698	1	Pipe-Intake
9	100-2699	1	Muffler Complete
10	100-2750	1	Cover Muffler
11	93-8549	3	Screw
12	95-9716	2	Screw
14	100-2754	2	Spacer 6.2x7.8x8
15	100-2755	1	Tube
16	100-2756	1	Bolt
17	100-2757	1	Clamp
18	100-2758	1	Clamp
19	100-2759	2	Washer 7x21x2.3
20	100-2760	1	Washer 6.5x18x2.0
21	100-2761	2	Bolt-Stud
22	100-2762	2	Bolt Upset Wp
23	100-2763	2	Screw Pan
24	93-8639	2	Washer

Ref. No.	Part No.	Qty.	Description

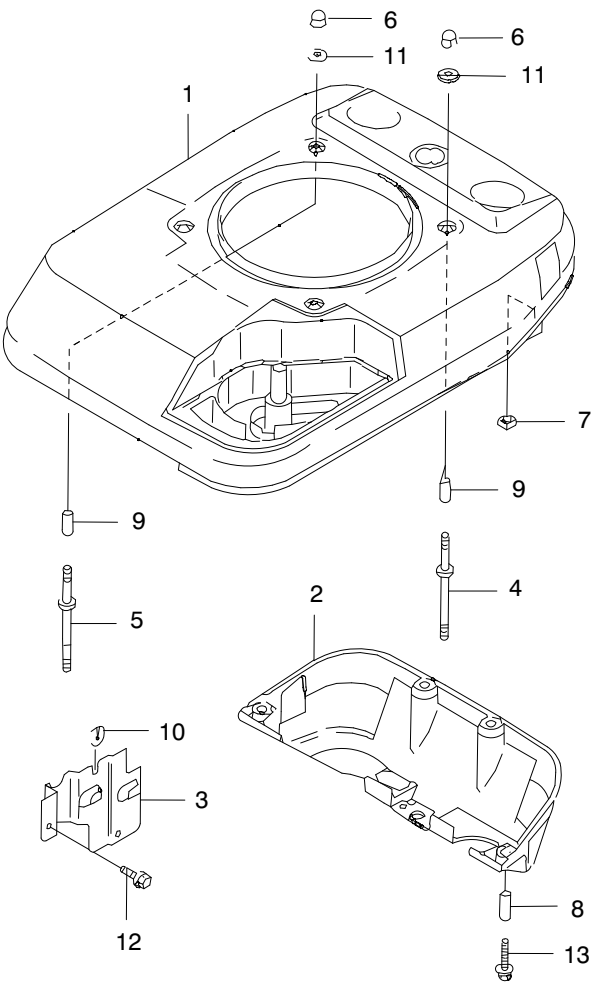 


Sheet No.:3k

Cooling Equipment

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover Upper				
2	100-2793	1	Cover Lower				
3	100-2794	1	Cover				
4	100-2601	3	Stud				
5	100-2602	1	Stud				
6	100-2603	4	Nut				
7	100-2604	4	Nut 6mm				
8	100-2606	4	Spacer 6.2x7.8x17				
9	100-2605	4	Spacer 6.2x7.8x22				
10	100-2607	1	Grommet				
11	100-2760	4	Washer 6.5x18x2.0				
12	100-2609	2	Bolt Flanged				
13	100-2610	4	Bolt Flanged				

Lubrication Equipment

Ref. No.	Part No.	Qty.	Description

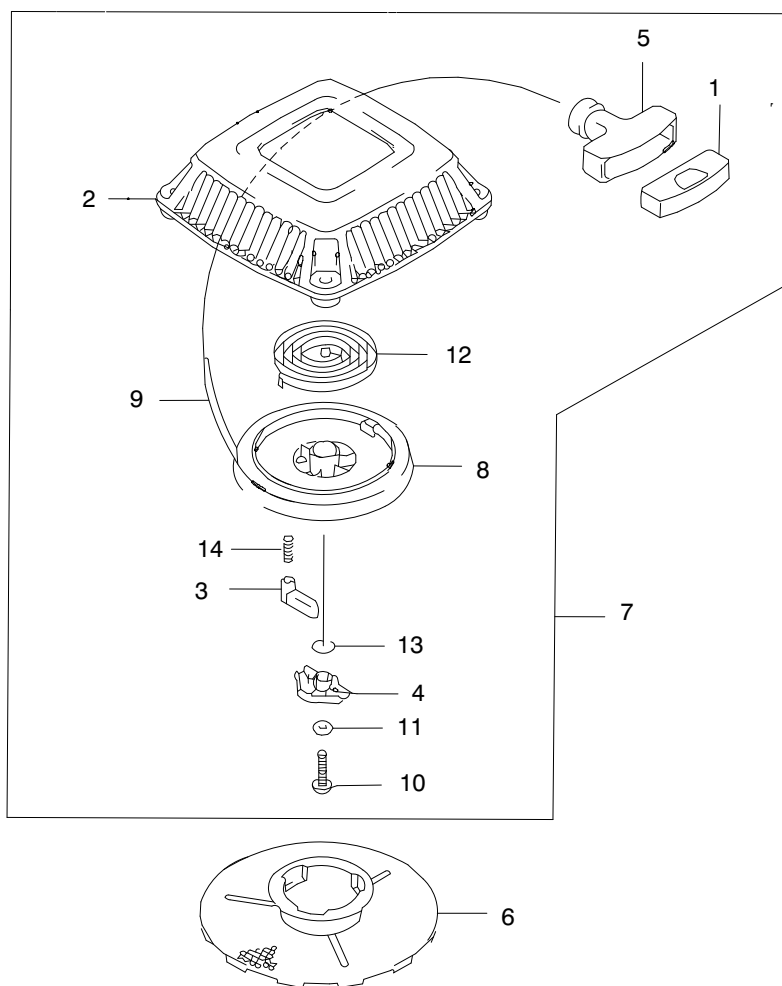 


Sheet No.:3m

Starter

Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap - Grip
2	100-2766	1	Holder
3	100-2767	1	Pawl Recoil Starter
4	100-2768	1	Retainer-Spring
5	100-2769	1	Grip Recoil Starter
6	100-2770	1	Pulley-Starting
7	100-2771	1	Starter-Recoil
8	100-2772	1	Reel Recoil Starter
9	100-2836	1	Rope Recoil 3.8x2610
10	100-2774	1	Screw 5x18
11	100-2775	1	Washer 5x12.8x1.2
12	100-2776	1	Spring Recoil
13	100-2777	1	Spring
14	93-8555	1	Spring-Return

Ref. No.	Part No.	Qty.	Description

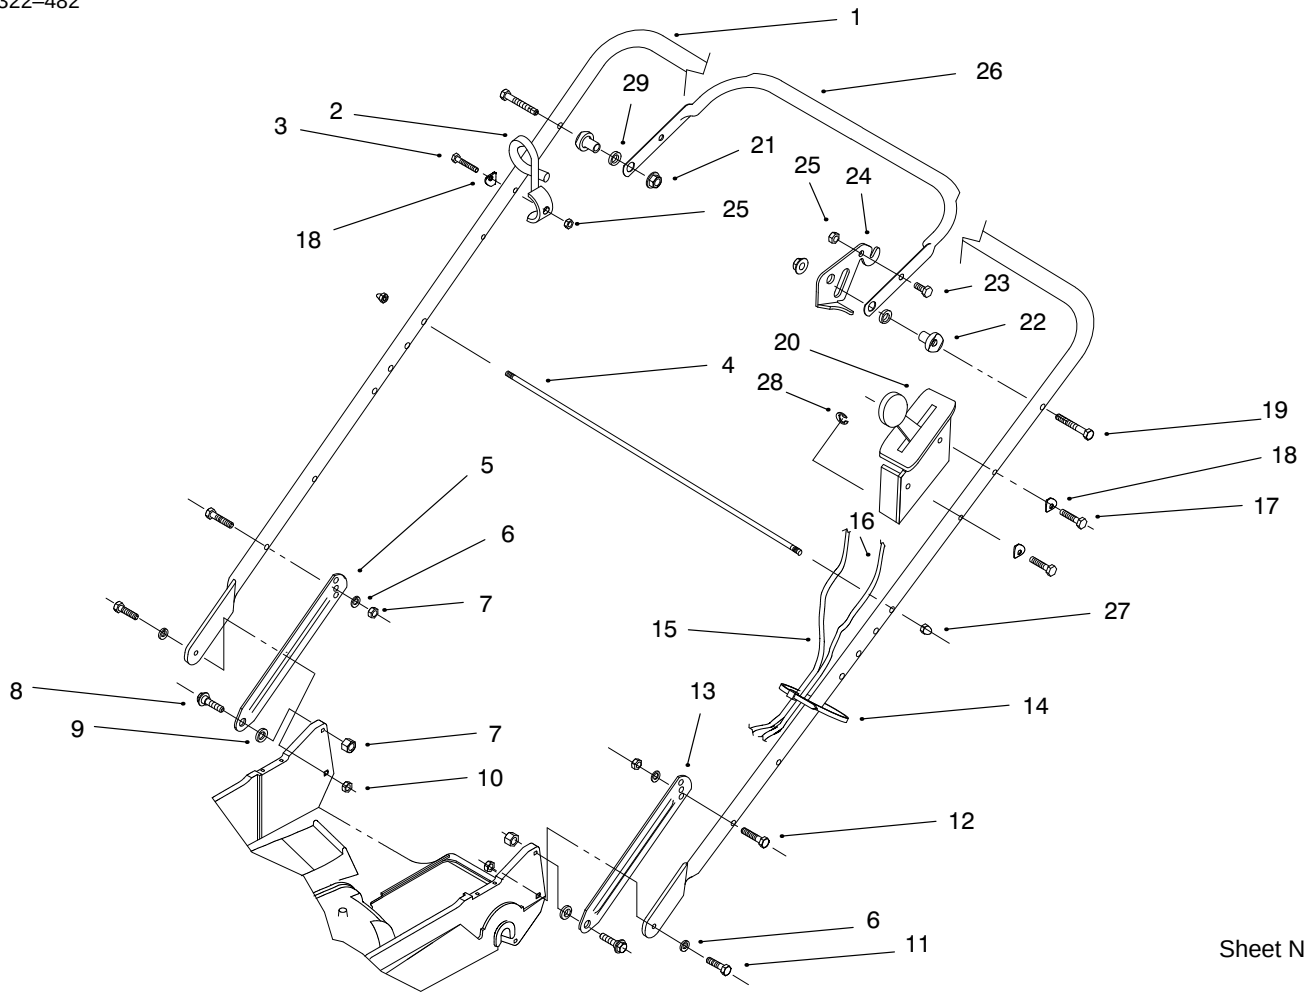 


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2000-03	1	Handle
2	46-8081	1	Guide-Rope
3	321-9	1	Screw-HH
4	48-2810	1	Rod-Bag Support
5	84-8401-03	1	Latch-RH Handle
6	3290-456	4	Washer-Belleville
7	3296-29	4	Nut-Lock Ni
8	27-7210	2	Screw-Shoulder
9	3-3287	2	Spacer-Handle Latch
10	3296-47	2	Nut-Lock Ni
11	322-6	2	Screw-HH
12	322-7	2	Screw-HH
13	84-8361-03	1	Latch-LH Handle
14	3290-378	1	Tie-Cable
15	100-2838	1	Cable-Brake
16	70-1061	1	Cable-Throttle
17	321-13	2	Screw-HH
18	3-7501	3	Washer
19	322-11	2	Screw-HH
20	82-9952	1	Brkt-Throttle Control
21	3296-58	2	Nut-Lock Ni
22	49-1630	2	Spacer-Support
23	321-4	1	Screw-HH
24	66-5350	1	Lever-Control
25	3296-42	2	Nut-Lock Ni
26	61-8270-03	1	Bar-Control

Ref. No.	Part No.	Qty.	Description
27	32111-7	2	Nut-Cap
28	32151-86	2	E-Ring - Throt & Tract
29	256-276	2	Spacer-Nylon

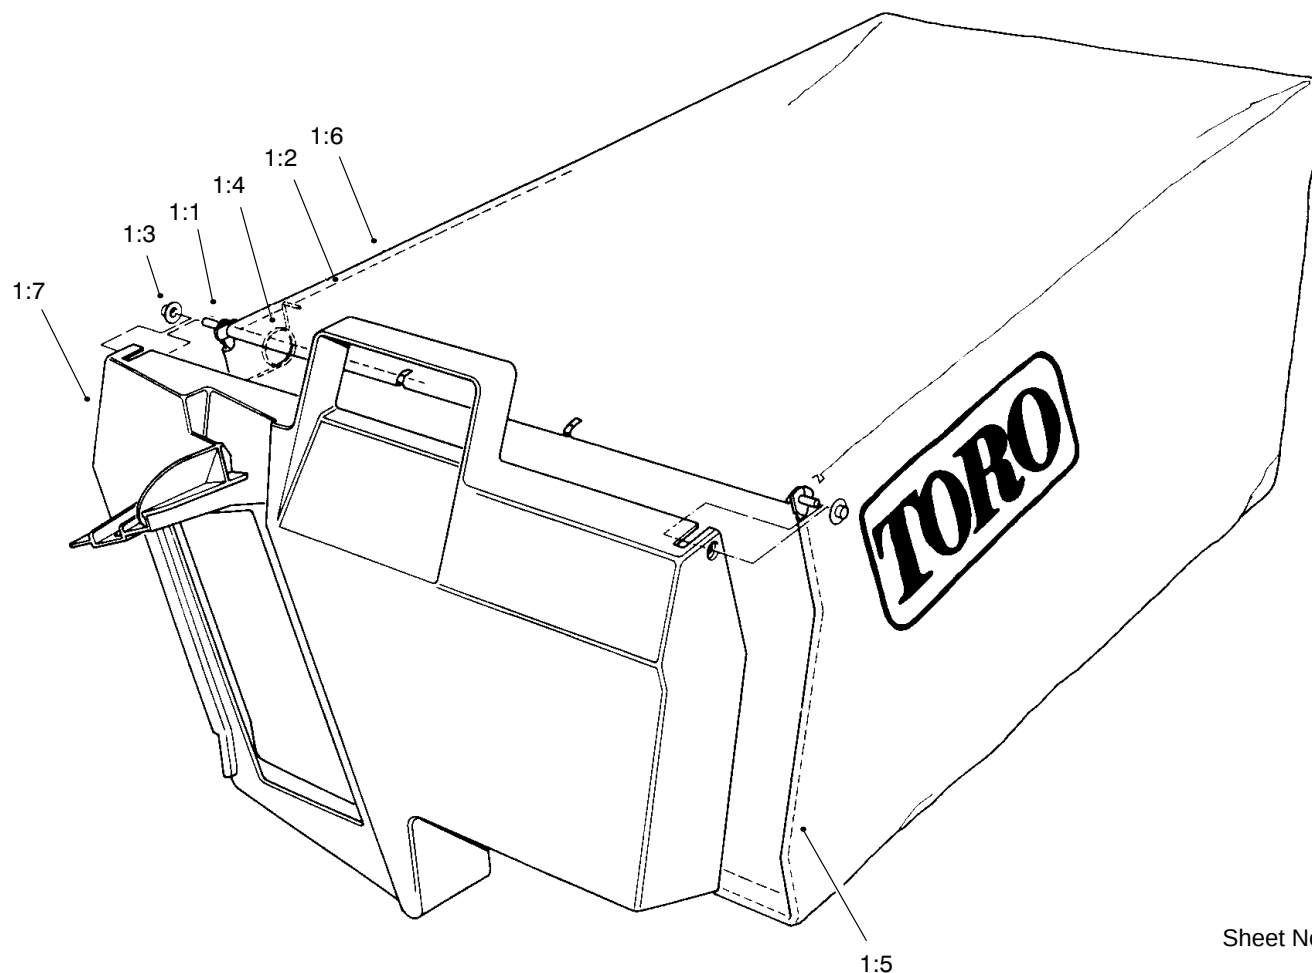 

Sheet No.:4a

Bagging Assembly

Ref. No.	Part No.	Qty.	Description
*	99-2535	1	Grass Bag Assy-Service Only
1:1	33-4820	1	Hinge-Bag Door
1:2	42-4030	1	Frame-Upper Bag
1:3	3290-422	2	Nut-Push
1:4	36-6910	2	Spring
1:5	42-4020	1	Frame-Bag
1:6	98-9222	1	ASM - Grass Bag
1:7	48-2840	1	Door-grass Bag

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-3287	17	9	2	Spacer—Handle Latch
3-7501	17	18	3	Washer
Kw10010	15	1	1	Gasket
Kw10029	8	7	1	Bolt, Flanged 6x10
Kw10033	5	18	1	Bolt, Flanged 8x12
Kw10035	5	17	4	Bolt, Flanged 8x45
Kw10087	10	6	1	Cap Plug
Kw10297	11	22	1	Clip
14-9419	4	13	1	Blade w/Decal
25-7740	1	12	4	Knob—Arm
26-0670	4	10	1	Screw—Blade
27-6232	1	8	2	Bolt—Wheel
27-7210	17	8	2	Screw—Shoulder
27-8590	4	8	1	Key—Square
33-3208	1	17	1	Rod—Shield
33-4820	18	1:1	1	Hinge—Bag Door
36-4780	1	21	2	Washer
36-6910	18	1:4	2	Spring
37-7260	1	27	2	Screw—HH
39-5770	1	1:6	1	Decal — Cut Finger
40-1940	1	3	4	Washer—Wheel Bolt
42-3510	1	18	2	Pivot Arm ASM
42-4020	18	1:5	1	Frame—Bag
42-4030	18	1:2	1	Frame—Upper Bag
44-0580	1	16	1	Shield — Trailing
46-6810	2	45	1	Screw & Washer ASM
46-6811	1	36	1	Screw/Washer V
46-8081	17	2	1	Guide—Rope
46-8090	1	32	2	Screw—Plastite
48-2170	1	24	2	Cap—End
48-2591	4	17	1	Crankshaft Protector As
48-2810	17	4	1	Rod—Bag Support
48-2840	18	1:7	1	Door—grass Bag
49-1630	17	22	2	Spacer—Support
49-2040	2	48	4	Screw—Taptite
49-8740	1	25	1	Quadrant—LH Rear
49-8750	1	29	1	Quadrant—RH Rear
49-8760	1	13	1	Quadrant—LH Front
49-8770	2	49	1	Quadrant—RH Front
49-8790	1	20	1	Shaft—Rear Axle
52-2410	3	2:1:1	1	Hub—Bearing Supt
52-2440	3	2:1:2	1	Spacer—Bearing
52-2450	3	2:1:3	2	Bearing—Wheel
52-2480	1	7	4	Spacer—Wheel
52-2610	1	41	1	Label—HP Grease
53-7720	1	9	4	Wheel & Tire ASM
53-7740	3	1	1	Tire
53-7780-06	3	2:4	2	Plate—Wheel Half
61-8270-03	17	26	1	Bar—Control
61-8300	1	6	2	Pivot Arm Wa — Front
66-5350	17	24	1	Lever—Control
66-7560	1	5	2	Front Spring Arm ASM
66-7561	1	23	2	Rear Spring Arm ASM
70-1061	17	16	1	Cable—Throttle
71-1280	1	1:7	1	Decal — Safety Instruct
71-9350	1	39	1	Bracket—Spring
74-1810	1	22	2	Washer
76-4640	1	33:3	1	Latch—Disc. Plug +
76-4650	1	33:4	1	Grip—Latch
76-4660	1	38	1	Spring—Door
77-0500	1	33	1	Discharge Plug Assembly
80-3770	1	37	1	Spring—Door Ret

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
82-9152	1	40	1	Tunnel-Discharge
82-9952	17	20	1	Brkt-Throttle Control
84-8361-03	17	13	1	Latch-LH Handle
84-8401-03	17	5	1	Latch-RH Handle
88-1270	1	15	1	Decal-Safety STD
92-1599-03	4	12	1	Stiffener-Blade
92-1720	1	1:3	1	Kicker - Front
92-1730	1	1:4	1	Kicker - R.h.
92-1750	1	1:2	1	Kicker - Rear, Sp
92-1779	1	1:8	1	Decal-Warning
92-7988	2	52	1	Decal - Recycler
93-3154	1	34	1	Latch-Plate
93-7351	1	35	1	ASM - Discharge Door
93-8516	5	15	2	Pin
93-8526	12	13	1	Key
93-8527	12	14	2	Bolt-Rod
93-8533	6	11	2	Nut
93-8534	6	12	2	Nut
93-8549	5	28	2	Screw
93-8549	13	11	3	Screw
93-8555	16	14	1	Spring-Return
93-8568	10	21	1	Nut
93-8571	10	12	1	Key
93-8588	7	20	1	Spring
93-8595	7	14	1	Nut
93-8607	7	27	1	Pin-Snap
93-8608	7	12	1	Washer
93-8608	7	23	1	Washer
93-8611	7	10	1	Governor ASM
93-8631	7	13	3	Nut
93-8639	13	24	2	Washer
94-6842	7	15	1	Washer
94-9044	16	1	1	Cap - Grip
95-9715	15	11	1	Joint
95-9716	13	12	2	Screw
95-9837	7	24	1	Bolt - Flanged
95-9849	4	4	1	Clamp
95-9849	7	17	1	Clamp
95-9853	4	3	1	Bolt
95-9853	7	22	1	Bolt
98-2000-03	17	1	1	Handle
98-7139	1	1	1	Housing - Service
98-9222	18	1:6	1	ASM - Grass Bag
99-2535	18	*	1	Grass Bag Assy-Service Only
99-6279	4	9	1	Spacer-Blade Retainer
99-6283	4	14	1	Blade Retainer W.a.
99-6296	1	26	1	Cover-Belt,HP (Commercial)
99-6297	4	5	1	Decal Engine
99-6722	2	54	1	Guard Engine
99-6728	5	30	1	Oil Slinger
99-6729	5	31	1	Shaft
99-6730	5	32	1	Gasket
100-2600	14	1	1	Cover Upper
100-2601	14	4	3	Stud
100-2602	14	5	1	Stud
100-2603	14	6	4	Nut
100-2604	14	7	4	Nut 6mm
100-2605	14	9	4	Spacer 6.2x7.8x22
100-2606	14	8	4	Spacer 6.2x7.8x17
100-2607	14	10	1	Grommet
100-2609	5	21	4	Bolt Flanged
100-2609	8	6	1	Bolt Flanged

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
100-2609	14	12	2	Bolt Flanged
100-2610	5	19	6	Bolt Flanged
100-2610	10	18	2	Bolt Flanged
100-2610	14	13	4	Bolt Flanged
100-2611	11	1	1	Gasket
100-2612	11	2	1	Gasket
100-2613	11	3	1	Gasket Carburetor
100-2614	11	4	1	Gasket Insulator
100-2615	11	5	1	Carburetor ASM
100-2616	11	6	1	Screw Pilot Air
100-2617	11	7	1	Chamber Float
100-2618	11	8	1	Valve Throttle
100-2619	11	9	1	Valve Float
100-2620	11	10	1	Float
100-2621	11	11	1	Shaft Carburetor Throttle
100-2622	11	12	1	Shaft Carburetor Choke
100-2623	11	13	1	Insulator
100-2624	11	14	1	Valve
100-2625	11	15	1	Limiter
100-2626	11	16	1	Nozzle Main
100-2627	11	17	1	Screw
100-2628	11	18	1	Screw
100-2629	11	19	2	Screw
100-2630	11	20	1	Collar
100-2631	11	21	1	Collar
100-2633	11	23	1	Pin
100-2634	11	24	1	Jet Main #62.5
100-2635	11	27	1	Jet Pilot #37.5
100-2636	11	28	3	Spring
100-2637	11	29	1	Seal
100-2638	11	30	1	Seal
100-2639	11	31	1	Collar
100-2640	11	32	1	Bolt
100-2641	11	33	1	Tube 4x7x125
100-2642	11	34	1	Screw Pan
100-2643	15	5	1	Pump ASM Oil
100-2644	15	2	1	Gasket
100-2645	15	4	1	Plate
100-2646	15	6	1	Cover Pump
100-2647	15	7	1	Rotor Pump
100-2648	15	8	1	Pipe Complete
100-2649	15	9	1	Filter Oil
100-2650	10	1	1	Plate
100-2651	10	2	1	Cover
100-2652	10	3	1	Cover
100-2653	10	4	1	Insulator
100-2654	10	5	1	Insulator
100-2656	10	7	1	Terminal
100-2657	10	8	1	Coil ASM Ignition
100-2658	10	9	1	Flywheel Complete
100-2659	10	10	1	Wire Lead
100-2660	10	11	1	Wire Lead L=300mm
100-2662	10	13	1	Plug-Spark Bpr5es(Ngk)
100-2663	10	14	1	Bolt 4x20
100-2664	10	15	1	Clamp
100-2665	10	16	1	Washer
100-2666	10	17	1	Bolt Upset
100-2668	10	19	1	Nut Hex
100-2669	10	20	1	Nut Hex
100-2671	8	8	1	Washer Plain S
100-2671	10	22	1	Washer Plain S
100-2672	12	1	1	Piston Engine

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
100-2673	12	2	1	Pin-Piston
100-2674	12	3	1	Ring Set Piston
100-2675	12	4	1	Ring Set Piston L0.25
100-2676	12	5	1	Ring Set Piston L0.50
100-2677	12	6	1	Piston Engine L0.25
100-2678	12	7	1	Piston Engine L0.50
100-2679	12	8	1	Crankshaft
100-2680	12	9	1	Rod ASM Connecting
100-2681	12	10	1	Rod ASM Connecting U/S=0.50
100-2682	12	11	1	Gear-Helical
100-2683	12	12	2	Ring-Snap
100-2687	15	3	1	Guide
100-2688	15	10	1	Gauge
100-2689	15	12	1	Filler
100-2690	15	20	1	O-Ring
100-2691	13	1	1	Cap Air Filter
100-2692	13	2	1	Element Air Filter
100-2693	13	3	1	Element Air Filter
100-2694	13	4	1	Element ASM Air Filter
100-2695	13	5	1	Bracket
100-2696	13	6	1	Gasket Intake Pipe
100-2697	13	7	1	Gasket Muffler
100-2698	13	8	1	Pipe-Intake
100-2699	13	9	1	Muffler Complete
100-2700	7	1	1	Lever
100-2701	7	2	1	Lever
100-2702	7	3	1	Link-Choke
100-2703	7	4	1	Link
100-2704	7	5	1	Arm-ASM
100-2705	7	6	1	Arm-Pivot
100-2706	7	7	1	Spring-Governor
100-2707	7	8	1	Panel-ASM Control
100-2708	7	9	1	Sleeve
100-2710	7	11	1	Panel-Control
100-2715	7	16	2	Washer 6x9x1.2
100-2717	7	18	1	Spring Link
100-2718	7	19	2	Collar 6x13x2.3
100-2724	7	25	2	Bolt-Upset-Wsp
100-2725	7	26	1	Screw-Pan
100-2727	6	1	1	Valve-Intake
100-2728	6	2	1	Valve-Exhaust
100-2729	6	3	2	Retainer-Valve Spring
100-2730	6	4	2	Arm-Rocker
100-2731	6	5	2	Tappet
100-2732	6	6	1	Guide
100-2733	6	7	2	Rod-Push
100-2734	6	8	1	Decompressor
100-2735	6	9	2	Spring-Engine Valve
100-2736	6	10	1	Camshaft-Complete
100-2739	6	13	3	Pin
100-2740	6	14	1	Spring
100-2741	6	15	2	Bolt
100-2742	5	1	1	Gasket-Head
100-2743	5	2	1	Head-Complete-Cylinder
100-2744	5	3	1	Gasket Rocker Case
100-2745	5	4	1	Case-Rocker
100-2746	5	5	1	Gasket Cover
100-2747	5	6	1	Gasket Crankcase Cover
100-2748	5	7	1	Plate
100-2749	5	8	1	Plate
100-2750	13	10	1	Cover Muffler
100-2754	13	14	2	Spacer 6.2x7.8x8

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
100-2755	13	15	1	Tube
100-2756	13	16	1	Bolt
100-2757	13	17	1	Clamp
100-2758	13	18	1	Clamp
100-2759	13	19	2	Washer 7x21x2.3
100-2760	13	20	1	Washer 6.5x18x2.0
100-2760	14	11	4	Washer 6.5x18x2.0
100-2761	13	21	2	Bolt-Stud
100-2762	13	22	2	Bolt Upset Wp
100-2763	13	23	2	Screw Pan
100-2766	16	2	1	Holder
100-2767	16	3	1	Pawl Recoil Starter
100-2768	16	4	1	Retainer-Spring
100-2769	16	5	1	Grip Recoil Starter
100-2770	16	6	1	Pulley-Starting
100-2771	16	7	1	Starter-Recoil
100-2772	16	8	1	Reel Recoil Starter
100-2774	16	10	1	Screw 5x18
100-2775	16	11	1	Washer 5x12.8x1.2
100-2776	16	12	1	Spring Recoil
100-2777	16	13	1	Spring
100-2779	5	9	1	Cover
100-2780	5	10	1	Valve
100-2781	5	11	1	Valve
100-2782	5	12	1	Cover-Crankcase
100-2783	8	1	1	Bracket
100-2784	8	2	1	Band-Brake
100-2785	8	3	1	Lever-Brake
100-2786	8	4	1	Pin
100-2787	8	5	1	Spring
100-2791	8	9	1	Circlip-Type-E
100-2792	8	10	2	Pin Cotter
100-2793	14	2	1	Cover Lower
100-2794	14	3	1	Cover
100-2801	15	13	1	Ring O
100-2802	15	14	1	Spring
100-2803	15	15	1	Spring
100-2804	5	20	4	Bolt-Flanged
100-2804	9	17	2	Bolt-Flanged
100-2804	15	16	6	Bolt-Flanged
100-2805	15	17	2	Bolt-Flanged
100-2806	15	18	1	Bolt-Flanged
100-2807	15	19	1	Ball-Steel
100-2808	9	1	1	Gasket
100-2809	9	2	1	Guide
100-2810	9	3	1	Lever
100-2811	9	4	1	Filter Complete
100-2812	9	5	1	Filter Fuel
100-2813	9	7	1	Element-Breather
100-2814	9	6	1	Filter Fuel
100-2815	9	8	1	Tank Complete Fuel
100-2816	9	9	1	Cap-ASM-Tank
100-2817	9	10	1	Screw
100-2818	9	11	1	Clamp
100-2819	9	12	1	Tube
100-2820	9	13	2	Clamp
100-2821	9	14	1	Clamp
100-2822	9	15	2	Clamp
100-2823	9	16	1	Tube 4.8x10.3x433
100-2825	9	18	2	Screw-Pan-Wp
100-2835	4	7	3	Screw-Engine Mount
100-2836	16	9	1	Rope Recoil 3.8x2610

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
100-2838	17	15	1	Cable-Brake
100-2840	5	13	1	O-Ring
100-2841	5	14	1	Ball Bearing
100-2842	5	16	1	Bolt Upset Wsp
100-2843	5	22	1	Washer 6x12x1.6
100-2844	5	23	1	Washer 5x16x0.8
100-2846	5	25	1	Tube
100-2847	5	26	2	Seal Oil
100-2848	5	27	2	Pin
100-2849	5	29	1	Crankcase Complete
100-2854	5	24	1	Plug
100-2855	5	33	1	Bolt Flanged
256-276	17	29	2	Spacer-Nylon
257-3	2	50	2	Washer-Thrust
321-2	3	2:2	4	Screw-HH
321-4	17	23	1	Screw-HH
321-7	1	31	2	Screw-HH
321-9	17	3	1	Screw-HH
321-13	17	17	2	Screw-HH
322-6	17	11	2	Screw-HH
322-7	17	12	2	Screw-HH
322-11	17	19	2	Screw-HH
323-6	2	56	2	Screw-HH
323-12	1	10	4	Screw-HH
3253-22	4	11	1	Washer-Lock/Sp
3254-6	4	16	3	Washer-Lock/Int
3256-22	1	30	2	Washer-Flat
3290-378	17	14	1	Tie-Cable
3290-422	18	1:3	2	Nut-Push
3290-456	17	6	4	Washer-Belleville
3295-35	1	33:1	1	Rivet-Alum
3296-6	1	2	2	Nut-Lock Ni
3296-29	17	7	4	Nut-Lock Ni
3296-39	2	57	2	Nut-Lock Ni
3296-42	1	28	2	Nut-Lock Ni
3296-42	3	2:3	4	Nut-Lock Ni
3296-42	17	25	2	Nut-Lock Ni
3296-47	17	10	2	Nut-Lock Ni
3296-58	17	21	2	Nut-Lock Ni
32111-7	17	27	2	Nut-Cap
32121-108	1	19	2	Pin-Spirol
32144-70	4	15	3	Screw-Taptite
32144-86	2	55	4	Screw-HH
32144-111	1	1:5	6	Screw-Plask
32151-86	17	28	2	E-Ring - Throt & Tract
32152-2	1	4	4	Nut-Conelock

[illegible]