




MODEL NO. 07200-90270 & UP  
 MODEL NO. 07200TC-90001 & UP  
 MODEL NO. 07202-90206 & UP

PARTS  
 CATALOG

WORKMAN® 3200

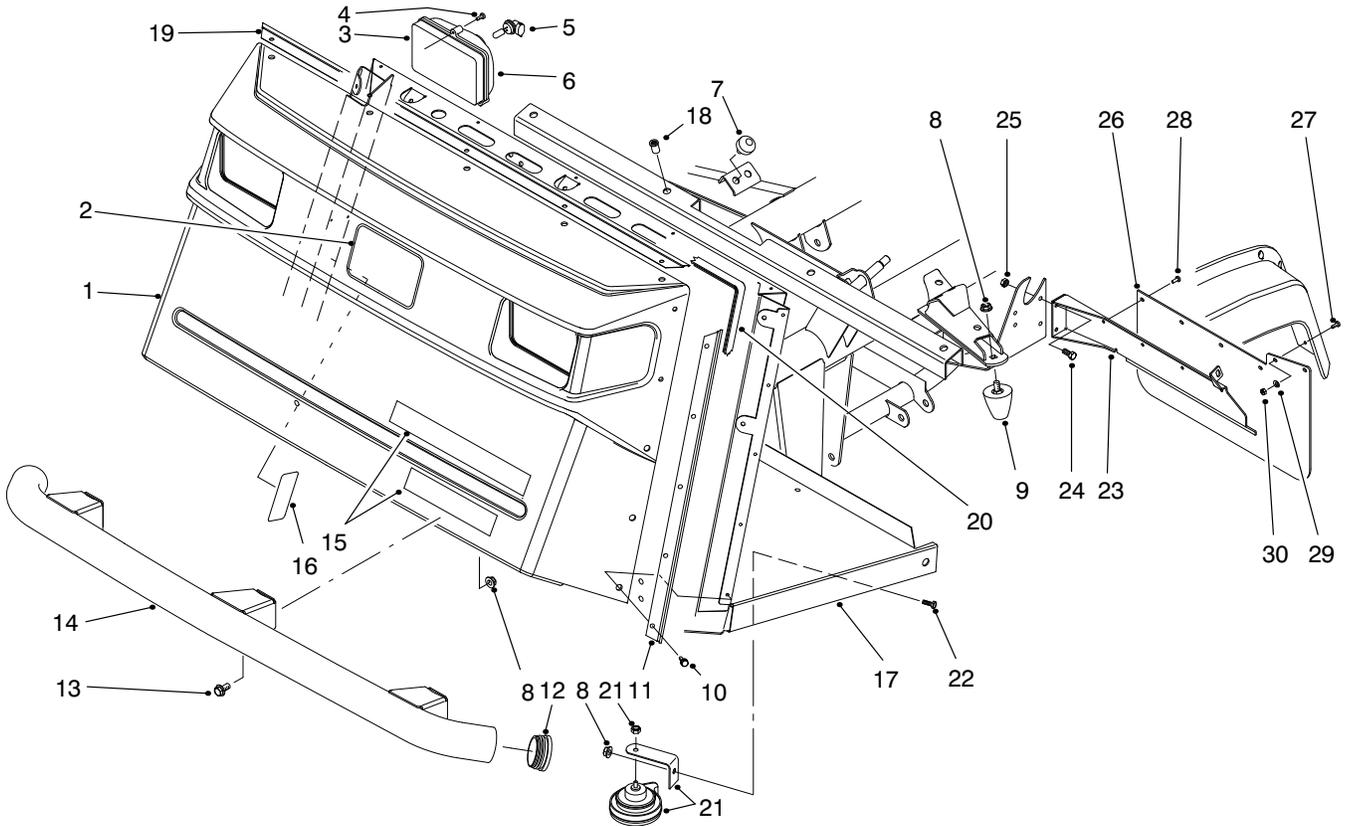


T-1581-1

FRONT BUMPER & HOOD ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-0710	Hood	1	16	92-5395	Decal-Load (Japan)	1
2	62-5550	Decal-TORO	1	17	94-5240	Asm-Operators Platform (Incl. Ref. #18)	1
3	87-2120	Asm-Headlight (Incl. Ref. #5-6)	2	18	32148-7	Nut-Clinch	8
4	32104-88	Screw	6	19	87-8130	Bracket-Trim Top	1
5	87-6320	Bulb-Headlight	2	20	87-8160	Trim	1
6	87-6330	Lens-Headlight	2	21	116749	Asm-Horn	1
7	87-2440	Bumper	2	22	323-4	Screw-HH	1
8	3290-357	Nut-HFH	8	23	94-3838	Bracket-Mudflap LH	1
9	26-0071	Bumper	2	*	94-3839	Bracket-Mudflap RH	1
10	87-6620	Screw	15	24	321-4	Screw-HH	4
11	87-8120	Bracket-Trim Side	2	25	32128-33	Nut-HFH	4
12	2410-42	Cap-Front Bumper	2	26	94-3841	Mudflap	2
13	3234-1	Screw-HFH	6	27	3250-13	Screw-PH	4
14	87-4070	Bumper-Front	1	28	146489	Rivet-Pop	8
15	87-6700	Decal-Workman 3200	1	29	3256-61	Washer-Flat	4
16	87-7000	Decal-Load	1	30	3296-2	Nut-Lock	4
16	94-1224	Decal-Load (Europe)	1				

\*Not Illustrated

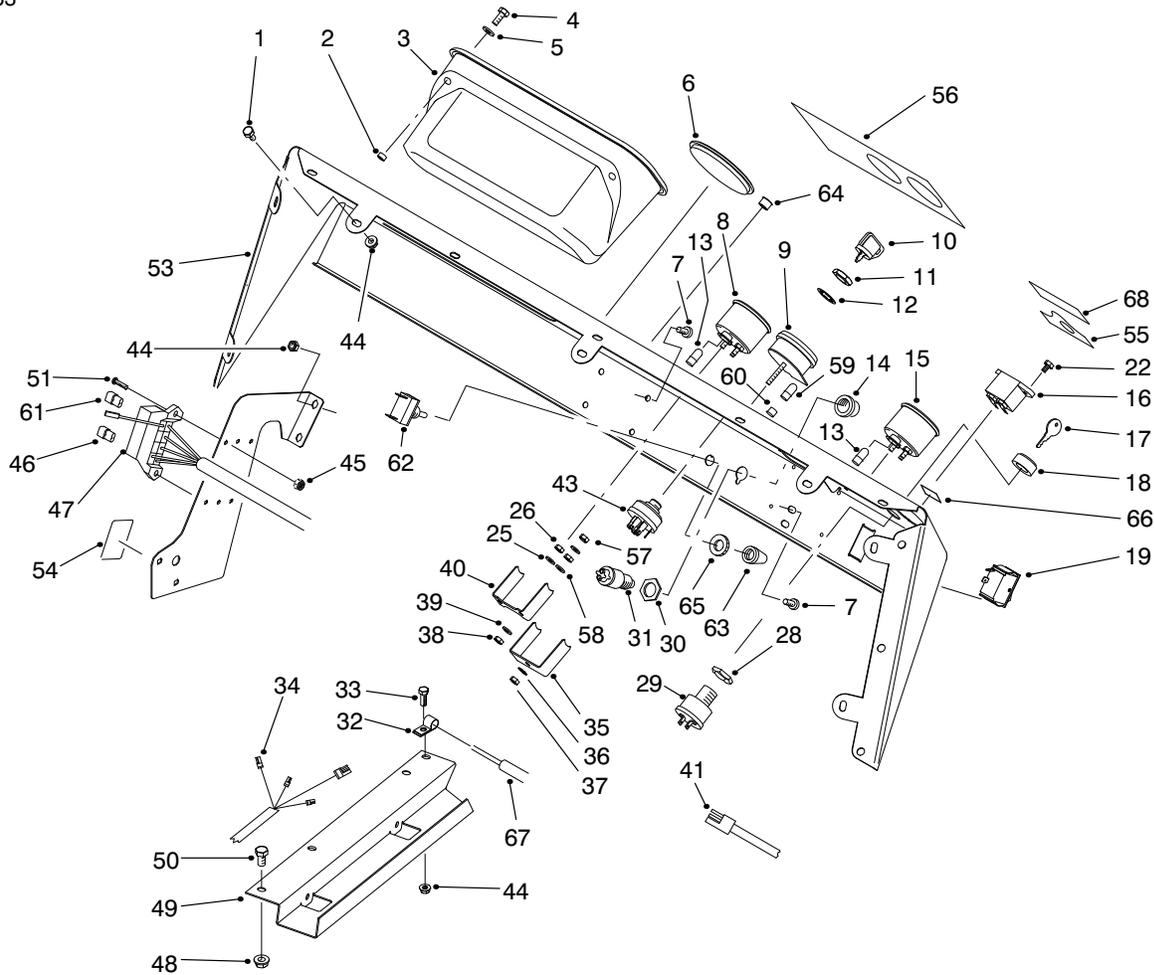


T-1706-1

## CONTROL PANEL ASM

Ref. No.	Part No.	Description	No. Used
1	321-2	Screw-HH	7
2	32148-6	Insert-Threaded	2
3	87-3780	Box-Glove	1
4	321-3	Screw-HH	2
5	3256-22	Washer-Flat	2
6	2410-35	Plug-Hole	1
7	3274-31	Screw-HSBH	4
8	87-5590	Asm-Temperature Gauge (Incl. Ref. #38-40, 57 & 58)	1
9	93-7053	Asm-Warning Light (Incl. Ref. #35-37, 59 & 60)	1
10	63-8360	Key-Ignition	1
11	218-446	Nut-Hex.	1
12	218-447	Washer-Lock	1
13	218-600	Bulb	2
14	87-5580	Button-Horn	1
15	87-5580	Asm-Fuel Gauge (Incl. Ref. #38-40, 57 & 58)	1
16	75-6820	Hourmeter	1
17	87-0740	Key-Supervisor Switch	1
18	87-1720	Nut-Supervisor Switch	1
19	87-3790	Switch-Light	1
22	32144-18	Screw-HH	2
28		Nut-Hex.	1
29	94-5245	Asm-Supervisor Switch (Incl. Ref. #17, 18 & 28)	1

Ref. No.	Part No.	Description	No. Used
30		Nut-Hex.	1
31	18-2830	Asm-Horn Switch (Incl. Ref. #14 & 30)	1
32	2412-89	Clamp-R	1
33	321-4	Screw-HH	1
34	99-1111	Harness-Wire Rear	1
35		Clamp-Light	1
36	3254-1	Washer-Lock	1
37	3217-26	Hut-Jam	1
38	3217-25	Nut-Jam	2
39	3253-15	Washer-Lock	2
40		Clamp-Temp. Gauge	1
41	87-4230	Harness-Wire Front LH	1
43	27-2360	Asm-Ignition Switch (Incl. Ref. #11 & 12)	1
44	32128-33	Nut-HFH	12
45	3296-2	Nut-Lock	2
46	218-574	Fuse-7.5 Amp	2
47	87-8500	Asm-Front Wire Harness (Incl. Ref. #13)	1
48	32128-20	Nut-HFH	3
49	93-7094	Cover-Wire Harness	1
50	322-2	Screw-HH	3
51	3250-13	Screw-PPH	2
53	87-8540	Asm-Control Panel (Incl. Ref. #55-56 & 68)	1

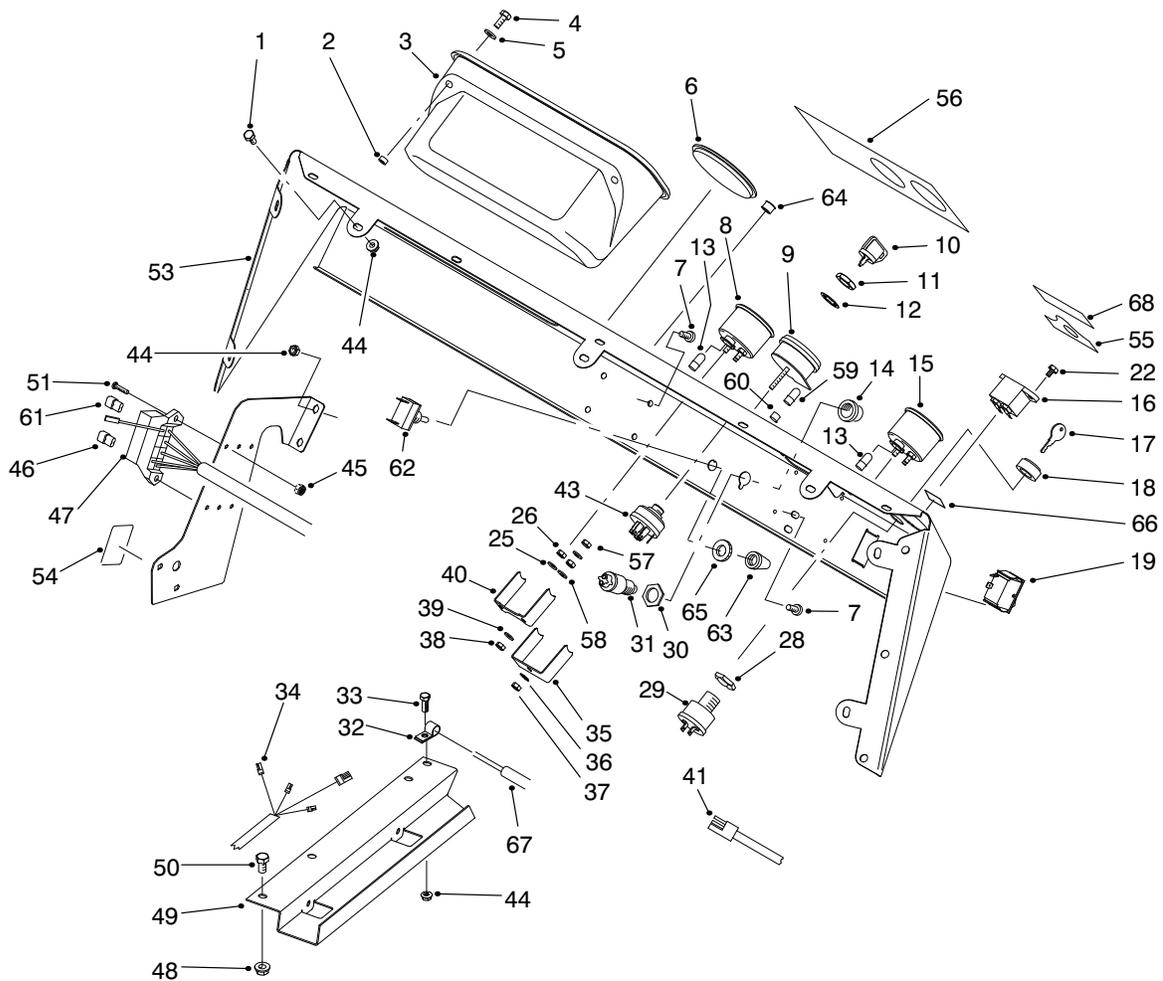


T-1706-1


## CONTROL PANEL ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	87-6670	Decal-Fuse	1	60	87-6270	Asm-Socket & Bulb (Incl. Ref. #59)	4
54	93-9851	Decal-Fuse (Europe)	1	61	218-581	Fuse-15 Amp	1
54	92-5374	Decal-Fuse (Japan)	1	62	20-7150	Asm-Toggle Switch (Incl. Ref. #65)	1
55	87-5910	Decal-Supervisor	1	63	218-473	Boot-Switch	1
55	93-9856	Decal-Supervisor (Europe)	1	64	2410-64	Plug-Hole	1
55	92-5332	Decal-Supervisor (Japan)	1	65		Nut-Lock	1
56	87-8520	Decal-Dash	1	66	93-7252	Decal-CE (Europe)	1
56	93-9446	Decal-Dash (Europe)	1	67	94-3837	Cable-Clutch	1
56	92-6422	Decal-Dash (Japan)	1	68	94-5272	Decal-Warning	1
57	3253-19	Washer-Lock	3				
58	3217-29	Nut-Jam	3				
59	219-17	Bulb-Warning Light	4				


# ELECTRICAL SCHEMATIC (Models 07200 & 07202)

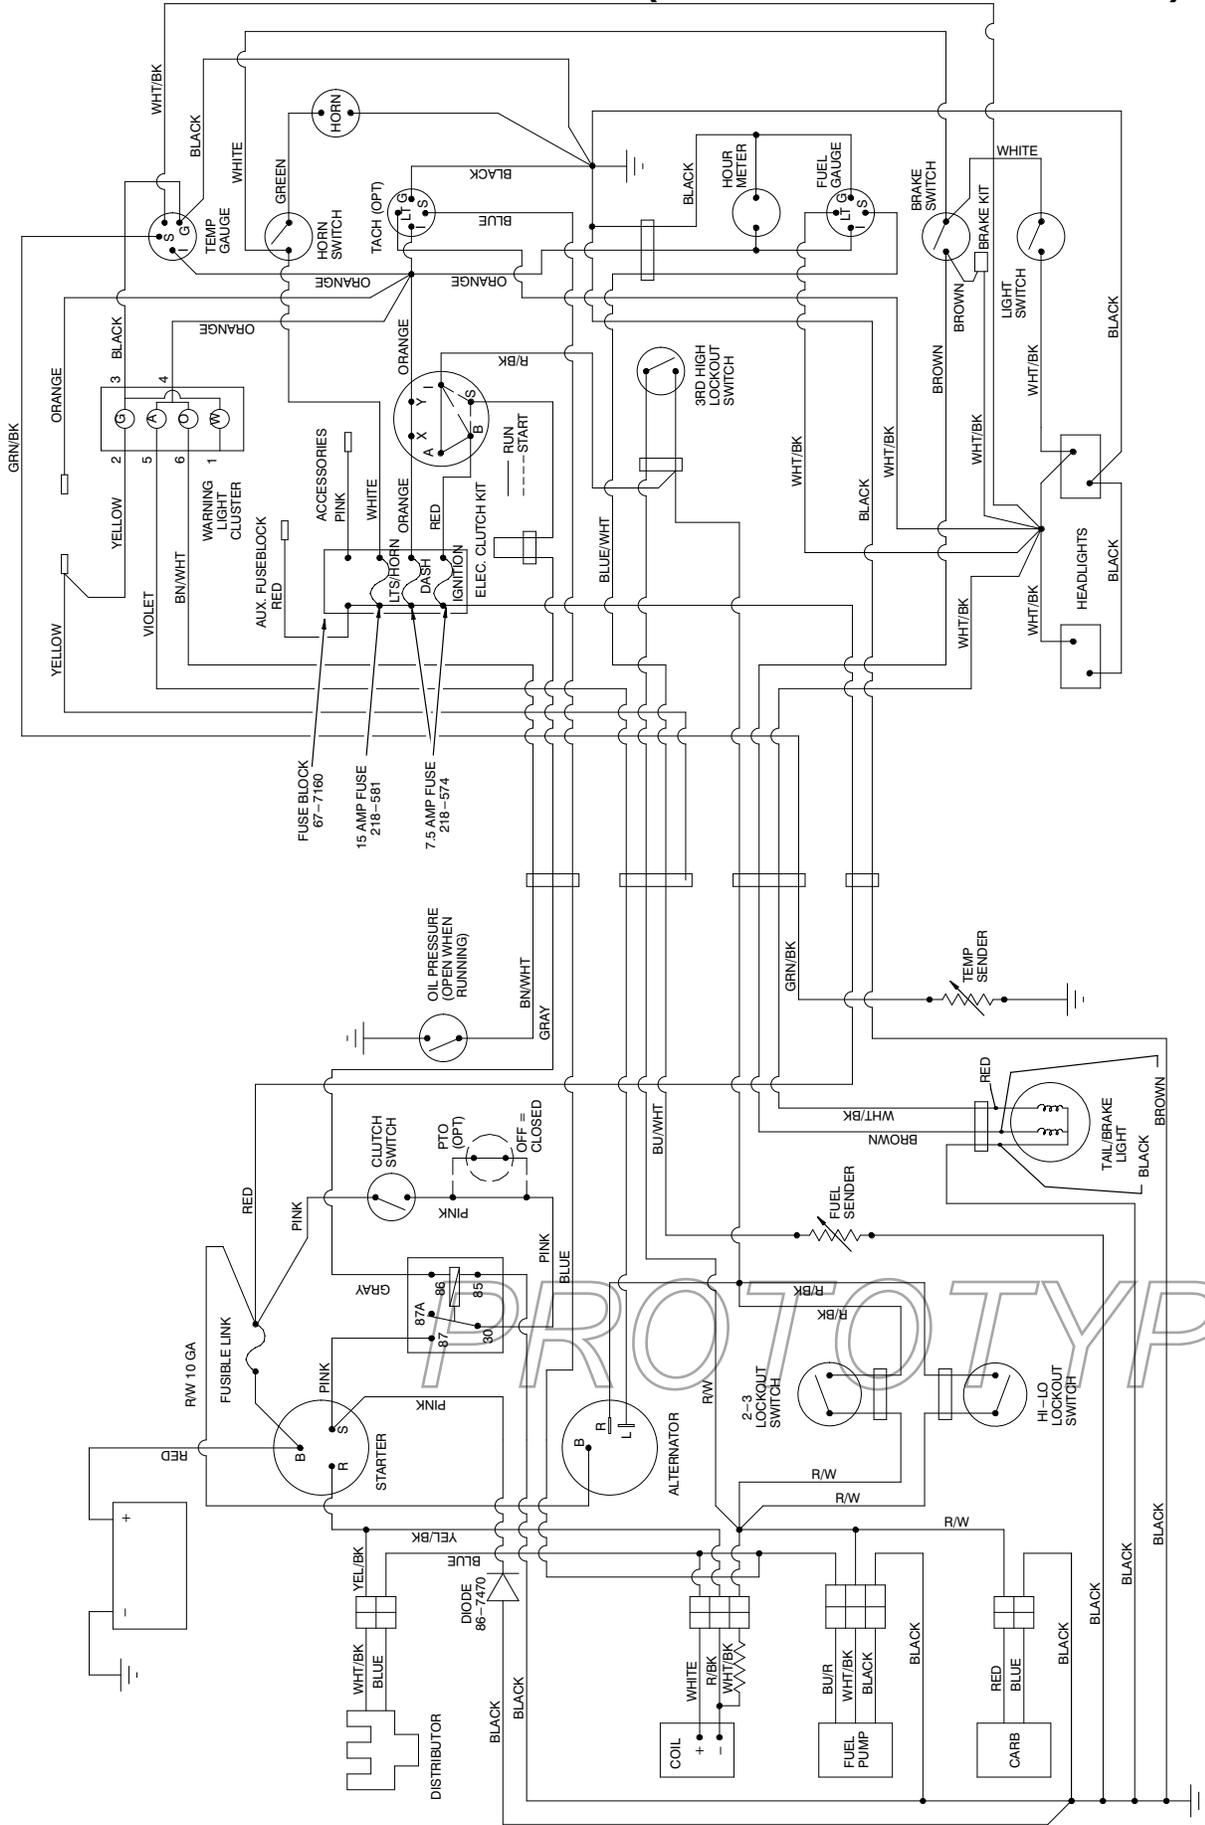

# ELECTRICAL SCHEMATIC (Models 07200TC)

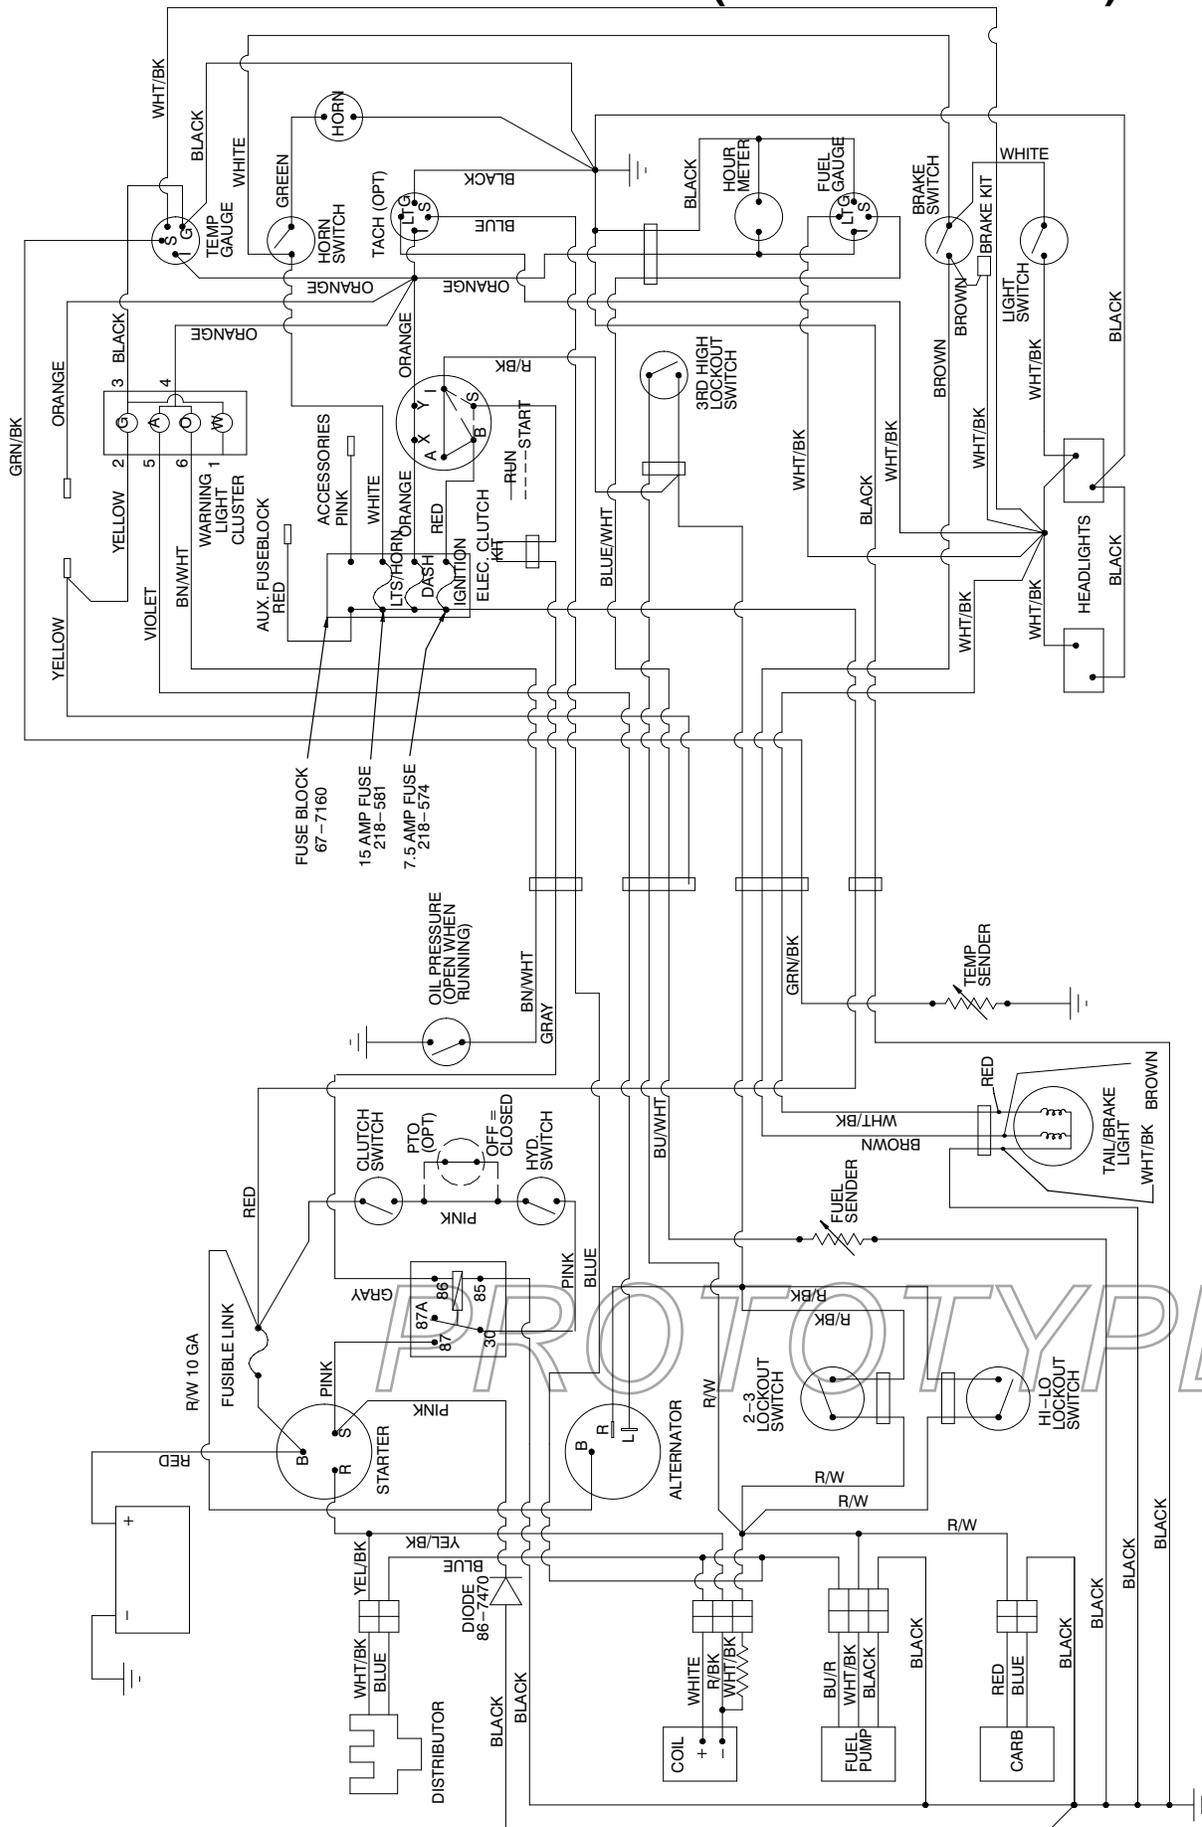

T-3146

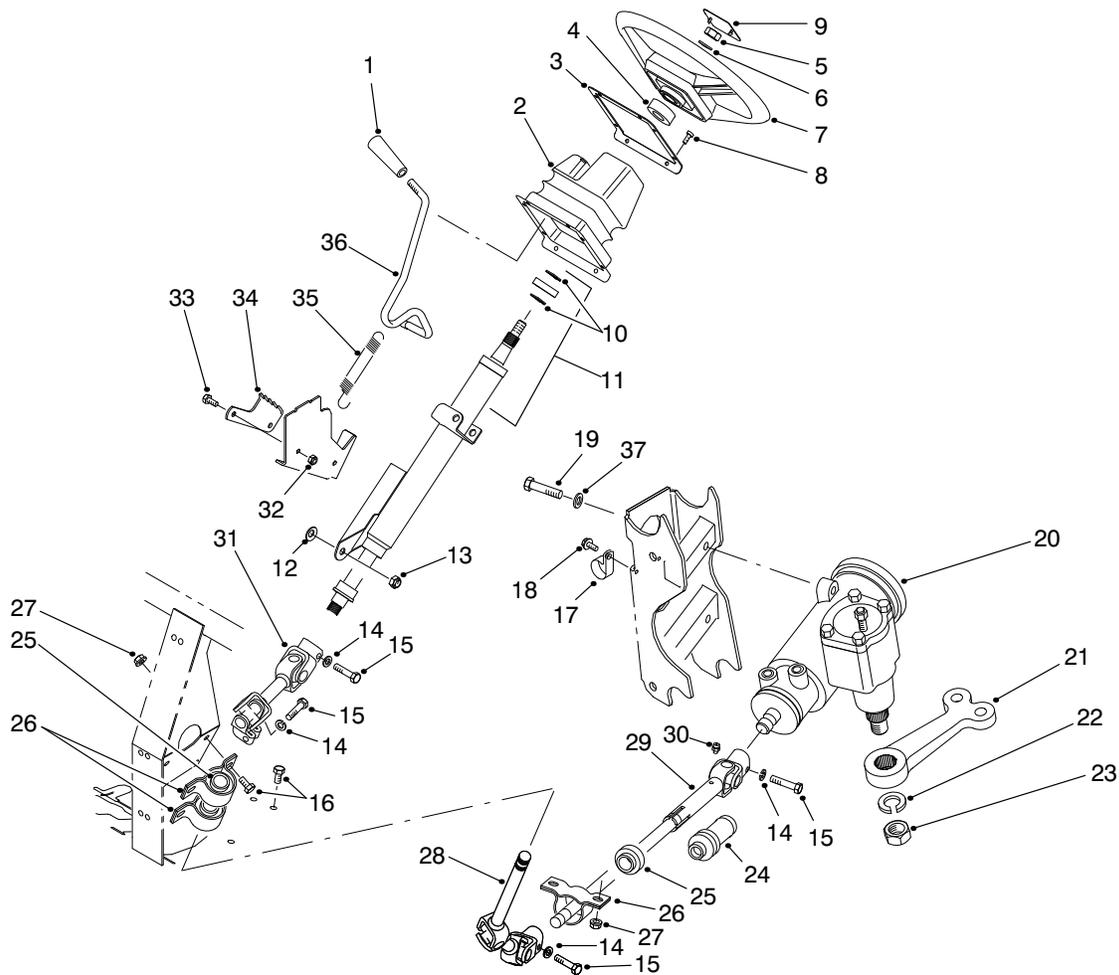


T-1584-1

## STEERING LINKAGE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1	21	87-0370	Arm-Pitman	1
2	87-3460	Boot-Tilt Steering	1	22	39-7420	Washer-Lock	1
3	87-4720	Plate-Steering Boot	1	23	39-7440	Nut-Lock	1
4	21-9260	Spacer	1	24	92-4157	Boot-Steering Shaft	1
5	3277-1	Nut-Hex.	1	25	87-2280	Bearing	3
6	48-8070	Washer-Flat	1	26	87-3250	Mount-Bearing	3
7	87-3820	Wheel-Steering	1	27	32128-20	Nut-HFH	6
8	32144-116	Screw-PH	8	28	92-4155	Asm-Slip Joint, Upper	1
9	87-3750	Cover-Steering Wheel	1	29	92-4156	Asm-Slip Joint, Lower (Incl. Ref. #24 & 30)	1
10	43-6550	Ring-Retaining	2	30	302-5	Fitting-Grease	1
11	92-4153	Asm-Steering Column (Incl. Ref. #10)	1	31	92-4154	Asm-Universal Joint	1
12	3290-455	Washer	1	32	3296-42	Nut-Lock	2
13	3296-59	Nut-Lock	1	33	321-3	Screw-HH	2
14	3253-4	Washer-Lock	4	34	87-3610	Bracket-Detent	1
15	48-7740	Screw-HH	4	35	65-5360	Spring-Extension	1
16	322-2	Screw-HH	6	36	87-3130	Lever-Tilt Steering	1
17	2412-105	Clamp-R	2	37	87-7480	Washer-Flat	3
18	32144-10	Screw-TAP	2	*	87-3100	Asm-Lower Shaft (Incl. Ref. #24 & 28-30)	1
19	93-7145	Screw-HH	3	*	87-3120	Steering Column & Shaft (Incl. Ref. #10, 11 & 31)	1
20	87-1500	Asm-Steering Gear (Incl. Ref. #22 & 23)	1				

\*Not Illustrated

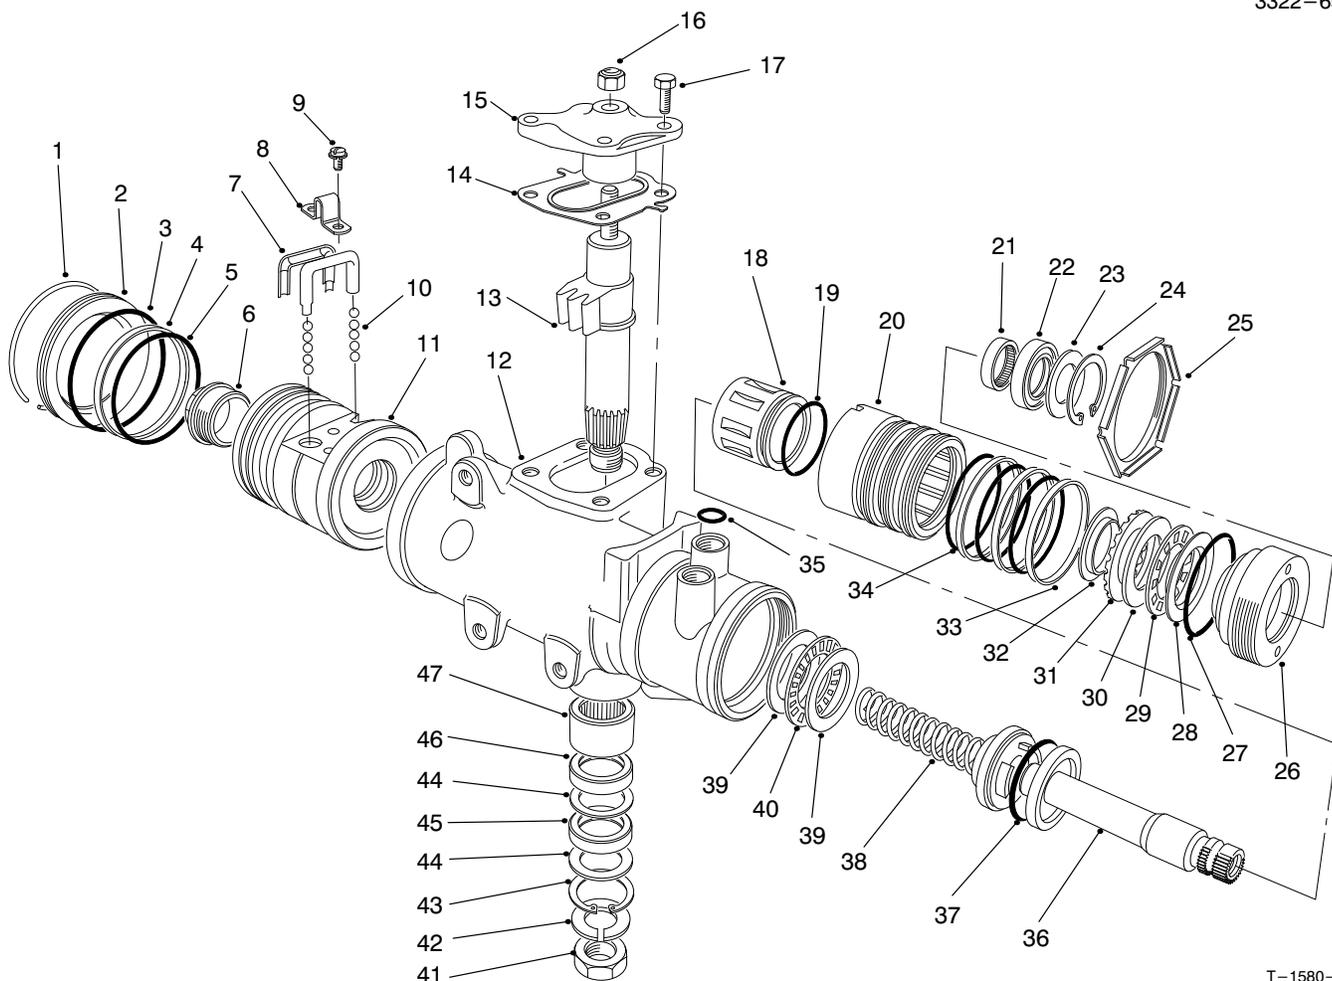


T-1580-1

## STEERING GEAR ASM NO. 87-1500

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2	92-4165	Plug-Housing End	1
3		Seal-Housing End Plug	1
4		Ring-Rack Piston	1
5		O-Ring, Rack Piston	1
6	18-4340	Plug-Rack Piston End	1
7	92-4168	Return-Guide Ball	2
8	18-4270	Clamp-Ball Return Guide	1
9	18-4260	Asm-Screw/Lockwasher	2
10	18-5190	Kit-Ball, Recirculating (Consists of 12 each of .2806 Dia. & .2812 Dia. Chrome Balls)	1
11		Nut-Rack Piston	1
12		Housing-Steering Gear	1
13		Gear-Pitman Shaft	1
14	28-8280	Kit-Seal, Side Cover (Incl. Ref. #17)	1
15		Cover-Housing Side	1
16	28-8220	Nut-Lash Adjuster	1
17	28-8210	Bolt-HFH	4
18		Spool Valve	1
19		O-Ring, Spool Valve	1
20		Valve Body	1
21	92-4169	Bearing-Needle	1
22		Seal-Stub Shaft	1
23		Seal-Stub Shaft Dust	1

Ref. No.	Part No.	Description	No. Used
24		Ring-Retaining	1
25	92-4159	Nut-Adjuster Plug Lock	1
26		Plug-Adjuster	1
27	28-8200	O-Ring	1
28		Race-Upper Bearing	1
29		Bearing-Roller, Thrust	1
30		Race-Thrust Bearing	1
31		Spacer-Thrust Bearing	1
32		Retainer-Bearing	1
33		Ring-Valve Body	3
34		O-Ring	3
35	39-7310	O-Ring	3
36		Shaft-Stub	1
37		O-Ring	1
38		Worm-Steering	1
39		Race-Thrust Bearing	2
40		Bearing-Roller, Thrust	1
41	39-7440	Nut-Pitman Arm	1
42	39-7420	Washer-Lock	1
43		Ring-Retaining	1
44		Washer-Seal, Backup	2
45		Seal-Pitman Shaft	1
46		Seal-Pitman Shaft	1
47	92-4170	Bearing-Pitman Shaft	1
*	92-4161	Asm-Cover Service Housing Side (Incl. Ref. #14-17)	1

\*Not Illustrated

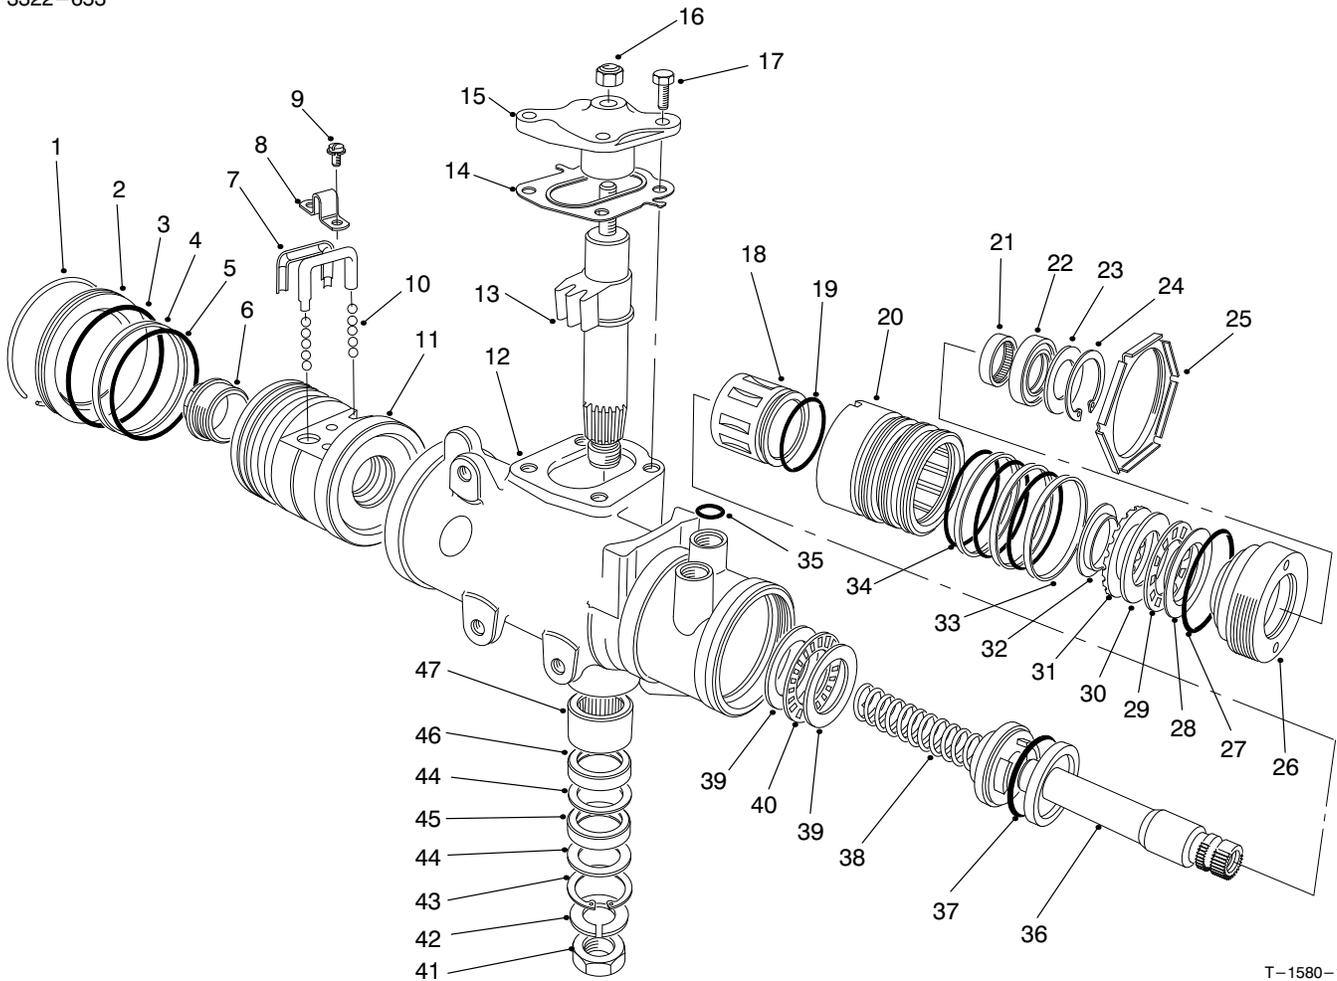


T-1580-1

## STEERING GEAR ASM NO. 87-1500

Ref. No.	Part No.	Description	No. Used
*	28-8270	Kit-Seal Service, End Plug (Incl. Ref. #1 & 3)	1
*	28-8290	Kit-Seal Service Rack/Piston (Incl. Ref. #4 & 5)	1
*	18-5180	Kit-Bearing, Lower Thrust (Incl. Ref. #39-40)	1
*	98-2962	Kit-Seal, Pitman Shaft (Incl. Ref. #43-46)	1
*	18-5170	Kit-Seal, Valve Ring (Incl. Ref. #19, 33, 34 & 37)	1
*	92-4163	Asm-Steering Housing (Incl. Ref. #12 & 43-47)	1
*	92-4167	Asm-Plug Service (Incl. Ref. #22-24 & 27)	1

Ref. No.	Part No.	Description	No. Used
*	92-4162	Pitman Shaft-Gear Service (Incl. Ref. #13, 14 & 17)	1
*	92-4158	Asm-Valve, Hyd. Gear (Incl. Ref. #18-20, 33, 34, 36 & 37)	1
*	92-4160	Kit-Bearing Service, Upper (Incl. Ref. #28-32)	1
*	92-4166	Asm-Rack/Piston/Nut (Incl. Ref. #1-11 & 38)	1
*	92-4164	Asm-Plug, Service Adjust. (Incl. Ref. #21-24 & 26-32)	1
*	87-1500	Steering Gear (Complete)	1


\*Not Illustrated

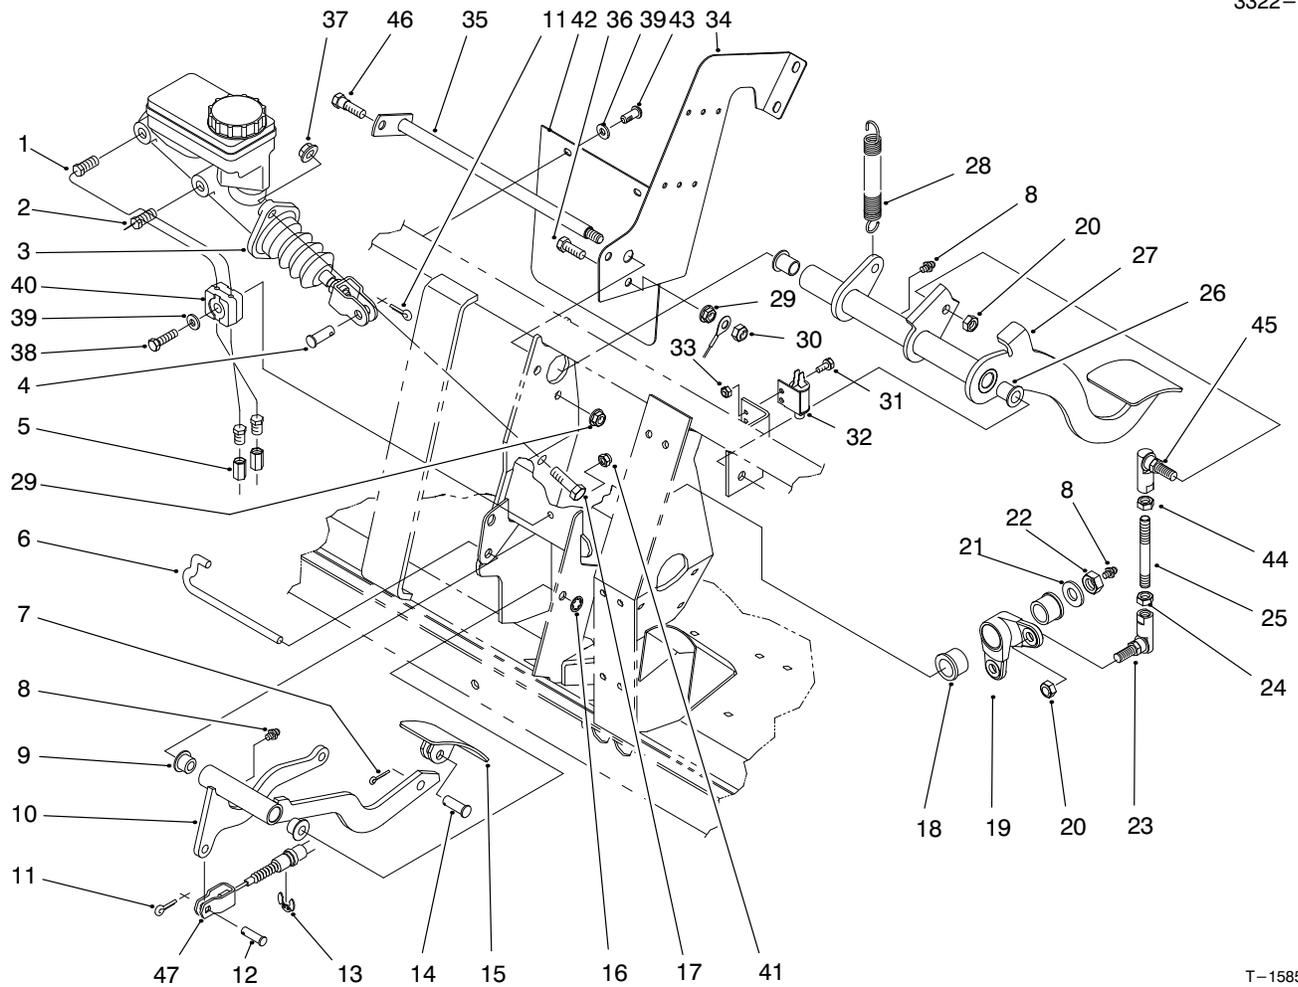

T-1585-2

## BRAKE & ACCELERATOR PEDAL ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3814	Tube-Hydraulic	1	25	94-5299	Rod-Link	1
2	94-3815	Tube-Hydraulic	1	26	256-155	Bushing-Flange	2
3	94-3800	Asm-Master Cylinder	1	27	93-8965	Pedal-Brake	1
4	283-2	Pin-Clevis	1	28	76-9430	Spring-Extension	1
5	87-3570	Union-Brake Line	2	29	32128-20	Nut-HFH	2
6	87-2880	Shaft-Accelerator Pedal	1	30	3296-29	Nut-Lock	1
7	3272-6	Pin-Cotter	1	31	3290-321	Screw-HFH	2
8	302-5	Fitting-Grease	3	32	55-7120	Switch-Brake Light	1
9	256-259	Bushing-Flange	2	33	3296-2	Nut-Lock	2
10	93-8961	Arm-Accelerator Pedal	1	34	94-3821	Plate-Center, Frame	1
11	3272-10	Pin-Cotter	2	35	95-7394	Shaft-Brake	1
12	283-30	Pin-Clevis	1	36	322-5	Screw-HH	1
13	32120-47	Ring-E	1	37	3290-357	Nut-Flange	2
14	283-85	Pin-Clevis	1	38	321-9	Screw-HH	1
15	93-8969	Pedal-Accelerator	1	39	3256-22	Washer-Flat	3
16	32151-56	Ring-Retaining	1	40	87-7660	Clamp-Tube	2
17	323-7	Screw-HH	2	41	3296-42	Nut-Lock	1
18	256-247	Bushing-Flange	2	42	94-5221	Flap-Master Cylinder	1
19	94-5223	Bell Crank	1	43	87-6620	Screw-Torx Pan Hd.	2
20	3296-6	Nut-Lock	2	44	3220-16	Nut-Hex, Jam	1
21	3256-26	Washer-Flat	1	45	68-3841	Asm-Ball Joint	1
22	3296-23	Nut-Lock	1	46	28-0540	Bolt-Shoulder	1
23	68-3840	Ball Joint	1	47	94-3836	Cable-Accelerator	1
24	3220-3	Nut-Jam	1				

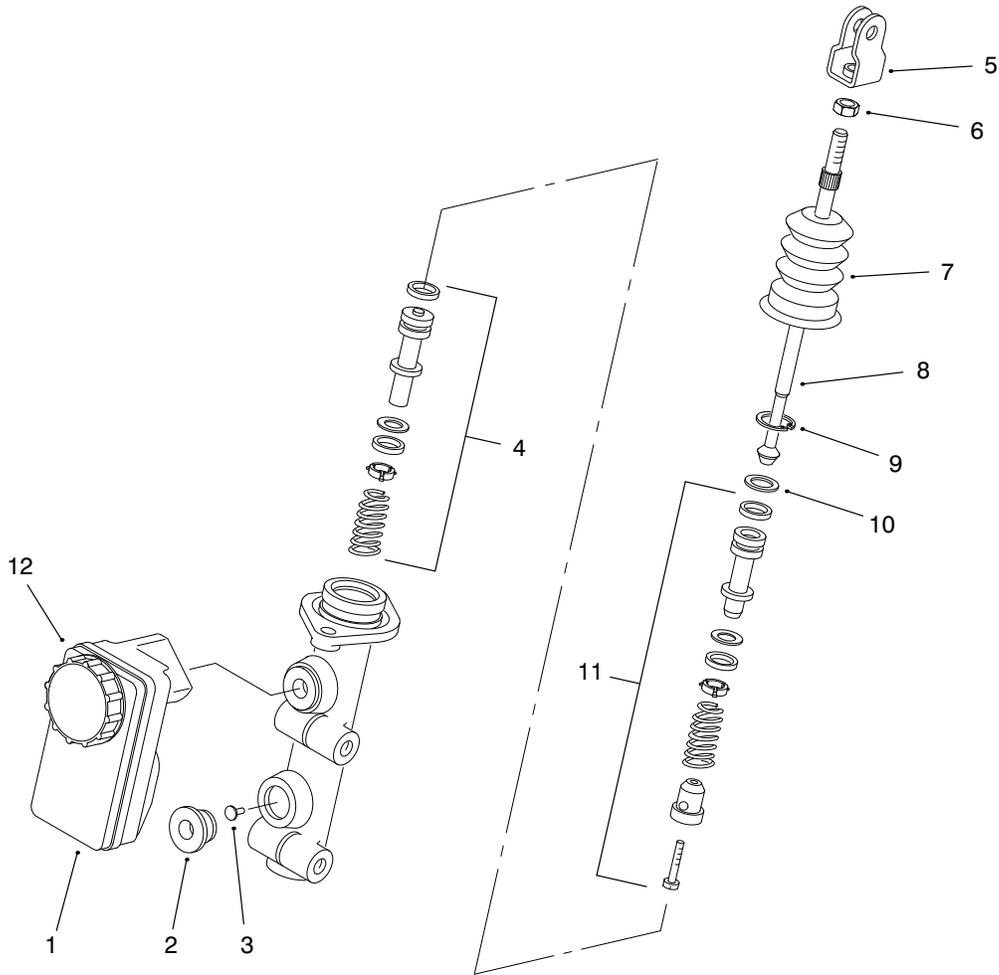


T-2339-1

## MASTER BRAKE CYLINDER NO. 94-3800

Ref. No.	Part No.	Description	No. Used
1	87-3040	Reservoir-Master Cylinder (Incl. Ref. #12)	1
2	93-8971	Seal-Port, Flange	2
3	92-4103	Pin-Stop	1
4	92-4102	Asm-Secondary Piston	1
5	92-4110	Clevis	1
6	21-0360	Nut-Hex.	1

Ref. No.	Part No.	Description	No. Used
7	94-5209	Cover-Dust	1
8	94-5210	Rod-Push	1
9	92-4109	Circlip	1
10	92-4108	Washer-Retainer	1
11	92-4101	Asm-Primary Piston	1
12	92-4112	Asm-Cap	1

PROTOTYPE

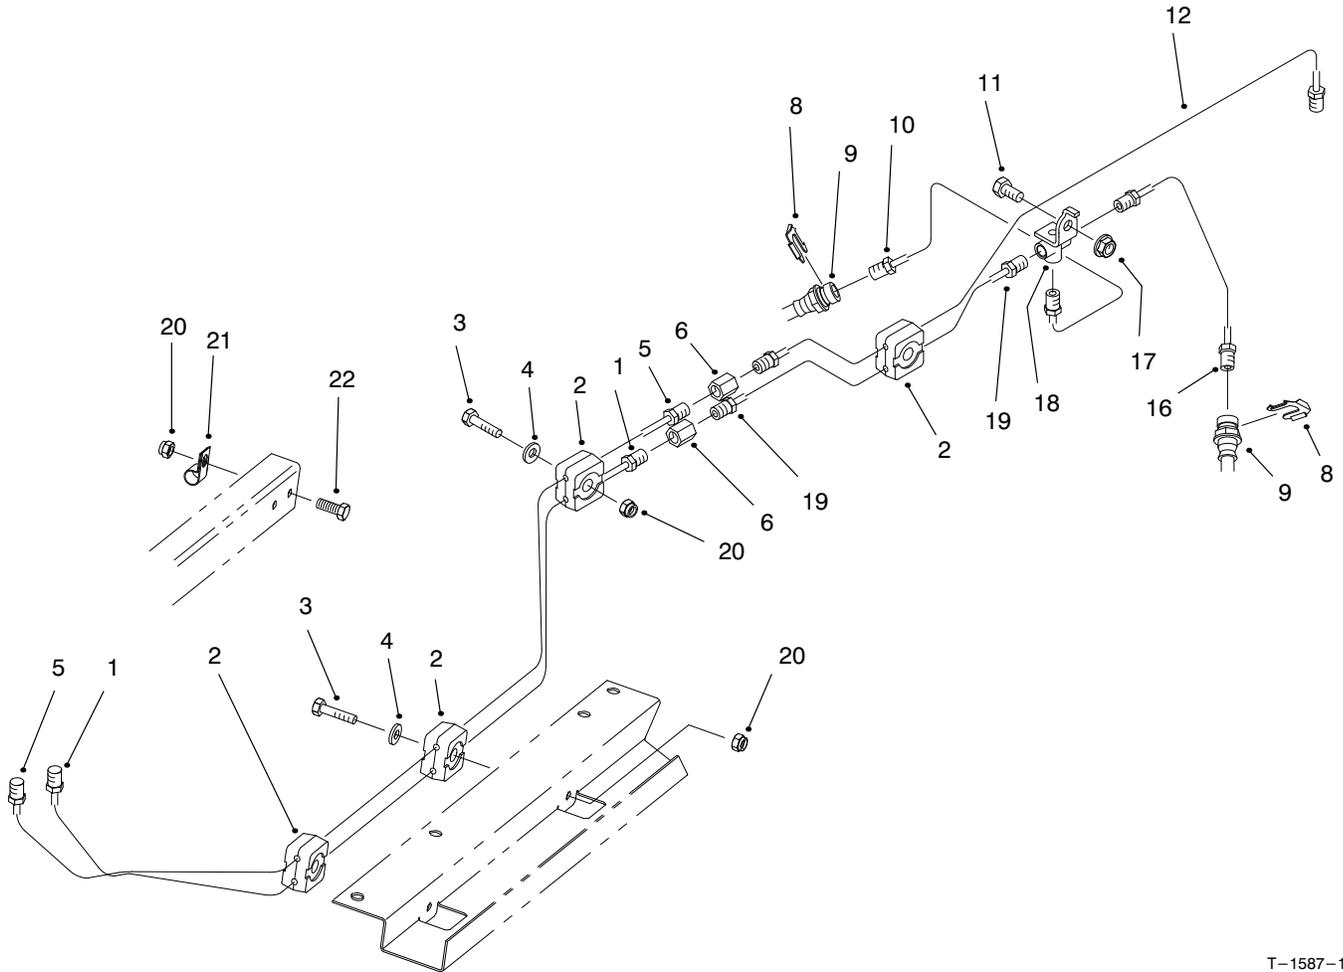


T-1587-1

## HYDRAULIC BRAKE LINE ROUTING ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3820	Tube-Brake Front	1	11	322-2	Screw-HH	1
2	87-7660	Clamp-Brake Line	8	12	94-3842	Tube-Brake Rear	1
3	321-9	Screw-HH	4	16	93-7082	Tube-Brake Front LH	1
4	3256-22	Washer-Flat	4	17	32128-20	Nut-Flange	1
5	94-3819	Tube-Brake Rear	1	18	87-3560	Tee-Brake Line	1
6	87-3570	Fitting-Union	2	19	93-7085	Tube-Brake Front	1
8	87-3580	Retainer-Brake Hose	2	20	3296-42	Nut-Lock	5
9	93-7123	Hose-Brake Front	2	21	2412-89	Clamp-R	1
10	93-7081	Tube-Brake Front RH	1	22	321-4	Screw-HH	1


PROTOTYPE


# HYDRAULIC SCHEMATIC (Models 07200 & 07202)

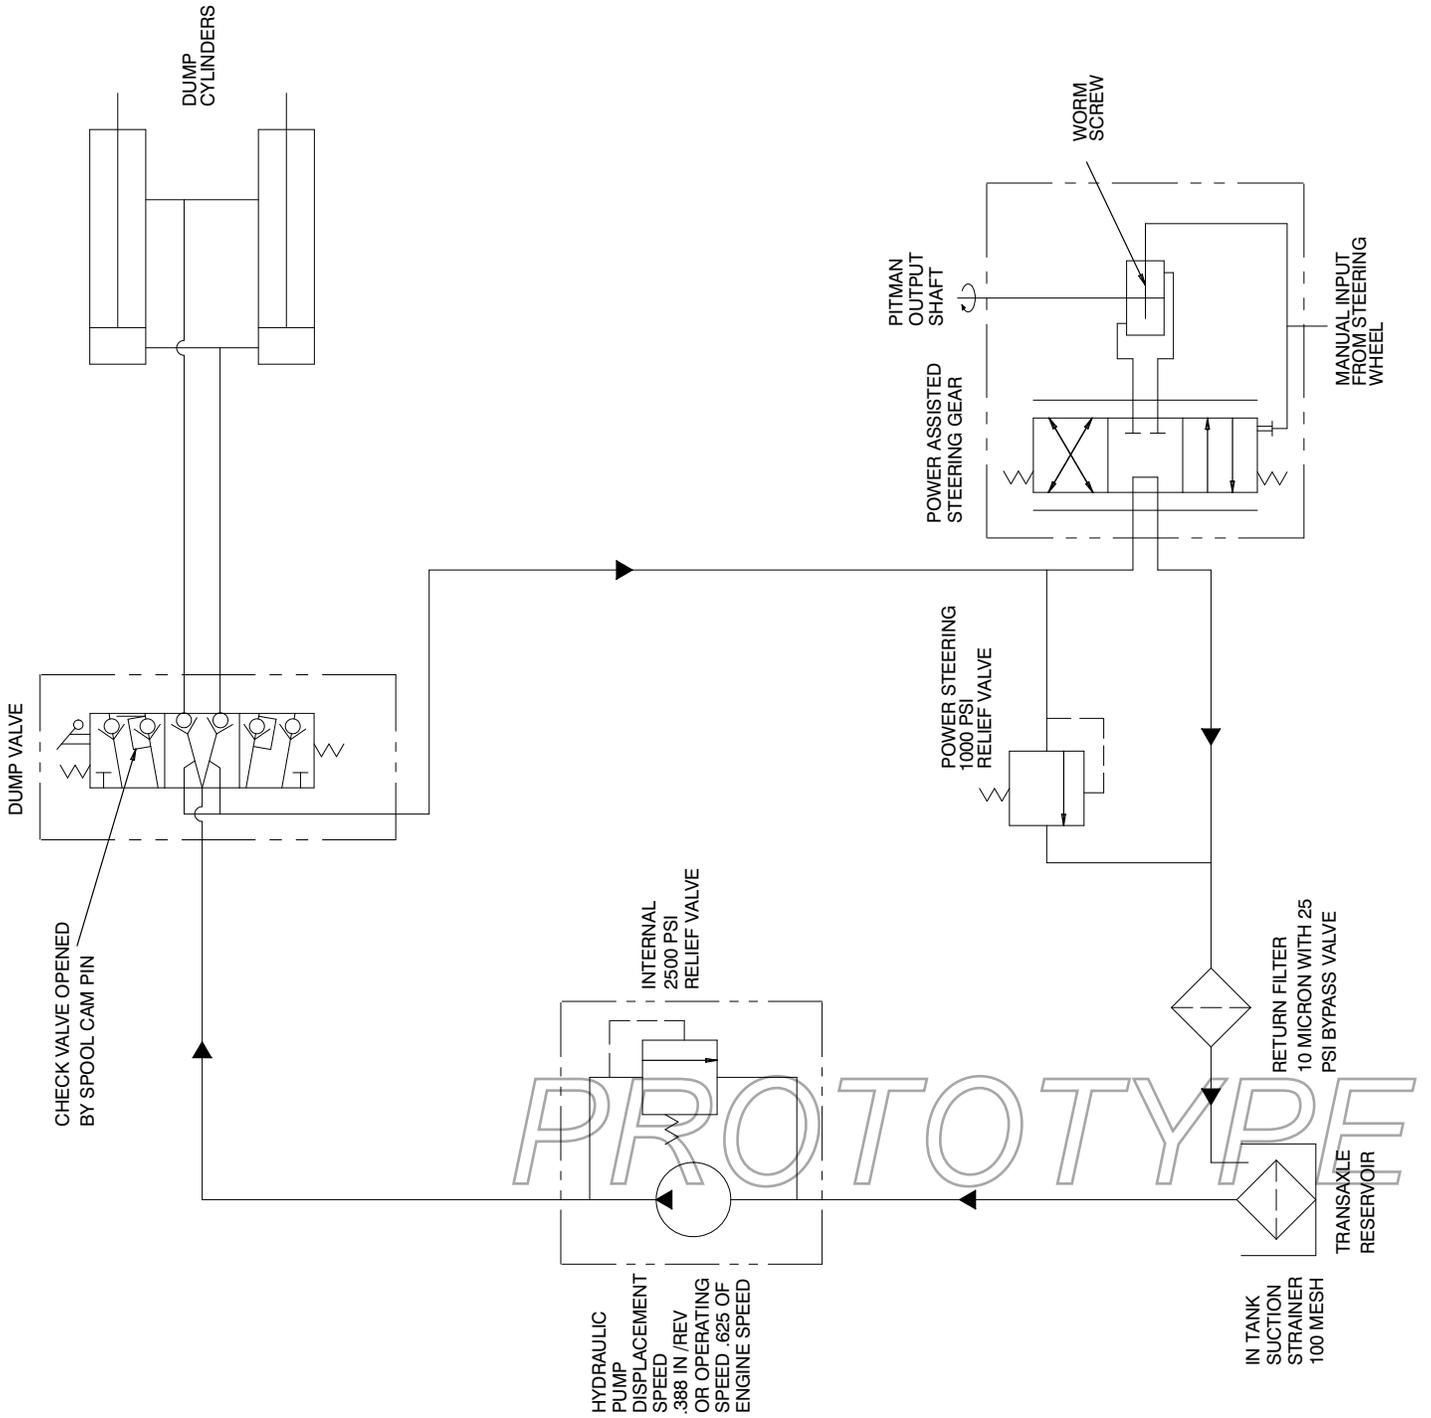

PROTOTYPE

# HYDRAULIC SCHEMATIC (Models 07200TC)

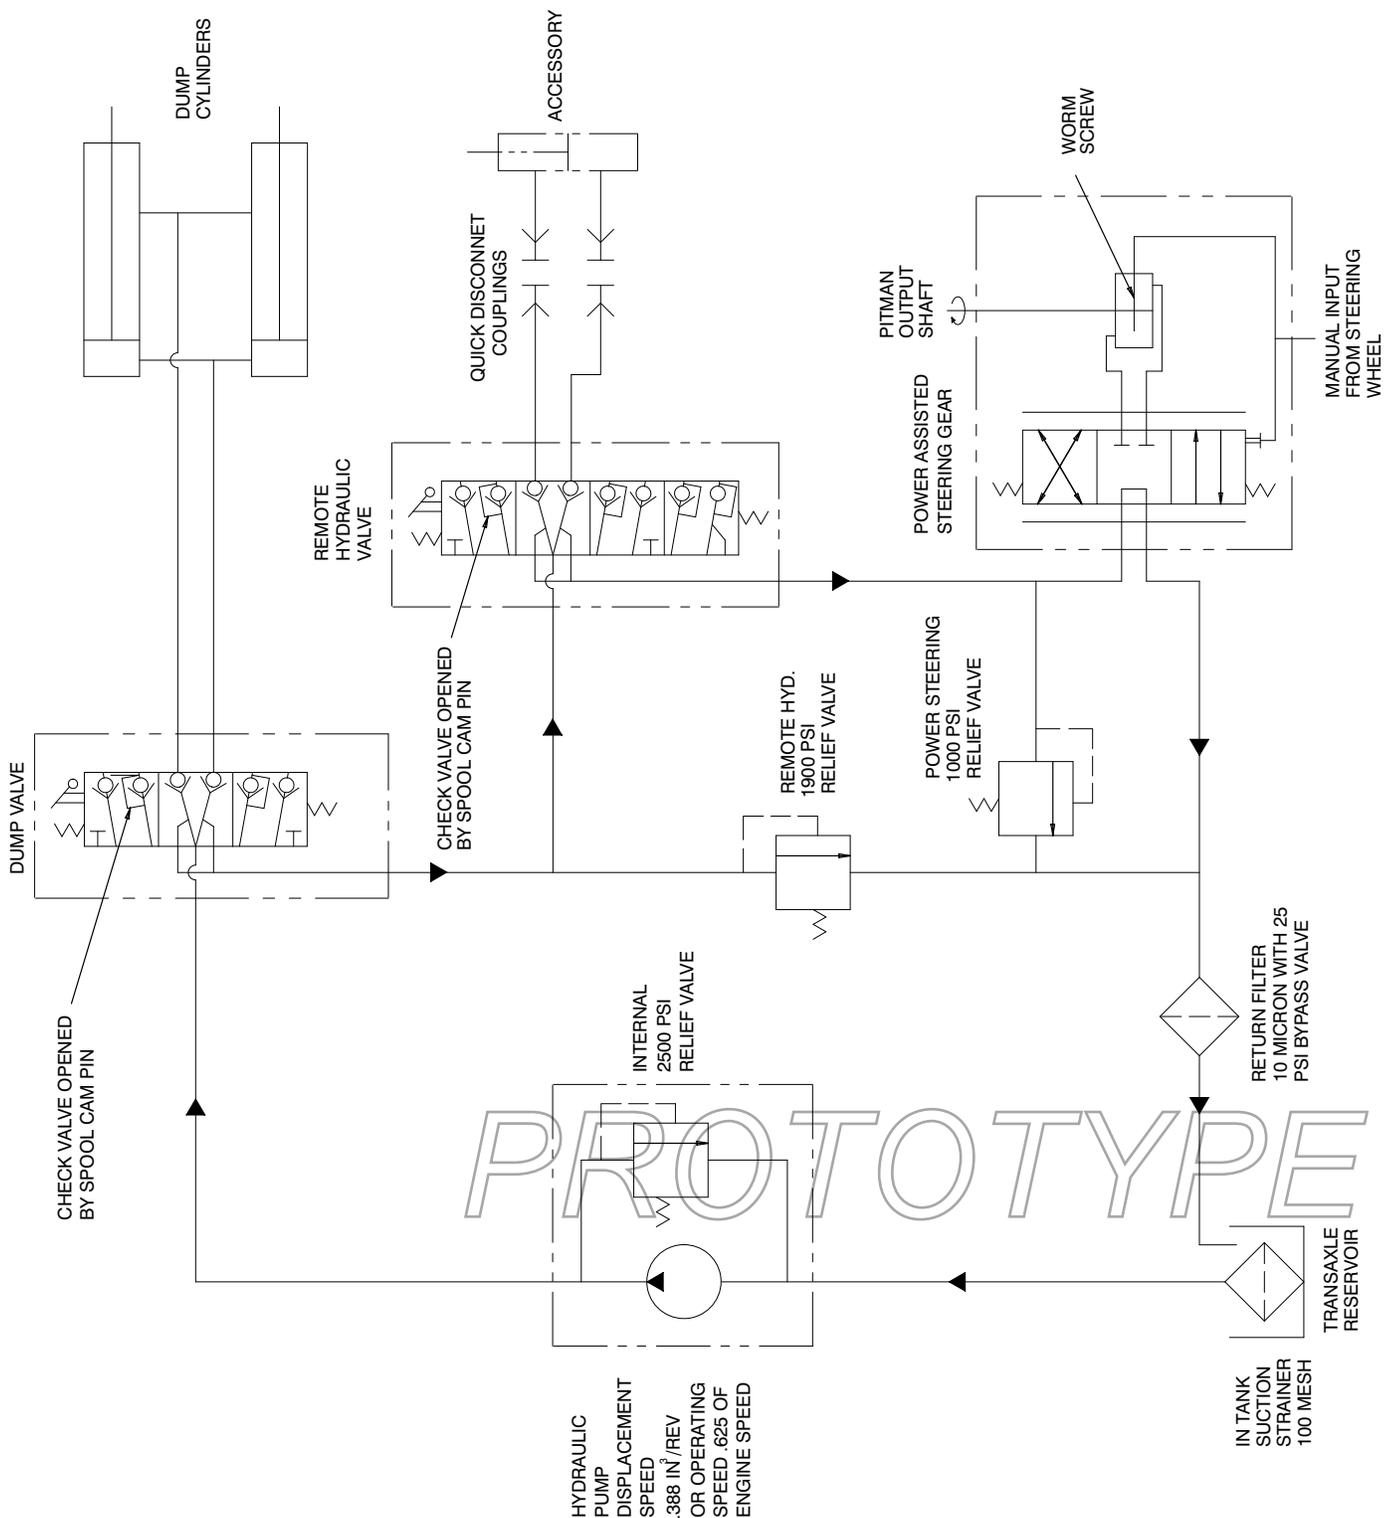

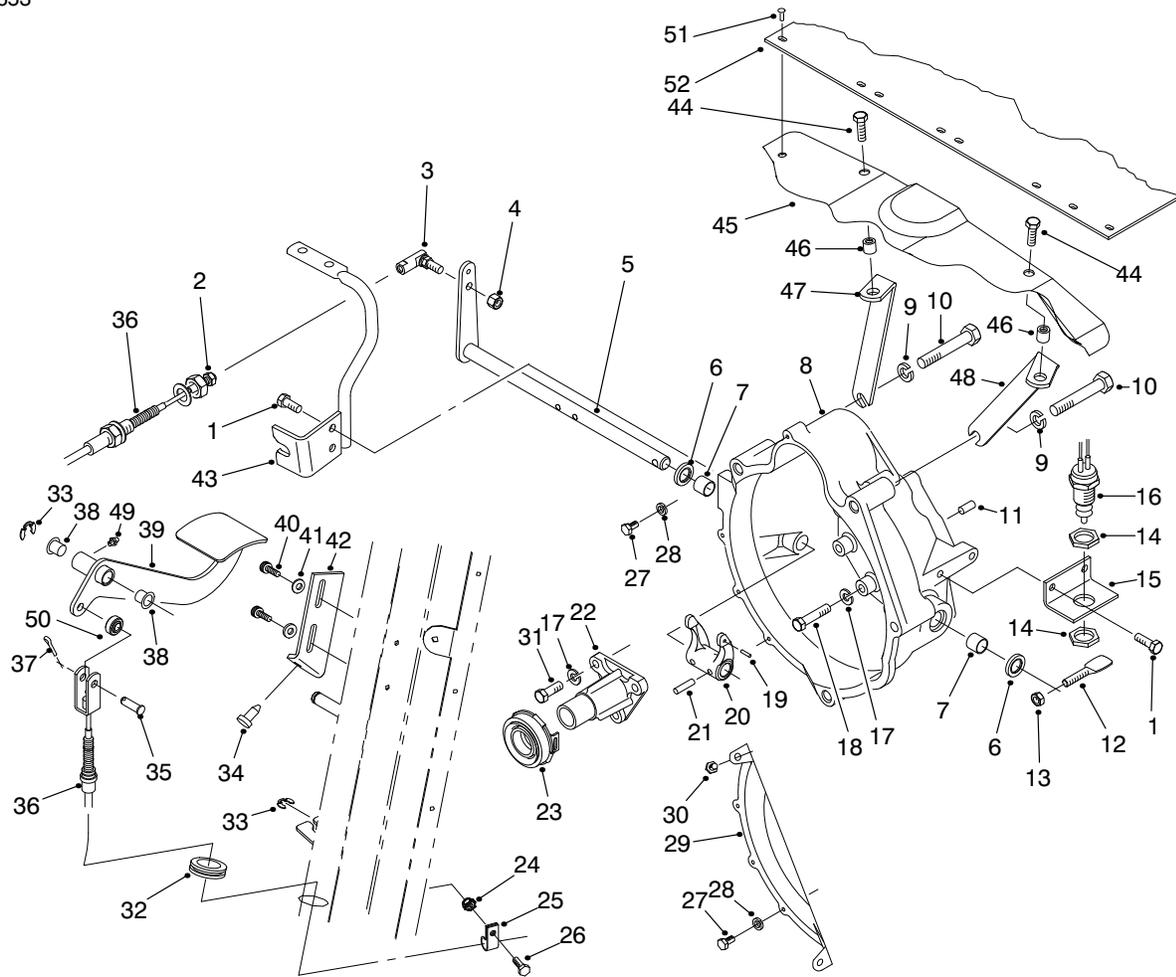


T-3147

## CLUTCH LINKAGE ASM

Ref. No.	Part No.	Description	No. Used
1	66-3160	Screw-HH	2
2	3220-2	Nut-Jam	1
3	2411-33	Joint-Ball	1
4	3296-4	Nut-Lock	1
5	87-5290	Shaft-Release	1
6	87-1920	Seal-Shaft	2
7	87-3770	Bushing-Sleeve	2
8	93-7121	Housing-Bell	1
9	3253-22	Washer-Lock	4
10	56-2150	Screw-HH	4
11	87-1910	Pin-Alignment	2
12	87-5360	Lever	1
13	3296-29	Nut-Lock	1
14	3218-20	Nut-Jam	2
15	87-5350	Bracket-Switch	1
16	87-5490	Switch-Neutral	1
17	42-9850	Washer-Lock	12
18	42-9530	Screw-HH	9
19	32121-7	Pin-Roll	1
20	87-5300	Fork-Clutch	1
21	32121-24	Pin-Roll	2
22	87-5320	Guide-Release	1
23	87-2100	Bearing-Release	1
24	32128-33	Nut-HFH	1
25	2412-89	Clamp-R	1
26	321-4	Screw-HH	1
27	48-7610	Screw-HH	4
28	3253-3	Washer-Lock	4


Ref. No.	Part No.	Description	No. Used
29	92-1938	Cover-Bell Housing	1
30	92-2129	Screw-HH	2
31	57-6380	Screw-HH	3
32	240-5	Grommet	1
33	32120-47	Ring-E	2
34	87-8460	Bumper	1
35	283-75	Pin-Clevis	1
36	99-1201	Asm-Clutch Cable (Incl. Ref. #2)	1
37	3272-10	Pin-Cotter	1
38	256-156	Bushing-Flange	2
39	99-1199	Pedal-Clutch	1
40	87-6620	Screw-Torx Pan Hd.	2
41	3256-22	Washer-Flat	2
42	87-8710	Tab-Clutch	1
43	87-8480	Bracket-Clutch	1
44	3234-5	Screw-HHF (Europe)	2
45	92-1345	Cover-Engine (Europe)	1
46	32148-8	Nut-Insert (Europe)	2
47	93-8956	Asm-Rear Brace, RH (Europe) (Incl. Ref. #46)	1
48	93-8955	Asm-Rear Brace, LH (Europe) (Incl. Ref. #46)	1
49	302-5	Fitting-Grease	1
50	99-1202	Rod End	1
51	146489	Rivet	8
52	99-1212	Cover-Engine (Europe)	1

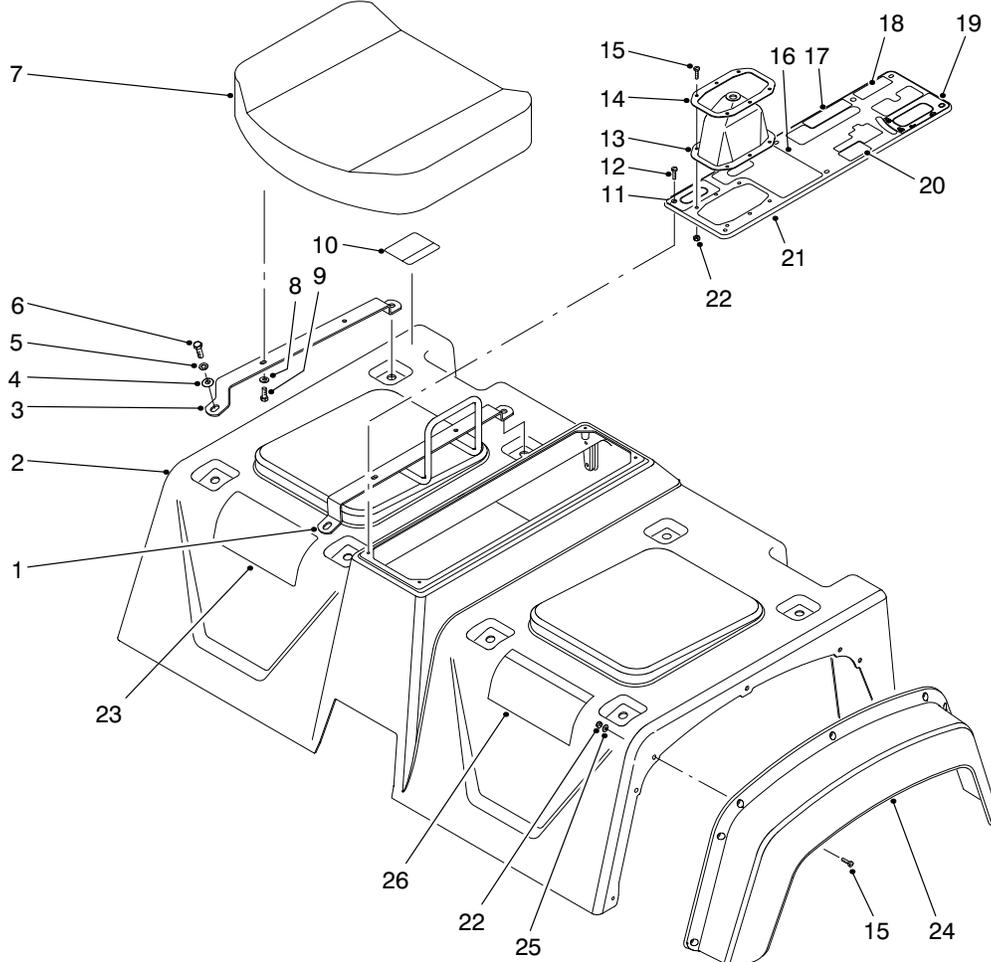

T-1589

## SEAT BASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-6890	Hold-Hand	1	18	92-2609	Decal-Remote Hyd.	1
2	87-7070	Asm-Skirt (Incl. Ref. #10 & 26)	1	18	93-9866	Decal-Remote Hyd. (Europe)	1
3	87-3800	Bracket-Seat Bottom	3	18	92-5346	Decal-Remote Hyd. (Japan)	1
4	3256-23	Washer-Flat	8	19	87-6010	Decal-Dump Hyd.	1
5	3253-4	Washer-Lock	8	19	93-9444	Decal-Dump Hyd. (Europe)	1
6	322-5	Screw-HH	8	19	92-5353	Decal-Dump Hyd. (Japan)	1
7	87-5060	Cushion-Seat Bottom	2	20	87-6020	Decal-Brake	1
8	3256-22	Washer-Flat	8	20	93-9443	Decal-Brake (Europe)	1
9	321-4	Screw-HH	8	20	92-5304	Decal-Brake (Japan)	1
10	87-5930	Decal-Caution	1	21	87-8080	Asm-Console Plate (Incl. Ref. #11 & 16-20)	1
10	93-9448	Decal-Caution (Europe)	1	22	3296-2	Nut-Lock	20
10	92-5325	Decal-Caution (Japan)	1	23	99-1216	Decal-Quick Ref.	1
11	87-5960	Decal-Axle	1	23	99-9350	Decal-Quick Ref. (NL)	1
11	93-9857	Decal-Axle (Europe)	1	23	99-9351	Decal-Quick Ref. (F)	1
11	92-5318	Decal-Axle (Japan)	1	23	99-9352	Decal-Quick Ref. (D)	1
12	32144-52	Screw-PH TAP	6	23	99-9353	Decal-Quick Ref. (I)	1
13	87-8620	Boot-Shift	1	23	99-9355	Decal-Quick Ref. (ES)	1
14	87-3760	Plate-Shift Boot	1	23	99-9356	Decal-Quick Ref. (S)	1
15	3250-13	Screw-PPH	20	23	99-9394	Decal-Quick Ref. (DK)	1
16	87-5970	Decal-PTO	1	23	99-9396	Decal-Quick Ref. (SF)	1
16	93-9861	Decal-PTO (Europe)	1	23	99-9395	Decal-Quick Ref. (N)	1
16	92-5360	Decal-PTO (Japan)	1	23	99-9397	Decal-Quick Ref. (P)	1
17	87-6000	Decal-Differential	1				
17	93-9430	Decal-Differential (Europe)	1				
17	92-5311	Decal-Differential (Japan)	1				

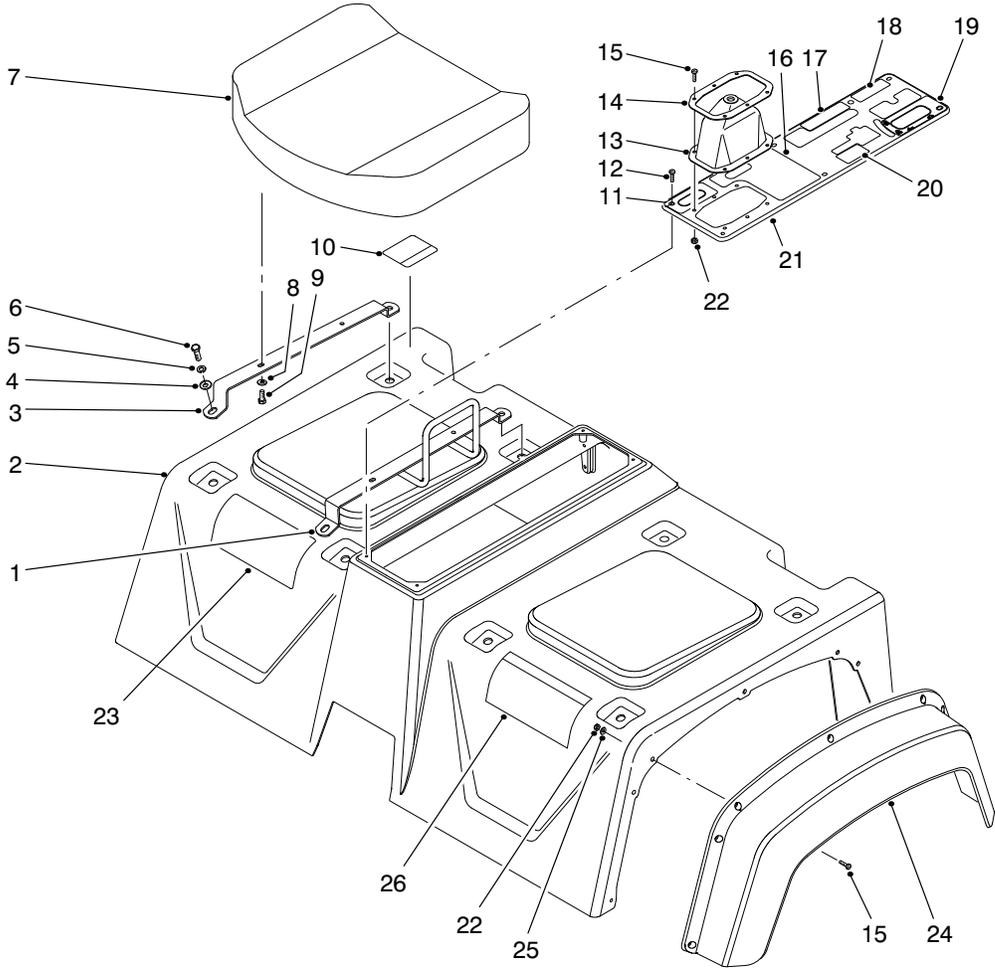


T-1589

### SEAT BASE ASM (Continued)

Ref. No.	Part No.	Description	No. Used
23	99-9354	Decal-Quick Ref. (Japan)	1
24	87-9480	Fender-Front	2
25	3256-61	Washer-Flat	14

Ref. No.	Part No.	Description	No. Used
26	87-5920	Decal-Danger	1
26	93-9860	Decal-Danger (Europe)	1
26	92-6408	Decal-Danger (Japan)	1


PROTOTYPE

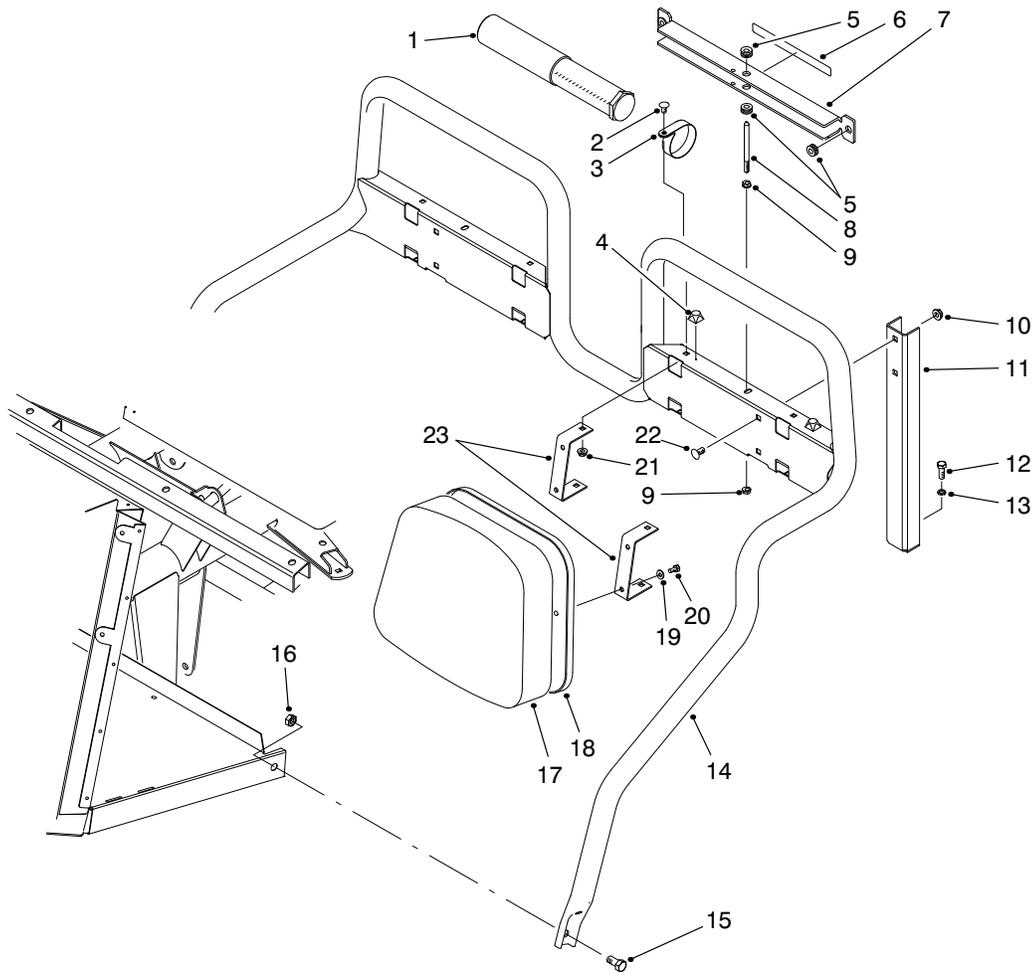

T-1779-1

## SEAT BACK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube-Manual	1	11	87-2510	Bracket-Seat Frame	2
2	3230-18	Bolt-CARR	8	12	323-6	Screw-HH	2
3	2412-133	Clamp-R	2	13	3253-21	Washer-Lock	2
4	111071	Bumper	2	14	87-6170	Frame-Seat	1
5	92-5972	Grommet	4	15	325-4	Screw-HH	2
6	87-7930	Decal-Danger	1	16	3296-23	Nut-Lock	2
6	93-9852	Decal-Danger (Europe)	1	17	87-6290	Cushion-Seat Back	2
6	92-6415	Decal-Danger (Japan)	1	18	87-6280	Plate-Seat Back	2
7	87-7950	Asm-Bed Support (Incl. Ref. #5 & 6)	1	19	3256-22	Washer-Flat	8
8	87-7940	Stud	1	20	321-4	Screw-HH	8
9	32128-44	Nut-HFH	2	21	32128-20	Nut-Flange Lock	8
10	3290-357	Nut-HFH	4	22	3231-21	Bolt-CARR	4
				23	87-6240	Bracket-Seat Back	4

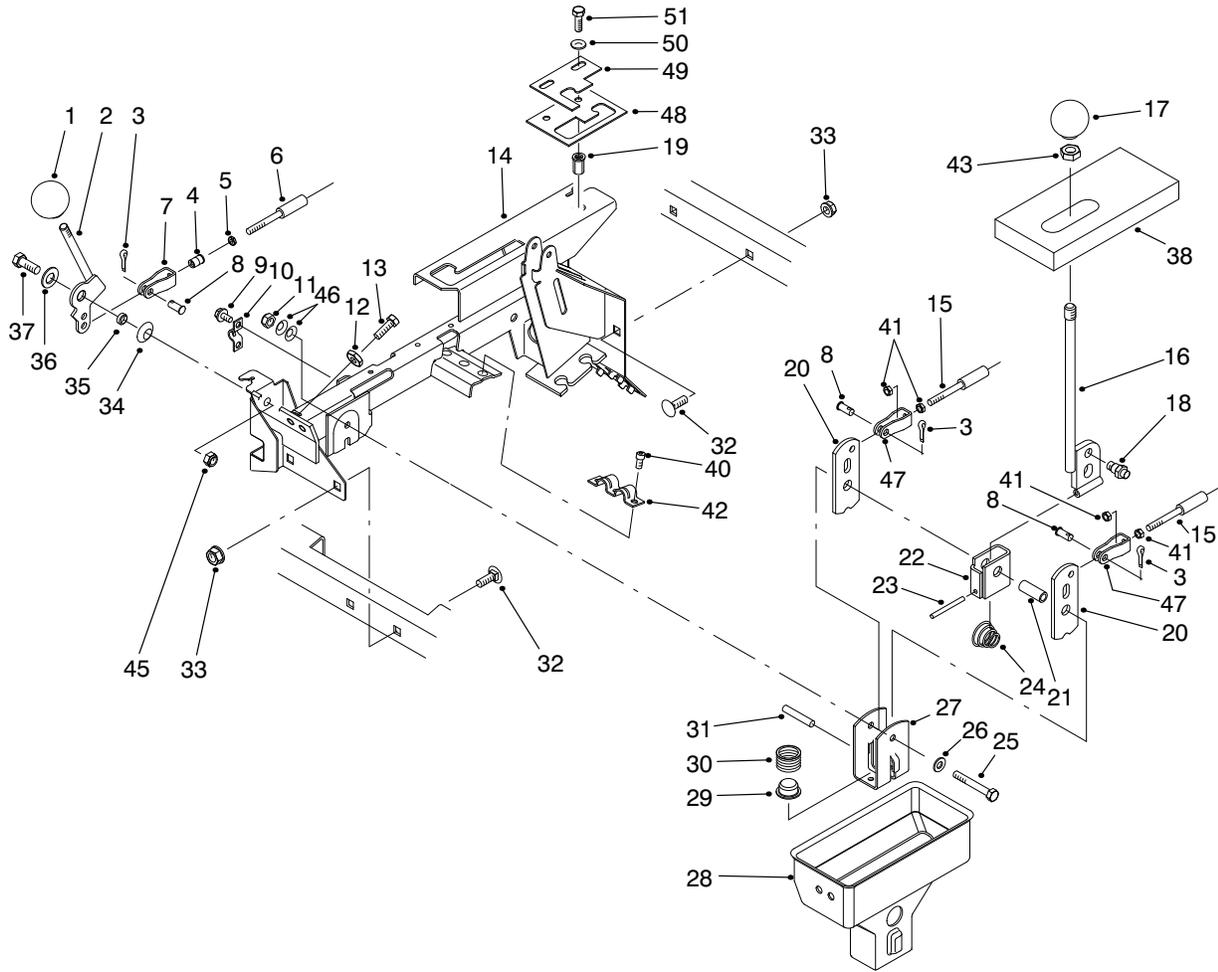


T-2629

## HI-LO & SHIFT LEVER ASM

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	87-4350	Lever-Hi-Lo	1
3	3272-6	Pin-Cotter	3
4	32148-15	Insert-Threaded	1
5	3219-14	Nut	1
6	87-4420	Asm-Hi-Lo Cable (Incl. Ref. #5)	1
7	87-7160	Asm-Clevis, Cable (Incl. Ref. #4)	1
8	283-62	Pin-Clevis	3
9	32144-4	Screw-HFH	2
10	87-4340	Clamp-Cable	1
11	3296-58	Nut-Lock	2
12	3220-3	Nut-Jam	2
13	3211-8	Screw-HH	2
14	94-5202	Asm-Lever Support (Incl. Ref. #19)	1
15	87-4260	Asm-Cable (Incl. Ref. #41)	2
16	87-2040	Lever-Shift	1
17	87-6720	Knob	1
18	87-3650	Pin-Shift	1
19	32148-7	Nut-Clinch	2
20	87-3540	Link-Shift	2
21	87-2520	Tube-Pivot	1
22	87-6040	Bracket-Shifter	1
23	32121-48	Pin-Roll	1
24	87-2900	Spring-Compression	1


Ref. No.	Part No.	Description	No. Used
25	322-12	Screw-HH	1
26	87-8640	Washer-Flat	1
27	87-3520	Clevis	1
28	87-2260	Boot-Shift Lower	1
29	87-3530	Button-Shifter	1
30	87-3660	Spring-Compression	1
31	3290-507	Pin-Dowel	1
32	3231-21	Bolt-CARR	4
33	3290-357	Nut-HFH	4
34	3290-221	Washer-Spring	1
35	76-9100	Spacer-Hi-Lo Lever	1
36	49-9150	Washer-Flat	1
37	323-6	Screw-HH	1
38	87-6570	Foam-Seal	1
40	65-5220	Screw-HSH	3
41	3220-1	Nut-Jam	4
42	87-4960	Clamp-Cable	1
43	3218-18	Nut-Jam	1
45	3296-39	Nut-Lock	1
46	3290-456	Washer-Belleville	2
47	87-2310	Clevis-Cable	2
48	87-4670	Plate-Detent Lower (Model 07200TC)	1
49	87-4680	Plate-Detent Upper (Model 07200TC)	1
50	3256-23	Washer-Flat	2
51	322-5	Screw-HH	2

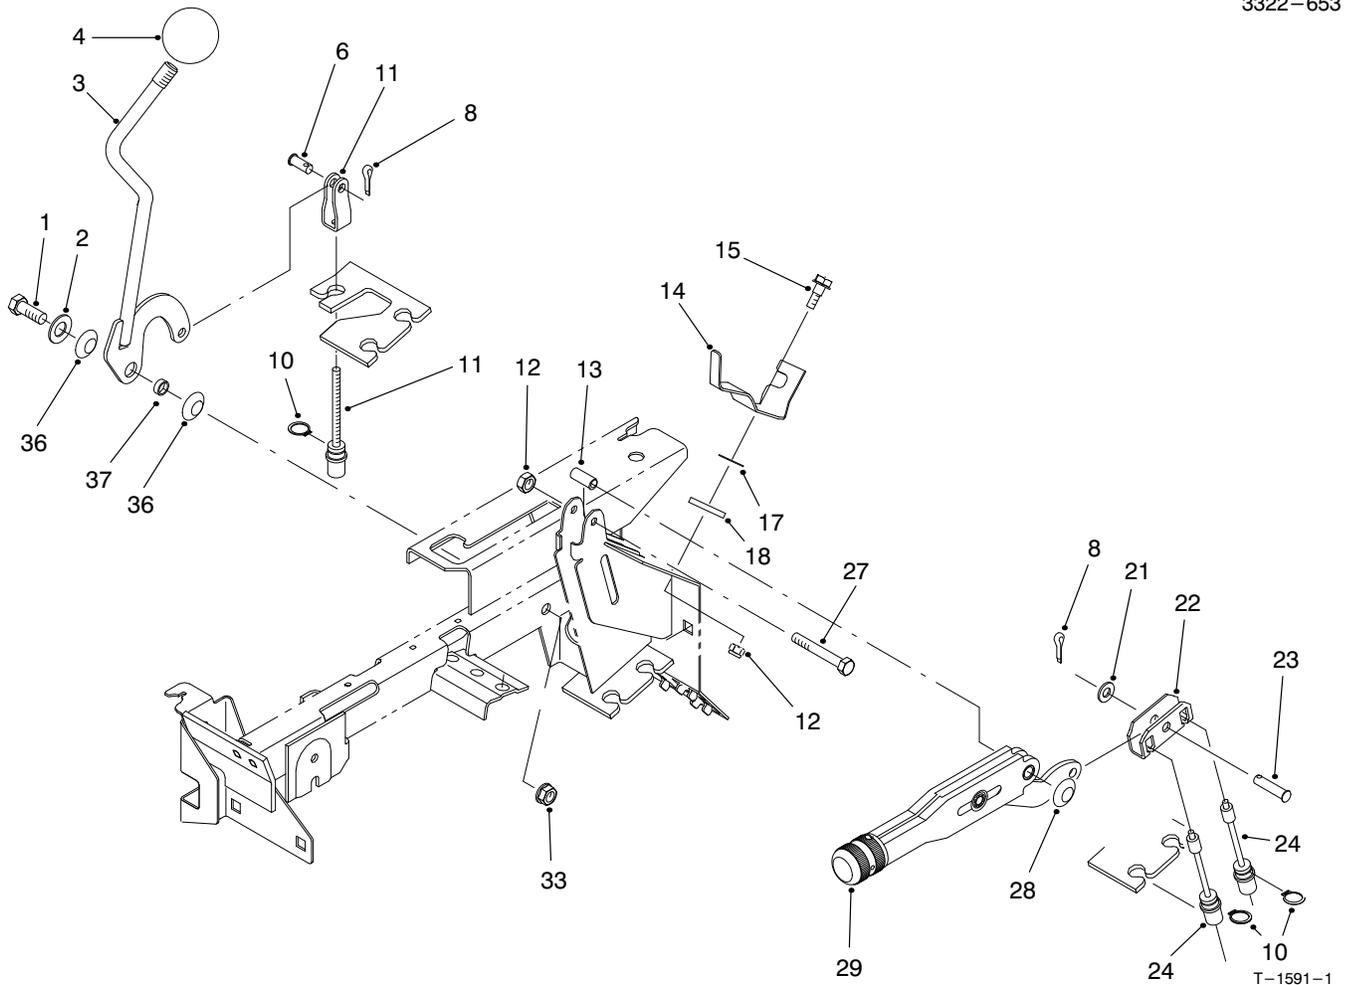

## DIFFERENTIAL LOCK & PARKING BRAKE ASM

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-HH	1
2	49-9150	Washer-Flat	1
3	87-5030	Lever-Differential Lock	1
4	233-48	Knob	1
6	283-62	Pin-Clevis	1
8	3272-6	Pin-Cotter	1
10	32120-47	Ring-Retaining	3
11	87-4460	Differential Lock Cable	1
12	3296-42	Nut-Lock	1
13	87-4710	Spacer-Barking Brake	1
14	87-6640	Lever-Dump Stop	1
15	42-3560	Screw-Shoulder	1

Ref. No.	Part No.	Description	No. Used
17	3290-478	Washer-Belleville	1
18	71-5320	Washer-Flat	1
21	3256-23	Washer-Flat	1
22	87-3480	Plate-Brake Equalizer	1
23	94-3829	Pin-Clevis	1
24	87-8240	Cable-Parking Brake	2
27	321-9	Screw-HH	1
28	3290-477	Washer-Curved	1
29	87-2710	Lever-Parking Brake	1
33	3296-39	Nut-Lock	1
36	3290-221	Washer-Spring	2
37	76-2290	Spacer	1

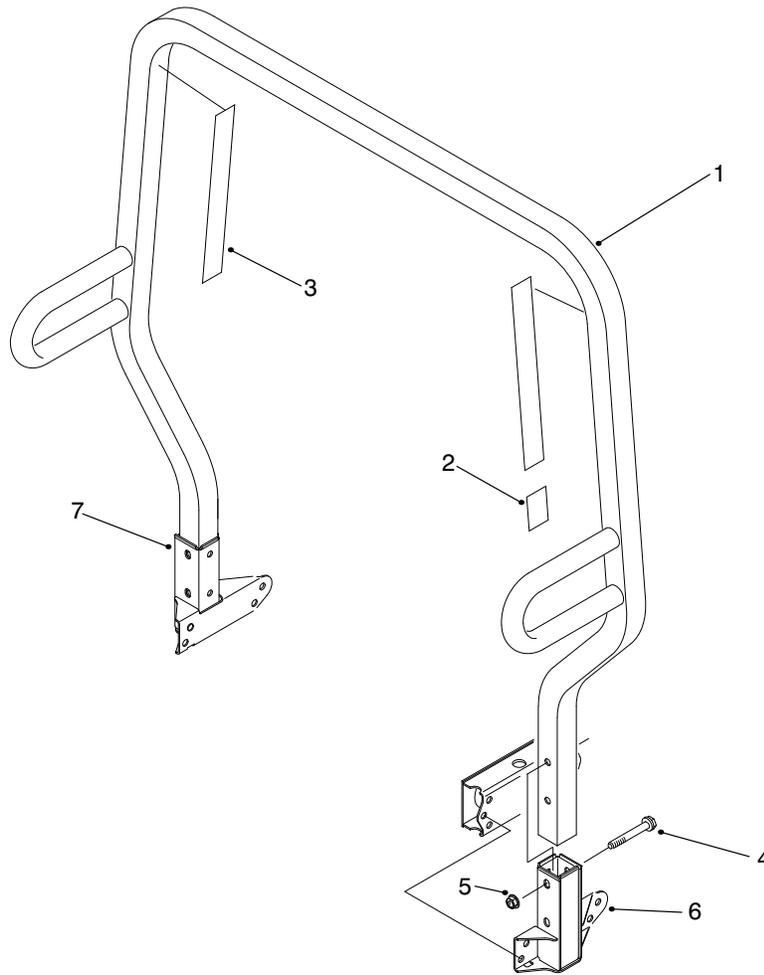


T-1592-1

## ROLL OVER PROTECTION SYSTEM (R.O.P.S.) ASM

Ref. No.	Part No.	Description	No. Used
1	87-7090	Asm-Frame, R.O.P.S. (Incl. Ref. #2 & 3)	1
2	87-5940	Decal-Rollover	1
2	93-9850	Decal-Rollover (Europe)	1
2	92-5388	Decal-Rollover (Japan)	1
3	87-5980	Decal-R.O.P.S.	2

Ref. No.	Part No.	Description	No. Used
3	93-9859	Decal-R.O.P.S. (Europe)	2
3	92-5381	Decal-R.O.P.S. (Japan)	2
4	3234-40	Screw-HHF	4
5	32128-23	Nut-HFH	4
6	87-6950	Receiver-LH	1
7	87-6960	Receiver-RH	1

PROTOTYPE

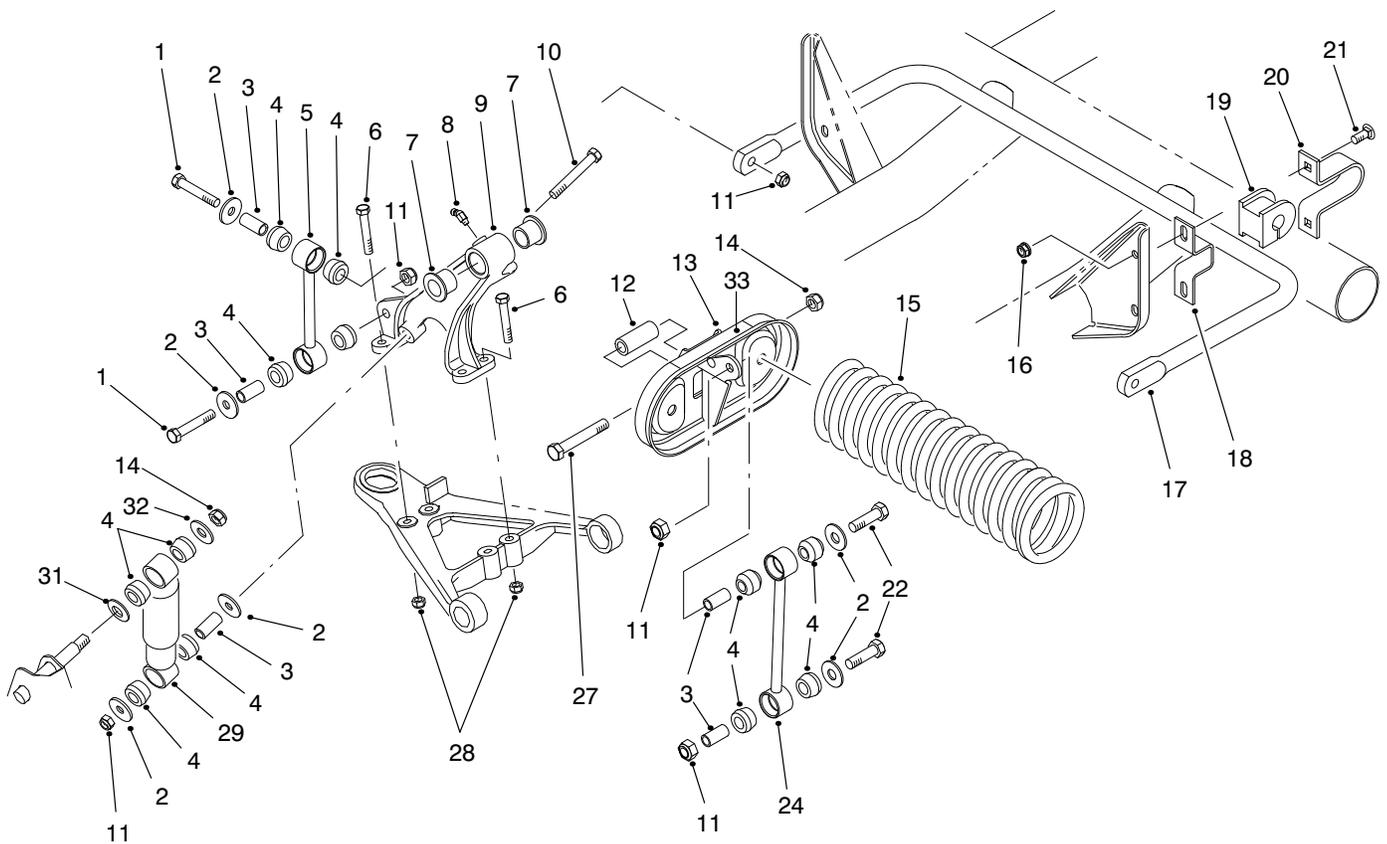


T-1593-1

## FRONT SUSPENSION ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	324-10	Screw-HH	4	16	3290-357	Nut-HFH	4
2	87-5330	Washer	8	17	87-3850	Bar-Anti-Sway	1
3	87-3600	Spacer	10	18	87-3890	Bracket-Anti-Sway Bar	2
4	87-3920	Bushing-Rubber	16	19	87-3910	Bushing-Anti-Sway Bar	2
5	87-3860	Link-Anti-Sway Bar	2	20	87-4010	Clamp-Anti-Sway Bar	2
6	323-12	Screw-HH	8	21	3231-3	Bolt-CARR	4
7	33-3090	Bushing-Flange	4	22	324-9	Screw-HH	4
8	302-11	Fitting-Grease	1	24	87-2480	Link-Stabilizer	2
9	87-0150	Tower-Control Arm RH	1	27	325-13	Screw-HH	4
*	87-0160	Tower-Control Arm LH	1	28	3296-39	Nut-Lock	8
10	324-13	Screw-HH	2	29	87-3110	Absorber-Shock	2
11	3296-48	Nut-Lock	10	31	3256-27	Washer-Flat	2
12	87-2500	Sleeve-Spring Pivot	2	32	3256-6	Washer-Flat	2
13	87-7150	Asm-Cradle, Spring (Incl. Ref. #33)	2	33	44-0760	Decal-Warning	2
14	3296-23	Nut-Lock	4	33	93-9879	Decal-Warning (Europe)	2
15	87-0690	Spring-Compression	2	33	92-6493	Decal-Warning (Japan)	2

\*Not Illustrated

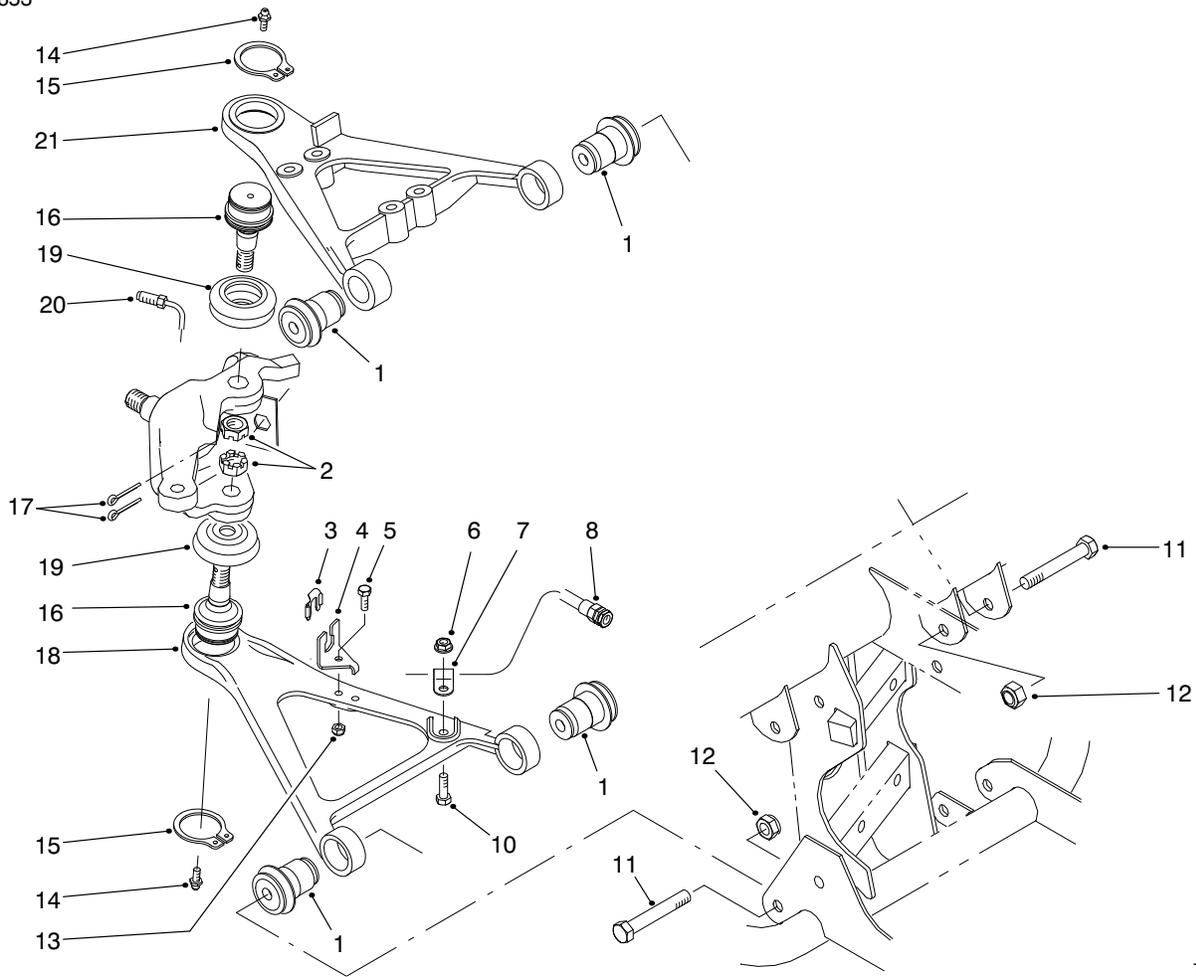


T-1594-1

## FRONT SUSPENSION CONTROL ARM ASM

Ref. No.	Part No.	Description	No. Used
1	87-1450	Bushing-Rubber	8
2	32136-2	Nut-Slotted	2
3	87-3580	Retainer-Brake Hose	2
4	87-2870	Bracket-Brake Hose	2
5	321-6	Screw-HH	2
6	32128-20	Nut-HFH	2
7	2412-10	Clamp-R	2
8	93-7123	Hose-Brake Front	2
10	322-5	Screw-HH	2
11	325-13	Screw-HH	8
12	3296-23	Nut-HFH	8
13	3296-42	Nut-Lock	2

Ref. No.	Part No.	Description	No. Used
14	302-5	Fitting-Grease	4
15	32151-104	Ring-Snap	4
16	87-1430	Joint-Ball	4
17	3272-12	Pin-Cotter	4
18	87-0210	Arm-Control Lower RH	1
*	87-0220	Arm-Control Lower LH	1
19	87-2420	Boot	4
20	87-2800	Tube-Brake RH	1
*	87-2790	Tube-Brake LH	1
21	93-7135	Arm-Control Upper RH	1
*	93-7133	Arm-Control Upper LH	1

\*Not Illustrated

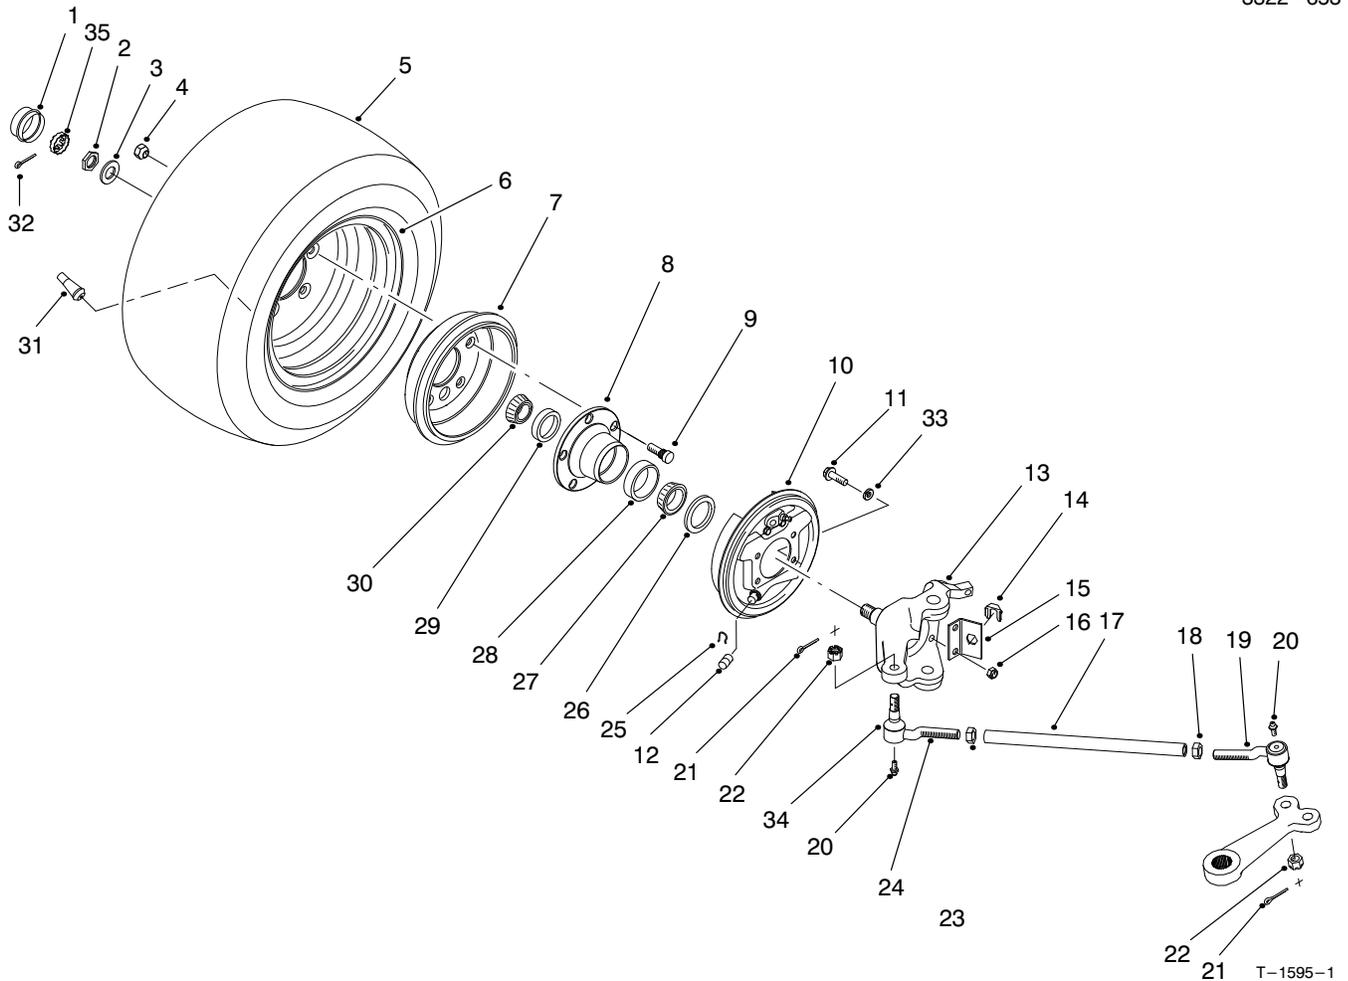


## FRONT WHEEL ASM

Ref. No.	Part No.	Description	No. Used
1	241-119	Cap-Dust	2
2	3220-7	Nut-Jam	2
3	93-0309	Washer-Tab	2
4	23-7270	Nut-Lug	10
5	94-5261	Tire	2
*	Optional	Tire-Hard Surface & Traction Options (See Dealer/Distributor for Tire Selection Guide)	
6	87-5720	Rim	2
7	87-0270	Drum-Brake	2
8	87-5560	Hub-Wheel	2
9	87-8730	Stud-Drive	10
10	87-3010	Asm-Brake RH	1
*	87-3020	Asm-Brake LH	1
11	323-8	Screw-HH	8
12	87-3450	Plug	2
13	87-9430	Spindle-RH	1
*	87-9440	Spindle-LH	1
14	87-3580	Retainer	2
15	87-2820	Bracket-Hose	2
16	3296-39	Nut-Lock	8
17	87-2410	Rod-Tie	2
18	3218-21	Nut-Jam	2
19	87-1470	Asm-Rod End, LH Thread (Incl. Ref. # 20-22 & 34)	2

Ref. No.	Part No.	Description	No. Used
*19	94-3804	Asm-Rod End, LH Thread (Incl. Ref. #21, 22 & 34) Heavy Duty (Optional)	2
20	302-5	Fitting-Grease	4
21	3272-12	Pin-Cotter	4
22	32136-3	Nut-Slotted	4
23	3220-11	Nut-Jam	2
24	87-1480	Asm-Rod End, RH Thread (Incl. Ref. #20-22 & 34)	2
*	94-3807	Asm-Rod End, RH Thread (Incl. Ref. #21, 22 & 34) Heavy Duty (Optional)	2
25	87-3310	Clip-Brake Cable	2
26	87-3590	Seal-Bearing	2
27	254-106	Cone-Bearing	2
28	254-107	Cup-Bearing	2
29	254-72	Cup-Bearing	2
30	254-94	Cone-Bearing	2
31	232-27	Stem-Valve	2
32	3272-12	Pin-Cotter	2
33	3253-21	Washer-Lock	8
34		Seal-Rod End	4
35	93-0307	Nut-Retainer	2
*	87-5340	Kit-Seal, Tie Rod End (Incl. Ref. #20-22 & 34)	4

\*Not Illustrated

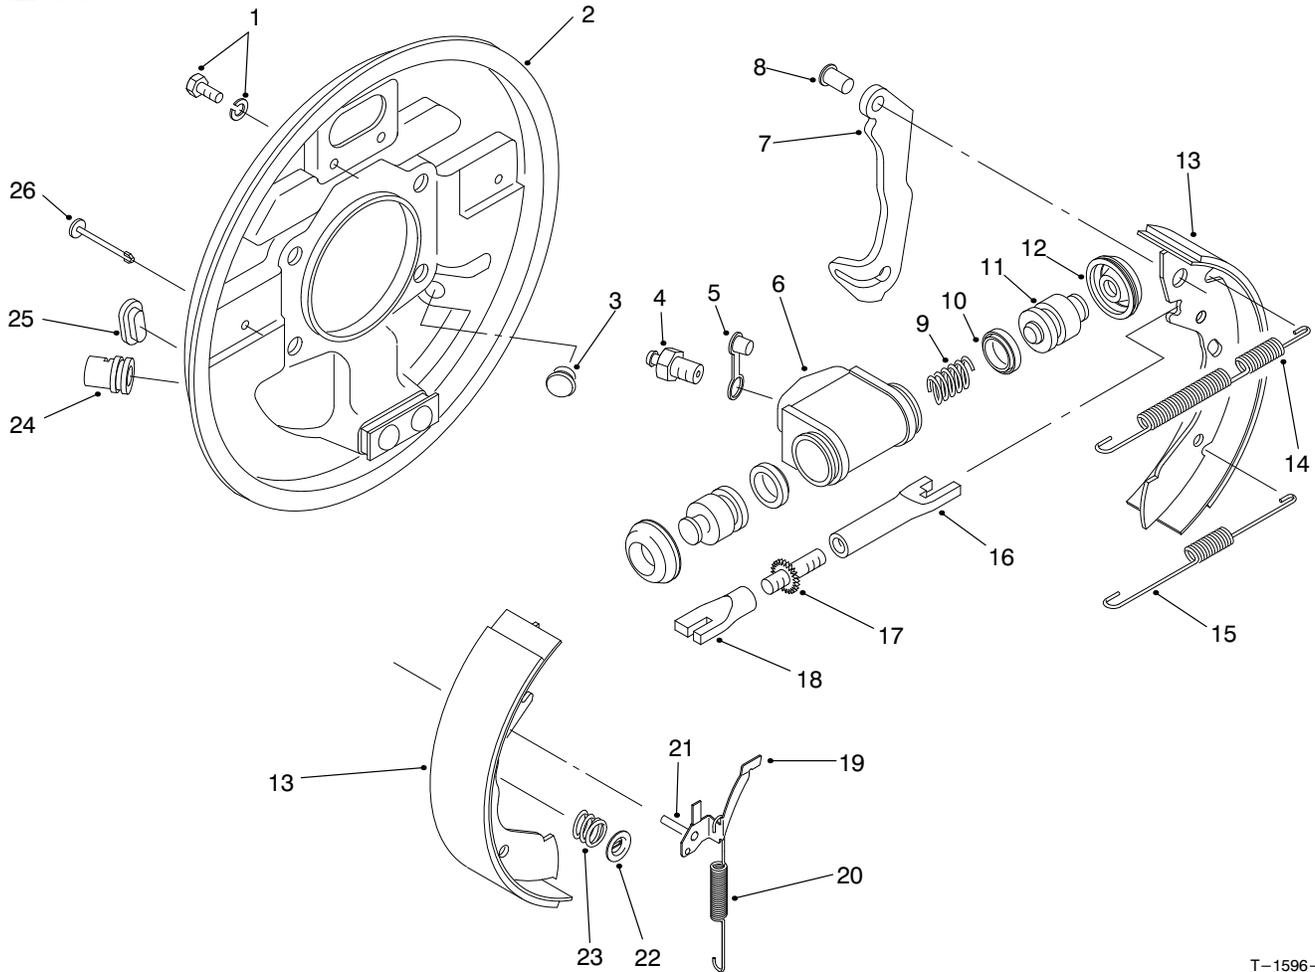


T-1596-1

## FRONT BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Asm-Pawl LH (Incl. Ref. #21)	1
2	92-4115	Asm-Backplate LH (Incl. Ref. #24)	1	*	92-4124	Asm-Pawl RH (Incl. Ref. #21)	1
*	92-4116	Asm-Backplate RH (Incl. Ref. #24)	1	20	92-4129	Spring-Adjuster, LH	1
3	92-4125	Plug	1	*	92-4130	Spring-Adjuster, RH	1
4	92-4113	Screw-Bleed	1	21		Pin-Pawl	1
5	92-4114	Cap-Bleed Screw	1	22	92-4131	Washer-Hold Down	2
6		Body	1	23	92-4132	Spring-Hold Down	2
7		Lever-Operating LH/RH	1	24		Guide-Pipe	1
8		Pin	1	25	92-4134	Plug-Inspection	1
9		Spring	1	26	92-4133	Pin-Hold Down	2
10		Seal-'L' Type	2	*	92-4121	Asm-Adjuster LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4122	Asm-Adjuster RH (Incl. Ref. #16-18)	1
12		Cover-Dust	2	*	92-4117	Asm-Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4120	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4118	Asm-Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4126	Spring-Shoe, Upper LH	1	*	92-4119	Kit-Seal (Incl. Ref. #10 & 12)	1
*	92-4127	Spring-Shoe, Upper RH	1	*	87-3010	Asm-Front Brake, RH (Complete)	1
15	92-4128	Spring-Shoe, Lower	1	*	87-3020	Asm-Front Brake, LH (Complete)	1
16		Pushrod-Female LH	1				
*		Pushrod-Female RH	1				
17		Bolt-Adjuster	1				
18		Sleeve-Adjuster	1				

\*Not Illustrated

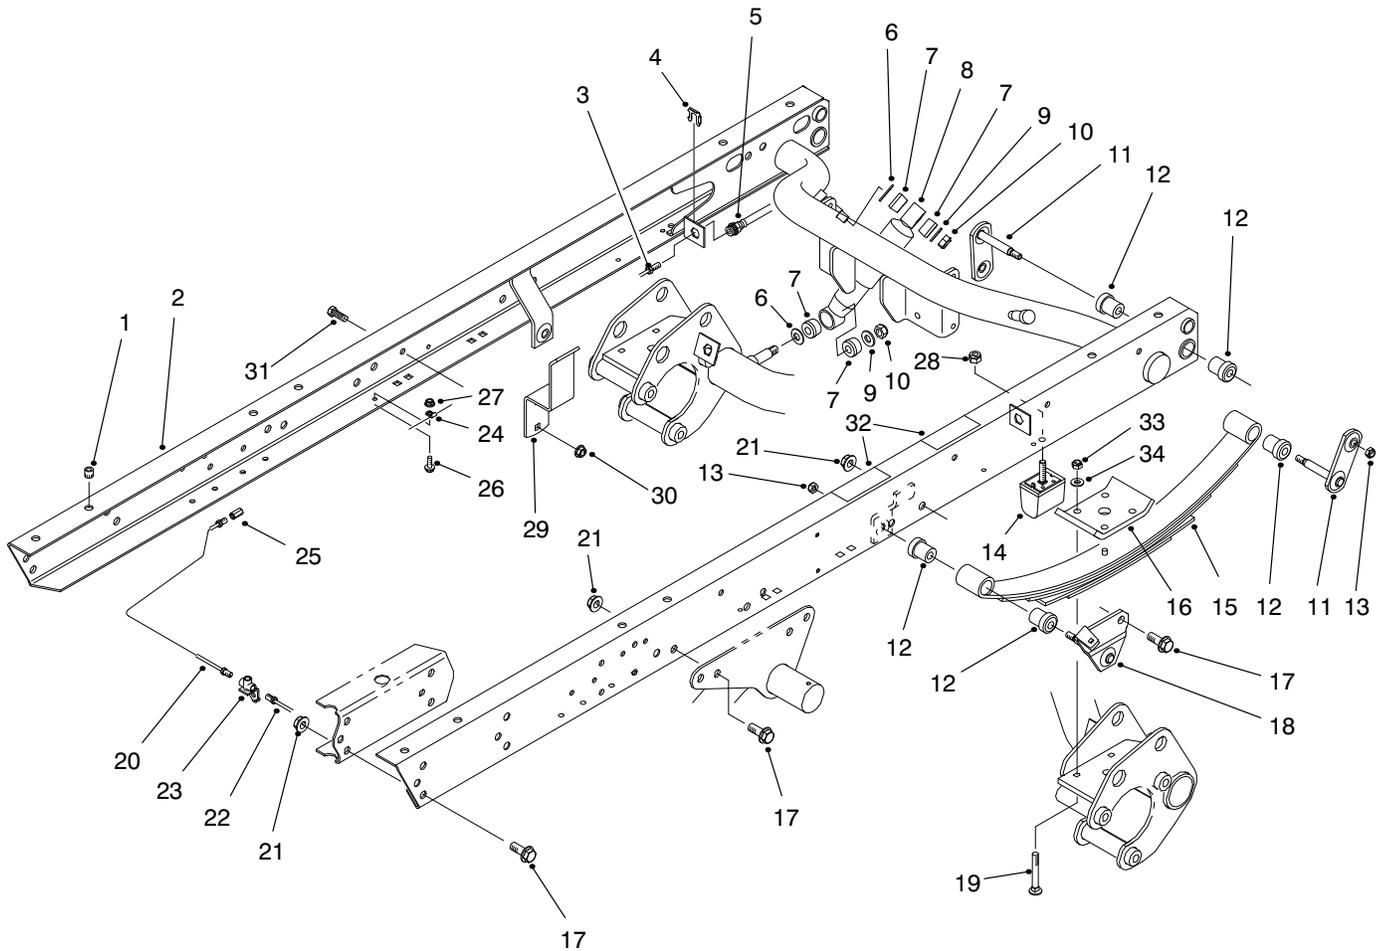


T-1597-1

## REAR FRAME ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32148-9	Insert-Threaded	8	19	3232-17	Bolt-CARR	8
2	87-8440	Asm-Rear Frame (Incl. Ref. #1 & 32)	1	20	94-3845	Tube-Brake RH	1
3	94-3846	Tube-Brake RH	1	21	32128-23	Nut-HFH	24
*	94-3844	Tube-Brake LH	1	22	94-3843	Tube-Brake LH	1
4	87-3580	Retainer	2	23	87-3560	Tee-Brake Tube	1
5	87-4100	Hose-Brake	2	24	2412-149	Clamp-Tube	4
6	3256-27	Washer-Flat	4	25	87-3570	Union-Brake Line	1
7	87-3920	Bushing-Rubber	8	26	321-4	Screw-HHF	4
8	87-3110	Shock Absorber	2	27	32128-33	Nut-HFH	4
9	3256-6	Washer-Flat	4	28	48-9520	Nut-Lock	2
10	3296-23	Nut-Lock	4	29	87-6690	Guard-Induction Chamber	1
11	87-3980	Shackle-Spring	4	30	3290-357	Nut-HFH	2
12	87-4760	Bushing	12	31	323-6	Screw-HH	2
13	3296-39	Nut-Lock	6	32	66-6840	Decal-Caution	2
14	87-3470	Bumper-Spring	2	32	93-8071	Decal-Caution (Europe)	2
15	87-1490	Spring-Leaf	2	32	92-6479	Decal-Caution (Japan)	2
16	87-7470	Plate-Clamp	2	33	3296-76	Nut-Lock	8
17	3234-38	Screw-HHF	24	34	87-7480	Washer-Flat	8
18	87-3960	Mount-Spring LH	1				
*	87-3940	Mount-Spring RH	1				

\*Not Illustrated

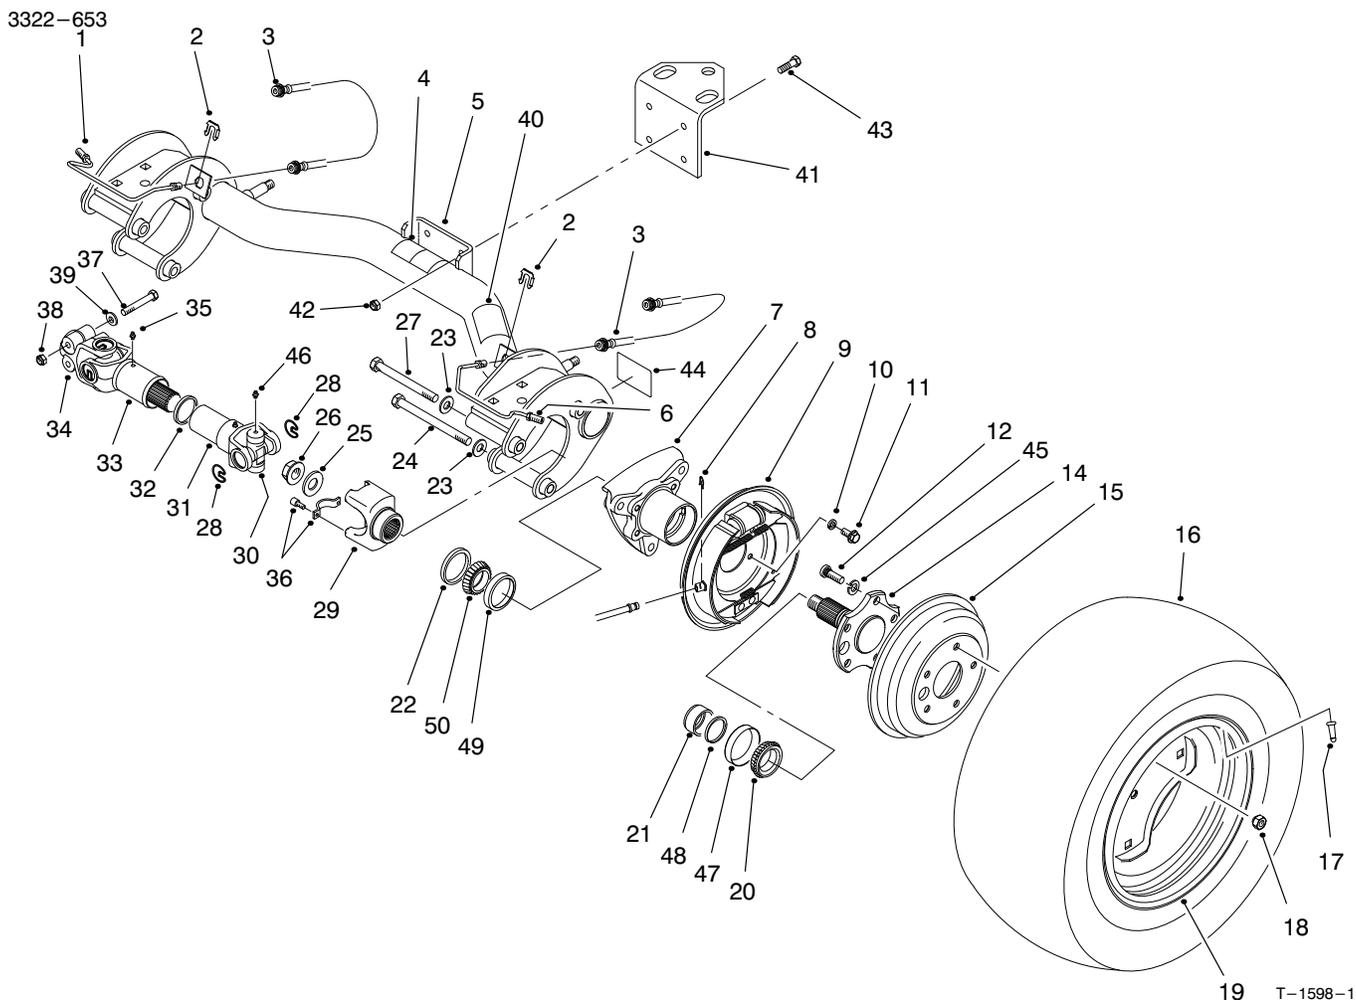


## REAR AXLE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-4090	Tube-Brake RH	1	†20		Cone-Bearing	1
2	87-3580	Retainer-Brake Hose	2	21	87-4060	Spacer-Bearing	2
3	87-4100	Hose-Brake	2	22	87-3590	Seal-Bearing	2
4	87-6060	Decal-ATF	1	23	87-7270	Washer-Flat	6
4	93-9442	Decal-ATF (Europe)	1	24	325-20	Screw-HH	5
4	92-5473	Decal-ATF (Japan)	1	25	87-3060	Washer-Flat	2
5	87-7110	Asm-Axle, Rear (Incl. Ref. #4, 40 & 44)	1	26	32128-53	Nut-HFH	2
6	87-4080	Tube-Brake LH	1	27	325-19	Screw-HH	1
7	87-2240	Housing-Axle	2	28	92-4188	Ring-Snap	12
8	87-3310	Clip-Brake Cable	2	29	92-4190	Yoke-End	2
9	93-7126	Asm-Brake, LH	1	30	92-4187	Kit-Cross & Bearing	4
*	93-7125	Asm-Brake, RH	1	31	92-4182	Yoke & Hub	2
10	3253-21	Washer-Lock	8	32	92-4180	Seal	2
11	323-6	Screw-HH	8	33	92-4179	Yoke, Shaft & Seal Tube	2
12	87-2080	Stud-Drive	10	34	98-2940	Yoke-Double Clamp	2
14	93-7090	Stub-Axle	2	35	302-5	Fitting-Grease	4
15	93-7128	Drum-Brake	2	36	92-4189	Kit-Strap & Bolt	2
16	87-6740	Tire-Rear 24"	2	37	98-2939	Screw-HH	4
*	Optional	Tire-Hard Surface & Traction Options (See Dealer/Distributor for Tire Selection Guide)		38	32128-36	Nut-Lock	4
17	232-27	Valve-Stem	2	39	80-6990	Washer	4
18	23-7270	Nut-Lug	10	40	87-5990	Decal-PTO	1
19	87-6750	Rim-Rear 24"	2	40	93-9862	Decal-PTO (Europe)	1
*	87-3000	Rim-Rear 23" (Optional)	2	40	92-5367	Decal-PTO (Japan)	1
				41	92-5951	Angle-Hitch	1
				42	3296-39	Nut-Lock	4
				43	323-7	Screw-HH	4
				44	87-9080	Decal-Grease	2
				44	93-9449	Decal-Grease (Europe)	2

\*Not Illustrated


†Not Serviced Separately

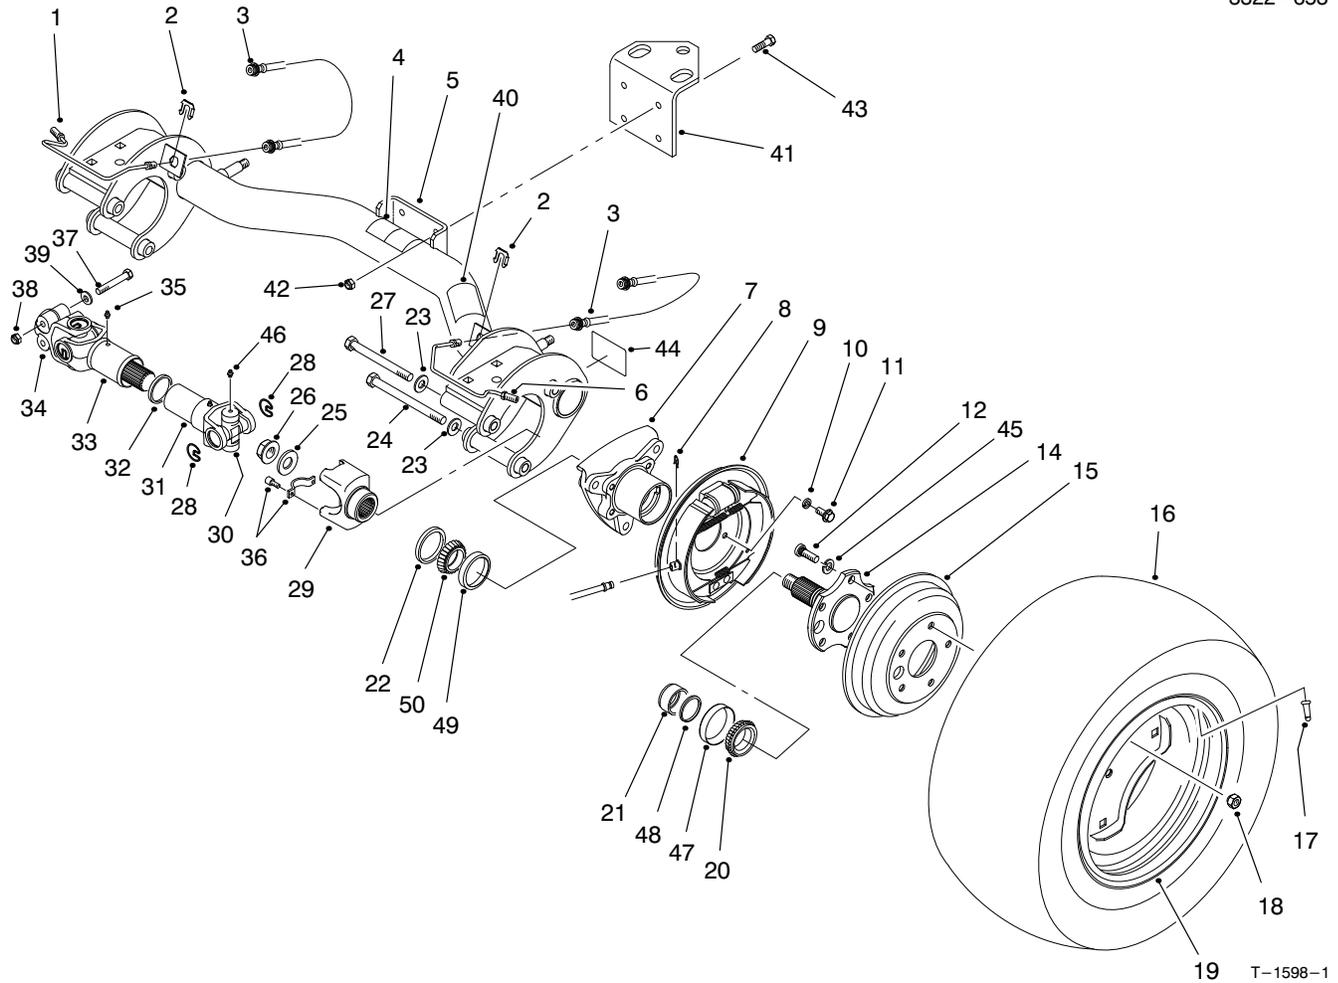

### REAR AXLE ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
44	92-6444	Decal-Grease (Japan)	2	*	87-6370	Asm-Rear Tire & Wheel (Optional 23")	2
45	3253-6	Washer-Lock	10	*	87-1970	Bearing-Matched Set Use 1 set per wheel (Incl. Ref. #20 & 47-50)	2
46	302-58	Fitting-Grease	16	*	98-2969	1/2 Yoke Kit (Incl. Ref. #29 & 36)	2
†47		Cup-Bearing	1	*	98-2967	Driveshaft Assembly Kit (Incl. Ref. #37 & 51)	2
†48		Spacer	1	*	98-2968	Yoke Kit (Incl. Ref. #34 & 37)	2
†49		Cup-Bearing	1				
†50		Cone-Bearing	1				
*51	98-2918	Asm-Driveshaft (Incl. Ref. #28, 30-35 & 46)	2				
*	87-5370	Asm-Rear Tire & Wheel (24")	2				

\*Not Illustrated  
†Not Serviced Separately

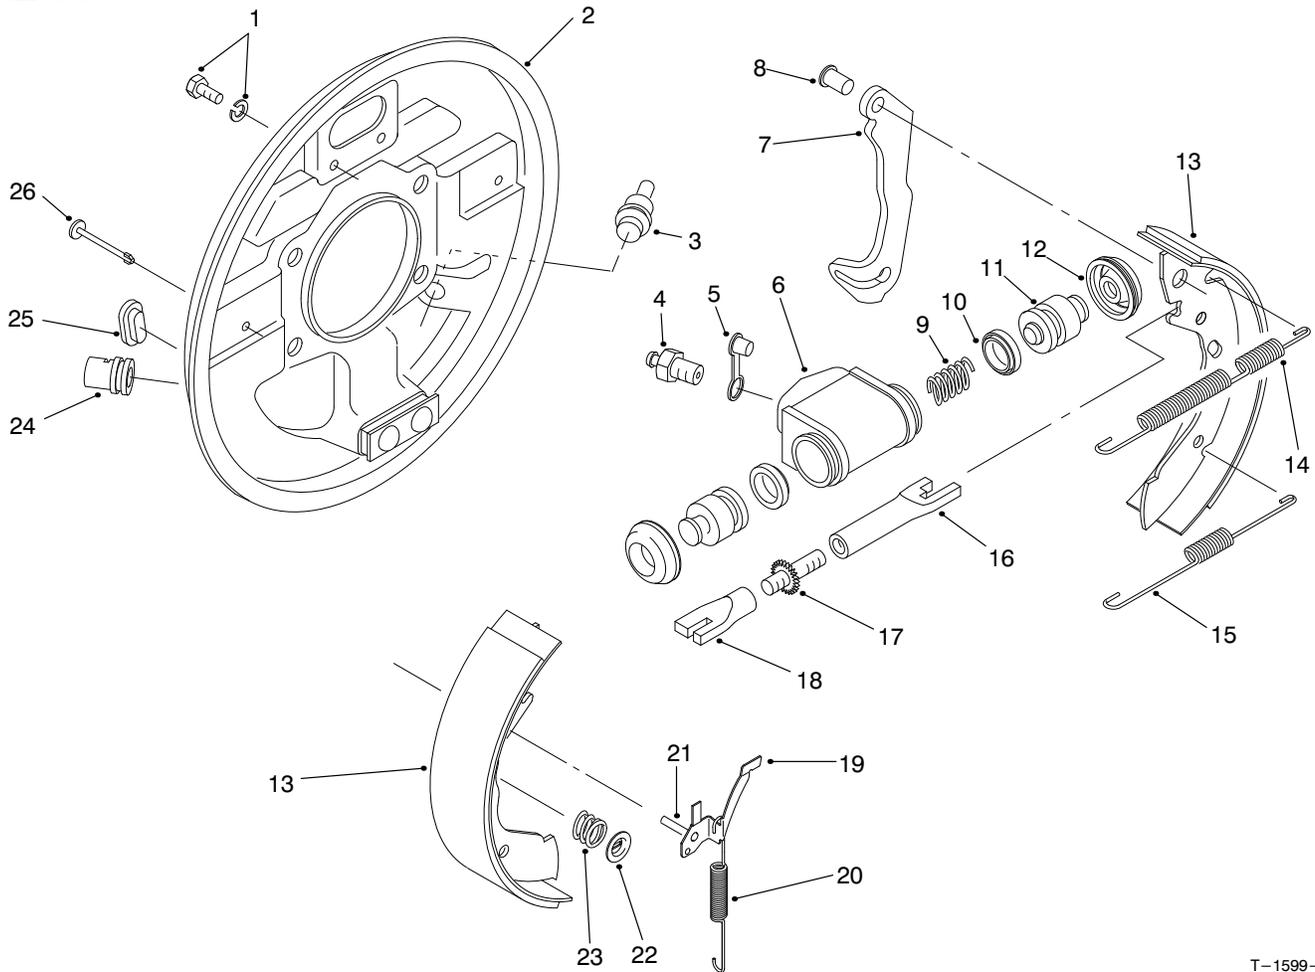


T-1599-1

## REAR BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Asm-Pawl, LH (Incl. Ref. #21)	1
2	92-4136	Asm-Backplate, LH (Incl. Ref. #24)	1	*	92-4124	Asm-Pawl, RH (Incl. Ref. #21)	1
*	92-4100	Asm-Backplate, RH (Incl. Ref. #24)	1	20	92-4150	Spring-Adjuster, LH	1
3	92-4146	Plug	1	*	92-4151	Spring-Adjuster, RH	1
4	92-4137	Screw-Bleed	1	21		Pin-Pawl	1
5	92-4114	Cap-Bleed Screw	1	22	92-4131	Washer-Hold Down	2
6		Body	1	23	92-4152	Spring-Hold Down	2
7		Lever-Operating LH/RH	1	24		Guide-Pipe	1
8		Pin	1	25	92-4134	Plug-Inspection	1
9		Spring	1	26	92-4133	Pin-Hold Down	2
10		Seal-'L' Type	2	*	92-4144	Asm-Adjuster, LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4145	Asm-Adjuster, RH (Incl. Ref. #16-18)	1
12		Cover-Dust	2	*	92-4140	Asm-Wheel Cylinder, LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4143	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4141	Asm-Wheel Cylinder, RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4147	Spring-Shoe, Upper LH	1	*	92-4142	Kit-Seal (Incl. Ref. #10 & 12)	1
*	92-4148	Spring-Shoe, Upper RH	1	*	93-7125	Asm-Rear Brake, RH (Complete)	1
15	92-4149	Spring-Shoe, Lower	1	*	93-7126	Asm-Rear Brake, LH (Complete)	1
16		Pushrod-Female LH	1				
*		Pushrod-Female RH	1				
17		Bolt-Adjuster	1				
18		Sleeve-Adjuster	1				

\*Not Illustrated

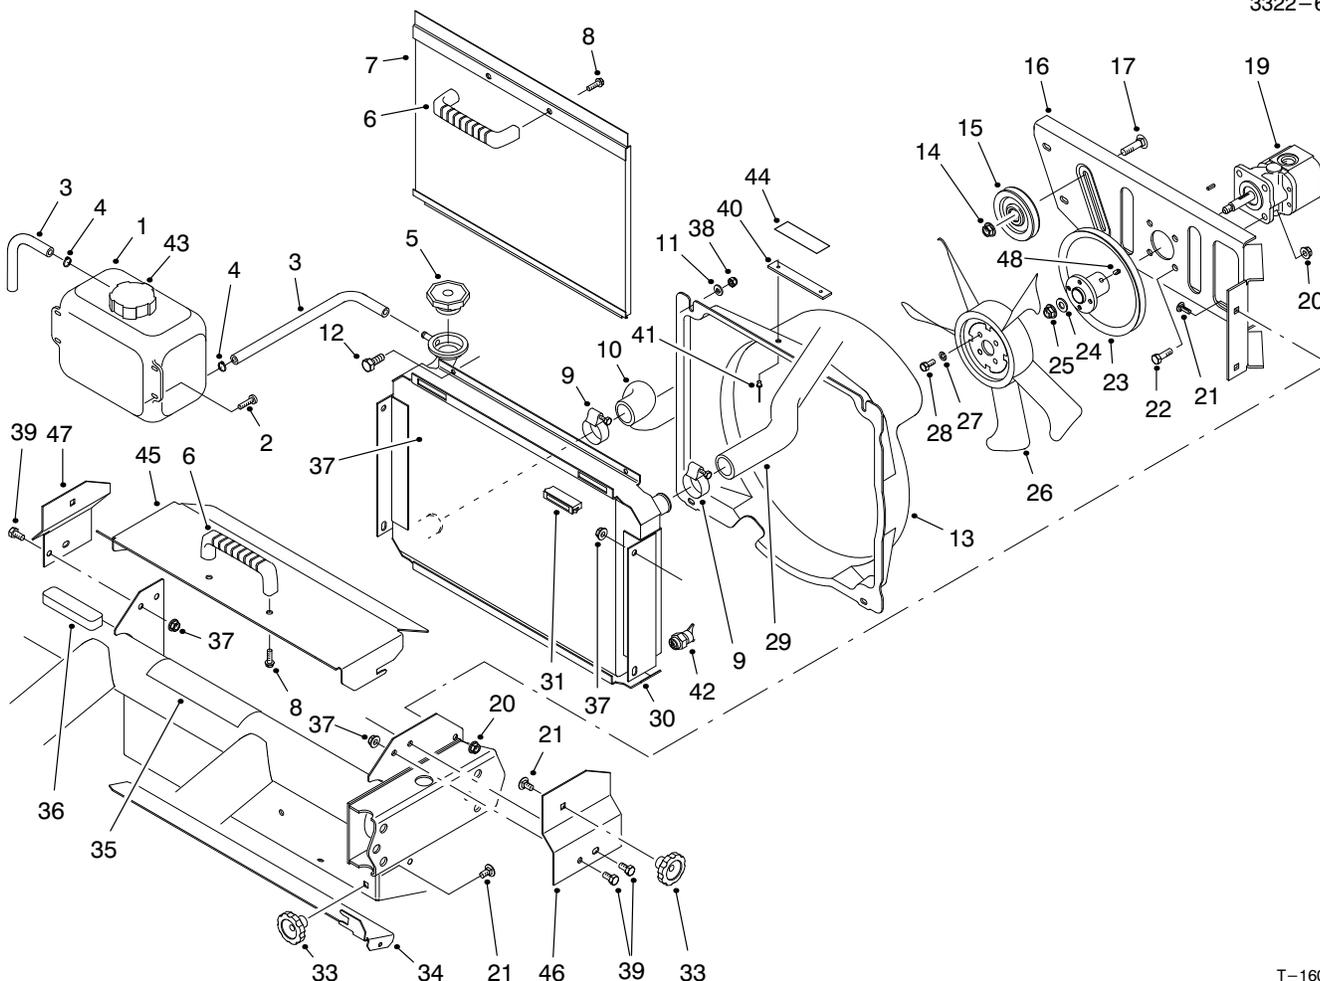


T-1600-2

## RADIATOR & HYDRAULIC PUMP ASM

Ref. No.	Part No.	Description	No. Used
1	87-3710	Asm-Overflow Reservoir (Incl. Ref. #43)	1
2	3250-20	Screw-PH	4
3	71-3381	Tube-Overflow	2
4	92-2379	Clamp-Hose	2
5	66-3240	Cap-Radiator	1
6	65-5100	Handle	2
7	93-7103	Screen-Radiator	1
8	46-8091	Screw-HFH	4
9	2412-34	Clamp-Hose	2
10	87-5050	Hose-Radiator Lower	1
11	3256-22	Washer-Flat	4
12	321-4	Screw-HH	4
13	92-4198	Asm-Fan Shroud (Incl. Ref. #40 & 41)	1
14	3290-357	Nut-HFH	1
15	63-8140	Pulley	1
16	93-7088	Support-Fan	1
17	3231-28	Bolt-CARR	1
19	87-5700	Asm-Hydraulic Pump	1
20	3296-29	Nut-HFH	8
21	3230-23	Bolt-CARR	7
22	322-5	Screw-HH	4
23	94-5228	Pulley	1
24	3256-45	Washer-Flat	1
25	3296-5	Nut-HFH	1

Ref. No.	Part No.	Description	No. Used
26	43-1911	Fan	1
27	3253-3	Washer-Lock	4
28	321-3	Screw-HH	4
29	87-3430	Hose-Radiator Upper	1
30	93-7050	Asm-Radiator (Incl. Ref. #42)	1
31	58-4250	Magnet	2
33	19-4050	Knob	3
34	87-9300	Door-Clean Out	1
35	87-9420	Decal-Caution	1
35	93-9447	Decal-Caution (Europe)	1
35	93-3766	Decal-Caution (Japan)	1
36	87-9810	Foam-Overflow Tank	1
37	32128-20	Nut-HFH	6
38	3296-42	Nut-Lock	4
39	322-2	Screw-HH	6
40	76-8750	Plate-Warning	1
41	3290-271	Rivet-Pop	2
42	92-4111	Petcock-Radiator	1
43	87-7050	Cap-Reservoir	1
44	93-6681	Decal-Warning (Europe)	1
44	92-7240	Decal-Warning (Japan)	1
45	93-8940	Cover-Radiator	1
46	93-8938	Bracket-Cover LH	1
47	93-8939	Bracket-Cover RH	1
48	3245-31	Screw-Set	1

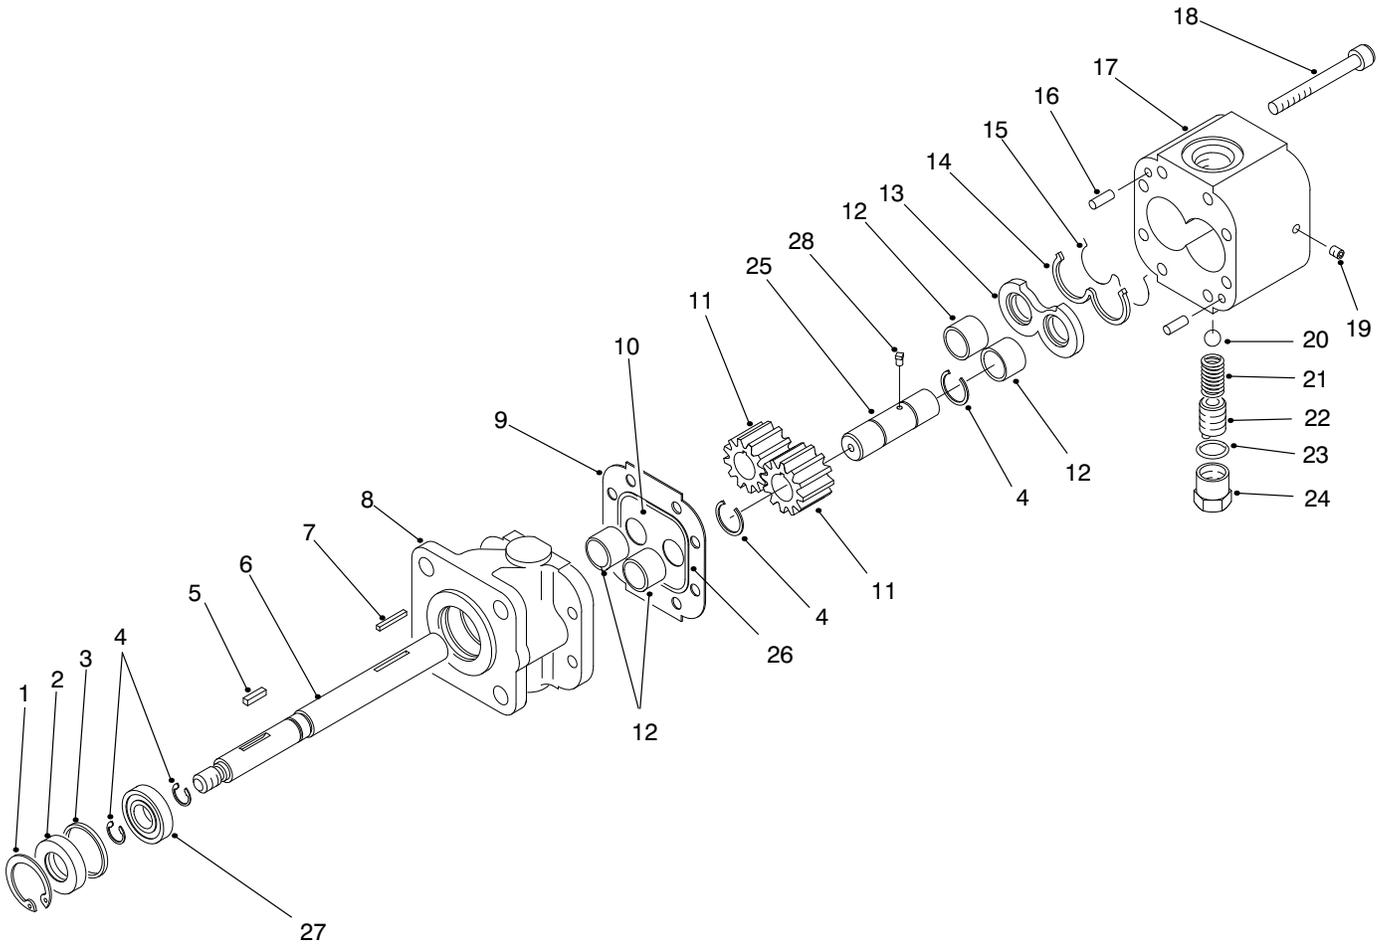


T-1601-1

## HYDRAULIC PUMP ASM NO. 87-5700

Ref. No.	Part No.	Description	No. Used
1	32151-41	Ring-Retaining	1
2	92-2195	Seal-Oil	1
3	92-2186	Spacer	1
4	92-2178	Ring-Crescent	4
5	92-2179	Key-Square	1
6	92-2189	Shaft-Drive	1
7	92-2177	Pin-Shear	1
†8		Stator	1
9	92-2182	Plate-Seal	1
10	92-2183	Plate-Wear	1
11	92-2175	Gear	2
12	92-2192	Bearing	4
13	92-2181	Plate-Pressure	1
14	92-2197	Seal-Back Up	1

Ref. No.	Part No.	Description	No. Used
15	92-2196	Seal-Pressure Plate	1
16	92-2176	Pin-Dowel	2
17	92-2187	Housing-Gear, End	1
18	92-2173	Screw-Cap Socket Head	8
19	92-2185	Plug	1
20	92-2193	Ball	1
21	92-2194	Spring	1
22	92-2174	Screw-Adjusting	1
23	92-2180	Gasket-Copper	1
24	92-2184	Cap-Relief Valve	1
25	92-2190	Shaft-Idler	1
26	92-2198	Seal	1
27	92-2191	Bearing	1
28	92-2199	Key-Ball	1

†Not Serviced Separately.

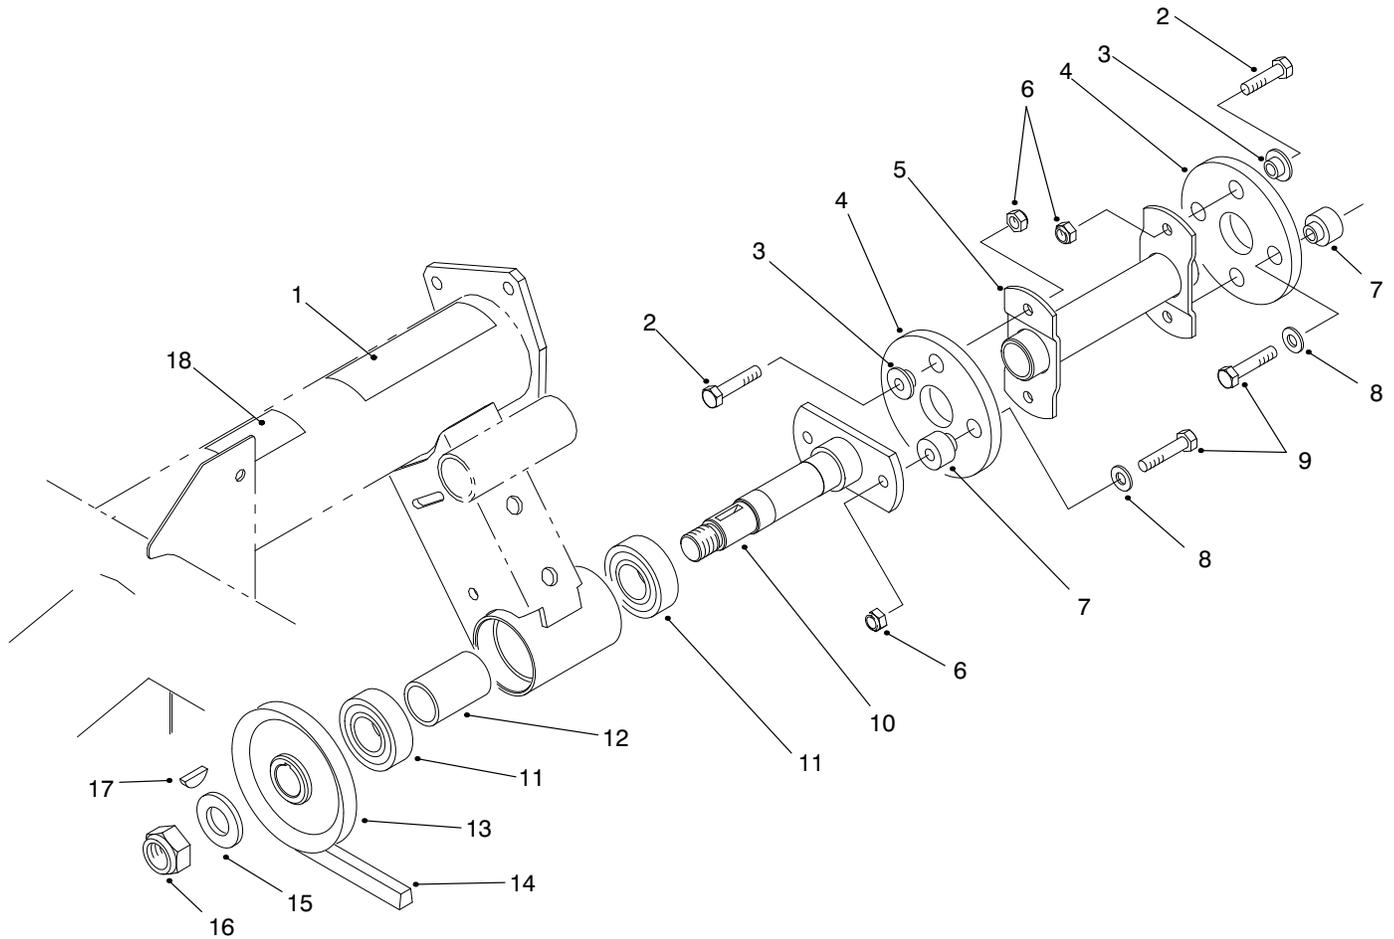


T-1660-2

## HYDRAULIC PUMP DRIVE ASM

Ref. No.	Part No.	Description	No. Used
1	80-8040	Decal-Caution	1
1	93-7814	Decal-Caution (Europe)	1
1	83-6030	Decal-Caution (Japan)	1
2	322-5	Screw-HH	4
3	27-6600	Spacer-Thin	4
4	44-2230	Disc-Rubber	2
5	87-4440	Driveshaft	1
6	3296-29	Nut-Lock	6
7	27-6590	Spacer-Thick	4
8	3256-3	Washer-Flat	4
9	322-7	Screw-HH	4

Ref. No.	Part No.	Description	No. Used
10	87-2720	Driveshaft	1
11	251-82	Bearing-Ball	2
12	87-2750	Spacer-Bearing	1
13	87-3370	Pulley	1
14	87-3210	Belt-V	1
15	3256-28	Washer-Flat	1
16	3296-15	Nut-Lock	1
17	3257-7	Key-Woodruff	1
18	93-7275	Decal-Fluid (Europe)	1
18	84-6660	Decal-Fluid (Japan)	1
18	83-9150	Decal-Fluid	1

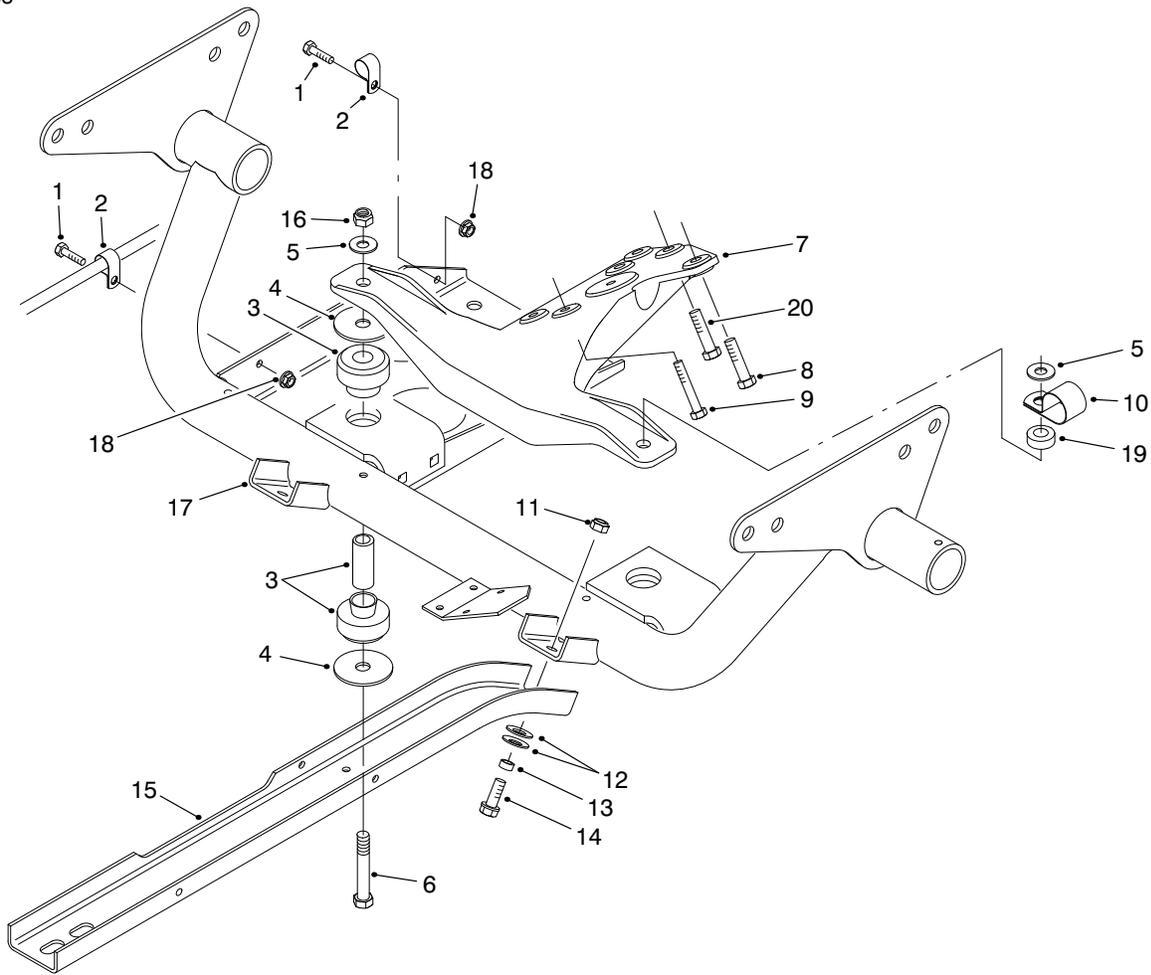


T-1603-1

### ENGINE FRAME ASM

Ref. No.	Part No.	Description	No. Used
1	321-4	Screw-HH	2
2	2412-89	Clamp-R	2
3	87-4970	Asm-Engine Mount	2
4	87-5100	Washer-Flat	4
5	3256-25	Washer-Flat	2
6	324-19	Screw-HH	2
7	87-9830	Mount-Engine	1
8	87-3700	Screw-HH	3
9	48-7560	Screw-HH	3
10	2412-82	Clamp-R	1

Ref. No.	Part No.	Description	No. Used
11	3296-39	Nut-Lock	6
12	3290-413	Washer-Belleville	12
13	76-9100	Spacer	6
14	3234-11	Screw-HH	6
15	87-4730	Guard-Belly	2
16	3296-48	Nut-Lock	2
17	93-7095	Frame-Engine	1
18	32128-33	Nut-HFH	2
19	59-2290	Spacer	1
20	43-0090	Screw-HH	1


PROTOTYPE

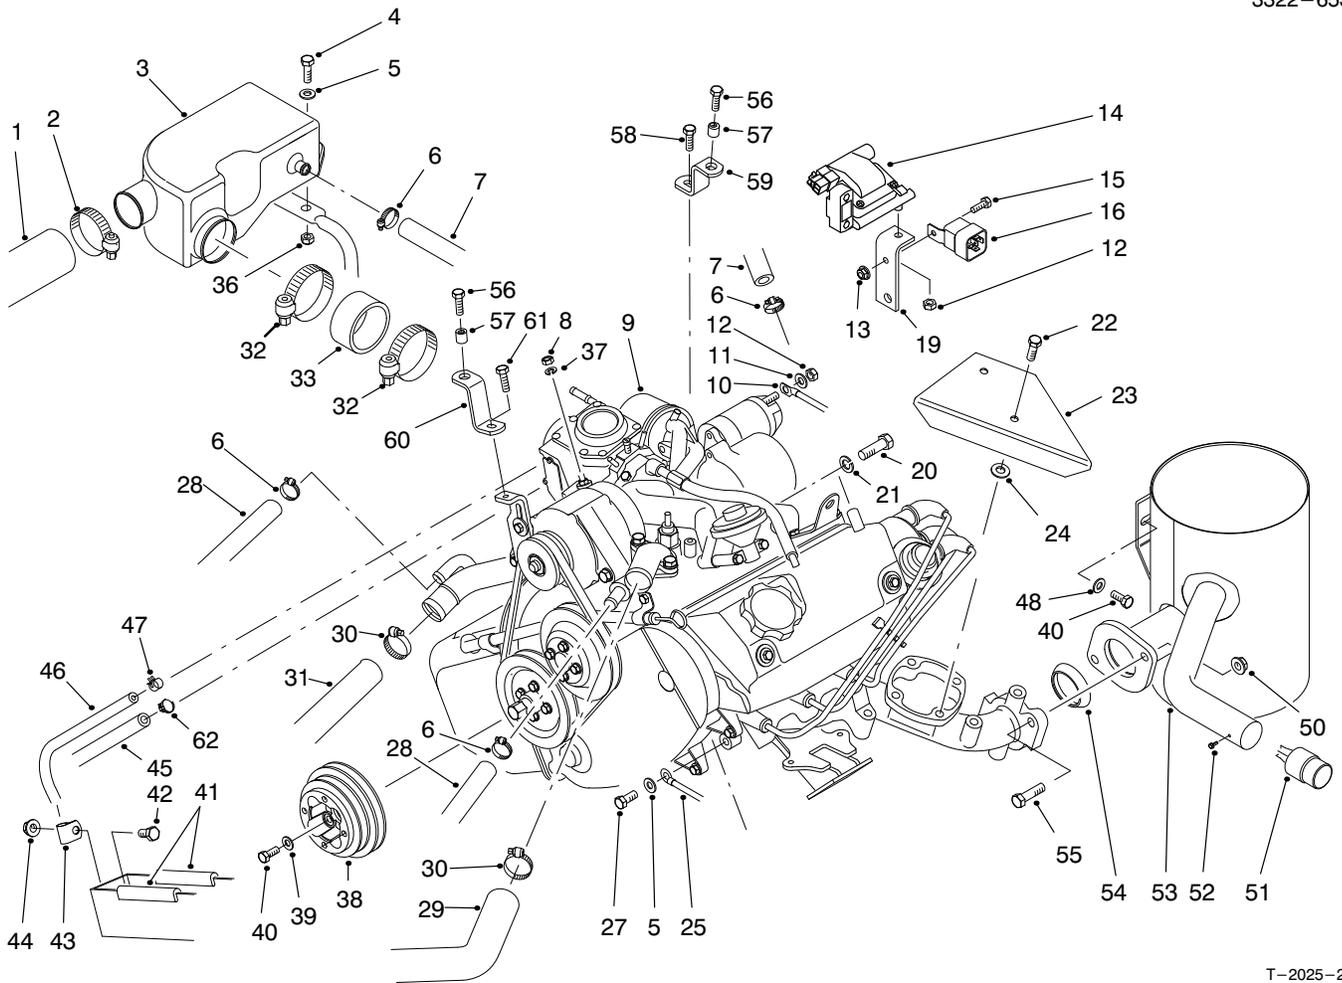

T-2025-2

## ENGINE INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-3420	Hose--Air Cleaner	1	29	87-3430	Hose--Radiator Upper	1
2	2412-92	Clamp--Hose	1	30	2412-34	Clamp--Hose	2
3	87-1680	Chamber--Air	1	31	87-5050	Hose--Radiator Lower	1
4	322-6	Screw--HH	2	32	2412-130	Clamp--Hose	2
5	3256-23	Washer--Flat	2	33	87-3500	Hose--Air Cleaner	1
6	2412-119	Clamp--Hose	3	36	3296-29	Nut--Lock	2
7	87-3740	Hose--Breather	1	37	3253-3	Washer--Lock	1
8	48-7890	Nut--Hex.	1	38	87-5070	Pulley--Crankshaft	1
9	94-5249	Asm--Engine (Incl. Ref. #11, 12 & 14)	1	39	65-5390	Washer--Flat	4
10	87-3070	Cable--Positive	1	40	66-3160	Screw--HH	4
11	3254-2	Washer--Lock	1	41	43-4300	Trim	2
12	42-9580	Nut--Hex.	3	42	322-2	Screw--HH	1
13	32128-33	Nut--HFH	1	43	2412-10	Clamp--R	1
14	92-2027	Coil--Ignition	1	44	32128-20	Nut--HFH	1
15	321-4	Screw--HH	1	45	63-6940	Hose--Fuel	1
16	70-1480	Relay	1	46	75-4701	Hose--Fuel	1
19	87-2760	Bracket--Ignition Coil	1	47	2412-108	Clamp--Hose	1
20	48-9480	Screw--HH	2	48	87-8640	Washer--Flat	1
21	3253-6	Washer--Lock	2	49	66-3160	Screw--HH	1
22	57-6380	Screw--HH	2	50	3290-357	Nut--HFH	2
23	87-3620	Shield--Heat	1	51	75-6880	Spark Arrestor (Optional) (Incl. Ref. #52)	1
24	52-2480	Spacer	2	52	32144-42	Screw--Spark Arrestor	1
25	87-3080	Wire--Ground	1	53	87-1510	Muffler & Tailpipe	1
27	66-3160	Screw--HH	1	54	92-2044	Gasket--Exhaust	1
28	87-3730	Hose--Coolant	2	55	323-29	Screw--HH	2

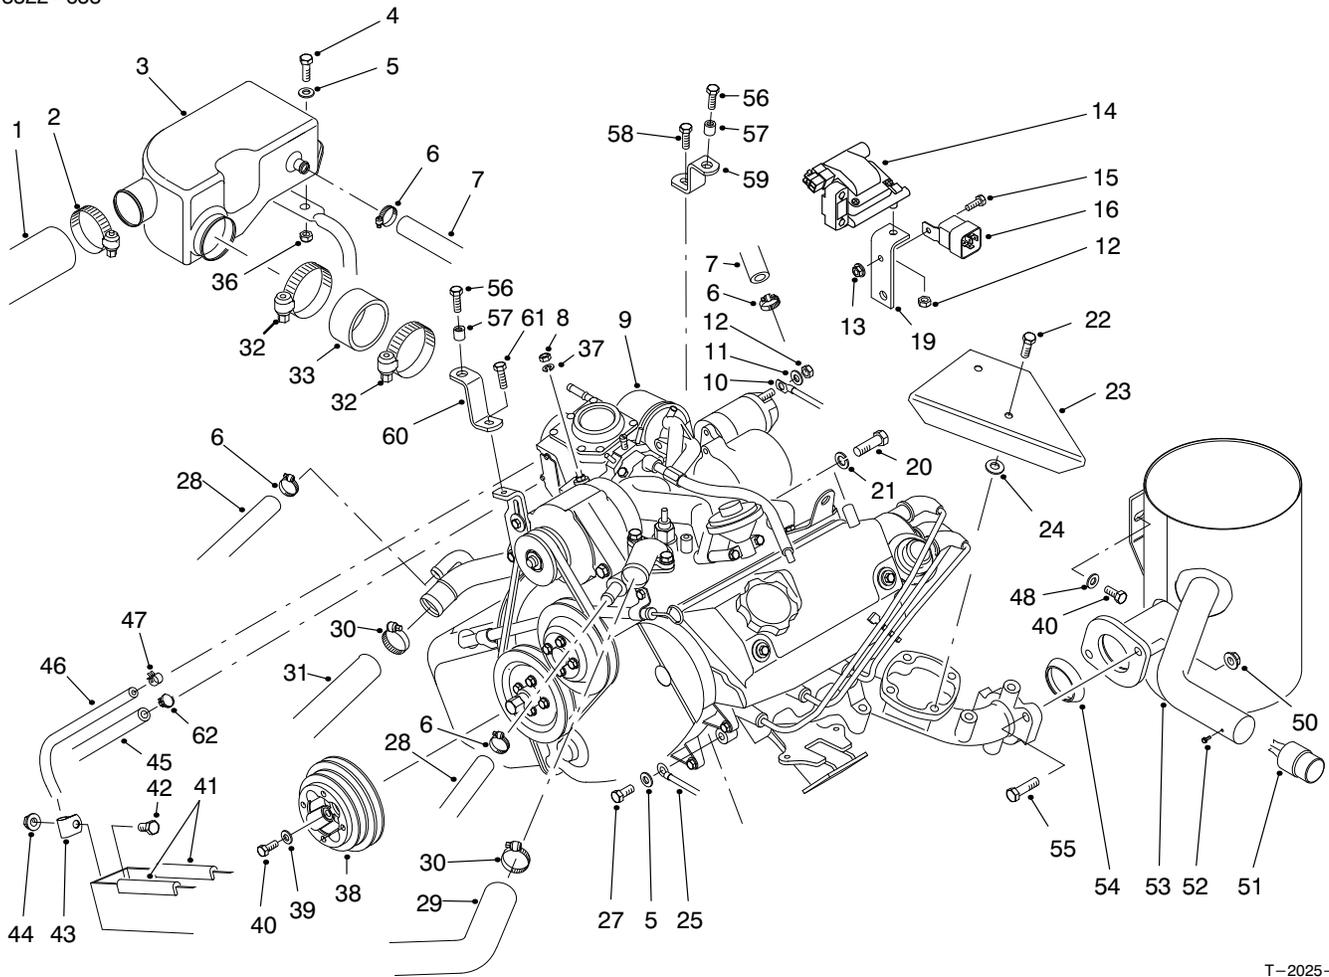


T-2025-2

## ENGINE INSTALLATION ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
56	3234-5	Screw-HH (Europe)	2	60	93-8954	Asm-Front Bracket, RH (Europe) (Incl. Ref. #57)	1
57	32148-8	Insert-Threaded (Europe)	2	61	42-9230	Screw-HH (Europe)	1
58	48-7620	Screw-HH (Europe)	1	62	2412-98	Clamp-Hose	1
59	93-8953	Asm-Front Bracket, LH (Europe) (Incl. Ref. #57)	1				

PROTOTYPE

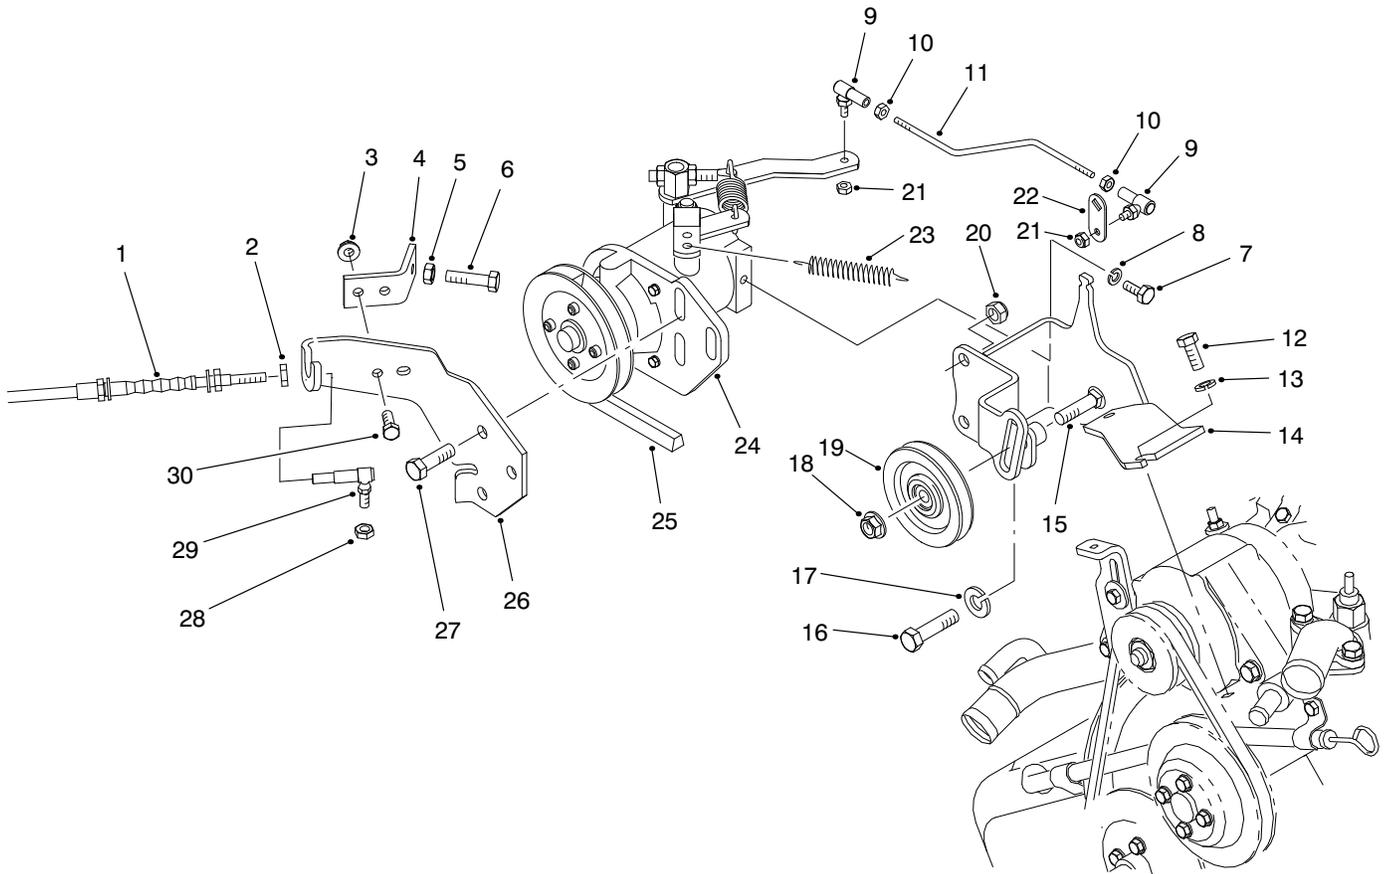


T-1605-1

# GOVERNOR ASM

Ref. No.	Part No.	Description	No. Used
1	94-3836	Asm-Accelerator Cable (Incl. Ref. #2)	1
2	3220-1	Nut-Jam	1
3	32128-33	Nut-HFH	2
4	87-4770	Bracket-High Idle Stop	1
5	3220-2	Nut-Jam	1
6	3210-9	Screw-HH	1
7	321-3	Screw-HH	1
8	3253-3	Washer-Lock	1
9	21-5640	Joint-Ball	2
10	3219-14	Nut-Jam	2
11	87-4210	Rod-Linkage	1
12	66-3160	Screw-HH	2
13	3253-4	Washer-Lock	2
14	87-4750	Bracket-Governor	1
15	3231-26	Bolt-CARR	1

Ref. No.	Part No.	Description	No. Used
16	87-3700	Screw-HH	1
17	3253-22	Washer-Lock	1
18	3290-357	Nut-Flange	1
19	63-8140	Pulley	1
20	3296-39	Nut-Lock	3
21	3296-27	Nut-Lock	2
22	87-2400	Lever-Throttle	1
23	87-4020	Spring-Extension	1
24	87-8720	Asm-Governor	1
25	87-3200	Belt-V	1
26	87-3900	Bracket-Cable	1
27	323-7	Screw-HH	3
28	3296-3	Nut-Lock	1
29	18-1720	Joint-Ball	1
30	321-4	Screw-HH	2

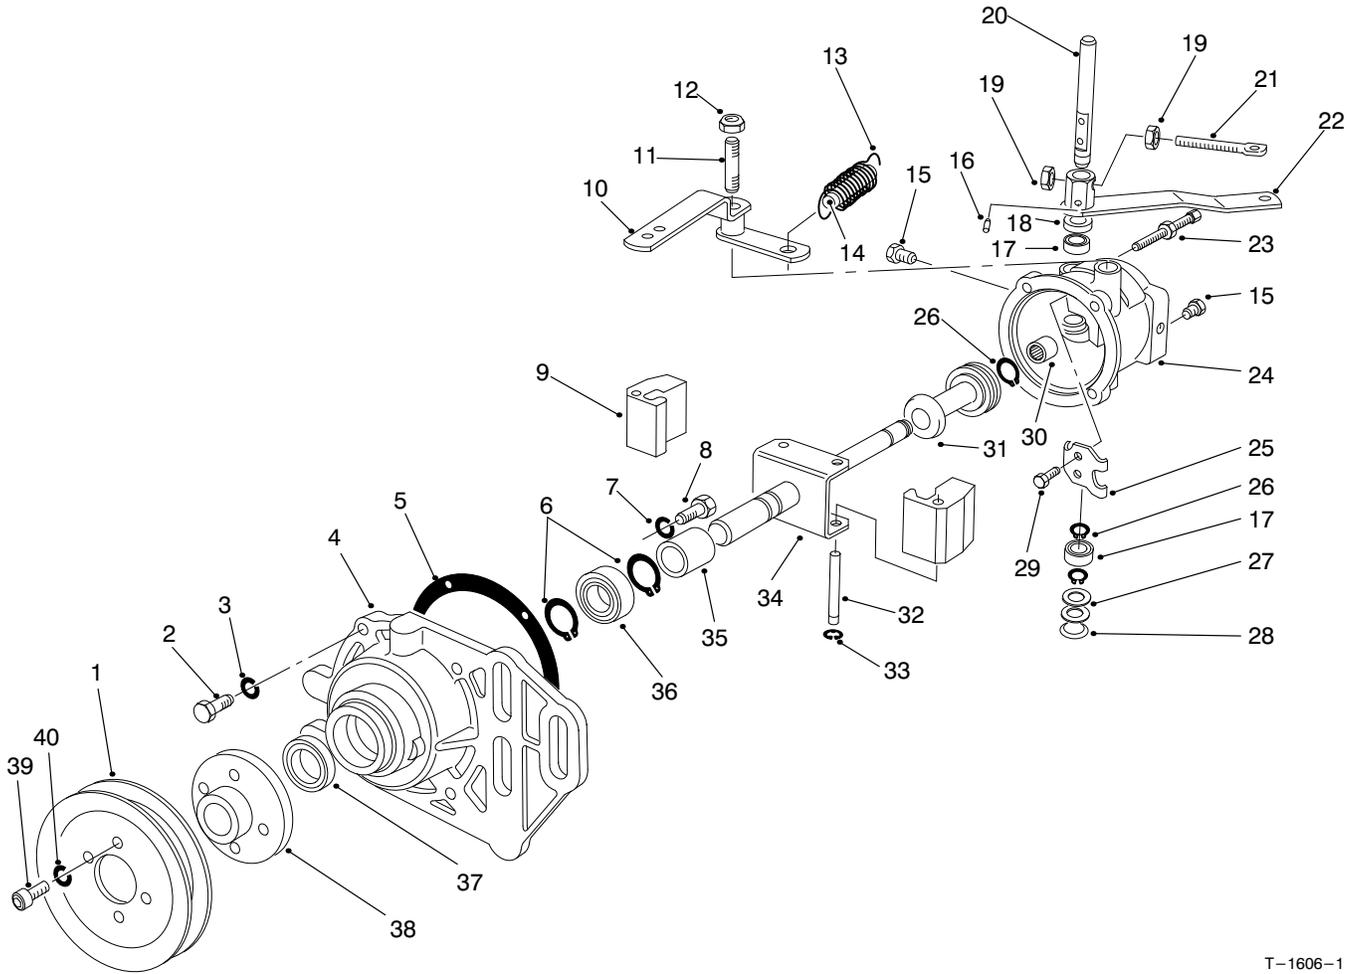


T-1606-1

# GOVERNOR

Ref. No.	Part No.	Description	No. Used
1	87-8830	Pulley	1
2	18-5620	Screw	4
3	18-5630	Washer-Lock	4
4	87-6560	Cover	1
5	18-5790	Gasket	1
6	18-5640	Ring-Retaining	2
7	18-5770	Washer-Lock	2
8	32113-14	Screw	2
9	70-2150	Flyweight	2
10	87-6590	Asm-Lever & Fitting	1
11	87-6580	Stud-Lever Pivot	1
12	3296-5	Nut-Lock	1
13	87-6490	Spring	1
14	87-6550	Pin-Forced Idle	1
15	285-17	Plug-Pipe	2
16	18-5750	Pin	1
17	18-5450	Bearing	2
18	71-4780	Seal-Oil, Rocker Shaft	1
19	3219-2	Nut	2
20	72-5890	Shaft-Rocker	1
21	87-6540	Bolt-Eye	1


Ref. No.	Part No.	Description	No. Used
22	87-6530	Asm-Throttle Lever	1
23	72-5910	Asm-Bumper Screw	1
24	87-6520	Body	1
25	18-5520	Lever-Rocker	1
26	18-5540	Retainer-Sleeve Stop	3
27	18-5440	Spacer	2
28	18-5430	Plug-Expansion	1
29	18-5530	Screw & Lockwasher	2
30	72-5940	Bearing-Needle	1
31	70-2100	Asm-Thrust Sleeve & Bearing	1
32	18-5660	Pin-Pivot, Flyweight	2
33	18-5670	Retainer-Pivot Pin	2
34	87-6510	Asm-Shaft & Yoke	1
35	70-2120	Spacer	1
36	70-2140	Bearing-Front	1
37	18-5580	Seal-Oil, Front	1
38	87-8820	Hub-Pulley	1
39	3274-52	Screw-HH	4
40	3253-18	Washer-Lock	4

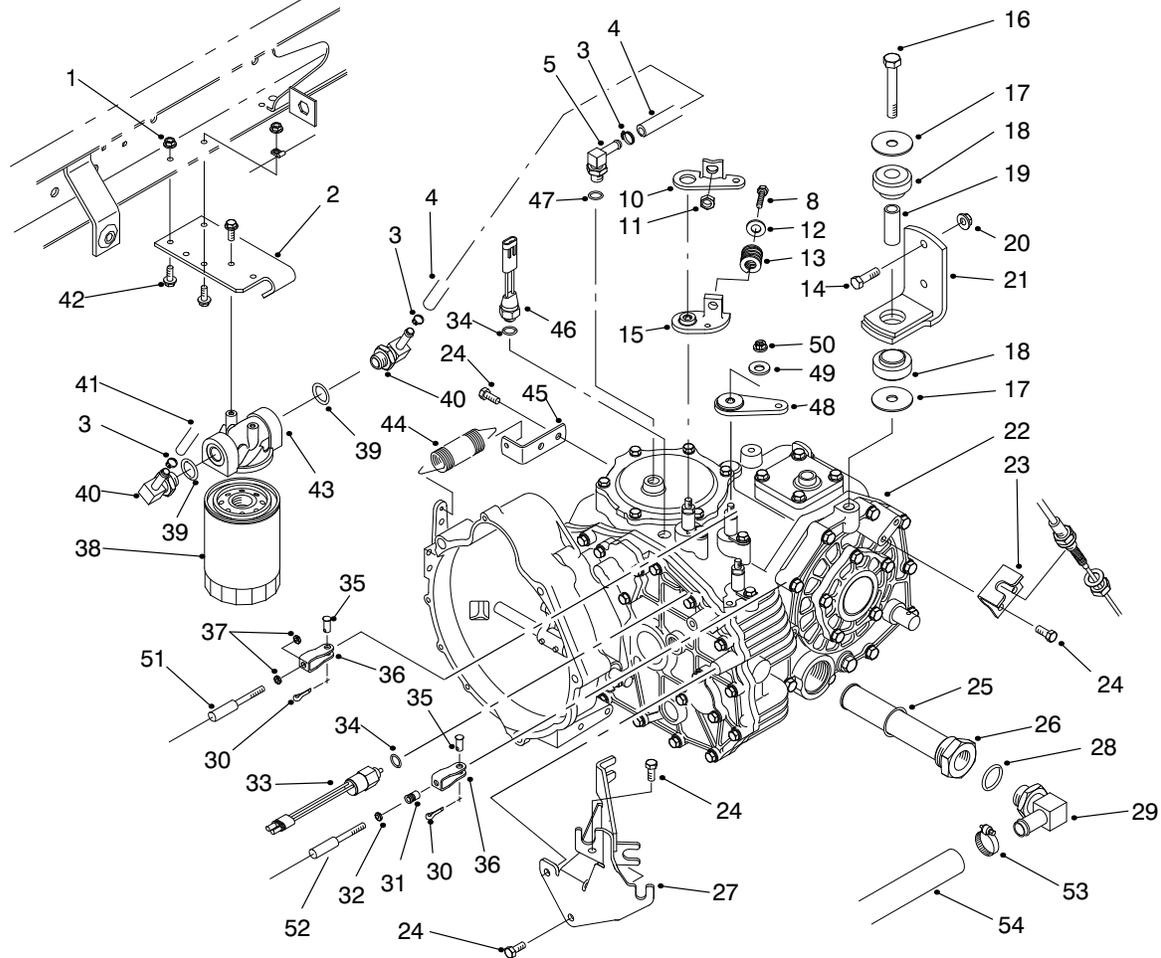

T-1607-1

## TRANSAXLE INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-33	Nut-HFH	1	27	87-4820	Bracket-Cable	1
2	87-7040	Bracket-Oil Filter	1	28	237-81	O-Ring	1
3	2412-36	Clamp-Hose	3	29	353-987	Fitting-Hydraulic 90° (Incl. Ref. #28)	1
4	87-5730	Hose-Hydraulic	1	30	3272-6	Pin-Cotter	3
5	354-135	Fitting-Hydraulic 90° (Incl. Ref. #47)	1	31	32148-15	Nut-Clinch	1
8	323-10	Screw-HH	1	32	3219-14	Nut-Jam	1
10	87-8250	Plate-Shift Arm	1	33	87-6710	Switch-Supervisor	1
11	32128-21	Nut-Lock	1	34	237-30	O-Ring	2
12	3256-4	Washer-Flat	1	35	283-62	Pin-Clevis	3
13	87-6910	Spring-Compression	1	36	87-2310	Clevis-Cable	2
14	323-7	Screw-HH	4	37	3220-1	Nut-Jam	4
15	87-7970	Arm-Shift	1	38	54-0110	Element-Oil Filter	1
16	3215-1	Screw-HH	2	39	237-79	O-Ring	2
17	87-5100	Washer	4	40	354-134	Fitting-Hydraulic 90° (Incl. Ref. #39)	2
18	87-4970	Asm-Transaxle Mount (Incl. Ref. #19)	2	41	87-4920	Hose-Hydraulic (Model 07200 & 07202)	1
19		Spacer-Mount	2	41	94-5255	Hose-Hydraulic (Model 07200TC)	1
20	3296-39	Nut-HFH	4	42	3234-4	Screw-HFH	4
21	87-5800	Bracket-Mount	2	43	87-8780	Head-Oil Filter	1
22	87-9250	Asm-Transaxle	1	44	68-9950	Spring-Extension	1
23	87-4470	Bracket	1	45	87-7170	Bracket-Clutch Spring	1
24	66-3160	Screw-HH	7	46	72-4310	Switch-Ball N.C.	1
25	237-123	O-Ring	1	47	237-42	O-Ring	1
26	87-3990	Asm-Oil Strainer (Incl. Ref. #25)	1				

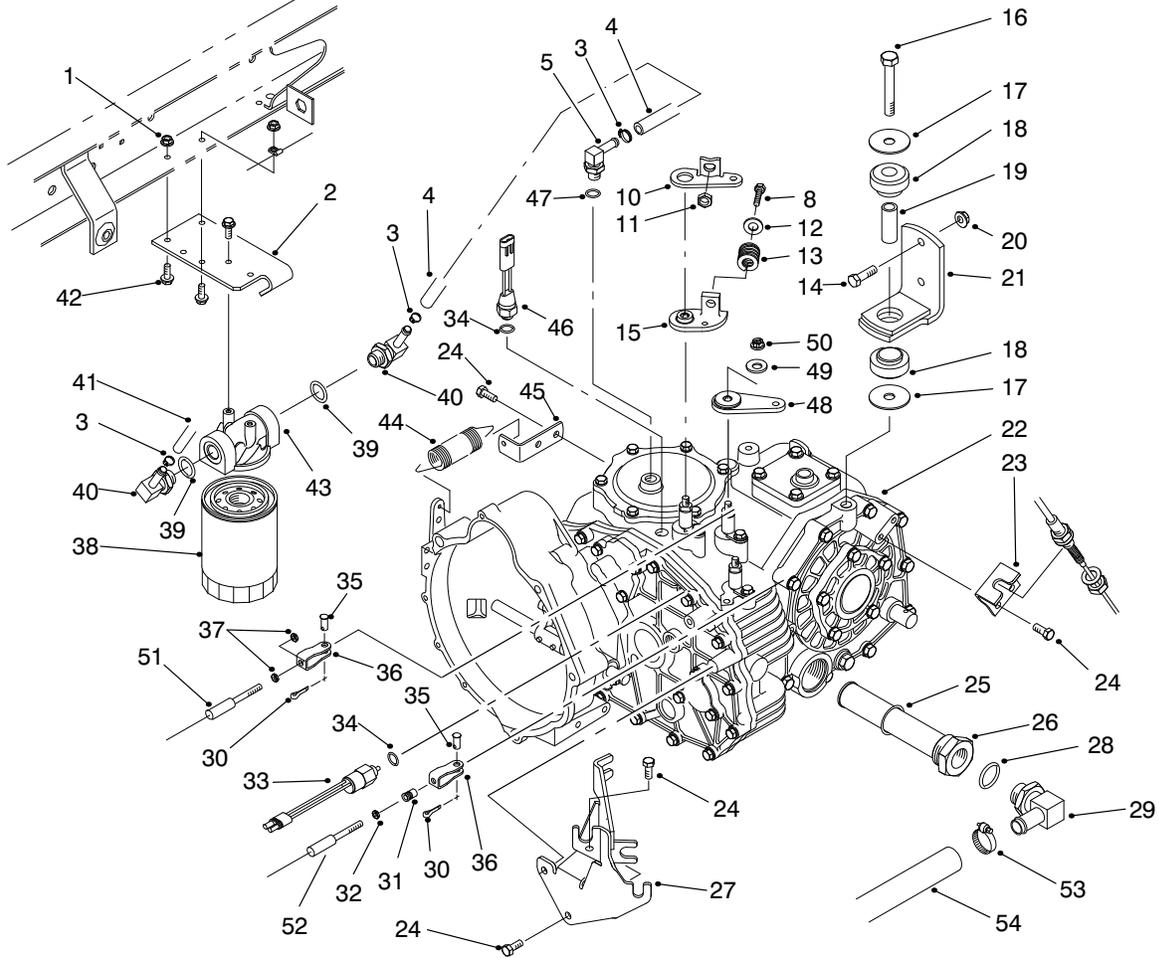


T-1607-1

## TRANSAXLE INSTALLATION ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
48	87-7960	Lever-Shift Arm	2	53	2412-34	Clamp-Hose	1
49	80-6990	Washer-Flat	3	54	87-3670	Hose-Hydraulic	1
50	48-9520	Nut-Lock	3	*	87-7160	Asm-Cable Clevis (Incl. Ref. #31)	1
51	87-4260	Asm-Shift Cable (Incl. Ref. #37)	2				
52	87-4420	Asm-Hi-Lo Cable (Incl. Ref. #32)	1				


PROTOTYPE

\*Not Illustrated

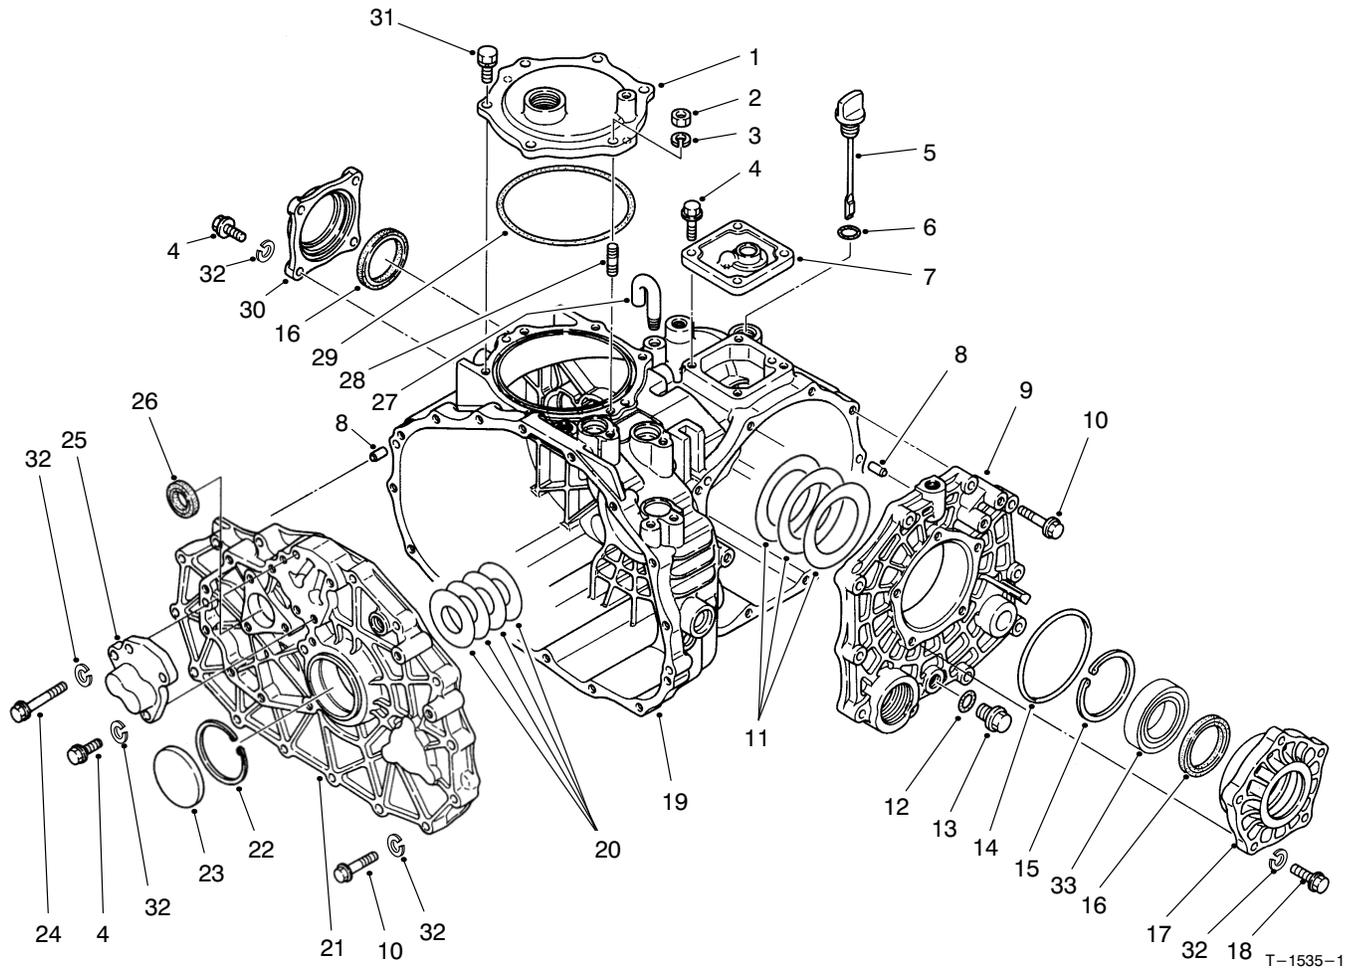

## TRANSAXLE CASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0656	Cover—Power Take Off	1	17	92-0654	Carrier—Differential	1
2	48-7930	Nut—Hex.	1	18	48-7730	Screw—HH	5
3	92-0762	Washer—Lock	1	19	92-0651	Case—Transaxle	1
4	60-6750	Screw—HH	11	20	92-0808	Shim Set	1
5	92-0662	Cap—Oil	1	21	92-0657	Plate—Center	1
6	92-0788	O—Ring	1	22	92-0759	Ring—Retaining	1
7	92-0652	Cover—Upper	1	23	92-0807	Cap—Sealing	1
8	92-0765	Pin—Alignment	4	24	48-7560	Screw—HH	1
9	92-0653	Cover—Side	1	25	92-0706	Cap—Fork Shaft	1
10	42-9530	Screw—HH	25	26	92-0791	Seal—Oil	1
11	92-0809	Shim Set	1	27	92-0743	Breather—Air	1
12		O—Ring	1	28	92-0804	Stud	1
13	92-0773	Asm—Drain Plug (Incl. Ref. #12)	1	29	92-0790	O—Ring	1
14	92-0789	O—Ring	1	30	92-0655	Cover—Seal	1
15	92-0760	Ring—Retaining	1	31	92-0796	Screw—HH	5
16	92-0793	Seal—Oil	2	32	42-9850	Washer—Lock	42
				33	92-0775	Bearing—Ball	2

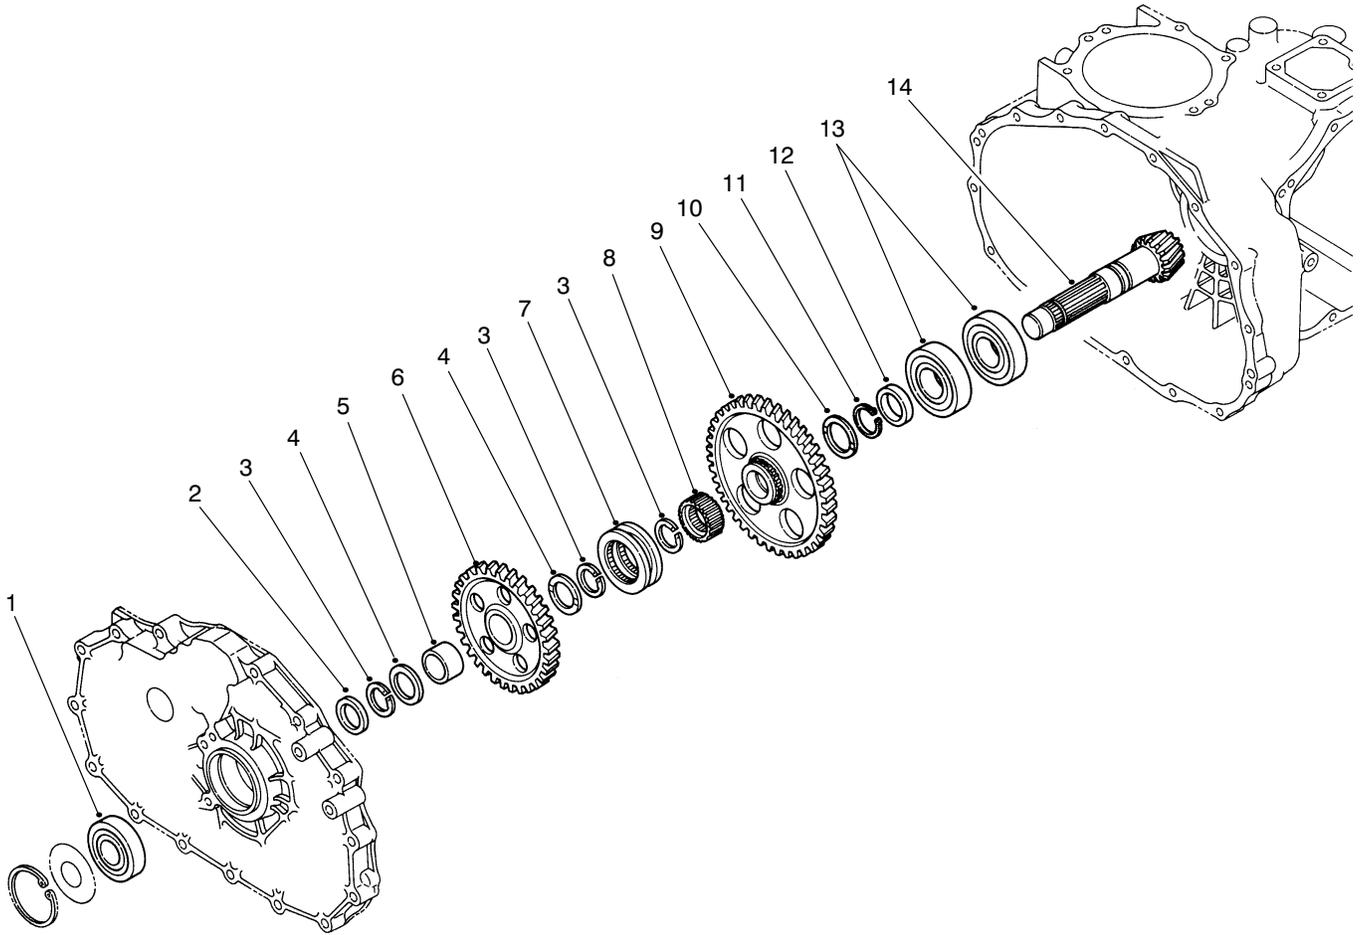


T-1536-1

## COUNTERSHAFT ASM

Ref. No.	Part No.	Description	No. Used
1	92-0712	Bearing--Ball	1
2	92-0716	Collar	1
3	92-0764	Ring--Retaining	3
4	92-0711	Washer--Thrust	2
5	92-0783	Sleeve--Inner	1
6	92-0715	Gear--49T	1
7	92-0718	Shifter--Hi--Lo	1
8	92-0719	Collar--Spline	1

Ref. No.	Part No.	Description	No. Used
9	92-0717	Gear--71T	1
10	92-0741	Washer--Thrust	1
11	92-0755	Ring--Retaining	1
12	92-0713	Collar	1
13	92-0714	Bearing--Ball	2
14	92-0710	Asm--Counter Shaft (Incl. Ring Gear)	1


PROTOTYPE

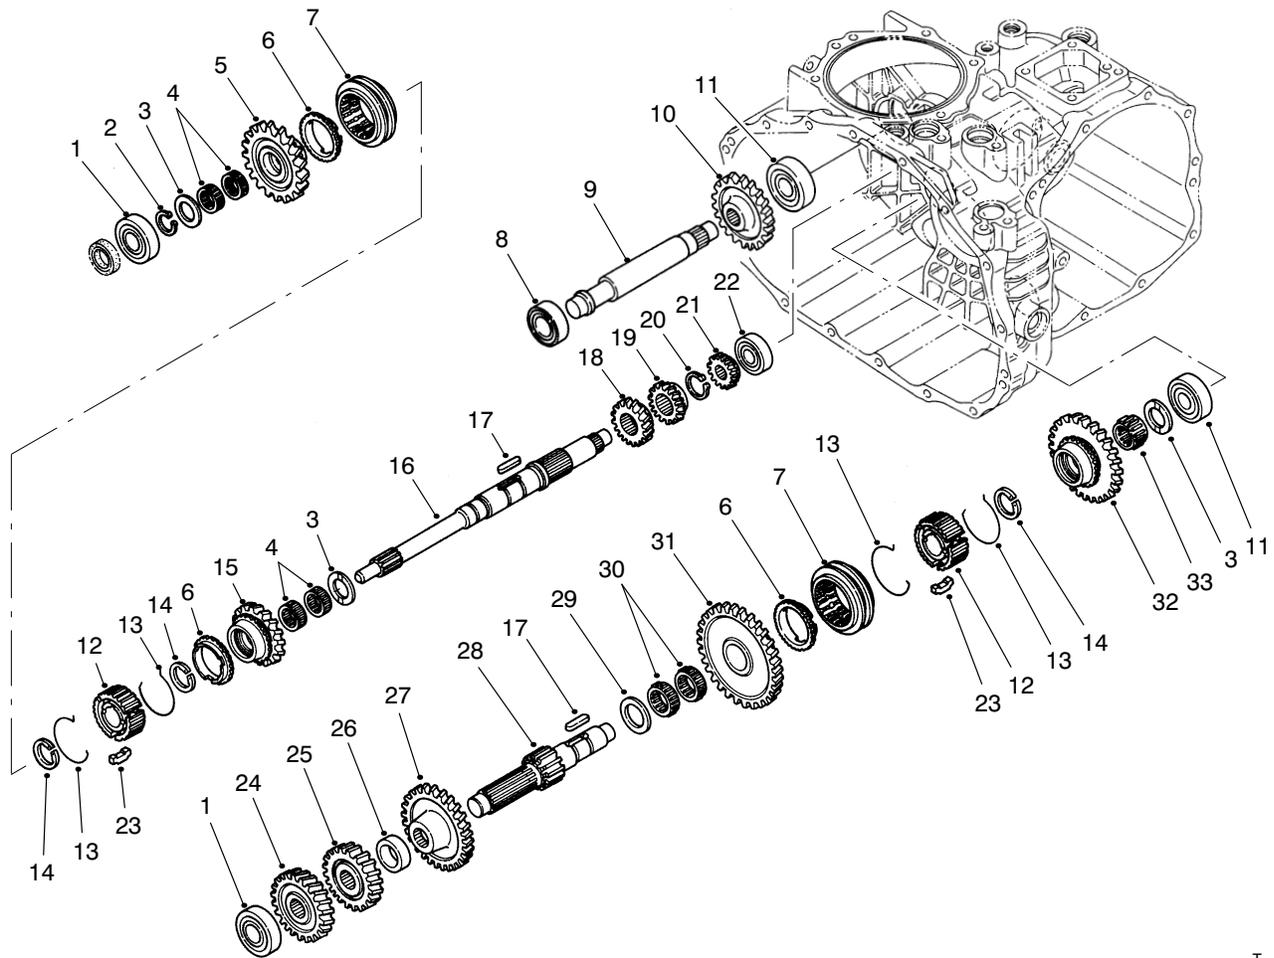

T-1533-1

## TRANSAXLE GEAR SHAFTS ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	251-8	Bearing-Ball	2	18	92-0687	Gear-16T	1
2	92-0753	Ring-Retaining	1	19	92-0672	Gear-18T	1
3	92-0740	Washer-Thrust	3	20	92-0754	Ring-Retaining	1
4	92-0781	Bearing-Needle	4	21	92-0673	Gear-14T	1
5	92-0820	Gear-27T	1	22	92-0650	Bearing-Ball	1
6	92-0667	Ring-Synchro	3	23	92-0665	Key-Synchro	6
7	92-0668	Shifter-Synchro	2	24	92-0822	Gear-28T	1
8	251-346	Bearing-Ball	1	25	92-0679	Gear-23T	1
9	92-0824	Shaft-Reverse Idler	1	26	92-0680	Collar	1
10	92-0684	Gear-33T	1	27	92-0823	Gear-43T	1
11	92-0778	Bearing-Ball	2	28	92-0674	Shaft-Reduction	1
12	92-0664	Hub-Synchro	2	29	92-0682	Washer-Thrust	1
13	92-0666	Spring-Synchro	4	30	92-0681	Bearing-Needle	2
14	92-0763	Ring-Retaining	3	31	92-0677	Gear-49T	1
15	92-0821	Gear-24T	1	32	92-0819	Gear-40T	1
16	92-0663	Shaft-Main	1	33	92-0782	Bearing-Needle	1
17	92-0772	Key	2				

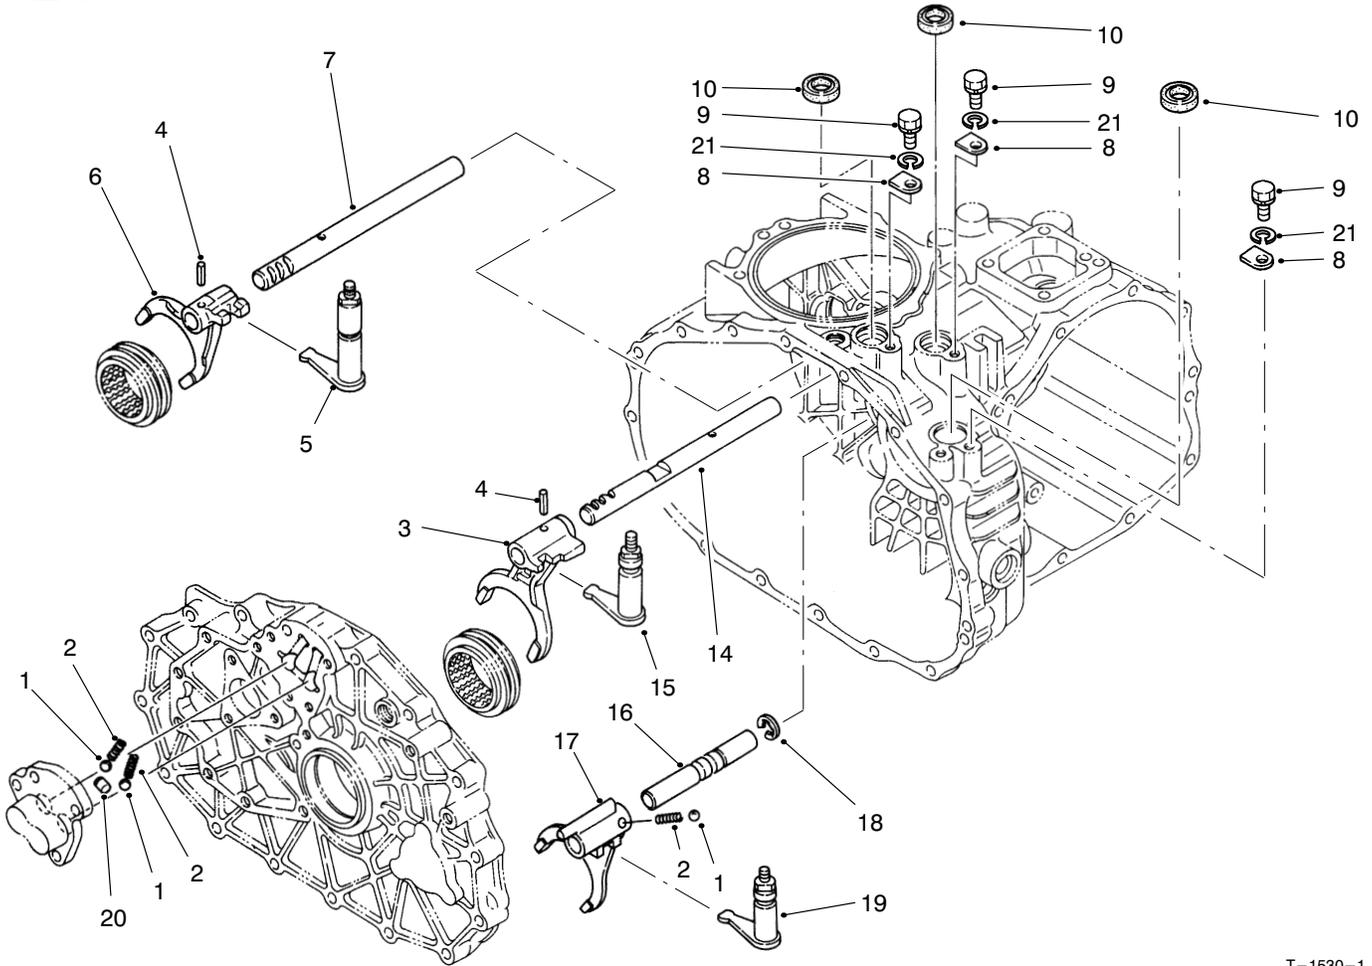


T-1530-1

### SHIFT FORK ASM

Ref. No.	Part No.	Description	No. Used
1	92-0785	Ball	3
2	92-0731	Spring-Compression	3
3	92-0700	Fork-Shift R-1	1
4	92-0769	Pin-Spring	2
5	92-0817	Arm-Shift Fork 2-3	1
6	92-0701	Fork-Shift 2-3	1
7	92-0699	Shaft-Fork 2-3	1
8	92-0732	Plate-Keeper	3
9	48-7700	Screw-HH	3


Ref. No.	Part No.	Description	No. Used
10	92-0729	Seal-Oil	3
14	92-0698	Shaft-Fork R-1	1
15	92-0816	Arm-Shift Fork R-1	1
16	92-0708	Shaft-Fork Hi-Lo	1
17	92-0709	Fork-Shift Hi-Lo	1
18	92-0761	Ring-Retaining	1
19	92-0818	Arm-Shift Fork Hi-Lo	1
20	92-0705	Lock-Spindle	1
21	42-9850	Washer-Lock	3

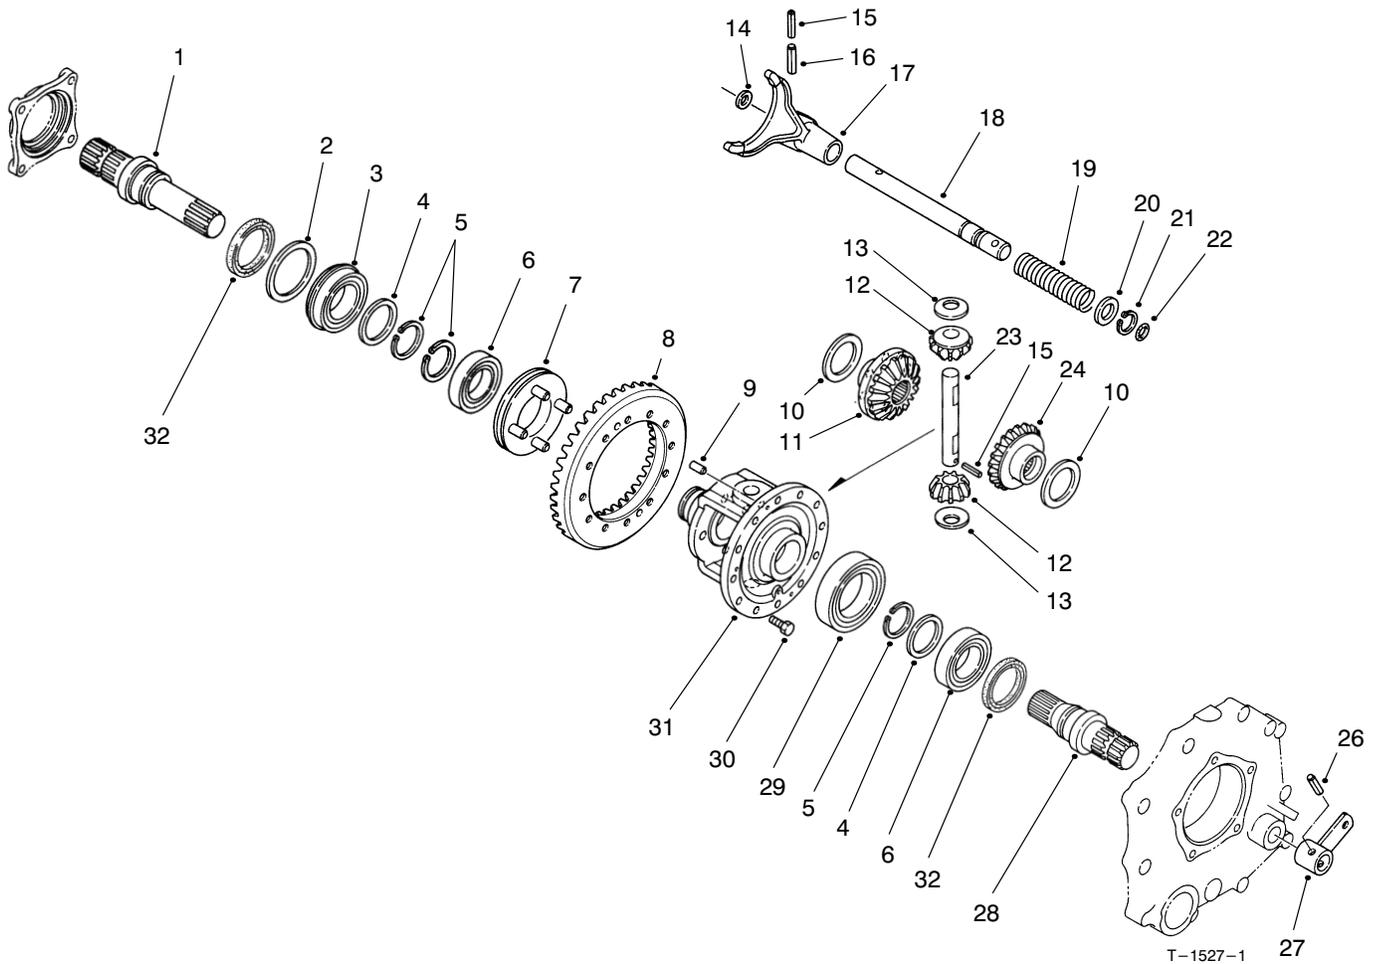

## DIFFERENTIAL GEAR ASM

Ref. No.	Part No.	Description	No. Used
1	92-0726	Shaft-Axle R.H.	1
2	92-0728	Washer	1
3	92-0780	Bearing-Ball	1
4	92-0727	Washer	2
5	92-0756	Ring-Retaining	3
6	92-0775	Bearing-Ball	2
7	92-0730	Slider-Differential Lock	1
8	92-0710	Asm-Ring Gear (Incl. Counter Shaft)	1
9	92-0765	Pin-Alignment	2
10	92-0747	Washer-Thrust	2
11	92-0746	Gear-Side R.H.	1
12	92-0748	Gear-Pinion	2
13	92-0750	Washer	2
14	92-0744	Washer	1
15	92-0768	Pin-Spring	2

Ref. No.	Part No.	Description	No. Used
16	92-0771	Pin-Spring	1
17	92-0721	Fork-Differential Lock	1
18	92-0722	Shaft-Lock Fork	1
19	92-0723	Spring-Compression	1
20	92-0733	Washer	1
21	92-0753	Ring-Retaining	1
22	92-0787	O-Ring	1
23	92-0749	Shaft-Pinion	1
24	92-0745	Gear-Side L.H.	1
26	92-0770	Pin-Spring	1
27	92-0724	Arm-Differential Lock	1
28	92-0725	Shaft-Axle L.H.	1
29	92-0776	Bearing-Ball	1
30	92-0803	Screw-HHF	12
31	92-0720	Case-Differential	1
32	92-0793	Seal-Oil	2

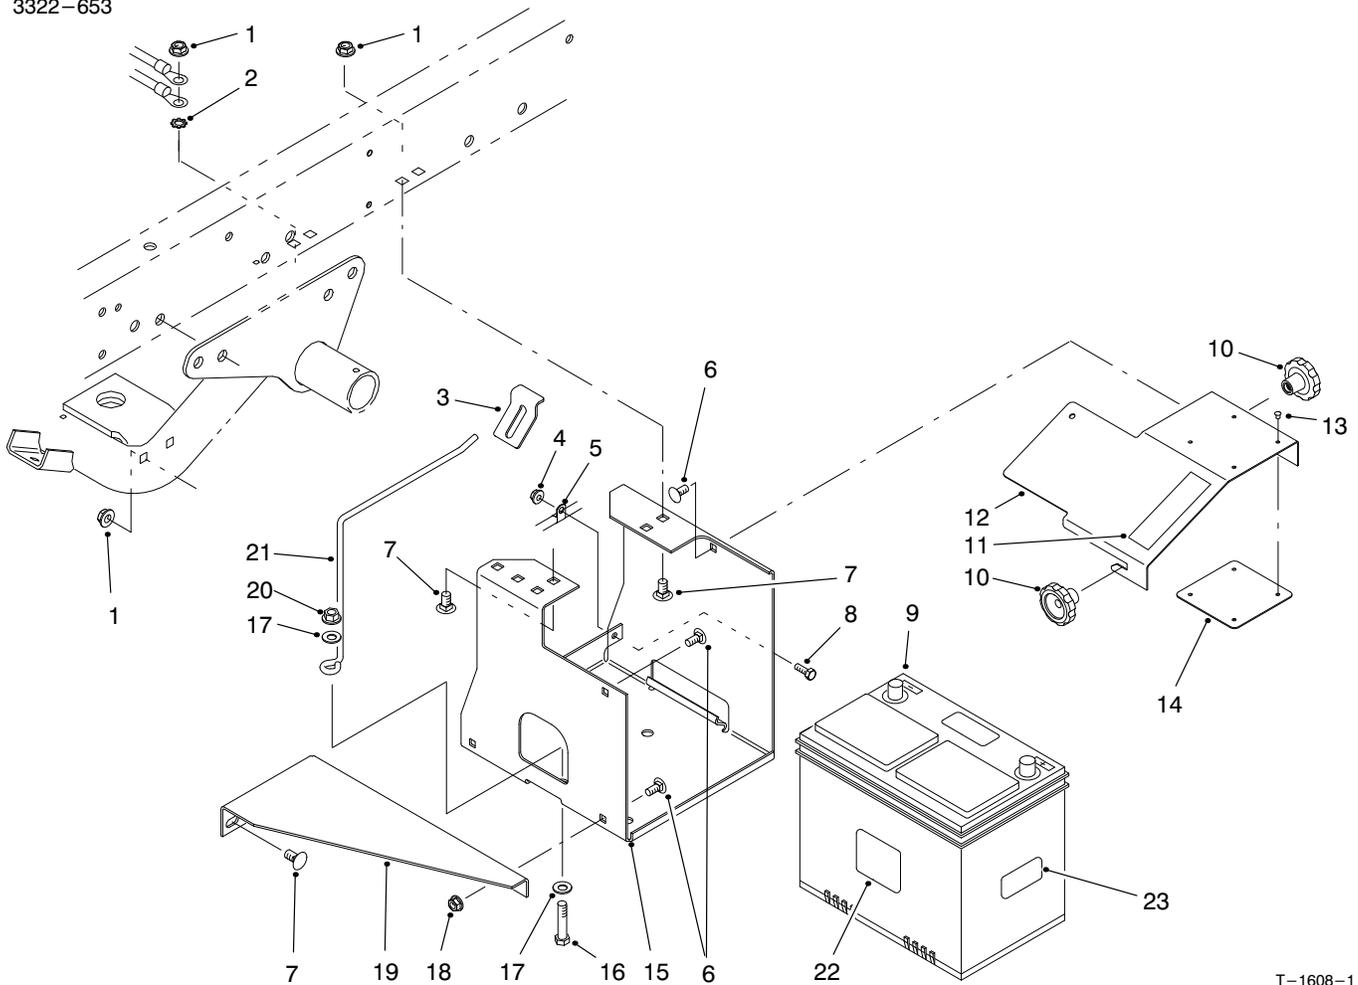


T-1608-1

## BATTERY MOUNT ASM

Ref. No.	Part No.	Description	No. Used
1	3290-357	Nut-HFH	6
2	3255-9	Washer-Lock ETLW	1
3	87-7610	Tab-Battery Support	1
4	32128-33	Nut-HFH	1
5	2412-89	Clamp-R	1
6	3230-23	Bolt-CARR	4
7	3231-21	Bolt-CARR	6
8	321-4	Screw-HH	1
9	55-7290	Battery	1
10	19-4050	Knob	2
11	36-3400	Decal-No Step	1
11	93-6687	Decal-No Step (Europe)	1
11	84-2780	Decal-No Step (Japan)	1

Ref. No.	Part No.	Description	No. Used
12	87-5130	Cover-Battery Base	1
13	3296-27	Rivet-Plastic	4
14	87-7620	Shield-Plastic	1
15	87-5120	Bracket-Battery Base	1
16	323-9	Screw-HH	1
17	3256-24	Washer-Flat	2
18	32128-20	Nut-HFH	2
19	87-5110	Support-Lower	1
20	3296-39	Nut-HFH	1
21	87-7600	Rod-Battery Support	1
22	93-6668	Decal-Charging (Europe)	1
23	93-7276	Decal-Danger (Europe)	1

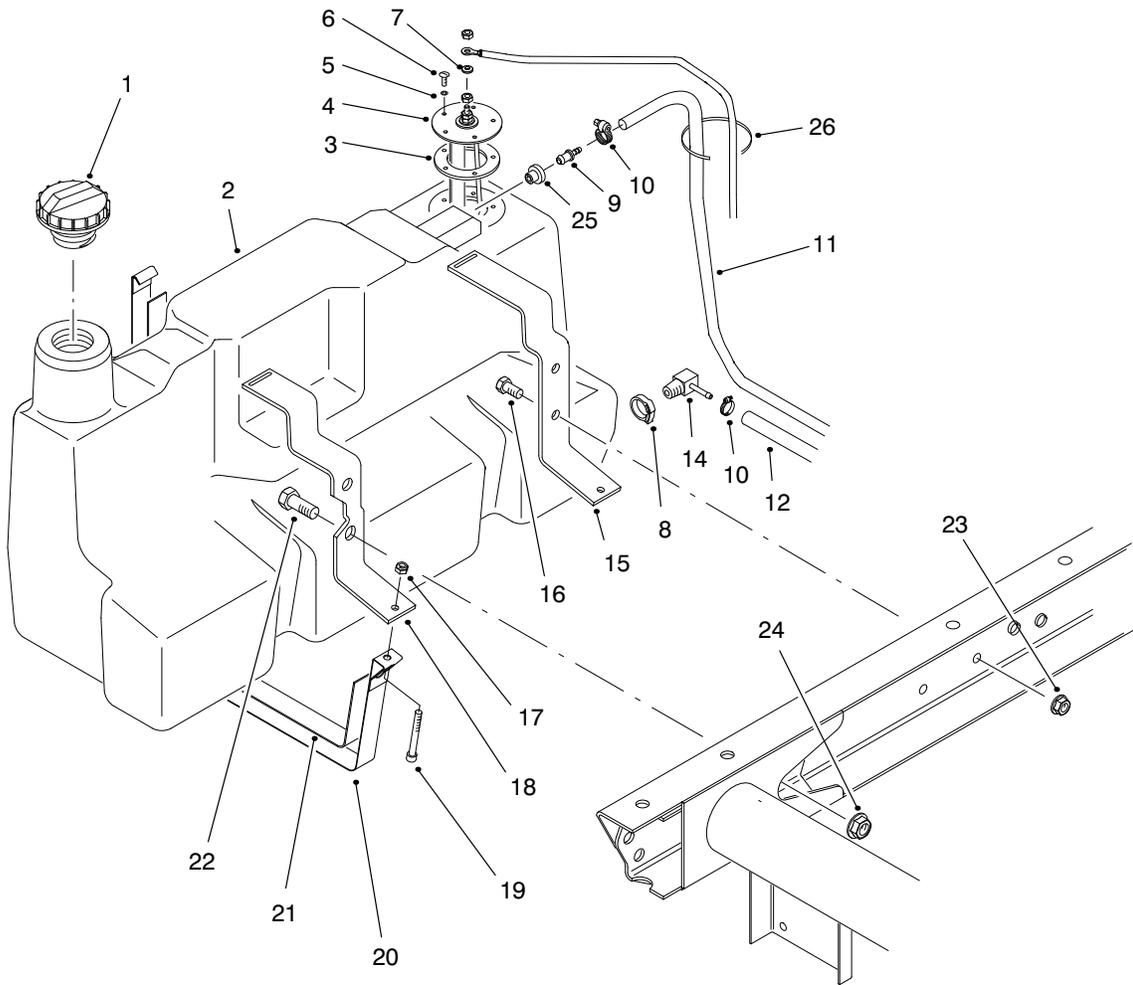


T-1609-3

### FUEL TANK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-3101	Cap-Fuel (US)	1	14	353-781	Fitting-Fuel 90°	1
*	93-7170	Cap-Fuel (CE)	1	15	87-3140	Support-Rear	1
2	98-2915	Asm-Fuel Tank (Incl. Ref. #8, 9,14 & 25)	1	16	323-4	Screw-HH	2
3	62-7650	Gasket-Sending Unit	1	17	3296-42	Nut-Lock	2
4	63-7640	Unit-Sending	1	18	87-3150	Support-Front	1
5	3253-15	Washer-Lock	5	19	3274-54	Screw-HSH	2
6	32122-24	Screw-RH	5	20	87-3160	Strap-Tank Support	2
7	5-3637	Washer-Flat	1	21	87-3170	Pad-Tank Support Strap	2
8	2412-36	Clamp	1	22	3234-38	Screw-HH	2
9	98-2952	Fitting-Fuel Straight	1	23	3290-357	Nut-HFH	2
10	2412-108	Clamp-Hose	2	24	32128-23	Nut-HFH	2
11	93-2298	Hose-Fuel	1	25	46-6560	Bushing	1
12	63-9640	Hose-Fuel	1	26	3290-378	Tie-Cable	1

\*Not Illustrated

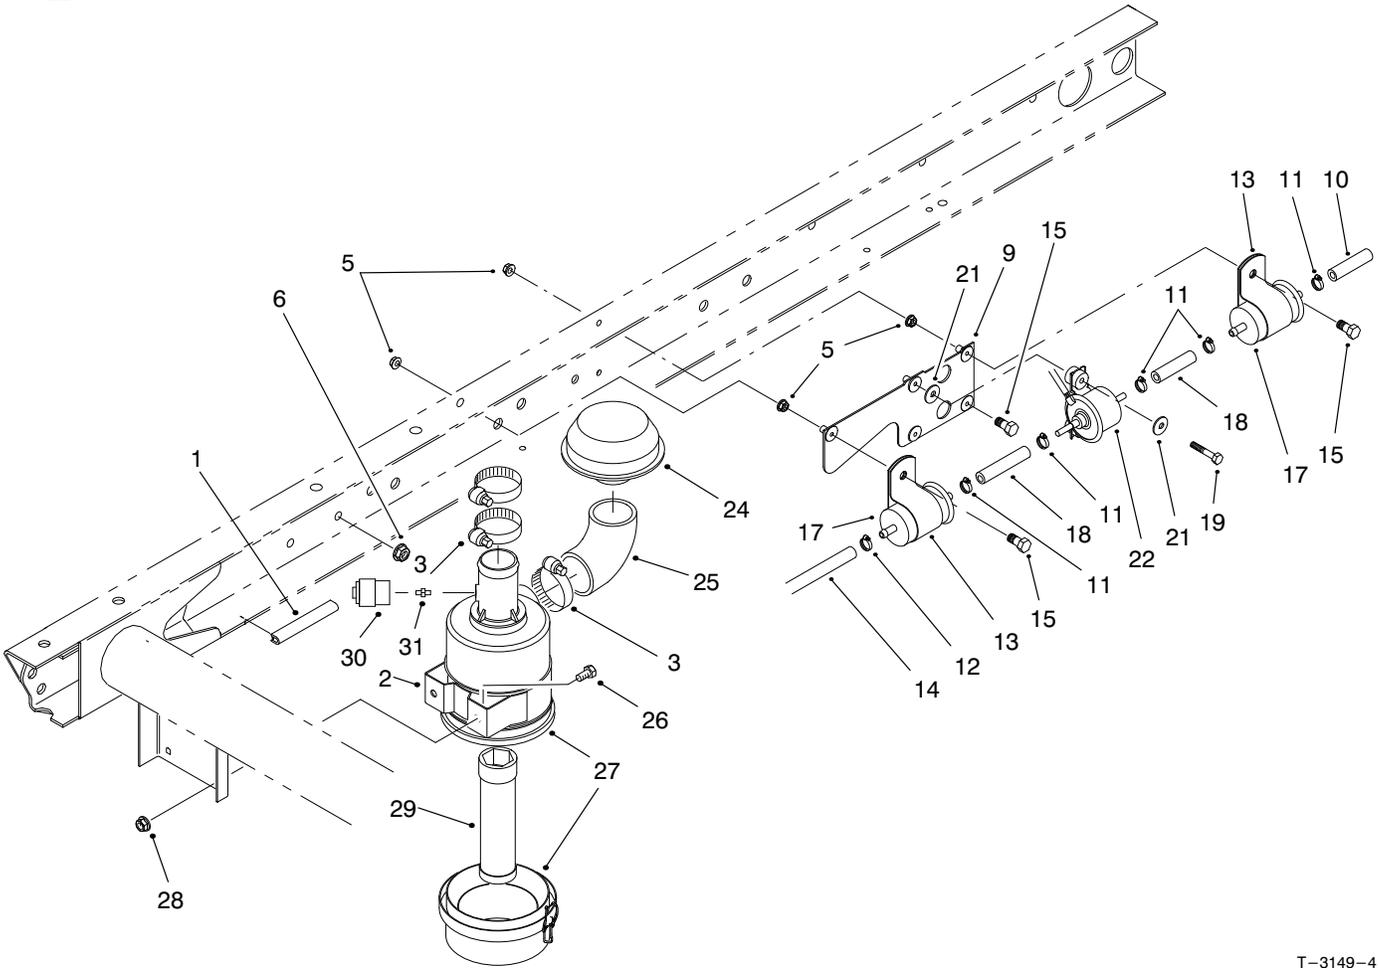


T-3149-4

## AIR CLEANER & FUEL SUPPLY ASM

Ref. No.	Part No.	Description	No. Used
1	43-4300	Trim	3
2	93-2191	ASM-Band, Mounting	1
3	2412-92	Clamp-Hose	2
5	32128-33	Nut-Hex. Flange	6
6	3290-357	Nut-HFH	2
9	99-9402	Plate	1
10	94-9502	Hose-Fuel	1
11	2412-98	Clamp-Hose	2
12	2412-108	Clamp-Hose	1
13	2412-148	Clamp-R	2
14	63-9640	Hose-Fuel	1
15	3234-10	Screw-HFH	3
17	99-9404	Filter-Fuel	2
18	99-9415	Hose-Fuel	2

Ref. No.	Part No.	Description	No. Used
19	3234-21	Screw-HFH	2
21	3256-67	Washer-Flat	4
22	92-2007	Pump-Fuel	1
24	46-7510	Hood-Air Inlet	1
25	94-5248	Elbow-Intake, Air	1
26	322-2	Screw-HH	2
27	95-5805	ASM-Air Cleaner	1
28	32128-20	Nut-HFH	2
29	98-2982	Filter-Element, Safety (Optional)	1
30	93-9164	Indicator-Service (Optional)	1
31	94-1416	Asm-Adapter, Indicator (Optional)	1

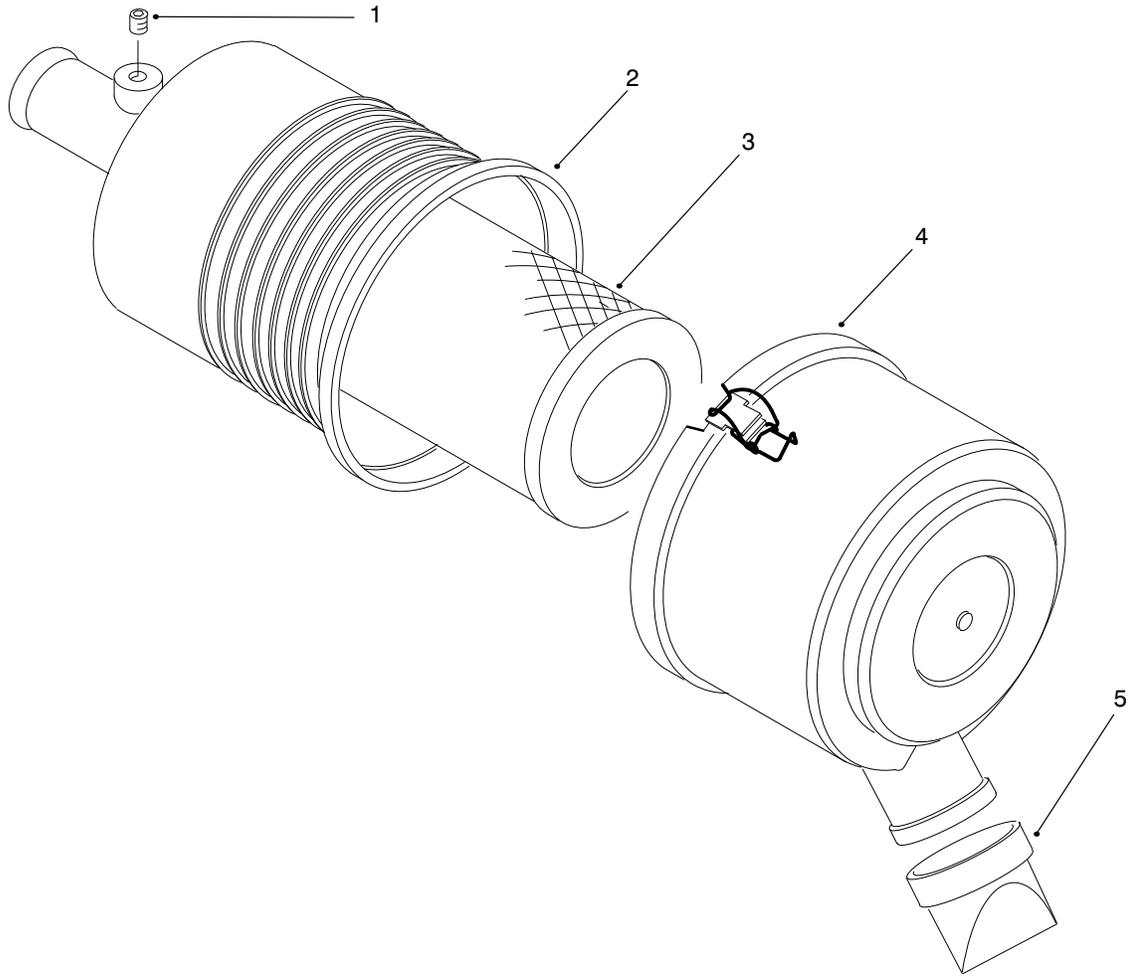


T-2607

### AIR CLEANER ASM NO. 95-5805

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	285-17	Plug	1	4	94-3652	Asm-Cover	1
2		Asm-Body	1	5	94-1414	Vacuator	1
3	93-2195	Element-Air Cleaner	1				
*	98-2982	Element-Filter, Safety (Optional)	1				

PROTOTYPE

\*Not Illustrated

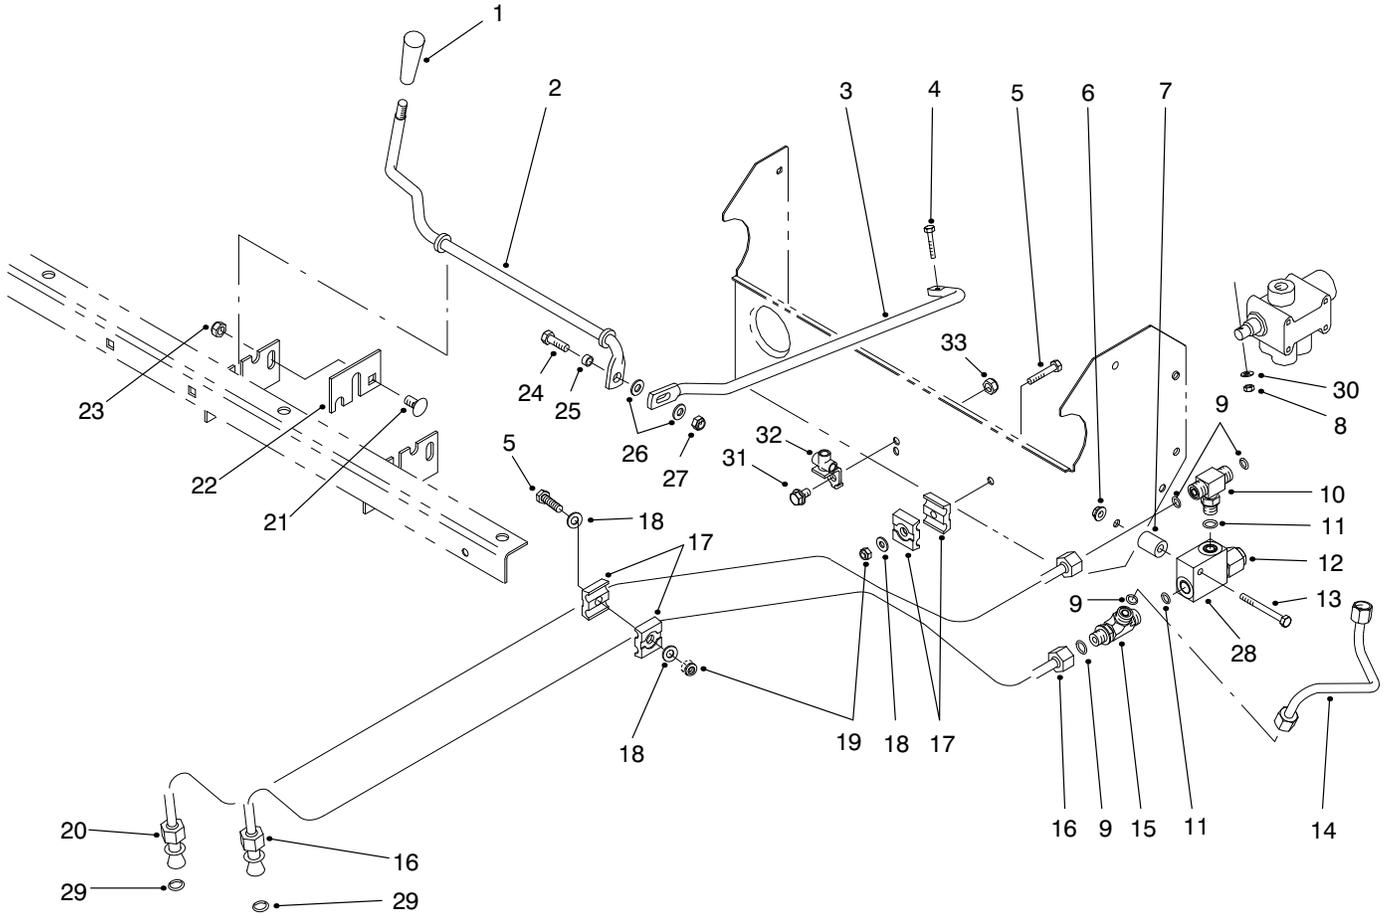


T-1610-1

### LIFT VALVE LINKAGE ASM

Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1
2	87-4500	Rod-Pivot	1
3	87-4510	Rod-Connecting	1
4	87-5150	Screw-HH	1
5	321-9	Screw-HH	2
6	32128-33	Nut-HFH	1
7	75-9610	Spacer	1
8	87-5140	Nut-Lock	1
9	237-22	O-Ring	4
10	340-94	Fitting-Hydraulic Tee (Incl. Ref. #9 & 11)	1
11	237-42	O-Ring	2
12	92-2160	Cartridge-Relief Valve	1
13	321-15	Screw-HH	1
14	87-4560	Tube-Hydraulic	1
15	340-86	Fitting-Hydraulic Tee (Incl. Ref. #9 & 11)	1
16	87-9350	Asm-Hydraulic Tube (Incl. Ref. #29)	1
17	56-7973	Clamp-Hydraulic Tube	4

Ref. No.	Part No.	Description	No. Used
18	3256-22	Washer-Flat	3
19	3296-42	Nut-Lock	2
20	87-4540	Asm-Hydraulic Tube (Incl. Ref. #29)	1
21	3231-21	Bolt-CARR	1
22	87-4490	Bracket-Hold-Down	1
23	3296-39	Nut-Lock	1
24	322-5	Screw-HH	1
25	87-5080	Spacer-Connecting	1
26	3256-23	Washer-Flat	2
27	3296-29	Nut-Lock	1
28	92-2161	Body-Relief Valve	1
29	39-7310	O-Ring	2
30	3256-14	Washer-Flat	1
31	322-2	Screw-HH	1
32	87-3560	Tee-Brake Tube	1
33	32128-20	Nut-HFH	1
*	87-3680	Asm-Relief Valve (Incl. Ref. #12 & 28)	1


\*Not Illustrated

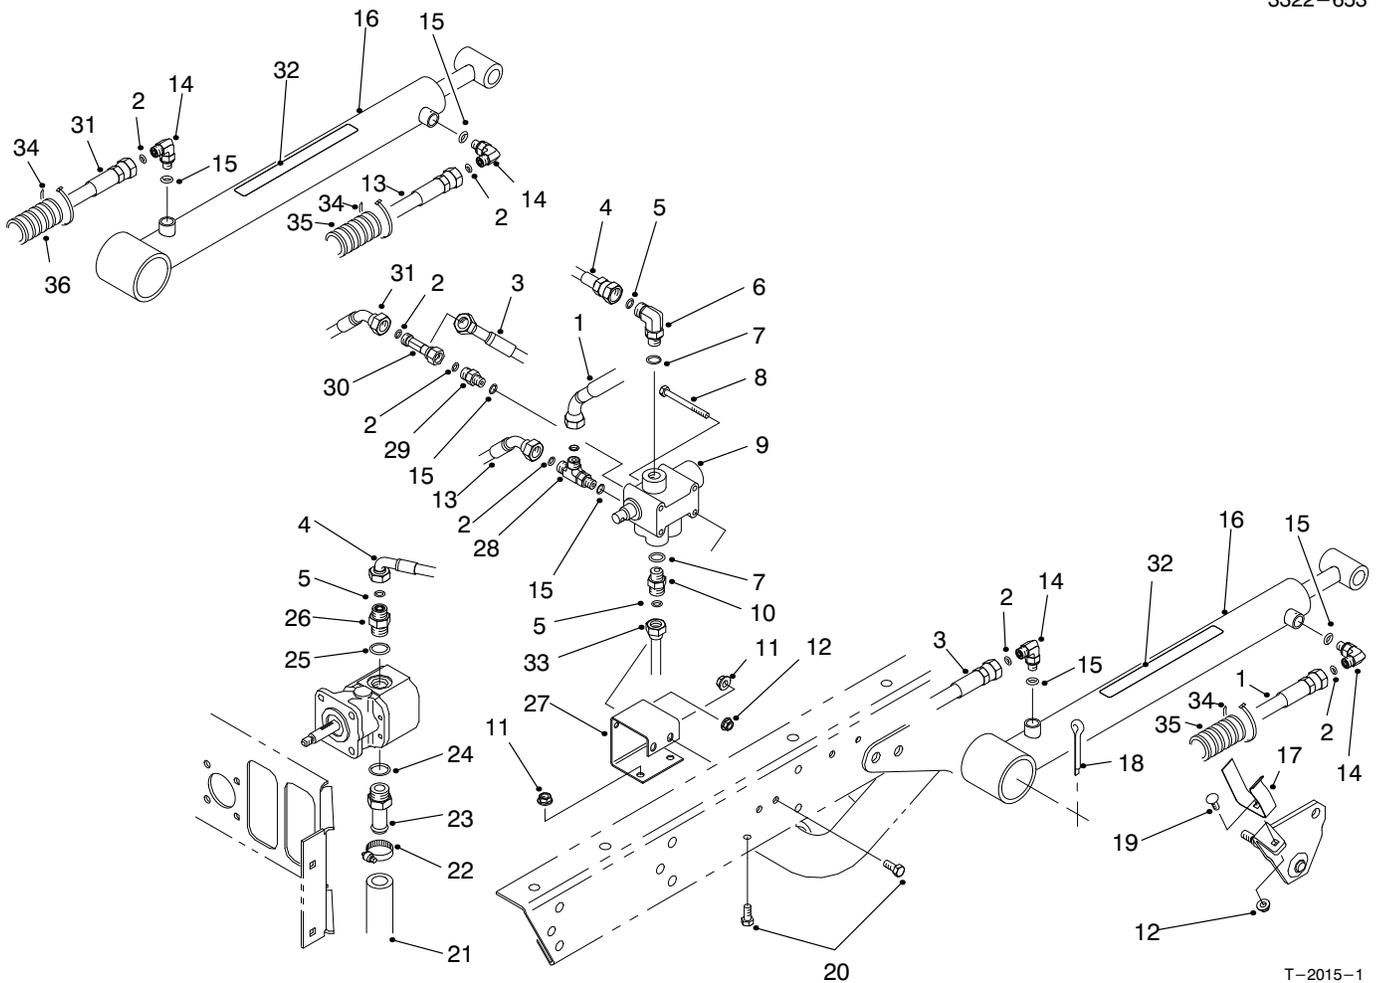

T-2015-1

## LIFT VALVE & CYLINDER ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-2697	Hose-Hydraulic LH	1	17	87-3720	Retainer-Cylinder	2
2	237-21	O-Ring	6	18	3272-37	Pin-Cotter	2
3	87-4880	Hose-Hydraulic LH	1	19	3229-25	Screw-CARR	2
4	87-4870	Hose-Hydraulic (Model 07200 & 07202)	1	20	322-3	Screw-HH	4
4	93-9552	Hose-Hydraulic (Model 07200TC)	1	21	87-3670	Hose-Hydraulic	1
5	237-22	O-Ring	3	22	2412-34	Clamp	1
6	340-77	Fitting-Hydraulic 90° (Incl. Ref. #5 & 7)	1	23	354-136	Fitting-Hydraulic Straight (Incl. Ref. #24)	1
7	237-42	O-Ring	2	24	237-80	O-Ring	1
8	321-14	Screw-HH	2	25	237-79	O-Ring	1
9	43-1950	Valve	1	26	340-3	Fitting-Hydraulic Straight (Incl. Ref. #5 & 25)	1
10	340-2	Fitting-Straight (Incl. Ref. #5 & 7) (Model 07200 & 07202)	1	27	87-4520	Bracket-Dump Valve	1
10	340-77	Fitting-90° (Incl. Ref. #5 & 7) (Model 07200TC)	1	28	340-140	Fitting-Hydraulic Tee (Incl. Ref. #2 & 15)	1
11	32128-20	Nut-HFH	4	29	340-92	Fitting-Hydraulic Straight (Incl. Ref. #2 & 15)	1
12	32128-33	Nut-HFH	4	30	340-151	Fitting-Hydraulic Tee (Incl. Ref. #2)	1
13	87-4910	Hose-Hydraulic RH	1	31	87-4900	Hose-Hydraulic RH	1
14	340-132	Fitting-Hydraulic 90° (Incl. Ref. #2 & 15)	4	32	87-7930	Decal-Warning	2
15	237-78	O-Ring	4	32	93-9852	Decal-Warning (Europe)	2
16	94-5203	Asm-Hydraulic Cylinder (Incl. Ref. #32)	2	32	92-6415	Decal-Warning (Japan)	2
				33	87-4560	Tube-Hydraulic	1
				34	3290-378	Tie-Cable (Europe)	6
				35	24-7923	Conduit-Hose (Europe)	2
				36	24-7922	Conduit-Hose (Europe)	1

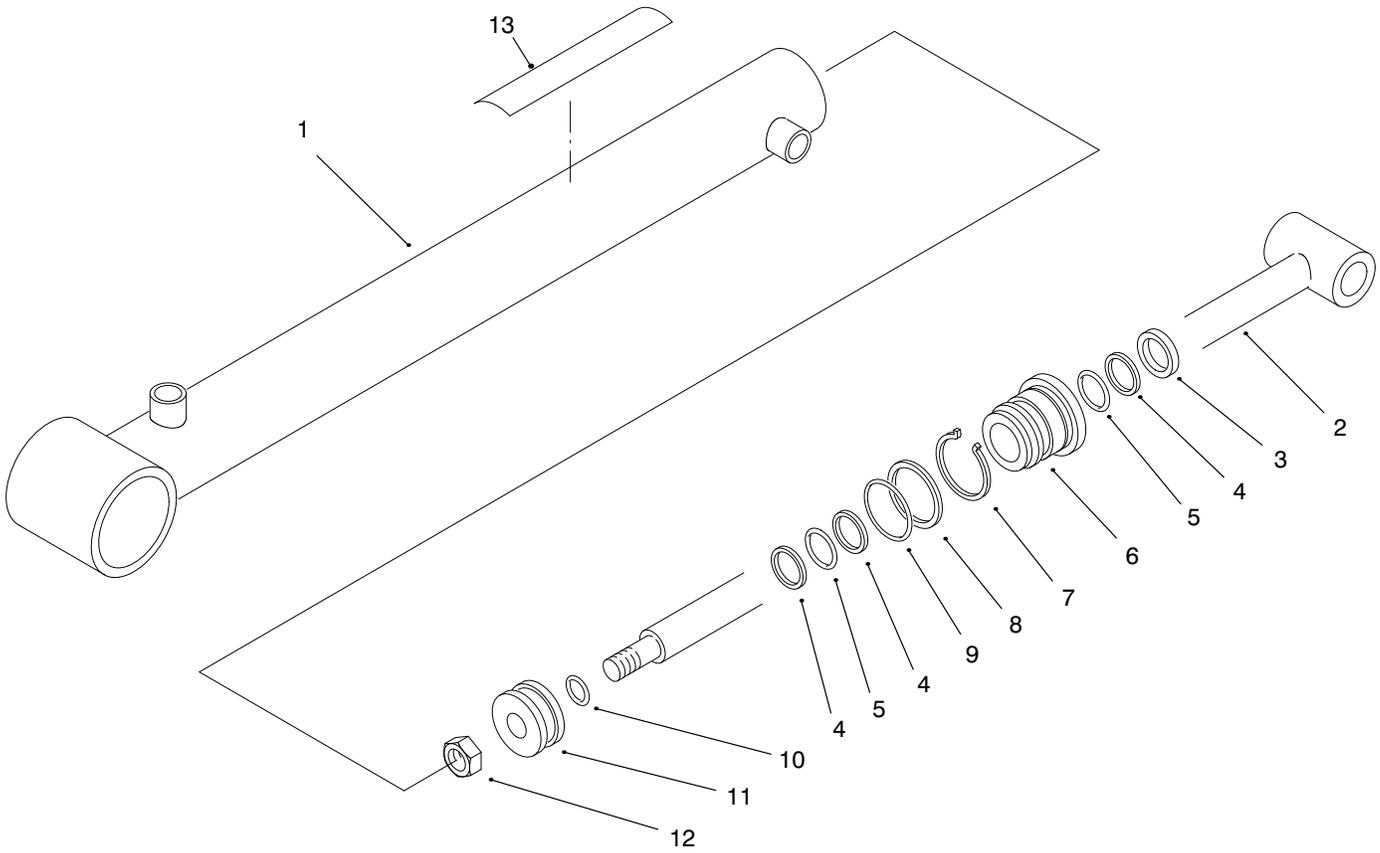

T-2342-1


## LIFT CYLINDER NO. 94-5203

Ref. No.	Part No.	Description	No. Used
1	94-5206	Asm-Barrel	1
2	94-5207	Shaft	1
3		Seal-Dust	1
4		Backup	3
5		O-Ring	2
6	92-2162	Head	1
7	84-1680	Ring-Retaining	1
8		Backup	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		O-Ring	1
11	43-5150	Piston	1
12	32152-10	Nut	1
13	87-7930	Decal-Warning	1
*	92-2165	Kit-Repair (Incl. Ref. #3-5 & 8-10)	1

PROTOTYPE

\*Not Illustrated

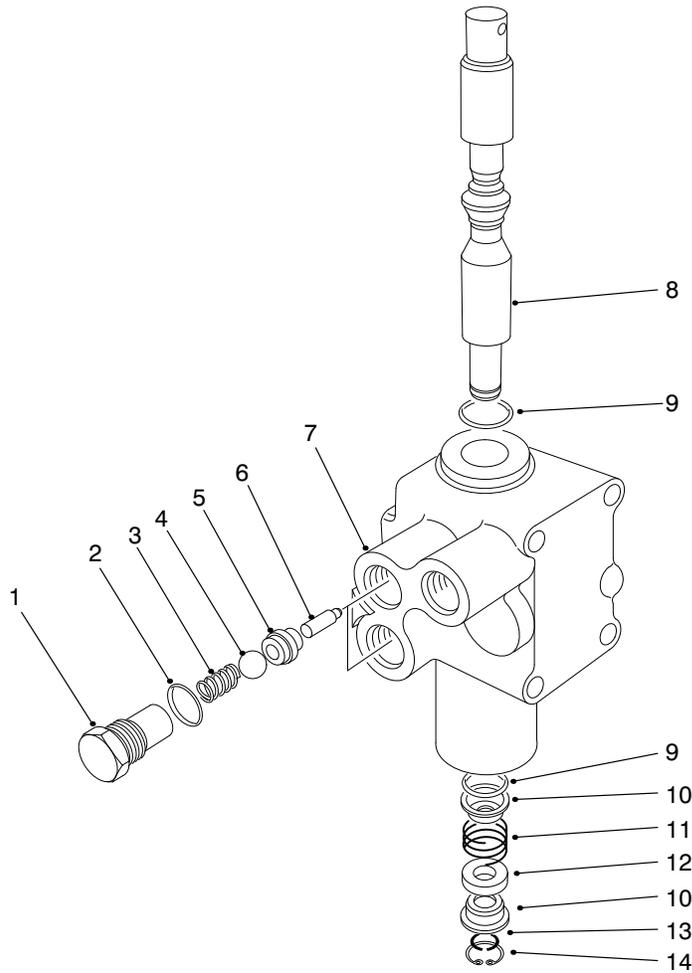


T-0280

### LIFT CONTROL VALVE ASM NO. 43-1950

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2	8	22-8420	Spool	1
2	237-42	O-Ring	2	9	22-8500	O-Ring	2
3	22-8340	Spring	2	10	22-8380	Retainer-Spring	2
4	22-8350	Ball	2	11	22-8410	Spring	1
5	22-8370	Seat-Check Valve	2	12	23-3030	Spacer	1
6	22-8360	Pin-Cam	2	13	22-8480	Ring-Retaining, Spool	1
7		Body	1	14	22-8490	Ring-Retaining	1

PROTOTYPE

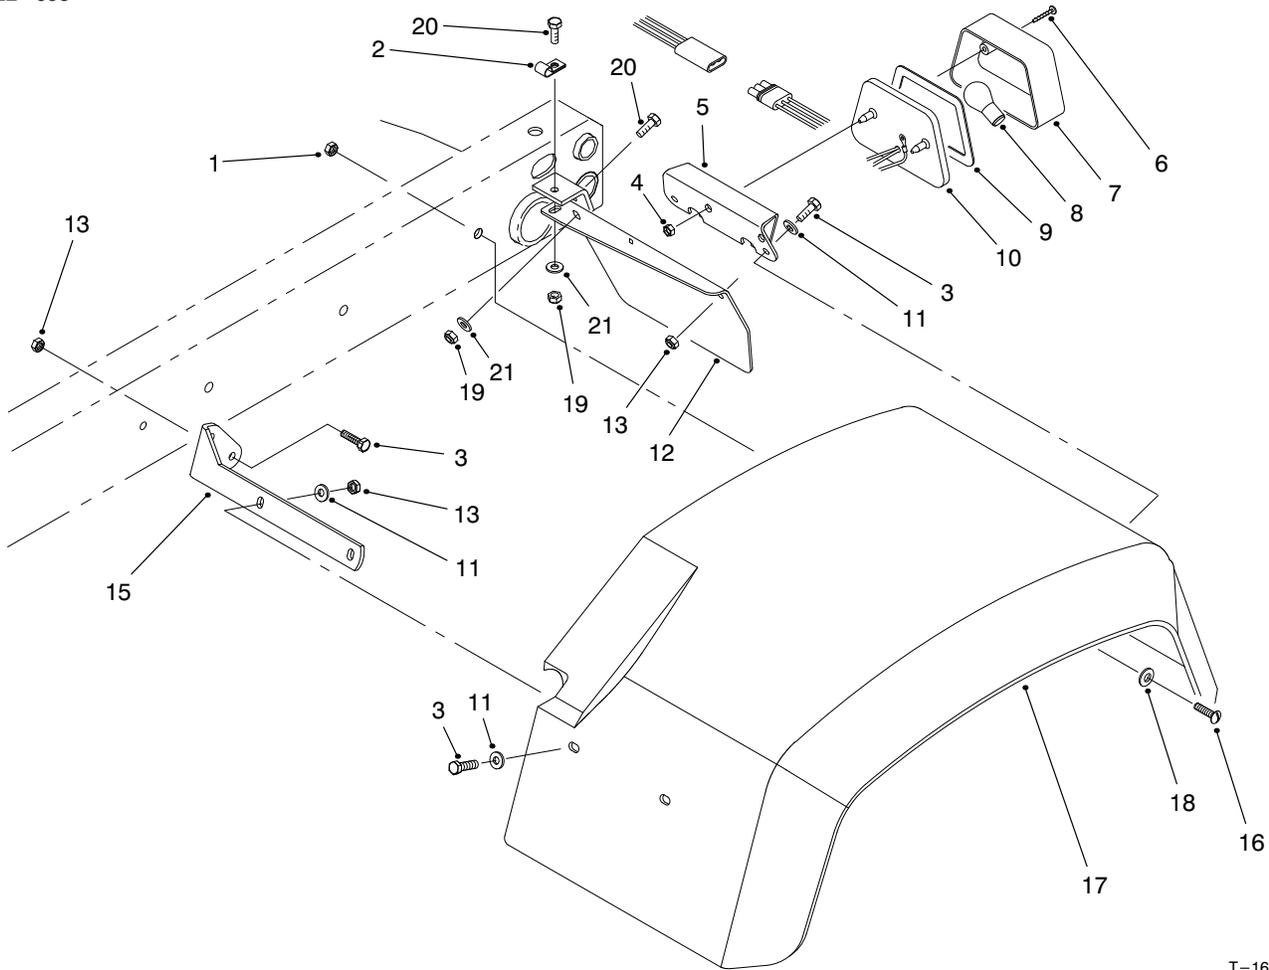


T-1613-1

## REAR FENDER & TAIL LIGHT ASM

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut-Lock	6
2	2412-93	Clamp-R	1
3	321-6	Screw-HH	12
4	3290-506	Palnut	2
5	87-5770	U-Bracket-Tail Light	1
6	32144-93	Screw-TAP	2
7	87-6300	Lens	1
8		Bulb (#1157 Std. 12 Volt)	1
9	87-6310	Gasket	1
10	87-2110	Asm-Tail Light (Incl. Ref. #6-9)	1

Ref. No.	Part No.	Description	No. Used
11	3256-22	Washer-Flat	12
12	93-8943	Plate-Tail Light LH	1
*	93-8944	Plate-Tail Light RH	1
13	3296-42	Nut-Lock	16
15	93-8941	Bracket-Front LH	1
*	93-8942	Bracket-Front RH	1
16	3274-94	Screw-HSBH	6
17	87-6660	Fender-Rear 24"	2
18	3256-24	Washer-Flat	6
19	3296-29	Nut-Lock	4
20	322-5	Screw-HH	4
21	3256-23	Washer-Flat	4

\*Not Illustrated

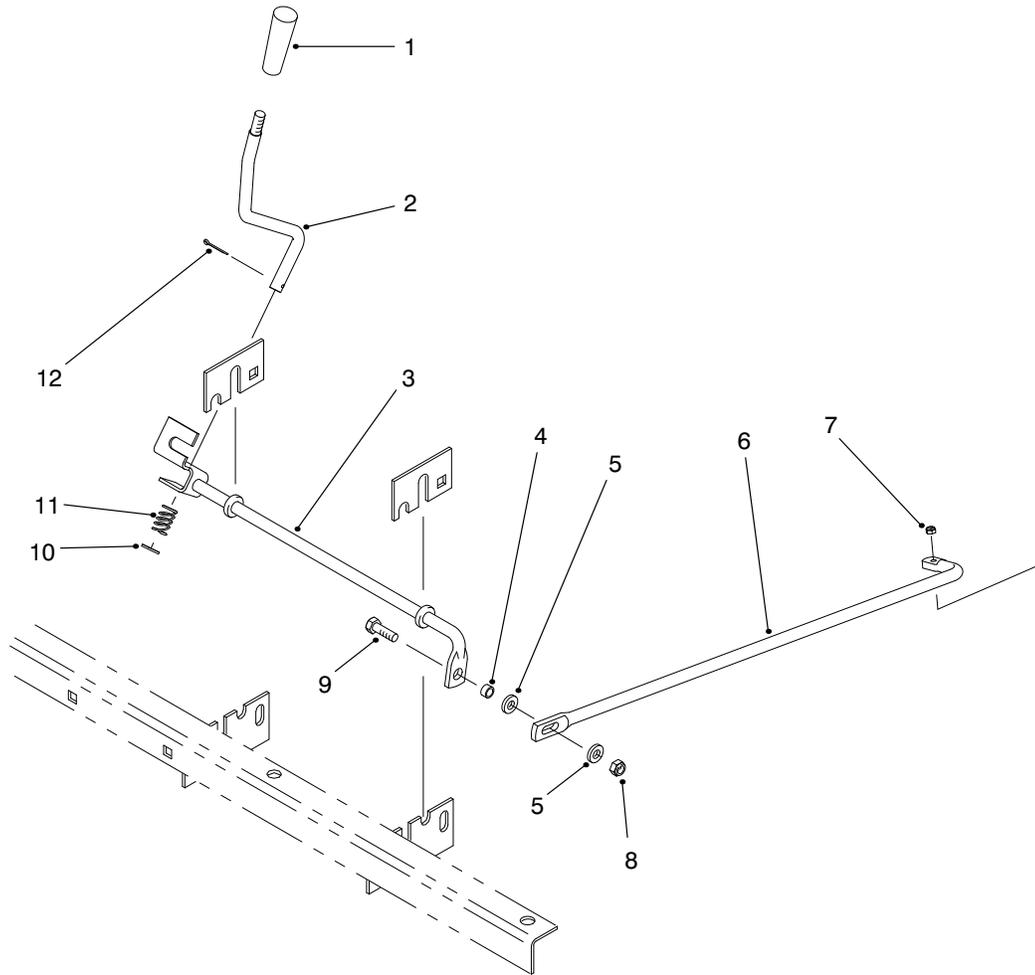


T-2623

## REMOTE HYDRAULICS CONTROL LEVER & LINKAGE (Model 07200TC)

Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1
2	87-4580	Rod-Auxiliary Lever	1
3	87-4610	Rod-Auxiliary	1
4	87-5080	Spacer-Connecting Rod	1
5	3256-23	Washer-Flat	2
6	93-9536	Rod-Connecting	1

Ref. No.	Part No.	Description	No. Used
7	3296-2	Nut-Hex.	1
8	3296-29	Nut-Lock	1
9	322-5	Screw-HH	1
10	3256-25	Washer-Flat	1
11	66-4850	Spring-Compression	1
12	3272-7	Pin-Cotter	1

PROTOTYPE

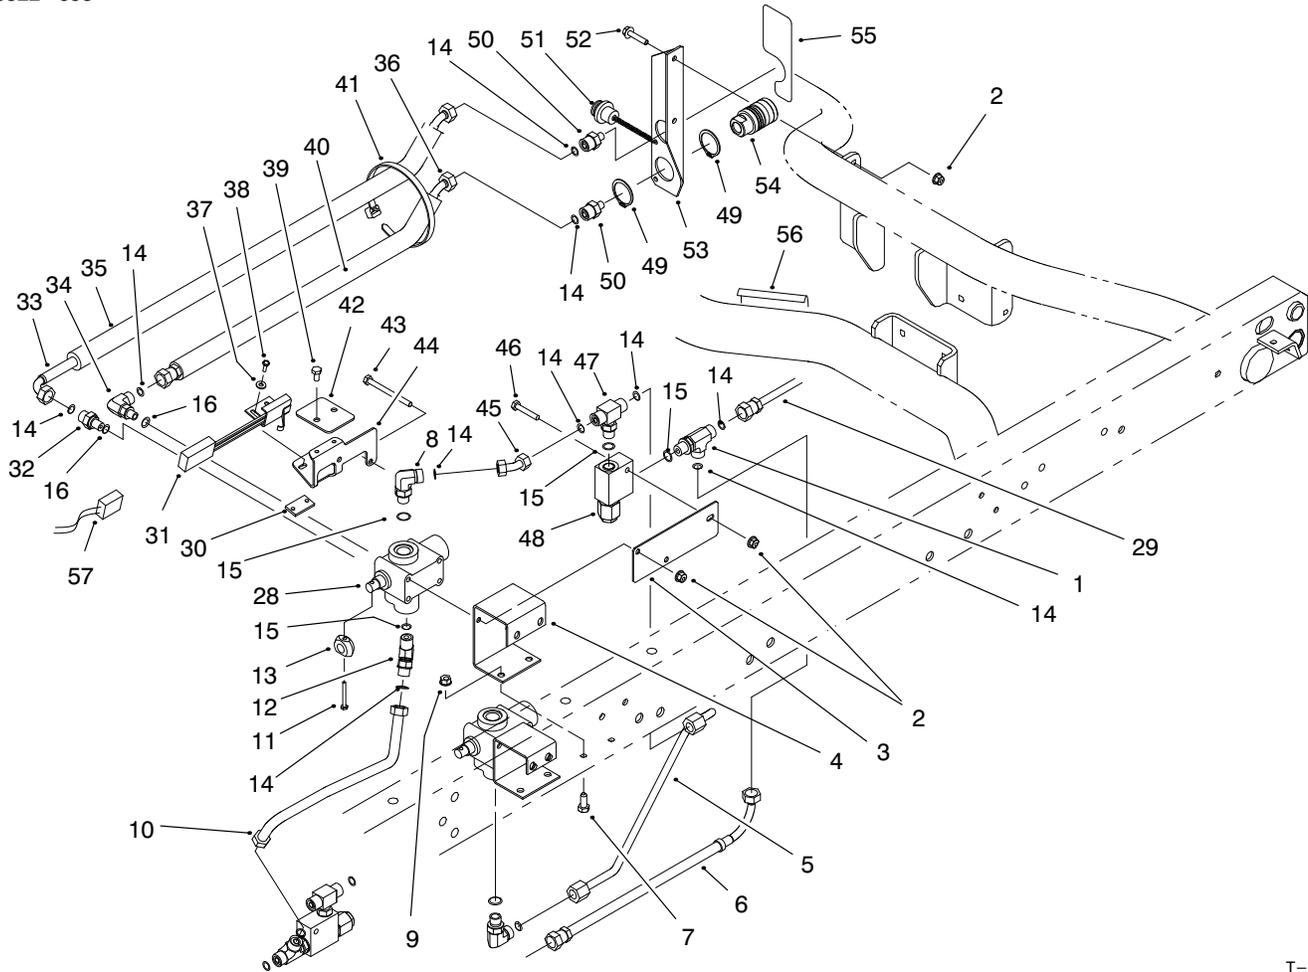


T-2624

## REMOTE HYDRAULICS PLUMBING ASM (Model 07200TC)

Ref. No.	Part No.	Description	No. Used
1	340-86	Fitting-Hydraulic Tee (Incl. Ref. #14 & 15)	1
2	32128-33	Nut-HFH	5
3	92-2623	Plate-Valve Mount	1
4	87-4620	Bracket-Auxiliary Valve	1
5	93-9535	Asm-Hydraulic Tube	1
6	92-2624	Asm-Hydraulic Hose	1
7	322-3	Screw-HH	4
8	340-77	Fitting-Hydraulic 90° (Incl. Ref. #14 & 15)	2
9	32128-20	Nut-Lock	4
10	92-2622	Asm-Hydraulic Tube	1
11	32105-5	Screw	1
12	340-87	Fitting-Hydraulic 45° (Incl. Ref. #14 & 15)	1
13	93-9542	Cam-Switch	1
14	237-22	O-Ring	10
15	237-42	O-Ring	5
16	237-78	O-Ring	3
28	43-1710	Hydraulic Valve Assembly	1
29	94-5255	Asm-Hydraulic Hose	1
30	93-9539	Strip-Tapped	1
31	92-7905	Asm-Switch & Bracket	1
32	340-88	Fitting-Hydraulic Straight (Incl. Ref. #14 & 16)	1

Ref. No.	Part No.	Description	No. Used
33	92-2606	Asm-Hydraulic Hose	1
34	340-97	Fitting-Hydraulic 90° (Incl. Ref. #14 & 16)	1
35	93-9540	Sleeve-Protective	1
36	92-2605	Asm-Hydraulic Hose	1
37	3256-14	Washer-Flat	2
38	32105-8	Screw	2
39	321-2	Screw-HH	2
40	93-9551	Sleeve-Protective	1
41	3290-378	Tie-Cable	6
42	93-9538	Cover-Switch	1
43	321-23	Screw-HH	2
44	93-9537	Bracket-Switch Mounting	1
45	92-2620	Asm-Hydraulic Tube	1
46	321-9	Screw-HH	1
47	340-94	Fitting-Hydraulic Tee (Incl. Ref. #14 & 15)	1
48	92-2625	Asm-Relief Valve (1900 psi)	1
49	92-2601	Ring-Retaining	4
50	340-12	Fitting-Hydraulic Straight (Incl. Ref. #14)	2
51	92-2603	Plug-Dust	2
52	3234-21	Screw-HH	2

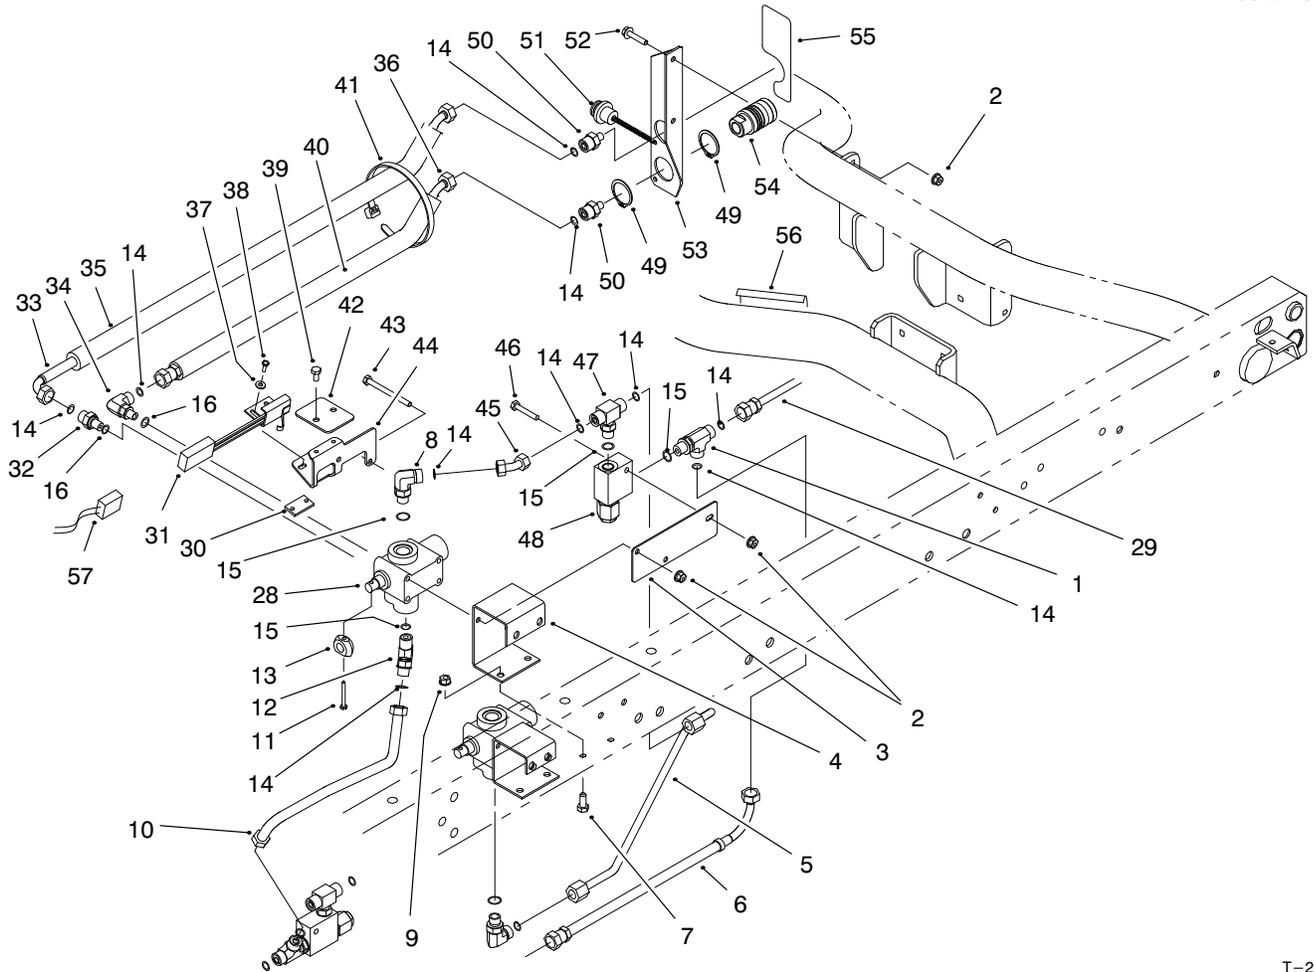


T-2624

## REMOTE HYDRAULICS PLUMBING ASM (Model 07200TC) (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
53	92-2771	Asm-Rear Coupler Bracket (Incl. Ref. #55)	1	56	92-2611	Decal-Caution (US)	1
54	92-2602	Coupling-Hyd. Female	2	*	93-9090	Decal-Caution (CE)	1
55	92-2610	Decal-Coupler (US)	1	*	92-5466	Decal-Caution (Japan)	1
*	93-9089	Decal-Coupler (CE)	1	57	93-9541	Harness-Wire	1
*	92-5339	Decal-Coupler (Japan)	1				

\*Not Illustrated

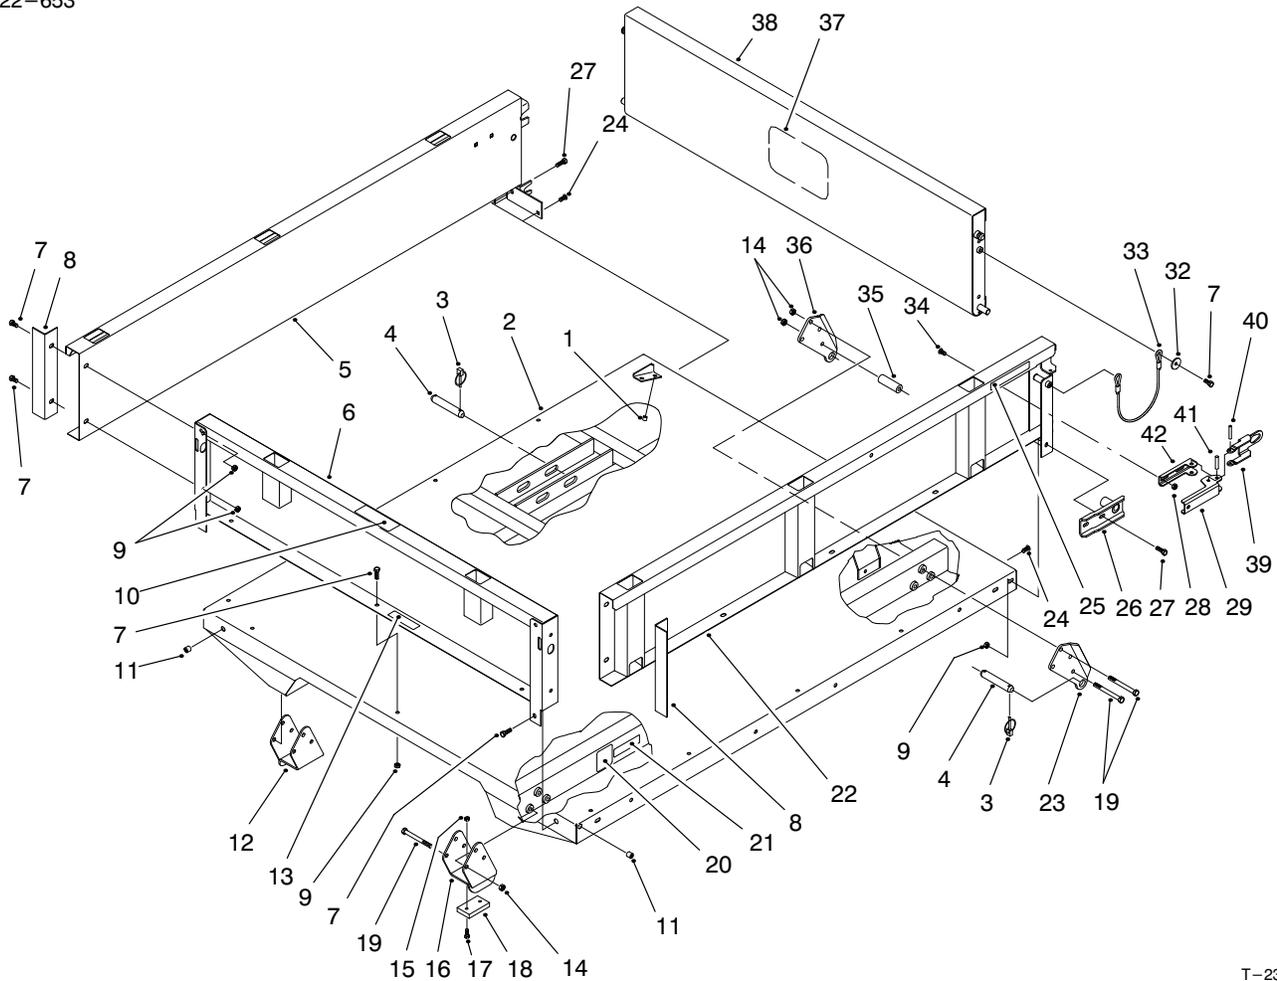


T-2382-3

## BED & BED SIDE ASM (Model 07202)

Ref. No.	Part No.	Description	No. Used
1	32148-6	Insert-Threaded	4
2	93-9724	Bed	1
3	92-1298	Pin-Lynch	8
4	92-1233	Pin-Clevis	4
5	92-1255	Panel-Side RH	1
6	92-5974	Panel-Front	1
7	3234-7	Screw-HFH	21
8	92-1320	Angle-Side	2
9	32128-35	Nut-HFH	23
10	92-5955	Decal-No Riders	1
11	32148-7	Nut-Clinch	4
12	93-9723	Spacer-Bracket RH	1
†13		Decal-Serial Plate	1
14	3296-44	Nut-Lock	14
15	3296-42	Nut-Lock	4
16	93-9722	Spacer-Bracket LH	1
17	3250-45	Screw-PH	4
18	93-9719	Block-Wear	2
19	323-42	Screw-HH	14
20	93-1312	Decal-Warning	2
†21		Decal-CE	1

Ref. No.	Part No.	Description	No. Used
22	92-1248	Panel-Side LH	1
23	93-9720	Plate-Pivot Long LH	2
24	3230-1	Screw-CARR	2
25	92-1319	Decal-Caution	2
26	92-1265	Bracket-Pivot	2
27	3234-29	Screw-HHF	6
28	32128-20	Nut-HFH	4
29	99-1113	Handle-Latch	2
32	3256-57	Washer-Flat	4
33	93-9595	Lanyard-Tailgate	2
34	3230-15	Screw-CARR	4
35	93-9575	Tube-Flatbed Pivot	2
36	93-9721	Plate-Pivot Long RH	2
37	92-1242	Decal-Toro	1
38	92-1259	Tailgate-Rear	1
39	99-1112	Plate-Retainer	2
40	32121-78	Pin-Roll	2
41	32121-25	Pin-Spring	2
42	92-1271	Pivot-Latch	2
*	99-1123	Latch Assembly (Incl. Ref. #29 & 39-42)	2

†Not available separately

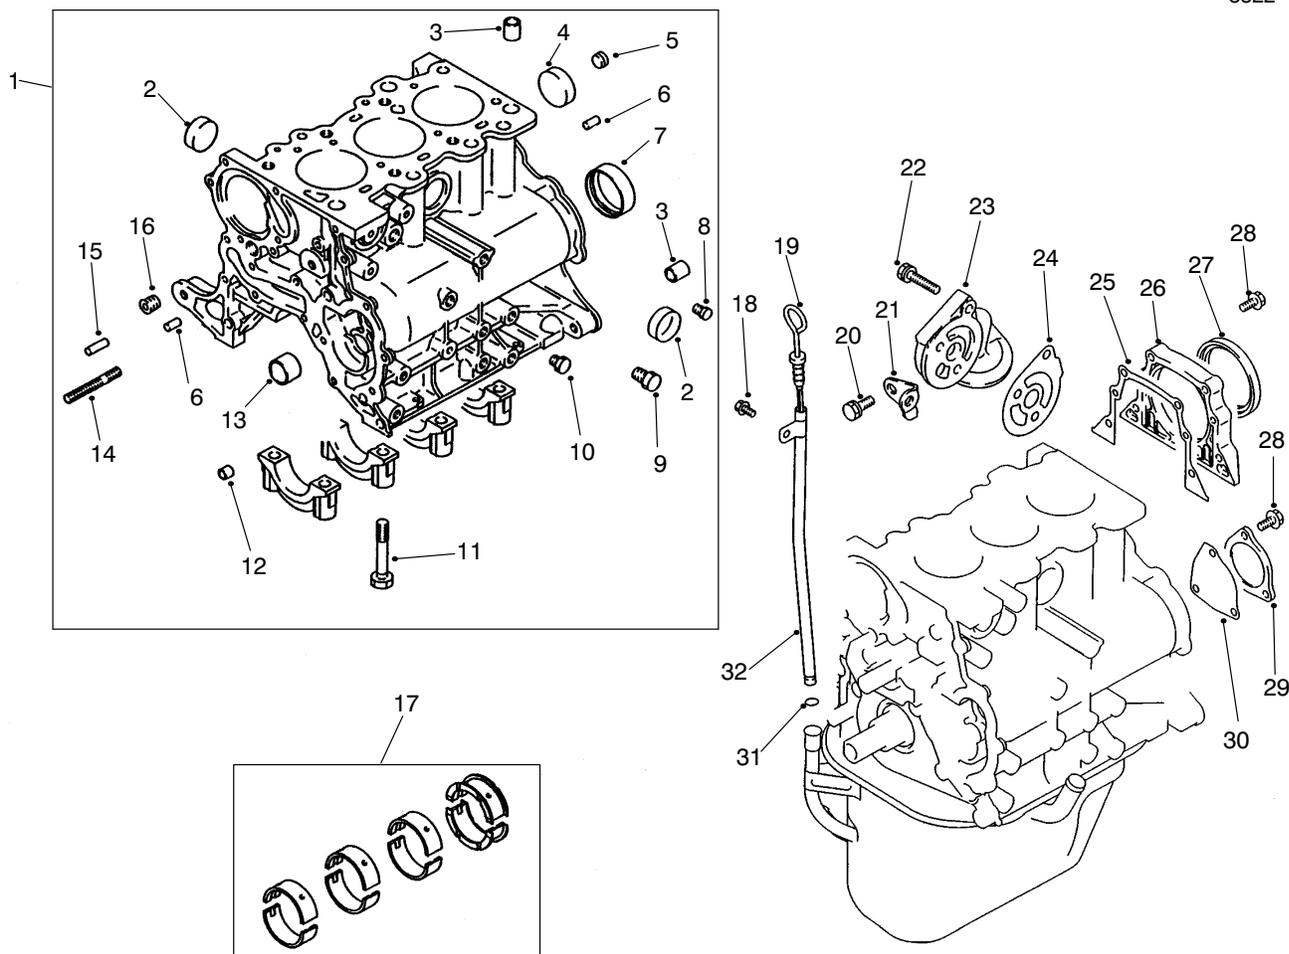


T-1631-1

### CYLINDER BLOCK ASM

Ref. No.	Part No.	Description	No. Used
1	92-2006	Asm-Crankcase (Incl. Ref. #2-16)	1
2	92-2151	Cap-Sealing	3
3	92-2152	Bushing	4
4	92-1994	Cap-Sealing	1
5	92-1935	Plug-Taper	1
6	92-2148	Pin-Dowel	2
7	92-1982	Bearing-Ring	1
8	92-1902	Plug-Taper	1
9	56-0100	Plug-Taper	1
10	92-1910	Plug-Taper	1
11	67-2250	Bolt	8
12	67-2360	Bushing	4
13	92-1981	Bearing-Front	1
14	92-5107	Stud	1
15	92-1958	Pin-Dowel	1
16	67-2390	Plug-Taper	1

Ref. No.	Part No.	Description	No. Used
17	92-1956	Bearing-Set, Main	1
18	92-5112	Bolt-Flange Head	1
19	92-5110	Gauge-Oil Level	1
20	92-2144	Bolt	2
21	92-5109	Stay-Oil Filter	1
22	92-2143	Bolt	3
23	92-2012	Bracket-Oil Filter	1
24	92-5108	Gasket-Bracket	1
25	92-1987	Gasket	1
26	92-2045	Housing-Seal, Oil	1
27	92-1952	Seal-Oil	1
28	92-2131	Bolt-Flange Head	7
29	92-1945	Cover-Rear	1
30	92-1991	Gasket	1
31	92-1925	O-Ring	1
32	92-5111	Guide-Oil Level Gauge	1

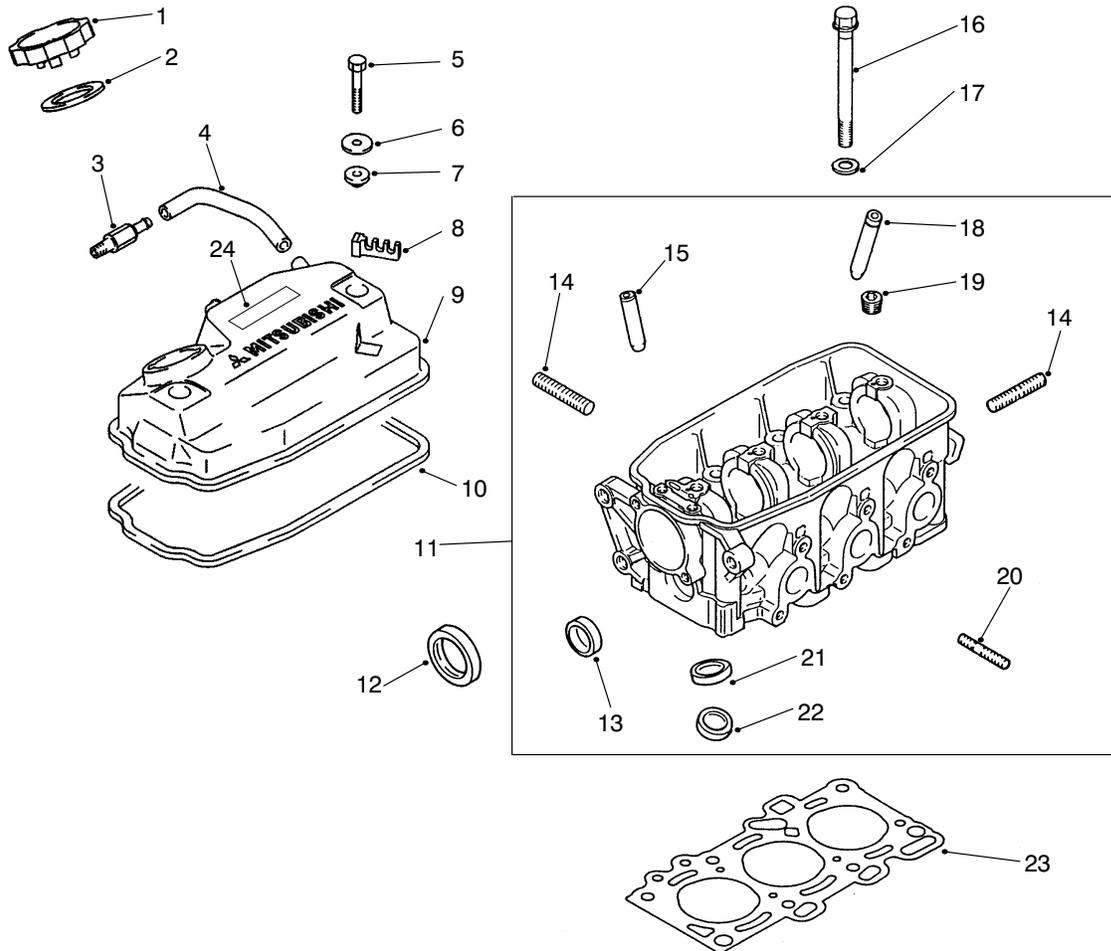


T-1630-2

## ROCKER COVER & CYLINDER HEAD ASM

Ref. No.	Part No.	Description	No. Used
1	92-1975	Cap-Oil (Incl. Ref. #2)	1
2	92-1943	Packing	1
3	92-2050	PCV Valve	1
4	92-2026	Hose-PCV Valve	1
5	92-2128	Bolt-Cover	2
6	92-2063	Washer	2
7	92-1929	Seal-Oil	2
8	92-1915	Clamp-Cable	1
9	94-5295	Asm-Cover (Incl. Ref. #8,10 & 24)	1
10	92-1944	Gasket-Cover, Rocker	1
11	92-2034	Head-Cylinder (Incl. Ref. #13-15 & 18-22)	1
12	92-2021	Seal-Oil	1
13	92-2151	Cap-Sealing	1
14	42-9560	Stud	3
15	92-1926	Guide-Intake Valve (.05 mm OS)	3
*	92-5103	Guide-Intake Valve (.25 mm OS)	3
*	92-5104	Guide-Intake Valve (.50 mm OS)	3

Ref. No.	Part No.	Description	No. Used
16	92-1971	Bolt	8
17	92-1903	Washer	8
18	92-1911	Guide-Exhaust Valve (.05 mm OS)	1
*	92-5105	Guide-Exhaust Valve (.25 mm OS)	1
*	92-5106	Guide-Exhaust Valve (.50 mm OS)	1
19	92-1916	Plug-Taper	1
20	92-1905	Stud	6
21	92-1959	Seat-Intake Valve (.30 mm OS)	3
*	92-5102	Seat-Intake Valve (.60 mm OS)	3
22	92-1976	Seat-Exhaust Valve (.30 mm OS)	3
*	92-5101	Seat-Exhaust Valve (.60 mm OS)	3
23	92-1997	Gasket-Cylinder	1
24		Label-Emission	1

\*Not Illustrated

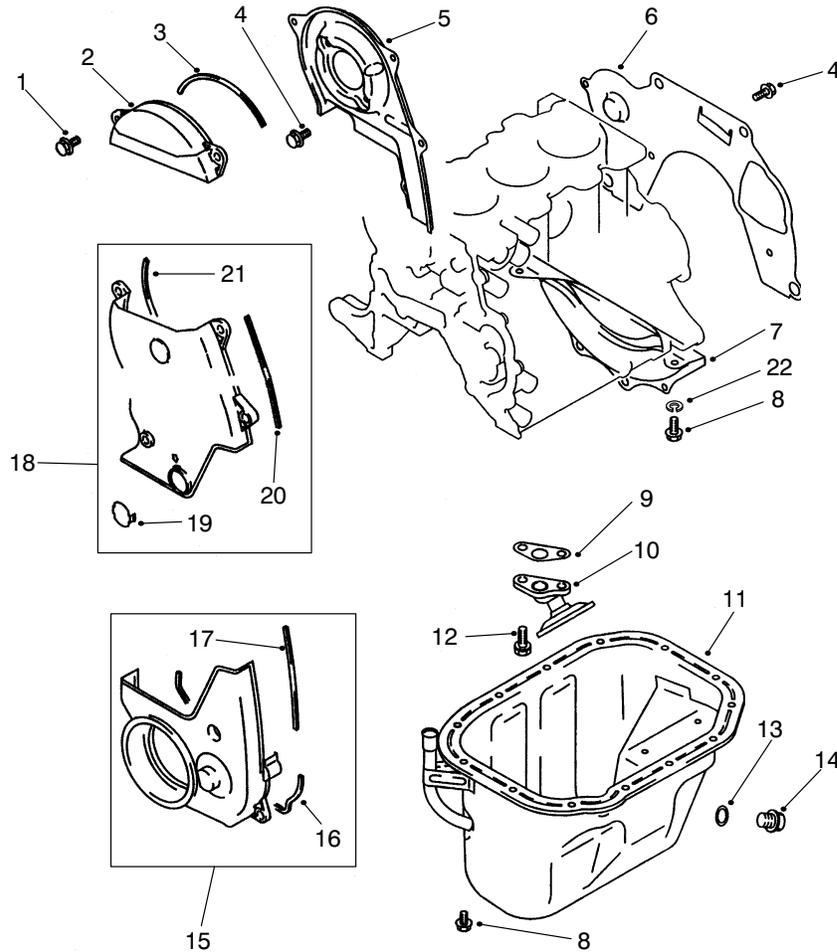


T-1632-1

### COVERS & OIL PAN ASM

Ref. No.	Part No.	Description	No. Used
1	92-5113	Bolt-Flange Head	3
2	92-1965	Asm-Cover (Incl. Ref.#3)	1
3	92-1962	Gasket	1
4	92-2131	Bolt-Flange Head	2
5	92-2035	Cover-Front	1
6	92-1937	Plate-Rear	1
7	92-1938	Cover-Bell Housing	1
8	48-7610	Bolt-HH	2
9	92-1988	Gasket-Oil	1
10	92-2019	Strainer-Oil	1
11	92-2053	Asm-Oil Pan (Incl. Ref.#13-14)	1

Ref. No.	Part No.	Description	No. Used
12	92-2137	Bolt/washer	2
13	92-1921	Gasket-Oil	1
14	92-1920	Plug-Oil	1
15	92-1967	Asm-Cover (Incl. Ref. #16-17)	1
16	92-1939	Gasket	1
17	92-1940	Gasket	1
18	92-1996	Asm-Cover, Front (Incl. Ref.#19-21)	1
19	92-1907	Cover-Access	1
20	92-1962	Gasket	1
21	92-1966	Gasket	1
22	3253-3	Washer-Lock	2

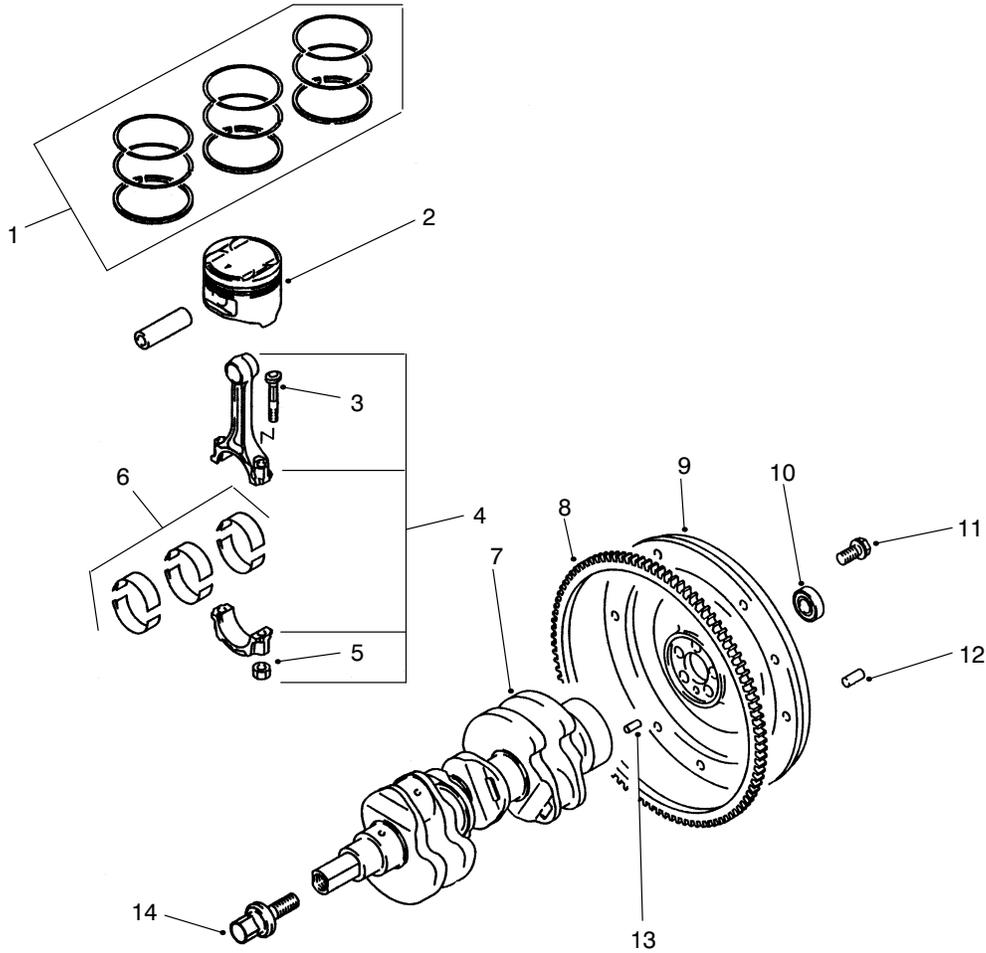


T-1633-1

## PISTON & CRANKSHAFT ASM

Ref. No.	Part No.	Description	No. Used
1	92-2014	Piston Ring Set (Std.)	1
*	92-5118	Piston Ring Set (.25 mm OS)	1
*	92-2015	Piston Ring Set (.50 mm OS)	1
*	92-5120	Piston Ring Set (.75 mm OS)	1
*	92-5121	Piston Ring Set (1.00 mm OS)	1
2	92-2005	Piston & Pin (Std.)	3
*	92-2013	Piston & Pin (.50 mm OS)	3
*	92-5116	Piston & Pin (.75 mm OS)	3
*	92-5117	Piston & Pin (1.00 mm OS)	3

Ref. No.	Part No.	Description	No. Used
3	92-2003	Bolt-Connecting Rod	6
4	92-1999	Rod-Connecting (Incl. Ref. #3 & 5)	3
5	92-1923	Nut	6
6	92-1957	Rod Bearing Set	1
7	92-1995	Asm-Crankshaft	1
8	92-1942	Gear-Ring	1
9	92-1980	Flywheel	1
10	92-1914	Bearing-Ball	1
11	92-1934	Bolt-Flywheel	5
12	42-7160	Pin-Dowel	3
13	92-2148	Pin-Dowel	1
14	92-2057	Bolt-Crankshaft PTO	1

\*Not Illustrated

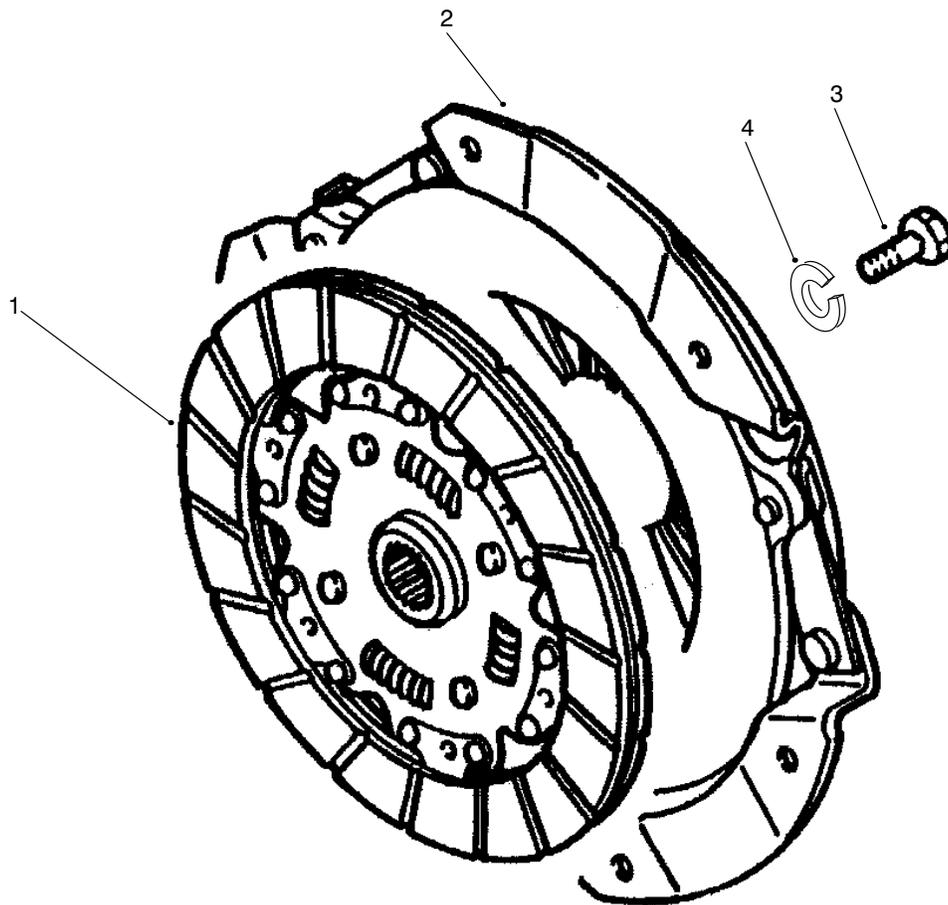


T-1644-1

### CLUTCH & CLUTCH RELEASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-2959	Disc-Clutch	1	3	48-7700	Bolt	6
2	98-2958	Cover-Clutch	1	4	3253-4	Washer-Lock	6


PROTOTYPE

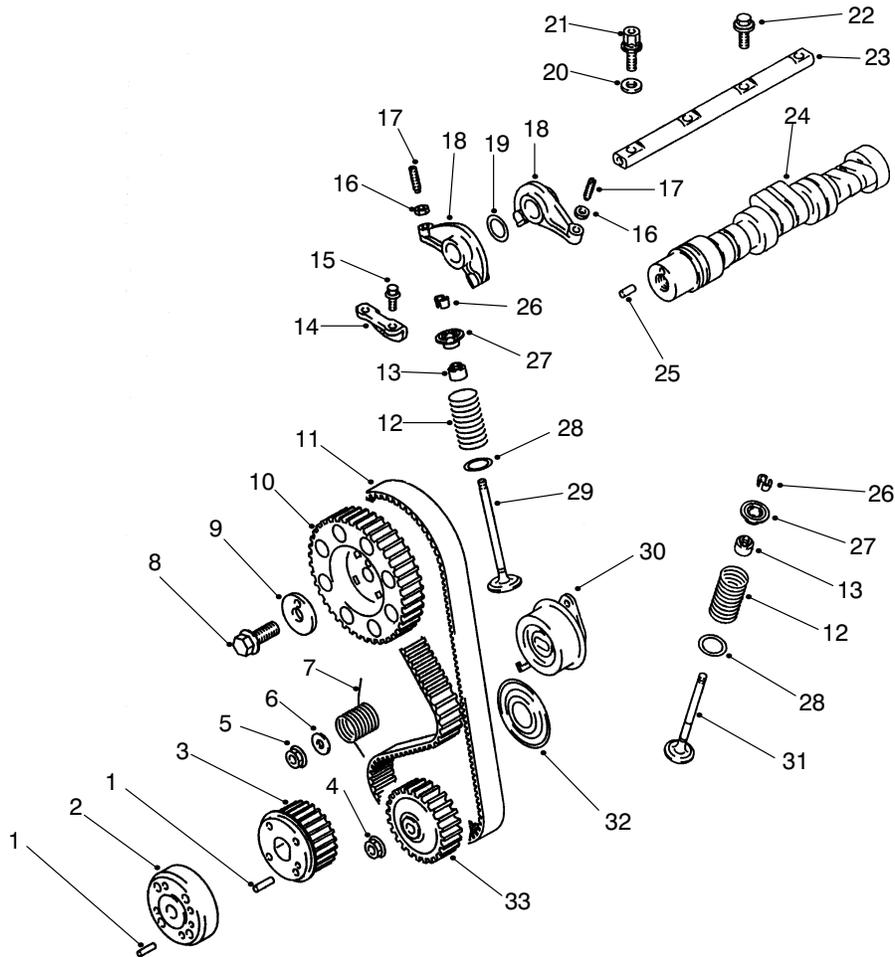

T-1634-1

## CAMSHAFT & VALVES ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-2149	Pin	2	17	92-1953	Screw-Adjusting	6
2	92-2062	Asm-PTO Adapter (Incl. Ref.#1)	1	18	92-1947	Arm-Rocker	6
3	92-2061	Asm-PTO Sprocket (Incl. Ref.#1)	1	19	92-1930	Washer-Wave	2
4	92-5122	Nut-Timing Belt	1	20	92-1972	Washer	2
5	92-2145	Nut-HFH	1	21	92-2017	Bolt-Rocker Shaft	2
6	92-2147	Washer	1	22	92-2018	Bolt-Rocker Shaft	2
7	92-2001	Spring	1	23	92-1973	Shaft-Rocker Arm	1
8	92-2135	Bolt-HFH	1	24	92-2049	Asm-Camshaft (Incl. Ref.#25)	1
9	92-1922	Washer	1	25	92-2010	Pin-Dowel	1
10	92-2000	Sprocket	1	26	42-7860	Lock-Valve	12
11	92-2059	Belt-Timing	1	27	92-1931	Retainer	6
12	92-1977	Spring-Valve	6	28	92-1936	Seal-Valve	6
13	92-1961	Seal-Valve	6	29	92-1954	Valve-Inlet	3
14	92-1964	Plate-Cam	1	30	92-1968	Tensioner-Belt	1
15	92-2130	Bolt-HFH	2	31	92-1955	Valve-Exhaust	3
16	92-1909	Nut	6	32	92-2056	Flange-PTO	1
				33	92-2042	Sprocket-Oil	1

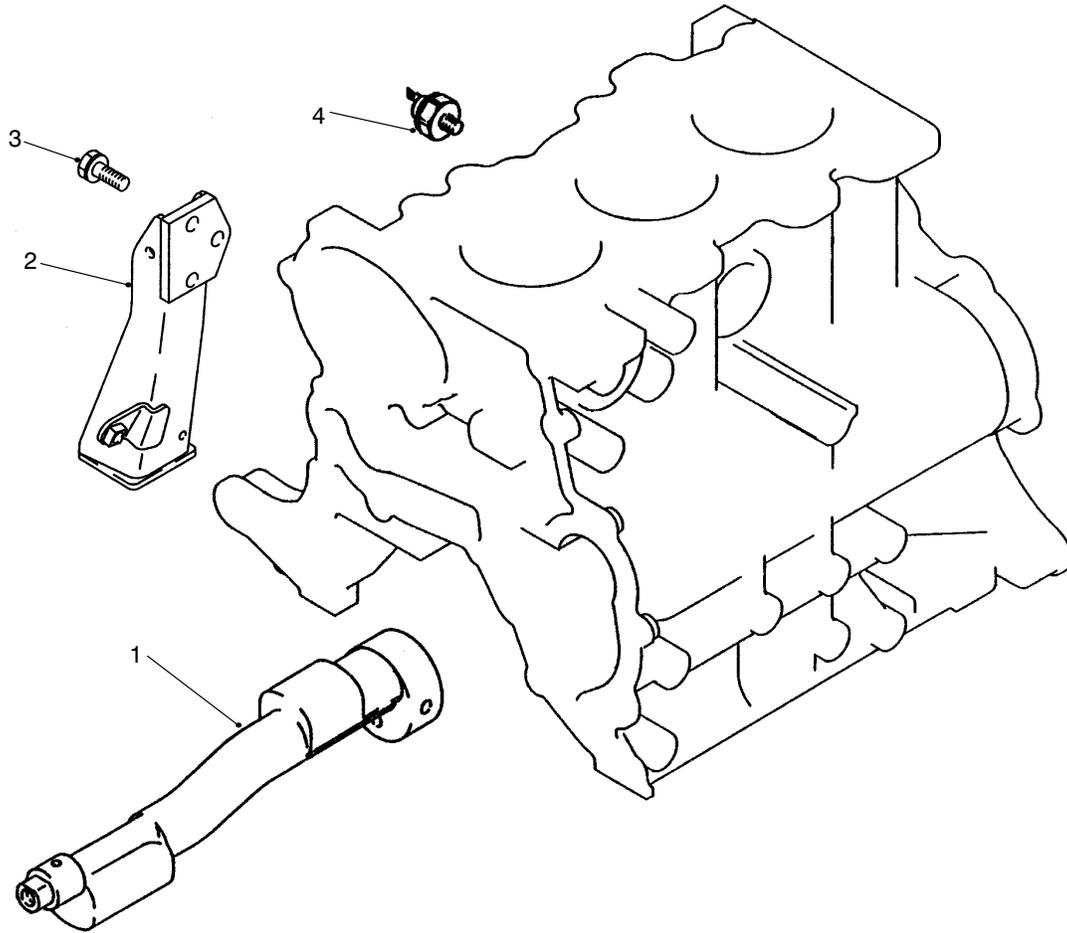


T-1635-1

### BALANCER & OIL PRESSURE SWITCH & ENGINE MOUNT

Ref. No.	Part No.	Description	No. Used
1	92-1998	Shaft-Balancer	1
2	92-2022	Mount-Engine	1

Ref. No.	Part No.	Description	No. Used
3	67-2440	Bolt-Engine Mount	3
4	92-1978	Switch-Oil Pressure	1

PROTOTYPE

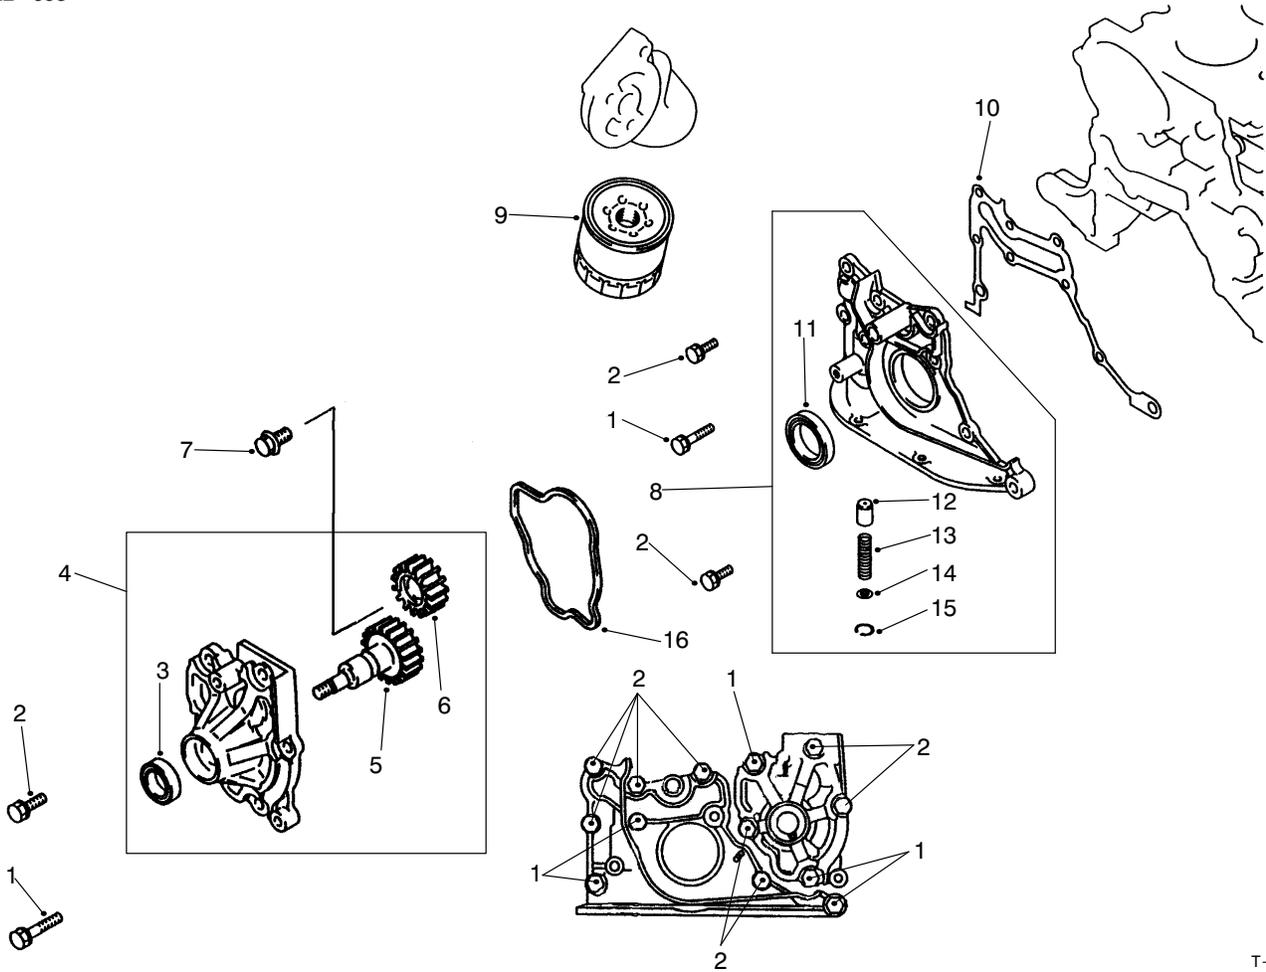


T-1636-1

## OIL PUMP & FILTER ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-2560	Bolt/washer	5	9	67-4330	Filter-Oil	1
2	42-9400	Bolt/washer	8	10	92-1946	Gasket-Front	1
3	92-2032	Seal-Oil	1	11	92-1960	Seal-Oil	1
4	92-2046	Asm-Oil Pump (Incl. Ref.#3, 5 & 6)	1	12	92-1927	Plunger-Relief	1
5	92-1948	Gear-Oil Pump	1	13	92-1928	Spring-Relief	1
6	92-1949	Gear-Oil Pump	1	14	92-1983	Retainer	1
7	92-1918	Bolt-Flange Head	1	15	92-2150	Ring-Snap	1
8	92-1974	Asm-Case (Incl. Ref.#11-15)	1	16	92-1941	Gasket-Oil	1


PROTOTYPE

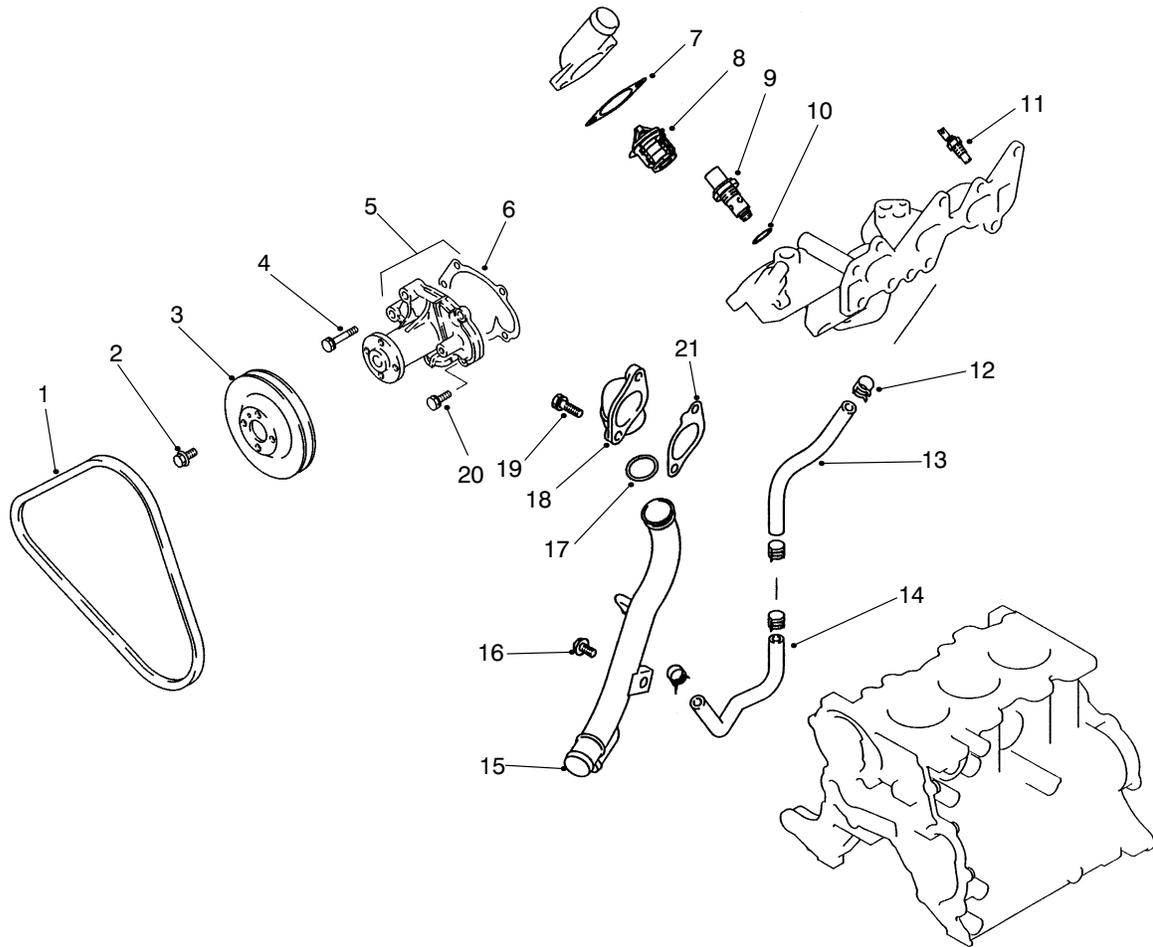

T-1639-1

## WATER PUMP & THERMOSTAT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-2041	V-Belt	1	11	92-1933	Gauge-Water Temperature	1
2	92-5112	Bolt-HFH	4	12	54-1400	Clip	4
3	92-2040	Pulley	1	13	92-1924	Hose-Water By-Pass	1
4	92-2142	Bolt/washer	3	14	92-2009	Hose-By-Pass	1
5	92-2060	Asm-Water Pump (Incl. Ref.#6)	1	15	92-2024	Pipe-Water	1
6	92-1989	Gasket	1	16	92-2132	Bolt	1
7	92-1950	Gasket	1	17	92-1908	O-Ring	1
8	92-2039	Kit-Thermostat (Incl. Ref.#7)	1	18	92-2008	Cover	1
9	92-5160	Valve-Thermostat	1	19	92-2138	Bolt	2
10	92-5161	Gasket	1	20	42-9400	Bolt	2
				21	92-2155	Gasket-Water Inlet	1

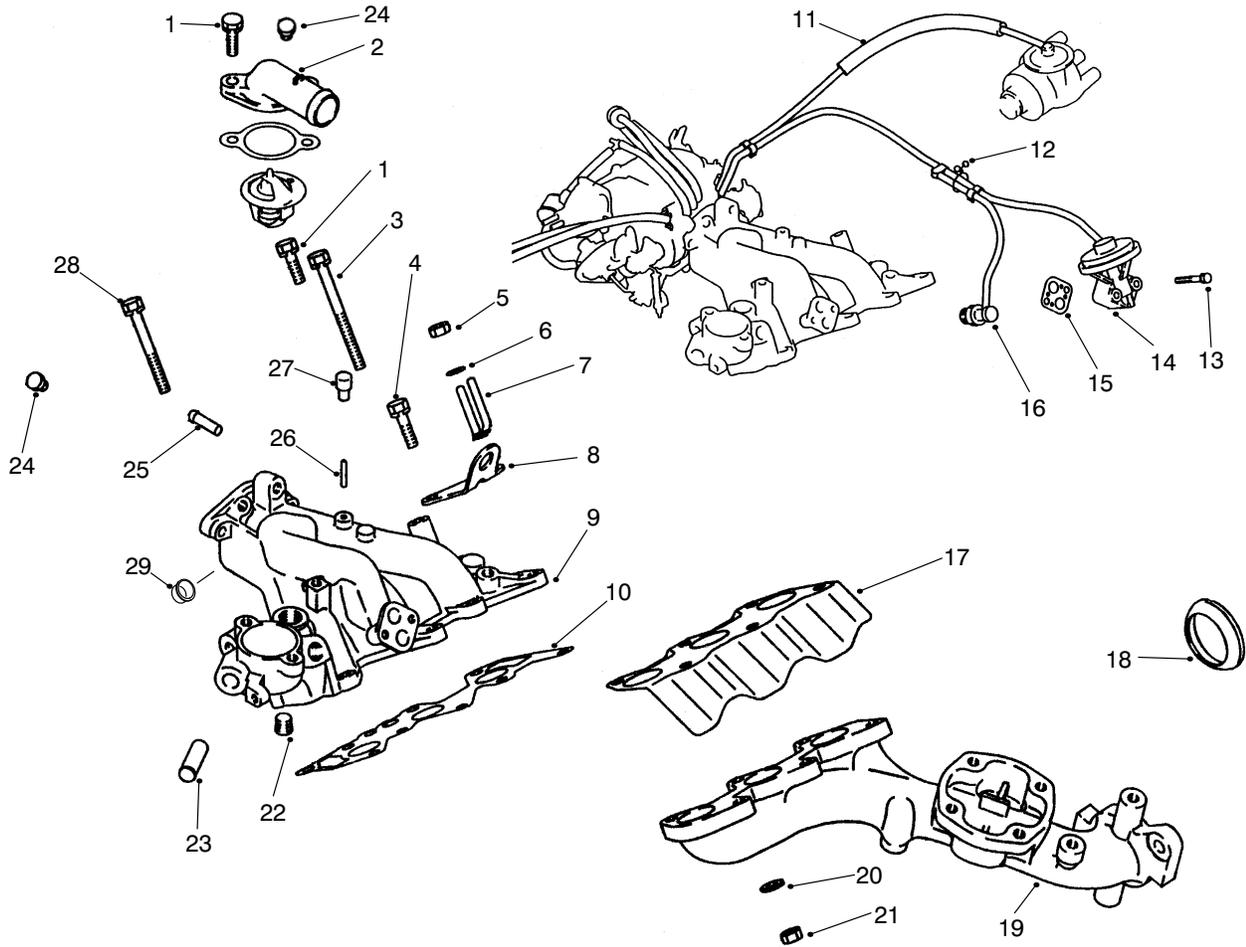


T-1640-1

## EXHAUST & INTAKE MANIFOLD ASHFH

Ref. No.	Part No.	Description	No. Used
1	92-2138	Bolt	3
2	92-2157	Outlet-Water	1
3	92-2141	Bolt	2
4	92-2139	Bolt	1
5	67-4670	Nut	2
6	67-3260	Washer	2
7	92-1901	Clip	1
8	92-1963	Mount-Engine	1
9	92-2054	Manifold-Intake (Incl. Ref.#22, 23, 25 & 26)	1
10	92-1993	Gasket-Intake	1
11	92-5164	Asm-Hose	1
12	92-5165	Clip	1
13	92-5166	Bolt	2
14	94-5294	Valve-EGR	1

Ref. No.	Part No.	Description	No. Used
15	92-5163	Gasket-EGR Valve	1
16	92-1906	Asm-Valve	1
17	92-2036	Cover-Exhaust Manifold	1
18	92-2044	Gasket-Exhaust Ring	1
19	92-2023	Manifold-Exhaust	1
20	48-8030	Washer	6
21	48-7930	Nut	6
22	67-2390	Plug-Taper	1
23	92-1912	Pipe-Manifold	1
24	92-5162	Plug-Inlet	2
25	92-1917	Nipple	1
26	92-1951	Nipple	1
27	92-2002	Cap Inlet	1
28	92-2140	Bolt	1
29	92-2151	Cap-Plug	1

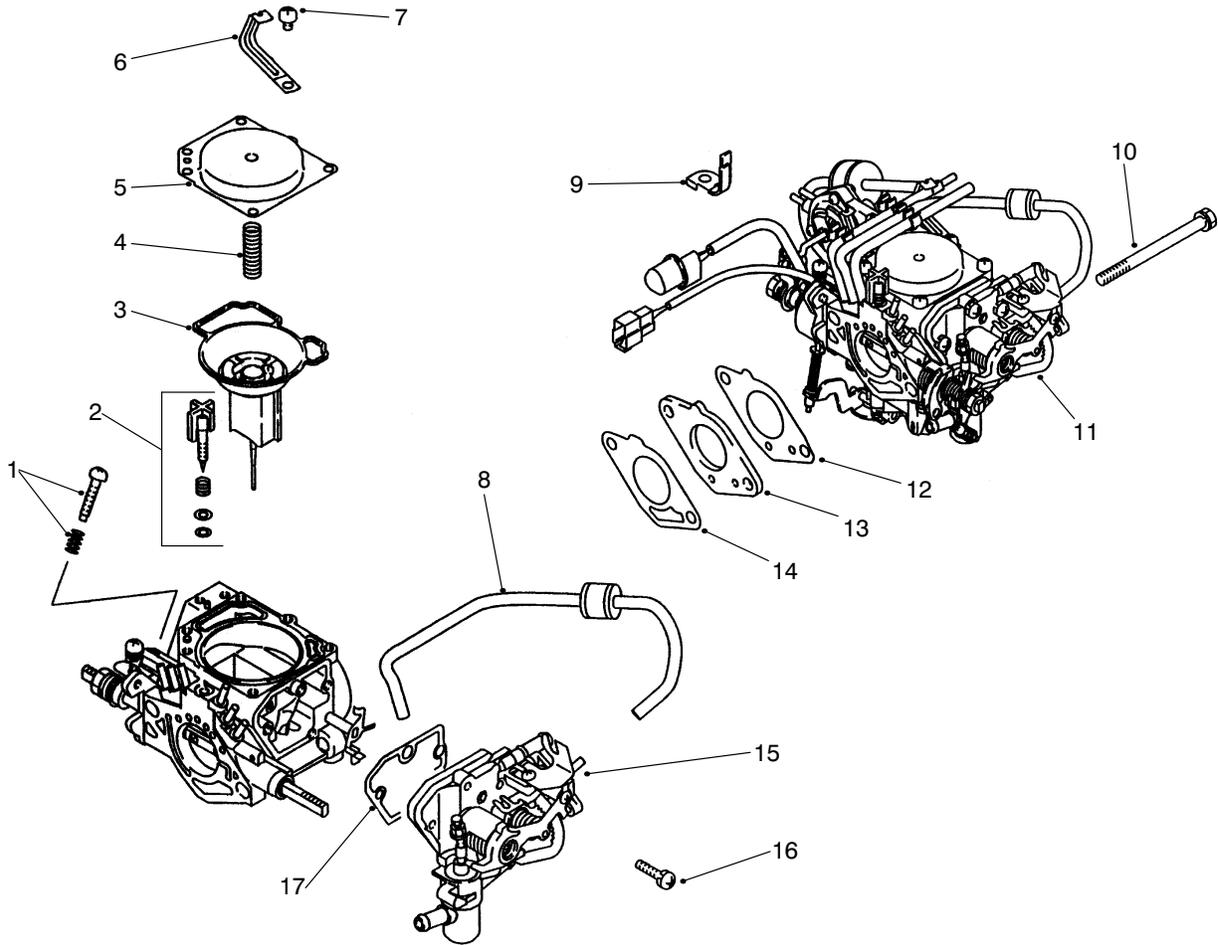


T-1637-1

## CARBURETOR INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-5136	Kit-Adjusting Screw	1	10	92-5157	Bolt	2
†2		Kit-Mixing Screw	1	11	94-5288	Carburetor	1
3	92-5142	Valve-Carburetor Piston	1	12	92-2038	Kit-Gasket	1
4	92-5137	Spring	1	13	92-5128	Insulator-Carburetor	1
5	92-5126	Cover-Carburetor Top	1	14	92-2037	Kit-Gasket	1
6	92-5156	Clamp-Carburetor INR	1	15	92-5124	Body-Choke, Auto	1
7	92-5145	Screw	6	16	92-5149	Screw	1
8	92-5134	Orifice-Choke	1	17	92-5143	Gasket-Choke, Auto	1
9	92-5155	Clamp-Carburetor	1				

† Item must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor



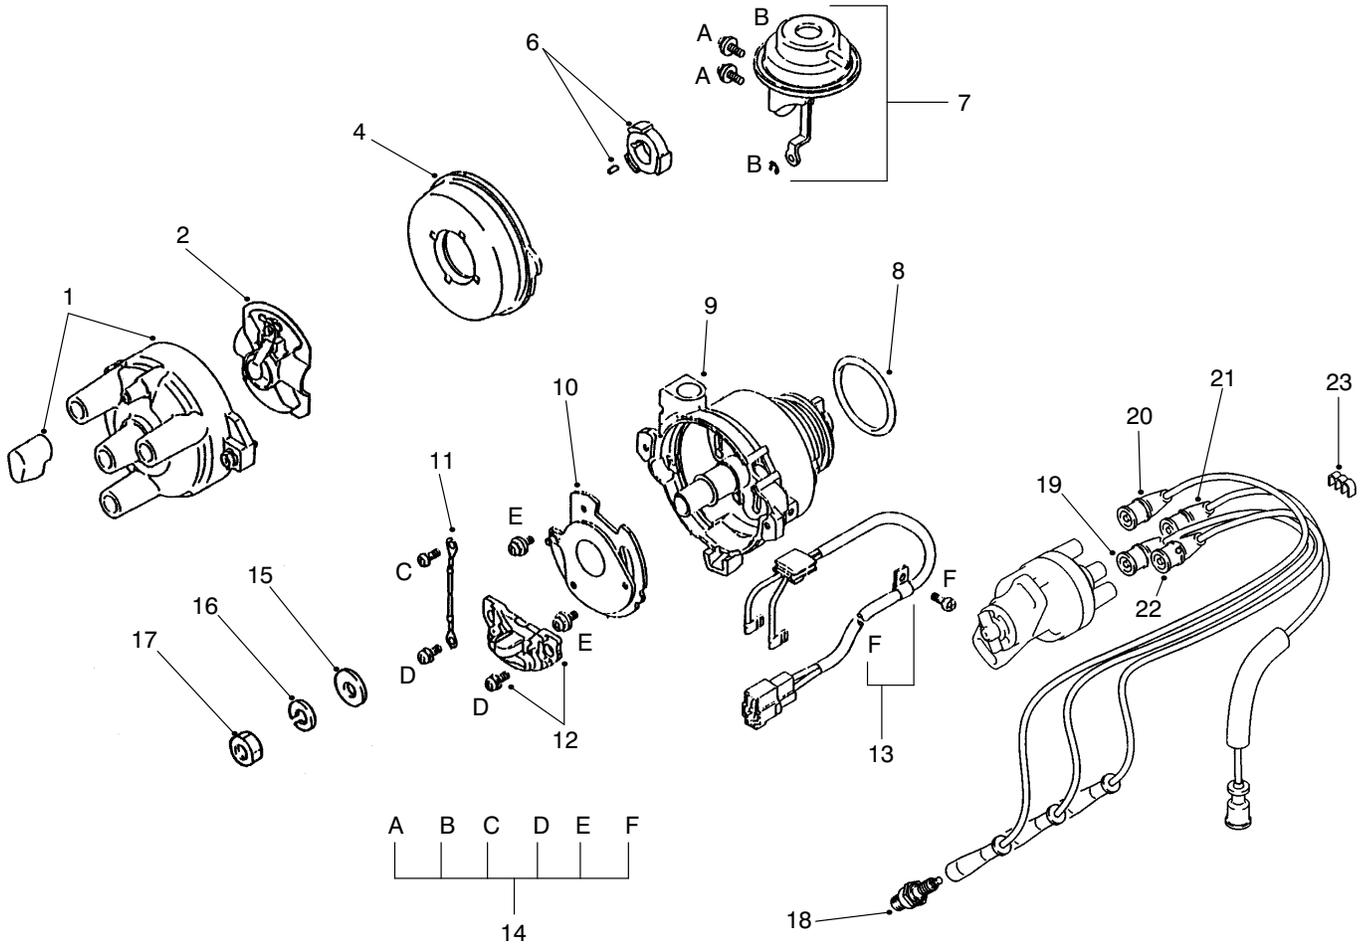


T-1643-1

## DISTRIBUTOR ASM

Ref. No.	Part No.	Description	No. Used
1	92-2114	Asm-Cap	1
2	92-2113	Rotor	1
4	98-2953	Cover	1
6	92-2116	Asm-Signal Rotor	1
7	92-2117	Chamber-Vacuum	1
8	92-2109	O-Ring	1
9	92-2122	Housing	1
10	92-2118	Plate	1
11	92-2119	Wire-Lead	1
12	92-2108	Igniter Set	1
13	92-2121	Asm-Wire, Lead	1
14	92-2115	Screw Set	1
15	92-2146	Washer	1

Ref. No.	Part No.	Description	No. Used
16	67-3260	Washer	1
17	67-4670	Nut	1
18	92-2153	Plug-Spark (NGK BPR4ES)	3
19	94-5233	Wire-Spark Plug, #2	1
20	94-5232	Wire-Spark Plug, #1	1
21	92-2028	Wire-High Tension	1
22	94-5234	Wire-Spark Plug, #3	1
23	92-5172	Clamp	1
*	92-2043	Asm-Distributor (Incl. Ref.#1-14)	1
*	92-2125	Asm-Spark Plug Wire Set (Incl. Ref.#19-22)	1

\*Not Illustrated

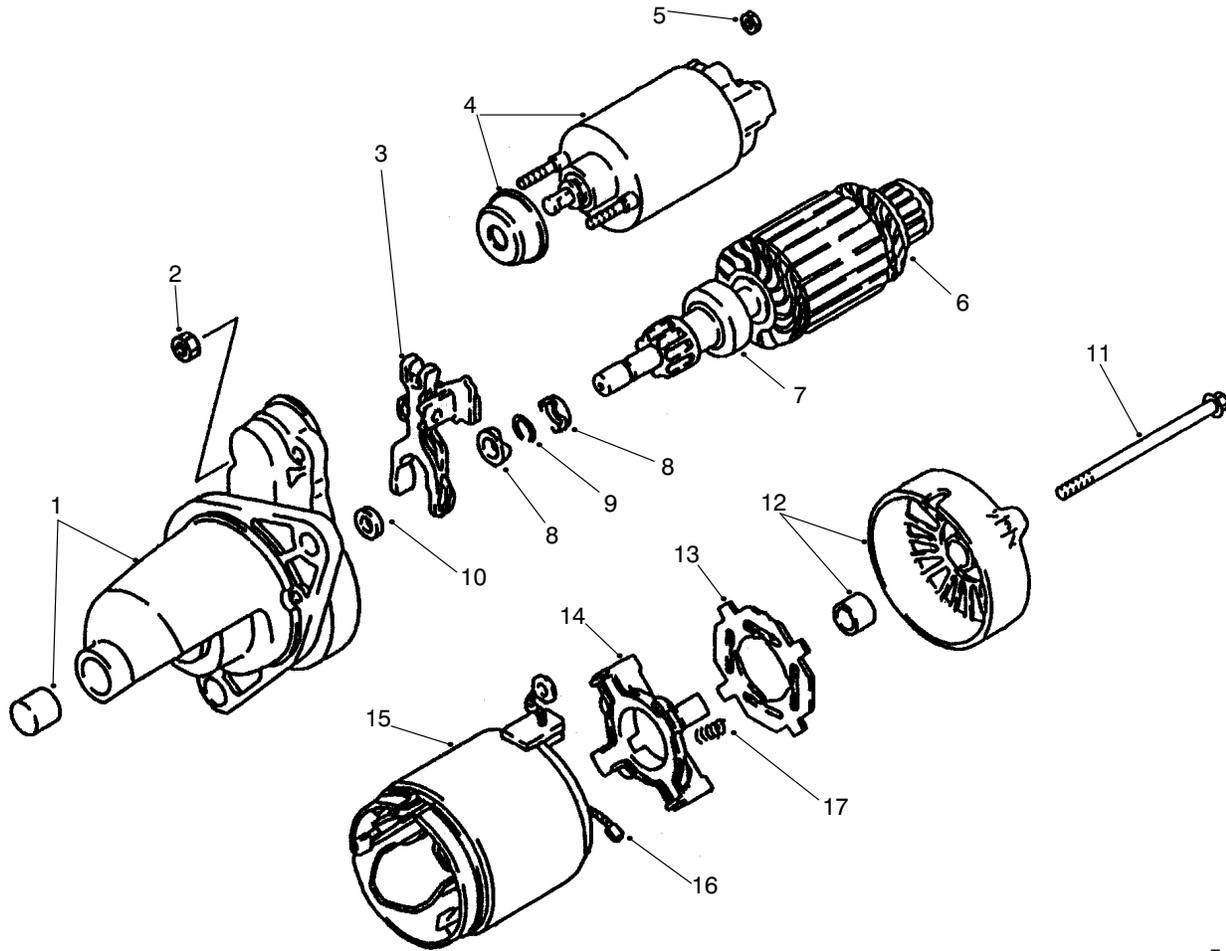


T-1641-1

### STARTER ASM

Ref. No.	Part No.	Description	No. Used
1	92-5167	Bracket-Front	1
2	92-2106	Nut	2
3	92-2102	Lever-Clutch	1
4	92-2095	Kit-Switch	1
5	92-2107	Nut	1
6	92-2093	Armature	1
7	92-2094	Clutch	1
8	92-2097	Nut	2
9	92-2096	Ring-Snap	1
10	92-2098	Washer	1

Ref. No.	Part No.	Description	No. Used
11	92-2099	Bolt	2
12	92-5168	Bracket-Rear	1
13	92-2092	Insulator	1
14	92-2091	Asm-Holder	1
15	92-2088	Yoke (Incl. Ref.#16)	1
16	92-2089	Brush	4
17	92-2090	Spring	4
*	92-2055	Asm-Starter (Incl. Ref.#1-17)	1

\*Not Illustrated

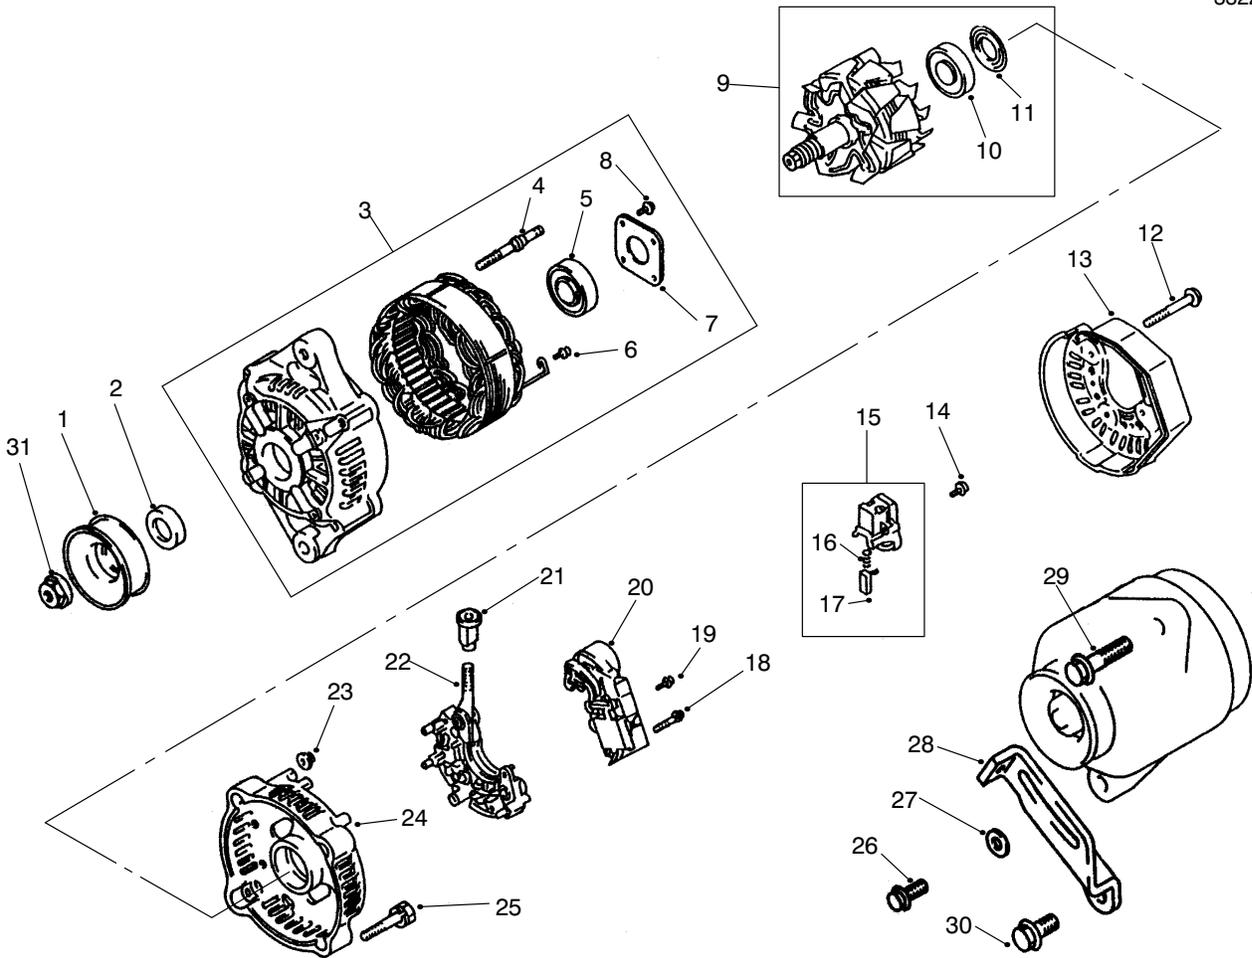


T-1642-1

# ALTERNATOR ASM

Ref. No.	Part No.	Description	No. Used
1	92-5169	Pulley	1
2	92-2079	Collar	1
3	92-2103	Asm-Bracket, Front (Incl. Ref.#4-8)	1
4	92-2078	Bolt	2
5	92-2065	Bearing	1
6	92-2085	Screw W/washer	6
7	92-2076	Plate	1
8	92-2077	Screw	4
9	92-2075	Asm-Rotor (Incl. Ref.#10-11)	1
10	92-2070	Bearing	1
11	92-2069	Cover-Bearing	1
12	92-2087	Bolt W/washer	3
13	92-2081	Cover-End	1
14	92-2085	Screw W/washer	6
15	92-2073	Asm-Holder (Incl. Ref.#16-17)	1

Ref. No.	Part No.	Description	No. Used
16	92-2067	Spring-Brush	2
17	92-2068	Brush	2
18	92-2071	Screw	2
19	92-2086	Screw W/washer	1
20	92-2084	Regulator	1
21	92-2083	Bushing	1
22	92-2082	Rectifier	1
23	92-2066	Nut	2
24	92-2080	Frame-End	1
25	92-2100	Bolt	2
26	92-2133	Bolt-HFH	1
27	92-1984	Washer	1
28	92-2011	Brace	1
29	92-1932	Bolt	1
30	92-2134	Bolt-HFH	1
31	92-2156	Nut-Alternator	1
*	92-2025	Asm-Alternator (Incl. Ref.#1-25 & 31)	1

\*Not Illustrated

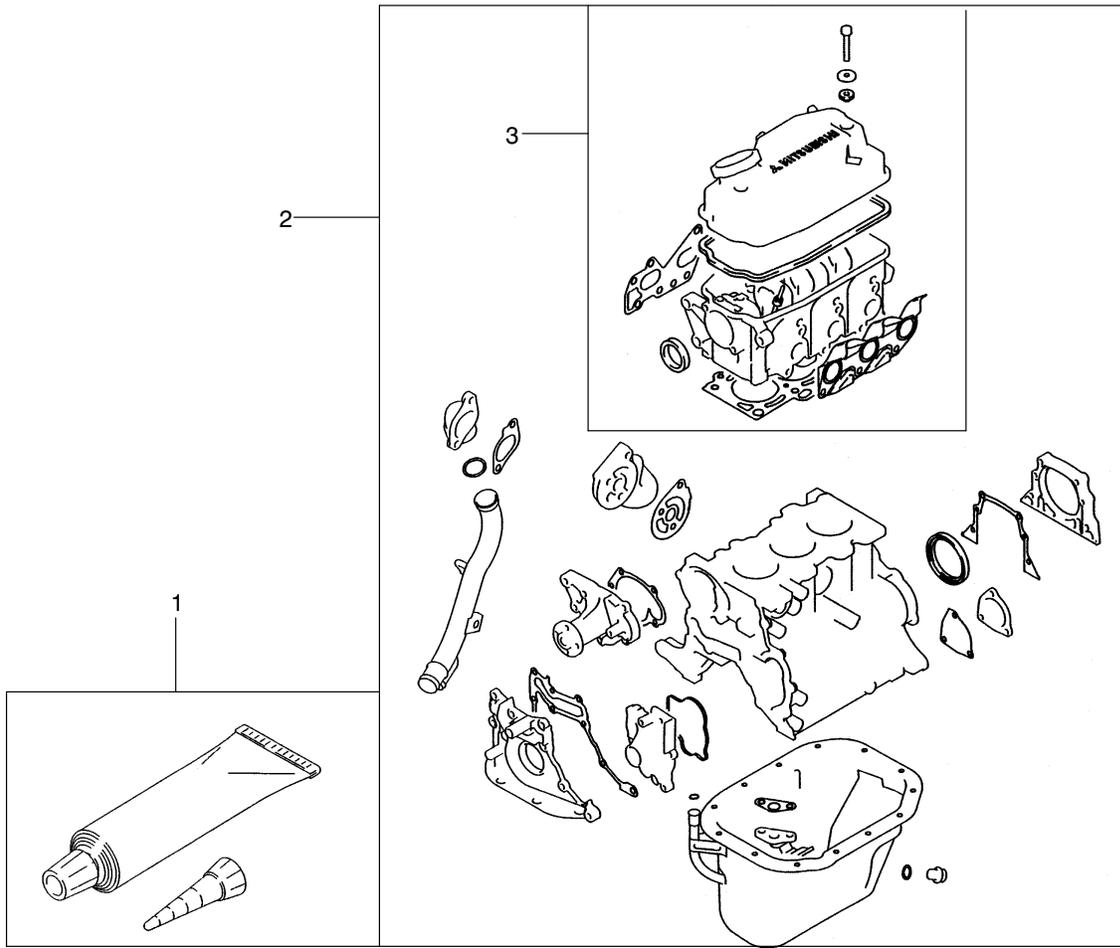

T-1629-1

### GASKET KIT

Ref. No.	Part No.	Description	No. Used
1	92-5100	Gasket-Liquid	1
2	92-2127	Kit-Overhaul Gasket	1

Ref. No.	Part No.	Description	No. Used
3	92-2126	Kit-Gasket, Upper	1

PROTOTYPE

# TORO PART NUMBER INDEX

3322-653

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
111071	Bumper	17	4	2	39-7440	Nut-Lock	6	23	1
116749	Asm-Horn	1	21	1	39-7440	Nut-Pitman Arm	7	41	1
146489	Rivet	14	51	8	42-3560	Screw-Shoulder	19	15	1
146489	Rivet-Pop	1	28	8	42-7160	Pin-Dowel	60	12	3
5-3637	Washer-Flat	45	7	1	42-7860	Lock-Valve	62	26	12
18-1720	Joint-Ball	35	29	1	42-9230	Screw-HH	34	61	1
18-2830	Asm-Horn Switch	2	31	1	42-9400	Bolt	65	20	2
18-4260	Asm-Screw/Lockwasher	7	9	2	42-9400	Bolt/washer	64	2	8
18-4270	Clamp-Ball Return Guide	7	8	1	42-9530	Screw-HH	39	10	25
18-4340	Plug-Rack Piston End	7	6	1	42-9530	Screw-HH	14	18	9
18-5170	Kit-Seal, Valve Ring	8	*	1	42-9560	Stud	58	14	3
18-5180	Kit-Bearing, Lower Thrust	8	*	1	42-9580	Nut-Hex.	33	12	3
18-5190	Kit-Ball, Recirculating	7	10	1	42-9850	Washer-Lock	14	17	12
18-5430	Plug-Expansion	36	28	1	42-9850	Washer-Lock	42	21	3
18-5440	Spacer	36	27	2	42-9850	Washer-Lock	39	32	42
18-5450	Bearing	36	17	2	43-0090	Screw-HH	32	20	1
18-5520	Lever-Rocker	36	25	1	43-1710	Hydraulic Valve Assembly	54	28	1
18-5530	Screw & Lockwasher	36	29	2	43-1911	Fan	29	26	1
18-5540	Retainer-Sleeve Stop	36	26	3	43-1950	Valve	49	9	1
18-5580	Seal-Oil, Front	36	37	1	43-4300	Trim	46	1	3
18-5620	Screw	36	2	4	43-4300	Trim	33	41	2
18-5630	Washer-Lock	36	3	4	43-5150	Piston	50	11	1
18-5640	Ring-Retaining	36	6	2	43-6550	Ring-Retaining	6	10	2
18-5660	Pin-Pivot, Flyweight	36	32	2	44-0760	Decal-Warning	21	33	2
18-5670	Retainer-Pivot Pin	36	33	2	44-2230	Disc-Rubber	31	4	2
18-5750	Pin	36	16	1	46-6560	Bushing	45	25	1
18-5770	Washer-Lock	36	7	2	46-7510	Hood-Air Inlet	46	24	1
18-5790	Gasket	36	5	1	46-8091	Screw-HFH	29	8	4
19-4050	Knob	44	10	2	48-7560	Screw-HH	32	9	3
19-4050	Knob	29	33	3	48-7560	Screw-HH	39	24	1
20-7150	Asm-Toggle Switch	3	62	1	48-7610	Bolt-HH	59	8	2
21-0360	Nut-Hex.	10	6	1	48-7610	Screw-HH	14	27	4
21-5640	Joint-Ball	35	9	2	48-7620	Screw-HH	34	58	1
21-9260	Spacer	6	4	1	48-7700	Bolt	61	3	6
22-8330	Plug	51	1	2	48-7700	Screw-HH	42	9	3
22-8340	Spring	51	3	2	48-7730	Screw-HH	39	18	5
22-8350	Ball	51	4	2	48-7740	Screw-HH	6	15	4
22-8360	Pin-Cam	51	6	2	48-7890	Nut-Hex.	33	8	1
22-8370	Seat-Check Valve	51	5	2	48-7930	Nut	66	21	6
22-8380	Retainer-Spring	51	10	2	48-7930	Nut-Hex.	39	2	1
22-8410	Spring	51	11	1	48-8030	Washer	66	20	6
22-8420	Spool	51	8	1	48-8070	Washer-Flat	6	6	1
22-8480	Ring-Retaining, Spool	51	13	1	48-9480	Screw-HH	33	20	2
22-8490	Ring-Retaining	51	14	1	48-9520	Nut-Lock	25	28	2
22-8500	O-Ring	51	9	2	48-9520	Nut-Lock	38	50	3
23-3030	Spacer	51	12	1	49-9150	Washer-Flat	19	2	1
23-7270	Nut-Lug	23	4	10	49-9150	Washer-Flat	18	36	1
23-7270	Nut-Lug	26	18	10	52-2480	Spacer	33	24	2
24-7922	Conduit-Hose (Europe)	49	36	1	54-0110	Element-Oil Filter	37	38	1
24-7923	Conduit-Hose (Europe)	49	35	2	54-1400	Clip	65	12	4
26-0071	Bumper	1	9	2	55-7120	Switch-Brake Light	9	32	1
27-2360	Asm-Ignition Switch	2	43	1	55-7290	Battery	44	9	1
27-6590	Spacer-Thick	31	7	4	56-0100	Plug-Taper	57	9	1
27-6600	Spacer-Thin	31	3	4	56-2150	Screw-HH	14	10	4
28-0540	Bolt-Shoulder	9	46	1	56-7973	Clamp-Hydraulic Tube	48	17	4
28-8200	O-Ring	7	27	1	57-6380	Screw-HH	33	22	2
28-8210	Bolt-HFH	7	17	4	57-6380	Screw-HH	14	31	3
28-8220	Nut-Lash Adjuster	7	16	1	58-4250	Magnet	29	31	2
28-8270	Kit-Seal Service, End Plug	8	*	1	59-2290	Spacer	32	19	1
28-8280	Kit-Seal, Side Cover	7	14	1	60-6750	Screw-HH	39	4	11
28-8290	Kit-Seal Service	8	*	1	62-5550	Decal-TORO	1	2	1
33-3090	Bushing-Flange	21	7	4	62-7650	Gasket-Sending Unit	45	3	1
36-3400	Decal-No Step	44	11	1	63-6940	Hose-Fuel	33	45	1
39-7310	O-Ring	48	29	2	63-7640	Unit-Sending	45	4	1
39-7310	O-Ring	7	35	3	63-8140	Pulley	29	15	1
39-7420	Washer-Lock	6	22	1	63-8140	Pulley	35	19	1
39-7420	Washer-Lock	7	42	1	63-8360	Key-Ignition	2	10	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
63-9640	Hose-Fuel	45	12	1	87-0710	Hood	1	1	1
63-9640	Hose-Fuel	46	14	1	87-0740	Key-Supervisor Switch	2	17	1
65-5100	Handle	29	6	2	87-1430	Joint-Ball	22	16	4
65-5220	Screw-HSH	18	40	3	87-1450	Bushing-Rubber	22	1	8
65-5360	Spring-Extension	6	35	1	87-1470	Asm-Rod End, LH Thread	23	19	2
65-5390	Washer-Flat	33	39	4	87-1480	Asm-Rod End, RH Thread	23	24	2
66-3160	Screw-HH	14	1	2	87-1490	Spring-Leaf	25	15	2
66-3160	Screw-HH	35	12	2	87-1500	Asm-Steering Gear	6	20	1
66-3160	Screw-HH	37	24	7	87-1500	Steering Gear (Complete)	8	*	1
66-3160	Screw-HH	33	27	1	87-1510	Muffler & Tailpipe	33	53	1
66-3160	Screw-HH	33	40	4	87-1680	Chamber-Air	33	3	1
66-3160	Screw-HH	33	49	1	87-1720	Nut-Supervisor Switch	2	18	1
66-3240	Cap-Radiator	29	5	1	87-1910	Pin-Alignment	14	11	2
66-4850	Spring-Compression	53	11	1	87-1920	Seal-Shaft	14	6	2
66-6840	Decal-Caution	25	32	2	87-1970	Bearing-Matched Set	27	*	2
67-2250	Bolt	57	11	8	87-2040	Lever-Shift	18	16	1
67-2360	Bushing	57	12	4	87-2080	Stud-Drive	26	12	10
67-2390	Plug-Taper	57	16	1	87-2100	Bearing-Release	14	23	1
67-2390	Plug-Taper	66	22	1	87-2110	Asm-Tail Light	52	10	1
67-2440	Bolt-Engine Mount	63	3	3	87-2120	Asm-Headlight	1	3	2
67-2560	Bolt/washer	64	1	5	87-2240	Housing-Axle	26	7	2
67-3260	Washer	68	3	1	87-2260	Boot-Shift Lower	18	28	1
67-3260	Washer	66	6	2	87-2280	Bearing	6	25	3
67-3260	Washer	69	16	1	87-2310	Clevis-Cable	37	36	2
67-4330	Filter-Oil	64	9	1	87-2310	Clevis-Cable	18	47	2
67-4670	Nut	66	5	2	87-2400	Lever-Throttle	35	22	1
67-4670	Nut	69	17	1	87-2410	Rod-Tie	23	17	2
68-3840	Ball Joint	9	23	1	87-2420	Boot	22	19	4
68-3841	Asm-Ball Joint	9	45	1	87-2440	Bumper	1	7	2
68-9950	Spring-Extension	37	44	1	87-2480	Link-Stabilizer	21	24	2
70-1480	Relay	33	16	1	87-2500	Sleeve-Spring Pivot	21	12	2
70-2100	Asm-Thrust Sleeve &	36	31	1	87-2510	Bracket-Seat Frame	17	11	2
70-2120	Spacer	36	35	1	87-2520	Tube-Pivot	18	21	1
70-2140	Bearing-Front	36	36	1	87-2710	Lever-Parking Brake	19	29	1
70-2150	Flyweight	36	9	2	87-2720	Driveshaft	31	10	1
71-3381	Tube-Overflow	29	3	2	87-2750	Spacer-Bearing	31	12	1
71-4780	Seal-Oil, Rocker Shaft	36	18	1	87-2760	Bracket-Ignition Coil	33	19	1
71-5320	Washer-Flat	19	18	1	87-2790	Tube-Brake LH	22	*	1
72-4310	Switch-Ball N.C.	37	46	1	87-2800	Tube-Brake RH	22	20	1
72-5890	Shaft-Rocker	36	20	1	87-2820	Bracket-Hose	23	15	2
72-5910	Asm-Bumper Screw	36	23	1	87-2870	Bracket-Brake Hose	22	4	2
72-5940	Bearing-Needle	36	30	1	87-2880	Shaft-Accelerator Pedal	9	6	1
74-0720	Tube-Manual	17	1	1	87-2900	Spring-Compression	18	24	1
75-4701	Hose-Fuel	33	46	1	87-3000	Rim-Rear 23	26	*	2
75-6820	Hourmeter	2	16	1	87-3010	Asm-Brake RH	23	10	1
75-6880	Spark Arrestor (Optional)	33	51	1	87-3010	Asm-Front Brake, RH	24	*	1
75-9610	Spacer	48	7	1	87-3020	Asm-Brake, LH	23	*	1
76-2290	Spacer	19	37	1	87-3020	Asm-Front Brake, LH	24	*	1
76-8750	Plate-Warning	29	40	1	87-3040	Reservoir-Master Cylinder	10	1	1
76-9100	Spacer	32	13	6	87-3060	Washer-Flat	26	25	2
76-9100	Spacer-Hi-Lo Lever	18	35	1	87-3070	Cable-Positive	33	10	1
76-9430	Spring-Extension	9	28	1	87-3080	Wire-Ground	33	25	1
80-6990	Washer	26	39	4	87-3100	Asm-Lower Shaft	6	*	1
80-6990	Washer-Flat	38	49	3	87-3110	Absorber-Shock	21	29	2
80-8040	Decal-Caution	31	1	1	87-3110	Shock Absorber	25	8	2
83-6030	Decal-Caution (Japan)	31	1	1	87-3120	Steering Column & Shaft	6	*	1
83-9150	Decal-Fluid	31	18	1	87-3130	Lever-Tilt Steering	6	36	1
84-1680	Ring-Retaining	50	7	1	87-3140	Support-Rear	45	15	1
84-2780	Decal-No Step (Japan)	44	11	1	87-3150	Support-Front	45	18	1
84-6660	Decal-Fluid (Japan)	31	18	1	87-3160	Strap-Tank Support	45	20	2
87-0150	Tower-Control Arm RH	21	9	1	87-3170	Pad-Tank Support Strap	45	21	2
87-0160	Tower-Control Arm LH	21	*	1	87-3200	Belt-V	35	25	1
87-0210	Arm-Control Lower RH	22	18	1	87-3210	Belt-V	31	14	1
87-0220	Arm-Control Lower LH	22	*	1	87-3250	Mount-Bearing	6	26	3
87-0270	Drum-Brake	23	7	2	87-3310	Clip-Brake Cable	26	8	2
87-0370	Arm-Pitman	6	21	1	87-3310	Clip-Brake Cable	23	25	2
87-0690	Spring-Compression	21	15	2	87-3370	Pulley	31	13	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3322-653

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
87-3420	Hose-Air Cleaner	33	1	1	87-4260	Asm-Shift Cable	38	51	2
87-3430	Hose-Radiator Upper	29	29	1	87-4340	Clamp-Cable	18	10	1
87-3430	Hose-Radiator Upper	33	29	1	87-4350	Lever-Hi-Lo	18	2	1
87-3450	Plug	23	12	2	87-4420	Asm-Hi-Lo Cable	18	6	1
87-3460	Boot-Tilt Steering	6	2	1	87-4420	Asm-Hi-Lo Cable	38	52	1
87-3470	Bumper-Spring	25	14	2	87-4440	Driveshaft	31	5	1
87-3480	Plate-Brake Equalizer	19	22	1	87-4460	Differential Lock Cable	19	11	1
87-3500	Hose-Air Cleaner	33	33	1	87-4470	Bracket	37	23	1
87-3520	Clevis	18	27	1	87-4490	Bracket-Hold-Down	48	22	1
87-3530	Button-Shifter	18	29	1	87-4500	Rod-Pivot	48	2	1
87-3540	Link-Shift	18	20	2	87-4510	Rod-Connecting	48	3	1
87-3560	Tee-Brake Line	11	18	1	87-4520	Bracket-Dump Valve	49	27	1
87-3560	Tee-Brake Tube	25	23	1	87-4540	Asm-Hydraulic Tube	48	20	1
87-3560	Tee-Brake Tube	48	32	1	87-4560	Tube-Hydraulic	48	14	1
87-3570	Fitting-Union	11	6	2	87-4560	Tube-Hydraulic	49	33	1
87-3570	Union-Brake Line	9	5	2	87-4580	Rod-Auxiliary Lever	53	2	1
87-3570	Union-Brake Line	25	25	1	87-4610	Rod-Auxiliary	53	3	1
87-3580	Retainer	25	4	2	87-4620	Bracket-Auxiliary Valve	54	4	1
87-3580	Retainer	23	14	2	87-4670	Plate-Detent Lower	18	48	1
87-3580	Retainer-Brake Hose	26	2	2	87-4680	Plate-Detent Upper	18	49	1
87-3580	Retainer-Brake Hose	22	3	2	87-4710	Spacer-Barking Brake	19	13	1
87-3580	Retainer-Brake Hose	11	8	2	87-4720	Plate-Steering Boot	6	3	1
87-3590	Seal-Bearing	26	22	2	87-4730	Guard-Belly	32	15	2
87-3590	Seal-Bearing	23	26	2	87-4750	Bracket-Governor	35	14	1
87-3600	Spacer	21	3	10	87-4760	Bushing	25	12	12
87-3610	Bracket-Detent	6	34	1	87-4770	Bracket-High Idle Stop	35	4	1
87-3620	Shield-Heat	33	23	1	87-4820	Bracket-Cable	37	27	1
87-3650	Pin-Shift	18	18	1	87-4870	Hose-Hydraulic	49	4	1
87-3660	Spring-Compression	18	30	1	87-4880	Hose-Hydraulic LH	49	3	1
87-3670	Hose-Hydraulic	49	21	1	87-4900	Hose-Hydraulic RH	49	31	1
87-3670	Hose-Hydraulic	38	54	1	87-4910	Hose-Hydraulic RH	49	13	1
87-3680	Asm-Relief Valve	48	*	1	87-4920	Hose-Hydraulic	37	41	1
87-3700	Screw-HH	32	8	3	87-4960	Clamp-Cable	18	42	1
87-3700	Screw-HH	35	16	1	87-4970	Asm-Engine Mount	32	3	2
87-3710	Asm-Overflow Reservoir	29	1	1	87-4970	Asm-Transaxle Mount	37	18	2
87-3720	Retainer-Cylinder	49	17	2	87-5030	Lever-Differential Lock	19	3	1
87-3730	Hose-Coolant	33	28	2	87-5050	Hose-Radiator Lower	29	10	1
87-3740	Hose-Breather	33	7	1	87-5050	Hose-Radiator Lower	33	31	1
87-3750	Cover-Steering Wheel	6	9	1	87-5060	Cushion-Seat Bottom	15	7	2
87-3760	Plate-Shift Boot	15	14	1	87-5070	Pulley-Crankshaft	33	38	1
87-3770	Bushing-Sleeve	14	7	2	87-5080	Spacer-Connecting	48	25	1
87-3780	Box-Glove	2	3	1	87-5080	Spacer-Connecting Rod	53	4	1
87-3790	Switch-Light	2	19	1	87-5100	Washer	37	17	4
87-3800	Bracket-Seat Bottom	15	3	3	87-5100	Washer-Flat	32	4	4
87-3820	Wheel-Steering	6	7	1	87-5110	Support-Lower	44	19	1
87-3850	Bar-Anti-Sway	21	17	1	87-5120	Bracket-Battery Base	44	15	1
87-3860	Link-Anti-Sway Bar	21	5	2	87-5130	Cover-Battery Base	44	12	1
87-3890	Bracket-Anti-Sway Bar	21	18	2	87-5140	Nut-Lock	48	8	1
87-3900	Bracket-Cable	35	26	1	87-5150	Screw-HH	48	4	1
87-3910	Bushing-Anti-Sway Bar	21	19	2	87-5290	Shaft-Release	14	5	1
87-3920	Bushing-Rubber	21	4	16	87-5300	Fork-Clutch	14	20	1
87-3920	Bushing-Rubber	25	7	8	87-5320	Guide-Release	14	22	1
87-3940	Mount-Spring RH	25	*	1	87-5330	Washer	21	2	8
87-3960	Mount-Spring LH	25	18	1	87-5340	Kit-Seal, Tie Rod End	23	*	4
87-3980	Shackle-Spring	25	11	4	87-5350	Bracket-Switch	14	15	1
87-3990	Asm-Oil Strainer	37	26	1	87-5360	Lever	14	12	1
87-4010	Clamp-Anti-Sway Bar	21	20	2	87-5370	Asm-Rear Tire & Wheel	27	*	2
87-4020	Spring-Extension	35	23	1	87-5490	Switch-Neutral	14	16	1
87-4060	Spacer-Bearing	26	21	2	87-5560	Hub-Wheel	23	8	2
87-4070	Bumper-Front	1	14	1	87-5580	Asm-Fuel Gauge	2	15	1
87-4080	Tube-Brake LH	26	6	1	87-5590	Asm-Temperature Gauge	2	8	1
87-4090	Tube-Brake RH	26	1	1	87-5700	Asm-Hydraulic Pump	29	19	1
87-4100	Hose-Brake	26	3	2	87-5720	Rim	23	6	2
87-4100	Hose-Brake	25	5	2	87-5730	Hose-Hydraulic	37	4	1
87-4210	Rod-Linkage	35	11	1	87-5770	U-Bracket-Tail Light	52	5	1
87-4230	Harness-Wire Front LH	2	41	1	87-5800	Bracket-Mount	37	21	2
87-4260	Asm-Cable	18	15	2	87-5910	Decal-Supervisor	3	55	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
87-5920	Decal-Danger	16	26	1	87-7930	Decal-Danger	17	6	1
87-5930	Decal-Caution	15	10	1	87-7930	Decal-Warning	50	13	1
87-5940	Decal-Rollover	20	2	1	87-7930	Decal-Warning	49	32	2
87-5960	Decal-Axle	15	11	1	87-7940	Stud	17	8	1
87-5970	Decal-PTO	15	16	1	87-7950	Asm-Bed Support	17	7	1
87-5980	Decal-R.O.P.S.	20	3	2	87-7960	Lever-Shift Arm	38	48	2
87-5990	Decal-PTO	26	40	1	87-7970	Arm-Shift	37	15	1
87-6000	Decal-Differential	15	17	1	87-8080	Asm-Console Plate	15	21	1
87-6010	Decal-Dump Hyd.	15	19	1	87-8120	Bracket-Trim Side	1	11	2
87-6020	Decal-Brake	15	20	1	87-8130	Bracket-Trim Top	1	19	1
87-6040	Bracket-Shifter	18	22	1	87-8160	Trim	1	20	1
87-6060	Decal-ATF	26	4	1	87-8240	Cable-Parking Brake	19	24	2
87-6170	Frame-Seat	17	14	1	87-8250	Plate-Shift Arm	37	10	1
87-6240	Bracket-Seat Back	17	23	4	87-8440	Asm-Rear Frame	25	2	1
87-6270	Asm-Socket & Bulb	3	60	4	87-8460	Bumper	14	34	1
87-6280	Plate-Seat Back	17	18	2	87-8480	Bracket-Clutch	14	43	1
87-6290	Cushion-Seat Back	17	17	2	87-8500	Asm-Front Wire Harness	2	47	1
87-6300	Lens	52	7	1	87-8520	Decal-Dash	3	56	1
87-6310	Gasket	52	9	1	87-8540	Asm-Control Panel	2	53	1
87-6320	Bulb-Headlight	1	5	2	87-8620	Boot-Shift	15	13	1
87-6330	Lens-Headlight	1	6	2	87-8640	Washer-Flat	18	26	1
87-6370	Asm-Rear Tire & Wheel	27	*	2	87-8640	Washer-Flat	33	48	1
87-6490	Spring	36	13	1	87-8710	Tab-Clutch	14	42	1
87-6510	Asm-Shaft & Yoke	36	34	1	87-8720	Asm-Governor	35	24	1
87-6520	Body	36	24	1	87-8730	Stud-Drive	23	9	10
87-6530	Asm-Throttle Lever	36	22	1	87-8780	Head-Oil Filter	37	43	1
87-6540	Bolt-Eye	36	21	1	87-8820	Hub-Pulley	36	38	1
87-6550	Pin-Forced Idle	36	14	1	87-8830	Pulley	36	1	1
87-6560	Cover	36	4	1	87-9080	Decal-Grease	26	44	2
87-6570	Foam-Seal	18	38	1	87-9250	Asm-Transaxle	37	22	1
87-6580	Stud-Lever Pivot	36	11	1	87-9300	Door-Clean Out	29	34	1
87-6590	Asm-Lever & Fitting	36	10	1	87-9350	Asm-Hydraulic Tube	48	16	1
87-6620	Screw	1	10	15	87-9420	Decal-Caution	29	35	1
87-6620	Screw-Torx Pan Hd.	14	40	2	87-9430	Spindle-RH	23	13	1
87-6620	Screw-Torx Pan Hd.	9	43	2	87-9440	Spindle-LH	23	*	1
87-6640	Lever-Dump Stop	19	14	1	87-9480	Fender-Front	16	24	2
87-6660	Fender-Rear 24	52	17	2	87-9810	Foam-Overflow Tank	29	36	1
87-6670	Decal-Fuse	3	54	1	87-9830	Mount-Engine	32	7	1
87-6690	Guard-Induction Chamber	25	29	1	92-0650	Bearing-Ball	41	22	1
87-6700	Decal-Workman 3200	1	15	1	92-0651	Case-Transaxle	39	19	1
87-6710	Switch-Supervisor	37	33	1	92-0652	Cover-Upper	39	7	1
87-6720	Knob	18	17	1	92-0653	Cover-Side	39	9	1
87-6740	Tire-Rear 24	26	16	2	92-0654	Carrier-Differential	39	17	1
87-6750	Rim-Rear 24	26	19	2	92-0655	Cover-Seal	39	30	1
87-6890	Hold-Hand	15	1	1	92-0656	Cover-Power Take Off	39	1	1
87-6910	Spring-Compression	37	13	1	92-0657	Plate-Center	39	21	1
87-6950	Receiver-LH	20	6	1	92-0662	Cap-Oil	39	5	1
87-6960	Receiver-RH	20	7	1	92-0663	Shaft-Main	41	16	1
87-7000	Decal-Load	1	16	1	92-0664	Hub-Synchro	41	12	2
87-7040	Bracket-Oil Filter	37	2	1	92-0665	Key-Synchro	41	23	6
87-7050	Cap-Reservoir	29	43	1	92-0666	Spring-Synchro	41	13	4
87-7070	Asm-Skirt	15	2	1	92-0667	Ring-Synchro	41	6	3
87-7090	Asm-Frame, R.O.P.S.	20	1	1	92-0668	Shifter-Synchro	41	7	2
87-7110	Asm-Axle, Rear	26	5	1	92-0672	Gear-18T	41	19	1
87-7150	Asm-Cradle, Spring	21	13	2	92-0673	Gear-14T	41	21	1
87-7160	Asm-Cable Clevis	38	*	1	92-0674	Shaft-Reduction	41	28	1
87-7160	Asm-Clevis, Cable	18	7	1	92-0677	Gear-49T	41	31	1
87-7170	Bracket-Clutch Spring	37	45	1	92-0679	Gear-23T	41	25	1
87-7270	Washer-Flat	26	23	6	92-0680	Collar	41	26	1
87-7470	Plate-Clamp	25	16	2	92-0681	Bearing-Needle	41	30	2
87-7480	Washer-Flat	25	34	8	92-0682	Washer-Thrust	41	29	1
87-7480	Washer-Flat	6	37	3	92-0684	Gear-33T	41	10	1
87-7600	Rod-Battery Support	44	21	1	92-0687	Gear-16T	41	18	1
87-7610	Tab-Battery Support	44	3	1	92-0698	Shaft-Fork R-1	42	14	1
87-7620	Shield-Plastic	44	14	1	92-0699	Shaft-Fork 2-3	42	7	1
87-7660	Clamp-Brake Line	11	2	8	92-0700	Fork-Shift R-1	42	3	1
87-7660	Clamp-Tube	9	40	2	92-0701	Fork-Shift 2-3	42	6	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3322-653

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-0705	Lock-Spindle	42 20 1	92-0787	O-Ring	43 22 1
92-0706	Cap-Fork Shaft	39 25 1	92-0788	O-Ring	39 6 1
92-0708	Shaft-Fork Hi-Lo	42 16 1	92-0789	O-Ring	39 14 1
92-0709	Fork-Shift Hi-Lo	42 17 1	92-0790	O-Ring	39 29 1
92-0710	Asm-Counter Shaft	40 14 1	92-0791	Seal-Oil	39 26 1
92-0710	Asm-Ring Gear	43 8 1	92-0793	Seal-Oil	39 16 2
92-0711	Washer-Thrust	40 4 2	92-0793	Seal-Oil	43 32 2
92-0712	Bearing-Ball	40 1 1	92-0796	Screw-HH	39 31 5
92-0713	Collar	40 12 1	92-0803	Screw-HHF	43 30 12
92-0714	Bearing-Ball	40 13 2	92-0804	Stud	39 28 1
92-0715	Gear-49T	40 6 1	92-0807	Cap-Sealing	39 23 1
92-0716	Collar	40 2 1	92-0808	Shim Set	39 20 1
92-0717	Gear-71T	40 9 1	92-0809	Shim Set	39 11 1
92-0718	Shifter-Hi-Lo	40 7 1	92-0816	Arm-Shift Fork R-1	42 15 1
92-0719	Collar-Spline	40 8 1	92-0817	Arm-Shift Fork 2-3	42 5 1
92-0720	Case-Differential	43 31 1	92-0818	Arm-Shift Fork Hi-Lo	42 19 1
92-0721	Fork-Differential Lock	43 17 1	92-0819	Gear-40T	41 32 1
92-0722	Shaft-Lock Fork	43 18 1	92-0820	Gear-27T	41 5 1
92-0723	Spring-Compression	43 19 1	92-0821	Gear-24T	41 15 1
92-0724	Arm-Differential Lock	43 27 1	92-0822	Gear-28T	41 24 1
92-0725	Shaft-Axle L.H.	43 28 1	92-0823	Gear-43T	41 27 1
92-0726	Shaft-Axle R.H.	43 1 1	92-0824	Shaft-Reverse Idler	41 9 1
92-0727	Washer	43 4 2	92-1233	Pin-Clevis	56 4 4
92-0728	Washer	43 2 1	92-1242	Decal-Toro	56 37 1
92-0729	Seal-Oil	42 10 3	92-1248	Panel-Side LH	56 22 1
92-0730	Slider-Differential Lock	43 7 1	92-1255	Panel-Side RH	56 5 1
92-0731	Spring-Compression	42 2 3	92-1259	Tailgate-Rear	56 38 1
92-0732	Plate-Keeper	42 8 3	92-1265	Bracket-Pivot	56 26 2
92-0733	Washer	43 20 1	92-1271	Pivot-Latch	56 42 2
92-0740	Washer-Thrust	41 3 3	92-1298	Pin-Lynch	56 3 8
92-0741	Washer-Thrust	40 10 1	92-1319	Decal-Caution	56 25 2
92-0743	Breather-Air	39 27 1	92-1320	Angle-Side	56 8 2
92-0744	Washer	43 14 1	92-1345	Cover-Engine (Europe)	14 45 1
92-0745	Gear-Side L.H.	43 24 1	92-1901	Clip	66 7 1
92-0746	Gear-Side R.H.	43 11 1	92-1902	Plug-Taper	57 8 1
92-0747	Washer-Thrust	43 10 2	92-1903	Washer	58 17 8
92-0748	Gear-Pinion	43 12 2	92-1905	Stud	58 20 6
92-0749	Shaft-Pinion	43 23 1	92-1906	Asm-Valve	66 16 1
92-0750	Washer	43 13 2	92-1907	Cover-Access	59 19 1
92-0753	Ring-Retaining	41 2 1	92-1908	O-Ring	65 17 1
92-0753	Ring-Retaining	43 21 1	92-1909	Nut	62 16 6
92-0754	Ring-Retaining	41 20 1	92-1910	Plug-Taper	57 10 1
92-0755	Ring-Retaining	40 11 1	92-1911	Guide-Exhaust Valve	58 18 1
92-0756	Ring-Retaining	43 5 3	92-1912	Pipe-Manifold	66 23 1
92-0759	Ring-Retaining	39 22 1	92-1914	Bearing-Ball	60 10 1
92-0760	Ring-Retaining	39 15 1	92-1915	Clamp-Cable	58 8 1
92-0761	Ring-Retaining	42 18 1	92-1916	Plug-Taper	58 19 1
92-0762	Washer-Lock	39 3 1	92-1917	Nipple	66 25 1
92-0763	Ring-Retaining	41 14 3	92-1918	Bolt-Flange Head	64 7 1
92-0764	Ring-Retaining	40 3 3	92-1920	Plug-Oil	59 14 1
92-0765	Pin-Alignment	39 8 4	92-1921	Gasket-Oil	59 13 1
92-0765	Pin-Alignment	43 9 2	92-1922	Washer	62 9 1
92-0768	Pin-Spring	43 15 2	92-1923	Nut	60 5 6
92-0769	Pin-Spring	42 4 2	92-1924	Hose-Water By-Pass	65 13 1
92-0770	Pin-Spring	43 26 1	92-1925	O-Ring	57 31 1
92-0771	Pin-Spring	43 16 1	92-1926	Guide-Intake Valve	58 15 3
92-0772	Key	41 17 2	92-1927	Plunger-Relief	64 12 1
92-0773	Asm-Drain Plug	39 13 1	92-1928	Spring-Relief	64 13 1
92-0775	Bearing-Ball	43 6 2	92-1929	Seal-Oil	58 7 2
92-0775	Bearing-Ball	39 33 2	92-1930	Washer-Wave	62 19 2
92-0776	Bearing-Ball	43 29 1	92-1931	Retainer	62 27 6
92-0778	Bearing-Ball	41 11 2	92-1932	Bolt	71 29 1
92-0780	Bearing-Ball	43 3 1	92-1933	Gauge-Water Temperature	65 11 1
92-0781	Bearing-Needle	41 4 4	92-1934	Bolt-Flywheel	60 11 5
92-0782	Bearing-Needle	41 33 1	92-1935	Plug-Taper	57 5 1
92-0783	Sleeve-Inner	40 5 1	92-1936	Seal-Valve	62 28 6
92-0785	Ball	42 1 3	92-1937	Plate-Rear	59 6 1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-1938	Cover-Bell Housing	59	7	1	92-2011	Brace	71	28	1
92-1938	Cover-Bell Housing	14	29	1	92-2012	Bracket-Oil Filter	57	23	1
92-1939	Gasket	59	16	1	92-2013	Piston & Pin	60	*	3
92-1940	Gasket	59	17	1	92-2014	Piston Ring Set (Std.)	60	1	1
92-1941	Gasket-Oil	64	16	1	92-2015	Piston Ring Set	60	*	1
92-1942	Gear-Ring	60	8	1	92-2017	Bolt-Rocker Shaft	62	21	2
92-1943	Packing	58	2	1	92-2018	Bolt-Rocker Shaft	62	22	2
92-1944	Gasket-Cover, Rocker	58	10	1	92-2019	Strainer-Oil	59	10	1
92-1945	Cover-Rear	57	29	1	92-2021	Seal-Oil	58	12	1
92-1946	Gasket-Front	64	10	1	92-2022	Mount-Engine	63	2	1
92-1947	Arm-Rocker	62	18	6	92-2023	Manifold-Exhaust	66	19	1
92-1948	Gear-Oil Pump	64	5	1	92-2024	Pipe-Water	65	15	1
92-1949	Gear-Oil Pump	64	6	1	92-2025	Asm-Alternator	71	*	1
92-1950	Gasket	65	7	1	92-2026	Hose-PCV Valve	58	4	1
92-1951	Nipple	66	26	1	92-2027	Coil-Ignition	33	14	1
92-1952	Seal-Oil	57	27	1	92-2028	Wire-High Tension	69	21	1
92-1953	Screw-Adjusting	62	17	6	92-2032	Seal-Oil	64	3	1
92-1954	Valve-Inlet	62	29	3	92-2034	Head-Cylinder	58	11	1
92-1955	Valve-Exhaust	62	31	3	92-2035	Cover-Front	59	5	1
92-1956	Bearing-Set, Main	57	17	1	92-2036	Cover-Exhaust Manifold	66	17	1
92-1957	Rod Bearing Set	60	6	1	92-2037	Kit-Gasket	67	14	1
92-1958	Pin-Dowel	57	15	1	92-2038	Kit-Gasket	67	12	1
92-1959	Seat-Intake Valve	58	21	3	92-2039	Kit-Thermostat	65	8	1
92-1960	Seal-Oil	64	11	1	92-2040	Pulley	65	3	1
92-1961	Seal-Valve	62	13	6	92-2041	V-Belt	65	1	1
92-1962	Gasket	59	3	1	92-2042	Sprocket-Oil	62	33	1
92-1962	Gasket	59	20	1	92-2043	Asm-Distributor	69	*	1
92-1963	Mount-Engine	66	8	1	92-2044	Gasket-Exhaust	33	54	1
92-1964	Plate-Cam	62	14	1	92-2044	Gasket-Exhaust Ring	66	18	1
92-1965	Asm-Cover	59	2	1	92-2045	Housing-Seal, Oil	57	26	1
92-1966	Gasket	59	21	1	92-2046	Asm-Oil Pump	64	4	1
92-1967	Asm-Cover	59	15	1	92-2049	Asm-Camshaft	62	24	1
92-1968	Tensioner-Belt	62	30	1	92-2050	PCV Valve	58	3	1
92-1971	Bolt	58	16	8	92-2053	Asm-Oil Pan	59	11	1
92-1972	Washer	62	20	2	92-2054	Manifold-Intake	66	9	1
92-1973	Shaft-Rocker Arm	62	23	1	92-2055	Asm-Starter	70	*	1
92-1974	Asm-Case	64	8	1	92-2056	Flange-PTO	62	32	1
92-1975	Cap-Oil	58	1	1	92-2057	Bolt-Crankshaft PTO	60	14	1
92-1976	Seat-Exhaust Valve	58	22	3	92-2059	Belt-Timing	62	11	1
92-1977	Spring-Valve	62	12	6	92-2060	Asm-Water Pump	65	5	1
92-1978	Switch-Oil Pressure	63	4	1	92-2061	Asm-PTO Sprocket	62	3	1
92-1980	Flywheel	60	9	1	92-2062	Asm-PTO Adapter	62	2	1
92-1981	Bearing-Front	57	13	1	92-2063	Washer	58	6	2
92-1982	Bearing-Ring	57	7	1	92-2065	Bearing	71	5	1
92-1983	Retainer	64	14	1	92-2066	Nut	71	23	2
92-1984	Washer	71	27	1	92-2067	Spring-Brush	71	16	2
92-1987	Gasket	57	25	1	92-2068	Brush	71	17	2
92-1988	Gasket-Oil	59	9	1	92-2069	Cover-Bearing	71	11	1
92-1989	Gasket	65	6	1	92-2070	Bearing	71	10	1
92-1991	Gasket	57	30	1	92-2071	Screw	71	18	2
92-1993	Gasket-Intake	66	10	1	92-2073	Asm-Holder	71	15	1
92-1994	Cap-Sealing	57	4	1	92-2075	Asm-Rotor	71	9	1
92-1995	Asm-Crankshaft	60	7	1	92-2076	Plate	71	7	1
92-1996	Asm-Cover, Front	59	18	1	92-2077	Screw	71	8	4
92-1997	Gasket-Cylinder	58	23	1	92-2078	Bolt	71	4	2
92-1998	Shaft-Balancer	63	1	1	92-2079	Collar	71	2	1
92-1999	Rod-Connecting	60	4	3	92-2080	Frame-End	71	24	1
92-2000	Sprocket	62	10	1	92-2081	Cover-End	71	13	1
92-2001	Spring	62	7	1	92-2082	Rectifier	71	22	1
92-2002	Cap Inlet	66	27	1	92-2083	Bushing	71	21	1
92-2003	Bolt-Connecting Rod	60	3	6	92-2084	Regulator	71	20	1
92-2005	Piston & Pin (Std.)	60	2	3	92-2085	Screw W/washer	71	6	6
92-2006	Asm-Crankcase	57	1	1	92-2085	Screw W/washer	71	14	6
92-2007	Pump-Fuel	46	22	1	92-2086	Screw W/washer	71	19	1
92-2008	Cover	65	18	1	92-2087	Bolt W/washer	71	12	3
92-2009	Hose-By-Pass	65	14	1	92-2088	Yoke	70	15	1
92-2010	Pin-Dowel	62	25	1	92-2089	Brush	70	16	4

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3322-653

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-2090	Spring	70 17 4	92-2165	Kit-Repair	50 * 1
92-2091	Asm-Holder	70 14 1	92-2173	Screw-Cap Socket Head	30 18 8
92-2092	Insulator	70 13 1	92-2174	Screw-Adjusting	30 22 1
92-2093	Armature	70 6 1	92-2175	Gear	30 11 2
92-2094	Clutch	70 7 1	92-2176	Pin-Dowel	30 16 2
92-2095	Kit-Switch	70 4 1	92-2177	Pin-Shear	30 7 1
92-2096	Ring-Snap	70 9 1	92-2178	Ring-Crescent	30 4 4
92-2097	Nut	70 8 2	92-2179	Key-Square	30 5 1
92-2098	Washer	70 10 1	92-2180	Gasket-Copper	30 23 1
92-2099	Bolt	70 11 2	92-2181	Plate-Pressure	30 13 1
92-2100	Bolt	71 25 2	92-2182	Plate-Seal	30 9 1
92-2102	Lever-Clutch	70 3 1	92-2183	Plate-Wear	30 10 1
92-2103	Asm-Bracket, Front	71 3 1	92-2184	Cap-Relief Valve	30 24 1
92-2106	Nut	70 2 2	92-2185	Plug	30 19 1
92-2107	Nut	70 5 1	92-2186	Spacer	30 3 1
92-2108	Igniter Set	69 12 1	92-2187	Housing-Gear, End	30 17 1
92-2109	O-Ring	69 8 1	92-2189	Shaft-Drive	30 6 1
92-2110	Cover-Acc. Pump	68 19 1	92-2190	Shaft-Idler	30 25 1
92-2113	Rotor	69 2 1	92-2191	Bearing	30 27 1
92-2114	Asm-Cap	69 1 1	92-2192	Bearing	30 12 4
92-2115	Screw Set	69 14 1	92-2193	Ball	30 20 1
92-2116	Asm-Signal Rotor	69 6 1	92-2194	Spring	30 21 1
92-2117	Chamber-Vacuum	69 7 1	92-2195	Seal-Oil	30 2 1
92-2118	Plate	69 10 1	92-2196	Seal-Pressure Plate	30 15 1
92-2119	Wire-Lead	69 11 1	92-2197	Seal-Back Up	30 14 1
92-2121	Asm-Wire, Lead	69 13 1	92-2198	Seal	30 26 1
92-2122	Housing	69 9 1	92-2199	Key-Ball	30 28 1
92-2125	Asm-Spark Plug Wire Set	69 * 1	92-2379	Clamp-Hose	29 4 2
92-2126	Kit-Gasket, Upper	72 3 1	92-2601	Ring-Retaining	54 49 4
92-2127	Kit-Overhaul Gasket	72 2 1	92-2602	Coupling-Hyd. Female	55 54 2
92-2128	Bolt-Cover	58 5 2	92-2603	Plug-Dust	54 51 2
92-2129	Screw-HH	14 30 2	92-2605	Asm-Hydraulic Hose	54 36 1
92-2130	Bolt-HFH	62 15 2	92-2606	Asm-Hydraulic Hose	54 33 1
92-2131	Bolt-Flange Head	59 4 2	92-2609	Decal-Remote Hyd.	15 18 1
92-2131	Bolt-Flange Head	57 28 7	92-2610	Decal-Coupler (US)	55 55 1
92-2132	Bolt	65 16 1	92-2611	Decal-Caution (US)	55 56 1
92-2133	Bolt-HFH	71 26 1	92-2620	Asm-Hydraulic Tube	54 45 1
92-2134	Bolt-HFH	71 30 1	92-2622	Asm-Hydraulic Tube	54 10 1
92-2135	Bolt-HFH	62 8 1	92-2623	Plate-Valve Mount	54 3 1
92-2137	Bolt/washer	59 12 2	92-2624	Asm-Hydraulic Hose	54 6 1
92-2138	Bolt	66 1 3	92-2625	Asm-Relief Valve	54 48 1
92-2138	Bolt	65 19 2	92-2697	Hose-Hydraulic LH	49 1 1
92-2139	Bolt	66 4 1	92-2771	Asm-Rear Coupler Bracket	55 53 1
92-2140	Bolt	66 28 1	92-4100	Asm-Backplate, RH	28 * 1
92-2141	Bolt	66 3 2	92-4101	Asm-Primary Piston	10 11 1
92-2142	Bolt/washer	65 4 3	92-4102	Asm-Secondary Piston	10 4 1
92-2143	Bolt	57 22 3	92-4103	Pin-Stop	10 3 1
92-2144	Bolt	57 20 2	92-4108	Washer-Retainer	10 10 1
92-2145	Nut-HFH	62 5 1	92-4109	Circlip	10 9 1
92-2146	Washer	69 15 1	92-4110	Clevis	10 5 1
92-2147	Washer	62 6 1	92-4111	Petcock-Radiator	29 42 1
92-2148	Pin-Dowel	57 6 2	92-4112	Asm-Cap	10 12 1
92-2148	Pin-Dowel	60 13 1	92-4113	Screw-Bleed	24 4 1
92-2149	Pin	62 1 2	92-4114	Cap-Bleed Screw	24 5 1
92-2150	Ring-Snap	64 15 1	92-4114	Cap-Bleed Screw	28 5 1
92-2151	Cap-Plug	66 29 1	92-4115	Asm-Backplate LH	24 2 1
92-2151	Cap-Sealing	57 2 3	92-4116	Asm-Backplate RH	24 * 1
92-2151	Cap-Sealing	58 13 1	92-4117	Asm-Wheel Cylinder LH	24 * 1
92-2152	Bushing	57 3 4	92-4118	Asm-Wheel Cylinder RH	24 * 1
92-2153	Plug-Spark	69 18 3	92-4119	Kit-Seal	24 * 1
92-2154	Kit-Diaphragm	68 20 1	92-4120	Shoe & Lining Set	24 13 1
92-2155	Gasket-Water Inlet	65 21 1	92-4121	Asm-Adjuster LH	24 * 1
92-2156	Nut-Alternator	71 31 1	92-4122	Asm-Adjuster RH	24 * 1
92-2157	Outlet-Water	66 2 1	92-4123	Asm-Pawl LH	24 19 1
92-2160	Cartridge-Relief Valve	48 12 1	92-4123	Asm-Pawl, LH	28 19 1
92-2161	Body-Relief Valve	48 28 1	92-4124	Asm-Pawl RH	24 * 1
92-2162	Head	50 6 1	92-4124	Asm-Pawl, RH	28 * 1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-4125	Plug	24	3	1	92-5111	Guide-Oil Level Gauge	57	32	1
92-4126	Spring-Shoe, Upper LH	24	14	1	92-5112	Bolt-Flange Head	57	18	1
92-4127	Spring-Shoe, Upper RH	24	*	1	92-5112	Bolt-HFH	65	2	4
92-4128	Spring-Shoe, Lower	24	15	1	92-5113	Bolt-Flange Head	59	1	3
92-4129	Spring-Adjuster, LH	24	20	1	92-5116	Piston & Pin	60	*	3
92-4130	Spring-Adjuster, RH	24	*	1	92-5117	Piston & Pin	60	*	3
92-4131	Washer-Hold Down	24	22	2	92-5118	Piston Ring Set	60	*	1
92-4131	Washer-Hold Down	28	22	2	92-5120	Piston Ring Set	60	*	1
92-4132	Spring-Hold Down	24	23	2	92-5121	Piston Ring Set	60	*	1
92-4133	Pin-Hold Down	24	26	2	92-5122	Nut-Timing Belt	62	4	1
92-4133	Pin-Hold Down	28	26	2	92-5124	Body-Choke, Auto	67	15	1
92-4134	Plug-Inspection	24	25	1	92-5125	Kit-Check Valve	68	13	1
92-4134	Plug-Inspection	28	25	1	92-5126	Cover-Carburetor Top	67	5	1
92-4135	Set Bolt	24	1	2	92-5127	Kit-Float & Pin	68	12	1
92-4135	Set Bolt	28	1	2	92-5128	Insulator-Carburetor	67	13	1
92-4136	Asm-Backplate, LH	28	2	1	92-5133	Kit-Lever, Throttle	68	2	1
92-4137	Screw-Bleed	28	4	1	92-5134	Orifice-Choke	67	8	1
92-4140	Asm-Wheel Cylinder, LH	28	*	1	92-5135	Kit-Screw Adjusting, Idle	68	5	1
92-4141	Asm-Wheel Cylinder, RH	28	*	1	92-5136	Kit-Adjusting Screw	67	1	1
92-4142	Kit-Seal	28	*	1	92-5137	Spring	67	4	1
92-4143	Shoe & Lining Set	28	13	1	92-5140	Kit-Needle Valve	68	21	1
92-4144	Asm-Adjuster, LH	28	*	1	92-5141	Valve-Fuel Cut-Off	68	22	1
92-4145	Asm-Adjuster, RH	28	*	1	92-5142	Valve-Carburetor Piston	67	3	1
92-4146	Plug	28	3	1	92-5143	Gasket-Choke, Auto	67	17	1
92-4147	Spring-Shoe, Upper LH	28	14	1	92-5145	Screw	67	7	6
92-4148	Spring-Shoe, Upper RH	28	*	1	92-5146	Screw	68	18	4
92-4149	Spring-Shoe, Lower	28	15	1	92-5147	Screw	68	15	4
92-4150	Spring-Adjuster, LH	28	20	1	92-5148	Screw	68	1	1
92-4151	Spring-Adjuster, RH	28	*	1	92-5149	Screw	67	16	1
92-4152	Spring-Hold Down	28	23	2	92-5151	O-Ring	68	16	1
92-4153	Asm-Steering Column	6	11	1	92-5153	O-Ring	68	17	1
92-4154	Asm-Universal Joint	6	31	1	92-5154	Nut-Carburetor, INR	68	4	1
92-4155	Asm-Slip Joint, Upper	6	28	1	92-5155	Clamp-Carburetor	67	9	1
92-4156	Asm-Slip Joint, Lower	6	29	1	92-5156	Clamp-Carburetor INR	67	6	1
92-4157	Boot-Steering Shaft	6	24	1	92-5157	Bolt	67	10	2
92-4158	Asm-Valve, Hyd. Gear	8	*	1	92-5160	Valve-Thermostat	65	9	1
92-4159	Nut-Adjuster Plug Lock	7	25	1	92-5161	Gasket	65	10	1
92-4160	Kit-Bearing Service, Upper	8	*	1	92-5162	Plug-Inlet	66	24	2
92-4161	Asm-Cover Service	7	*	1	92-5163	Gasket-EGR Valve	66	15	1
92-4162	Pitman Shaft-Gear Service	8	*	1	92-5164	Asm-Hose	66	11	1
92-4163	Asm-Steering Housing	8	*	1	92-5165	Clip	66	12	1
92-4164	Asm-Plug, Service Adjust.	8	*	1	92-5166	Bolt	66	13	2
92-4165	Plug-Housing End	7	2	1	92-5167	Bracket-Front	70	1	1
92-4166	Asm-Rack/Piston/Nut	8	*	1	92-5168	Bracket-Rear	70	12	1
92-4167	Asm-Plug Service	8	*	1	92-5169	Pulley	71	1	1
92-4168	Return-Guide Ball	7	7	2	92-5172	Clamp	69	23	1
92-4169	Bearing-Needle	7	21	1	92-5304	Decal-Brake (Japan)	15	20	1
92-4170	Bearing-Pitman Shaft	7	47	1	92-5311	Decal-Differential (Japan)	15	17	1
92-4179	Yoke, Shaft & Seal Tube	26	33	2	92-5318	Decal-Axle (Japan)	15	11	1
92-4180	Seal	26	32	2	92-5325	Decal-Caution (Japan)	15	10	1
92-4182	Yoke & Hub	26	31	2	92-5332	Decal-Supervisor (Japan)	3	55	1
92-4187	Kit-Cross & Bearing	26	30	4	92-5339	Decal-Coupler (Japan)	55	*	1
92-4188	Ring-Snap	26	28	12	92-5346	Decal-Remote Hyd.	15	18	1
92-4189	Kit-Strap & Bolt	26	36	2	92-5353	Decal-Dump Hyd. (Japan)	15	19	1
92-4190	Yoke-End	26	29	2	92-5360	Decal-PTO (Japan)	15	16	1
92-4198	Asm-Fan Shroud	29	13	1	92-5367	Decal-PTO (Japan)	26	40	1
92-5100	Gasket-Liquid	72	1	1	92-5374	Decal-Fuse (Japan)	3	54	1
92-5101	Seat-Exhaust Valve	58	*	3	92-5381	Decal-R.O.P.S. (Japan)	20	3	2
92-5102	Seat-Intake Valve	58	*	3	92-5388	Decal-Rollover (Japan)	20	2	1
92-5103	Guide-Intake Valve	58	*	3	92-5395	Decal-Load (Japan)	1	16	1
92-5104	Guide-Intake Valve	58	*	3	92-5466	Decal-Caution (Japan)	55	*	1
92-5105	Guide-Exhaust Valve	58	*	1	92-5473	Decal-ATF (Japan)	26	4	1
92-5106	Guide-Exhaust Valve	58	*	1	92-5951	Angle-Hitch	26	41	1
92-5107	Stud	57	14	1	92-5955	Decal-No Riders	56	10	1
92-5108	Gasket-Bracket	57	24	1	92-5972	Grommet	17	5	4
92-5109	Stay-Oil Filter	57	21	1	92-5974	Panel-Front	56	6	1
92-5110	Gauge-Oil Level	57	19	1	92-6408	Decal-Danger (Japan)	16	26	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3322-653

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-6415	Decal-Danger (Japan)	17	6	1	93-9444	Decal-Dump Hyd.	15	19	1
92-6415	Decal-Warning (Japan)	49	32	2	93-9446	Decal-Dash (Europe)	3	56	1
92-6422	Decal-Dash (Japan)	3	56	1	93-9447	Decal-Caution (Europe)	29	35	1
92-6444	Decal-Grease (Japan)	27	44	2	93-9448	Decal-Caution (Europe)	15	10	1
92-6479	Decal-Caution (Japan)	25	32	2	93-9449	Decal-Grease (Europe)	26	44	2
92-6493	Decal-Warning (Japan)	21	33	2	93-9535	Asm-Hydraulic Tube	54	5	1
92-7240	Decal-Warning (Japan)	29	44	1	93-9536	Rod-Connecting	53	6	1
92-7905	Asm-Switch & Bracket	54	31	1	93-9537	Bracket-Switch Mounting	54	44	1
93-0307	Nut-Retainer	23	35	2	93-9538	Cover-Switch	54	42	1
93-0309	Washer-Tab	23	3	2	93-9539	Strip-Tapped	54	30	1
93-1312	Decal-Warning	56	20	2	93-9540	Sleeve-Protective	54	35	1
93-2191	ASM-Band, Mounting	46	2	1	93-9541	Harness-Wire	55	57	1
93-2195	Element-Air Cleaner	47	3	1	93-9542	Cam-Switch	54	13	1
93-2298	Hose-Fuel	45	11	1	93-9551	Sleeve-Protective	54	40	1
93-3101	Cap-Fuel (US)	45	1	1	93-9552	Hose-Hydraulic	49	4	1
93-3766	Decal-Caution (Japan)	29	35	1	93-9575	Tube-Flatbed Pivot	56	35	2
93-6668	Decal-Charging (Europe)	44	22	1	93-9595	Lanyard-Tailgate	56	33	2
93-6681	Decal-Warning (Europe)	29	44	1	93-9719	Block-Wear	56	18	2
93-6687	Decal-No Step (Europe)	44	11	1	93-9720	Plate-Pivot Long LH	56	23	2
93-7050	Asm-Radiator	29	30	1	93-9721	Plate-Pivot Long RH	56	36	2
93-7053	Asm-Warning Light	2	9	1	93-9722	Spacer-Bracket LH	56	16	1
93-7081	Tube-Brake Front RH	11	10	1	93-9723	Spacer-Bracket RH	56	12	1
93-7082	Tube-Brake Front LH	11	16	1	93-9724	Bed	56	2	1
93-7085	Tube-Brake Front	11	19	1	93-9850	Decal-Rollover (Europe)	20	2	1
93-7088	Support-Fan	29	16	1	93-9851	Decal-Fuse (Europe)	3	54	1
93-7090	Stub-Axle	26	14	2	93-9852	Decal-Danger (Europe)	17	6	1
93-7094	Cover-Wire Harness	2	49	1	93-9852	Decal-Warning (Europe)	49	32	2
93-7095	Frame-Engine	32	17	1	93-9856	Decal-Supervisor (Europe)	3	55	1
93-7103	Screen-Radiator	29	7	1	93-9857	Decal-Axle (Europe)	15	11	1
93-7121	Housing-Bell	14	8	1	93-9859	Decal-R.O.P.S. (Europe)	20	3	2
93-7123	Hose-Brake Front	22	8	2	93-9860	Decal-Danger (Europe)	16	26	1
93-7123	Hose-Brake Front	11	9	2	93-9861	Decal-PTO (Europe)	15	16	1
93-7125	Asm-Brake, RH	26	*	1	93-9862	Decal-PTO (Europe)	26	40	1
93-7125	Asm-Rear Brake, RH	28	*	1	93-9866	Decal-Remote Hyd.	15	18	1
93-7126	Asm-Brake, LH	26	9	1	93-9879	Decal-Warning (Europe)	21	33	2
93-7126	Asm-Rear Brake, LH	28	*	1	94-1224	Decal-Load (Europe)	1	16	1
93-7128	Drum-Brake	26	15	2	94-1414	Vacuator	47	5	1
93-7133	Arm-Control Upper LH	22	*	1	94-1416	Asm-Adapter, Indicator	46	31	1
93-7135	Arm-Control Upper RH	22	21	1	94-3652	Asm-Cover	47	4	1
93-7145	Screw-HH	6	19	3	94-3800	Asm-Master Cylinder	9	3	1
93-7170	Cap-Fuel (CE)	45	*	1	94-3804	Asm-Rod End, LH Thread	23	*19	2
93-7252	Decal-CE (Europe)	3	66	1	94-3807	Asm-Rod End, RH Thread	23	*	2
93-7275	Decal-Fluid (Europe)	31	18	1	94-3814	Tube-Hydraulic	9	1	1
93-7276	Decal-Danger (Europe)	44	23	1	94-3815	Tube-Hydraulic	9	2	1
93-7814	Decal-Caution (Europe)	31	1	1	94-3819	Tube-Brake Rear	11	5	1
93-8071	Decal-Caution (Europe)	25	32	2	94-3820	Tube-Brake Front	11	1	1
93-8938	Bracket-Cover LH	29	46	1	94-3821	Plate-Center, Frame	9	34	1
93-8939	Bracket-Cover RH	29	47	1	94-3829	Pin-Clevis	19	23	1
93-8940	Cover-Radiator	29	45	1	94-3836	Asm-Accelerator Cable	35	1	1
93-8941	Bracket-Front LH	52	15	1	94-3836	Cable-Accelerator	9	47	1
93-8942	Bracket-Front RH	52	*	1	94-3837	Cable-Clutch	3	67	1
93-8943	Plate-Tail Light LH	52	12	1	94-3838	Bracket-Mudflap LH	1	23	1
93-8944	Plate-Tail Light RH	52	*	1	94-3839	Bracket-Mudflap RH	1	*	1
93-8953	Asm-Front Bracket, LH	34	59	1	94-3841	Mudflap	1	26	2
93-8954	Asm-Front Bracket, RH	34	60	1	94-3842	Tube-Brake Rear	11	12	1
93-8955	Asm-Rear Brace, LH	14	48	1	94-3843	Tube-Brake LH	25	22	1
93-8956	Asm-Rear Brace, RH	14	47	1	94-3844	Tube-Brake LH	25	*	1
93-8961	Arm-Accelerator Pedal	9	10	1	94-3845	Tube-Brake RH	25	20	1
93-8965	Pedal-Brake	9	27	1	94-3846	Tube-Brake RH	25	3	1
93-8969	Pedal-Accelerator	9	15	1	94-5202	Asm-Lever Support	18	14	1
93-8971	Seal-Port, Flange	10	2	2	94-5203	Asm-Hydraulic Cylinder	49	16	2
93-9089	Decal-Coupler (CE)	55	*	1	94-5206	Asm-Barrel	50	1	1
93-9090	Decal-Caution (CE)	55	*	1	94-5207	Shaft	50	2	1
93-9164	Indicator-Service	46	30	1	94-5209	Cover-Dust	10	7	1
93-9430	Decal-Differential (Europe)	15	17	1	94-5210	Rod-Push	10	8	1
93-9442	Decal-ATF (Europe)	26	4	1	94-5221	Flap-Master Cylinder	9	42	1
93-9443	Decal-Brake (Europe)	15	20	1	94-5223	Bell Crank	9	19	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
94-5228	Pulley	29	23	1	233-39	Knob	48	1	1
94-5232	Wire-Spark Plug, #1	69	20	1	233-39	Knob	53	1	1
94-5233	Wire-Spark Plug, #2	69	19	1	233-39	Knob	6	1	1
94-5234	Wire-Spark Plug, #3	69	22	1	233-48	Knob	19	4	1
94-5240	Asm-Operators Platform	1	17	1	237-21	O-Ring	49	2	6
94-5245	Asm-Supervisor Switch	2	29	1	237-22	O-Ring	49	5	3
94-5248	Elbow-Intake, Air	46	25	1	237-22	O-Ring	48	9	4
94-5249	Asm-Engine	33	9	1	237-22	O-Ring	54	14	10
94-5255	Asm-Hydraulic Hose	54	29	1	237-30	O-Ring	37	34	2
94-5255	Hose-Hydraulic	37	41	1	237-42	O-Ring	51	2	2
94-5261	Tire	23	5	2	237-42	O-Ring	49	7	2
94-5272	Decal-Warning	3	68	1	237-42	O-Ring	48	11	2
94-5288	Carburetor	67	11	1	237-42	O-Ring	54	15	5
94-5293	Asm-Float Chamber Cover	68	14	1	237-42	O-Ring	37	47	1
94-5294	Valve-EGR	66	14	1	237-78	O-Ring	49	15	4
94-5295	Asm-Cover	58	9	1	237-78	O-Ring	54	16	3
94-5299	Rod-Link	9	25	1	237-79	O-Ring	49	25	1
94-9502	Hose-Fuel	46	10	1	237-79	O-Ring	37	39	2
95-5805	ASM-Air Cleaner	46	27	1	237-80	O-Ring	49	24	1
95-7394	Shaft-Brake	9	35	1	237-81	O-Ring	37	28	1
98-2915	Asm-Fuel Tank	45	2	1	237-123	O-Ring	37	25	1
98-2918	Asm-Driveshaft	27	*51	2	240-5	Grommet	14	32	1
98-2939	Screw-HH	26	37	4	241-119	Cap-Dust	23	1	2
98-2940	Yoke-Double Clamp	26	34	2	2410-35	Plug-Hole	2	6	1
98-2952	Fitting-Fuel Straight	45	9	1	2410-42	Cap-Front Bumper	1	12	2
98-2953	Cover	69	4	1	2410-64	Plug-Hole	3	64	1
98-2958	Cover-Clutch	61	2	1	2411-33	Joint-Ball	14	3	1
98-2959	Disc-Clutch	61	1	1	2412-10	Clamp-R	22	7	2
98-2962	Kit-Seal, Pitman Shaft	8	*	1	2412-10	Clamp-R	33	43	1
98-2967	Driveshaft Assembly Kit	27	*	2	2412-34	Clamp	49	22	1
98-2968	Yoke Kit	27	*	2	2412-34	Clamp-Hose	29	9	2
98-2969	1/2 Yoke Kit	27	*	2	2412-34	Clamp-Hose	33	30	2
98-2982	Element-Filter, Safety	47	*	1	2412-34	Clamp-Hose	38	53	1
98-2982	Filter-Element, Safety	46	29	1	2412-36	Clamp	45	8	1
99-1111	Harness-Wire Rear	2	34	1	2412-36	Clamp-Hose	37	3	3
99-1112	Plate-Retainer	56	39	2	2412-82	Clamp-R	32	10	1
99-1113	Handle-Latch	56	29	2	2412-89	Clamp-R	32	2	2
99-1123	Latch Assembly	56	*	2	2412-89	Clamp-R	44	5	1
99-1199	Pedal-Clutch	14	39	1	2412-89	Clamp-R	11	21	1
99-1201	Asm-Clutch Cable	14	36	1	2412-89	Clamp-R	14	25	1
99-1202	Rod End	14	50	1	2412-89	Clamp-R	2	32	1
99-1212	Cover-Engine (Europe)	14	52	1	2412-92	Clamp-Hose	33	2	1
99-1216	Decal-Quick Ref.	15	23	1	2412-92	Clamp-Hose	46	3	2
99-9350	Decal-Quick Ref. (NL)	15	23	1	2412-93	Clamp-R	52	2	1
99-9351	Decal-Quick Ref. (F)	15	23	1	2412-98	Clamp-Hose	46	11	2
99-9352	Decal-Quick Ref. (D)	15	23	1	2412-98	Clamp-Hose	34	62	1
99-9353	Decal-Quick Ref. (I)	15	23	1	2412-105	Clamp-R	6	17	2
99-9354	Decal-Quick Ref. (Japan)	16	23	1	2412-108	Clamp-Hose	45	10	2
99-9355	Decal-Quick Ref. (ES)	15	23	1	2412-108	Clamp-Hose	46	12	1
99-9356	Decal-Quick Ref. (S)	15	23	1	2412-108	Clamp-Hose	33	47	1
99-9394	Decal-Quick Ref. (DK)	15	23	1	2412-119	Clamp-Hose	33	6	3
99-9395	Decal-Quick Ref. (N)	15	23	1	2412-130	Clamp-Hose	33	32	2
99-9396	Decal-Quick Ref. (SF)	15	23	1	2412-133	Clamp-R	17	3	2
99-9397	Decal-Quick Ref. (P)	15	23	1	2412-148	Clamp-R	46	13	2
99-9402	Plate	46	9	1	2412-149	Clamp-Tube	25	24	4
99-9404	Filter-Fuel	46	17	2	251-8	Bearing-Ball	41	1	2
99-9415	Hose-Fuel	46	18	2	251-82	Bearing-Ball	31	11	2
218-446	Nut-Hex.	2	11	1	251-346	Bearing-Ball	41	8	1
218-447	Washer-Lock	2	12	1	254-72	Cup-Bearing	23	29	2
218-473	Boot-Switch	3	63	1	254-94	Cone-Bearing	23	30	2
218-574	Fuse-7.5 Amp	2	46	2	254-106	Cone-Bearing	23	27	2
218-581	Fuse-15 Amp	3	61	1	254-107	Cup-Bearing	23	28	2
218-600	Bulb	2	13	2	256-155	Bushing-Flange	9	26	2
219-17	Bulb-Warning Light	3	59	4	256-156	Bushing-Flange	14	38	2
232-27	Stem-Valve	23	31	2	256-247	Bushing-Flange	9	18	2
232-27	Valve-Stem	26	17	2	256-259	Bushing-Flange	9	9	2
233-37	Knob	18	1	1	283-2	Pin-Clevis	9	4	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3322-653

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
283-30	Pin-Clevis	9	12	1	323-6	Screw-HH	19	1	1
283-62	Pin-Clevis	19	6	1	323-6	Screw-HH	26	11	8
283-62	Pin-Clevis	18	8	3	323-6	Screw-HH	17	12	2
283-62	Pin-Clevis	37	35	3	323-6	Screw-HH	25	31	2
283-75	Pin-Clevis	14	35	1	323-6	Screw-HH	18	37	1
283-85	Pin-Clevis	9	14	1	323-7	Screw-HH	37	14	4
285-17	Plug	47	1	1	323-7	Screw-HH	9	17	2
285-17	Plug-Pipe	36	15	2	323-7	Screw-HH	35	27	3
302-5	Fitting-Grease	9	8	3	323-7	Screw-HH	26	43	4
302-5	Fitting-Grease	22	14	4	323-8	Screw-HH	23	11	8
302-5	Fitting-Grease	23	20	4	323-9	Screw-HH	44	16	1
302-5	Fitting-Grease	6	30	1	323-10	Screw-HH	37	8	1
302-5	Fitting-Grease	26	35	4	323-12	Screw-HH	21	6	8
302-5	Fitting-Grease	14	49	1	323-29	Screw-HH	33	55	2
302-11	Fitting-Grease	21	8	1	323-42	Screw-HH	56	19	14
302-58	Fitting-Grease	27	46	16	324-9	Screw-HH	21	22	4
321-2	Screw-HH	2	1	7	324-10	Screw-HH	21	1	4
321-2	Screw-HH	54	39	2	324-13	Screw-HH	21	10	2
321-3	Screw-HH	2	4	2	324-19	Screw-HH	32	6	2
321-3	Screw-HH	35	7	1	325-4	Screw-HH	17	15	2
321-3	Screw-HH	29	28	4	325-13	Screw-HH	22	11	8
321-3	Screw-HH	6	33	2	325-13	Screw-HH	21	27	4
321-4	Screw-HH	32	1	2	325-19	Screw-HH	26	27	1
321-4	Screw-HH	44	8	1	325-20	Screw-HH	26	24	5
321-4	Screw-HH	15	9	8	3210-9	Screw-HH	35	6	1
321-4	Screw-HH	29	12	4	3211-8	Screw-HH	18	13	2
321-4	Screw-HH	33	15	1	3215-1	Screw-HH	37	16	2
321-4	Screw-HH	17	20	8	3217-25	Nut-Jam	2	38	2
321-4	Screw-HH	11	22	1	3217-26	Hut-Jam	2	37	1
321-4	Screw-HH	1	24	4	3217-29	Nut-Jam	3	58	3
321-4	Screw-HH	14	26	1	3218-18	Nut-Jam	18	43	1
321-4	Screw-HH	35	30	2	3218-20	Nut-Jam	14	14	2
321-4	Screw-HH	2	33	1	3218-21	Nut-Jam	23	18	2
321-4	Screw-HHF	25	26	4	3219-2	Nut	36	19	2
321-6	Screw-HH	52	3	12	3219-14	Nut	18	5	1
321-6	Screw-HH	22	5	2	3219-14	Nut-Jam	35	10	2
321-9	Screw-HH	11	3	4	3219-14	Nut-Jam	37	32	1
321-9	Screw-HH	48	5	2	3220-1	Nut-Jam	35	2	1
321-9	Screw-HH	19	27	1	3220-1	Nut-Jam	37	37	4
321-9	Screw-HH	9	38	1	3220-1	Nut-Jam	18	41	4
321-9	Screw-HH	54	46	1	3220-2	Nut-Jam	14	2	1
321-14	Screw-HH	49	8	2	3220-2	Nut-Jam	35	5	1
321-15	Screw-HH	48	13	1	3220-3	Nut-Jam	18	12	2
321-23	Screw-HH	54	43	2	3220-3	Nut-Jam	9	24	1
322-2	Screw-HH	11	11	1	3220-7	Nut-Jam	23	2	2
322-2	Screw-HH	6	16	6	3220-11	Nut-Jam	23	23	2
322-2	Screw-HH	46	26	2	3220-16	Nut-Hex. Jam	9	44	1
322-2	Screw-HH	48	31	1	3229-25	Screw-CARR	49	19	2
322-2	Screw-HH	29	39	6	3230-1	Screw-CARR	56	24	2
322-2	Screw-HH	33	42	1	3230-15	Screw-CARR	56	34	4
322-2	Screw-HH	2	50	3	3230-18	Bolt-CARR	17	2	8
322-3	Screw-HH	54	7	4	3230-23	Bolt-CARR	44	6	4
322-3	Screw-HH	49	20	4	3230-23	Bolt-CARR	29	21	7
322-5	Screw-HH	31	2	4	3231-3	Bolt-CARR	21	21	4
322-5	Screw-HH	15	6	8	3231-21	Bolt-CARR	44	7	6
322-5	Screw-HH	53	9	1	3231-21	Bolt-CARR	48	21	1
322-5	Screw-HH	22	10	2	3231-21	Bolt-CARR	17	22	4
322-5	Screw-HH	52	20	4	3231-21	Bolt-CARR	18	32	4
322-5	Screw-HH	29	22	4	3231-26	Bolt-CARR	35	15	1
322-5	Screw-HH	48	24	1	3231-28	Bolt-CARR	29	17	1
322-5	Screw-HH	9	36	1	3232-17	Bolt-CARR	25	19	8
322-5	Screw-HH	18	51	2	3234-1	Screw-HFH	1	13	6
322-6	Screw-HH	33	4	2	3234-4	Screw-HFH	37	42	4
322-7	Screw-HH	31	9	4	3234-5	Screw-HH	34	56	2
322-12	Screw-HH	18	25	1	3234-5	Screw-HHF	14	44	2
323-4	Screw-HH	45	16	2	3234-7	Screw-HFH	56	7	21
323-4	Screw-HH	1	22	1	3234-10	Screw-HFH	46	15	3

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3234-11	Screw-HH	32	14	6	3256-57	Washer-Flat	56	32	4
3234-21	Screw-HFH	46	19	2	3256-61	Washer-Flat	16	25	14
3234-21	Screw-HH	54	52	2	3256-61	Washer-Flat	1	29	4
3234-29	Screw-HHF	56	27	6	3256-67	Washer-Flat	46	21	4
3234-38	Screw-HH	45	22	2	3257-7	Key-Woodruff	31	17	1
3234-38	Screw-HHF	25	17	24	3272-6	Pin-Cotter	18	3	3
3234-40	Screw-HHF	20	4	4	3272-6	Pin-Cotter	9	7	1
3245-31	Screw-Set	29	48	1	3272-6	Pin-Cotter	19	8	1
3250-13	Screw-PH	1	27	4	3272-6	Pin-Cotter	37	30	3
3250-13	Screw-PPH	15	15	20	3272-7	Pin-Cotter	53	12	1
3250-13	Screw-PPH	2	51	2	3272-10	Pin-Cotter	9	11	2
3250-20	Screw-PH	29	2	4	3272-10	Pin-Cotter	14	37	1
3250-45	Screw-PH	56	17	4	3272-12	Pin-Cotter	22	17	4
3253-3	Washer-Lock	35	8	1	3272-12	Pin-Cotter	23	21	4
3253-3	Washer-Lock	59	22	2	3272-12	Pin-Cotter	23	32	2
3253-3	Washer-Lock	29	27	4	3272-37	Pin-Cotter	49	18	2
3253-3	Washer-Lock	14	28	4	3274-31	Screw-HSBH	2	7	4
3253-3	Washer-Lock	33	37	1	3274-52	Screw-HH	36	39	4
3253-4	Washer-Lock	61	4	6	3274-54	Screw-HSH	45	19	2
3253-4	Washer-Lock	15	5	8	3274-94	Screw-HSBH	52	16	6
3253-4	Washer-Lock	35	13	2	3277-1	Nut-Hex.	6	5	1
3253-4	Washer-Lock	6	14	4	3290-221	Washer-Spring	18	34	1
3253-6	Washer-Lock	33	21	2	3290-221	Washer-Spring	19	36	2
3253-6	Washer-Lock	27	45	10	3290-271	Rivet-Pop	29	41	2
3253-15	Washer-Lock	45	5	5	3290-321	Screw-HFH	9	31	2
3253-15	Washer-Lock	2	39	2	3290-357	Nut-Flange	35	18	1
3253-18	Washer-Lock	36	40	4	3290-357	Nut-Flange	9	37	2
3253-19	Washer-Lock	3	57	3	3290-357	Nut-HFH	44	1	6
3253-21	Washer-Lock	26	10	8	3290-357	Nut-HFH	46	6	2
3253-21	Washer-Lock	17	13	2	3290-357	Nut-HFH	1	8	8
3253-21	Washer-Lock	23	33	8	3290-357	Nut-HFH	17	10	4
3253-22	Washer-Lock	14	9	4	3290-357	Nut-HFH	29	14	1
3253-22	Washer-Lock	35	17	1	3290-357	Nut-HFH	21	16	4
3254-1	Washer-Lock	2	36	1	3290-357	Nut-HFH	45	23	2
3254-2	Washer-Lock	33	11	1	3290-357	Nut-HFH	25	30	2
3255-9	Washer-Lock ETLW	44	2	1	3290-357	Nut-HFH	18	33	4
3256-3	Washer-Flat	31	8	4	3290-357	Nut-HFH	33	50	2
3256-4	Washer-Flat	37	12	1	3290-378	Tie-Cable	45	26	1
3256-6	Washer-Flat	25	9	4	3290-378	Tie-Cable	54	41	6
3256-6	Washer-Flat	21	32	2	3290-378	Tie-Cable (Europe)	49	34	6
3256-14	Washer-Flat	48	30	1	3290-413	Washer-Belleville	32	12	12
3256-14	Washer-Flat	54	37	2	3290-455	Washer	6	12	1
3256-22	Washer-Flat	11	4	4	3290-456	Washer-Belleville	18	46	2
3256-22	Washer-Flat	2	5	2	3290-477	Washer-Curved	19	28	1
3256-22	Washer-Flat	15	8	8	3290-478	Washer-Belleville	19	17	1
3256-22	Washer-Flat	29	11	4	3290-506	Palnut	52	4	2
3256-22	Washer-Flat	52	11	12	3290-507	Pin-Dowel	18	31	1
3256-22	Washer-Flat	48	18	3	3296-2	Nut-Hex.	53	7	1
3256-22	Washer-Flat	17	19	8	3296-2	Nut-Lock	15	22	20
3256-22	Washer-Flat	9	39	3	3296-2	Nut-Lock	1	30	4
3256-22	Washer-Flat	14	41	2	3296-2	Nut-Lock	9	33	2
3256-23	Washer-Flat	15	4	8	3296-2	Nut-Lock	2	45	2
3256-23	Washer-Flat	33	5	2	3296-3	Nut-Lock	35	28	1
3256-23	Washer-Flat	53	5	2	3296-4	Nut-Lock	14	4	1
3256-23	Washer-Flat	19	21	1	3296-5	Nut-HFH	29	25	1
3256-23	Washer-Flat	52	21	4	3296-5	Nut-Lock	36	12	1
3256-23	Washer-Flat	48	26	2	3296-6	Nut-Lock	9	20	2
3256-23	Washer-Flat	18	50	2	3296-15	Nut-Lock	31	16	1
3256-24	Washer-Flat	44	17	2	3296-23	Nut-HFH	22	12	8
3256-24	Washer-Flat	52	18	6	3296-23	Nut-Lock	25	10	4
3256-25	Washer-Flat	32	5	2	3296-23	Nut-Lock	21	14	4
3256-25	Washer-Flat	53	10	1	3296-23	Nut-Lock	17	16	2
3256-26	Washer-Flat	9	21	1	3296-23	Nut-Lock	9	22	1
3256-27	Washer-Flat	25	6	4	3296-27	Nut-Lock	35	21	2
3256-27	Washer-Flat	21	31	2	3296-27	Rivet-Plastic	44	13	4
3256-28	Washer-Flat	31	15	1	3296-29	Nut-HFH	29	20	8
3256-45	Washer-Flat	29	24	1	3296-29	Nut-Lock	31	6	6

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3322-653

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3296-29	Nut-Lock	53	8	1	32128-23	Nut-HFH	45	24	2
3296-29	Nut-Lock	14	13	1	32128-33	Nut-HFH	37	1	1
3296-29	Nut-Lock	52	19	4	32128-33	Nut-HFH	54	2	5
3296-29	Nut-Lock	48	27	1	32128-33	Nut-HFH	35	3	2
3296-29	Nut-Lock	9	30	1	32128-33	Nut-HFH	44	4	1
3296-29	Nut-Lock	33	36	2	32128-33	Nut-HFH	48	6	1
3296-39	Nut-HFH	37	20	4	32128-33	Nut-HFH	49	12	4
3296-39	Nut-HFH	44	20	1	32128-33	Nut-HFH	33	13	1
3296-39	Nut-Lock	52	1	6	32128-33	Nut-HFH	32	18	2
3296-39	Nut-Lock	32	11	6	32128-33	Nut-HFH	14	24	1
3296-39	Nut-Lock	25	13	6	32128-33	Nut-HFH	1	25	4
3296-39	Nut-Lock	23	16	8	32128-33	Nut-HFH	25	27	4
3296-39	Nut-Lock	35	20	3	32128-33	Nut-HFH	2	44	12
3296-39	Nut-Lock	48	23	1	32128-33	Nut-Hex. Flange	46	5	6
3296-39	Nut-Lock	21	28	8	32128-35	Nut-HFH	56	9	23
3296-39	Nut-Lock	19	33	1	32128-36	Nut-Lock	26	38	4
3296-39	Nut-Lock	26	42	4	32128-44	Nut-HFH	17	9	2
3296-39	Nut-Lock	18	45	1	32128-53	Nut-HFH	26	26	2
3296-42	Nut-Lock	19	12	1	32136-2	Nut-Slotted	22	2	2
3296-42	Nut-Lock	22	13	2	32136-3	Nut-Slotted	23	22	4
3296-42	Nut-Lock	52	13	16	32144-4	Screw-HFH	18	9	2
3296-42	Nut-Lock	56	15	4	32144-10	Screw-TAP	6	18	2
3296-42	Nut-Lock	45	17	2	32144-18	Screw-HH	2	22	2
3296-42	Nut-Lock	48	19	2	32144-42	Screw-Spark Arrestor	33	52	1
3296-42	Nut-Lock	11	20	5	32144-52	Screw-PH TAP	15	12	6
3296-42	Nut-Lock	6	32	2	32144-93	Screw-TAP	52	6	2
3296-42	Nut-Lock	29	38	4	32144-116	Screw-PH	6	8	8
3296-42	Nut-Lock	9	41	1	32148-6	Insert-Threaded	56	1	4
3296-44	Nut-Lock	56	14	14	32148-6	Insert-Threaded	2	2	2
3296-48	Nut-Lock	21	11	10	32148-7	Nut-Clinch	56	11	4
3296-48	Nut-Lock	32	16	2	32148-7	Nut-Clinch	1	18	8
3296-58	Nut-Lock	18	11	2	32148-7	Nut-Clinch	18	19	2
3296-59	Nut-Lock	6	13	1	32148-8	Insert-Threaded (Europe)	34	57	2
3296-76	Nut-Lock	25	33	8	32148-8	Nut-Insert (Europe)	14	46	2
32104-88	Screw	1	4	6	32148-9	Insert-Threaded	25	1	8
32105-5	Screw	54	11	1	32148-15	Insert-Threaded	18	4	1
32105-8	Screw	54	38	2	32148-15	Nut-Clinch	37	31	1
32113-14	Screw	36	8	2	32151-41	Ring-Retaining	30	1	1
32120-47	Ring-E	9	13	1	32151-56	Ring-Retaining	9	16	1
32120-47	Ring-E	14	33	2	32151-104	Ring-Snap	22	15	4
32120-47	Ring-Retaining	19	10	3	32152-10	Nut	50	12	1
32121-7	Pin-Roll	14	19	1	340-2	Fitting-Straight	49	10	1
32121-24	Pin-Roll	14	21	2	340-3	Fitting-Hydraulic Straight	49	26	1
32121-25	Pin-Spring	56	41	2	340-12	Fitting-Hydraulic Straight	54	50	2
32121-48	Pin-Roll	18	23	1	340-77	Fitting-90°	49	10	1
32121-78	Pin-Roll	56	40	2	340-77	Fitting-Hydraulic 90°	49	6	1
32122-24	Screw-RH	45	6	5	340-77	Fitting-Hydraulic 90°	54	8	2
32128-20	Nut-Flange	11	17	1	340-86	Fitting-Hydraulic Tee	54	1	1
32128-20	Nut-Flange Lock	17	21	8	340-86	Fitting-Hydraulic Tee	48	15	1
32128-20	Nut-HFH	22	6	2	340-87	Fitting-Hydraulic 45°	54	12	1
32128-20	Nut-HFH	49	11	4	340-88	Fitting-Hydraulic Straight	54	32	1
32128-20	Nut-HFH	44	18	2	340-92	Fitting-Hydraulic Straight	49	29	1
32128-20	Nut-HFH	6	27	6	340-94	Fitting-Hydraulic Tee	48	10	1
32128-20	Nut-HFH	46	28	2	340-94	Fitting-Hydraulic Tee	54	47	1
32128-20	Nut-HFH	56	28	4	340-97	Fitting-Hydraulic 90°	54	34	1
32128-20	Nut-HFH	9	29	2	340-132	Fitting-Hydraulic 90°	49	14	4
32128-20	Nut-HFH	48	33	1	340-140	Fitting-Hydraulic Tee	49	28	1
32128-20	Nut-HFH	29	37	6	340-151	Fitting-Hydraulic Tee	49	30	1
32128-20	Nut-HFH	33	44	1	353-781	Fitting-Fuel 90°	45	14	1
32128-20	Nut-HFH	2	48	3	353-987	Fitting-Hydraulic 90°	37	29	1
32128-20	Nut-Lock	54	9	4	354-134	Fitting-Hydraulic 90°	37	40	2
32128-21	Nut-Lock	37	11	1	354-135	Fitting-Hydraulic 90°	37	5	1
32128-23	Nut-HFH	20	5	4	354-136	Fitting-Hydraulic Straight	49	23	1
32128-23	Nut-HFH	25	21	24					

\*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Workman 3200 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 3200, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 3200.
2. Part number, description, and the quantity of part(s) desired.

**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

## TABLE OF CONTENTS

Description	Page	Description	Page
Front Bumper & Hood Asm	1	Shift Fork Asm	42
Control Panel Asm	2-3	Differential Gear Asm	43
Electrical Schematic (Model 07200 & 07202)	4	Battery Mount Asm	44
Electrical Schematic (Model 07200TC)	5	Fuel Tank Asm	45
Steering Linkage Asm	6	Air Cleaner & Fuel Supply Asm	46
Steering Gear Asm No. 87-1500	7-8	Air Cleaner Asm NO.95-5805	47
Brake & Accelerator Pedal Asm	9	Lift Valve Linkage Asm	48
Master Brake Cylinder No. 94-3800	10	Lift Valve & Cylinder Asm	49
Hydraulic Brake Line Routing Asm	11	Lift Cylinder No. 94-5203	50
Hydraulic Schematic (Model 07200 & 07202)	12	Lift Control Valve Asm No. 43-1950	51
Hydraulic Schematic (Model 07200TC)	13	Rear Fender & Tail Light Asm	52
Clutch Linkage Asm	14	Remote Hydraulics Control Lever & Linkage (Model 07200TC)	53
Seat Base Asm	15-16	Remote Hydraulics Plumbing Asm (Model 07200TC)	54-55
Seat Back Asm	17	Bed & Bed Side Asm (Standard Equipment on Model 07202 Only)	56
Hi-Lo Shift Levers Assemblies	18	Cylinder Block Asm	57
Differential Lock & Parking Brake Assemblies	19	Rocker Cover & Cylinder Head Asm	58
R.O.P.S. Asm	20	Covers & Oil Pan Asm	59
Front Suspension Asm	21	Piston & Crankshaft Asm	60
Front Suspension Control Arm Asm	22	Clutch & Clutch Release Asm	61
Front Wheel Asm	23	Camshaft & Valves Asm	62
Front Brake Asm	24	Balancer & Oil Pressure Switch & Engine Mount	63
Rear Frame Asm	25	Oil Pump & Filter Asm	64
Rear Axle Asm	26-27	Water Pump & Thermostat Asm	65
Rear Brake Asm	28	Exhaust & Intake Manifold Asm	66
Radiator & Hydraulic Pump Asm	29	Carburetor Installation Asm	67
Hydraulic Pump Asm No. 87-5700	30	Carburetor Asm	68
Hydraulic Pump Drive Asm	31	Distributor Asm	69
Engine Frame Asm	32	Starter Asm	70
Engine Installation Asm	33-34	Alternator Asm	71
Governor Asm	35	Gasket Kit	72
Governor	36	TORO Part Number Index	73-85
Transaxle Installation Asm	37-38		
Transaxle Case Asm	39		
Countershaft Asm	40		
Transaxle Gear Shafts Asm	41		

Japanese parts kit number 93-8951 contains all of the individual parts on the preceding pages designated as (Japan).



