



**Count on it.**

Form No. 3429-559 Rev A

# Parts Catalog

## Workman® GTX EFI

### Utility Vehicle with Bucket Seat

Model No. 07059TC—Serial No. 403446001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


# Contents

|                                                          |    |
|----------------------------------------------------------|----|
| Front Frame and Suspension Assembly . . . . .            | 4  |
| Floor Plate and Rear Suspension Mount Assembly . . . . . | 5  |
| Rear Frame and Suspension Assembly . . . . .             | 6  |
| Frame Mount and Rear Shock/Spring Assembly . . . . .     | 7  |
| Brake Assembly . . . . .                                 | 8  |
| Master Cylinder Assembly No. 104-6782 . . . . .          | 9  |
| Brake Caliper Assembly No. 127-7424 . . . . .            | 10 |
| Steering Assembly . . . . .                              | 11 |
| Pedal and Control Assembly . . . . .                     | 12 |
| Hood and Fender Assembly . . . . .                       | 13 |
| Dash Assembly . . . . .                                  | 14 |
| Seatbase Assembly . . . . .                              | 15 |
| Cargo Bed Assembly . . . . .                             | 16 |
| Engine Assembly . . . . .                                | 17 |
| Starter Generator Assembly No. 131-8444 . . . . .        | 19 |
| Secondary Clutch Assembly No. 119-6011 . . . . .         | 20 |
| Air Cleaner Assembly No. 138-3447 . . . . .              | 21 |
| Primary Clutch Assembly No. 138-0095 . . . . .           | 22 |
| Rear Wheel and Transaxle Assembly . . . . .              | 23 |
| Transaxle Assembly No. 131-3486 . . . . .                | 24 |
| Battery and Cable Assembly . . . . .                     | 26 |
| Electrical Assembly . . . . .                            | 27 |
| Fuel System Assembly . . . . .                           | 29 |

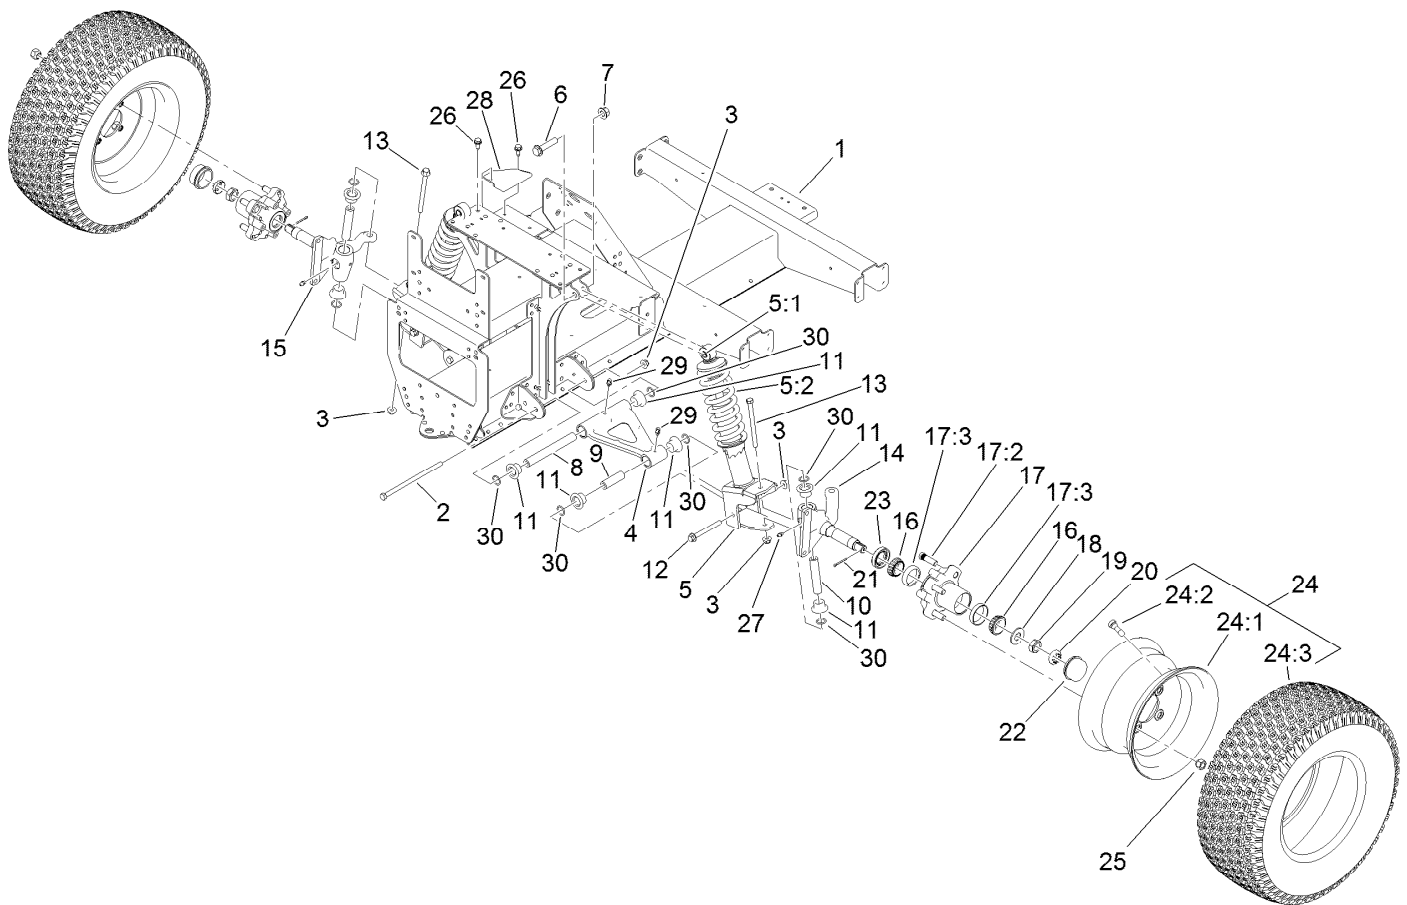

## Front Frame and Suspension Assembly


| Ref. | Part Number | Qty. | Description               | Ref. | Part Number | Qty. | Description            |
|------|-------------|------|---------------------------|------|-------------|------|------------------------|
| 1    | 127-7718-03 | 1    | Frame-Front               | 17:2 | 10-6830     | 4    | Stud-Type, Drive       |
| 2    | 131-8572    | 2    | Screw-HF                  | 17:3 | 254-72      | 2    | Bearing-Cup, Tapered   |
| 3    | 104-8301    | 6    | Nut-HF, NI                | 18   | 93-0309     | 2    | Washer-Tab             |
| 4    | 131-8345    | 2    | A-Arm                     | 19   | 3220-7      | 2    | Nut-Jam                |
| 5    | 137-6716    | 2    | Strut ASM (250 Lb)        | 20   | 93-0307     | 2    | Nut-Lock, Retainer     |
| 5:1  | 131-8574    | 1    | Isolator-Shock            | 21   | 3272-12     | 2    | Pin-Cotter             |
| 5:2  | 137-6719    | 1    | Spring-Compression, 250Lb | 22   | 241-119     | 2    | Cap-Dust               |
| 6    | 3234-46     | 2    | Screw-HHF                 | 23   | 112-1690    | 2    | Seal-Oil               |
| 7    | 99-5107     | 2    | Nut-Lock                  | 24   | 139-4495    | 2    | Wheel And Tire ASM     |
| 8    | 131-8581    | 2    | Sleeve-Control Arm, Inner | 24:1 | 131-8317    | 1    | Wheel                  |
| 9    | 131-8583    | 2    | Sleeve-Control Arm, Outer | 24:2 | 232-27      | 1    | Stem-Valve             |
| 10   | 131-8582    | 2    | Sleeve-Kingpin            | 24:3 | 139-4475    | 1    | Tire-20 X 8.00-10      |
| 11   | 133-0643    | 12   | Bushing-Flange, O-Ring    | 25   | 242-50      | 8    | Nut-Lug                |
| 12   | 116-4701    | 2    | Screw-HHF                 | 26   | 32144-70    | 2    | Screw-HWHTF            |
| 13   | 131-8571    | 2    | Screw-HF                  | 27   | 302-5       | 2    | Fitting-Grease         |
| 14   | 127-8825-03 | 1    | Spindle-LH                | 28   | 131-8339-03 | 1    | Reinforcement-Tower    |
| 15   | 127-8826-03 | 1    | Spindle-RH                | 29   | 302-40      | 4    | Fitting-Grease, 90 DEG |
| 16   | 254-94      | 4    | Bearing-Cone, Tapered     | 30   | 237-54      | 12   | O-Ring                 |
| 17   | 127-8851    | 2    | Front Hub ASM             |      |             |      |                        |

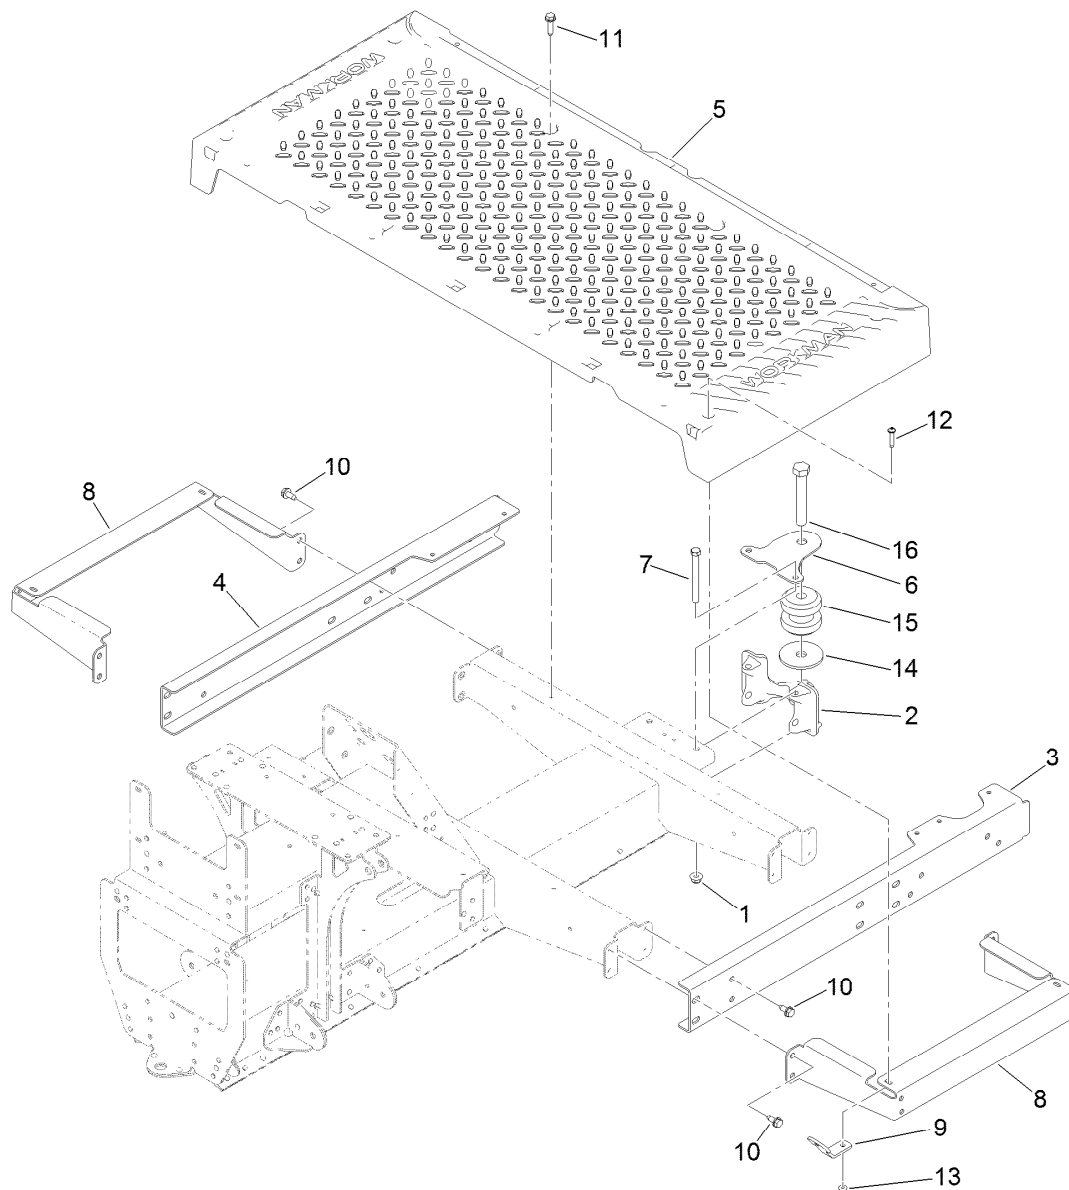

## Floor Plate and Rear Suspension Mount Assembly

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 104-8301    | 2    | Nut-HF, NI                   |
| 2    | 131-8466    | 1    | Mount-Suspension, Rear       |
| 3    | 127-7820-03 | 1    | Channel-Frame, Front (LH)    |
| 4    | 127-7821-03 | 1    | Channel-Frame, Front (RH)    |
| 5    | 127-7829    | 1    | Plate-Floor                  |
| 6    | 131-8597    | 1    | Plate-Gimbal, Upper          |
| 7    | 323-42      | 2    | Screw-HH                     |
| 8    | 127-7837-03 | 2    | Bracket-Support, Floor Plate |


| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 9    | 127-7832    | 2    | Bracket-Angle   |
| 10   | 32144-70    | 16   | Screw-HWHTF     |
| 11   | 32144-49    | 4    | Screw-HWHTF     |
| 12   | 132-6777    | 4    | Screw-TTH       |
| 13   | 104-7201    | 4    | Nut-HF          |
| 14   | 110-4549    | 1    | Washer-Snubbing |
| 15   | 131-8480    | 1    | Isolator        |
| 16   | 104-5877    | 1    | Screw-HH        |

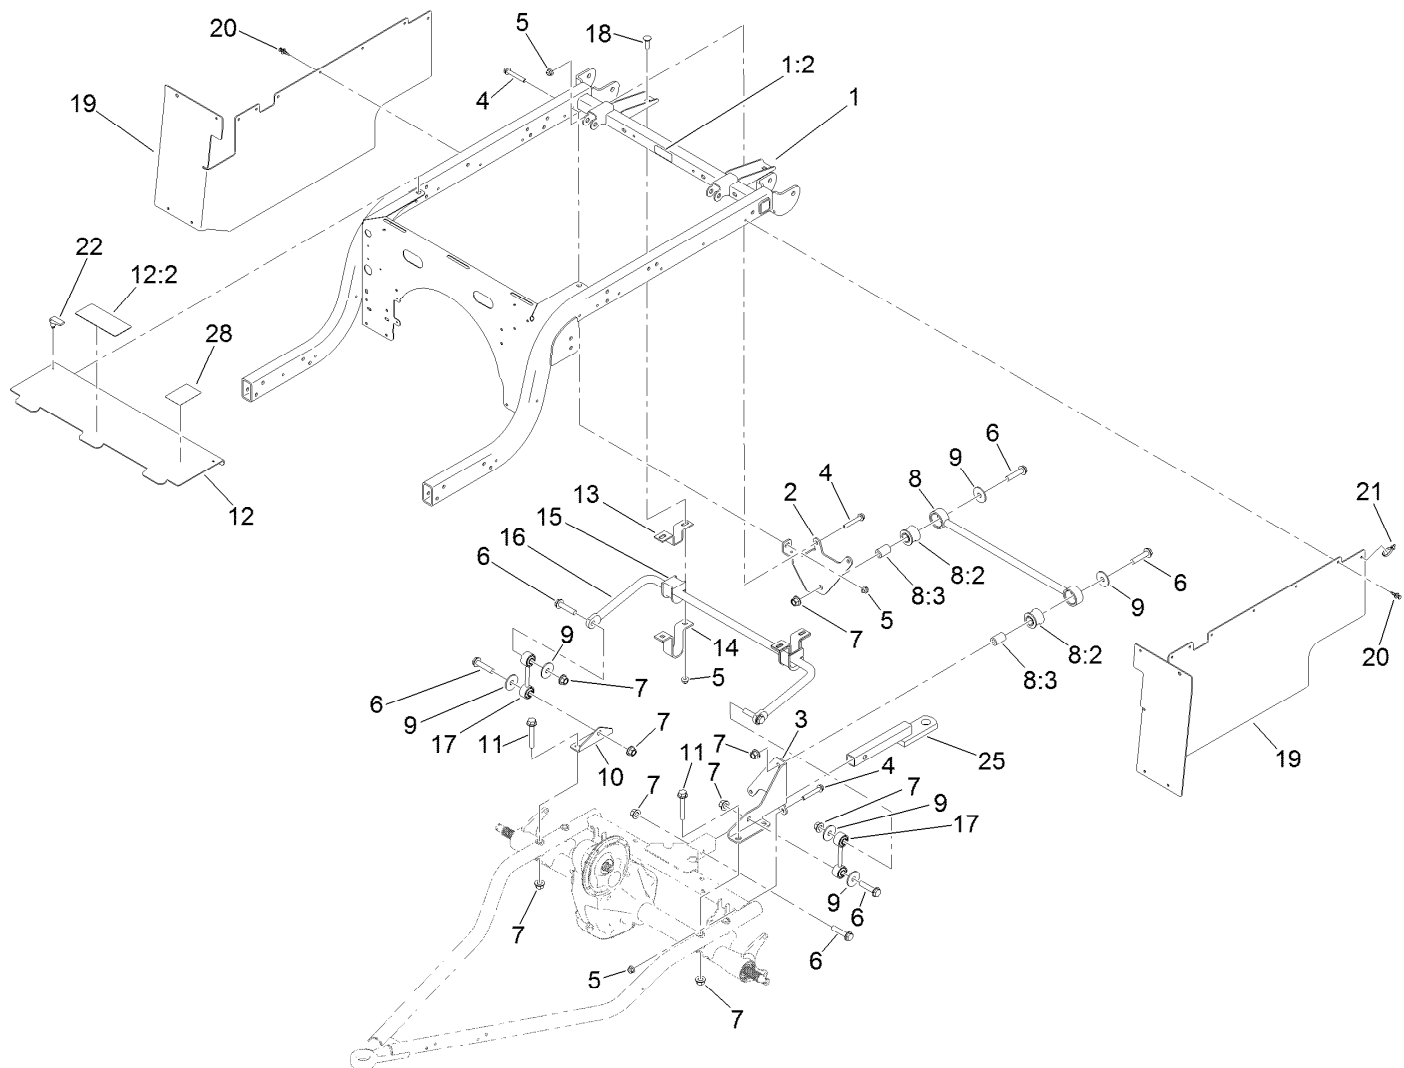

## Rear Frame and Suspension Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 131-8594    | 1    | Rear Frame ASM             |
| 1:2  | 115-2047    | 1    | Decal-Surface, Hot         |
| 2    | 127-7412-03 | 1    | Bracket-Bar, Stabilizer    |
| 3    | 127-7411-03 | 1    | Bracket-Bar, Stabilizer    |
| 4    | 3234-39     | 5    | Screw-HHF                  |
| 5    | 104-8301    | 9    | Nut-HF, NI                 |
| 6    | 3234-46     | 7    | Screw-HHF                  |
| 7    | 99-5107     | 11   | Nut-Lock                   |
| 8    | 109-5013    | 1    | Panhard Rod ASM            |
| 8:2  | 109-5009    | 2    | Bushing-Suspension, Rubber |
| 8:3  | 109-5010    | 2    | Spacer                     |
| 9    | 86-1990     | 6    | Washer-Thrust              |
| 10   | 131-8315    | 1    | Bracket-Link, Sway Bar     |
| 11   | 3234-40     | 4    | Screw-HF                   |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 12   | 131-8595    | 1    | Panel-Cover       |
| 12:2 | 99-7345     | 1    | Decal-Warning     |
| 13   | 87-3890-03  | 2    | Bracket-Bar, Sway |
| 14   | 87-4010-03  | 2    | Clamp-Bar, Sway   |
| 15   | 87-3910     | 2    | Bushing-Rubber    |
| 16   | 131-8310-03 | 1    | Bar-Sway, Anti    |
| 17   | 131-8394    | 2    | Link-Bar, Sway    |
| 18   | 3231-25     | 4    | Bolt-CARR         |
| 19   | 131-8346    | 2    | Panel-Side        |
| 20   | 125-9622    | 20   | Rivet-Blind       |
| 21   | 3290-378    | 2    | Tie-Cable         |
| 22   | 74-5950     | 2    | Latch-Swell       |
| 25   | 137-6741    | 1    | Ball Mount ASM    |
| 28   | 138-3528    | 1    | Decal-Service     |

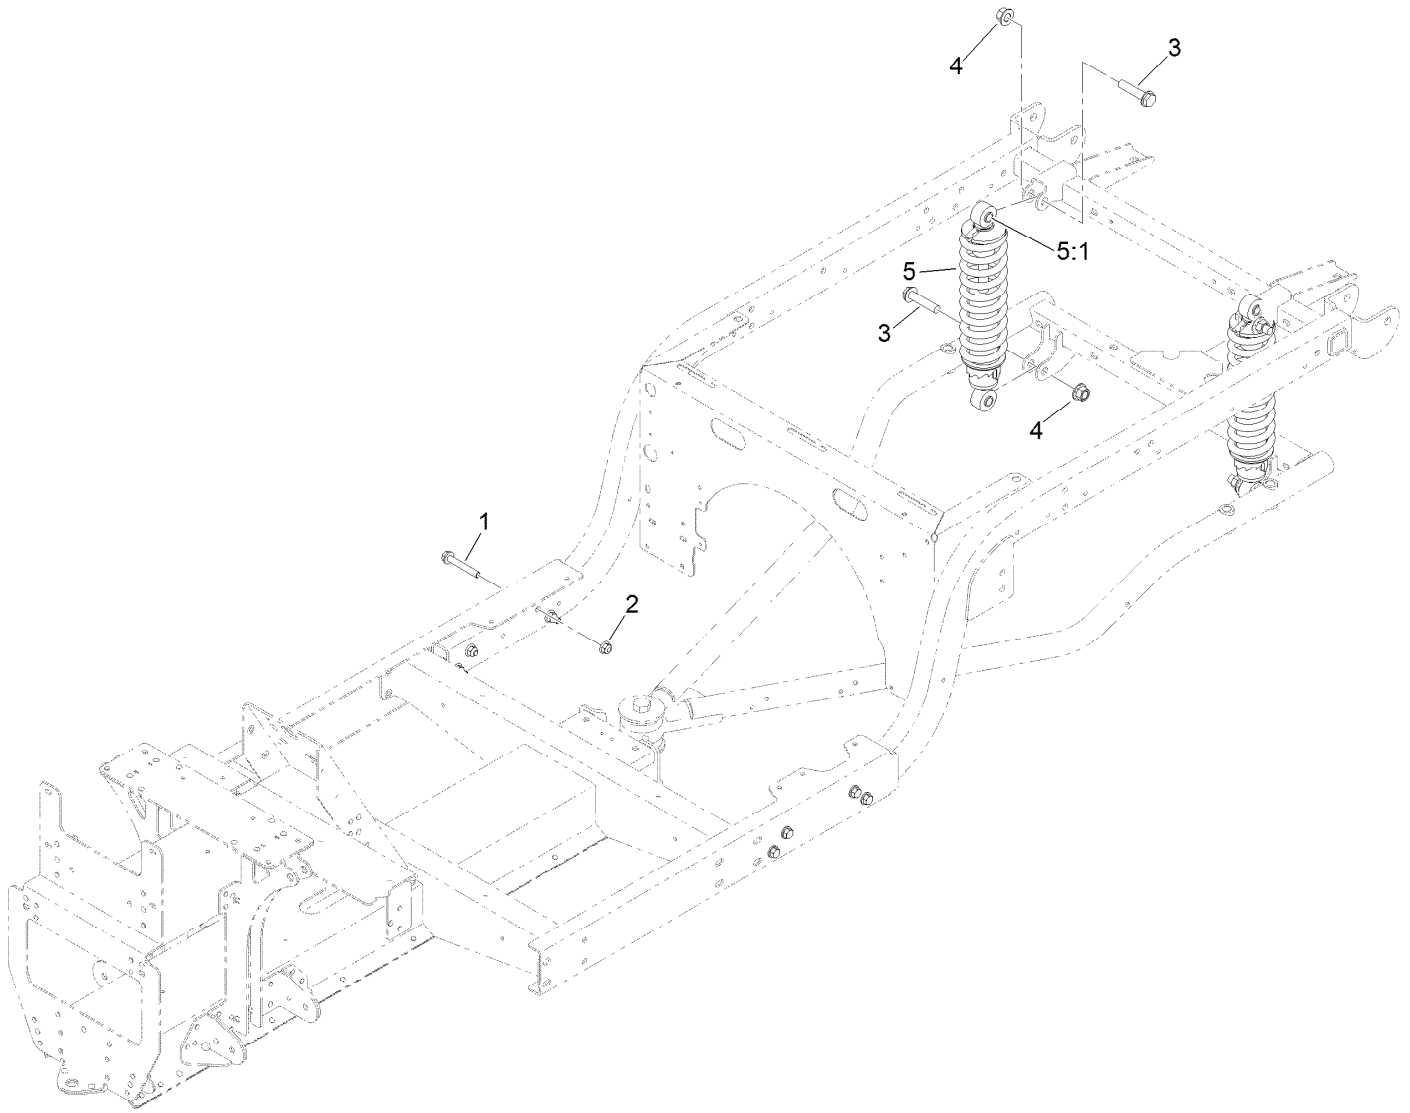

## Frame Mount and Rear Shock/Spring Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 3234-39            | 8           | Screw-HHF          |
| 2           | 104-8301           | 8           | Nut-HF, NI         |
| 3           | 3234-46            | 4           | Screw-HHF          |
| 4           | 99-5107            | 4           | Nut-Lock           |
| 5           | 131-3455           | 2           | Shock/Spring ASM   |
| 5:1         | 131-8574           | 2           | Isolator-Shock     |

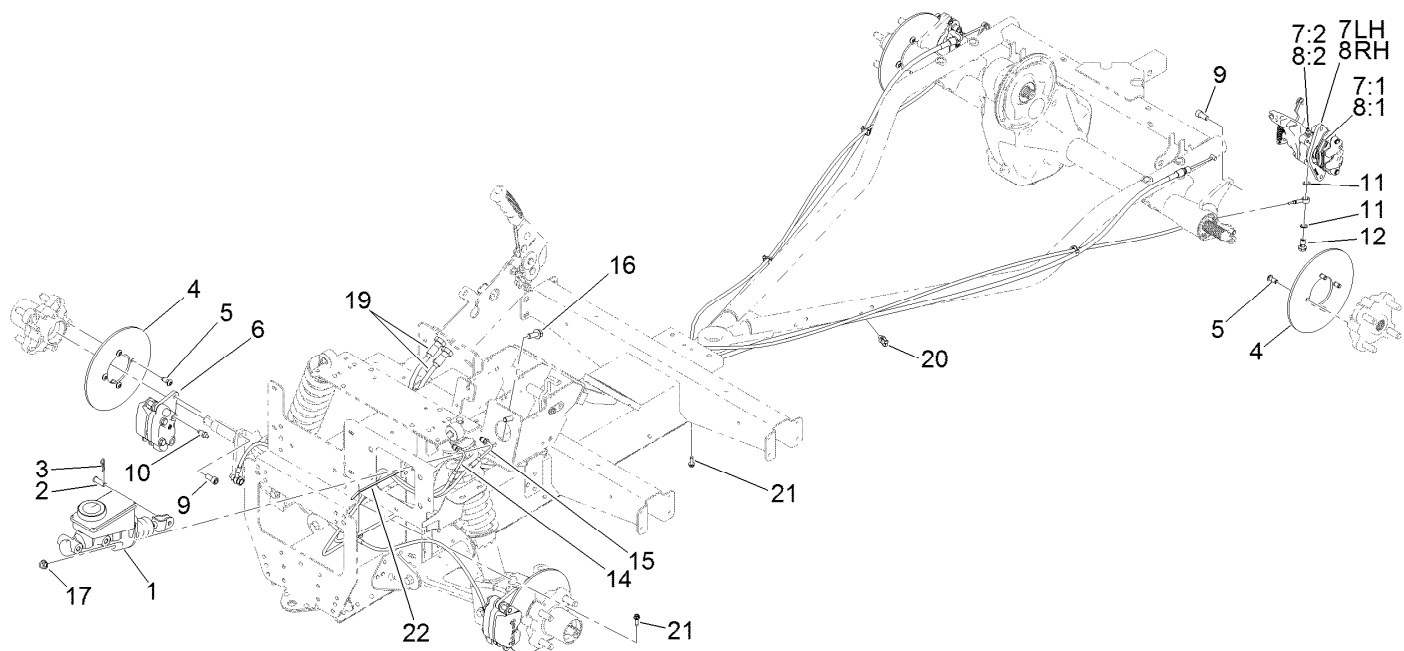


## Brake Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 104-6782    | 1    | Master Cylinder ASM   |
| 2    | 283-2       | 1    | Pin-Clevis            |
| 3    | 1-806003    | 1    | Pin-Cotter            |
| 4    | 136-6295    | 4    | Rotor-Brake           |
| 5    | 121-9671    | 16   | Screw-HSBH            |
| 6    | 127-7424    | 2    | Brake Caliper ASM     |
| 7    | 131-8313    | 1    | Caliper-Rear, LH      |
| 7:1  | 131-8518    | 1    | Pad Kit (Set Of 4)    |
| 7:2  | 119-9509    | 1    | Screw-Bleed           |
| 7:3  | 136-6328    | 2    | Spring-Rattle, Anti ● |
| 8    | 131-8314    | 1    | Caliper-Rear, RH      |
| 8:1  | 131-8518    | 1    | Pad Kit (Set Of 4)    |
| 8:2  | 119-9509    | 1    | Screw-Bleed           |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 8:3  | 136-6328    | 2    | Spring-Rattle, Anti ● |
| 9    | 131-8573    | 8    | Screw-HSH             |
| 10   | 119-9509    | 2    | Screw-Bleed           |
| 11   | 115-2341    | 8    | Washer-Banjo          |
| 12   | 120-4875    | 4    | Bolt-Flange, Banjo    |
| 14   | 127-7781    | 1    | Brake Line-Front      |
| 15   | 127-7782    | 1    | Brake Line-Rear       |
| 16   | 3234-11     | 2    | Screw-HHF             |
| 17   | 3290-357    | 2    | Nut-HHF, Whiz         |
| 19   | 131-8406    | 2    | Cable-Park Brake      |
| 20   | 32180-030   | 4    | Clip-Tie              |
| 21   | 49-2040     | 2    | Screw-HWHTF           |
| 22   | 3290-378    | 1    | Tie-Cable             |

● Not illustrated

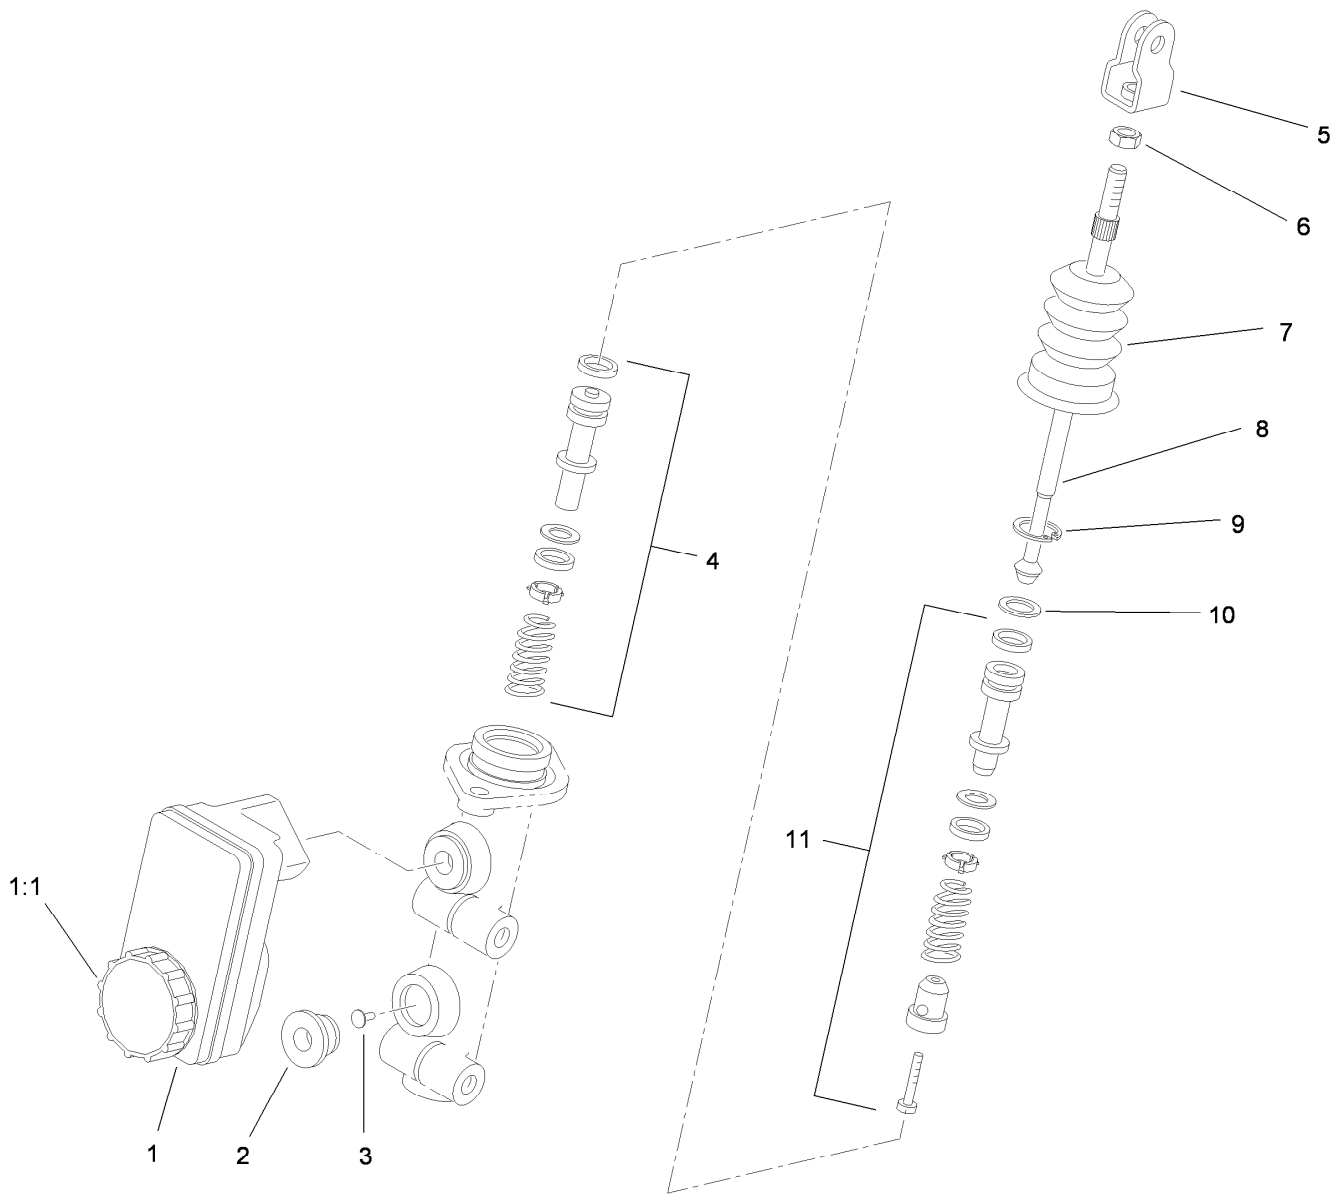

## Master Cylinder Assembly No. 104-6782


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 104-6845    | 1    | Reservoir ASM        |
| 1:1  | 92-4112     | 1    | Cap ASM              |
| 2    | 93-8971     | 2    | Seal-Port, Flange    |
| 3    | 92-4103     | 1    | Pin-Stop             |
| 4    | 92-4102     | 1    | Secondary Piston ASM |
| 5    | 92-4110     | 1    | Clevis               |
| 6    | 21-0360     | 1    | Nut-Hex              |
| 7    | 94-5209     | 1    | Cover-Dust           |
| 8    | 94-5210     | 1    | Rod-Push             |
| 9    | 92-4109     | 1    | Ring-Snap            |
| 10   | 92-4108     | 1    | Retainer-Washer      |
| 11   | 92-4101     | 1    | Primary Piston ASM   |

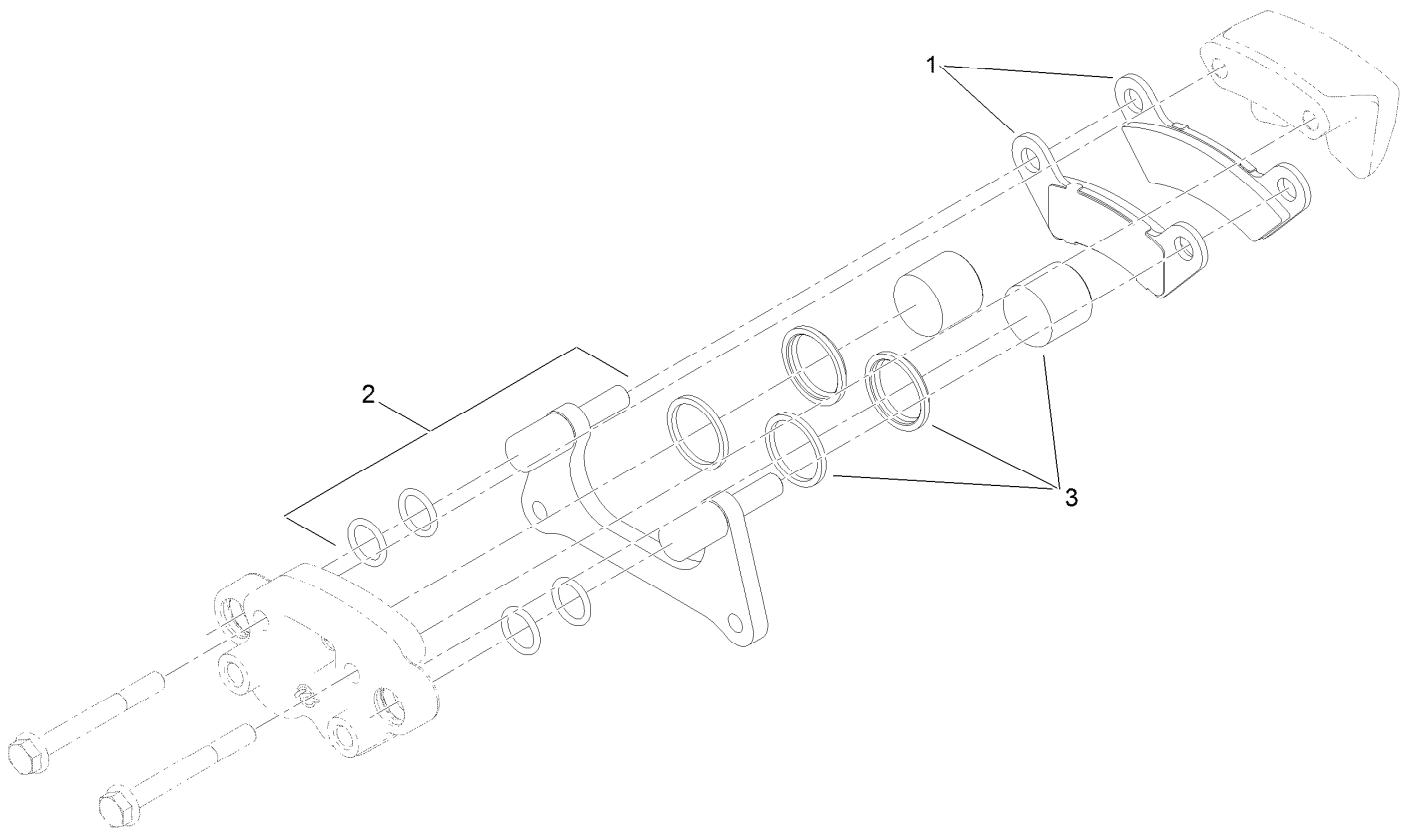

## Brake Caliper Assembly No. 127-7424

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-9510           | 1           | Pads-Brake         |
| 2           | 119-9511           | 1           | Bracket Kit        |
| 3           | 133-0614           | 1           | Piston Kit         |




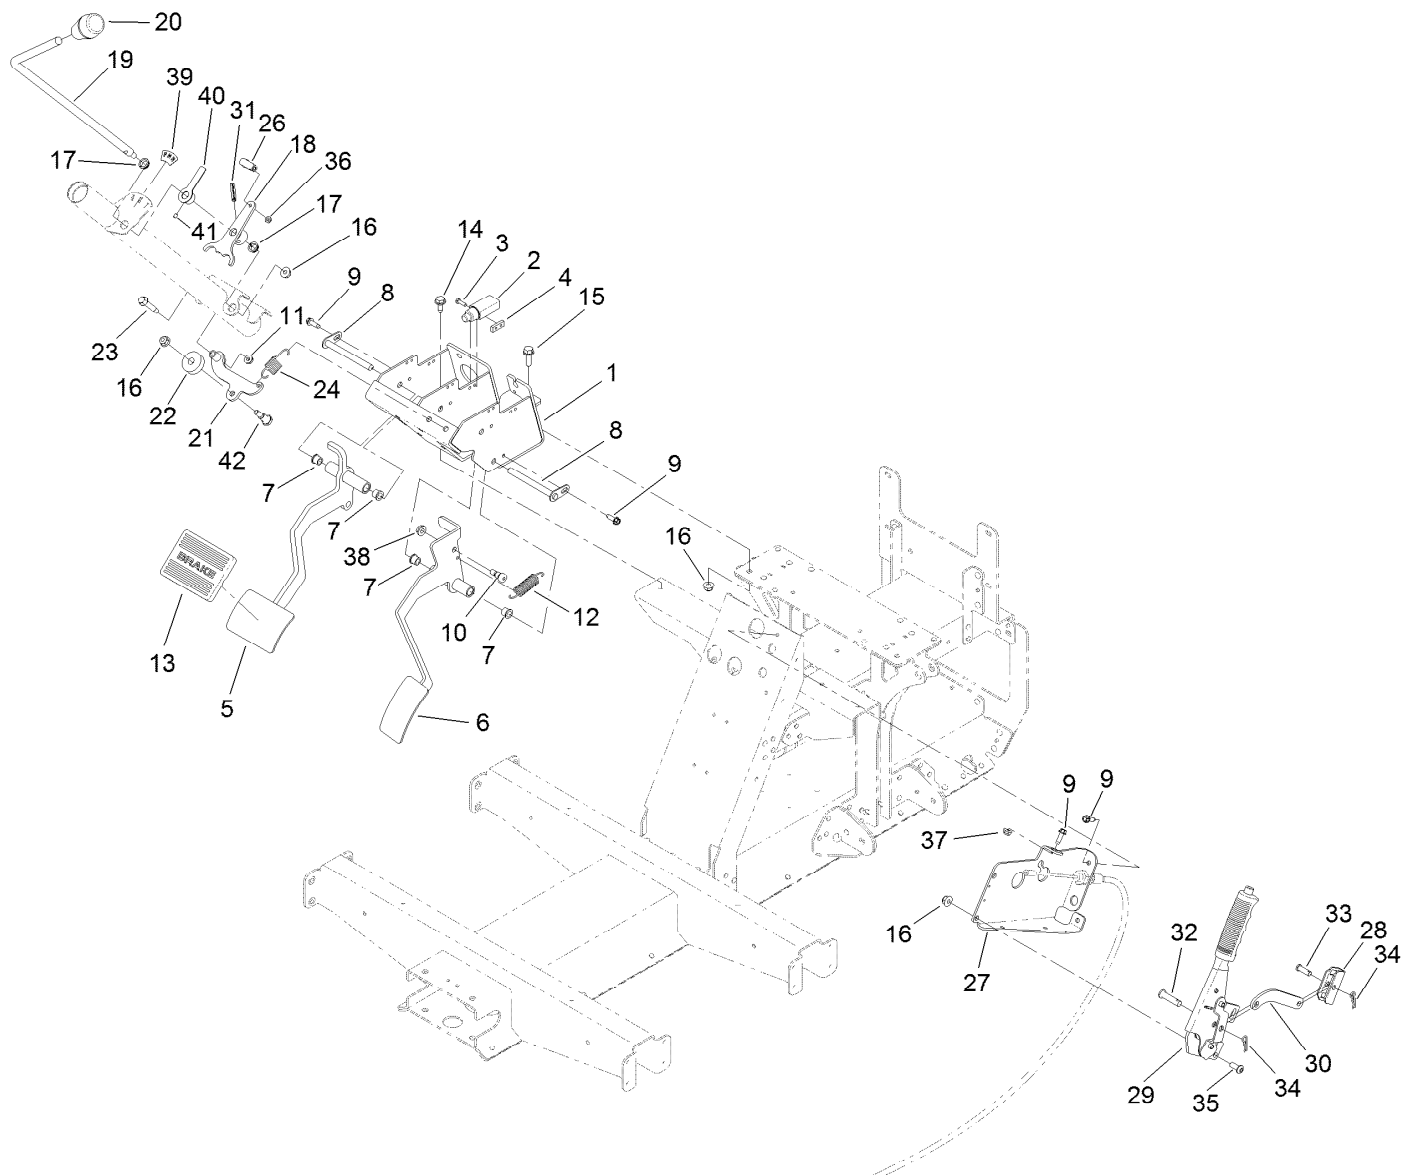

## Pedal and Control Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 127-8817-03 | 1    | Mount-Pedal       |
| 2    | 99-7407     | 1    | Switch            |
| 3    | 3290-134    | 2    | Screw             |
| 4    | 1-633181    | 1    | Plate-Tapped      |
| 5    | 127-8818-03 | 1    | Pedal-Brake       |
| 6    | 127-8819-03 | 1    | Pedal-Accelerator |
| 7    | 256-116     | 4    | Bushing-Flange    |
| 8    | 131-8459    | 2    | Shaft-Pivot       |
| 9    | 49-2040     | 5    | Screw-HWHTF       |
| 10   | 1-809056    | 1    | Screw-HSH         |
| 11   | 32128-33    | 1    | Nut-HF            |
| 12   | 67-1450     | 1    | Spring-Idler      |
| 13   | 7-3900      | 1    | Pad-Brake         |
| 14   | 32144-70    | 2    | Screw-HWHTF       |
| 15   | 3234-29     | 1    | Screw-HHF         |
| 16   | 104-8300    | 5    | Nut-HF, NI        |
| 17   | 110-3318    | 2    | Bushing-Snap      |
| 18   | 127-8833    | 1    | Arm-Shift         |
| 19   | 127-8830    | 1    | Shaft-Shifter     |
| 20   | 131-8473    | 1    | Knob-Tapered      |
| 21   | 133-7214    | 1    | Arm-Detent        |


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 22   | 133-7212    | 1    | Bushing-Detent, Shift    |
| 23   | 116-6876    | 1    | Screw-Shoulder           |
| 24   | 131-8419    | 1    | Spring-Extension         |
| 26   | 2411-38     | 1    | Joint-Ball               |
| 27   | 127-8834-03 | 1    | Mount-Brake, Park        |
| 28   | 87-3480     | 1    | Bracket-Equalizer, Cable |
| 29   | 131-8320    | 1    | Lever-Brake, Park        |
| 30   | 127-8836-03 | 1    | Link-Brake, Park         |
| 31   | 32121-9     | 1    | Pin-Roll, Slotted        |
| 32   | 283-10      | 1    | Pin-Clevis               |
| 33   | 1-808280    | 1    | Pin-Clevis               |
| 34   | 1-806003    | 2    | Pin-Cotter               |
| 35   | 3274-55     | 2    | Screw-HSBH               |
| 36   | 3296-27     | 1    | Nut-Lock, NI             |
| 37   | 104-7201    | 1    | Nut-HF                   |
| 38   | 32128-20    | 1    | Nut-HF                   |
| 39   | 131-8463    | 1    | Decal-Shift              |
| 40   | 131-8462-01 | 1    | Indicator-Shift          |
| 41   | 3245-20     | 1    | Screw-HSH                |
| 42   | 613529      | 1    | Screw-Shoulder           |

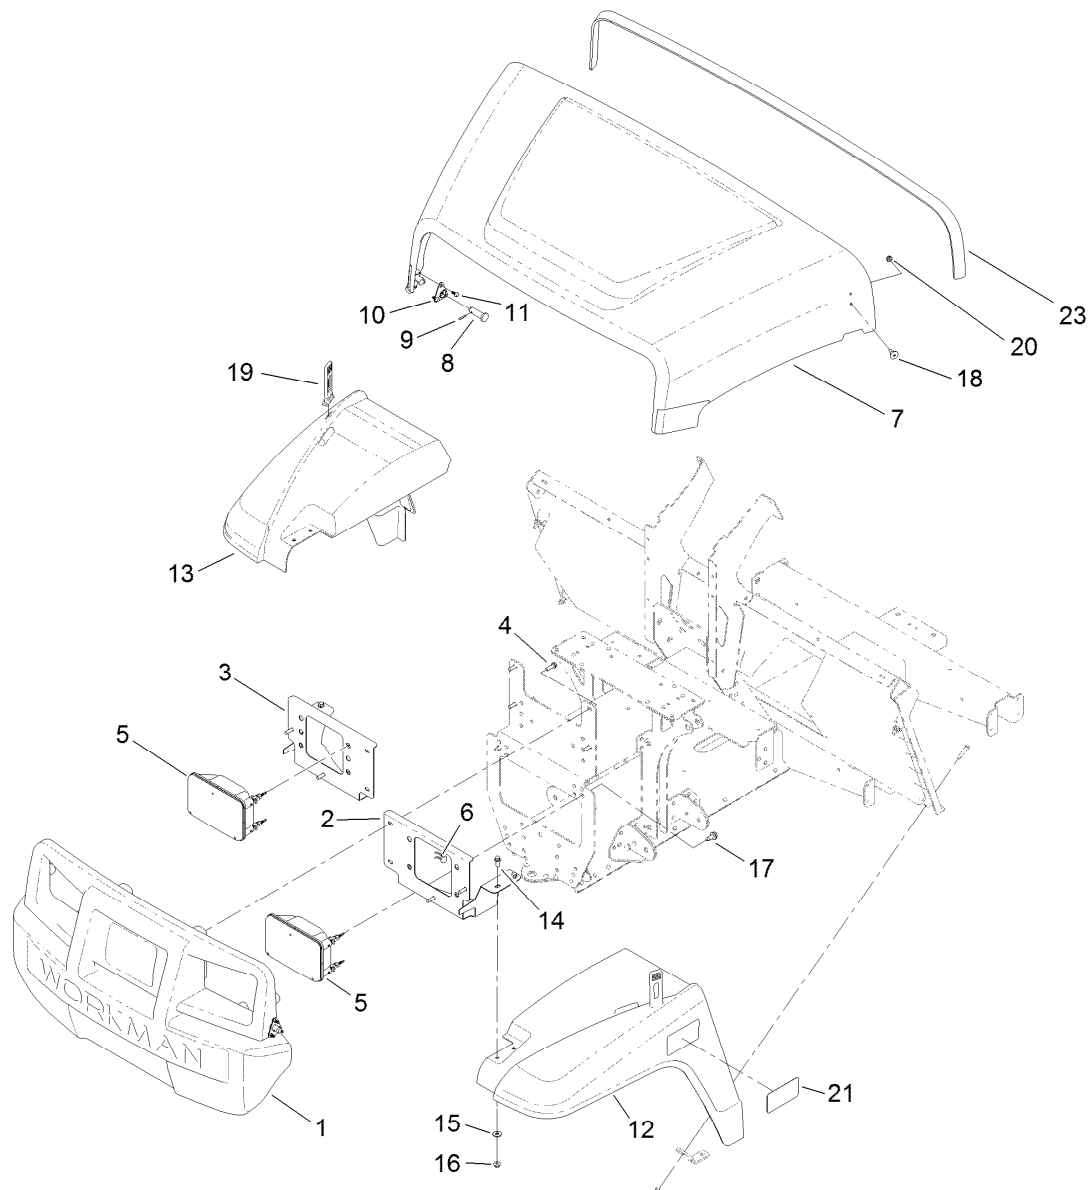

## Hood and Fender Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 132-8530    | 1    | Bumper                |
| 2    | 131-8455-03 | 1    | Bracket-Headlight, LH |
| 3    | 131-8456-03 | 1    | Bracket-Headlight, RH |
| 4    | 46-8091     | 8    | Screw-HWH             |
| 5    | 138-9260    | 2    | Headlight ASM         |
| 6    | 115-2408    | 6    | Clip-Speed            |
| 7    | 136-6281    | 1    | Hood                  |
| 8    | 117-5094    | 2    | Pin-Clevis            |
| 9    | 32121-50    | 2    | Pin-Spring            |
| 10   | 112-3308    | 2    | Retainer-Pin          |
| 11   | 121-9605    | 6    | Screw-HWH             |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 12   | 127-7771    | 1    | Fender-Front, LH |
| 13   | 127-7772    | 1    | Fender-Front, RH |
| 14   | 3234-33     | 4    | Screw-HHF        |
| 15   | 3256-2      | 4    | Washer-Flat      |
| 16   | 104-7201    | 4    | Nut-HF           |
| 17   | 32144-70    | 2    | Screw-HWHTF      |
| 18   | 125-1122    | 2    | Screw            |
| 19   | 131-8402    | 2    | Strap-Hold Down  |
| 20   | 3296-56     | 2    | Nut-Lock, NI     |
| 21   | 138-3527    | 2    | Decal-Fender     |
| 23   | 133-7210    | 1    | Seal-Trim, Hood  |

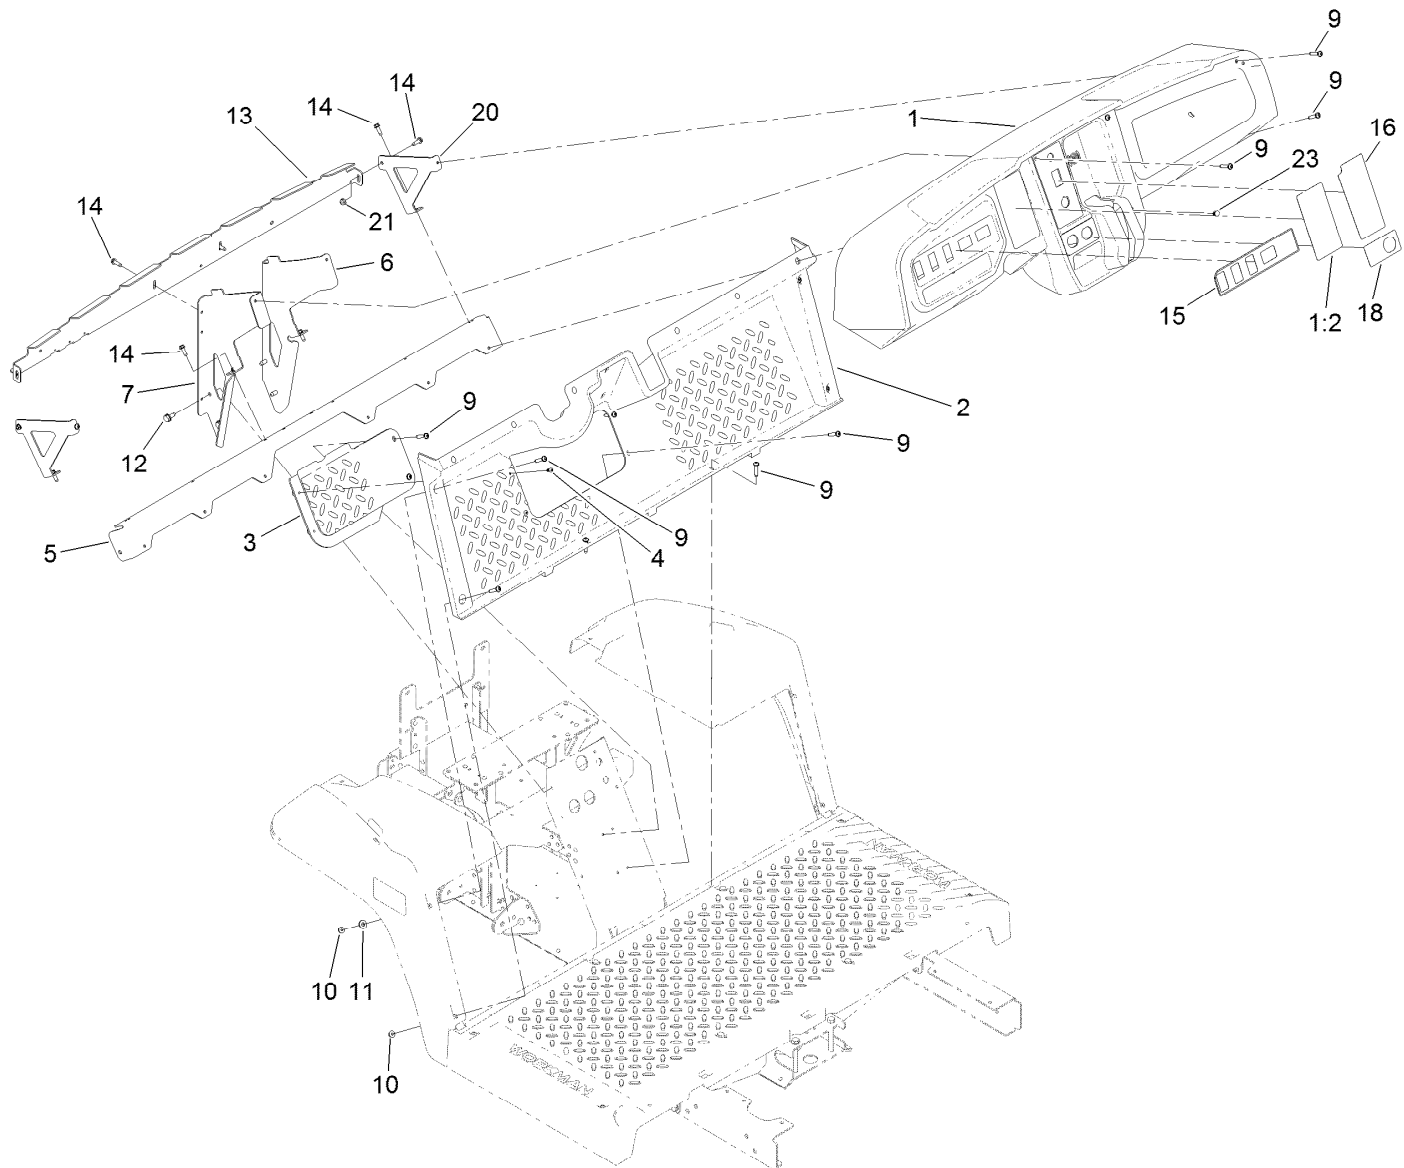

## Dash Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 131-8593    | 1    | Dash             |
| 1:2  | 131-8414    | 1    | Decal-Danger     |
| 2    | 127-7846    | 1    | Footboard        |
| 3    | 127-7847    | 1    | Cover-Footboard  |
| 4    | 107-7461    | 2    | Screw-Plastite   |
| 5    | 127-7831-03 | 1    | Angle            |
| 6    | 131-8336-03 | 1    | Bracket-Dash, RH |
| 7    | 131-8335-03 | 1    | Bracket-Dash, LH |
| 9    | 132-6777    | 20   | Screw-TTH        |
| 10   | 104-7201    | 4    | Nut-HF           |


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 11   | 3256-2      | 2    | Washer-Flat              |
| 12   | 32144-70    | 4    | Screw-HWHTF              |
| 13   | 131-8568-03 | 1    | Reinforcement-Dash       |
| 14   | 49-2040     | 8    | Screw-HWHTF              |
| 15   | 138-3524    | 1    | Decal-Dashboard          |
| 16   | 138-3397    | 1    | Decal-Control Panel, EFI |
| 18   | 131-8493    | 1    | Decal-USB                |
| 20   | 131-8569-03 | 2    | Bracket-Dash, Side       |
| 21   | 104-7201    | 2    | Nut-HF                   |
| 23   | 104-9368    | 1    | Plug-Dome                |

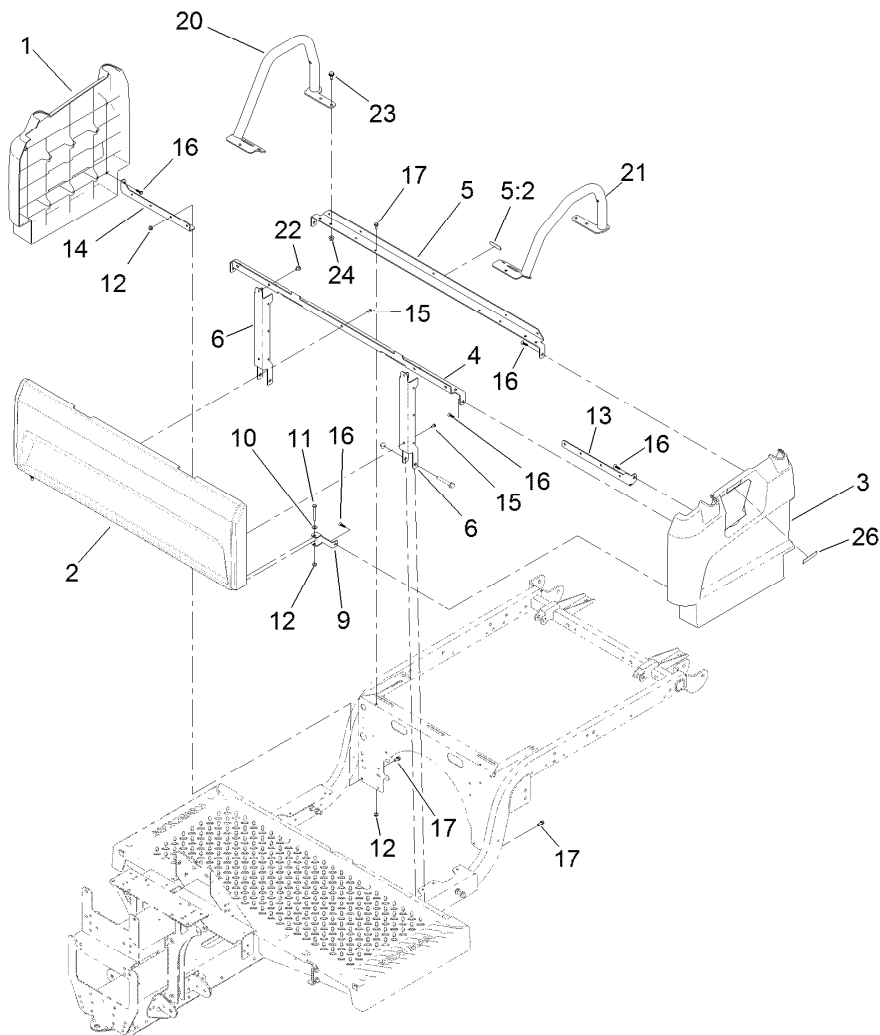

## Seatbase Assembly


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 127-7805    | 1    | Side-Base, Seat (RH)  |
| 2    | 133-7188    | 1    | Panel-Base, Seat      |
| 3    | 127-7807    | 1    | Side-Base, Seat (LH)  |
| 4    | 133-7345-03 | 1    | Support-Seat          |
| 5    | 137-6991    | 1    | Seat Support ASM      |
| 5:2  | 120-9570    | 1    | Decal-Warning         |
| 6    | 127-7841-03 | 2    | Channel-Support, Seat |
| 9    | 127-7844-03 | 2    | Clamp-Plate, Floor    |
| 10   | 3256-22     | 2    | Washer-Flat           |
| 11   | 321-18      | 2    | Screw-HH              |
| 12   | 104-7201    | 8    | Nut-HF                |

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 13   | 127-7842-03 | 1    | Bracket-Support, Side (LH) |
| 14   | 127-7843-03 | 1    | Bracket-Support, Side (RH) |
| 15   | 112-6349    | 5    | Screw-HWH                  |
| 16   | 120-2349    | 8    | Screw                      |
| 17   | 3234-33     | 6    | Screw-HHF                  |
| 20   | 131-8352-05 | 1    | Restraint-Hip, RH          |
| 21   | 131-8353-05 | 1    | Restraint-Hip, LH          |
| 22   | 46-6810     | 2    | Screw And Washer ASM       |
| 23   | 32144-70    | 6    | Screw-HWHTF                |
| 24   | 104-8300    | 6    | Nut-HF, NI                 |
| 26   | 131-8410    | 1    | Decal-Danger, Fuel         |

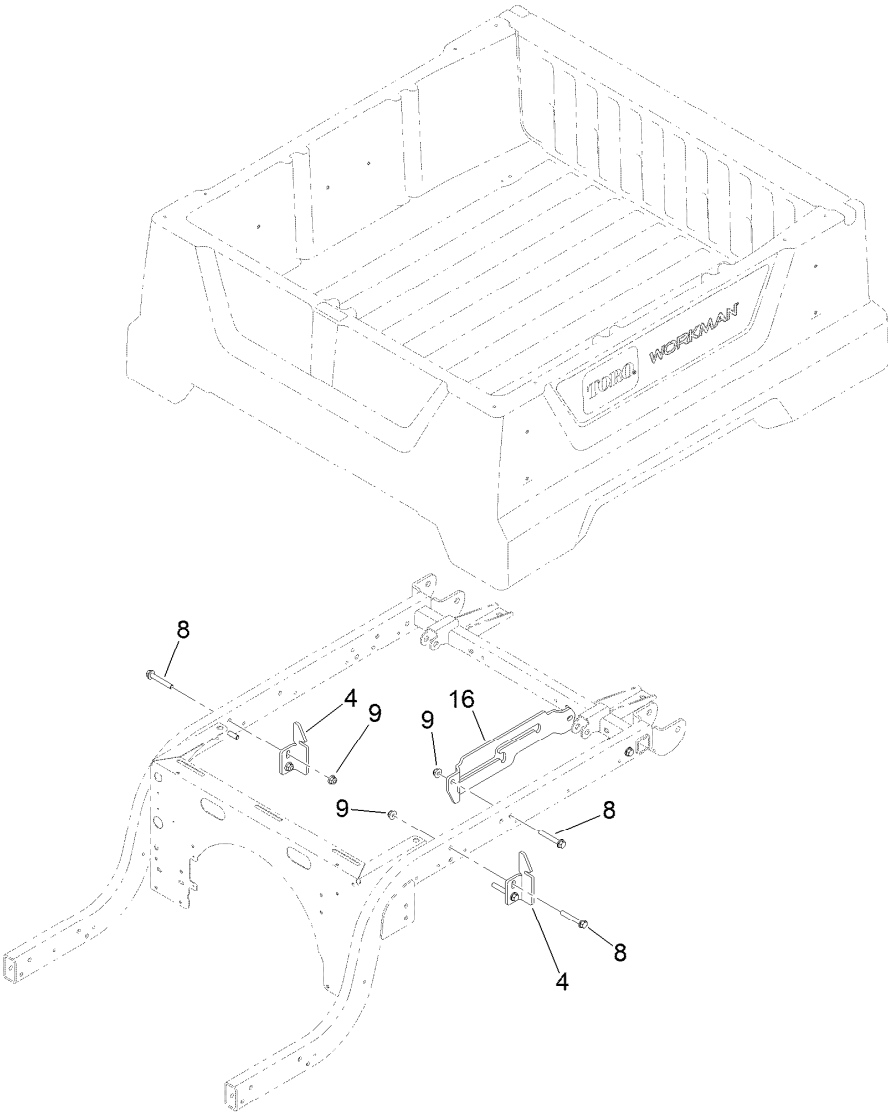

Cargo Bed Assembly


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 4    | 127-7428-03 | 2    | Striker-Latch, Bed |
| 8    | 3234-39     | 6    | Screw-HHF          |
| 9    | 104-8301    | 6    | Nut-HF, NI         |
| 16   | 132-8518    | 1    | Bracket-Rod, Prop  |

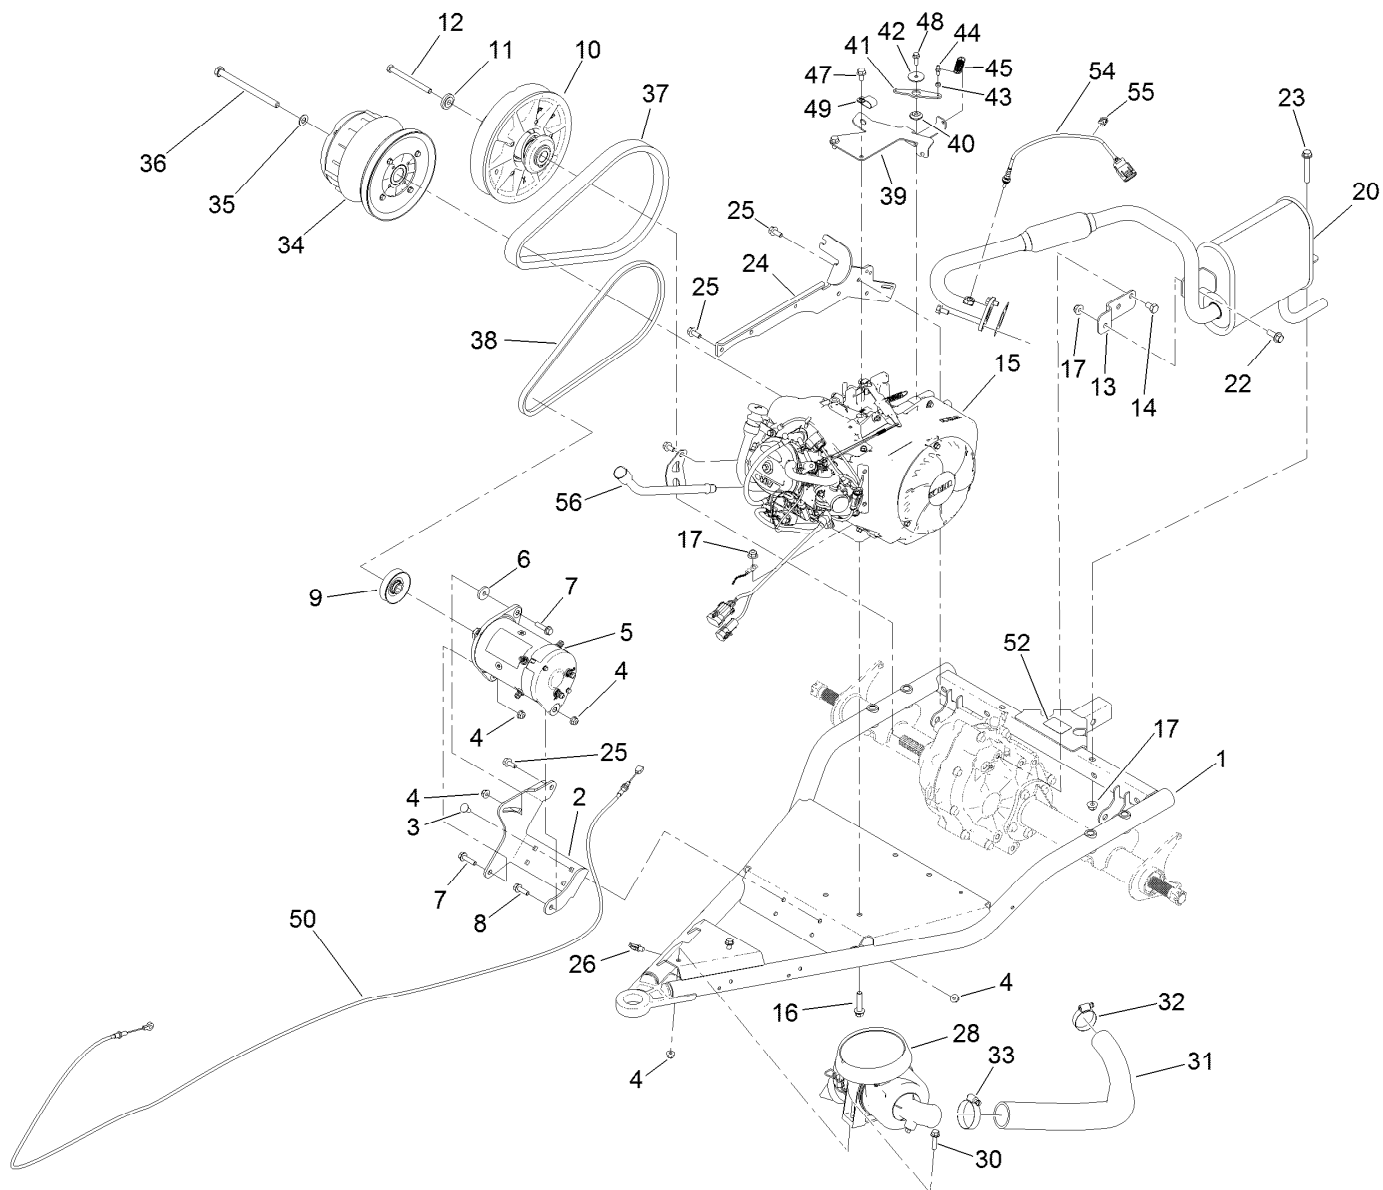

## Engine Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 131-8520-03 | 1    | Arm-Swing                 |
| 2    | 131-8503-03 | 1    | Bracket-Starter/Generator |
| 3    | 3230-23     | 4    | Screw-CARR                |
| 4    | 104-8300    | 9    | Nut-HF, NI                |
| 5    | 131-8444    | 1    | Starter/Generator ASM     |
| 6    | 65-8270     | 1    | Washer                    |
| 7    | 119-4036    | 2    | Screw-HHF                 |
| 8    | 3234-29     | 1    | Screw-HHF                 |
| 9    | 121-6277    | 1    | Pulley-Drive              |
| 10   | 119-6011    | 1    | Secondary Clutch ASM      |
| 11   | 104-6563    | 1    | Washer-Stepped            |
| 12   | 119-0723    | 1    | Screw-HH, Lock            |
| 13   | 131-8329    | 1    | Bracket-Muffler           |
| 14   | 70-8470     | 2    | Screw-HH                  |
| 15   | 137-9893    | 1    | Engine-Kohler, Ech440     |
| 16   | 3234-19     | 4    | Screw-HHF                 |
| 17   | 104-8301    | 6    | Nut-HF, NI                |
| 20   | 138-9275    | 1    | Exhaust ASM               |
| 22   | 3234-42     | 1    | Screw-HHF                 |
| 23   | 3234-39     | 1    | Screw-HHF                 |
| 24   | 131-8501-03 | 1    | Bar-Spanner               |


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 25   | 95-4184     | 6    | Screw-HHF          |
| 26   | 32180-030   | 1    | Clip-Tie           |
| 28   | 138-3447    | 1    | Air Cleaner ASM    |
| 30   | 3234-36     | 2    | Screw-HHF          |
| 31   | 131-8489    | 1    | Hose-Intake, Air   |
| 32   | 2412-111    | 1    | Clamp              |
| 33   | 2412-92     | 1    | Clamp-Hose         |
| 34   | 138-0095    | 1    | Primary Clutch ASM |
| 35   | 3256-25     | 1    | Washer-Flat        |
| 36   | 131-8521    | 1    | Screw-HH           |
| 37   | 131-8567    | 1    | Belt-Variable      |
| 38   | 94-8803     | 1    | V-Belt, Impeller   |
| 39   | 131-8505    | 1    | Bracket-Throttle   |
| 40   | 131-8524    | 1    | Bushing-Flange     |
| 41   | 131-8504    | 1    | Lever-Throttle     |
| 42   | 3256-55     | 1    | Washer-Flat        |
| 43   | 110-2619    | 1    | Keeper-Spring      |
| 44   | 99-7847     | 1    | Ball-Stud          |
| 45   | 71-5470     | 1    | Spring-Brake       |
| 47   | 33104-016   | 2    | Screw-HHF          |
| 48   | 33103-020   | 1    | Screw-HHF          |

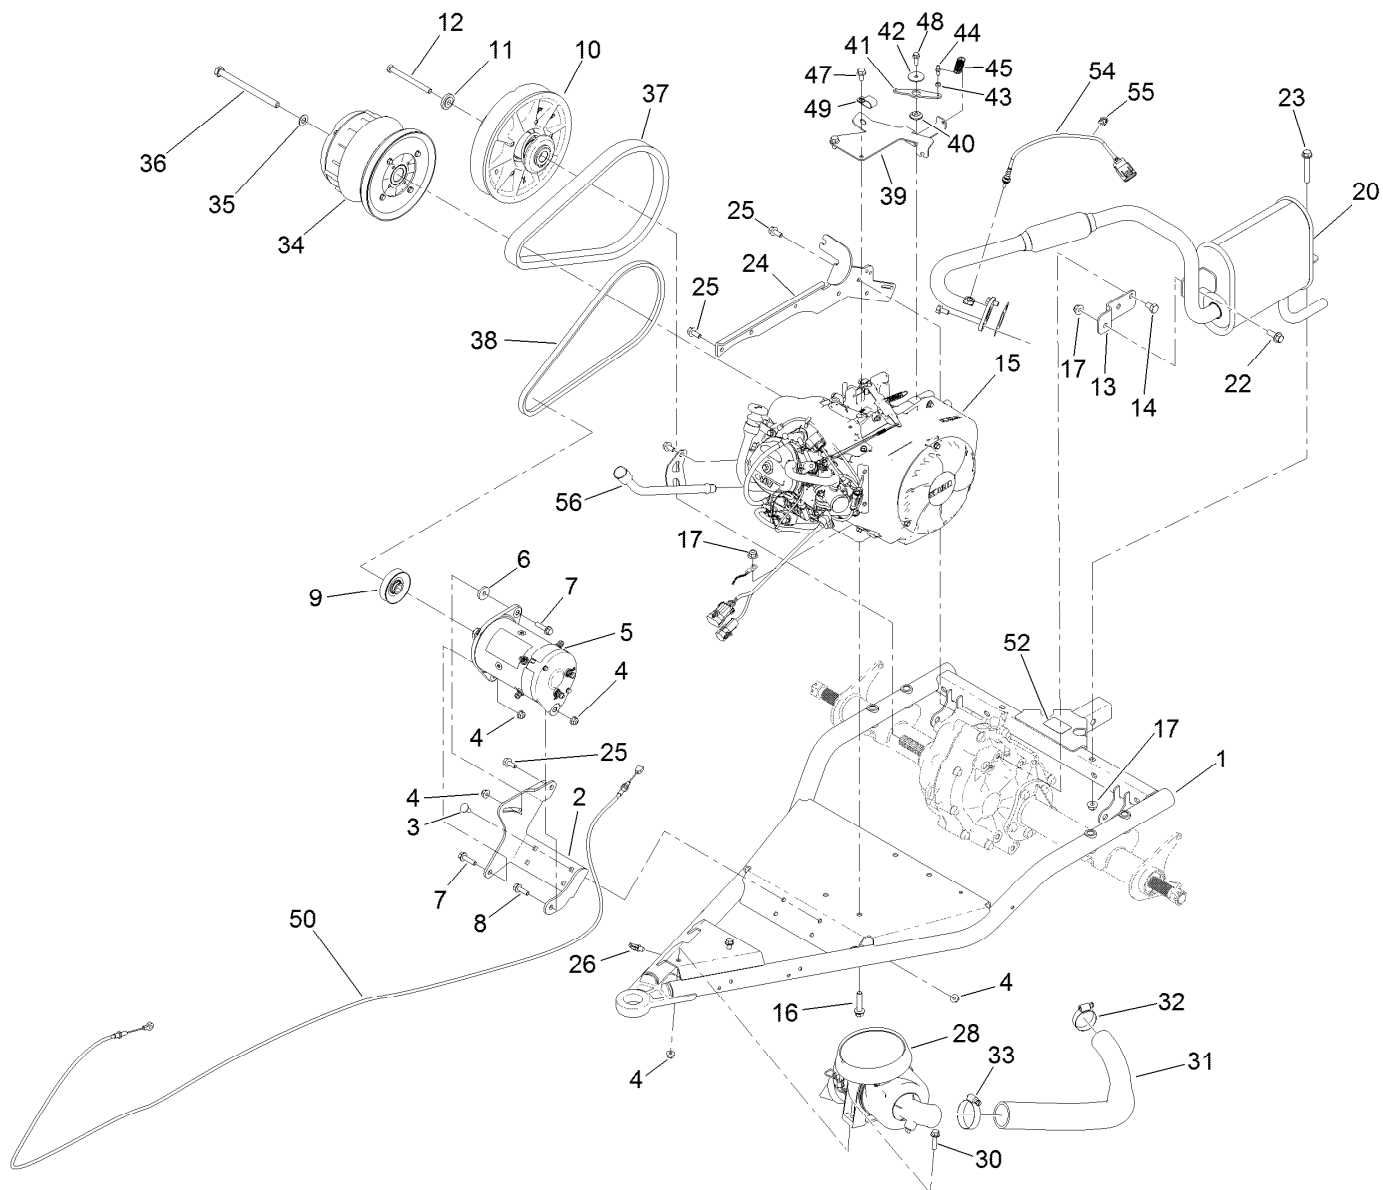

## Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 49   | 2412-105    | 1    | Clamp-Tube, Double |
| 50   | 127-8860    | 1    | Cable-Accelerator  |
| 52   | 137-9984    | 1    | Decal-Load, Towing |


| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 54   | 136-6348    | 1    | Sensor-O2                 |
| 55   | 32180-226   | 1    | Clip-Edge, Parallel W/Tie |
| 56   | 138-9383    | 1    | Dip Stick Tube ASM        |

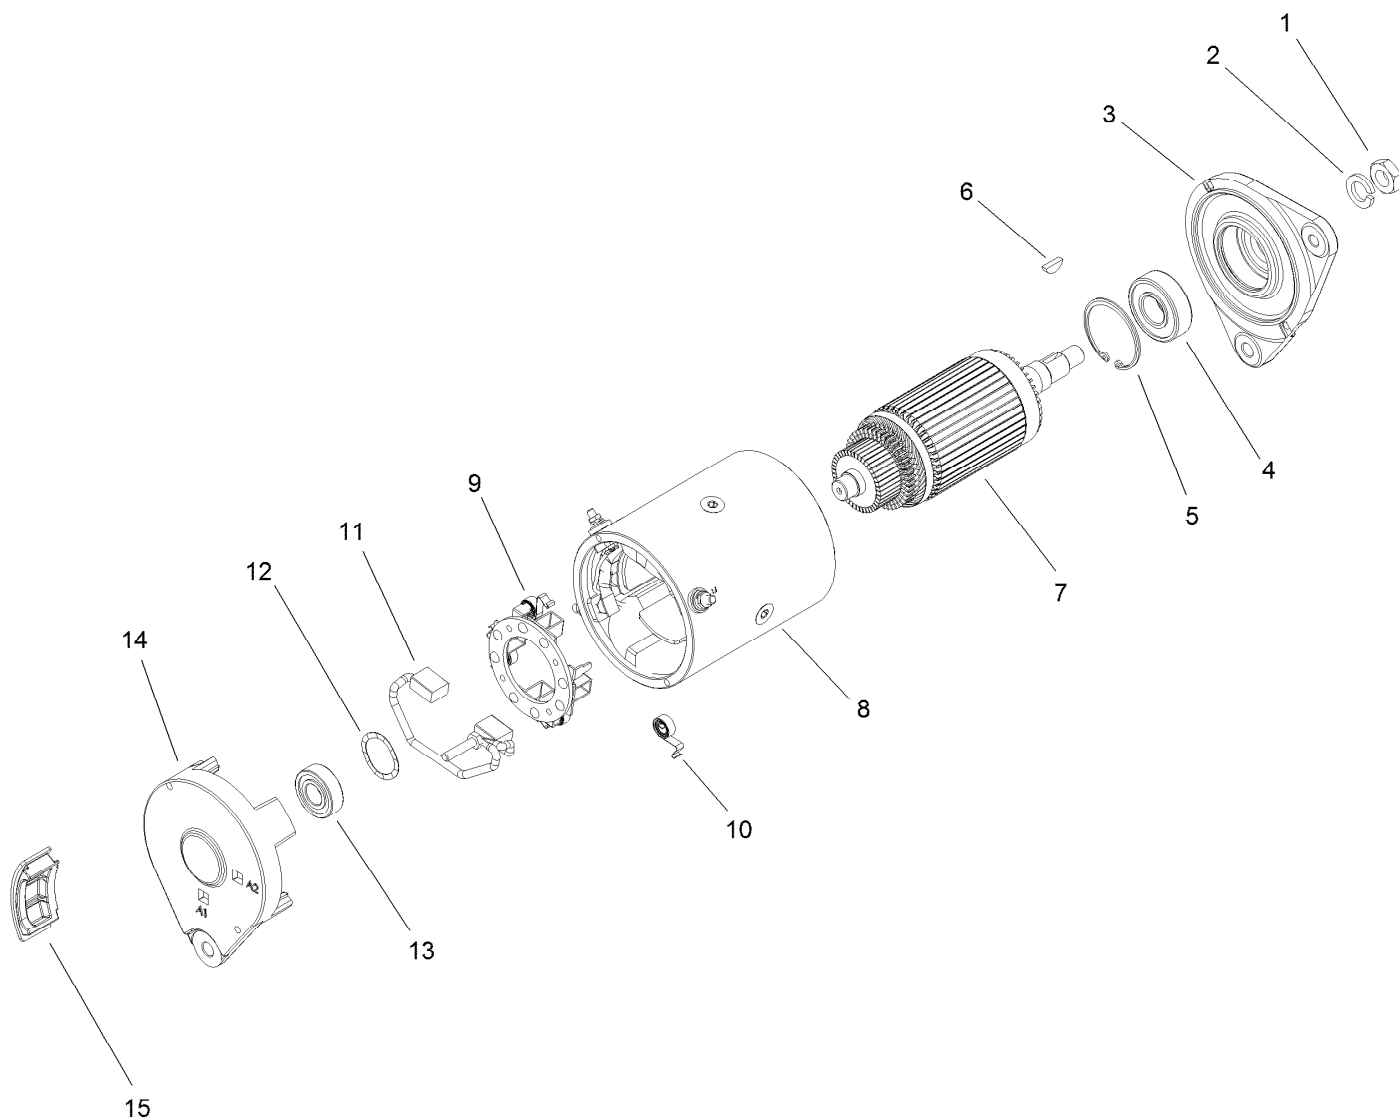

## Starter Generator Assembly No. 131-8444


| Ref. | Part Number | Qty. | Description                         |
|------|-------------|------|-------------------------------------|
| 1    | 119-9651    | 1    | Nut                                 |
| 2    | 119-9652    | 1    | Washer-Lock                         |
| 3    | 133-0599    | 1    | Head-Drive End                      |
| 4    | 119-9655    | 1    | Bearing                             |
| 5    | 119-9656    | 1    | Ring-Retaining                      |
| 6    | 119-9657    | 1    | Key-Woodruff                        |
| 7    | 119-9658    | 1    | Armature ASM                        |
| 8    |             | 1    | Frame And Field Assembly ●          |
| 9    | 119-9661    | 1    | Brush Box ASM                       |
| 10   | 119-9660    | 4    | Spring-Brush                        |
| 11   | 119-9659    | 1    | Brush Lead And Terminal Service Kit |
| 12   | 119-9662    | 1    | Washer-Wave                         |
| 13   | 119-9663    | 1    | Bearing                             |
| 14   |             | 1    | Head-End, Cummutator ●              |
| 15   | 133-0600    | 4    | Plug-Rubber                         |

● Not serviced separately

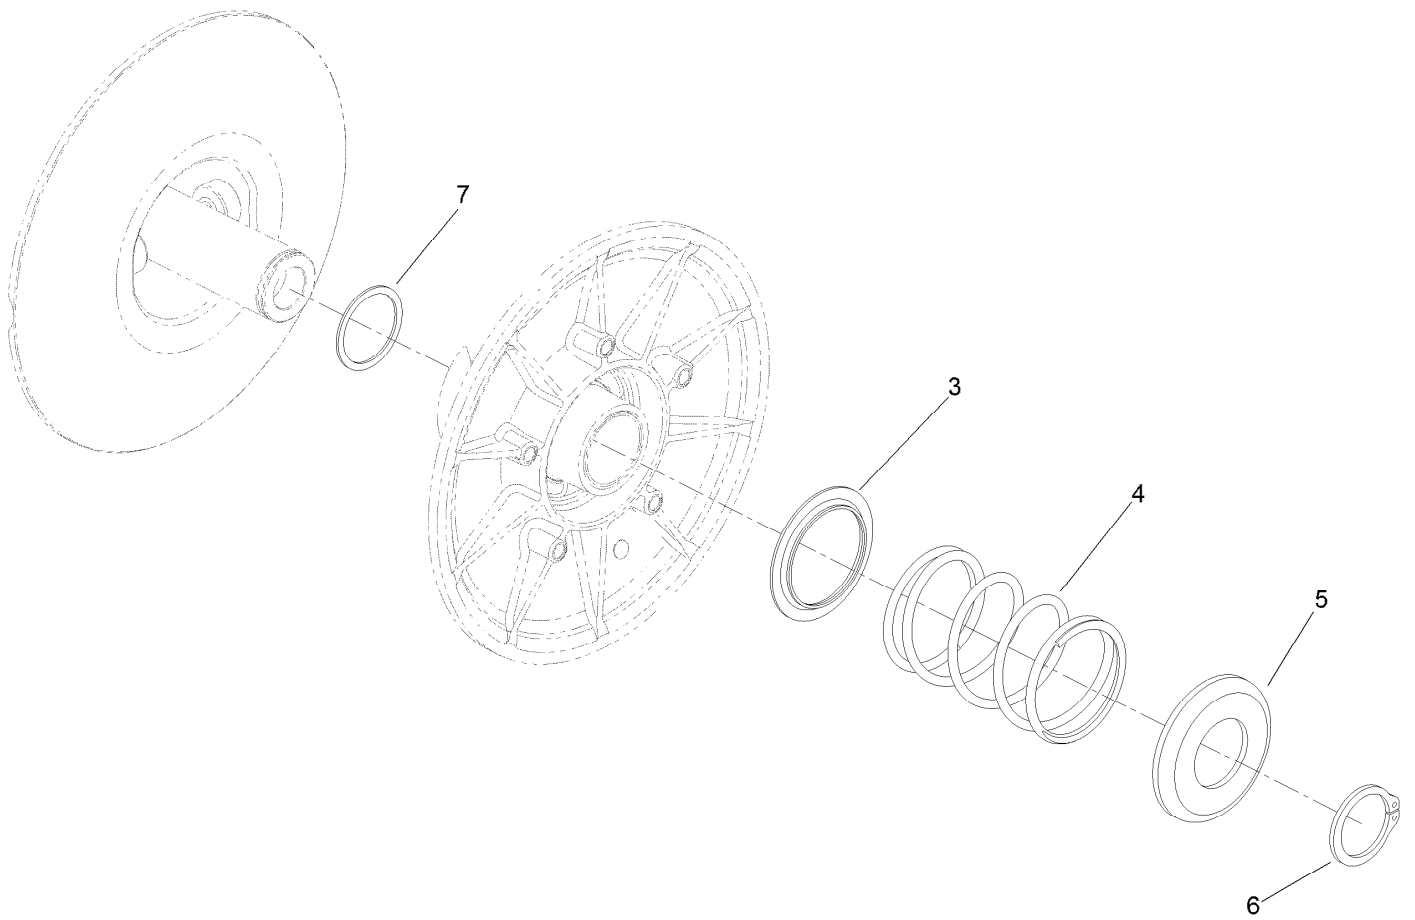


## Secondary Clutch Assembly No. 119-6011

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               |
|-------------|--------------------|-------------|----------------------------------|
| 3           | 119-0809           | 1           | Cup-Spring Retainer, Inner       |
| 4           | 119-9360           | 1           | Spring-Compression, Black/Almond |
| 5           | 119-0810           | 1           | Cup-Spring Retainer, Outer       |
| 6           | 119-0811           | 1           | Ring-Retaining                   |
| 7           | 119-6018           | 1           | Shim-Thrust                      |

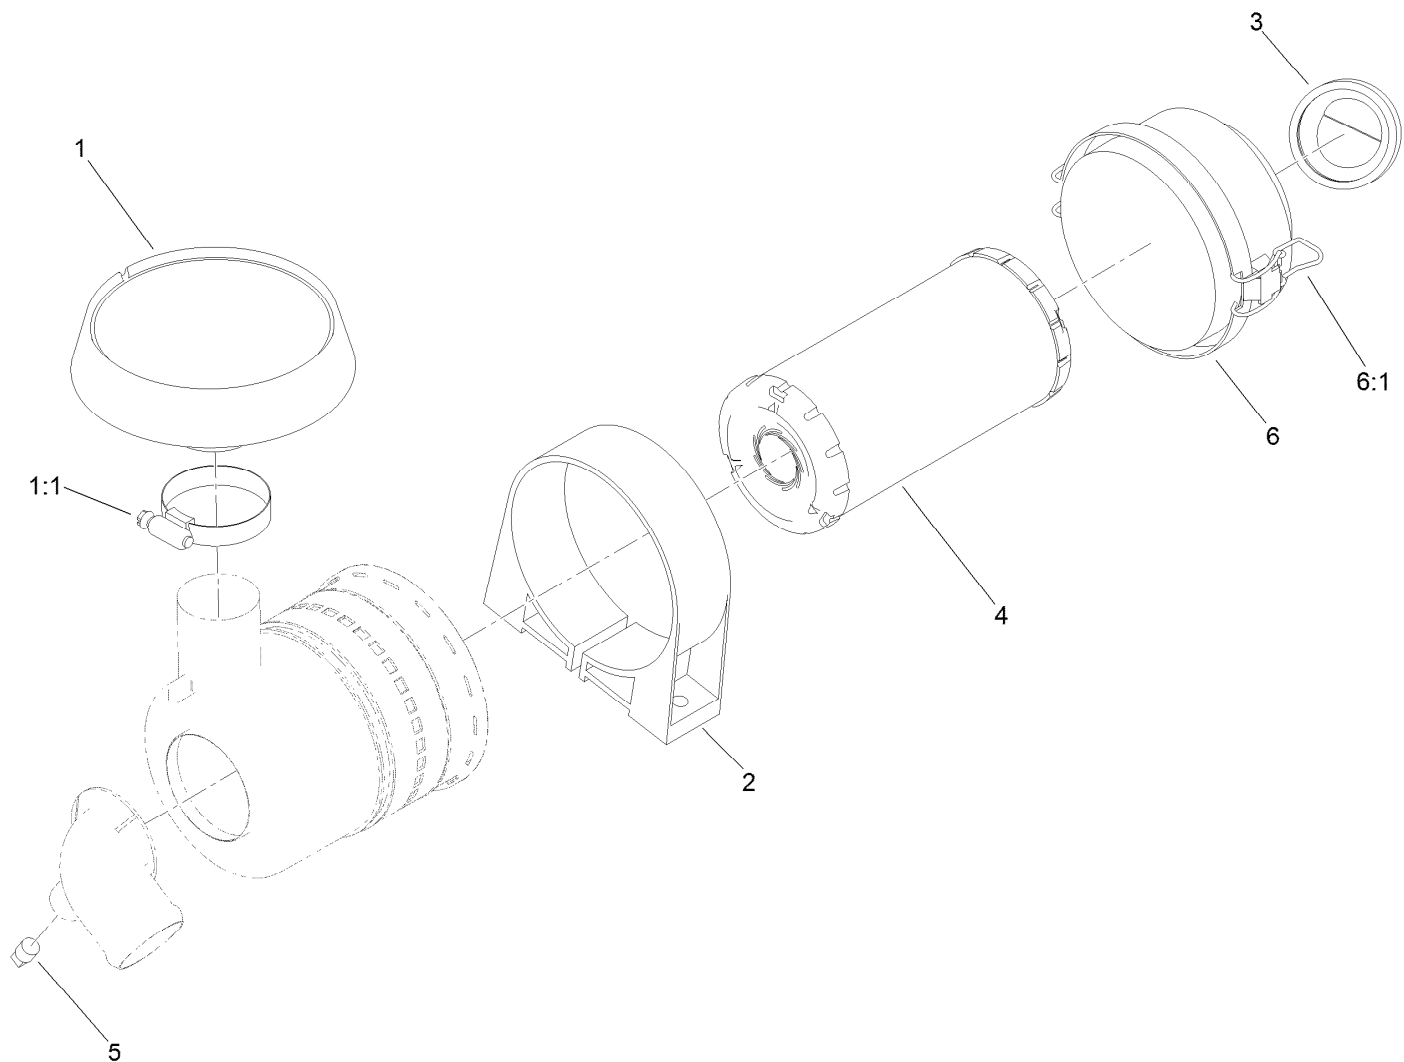


## Air Cleaner Assembly No. 138-3447

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 136-7859    | 1    | Rain Cap Kit       |
| 1:1  | 1-643009    | 1    | Clamp-Hose         |
| 2    | 95-5806     | 1    | Bracket-Mounting   |
| 3    | 87-9400     | 1    | Valve-Vacuator     |
| 4    | 108-3811    | 1    | Filter-Air         |
| 5    | 281-7       | 1    | Cap-Pipe           |
| 6    | 94-3652     | 1    | Cover ASM          |
| 6:1  | 1-643283    | 2    | Latch-Cleaner, Air |

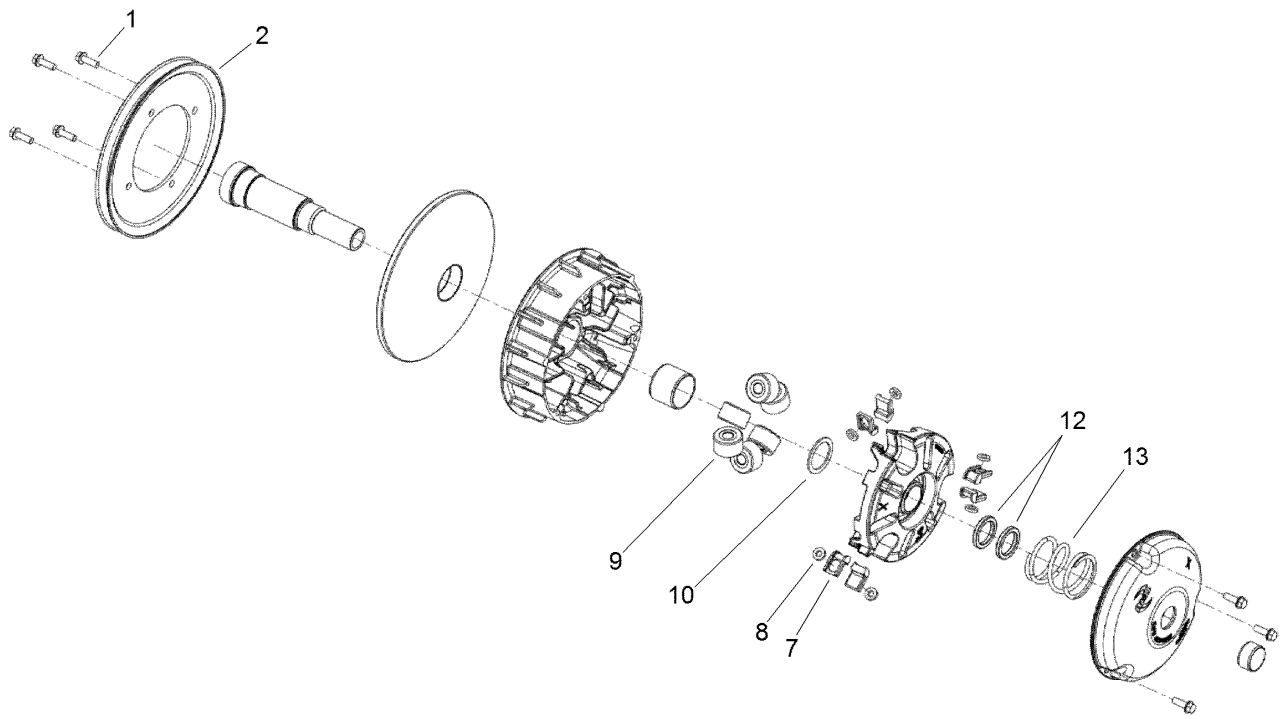

## Primary Clutch Assembly No. 138-0095

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 49-2040     | 7    | Screw-HWHTF            |
| 2    | 119-0813    | 1    | Pulley-Primary         |
| 7    | 127-8689    | 6    | Button-Primary, Torque |
| 8    | 127-8690    | 6    | Plug-Button, Torque    |
| 9    | 119-0804    | 6    | Weight-Roller          |
| 10   | 119-0812    | 1    | Shim-Spider            |
| 12   | 119-0807    | 2    | Shim-Limiter           |
| 13   | 119-9532    | 1    | Spring-Red/White       |

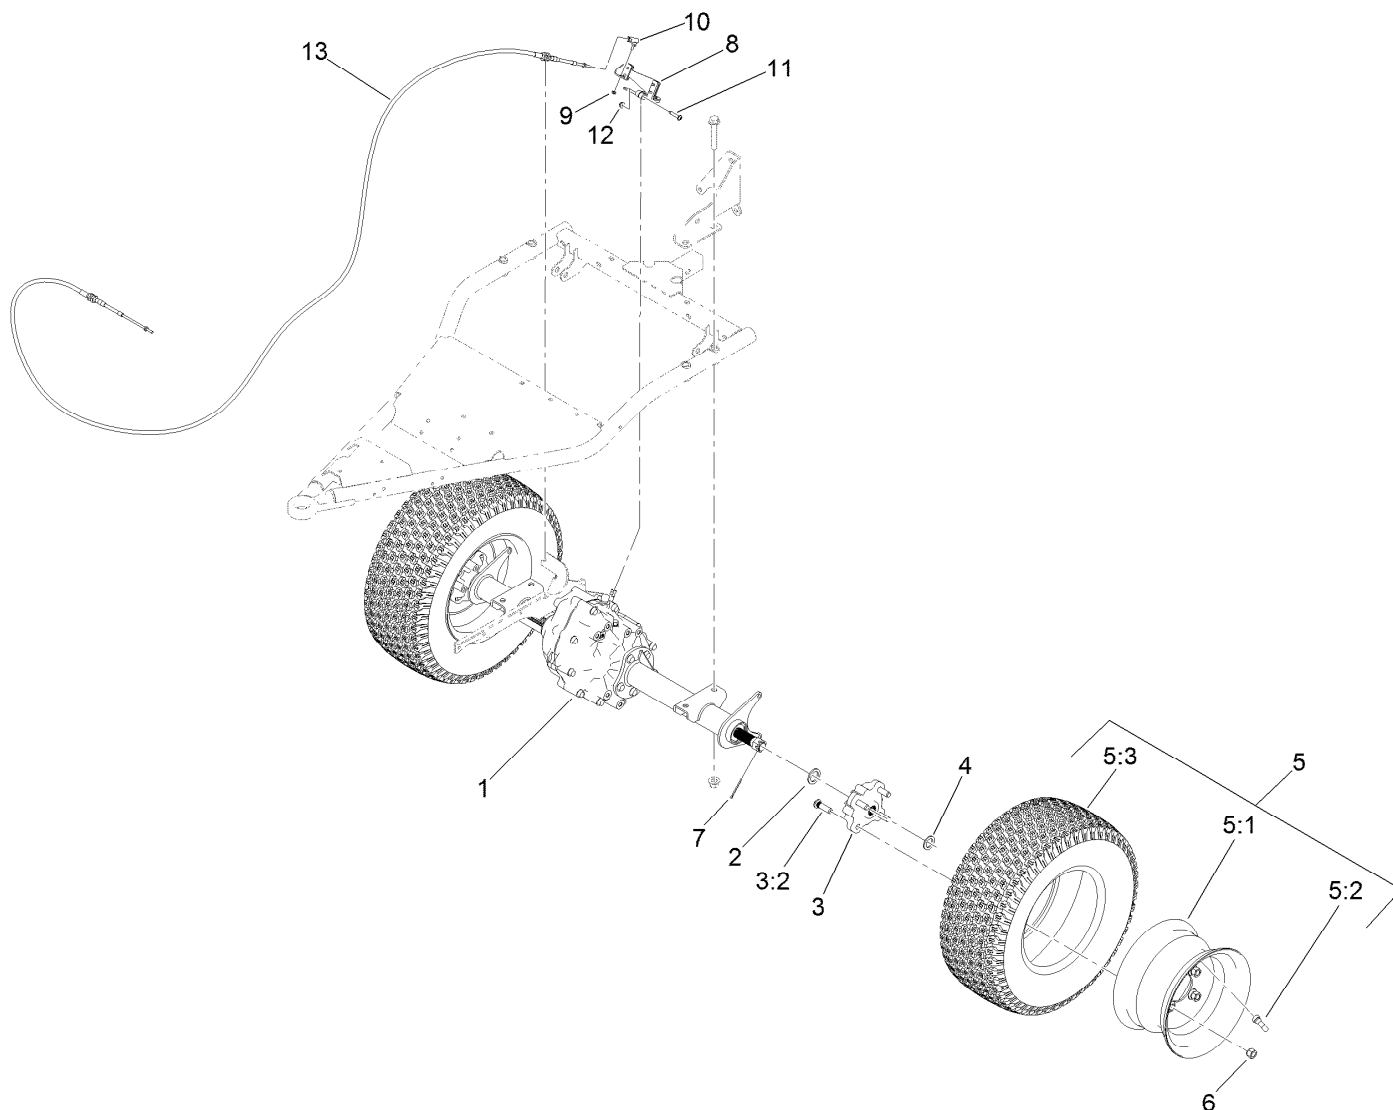


## Rear Wheel and Transaxle Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 131-3486    | 1    | Transaxle          |
| 2    | 131-8570    | 2    | Spacer-Hardened    |
| 3    | 127-8848    | 2    | Rear Hub ASM       |
| 3:2  | 10-6830     | 4    | Stud-Type, Drive   |
| 4    | 3-7898      | 2    | Washer-Thrust      |
| 5    | 139-4495    | 2    | Wheel And Tire ASM |
| 5:1  | 131-8317    | 1    | Wheel              |
| 5:2  | 232-27      | 1    | Stem-Valve         |
| 5:3  | 139-4475    | 1    | Tire-20 X 8.00-10  |


| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 6    | 242-50      | 8    | Nut-Lug      |
| 7    | 1-806800    | 2    | Pin-Cotter   |
| 8    | 133-7260-03 | 1    | Arm-Shift    |
| 9    | 3296-27     | 1    | Nut-Lock, NI |
| 10   | 2411-38     | 1    | Joint-Ball   |
| 11   | 132-6777    | 1    | Screw-TTH    |
| 12   | 104-7201    | 1    | Nut-HF       |
| 13   | 127-8897    | 1    | Cable-Shift  |

# Transaxle Assembly No. 131-3486

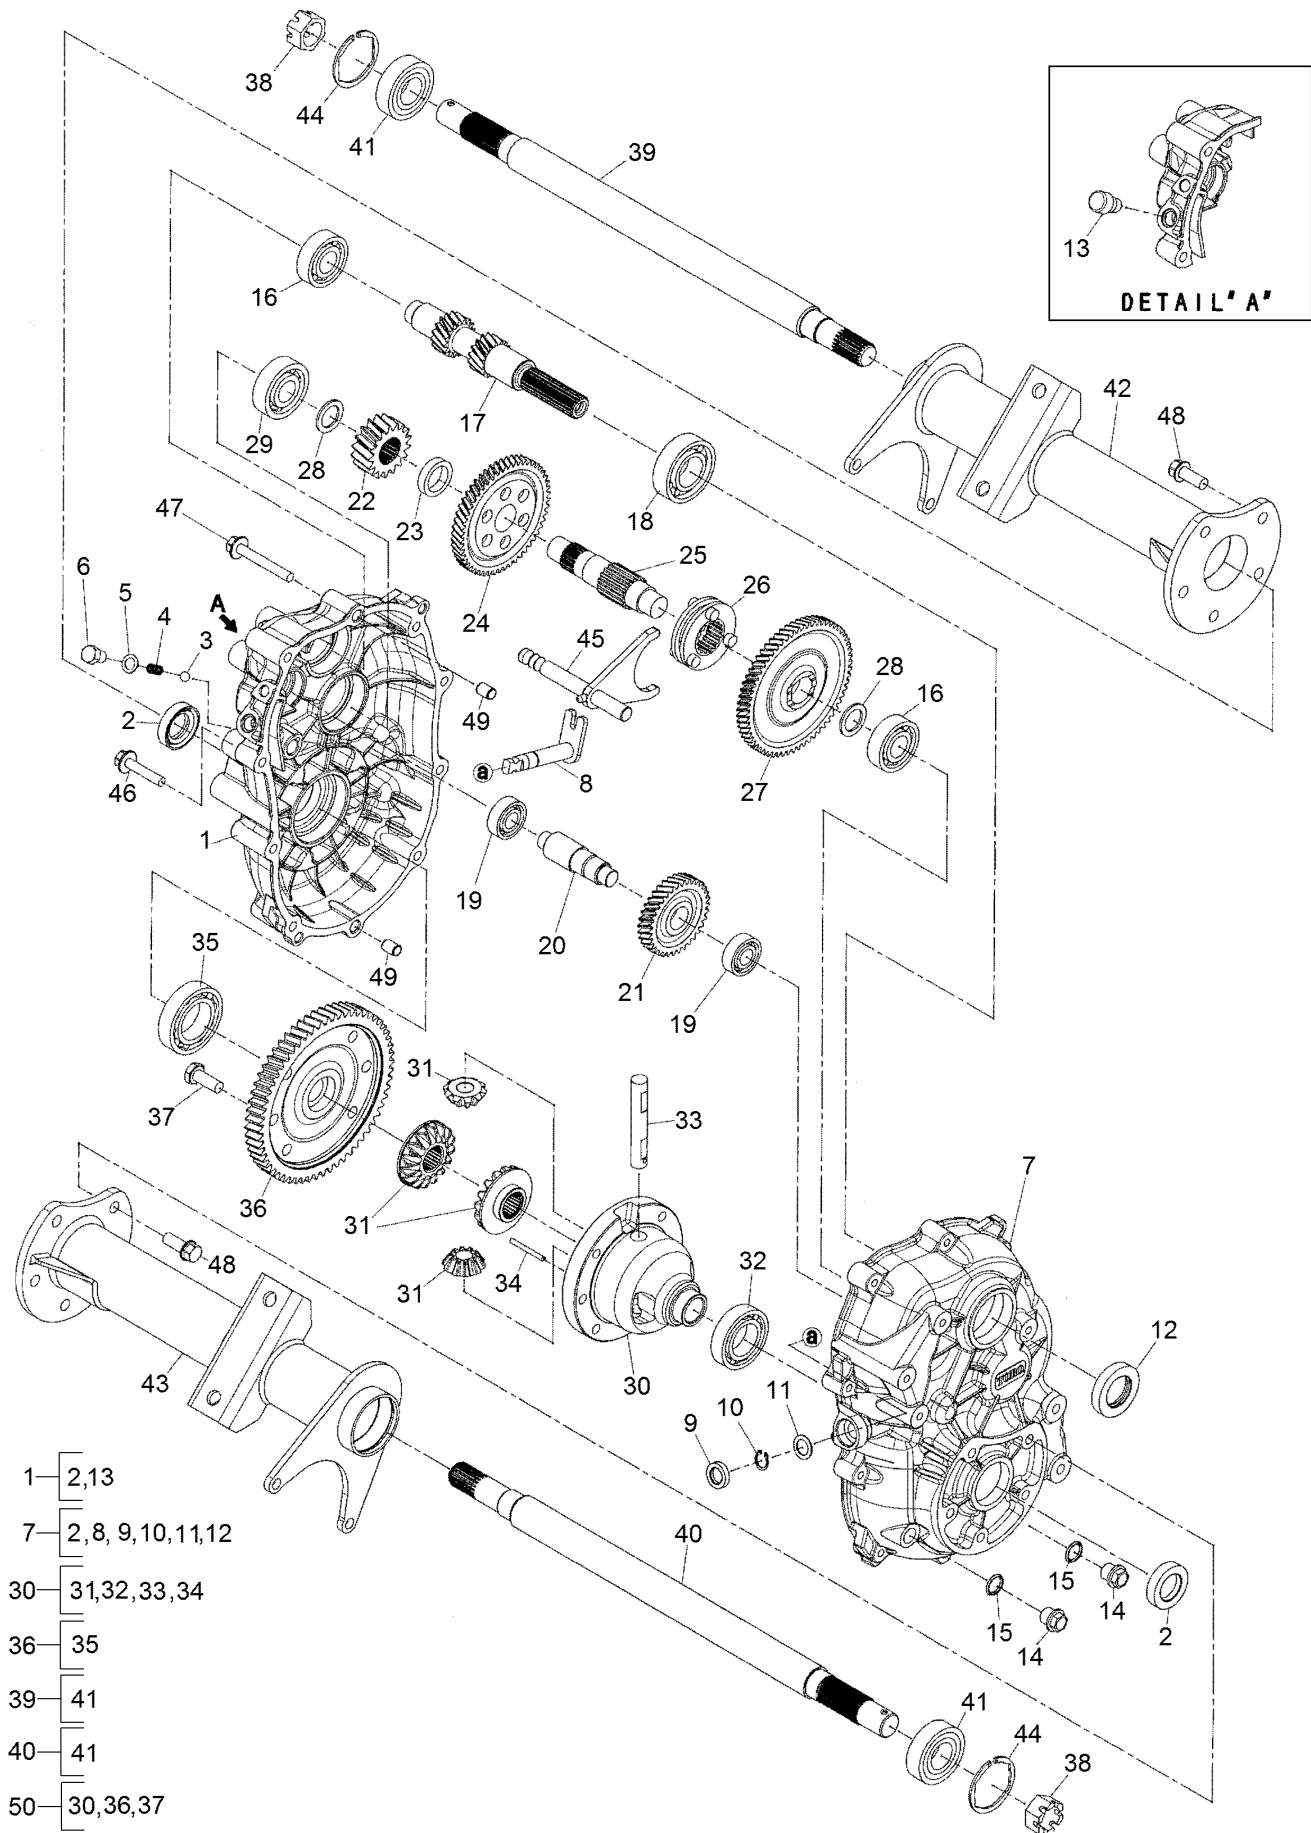

## Transaxle Assembly No. 131-3486 (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 133-2400           | 1           | Case-LH            | 26          | 133-2419           | 1           | Clutch-Pin             |
| 2           | 133-2401           | 2           | Seal-Oil           | 27          | 133-2420           | 1           | Gear                   |
| 3           | 104-1660           | 1           | Ball-Steel         | 28          | 133-2421           | 2           | Spacer                 |
| 4           | 104-1661           | 1           | Spring             | 29          | 133-2422           | 1           | Bearing-Ball           |
| 5           | 104-1662           | 1           | Gasket             | 30          | 133-2423           | 1           | Case-Differential      |
| 6           | 104-1663           | 1           | Bolt               | 31          | 133-2424           | 1           | Set-Gear, Differential |
| 7           | 133-2402           | 1           | Case-RH            | 32          | 133-2425           | 1           | Bearing-Ball           |
| 8           | 133-2403           | 1           | Shaft-Select       | 33          | 104-1644           | 1           | Shaft-Differential     |
| 9           | 133-2446           | 1           | Seal-Oil           | 34          | 104-1645           | 1           | Pin                    |
| 10          | 133-2404           | 1           | Ring-Snap          | 35          | 133-2426           | 1           | Bearing-Ball           |
| 11          | 133-2405           | 1           | Spacer             | 36          | 133-2427           | 1           | Gear                   |
| 12          | 104-1607           | 1           | Seal-Oil           | 37          | 104-1649           | 6           | Bolt                   |
| 13          | 133-2406           | 1           | Breather-Air       | 38          | 133-2428           | 2           | Nut-Castle             |
| 14          | 133-2407           | 2           | Plug-Drain, Oil    | 39          | 133-2429           | 1           | Shaft-Axle, LH         |
| 15          | 133-2408           | 2           | Gasket             | 40          | 133-2430           | 1           | Shaft-Axle, RH         |
| 16          | 133-2409           | 2           | Bearing-Ball       | 41          | 133-2431           | 2           | Bearing-Ball           |
| 17          | 133-2410           | 1           | Shaft-Input        | 42          | 133-2432           | 1           | Case-Axle, LH          |
| 18          | 133-2411           | 1           | Bearing-Ball       | 43          | 133-2433           | 1           | Case-Axle, RH          |
| 19          | 133-2412           | 2           | Bearing-Ball       | 44          | 133-2434           | 2           | Ring-Snap              |
| 20          | 133-2413           | 1           | Shaft-Counter      | 45          | 133-2435           | 1           | Shaft-Shift            |
| 21          | 133-2414           | 1           | Gear               | 46          | 133-2436           | 1           | Bolt-Flange            |
| 22          | 133-2415           | 1           | Gear               | 47          | 133-2437           | 9           | Bolt-Flange            |
| 23          | 133-2416           | 1           | Collar             | 48          | 133-2438           | 10          | Bolt-Flange            |
| 24          | 133-2417           | 1           | Gear               | 49          | 133-2439           | 2           | Pipe-Knock             |
| 25          | 133-2418           | 1           | Shaft-Center       | 50          | 133-2440           | 1           | Differential ASM       |

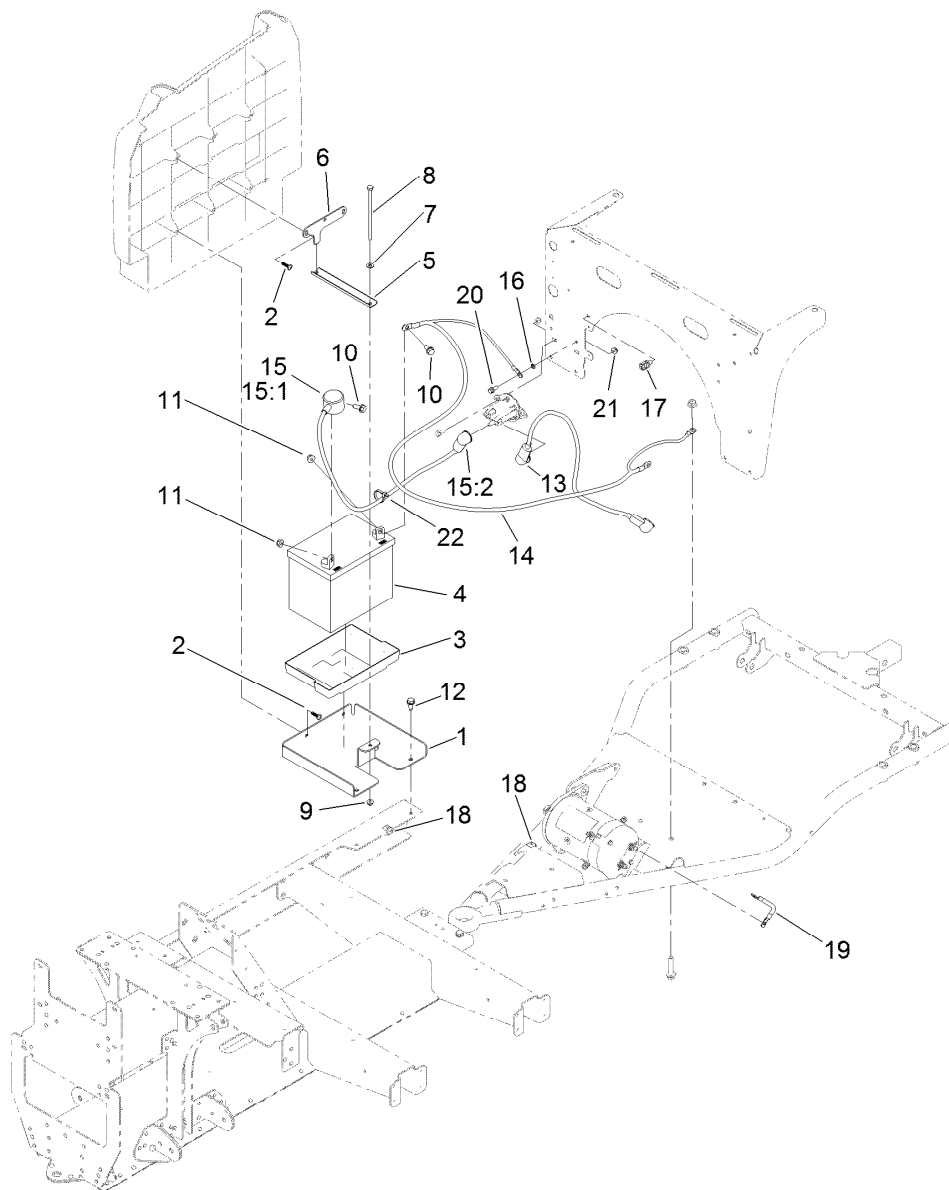

## Battery and Cable Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 127-7810-03        | 1           | Base-Battery            | 15          | 109-7621           | 1           | Positive Battery Cable ASM     |
| 2           | 120-2349           | 4           | Screw                   | 15:1        | 1-543393           | 1           | Insulator-Solenoid             |
| 3           | 106948             | 1           | Tray-Battery            | 15:2        | 109-2407           | 1           | Insulator-Battery              |
| 4           | 104-8162           | 1           | Battery                 | 16          | 3255-7             | 1           | Washer-Lock/EXT                |
| 5           | 127-7816-03        | 1           | Channel-Clamp, Battery  | 17          | 32180-030          | 1           | Clip-Tie                       |
| 6           | 127-7814-03        | 1           | Plate-Clamp, Battery    | 18          | 32180-082          | 3           | Clip-Edge W/Tie, Perpendicular |
| 7           | 3256-22            | 1           | Washer-Flat             | 19          | 122-1176           | 1           | Cable-Battery, Negative        |
| 8           | 321-47             | 1           | Screw-HH                | 20          | 3234-33            | 1           | Screw-HHF                      |
| 9           | 104-7201           | 1           | Nut-HF                  | 21          | 104-7201           | 1           | Nut-HF                         |
| 10          | 3234-5             | 2           | Screw-HHF               | 22          | 3290-378           | 1           | Tie-Cable                      |
| 11          | 104-8300           | 2           | Nut-HF, NI              | 99          | 107-0392           | 1           | Protection-Terminal, Aerosol   |
| 12          | 32144-70           | 2           | Screw-HWHTF             |             |                    |             | ●                              |
| 13          | 122-0639           | 1           | Cable-Battery, Positive |             |                    |             |                                |
| 14          | 122-0638           | 1           | Cable-Battery, Negative |             |                    |             |                                |

● Not illustrated

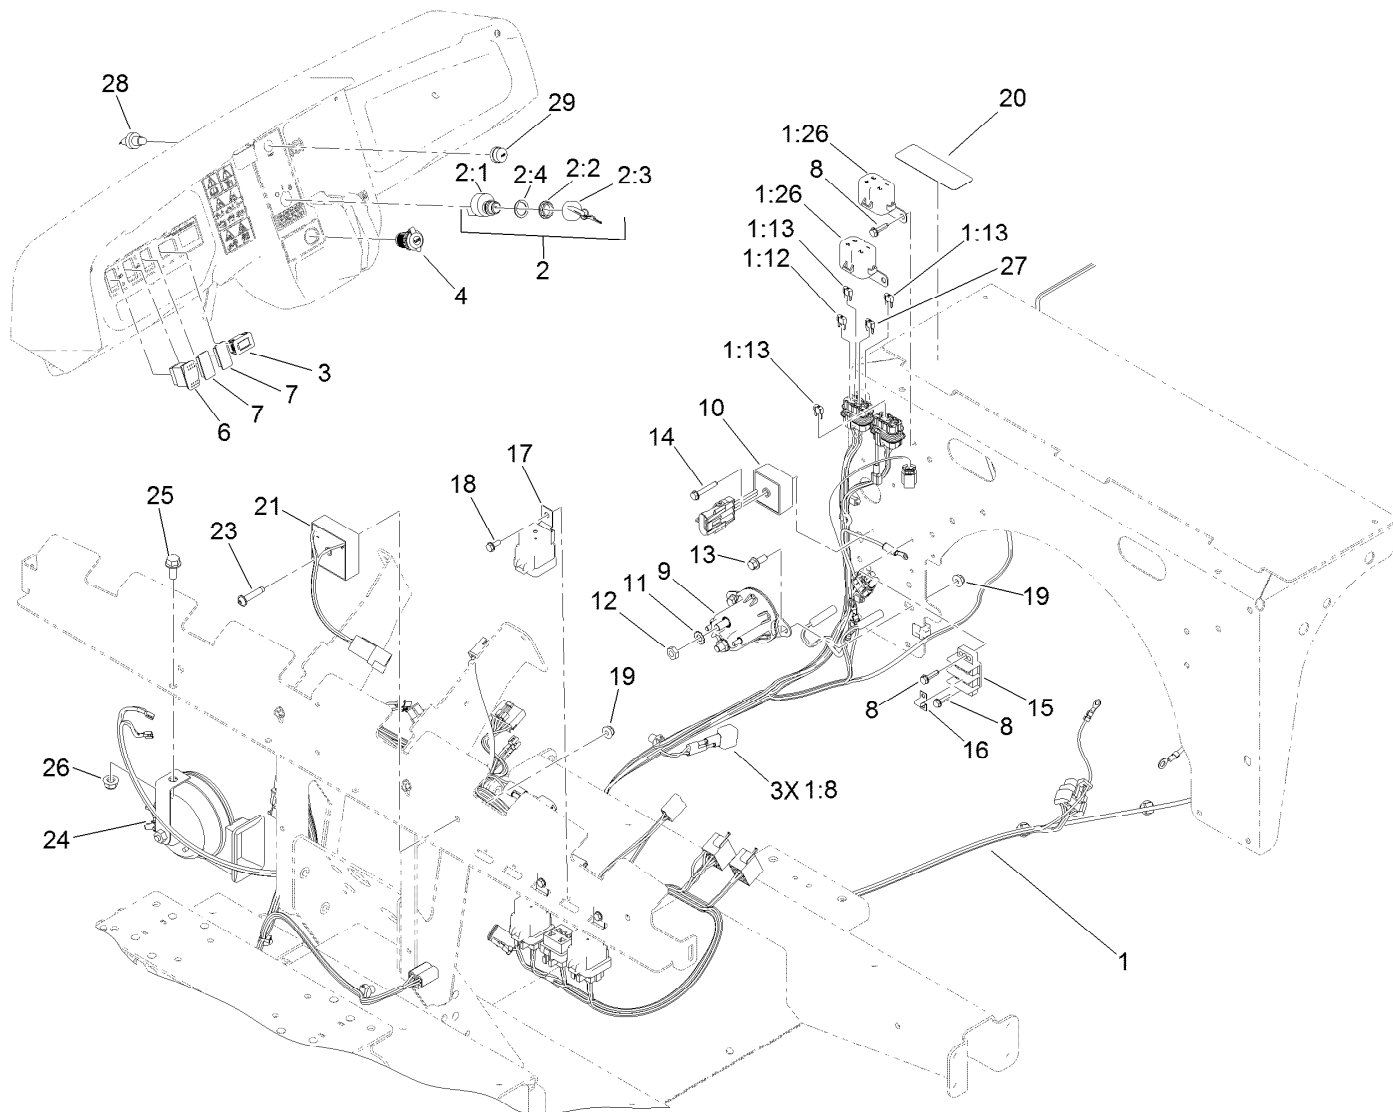


## Electrical Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 122-1473    | 1    | Harness-Wire, Main      |
| 1:8  | 100-4918    | 3    | Diode                   |
| 1:12 | 121-8867    | 1    | Fuse-Mini Blade, 15 Amp |
| 1:13 | 121-8866    | 3    | Fuse-Mini Blade, 10 Amp |
| 1:14 | 32160-093   | 1    | Connector-Mp280, 2M ●   |
| 1:23 | 32180-056   | 1    | Cap ●                   |
| 1:24 | 32180-156   | 1    | Cap-Plug, 6 Way ●       |
| 1:26 | 32180-179   | 2    | Cover-Bussman           |
| 2    | 122-1145    | 1    | Ignition Switch ASM     |
| 2:1  |             | 1    | Switch-Ignition ■       |
| 2:2  | 108-8660    | 1    | Nut-Mounting            |
| 2:3  | 106-5270    | 1    | Ignition Key Set        |
| 2:4  | 108-8659    | 1    | Washer-Backup           |
| 3    | 120-2244    | 1    | Hourmeter               |
| 4    | 131-8388    | 1    | Socket-USB              |
| 6    | 95-8999     | 1    | Switch                  |
| 7    | 99-7420     | 2    | Plug-Hole               |
| 8    | 100-4351    | 5    | Screw-HWH               |

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 9    | 114-3315    | 1    | Solenoid                    |
| 10   | 119-9492    | 1    | Regulator-Voltage           |
| 11   | 3255-8      | 2    | Washer-Lock                 |
| 12   | 3220-2      | 2    | Nut-Jam                     |
| 13   | 3234-33     | 2    | Screw-HHF                   |
| 14   | 100-4352    | 1    | Screw-HWH                   |
| 15   | 42862       | 1    | Block-Terminal, Ground      |
| 16   | 42863       | 1    | Strip-Jumper                |
| 17   | 99-7430     | 3    | Relay-Mini                  |
| 18   | 32144-1     | 3    | Screw-Taptite               |
| 19   | 104-7201    | 4    | Nut-HF                      |
| 20   | 139-3340    | 1    | Decal-Fuse Block, EFI       |
| 21   | 138-0085    | 1    | Timer-Delay, 30 Sec (1 Amp) |
| 23   | 132-6777    | 1    | Screw-TTH                   |
| 24   | 110-2594    | 1    | Horn                        |
| 25   | 3234-5      | 1    | Screw-HHF                   |
| 26   | 104-8300    | 1    | Nut-HF, NI                  |

● Not illustrated

■ Not serviced separately

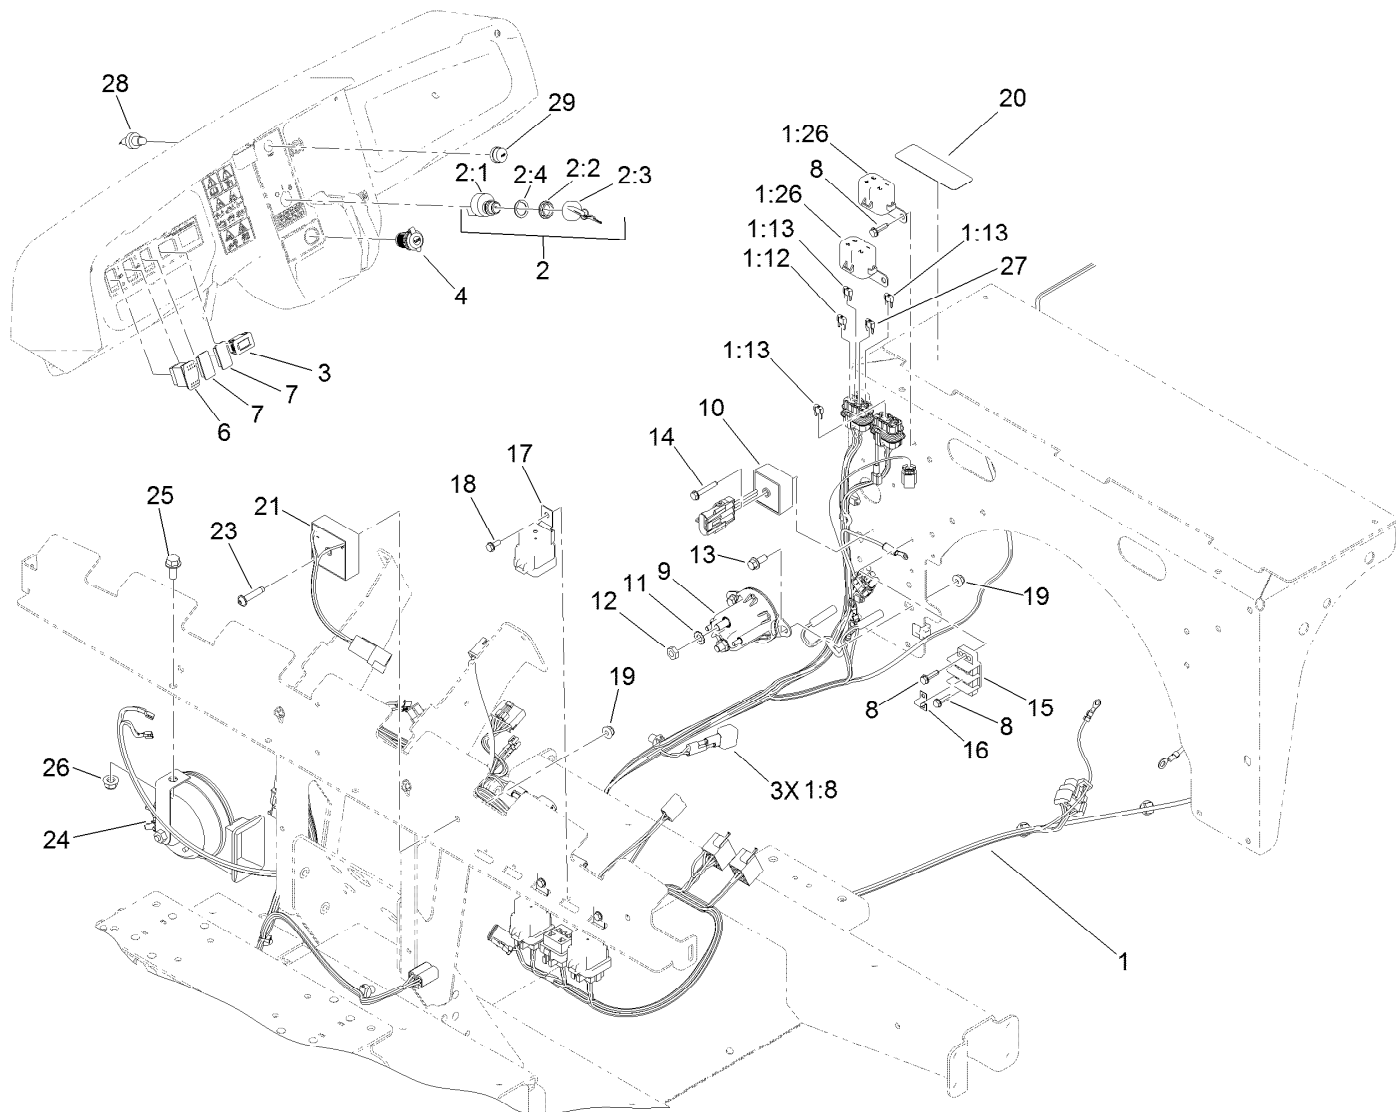


## Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 27   | 121-8870    | 1    | Fuse-Mini Blade, 30 Amp |

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 28   | 112-3324    | 1    | Switch-Horn      |
| 29   | 112-3313    | 1    | Nut-Weatherproof |

● Not illustrated


■ Not serviced separately

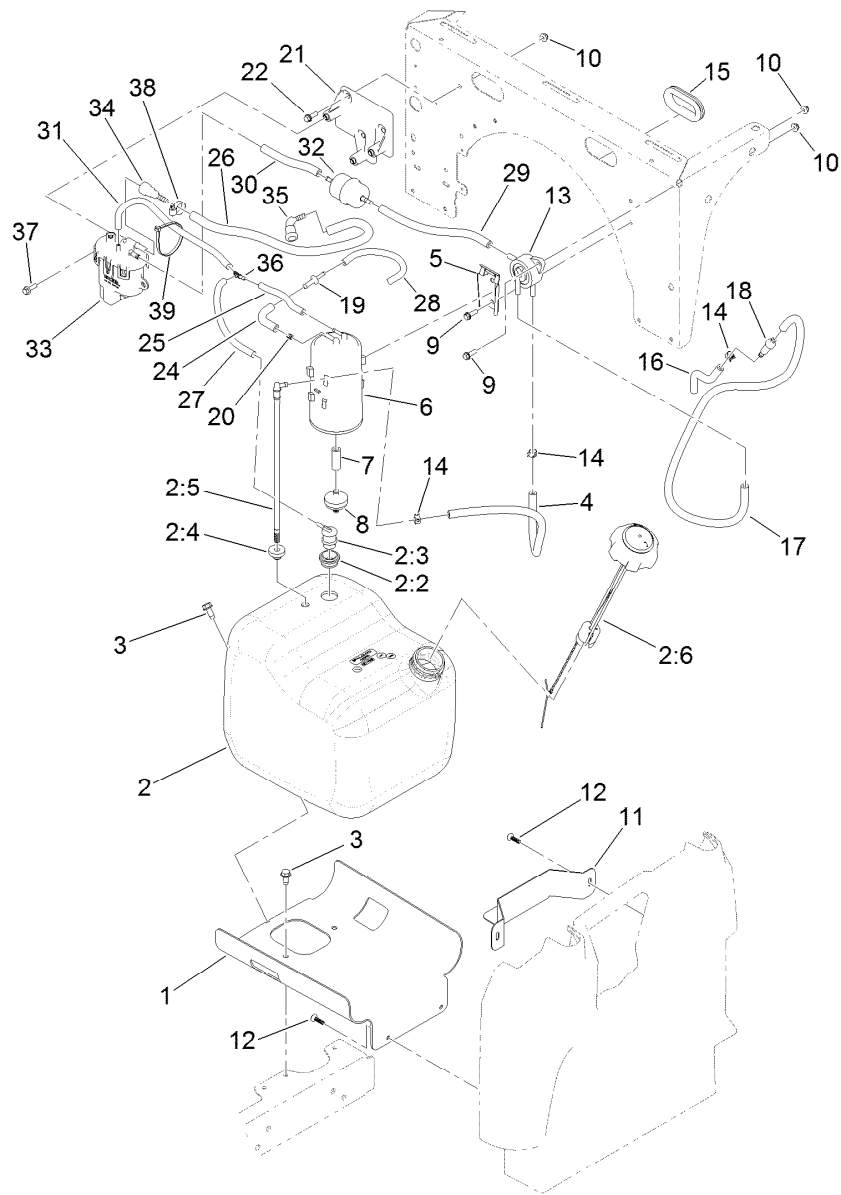

## Fuel System Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 127-7739-03 | 1    | Mount-Tank, Fuel         |
| 2    | 127-7849    | 1    | Fuel Tank ASM            |
| 2:2  | 114-0284    | 1    | Grommet                  |
| 2:3  | 114-0285    | 1    | Valve-Rollover           |
| 2:4  | 46-6560     | 1    | Bushing                  |
| 2:5  | 115-9044    | 1    | Pipe-Stand               |
| 2:6  | 131-8357    | 1    | Cap-Gauge                |
| 3    | 32144-70    | 3    | Screw-HWHTF              |
| 4    | 114-4428    | 1    | Hose-Fuel                |
| 5    | 114-0292    | 1    | Bracket-Canister, Carbon |
| 6    | 127-8685    | 1    | Canister-Carbon          |
| 7    | 106-5317    | 1    | Hose-Fuel                |
| 8    | 115-7854    | 1    | Filter-Fuel, Inline      |
| 9    | 32105-15    | 4    | Screw-HWH                |
| 10   | 104-7201    | 7    | Nut-HF                   |
| 11   | 127-7845-03 | 1    | Bracket-Tank, Fuel       |
| 12   | 120-2349    | 4    | Screw                    |
| 13   | 131-8526    | 1    | Pump-Fuel                |
| 14   | 2412-98     | 8    | Clamp-Hose               |
| 15   | 240-12      | 1    | Grommet                  |
| 16   | 109-0300    | 1    | Hose-Fuel                |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 17   | 110-3254    | 1    | Hose-Fuel               |
| 18   | 138-5553    | 1    | Filter-Fuel, 250 Micron |
| 19   | 117-5399    | 1    | Adaptor-Orifice         |
| 20   | 120-2038    | 1    | Cartridge-Valve, Check  |
| 21   | 136-6346    | 1    | Bracket-Pump, Fuel      |
| 22   | 115-5103    | 3    | Screw-HHF               |
| 24   | 114-3765    | 1    | Hose-Fuel               |
| 25   | 68-3632     | 1    | Hose-Fuel               |
| 26   | 136-6343    | 1    | Hose-Fuel               |
| 27   | 136-6345    | 1    | Hose-Fuel               |
| 28   | 115-7871    | 1    | Hose-Fuel               |
| 29   | 109-0282    | 1    | Hose-Fuel               |
| 30   | 109-0650    | 1    | Hose-Fuel               |
| 31   | 136-6344    | 1    | Hose-Fuel               |
| 32   | 94-9695     | 1    | Filter-Fuel             |
| 33   | 136-6347    | 1    | Pump-Fuel, EFI          |
| 34   | 125-2921    | 1    | Fitting-Fuel            |
| 35   | 121-5585    | 1    | Fitting-Fuel            |
| 36   | 136-6339    | 1    | Fitting-Fuel            |
| 37   | 33103-020   | 3    | Screw-HHF               |

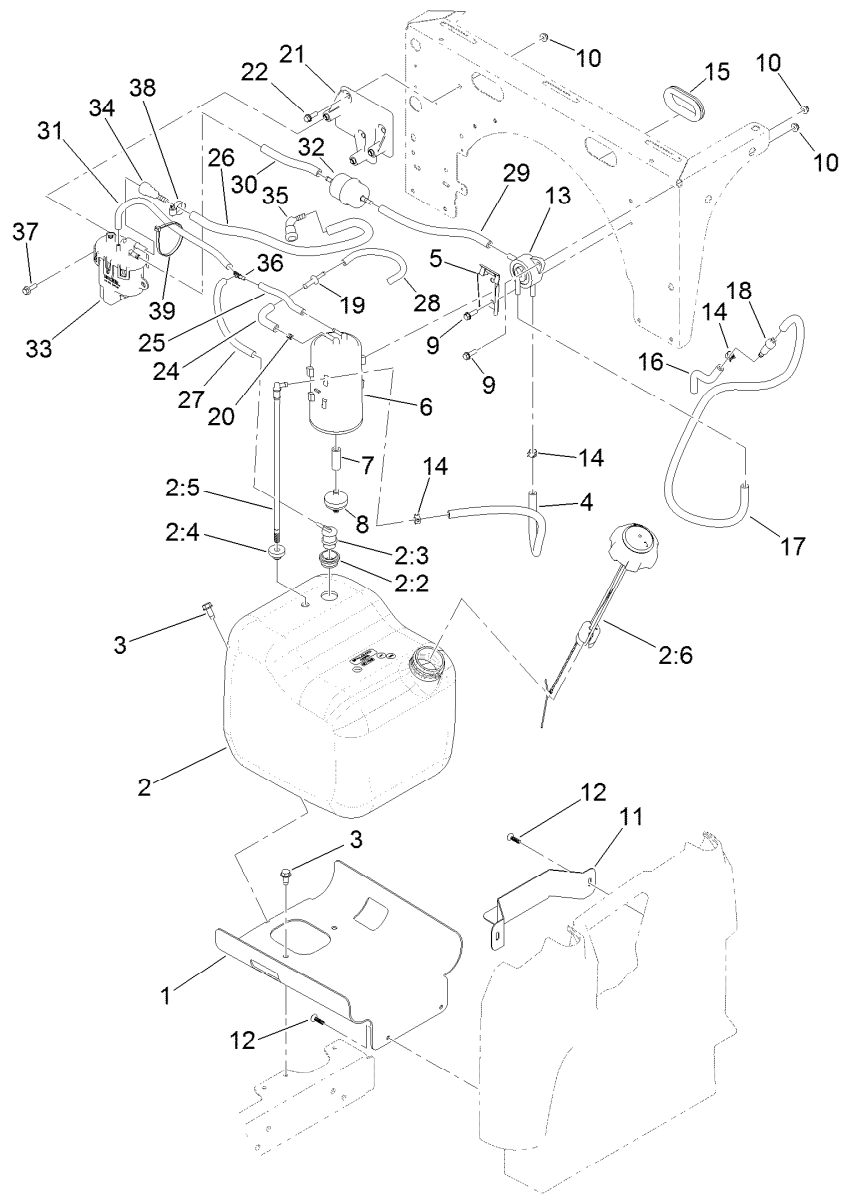

## Fuel System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 38   | 2412-36     | 2    | Clamp-Hose  |
| 39   | 3290-378    | 1    | Tie-Cable   |

**Notes:**



**Count on it.**