

# Parts Catalog

## 46in Spreader/Sprayer

Model No. 34224—Serial No. 40000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly .....	4
Engine Assembly .....	6
Hydraulic Assembly .....	8
Park Brake Assembly .....	10
Electrical Assembly .....	12
Motion Control Assembly .....	14
Tire and Wheel Assembly .....	16
Fuel Assembly .....	18
Spray System Assembly .....	20
Hose Reel Tank Assembly .....	22
Manifold Assembly .....	24
Boom Assembly .....	26
Liquid Valve Assembly .....	28
Hopper Assembly .....	30


# Main Frame Assembly

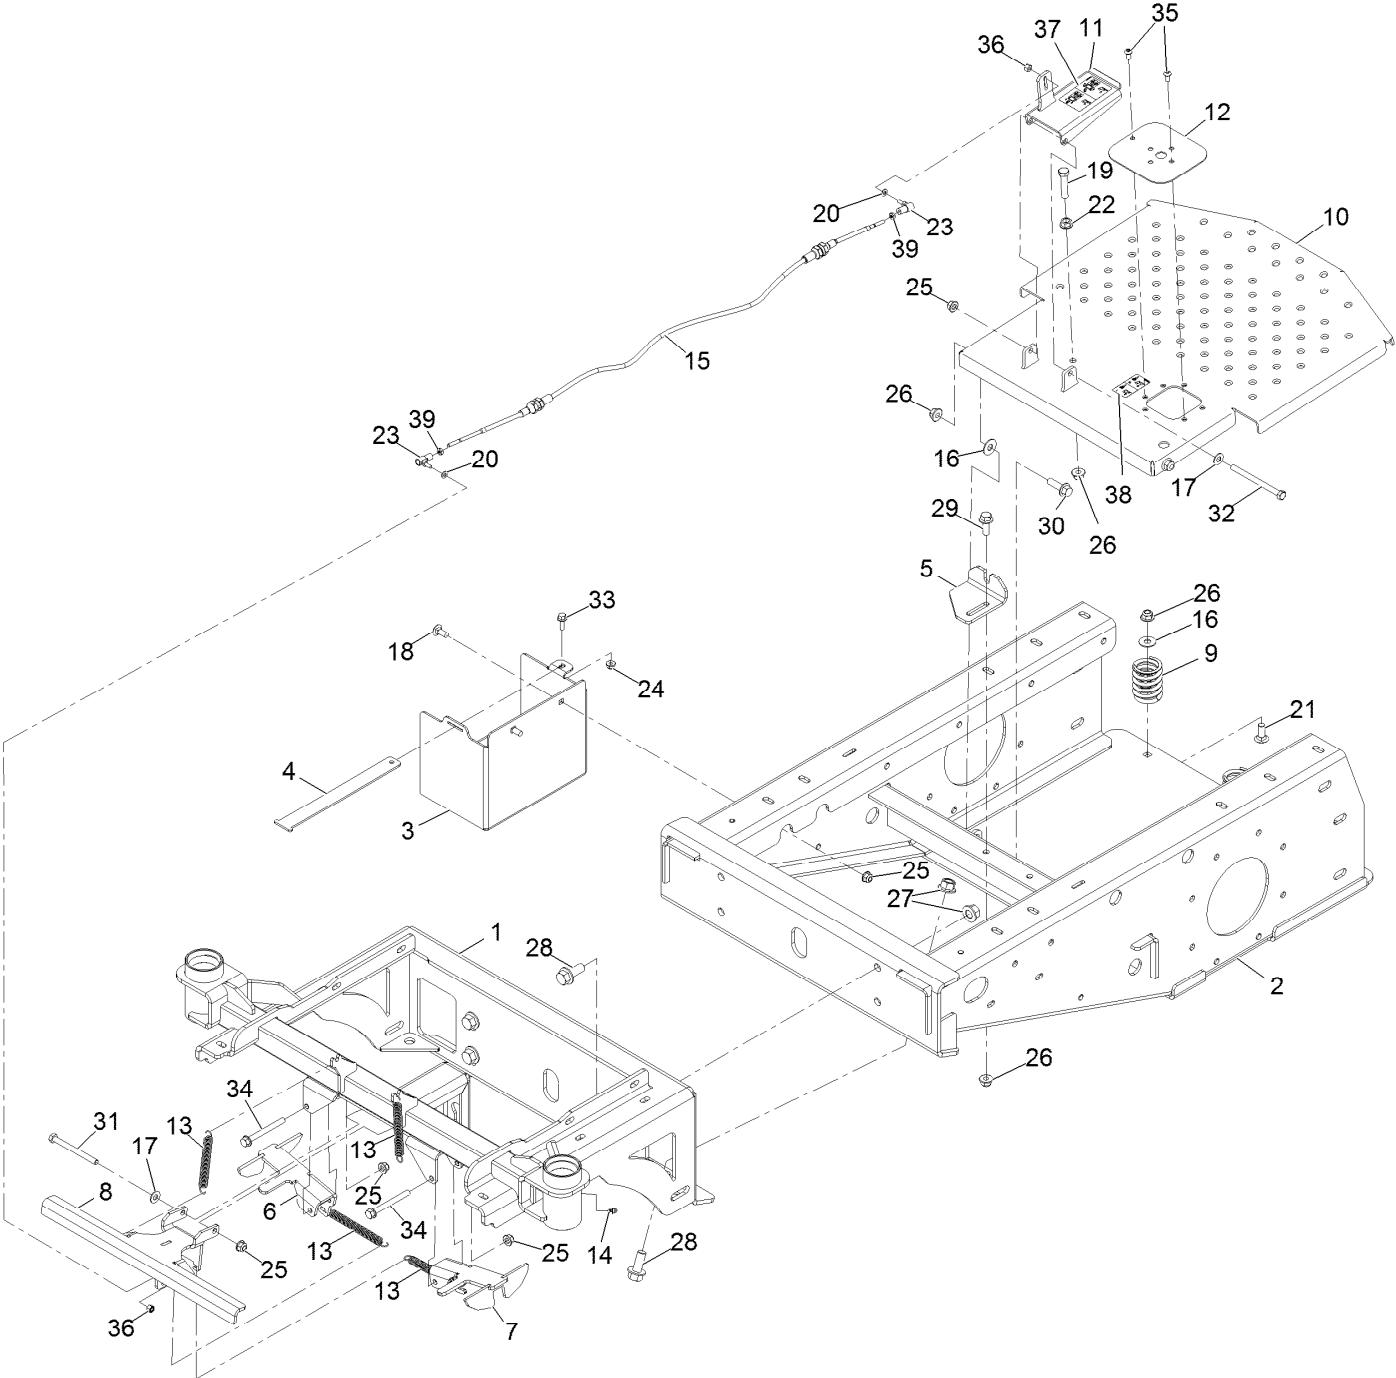

## Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5179	1	Frame-Front	21	126-0980	3	Screw-CARR
2	135-5171	1	Frame-Rear	22	135-6806	1	Nut-Hex Flange
3	135-5199	1	Box-Battery	23	135-5682	2	Ball Joint-SS
4	135-5493	1	Strap-Battery	24	135-6108	1	Nut-Hex Flange
5	135-5494	1	Bracket-Cable, Lower	25	135-6109	6	Nut-Hex Flange
6	135-5195	1	Wing-Capture, Rt	26	135-6110	7	Nut-Hex Flange
7	135-5194	1	Wing-Capture, Lt	27	135-6111	6	Nut-Hex Flange
8	135-5369	1	Capture-Lcs	28	135-6207	6	Screw-HHF
9	135-5654	3	Spring-Compression	29	135-6208	1	Screw-HHF
10	135-7502	1	Plate-Foot	30	135-6211	2	Screw-HHF
11	135-5191	1	Pedal-Foot	31	135-6217	1	Screw-HH
12	135-5561	1	Panel-Switch, Foot	32	135-6218	1	Screw-HH
13	135-5652	4	Spring-Extension	33	135-6221	1	Screw-HHF
14	302-63	2	Fitting-Grease, Zerk	34	135-6222	2	Screw-HHF
15	135-5644	1	Cable-Caster, Locking	35	135-6367	2	Screw-HSBH
16	1126	5	Washer-Flat	36	HDW05856	2	Nut-NYL Lock,#10-32,ST/ST 18-8
17	107-0279	2	Washer	37	135-6430	1	Decal-Lock, Caster
18	126-0695	2	Screw-CARR	38	135-6728	1	Decal-Button, Foot (Spray)
19	126-0710	1	Screw-HH	39	520-0019	2	Nut-Hex, Jam
20	126-0759	2	Washer-Flat				


# Engine Assembly

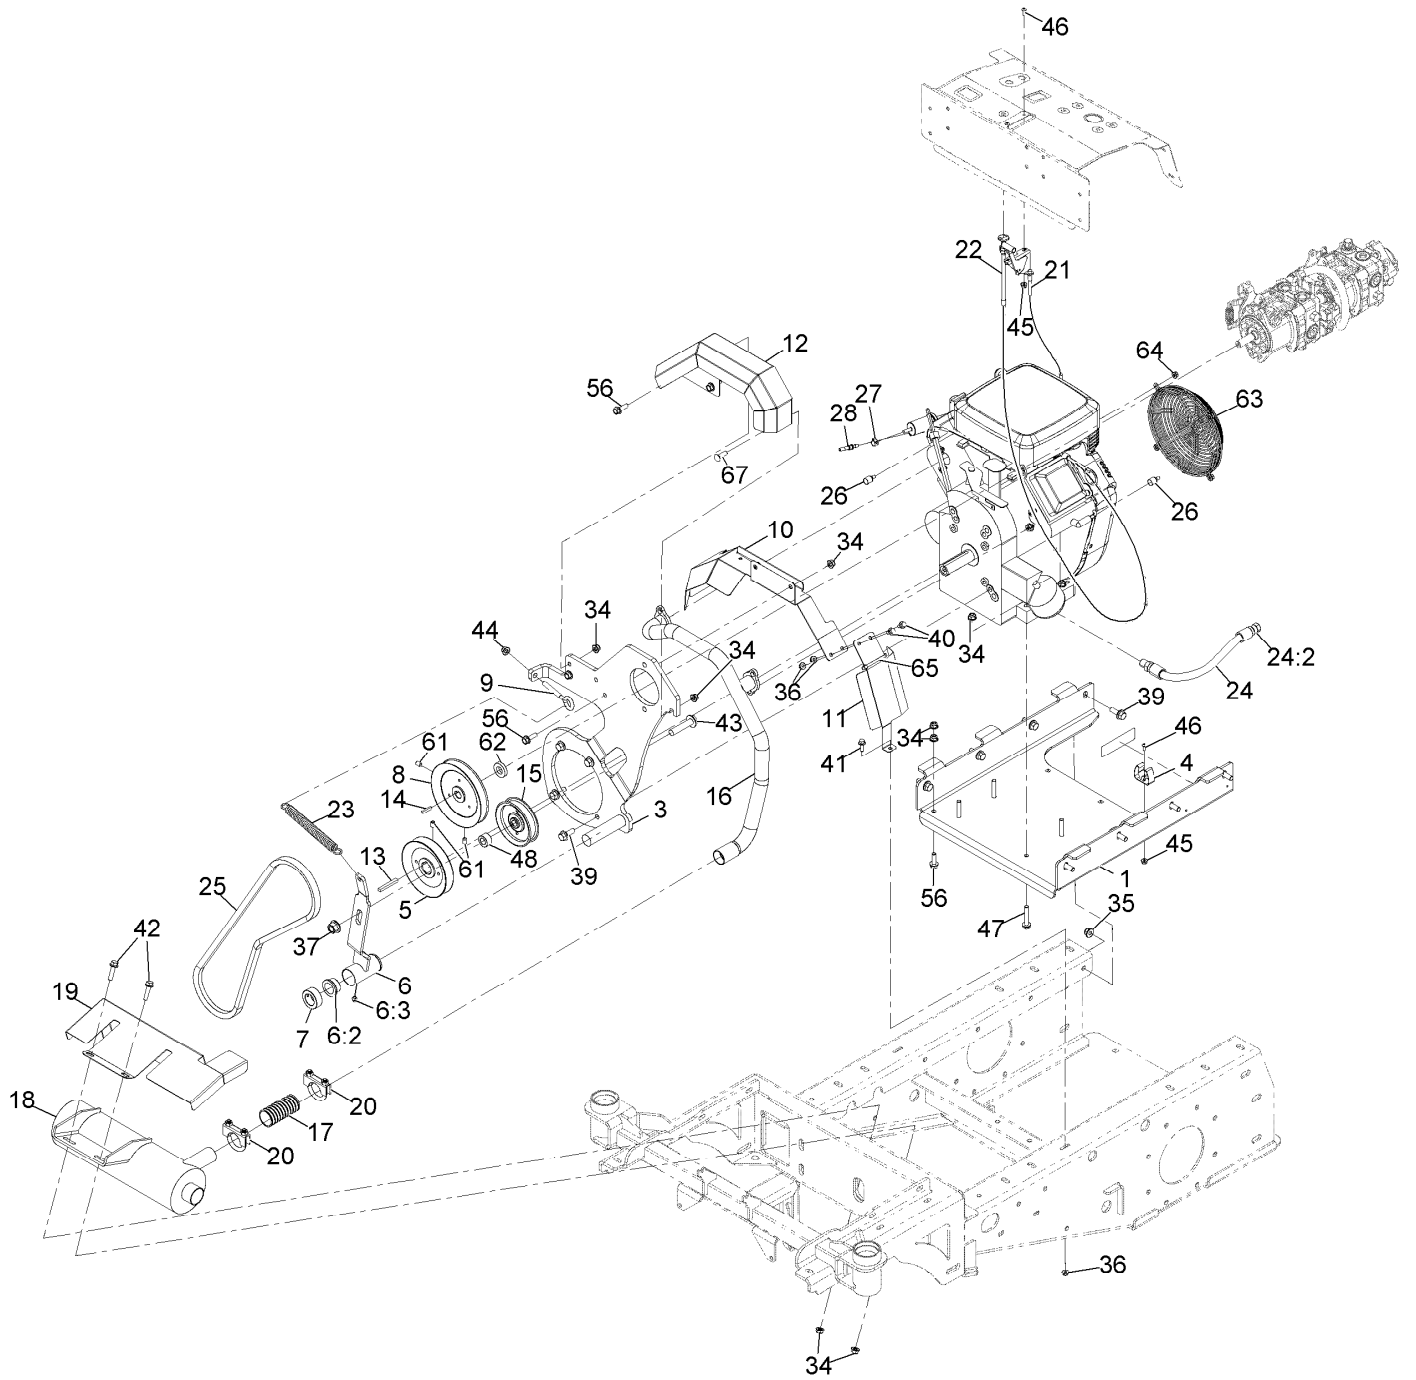

## Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5492	1	Tray-Engine	25	135-5664	1	Belt-V
3	135-5453-03	1	Bracket-Engine, Pump	26	135-5677	2	Tube-Shrink, Heat
4	135-5661	1	Holder-Tool, Clip	27	2412-98	1	Clamp-Hose
5	135-5657	1	Pulley-Drive	28	135-5678	1	Barb-Fuel
6	135-5669	1	Tension Arm ASM	34	135-6109	13	Nut-Hex Flange
6:2	256-132	2	Bushing-Flange	35	135-6110	8	Nut-Hex Flange
6:3	302-63	1	Fitting-Grease, Zerk	36	135-6108	3	Nut-Hex Flange
7	135-5382	1	Collar	37	99-5107	1	Nut-Lock
8	135-5663	1	Pulley-Drive, Pump	39	135-6208	12	Screw-HHF
9	135-5667	1	Bolt-Eye	40	135-6280	2	Screw-HHF
10	135-5565	1	Guard-Muffler, Lower	41	135-6221	1	Screw-HHF
11	135-5566	1	Guard-Muffler, Lower	42	135-6261	2	Screw-HHF
12	135-5552	1	Guard-Pulley	43	3234-46	1	Screw-HHF
13	103-4177	1	Key	44	104-8300	1	Nut-HF, NI
14	1-807272	1	Key	45	135-6342	3	Nut-Hex Flange
15	135-5662	1	Pulley-Idler, Flat	46	135-6374	3	Screw-HSBH
16	135-5670	1	Manifold-Exhaust	47	135-5779	4	Screw-HHF
17	135-5658	1	Tube-Exhaust, Flex	48	116-2959	1	Spacer
18	135-5685	1	Muffler	56	135-6272	5	Screw-HHF
19	135-5568	1	Shield-Heat, Muffler	61	3246-17	3	Setscrew-HSH
20	2112-11	2	Clamp-Muffler	62	1-323539	1	Spacer
21	135-5260	1	Cable-Throttle	63	135-6554	1	Guard-Wire, Vanguard
22	135-5707	1	Cable-Choke	64	33003-00	4	Nut-HF
23	135-5780	1	Spring-Extension	65	3290-378	1	Tie-Cable
24	135-5365	1	Oil Drain Hose ASM (W/Plug)	67	HDW17294	1	Bolt,Carriage,5/16-18X1,ST/ST 18-8
24:2	AU218-774	1	Plug				

# Hydraulic Assembly

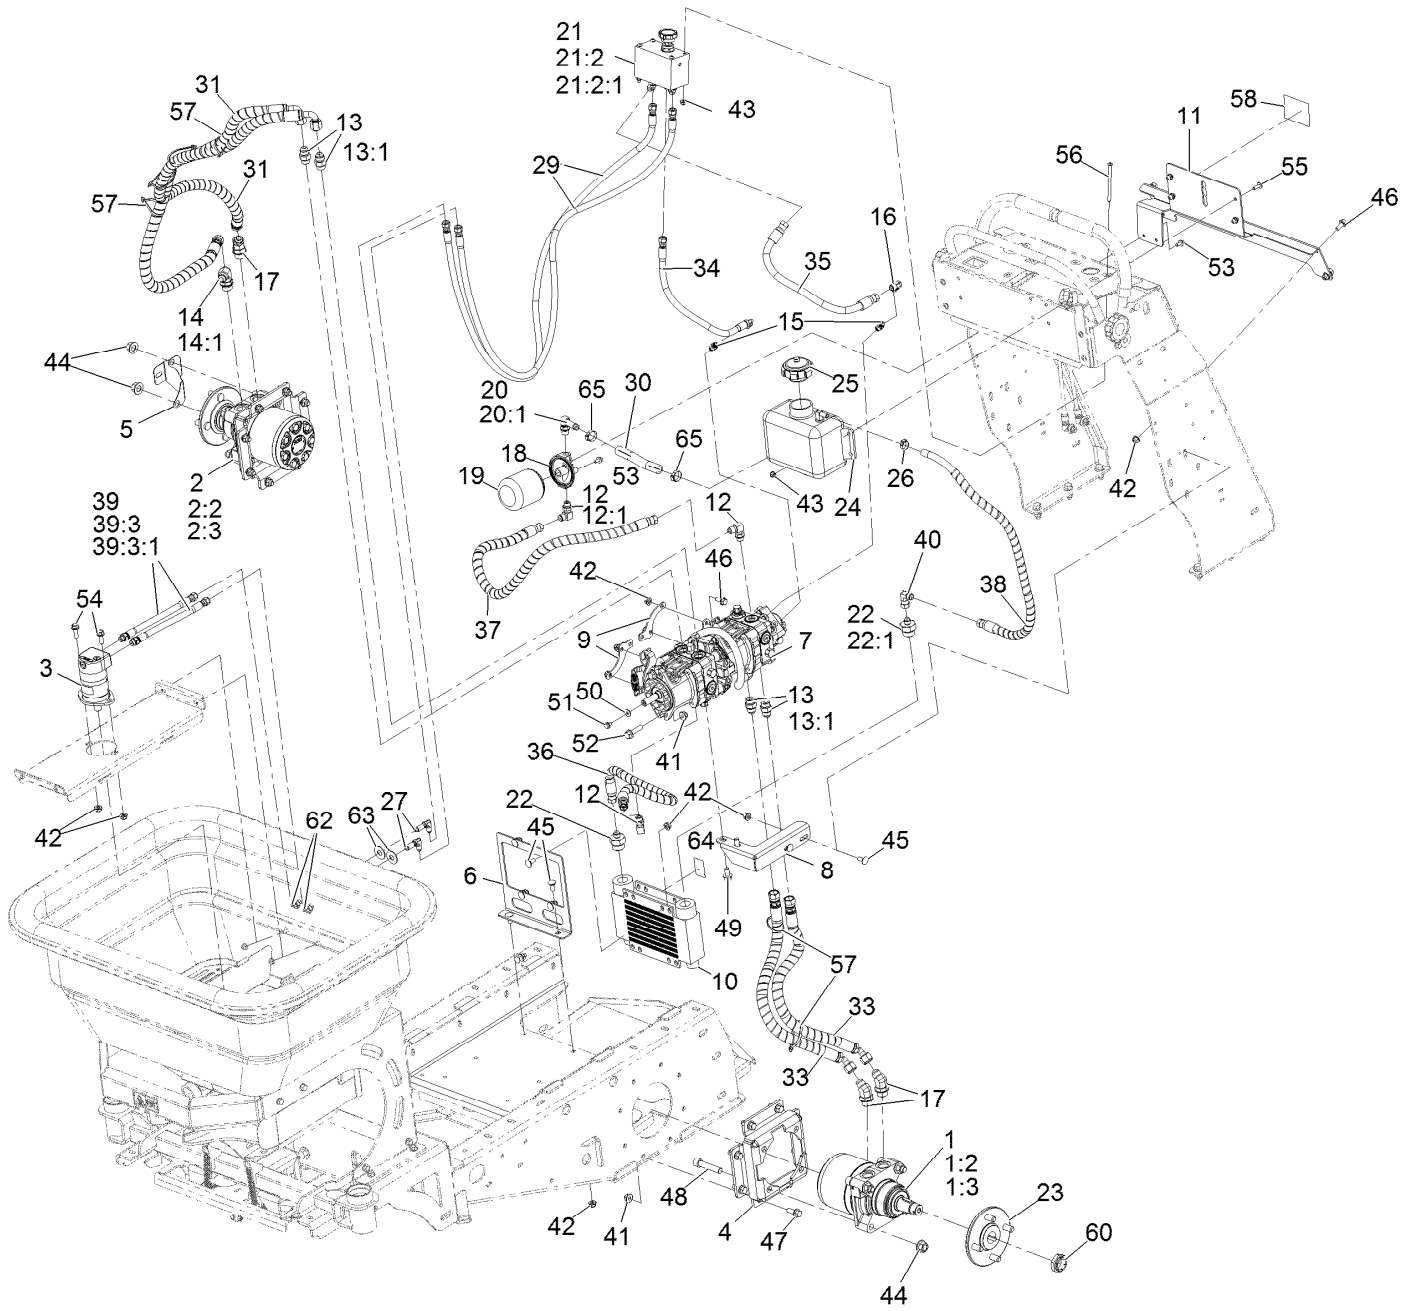


## Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5230	1	Motor-Wheel, LH	26	135-5757	1	Clamp-Oetiker, 167
1:2	3257-42	1	Key-Woodruff 5/16 X 1	27	135-5796	2	Fitting-Elbow, 90
1:3	103-6994	1	Seal Kit	29	135-5357	2	Hose ASM, HYD HP
2	135-5231	1	Motor-Wheel, RH	30	109-5577	1	Hose-Hydraulic
2:2	3257-42	1	Key-Woodruff 5/16 X 1	31	135-5458	2	Hose ASM, HYD HP
2:3	103-6994	1	Seal Kit	33	135-5464	2	Hose ASM, HYD HP
3	135-5243	1	Motor-Hydraulic, Spreader	34	135-5360	1	Hose ASM, HYD HP
4	135-5524	2	Mount-Motor, Wheel	35	135-5361	1	Hose ASM, HYD LP
5	135-5574	1	Bracket-Hopper, Speedometer Sensor	36	135-5384	1	Hose ASM, HYD LP
6	135-6483	1	Mount-Cooler	37	135-5385	1	Hose ASM, HYD LP
7	135-5665	1	Pump-Tandem	38	135-5456	1	Hose ASM, HYD LP
8	135-5551	1	Bracket-Support, Hydro Pump	39	135-5359	2	Hose ASM, HYD HP
9	135-5558	2	Extension-Pump, Hydro	39:3		1	Fitting-Straight, Rigid ●
10	135-5679	1	Cooler-Oil	39:3:1	237-42	1	O-Ring
11	135-5550	1	Mount-Tank And Filter, Hydraulic	40	AU218-980	1	Fitting-Swivel, 90 DEG
12	103-1802	3	Fitting-Elbow, 90 DEG	41	135-6110	18	Nut-Hex Flange
12:1	237-42	1	O-Ring	42	135-6109	18	Nut-Hex Flange
13	353-388	4	Fitting-Straight	43	135-6108	8	Nut-Hex Flange
13:1	237-79	1	O-Ring	44	99-5107	8	Nut-Lock 1/2-13
14	353-426	1	Fitting-90 DEG	45	126-0695	8	Screw-CARR
14:1	237-80	1	O-Ring	46	126-2712	8	Screw-HHF 5/16-18 X 3/4 SS
15	353-545	2	Fitting-Straight	47	135-6208	16	Screw-HHF
16	135-5680	1	Fitting-Swivel, 90 DEG	48	3274-71	8	Screw-HSH
17	135-5696	3	Fitting-Elbow, 45 DEG	49	135-6274	2	Screw-HHF
18	104-7836	1	Filter-Head	50	135-6273	1	Washer
19	135-5695	1	Filter-Hydraulic	51	81-1280	1	Screw-HHF
20	109-6449	1	Fitting-Elbow, 90	52	135-6278	2	Screw-HHF
20:1	237-42	1	O-Ring	53	135-6280	2	Screw-HHF
21	135-5256	1	Manifold-Hopper, W/Out Relief	54	135-6272	2	Screw-HHF
21:2	353-212	1	Fitting-Elbow, 45 DEG	55	135-7080	4	Screw-Hsbhf
21:2:1	237-42	1	O-Ring	56	135-6385	4	Screw-HSBH
22	AU218-5044	2	Adapter-Straight	57	3290-378	6	Tie-Cable
22:1	237-81	1	O-Ring	58	135-6398	1	Decal-Oil
23	135-5684	2	Hub-Wheel	60	116-1399	2	Locknut
24	135-5712	1	Tank-Hydraulic, Plastic	62	3220-4	2	Nut-Jam
25	135-5713	1	Cap-Vented	63	135-5586	2	Washer
				64	106-5517	1	Decal-Warning
				65	135-5692	2	Clamp-Oetiker, 167

● Not serviced separately


# Park Brake Assembly

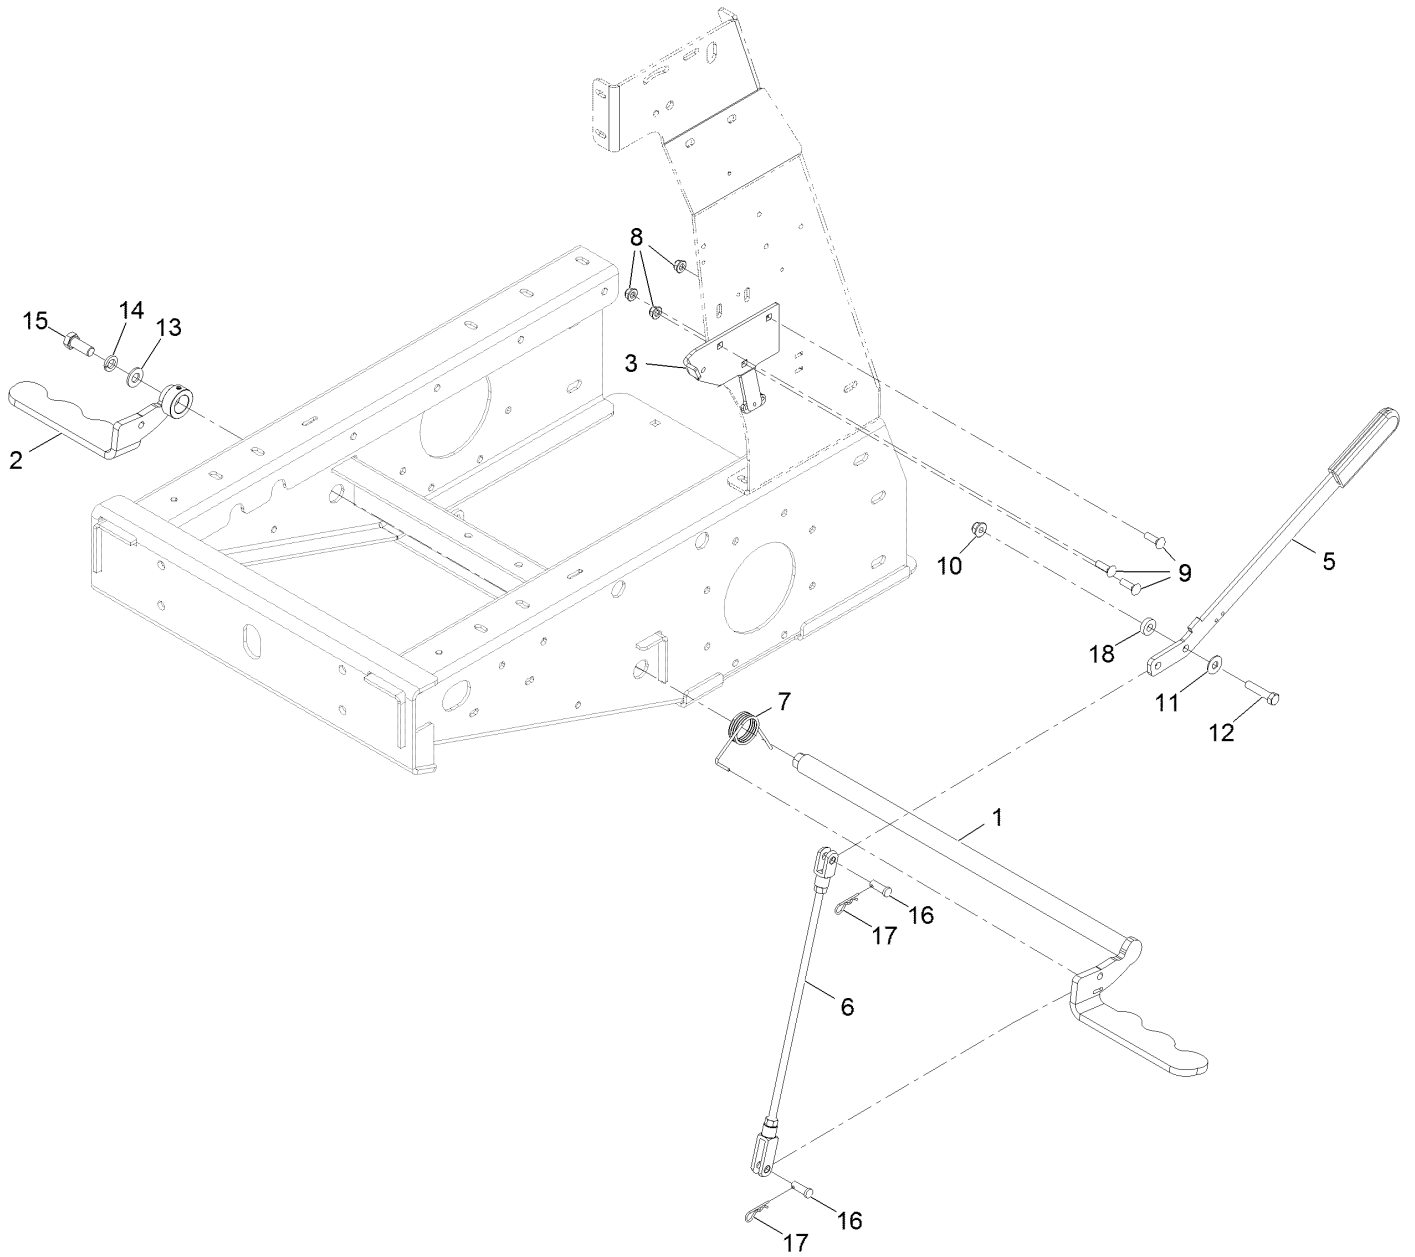

## Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5526-03	1	Arm-Brake, Lt [black]	10	104-8301	1	Nut-HF, NI
2	135-5529-03	1	Arm-Brake, Rt [black]	11	1126	1	Washer-Flat
3	135-7225	1	Bracket-Handle, Brake	12	323-52	1	Screw-HH
5	135-6058	1	Handle-Brake	13	3256-26	1	Washer-Flat
6	135-6066	1	Brake Rod ASM	14	3253-7	1	Washer-Lock
7	135-6106	1	Spring-Torsion	15	106-0378	1	Screw
8	135-6109	3	Nut-Hex Flange	16	1-808284	2	Pin-Clevis
9	HDW17294	3	Bolt, Carriage, 5/16-18X1, ST/ST 18-8	17	135-6284	2	Pin-Hair
				18	5-0652	1	Spacer

# Electrical Assembly

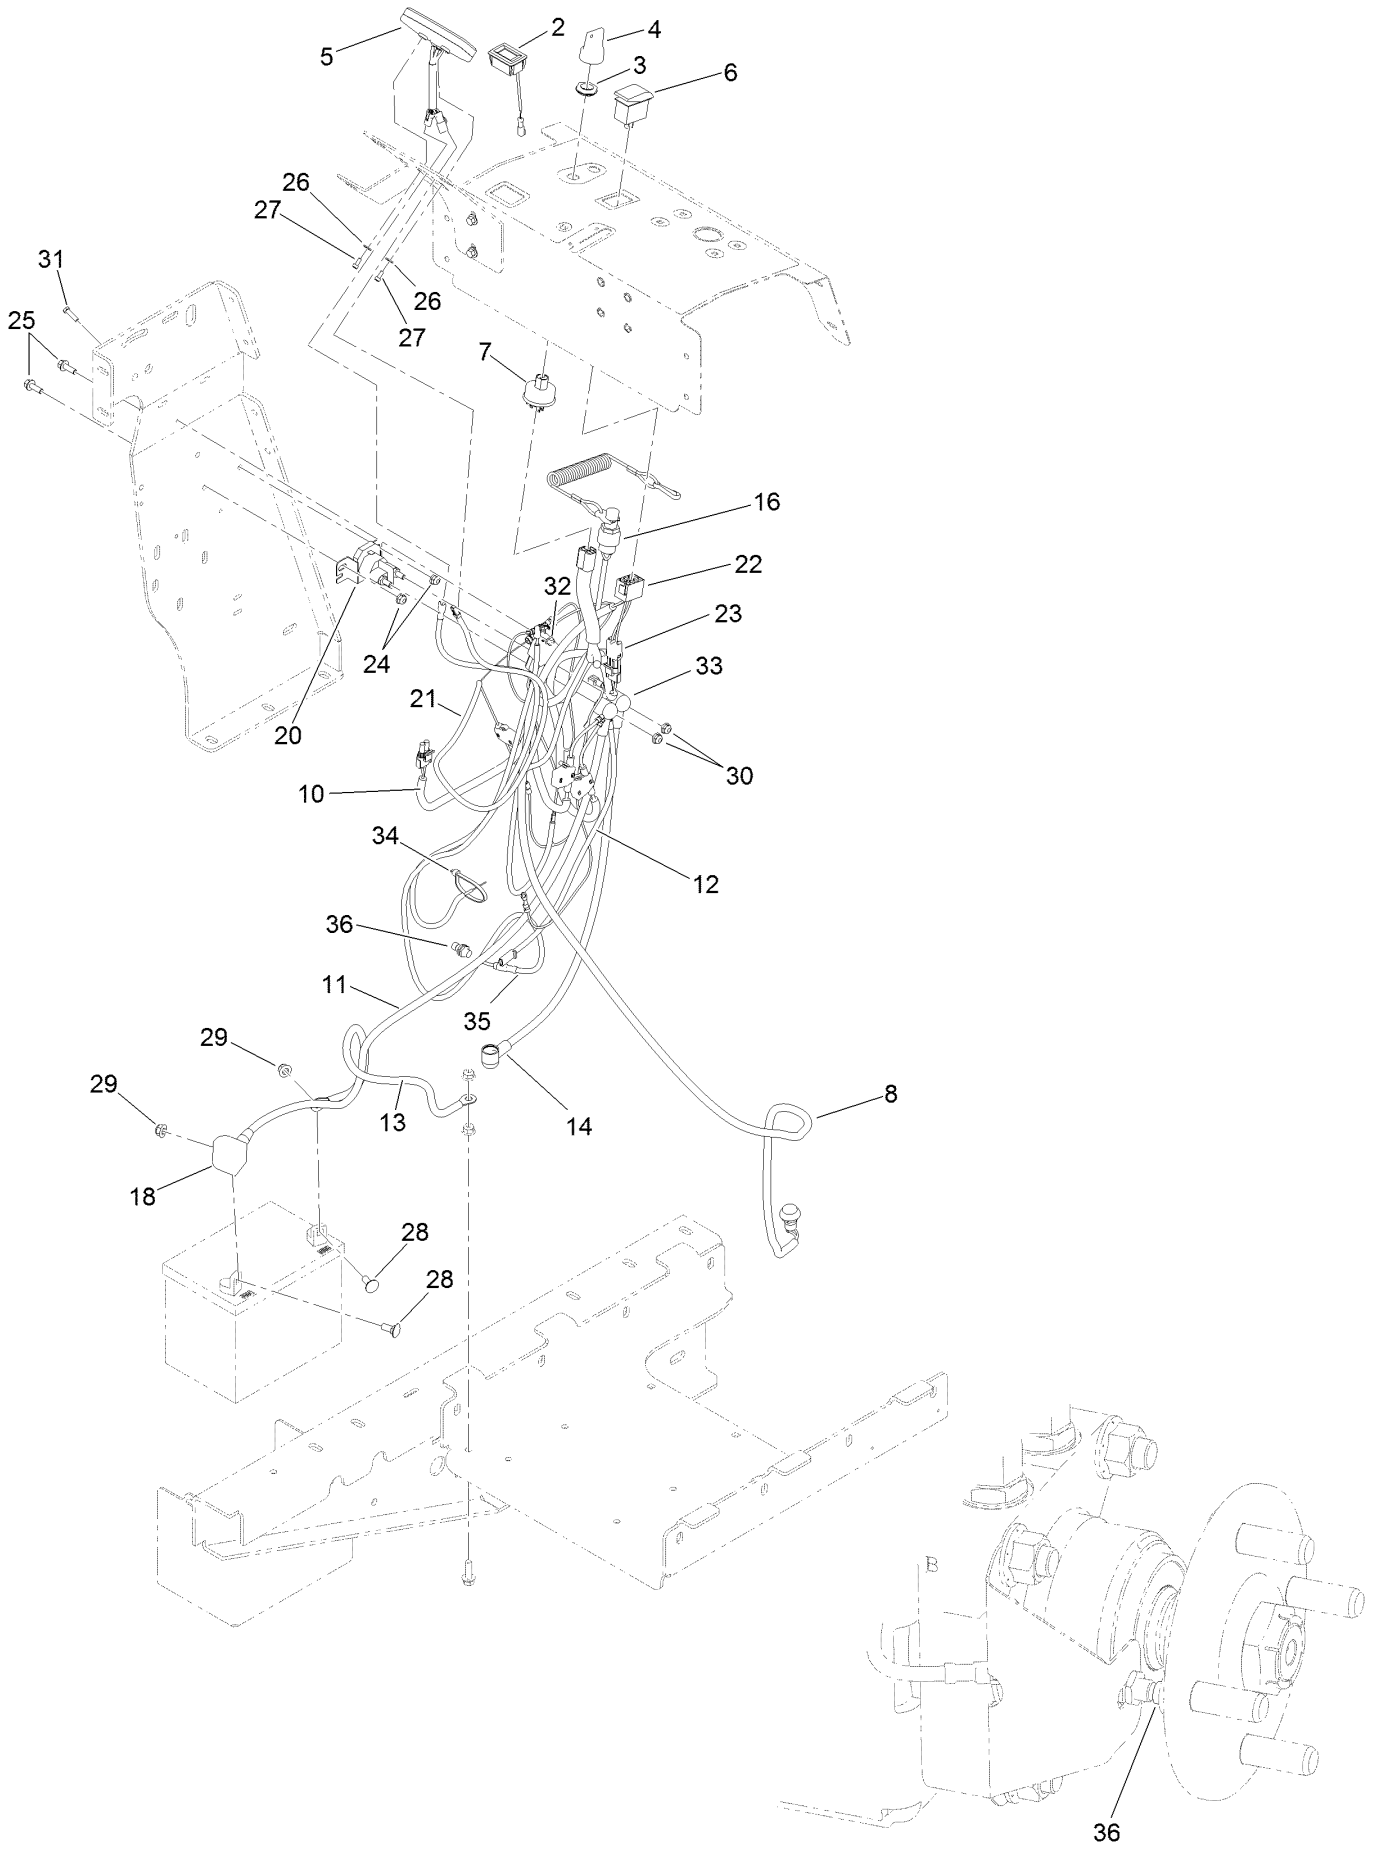


## Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-5259	1	Meter-Tach/Hour	22	32160-008	1	Connector-Carling, 8F
3	135-5715	1	Nut-Switch, Key	23	32160-072	1	Connector-Wp,2M
4	1-603511	1	Keys-Ignition (Spare Pair)	24	135-6108	2	Nut-Hex Flange
4	135-5708	1	Key-Umbrella	25	135-6221	2	Screw-HHF
5	135-8900	1	Striker-Head Only	26	126-0759	2	Washer-Flat
6	100-8469	1	Switch-Rocker	27	135-6357	2	Screw-HSH
7	135-6052	1	Switch-Ignition	28	126-0695	2	Screw-CARR
8	135-6054	1	Switch-Push Button	29	135-6109	2	Nut-Hex Flange
10	135-6113	1	Harness-Main	30	104-7201	2	Nut-HF
11	135-6114	1	Cable-Positive	31	135-6356	1	Screw-HH
12	135-6115	1	Wire-Solenoid	32	135-6342	1	Nut-Hex Flange
13	135-6116	1	Cable-Ground	33	1-543393	3	Insulator-Solenoid
14	135-6117	1	Cable-Positive	34	3290-378	9	Tie-Cable
16	135-6121	1	Switch-Op	35	135-8898	1	Cable-Sensor, Trail Tech
18	135-2304	1	Insulator-Battery	36	135-8903	1	Magnet-Speedometer
20	135-6189	1	Solenoid-Starter	99	135-7317	1	Manual-User, Striker●
21	135-6443	1	Harness-Striker	99	135-7318	1	Card-Striker, Quick Start●

● Not illustrated


# Motion Control Assembly

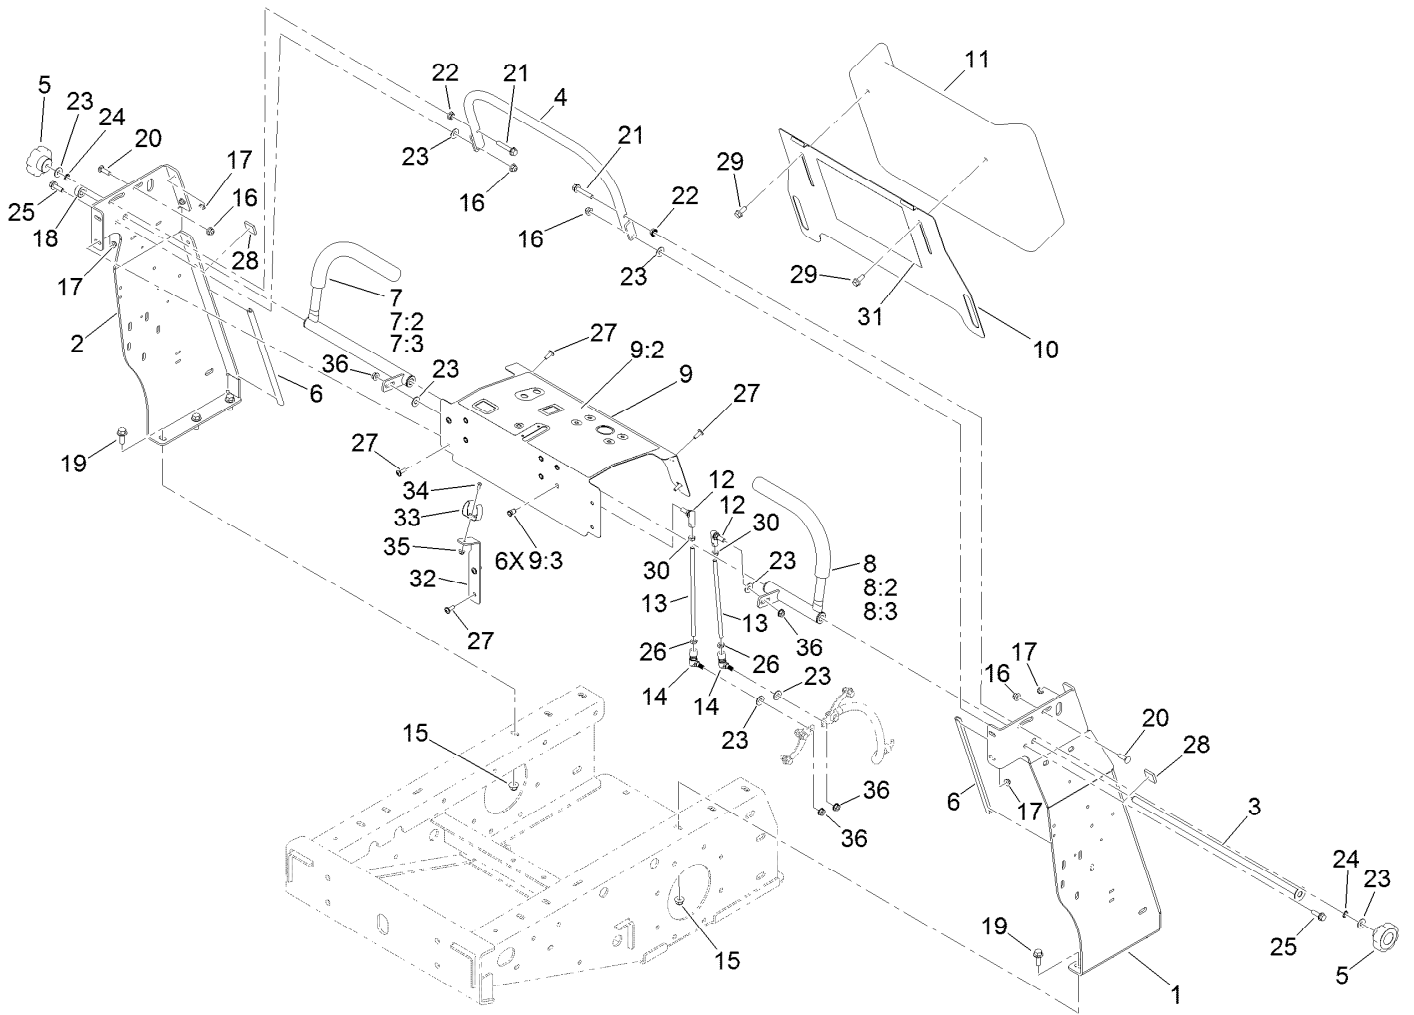

## Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5423	1	Upright-Tower, Lt	17	135-6108	8	Nut-Hex Flange
2	135-5425	1	Upright-Tower, Rt	18	135-6192	1	Collar
3	135-5430	1	Rod-Pivot, Joy Stick	19	135-6208	6	Screw-HHF
4	135-5427	1	Bar-Speed	20	HDW17294	2	Bolt, Carriage, 5/16-18X1, ST/ST 18-8
5	135-5689	2	Knob-Fluted	21	135-5779	2	Screw-HHF
6	135-5336	2	Strip-Trim, 12.0 Inch	22	118-1722	2	Nut-Hex Flange
7	135-5738	1	Stick-Joy, Rt	23	HDW14535	8	Flat Washer, 5/16 Nom, ST/ST, 18-8
7:2	1-633257	1	Grip-Control, Motion	24	135-6286	2	Washer-Lock
7:3	135-5694	2	Bushing-Flange	25	135-6272	2	Screw-HHF
8	135-5739	1	Stick-Joy, Lt	26	107-0282	2	Nut-Hex
8:2	1-633257	1	Grip-Control, Motion	27	135-7080	8	Screw-Hsbhf
8:3	135-5694	2	Bushing-Flange	28	93-9155	2	Velcro
9	135-7713	1	Control Panel ASM	29	126-2712	2	Screw-HHF
9:2	135-6223	1	Decal-Panel, Control	30	135-6512	2	Nut-Hex
9:3	138-2760	6	Nut-Clinch, Hex	31	135-6281	1	Decal-Chart, Spray
10	135-5498	1	Plate-Pad, Knee	32	135-5506	1	Mount-Gun
11	135-5334	1	Pad-Knee	33	135-5661	1	Holder-Tool, Clip
12	135-5257	2	Balljoint-SS	34	135-6374	1	Screw-HSBH
13	135-5681	2	Rod-Control, Motion	35	135-6342	1	Nut-Hex Flange
14	135-5718	2	Ball Joint-Quick Disconnect, SS	36	107-0380	4	Nut-HHF
15	135-6110	6	Nut-Hex Flange				
16	135-6109	4	Nut-Hex Flange				


# Tire and Wheel Assembly

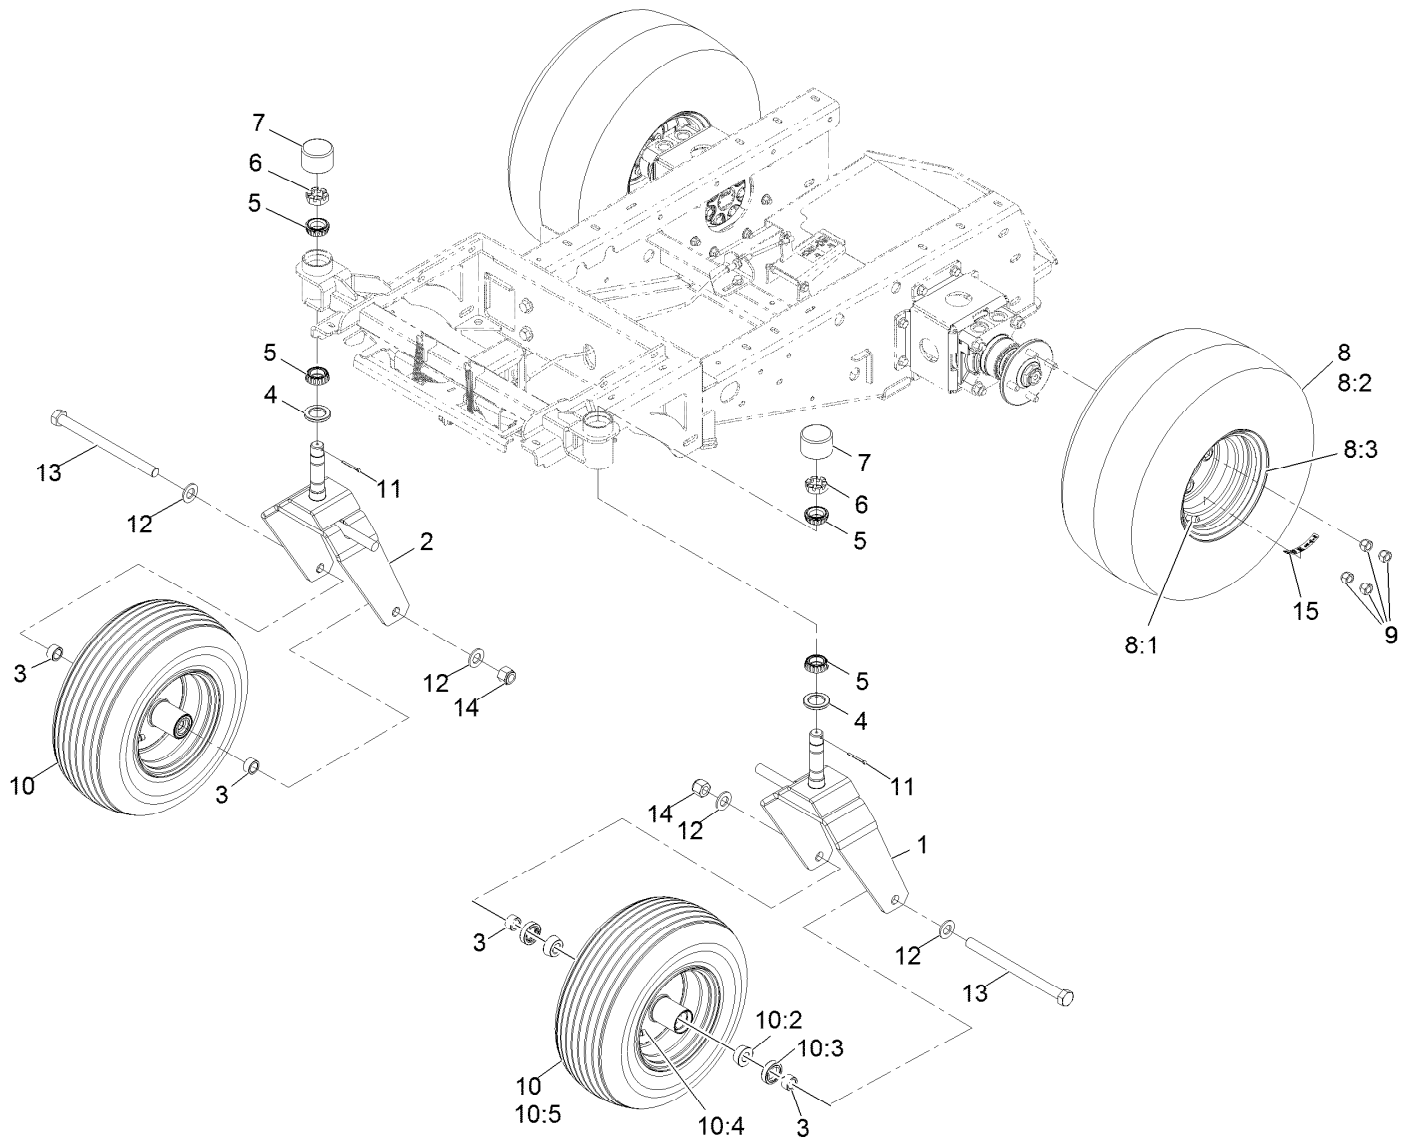

## Tire and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5441-03	1	Caster-Lt	10	135-5974	2	Wheel And Tire ASM
2	135-5446-03	1	Caster-Rt	10:2	1-633585	2	Bearing-Cone, Taper
3	135-5683	4	Spacer-Axle	10:3	103-0063	2	Seal-Caster
4	1-543511	2	Seal-Grease	10:4	5108	1	Valve
5	254-92	4	Cone-Bearing, Outer	10:5	135-5976	1	Tire-Rib
6	1-809082	2	Nut-SHH	11	135-6292	2	Pin-Cotter
7	135-5756	2	Cap-Dust, Rubber	12	3256-28	4	Washer-Flat
8	135-5968	2	Wheel And Tire ASM	13	135-6300	2	Screw-HH
8:1	135-5969	1	Rim-8 X 7, Black	14	3296-51	2	Nut-Lock, NI
8:2	120-6466	1	Tire	15	126-2055	2	Decal-Torque, Wheel Hub
8:3	232-27	1	Stem-Valve				Lug
9	242-50	8	Nut-Lug				


# Fuel Assembly

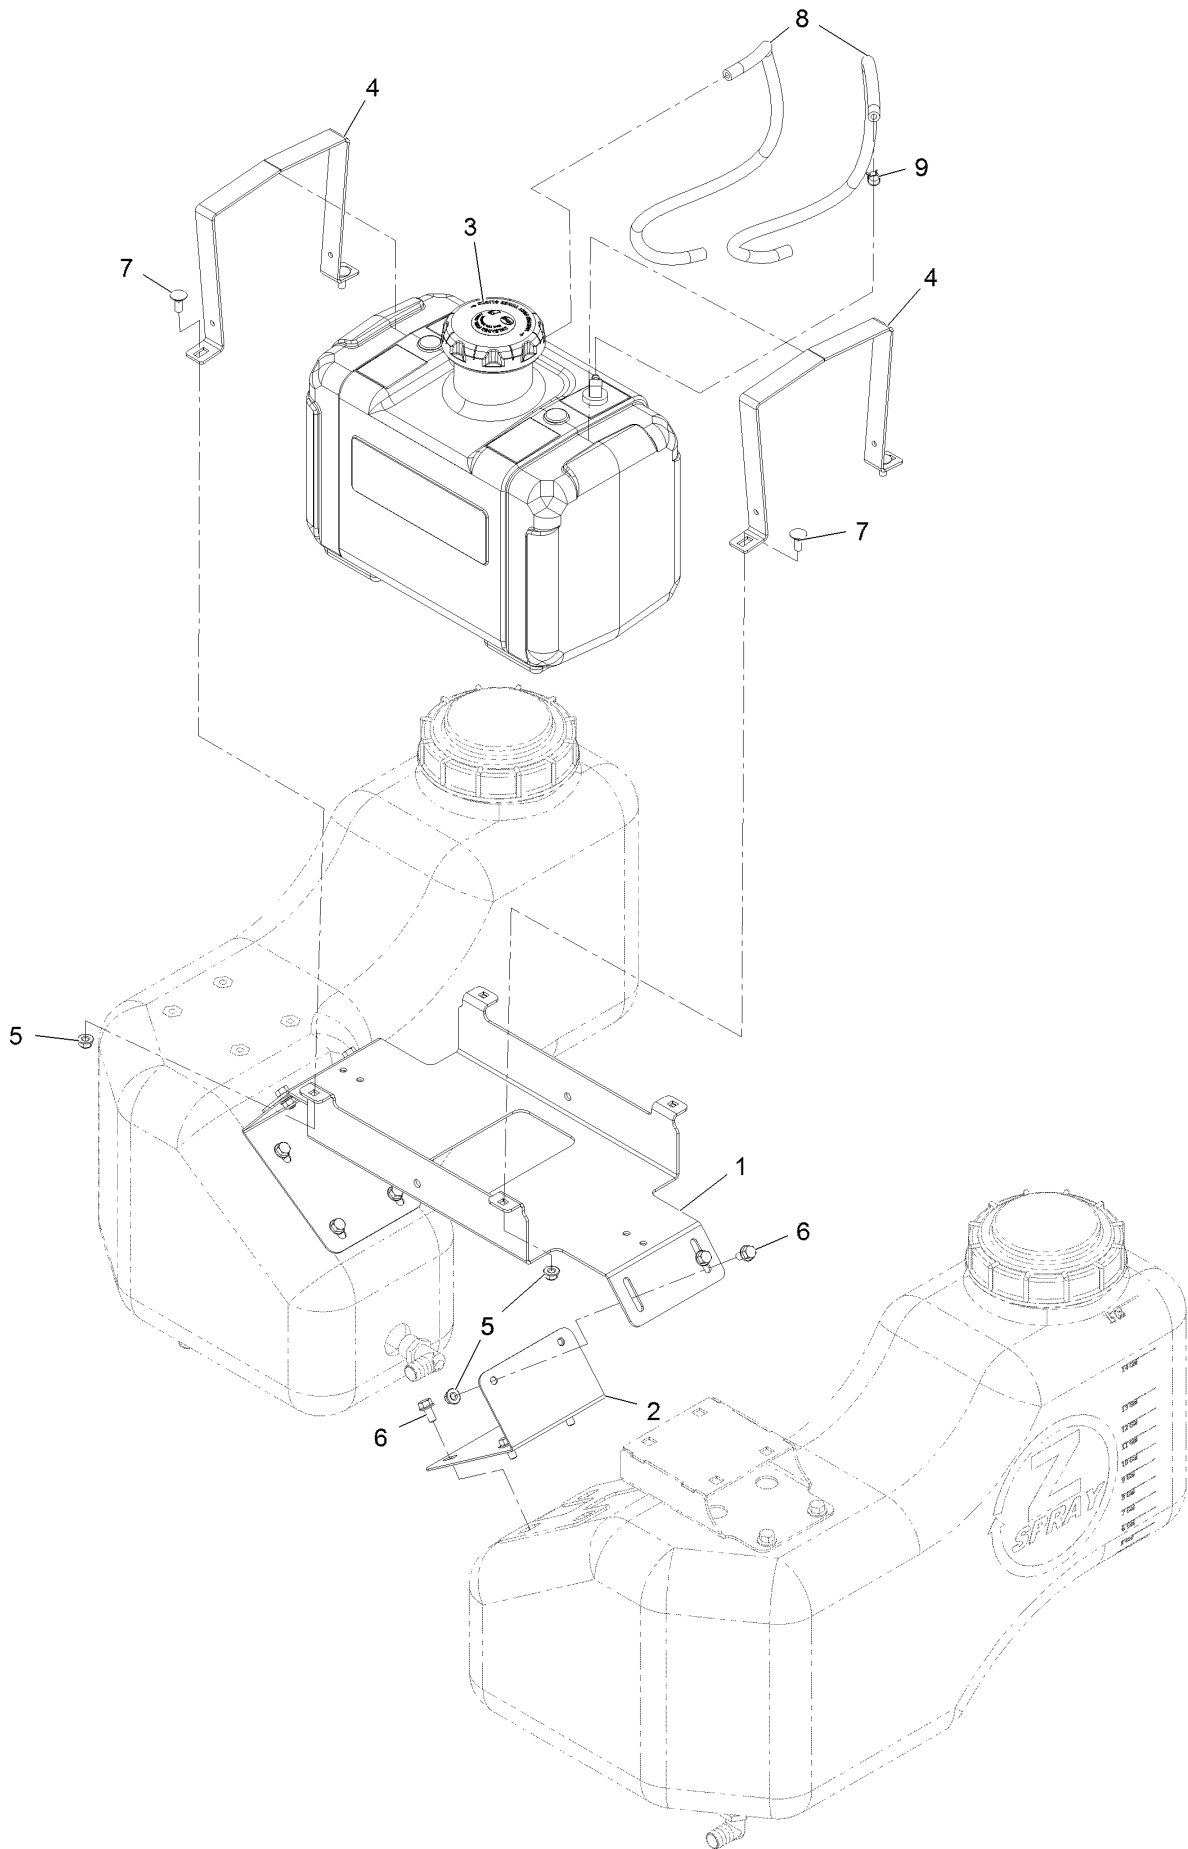

## Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-7209	1	Mount-Tank, Gas	6	135-7086	12	Screw-HHF
2	135-5560	2	Bracket-Support, Gas Tank	7	126-0695	4	Screw-CARR
3	135-7172	1	Fuel Tank ASM	8	109-1395	2	Hose-Fuel Line 27"
4	135-7211	2	Strap-Tank, Gas	9	2412-98	1	Clamp-Hose
5	135-6109	8	Nut-Hex Flange				

# Spray System Assembly

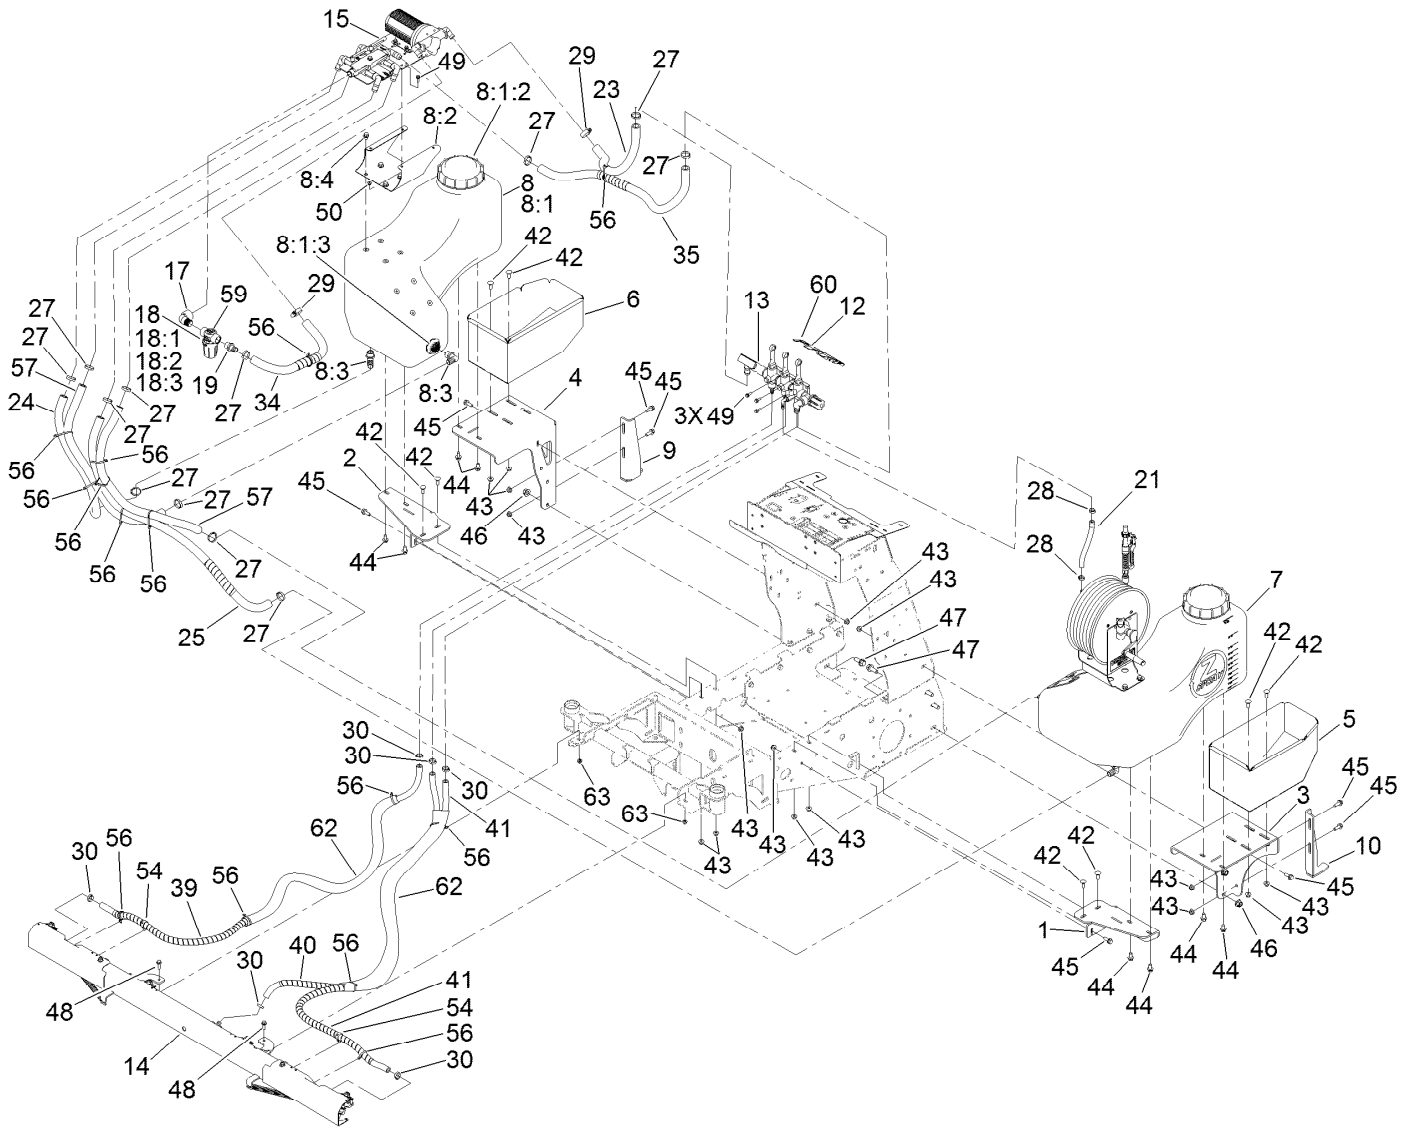


## Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5507	1	Mount-Tank, LH Wing	24	135-5326	1	Hose-Spray
2	135-5508	1	Mount-Tank, RH Wing	25	135-5327	1	Hose-Spray, Wrapped
3	135-5466	1	Mount-Box, Lt Fert	27	135-5890	12	Clamp-Oetiker, 167
4	135-5468	1	Mount-Box, Rt Fert	28	135-5757	2	Clamp-Oetiker, 167
5	135-5470	1	Box-Fert, Lt	29	2412-129	2	Clamp-Hose
6	135-5473	1	Box-Fert, Rt	30	135-5692	6	Clamp-Oetiker, 167
7		1	Hose Reel Tank ASM ■	34	135-6481	1	Hose-Spray, Wrapped
8		1	Rt Tank ASM ■	35	135-6480	1	Hose-Spray, Wrapped
8:1	135-5995	1	ASM-Tank, Rt	39	135-5270	1	Hose-Spray, Wrapped
8:1:2	135-5916	1	Cap-Tank, Spray	40	135-5268	1	Hose-Spray, Wrapped
8:1:3	126-4393	2	Fitting-Bulkhead	41	135-5269	1	Hose-Spray, Wrapped
8:2	135-5772	2	Fitting-Elbow, 90	42	126-0980	12	Screw-CARR
8:3	135-5545	1	Platform, Liquid Valve Mount	43	135-6110	22	Nut-Hex Flange
8:4	135-7096	4	Screw-HHF	44	135-6274	8	Screw-HHF
9	135-5479	1	Bracket-Anti-Tip, Rt	45	135-6208	10	Screw-HHF
10	135-5477	1	Bracket-Anti-Tip, Lt	46	135-6111	6	Nut-Hex Flange
12	135-5570	1	Bracket-Manifold	47	135-6207	6	Screw-HHF
13		1	Manifold ASM ■	48	135-6272	2	Screw-HHF
14		1	Boom ASM ■	49	135-6221	7	Screw-HHF
15		1	ASM, Liquid Valve ■	50	135-6108	4	Nut-Hex Flange
17	132-7706	1	Elbow-90 DEG	54	32180-030	2	Clip-Tie
18	135-5765	1	Strainer-Inline	56	3290-378	14	Tie-Cable
18:1	126-7195	1	Bowl-Strainer	57	135-6441	2	Hose-Spray
18:2	126-2272	1	Gasket-Head, Line Strainer	59	135-6424	1	Decal-Cap, Strainer
18:3	135-5766	1	Screen-Strainer, 50 Mesh	60	135-6285	1	Decal-Valve, Boom
19	41257	1	Hosebarb	62	135-6484	2	Guard-Mesh
21	135-6162	1	Hose-Spray	63	135-6109	2	Nut-Hex Flange
23	135-5324	1	Hose-Spray	64	3290-379	3	Tie-Cable ●

● Not illustrated

■ Not serviced separately


# Hose Reel Tank Assembly

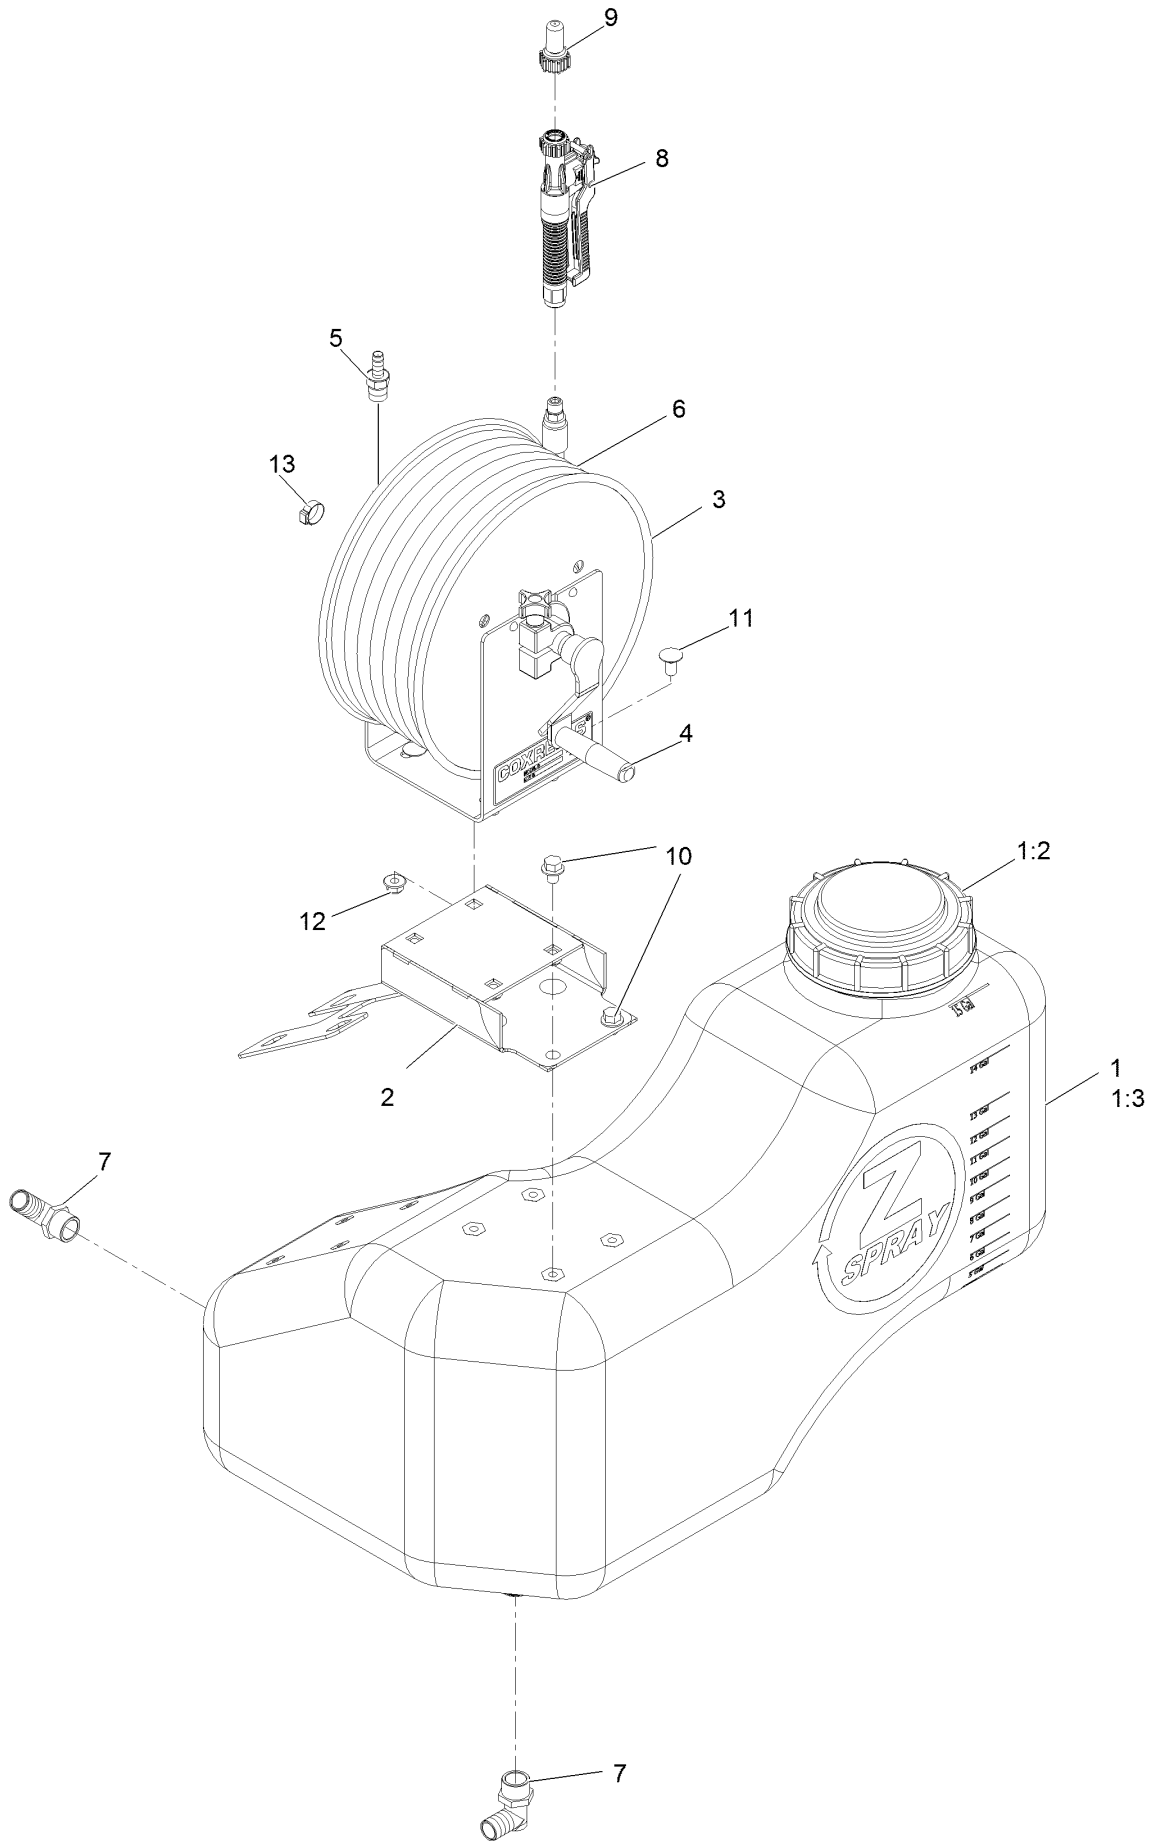

## Hose Reel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5993	1	ASM-Tank, Lt	7	135-5772	2	Fitting-Elbow, 90
1:2	135-5916	1	Cap-Tank, Spray	8	135-5773	1	Gun-Spray, Spot
1:3	126-4393	2	Fitting-Bulkhead	9	135-5778	1	Tip-Spray, #12 Spot
2	135-5521	1	Mount-Reel, Hose	10	135-7096	2	Screw-HHF
3	135-5787	1	Reel-Hose	11	135-6271	4	Screw-Carriage
4	135-6011	1	Crank-Reel	12	135-6110	4	Nut-Hex Flange
5	1-513200	2	Fitting, Male	13	135-5757	1	Clamp-Oetiker, 167
6	135-5794	1	Hose-Spray, 75'				


# Manifold Assembly

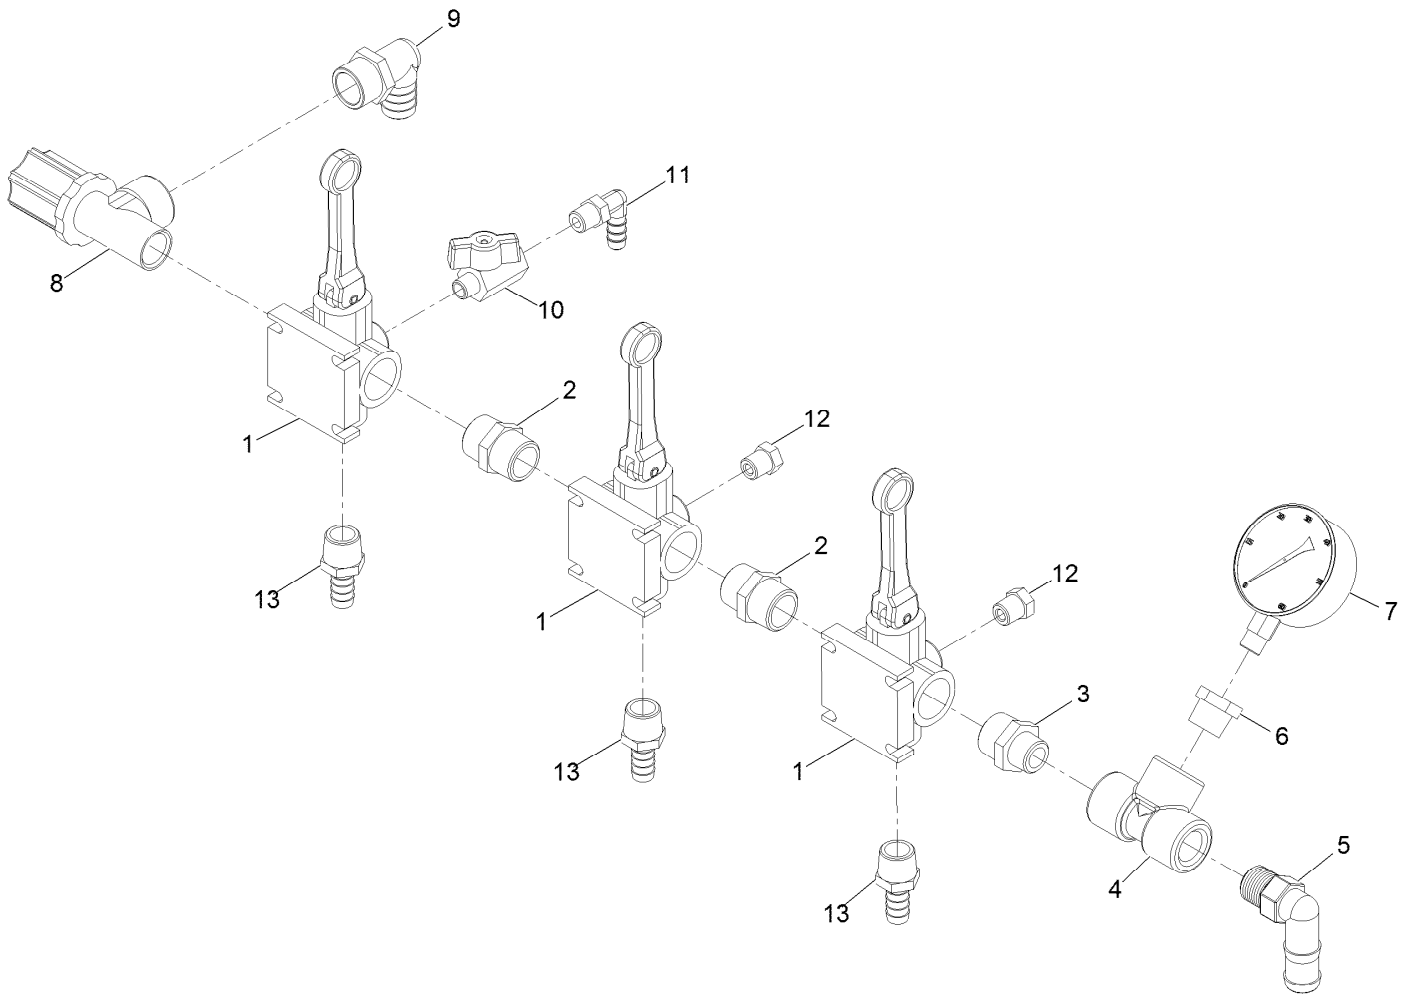

## Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5721	3	Valve-Directo	8	135-5736	1	Valve-Throttle
2	135-5741	2	Fitting-Nipple	9	135-5772	1	Fitting-Elbow, 90
3	135-5742	1	Fitting-Nipple	10	135-5737	1	Valve-Chrome, 1/4
4	94-7100	1	Tee	11	135-5745	1	Fitting-Elbow, 90
5	92-8557	1	Elbow-90	12	135-5735	2	Plug-Valve
6	135-5743	1	Fitting-Reducer	13	120-8671	3	Fitting-Hosebarb
7	135-5740	1	Gauge				


# Boom Assembly

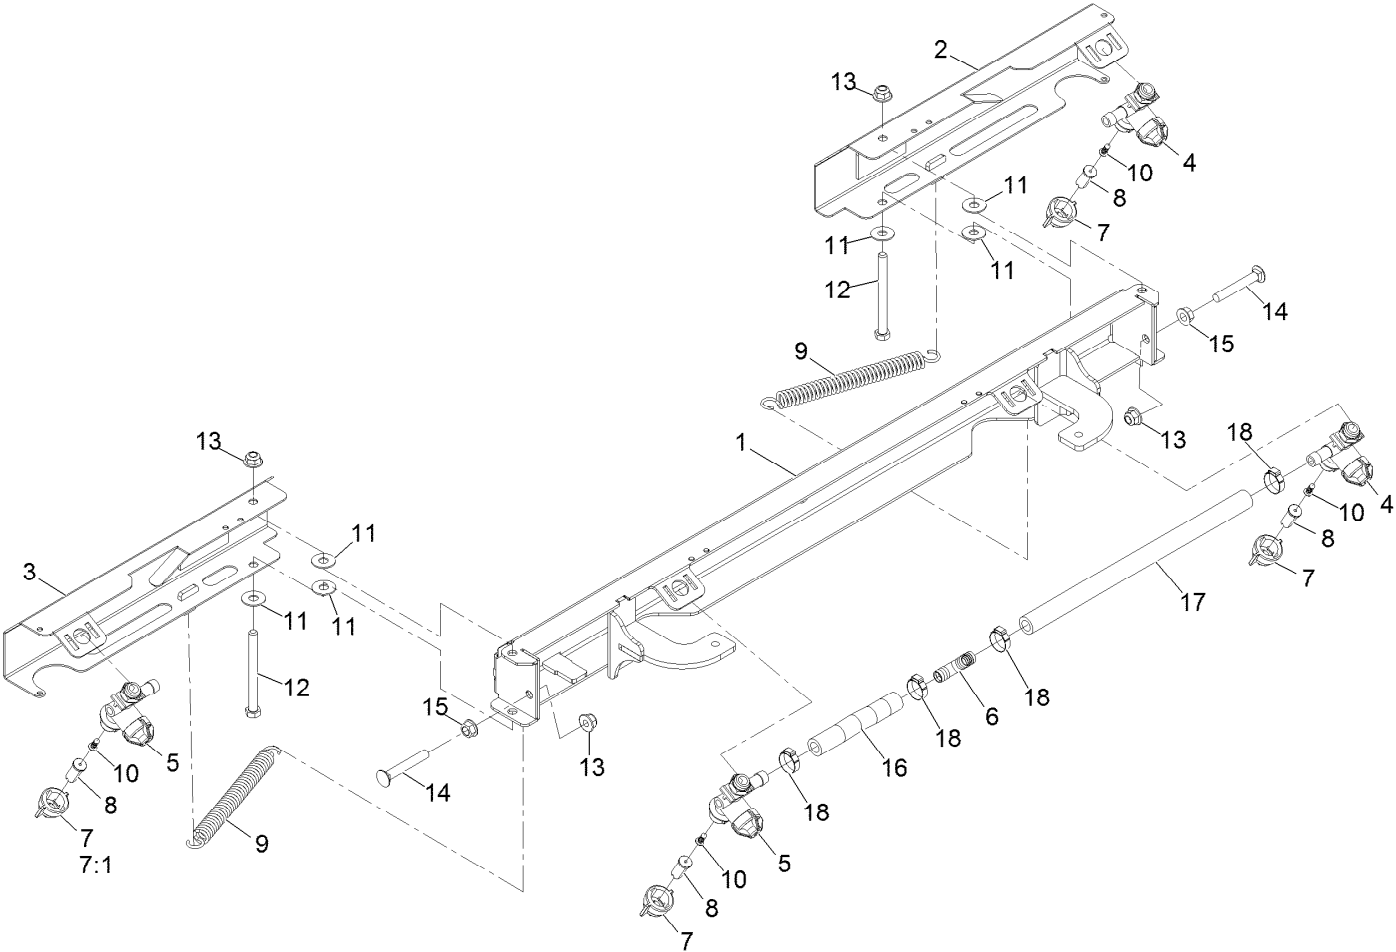

## Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5480	1	Boom-Center	10	126-3943	4	Strainer-Nozzle, 50M 5PSI Check
2	135-5519	1	Boom-Wing, Rt	11	1126	6	Washer-Flat
3	135-5516	1	Boom-Wing, Lt	12	135-6310	2	Screw-HH
4	135-5790	2	Body-Nozzle, Right	13	135-6110	4	Nut-Hex Flange
5	135-5788	2	Body-Nozzle, Left	14	126-0702	2	Screw-CARR
6	138-2751	1	Fitting-Tee, Barb	15	135-6806	2	Nut-Hex Flange
7	135-5781	4	Cap-Nozzle	16	135-6298	1	Hose-Spray
7:1	40998	1	Seat-Gasket	17	135-7129	1	Hose-Spray
8	135-5791	4	Avi-110025 1/3 Spray Tip	18	135-5692	4	Clamp-Oetiker, 167
9	135-5780	2	Spring-Extension				


# Liquid Valve Assembly

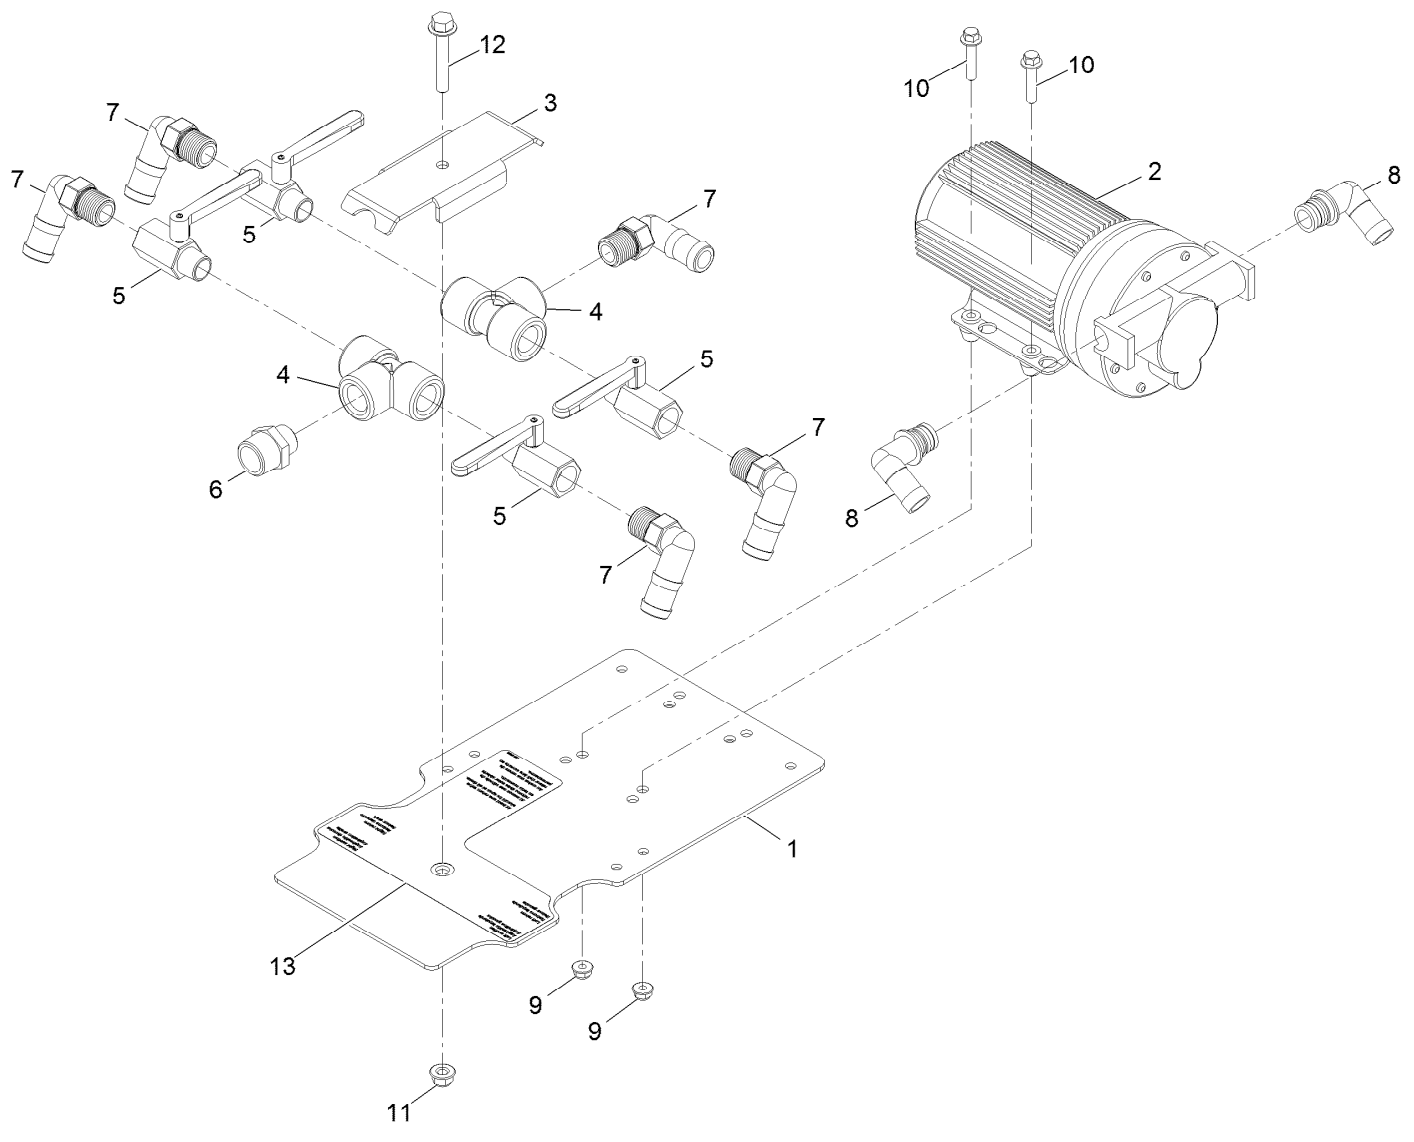

## Liquid Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5491	1	Mount-Plate, Liquid Valve	8	135-6003	2	Fitting-Elbow, 3/4Qd X 3/4Barb
2	135-5759	1	Pump-5.0 GPM	9	135-6108	4	Nut-Hex Flange
3	135-5504	1	Plate-Clamp, Liquid Valve Fittings	10	135-6312	4	Screw-HHF
4	94-7100	2	Tee	11	135-6109	1	Nut-Hex Flange
5	135-5760	4	Valve-Chrome, 1/2	12	126-2711	1	Screw-HHF
6	135-5742	1	Fitting-Nipple	13	135-6420	1	Decal-Valve, Tank
7	92-8557	5	Elbow-90				

# Hopper Assembly

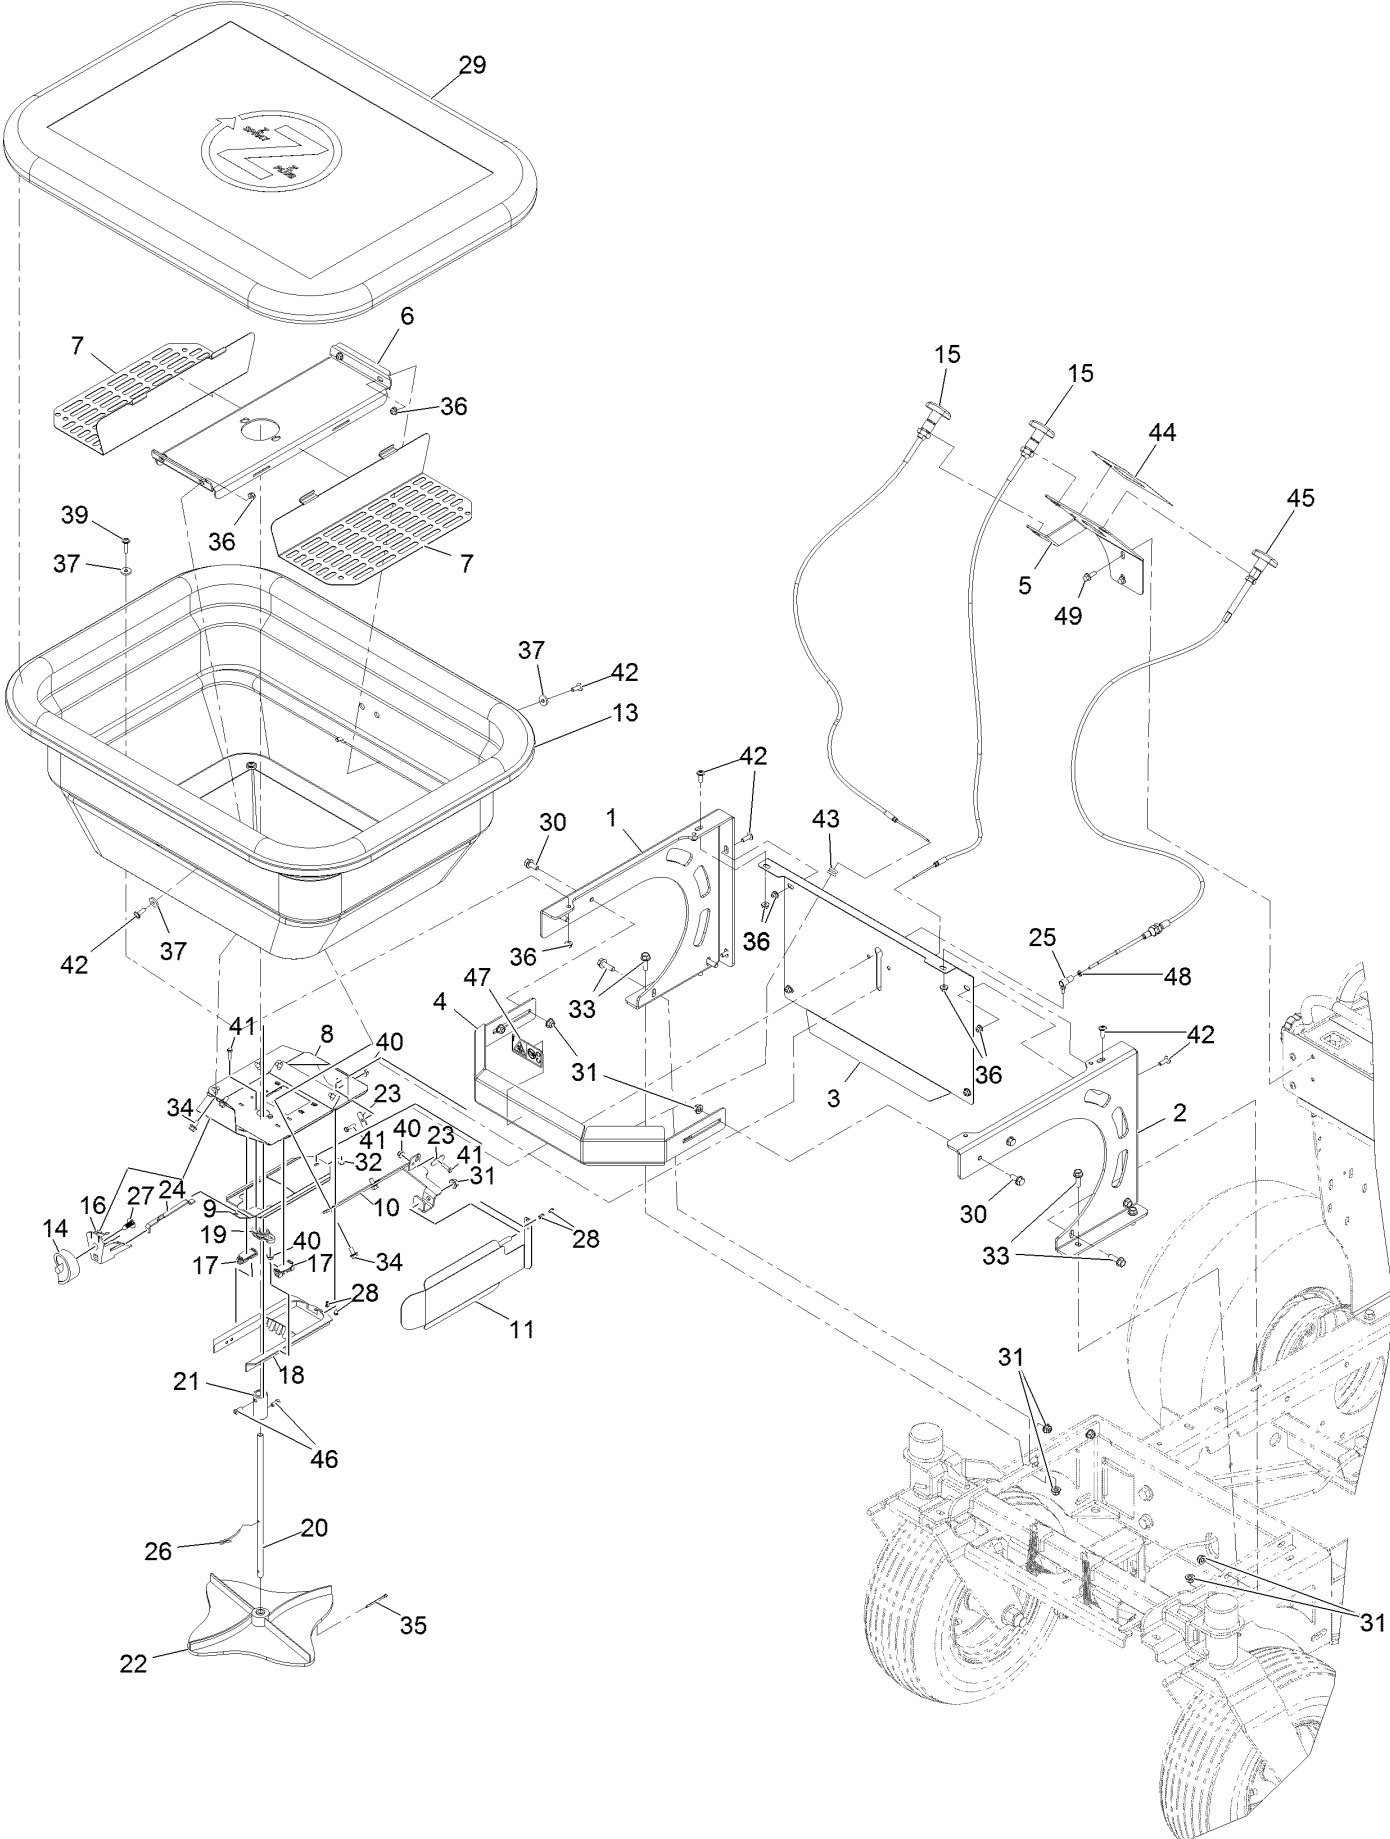

## Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5391	1	Side-Hopper, Rt	27	126-0986	1	Clip
2	135-5393	1	Side-Hopper, Lt	28	135-5961	2	Retainer-Cable, Wire
3	135-5571	1	Backshield-Hopper	29	135-6145	1	Cover-Hopper, Large
4	135-5567	1	Bumper-Front, Hopper	30	126-2712	4	Screw-HHF
5	135-5505	1	Mount-Speedometer	31	135-6109	13	Nut-Hex Flange
6	135-5542	1	Pan-Hopper, 220	32	HDW05856	1	Nut-NYL Lock,#10-32,ST/ST 18-8
7	135-5544	2	Screen-Hopper, 220	33	135-6272	8	Screw-HHF
8	135-5572	1	Plate-Base, Hopper	34	135-6280	8	Screw-HHF
9	135-5573	1	Slide-Door, Hopper	35	135-6340	1	Pin-Cotter
10	135-5388	1	Mount-Deflector, Side	36	135-6108	14	Nut-Hex Flange
11	135-5589	1	Deflector-Side, Spreader	37	135-6341	8	Washer
13	135-5985	1	Hopper-220Lb	39	135-7081	4	Screw-Hsbhf
14	126-0988	1	Dial	40	135-6342	4	Nut-Hex Flange
15	135-5931	2	Cable-Push/Pull	41	135-6356	4	Screw-HH
16	126-0985	1	Mount-Dial	42	135-7080	10	Screw-Hsbhf
17	126-0990	4	Guide-Rate, Gate	43	135-5988	1	Grommet-Rubber
18	126-0991	1	Diffuser	44	135-6279	1	Decal-Hopper Control
19	135-5943	1	Bearing-Flange	45	135-5935	1	Cable-Push/Pull
20	135-5936	1	Shaft-Hopper, 220	46	3241-7	2	Screw-SQH
21	135-5937	1	Coupler-SS	47	135-6725	1	Decal-Dismemberment Hazard
22	135-5954	1	Spinner-Spreader	48	520-0019	1	Nut-Hex, Jam
23	135-5569	2	Retainer, Cable	49	135-6221	2	Screw-HHF
24	135-5965	1	Linkage-Gate, Rate				
25	135-5682	1	Ball Joint-SS				
26	135-5957	1	Wire-Agitator				

