



# **21" Recycler<sup>®</sup> /Rear Bagging**

**Int'l Walk Behind Mower**

**Model No. 20651 – 9900001 & Up**

---

## **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

| Description                                    | Page | Description                      | Page  |
|------------------------------------------------|------|----------------------------------|-------|
| Housing, Handle Brackets, & Wheel Assembly . . | 1    | Grass Bagging Assembly . . . . . | 7     |
| Gear Case Assembly . . . . .                   | 2    | Engine Briggs & Stratton         |       |
| Engine & Blade Assembly . . . . .              | 3    | Model 12H802-1767-E1 . . . . .   | 8-14  |
| Gearcase & Wheel Assembly . . . . .            | 4    | Toro Part Number Index . . . . . | 15-17 |
| Handle & Controls Assembly . . . . .           | 5    |                                  |       |
| Discharge Door Assembly . . . . .              | 6    | <b>Note:</b>                     |       |

## Accessories

| Description              | Model / Parts No. | Description | Model / Parts No. |
|--------------------------|-------------------|-------------|-------------------|
| Chute Plug Kit . . . . . | Model No. 59134   |             |                   |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation   | Meaning                | Abbreviation    | Meaning                           |
|----------------|------------------------|-----------------|-----------------------------------|
| AR . . . . .   | as required            | HWHTF . . . . . | hex washer head<br>thread forming |
| ASM . . . . .  | assembly               | INC . . . . .   | incorporated                      |
| CARR . . . . . | carriage               | LH . . . . .    | left hand                         |
| DEG . . . . .  | degrees                | PH . . . . .    | pan head                          |
| FH . . . . .   | flat head              | PPH . . . . .   | Phillips pan head                 |
| GA . . . . .   | gauge                  | PTO . . . . .   | power take off                    |
| HF . . . . .   | hex flange             | RH . . . . .    | right hand                        |
| HFV . . . . .  | hex flange washer      | SFH . . . . .   | slotted fillister head            |
| HH . . . . .   | hex head               | SH . . . . .    | square head                       |
| HHF . . . . .  | hex head flange        | SHWH . . . . .  | slotted hex washer head           |
| HHST . . . . . | hex head self tapping  | SPH . . . . .   | slotted pan head                  |
| HJ . . . . .   | hex jam                | STD . . . . .   | standard                          |
| HOC . . . . .  | height-of-cut          | TAP . . . . .   | self tapping                      |
| HS . . . . .   | hex socket             | TH . . . . .    | truss head                        |
| HSBH . . . . . | hex socket button head | TTH . . . . .   | Torx truss head                   |
| HSFH . . . . . | hex socket flat head   | WH . . . . .    | wing head                         |
| HSH . . . . .  | hex socket head        |                 |                                   |
| HWH . . . . .  | hex washer head        |                 |                                   |

## Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

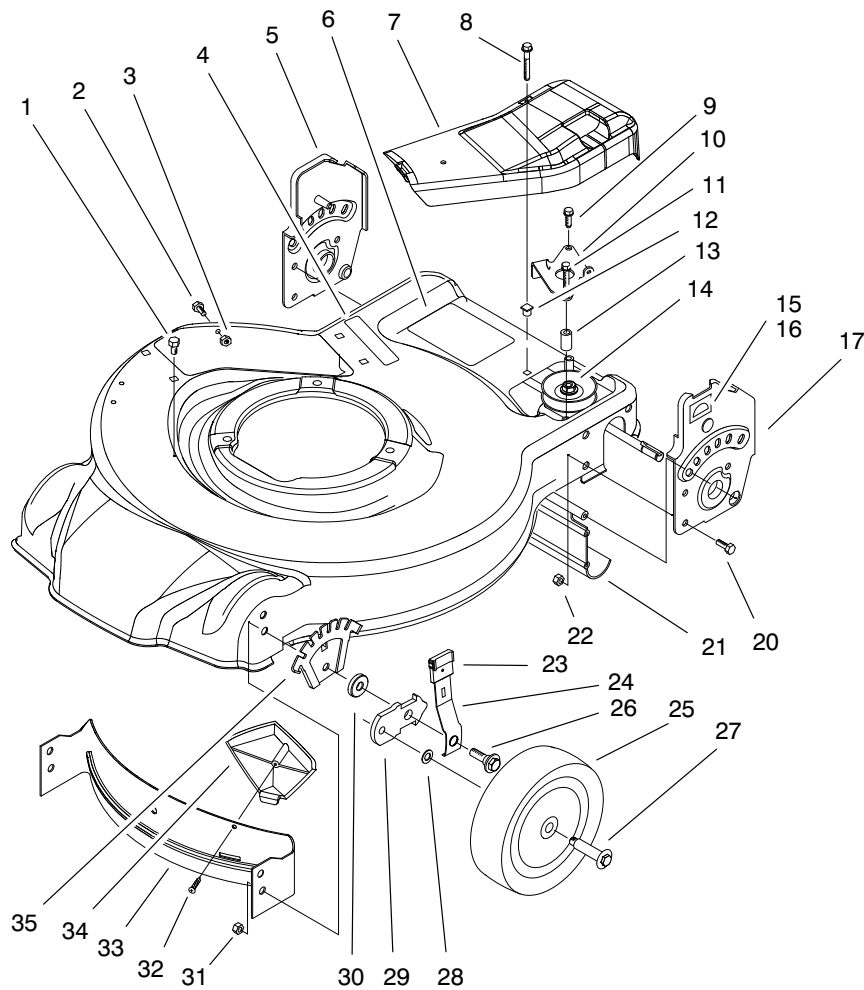


Sheet No.:2

## Housing, Handle Brackets, & Wheel Assembly
 
| Ref. No. | Part No.   | Qty. | Description             |
|----------|------------|------|-------------------------|
| 1        | 32144-4    | 3    | Screw-HH                |
| 2        | 32105-27   | 1    | Screw                   |
| 3        | 3296-2     | 1    | Nut-Lock Esna           |
| 4        | 93-6667    | 1    | Decal - Warning         |
| 5        | 93-0234    | 1    | ASM - RH Handle Bracket |
| 6        | 93-4105    | 1    | Decal - Bag Door        |
| 7        | 93-0209    | 1    | Cover - Transmission    |
| 8        | 32144-119  | 1    | Screw-Pth               |
| 9        | 49-2040    | 1    | Screw-Taptite           |
| 10       | 93-0228-03 | 1    | Guide - Transmission    |
| 11       | 92-1616    | 1    | Screw-Thread Forming    |
| 12       | 605120     | 1    | Grommet                 |
| 13       | 614673     | 1    | Bushing - Actuator Plt  |
| 14       | 93-0240    | 1    | ASM - Transmission      |
| 15       | 92-2915    | 1    | Decal - HOC L           |
| 16       | 92-2914    | 1    | Decal - HOC R           |
| 17       | 93-0233    | 1    | ASM - LH Handle Bracket |
| 20       | 322-3      | 6    | Screw-HH                |
| 21       | 92-8647    | 1    | Shield - Trailing       |
| 22       | 3296-29    | 6    | Nut-Lock Ni             |
| 23       | 92-1008    | 4    | Knob-Height Adj Lever   |
| 24       | 614687     | 2    | Arm-Front Spring        |


| Ref. No. | Part No.    | Qty. | Description                     |
|----------|-------------|------|---------------------------------|
| 25       | 92-9591     | 2    | Assembly - 7" Wheel             |
| 26       | 614650      | 2    | Bolt-Shoulder                   |
| 27       | 614672      | 2    | Bolt-Shoulder                   |
| 28       | 40-1940     | 2    | Washer-Wheel Bolt               |
| 29       | 95-7403-03  | 2    | Brkt-Whl Ht Adj                 |
| 30       | 92-4890     | 2    | Washer - Wheel                  |
| 31       | 3296-39     | 2    | Nut-Lock Ni                     |
| 32       | 93-0231     | 1    | Screw - PPH                     |
| 33       | 100-1179-03 | 1    | Baffle Front - Weldment (Black) |
| 34       | 93-0216     | 1    | Kicker - Front                  |
| 35       | 92-4881-03  | 2    | Plate - Hght Adj                |

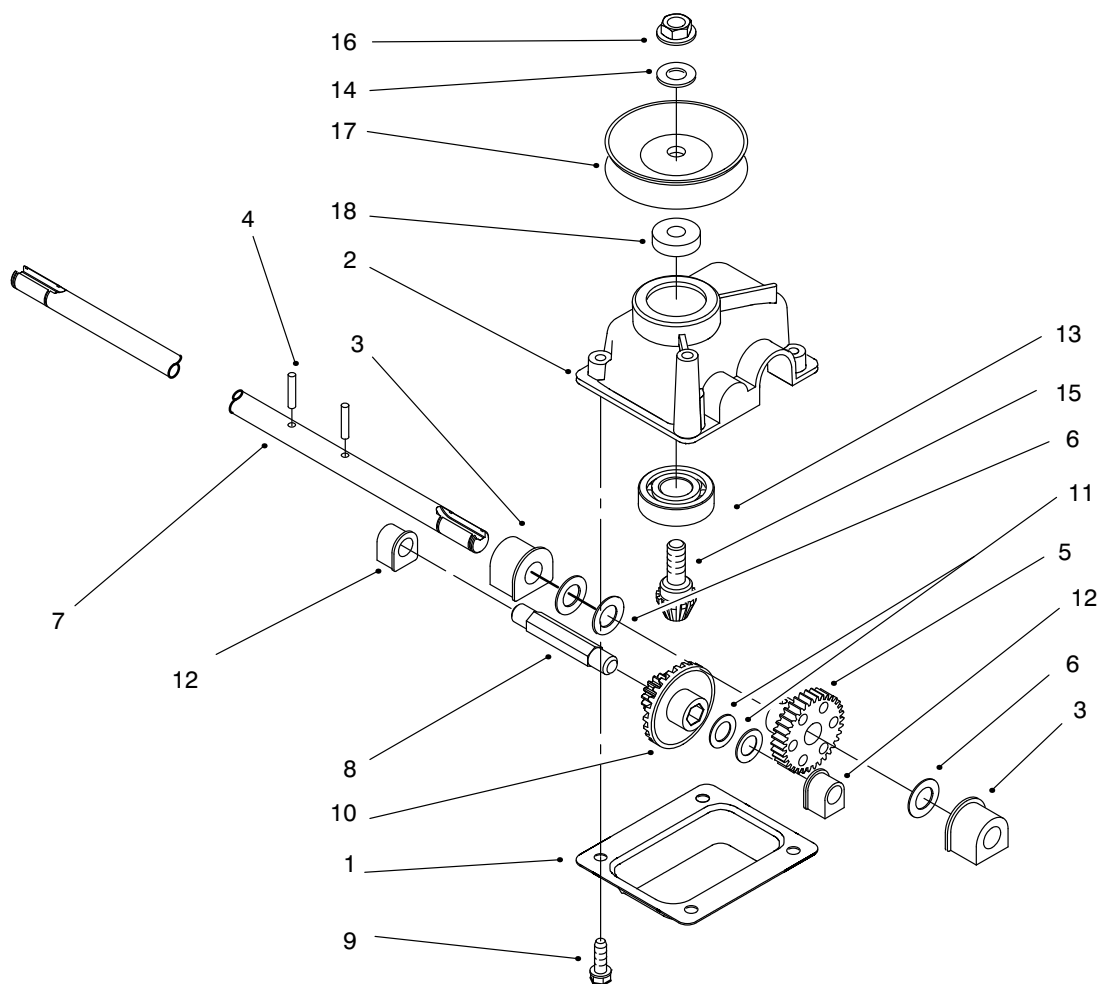

Sheet No.:A1

## Gear Case Assembly
 
| Ref. No. | Part No.  | Qty. | Description        |
|----------|-----------|------|--------------------|
| 1        | 614668-03 | 1    | Gear Case Cover    |
| 2        | 92-7727   | 1    | Gearcase           |
| 3        | 60-8850   | 2    | Bushing-Output     |
| 4        | 3285-19   | 2    | Pin-Groove         |
| 5        | 614596    | 1    | Gear -34t          |
| 6        | 36-4780   | 2    | Washer             |
| 7        | 93-0239   | 1    | Shaft - Output     |
| 8        | 614696    | 1    | Shaft-Intermediate |
| 9        | 49-2040   | 4    | Screw-Taptite      |
| 10       | 55-3760   | 1    | 15 T Pinion        |
| 11       | 36-4791   | 2    | Thrust Washer      |
| 12       | 60-8750   | 2    | Bushing            |
| 13       | 38-7820   | 1    | Bearing-Ball       |
| 14       | 3256-24   | 1    | Washer-Flat        |
| 15       | 60-8890   | 1    | Bevel Pinion Gear  |
| 16       | 3296-5    | 1    | Nut-Lock Ni        |
| 17       | 100-1176  | 2    | Pulley Half        |
| 18       | 62-6660   | 1    | Spacer             |

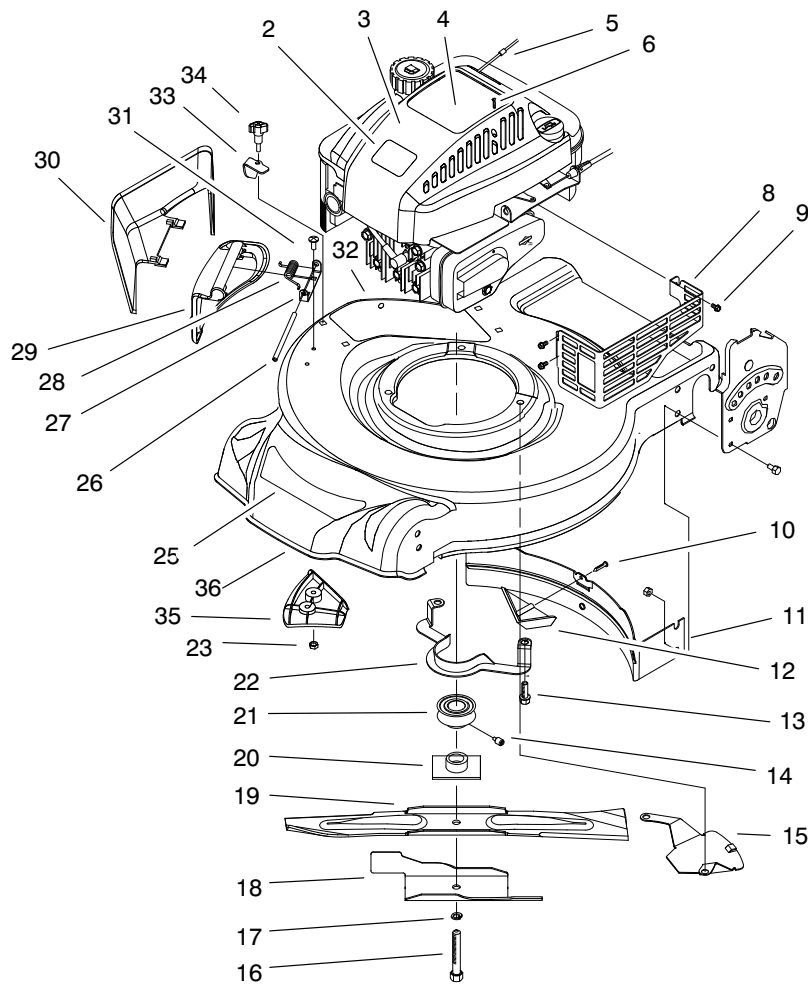


Sheet No.:3

## Engine & Blade Assembly
 
| Ref. No. | Part No.   | Qty. | Description               |
|----------|------------|------|---------------------------|
| 2        | 98-3206    | 1    | Nameplate – Toro          |
| 3        | 93-0243    | 1    | Shroud-Quantum Wedge      |
| 4        | 93-4354    | 1    | Decal – Recoil            |
| 5        | 2210-316   | 1    | Stop-Rope F/W Engine      |
| 6        | 32144-121  | 2    | Screw-Pan Hd              |
| 8        | 82-8550-03 | 1    | Shield-Muffler            |
| 9        | 32144-73   | 3    | Screw                     |
| 10       | 93-0231    | 1    | Screw – PPH               |
| 11       | 93-0223-03 | 1    | Baffle – Rear (Black)     |
| 12       | 93-0217    | 1    | Kicker – Rear             |
| 13       | 95-1726    | 3    | Screw-Taptite w/Patch     |
| 14       | 613227     | 1    | Screw – Set               |
| 15       | 93-4196-03 | 1    | Shield – Grass            |
| 16       | 26-0671    | 1    | Screw-Blade               |
| 17       | 3253-22    | 1    | Washer-Lock/Sp            |
| 18       | 93-0219-03 | 1    | Accelerator               |
| 19       | 93-0241    | 1    | Blade – Steel Deck (Raw)  |
| 20       | 100-1178   | 1    | ASM-Blade Driver – Gts 10 |
| 21       | 95-1878    | 1    | Pulley                    |
| 22       | 92-1024-03 | 1    | Belt Guide                |
| 23       | 32128-32   | 2    | Nut-Hex, Flange           |

| Ref. No. | Part No.    | Qty. | Description                           |
|----------|-------------|------|---------------------------------------|
| 25       | 99-6345     | 1    | Decal – Deck (Int Steel)              |
| 26       | 99-5291     | 1    | Rod-Cover (Steel Side Discharge)      |
| 27       | 99-5292     | 1    | Bracket-Cover (Steel Side Discharge)  |
| 28       | 99-5293     | 1    | Spring-Torsion (Steel Side Discharge) |
| 29       | 99-5294     | 1    | Cover-Side (Steel Side Discharge)     |
| 30       | 99-5295     | 1    | Chute-Side (Side Discharge)           |
| 31       | 3229-11     | 2    | Screw-CARR                            |
| 33       | 100-1589-03 | 1    | Clamp-Door                            |
| 34       | 98-8332     | 1    | Knob                                  |
| 35       | 99-6349     | 1    | Baffle                                |
| 36       | 99-5236     | 1    | Housing Sp Steel (Service)            |

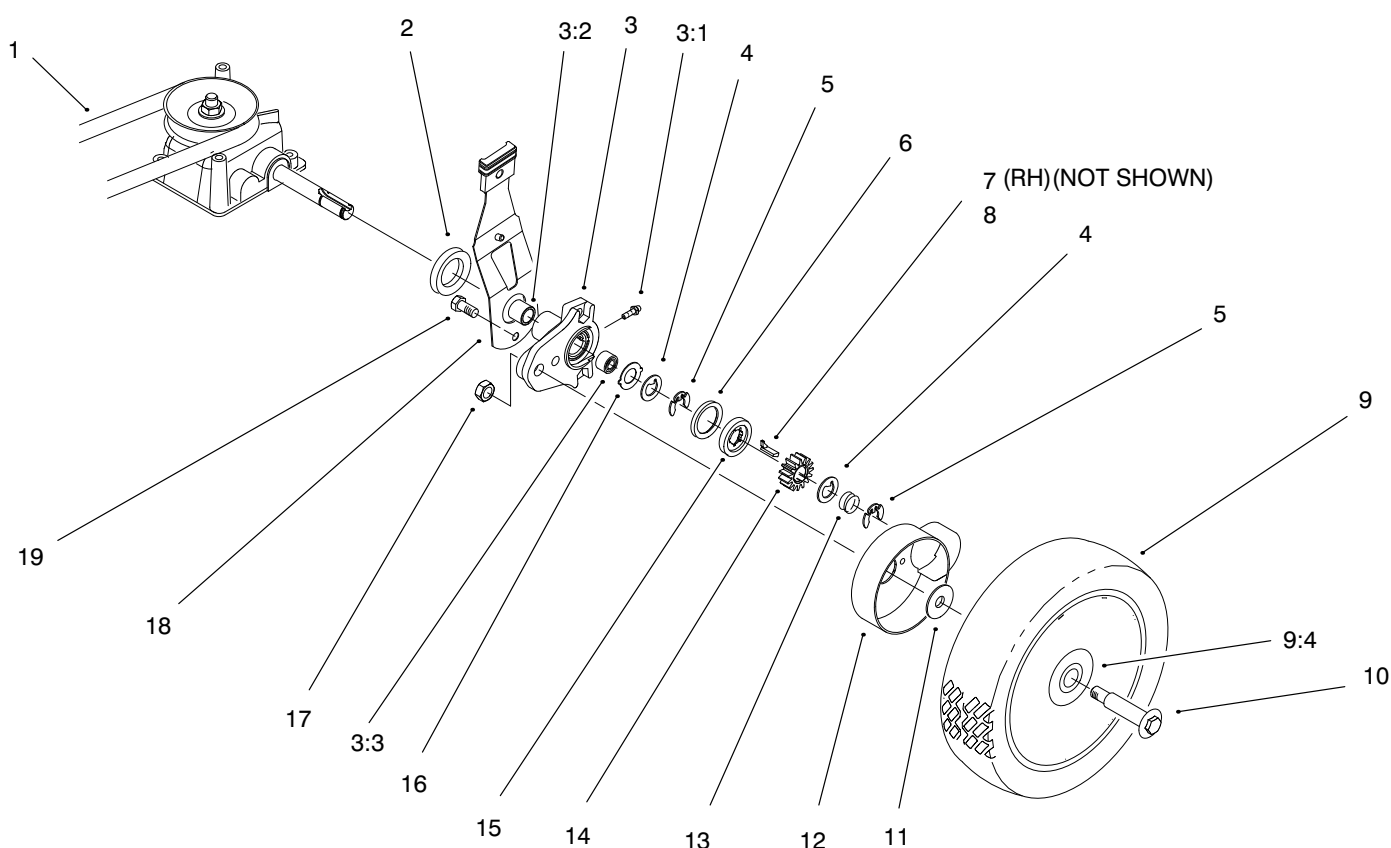


Sheet No.:4

## Gearcase & Wheel Assembly
 
| Ref. No. | Part No. | Qty. | Description           |
|----------|----------|------|-----------------------|
| 1        | 93-0232  | 1    | Belt – V              |
| 2        | 614447   | 2    | Spacer–Axle Shaft     |
| 3        | 92-7746  | 2    | ASM: Rear Ht Adj Arm  |
| 3:1      | 302-56   | 1    | Fitting–Zerk          |
| 3:2      | 47-2900  | 1    | Bushing               |
| 3:3      | 70-9760  | 1    | Bushing               |
| 4        | 65-4740  | 4    | Washer–Keyed Thrust   |
| 5        | 65-2720  | 4    | Klip Ring–Special     |
| 6        | 65-4710  | 2    | Ring–Friction         |
| 7        | 66-6040  | 1    | Key–Rocking           |
| 8        | 66-6050  | 1    | Key–Rocking LH        |
| 9        | 92-9590  | 2    | ASM – 8" Wheel        |
| 9:4      | 27-6250  | 2    | Bushing               |
| 10       | 92-1057  | 2    | Shoulder Bolt         |
| 11       | 614426   | 2    | Washer–Stepped        |
| 12       | 94-1609  | 2    | Cover–Wheel           |
| 13       | 65-4720  | 2    | Spring–Compression    |
| 14       | 65-4750  | 2    | Pinion–Gear,15t       |
| 15       | 65-4760  | 2    | Washer                |
| 16       | 65-4730  | 2    | Washer–Pivot Arm      |
| 17       | 610358   | 2    | Nut–Jam, Locking      |
| 18       | 92-1004  | 2    | Spring Arm ASM – Rear |
| 19       | 32144-85 | 2    | Screw–TAP             |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

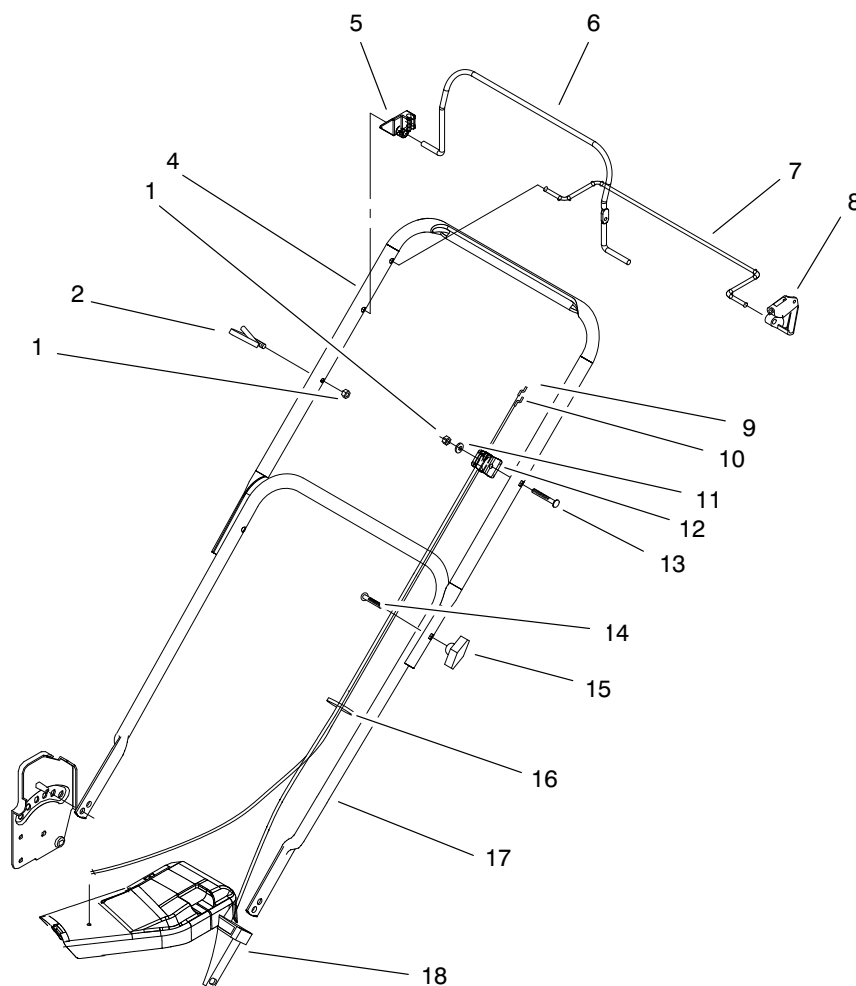


Sheet No.:5

## Handle & Controls Assembly
 
| Ref. No. | Part No.   | Qty. | Description    |
|----------|------------|------|----------------|
| 1        | 3296-73    | 2    | Nut-Lock       |
| 2        | 86-9671    | 1    | Guide-Rope     |
| 4        | 99-1569-05 | 1    | Handle-Upper   |
| 5        | 94-6097    | 1    | Stop           |
| 6        | 99-1570-03 | 1    | Bail-Brake     |
| 7        | 99-1571-03 | 1    | Bail-Traction  |
| 8        | 92-5412    | 1    | Stop-Pivot     |
| 9        | 99-1586    | 1    | Cable-Traction |
| 10       | 99-1587    | 1    | Cable-Brake    |
| 11       | 3256-1     | 1    | Washer-Flat    |
| 12       | 94-6096    | 1    | Anchor - Cable |
| 13       | 92-2269    | 1    | Screw-Handle   |
| 14       | 92-2260    | 2    | Screw-Handle   |
| 15       | 98-7134    | 2    | Knob-Handle    |
| 16       | 3290-378   | 1    | Tie-Cable      |
| 17       | 99-6021-05 | 1    | Lower Handle   |
| 18       | 93-7380    | 1    | Anchor - Cable |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |




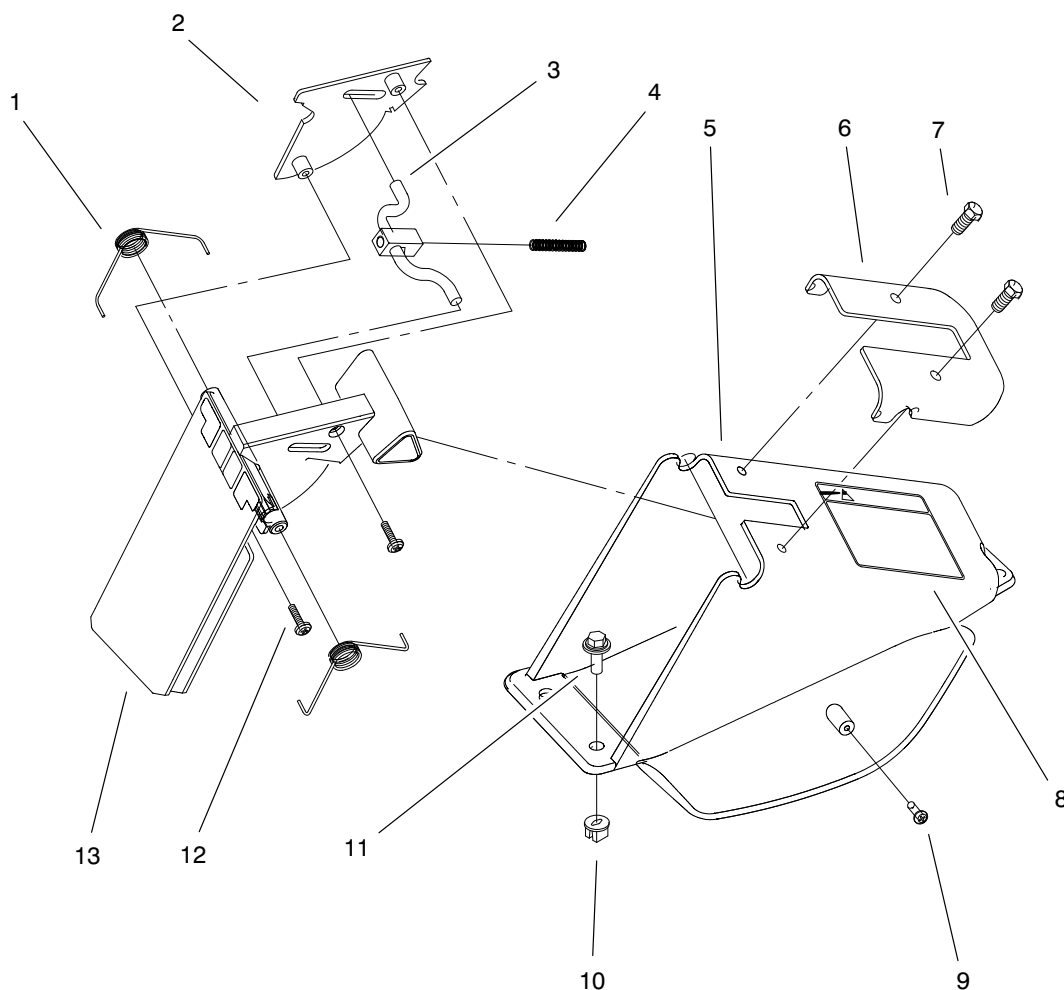

Sheet No.:6

## Discharge Door Assembly
 
| Ref. No. | Part No.   | Qty. | Description          |
|----------|------------|------|----------------------|
| 1        | 88-1090    | 2    | RH Door Spring       |
| 2        | 33-0441    | 1    | Door Cover           |
| 3        | 88-1800    | 1    | Door Latch           |
| 4        | 33-0450    | 1    | Latch Comp Spring    |
| 5        | 93-0263    | 1    | Chute – Discharge    |
| 6        | 93-0267-03 | 1    | Plate-Discharg Chute |
| 7        | 46-8090    | 2    | Screw-Plastite       |
| 8        | 92-8910    | 1    | Decal – Danger       |
| 9        | 32144-111  | 1    | Screw-Plask          |
| 10       | 93-0242    | 4    | Grommet              |
| 11       | 46-6811    | 4    | Screw/Washer         |
| 12       | 32144-32   | 2    | Screw                |
| 13       | 93-0264    | 1    | Door – Discharge     |

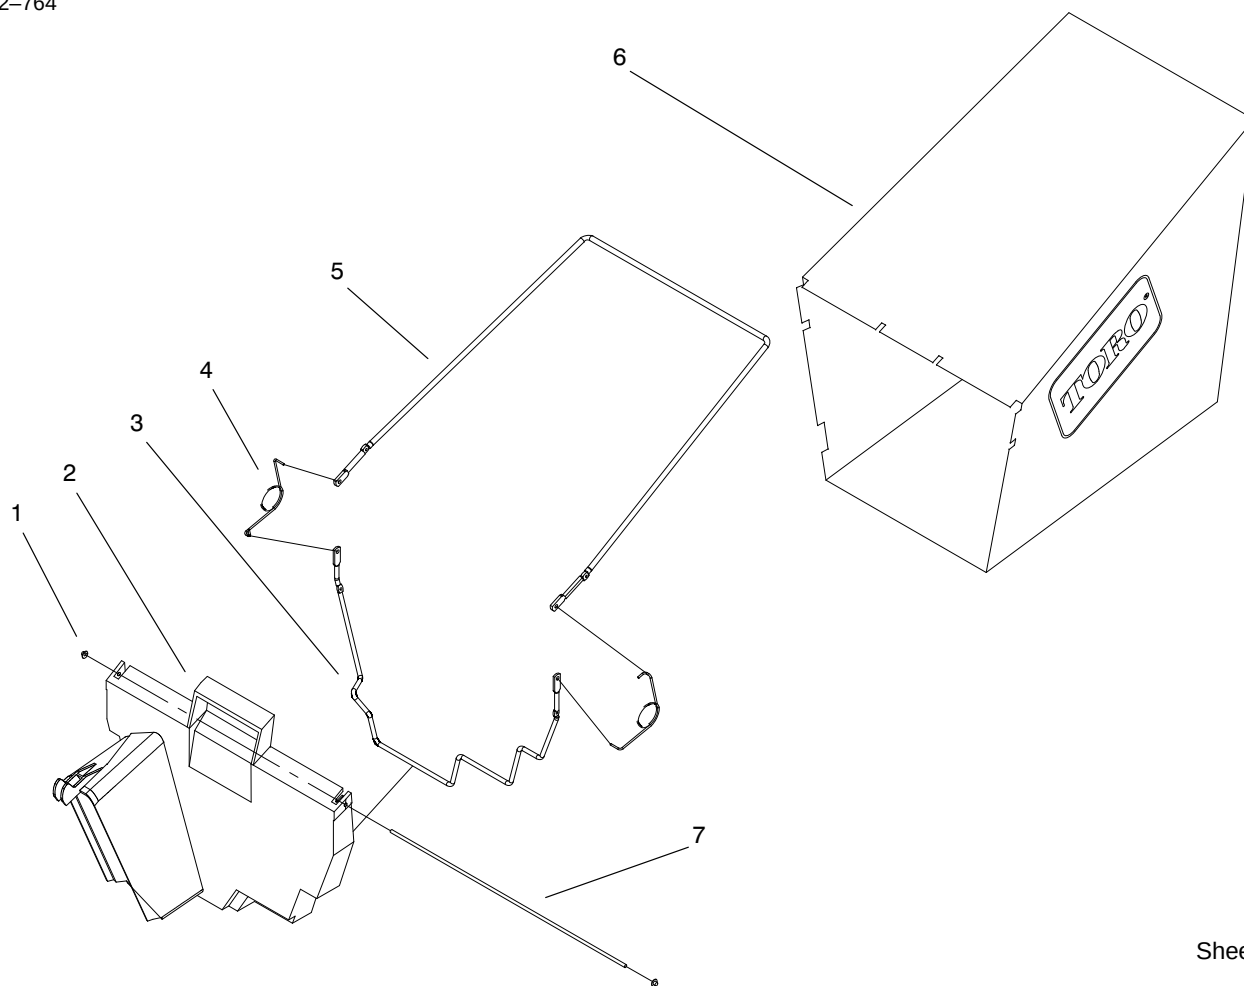


Sheet No.:7

## Grass Bagging Assembly
 
| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| 1        | 3290-422 | 2    | Nut-Push          |
| 2        | 93-0266  | 1    | Door - Bag        |
| 3        | 93-0282  | 1    | Frame - Lower Bag |
| 4        | 36-6910  | 2    | Spring            |
| 5        | 93-0281  | 1    | Frame - Upper Bag |
| 6        | 93-0284  | 1    | Bag - Grass       |
| 7        | 93-0283  | 1    | Hinge - Bag Door  |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

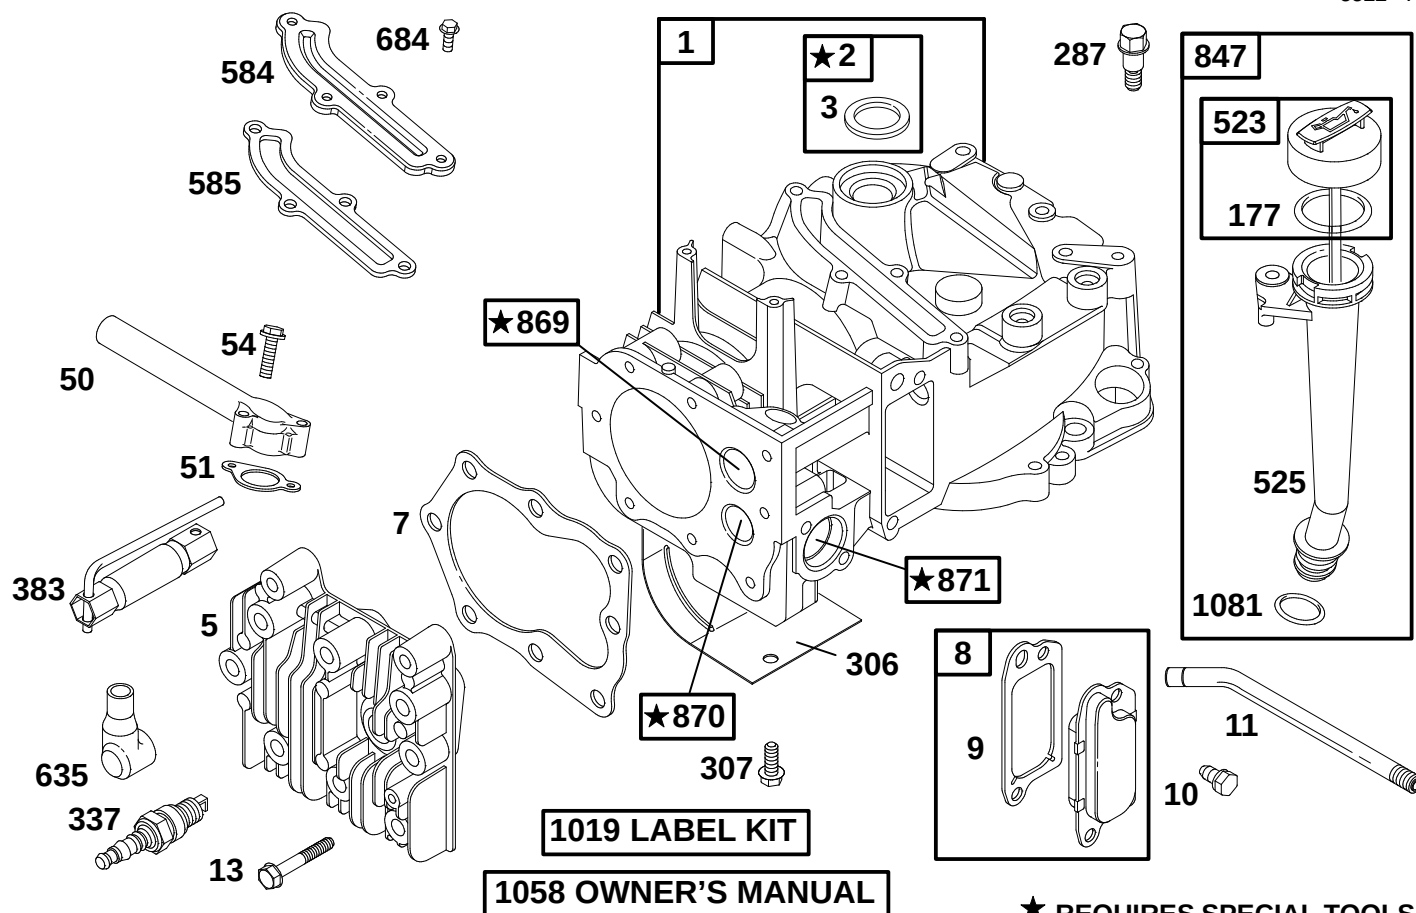

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS  
TO INSTALL. SEE REPAIR  
INSTRUCTION MANUAL.

## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 493260   | Cylinder Assembly    | 1        |
| 2        | 399269   | Bushing              | 1        |
| ★3       | 299819   | Seal—Oil             | 1        |
| 5        | 691160   | Cylinder Head        | 1        |
| ★†7      | 272916   | Cylinder Head Gasket | 1        |
| 8        | 495786   | Breather Assembly    | 1        |
| ★†9      | 272481   | Breather Gasket      | 1        |
| 10       | 94650    | Screw                | 1        |
|          |          | (Breather Assy)      | 1        |
| 11       | 231685   | Breather Tube        | 1        |
| 13       | 94547    | Screw                | 1        |
|          |          | (Cylinder Head)      | 1        |
| 50       | 497465   | Intake Manifold      | 1        |
| ★51      | 272199   | Intake Gasket        | 1        |
| 54       | 94526    | Screw                | 1        |
|          |          | (Intake Manifold)    | 1        |
| ★177     | 280393   | O-Ring Seal          | 1        |
| 287      | 94511    | Screw                | 1        |
|          |          | (Dipstick Tube)      | 1        |
| 306      | 690450   | Shield—Cylinder      | 1        |

 
| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 307      | 690345   | Screw                    | 1        |
|          |          | (Cylinder Shield)        | 1        |
| 337      | 802592   | Sparkplug                | 1        |
| 383      | 89838    | Wrench—Sparkplug         | 1        |
| 523      | 495264   | Dipstick                 | 1        |
| 525      | 495265   | Dipstick Tube            | 1        |
| 584      | 692342   | Breather Passage Cover   | 1        |
| ★585     | 272238   | Breather Passage Gasket  | 1        |
| 635      | 66538    | Boot—Sparkplug           | 1        |
| 684      | 94515    | Screw                    | 1        |
|          |          | (Breather Passage Cover) | 1        |
| 847      | 495263   | Dipstick/Tube Assembly   | 1        |
| 869      | 691155   | Seat—Valve               | 1        |
|          |          | (Intake)                 | 1        |
| 870      | 690380   | Seat—Valve               | 1        |
|          |          | (Exhaust)                | 1        |
| 871      | 262001   | Bushing—Guide            | 1        |
| 1019     | 494256   | Label Kit                | 1        |
| 1058     | 273693   | Owner's Manual           | 1        |
| ★1081    | 280966   | O-Ring Seal              | 1        |

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

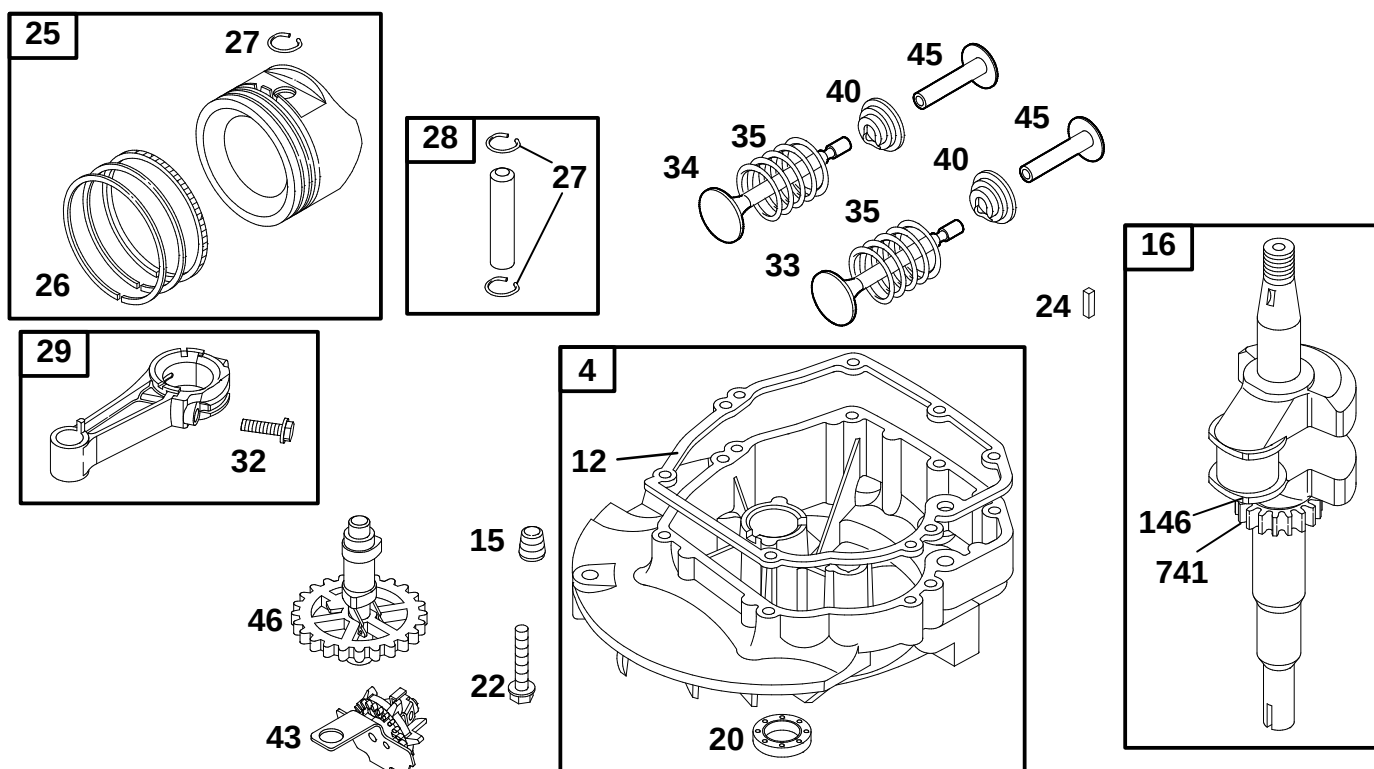

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1
 
| Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|---------------------------------------|----------|
| 4        | 493279   | Engine Sump                           | 1        |
| ★12      | 272198   | Crankcase Gasket                      | 1        |
| 15       | 94880    | Oil Drain Plug                        | 1        |
| 16       | 694079   | Crankshaft                            | 1        |
| ★20      | 399781   | Oil Seal                              | 1        |
| 22       | 94220    | Screw (Engine Sump)                   | 1        |
|          | 94612    | Screw (Used in Hole Nearest Breather) | 1        |
| 24       | 222698   | Key-Flywheel                          | 1        |
| 25       | 499429   | Piston Assembly (Standard)            | 1        |
|          | 499430   | Piston Assembly (.010" O.S.)          | 1        |
|          | 499431   | Piston Assembly (.020" O.S.)          | 1        |
|          | 499432   | Piston Assembly (.030" O.S.)          | 1        |
| 26       | 499425   | Ring Set (Standard)                   | 1        |
|          | 499426   | Ring Set (.010" O.S.)                 | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
|          | 499427   | Ring Set (.020" O.S.)     | 1        |
|          | 499428   | Ring Set (.030" O.S.)     | 1        |
| 27       | 263190   | Piston Pin Lock           | 1        |
| 28       | 499423   | Piston Pin (Standard)     | 1        |
|          | 298908   | Piston Pin (.005" O.S.)   | 1        |
| 29       | 499424   | Connecting Rod (Standard) | 1        |
| 32       | 94699    | Screw (Connecting Rod)    | 1        |
| 33       | 262651   | Exhaust Valve             | 1        |
| 34       | 262652   | Intake Valve              | 1        |
| 35       | 262224   | Valve Spring              | 1        |
| 40       | 93312    | Retainer-Valve            | 1        |
| 43       | 493737   | Governor/Oil Slinger      | 1        |
| 45       | 262204   | Valve Tappet              | 1        |
| 46       | 498275   | Camshaft                  | 1        |
| 146      | 94388    | Key-Timing                | 1        |
| 741      | 262598   | Gear-Timing               | 1        |

★ Included in Gasket Set-See Ref. 358.  
 ● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.  
 † Included in Valve Overhaul Gasket Set-See Ref. 1095.

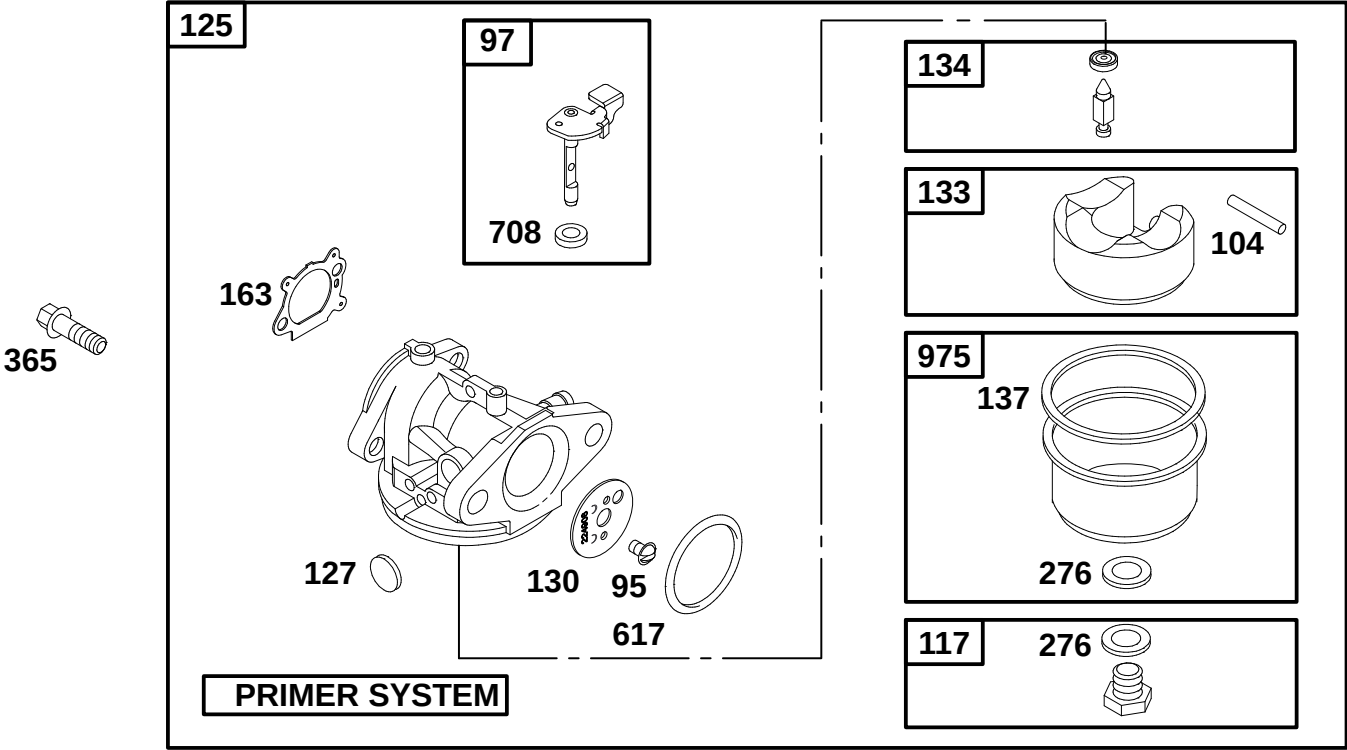


Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL12H802-1767-E1
 
| Ref. No. | Part No. | Description                      | No. Used | Ref. No. | Part No. | Description           | No. Used |
|----------|----------|----------------------------------|----------|----------|----------|-----------------------|----------|
| 95       | 94098    | Screw<br>(Throttle Valve)        | 1        | 130      | 691203   | Valve-Throttle        | 1        |
| 97       | 493267   | Shaft-Throttle                   | 1        | 133      | 398187   | Float-Carburetor      | 1        |
| ●104     | 691242   | Pin-Float Hinge                  | 1        | ●134     | 398188   | Needle/Seat Kit       | 1        |
| 117      | 494870   | Main Jet<br>(Standard)           | 1        | ●◆137    | 693981   | Gasket-Float Bowl     | 1        |
|          | 497315   | Main Jet<br>(High Altitude)      | 1        | ★●◆163   | 272653   | Gasket-Air Cleaner    | 1        |
| 125      | 498170   | Carburetor                       | 1        | ●◆276    | 271716   | Sealing Washer        | 1        |
| ●127     |          | Plug-Welch<br>(Sold in Kit Only) | 1        | 365      | 94525    | Screw<br>(Carburetor) | 1        |
|          |          |                                  |          | ●◆617    | 270344   | O-Ring Seal           | 1        |
|          |          |                                  |          | ●◆708    | 691321   | Seal-Dust             | 1        |
|          |          |                                  |          | 975      | 493640   | Bowl-Float            | 1        |

★ Included in Gasket Set-See Ref. 358.  
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.  
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

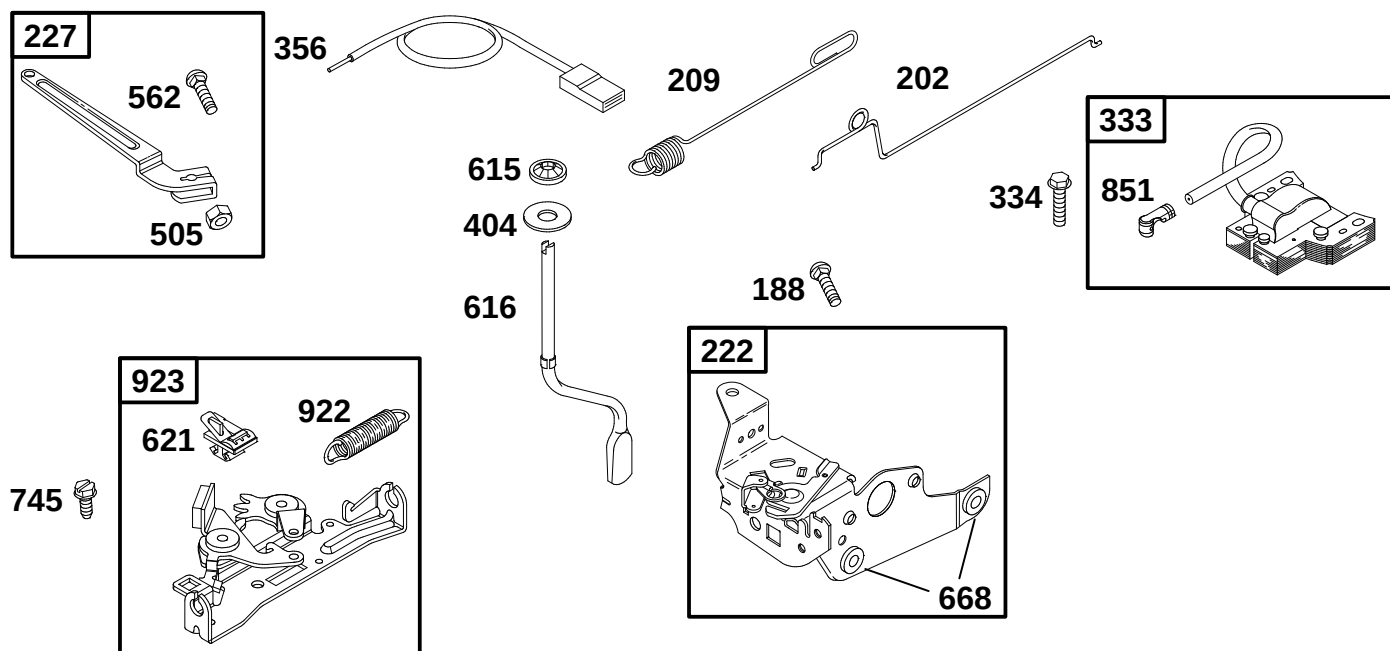

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 188      | 94644    | Screw<br>(Control Bracket)      | 1        |
| 202      | 262579   | Link—Mechanical Governor        | 1        |
| 209      | 691292   | Spring—Governor                 | 1        |
| 222      | 499835   | Bracket—Control                 | 1        |
| 227      | 492349   | Governor Control Lever          | 1        |
| 333      | 802574   | Armature—Magneto                | 1        |
| 334      | 94731    | Screw<br>(Armature—Magneto)     | 1        |
| 356      | 497833   | Wire—Stop                       | 1        |
| 404      | 67072    | Washer<br>(Governor Crank)      | 1        |
| 505      | 231082   | Nut<br>(Governor Control Lever) | 1        |

 
| Ref. No. | Part No. | Description                      | No. Used |
|----------|----------|----------------------------------|----------|
| 562      | 92613    | Bolt<br>(Governor Control Lever) | 1        |
| 615      | 94474    | Retainer—Governor Shaft          | 1        |
| 616      | 691306   | Crank—Governor                   | 1        |
| 621      | 396847   | Switch—Stop                      | 1        |
| ★668     | 493823   | Spacer<br>(Includes 2)           | 1        |
| 745      | 94512    | Screw(Brake)                     | 1        |
| 851      | 493880   | Terminal—Cable                   | 1        |
| 922      | 262640   | Spring—Brake                     | 1        |
| 923      | 493442   | Brake                            | 1        |

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

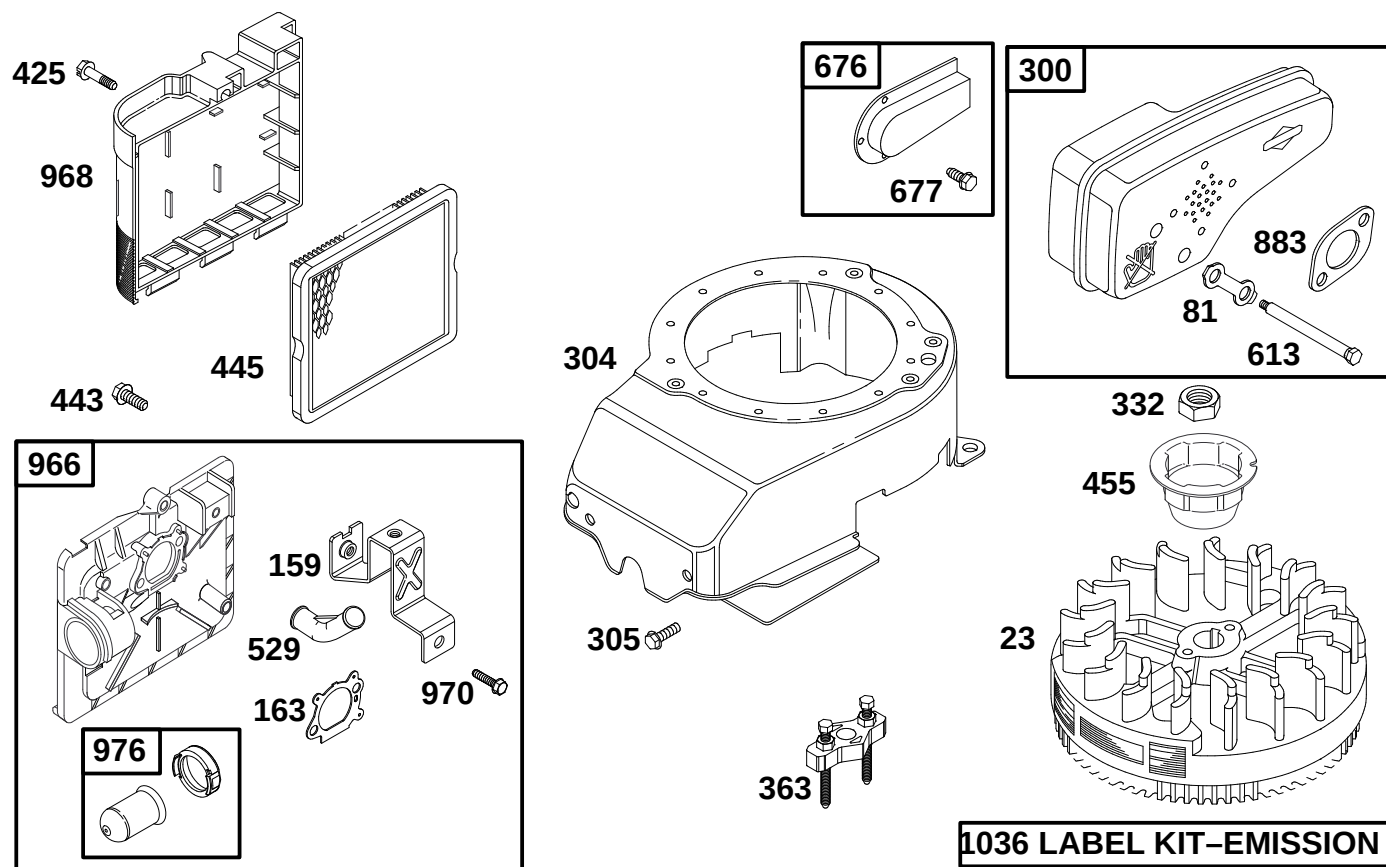

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 23       | 693821   | Flywheel                   | 1        |
| 81       | 223664   | Muffler Screw Lock         | 1        |
| 159      | 224815   | Air Cleaner Primer Bracket | 1        |
| ★◆163    | 272653   | Gasket-Air Cleaner         | 1        |
| 300      | 497838   | Muffler-Exhaust            | 1        |
| 304      | 493293   | Housing-Blower             | 1        |
| 305      | 94744    | Screw(Blower Housing)      | 1        |
| 332      | 92284    | Nut(Flywheel)              | 1        |
| 363      | 19069    | Flywheel-Puller            | 1        |
| 425      | 94872    | Screw(Air Cleaner Cover)   | 1        |
| 443      | 94873    | Screw(Air Cleaner Base)    | 1        |
| 445      | 491588   | Filter-A/C Cartridge       | 1        |

 
| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 455      | 691219   | Cup-Flywheel              | 1        |
| 529      | 281299   | Grommet                   | 1        |
| 613      | 94231    | Screw(Exhaust Muffler)    | 1        |
| 676      | 493871   | Deflector-Muffler         | 1        |
| 677      | 94896    | Screw(Deflector)          | 1        |
| ★†883    | 272253   | Gasket-Exhaust            | 1        |
| 966      | 496116   | Base-A/C Primer           | 1        |
| 968      | 281340   | Cover-Air Cleaner         | 1        |
| 970      | 94749    | Screw(A/C Primer Bracket) | 1        |
| 976      | 496115   | Primer-Carburetor         | 1        |
| 1036     | 499341   | Label Kit-Emission        | 1        |

★ Included in Gasket Set-See Ref. 358.

◆ Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

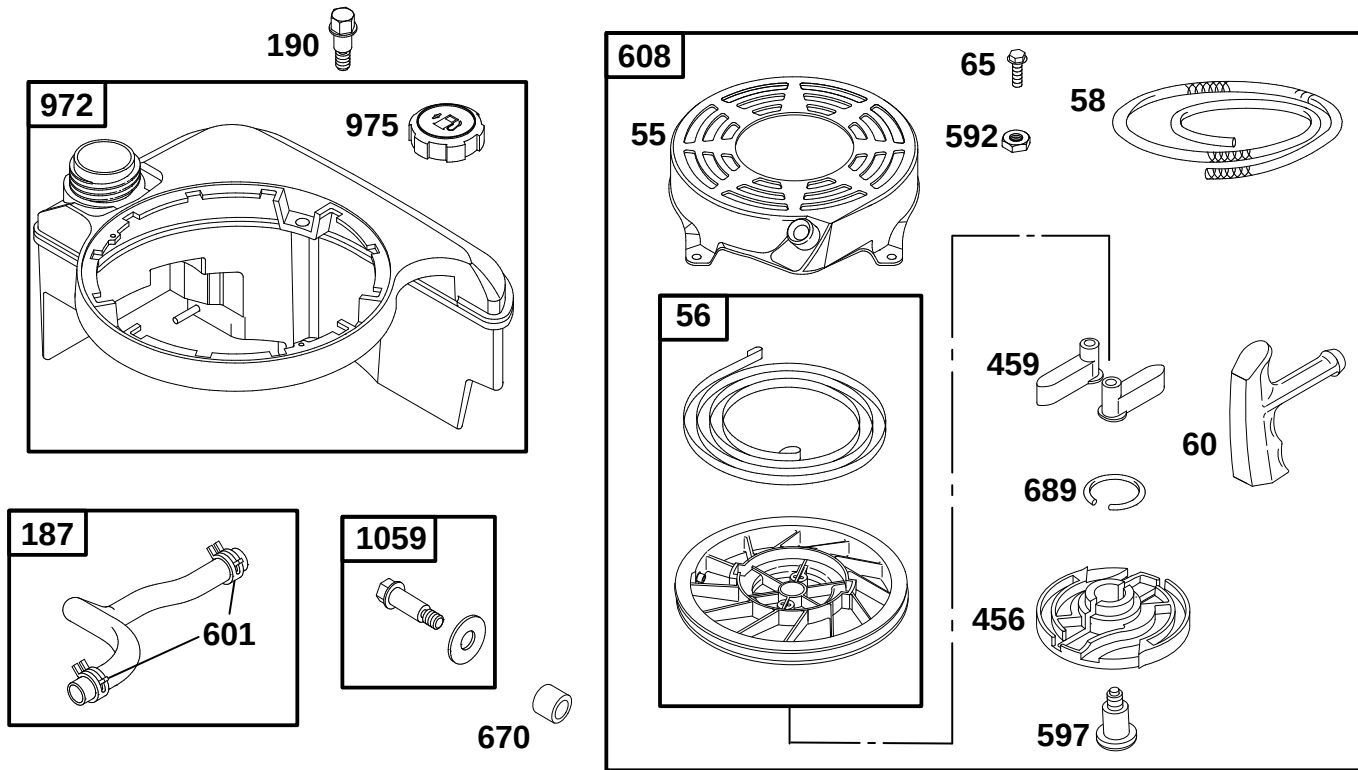

Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL12H802-1767-E1

 
 
 
 
| Ref.<br>No. | Part No. | Description               | No.<br>Used |
|-------------|----------|---------------------------|-------------|
| 55          | 497440   | Rewind Starter Housing    | 1           |
| 56          | 498144   | Assy—Pulley/Spring        | 1           |
| 58          | 280399   | Starter Rope              | 1           |
| 60          | 281434   | Starter Rope Grip         | 1           |
| 65          | 94686    | Screw<br>(Rewind Starter) | 1           |
| 187         | 492792   | Line—Fuel                 | 1           |
| 190         | 94511    | Screw—Shoulder            | 1           |
| 456         | 281503   | Plate—Pawl Friction       | 1           |
| 459         | 281505   | Pawl—Ratchet              | 1           |
| 592         | 92987    | Nut<br>(Rewind Starter)   | 1           |

| Ref.<br>No. | Part No. | Description                    | No.<br>Used |
|-------------|----------|--------------------------------|-------------|
| 597         | 94943    | Screw<br>(Pawl Friction Plate) | 1           |
| 601         | 95162    | Clamp—Fuel Line                | 1           |
| 608         | 497680   | Starter—Rewind                 | 1           |
| 670         | 280512   | Spacer—Fuel Tank               | 1           |
| 689         | 263073   | Spring—Friction                | 1           |
| 972         | 495224   | Tank—Fuel                      | 1           |
| 975         | 397974   | Cap—Fuel Tank                  | 1           |
| 1059        | 398540   | Screw/Washer Kit               | 1           |

- ★ Included in Gasket Set—See Ref. 358.
- Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.  
† Included in Valve Overhaul Gasket Set—See Ref. 1095.



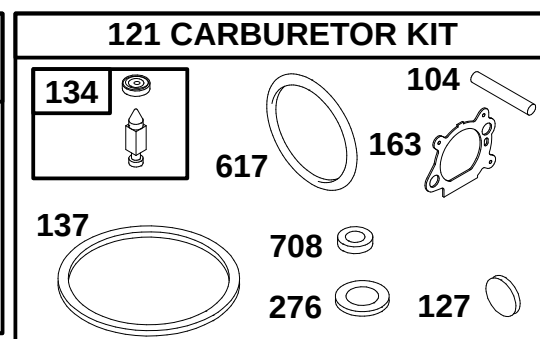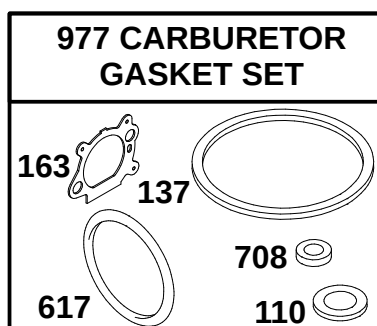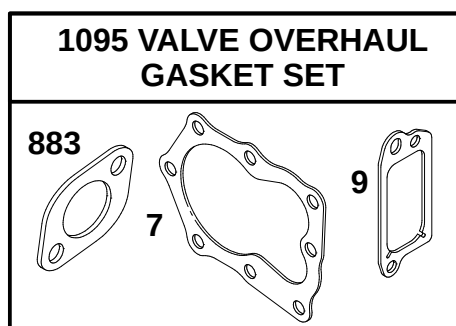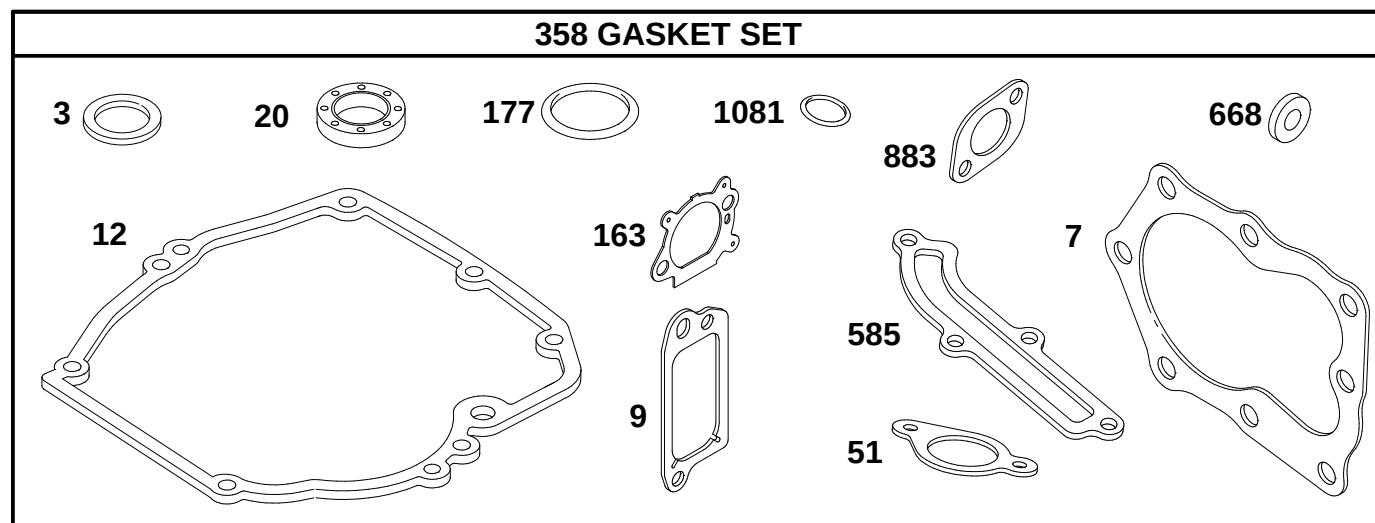

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 3        | *299819  | Oil Seal                        | 1        |
| ★†7      | 272916   | Cylinder Head Gasket            | 1        |
| ★†9      | 272481   | Breather Gasket                 | 1        |
| ★12      | 272198   | Crankcase Gasket                | 1        |
| ★20      | 399781   | Oil Seal                        | 1        |
| ★51      | 272199   | Intake Gasket                   | 1        |
| ●104     | 231371   | Pin - Float Hinge               | 1        |
| ●◆276    | 271716   | Sealing Washer                  | 1        |
| ★177     | 280393   | O-Ring Seal                     | 1        |
| 121      | 498260   | Carburetor Kit                  | 1        |
| ●127     |          | Plug - Welch (Sold in Kit Only) | 1        |
| ●134     | 398188   | Needle/Seat Kit                 | 1        |

| Ref. No. | Part No. | Description                 | No. Used |
|----------|----------|-----------------------------|----------|
| ●◆137    | 693981   | Gasket - Bowl               | 1        |
| ★●◆163   | 272653   | Gasket - Air Cleaner        | 1        |
| 358      | 497316   | Gasket Set                  | 1        |
| ★585     | 272238   | Breather Passage Gasket     | 1        |
| ●◆617    | 270344   | O-Ring Seal                 | 1        |
| ●◆708    | 691321   | Seal - Dust                 | 1        |
| ★668     | 493823   | Spacer (Includes 2)         | 1        |
| ★†883    | 272253   | Gasket - Exhaust            | 1        |
| 977      | 498261   | Gasket Set - Carburetor     | 1        |
| ★1081    | 280966   | O-Ring Seal                 | 1        |
| 1095     | 498528   | Gasket Set - Valve Overhaul | 1        |

★ Included in Gasket Set-See Ref. 358.

● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

# Toro Part Number Index

| Part No.   | Page No. | Ref. No. | Qty. | Description            |
|------------|----------|----------|------|------------------------|
| 605120     | 1        | 12       | 1    | Grommet                |
| 610358     | 4        | 17       | 2    | Nut—Jam, Locking       |
| 613227     | 3        | 14       | 1    | Screw — Set            |
| 614426     | 4        | 11       | 2    | Washer—Stepped         |
| 614447     | 4        | 2        | 2    | Spacer—Axle Shaft      |
| 614596     | 2        | 5        | 1    | Gear —34t              |
| 614650     | 1        | 26       | 2    | Bolt—Shoulder          |
| 614672     | 1        | 27       | 2    | Bolt—Shoulder          |
| 614673     | 1        | 13       | 1    | Bushing — Actuator Plt |
| 614687     | 1        | 24       | 2    | Arm—Front Spring       |
| 614696     | 2        | 8        | 1    | Shaft—Intermediate     |
| 26-0671    | 3        | 16       | 1    | Screw—Blade            |
| 27-6250    | 4        | 9:4      | 2    | Bushing                |
| 33-0441    | 6        | 2        | 1    | Door Cover             |
| 33-0450    | 6        | 4        | 1    | Latch Comp Spring      |
| 36-4780    | 2        | 6        | 2    | Washer                 |
| 36-4791    | 2        | 11       | 2    | Thrust Washer          |
| 36-6910    | 7        | 4        | 2    | Spring                 |
| 38-7820    | 2        | 13       | 1    | Bearing—Ball           |
| 40-1940    | 1        | 28       | 2    | Washer—Wheel Bolt      |
| 46-6811    | 6        | 11       | 4    | Screw/Washer           |
| 46-8090    | 6        | 7        | 2    | Screw—Plastite         |
| 47-2900    | 4        | 3:2      | 1    | Bushing                |
| 49-2040    | 1        | 9        | 1    | Screw—Taptite          |
| 49-2040    | 2        | 9        | 4    | Screw—Taptite          |
| 55-3760    | 2        | 10       | 1    | 15 T Pinion            |
| 60-8750    | 2        | 12       | 2    | Bushing                |
| 60-8850    | 2        | 3        | 2    | Bushing—Output         |
| 60-8890    | 2        | 15       | 1    | Bevel Pinion Gear      |
| 62-6660    | 2        | 18       | 1    | Spacer                 |
| 65-2720    | 4        | 5        | 4    | Klip Ring—Special      |
| 65-4710    | 4        | 6        | 2    | Ring—Friction          |
| 65-4720    | 4        | 13       | 2    | Spring—Compression     |
| 65-4730    | 4        | 16       | 2    | Washer—Pivot Arm       |
| 65-4740    | 4        | 4        | 4    | Washer—Keyed Thrust    |
| 65-4750    | 4        | 14       | 2    | Pinion—Gear,15t        |
| 65-4760    | 4        | 15       | 2    | Washer                 |
| 66-6040    | 4        | 7        | 1    | Key—Rocking            |
| 66-6050    | 4        | 8        | 1    | Key—Rocking LH         |
| 70-9760    | 4        | 3:3      | 1    | Bushing                |
| 82-8550-03 | 3        | 8        | 1    | Shield—Muffler         |
| 86-9671    | 5        | 2        | 1    | Guide—Rope             |
| 88-1090    | 6        | 1        | 2    | RH Door Spring         |
| 88-1800    | 6        | 3        | 1    | Door Latch             |
| 92-1004    | 4        | 18       | 2    | Spring Arm ASM — Rear  |
| 92-1008    | 1        | 23       | 4    | Knob—Height Adj Lever  |
| 92-1024-03 | 3        | 22       | 1    | Belt Guide             |
| 92-1057    | 4        | 10       | 2    | Shoulder Bolt          |
| 92-1616    | 1        | 11       | 1    | Screw—Thread Forming   |
| 92-2260    | 5        | 14       | 2    | Screw—Handle           |
| 92-2269    | 5        | 13       | 1    | Screw—Handle           |
| 92-2914    | 1        | 16       | 1    | Decal — HOC R          |
| 92-2915    | 1        | 15       | 1    | Decal — HOC L          |
| 92-4881-03 | 1        | 35       | 2    | Plate — Hght Adj       |
| 92-4890    | 1        | 30       | 2    | Washer — Wheel         |
| 92-5412    | 5        | 8        | 1    | Stop—Pivot             |
| 92-7727    | 2        | 2        | 1    | Gearcase               |
| 92-7746    | 4        | 3        | 2    | ASM: Rear Ht Adj Arm   |
| 92-8647    | 1        | 21       | 1    | Shield — Trailing      |
| 92-8910    | 6        | 8        | 1    | Decal — Danger         |
| 92-9590    | 4        | 9        | 2    | ASM — 8" Wheel         |
| 92-9591    | 1        | 25       | 2    | Assembly — 7" Wheel    |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.    | Page No. | Ref. No. | Qty. | Description                           |
|-------------|----------|----------|------|---------------------------------------|
| 93-0209     | 1        | 7        | 1    | Cover – Transmission                  |
| 93-0216     | 1        | 34       | 1    | Kicker – Front                        |
| 93-0217     | 3        | 12       | 1    | Kicker – Rear                         |
| 93-0219-03  | 3        | 18       | 1    | Accelerator                           |
| 93-0223-03  | 3        | 11       | 1    | Baffle – Rear (Black)                 |
| 93-0228-03  | 1        | 10       | 1    | Guide – Transmission                  |
| 93-0231     | 1        | 32       | 1    | Screw – PPH                           |
| 93-0231     | 3        | 10       | 1    | Screw – PPH                           |
| 93-0232     | 4        | 1        | 1    | Belt – V                              |
| 93-0233     | 1        | 17       | 1    | ASM – LH Handle Bracket               |
| 93-0234     | 1        | 5        | 1    | ASM – RH Handle Bracket               |
| 93-0239     | 2        | 7        | 1    | Shaft – Output                        |
| 93-0240     | 1        | 14       | 1    | ASM – Transmission                    |
| 93-0241     | 3        | 19       | 1    | Blade – Steel Deck (Raw)              |
| 93-0242     | 6        | 10       | 4    | Grommet                               |
| 93-0243     | 3        | 3        | 1    | Shroud–Quantum Wedge                  |
| 93-0263     | 6        | 5        | 1    | Chute – Discharge                     |
| 93-0264     | 6        | 13       | 1    | Door – Discharge                      |
| 93-0266     | 7        | 2        | 1    | Door – Bag                            |
| 93-0267-03  | 6        | 6        | 1    | Plate–Discharg Chute                  |
| 93-0281     | 7        | 5        | 1    | Frame – Upper Bag                     |
| 93-0282     | 7        | 3        | 1    | Frame – Lower Bag                     |
| 93-0283     | 7        | 7        | 1    | Hinge – Bag Door                      |
| 93-0284     | 7        | 6        | 1    | Bag – Grass                           |
| 93-4105     | 1        | 6        | 1    | Decal – Bag Door                      |
| 93-4196-03  | 3        | 15       | 1    | Shield – Grass                        |
| 93-4354     | 3        | 4        | 1    | Decal – Recoil                        |
| 93-6667     | 1        | 4        | 1    | Decal – Warning                       |
| 93-7380     | 5        | 18       | 1    | Anchor – Cable                        |
| 94-1609     | 4        | 12       | 2    | Cover–Wheel                           |
| 94-6096     | 5        | 12       | 1    | Anchor – Cable                        |
| 94-6097     | 5        | 5        | 1    | Stop                                  |
| 95-1726     | 3        | 13       | 3    | Screw–Taptite w/Patch                 |
| 95-1878     | 3        | 21       | 1    | Pulley                                |
| 95-7403-03  | 1        | 29       | 2    | Brkt–Whl Ht Adj                       |
| 98-3206     | 3        | 2        | 1    | Nameplate – Toro                      |
| 98-7134     | 5        | 15       | 2    | Knob–Handle                           |
| 98-8332     | 3        | 34       | 1    | Knob                                  |
| 99-1569-05  | 5        | 4        | 1    | Handle–Upper                          |
| 99-1570-03  | 5        | 6        | 1    | Bail–Brake                            |
| 99-1571-03  | 5        | 7        | 1    | Bail–Traction                         |
| 99-1586     | 5        | 9        | 1    | Cable–Traction                        |
| 99-1587     | 5        | 10       | 1    | Cable–Brake                           |
| 99-5236     | 3        | 36       | 1    | Housing Sp Steel (Service)            |
| 99-5291     | 3        | 26       | 1    | Rod–Cover (Steel Side Discharge)      |
| 99-5292     | 3        | 27       | 1    | Bracket–Cover (Steel Side Discharge)  |
| 99-5293     | 3        | 28       | 1    | Spring–Torsion (Steel Side Discharge) |
| 99-5294     | 3        | 29       | 1    | Cover–Side (Steel Side Discharge)     |
| 99-5295     | 3        | 30       | 1    | Chute–Side (Side Discharge)           |
| 99-6021-05  | 5        | 17       | 1    | Lower Handle                          |
| 99-6345     | 3        | 25       | 1    | Decal – Deck (Int Steel)              |
| 99-6349     | 3        | 35       | 1    | Baffle                                |
| 100-1176    | 2        | 17       | 2    | Pulley Half                           |
| 100-1178    | 3        | 20       | 1    | ASM–Blade Driver – Gts 10             |
| 100-1179-03 | 1        | 33       | 1    | Baffle Front – Weldment (Black)       |
| 100-1589-03 | 3        | 33       | 1    | Clamp–Door                            |
| 2210-316    | 3        | 5        | 1    | Stop–Rope F/W Engine                  |
| 302-56      | 4        | 3:1      | 1    | Fitting–Zerk                          |
| 322-3       | 1        | 20       | 6    | Screw–HH                              |
| 3229-11     | 3        | 31       | 2    | Screw–CARR                            |
| 3253-22     | 3        | 17       | 1    | Washer–Lock/Sp                        |
| 3256-1      | 5        | 11       | 1    | Washer–Flat                           |

\*Not Illustrated

# Toro Part Number Index (cont.)

| <b>Part No.</b> | <b>Page No.</b> | <b>Ref. No.</b> | <b>Qty.</b> | <b>Description</b> |
|-----------------|-----------------|-----------------|-------------|--------------------|
| 3256-24         | 2               | 14              | 1           | Washer-Flat        |
| 3285-19         | 2               | 4               | 2           | Pin-Groove         |
| 3290-378        | 5               | 16              | 1           | Tie-Cable          |
| 3290-422        | 7               | 1               | 2           | Nut-Push           |
| 3296-2          | 1               | 3               | 1           | Nut-Lock Esna      |
| 3296-5          | 2               | 16              | 1           | Nut-Lock Ni        |
| 3296-29         | 1               | 22              | 6           | Nut-Lock Ni        |
| 3296-39         | 1               | 31              | 2           | Nut-Lock Ni        |
| 3296-73         | 5               | 1               | 2           | Nut-Lock           |
| 32105-27        | 1               | 2               | 1           | Screw              |
| 32128-32        | 3               | 23              | 2           | Nut-Hex, Flange    |
| 32144-4         | 1               | 1               | 3           | Screw-HH           |
| 32144-32        | 6               | 12              | 2           | Screw              |
| 32144-73        | 3               | 9               | 3           | Screw              |
| 32144-85        | 4               | 19              | 2           | Screw-TAP          |
| 32144-111       | 6               | 9               | 1           | Screw-Plask        |
| 32144-119       | 1               | 8               | 1           | Screw-Pth          |
| 32144-121       | 3               | 6               | 2           | Screw-Pan Hd       |
| 614668-03       | 2               | 1               | 1           | Gear Case Cover    |