



48cm Recycler[®]

Rear Bagging Mower

Model No. 20824 – 9900001 & Up

PROTOTYPE

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck Assembly	1	Engine Assembly	7
Handle Assembly	2	Blade Assembly	8
Handle Assembly	3	Engine GTS 200	9-18
Deck Suspension Assembly	4	Toro Part Number Index	19-21
Bag and Components Assembly	5		
Gear Case Assembly #71-9600	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

 
Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

PROTOTYPE

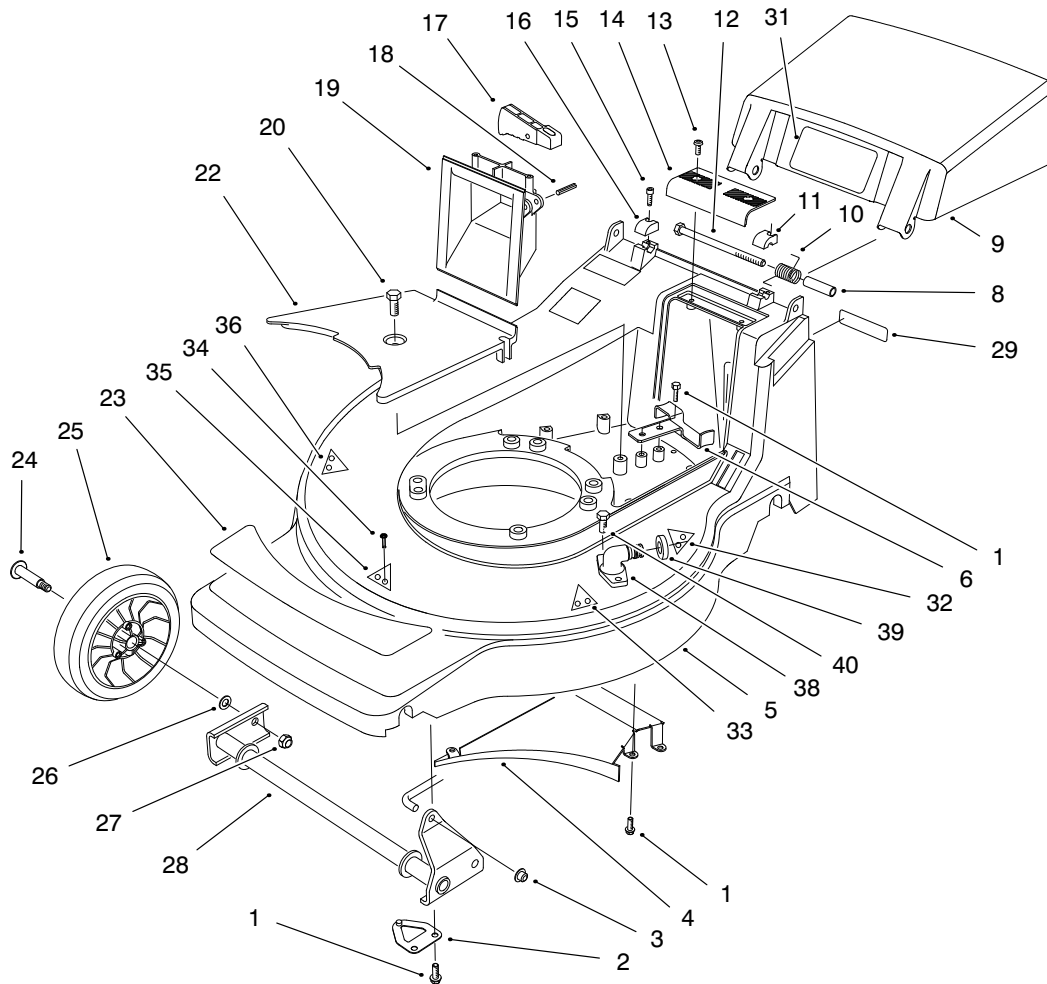


Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-4	10	Screw-TAP
2	71-8830	2	Retainer-ASM
3	32112-11	1	Nut
4	71-7990	1	Ramp-Discharge
5	95-6134	1	Housing-Deck (Incl. Ref#23, 32-36 & 38-40)
6	71-7890	1	Guide-Belt
8	71-8580	2	Spacer-Door
9	17-1569	1	Door-Discharge (Incl. Ref. #31)
10	71-9840	2	Spring-Door
11	71-7900	1	Cap-Bolt LH
12	322-29	2	Screw-HH
13	32144-97	2	Screw-PPH
14	71-7860	1	Grip-Upper
15	65-5210	2	Screw-Tf
16	71-7910	1	Cap-Bolt RH
17	71-7930	1	Trigger-HOC
18	3284-5	1	Pin-Groove
19	71-7870	1	Grip-Lower
20	32144-70	1	Screw-TAP
22	71-7920	1	Cover-Belt
23	92-7863	1	Decal-Deck
24	92-1057	2	Bolt-Wheel
25	92-9591	2	Wheel & Tire ASM


Ref. No.	Part No.	Qty.	Description
26	40-1940	2	Washer
27	603773	2	Nut-Lock
28	71-7820	1	Pivot
31	93-4105	1	Decal-Danger
32	71-9250	1	Kicker-Rear
33	71-9440	1	Kicker-Front
34	32144-111	8	Screw - PPH
35	71-8920	1	Kicker-Front
36	71-9230	1	Kicker-Rear
38	95-2747	1	Fitting-Washout
39	46-6290	1	O-Ring
40	46-6811	2	Screw-HWH

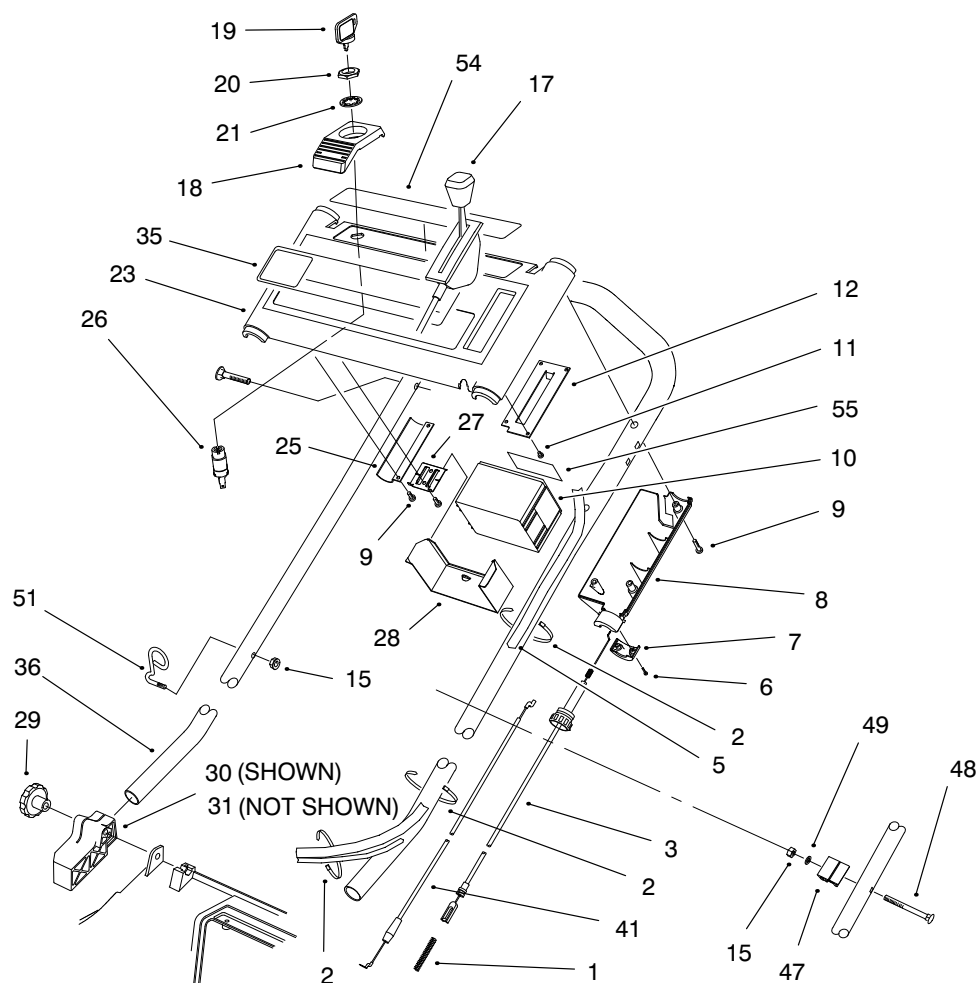 

Sheet No.:3

Handle Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	71-8310	1	Spring-Compression	35	93-7175	1	Decal-Panel Key
2	3290-378	3	Tie-Cable	36	94-4367	1	Handle-Sp
3	95-9649	1	Cable-Traction	41	93-1116	1	Cable-Brake
5	80-4797	1	Wire Harness	47	92-7729	1	Anchor-Cable
6	32144-99	2	Screw-PPH	48	95-4453	1	Screw-Handle
7	71-7630	1	Cap-Throttle	49	3256-1	1	Washer-Flat
8	98-3247	1	Cover-Throttle	51	95-4457	1	Rope-Guide
9	32144-97	9	Screw-PPH	54	98-2014	1	Decal-Instruction
10	55-7520	1	Battery Pack	55	93-6668	1	Decal-Instruct
11	32144-98	4	Screw-PPH				
12	71-8040	1	Plate-Throttle				
15	3296-73	2	Nut-Lock				
17	98-1509	1	Control-Throttle				
18	71-8200	1	Bracket-Switch				
19	63-8360	1	Key-Ignition				
20	218-461	1	Nut-HH (F/W Sw)				
21	3254-5	1	Washer-Lock				
23	98-9237	1	Panel-Control (Incl. Ref# 35 & 54)				
25	71-8130	1	Bracket-Control				
26	46-5780	1	Switch-Starter				
27	95-2739	2	Bracket-Battery				
28	55-8180	1	Retainer-Battery				
29	19-4050	2	Knob				
30	71-8100	1	Mount-Handle RH				
31	71-8090	1	Mount-Handle LH				

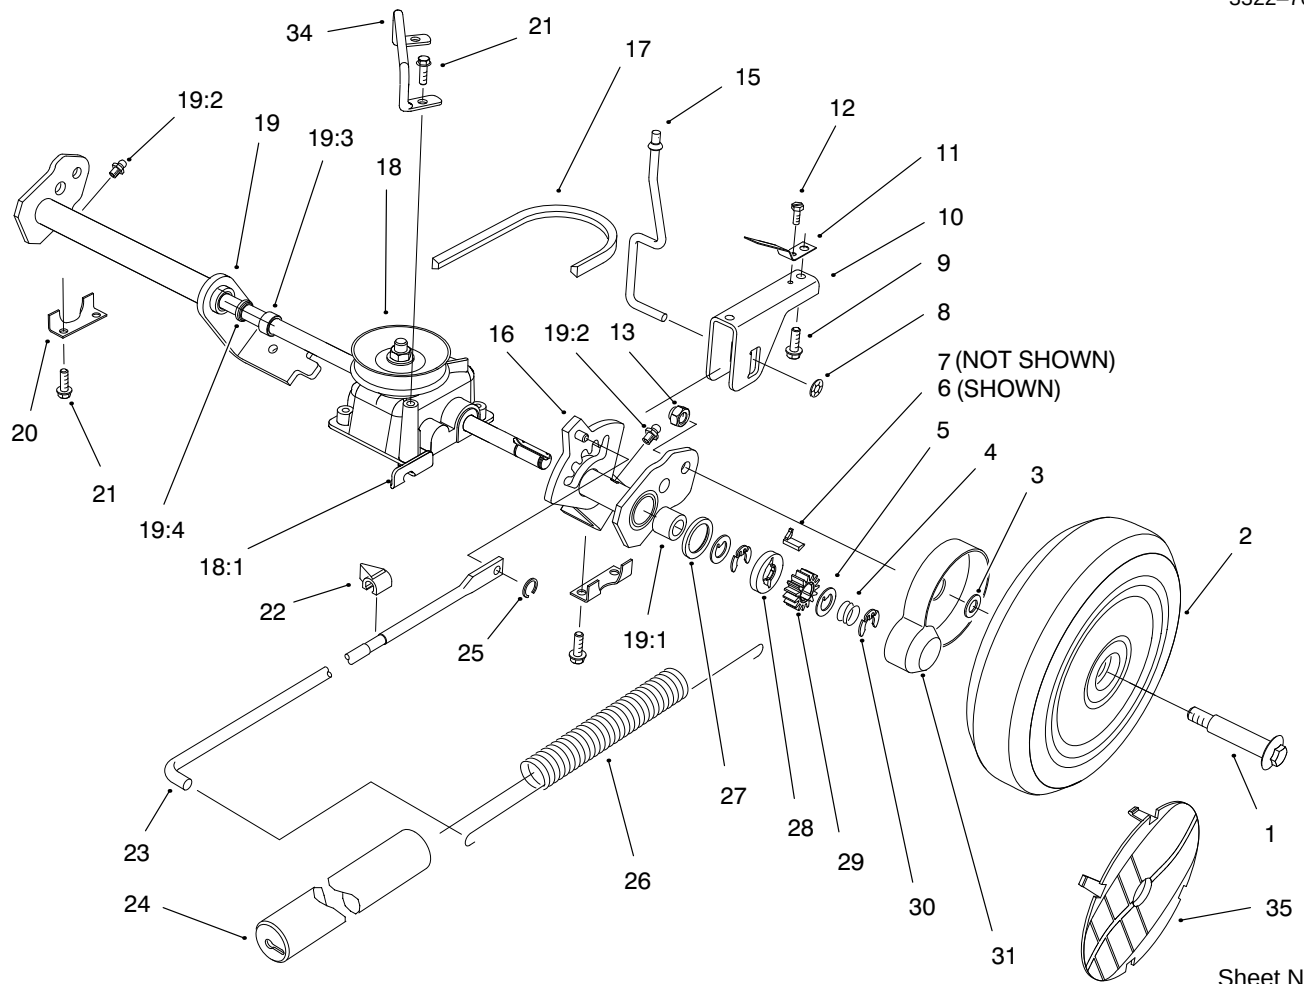 

Sheet No.:5

Deck Suspension Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder	19:1	48-2060	2	Bearing-Needle
2	99-8136	2	Wheel-ASM	19:2	302-26	2	Fitting-Grease
3	74-1671	2	Spacer-Cover	19:3	47-2890	2	Bushing
4	65-4720	2	Spring-Compression	19:4	47-6730	2	Seal-Oil
5	65-4740	4	Washer-Thrust	20	71-7770	2	Plate-Securing
6	66-6050	1	Key-Rocking LH	21	32144-4	6	Screw-TAP
7	66-6040	1	Key-Locking RH	22	71-7980	1	Indicator-HOC
8	32112-13	1	Nut-Push	23	71-7970	1	Rod-Link
9	63-8590	2	Screw	24	71-8450	1	Cover-Spring
10	71-8080	1	Saddle-HOC	25	32151-93	1	Ring-Grip
11	71-8060	2	Spring-Trigger	26	71-7740	1	Spring
12	32144-31	1	Screw	27	65-4710	2	Ring-Friction
13	603773	2	Nut-Lock	28	65-4760	2	Washer
15	71-7840	1	Rod-Trigger	29	65-4750	2	Gear-Pinion
16	92-9677	1	Arm-Pivot LH	30	65-2720	4	Ring-Retaining
17	71-9450	1	V Belt	31	74-1660	2	Cover-Wheel
18	71-9600	1	ASM-Gear Case	34	95-2740	1	Retainer-Belt
18:1	98-2039	1	Bracket - Traction	35	92-7663	1	Cover-Wheel
19	92-9680	1	Arm-Pivot RH				

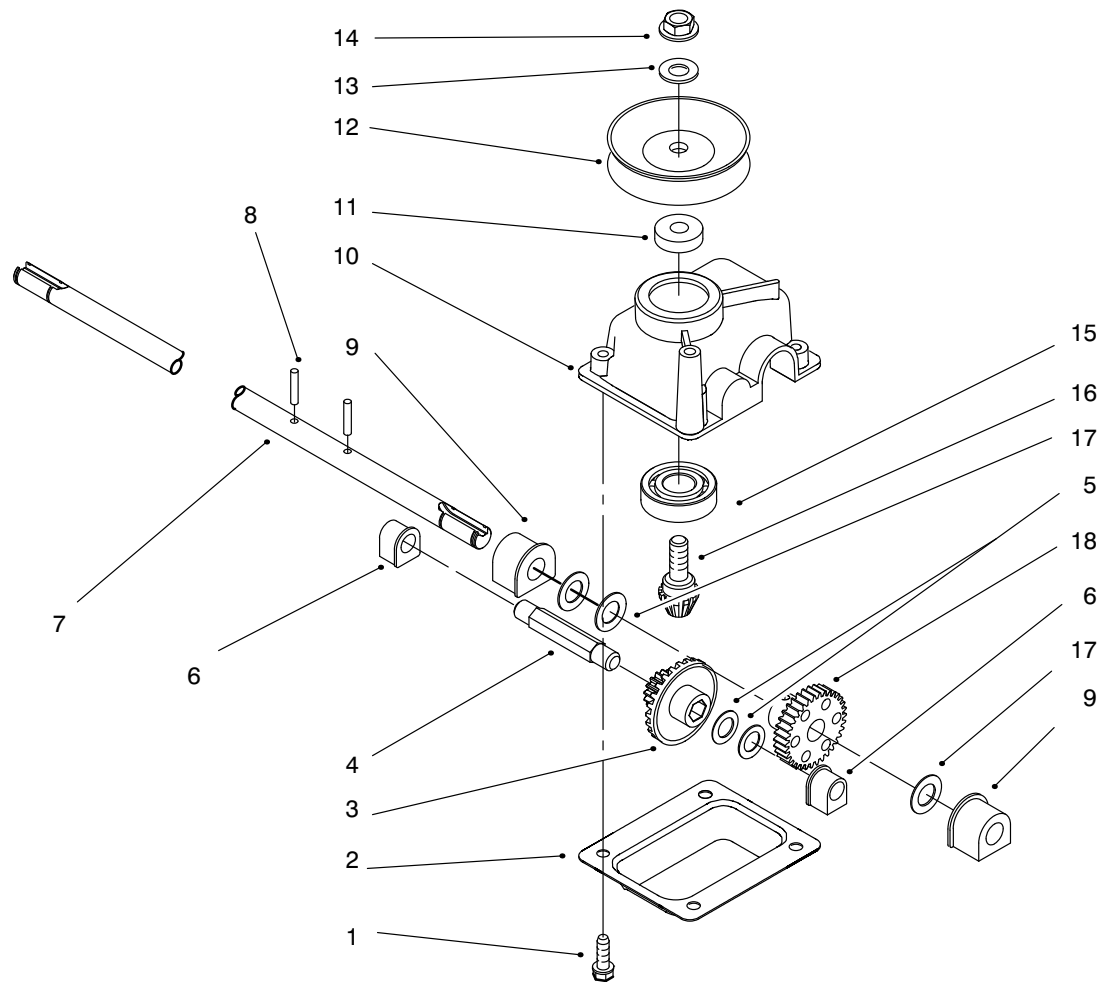 


C-1292

Gear Case Assembly #71-9600

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4				
2	614668	Cover - Gear Case	1				
3	55-3760	Pinion - 15 Tooth	1				
4	614696	Shaft - Intermediate	1				
5	36-4791	Washer	2				
6	60-8750	Bushing	2				
7	71-9620	Shaft - Output	1				
8	32121-114	Pin - Groove	2				
9	60-8850	Bushing - Output	2				
10	614578	Cover - Gear Case	1				
11	62-6660	Spacer	1				
12	71-9610	Pulley - Half	2				
13	3256-24	Washer	1				
14	3296-5	Nut	1				
15	38-7820	Bearing - Ball	1				
16	60-8890	Gear - Bevel Pinion	1				
17	36-4780	Washer - Thrust	3				
18	614596	Gear 34 Tooth	1				
*	71-9600	Gear Case Ass'y Complete	1				

 * Not Illustrated

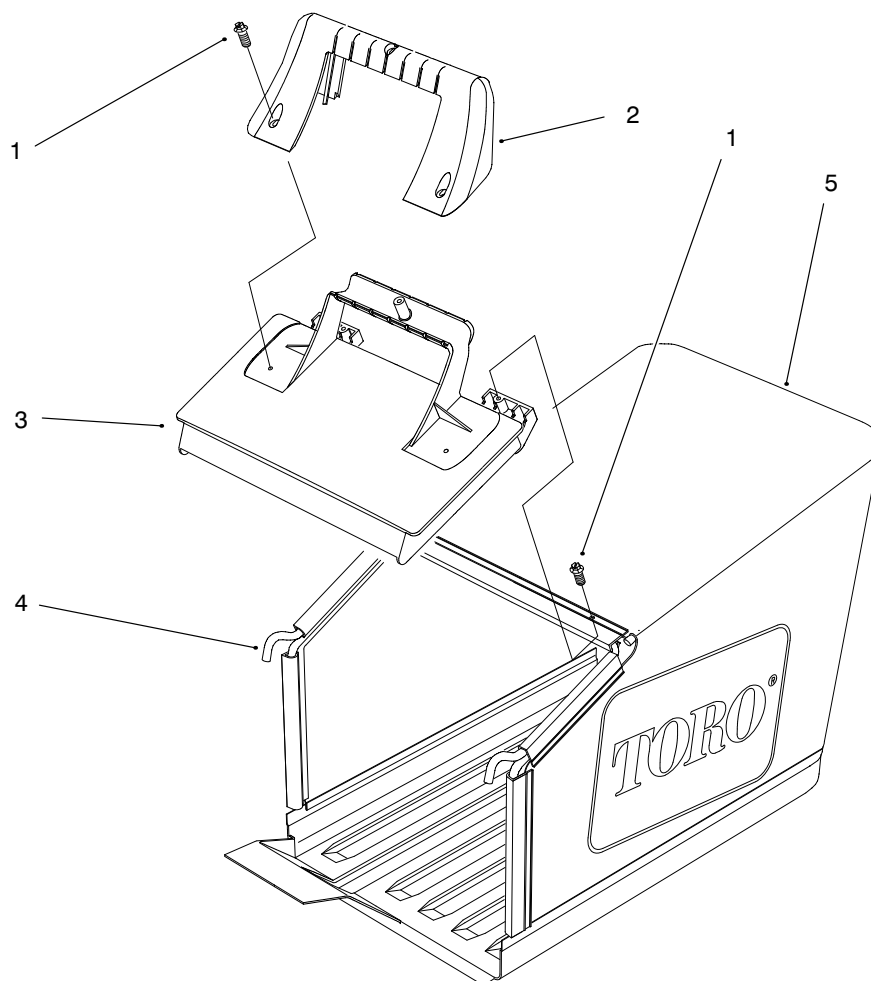


Sheet No.:6

Bag and Components Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-111	5	Screw – PPH
2	71-9480	1	Handle-Door
3	71-9470	1	Door-Bag
4	71-9900	1	Frame
5	71-9460	1	Bag-Grass
*	71-9990	1	Plug-Recycler
*	98-2391	1	Charger-Battery

 
* Not Illustrated

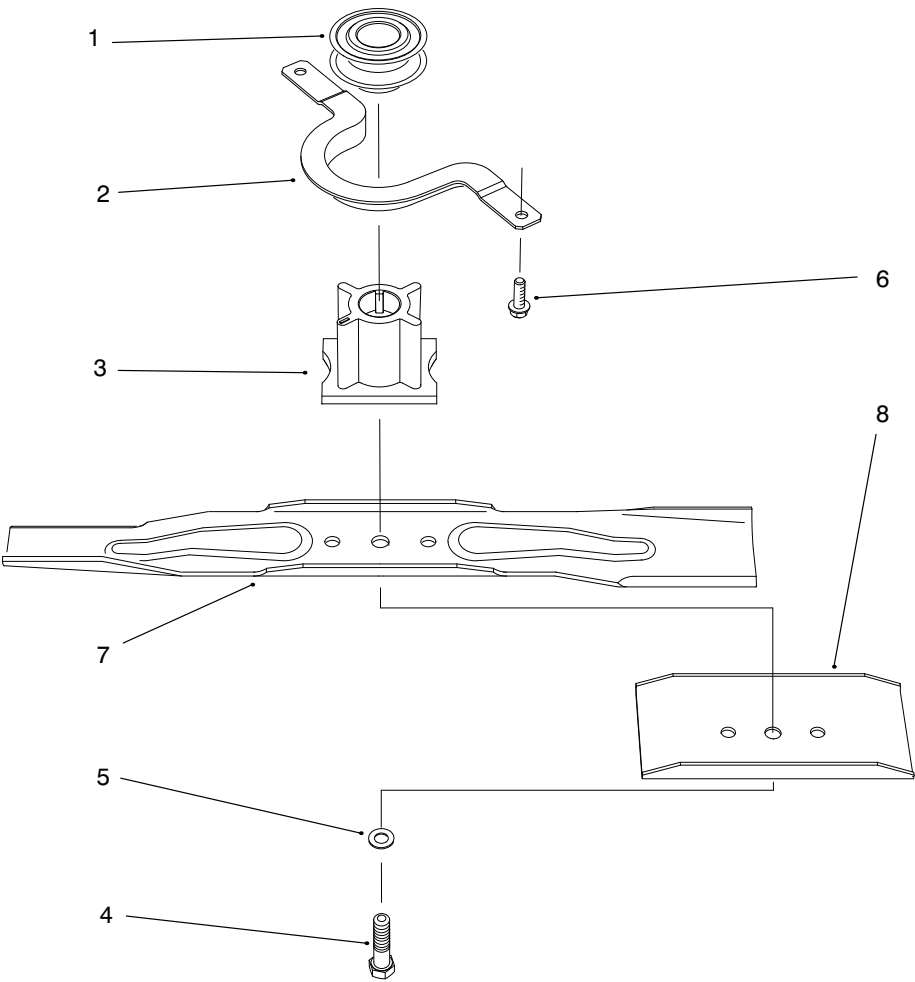

Sheet No.:9

Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	62-7550	1	Pulley-Driver				
2	71-7960	1	Guide-Belt Engine				
3	71-7940	1	Retainer-Blade				
4	26-0672	1	Bolt-Blade				
5	3253-22	1	Washer-Lock				
6	32144-4	2	Screw-TAP				
7	71-9260	1	Blade-Recycler				
8	80-0510	1	Stiffener-Blade				

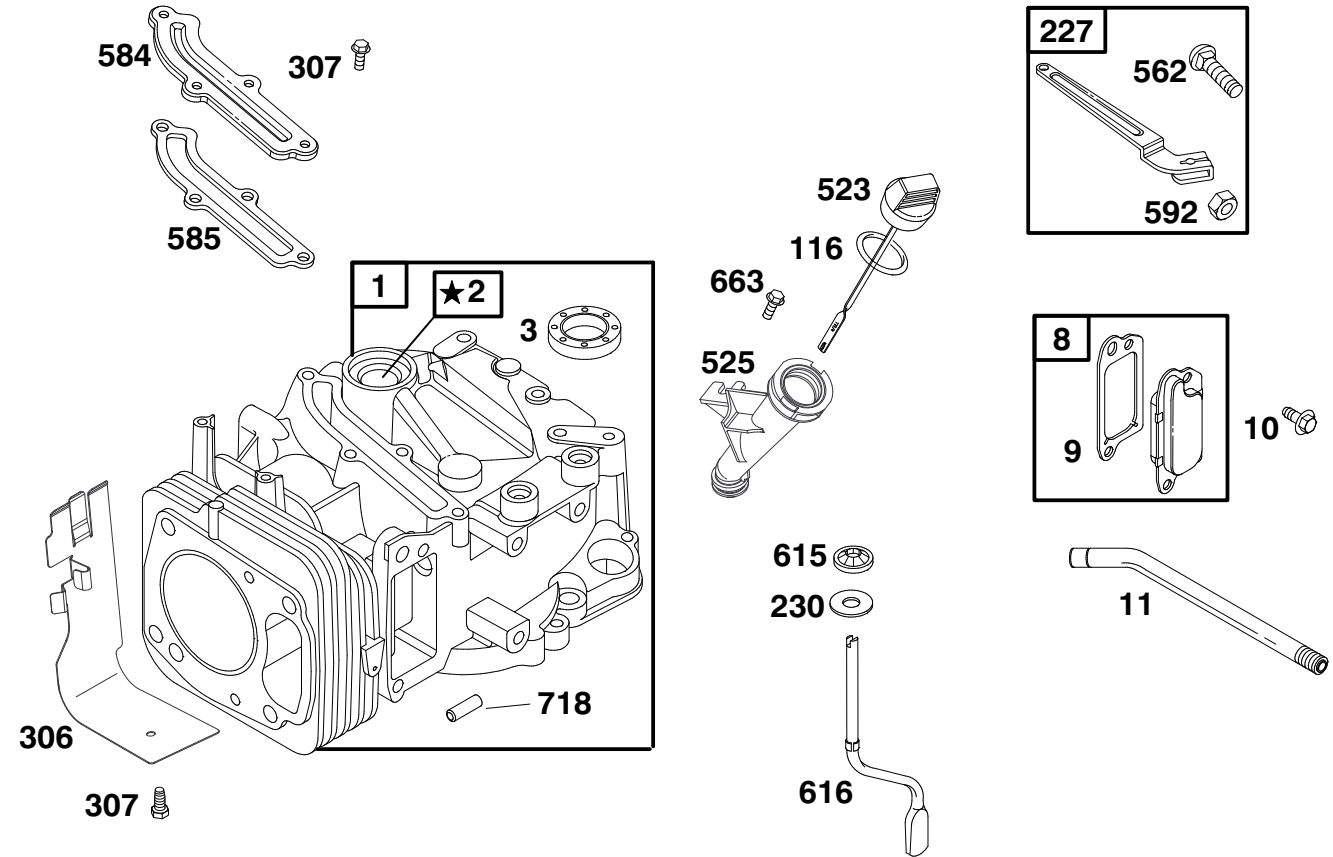 

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	99-0900	Cylinder Assembly	1	307	99-0920	Screw - Hex.	1
2	99-0911	Bushing	1	523	77-7260	Dipstick	1
★3	99-0912	Seal - Oil	1	525	99-0906	Tube - Oil Filler	1
8	77-9260	Breather Assy.	1	562	99-0921	Screw - Hex.	1
†★9	99-0913	Gasket - Breather	1	584	99-0922	Baffle - Cylinder	1
10	99-0914	Screw - Hex.	1	★585	99-0923	Gasket - Breather	1
11	99-0915	Tube - Breather	1	592	99-0924	Nut - Hex.	1
★116	99-0916	Seal - O Ring	1	615	99-0925	Fastener	1
227	99-0917	Lever Assembly - Gov.	1	616	99-0926	Crank - Governor	1
230	99-0918	Washer - Gov. Crank	1	663	99-0927	Screw - Hex.	1
306	99-0919	Shield - Cylinder	1	718	99-0928	Dowel - Sleeve	1

★ Included in Gasket Set - Part No. 99-0920.

 † Included in Valve Overhaul Gasket Set - Part No. 99-0904.

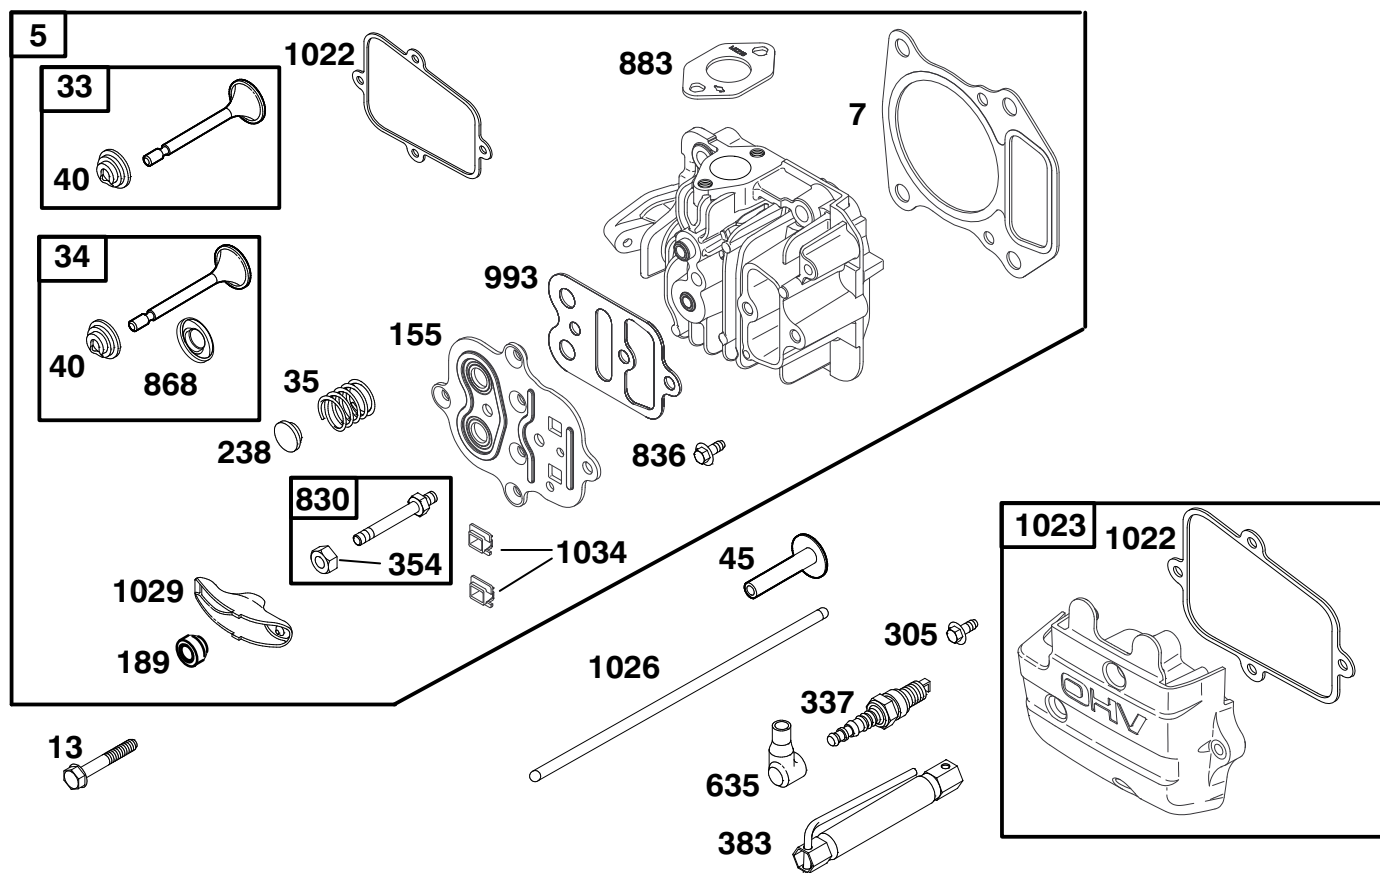


Assemblies include all parts shown in frames.

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
5	99-0929	Head - Cylinder	1	354		Nut - Hex. (Sold in Kit Only).	1
†★7	99-0930	Gasket - Cylinder Head	1	383	99-0944	Wrench - Spark Plug	1
13	99-0931	Screw - Hex.	1	635	77-9190	Elbow - Spark Plug	1
33	99-0932	Valve - Exhaust	1	830	99-0945	Stud - Rocker Arm	1
34	99-0933	Valve - Intake	1	836	99-0941	Screw - Hex.	1
35	99-0934	Spring - Valve	1	†★868	99-0946	Seal - Valve	1
40	99-0935	Retainer - Valve Spring	1	†★883	99-0947	Gasket - Exhaust	1
45	99-0936	Tappet - Valve	1	†★993	99-6264	Gasket - Plate	1
155	99-0938	Plate - Cylinder Head	1	†★1022	99-0907	Gasket - Rocker Cover	1
189	99-0939	Ball - Rocker Arm	1	1023	98-9211	Cover - Rocker	1
238	99-0940	Cap - Valve	1	1026	99-0949	Rod - Push	1
305	99-0942	Screw - Hex.	1	1029	99-0950	Arm - Rocker	1
337	99-0943	Plug - Spark	1	1034	99-0951	Guide - Push Rod	1

★ Included in Gasket Set - Part No. 99-0920.

 † Included in Valve Overhaul Gasket Set - Part No. 99-0904.

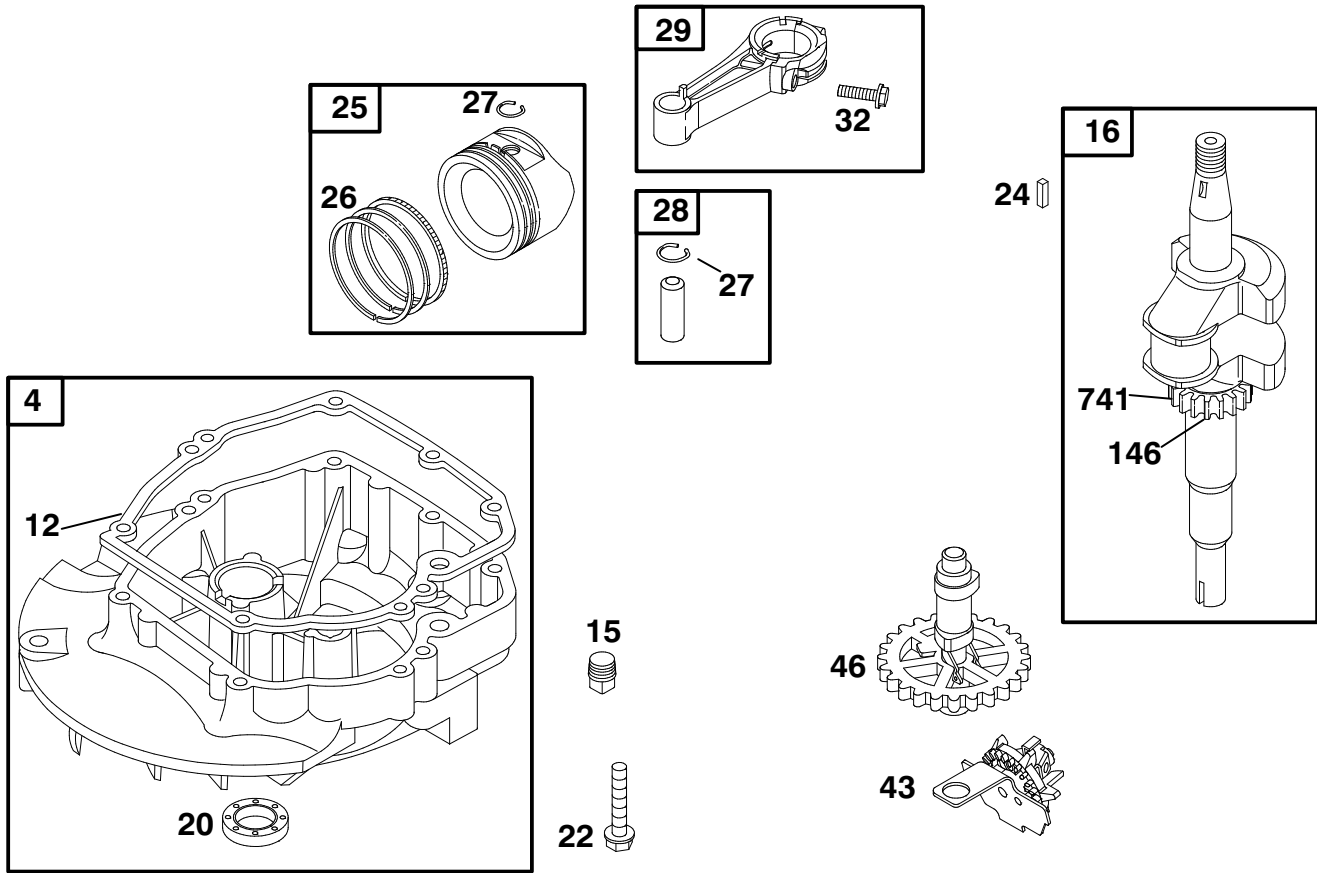


Assemblies include all parts shown in frames.

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used
4	99-0952	Sump - Engine	1
★12	99-0953	Gasket - Crankcase	1
15	99-0954	Plug - Oil Drain	1
16	98-9214	Crankshaft	1
★20	99-0955	Seal - Oil	1
22	99-0956	Screw - Hex.	1
		Note: 99-1040 Screw - Hex. (One (1) Used in Hole Nearest Breather.)	1
24	99-0957	Key - Flywheel	1

Ref. No.	Part No.	Description	No. Used
25	99-0958	Piston Assy. (Standard)	1
26	99-0959	Ring Set (Standard)	1
27	99-0960	Lock - Piston Pin	1
28	99-0961	Pin - Piston (Standard)	1
29	99-0962	Rod - Connecting	1
32	99-0963	Screw - Connecting Rod	1
43	99-0964	Governor/Oil Slinger	1
46	99-0965	Gear - Cam	1
146	99-0966	Key - Timing	1
741	99-0967	Gear - Timing	1

 ★ Included in Gasket Set-Part No. 99-0902.

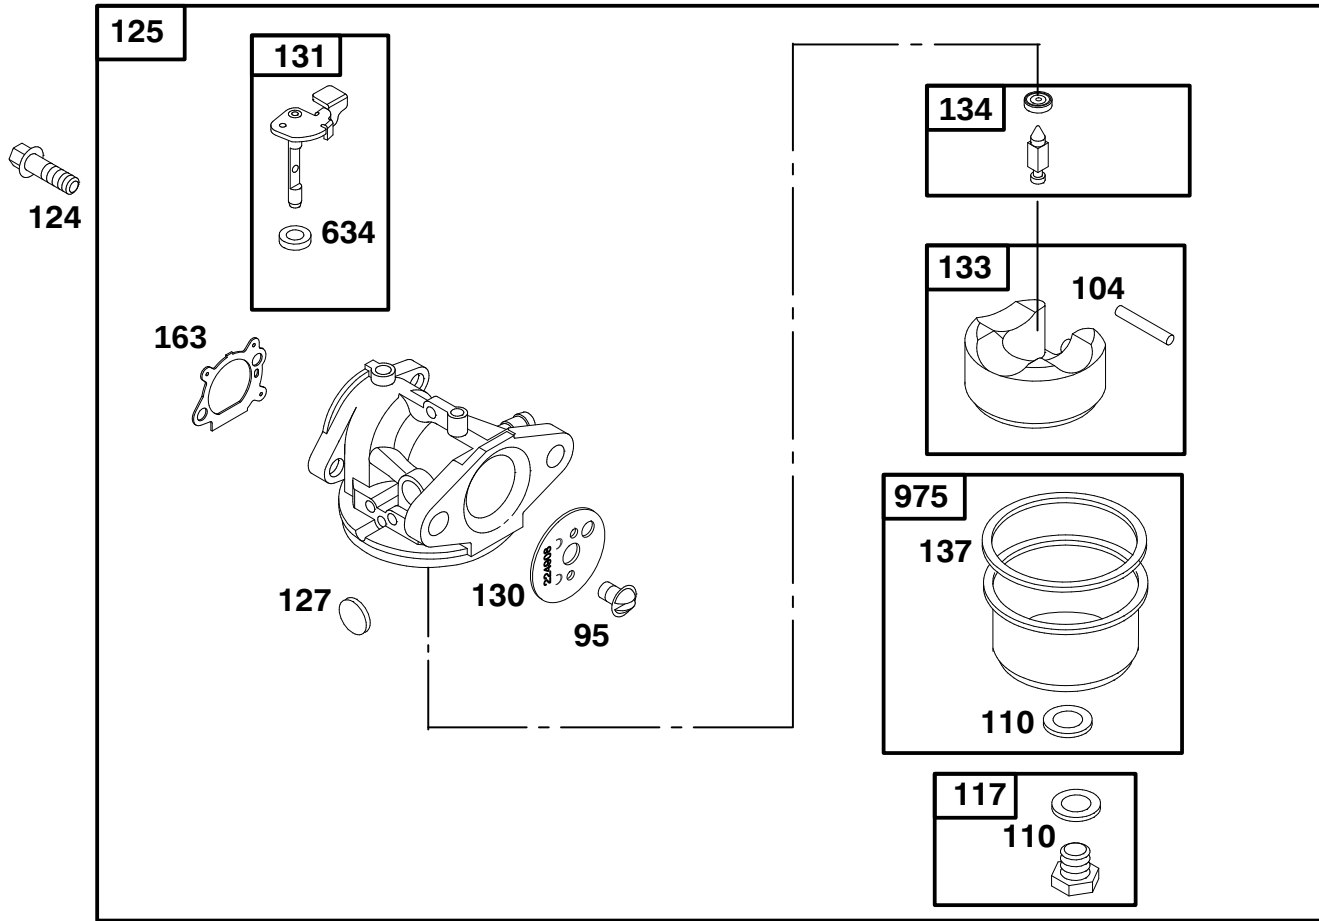

Assemblies include all parts shown in frames.


ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used
95	99-0969	Screw - Slotted	1
●104	99-0970	Pin - Float Hinge	1
◆110		Washer - Bowl (Sold in Kit Only).	1
117	99-0971	Jet - Main (Std.) Note: 99-1041 Jet - Main (High Altitude)	1
124	99-0972	Screw - Shoulder	1
125	99-0973	Carburetor	1
●127		Plug - Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	99-0974	Valve - Throttle	1
131	99-0975	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Needle	1
◆137		Gasket - Bowl (Sold in Kit Only).	1
◆◆163	99-0976	Gasket - Air Cleaner	1
◆◆634		Washer - Foam (Sold in Kit Only).	1
975	99-0977	Bowl - Float	1

- Included in Carburetor Kit-Part No. 99-0901.
- ◆ Included in Carburetor Gasket Set-Part No. 99-0903.

 - * Included in Gasket Set-Part No. 99-0902.
- † Included in Valve Overhaul Gasket Set-Part No. 99-0904.

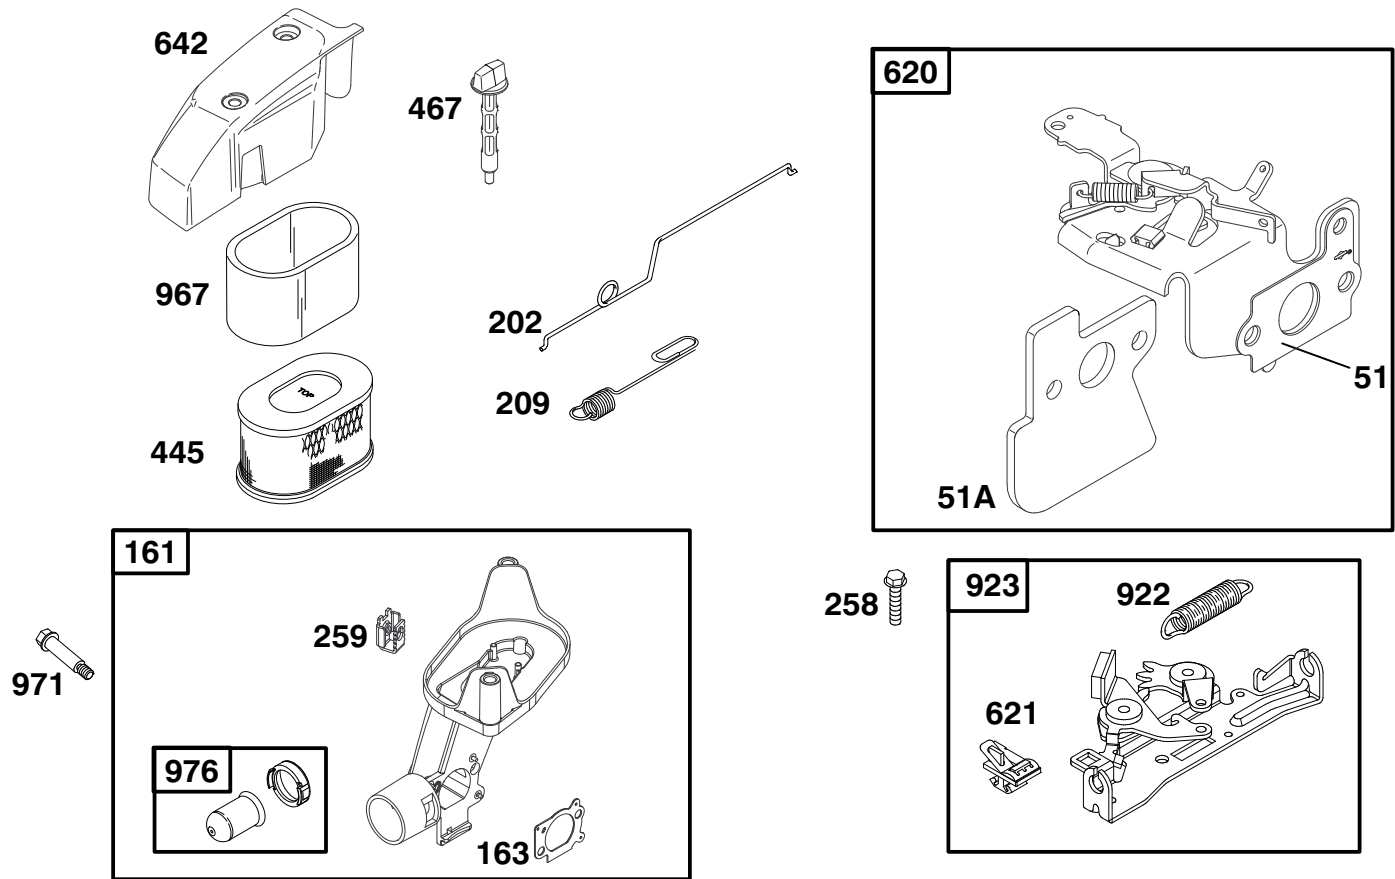

Assemblies include all parts shown in frames.


ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used
51	99-0968	Gasket - Intake	1
51A	99-0978	Gasket - Intake	1
161	99-0979	Base - Air Cleaner/Primer	1
♦♦163	99-0976	Gasket - Air Cleaner	1
202	99-0981	Link - Governor	1
209	99-0982	Spring - Governor	1
258	99-0983	Screw - Hex.	1
259	99-0984	Grommet	1
445	98-9212	Filter - Air	1

Ref. No.	Part No.	Description	No. Used
467	98-9208	Knob	1
620	99-0985	Bracket - Control	1
621	99-0986	Switch - Stop	1
642	98-9207	Cover - Air Cleaner	1
922	99-0987	Spring - Brake	1
923	99-0988	Brake Assembly	1
967	99-0989	Filter - Air	1
971	99-0990	Screw - Hex.	1
976	99-0991	Primer - Carburetor	1

♦ Included in Carburetor Kit-Part No. 99-0901.
♦♦ Included in Carburetor Gasket Set-Part No. 99-0903.

 ★ Included in Gasket Set-Part No. 99-0902.

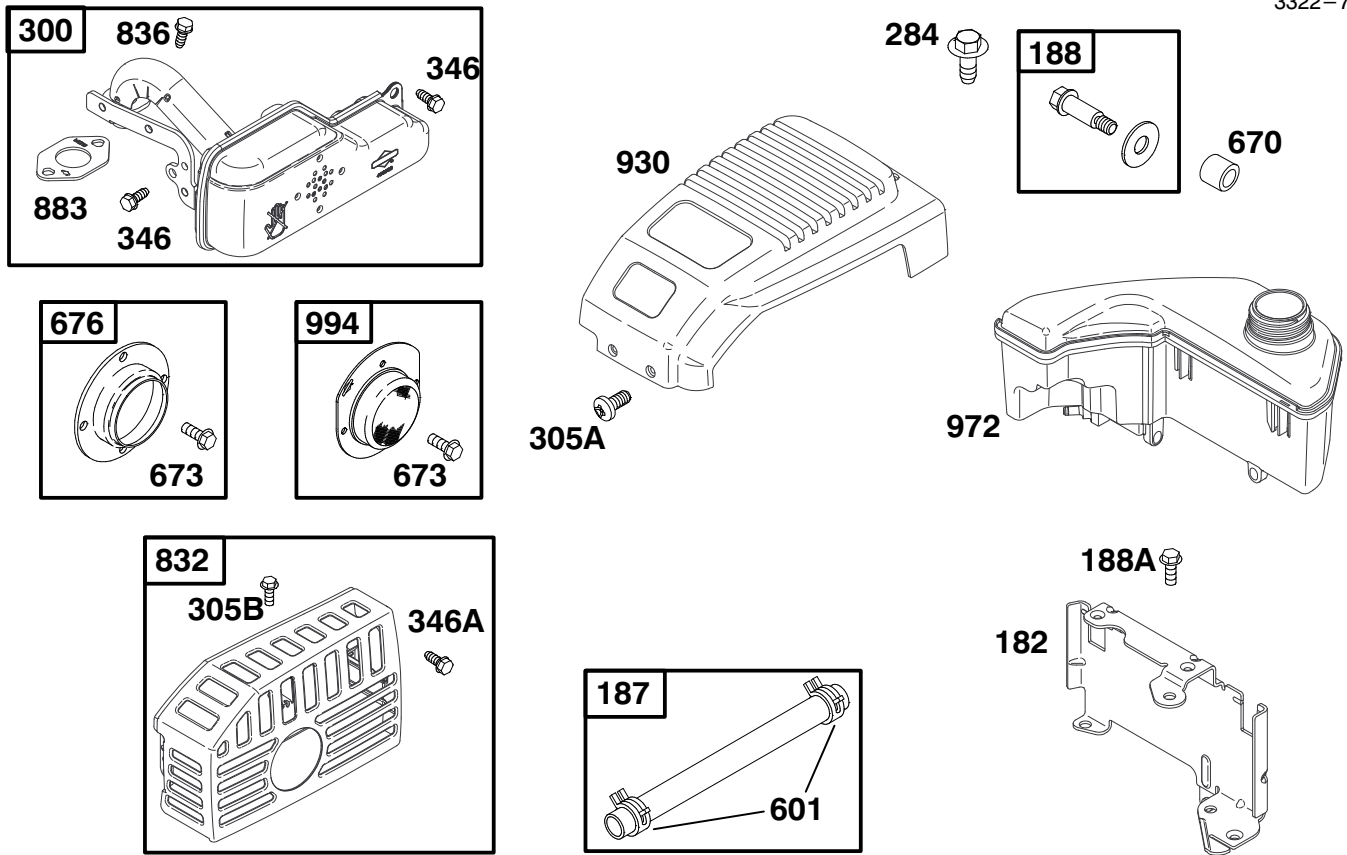

Assemblies include all parts shown in frames.


T-0323

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
182	98-9205	Bracket - Tank Mounting	1	601	99-0996	Clamp - Hose	1
187	99-0992	Line - Fuel (Cut to Required Length)	1	670	99-0997	Spacer - Fuel Tank	1
			1	673	99-1043	Screw - Hex.	1
188	99-0993	Screw - Shoulder	1	676	99-1044	Deflector - Muffler	1
188A	98-9202	Screw - Hex.	1	832	98-9206	Guard - Muffler	1
284	99-0994	Screw - Hex.	1	836	99-0941	Screw - Hex.	1
300	99-0995	Muffler - Exhaust	1	†★883	99-0947	Gasket - Exhaust	1
305A	98-9204	Screw - Torx®	1	930	98-9203	Guard - Rewind	1
305B	99-0998	Screw - Hex.	1	972	99-1000	Tank - Fuel	1
346	99-1047	Screw - Hex.	1	994	94-1681	Arrestor - Spark	1
346A	99-0999	Screw - Hex.	1				

★ Included in Gasket Set-Part No. 99-0902.

 
† Included in Valve Overhaul Gasket Set-Part No. 99-0904.

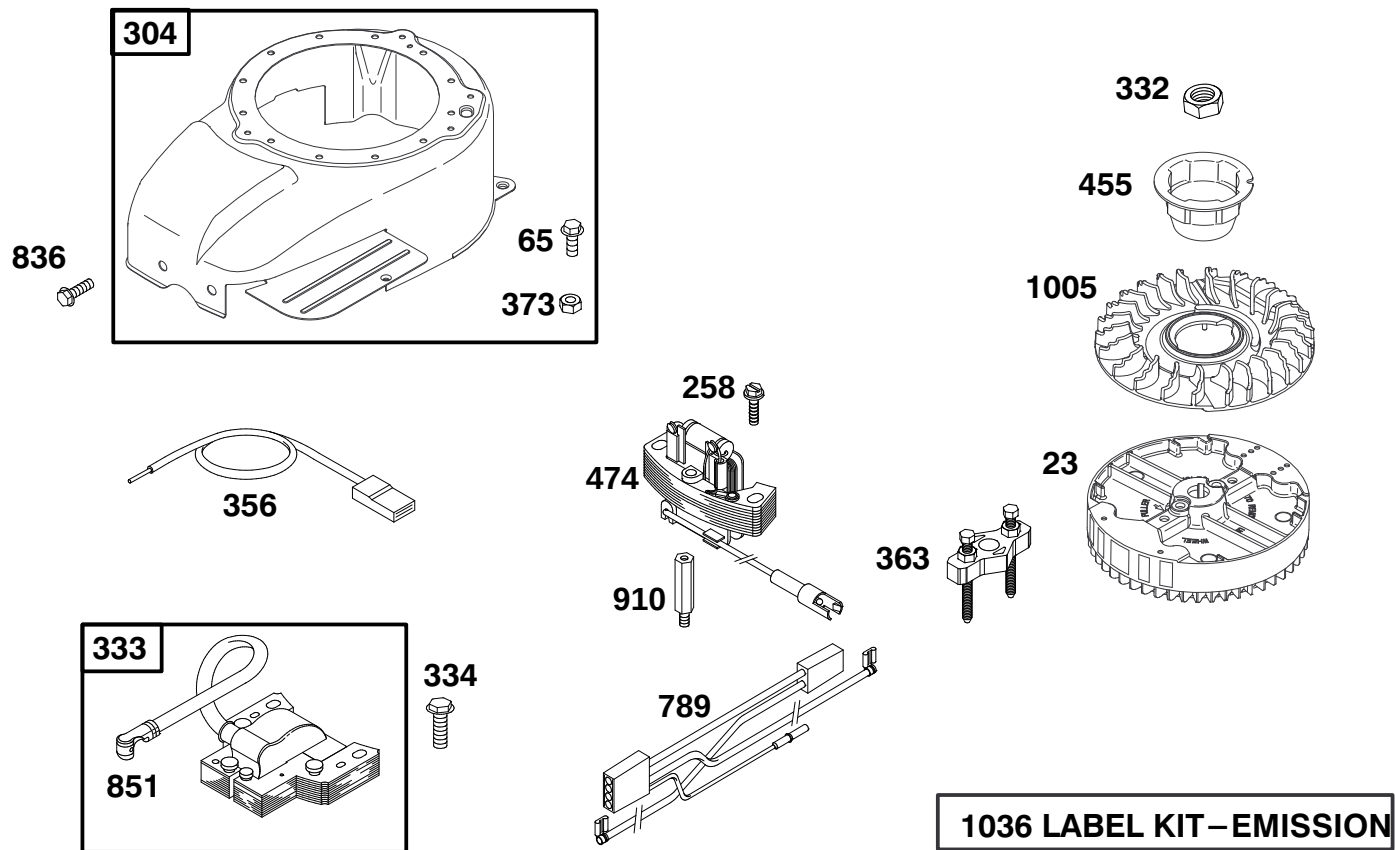

Assemblies include all parts shown in frames.

ENGINE GTS 200


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	99-1001	Flywheel	1	373	99-1009	Nut - Hex.	1
65	99-1002	Screw - Hex.	1	455	99-1010	Cup - Flywheel	1
258	99-0983	Screw - Hex.	1	474	99-1011	Alternator	1
304	99-1003	Housing - Blower	1	789	99-1012	Harness - Wiring	1
332	99-1004	Nut - Flywheel	1	836	99-0941	Screw - Hex.	1
333	99-1005	Armature - Magneto	1	851	77-9450	Terminal - Cable	1
334	99-1006	Screw - Hex.	1	910	99-1014	Stud - Stator Mounting	1
356	99-1007	Wire - Stop	1	1005	99-1015	Fan - Flywheel	1
363	99-1008	Puller - Flywheel	1	1036	99-1016	Label Kit - Emission	1

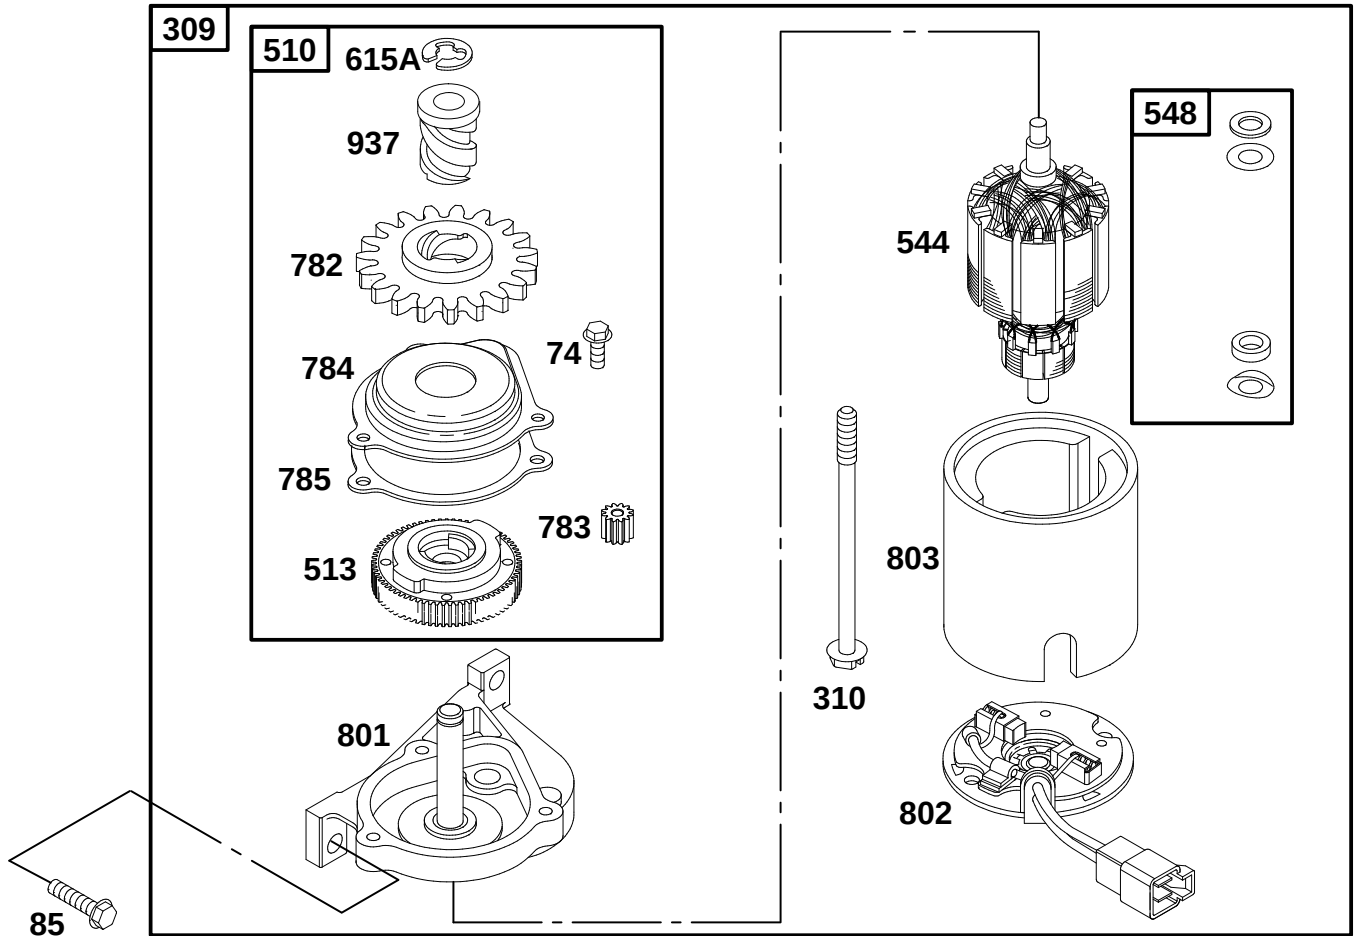 

Assemblies include all parts shown in frames.

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
74	99-1017	Screw - Hex.	1	782	99-1023	Gear - Starter	1
85	99-1018	Screw - Hex.	1	783	99-1024	Gear - Starter	1
309	77-8670	Motor - Starter	1	784	99-1025	Cover - Gear	1
310	99-1019	Screw - Slotted Hex.	1	785	99-1026	Gasket - Cover	1
510	77-8910	Drive - Starter	1	801	99-1027	Cap - Drive	1
513	99-1021	Clutch - Drive	1	802	99-1028	Cap - End	1
544	99-1022	Armature - Starter	1	803	99-1029	Housing - Starter	1
548	77-8740	Washer Set	1	937	99-1030	Spline - Starter	1
615A	77-8830	Retainer	1				

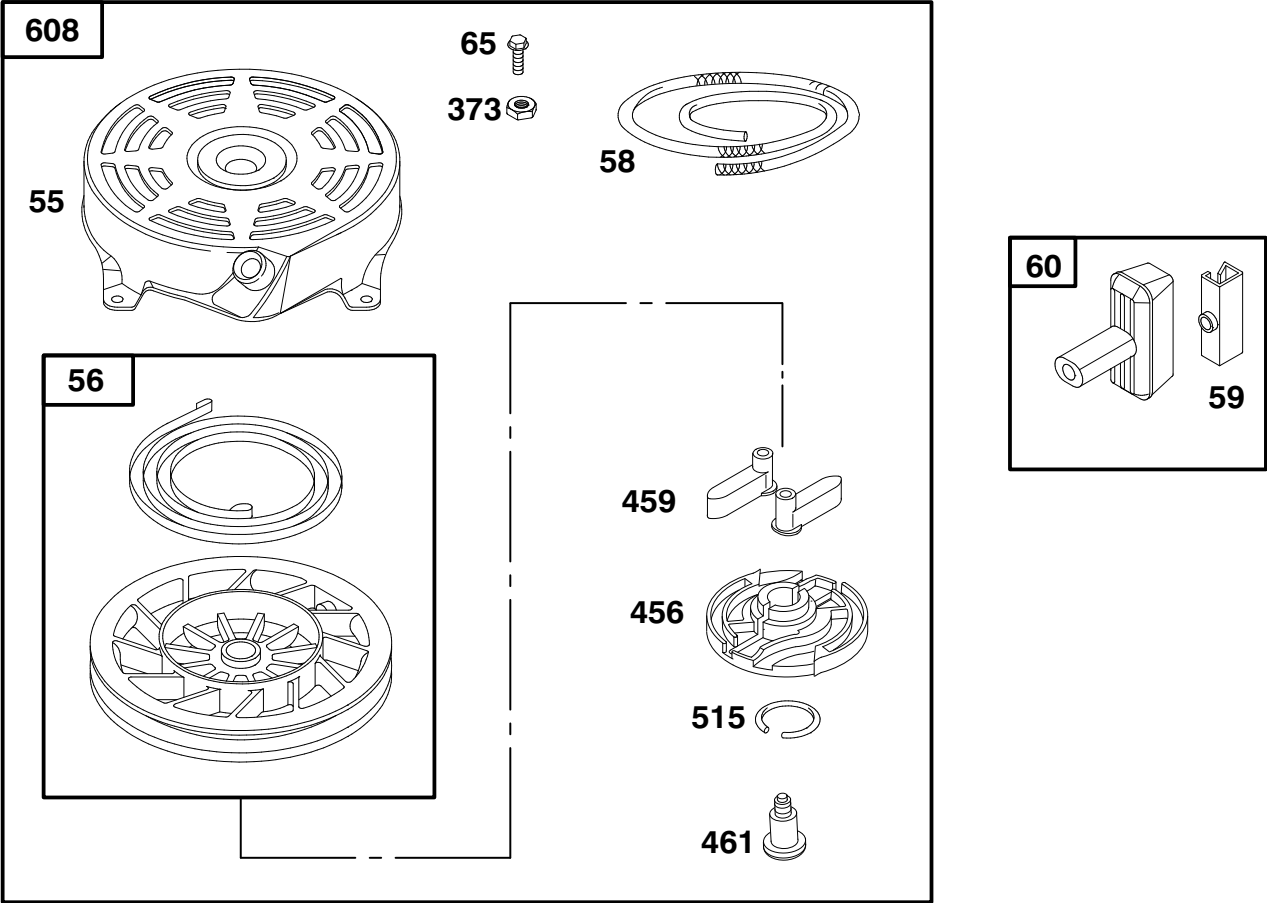 





Assemblies include all parts shown in frames.

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used
55	99-1048	Housing – Rewind Starter	1
56	94-1657	Pulley – Starter	1
58	94-1668	Rope – Starter	1
59	77-7210	Insert – Starter Grip	1
60	77-8520	Grip – Starter Rope	1
65	99-1002	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
373	99-1009	Nut – Hex.	1
456	94-1659	Retainer – Spring	1
459	94-1654	Pawl – Ratchet	1
461	94-1660	Screw – Shoulder	1
515	94-1655	Spring – Friction	1
608	98-9215	Starter – Rewind	1

    PROTOTYPE

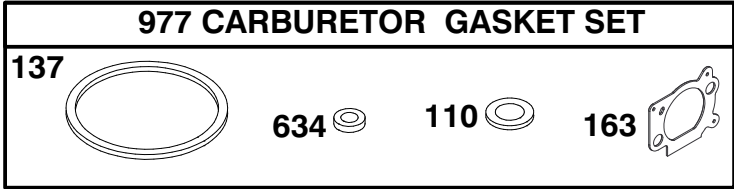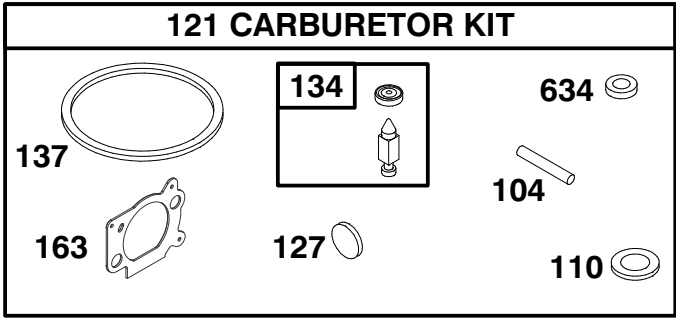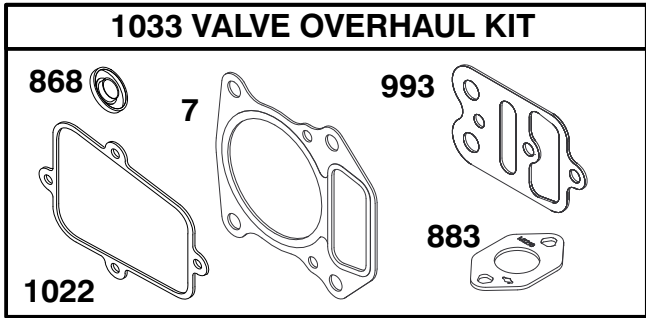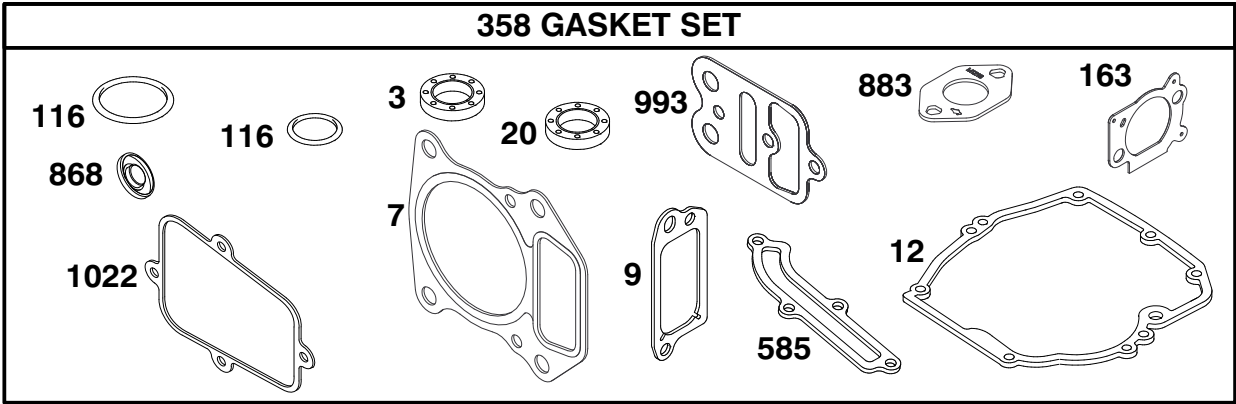

Assemblies include all parts shown in frames.

ENGINE GTS 200

Ref. No.	Part No.	Description	No. Used
★3	99-0912	Seal – Oil	1
†★7	99-0930	Gasket – Cylinder	1
†★9	99-0913	Gasket – Breather	1
★12	99-0953	Gasket – Crankcase	1
★20	99-0955	Seal – Oil	1
●104	99-0970	Pin – Float Hinge	1
◆110		Washer – owl (Sold in Kit Only).	1
★116	99-0916	Seal – O Ring	1
121	99-0901	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1
●134	77-8110	Valve – Needle	1

● Included in Carburetor Kit–Part No. 99-0901.
 ◆ Included in Carburetor Gasket Set–Part No. 99-0903.

Ref. No.	Part No.	Description	No. Used
◆137		Gasket – Bowl (Sold in Kit Only).	1
◆★163	99-0971	Gasket – Air Cleaner	1
358	99-0902	Gasket Set	1
★585	99-0923	Gasket – Breather	1
◆634		Washer – Foam (Sold in Kit Only).	1
†★868	99-0946	Seal – Valve	1
†★883	99-0947	Gasket – Exhaust	1
977	99-0903	Gasket Set – Carburetor	1
†★993	99-6264	Gasket – Plate	1
†★1022	99-0907	Gasket – Rocker Cover	1
1033	99-0904	Gasket Set – Valve Overhaul	1

★ Included in Gasket Set–Part No. 99-0902.
 † Included in Valve Overhaul Gasket Set–Part No. 99-0904.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
614578	5	10	1	Cover—Gear Case
614596	5	18	1	Gear 34 Tooth
614668	5	2	1	Cover—Gear Case
614696	5	4	1	Shaft—Intermediate
14-9959	4	2	2	Wheel—ASM
19-4050	2	29	2	Knob
26-0672	7	4	1	Bolt—Blade
27-6230	1	24	2	Bolt—Wheel
27-6230	4	1	2	Bolt—Wheel
27-6250	4	2:1	4	Bushing
27-6250	1	25:1	4	Bushing
36-4780	5	17	3	Washer—Thrust
36-4791	5	5	2	Washer
36-7820	5	15	1	Bearing—Ball
40-1940	1	26	2	Washer
46-1113	1	25	2	Wheel & Tire ASM
46-5780	2	26	1	Switch—Starter
46-6290	1	39	1	O—Ring
46-6811	1	40	2	Screw—HWH
47-2890	4	19:3	1	Bushing
47-6730	4	19:4	1	Seal—Oil
48-2060	4	19:1	1	Bearing—Needle
49-2040	5	1	4	Screw—Taptite
55-3760	5	3	1	Pinion—15 Tooth
55-7520	2	10	1	Battery Pack
55-8180	2	28	1	Retainer—Battery
60-8750	5	6	2	Bushing
60-8850	5	9	2	Bushing—Output
60-8890	5	16	1	Gear—Bevel Pinion
62-6660	5	11	1	Spacer
62-7550	7	1	1	Pulley—Driver
63-8360	2	19	1	Key—Ignition
63-8590	4	9	2	Screw
65-2720	4	30	4	Ring—Retaining
65-4710	4	27	2	Ring—Friction
65-4720	4	4	2	Spring—Compression
65-4740	4	5	4	Washer—Thrust
65-4750	4	29	2	Gear—Pinion
65-4760	4	28	2	Washer
65-5210	1	15	2	Screw—Tf
66-6040	4	7	1	Key—Locking RH
66-6050	4	6	1	Key—Rocking LH
71-7630	2	7	1	Cap—Throttle
71-7740	4	26	1	Spring
71-7770	4	20	2	Plate—Securing
71-7820	1	28	1	Pivot
71-7840	4	15	1	Rod—Trigger
71-7860	1	14	1	Grip—Upper
71-7870	1	19	1	Grip—Lower
71-7890	1	6	1	Guide—Belt
71-7900	1	11	1	Cap—Bolt LH
71-7910	1	16	1	Cap—Bolt RH
71-7920	1	22	1	Cover—Belt
71-7930	1	17	1	Trigger—HOC
71-7940	7	3	1	Retainer—Blade
71-7960	7	2	1	Guide—Belt Engine
71-7970	4	23	1	Rod—Link
71-7980	4	22	1	Indicator—HOC
71-7990	1	4	1	Ramp—Discharge
71-8040	2	12	1	Plate—Throttle
71-8060	4	11	2	Spring—Trigger
71-8080	4	10	1	Saddle—HOC

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
71-8090	2	31	1	Mount-Handle LH
71-8100	2	30	1	Mount-Handle RH
71-8130	2	25	1	Bracket-Control
71-8200	2	18	1	Bracket-Switch
71-8310	2	1	1	Spring-Compression
71-8450	4	24	1	Cover-Spring
71-8580	1	8	2	Spacer-Door
71-8830	1	2	2	Retainer-ASM
71-8920	1	35	1	Kicker-Front
71-9230	1	36	1	Kicker-Rear
71-9250	1	32	1	Kicker-Rear
71-9260	7	7	1	Blade-Recycler
71-9440	1	33	1	Kicker-Front
71-9450	4	17	1	V Belt
71-9460	5	5	1	Bag-Grass
71-9470	5	3	1	Door-Bag
71-9480	5	2	1	Handle-Door
71-9600	4	18	1	ASM-Gear Case
71-9610	5	12	2	Pulley-Half
71-9620	5	7	1	Shaft-Output
71-9800	1	9	1	Door-Discharge
71-9840	1	10	2	Spring-Door
71-9900	5	4	1	Frame
71-9600	5	*	1	Gear Case Ass'y Complete
71-9990	5		1	Plug-Recycler
74-1660	4	31	2	Cover-Wheel
74-1671	4	3	2	Spacer-Cover
80-0510-03	7	8	1	Stiffener-Blade
80-4797	2	5	1	Wire Harness
92-2289	6	3	1	Plate-Logo
92-7663	4	35	1	Cover-Wheel
92-7729	2	47	1	Anchor-Cable
92-7863	1	23	1	Decal-Deck
92-9677	4	16	1	Arm-Pivot LH
92-9680	4	19	1	Arm-Pivot RH
93-1116	2	41	1	Cable-Brake
93-4105	1	31	1	Decal-Danger
93-6668	2	55	1	Decal-Instruct
93-7175	2	35	1	Decal-Panel Key
93-7198	6	1	1	ASM-Cap
93-8470	6	7	1	Screw-Clamp
94-4367	2	36	1	Handle-Sp
95-2739	2	27	2	Bracket-Battery
95-2740	4	34	1	Retainer-Belt
95-2747	1	38	1	Fitting-Washout
95-4450	3	1	1	Bail-Traction
95-4453	2	48	1	Screw-Handle
95-4454	3	2	1	Bail-Brake
95-4457	2	51	1	Rope-Guide
95-6134	1	5	1	Housing-Deck
95-9649	2	3	1	Cable-Traction
98-1509	2	17	1	Control-Throttle
98-2004	6	2	1	Decal-Engine
98-2014	2	54	1	Decal-Instruction
98-2039	4	18:1	1	Bracket - Traction
98-2391	5		1	Charger-Battery
98-3247	2	8	1	Cover-Throttle
	6	5	1	Engine-Gts 200
98-9237	2	23	1	Panel-Control
218-461	2	20	1	Nut-HH (F/W Sw)
2210-249	6	6	1	Clamp-Casing
2210-316	6	9	1	Rope-Stop

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
302-26	4	19:2	2	Fitting-Grease
322-29	1	12	2	Screw-HH
3253-22	7	5	1	Washer-Lock
3254-5	2	21	1	Washer-Lock
3256-1	2	49	1	Washer-Flat
3256-24	5	13	1	Washer
3284-5	1	18	1	Pin-Groove
3290-378	2	2	2	Tie-Cable
3296-5	1	27	2	Nut-Lock
3296-5	4	13	2	Nut-Lock
3295-5	5	14	1	Nut
3296-73	2	15	2	Nut-Lock
32112-11	1	3	1	Nut
32112-13	4	8	1	Nut-Push
32121-114	5	8	2	Pin-Groove
32144-4	1	1	10	Screw-TAP
32144-4	4	21	6	Screw-TAP
32144-4	7	6	2	Screw-TAP
32144-31	4	12	1	Screw
32144-70	1	20	1	Screw-TAP
32144-97	1	13	2	Screw-PPH
32144-97	2	9	9	Screw-PPH
32144-98	2	11	4	Screw-PPH
32144-99	2	6	2	Screw-PPH
32144-102	6	8	3	Screw
32144-111	1	34	8	Screw - PPH
32144-111	5	1	5	Screw - PPH
32151-93	4	25	1	Ring-Grip

PROTOTYPE