



21" Recycler[®] /Rear Bagging

Walk Behind Mower

Model No. 20027 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing, Handle Brackets, & Wheel Assembly . .	1	Bagging Assembly	7
Gear Case Assembly	2	Engine Briggs & Stratton	
Engine & Blade Assembly	3	Model 122602-0150-E1	8-17
Gear Case & Wheel Assembly	4	Toro Part Number Index	18-20
Handle & Controls Assembly	5	Maintenance	21
Rear Bagging Discharge Chute	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Chute Plug Kit	Model No. 59134		
Traction Assist Handle Kit	Model No. 59196		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

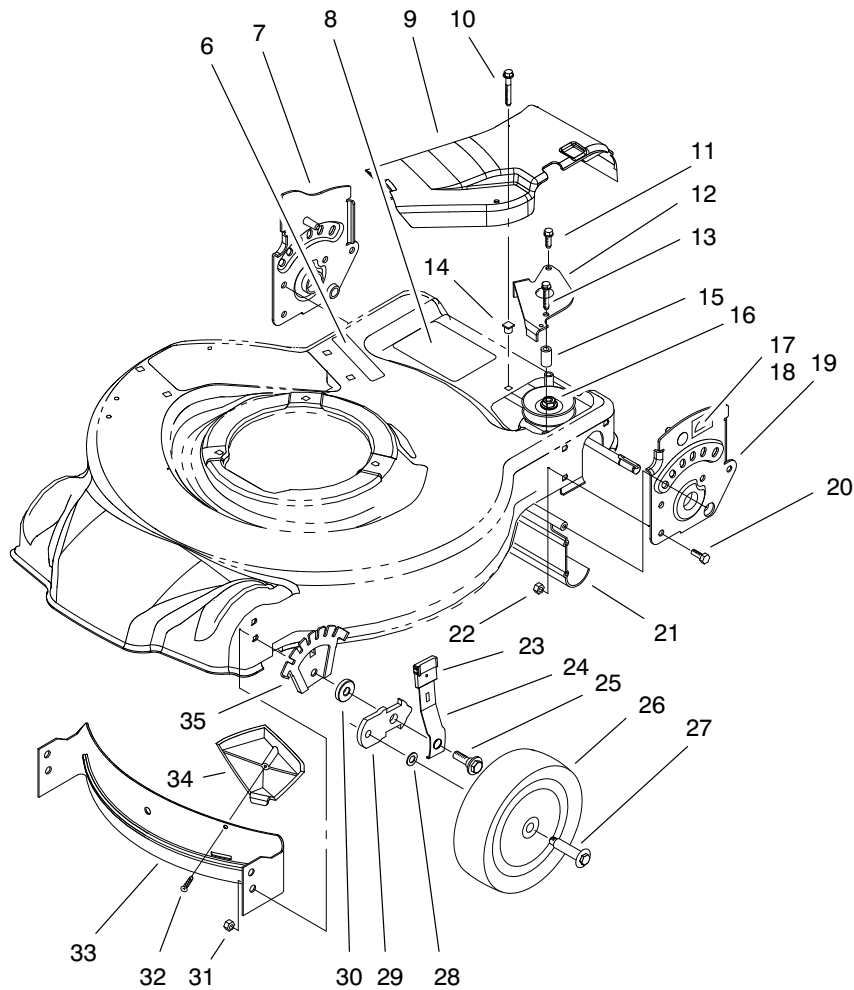


Sheet No.:2

Housing, Handle Brackets, & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
6	99-6018	1	Decal – Warning
7	99-5234	1	ASM – RH Handle Bracket
8	93-0248	1	Decal – Warning
9	99-1581	1	Cover-Belt (Pp Steel Deck)
10	32144-119	1	Screw-Pth
11	49-2040	1	Screw-Taptite
12	99-1567-03	1	Bracket-Belt Guide (Pp Steel)
13	92-1616	1	Screw-Thread Forming
14	605120	1	Grommet
15	614673	1	Bushing – Actuator Plt
16	93-0240	1	ASM – Transmission
17	92-2915	1	Decal – HOC L
18	92-2914	1	Decal – HOC R
19	99-5233	1	ASM – LH Handle Bracket
20	322-3	6	Screw-HH
21	92-8647	1	Shield – Trailing
22	3296-29	6	Nut-Lock Ni
23	92-1008	6	Knob-Height Adj Lever
24	614687	2	Arm-Front Spring
25	614650	2	Bolt-Shoulder


Ref. No.	Part No.	Qty.	Description
26	92-9591	2	Assembly – 7" Wheel
27	614672	2	Bolt-Shoulder
28	40-1940	2	Washer-Wheel Bolt
29	95-7403-03	2	Brkt-Whl Ht Adj
30	92-4890	2	Washer – Wheel
31	3296-39	2	Nut-Lock Ni
32	93-0231	1	Screw – PPH
33	93-0222-03	1	Baffle – Front
34	93-0216	1	Kicker – Front
35	92-4881-03	2	Plate – Hght Adj

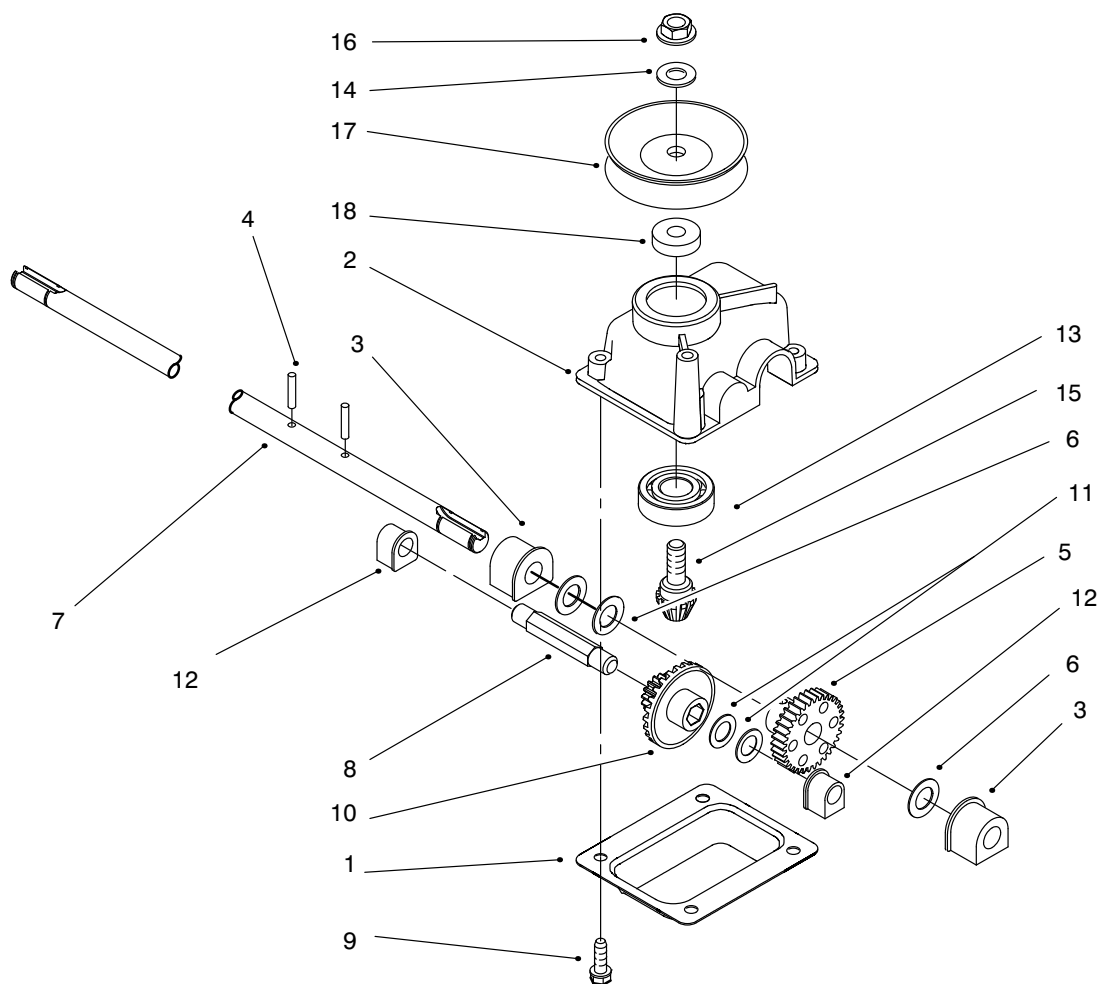

Sheet No.:A1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	614668-03	1	Gear Case Cover
2	92-7727	1	Gearcase
3	60-8850	2	Bushing-Output
4	3285-19	2	Pin-Groove
5	614596	1	Gear -34t
6	36-4780	2	Washer
7	93-0239	1	Shaft - Output
8	614696	1	Shaft-Intermediate
9	49-2040	4	Screw-Taptite
10	55-3760	1	15 T Pinion
11	36-4791	2	Thrust Washer
12	60-8750	2	Bushing
13	38-7820	1	Bearing-Ball
14	3256-24	1	Washer-Flat
15	60-8890	1	Bevel Pinion Gear
16	3296-5	1	Nut-Lock Ni
17	100-1176	2	Pulley Half
18	62-6660	1	Spacer

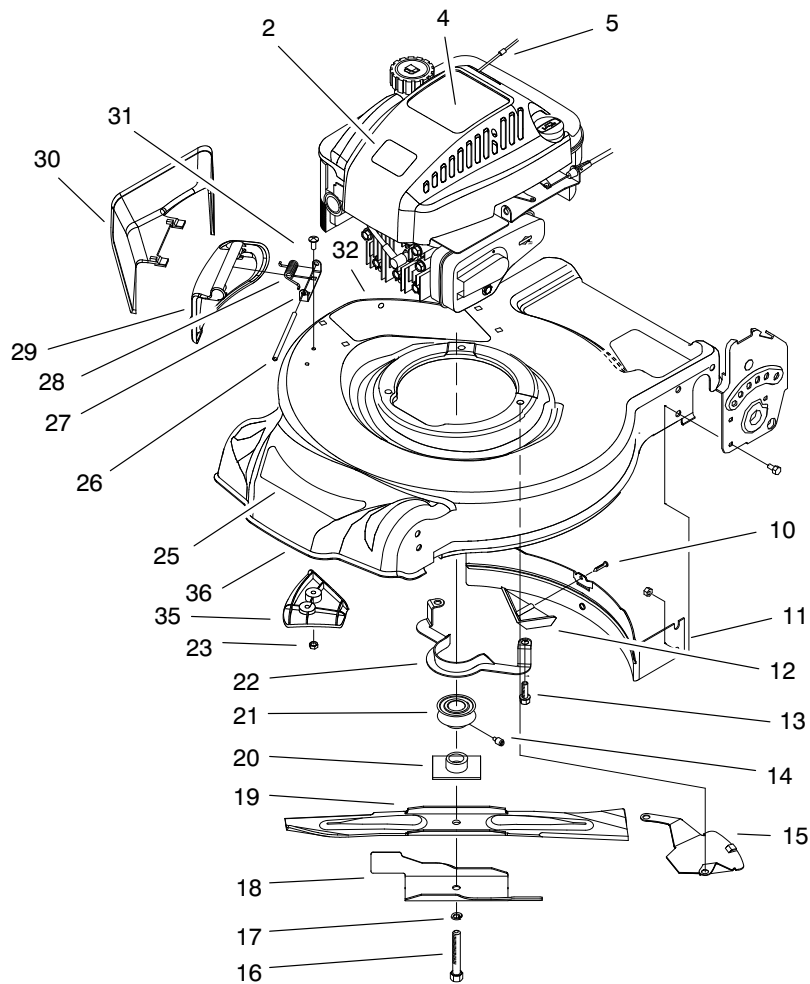


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
2	99-6015	1	Decal – Recoil
4	99-6014	1	Decal – Recoil
5	2210-316	1	Stop-Rope F/W Engine
10	93-0231	1	Screw – PPH
11	93-0223-03	1	Baffle – Rear
12	93-0217	1	Kicker – Rear
13	95-1726	3	Screw-Taptite w/Patch
14	613227	1	Screw – Set
15	93-4196-03	1	Shield – Grass
16	95-1748	1	Screw-Blade
17	3253-22	1	Washer-Lock/Sp
18	93-0219-03	1	Accelerator
19	93-0241	1	Blade – Steel Deck (Raw)
20	99-5287	1	ASM-Blade Driver
21	99-5244	1	Pulley-Assy
22	99-1524-03	1	Guide-Belt (Steel Pp)
23	32128-32	2	Nut-Hex, Flange
25	99-6011	1	Decal – Deck
26	99-5291	1	Rod-Cover (Steel Side Discharge)
27	99-5292	1	Bracket-Cover (Steel Side Discharge)


Ref. No.	Part No.	Qty.	Description
28	99-5293	1	Spring-Torsion (Steel Side Discharge)
29	99-5294	1	Cover-Side (Steel Side Discharge)
30	99-5295	1	Chute-Side (Side Discharge)
31	3229-11	2	Screw-CARR
32	43-8480	1	Decal-Danger
35	99-6349	1	Baffle
36	99-5236	1	Housing Sp Steel (Service)

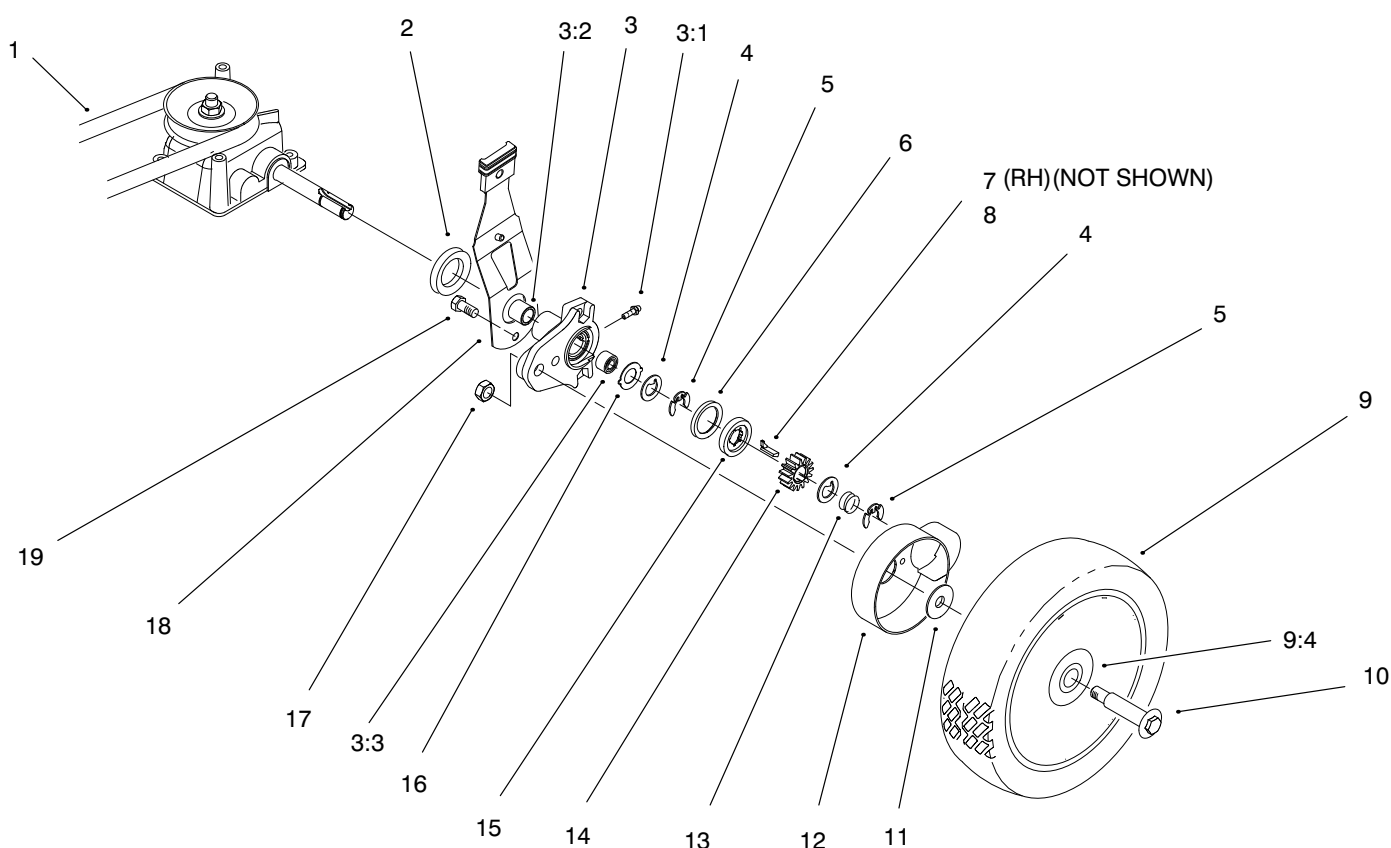

Sheet No.:4

Gear Case & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1597	1	V-Belt (Pp Steel)				
2	614447	2	Spacer-Axle Shaft				
3	92-7746	2	ASM: Rear Ht Adj Arm				
3:1	302-56	1	Fitting-Zerk				
3:2	47-2900	1	Bushing				
3:3	70-9760	1	Bushing				
4	65-4740	4	Washer-Keyed Thrust				
5	65-2720	4	Klip Ring-Special				
6	65-4710	2	Ring-Friction				
7	66-6040	1	Key-Rocking				
8	66-6050	1	Key-Rocking LH				
9	92-9590	2	ASM - 8" Wheel				
9:4	27-6250	2	Bushing				
10	92-1057	2	Shoulder Bolt				
11	614426	2	Washer-Stepped				
12	94-1609	2	Cover-Wheel				
13	65-4720	2	Spring-Compression				
14	65-4750	2	Pinion-Gear,15t				
15	65-4760	2	Washer				
16	65-4730	2	Washer-Pivot Arm				
17	610358	2	Nut-Jam, Locking				
18	92-1004	2	Spring Arm ASM - Rear				
19	32144-85	2	Screw-TAP				

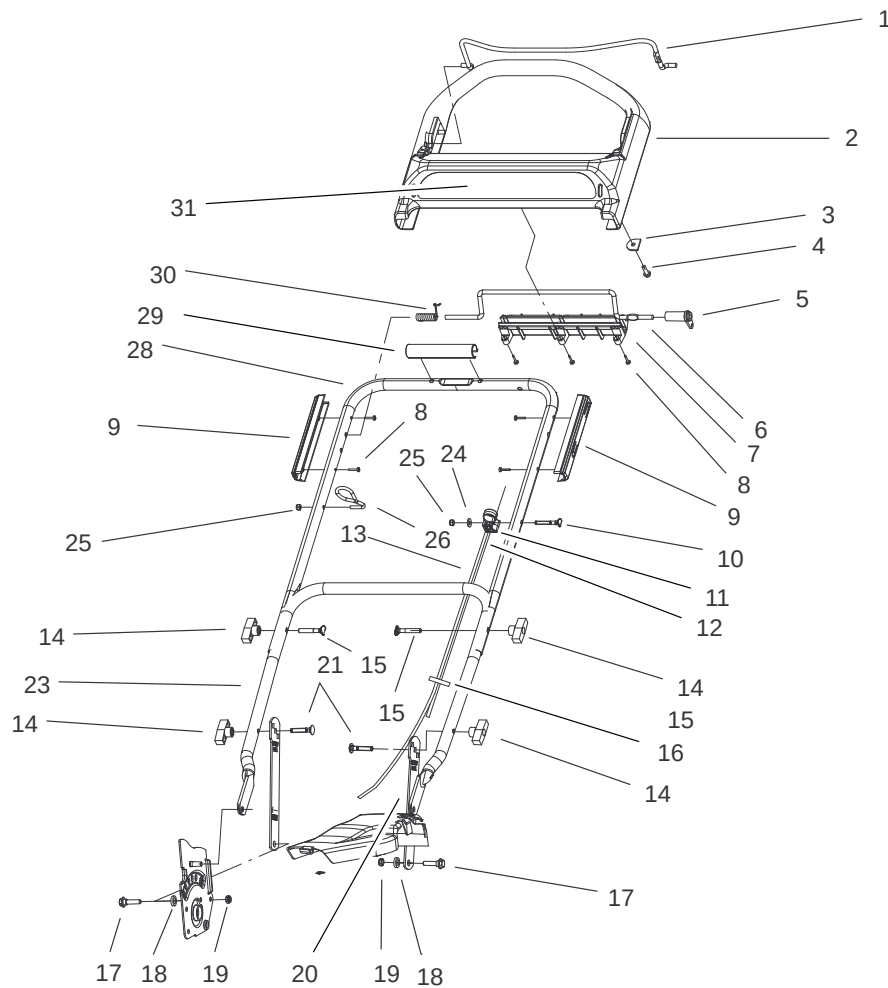


Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake
2	99-1582	1	Handle-Control
3	99-1595	1	Retainer - Brake Cable
4	46-8091	1	Special-HWH
5	99-1589	1	Lever-Traction
6	99-1588	1	Bar-Traction Control
7	99-6008	1	Retainer-Traction Control Rod
8	94-4496	10	Screw-Pan Hd
9	99-1590	2	Guide-Control Handle
10	95-4453	1	Screw - Handle
11	99-5239	1	Anchor-Cable
12	99-1510	1	Cable-Traction
13	99-1509	1	Cable-Brake
14	98-7134	4	Knob-Handle
15	92-2260	2	Screw-Handle
16	3290-378	1	Tie-Cable
17	99-5284	2	Bolt-Shoulder
18	3-3287	2	Spacer-Handle Latch
19	3296-72	2	Nut-Lock Ni
20	99-5247-03	2	Support-Handle
21	99-6019	2	Screw-CARR
23	99-5246-05	1	Handle-Lower
24	3256-1	1	Washer-Flat
25	3296-73	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
26	86-9671	1	Guide-Rope
28	99-1596-05	1	Handle-Upper
29	99-6339	1	Cover-Handle
30	99-1592	1	Spring-Torsion, RH
31	99-6016	1	Decal - Personal Pace (Steel)

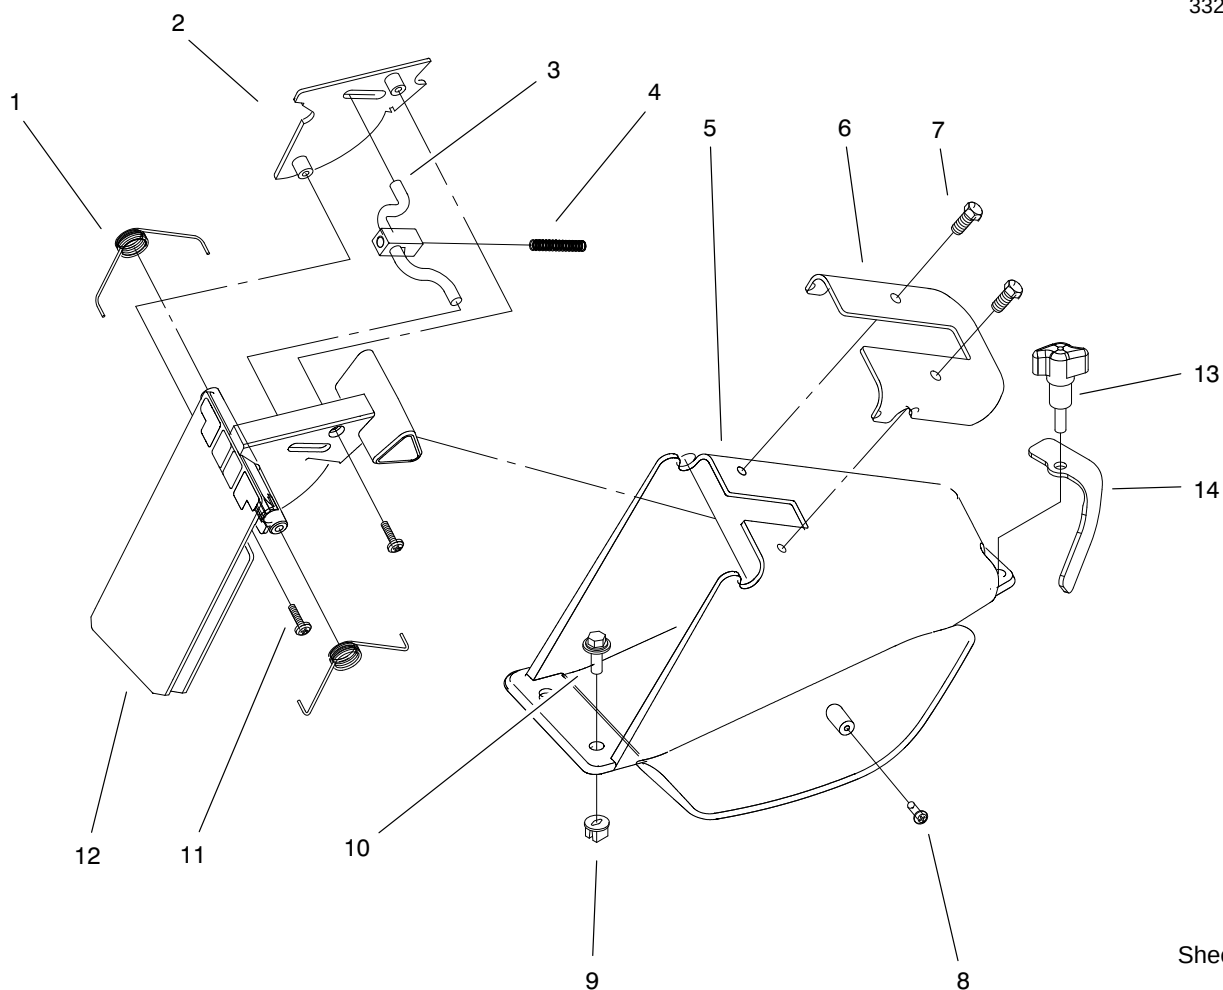


Sheet No.:7

Rear Bagging Discharge Chute

Ref. No.	Part No.	Qty.	Description
1	88-1090	2	RH Door Spring
2	33-0441	1	Door Cover
3	88-1800	1	Door Latch
4	33-0450	1	Latch Comp Spring
5	93-0263	1	Chute - Discharge
6	93-0267-03	1	Plate-Discharg Chute
7	46-8090	2	Screw-Plastite
8	32144-111	1	Screw-Plask
9	93-0242	4	Grommet
10	46-6811	3	Screw/Washer
11	32144-32	2	Screw
12	93-0264	1	Door - Discharge
13	100-1590	1	Knob
14	100-1589-03	1	Clamp-Door

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

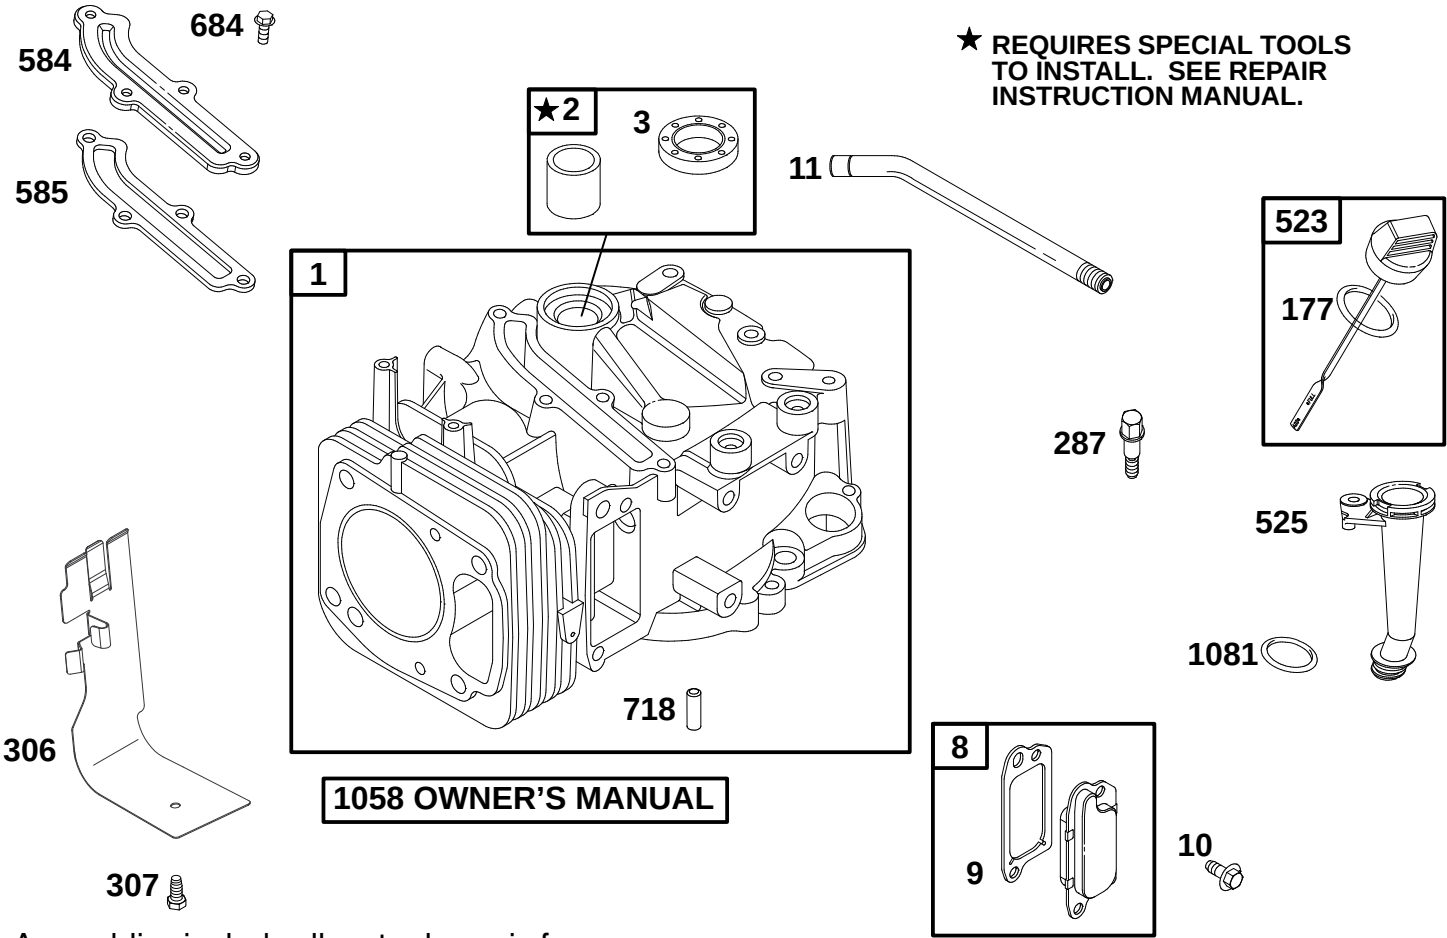


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	692781	Cylinder Assembly	1	523	493601	Dipstick	1
2	399269	Bushing/Seal Kit	1	525	495265	Oil Filler Tube	1
★3	299819	Oil Seal	1	584	692342	Breather Passage Cover	1
8	495786	Breather Assembly	1	★585	272238	Breather Passage Gasket	1
★†9	272481	Breather Gasket	1	684	690345	Screw (Breather Passage)	1
10	691125	Screw (Breather Assembly)	1	718	230192	Locating Pin	1
11	691260	Breather Tube	1	1058	273323	Owner's Manual	1
★177	280393	O-Ring Seal (Dipstick)	1	★1081	280966	O-Ring Seal (Oil Filler Tube)	1
287	690940	Screw (Oil Fill Tube)	1				
306	691232	Cylinder Shield	1				
307	690345	Screw (Cylinder Shield)	1				

★ Included in Gasket Set-See Ref. 358.
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

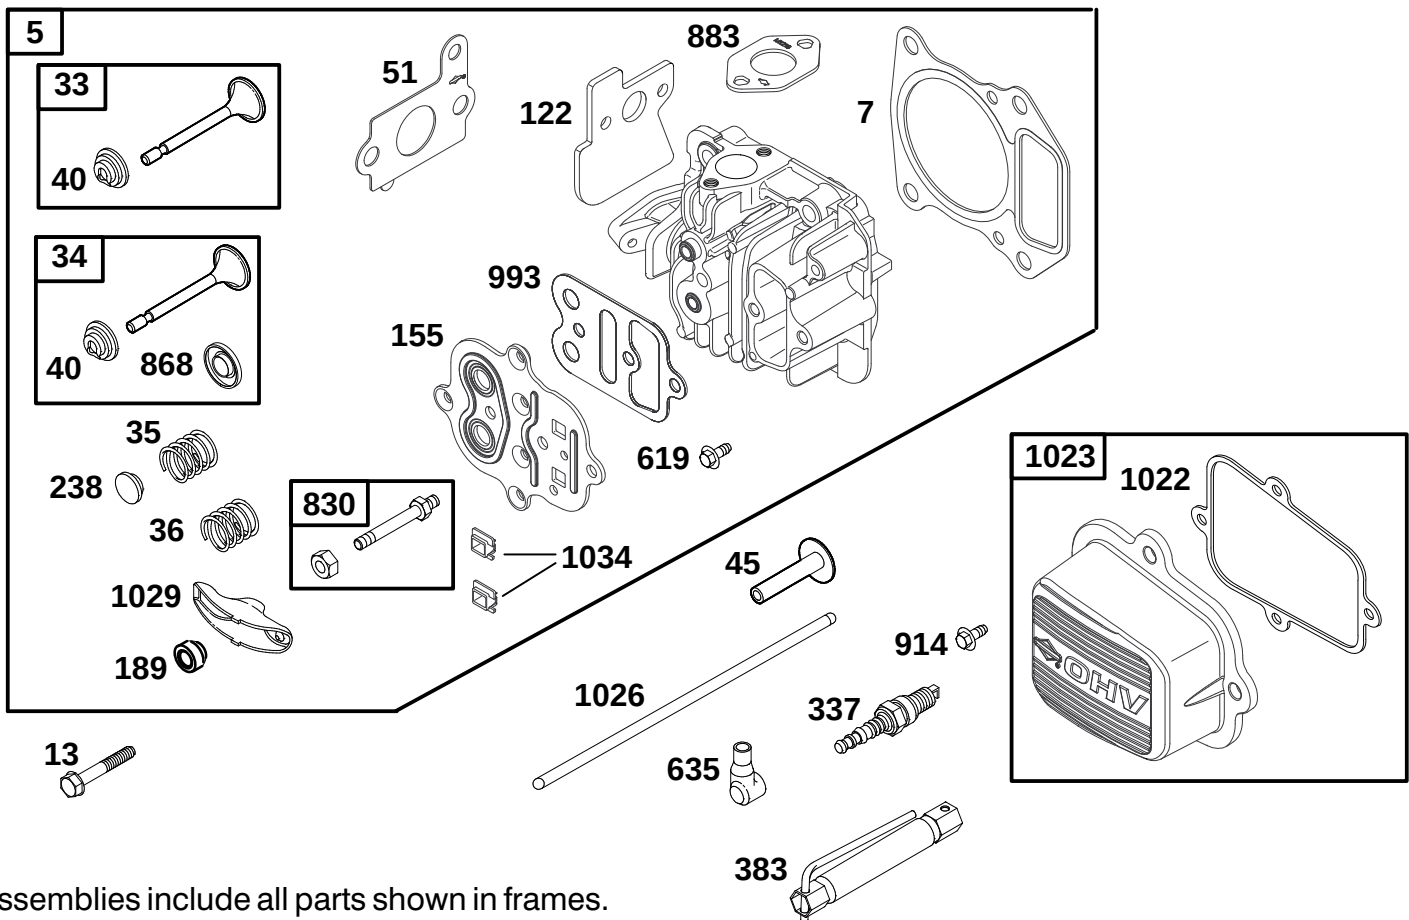


ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used
5	692801	Cylinder Head	1
★†7	273240	Cylinder Head Gasket	1
13	691137	Screw (Cylinder Head)	1
33	499642	Exhaust Valve	1
34	499641	Intake Valve	1
35	691304	Valve Spring (Intake)	1
36	263149	Valve Spring (Exhaust)	1
40	93312	Valve Retainer	1
45	262679	Valve Tappet	1
51	692668	Intake Gasket	1
★♦†122	692799	Carburetor Spacer	1
155	691231	Cylinder Head Plate	1
189	691295	Rocker Arm Ball	1
238	691300	Valve Cap	1
619	691108	Screw (Cylinder Head Plate)	1

Ref. No.	Part No.	Description	No. Used
914	691127	Screw (Rocker Cover)	1
337	499608	Sparkplug	1
383	19374	Sparkplug Wrench	1
635	662558	Sparkplug Boot	1
830	499756	Rocker Arm Stud	1
★†868	498592	Valve Seal	1
★†883	273348	Exhaust Gasket	1
★†993	691892	Plate Gasket	1
★†1022	272198	Rocker Cover Gasket	1
1023	692694	Rocker Cover	1
1026	498597	Push Rod	1
1029	691230	Rocker Arm	1
1034	691343	Push Rod Guide	1

★ Included in Gasket Set—See Ref. 358.
 ♦ Included in Carburetor Kit—See Ref. 121.

♦ Included in Carburetor Gasket Set—See Ref. 977.
 † Included in Valve Overhaul Gasket Set—See Ref. 1095.

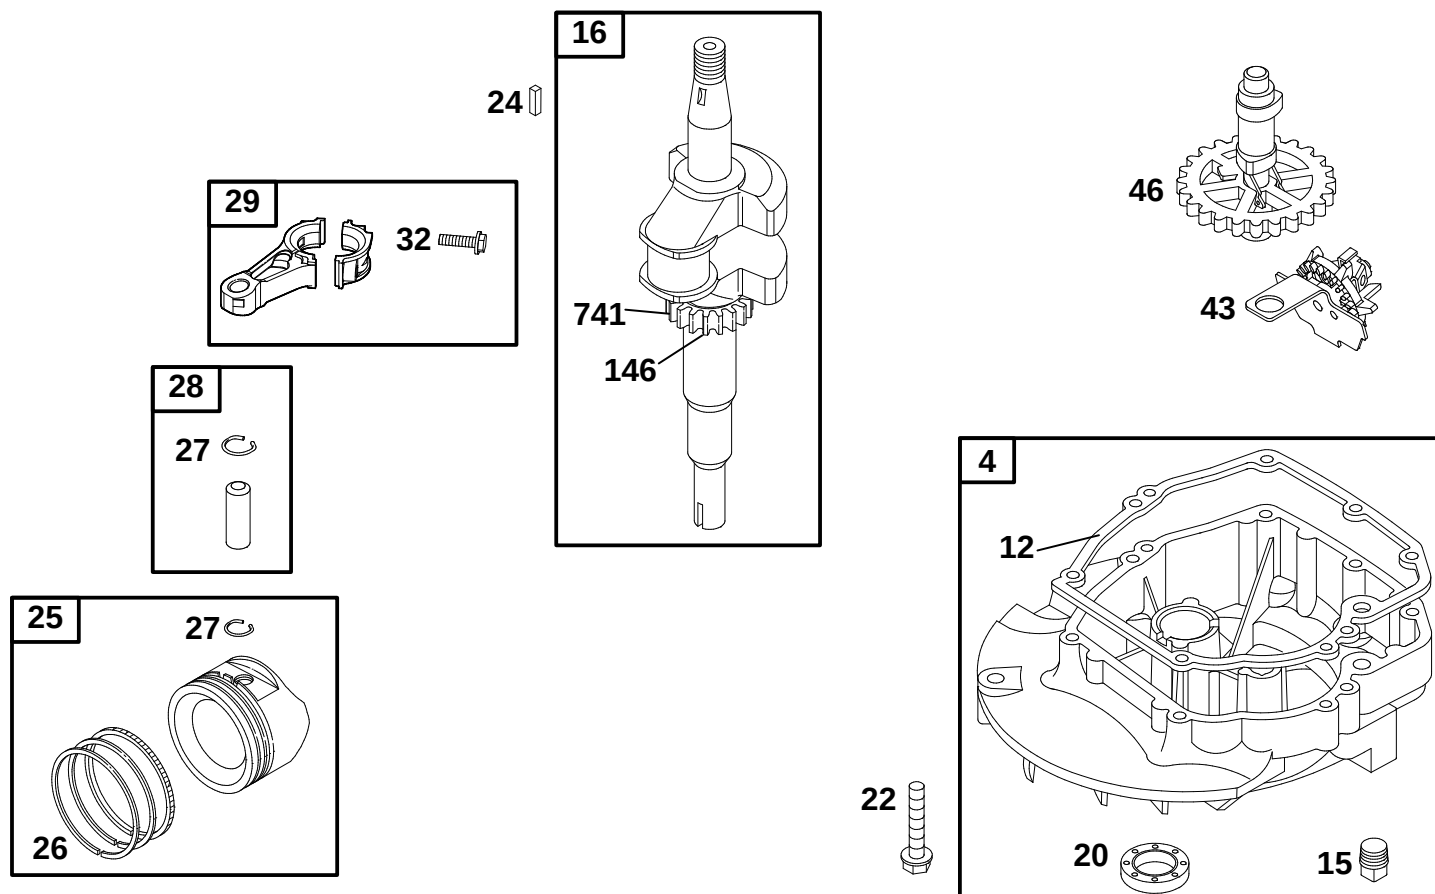

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	499619	Engine Sump	1	26	499631	Ring Set (Standard)	1
★12	272198	Crankcase Gasket	1			———— Note ————	
15	94880	Oil Drain Plug	1		692785	Ring Set(.010 O/S)	1
16	694153	Crankshaft	1		692786	Ring Set(.020 O/S)	1
★20	399781	Oil Seal	1		692787	Ring Set(.030 O/S)	1
22	691092	Screw (Engine Sump)	1	27	263190	Piston Pin Lock	1
		———— Note ————		28	499423	Piston Pin	1
	94612	Screw (Engine Sump)		29	499424	Connecting Rod	1
		(Used in Hole		32	94699	Screw (Connecting Rod)	1
		Nearest Breather)	1	43	493737	Governor/Oil Slinger	1
24	222698	Flywheel Key	1	46	692453	Camshaft	1
25	499627	Piston Assembly (Std)	1	146	94388	Timing Key	1
		———— Note ————		741	262598	Timing Gear	1
	692788	Piston Assembly (.010 O/S)	1				
	692789	Piston Assembly (.020 O/S)	1				
	692790	Piston Assembly (.030 O/S)	1				

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

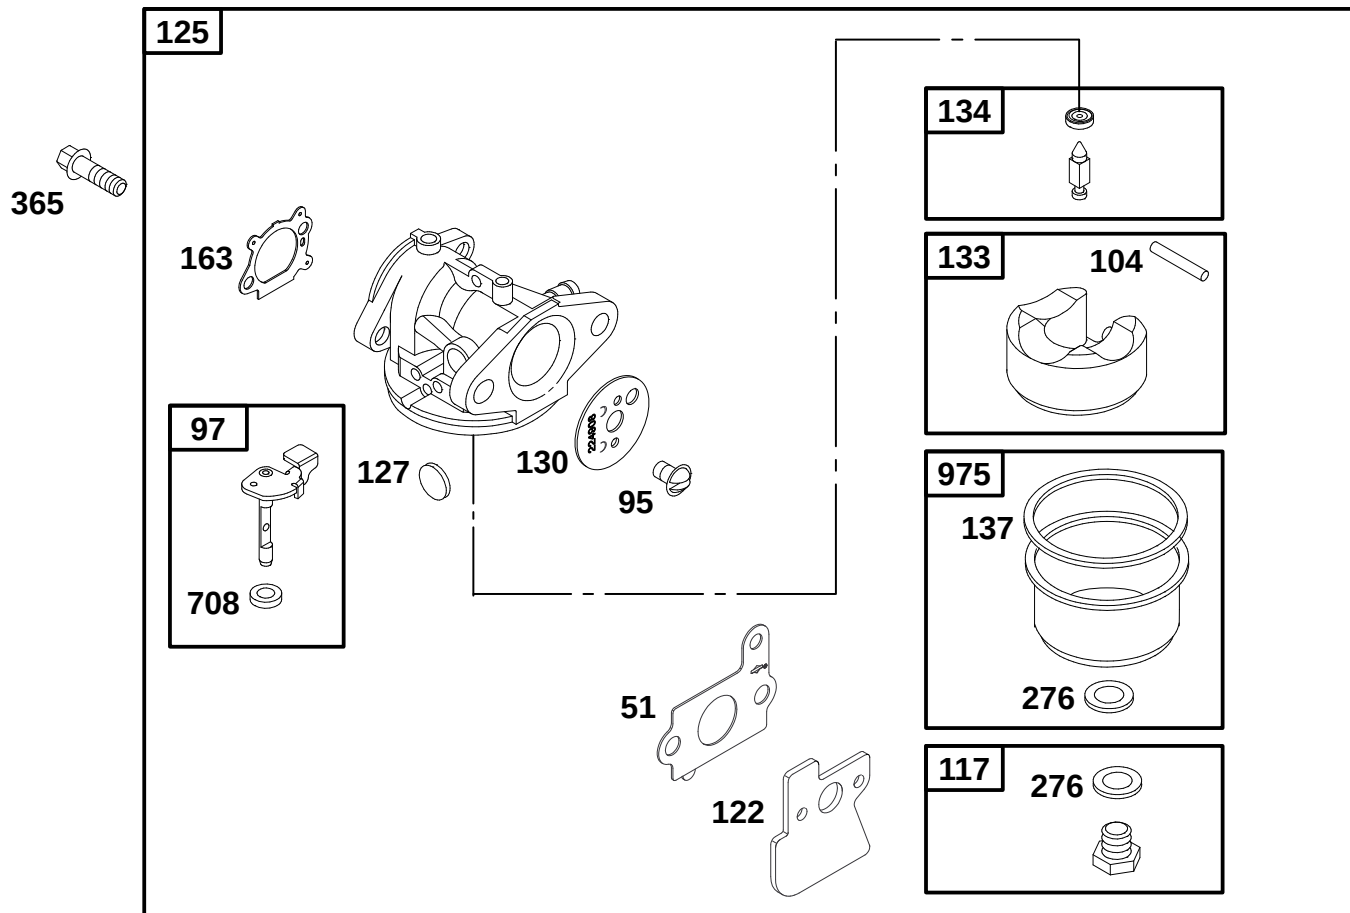

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used
★◆†51	272487	Intake Gasket	1
95	94098	Screw (Choke Throttle)	1
97	499682	Throttle Shaft	1
104	691242	Float Hinge Pin	1
117	494870	Main Jet (Standard)	1
	————— Note —————		
	497315	Main Jet (High Altitude)	1
★◆†122	692799	Carburetor Spacer	1
125	692648	Carburetor	1
●127		Welch Plug (Sold in Kit Only)	1
130	691203	Throttle Valve	1

Ref. No.	Part No.	Description	No. Used
133	398187	Carburetor Float	1
●134	398188	Needle Valve	1
●◆137		Float Bowl Gasket (Sold in Kit Only)	1
★◆●163	273364	Air Cleaner Gasket	1
●◆276		Bowl Washer (Sold in Kit Only)	1
365	691136	Screw (Carburetor)	1
●◆708	691321	Throttle Shaft Seal (Sold in Kit Only)	1
975	493640	Float Bowl	1

★ Included in Gasket Set—See Ref. 358.
● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
† Included in Valve Overhaul Gasket Set—See Ref. 1095.

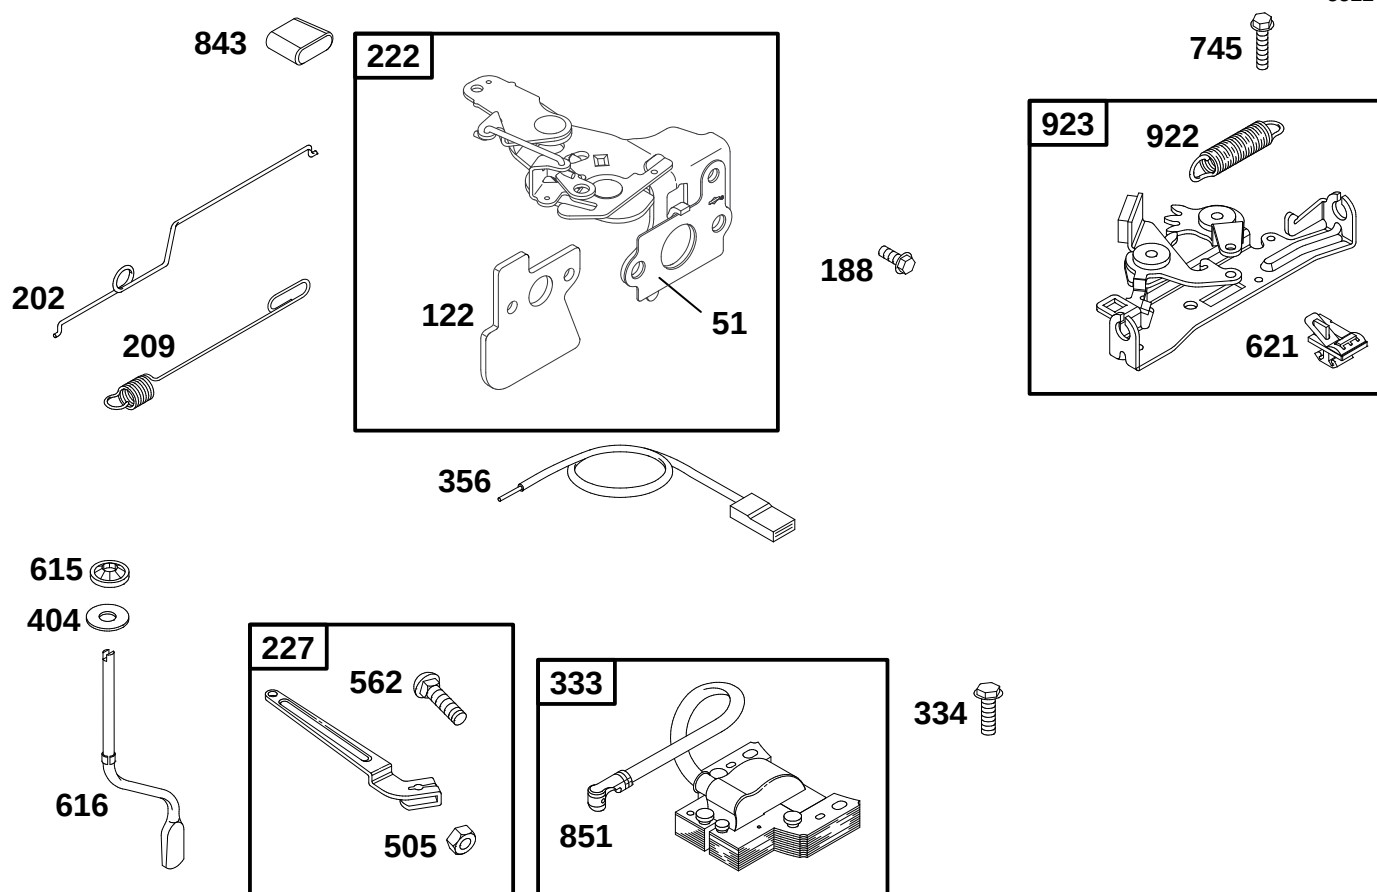

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★◆†51	692668	Intake Gasket	1	505	231082	Nut (Governor Lever)	1
★◆†122	692799	Carburetor Spacer	1	562	94852	Bolt (Governor Lever)	1
188	691147	Screw (Control Bracket)	1	615	690340	Governor Shaft Retainer	1
202	691303	Governor Link	1	616	391306	Governor Crank	1
209	263044	Governor Spring	1	621	692310	Stop Switch	1
222	692723	Control Bracket	1	745	691648	Screw (Brake)	1
227	691467	Governor Lever	1	843	272616	Lever Sleeve	1
333	802574	Magneto Armature	1	851	493880	Cable Terminal	1
334	94731	Screw (Magneto Armature)	1	922	691831	Brake Spring	1
356	692390	Stop Wire	1	923	691994	Brake Assembly	1
404	67072	Washer (Governor Crank)	1				

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

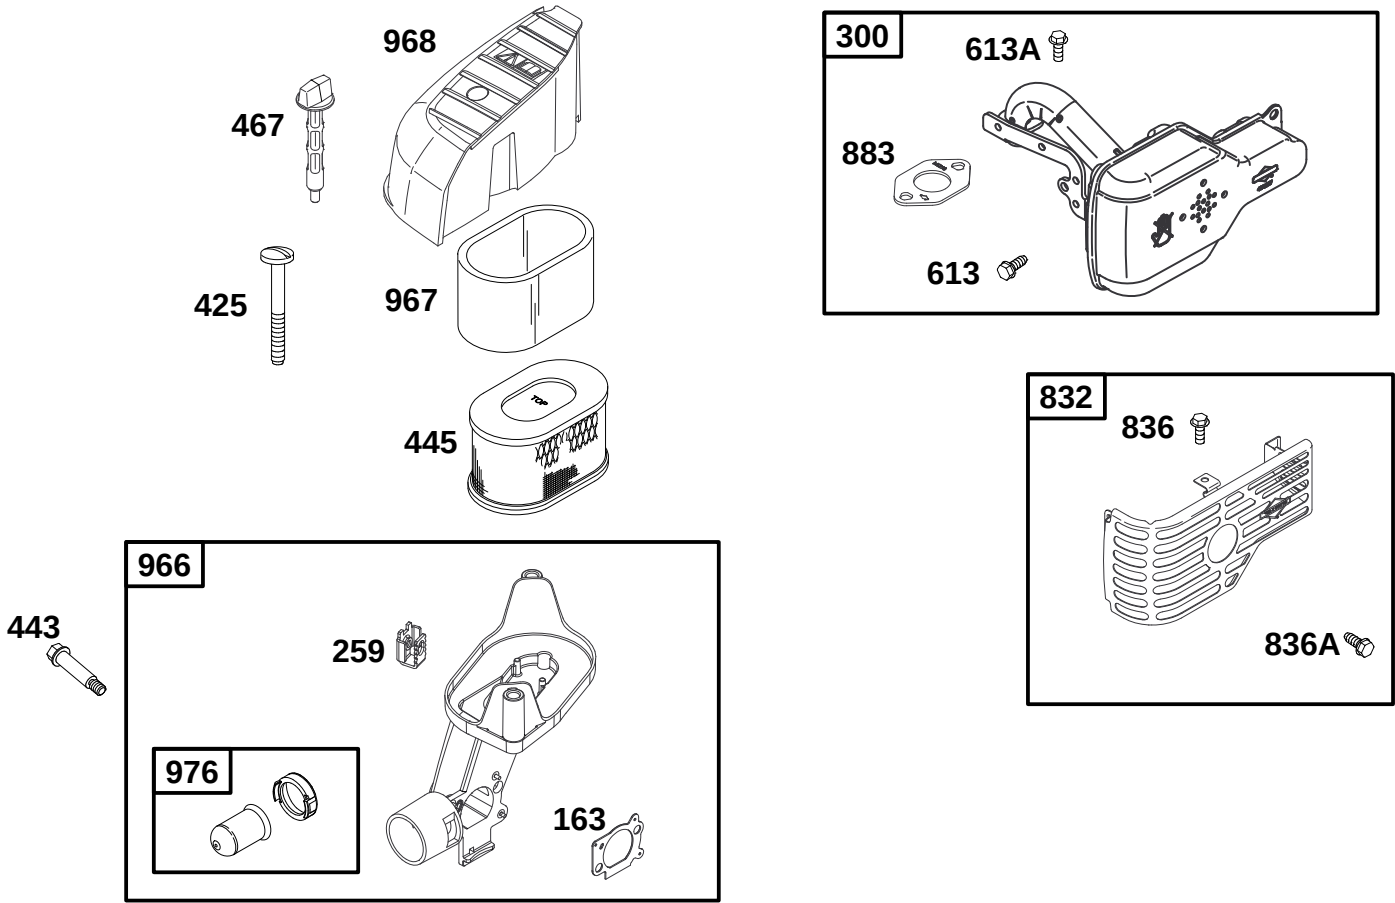

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used
★◆●163	273364	Air Cleaner Gasket	1
259	691189	Casing Clamp Bracket	1
300	692276	Muffler	1
425	690244	Screw (Air Cleaner)	1
445	690610	AC Cartridge Filter	1
467	692447	Air Cleaner Knob	1
613	691140	Screw (Muffler)	1
613A	691108	Screw (Muffler)	1
832	690984	Muffler Guard	1

Ref. No.	Part No.	Description	No. Used
836	94786	Screw (Muffler Guard)	1
836A	94874	Screw (Muffler Guard)	1
★†883	273348	Exhaust Gasket	1
966	499684	Air Cleaner Primer Base	1
967	273356	Air Filter	1
968	692692	Air Cleaner Cover	1
443	690255	Screw (Air Cleaner Primer Base)	1
976	496115	Carburetor Primer	1

★ Included in Gasket Set-See Ref. 358.
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

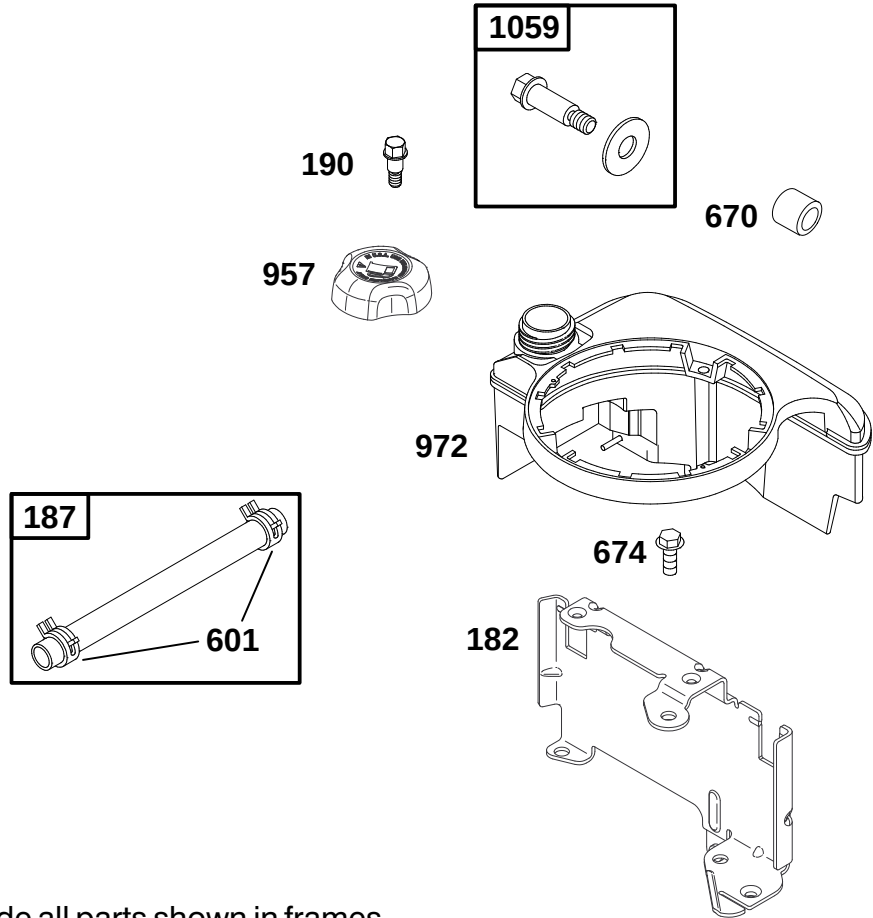

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used
182	692441	Bracket (Tank Mounting)	1
187	298049	Fuel Line	
		(Cut to Required Length)	1
190	94511	Screw (Fuel Tank)	1
601	95126	Hose Clamp	1

Ref. No.	Part No.	Description	No. Used
670	280512	Fuel Tank Spacer	1
957	498697	Fuel Tank Cap	1
674	94929	Screw (Tank Bracket Mtg.)	1
972	499618	Fuel Tank	1
1059	398540	Screw/Washer Kit	1

★ Included in Gasket Set—See Ref. 358.
● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
† Included in Valve Overhaul Gasket Set—See Ref. 1095.

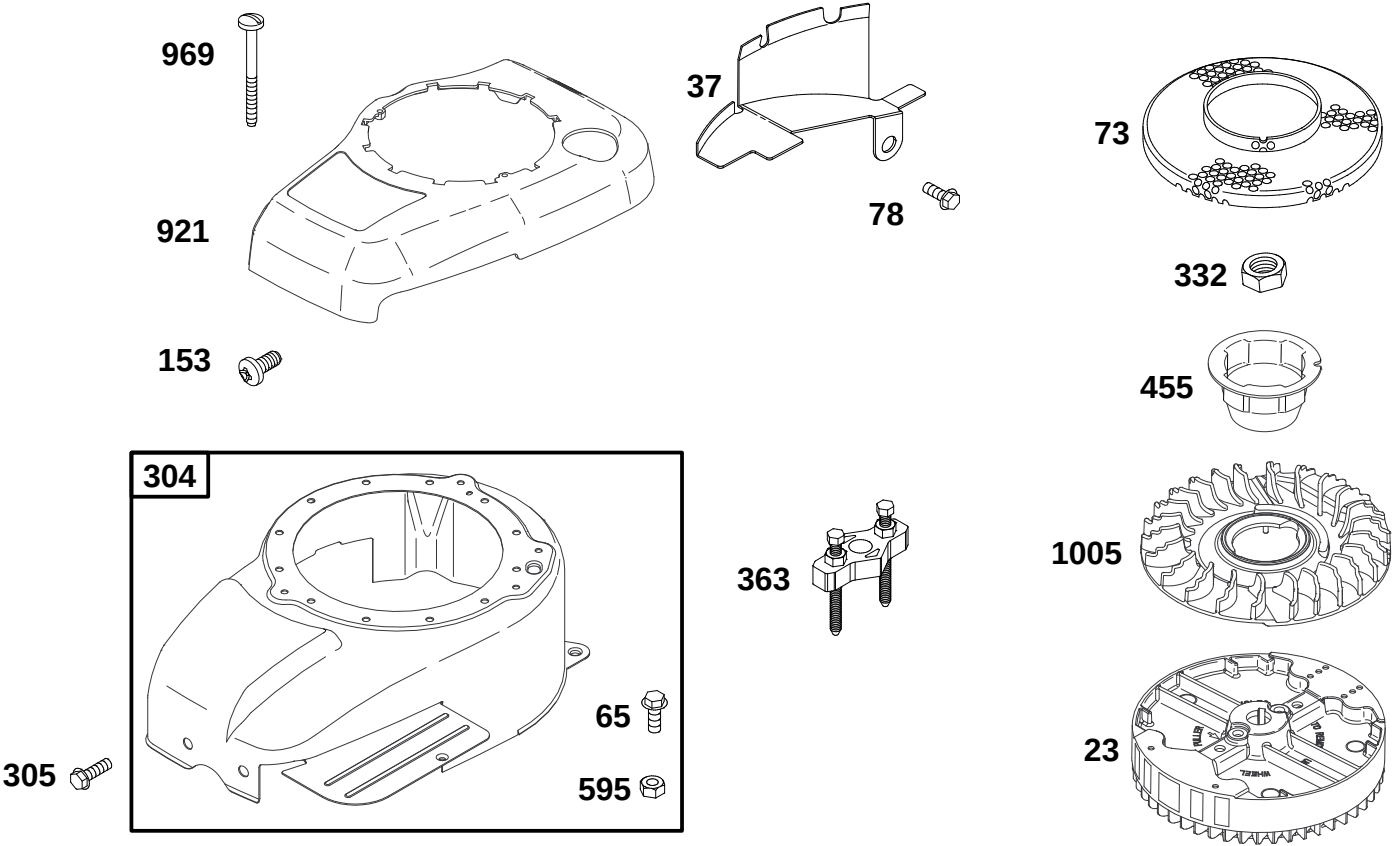

Assemblies include all parts shown in frames.

1036 LABEL KIT-EMISSION


ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used
23	692452	Flywheel	1
37	224511	Flywheel Guard	1
65	94904	Screw (Rewind Starter)	1
73	225133	Rotating Screen	1
78	691108	Screw (Flywheel Guard)	1
153	692438	Screw (Blower Housing Cover)	1
304	499677	Blower Housing	1
305	691108	Screw (Blower Housing)	1

Ref. No.	Part No.	Description	No. Used
332	94877	Nut (Flywheel)	1
363	19069	Flywheel Puller	1
455	691219	Flywheel Cup	1
595	94908	Nut (Rewind Starter)	1
921	692699	Blower Housing Cover	1
969	691138	Screw (Blower Housing)	1
1005	691346	Flywheel Fan	1
1036	499343	Emissions Label	1

★ Included in Gasket Set-See Ref. 358.
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

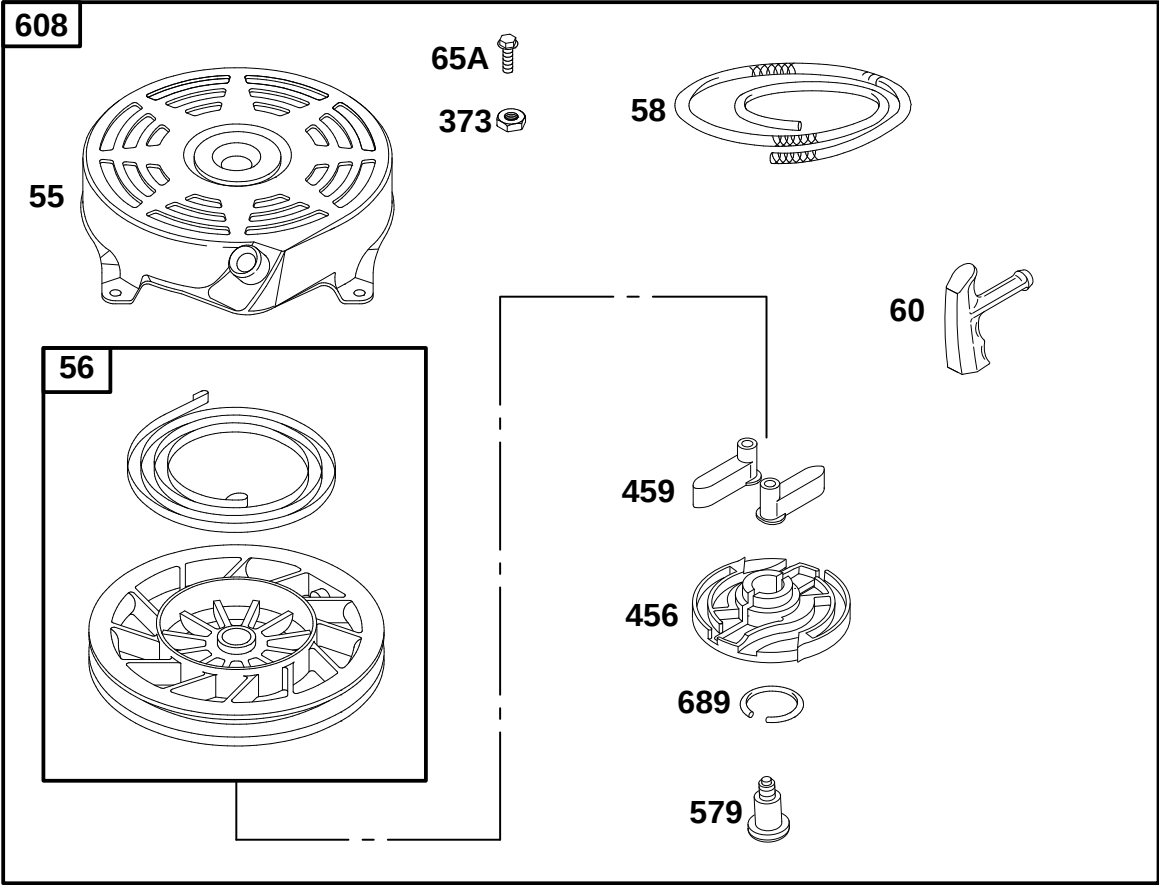

Assemblies include all parts shown in frames.





ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Rewind Starter Housing	1
56	498144	Starter Pulley	1
58	280399	Starter Rope	1
60	281434	Starter Rope Grip	1
65A	94686	Screw (Rewind Starter)	1
373	92987	Nut (Rewind Starter)	1

Ref. No.	Part No.	Description	No. Used
456	281503	Spring Retainer	1
459	281505	Ratchet Pawl	1
515	263073	Friction Spring	1
579	94943	Screw (Spring Retainer)	1
608	497680	Rewind Starter	1

★ Included in Gasket Set—See Ref. 358.
 ● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
 † Included in Valve Overhaul Gasket Set—See Ref. 1095.

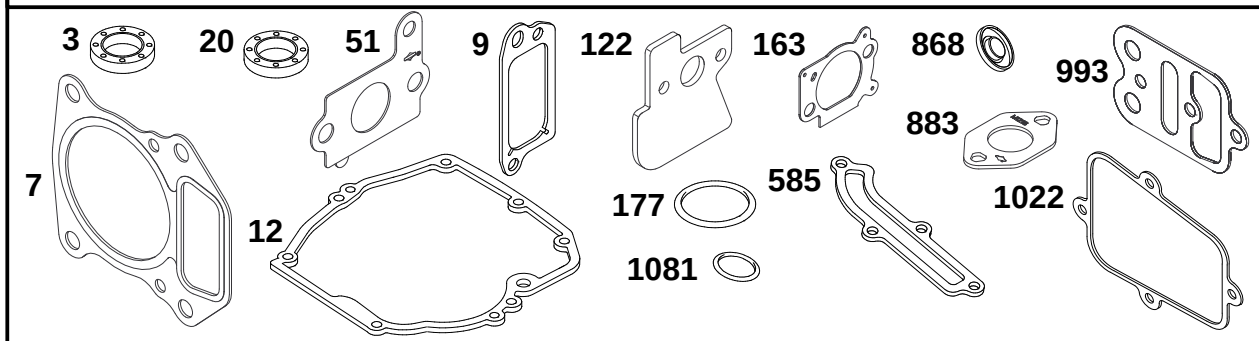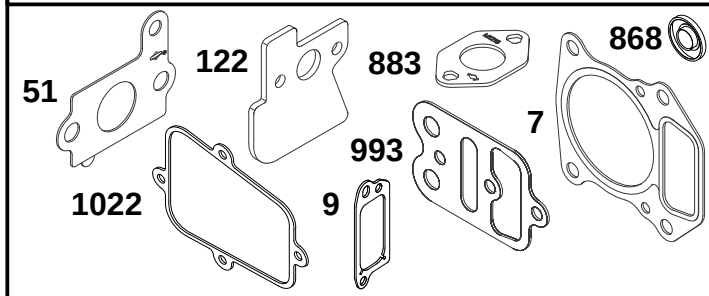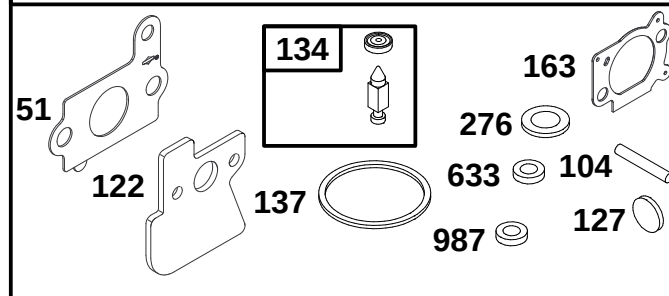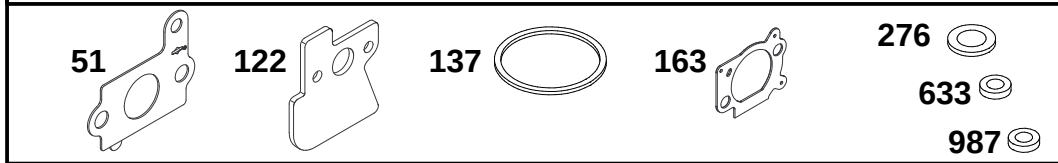358 GASKET SET**1033 VALVE OVERHAUL KIT****121 CARBURETOR KIT****977 CARBURETOR GASKET SET****ENGINE BRIGGS & STRATTON MODEL 122602-0150-E1**

Ref. No.	Part No.	Description	No. Used
★3	299819	Oil Seal	1
★†7	273240	Cylinder Head Gasket	1
★†9	272481	Breather Gasket	1
★12	272198	Crankcase Gasket	1
★20	399781	Oil Seal	1
★◆†51	272248	Intake Gasket	1
●104	231371	Float Hinge Pin	1
★†177	280393	O-Ring Seal	1
121	692703	Carburetor Kit	1
★◆†122	692799	Carburetor Spacer	1
●127		Welch Plug (Sold in Kit Only)	1
●134	398188	Needle Valve	1
◆◆137		Float Bowl Gasket (Sold in Kit Only)	1
★◆◆163	273364	Air Cleaner Gasket	1

Ref. No.	Part No.	Description	No. Used
◆◆276		Washer (Sold in Kit Only)	1
358	692702	Gasket Set	1
★585	272238	Breather Passage Gasket	1
◆◆708		Choke Shaft Seal (Sold in Kit Only)	1
★†868	498592	Valve Seal	1
★†883	273348	Exhaust Gasket	1
977	692704	Carburetor Gasket Set	1
◆◆987		Throttle Shaft Seal (Sold in Kit Only)	1
★†993	273346	Gasket	1
★†1022	273787	Rocker Cover Gasket	1
1033	692705	Valve Overhaul Kit	1
★1081	280966	O-Ring Seal	1

★ Included in Gasket Set—See Ref. 358.
 ● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
 † Included in Valve Overhaul Gasket Set—See Ref. 1095.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	14	1	Grommet
610358	4	17	2	Nut-Jam, Locking
613227	3	14	1	Screw - Set
614426	4	11	2	Washer-Stepped
614447	4	2	2	Spacer-Axle Shaft
614596	2	5	1	Gear -34t
614650	1	25	2	Bolt-Shoulder
614672	1	27	2	Bolt-Shoulder
614673	1	15	1	Bushing - Actuator Plt
614687	1	24	2	Arm-Front Spring
614696	2	8	1	Shaft-Intermediate
3-3287	5	18	2	Spacer-Handle Latch
27-6250	4	9:4	2	Bushing
33-0441	6	2	1	Door Cover
33-0450	6	4	1	Latch Comp Spring
36-4780	2	6	2	Washer
36-4791	2	11	2	Thrust Washer
36-6910	7	4	2	Spring
38-7820	2	13	1	Bearing-Ball
40-1940	1	28	2	Washer-Wheel Bolt
43-8480	3	32	1	Decal-Danger
46-6811	6	10	3	Screw/Washer
46-8090	6	7	2	Screw-Plastite
46-8091	5	4	1	Special-HWH
47-2900	4	3:2	1	Bushing
49-2040	1	11	1	Screw-Taptite
49-2040	2	9	4	Screw-Taptite
55-3760	2	10	1	15 T Pinion
60-8750	2	12	2	Bushing
60-8850	2	3	2	Bushing-Output
60-8890	2	15	1	Bevel Pinion Gear
62-6660	2	18	1	Spacer
65-2720	4	5	4	Klip Ring-Special
65-4710	4	6	2	Ring-Friction
65-4720	4	13	2	Spring-Compression
65-4730	4	16	2	Washer-Pivot Arm
65-4740	4	4	4	Washer-Keyed Thrust
65-4750	4	14	2	Pinion-Gear, 15t
65-4760	4	15	2	Washer
66-6040	4	7	1	Key-Rocking
66-6050	4	8	1	Key-Rocking LH
70-9760	4	3:3	1	Bushing
86-9671	5	26	1	Guide-Rope
88-1090	6	1	2	RH Door Spring
88-1800	6	3	1	Door Latch
92-1004	4	18	2	Spring Arm ASM - Rear
92-1008	1	23	6	Knob-Height Adj Lever
92-1057	4	10	2	Shoulder Bolt
92-1616	1	13	1	Screw-Thread Forming
92-2260	5	15	2	Screw-Handle
92-2914	1	18	1	Decal - HOC R
92-2915	1	17	1	Decal - HOC L
92-4881-03	1	35	2	Plate - Hght Adj
92-4890	1	30	2	Washer - Wheel
92-7727	2	2	1	Gearcase
92-7746	4	3	2	ASM: Rear Ht Adj Arm
92-8647	1	21	1	Shield - Trailing
92-9590	4	9	2	ASM - 8" Wheel
92-9591	1	26	2	Assembly - 7" Wheel
93-0216	1	34	1	Kicker - Front
93-0217	3	12	1	Kicker - Rear
93-0219-03	3	18	1	Accelerator

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-0222-03	1	33	1	Baffle – Front
93-0223-03	3	11	1	Baffle – Rear
93-0231	1	32	1	Screw – PPH
93-0231	3	10	1	Screw – PPH
93-0239	2	7	1	Shaft – Output
93-0240	1	16	1	ASM – Transmission
93-0241	3	19	1	Blade – Steel Deck (Raw)
93-0242	6	9	4	Grommet
93-0248	1	8	1	Decal – Warning
93-0263	6	5	1	Chute – Discharge
93-0264	6	12	1	Door – Discharge
93-0266	7	2	1	Door – Bag
93-0267-03	6	6	1	Plate–Discharg Chute
93-0281	7	5	1	Frame – Upper Bag
93-0282	7	3	1	Frame – Lower Bag
93-0283	7	7	1	Hinge–bag Door
93-0284	7	6	1	Bag – Grass
93-4196-03	3	15	1	Shield – Grass
94-1609	4	12	2	Cover–Wheel
94-4496	5	8	10	Screw–Pan Hd
95-1726	3	13	3	Screw–Taptite w/Patch
95-1748	3	16	1	Screw–Blade
95-4453	5	10	1	Screw – Handle
95-7403-03	1	29	2	Brkt–Whl Ht Adj
98-7134	5	14	4	Knob–Handle
99-1509	5	13	1	Cable–Brake
99-1510	5	12	1	Cable–Traction
99-1524-03	3	22	1	Guide–Belt (Steel Pp)
99-1567-03	1	12	1	Bracket–Belt Guide (Pp Steel)
99-1581	1	9	1	Cover–Belt (Pp Steel Deck)
99-1582	5	2	1	Handle–Control
99-1588	5	6	1	Bar–Traction Control
99-1589	5	5	1	Lever–Traction
99-1590	5	9	2	Guide–Control Handle
99-1592	5	30	1	Spring–Torsion,RH
99-1593-03	5	1	1	Bail–Brake
99-1595	5	3	1	Retainer – Brake Cable
99-1596-05	5	28	1	Handle–Upper
99-1597	4	1	1	V–Belt (Pp Steel)
99-5233	1	19	1	ASM – LH Handle Bracket
99-5234	1	7	1	ASM – RH Handle Bracket
99-5236	3	36	1	Housing Sp Steel (Service)
99-5239	5	11	1	Anchor–Cable
99-5244	3	21	1	Pulley–Assy
99-5246-05	5	23	1	Handle–Lower
99-5247-03	5	20	2	Support–Handle
99-5284	5	17	2	Bolt–Shoulder
99-5287	3	20	1	ASM–Blade Driver
99-5291	3	26	1	Rod–Cover (Steel Side Discharge)
99-5292	3	27	1	Bracket–Cover (Steel Side Discharge)
99-5293	3	28	1	Spring–Torsion (Steel Side Discharge)
99-5294	3	29	1	Cover–Side (Steel Side Discharge)
99-5295	3	30	1	Chute–Side (Side Discharge)
99-6008	5	7	1	Retainer–Traction Control Rod
99-6011	3	25	1	Decal – Deck
99-6014	3	4	1	Decal – Recoil
99-6015	3	2	1	Decal – Recoil
99-6016	5	31	1	Decal – Personal Pace (Steel)
99-6018	1	6	1	Decal – Warning
99-6019	5	21	2	Screw–CARR
99-6339	5	29	1	Cover–Handle
99-6349	3	35	1	Baffle

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
100-1176	2	17	2	Pulley Half
100-1589-03	6	14	1	Clamp-Door
100-1590	6	13	1	Knob
2210-316	3	5	1	Stop-Rope F/W Engine
302-56	4	3:1	1	Fitting-Zerk
322-3	1	20	6	Screw-HH
3229-11	3	31	2	Screw-CARR
3253-22	3	17	1	Washer-Lock/Sp
3256-1	5	24	1	Washer-Flat
3256-24	2	14	1	Washer-Flat
3285-19	2	4	2	Pin-Groove
3290-378	5	16	1	Tie-Cable
3290-422	7	1	2	Nut-Push
3296-5	2	16	1	Nut-Lock Ni
3296-29	1	22	6	Nut-Lock Ni
3296-39	1	31	2	Nut-Lock Ni
3296-72	5	19	2	Nut-Lock Ni
3296-73	5	25	2	Nut-Lock
32128-32	3	23	2	Nut-Hex, Flange
32144-32	6	11	2	Screw
32144-85	4	19	2	Screw-TAP
32144-111	6	8	1	Screw-Plask
32144-119	1	10	1	Screw-Pth
614668-03	2	1	1	Gear Case Cover

[illegible]