



21" Recycler[®] /Rear Bagging

Walk Behind Mower

Model No. 20025 – 9900001 & Up

Model No. 20029 – 9900001 & Up

PROTOTYPE

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing, Handle Brackets & Wheel Assembly ..	1	Bagging Assembly	7
Gear Case Assembly	2	Engine Briggs & Stratton	
Engine & Blade Assembly	3	Model 12J802-2368-E1	8-14
Gear Case & Wheel Assembly	4	Toro Part Number Index	15-17
Handle & Controls Assembly	5		
Rear Bagging Discharge Chute Assembly	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Recycler Bagging Kit (Model 20029 Only)	Model No. 59299		
Chute Plug Kit	Model No. 59134		
Traction Assist Handle Kit	Model No. 59196		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFV	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSR	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X(Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

PROTOTYPE

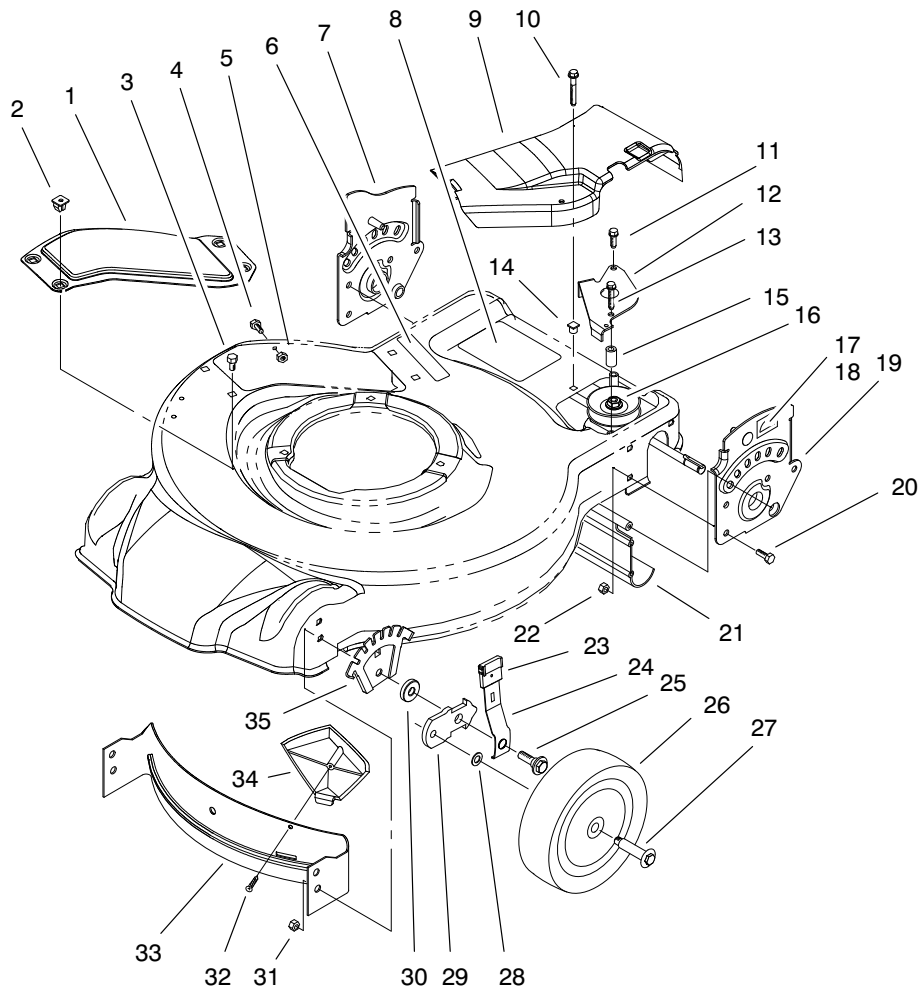


Sheet No.:2

Housing, Handle Brackets & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0230-01	1	Cover – Recycling (Only On: 20029)
2	93-0242	4	Grommet (Only On: 20029)
3	32144-4	3	Screw-HH (Only On: 20029)
4	32105-27	1	Screw (Only On: 20029)
5	3296-2	1	Nut-Lock Esna (Only On: 20029)
6	99-6018	1	Decal – Warning
7	99-5234	1	ASM – RH Handle Bracket
8	93-0248	1	Decal – Warning
9	99-1581	1	Cover-Belt (Pp Steel Deck)
10	32144-119	1	Screw-Pth
11	49-2040	1	Screw-Taptite
12	99-1567-03	1	Bracket-Belt Guide (Pp Steel)
13	92-1616	1	Screw-Thread Forming
14	605120	1	Grommet
15	614673	1	Bushing – Actuator Plt
16	93-0240	1	ASM – Transmission
17	92-2915	1	Decal – HOC L


Ref. No.	Part No.	Qty.	Description
18	92-2914	1	Decal – HOC R
19	99-5233	1	ASM – LH Handle Bracket
20	322-3	6	Screw-HH
21	92-8647	1	Shield – Trailing
22	3296-29	6	Nut-Lock Ni
23	92-1008	6	Knob-Height Adj Lever
24	614687	2	Arm-Front Spring
25	614650	2	Bolt-Shoulder
26	92-9591	2	Assembly – 7" Wheel
27	614672	2	Bolt-Shoulder
28	40-1940	2	Washer-Wheel Bolt
29	95-7403-03	2	Brkt-Whl Ht Adj
30	92-4890	2	Washer – Wheel
31	3296-39	2	Nut-Lock Ni
32	93-0231	1	Screw – PPH
33	93-0222-03	1	Baffle – Front
34	93-0216	1	Kicker – Front
35	92-4881-03	2	Plate – Hght Adj

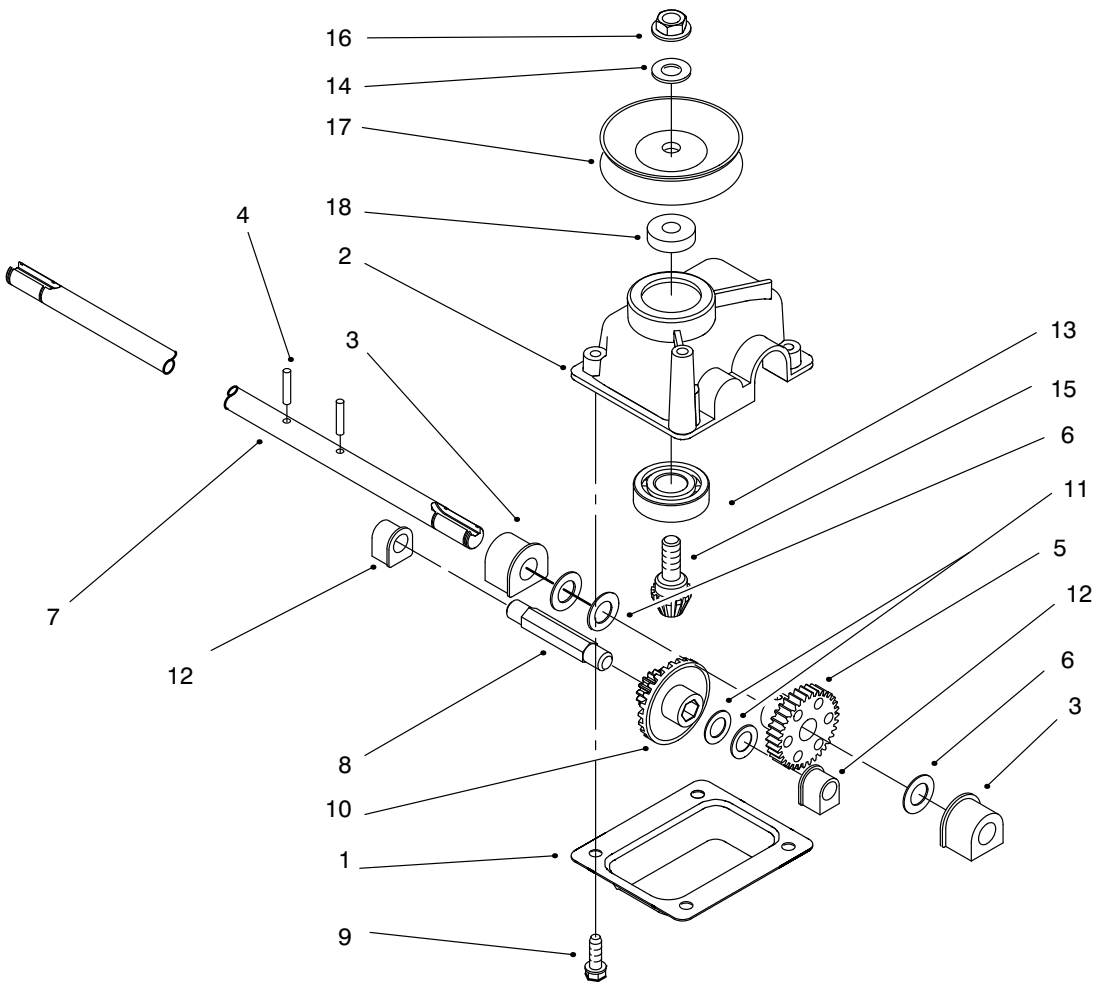

Sheet No.:A1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	614668-03	1	Gear Case Cover				
2	92-7727	1	Gearcase				
3	60-8850	2	Bushing-Output				
4	3285-19	2	Pin-Groove				
5	614596	1	Gear -34t				
6	36-4780	2	Washer				
7	93-0239	1	Shaft - Output				
8	614696	1	Shaft-Intermediate				
9	49-2040	4	Screw-Taptite				
10	55-3760	1	15 T Pinion				
11	36-4791	2	Thrust Washer				
12	60-8750	2	Bushing				
13	38-7820	1	Bearing-Ball				
14	3256-24	1	Washer-Flat				
15	60-8890	1	Bevel Pinion Gear				
16	3296-5	1	Nut-Lock Ni				
17	100-1176	2	Pulley Half				
18	62-6660	1	Spacer				

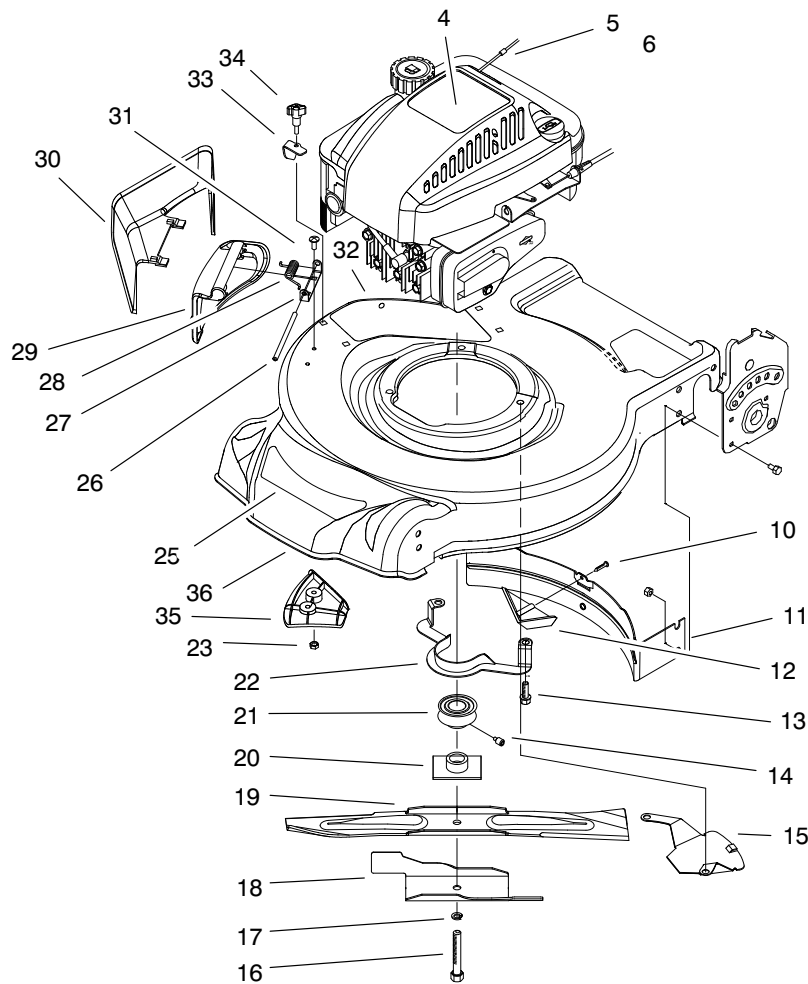


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
4	99-6336	1	Decal – Recoil – Quiet I/C
5	2210-316	1	Stop-Rope F/W Engine
10	93-0231	1	Screw – PPH
11	93-0223-03	1	Baffle – Rear
12	93-0217	1	Kicker – Rear
13	95-1726	3	Screw-Taptite w/Patch
14	613227	1	Screw – Set
15	93-4196-03	1	Shield – Grass
16	95-1748	1	Screw-Blade
17	3253-22	1	Washer-Lock/Sp
18	93-0219-03	1	Accelerator
19	93-0241	1	Blade – Steel Deck (Raw)
20	99-5287	1	ASM-Blade Driver
21	99-5244	1	Pulley-Assy
22	99-1524-03	1	Guide-Belt (Steel Pp)
23	32128-32	2	Nut-Hex, Flange
25	99-6011	1	Decal – Deck
26	99-5291	1	Rod-Cover (Steel Side Discharge)
27	99-5292	1	Bracket-Cover (Steel Side Discharge)


Ref. No.	Part No.	Qty.	Description
28	99-5293	1	Spring-Torsion (Steel Side Discharge)
29	99-5294	1	Cover-Side (Steel Side Discharge)
30	99-5295	1	Chute-Side (Side Discharge)
31	3229-11	2	Screw-CARR
32	43-8480	1	Decal-Danger
33	100-1589-03	1	Clamp-Door (Only On: 20029)
34	98-8332	1	Knob (Only On: 20029)
35	99-6349	1	Baffle
36	99-5236	1	Housing Sp Steel (Service)

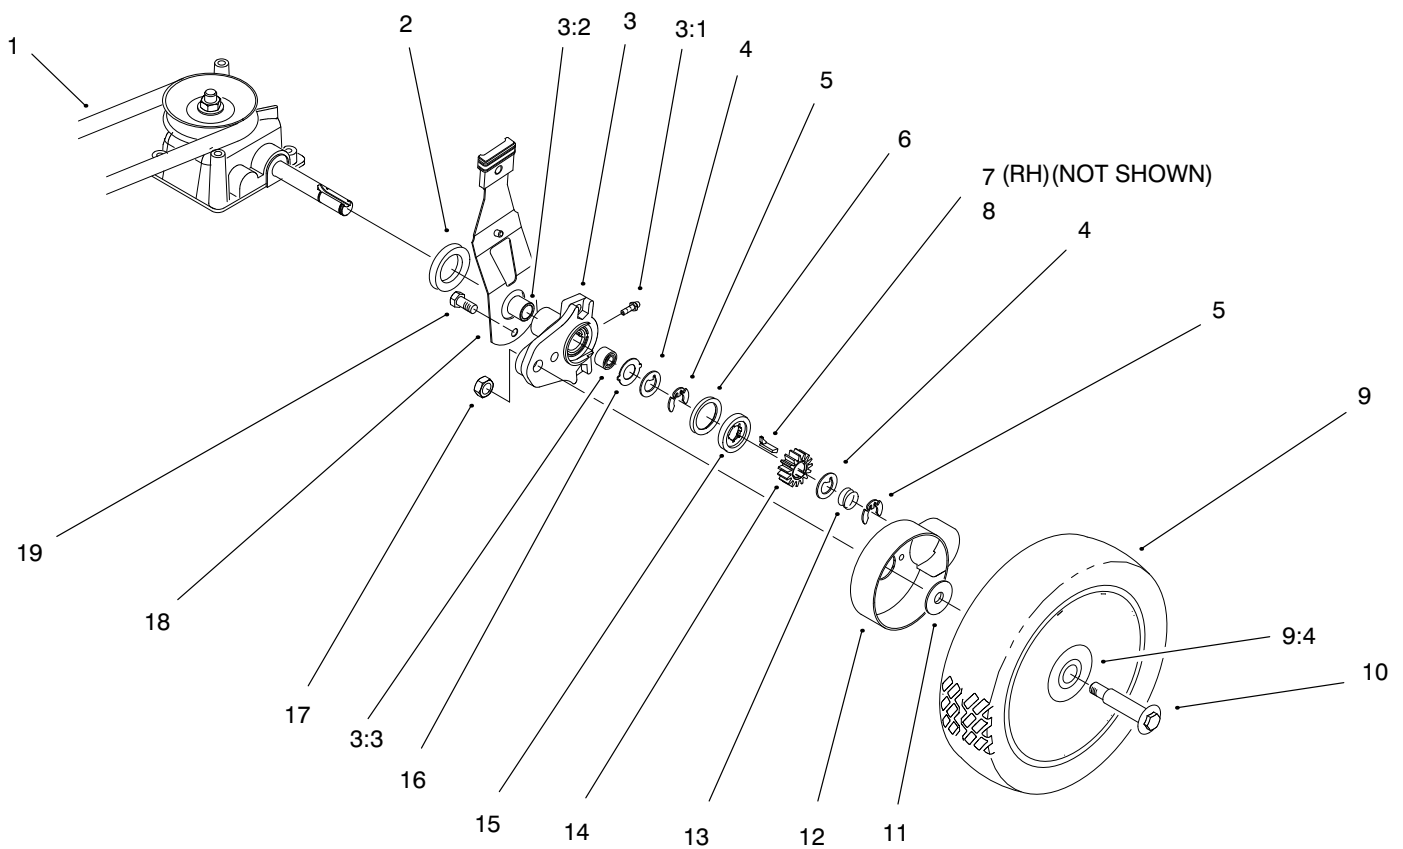

Sheet No.:4

Gear Case & Wheel Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1597	1	V-Belt (Pp Steel)				
2	614447	2	Spacer-Axle Shaft				
3	92-7746	2	ASM: Rear Ht Adj Arm				
3:1	302-56	1	Fitting-Zerk				
3:2	47-2900	1	Bushing				
3:3	70-9760	1	Bushing				
4	65-4740	4	Washer-Keyed Thrust				
5	65-2720	4	Klip Ring-Special				
6	65-4710	2	Ring-Friction				
7	66-6040	1	Key-Rocking				
8	66-6050	1	Key-Rocking LH				
9	92-9590	2	ASM - 8" Wheel				
9:4	27-6250	2	Bushing				
10	92-1057	2	Shoulder Bolt				
11	614426	2	Washer-Stepped				
12	94-1609	2	Cover-Wheel				
13	65-4720	2	Spring-Compression				
14	65-4750	2	Pinion-Gear, 15t				
15	65-4760	2	Washer				
16	65-4730	2	Washer-Pivot Arm				
17	610358	2	Nut-Jam, Locking				
18	92-1004	2	Spring Arm ASM - Rear				
19	32144-85	2	Screw-TAP				

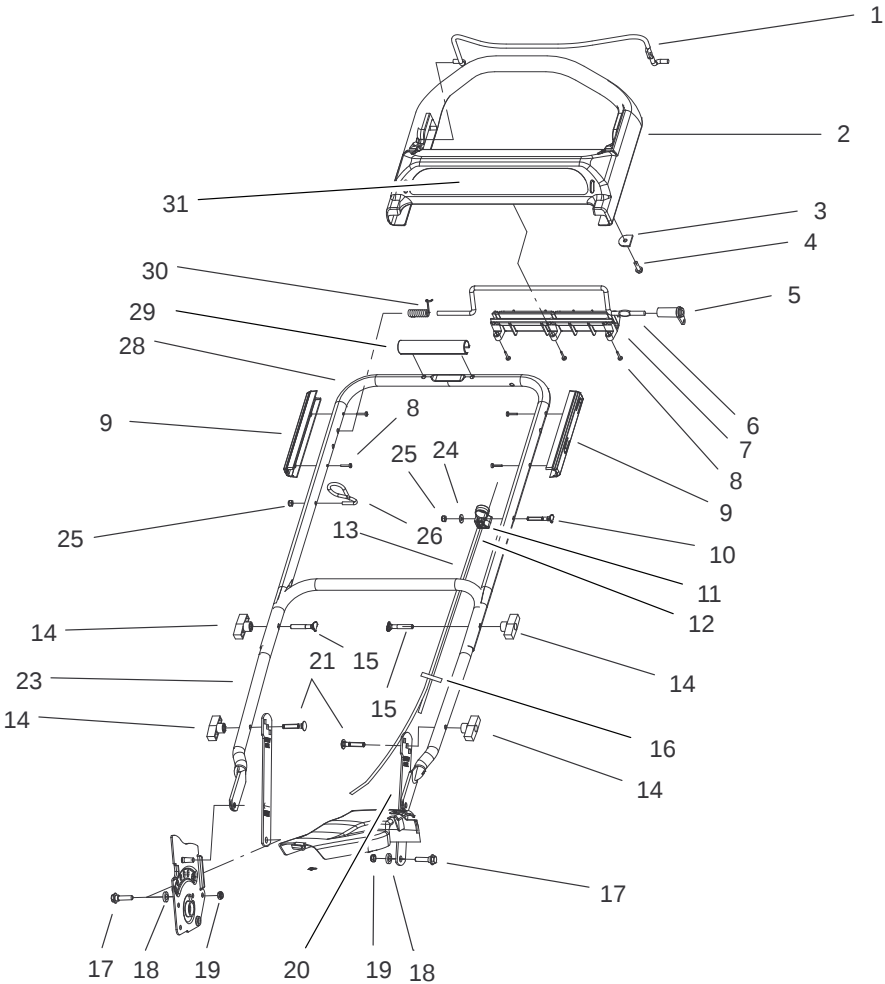

Sheet No.:5

Handle & Controls Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake	26	86-9671	1	Guide-Rope
2	99-1582	1	Handle-Control	28	99-1596-05	1	Handle-Upper
3	99-1595	1	Retainer - Brake	29	99-6339	1	Cover-Handle
4	46-8091	1	Cable	30	99-1592	1	Spring-Torsion,RH
5	99-1589	1	Special-HWH	31	99-6016	1	Decal - Personal Pace (Steel)
6	99-1588	1	Lever-Traction				
7	99-6008	1	Bar-Traction Control				
8	94-4496	10	Retainer-Traction				
9	99-1590	2	Control Rod				
10	95-4453	1	Screw-Pan Hd				
11	99-5239	1	Guide-Control Handle				
12	99-1510	1	Screw - Handle				
13	99-1509	1	Anchor-Cable				
14	98-7134	1	Cable-Traction				
15	92-2260	1	Cable-Brake				
16	3290-378	4	Knob-Handle				
17	99-5284	2	Screw-Handle				
18	3-3287	1	Tie-Cable				
19	3296-72	2	Bolt-Shoulder				
20	99-5247-03	2	Spacer-Handle Latch				
21	99-6019	2	Nut-Lock Ni				
23	99-5246-05	2	Support-Handle				
24	3256-1	1	Screw-CARR				
25	3296-73	1	Handle-Lower				
		1	Washer-Flat				
		2	Nut-Lock				

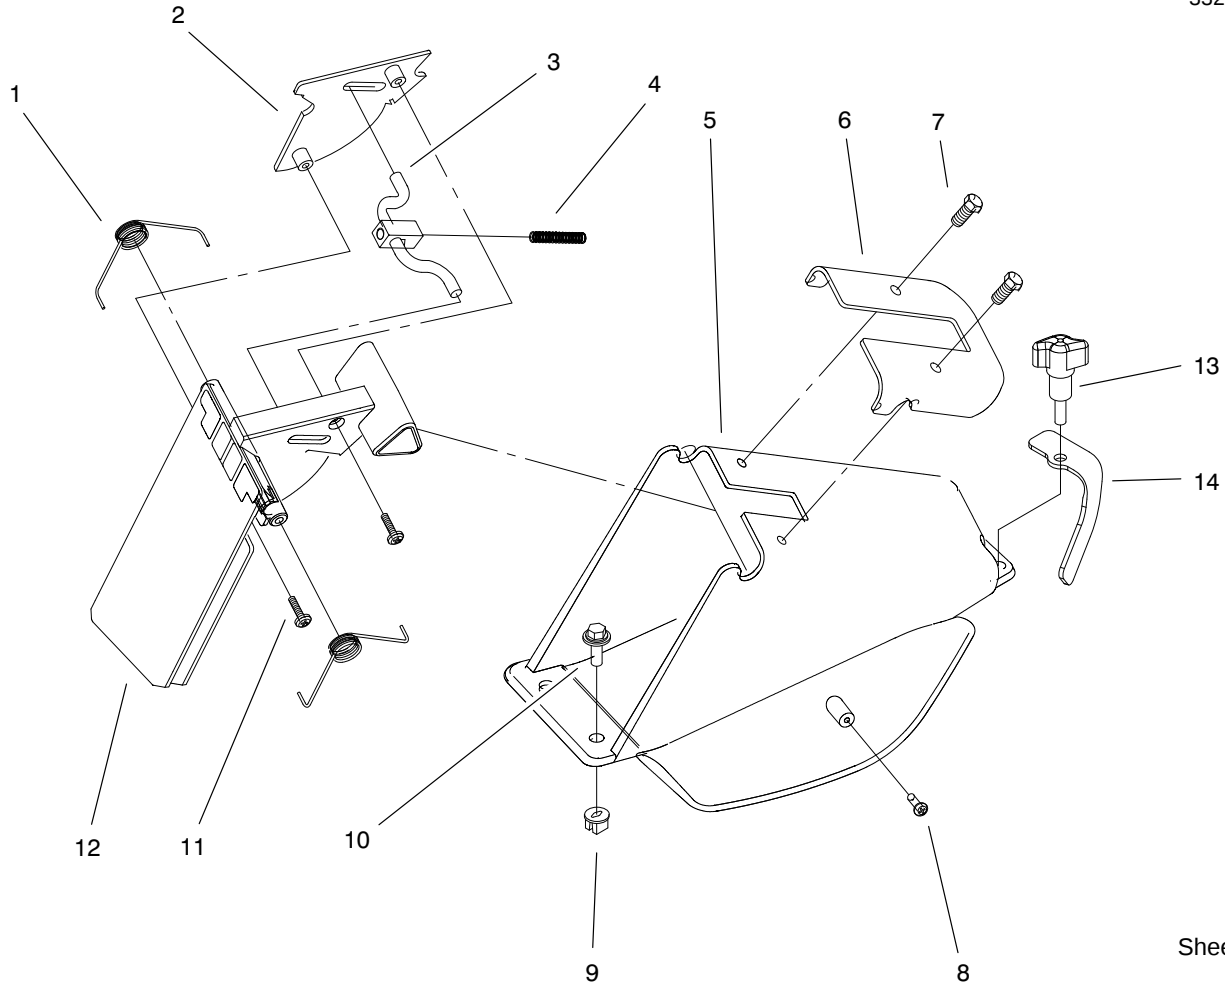

Sheet No.:7

Rear Bagging Discharge Chute Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-1090	2	RH Door Spring (Only On: 20025)	14	100-1589-03	1	Clamp-Door (Only On: 20025)
2	33-0441	1	Door Cover (Only On: 20025)				
3	88-1800	1	Door Latch (Only On: 20025)				
4	33-0450	1	Latch Comp Spring (Only On: 20025)				
5	93-0263	1	Chute - Discharge (Only On: 20025)				
6	93-0267-03	1	Plate-Discharg Chute (Only On: 20025)				
7	46-8090	2	Screw-Plastite (Only On: 20025)				
8	32144-111	1	Screw-Plask (Only On: 20025)				
9	93-0242	4	Grommet (Only On: 20025)				
10	46-6811	3	Screw/Washer (Only On: 20025)				
11	32144-32	2	Screw (Only On: 20025)				
12	93-0264	1	Door - Discharge (Only On: 20025)				
13	100-1590	1	Knob (Only On: 20025)				

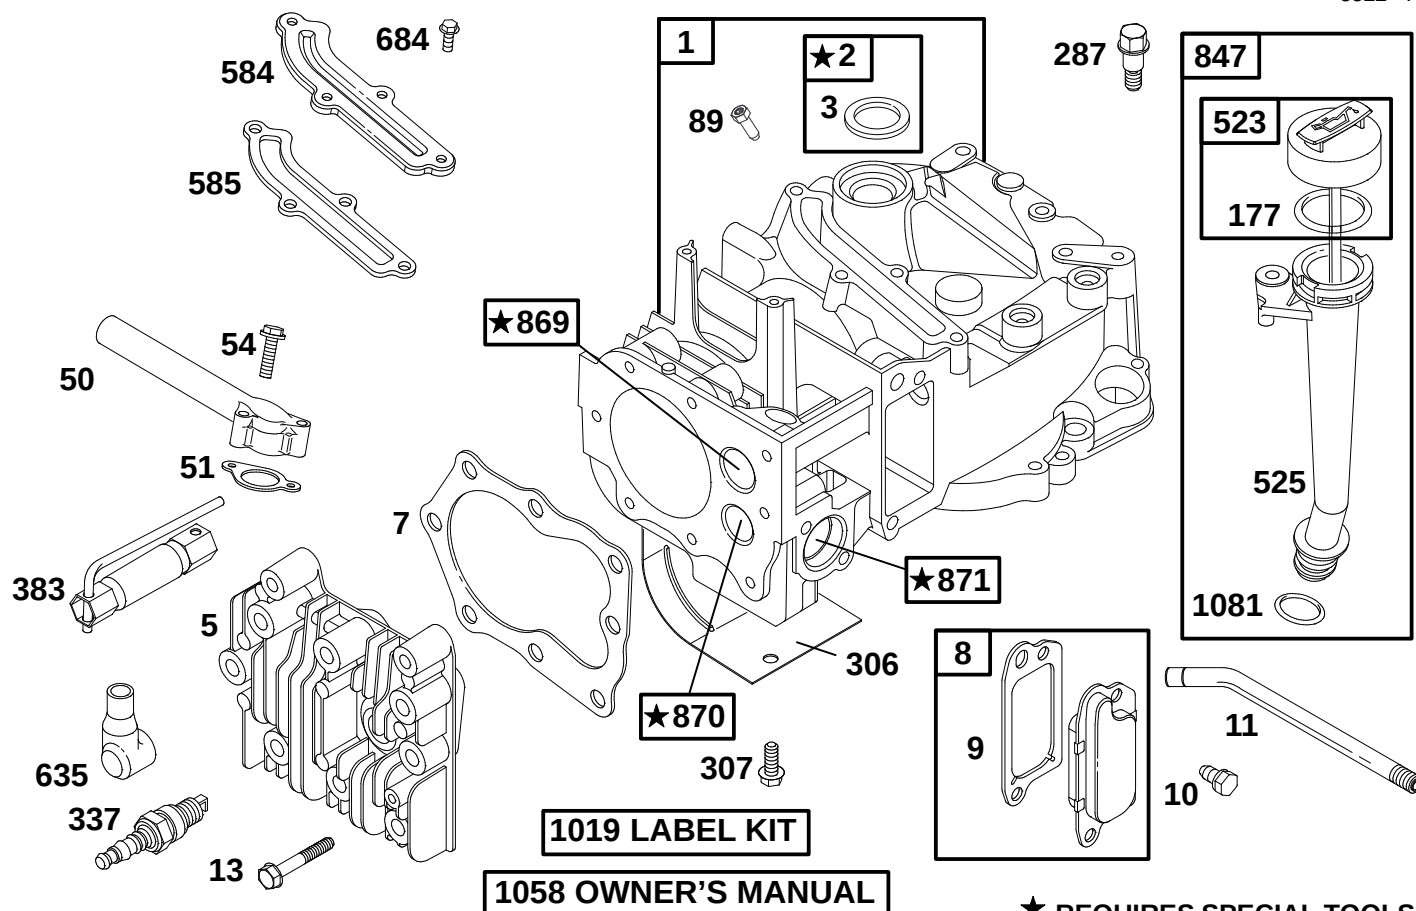

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

ENGINE BRIGGS & STRATTON MODEL 12J802-2368-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	494062	Cylinder Assembly		307	690345	Screw	
2	399269	Bushing	1			(Cylinder Shield)	1
★3	299819	Seal—Oil	1	337	802592	Sparkplug	1
5	691160	Cylinder Head	1	383	89838	Wrench—Sparkplug	1
★†7	272916	Cylinder Head Gasket	1	523	495264	Dipstick	1
8	495786	Breather Assembly	1	525	495265	Dipstick Tube	1
★†9	272481	Breather Gasket	1	584	692342	Breather Passage Cover	1
10	94650	Screw	1	★585	272238	Breather Passage Gasket	1
		(Breather Assy)	1	635	66538	Boot—Sparkplug	1
11	231685	Breather Tube	1	684	94515	Screw	
13	94547	Screw	1			(Breather Passage Cover)	1
		(Cylinder Head)	1	847	495263	Dipstick/Tube Assembly	1
50	497465	Intake Manifold	1	869	691155	Seat—Valve	
★51	272199	Intake Gasket	1			(Intake)	1
54	94526	Screw	1	870	690380	Seat—Valve	
		(Intake Manifold)	1			(Exhaust)	1
89	692348	Plug	1	871	262001	Bushing—Guide	1
★177	280393	O-Ring Seal	1	1019	498606	Label Kit	1
287	94511	Screw	1	1058	273693	Owner's Manual	1
		(Dipstick Tube)	1	★1081	280966	O-Ring Seal	1
306	690450	Shield—Cylinder	1				

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

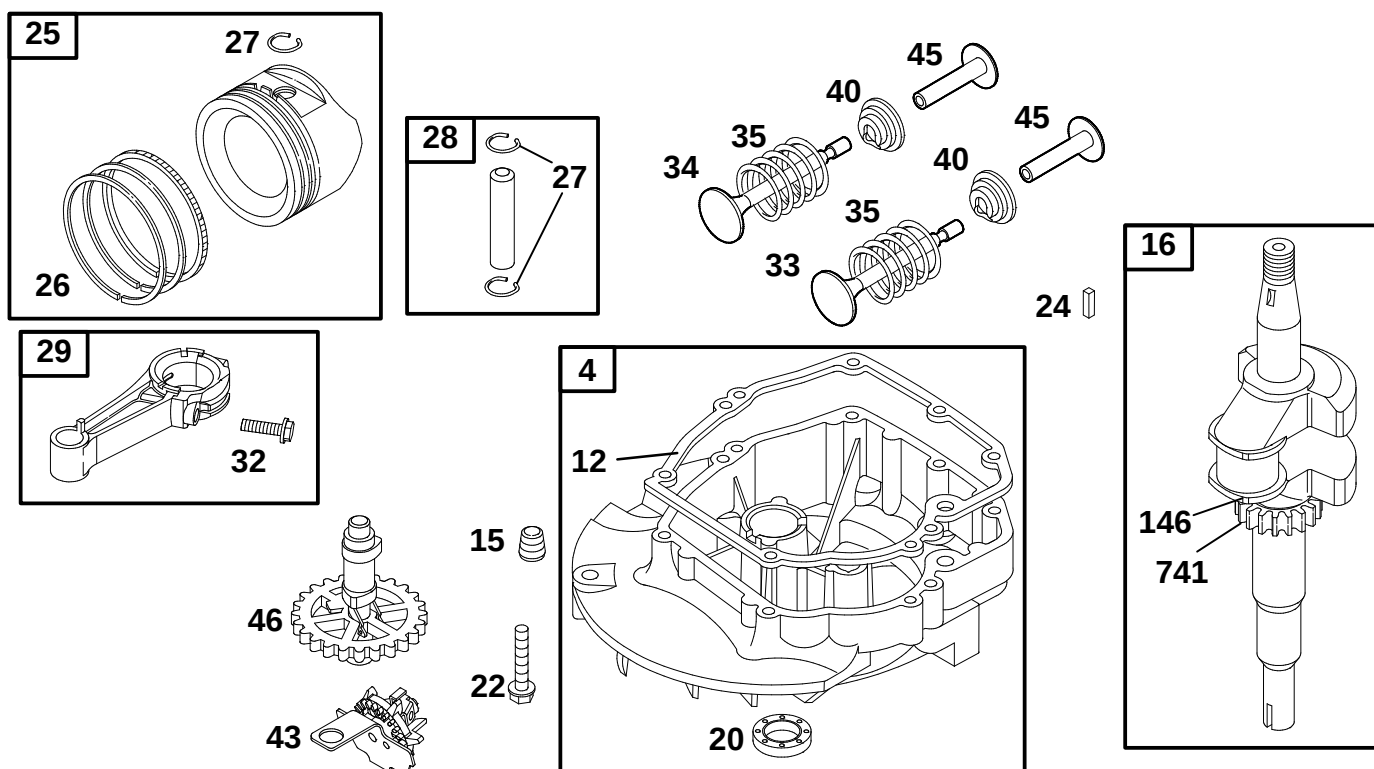

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12J802-2368-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Engine Sump	1
★12	272198	Crankcase Gasket	1
15	94880	Oil Drain Plug	1
16	694079	Crankshaft	1
★20	399781	Oil Seal	1
22	94220	Screw (Engine Sump)	1
	94612	Screw (Used in Hole Nearest Breather)	1
24	222698	Key-Flywheel	1
25	499429	Piston Assembly (Standard)	1
	499430	Piston Assembly (.010" O.S.)	1
	499431	Piston Assembly (.020" O.S.)	1
	499432	Piston Assembly (.030" O.S.)	1
26	499425	Ring Set (Standard)	1
	499426	Ring Set (.010" O.S.)	1

Ref. No.	Part No.	Description	No. Used
	499427	Ring Set (.020" O.S.)	1
	499428	Ring Set (.030" O.S.)	1
27	263190	Piston Pin Lock	1
28	499423	Piston Pin (Standard)	1
	298908	Piston Pin (.005" O.S.)	1
29	499424	Connecting Rod (Standard)	1
32	94699	Screw (Connecting Rod)	1
33	262651	Exhaust Valve	1
34	262652	Intake Valve	1
35	262224	Valve Spring	1
40	93312	Retainer-Valve	1
43	493737	Governor/Oil Slinger	1
45	262204	Valve Tappet	1
46	498275	Camshaft	1
146	94388	Key-Timing	1
741	262598	Gear-Timing	1

★ Included in Gasket Set-See Ref. 358.
 ● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
 † Included in Valve Overhaul Gasket Set-See Ref. 1095.

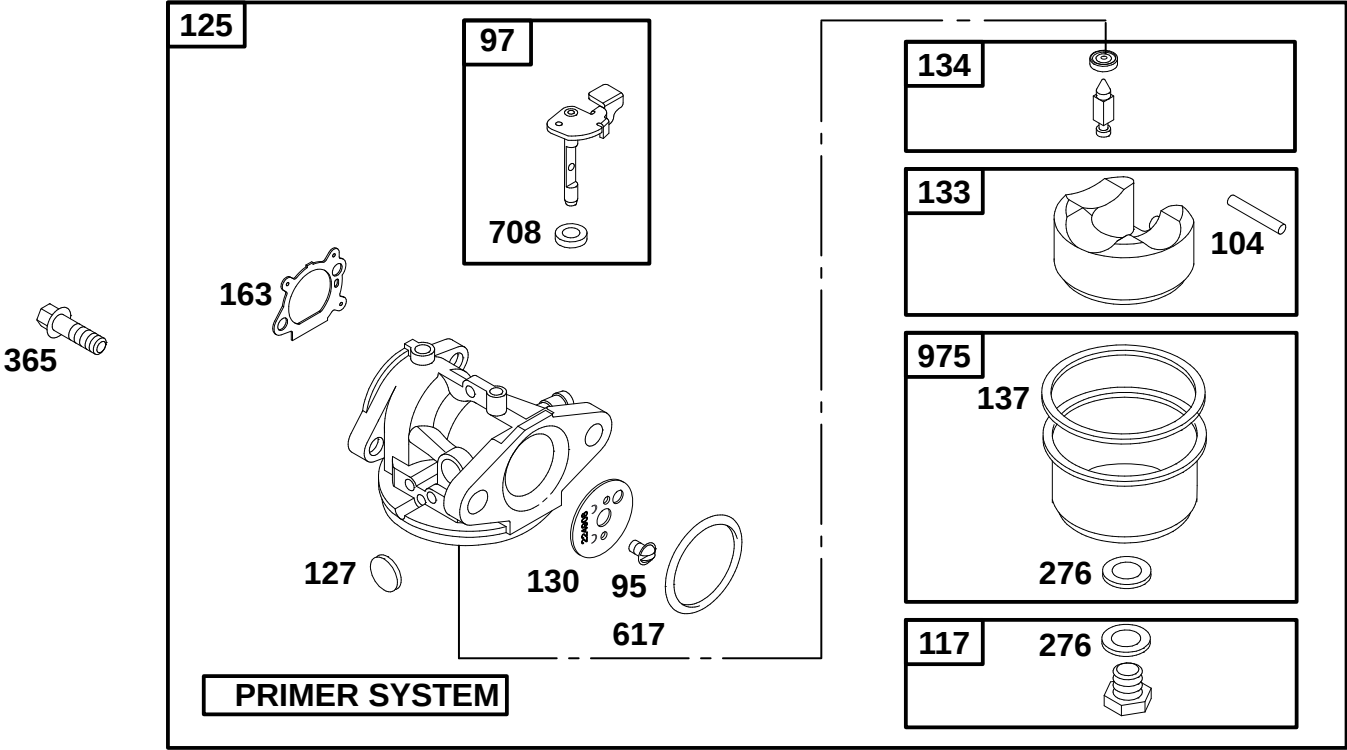


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL12J802-2368-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw (Throttle Valve)	1	130	691203	Valve-Throttle	1
97	493267	Shaft-Throttle	1	133	398187	Float-Carburetor	1
●104	691242	Pin-Float Hinge	1	●134	398188	Needle/Seat Kit	1
117	494870	Main Jet (Standard)	1	●◆137	693981	Gasket-Float Bowl	1
	497315	Main Jet (High Altitude)	1	★◆163	272653	Gasket-Air Cleaner	1
125	694093	Carburetor	1	●◆276	271716	Sealing Washer	1
●127		Plug-Welch (Sold in Kit Only)	1	365	94525	Screw (Carburetor)	1
				●◆617	270344	O-Ring Seal	1
				●◆708	691321	Seal-Dust	1
				975	493640	Bowl-Float	1

★ Included in Gasket Set-See Ref. 358.
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

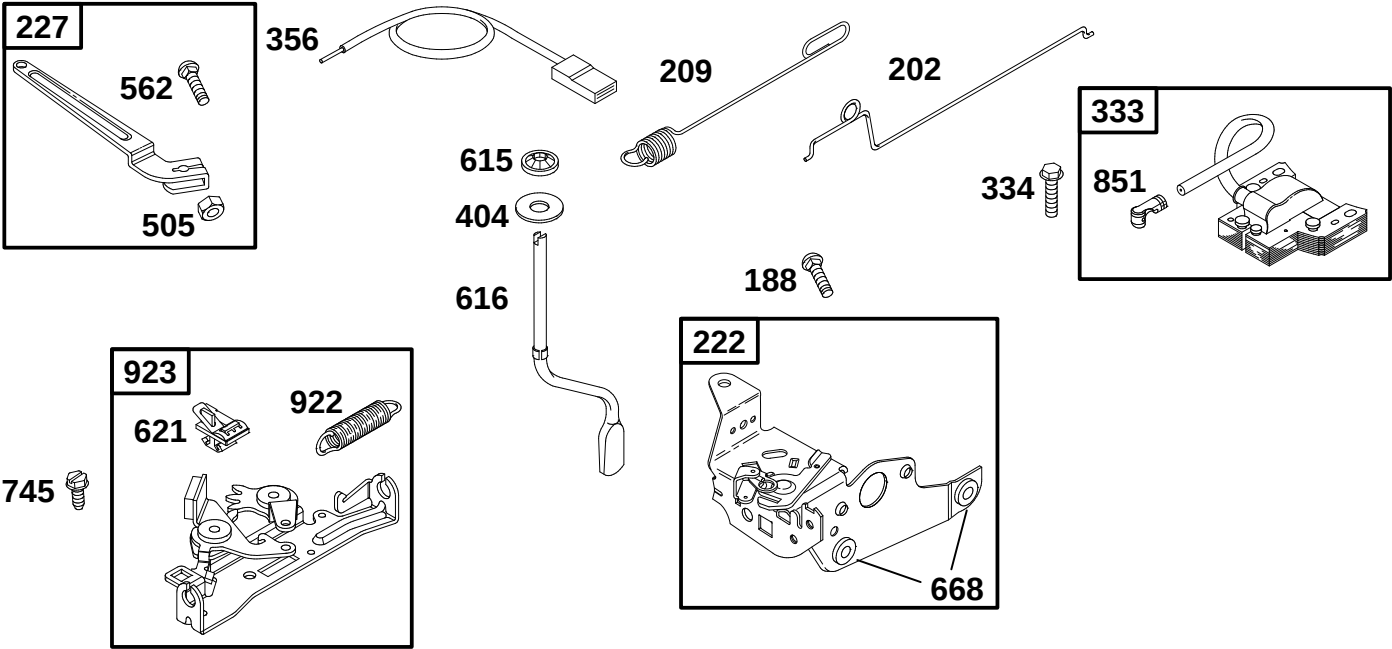

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12J802-2368-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw (Control Bracket)	1
202	262579	Link—Mechanical Governor	1
209	691292	Spring—Governor	1
222	499835	Bracket—Control	1
227	492349	Governor Control Lever	1
333	802574	Armature—Magneto	1
334	94731	Screw (Armature—Magneto)	1
356	497833	Wire—Stop	1
404	67072	Washer (Governor Crank)	1
505	231082	Nut (Governor Control Lever)	1

Ref. No.	Part No.	Description	No. Used
562	92613	Bolt (Governor Control Lever)	1
615	94474	Retainer—Governor Shaft	1
616	691306	Crank—Governor	1
621	396847	Switch—Stop	1
★668	493823	Spacer (Includes 2)	1
745	94512	Screw (Brake)	1
851	493880	Terminal—Cable	1
922	262640	Spring—Brake	1
923	493442	Brake	1

★ Included in Gasket Set—See Ref. 358.
● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
† Included in Valve Overhaul Gasket Set—See Ref. 1095.

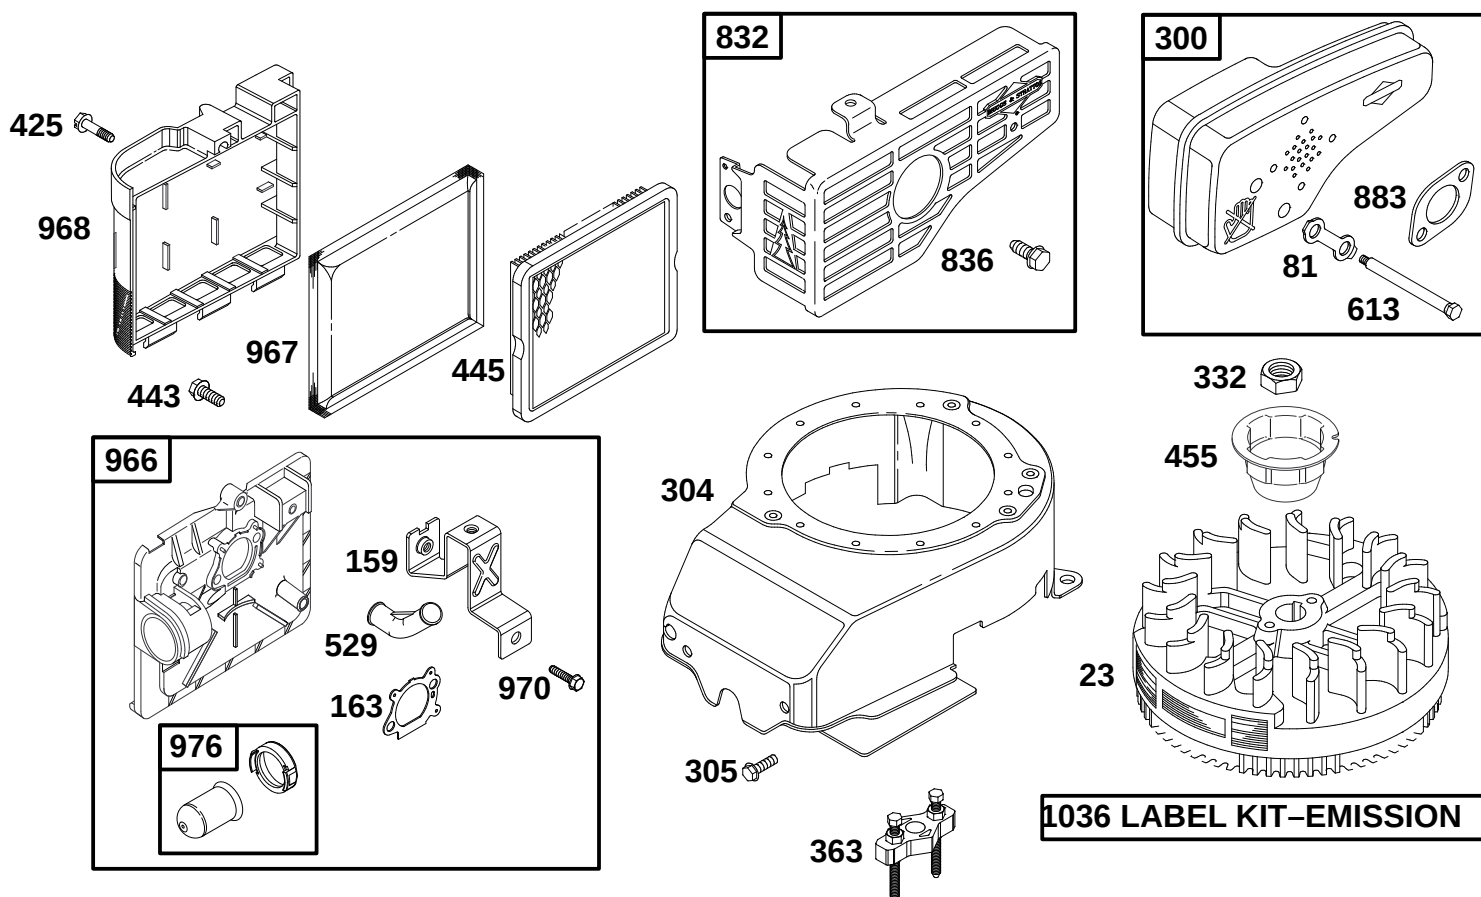

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12J802-2368-E1

Ref. No.	Part No.	Description	No. Used
23	693821	Flywheel	1
81	223664	Muffler Screw Lock	1
159	224815	Air Cleaner Primer Bracket	1
★◆163	272653	Gasket-Air Cleaner	1
300	694048	Muffler-Exhaust	1
304	694092	Housing-Blower	1
305	94744	Screw(Blower Housing)	1
332	92284	Nut(Flywheel)	1
363	19069	Flywheel-Puller	1
425	94872	Screw(Air Cleaner Cover)	1
443	94873	Screw(Air Cleaner Base)	1
445	491588	Filter-A/C Cartridge	1
455	691219	Cup-Flywheel	1
529	281299	Grommet	1
613	94231	Screw (Exhaust Muffler)	1
832	497683	Guard-Muffler	1
836	94874	Screw (Muffler Guard)	1
★†883	272253	Gasket-Exhaust	1
966	496116	Base-A/C Primer	1
967	493537	Filter Pre-Cleaner	1
968	281340	Cover-Air Cleaner	1
970	94749	Screw(A/C Primer Bracket)	1
976	496115	Primer-Carburetor	1
1036	499341	Label Kit-Emission	1

★ Included in Gasket Set-See Ref. 358.


◆ Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

969 


921

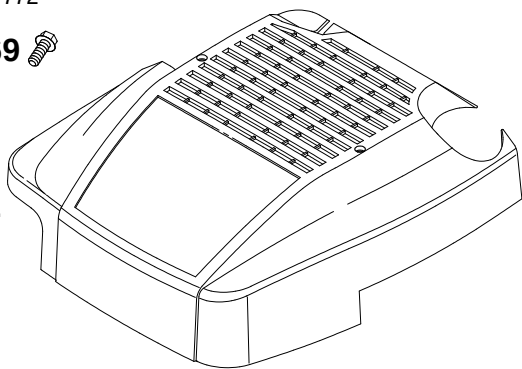

972


975 

190

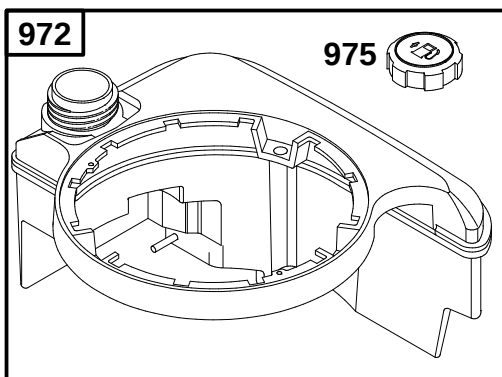


187

601

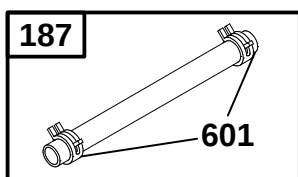

1059


 
670 

608



55

65 

 
58

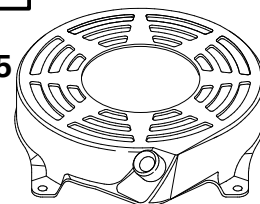592 

56

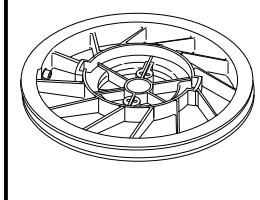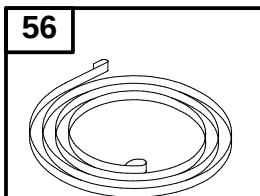

459

 

60

689 

456

597 

Assemblies include all parts shown in frames.





ENGINE BRIGGS & STRATTON MODEL 12J802-2368-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Rewind Starter Housing	1
56	498144	Assy-Pulley/Spring	1
58	280399	Starter Rope	1
60	281434	Starter Rope Grip	1
65	94686	Screw	1
		(Rewind Starter)	1
187	492790	Line-Fuel	1
190	94511	Screw-Shoulder	1
456	281503	Plate-Pawl Friction	1
459	281505	Pawl-Ratchet	1
592	92987	Nut	11
		(Rewind Starter)	

Ref. No.	Part No.	Description	No. Used
597	94943	Screw	1
		(Pawl Friction Plate)	1
601	95162	Clamp-Fuel Line	1
608	497680	Starter-Rewind	1
670	280512	Spacer-Fuel Tank	1
689	263073	Spring-Friction	1
921	692931	Cover-Blower Housing	1
969	94696	Screw	1
		(Blower Housing)	1
972	495224	Tank-Fuel	1
975	397974	Cap-Fuel Tank	1
1059	398540	Screw/Washer Kit	1

★ Included in Gasket Set-See Ref. 358.
 ● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
 † Included in Valve Overhaul Gasket Set-See Ref. 1095.

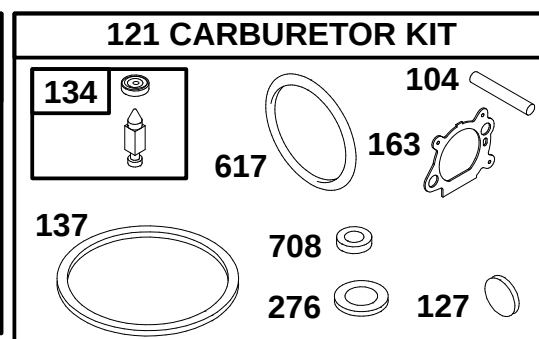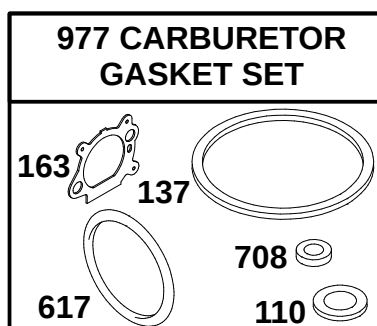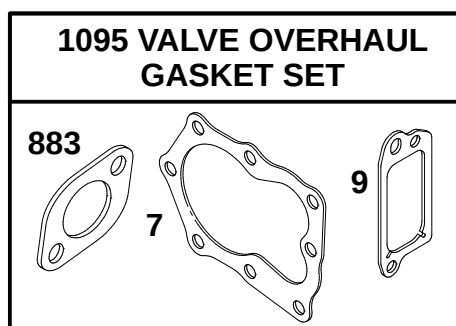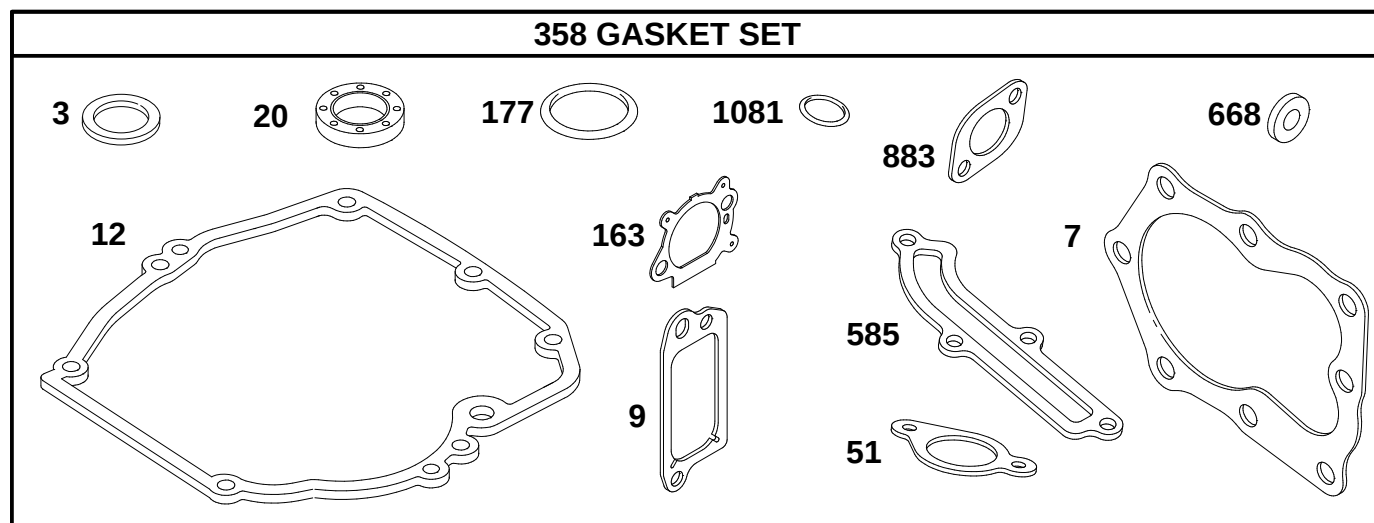

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12J802-2368-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Oil Seal	1
★†7	272916	Cylinder Head Gasket	1
★†9	272481	Breather Gasket	1
★12	272198	Crankcase Gasket	1
★20	399781	Oil Seal	1
★51	272199	Intake Gasket	1
●104	231371	Pin-Float Hinge	1
●◆276	271716	Sealing Washer	1
★177	280393	O-Ring Seal	1
121	498260	Carburetor Kit	1
●127		Plug-Welch(Sold in Kit Only)	1
●134	398188	Needle/Seat Kit	1

Ref. No.	Part No.	Description	No. Used
●◆137	693981	Gasket-Bowl	1
★●◆163	272653	Gasket-Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Breather Passage Gasket	1
●◆617	270344	O-Ring Seal	1
●◆708	691321	Seal-Dust	1
★668	493823	Spacer(Includes 2)	1
★†883	272253	Gasket-Exhaust	1
977	498261	Gasket Set-Carburetor	1
★1081	280966	O-Ring Seal	1
1095	498528	Gasket Set-Valve Overhaul	1

★ Included in Gasket Set-See Ref. 358.

● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	14	1	Grommet
610358	4	17	2	Nut-Jam, Locking
613227	3	14	1	Screw - Set
614426	4	11	2	Washer-Stepped
614447	4	2	2	Spacer-Axle Shaft
614596	2	5	1	Gear -34t
614650	1	25	2	Bolt-Shoulder
614672	1	27	2	Bolt-Shoulder
614673	1	15	1	Bushing - Actuator Plt
614687	1	24	2	Arm-Front Spring
614696	2	8	1	Shaft-Intermediate
3-3287	5	18	2	Spacer-Handle Latch
27-6250	4	9:4	2	Bushing
33-0441	6	2	1	Door Cover (Only On: 20025)
33-0450	6	4	1	Latch Comp Spring (Only On: 20025)
36-4780	2	6	2	Washer
36-4791	2	11	2	Thrust Washer
36-6910	7	4	2	Spring (Only On: 20025)
38-7820	2	13	1	Bearing-Ball
40-1940	1	28	2	Washer-Wheel Bolt
43-8480	3	32	1	Decal-Danger
46-6811	6	10	3	Screw/Washer (Only On: 20025)
46-8090	6	7	2	Screw-Plastite (Only On: 20025)
46-8091	5	4	1	Special-HWH
47-2900	4	3:2	1	Bushing
49-2040	1	11	1	Screw-Taptite
49-2040	2	9	4	Screw-Taptite
55-3760	2	10	1	15 T Pinion
60-8750	2	12	2	Bushing
60-8850	2	3	2	Bushing-Output
60-8890	2	15	1	Bevel Pinion Gear
62-6660	2	18	1	Spacer
65-2720	4	5	4	Klip Ring-Special
65-4710	4	6	2	Ring-Friction
65-4720	4	13	2	Spring-Compression
65-4730	4	16	2	Washer-Pivot Arm
65-4740	4	4	4	Washer-Keyed Thrust
65-4750	4	14	2	Pinion-Gear, 15t
65-4760	4	15	2	Washer
66-6040	4	7	1	Key-Rocking
66-6050	4	8	1	Key-Rocking LH
70-9760	4	3:3	1	Bushing
86-9671	5	26	1	Guide-Rope
88-1090	6	1	2	RH Door Spring (Only On: 20025)
88-1800	6	3	1	Door Latch (Only On: 20025)
92-1004	4	18	2	Spring Arm ASM - Rear
92-1008	1	23	6	Knob-Height Adj Lever
92-1057	4	10	2	Shoulder Bolt
92-1616	1	13	1	Screw-Thread Forming
92-2260	5	15	2	Screw-Handle
92-2914	1	18	1	Decal - HOC R
92-2915	1	17	1	Decal - HOC L
92-4881-03	1	35	2	Plate - Hght Adj
92-4890	1	30	2	Washer - Wheel
92-7727	2	2	1	Gearcase
92-7746	4	3	2	ASM: Rear Ht Adj Arm
92-8647	1	21	1	Shield - Trailing
92-9590	4	9	2	ASM - 8" Wheel
92-9591	1	26	2	Assembly - 7" Wheel
93-0216	1	34	1	Kicker - Front
93-0217	3	12	1	Kicker - Rear
93-0219-03	3	18	1	Accelerator

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-0222-03	1	33	1	Baffle – Front
93-0223-03	3	11	1	Baffle – Rear
93-0230-01	1	1	1	Cover – Recycling (Only On: 20029)
93-0231	1	32	1	Screw – PPH
93-0231	3	10	1	Screw – PPH
93-0239	2	7	1	Shaft – Output
93-0240	1	16	1	ASM – Transmission
93-0241	3	19	1	Blade – Steel Deck (Raw)
93-0242	6	9	4	Grommet (Only On: 20025)
93-0242	1	2	4	Grommet (Only On: 20029)
93-0248	1	8	1	Decal – Warning
93-0263	6	5	1	Chute – Discharge (Only On: 20025)
93-0264	6	12	1	Door – Discharge (Only On: 20025)
93-0266	7	2	1	Door – Bag (Only On: 20025)
93-0267-03	6	6	1	Plate–Discharg Chute (Only On: 20025)
93-0281	7	5	1	Frame – Upper Bag (Only On: 20025)
93-0282	7	3	1	Frame – Lower Bag (Only On: 20025)
93-0283	7	7	1	Hinge – Bag Door (Only On: 20025)
93-0284	7	6	1	Bag – Grass (Only On: 20025)
93-4196-03	3	15	1	Shield – Grass
94-1609	4	12	2	Cover–Wheel
94-4496	5	8	10	Screw–Pan Hd
95-1726	3	13	3	Screw–Taptite w/Patch
95-1748	3	16	1	Screw–Blade
95-4453	5	10	1	Screw – Handle
95-7403-03	1	29	2	Brkt–Whl Ht Adj
98-7134	5	14	4	Knob–Handle
98-8332	3	34	1	Knob (Only On: 20029)
99-1509	5	13	1	Cable–Brake
99-1510	5	12	1	Cable–Traction
99-1524-03	3	22	1	Guide–Belt (Steel Pp)
99-1567-03	1	12	1	Bracket–Belt Guide (Pp Steel)
99-1581	1	9	1	Cover–Belt (Pp Steel Deck)
99-1582	5	2	1	Handle–Control
99-1588	5	6	1	Bar–Traction Control
99-1589	5	5	1	Lever–Traction
99-1590	5	9	2	Guide–Control Handle
99-1592	5	30	1	Spring–Torsion,RH
99-1593-03	5	1	1	Bail–Brake
99-1595	5	3	1	Retainer – Brake Cable
99-1596-05	5	28	1	Handle–Upper
99-1597	4	1	1	V–Belt (Pp Steel)
99-5233	1	19	1	ASM – LH Handle Bracket
99-5234	1	7	1	ASM – RH Handle Bracket
99-5236	3	36	1	Housing Sp Steel (Service)
99-5239	5	11	1	Anchor–Cable
99-5244	3	21	1	Pulley–Assy
99-5246-05	5	23	1	Handle–Lower
99-5247-03	5	20	2	Support–Handle
99-5284	5	17	2	Bolt–Shoulder
99-5287	3	20	1	ASM–Blade Driver
99-5291	3	26	1	Rod–Cover (Steel Side Discharge)
99-5292	3	27	1	Bracket–Cover (Steel Side Discharge)
99-5293	3	28	1	Spring–Torsion (Steel Side Discharge)
99-5294	3	29	1	Cover–Side (Steel Side Discharge)
99-5295	3	30	1	Chute–Side (Side Discharge)
99-6008	5	7	1	Retainer–Traction Control Rod
99-6011	3	25	1	Decal – Deck
99-6016	5	31	1	Decal – Personal Pace (Steel)
99-6018	1	6	1	Decal – Warning
99-6019	5	21	2	Screw–CARR
99-6336	3	4	1	Decal – Recoil – Quiet I/C

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
99-6339	5	29	1	Cover-Handle
99-6349	3	35	1	Baffle
100-1176	2	17	2	Pulley Half
100-1589-03	6	14	1	Clamp-Door (Only On: 20025)
100-1589-03	3	33	1	Clamp-Door (Only On: 20029)
100-1590	6	13	1	Knob (Only On: 20025)
2210-316	3	5	1	Stop-Rope F/W Engine
302-56	4	3:1	1	Fitting-Zerk
322-3	1	20	6	Screw-HH
3229-11	3	31	2	Screw-CARR
3253-22	3	17	1	Washer-Lock/Sp
3256-1	5	24	1	Washer-Flat
3256-24	2	14	1	Washer-Flat
3285-19	2	4	2	Pin-Groove
3290-378	5	16	1	Tie-Cable
3290-422	7	1	2	Nut-Push (Only On: 20025)
3296-2	1	5	1	Nut-Lock Esna (Only On: 20029)
3296-5	2	16	1	Nut-Lock Ni
3296-29	1	22	6	Nut-Lock Ni
3296-39	1	31	2	Nut-Lock Ni
3296-72	5	19	2	Nut-Lock Ni
3296-73	5	25	2	Nut-Lock
32105-27	1	4	1	Screw (Only On: 20029)
32128-32	3	23	2	Nut-Hex, Flange
32144-4	1	3	3	Screw-HH (Only On: 20029)
32144-32	6	11	2	Screw (Only On: 20025)
32144-85	4	19	2	Screw-TAP
32144-111	6	8	1	Screw-Plask (Only On: 20025)
32144-119	1	10	1	Screw-Pth
614668-03	2	1	1	Gear Case Cover

PROTOTYPE