




MODEL NO. 22415-990001 & UP

PARTS CATALOG

BROOM For Toro® Sitework™ Systems

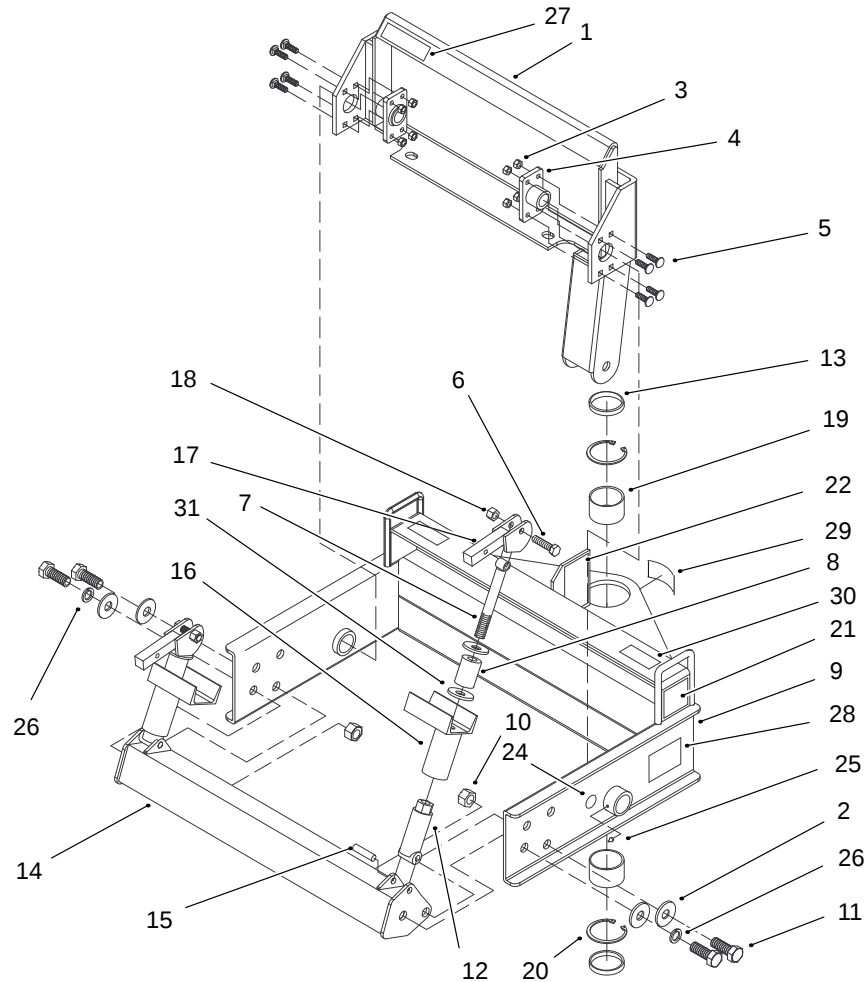


C-2805

MAIN MOUNT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	99-6576	Frame Asm (Incl. Ref. #27)	1	16	99-6591	Clamp-Arm Lock	2
2	3256-28	Washer-Flat	4	17	99-6589	Lever-Arm Lock	2
3	3296-59	Nut-Lock	8	18	32146-13	Nut-Lock	2
4	99-6580	Pivot Retainer	2	19	95-5127	Bushing	2
5	3231-25	Screw-CARR	8	20	99-6593	Snap Ring Int.	2
6	325-8	Screw-HH	2	21	99-6559	Decal-Tie Down	2
7	99-6590	Screw-Arm Lock Adj.	2	22	99-6558	Decal-Height Adjust RH	1
8	99-6556	Shock Absorber	2	*23	99-6557	Decal-Height Adjust LH	1
9	99-6550	Main Mount Frame Asm (Incl. Ref. #29-30)	1	24	58-6520	Decal-Grease	3
10	3296-51	Nut	2	25	302-19	Zerk-Grease	5
11	328-26	Screw-HH	4	26	3253-9	Washer-Lock	2
12	99-6592	Swivel-Arm Lock	2	27	68-7390	Decal-Warning	1
13	99-6577	Seal	2	28	99-4349	Decal-Sitework	2
14	99-6579	Cross Member-Main Mount	1	29	99-5108	Decal-Warning	1
15	32121-122	Pin-Roll	2	30	99-1699	Decal-Warning	2
				31	3256-8	Washer-Flat	4

* Not Illustrated

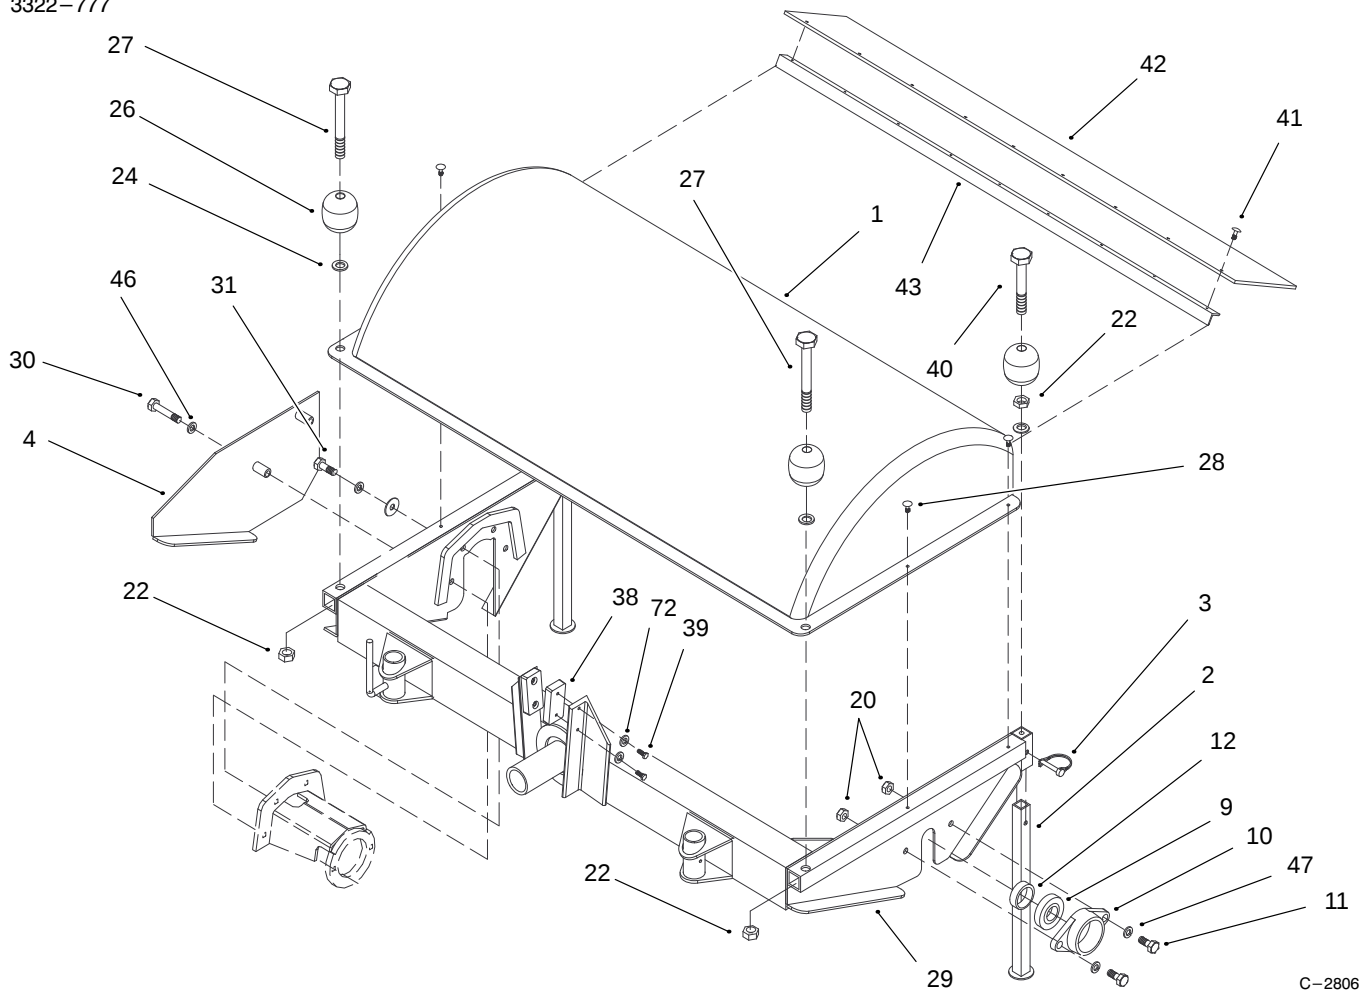


C-2806

HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	99-6555	Cover-Broom	1
2	99-6553	Stand-Broom Head	2
3	99-6584	Pin-Lynch	2
4	99-6554	Guard-Motor Hose	1
9	99-6571	Bearing	1
10	99-6595	Housing-Bearing	1
11	325-6	Screw-HH	4
12	99-6594	Collar-Locking	1
20	32146-13	Nut-Lock	2
22	3218-7	Nut-Jam	4
24	99-6583	Washer	4
26	99-9975	Roller	4
27	328-22	Screw-HH	2

Ref. No.	Part No.	Description	No. Used
28	94-8663	Screw	9
29	99-6552	Broom Head Frame	1
30	325-12	Screw-HH	2
31	325-6	Screw-HH	2
38	86-5350	Bumper-Rubber	2
39	321-4	Screw-HH	4
40	328-8	Screw-HH	2
41	3269-11	Rivet	9
42	99-6560	Guard-Rubber	1
43	99-6587	Angle-Rubber Guard Mount	1
46	3253-7	Washer-Lock	4
47	3256-26	Washer-Flat	2
72	3253-3	Washer-Lock	4

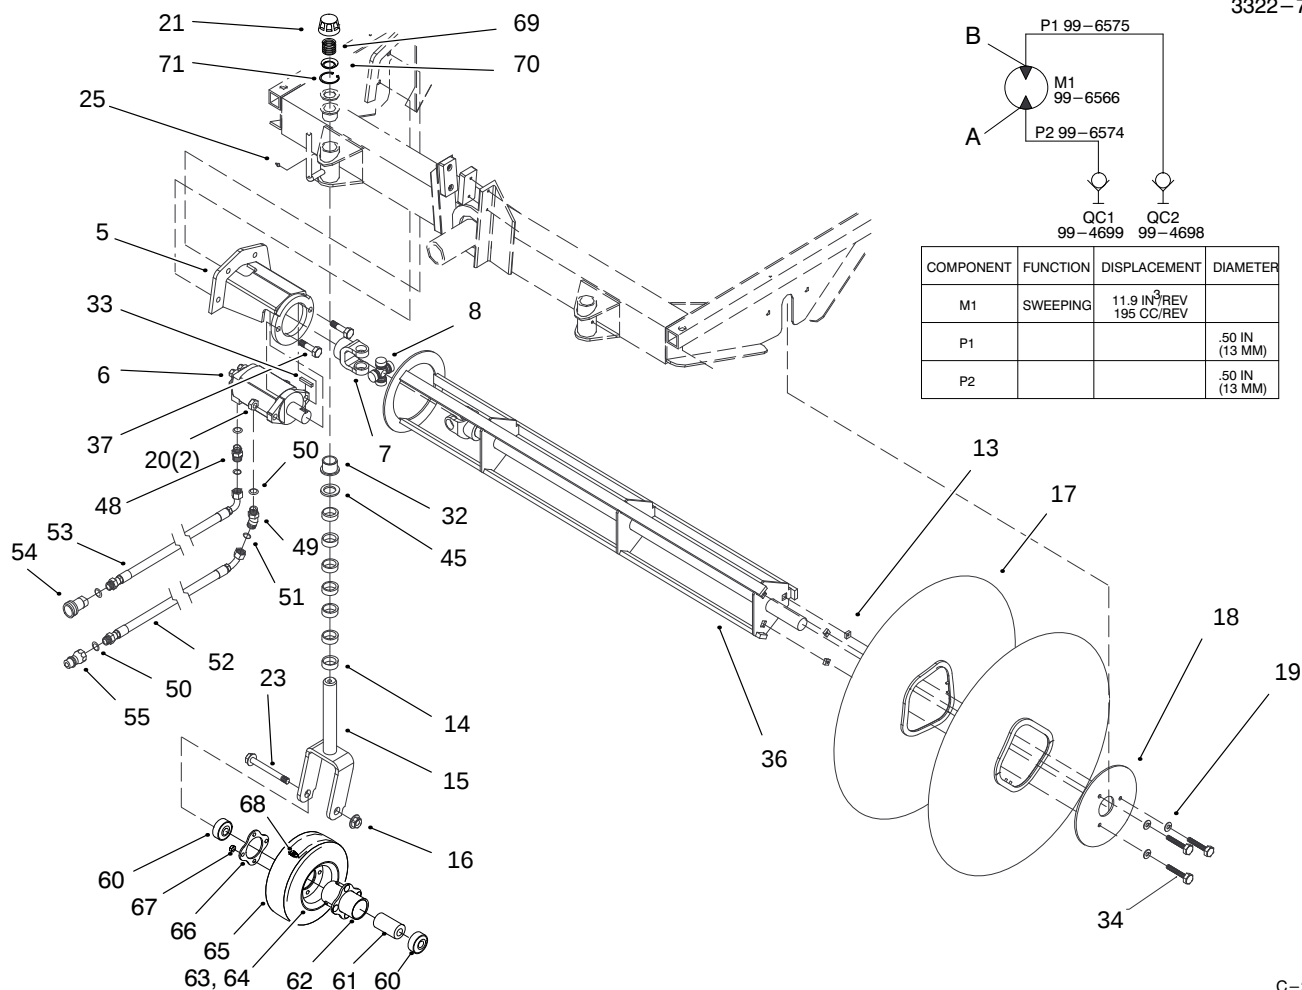


C-2807

ROTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
5	99-6564	Mount-Hydraulic Motor	1	37	325-8	Screw-HH	2
6	99-6566	Motor-Hydraulic	1	45	99-6582	Washer	4
7	99-6569	Yoke-Keyed	1	48	340-7	Fitting-Hydraulic	1
8	99-6570	Cross-Yoke	1	49	340-14	Fitting-Hydraulic	1
13	99-6585	Retainer-Nut	3	50	237-80	O-Ring, ORB	4
14	63-0070	Spacer-Castor	14	51	237-65	O-Ring, ORS	2
15	93-8431	Caster Fork	2	52	99-6575	Hose-Hydraulic	1
16	3296-53	Nut-Lock	2	53	99-6574	Hose-Hydraulic	1
17	94-7372	Brush-Poly	26	54	98-4699	Coupler-Hose	1
*	95-5942	Brush-Wire (Optional)	26	55	98-4698	Coupler-Hose	1
18	99-6563	Retainer Plate-Brush	1	60	93-4237	Bearing	4
19	3253-5	Washer-Lock	3	61	93-4241	Spacer-Bearing	2
20	32146-13	Nut-Lock	2	62	93-5980	Hub	2
21	92-8862	Cap-Height of Cut	2	63	93-4239	Rim-Wheel	2
23	327-24	Screw-HH	2	64	95-2741	Rim-Wheel	2
25	302-19	Zerk-Grease	3	65	93-9939	Tire	2
32	28-9290	Bushing	4	66	93-4242	Plate	2
33	99-6567	Step Key	1	67	32128-16	Nut-HHF	8
34	323-12	Screw-HH	3	68	68-8950	Tube-w/Valve	2
*35	93-9938	Wheel Asm, Pneumatic (Incl. Ref. #60-68)	2	69	92-5584	Spring-Compression	2
36	99-6562	Rotor Frame	1	70	92-5583	Washer-Cap	2
				71	92-5581	Retaining Ring Int.	2

* Not Illustrated

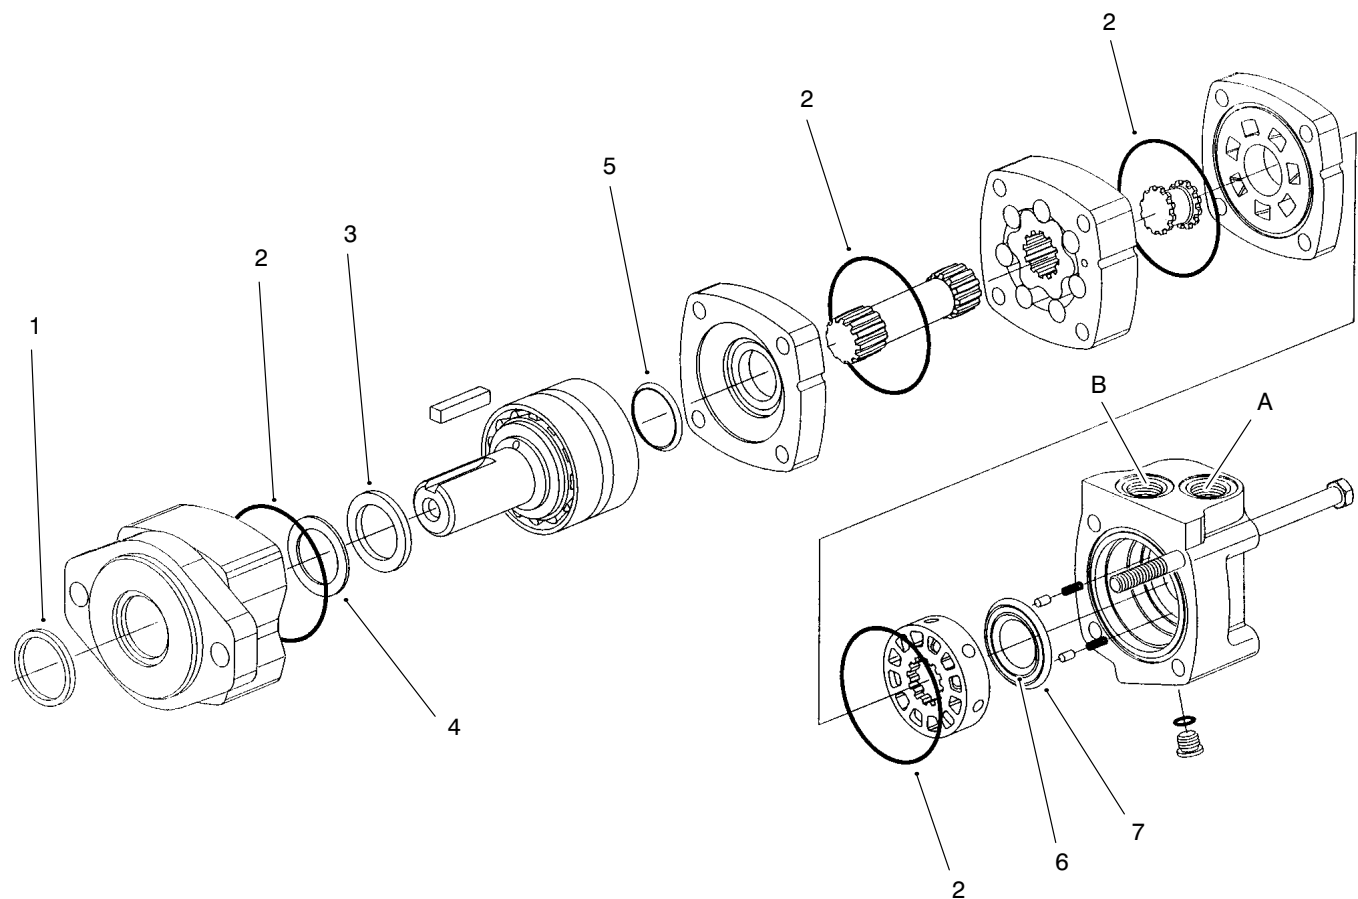

C-2754

HYDRAULIC MOTOR AND ASSEMBLY NO. 99-6566


Ref. No.	Part No.	Description	No. Used
†1		Seal – Dust	1
†2		Seal – O–Ring	4
†3		Seal – Shaft	1
†4		Back–up Washer	1

Ref. No.	Part No.	Description	No. Used
†5		Seal – Shaft	1
†6		Seal – Inner	1
†7		Seal – Outer	1
*	56-6890	Seal Kit (Incl. Ref # 1-7)	1

PROTOTYPE

† Not Serviced Separately

* Not Illustrated

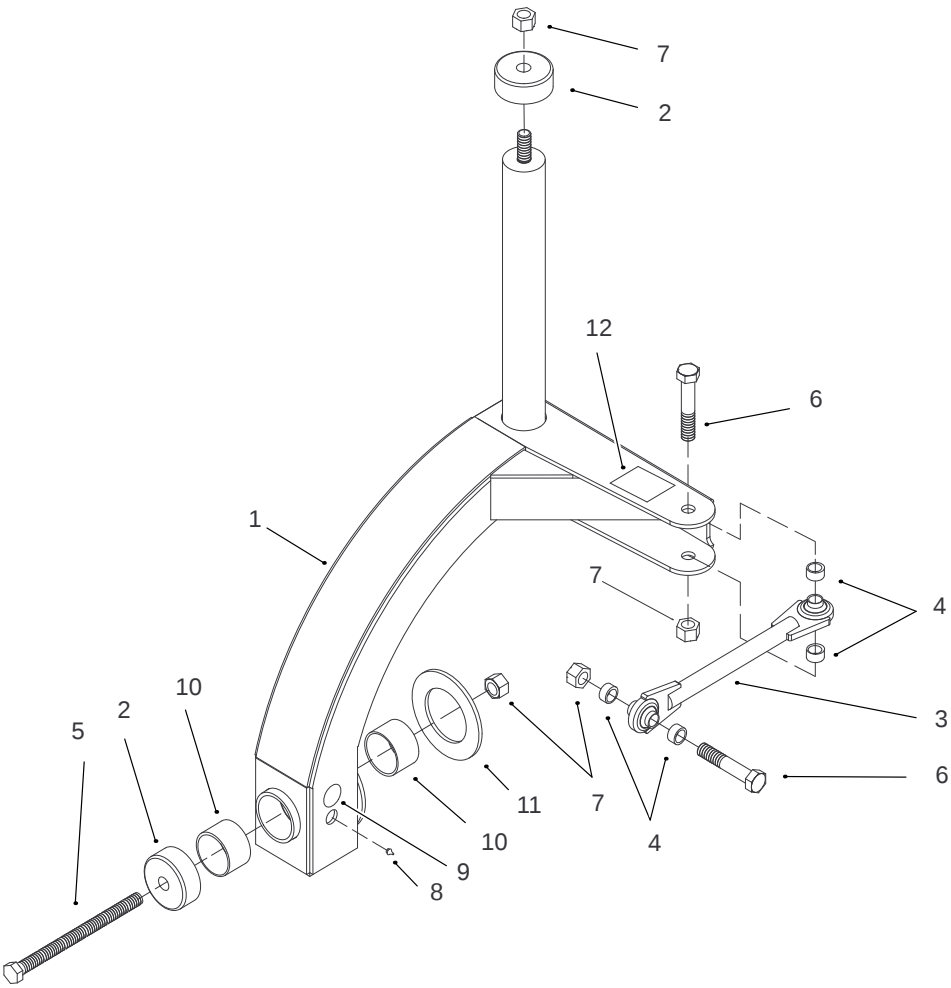

C-2808

PIVOT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	99-6551	Pivot Arm Frame (Incl. Ref. #12)	1	7	3296-51	Nut-Lock	4
2	95-3202	Cap-Pivot	2	8	302-19	Zerk-Grease	1
3	99-6561	Pivot Link	1	9	58-6520	Decal-Grease	1
4	99-6565	Spacer-Pivot Link	4	10	95-5127	Bushing	2
5	99-6581	Screw-HH	1	11	95-3204	Washer-Thrust	1
6	328-7	Screw-HH	2	12	99-1699	Decal-Warning	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
28-9290	Bushing	3 32 4	99-6576	Frame Asm	1 1 1
56-6890	Seal Kit	4 * 1	99-6577	Seal	1 13 2
58-6520	Decal-Grease	5 9 1	99-6579	Cross Member-Main Mount	1 14 1
58-6520	Decal-Grease	1 24 3	99-6580	Pivot Retainer	1 4 2
63-0070	Spacer-Castor	3 14 14	99-6581	Screw-HH	5 5 1
68-7390	Decal-Warning	1 27 1	99-6582	Washer	3 45 4
68-8950	Tube-w/Valve	3 68 2	99-6583	Washer	2 24 4
86-5350	Bumper-Rubber	2 38 2	99-6584	Pin-Lynch	2 3 2
92-5581	Retaining Ring Int.	3 71 2	99-6585	Retainer-Nut	3 13 3
92-5583	Washer-Cap	3 70 2	99-6587	Angle-Rubber Guard Mount	2 43 1
92-5584	Spring-Compression	3 69 2	99-6589	Lever-Arm Lock	1 17 2
92-8862	Cap-Height of Cut	3 21 2	99-6590	Screw-Arm Lock Adj.	1 7 2
93-4237	Bearing	3 60 4	99-6591	Clamp-Arm Lock	1 16 2
93-4239	Rim-Wheel	3 63 2	99-6592	Swivel-Arm Lock	1 12 2
93-4241	Spacer-Bearing	3 61 2	99-6593	Snap Ring Int.	1 20 2
93-4242	Plate	3 66 2	99-6594	Collar-Locking	2 12 1
93-5980	Hub	3 62 2	99-6595	Housing-Bearing	2 10 1
93-8431	Caster Fork	3 15 2	99-9975	Roller	2 26 4
93-9938	Wheel Asm, Pneumatic	3 *35 2	237-65	O-Ring, ORS	3 51 2
93-9939	Tire	3 65 2	237-80	O-Ring, ORB	3 50 4
94-7372	Brush-Poly	3 17 26	302-19	Zerk-Grease	5 8 1
94-8663	Screw	2 28 9	302-19	Zerk-Grease	1 25 5
95-2741	Rim-Wheel	3 64 2	302-19	Zerk-Grease	3 25 3
95-3202	Cap-Pivot	5 2 2	321-4	Screw-HH	2 39 4
95-3204	Washer-Thrust	5 11 1	323-12	Screw-HH	3 34 3
95-5127	Bushing	5 10 2	325-6	Screw-HH	2 11 4
95-5127	Bushing	1 19 2	325-6	Screw-HH	2 31 2
95-5942	Brush-Wire (Optional)	3 * 26	325-8	Screw-HH	1 6 2
98-4698	Coupler-Hose	3 55 1	325-8	Screw-HH	3 37 2
98-4699	Coupler-Hose	3 54 1	325-12	Screw-HH	2 30 2
99-1699	Decal-Warning	5 12 1	327-24	Screw-HH	3 23 2
99-1699	Decal-Warning	1 30 2	328-7	Screw-HH	5 6 2
99-4349	Decal-Sitework	1 28 2	328-8	Screw-HH	2 40 2
99-5108	Decal-Warning	1 29 1	328-22	Screw-HH	2 27 2
99-6550	Main Mount Frame Asm	1 9 1	328-26	Screw-HH	1 11 4
99-6551	Pivot Arm Frame	5 1 1	3218-7	Nut-Jam	2 22 4
99-6552	Broom Head Frame	2 29 1	3231-25	Screw-CARR	1 5 8
99-6553	Stand-Broom Head	2 2 2	3253-3	Washer-Lock	2 72 4
99-6554	Guard-Motor Hose	2 4 1	3253-5	Washer-Lock	3 19 3
99-6555	Cover-Broom	2 1 1	3253-7	Washer-Lock	2 46 4
99-6556	Shock Absorber	1 8 2	3253-9	Washer-Lock	1 26 2
99-6557	Decal-Height Adjust LH	1 *23 1	3256-8	Washer-Flat	1 31 4
99-6558	Decal-Height Adjust RH	1 22 1	3256-26	Washer-Flat	2 47 2
99-6559	Decal-Tie Down	1 21 2	3256-28	Washer-Flat	1 2 4
99-6560	Guard-Rubber	2 42 1	3269-11	Rivet	2 41 9
99-6561	Pivot Link	5 3 1	3296-51	Nut	1 10 2
99-6562	Rotor Frame	3 36 1	3296-51	Nut-Lock	5 7 4
99-6563	Retainer Plate-Brush	3 18 1	3296-53	Nut-Lock	3 16 2
99-6564	Mount-Hydraulic Motor	3 5 1	3296-59	Nut-Lock	1 3 8
99-6565	Spacer-Pivot Link	5 4 4	32121-122	Pin-Roll	1 15 2
99-6566	Motor-Hydraulic	3 6 1	32128-16	Nut-FHF	3 67 8
99-6567	Step Key	3 33 1	32146-13	Nut-Lock	1 18 2
99-6569	Yoke-Keyed	3 7 1	32146-13	Nut-Lock	2 20 2
99-6570	Cross-Yoke	3 8 1	32146-13	Nut-Lock	3 20 2
99-6571	Bearing	2 9 1	340-7	Fitting-Hydraulic	3 48 1
99-6574	Hose-Hydraulic	3 53 1	340-14	Fitting-Hydraulic	3 49 1
99-6575	Hose-Hydraulic	3 52 1			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.