



**CCR<sup>™</sup> 1000**  
**CCR<sup>™</sup> 1000E**  
**Snowthrower**

**Model No. 38400—200000001 and Up**

**Model No. 38405—200000001 and Up**

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

## Contents

| Description                                                           | Page |
|-----------------------------------------------------------------------|------|
| Deflector & Control Panel Assembly .....                              | 3–4  |
| Housing & Side Plate Assembly .....                                   | 5    |
| Engine & Gas Tank Assembly .....                                      | 6–7  |
| Handle Assembly .....                                                 | 8    |
| Rotor Assembly .....                                                  | 9    |
| Motor & Switch Housing Assembly<br>(Model No. 38405) (120 Volt) ..... | 10   |

| Description                                     | Page  |
|-------------------------------------------------|-------|
| Carburetor No. 640086 .....                     | 11    |
| Engine Tecumseh<br>Model No. HSK635–1721A ..... | 12–13 |
| Recoil Starter No. 590743 .....                 | 14    |
| Maintenance .....                               | 15    |

## Accessories


| Description | Model / Part No. | Description | Model / Part No. |
|-------------|------------------|-------------|------------------|
|-------------|------------------|-------------|------------------|

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning                           |
|--------------|-----------------------------------|
| AR .....     | as required                       |
| ASM .....    | assembly                          |
| CARR .....   | carriage                          |
| DEG .....    | degrees                           |
| FH .....     | flat head                         |
| GA .....     | gauge                             |
| HF .....     | hex flange                        |
| HH .....     | hex head                          |
| HHF .....    | hex head flange                   |
| HLH .....    | hex lag head                      |
| HJ .....     | hex jam                           |
| HOC .....    | height-of-cut                     |
| HS .....     | hex socket                        |
| HSBH .....   | hex socket button head            |
| HSFH .....   | hex socket flat head              |
| HSH .....    | hex socket head                   |
| HWH .....    | hex washer head                   |
| HWHTF .....  | hex washer head<br>thread forming |


| Abbreviation | Meaning                 |
|--------------|-------------------------|
| INC .....    | incorporated            |
| LH .....     | left hand               |
| NI .....     | nylon insert            |
| PPH .....    | Phillips pan head       |
| PTH .....    | Phillips truss head     |
| PTO .....    | power take off          |
| RH .....     | right hand              |
| SFH .....    | slotted fillister head  |
| SHH .....    | slotted hex head        |
| SQH .....    | square head             |
| SHWH .....   | slotted hex washer head |
| SPH .....    | slotted pan head        |
| SRH .....    | slotted round head      |
| STD .....    | standard                |
| TAP .....    | self tapping            |
| TTH .....    | Torx truss head         |
| WH .....     | wing head               |

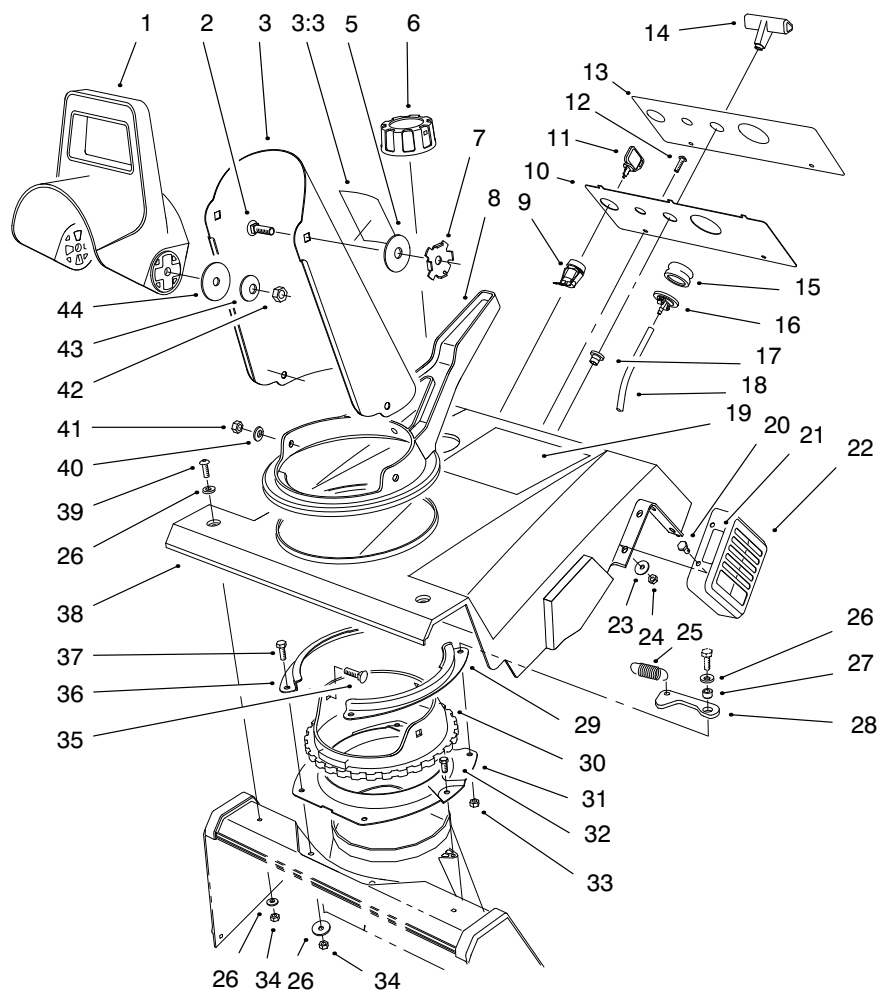

Sheet No.:2

## Deflector & Control Panel Assembly

| Ref. No. | Part No.   | Qty. | Description                            | Ref. No. | Part No.   | Qty. | Description                     |
|----------|------------|------|----------------------------------------|----------|------------|------|---------------------------------|
| 1        | 56-2680    | 1    | Chute-Deflector                        | 19       | 100-3557   | 1    | Decal-Ccr1000 (only on: 38400)  |
| 2        | 3230-22    | 2    | Screw-CARR                             | 19       | 100-3558   | 1    | Decal-Ccr1000e (only on: 38405) |
| 3        | 94-2790    | 1    | ASM - Chute w/Decal                    | 20       | 3290-359   | 4    | Screw-HWH                       |
| 3:3      | 94-2900    | 1    | Decal - Danger Discharge               | 21       | 95-1904    | 1    | Decal - Hot                     |
| 5        | 20-4320    | 2    | Washer-Rubber                          | 22       | 71-5340-03 | 1    | Muffler Guard                   |
| 6        | 55-3573    | 1    | ASM-Gas Cap                            | 23       | 3256-61    | 4    | Washer-Flat                     |
| 7        | 55-8950    | 2    | Plate-Friction                         | 24       | 3296-2     | 4    | Nut-Lock Ni                     |
| 8        | 71-4940    | 1    | Chute - Handle                         | 25       | 80-4600    | 1    | Spring - Detent                 |
| 9        | 40-5940    | 1    | On-Off Switch                          | 26       | 3256-22    | 7    | Washer-Flat                     |
| 10       | 71-5240-03 | 1    | Control Panel (only on: 38400)         | 27       | 55-9370    | 1    | Rotor Bld Spacer                |
| 10       | 71-5241-03 | 1    | Control Panel (only on: 38405)         | 28       | 80-4610    | 1    | Detent                          |
| 11       | 63-8360    | 1    | Key-Ignition w/Shield                  | 29       | 71-4980-03 | 1    | LH Chute Ring Retr              |
| 12       | 32144-53   | 2    | Screw-Self TAP                         | 30       | 71-4950    | 1    | Gear Ring, Chute                |
| 13       | 88-1030    | 1    | Decal - Control Panel (only on: 38405) | 31       | 55-8921-03 | 1    | Chute Supt Ring                 |
| 13       | 88-1020    | 1    | Decal - Control Panel (only on: 38400) | 32       | 46-8092    | 2    | Plastite Screw                  |
| 14       | 92-4853    | 1    | Handle-Starter                         | 33       | 3296-56    | 1    | Nut-Lock Ni                     |
| 15       | 66-7460    | 1    | Bulb-Primer                            | 34       | 3296-42    | 5    | Nut-Lock Ni                     |
| 16       | 44-2750    | 1    | Body-Primer                            | 35       | 3230-16    | 3    | Screw-HH                        |
| 17       | 23-7470    | 1    | Starter Rope Guide                     | 36       | 71-4990-03 | 1    | RH Chute Ring Retr              |
| 18       | 44-3173    | 1    | Primer Hose                            | 37       | 321-4      | 4    | Screw-HH                        |
|          |            |      |                                        | 38       | 80-4811    | 1    | Upper Shroud                    |
|          |            |      |                                        | 39       | 3250-32    | 2    | Screw-PPH                       |
|          |            |      |                                        | 40       | 3256-70    | 3    | Washer-Flat                     |
|          |            |      |                                        | 41       | 32149-1    | 3    | Nut-Keps                        |

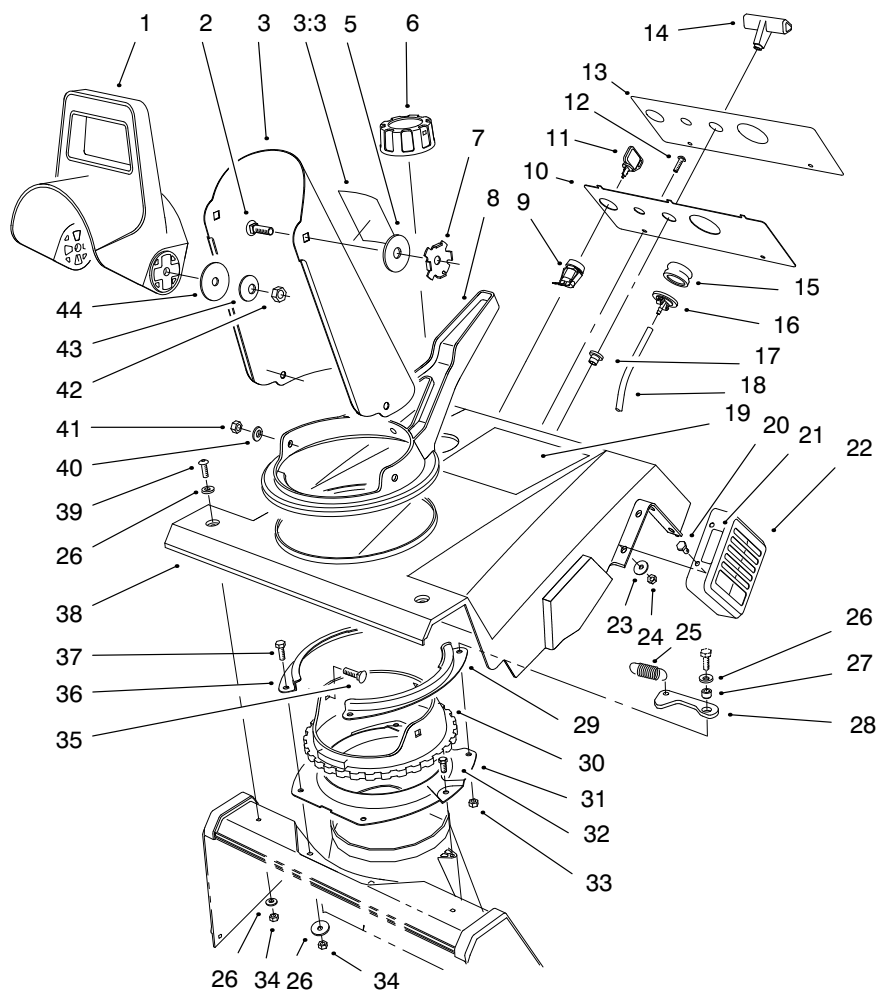


Sheet No.:2

## Deflector & Control Panel Assembly (cont.)

| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| 42       | 3296-29  | 2    | Nut-Lock Ni       |
| 43       | 3290-456 | 2    | Washer-Belleville |
| 44       | 3256-68  | 2    | Washer-Flat       |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

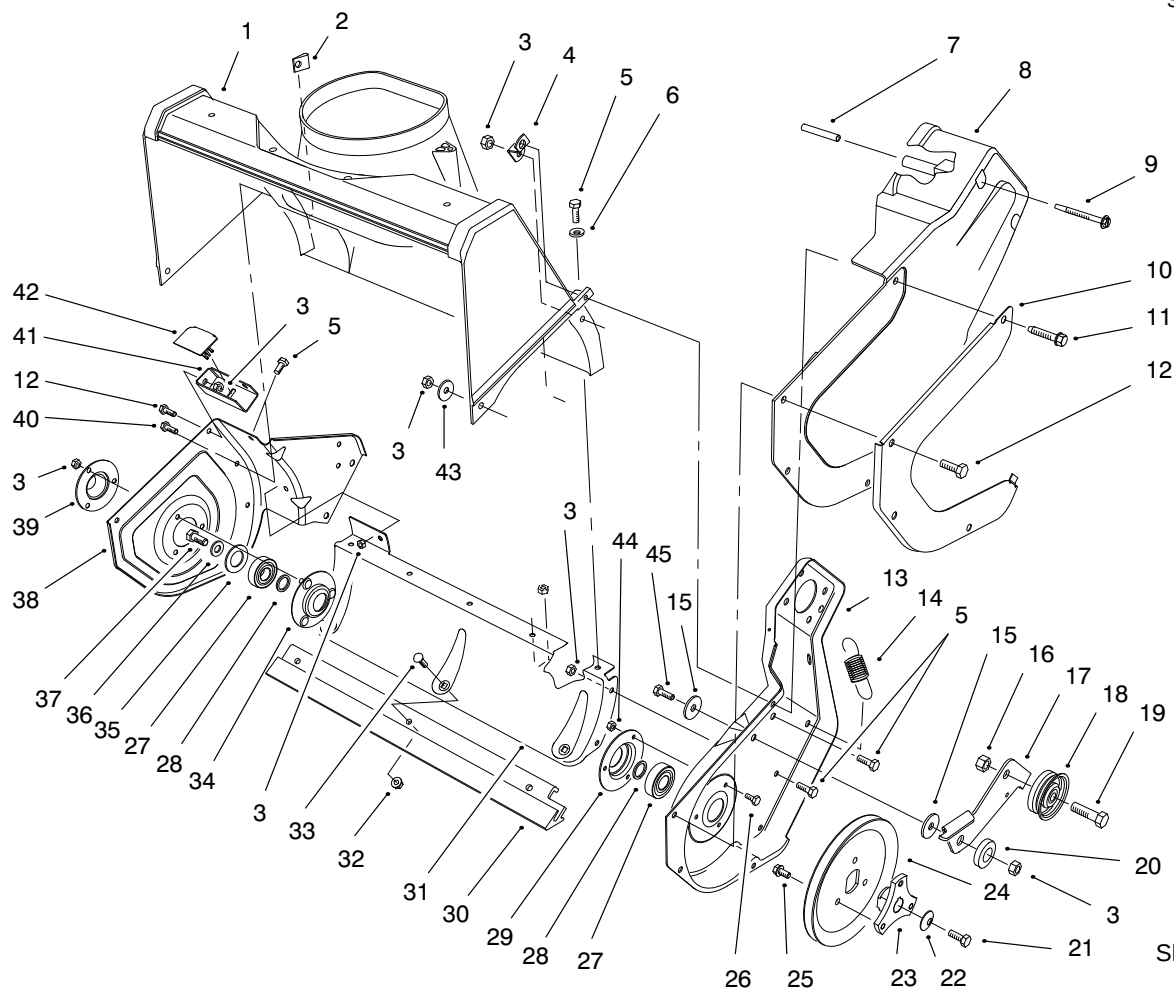


Sheet No.:3

## Housing & Side Plate Assembly

| Ref. No. | Part No.   | Qty. | Description          |
|----------|------------|------|----------------------|
| 1        | 55-8700    | 1    | Housing              |
| 2        | 32115-14   | 1    | Speed Nut            |
| 3        | 3296-42    | 21   | Nut-Lock Ni          |
| 4        | 55-9430    | 1    | Hsg Brkt             |
| 5        | 321-4      | 10   | Screw-HH             |
| 6        | 3256-22    | 5    | Washer-Flat          |
| 7        | 57-3830    | 2    | Tubular Spacer       |
| 8        | 71-5030    | 1    | Drive Cover          |
| 9        | 71-5350    | 2    | Thread Forming Screw |
| 10       | 71-5150-03 | 1    | Edge Guard           |
| 11       | 36-3860    | 1    | Spec Screw           |
| 12       | 32105-15   | 7    | Screw-Machine        |
| 13       | 71-4911-03 | 1    | Left Sideplate       |
| 14       | 71-5470    | 1    | Brake Spring         |
| 15       | 3256-55    | 2    | Washer-Flat          |
| 16       | 3296-39    | 1    | Nut-Lock Ni          |
| 17       | 71-5160    | 1    | Brake Arm Idler      |
| 18       | 71-5260    | 1    | Idler Pulley         |
| 19       | 323-44     | 1    | Screw-HH             |
| 20       | 80-4620    | 1    | Spacer               |
| 21       | 321-30     | 1    | Screw-HH             |
| 22       | 3290-456   | 1    | Washer-Belleville    |
| 23       | 71-5070    | 1    | Hub - Mtg, Pulley    |
| 24       | 71-5410    | 1    | Rotor Pulley         |
| 25       | 12-3270    | 3    | Screw                |
| 26       | 32105-8    | 3    | Screw                |

| Ref. No. | Part No.   | Qty. | Description         |
|----------|------------|------|---------------------|
| 27       | 38-7820    | 2    | Bearing-Ball        |
| 28       | 52-7280    | 2    | Thrust Washer       |
| 29       | 38-8620    | 1    | Bearing Flange      |
| 30       | 71-5390    | 1    | Scraper             |
| 31       | 71-4930-03 | 1    | Lower Housing       |
| 32       | 32128-10   | 3    | Flange Locknut      |
| 33       | 3229-11    | 3    | Screw-CARR          |
| 34       | 52-9110    | 1    | Brg Flange Wa       |
| 35       | 52-7270    | 1    | Rubber Washer       |
| 36       | 3256-24    | 1    | Washer-Flat         |
| 37       | 3234-25    | 1    | Flange Bolt         |
| 38       | 71-4920-03 | 1    | RH Sideplate        |
| 39       | 52-7290-03 | 1    | Brg Retainer        |
| 40       | 321-39     | 1    | Screw-HH            |
| 41       | 71-5310-03 | 1    | Sideplate Brkt Supt |
| 42       | 71-5270    | 1    | Bracket Cover       |
| 43       | 3256-67    | 2    | Washer-Flat         |
| 44       | 3296-2     | 3    | Nut-Lock Ni         |
| 45       | 321-6      | 1    | Screw-HH            |

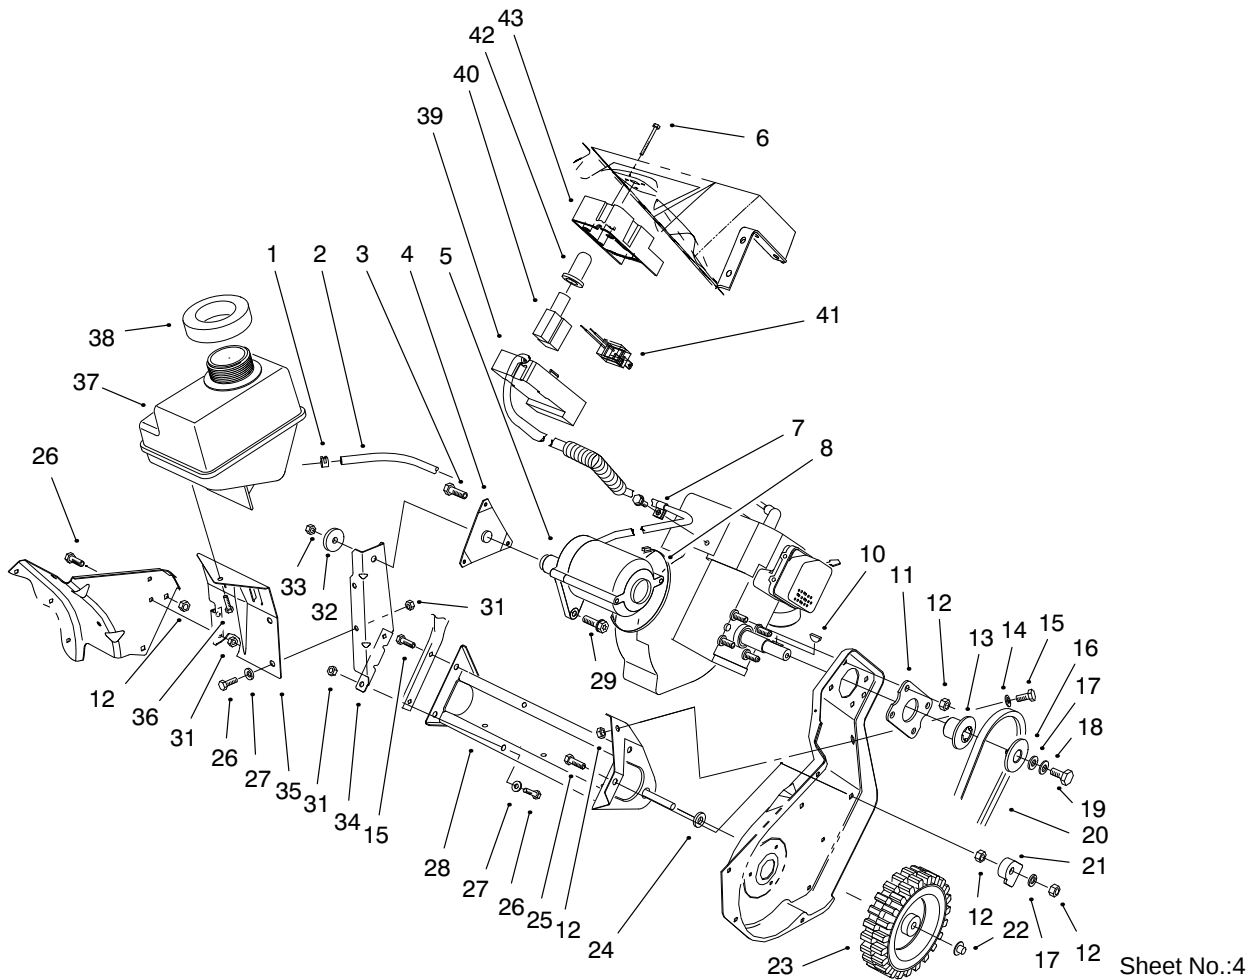


Sheet No.:4

## Engine & Gas Tank Assembly

| Ref. No. | Part No.   | Qty. | Description                                |
|----------|------------|------|--------------------------------------------|
| 1        | 2412-98    | 2    | Clamp                                      |
| 2        | 49-2482    | 1    | Gas Line                                   |
| 3        | 3255-10    | 1    | Washer-Lock/Ext                            |
| 3        | 92-6031    | 1    | Screw                                      |
| 4        | 92-6012    | 1    | Bracket/Stud ASM                           |
| 5        | 77-0402    | 1    | Motor & Switch Hsg<br>ASM (only on: 38405) |
| 6        | 32144-27   | 3    | Screw-Plastite (only<br>on: 38405)         |
| 7        | 2412-91    | 1    | Clamp R (only on:<br>38405)                |
| 8        | 250-7      | 1    | Tie-Cable                                  |
| 10       | 3257-3     | 1    | Key-Woodruff                               |
| 11       | 71-5290-03 | 1    | Engine Plate                               |
| 12       | 3296-29    | 8    | Nut-Lock Ni                                |
| 13       | 71-5050    | 1    | Hub - Half Sheave                          |
| 14       | 3256-23    | 1    | Washer-Flat                                |
| 15       | 322-3      | 3    | Screw-HH                                   |
| 16       | 71-5060    | 1    | Cap - Half Sheave                          |
| 17       | 3256-71    | 2    | Washer-Flat                                |
| 18       | 3290-456   | 1    | Washer-Belleville                          |
| 19       | 3235-6     | 1    | Screw-Hex Hd Cs                            |
| 20       | 71-5381    | 1    | Drive V-Belt                               |
| 21       | 84-5610    | 1    | Guide-Cable                                |
| 22       | 3290-320   | 2    | Retainer-Push On                           |
| 23       | 23-3250    | 2    | Wheel                                      |


| Ref. No. | Part No.   | Qty. | Description                             |
|----------|------------|------|-----------------------------------------|
| 24       | 71-5440    | 2    | Wheel Spacer                            |
| 25       | 322-5      | 1    | Screw-HH                                |
| 26       | 321-4      | 6    | Screw-HH                                |
| 27       | 3256-22    | 4    | Washer-Flat                             |
| 28       | 71-5200-03 | 1    | Frame Wa                                |
| 29       | 80-0700    | 2    | Screw - Mtg Torx<br>(only on: 38405)    |
| 31       | 3296-42    | 6    | Nut-Lock Ni                             |
| 32       | 71-5320    | 1    | Engine Support<br>Washer                |
| 33       | 3296-16    | 1    | Nut-Lock Ni                             |
| 34       | 71-5210-03 | 1    | Engine Support                          |
| 35       | 71-5220-03 | 1    | Tank Bracket                            |
| 36       | 32144-53   | 1    | Screw-Self TAP                          |
| 37       | 71-5020    | 1    | Fuel Tank                               |
| 38       | 55-9310    | 1    | Foam Seal                               |
| 39       | 100-3441   | 1    | Base Housing Switch<br>(only on: 38405) |
| 40       | 61-4820    | 1    | Switch, Starter (only<br>on: 38405)     |
| 41       | 94-9933    | 1    | Power Plug (only on:<br>38405)          |
| 42       | 61-4810    | 1    | Boot, Switch (only on:<br>38405)        |
| 43       | 100-3442   | 1    | Cap Housing Switch<br>(only on: 38405)  |

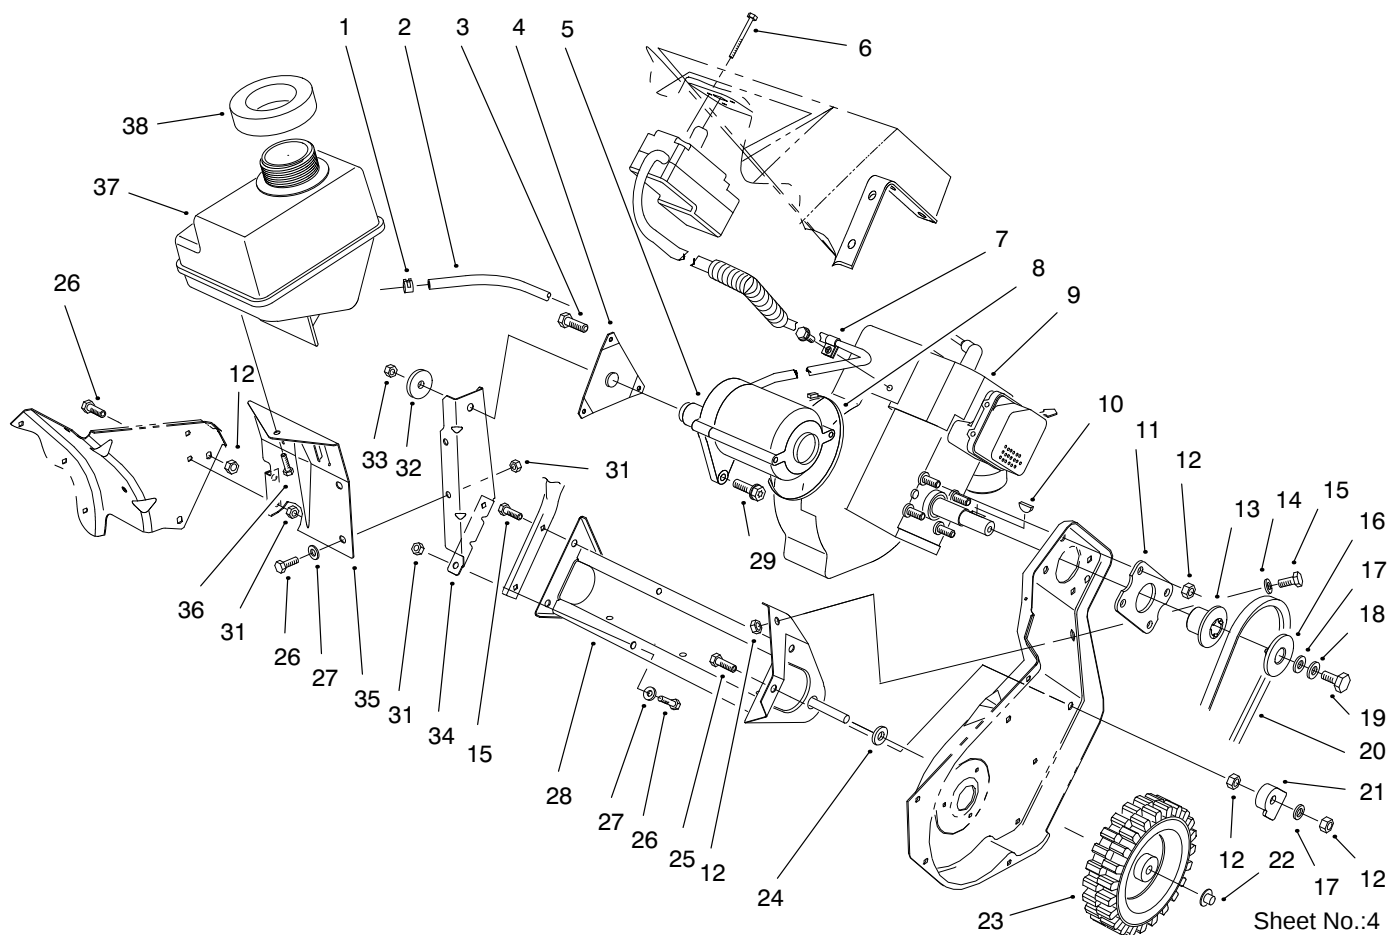

## Engine & Gas Tank Assembly

| Ref. No. | Part No. | Qty. | Description           |
|----------|----------|------|-----------------------|
| *        | 28-9170  | 1    | Cord (only on: 38405) |

\* Not illustrated

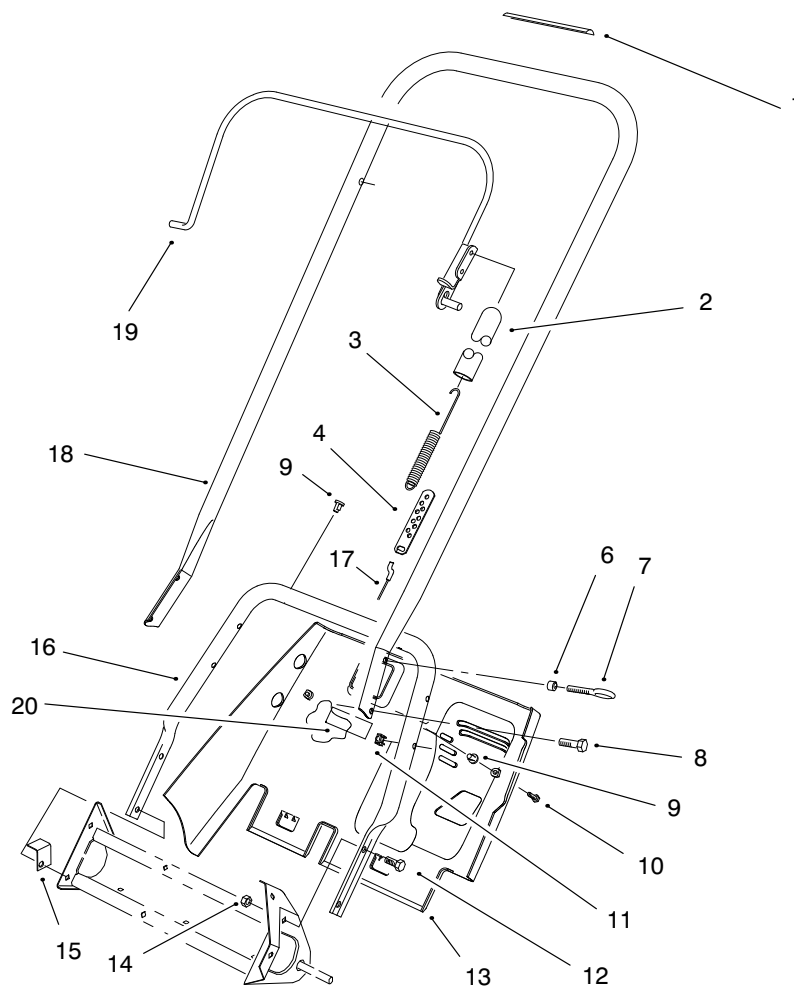


Sheet No.:5

## Handle Assembly

| Ref. No. | Part No.   | Qty. | Description                |
|----------|------------|------|----------------------------|
| 1        | 66-6870    | 1    | Decal – Rotor Drive        |
| 2        | 71-5530    | 1    | Spring Cover               |
| 3        | 71-5480    | 1    | Clutch Spring              |
| 4        | 71-5330    | 1    | Clutch Cable Adjuster      |
| 6        | 55-9370    | 1    | Rotor Bld Spacer           |
| 7        | 3299-1     | 1    | Eyebolt                    |
| 8        | 32105-11   | 3    | Screw-Hex Hd Slot          |
| 9        | 3290-486   | 5    | Expansion Type<br>Fastener |
| 10       | 32144-53   | 3    | Screw-Self TAP             |
| 11       | 3290-225   | 4    | Tinnerman Nut              |
| 12       | 322-3      | 2    | Screw-HH                   |
| 13       | 71-5040    | 1    | Lower Shroud               |
| 14       | 3296-29    | 2    | Nut-Lock Ni                |
| 15       | 71-5600    | 1    | Shroud Bracket             |
| 16       | 71-5370-03 | 1    | Lower Handle Tube          |
| 17       | 55-9322    | 1    | Clutch Cable               |
| 18       | 100-3599   | 1    | Handle-Upper               |
| 19       | 71-5120-03 | 1    | Bail Wa                    |
| 20       | 61-4790    | 1    | Decal (only on:<br>38405)  |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |




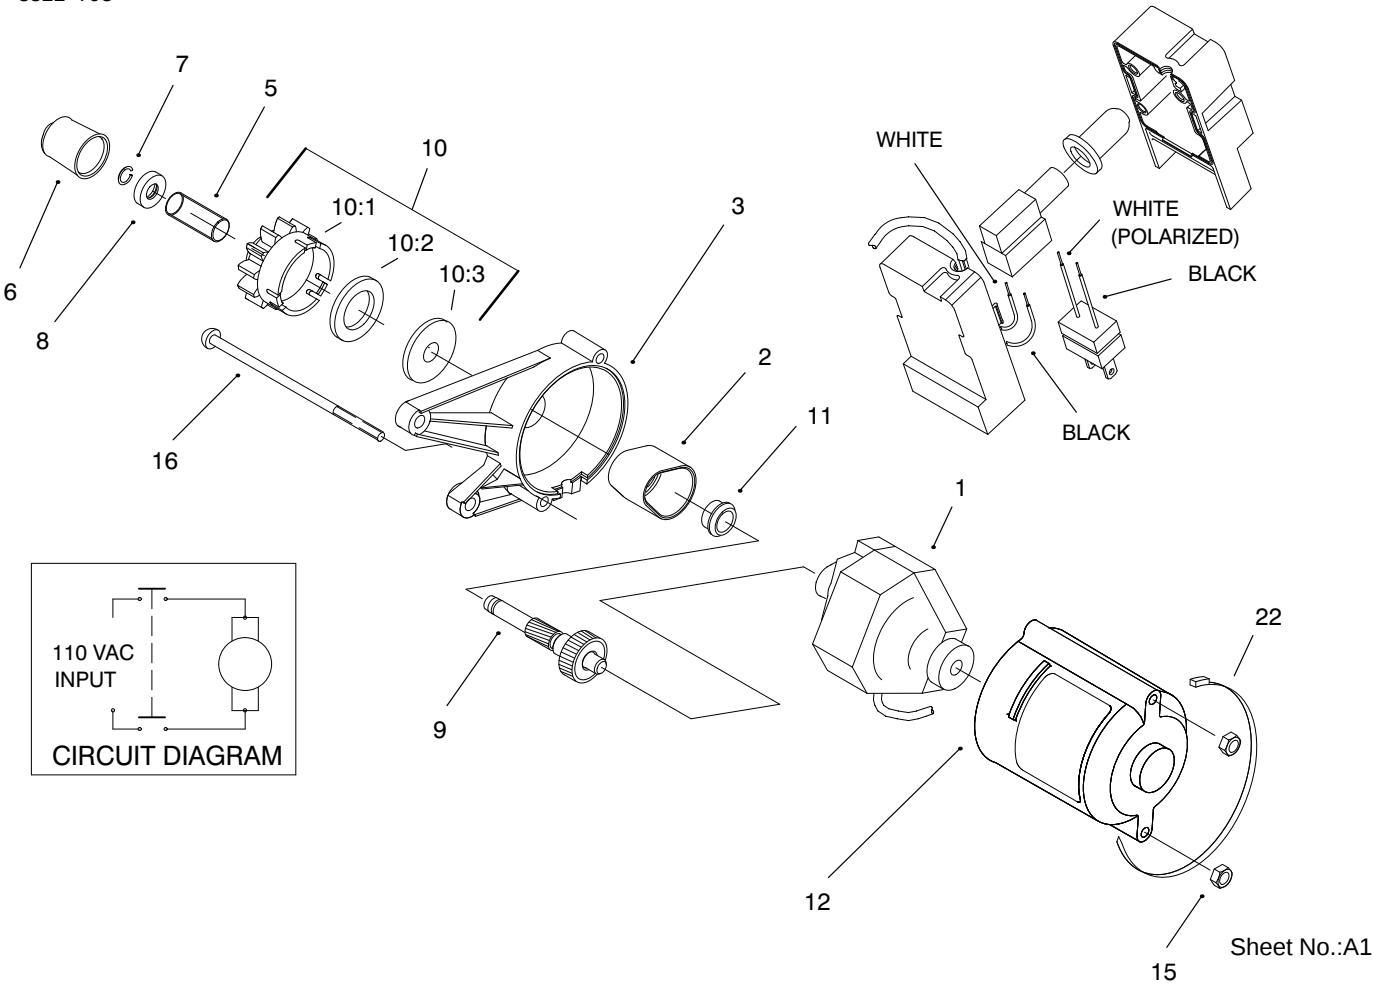

**Motor & Switch Housing Assembly  
(Model No. 38405) (120 Volt)**

| Ref. No. | Part No. | Qty. | Description                             |
|----------|----------|------|-----------------------------------------|
| 1        | 70-7802  | 1    | Starter Motor Assembly (only on: 38405) |
| 2        | 70-7850  | 1    | Gear Cover (only on: 38405)             |
| 3        | 100-3443 | 1    | Housing Upper Starter (only on: 38405)  |
| 5        | 61-4690  | 1    | Spring (only on: 38405)                 |
| 6        | 70-7890  | 1    | Cap Pinion (only on: 38405)             |
| 7        | 61-4680  | 1    | Lock Ring (only on: 38405)              |
| 8        | 100-2902 | 1    | Pinion Stop (only on: 38405)            |
| 9        | 92-6003  | 1    | Shaft/Gear ASM-Service (only on: 38405) |
| 10       | 84-5240  | 1    | Pinion ASM (R & S) (only on: 38405)     |
| 10:1     | 70-7790  | 1    | Nut (only on: 38405)                    |
| 10:2     | 84-5230  | 1    | Pinion (only on: 38405)                 |


| Ref. No. | Part No.  | Qty. | Description                            |
|----------|-----------|------|----------------------------------------|
| 10:3     | 84-5440   | 1    | Ring - Rubber (only on: 38405)         |
| 11       | 70-7900   | 1    | Bushing (only on: 38405)               |
| 12       | 100-3444  | 1    | Housing Lower Starter (only on: 38405) |
| 15       | 3296-2    | 2    | Nut-Lock Ni (only on: 38405)           |
| 16       | 32144-101 | 2    | Screw-Mach (only on: 38405)            |
| 22       | 250-7     | 1    | Tie-Cable                              |

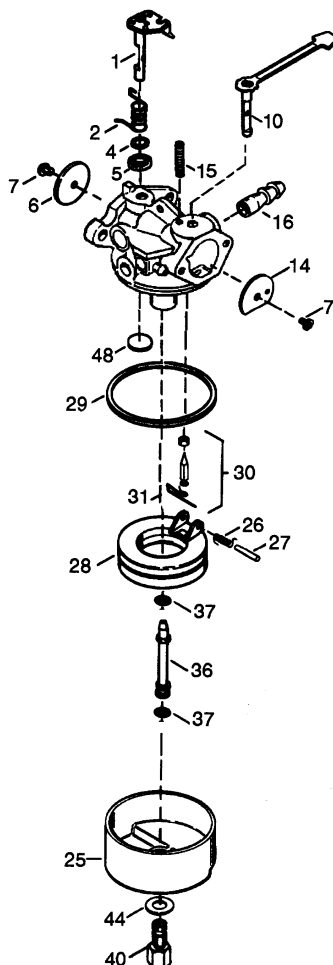

## CARBURETOR NO. 640086

| Ref. No. | Part No. | Description                 | No. Used | Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------|----------|----------|----------|-----------------------------------------------|----------|
| 1        | 632166A  | Throttle Shaft & Lever Asm. | 1        | 27       | 631024   | Float shaft                                   | 1        |
| 2        | 632169   | Throttle Return Spring      | 1        | 28       | 632019   | Float                                         | 1        |
| 4        | 631184   | Dust Seat Washer            | 1        | 29       | 631028   | Float Bowl "O" Ring                           | 1        |
| 5        | 631183   | Dust Seat (Throttle)        | 1        | 30       | 631021   | Inlet Needle, Seat & Clip<br>(Incl. Ref. #31) | 1        |
| 6        | 631621   | Throttle Shutter            | 1        | 31       | 631022   | Spring Clip                                   | 1        |
| 7        | 650506   | Shutter Screw               | 2        | 36       | 640080   | Main Nozzle Tube                              | 1        |
| 10       | 632553   | Choke Shaft & Lever Asm.    | 1        | 37       | 632547   | "O" Ring, Main Nozzle Tube                    | 1        |
| 14       | 631815   | Choke Shutter               | 1        | 40       | 640087   | High Speed Bowl Nut                           | 1        |
| 15       | 630735   | Choke Positioning Spring    | 1        | 44       | 27110    | Bowl Nut Washer                               | 1        |
| 16       | 632164   | Fuel Fitting                | 1        | 48       | 631027   | Welch Plug                                    | 1        |
| 25       | 631867   | Float Bowl                  | 1        |          |          |                                               |          |
| 26       | 632386   | Float Dampening Spring      | 1        |          |          |                                               |          |


# ENGINE TECUMSEH MODEL NO. HSK635-1721A

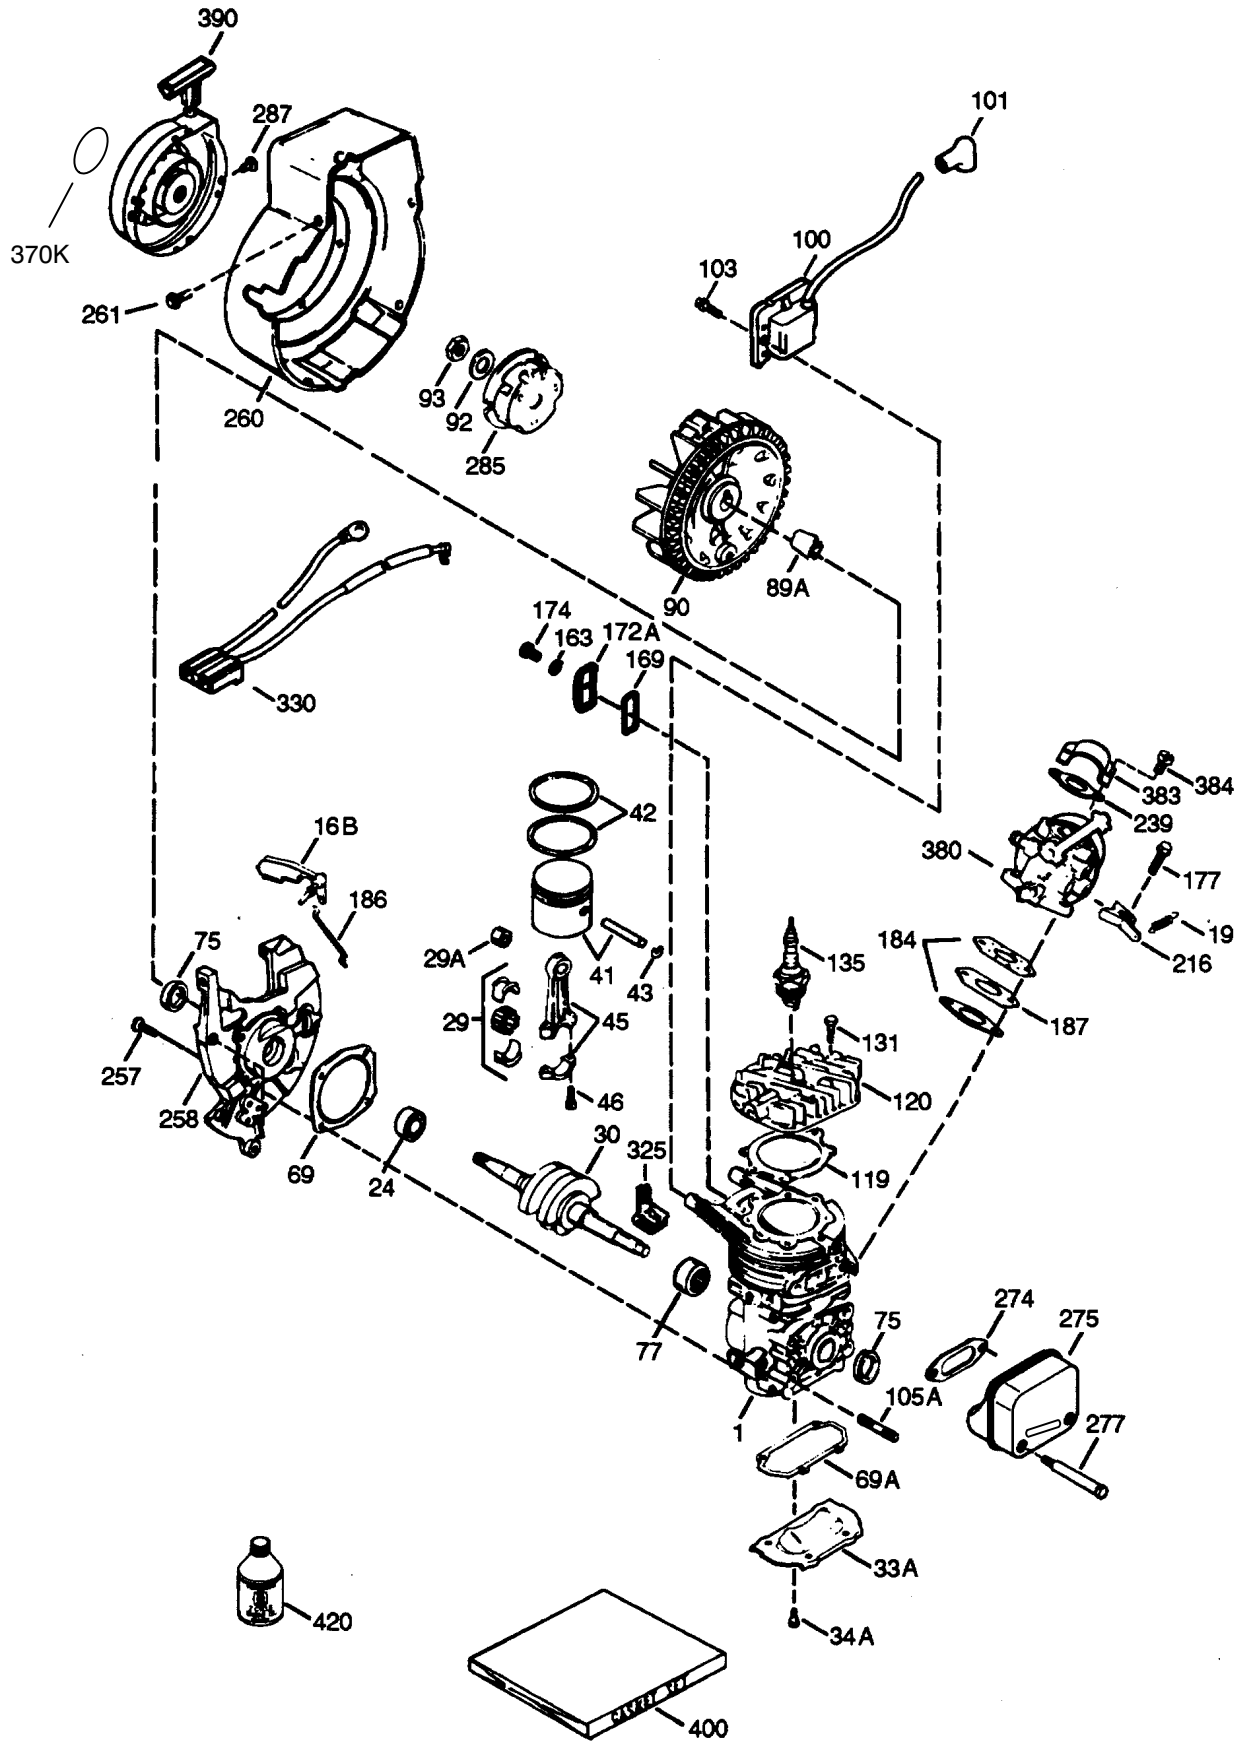

# ENGINE TECUMSEH MODEL NO. HSK635-1721A

| Ref. No. | Part No. | Description                                                 | No. Used | Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|-------------------------------------------------------------|----------|----------|----------|-----------------------------------------|----------|
| 1        |          | Cylinder<br>(Order Short Block if<br>Replacement is needed) | 1        | 135      | 611049   | Resistor Spark Plug                     | 1        |
| 16B      | 490291A  | Air Vane                                                    | 1        | 163      | 650838   | Washer                                  | 1        |
| 19       | 570707   | Extension Spring                                            | 1        | *169     | 510325A  | Cover Plate Gasket                      | 1        |
| 24       | 530110   | Ball Bearing                                                | 1        | 172A     | 570708   | Compression Release<br>Cover            | 1        |
| 29       | 530150   | Needle Bearing & Liner<br>Set (37 Needles)                  | 1        | 174      | 650579   | Screw, Torx T-25                        | 1        |
| 29A      | 530104A  | Cartridge Bearing                                           | 1        | 177      | 650959   | Screw                                   | 2        |
| 30       | 290602   | Crankshaft                                                  | 1        | *184     | 510326A  | Carburetor Gasket                       | 2        |
| 33A      | 570644   | Cover Plate                                                 | 1        | 186      | 490322   | Governor Link                           | 1        |
| 34A      | 650579   | Screw, Torx T-25                                            | 4        | 187      | 570438A  | Spacer                                  | 1        |
| 41       | 310283A  | Piston & Pin Assembly                                       | 1        | 216      | 570645   | R.P.M. Adjusting Lever                  | 1        |
| 42       | 310190   | Ring Set                                                    | 2        | 239      | 35815    | Air Cleaner Gasket                      | 1        |
| 43       | 310167   | Piston Pin Retaining Ring                                   | 2        | 257      | 650911   | Screw, Torx T-30                        | 4        |
| 45       | 310235B  | Connecting Rod Assembly<br>(Incl. Ref. #29, 29A, & 46)      | 1        | 258      | 350422   | Blower Housing Base<br>(Incl. Ref. #27) | 1        |
| 46       | 650633   | Connecting Rod Bolt                                         | 4        | 260      | 350437   | Blower Housing                          | 1        |
| *69      | 510292A  | Cylinder Cover Gasket                                       | 1        | 261      | 650737   | Screw                                   | 4        |
| *69A     | 510323A  | Cover Plate Gasket                                          | 1        | *274     | 513067A  | Exhaust Gasket                          | 1        |
| 75       | 510319   | Oil Seal                                                    | 2        | 275      | 390330   | Muffler<br>(Incl. Ref. #274 & 277)      | 1        |
| 77       | 530105   | Cartridge Bearing                                           | 1        | 277      | 650869   | Screw                                   | 2        |
| 89A      | 611032   | Adapter Sleeve                                              | 1        | 285      | 590551A  | Starter Cup                             | 1        |
| 90       | 611066   | Flywheel                                                    | 1        | 287      | 650926   | Screw                                   | 3        |
| 92       | 650815   | Belleville Washer                                           | 1        | 325      | 29443    | Wire Clip                               | 1        |
| 93       | 650390   | Flywheel Nutt                                               | 1        | 330      | 611153   | Wire Harness                            | 1        |
| 100      | 34443B   | Solid State Ignition<br>(Incl. Ref. #101)                   | 1        | 370K     | 36695    | Starter Decal                           | 1        |
| 101      | 610118   | Spark Plug Cover                                            | 1        | 380      | 640086   | Carburetor<br>(Incl. Ref. #184)         | 1        |
| 103      | 651007   | Screw, Torx T-15                                            | 2        | 383      | 570434   | Spit Cup                                | 1        |
| 105A     | 650796   | Stud                                                        | 4        | 384      | 650431   | Screw, Torx T-25                        | 2        |
| *119     | 510274A  | Cylinder Head Gasket                                        | 1        | 390      | 590743   | Rewind Starter                          | 1        |
| 120      | 250240B  | Cylinder Head                                               | 1        | 400      | 510324B  | Gasket Set                              | 1        |
| 131      | 650477   | Screw, Torx T-30                                            | 5        | 420      | 730227A  | 2-Cycle Oil (8 oz.)                     | 1        |

\*Included in Gasket Set No. 510324B

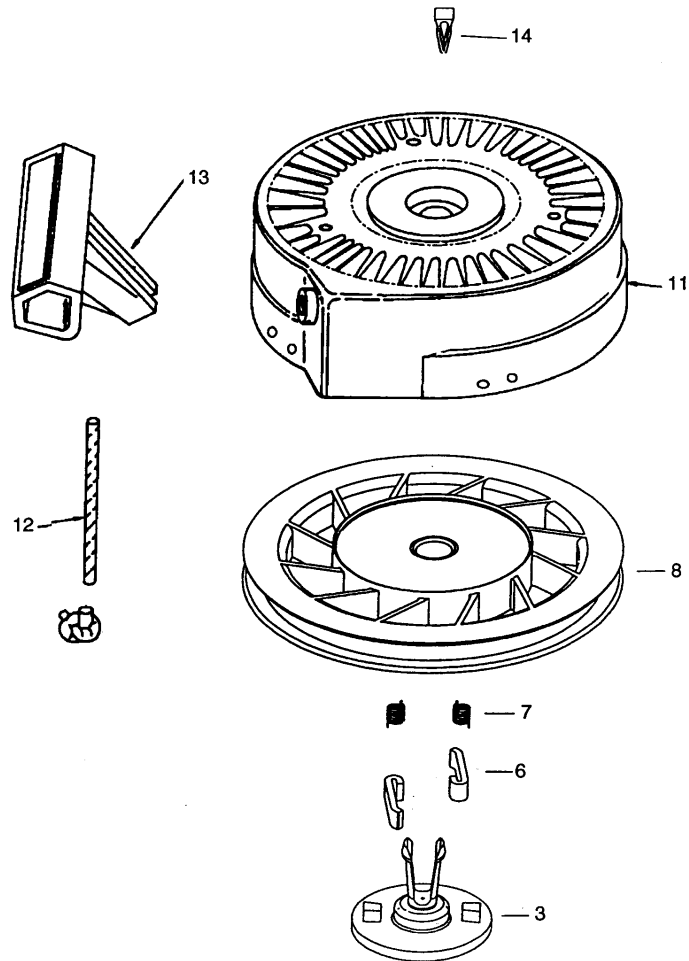

# RECOIL STARTER NO. 590743

| Ref. No. | Part No. | Description                  | No. Used |
|----------|----------|------------------------------|----------|
| 0        | 590743   | Rewind Starter               | 1        |
| 3        | 590740   | Retainer                     | 1        |
| 6        | 590616   | Starter Dog                  | 2        |
| 7        | 590617   | Dog Spring                   | 2        |
| 8        | 590645A  | Pulley & Rewind Spring Ass'y | 1        |

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 11       | 590643   | Starter Housing Ass'y                     | 1        |
| 12       | 590535   | Starter Rope<br>(Length 98" x 9/64" Dia.) | 1        |
| 13       | 590701   | Starter Handle                            | 1        |
| 14       | 590741   | Locking Tab                               | 1        |



