

### **Blade Kit**

Part No. 100-2422

INSTALLATION INSTRUCTIONS

#### **Loose Parts**

**Note:** Use the chart below to identify parts for assembly.

DESCRIPTION	QTY.	USE
Righthand Blade	1	
Lefthand Blade	1	
Shear Bolt	4	Install Blades and Spacer
Lock Nut	4	
Spacer	2	

# **Removing Existing Blades**

# **WARNING**

#### POTENTIAL HAZARD

• Blade is sharp.

#### WHAT CAN HAPPEN

• Contact with sharp blade can cause serious personal injury.

#### HOW TO AVOID THE HAZARD

- Wear gloves or wrap sharp edges of the blade with a rag.
- 1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to "OFF" to stop the engine. Remove the key.
- **2.** Flip up deck and lock into vertical position. Refer to Tilting the Mower on page 3.

- **3.** Hold the blade end using a rag or thickly-padded glove. Remove the blade bolt, shear bolts, lock nuts, spacer and blade from the blade retainer.
- **4.** Discard blades, shearbolts, locknuts and spacer.

# Installing the Blades and Spacer

Note:

Notice there is a left hand and a right hand blade. Notice the direction in which the blades turn. The cutting edge must rotate toward the center of the deck. (Fig. 1).

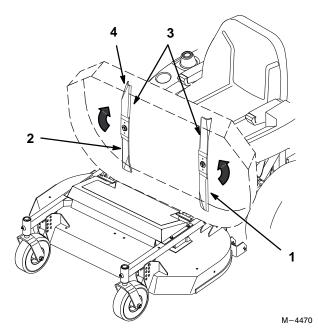


Figure 1

- 1. Lefthand Blade
- 2. Righthand Blade
- 3. Cutting Edge
- Curve in Blade Towards
  Deck
- 1. Install washer and spacer onto blade bolt. New spacer is black in color (Fig. 2).
  - IMPORTANT: The curved part of the blade must be pointing upward toward the inside of the mower to ensure proper cutting.
- **2.** Place blade against blade retainer and align holes (Fig. 2).
- 3. Install blade bolt, washer and spacer onto blade retainer. Thread blade bolt into spindle shaft. Ensure that the spacer is in hole of blade (Fig. 2).

- **4.** Torque the blade bolt to 85–110 ft-lb (115–150 N•m).
- **5.** Rotate blade. Blade should rotate freely.
- **6.** Repeat this procedure for second blade.

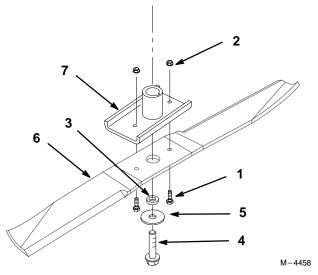


Figure 2

- 1. Shear Bolt
- 2. Lock Nut
- 3. Spacer
- 4. Blade Bolt
- Washer
- 6. Blade (Righthand Shown)
- 7. Blade Retainer

## **Installing Shear Bolts**

1. Install new shear bolts and lock nuts. Tighten the shear bolt to 80–90 in-lb (9–10 N•m) (Fig. 2).

**Note:** Notice the direction of the shear bolts being replaced (Fig. 2).

**2.** Repeat this procedure for second blade.

## **Tilting the Mower**

The mower can be tilted up for ease of service.

#### **To Raise Mower**

- **1.** Turn engine off, set the parking brake and check that PTO cover is down against deck.
- 2. Lift on the mower carrier frame to release weight on latch pin and pull out on latch pin to release (Fig. 3). Lower rear of mower onto anti-scalp rollers. Repeat on the other side.
- **3.** Return the pins to the spring loaded (down) position.

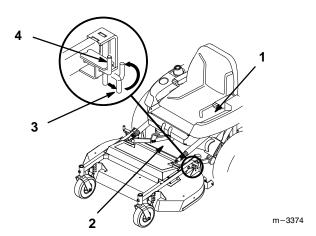


Figure 3

- 1. Parking brake
- 2. PTO cover
- 3. Latch pin
- 4. Notch-open

- **4.** Standing in front of the mower, lift up and push rearward on front to raise mower (Fig. 4).
- **5.** Raise mower until it contacts stops and latch pins snap into locked position.

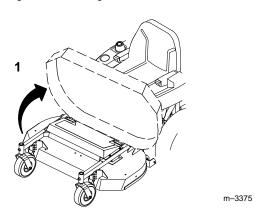


Figure 4

1. Mower up

