



Universal Swivel Auger Head

For Toro® Sitework™ Systems

Model No. 22801—990001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

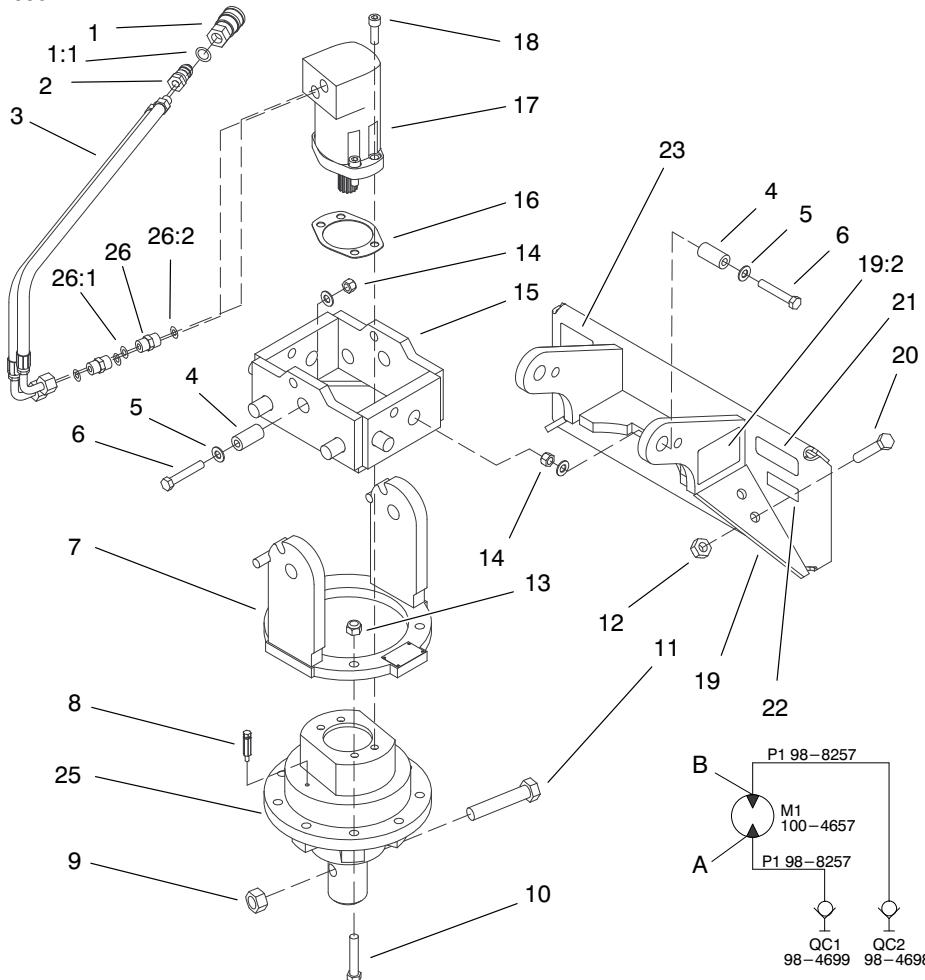

COMPONENT	FUNCTION	DISPLACEMENT	DIAMETER
M1	DRILLING	8.0 in ³ /rev 130cc/rev	
P1			.50 IN 12.7 MM


Sheet No.:2

Auger Head Assembly

Ref. No.	Part No.	Qty.	Description
1	98-4699	1	Female—Quick Disconnect
1:1	100-4165	1	Seal Kit—Hyd. Coupling
2	98-4698	1	Male—Quick Disconnect
3	98-8257	2	Hose – Hydraulic
4	99-1406	4	Pin – Pivot
5	3256-26	8	Washer–Flat
6	325-12	4	Screw–HH
7	98-8258	1	Housing – Drive
8	98-8261	1	Breather ASM
9	3217-15	1	Nut–Hex
10	326-1	4	Screw–HH
11	98-9062	1	Screw
12	3217-11	4	Nut–Hex
13	98-2703	4	Locknut
14	3296-23	4	Nut–Lock NI
15	100-4104	1	Swivel Gimbel ASM
16	99-5032	1	Gasket
17	100-4657	1	Motor – Hydraulic
*17:1	56-6890	1	Seal Kit
18	3274-4	4	Screw–HSH
19	100-4659	1	Auger Mount ASM
19:2	99-9942	2	Decal–Warning
20	327-14	4	Screw–HH

Ref. No.	Part No.	Qty.	Description
21	98-4683	1	Decal-Dingo Attachment
22	99-9992	1	Decal-Info
23	98-3269	1	Decal-Made In USA
25	98-8260	1	Drive-Gear, Planetary
26	340-6	2	Fitting-Straight
26:1	237-30	1	O-Ring
26:2	237-80	1	O-Ring


* Not Illustrated

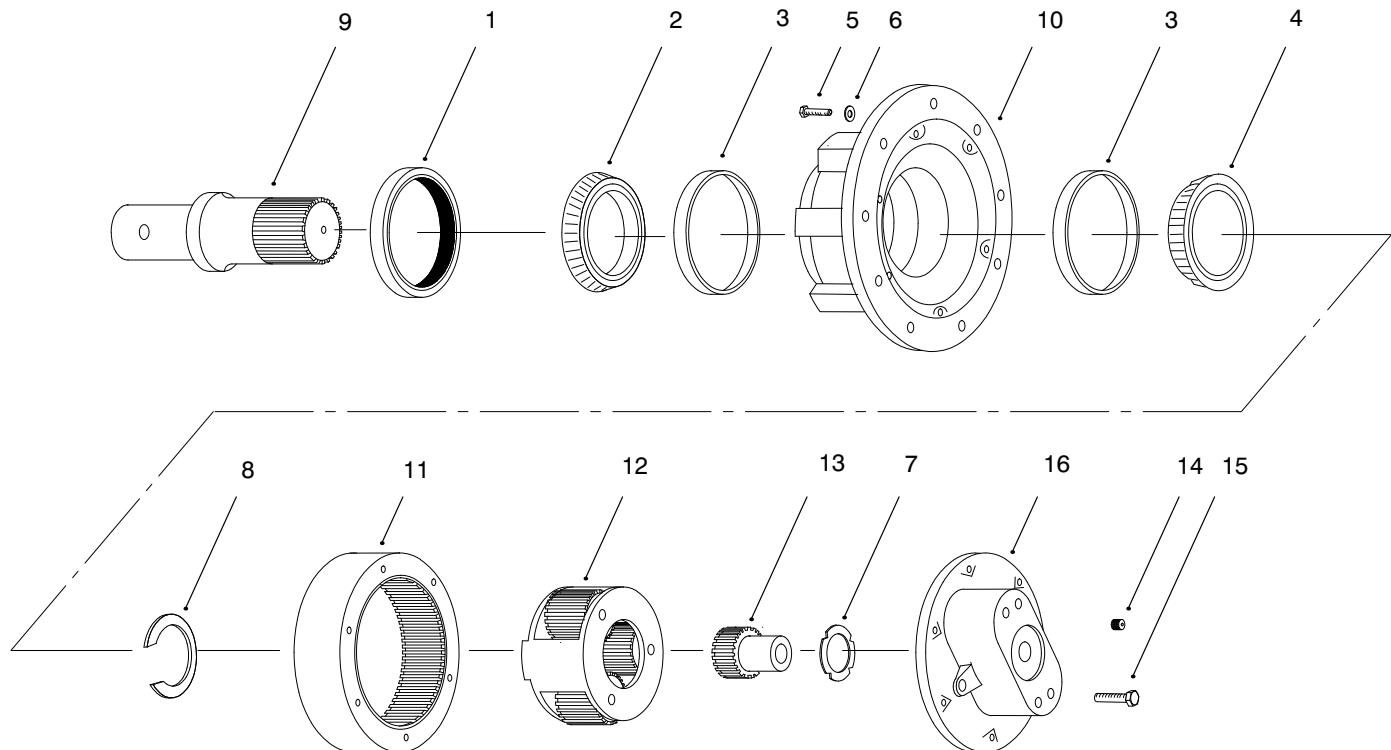

Sheet No.:A1
C-2745

Planetary Gear Assembly No. 98-8260

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	60-3830	1	Seal				
2	60-3840	1	Cone				
3	60-3850	2	Cup				
4	60-3880	1	Cone				
5	60-3890	6	Bolt				
6	60-3910	6	Washer				
7	60-3980	1	Washer				
8	62-6450	1	Retaining Ring Kit				
9	98-8264	1	Shaft - Output				
10	98-8265	1	Hub w/Holes				
11	98-8266	1	Gear - Ring				
12	98-8267	1	Assembly - Carrier				
13	98-8268	1	Gear - Sun				
14	98-8269	1	Plug - Pipe, Magnetic				
15	98-8270	8	Bolt				
16	98-8271	1	Cover				

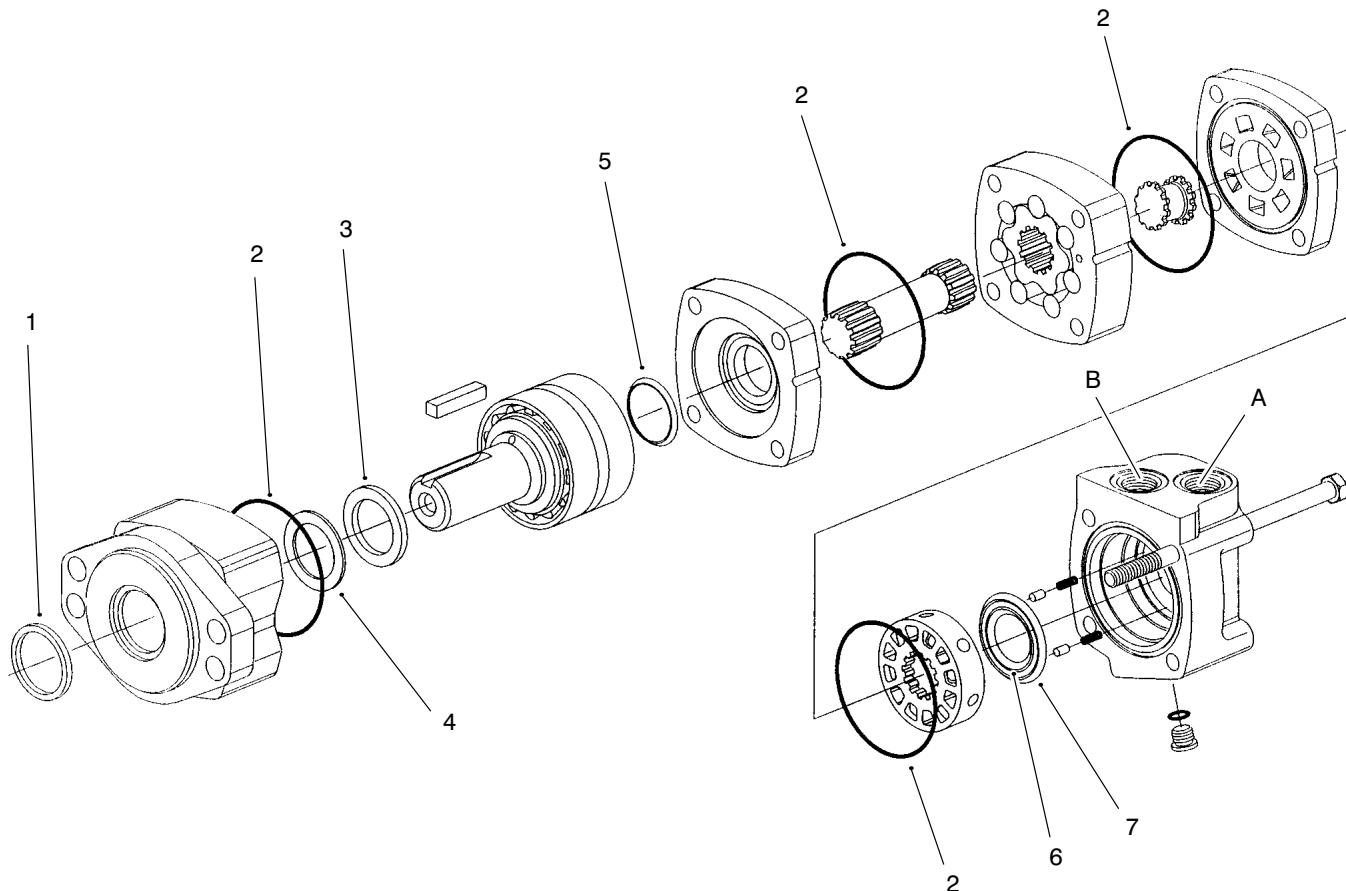

C-2754

Hydraulic Motor Assembly

Ref. No.	Part No.	Qty.	Description
†1		1	Seal-Dust
†2		4	Seal-O-Ring
†3		1	Seal-Shaft
†4		1	Back-up-Washer
†5		1	Seal-Shaft
†6		1	Seal-Inner
†7		1	Seal-Outer
*	56-6890	1	Seal Kit (Incl. Ref# 1-7)

Ref. No.	Part No.	Qty.	Description

Not serviced separately

Not illustrated