 


TORO®

MODEL NO. 03805-90205 & UP

PARTS CATALOG


REELMASTER® 6700D - 4WD TRACTION UNIT

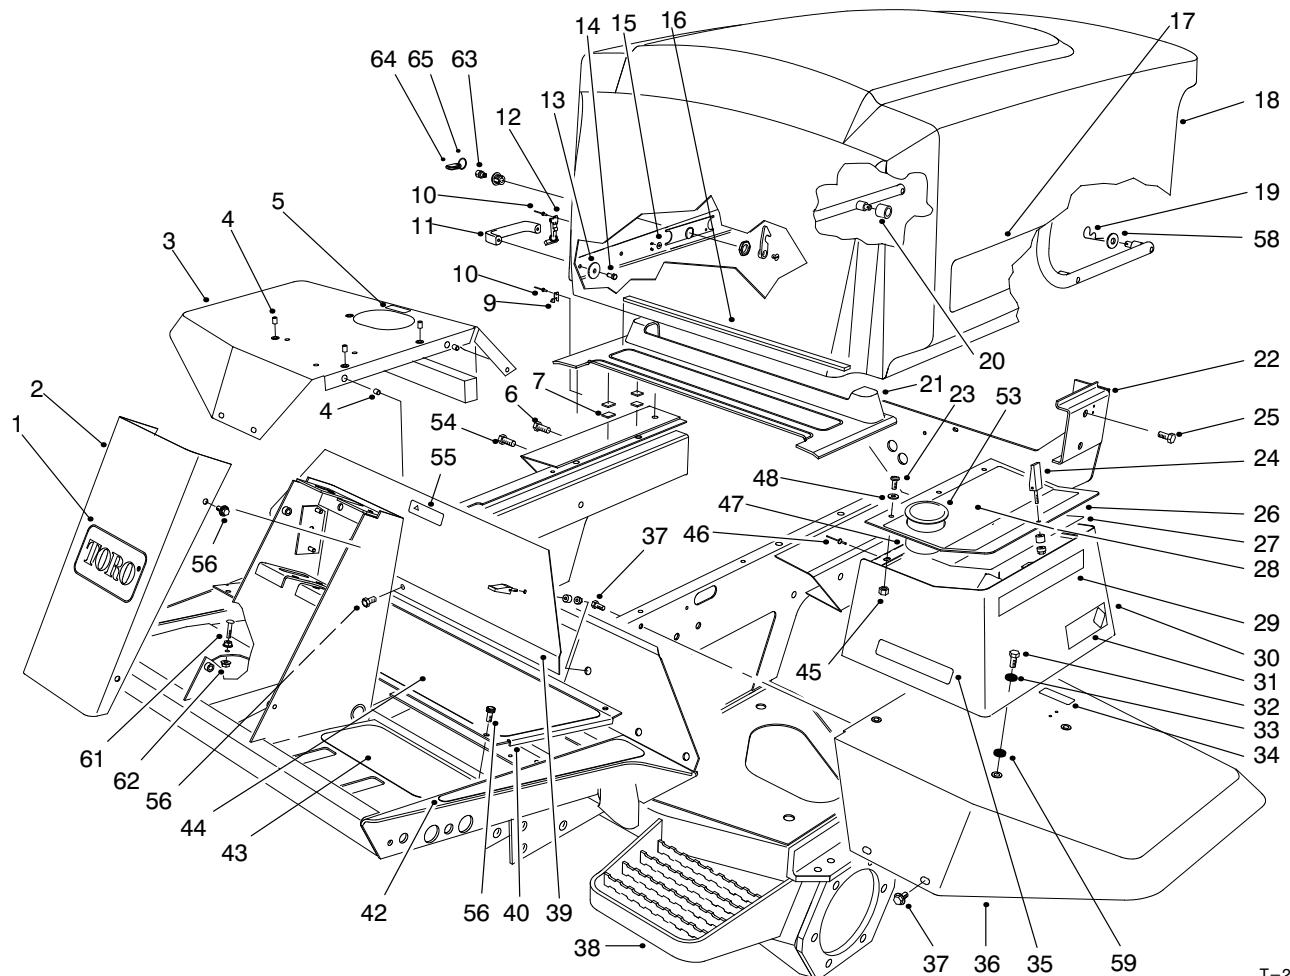

T-2366-9

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal-Toro	1	18	92-7511	Hood	1
2	93-7996	Cover-Tower	1	19	3290-467	Pin-Cotter, Hair	2
3	94-3049	Fender-RH	1	20	93-7582	Hose	1
4	32148-7	Nut-Clinch	5	21	94-2617	Cover-Pump	1
5	93-6686	Decal-Hydraulic Oil	1	22	98-8814	Frame-Rear (Incl. Ref. #1, Page 43)	1
5	88-1980	Decal-Hydraulic Oil (Japan)	1	23	3258-166	Screw	3
6	33106-035	Screw-HHF	8	24	74-5950	Latch-Swell	3
7	93-9155	Velcro	2	25	33108-035	Screw-HHF	8
9	249-40	Keeper	1	26	93-9180	Cover-Box, Tool	1
10	3269-8	Rivet-Pop	4	27	98-3728	Decal-Service	1
11	65-5100	Handle-Hood	1	27	98-8135	Decal-Service (Danish)	1
12	59-9740	Latch-Draw	1	27	98-8136	Decal-Service (Dutch)	1
13	3256-78	Washer-Flat	2	27	98-8137	Decal-Service (Finnish)	1
14	46-8091	Screw-Tapping	2	27	98-8138	Decal-Service (French)	1
15	3269-10	Washer-Flat	2	27	98-8139	Decal-Service (German)	1
16	92-7633	Strip-Bumper, Hood	1	27	98-8140	Decal-Service (Italian)	1
17	92-7524	Decal-RM6700D	2	27	98-8141	Decal-Service (Norwegian)	1

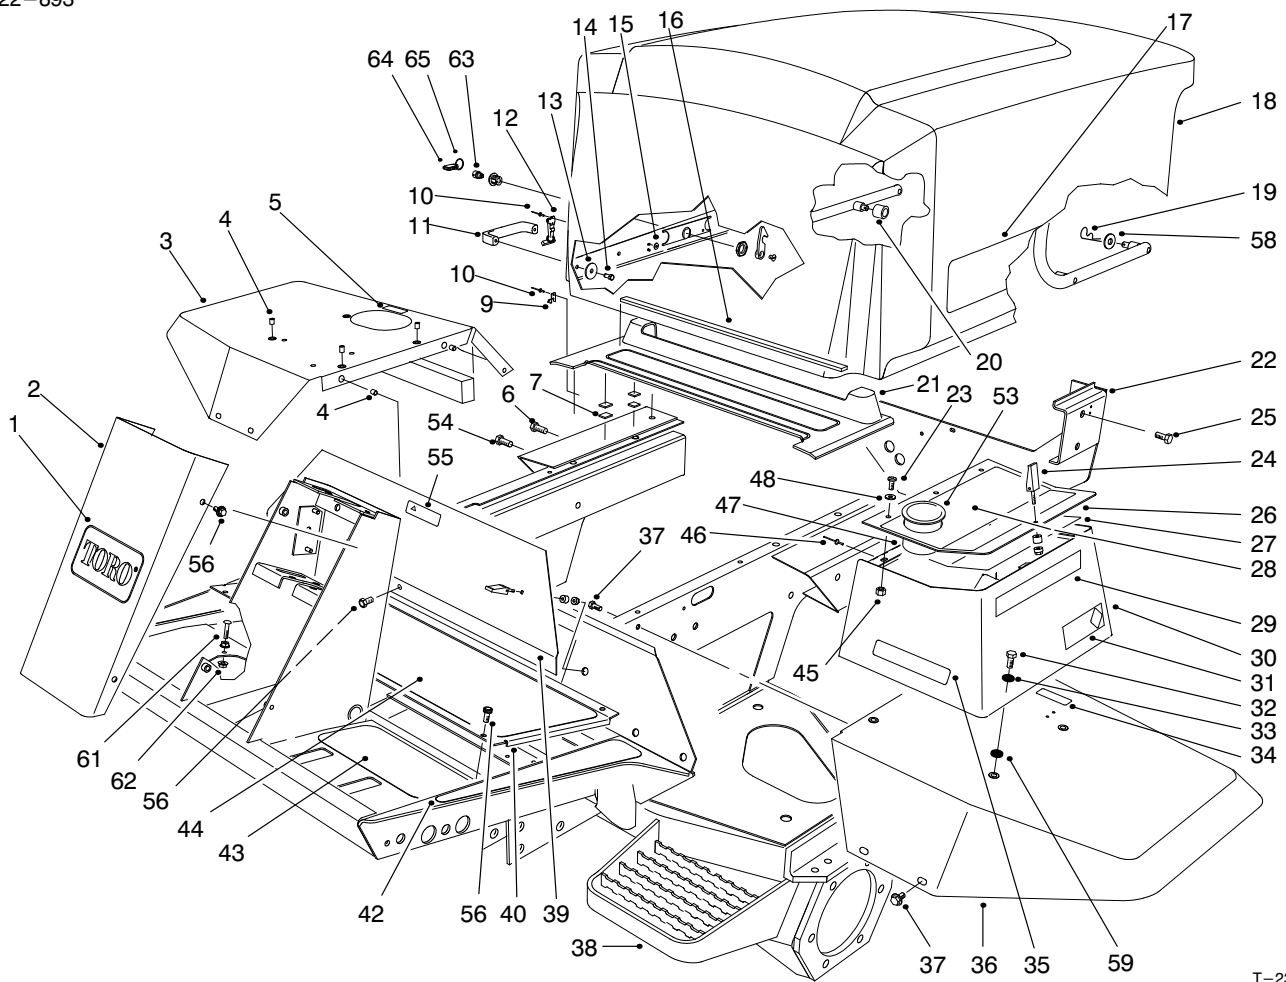 


T-2366-9

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
27	94-2943	Decal-Service (Portuguese)	1	40	75-1410	Plate-Access, Floor	1
27	94-2944	Decal-Service (Spanish)	1	42	93-7592	Tread-Footrest	2
27	94-2945	Decal-Service (Swedish)	1	43	75-0620	Tread-Foot, LH	1
27	94-2941	Decal-Service (Japan)	1	*	75-0610	Tread-Foot, RH	1
28	93-1262	Decal-Hillside	1	44	75-0630	Tread-Foot, Center	1
28	94-4572	Decal-Hillside (Japan)	1	45	32128-33	Nut-HFH	3
29	72-3560	Decal-4WD	1	46	93-8744	Rivet-Pop	3
30	75-5810	Box-Tool	1	47	75-5780	Hinge-Cover	1
31	93-0096	Decal-ACE	2	48	3256-1	Washer-Flat	3
32	322-3	Screw-HH	4	53	94-1410	Holder-Can, Beverage	1
33	3256-3	Washer-Flat	4	54	3234-18	Screw-Flange	2
34	93-6680	Decal-Fuel, Diesel	1	55	93-9425	Decal-Danger	1
34	84-2860	Decal-Fuel, Diesel (Japan)	1	55	94-4579	Decal-Danger (Japan)	1
35	93-6689	Decal-No Riders	1	56	3234-7	Screw	9
35	84-3420	Decal-No Riders (Japan)	1	58	66-6480	Washer	2
36	75-3860	Fender-LH	1	59	66-2920	Washer	4
37	3234-14	Screw-Flange	10	61	17-9420	Screw-Handle	1
38	94-9953	Frame-Front (Incl. Ref. #42, 43 & on Page 33, #31)	1	62	32128-20	Nut-HFH	2
39	75-1390	Cover-Access, Front	1	63	98-5398	Asm-Latch, Hood	1
				64	99-8970	Key-Latch, Hood	1
				65	98-9321	Ring-Key	1

 *Not Illustrated

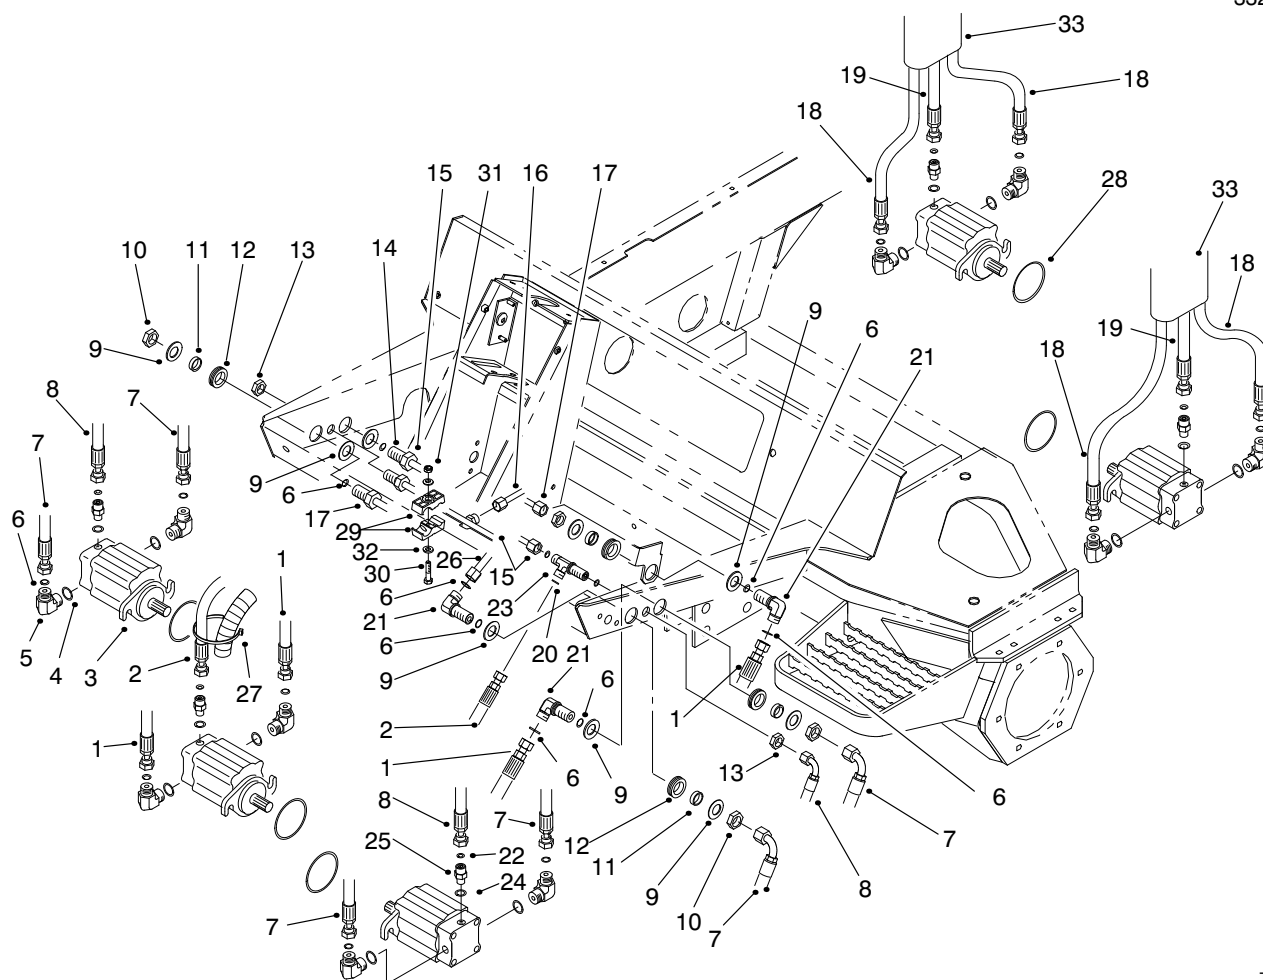


T-2090-5

REEL MOTORS & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7556	Asm-Hose	2	18	99-5613	Asm-Hose	4
2	92-7560	Asm-Hose	1	19	99-5614	Asm-Hose	2
3	98-9999	Motor-Hydraulic	5	20	237-22	O-Ring	3
4	237-79	O-Ring	10	21	93-9151	Fitting-Hydraulic 90° (Incl. Ref. #6)	3
5	340-98	Fitting-Hydraulic 90° (Incl. Ref. #4 & 6)	10	22	237-21	O-Ring	5
6	237-30	O-Ring	18	23	340-68	Fitting-Hydraulic, Tee (Incl. Ref. #20)	1
7	92-7555	Asm-Hose	4	24	237-78	O-Ring	5
8	92-7559	Asm-Hose	2	25	340-92	Fitting-Hydraulic (Incl. Ref. #22 & 24)	5
9	69-8930	Washer	10	26	93-4217	Asm-Tube	1
10	340-127	Nut-Bulkhead	5	27	3290-378	Tie-Cable	1
11	69-8960	Spacer	5	28	93-9783	O-Ring	10
12	240-5	Grommet	5	29	56-7972	Clamp-Tube	4
13	340-70	Nut-Bulkhead	2	30	322-7	Screw-HH	2
14	93-4216	Asm-Tube (Incl. Ref. #6)	1	31	3296-47	Nut-Lock	2
15	93-4223	Asm-Tube, Front Drain (Incl. Ref. #20)	1	32	3256-23	Washer-Flat	4
16	93-4222	Asm-Tube, Drain Return	1	33	99-5617	Sleeve-Protector	2
17	93-4219	Asm-Tube, #1 Bulkhead (Incl. Ref. #6)	1				

 3322-893

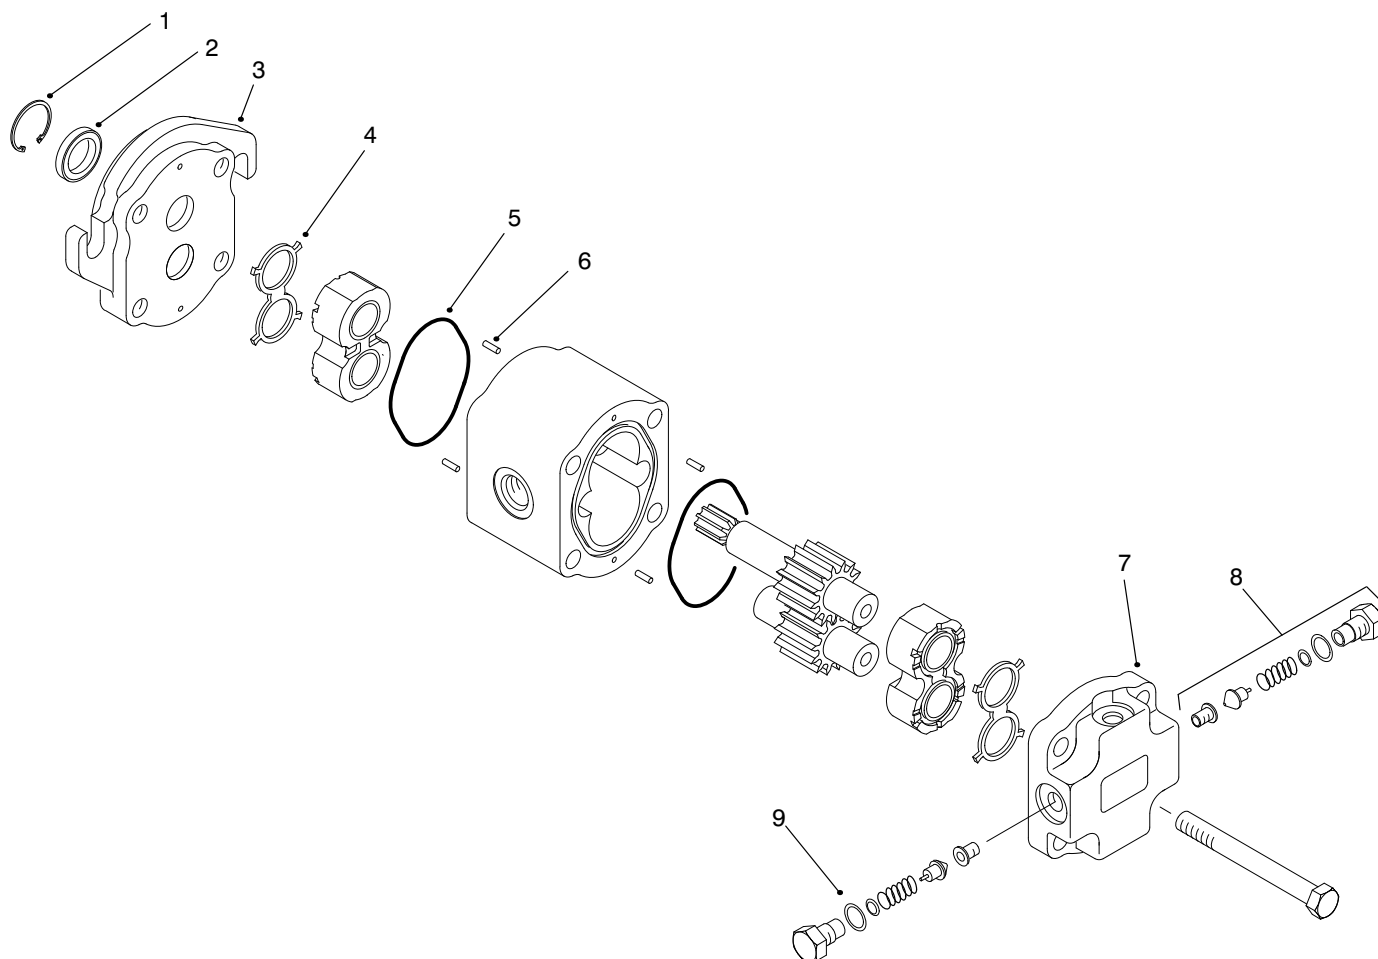


T-2091-3

REEL MOTOR ASSEMBLY NO. 98-9999

Ref. No.	Part No.	Description	No. Used
1		Ring—Retaining	1
2		Seal—Shaft	1
3		Flange	1
4		E—Seal	2
5		O—Ring	2
6		Pin—Dowel	4
7		Block—Valve (Incl. Ref. #8)	1

Ref. No.	Part No.	Description	No. Used
8		Valve—Adjusting	2
9		O—Ring	2
*	93-9152	Kit—Flange (Incl. Ref. #1-3 & 6)	1
*	98-9997	Kit—Seal (Incl. Ref. #1, 2, 4, 5 & 9)	1
*	93-9154	Kit—Valve Block (Incl. Ref. #6 & 7)	1

 
*Not Illustrated

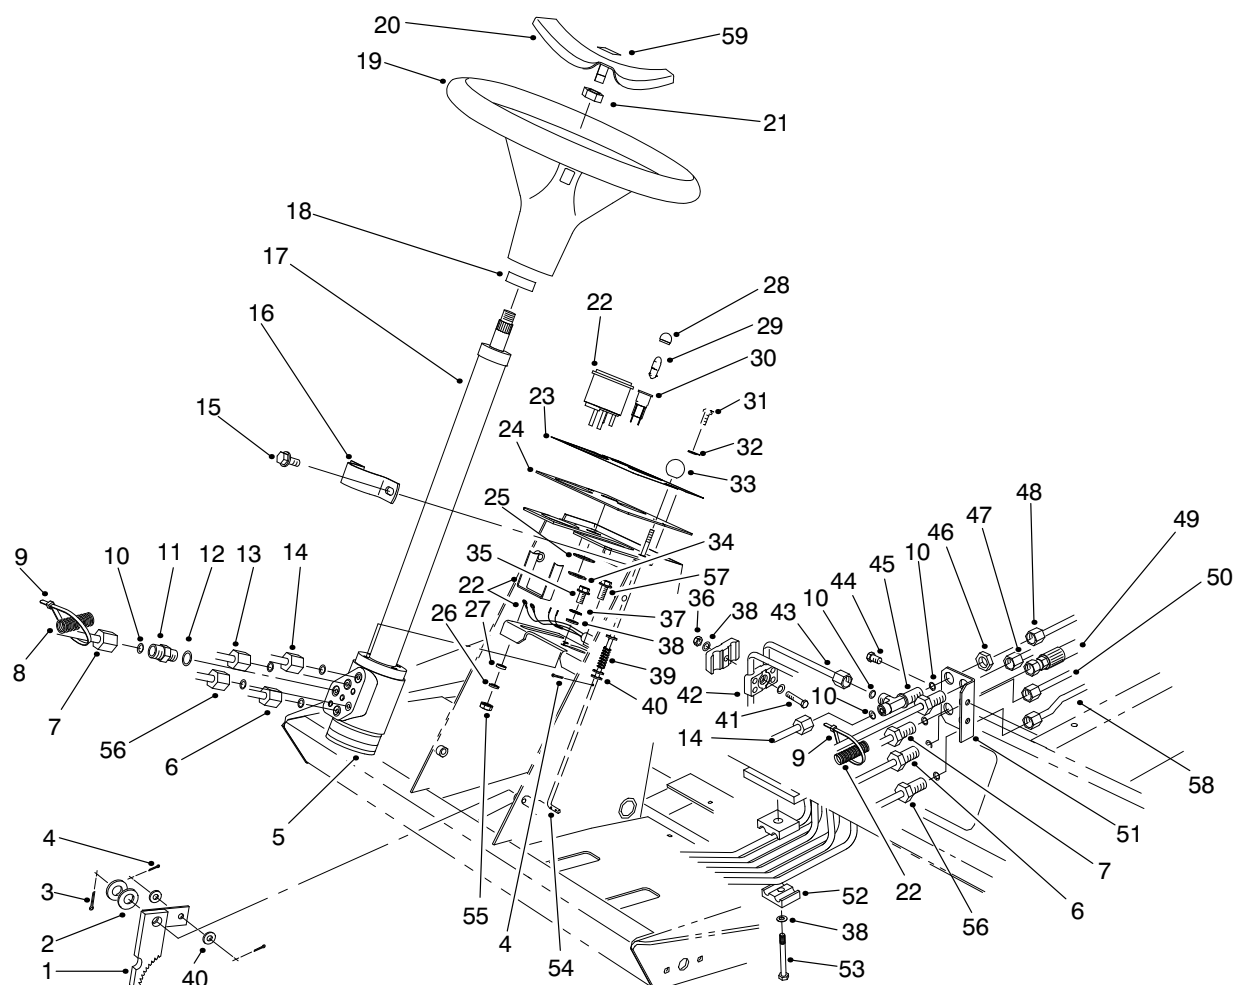

T-2464-4

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-7900	Rack	1	24	93-7998	Plate-Instrument	1
2	3256-26	Washer-Flat	2	25	218-536	Washer-Lock	1
3	3272-10	Pin-Cotter	1	26	3253-2	Washer-Lock	3
4	3272-5	Pin-Cotter	3	27	3256-14	Washer-Flat	2
5	99-8959	Asm-Valve, Steering	1	28	218-533	Lens-Red	1
6	94-3059	Tube-Steering, RH	1	29	93-7480	Bulb-LED	1
7	94-3061	Tube-Steering, Front, In	1	30	44-2210	Asm-Light, Warning (Incl. Ref. #25, 28, 29, & 34)	1
8	99-8963	Harness-Wire, Main	1	31	87-6620	Screw-Torx Pan Hd.	2
9	3290-378	Tie-Cable	4	32	3256-1	Washer-Flat	2
10	237-22	O-Ring	10	33	233-17	Knob	1
11	340-2	Adapter (Incl. Ref. #10 & 12)	4	34	218-535	Nut-Lock	1
12	237-42	O-Ring	4	35	33103-025	Screw-HHF	1
13	94-3060	Tube-Steering, Front LH	1	36	3296-47	Nut-Lock	1
14	94-3062	Tube-Steering, Front, Out	1	37	3255-8	Washer-Lock	1
15	3234-7	Screw	2	38	3256-23	Washer-Flat	6
16	75-2810	Bracket-Column, Steering	1	39	95-1821	Spring-Brake, Park	1
17	94-9951	Asm-Column, Steering	1	40	3256-22	Washer-Flat	5
18	21-9260	Cover-Dust	1	41	322-7	Screw-HH	1
19	98-1471	Wheel-Steering (Incl. Ref. #20)	1	42	56-7972	Clamp	2
20	98-1468	Cover	1	43	94-1447	Tube-Steering, Return	1
21	94-9952	Nut-Jam	1	44	32144-11	Screw-Thread Forming	2
22	93-4213	Asm-Speedometer (Incl. Ref. #26, 27 & 55)	1	45	340-68	Fitting-Tee, Bulkhead (Incl. Ref. #10)	1
23	93-1263	Decal-Tower	1	46	340-70	Nut-Lock, Bulkhead	5
23	94-4573	Decal-Tower (Japan)	1	47	92-7495	Asm-Tube, Steering Rear	1
				48	92-7602	Asm-Tube, Return	1

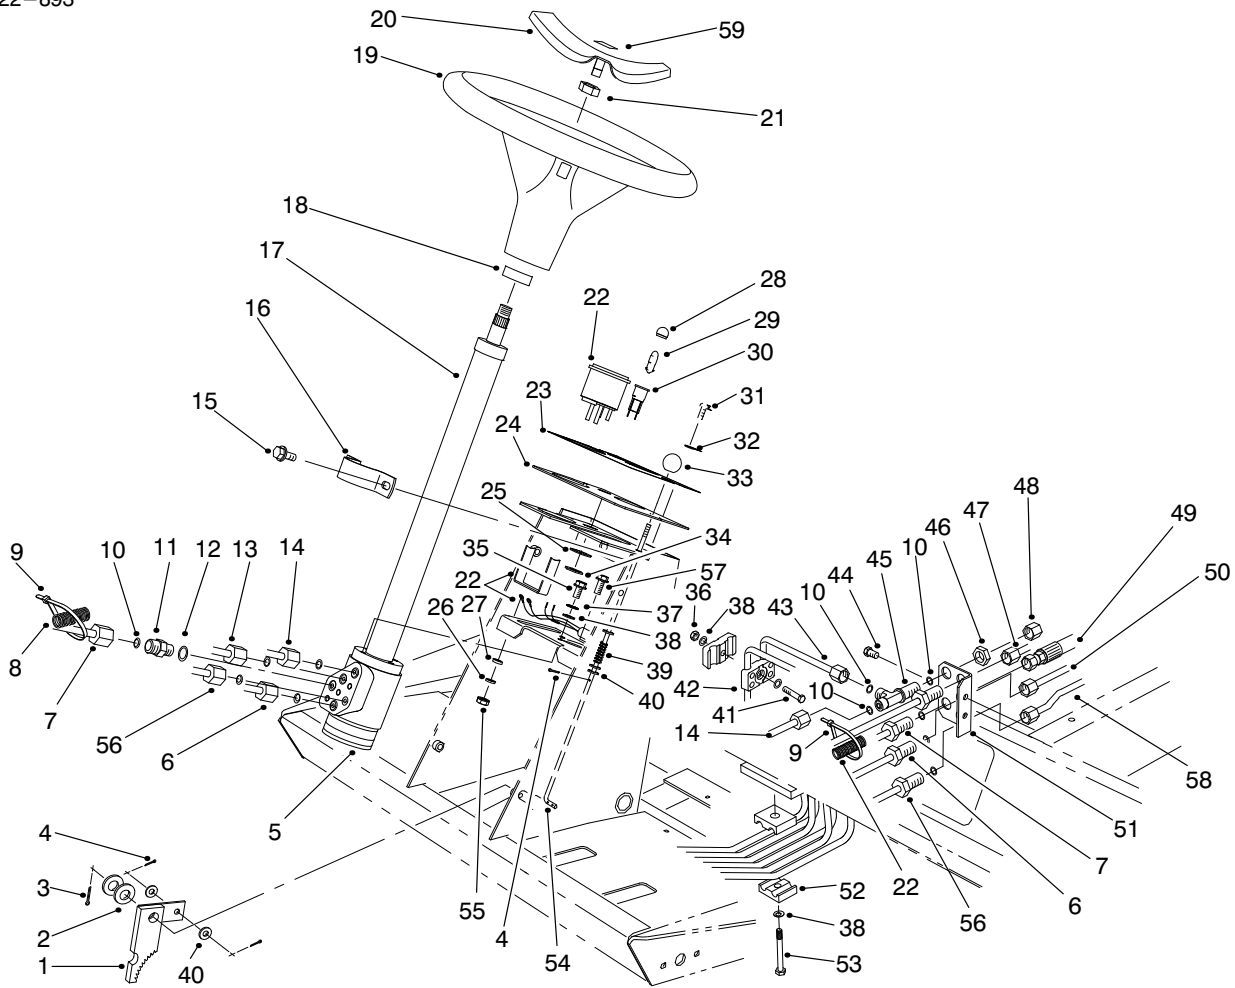 


T-2464-4

STEERING TOWER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
49	92-7622	Hose-Steering	1
50	92-7494	Asm-Tube Steering Rear	1
51	92-7606	Bracket-Bulkhead	1
52	56-7973	Clamp	6
53	322-6	Screw-HH	3
54	75-1490	Rod-Brake, Park	1

Ref. No.	Part No.	Description	No. Used
55	3219-14	Nut-Hex.	9
56	94-3071	Asm-Tube, Front, Aux.	1
57	33103-020	Screw-HHF	2
58	92-7601	Asm-Tube, Rear, Aux.	1
59	98-1459	Decal-Urethane, Toro	1

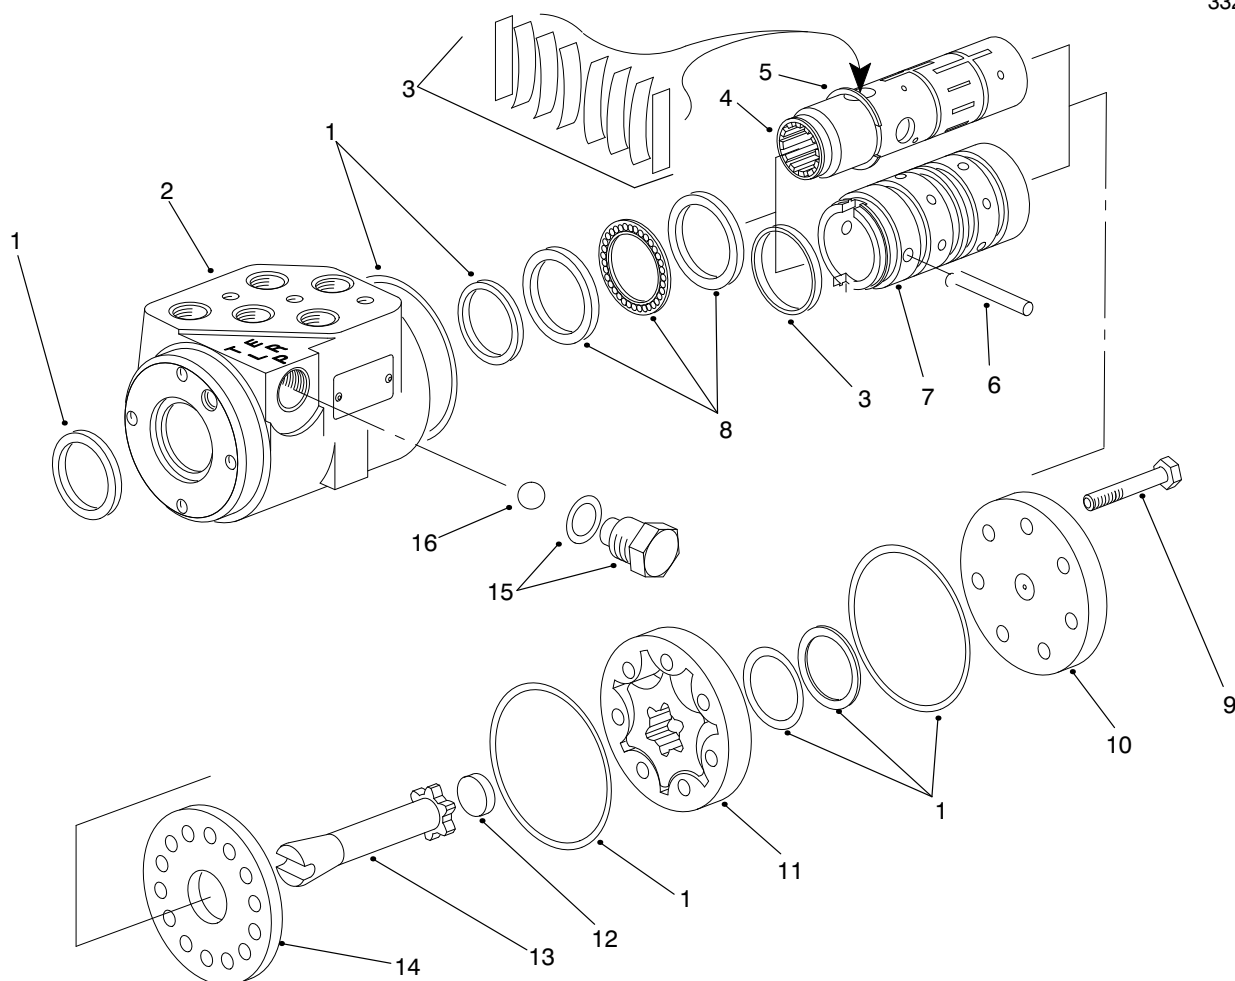 


T-3216

STEERING VALVE ASSEMBLY NO. 99-8959

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-4099	Kit-Seal	1	9	94-4088	Screw	7
†2		Housing	1	10	94-4089	Cap-End	1
3	94-4095	Kit-Spring, Centering	1	11	94-4090	Gerotor	1
†4		Spool	1	12	94-4091	Spacer	1
5	94-4098	Ring-Retaining	1	13	94-4093	Drive	1
6	94-4094	Pin	1	14	94-4092	Plate-Wear	1
†7		Sleeve	1	15	94-4097	Asm-Plug	1
8	94-4096	Kit-Bearing	1	16	94-4100	Ball	1

 † Not Serviced Separately.

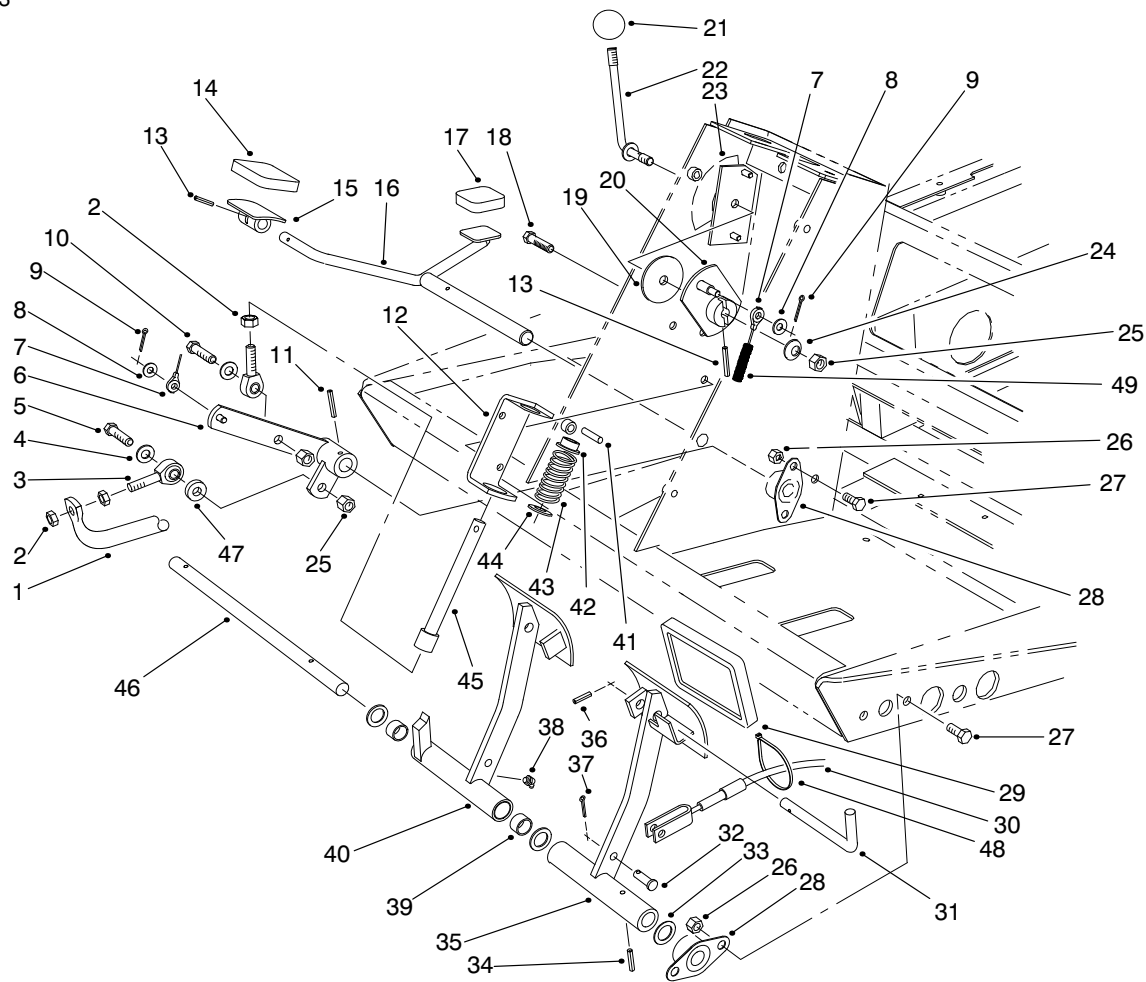


T-2063-4

TRACTION & BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7531	Tube-Control, Pump	1
2	3220-3	Nut-Jam	3
3	2411-36	Bearing-Rod End	2
4	3256-24	Washer-Flat	2
5	323-9	Screw-HH	1
6	75-3270	Hub-Pivot, Traction	1
7	75-6580	Cable-Pedal	1
8	3256-22	Washer-Flat	2
9	3272-2	Pin-Cotter	2
10	323-7	Screw-HH	1
11	32121-6	Pin-Roll	1
12	92-7608	Bracket-Spring	1
13	32121-45	Pin-Roll	2
14	74-9100	Pad-Pedal, Forward	1
15	49-6440	Pedal-Accelerator	1
16	75-2970	Pedal-Traction	1
17	74-9110	Pad-Pedal, Reverse	1
18	32144-14	Screw-HH	2
19	75-6550	Disc-Friction	1
20	75-6510	Bracket-Lever	1
21	233-42	Knob	1
22	75-6490	Lever	1
23	93-6699	Decal-Fast/Slow	1
23	84-3500	Decal-Fast/Slow (Japan)	1
24	3290-461	Washer-Belleville	1
25	3296-39	Nut-Lock	3

Ref. No.	Part No.	Description	No. Used
26	32128-20	Nut-HFH	8
27	322-3	Screw-HH	8
28	256-236	Bearing-Flange	4
29	93-8742	Pad-Brake	2
30	92-7530	Asm-Cable, Brake LH	1
*	92-7529	Asm-Cable, Brake RH	1
31	63-7880	Pin-Latch, Brake	1
32	283-58	Pin-Clevis	2
33	3256-69	Washer-Flat	3
34	32121-16	Pin-Roll	1
35	75-1440	Pedal-Brake, LH	1
36	32121-50	Pin-Roll	1
37	3272-10	Pin-Cotter	2
38	302-60	Fitting-Grease	1
39	256-42	Bushing	2
40	75-1430	Pedal-Brake, RH (Incl. Ref. #38 & 39)	1
41	32121-11	Pin-Roll	1
42	92-7610	Retainer-Spring	1
43	60-5700	Spring-Compression	1
44	3256-5	Washer-Flat	1
45	92-7609	Shaft-Spring	1
46	75-1470	Pin-Pivot, Brake	1
47	5-0652	Spacer	1
48	3290-378	Tie-Cable	1
49	95-7151	Tube-Convolute	1

 *Not Illustrated

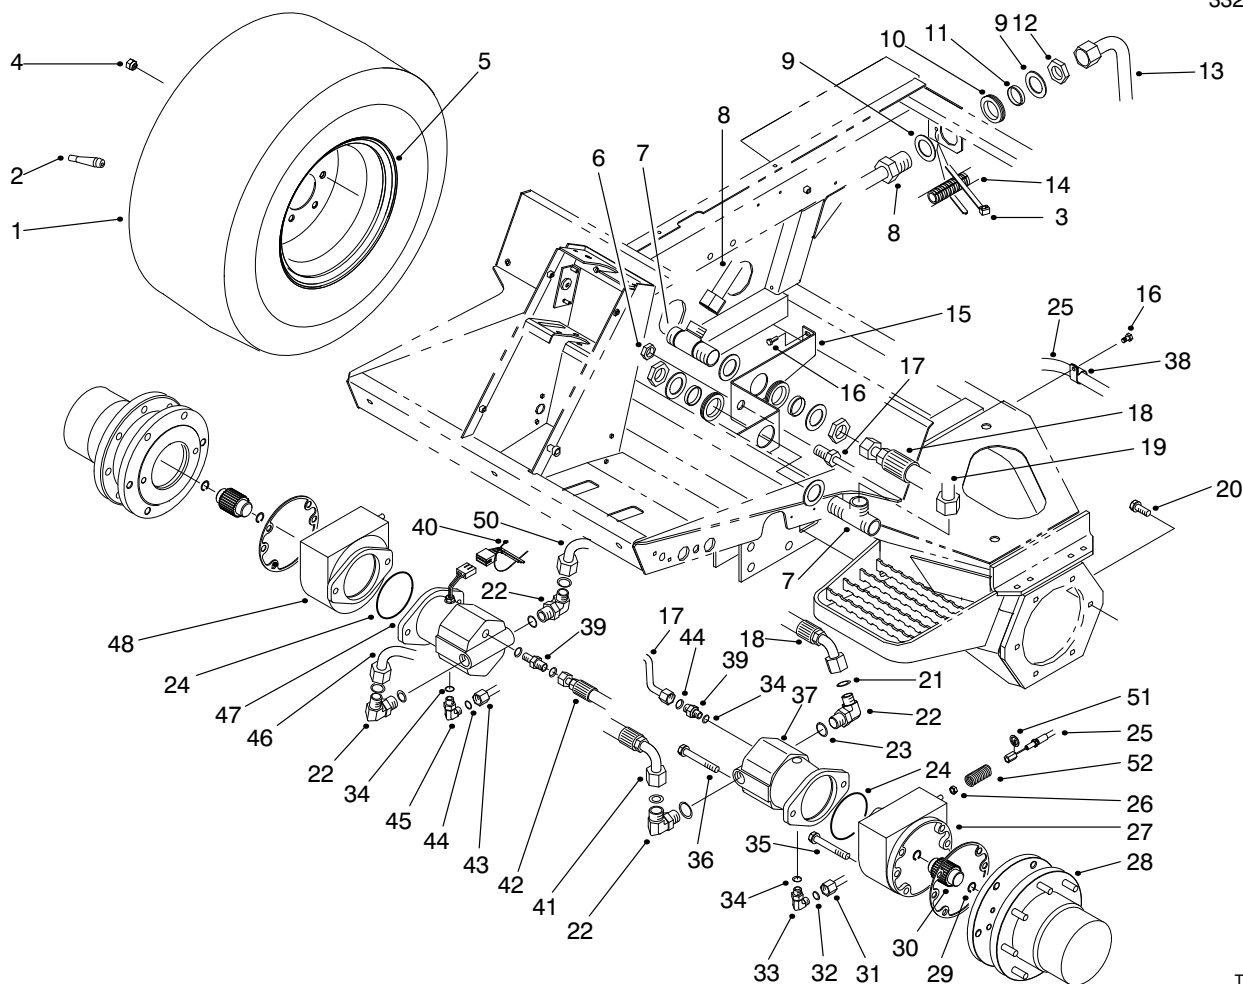


T-2364-3

FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-3465	Tire	2	28	92-7415	Asm-Drive, Planetary	2
2	232-24	Stem-Valve	2	29	93-7972	Ring-Retaining	4
3	3290-379	Tie-Cable	2	30	93-7966	Shaft-Splined, Brake	2
4	92-7483	Nut-Lug	16	31	92-7598	Asm-Tube, Frt. Drain	1
5	95-3464	Rim	2	32	237-22	O-Ring	1
6	340-127	Nut-Bulkhead	1	33	340-18	Fitting-Hydraulic 90° (Incl. Ref. #32 & 34)	1
7	92-7550	Fitting-Tee, Bulkhead (Incl. Ref. #49)	2	34	237-79	O-Ring	4
8	92-7474	Asm-Tube, Front	1	35	33106-090	Screw-HHF	8
9	69-8920	Washer	6	36	33116-120	Screw-HH	4
10	240-2	Grommet	3	37	92-7385	Motor-Planetary	1
11	69-8950	Spacer	3	38	2412-93	R-Clamp	2
12	340-128	Nut-Bulkhead	3	39	340-5	Fitting-Hydraulic (Incl. Ref. #34 & 44)	2
13	92-7473	Asm-Tube, Rear	1	40	3290-378	Tie-Cable	2
14	99-8963	Harness-Wire, Main	1	41	92-7487	Asm-Tube	1
15	92-7455	Plate-Bulkhead	1	42	92-7488	Asm-Hose	1
16	32144-11	Screw-Thread Forming	5	43	92-7478	Asm-Tube, Motor RH	1
17	92-7477	Asm-Tube, Motor Drain	1	44	237-30	O-Ring	3
18	92-7486	Asm-Hose	1	45	340-98	Fitting-Hydraulic 90° (Incl. Ref. #34 & 44)	1
19	92-7485	Asm-Hose	1	46	92-7476	Asm-Tube, Traction	1
20	33106-030	Screw-HHF	12	47	93-7476	Motor-Hydraulic W/Sensor	1
21	237-58	O-Ring	4	48	92-7414	Asm-Brake, RH	1
22	340-142	Fitting-Hydraulic 90° (Incl. Ref. #21 & 23)	4	*49	340-65	O-Ring	6
23	237-81	O-Ring	4	50	92-7475	Asm-Tube, Traction	1
24	237-166	O-Ring	2	51	94-3050	Plate-Spring	2
25	92-7530	Cable-Brake, LH	1	52	94-3088	Spring-Brake	2
26	3218-4	Nut-Jam	2				
27	92-7417	Asm-Brake, LH	1				

 *Not Illustrated

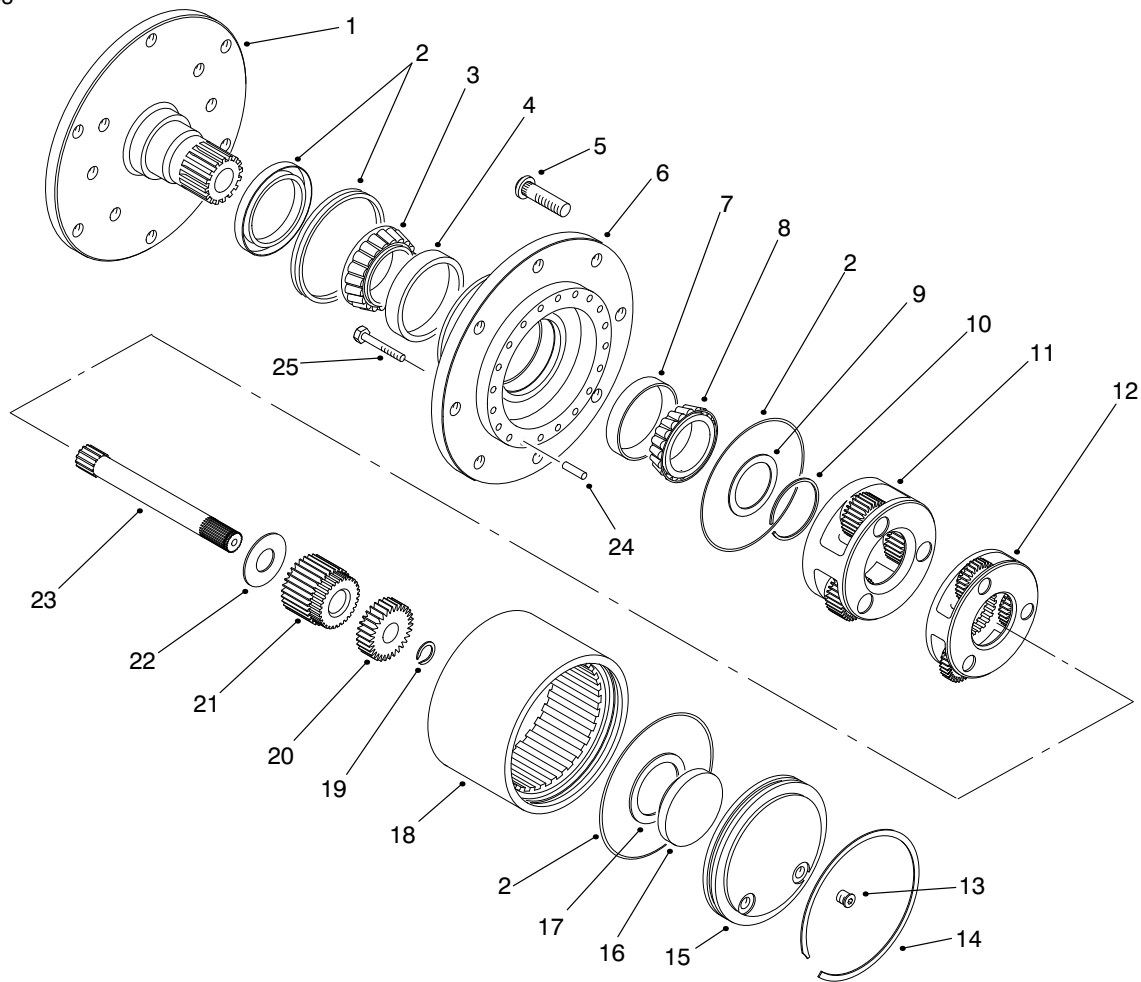


T-2070-1

PLANETARY DRIVE ASSEMBLY NO. 92-7415

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7450	Spindle	1	15	93-7458	Plate-Cover	1
2	93-7474	Kit-Seal	1	16	93-7457	Spacer-Input	1
3	93-7451	Cone-Bearing	1	17	93-7460	Washer-Thrust	1
4	93-7452	Cup-Bearing	1	18	93-7456	Gear-Ring	1
5	93-7455	Stud-Wheel	8	19	93-7459	Ring-Retaining, External	1
6	93-7453	Housing	1	20	93-7463	Gear-Sun	1
7	93-7470	Cup-Bearing	1	21	93-7464	Gear-Sun	1
8	93-7469	Cone-Bearing	1	22	93-7465	Washer-Thrust	1
9	93-7468	Washer-Thrust	1	23	93-7471	Shaft-Input	1
10	93-7467	Ring-Retaining, External	1	24	93-7466	Pin-Dowel	2
11	93-7472	Asm-Carrier, Secondary	1	25	93-7454	Screw-HH	18
12	93-7473	Asm-Carrier, Primary	1	*	92-7415	Asm-Complete (Incl. Ref. #1-25)	1
13	93-7461	Plug-Pipe	2				
14	93-7462	Ring-Retaining, Internal	1				

 *Not Illustrated

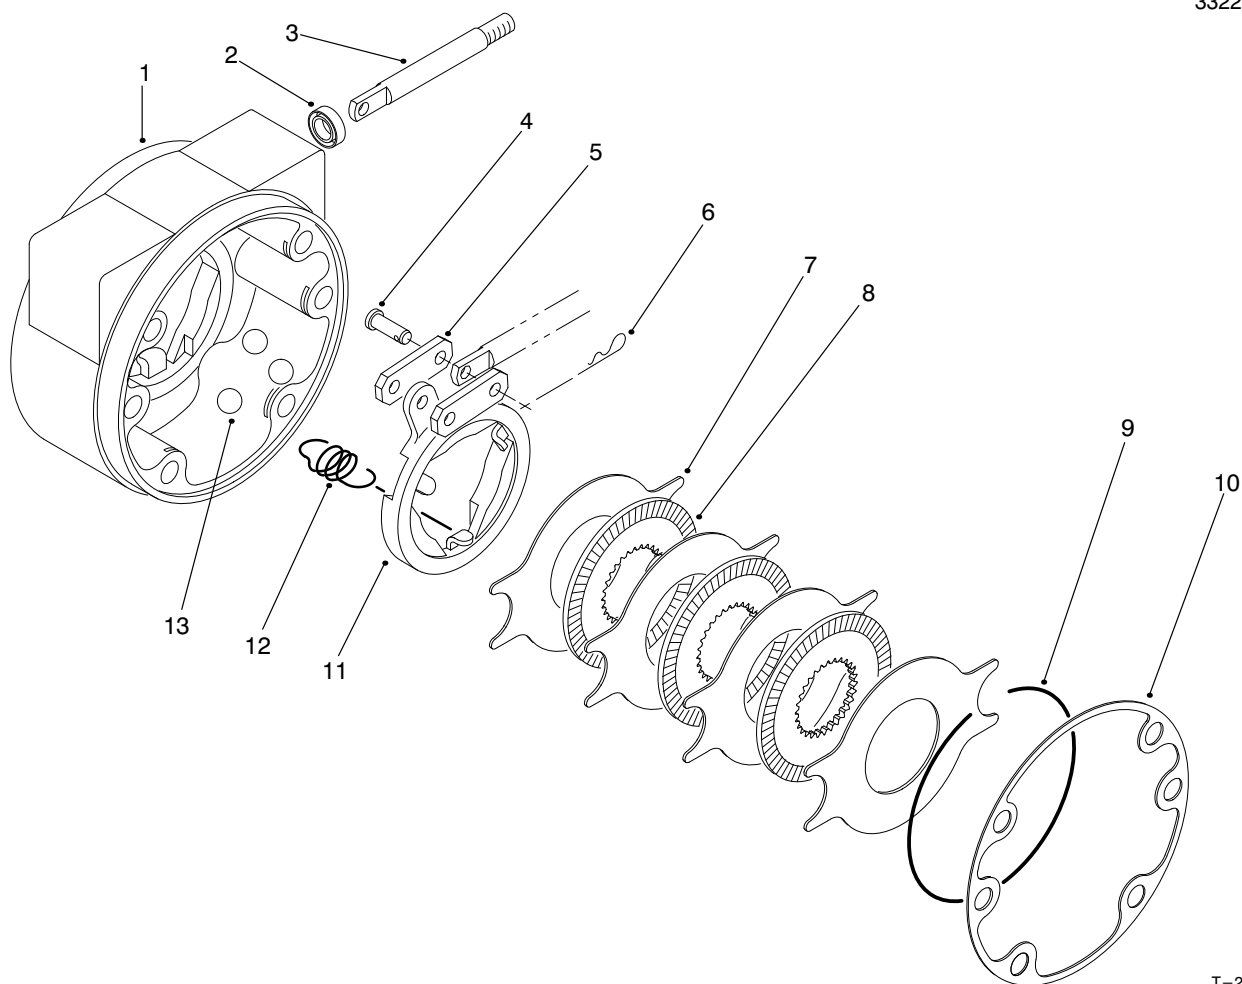


T-2071-1

BRAKE ASSEMBLY 92-7414 RH & 92-7417 LH (Shown)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Housing-Brake, LH	1	7	93-7986	Disc-Stationary	4
†*		Housing-Brake, RH	1	8	93-7981	Disc-Rotating	3
2	93-7977	Seal	1	9	93-7976	Ring-Retaining	1
3	93-7978	Rod-Pull	1	10	93-7984	Gasket	1
4	93-7983	Pin-Clevis	2	11	93-7982	Actuator	1
5	93-7980	Link	2	12	93-7987	Spring-Extension	3
6	93-7979	Pin-Cotter, Hair	2	13	93-7985	Ball	3

*Not Illustrated

 †Not Serviced Separately

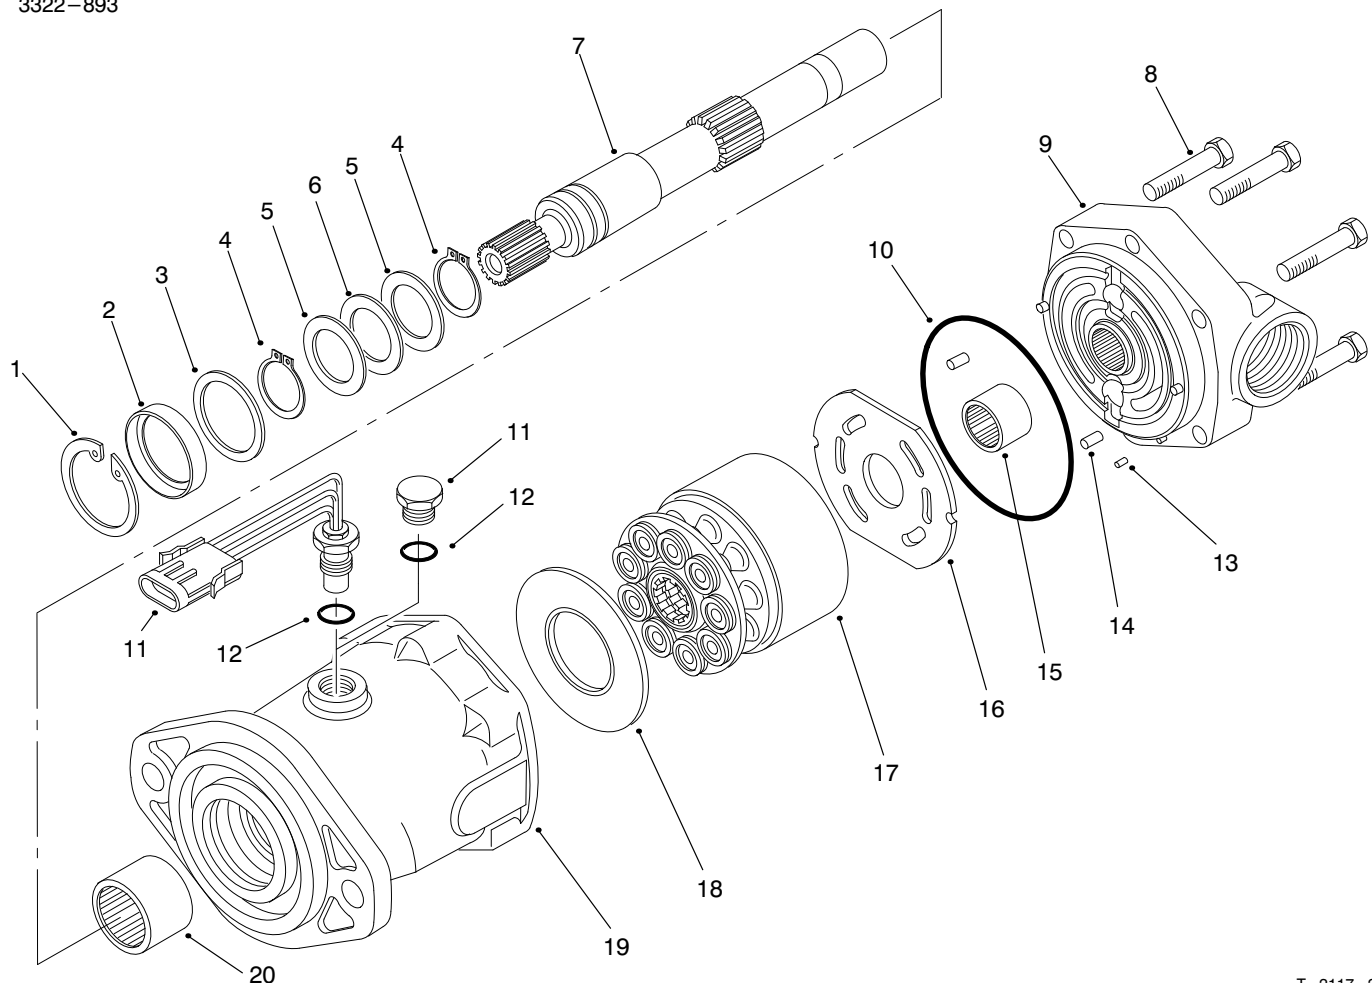

T-2117-2


HYDRAULIC MOTOR ASM NO. 92-7385 RH & 93-7476 LH

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	94-3008	Seal-Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3004	Shaft-Drive, Splined	1
8	94-3002	Screw-HH	6
9	94-3005	Asm-Backplate (Incl. Ref. #13-15)	1
10	76-6980	O-Ring	1
†11	94-3009	Asm-Plug (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
‡11	94-3010	Sensor-Speed Pickup (Incl. Ref. #12)	1
12		O-Ring	1
13		Pin-Dowel	1
14		Pin-Dowel	3
15		Bearing-Needle	1
16	94-3003	Plate-Valve	1
17	76-6910	Kit-Rotating	1
18	76-6970	Insert-Camplate	1
19	94-3006	Housing (Incl. Ref. #20)	1
20		Bearing-Needle	1

† Used on 93-7385 RH Motor.

 
‡ Used on 93-7476 LH Motor.

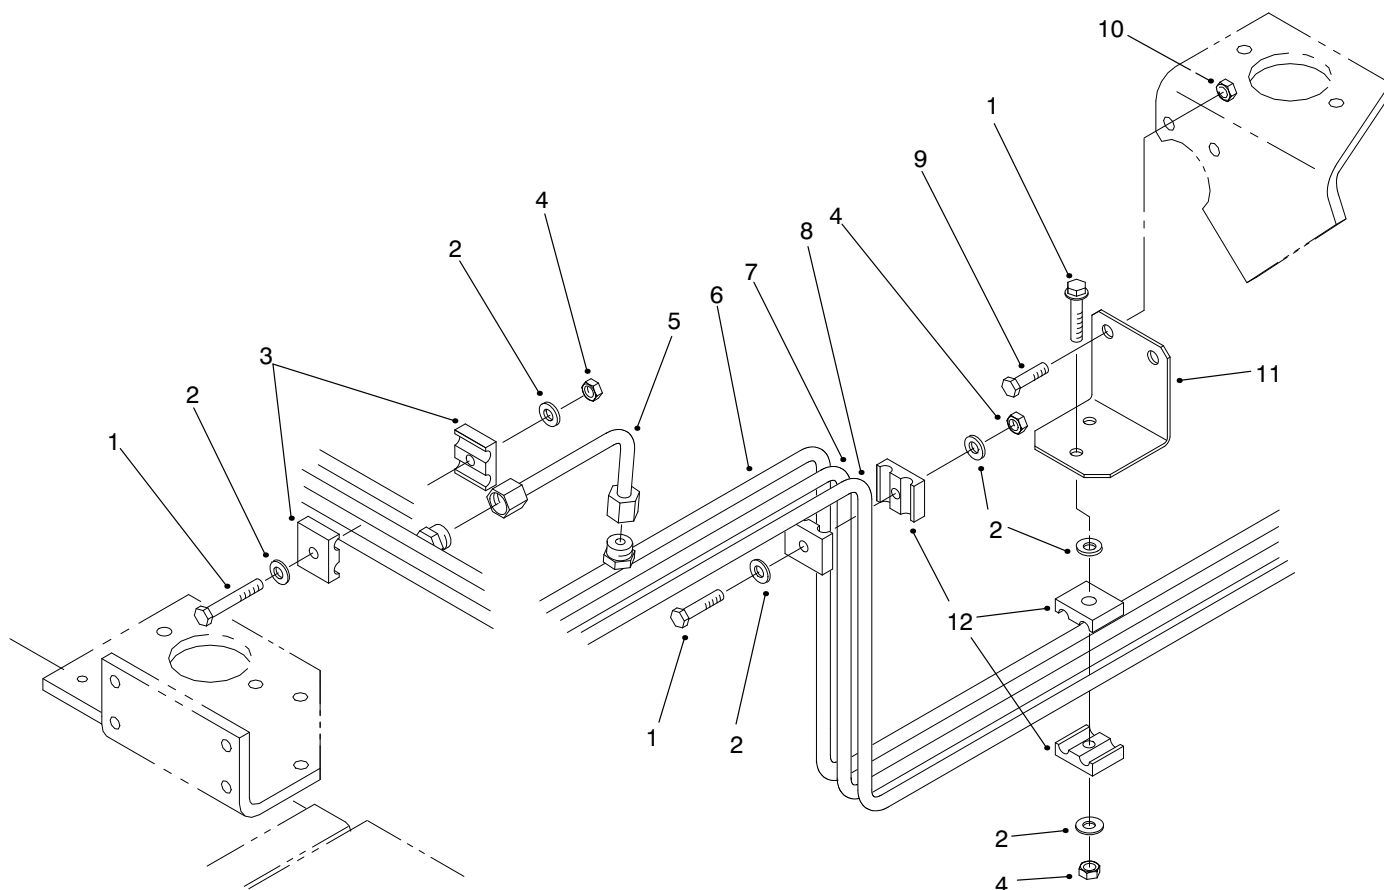

T-2365-1

HYDRAULIC TUBES & CLAMPS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-7	Screw-HH	3	7	92-7494	Asm-Tube, Rear Steering	1
2	3256-23	Washer-Flat	7	8	92-7495	Asm-Tube, Rear Steering	1
3	56-7972	Clamp-Tube	2	9	323-6	Screw-HH	2
4	3296-47	Nut-Lock	3	10	32128-21	Nut-HFH	2
5	93-4206	Asm-Tube, Drain	1	11	94-2834	Bracket-Clamp	1
6	92-7553	Asm-Tube, Rear Drain	1	12	56-7973	Clamp-Tube	4

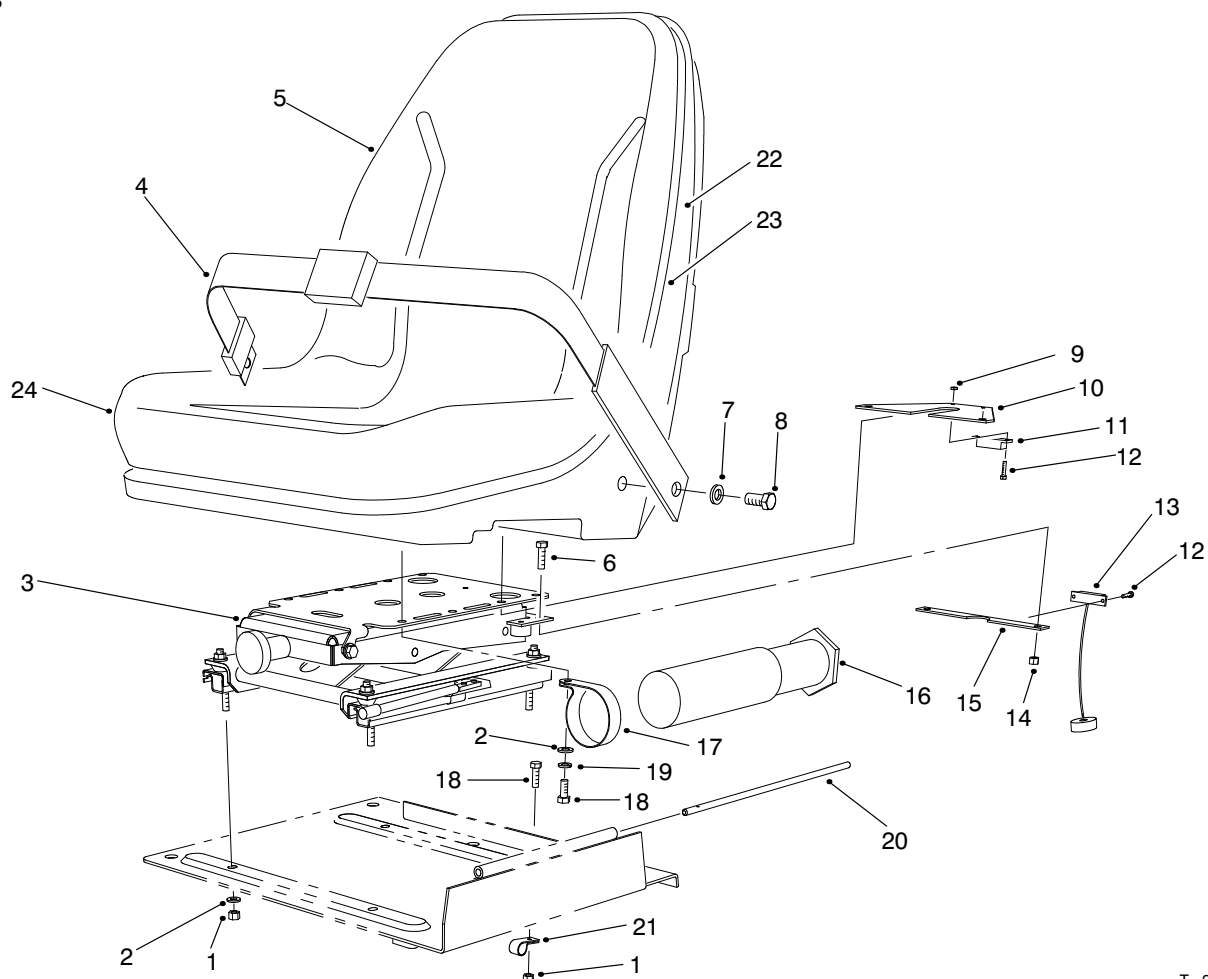 


T-2064-2

SEAT FRAME & THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut-Lock	5
2	3256-23	Washer-Flat	4
3		Suspension-Seat	1
4	21-4191	Asm-Seat Belt	1
5	92-1180	Asm-Seat (Incl. Ref. #22-24)	1
6	323-4	Screw-HH	2
7	3253-6	Washer-Lock	2
8	3212-4	Screw	2
9	3296-54	Nut-Lock	4
10	75-4370	Bracket-Seat	1
11	92-8753	Magnet-Switch, Reed	1
12	3250-29	Screw	4


Ref. No.	Part No.	Description	No. Used
13	92-8001	Sensor-Switch, Reed	1
14	3296-39	Nut-Lock	2
15	75-4360	Bracket-Suspension, Seat	1
16	74-0720	Tube-Manual	1
17	2412-133	Clamp-R	2
18	322-3	Screw-HH	2
19	3253-4	Washer-Lock	4
20	75-3400	Shaft-Pivot, Seat	1
21	2412-93	Clamp-R	1
22	92-6534	Shell	1
23	351-78	Edging	1
24	92-6533	Kit-Cushion	1

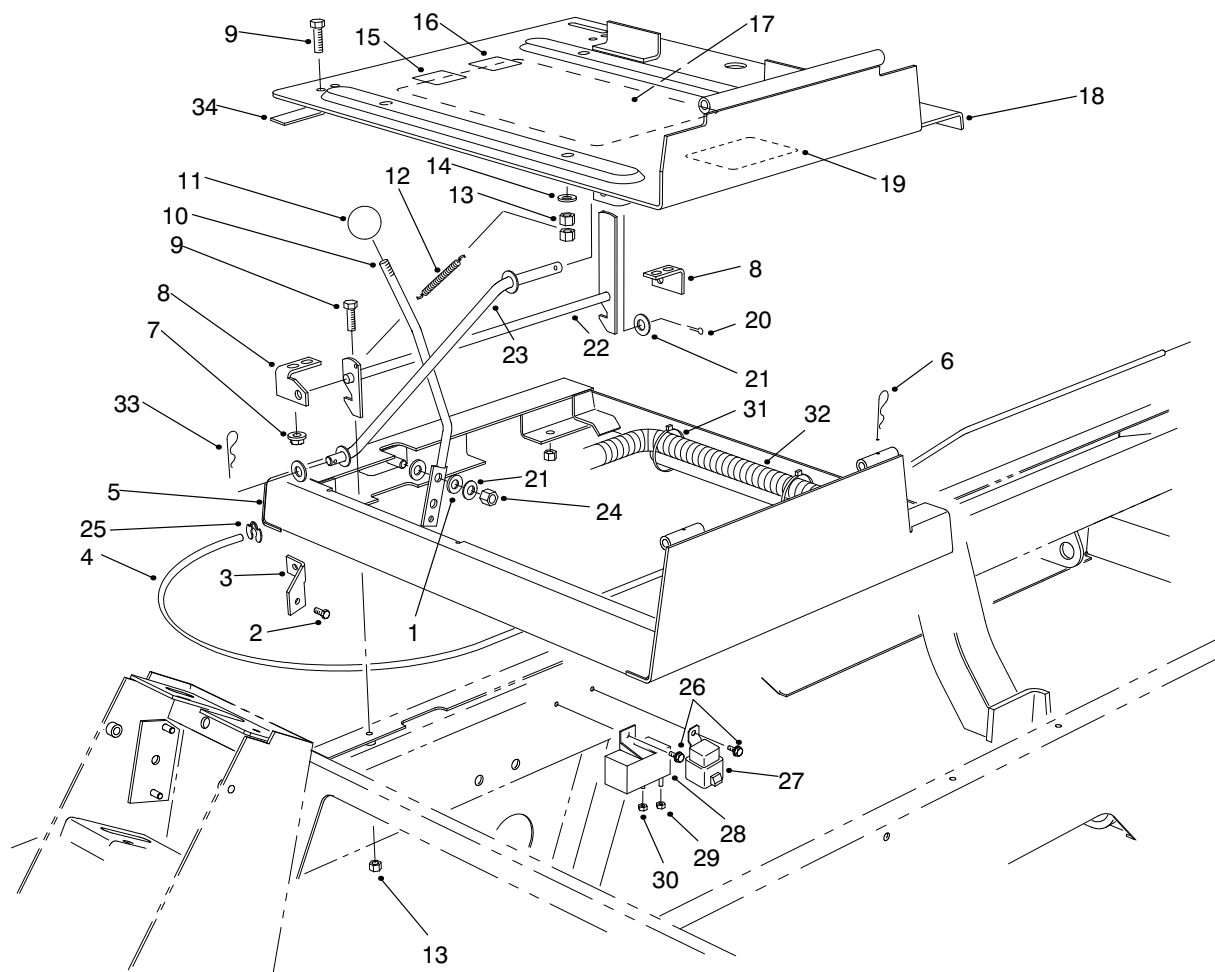 

T-2065-2

SEAT FRAME & THROTTLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-2920	Washer-Nylon	2	18	98-2350	Plate-Seat	1
2	49-2040	Screw-HH	1	19	98-8108	Decal-Rear Manifold Block	1
3	92-7396	Mount-Cable	1	19	94-2919	Decal-Rear Manifold (Japan)	1
4	92-7520	Cable-Throttle	1	20	3272-10	Pin-Cotter	1
5	98-2352	Frame-Seat	1	21	3256-24	Washer-Flat	3
6	3290-467	Pin-Cotter, Hair	1	22	98-2354	Latch-Seat	1
7	32128-25	Nut-HFH	4	23	75-3680	Rod-Seat	1
8	98-2353	Bracket-Latch, Seat	2	24	3296-39	Nut-Lock	1
9	322-3	Screw-HH	8	25	52-5910	Ring-Retaining	1
10	93-7598	Lever-Throttle	1	26	32144-10	Screw	2
11	233-42	Knob	1	27	70-1480	Relay	1
12	66-4190	Spring	1	28	76-5260	Relay-Glow Plug	1
13	3296-29	Nut-Lock	5	29	48-7880	Nut	1
14	3256-23	Washer-Flat	4	30	48-7890	Nut	1
15	63-9920	Decal-EEC 105 DBA	1	31	3290-378	Tie-Cable	2
16	85-6910	Decal-EEC 86 DBA	1	32	99-8963	Harness-Wire, Main	1
17	98-8110	Decal-Instructions, Clip	1	33	3290-307	Pin-Cotter, Hair	1
17	95-3477	Decal-Clip (Japan)	1	34	94-8146	Strip-Foam, Seat	1

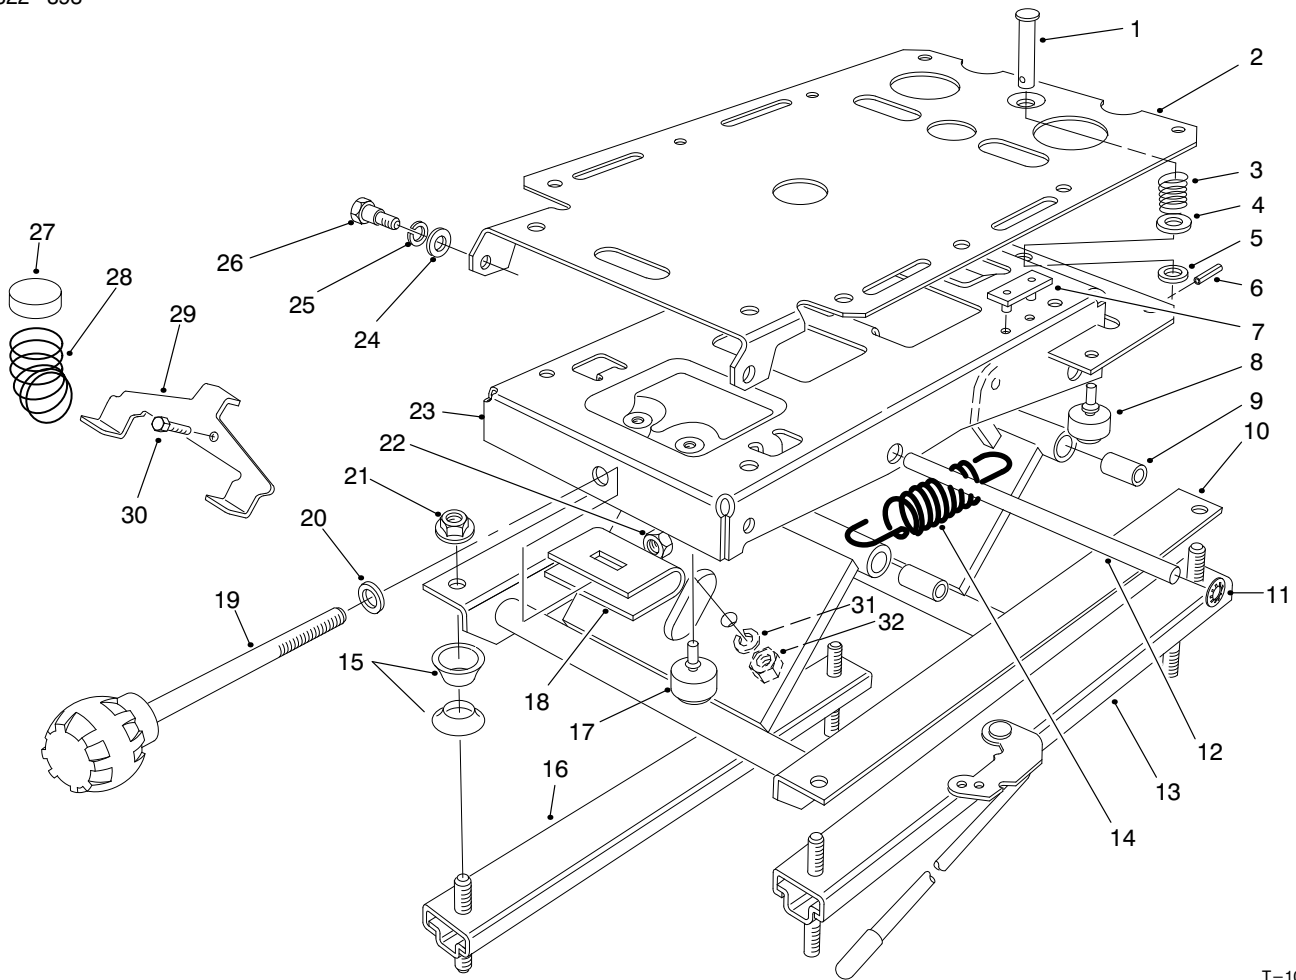 


T-1031-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin-Clevis	1
2	75-3580	Plate-Mounting, Seat	1
3	75-3530	Spring-Compression	1
4	3256-5	Washer-Flat	1
5	3256-24	Washer-Flat	1
6	75-3540	Pin-Roll	1
7	75-3550	Bumper-Seat	2
8	76-2940	Bumper-Rubber	2
9	76-1920	Bushing-Sleeve	4
10	66-8610	Weldment-Lower	1
11	66-8560	Nut-Push	4
12	76-1910	Shaft-Pivot	2
13	82-9060	Adjuster W/Handle	1
14	76-1940	Spring-Extension	2
15	66-9290	Spacer	6
16	66-8530	Adjuster	1


Ref. No.	Part No.	Description	No. Used
17	66-8520	Bumper-Down Stop	2
18	77-2870	Weldment-Hanger	1
19	76-1930	Knob-Tension Adjustment	1
20	3256-46	Washer-Flat	1
21	32128-26	Nut-HFH	4
22	3296-44	Nut-Lock	1
23	75-3480	Weldment-Upper	1
24	3256-26	Washer-Flat	2
25	3253-6	Washer-Lock	2
26	75-3510	Bolt-Shoulder	2
27	93-3164	Cap	2
28	93-3163	Spring	1
29	93-3165	Bracket	1
30	322-6	Screw-HH	1
31	3253-33	Washer-Lock	1
32	3217-6	Nut-Jam	1

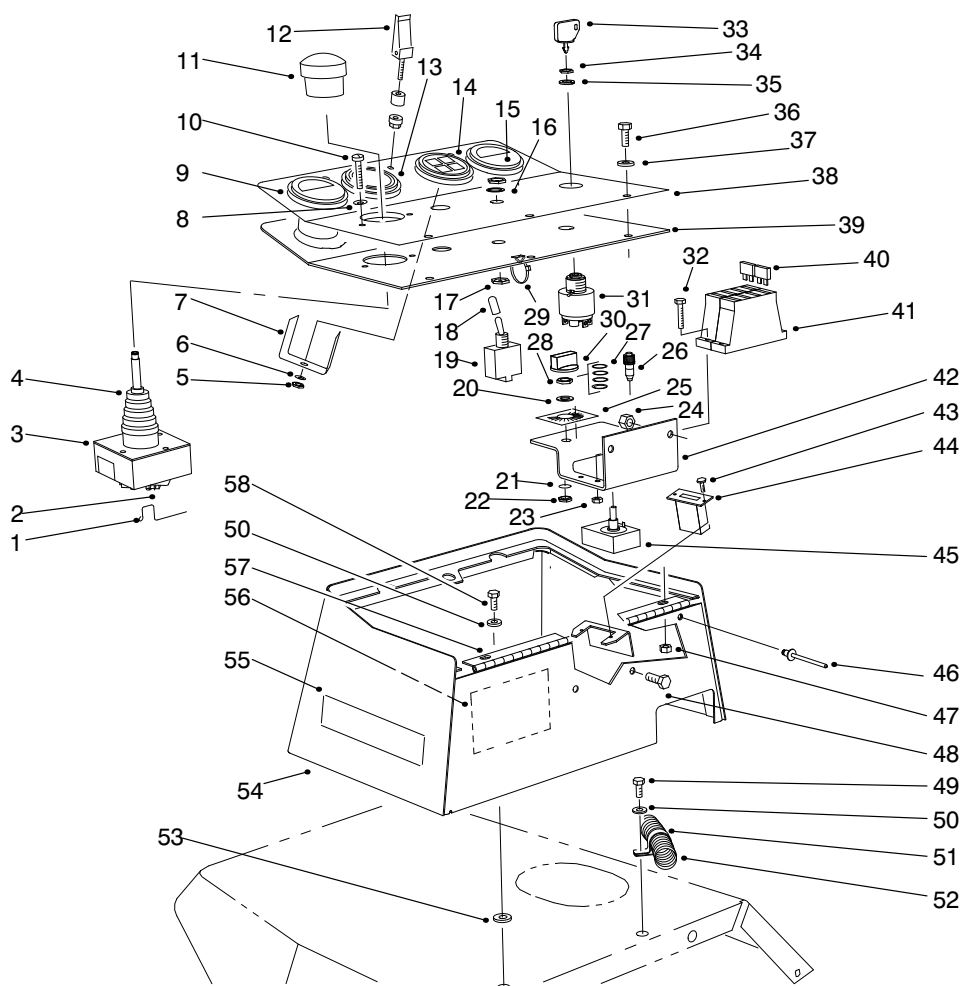 

T-3217

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-2602	Actuator-Joystick	2	23	3296-2	Nut-Lock	4
2	94-2601	Microswitch-Interlock	2	24	3296-42	Nut-Lock	2
3	93-9196	Joystick-6 Position (Incl. Ref. #1-2, 4 & 11)	1	25	93-1268	Decal-HOC Selector	1
4	94-2600	Boot	1	25	94-4582	Decal-HOC Selector (Japan)	1
5	3217-26	Nut	1	†26	85-4491	Lamp-Diagnostic	1
6	3254-1	Washer-Lock	1	27	237-7	O-Ring	4
7		Clamp	1	28	3220-24	Nut-Lock	1
8	3256-75	Washer-Flat	4	29	3290-378	Tie-Cable	2
9	93-8497	Gauge-Fuel (Incl. Ref. #52-56)	1	30	85-4480	Knob	1
10	60-6500	Screw-Pan Hd.	4	31	27-2360	Switch-Ignition (Incl. Ref. #34 & 35)	1
11	3290-489	Knob-Cap Style	1	32	32105-13	Screw-HH	4
12	74-5950	Latch-Swell	1	33	63-8360	Key-Ignition	1
13	93-7484	Light-Warning Bank (Incl. Ref. #5-7 & 59-60)	1	34	218-447	Nut-Hex	1
14	93-7483	Light-Warning Bank (Incl. Ref. #5-7 & 59-60)	1	35	218-446	Washer-Lock	1
15	76-9060	Gauge-Temperature (Incl. Ref. #57-58)	1	36	3258-166	Screw	3
16	218-589	Washer-Lock	3	37	3256-1	Washer-Flat	3
17	218-498	Nut-Hex.	6	38	99-8964	Decal-Console	1
18	94-2613	Sleeve-Switch, Red	1	38	99-8969	Decal-Console (Japan)	1
19	99-8352	Switch (Incl. Ref. #16, 17 & 61-62)	2	39	94-1401	Cover-Box, Control	1
20	3254-6	Washer-Lock	1	†40	94-6710	Fuse-2A	1
21		Washer-Lock	1	†*	218-574	Fuse-7.5A	1
22		Nut-Lock	1	*	218-578	Fuse-10A	4
				*	218-581	Fuse-15A	1
				*	218-594	Fuse-20A	1
				†41	67-7160	Block-Fuse	2
				42	93-7587	Bracket-Fuse Block	1

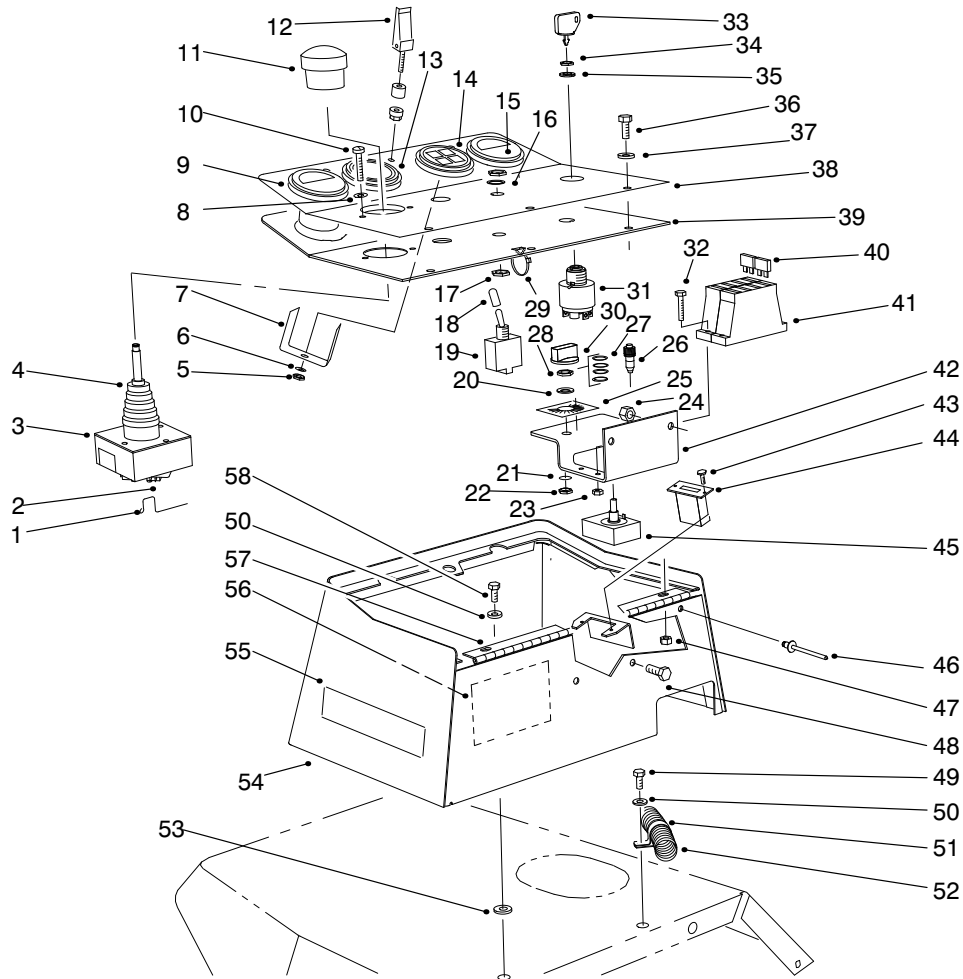 


T-3217

CONTROL CONSOLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	32144-18	Screw-HWH	2	54	75-5740	Box-Control	1
44	75-6820	Hour Meter	1	55	93-6689	Decal-No Riders	1
45	85-4470	Potentiometer (Incl. Ref. #20 & 28) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1	55	84-3420	Decal-No Riders (Japan)	1
46	93-8744	Rivet-Pop	3	56	94-6349	Decal-Fuse	1
47	32128-33	Nut-HFH	3	56	94-3091	Decal-Fuse (Japan)	1
48	321-39	Screw-HH	2	57	75-5780	Hinge-Cover	1
49	322-5	Screw-HH	1	58	322-3	Screw-HH	3
50	3256-23	Washer-Flat	3	*59	87-6270	Socket-Light	4
51	2412-126	Clamp-R	1	*60	219-17	Bulb	4
52	94-3090	Harness-Wire, Main	1	*61	3217-25	Nut-Hex.	2
52	99-8963	Harness-Wire, RM6700D	1	*62	3253-15	Washer-Lock	2
53	66-2920	Washer	3	*63	3217-29	Nut-Hex.	6
				*64	3255-24	Washer-Lock	3
				*65	3219-14	Nut-Hex.	8
				*66	3253-2	Washer-Lock	5
				*	94-6343	Decal-Wire Ident. #1	1
				*	94-6344	Decal-Wire Ident. #2	1

*Not Illustrated

 
† Included in main wire harness.

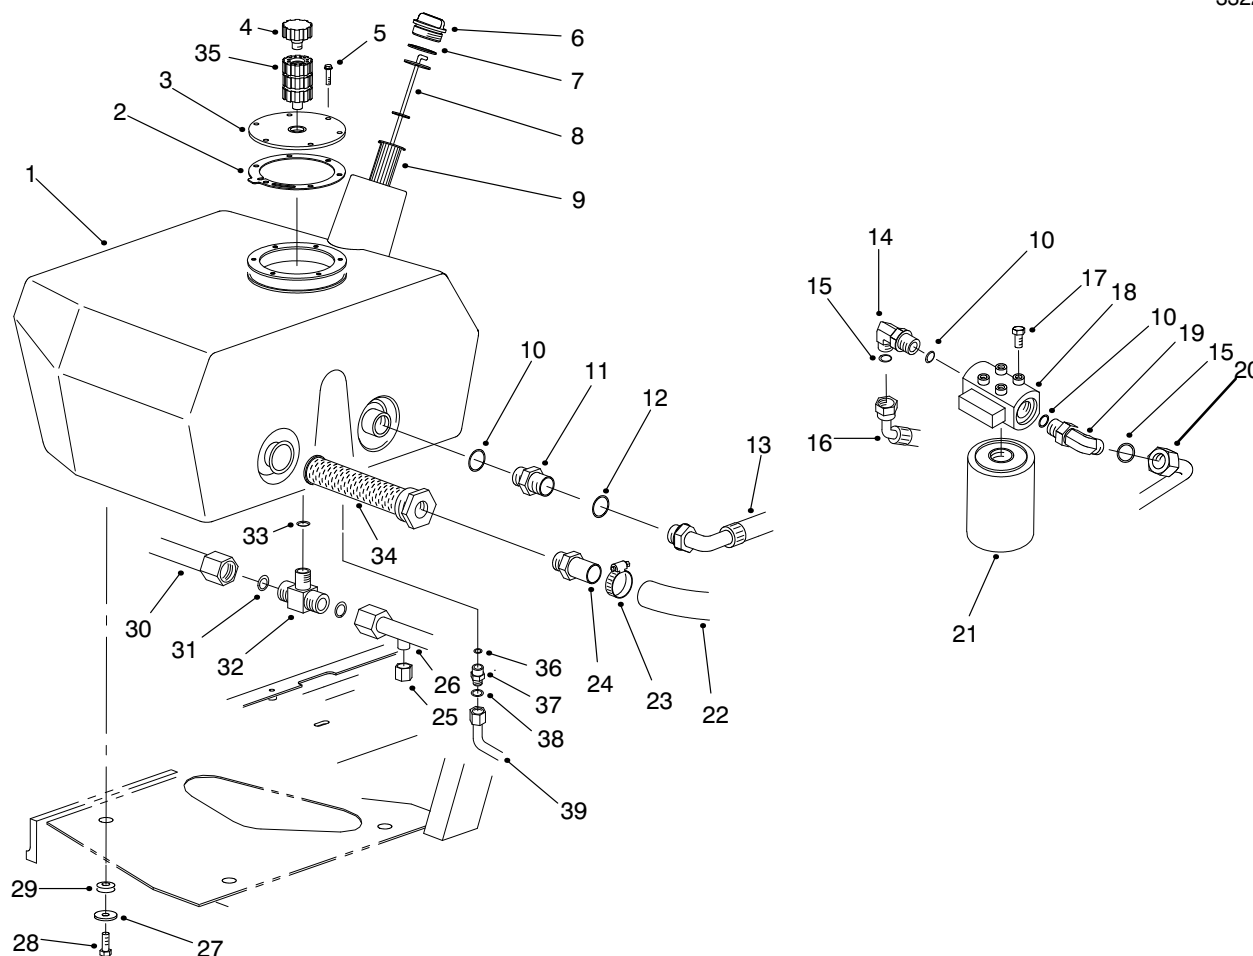

T-2067-1

HYDRAULIC FILTER & RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7488	Tank-Hydraulic	1	20	92-7493	Hose-Filter	1
2	93-7499	Gasket-Flange	1	21	94-2621	Element	1
3	99-2580	Cover-Tank	1	22	92-7465	Hose-Suction	1
4	68-6150	Breather-Air	1	23	2412-111	Clamp	1
5	33104-020	Screw-HHF	6	24	92-7525	Fitting-Hose	1
6	93-7498	Plug-Plastic	1	25	92-7551	Cap-Fitting	1
7	94-8166	O-Ring	1	26	94-1446	Tube-Drain	1
8	75-3710	Dipstick	1	27	63-8410	Washer-Flat	3
9	61-2790	Filter-Screen	1	28	33105-025	Screw-HHF	3
10	237-81	O-Ring	3	29	240-11	Grommet	3
11	340-9	Fitting-Hydraulic (Incl. Ref. #10 & 12)	1	30	92-7478	Tube-Motor, RH	1
12	237-58	O-Ring	1	31	237-30	O-Ring	2
13	92-7489	Hose-Return	1	32	340-157	Fitting-Tee (Incl. Ref. #31 & 33)	1
14	340-139	Fitting-Elbow 90° (Incl. Ref. #10 & 15)	1	33	237-79	O-Ring	1
15	237-65	O-Ring	2	34	92-7527	Strainer-Suction	1
16	92-7490	Hose-Filter	1	35	92-8020	Adapter-Breather	3
17	3234-1	Screw	2	36	237-42	O-Ring	1
18	94-2620	Head-Filter (Incl. Ref. #21)	1	37	340-2	Adapter (Incl. Ref. #36 & 38)	1
19	340-142	Fitting-Hydraulic 90° (Incl. Ref. #10 & 15)	1	38	237-22	O-Ring	1
				39	94-1447	Tube-Steering, Return	1

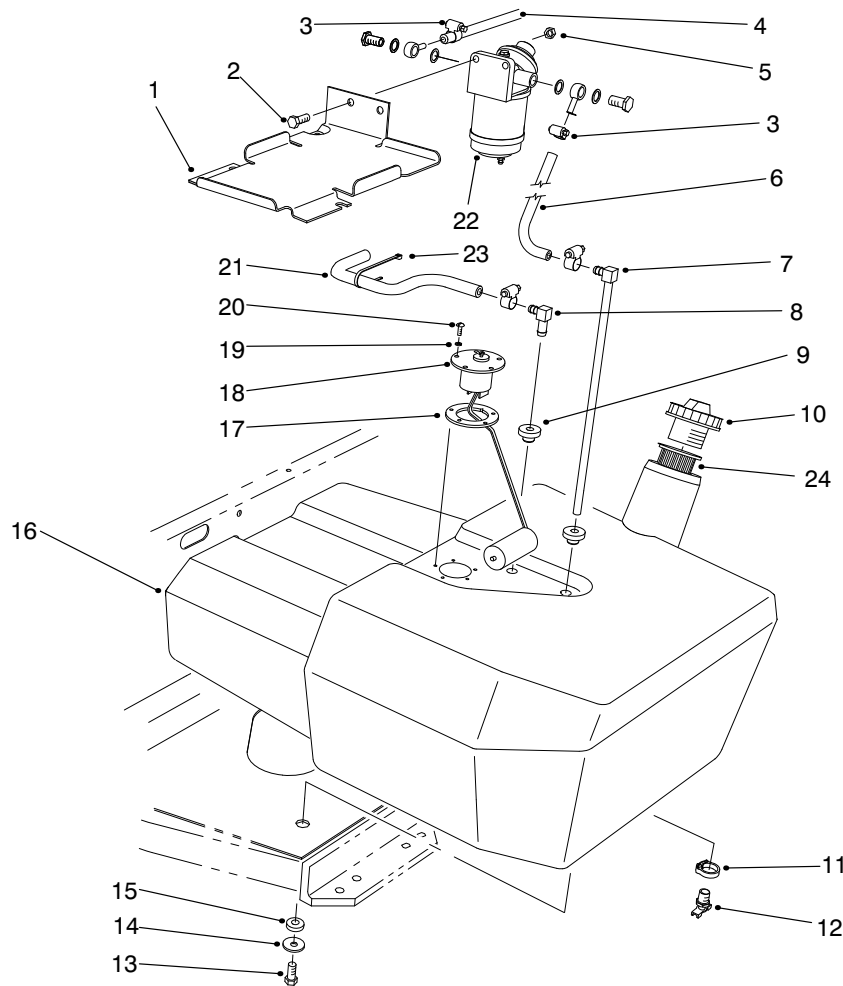 


T-2068-1

FUEL TANK & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7974	Plate-Box, Battery	1	14	63-8410	Washer-Flat	3
2	33105-030	Screw-HHF	2	15	240-11	Grommet	3
3	2412-108	Clamp-Hose	4	16	92-7422	Tank-Fuel (Incl. Ref. #11 & 12)	1
4	63-7627	Hose-Fuel	1	17	62-7650	Gasket	1
5	33005-00	Nut-HF	2	18	63-7640	Sender-Fuel	1
6	92-7522	Hose-Fuel	1	19	3253-15	Washer-Lock	5
7	66-8121	Standpipe	1	20	32122-24	Screw	5
8	46-6550	Fitting-Connector	1	21	92-7521	Hose-Fuel	1
9	46-6560	Bushing	2	†22	76-5300	Asm-Filter, Fuel	1
10	93-3102	Cap-Fuel, Diesel	1	23	3290-378	Tie-Cable	3
11	2412-36	Clamp-Drain	1	24	61-2790	Filler-Screen	1
12	304-46	Fitting-Drain	1				
13	33105-025	Screw-HHF	3				

 
†Furnished with engine.

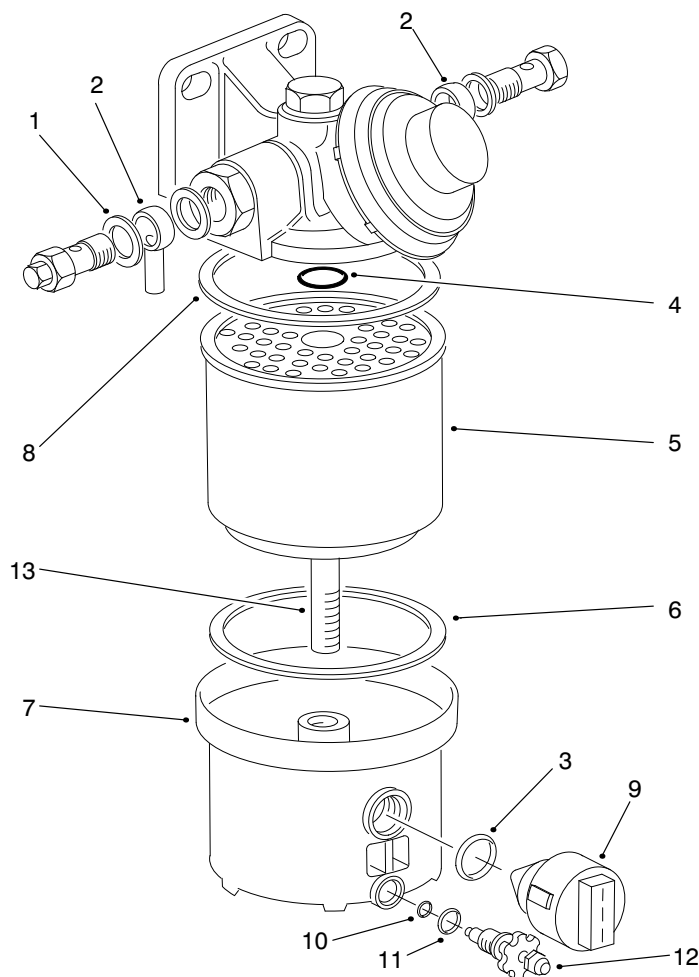

T-0966-2

FUEL FILTER ASSEMBLY NO. 76-5300

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer-Copper	4	9	76-5320	Sensor-Water (Incl. Ref. #3)	1
2	76-5190	Fitting-Adjustable	2	10	94-8027	O-Ring	1
3	94-8025	O-Ring	1	11	94-8028	O-Ring	1
4		O-Ring	1	12	94-8026	Asm-Vent (Incl. Ref. #10 & 11)	1
5	76-5220	Element-Filter (Incl. Ref. #4, 6 & 8)	1	13		Bolt	1
6		Seal-Gasket	1				
7		Cap-Filter, Fuel	1				
8		Seal-Gasket	1				

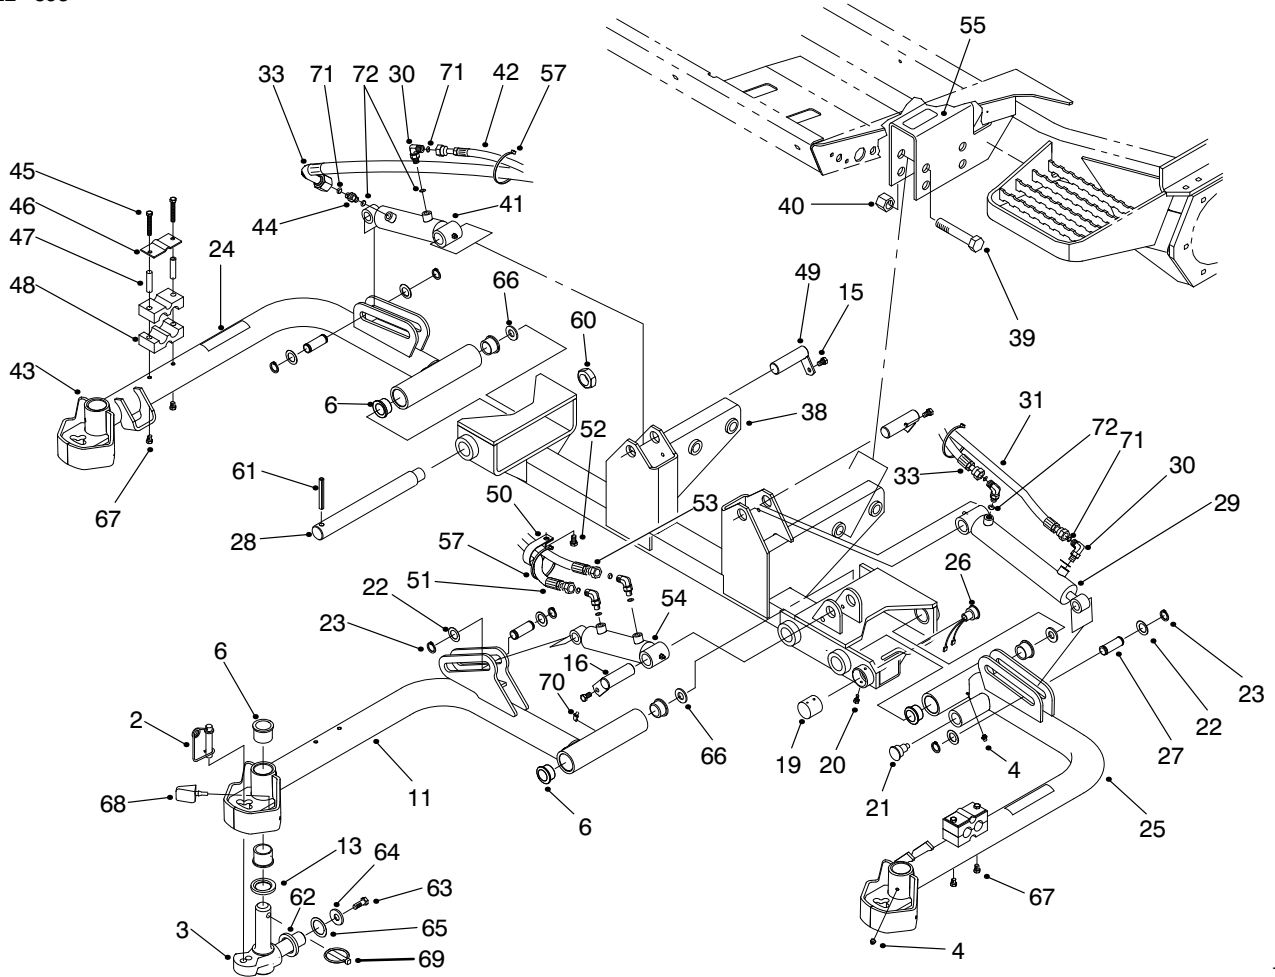 


T-2986

FRONT LIFT ARMS ASSEMBLY – NO. 1, 4 & 5

Ref. No.	Part No.	Description	No. Used
2	99-5610	Pin	3
3	98-1880	Knuckle-Pivot	3
4	302-5	Fitting-Grease	5
6	94-8947	Bushing-Flange	12
11	99-2561	Asm-Arm, Lift No. 1	1
13	94-8946	Washer	3
15	32144-14	Screw-HWHTF	3
16	83-6970	Pin-Cylinder, Short	1
19	75-6370	Cap-Sensor	1
20	32104-76	Screw-TAP	2
21	92-8754	Magnet-Switch, Reed	1
22	94-9998	Washer-Thrust	6
23	94-9974	Ring-Retaining	6
24	93-6687	Decal-No Step	2
24	94-4584	Decal-Warning, Japan	2
25	99-2564	Arm-Lift No. 4	1
26	92-8002	Sensor-Switch, Reed	1
27	75-5350	Pin-Slide, Cylinder	3
28	95-7158	Pin-Pivot	3
29	98-8811	Cylinder-Hydraulic No. 4	1
30	340-132	Fitting-90° (Incl. Ref. #71 & 72)	5
31	82-6490	Hose	1
33	75-5890	Hose	1
38	99-5615	Asm-Frame, Carrier	1
39	328-7	Screw-HH	4
40	3296-51	Nut-Lock	4
41	98-8069	Cylinder-Hydraulic No. 5	1
42	92-7564	Asm-Hose	1


Ref. No.	Part No.	Description	No. Used
43	99-2565	Arm-Lift No. 5	1
44	340-92	Fitting-Straight (Incl. Ref. #71 & 72)	1
45	60-6700	Screw-HH	6
46	93-7961	Clamp-Drain, Case	3
47	93-7960	Spacer	6
48	82-8170	Clamp	6
49	83-6780	Pin-Cylinder	2
50	2412-96	Clamp-R	1
51	92-7565	Asm-Hose	1
52	322-4	Screw-HH	1
53	92-7562	Asm-Hose	1
54	93-2650	Cylinder-Hydraulic No.1	1
55	93-6693	Decal-Plate, Floor	1
57	3290-378	Tie-Cable	3
60	3296-49	Nut-Lock	3
61	32121-110	Pin-Spring	3
62	98-7974	Washer-Thrust	3
63	98-7993	Screw-Flange Head	3
64	3256-6	Washer-Flat	3
65	3-6781	Washer-Thrust	3
66	76-2980	Washer-Thrust	3
67	33114-010	Screw-HH	4
68	98-9976	Bumper	6
69	283-71	Pin-Lynch	3
70	302-60	Fitting-Grease 90°	1
71	237-21	O-Ring	6
72	237-78	O-Ring	6

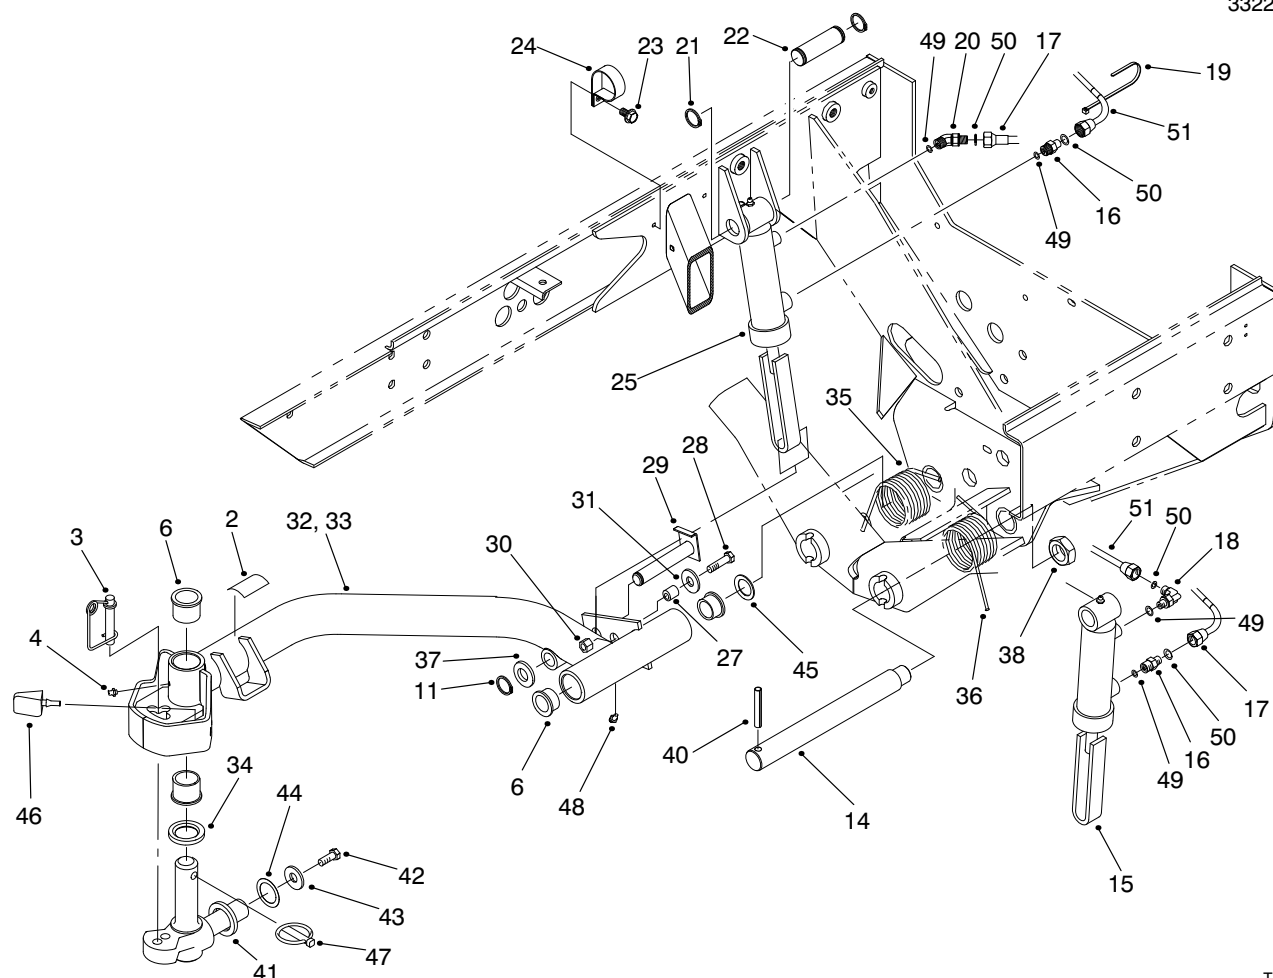 

T-3218

REAR LIFT ARM ASSEMBLY – NO. 2 & 3

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-1880	Knuckle-Pivot	2	29	99-2560	Pin	2
2	93-6696	Decal-Danger	2	30	3296-29	Nut-Lock	2
3	99-5610	Pin	2	31	3256-3	Washer-Flat	2
4	302-5	Fitting-Grease	2	32	99-2563	Lift Arm-#3	1
6	94-8947	Bushing-Flange	8	33	99-2562	Lift Arm-#2	1
11	94-9974	Ring-Retaining	2	34	94-8946	Washer-PM	2
14	95-7158	Pin-Pivot	2	35	99-5608	Spring-Torsion, RH	2
15	98-8813	Cylinder-Hyd. No. 2	1	36	99-5609	Spring-Torsion, LH	2
16	340-92	Fitting-Hydraulic (Incl. Ref. #49 & 50)	2	37	67-6570	Spacer-Wheel	2
17	92-7636	Asm-Hose	1	38	3296-49	Nut-Lock	2
18	340-132	Fitting-Hydraulic 90° (Incl. Ref. #49 & 50)	1	40	33104-010	Screw-HH	2
19	3290-378	Tie-Cable	2	41	98-7974	Washer-Thrust	2
20	340-103	Fitting-Hydraulic 45° (Incl. Ref. #49 & 50)	1	42	98-7993	Screw-Flange Head	2
21	32151-36	Ring-Retaining	4	43	3256-6	Washer-Flat	2
22	92-7548	Pin-Cylinder	2	44	3-6781	Washer-Thrust	2
23	32144-11	Screw-Self Tapping	1	45	76-2980	Washer-Thrust	2
24	2412-96	Clamp-R	1	46	99-5605	Bumper	4
25	98-8812	Cylinder-Hyd. No. 3	1	47	283-71	Pin-Lynch	2
27	82-6840	Spacer	2	48	302-11	Fitting-Grease	2
28	322-7	Screw-HH	2	49	237-78	O-Ring	4
				50	237-21	O-Ring	4
				51	92-7638	Asm-Hose	1

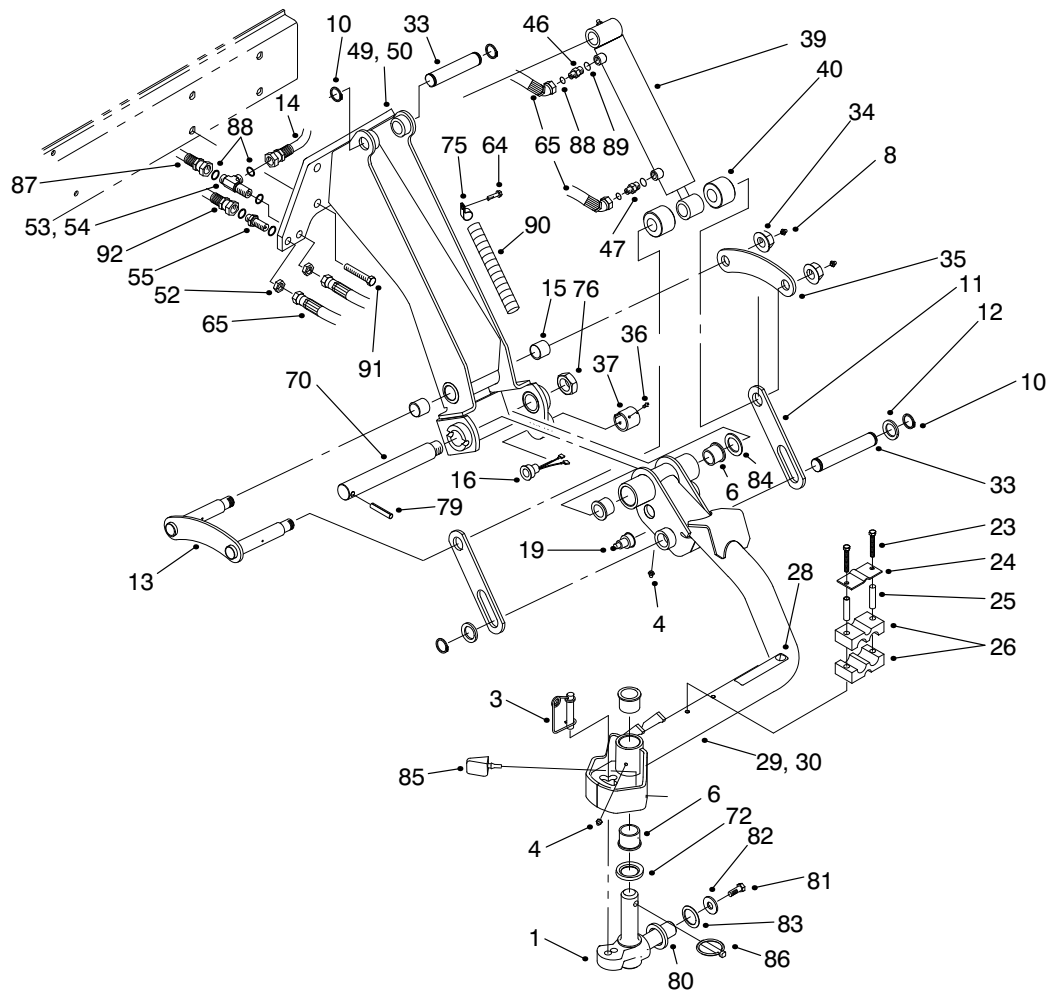 


T-2988

WING LIFT ARM ASSEMBLY—NO. 6 & 7

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7637	Asm—Hose	1	47	94-1449	Fitting—Valve, Restrictor (Incl. Ref. #88 & 89)	2
3	99-5610	Pin	2	49	98-2427	Asm—Support, Arm	1
4	302-5	Fitting—Grease	4	50	98-2426	Asm—Support, Arm	1
6	94-8947	Bushing—Flange	8	52	340-78	Nut—Bulkhead	4
8	302-2	Fitting—Grease	4	53	340-75	Fitting—Bulkhead, Tee LH (Incl. Ref. #88)	1
10	32151-36	Ring—Retaining	8	54	94-1443	Fitting—Bulkhead, 90° RH (Incl. Ref. #88)	1
11	93-2704	Link—Lift	4	55	94-1444	Fitting—Bulkhead, Straight (Incl. Ref. #88)	2
12	256-115	Washer—Thrust	4	64	32144-11	Screw—TAP	6
13	98-8823	Link—Welded	2	65	92-7643	Asm—Hose	4
14	92-7637	Asm—Hose	1	70	98-8826	Pin—Pivot	2
15	67-1750	Bushing—Axle	4	72	94-8946	Washer—PM	2
16	92-8002	Sensor—Switch, Reed	2	75	2412-93	Clamp—R	6
19	92-8754	Magnet—Switch, Reed	2	76	3296-49	Nut—Lock	2
23	60-6700	Screw—HH	4	79	32121-110	Pin—Spring	2
24	93-7961	Clamp—Drain, Case	2	80	98-7974	Washer—Thrust	2
25	93-7960	Spacer	4	81	98-7993	Screw—HFH	2
26	82-8170	Clamp	4	82	3256-6	Washer—Flat	2
28	93-6687	Decal—No Step	2	83	3-6781	Washer—Thrust	2
28	94-4584	Decal—Warning (Japan)	2	84	76-2980	Washer—Thrust	2
29	99-2566	Asm—Arm, Lift No. 6	1	85	99-5605	Bumper	4
30	99-2567	Asm—Arm, Lift No. 7	1	86	283-71	Pin—Lynch	2
33	93-2699	Pin	4	87	92-7640	Asm—Hose	1
34	33029-00	Nut—Lock	4	88	237-21	O—Ring	14
35	98-8821	Link—Rear	2	89	237-78	O—Ring	4
36	32104-76	Screw—TAP	4	90	92-7632	Harness—Wire, RM6700D	1
37	75-6370	Cap—Sensor	2	91	33108-035	Screw—HHF	6
39	93-2631	Cylinder—Lift	2				
40	93-2700	Roller—Plastic	4				
46	340-92	Fitting—Straight (Incl. Ref. #88 & 89)	2				

 *Not Illustrated

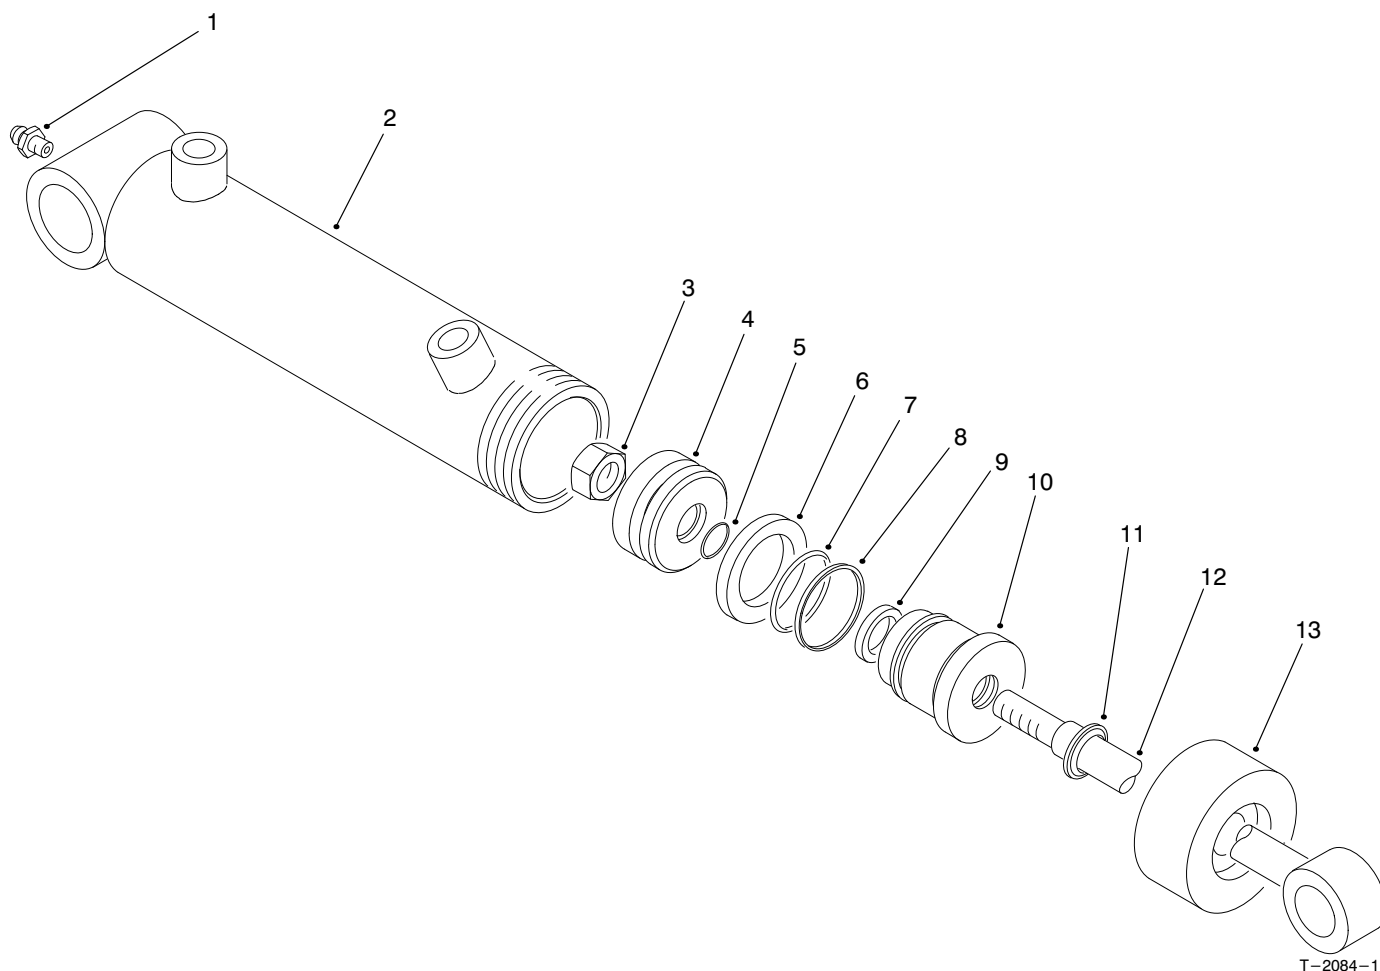


T-2084-1

HYDRAULIC LIFT CYLINDER NO. 1 (93-2650)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1	†9		Seal—Rod	1
†2		Asm—Barrel	1	10	93-7990	Head	1
3	32152-10	Nut—Lock	1	†11		Seal—Dust	1
4	70-2780	Piston	1	12	94-2644	Shaft With Clevis	1
†5		O—Ring	1	13	93-7991	Collar	1
†6		Seal—Special	1	*	86-7330	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O—Ring	1				
†8		Backup	1				

† Not Serviced Separately.

 *Not Illustrated

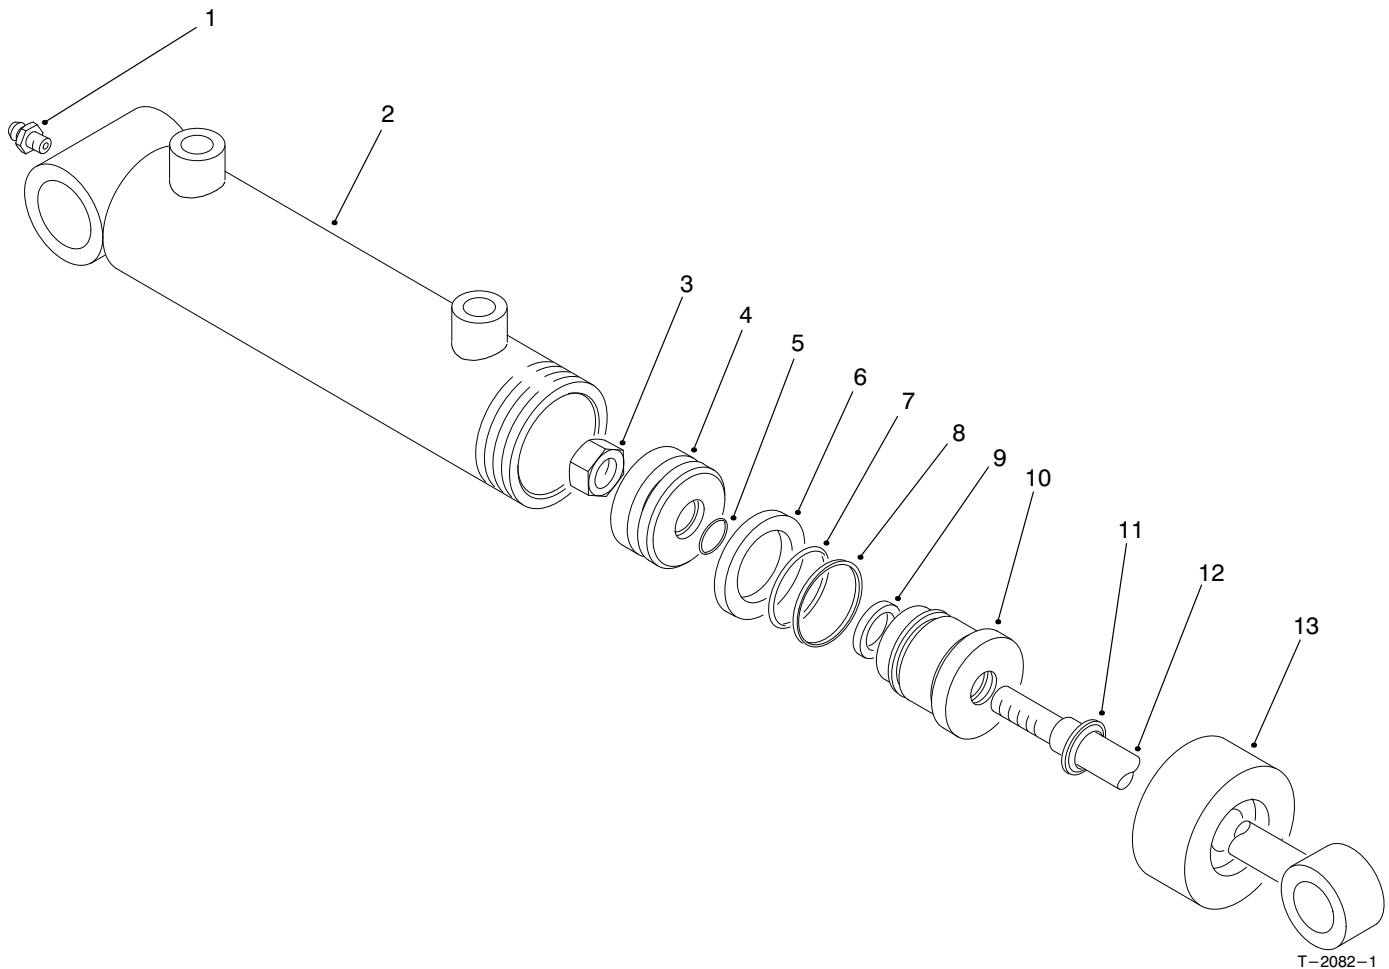

T-2082-1


HYDRAULIC LIFT CYLINDER NO. 4 (98-8811)

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1
†2		Asm—Barrel	1
3	32152-10	Nut—Lock	1
4	70-2780	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	98-7353	Head	1
†11		Seal—Dust	1
12	75-2120	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1

†Not Serviced Separately.

 *Not Illustrated

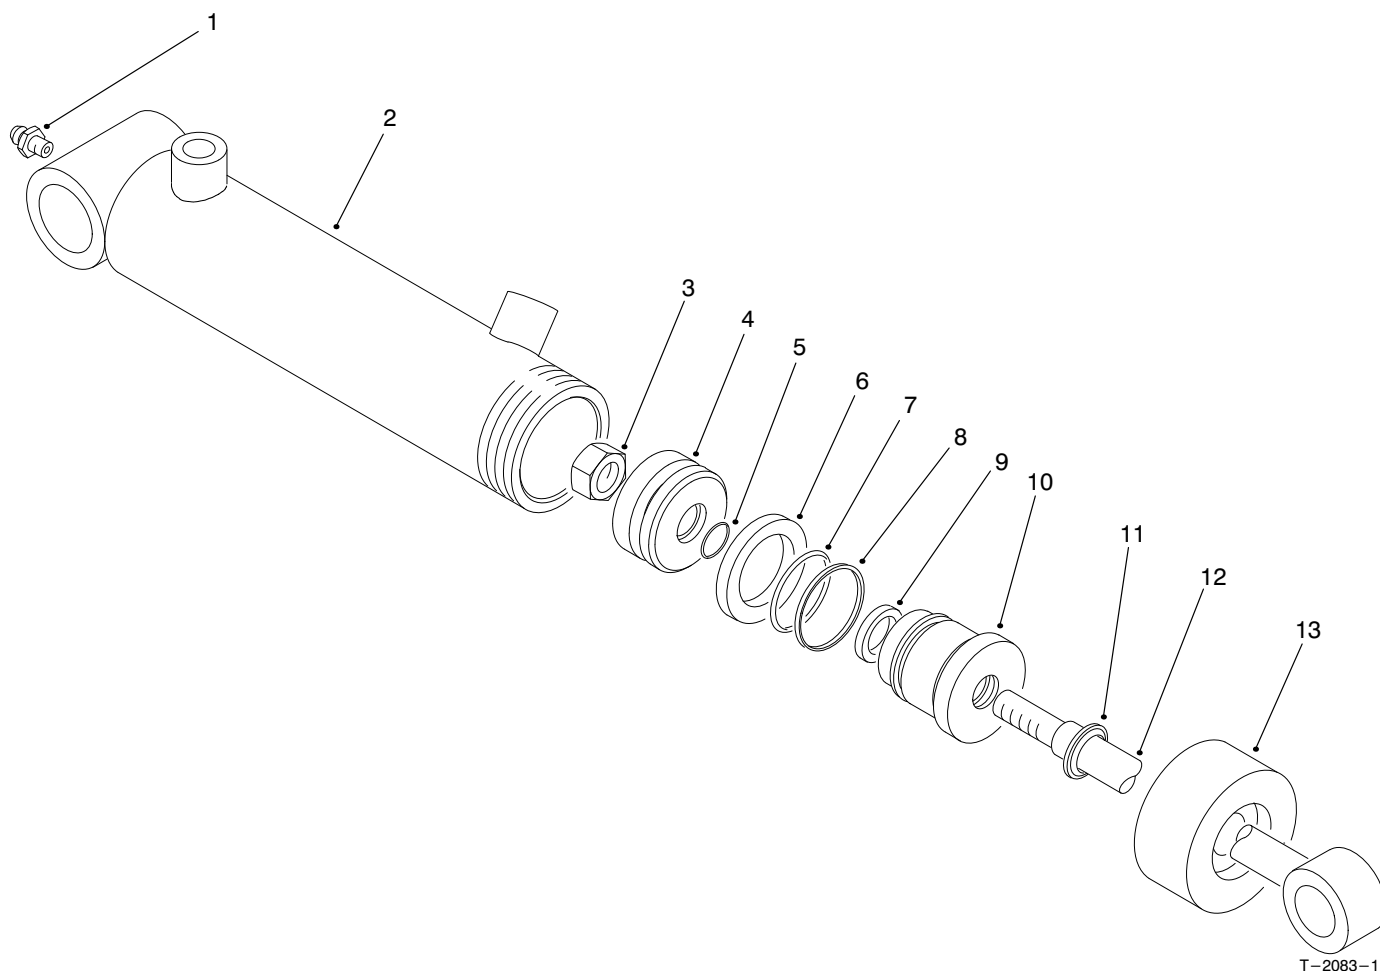


T-2083-1

HYDRAULIC LIFT CYLINDER NO. 5 (98-9069)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1	†9		Seal—Rod	1
†2		Asm—Barrel	1	10	98-7354	Head	1
3	32152-10	Nut—Lock	1	†11		Seal—Dust	1
4	84-1710	Piston	1	12	84-1740	Shaft With Clevis	1
†5		O—Ring	1	13	93-7994	Collar	1
†6		Seal—Special	1	*	84-1760	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O—Ring	1				
†8		Backup	1				

† Not Serviced Separately.

 *Not Illustrated

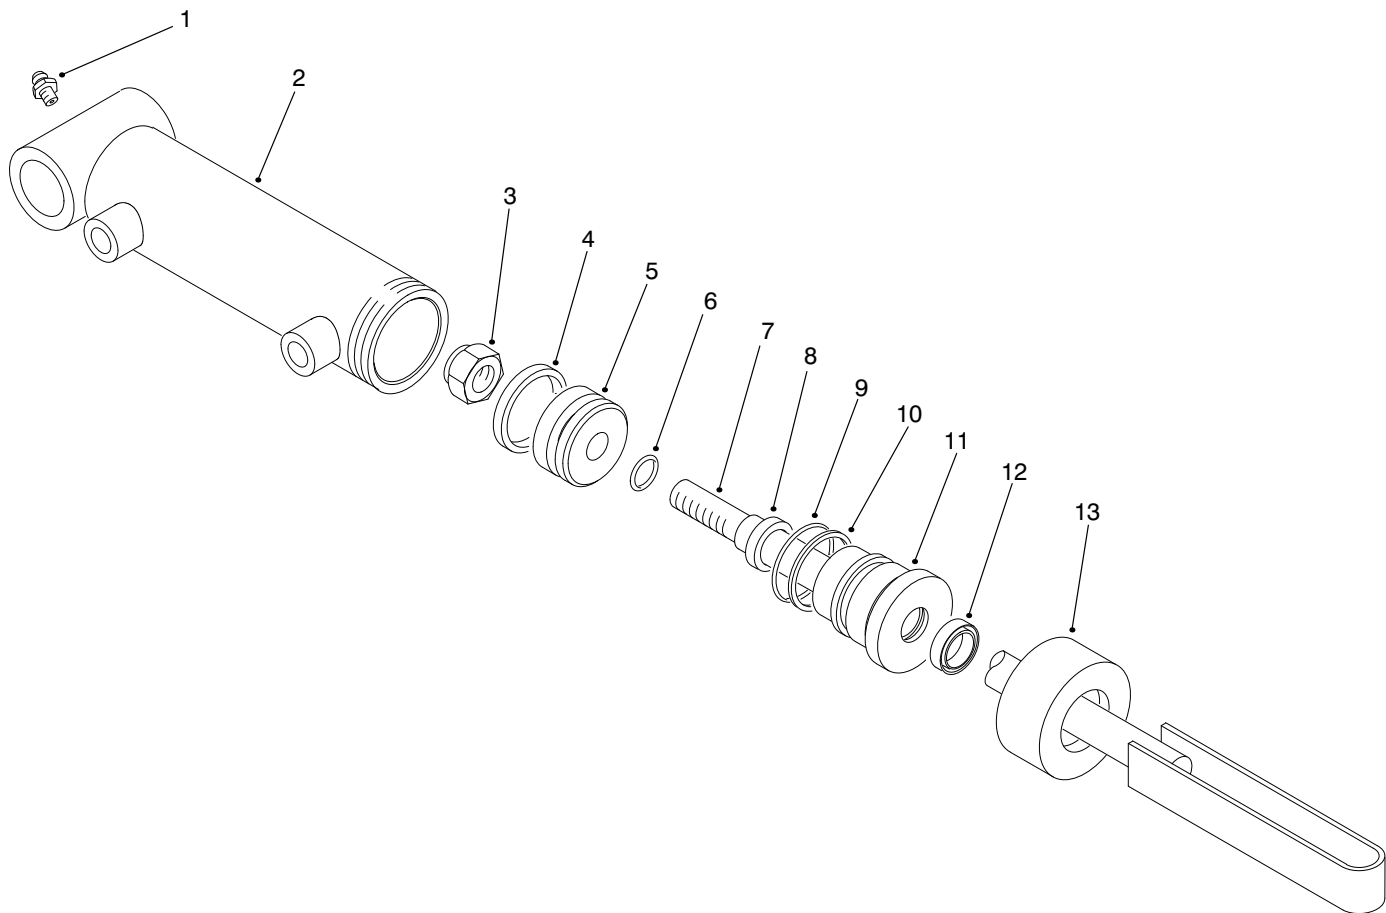


T-2087-1

HYDRAULIC LIFT CYLINDER NO. 2 (98-8813)

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
2	93-7995	Asm-Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	84-1710	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal-Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	98-7354	Head	1
†12		Seal-Dust	1
13	93-7994	Collar	1
*	84-1760	Kit-Seal Repair (Incl. Ref. #4, 6, 8-10 & 12)	1

 *Not Illustrated
†Not Serviced Separately.

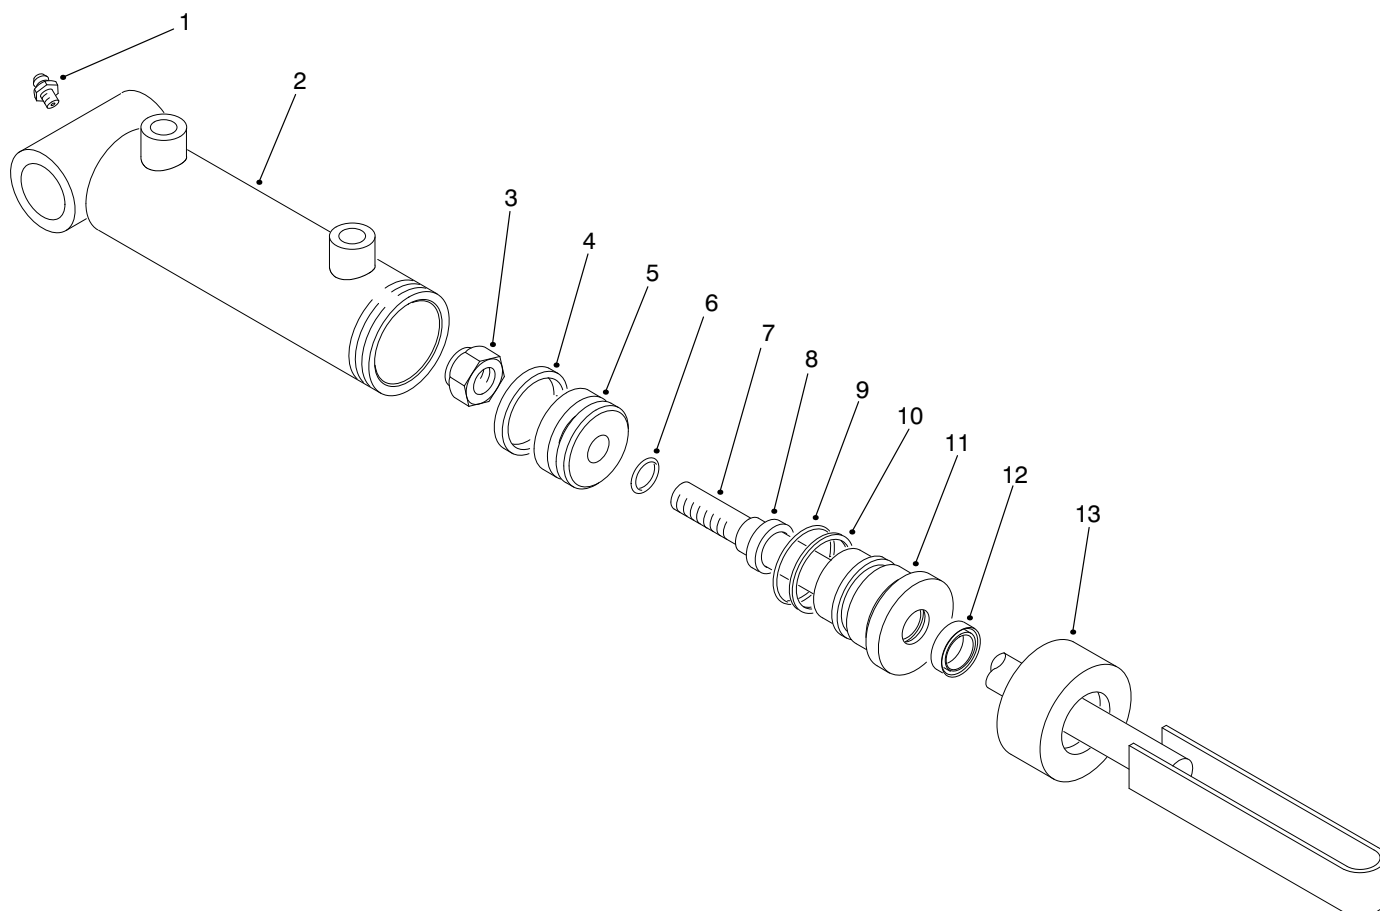

T-2086-1


HYDRAULIC LIFT CYLINDER NO. 3 (98-8812)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1	9		O-Ring	1
2	93-7992	Asm-Barrel	1	†10		Backup	1
3	32152-10	Nut	1	11	98-7353	Head	1
†4		Uni-ring	1	†12		Seal-Dust	1
5	70-2780	Piston	1	13	93-7991	Collar	1
†6		O-Ring	1	*	86-7330	Kit-Seal Repair (Incl. Ref. #4, 6, 8-10 & 12)	1
7	93-7989	Shaft W/Clevis	1				
†8		Seal-Rod	1				

*Not Illustrated

† Not Serviced Separately.

 3322-893

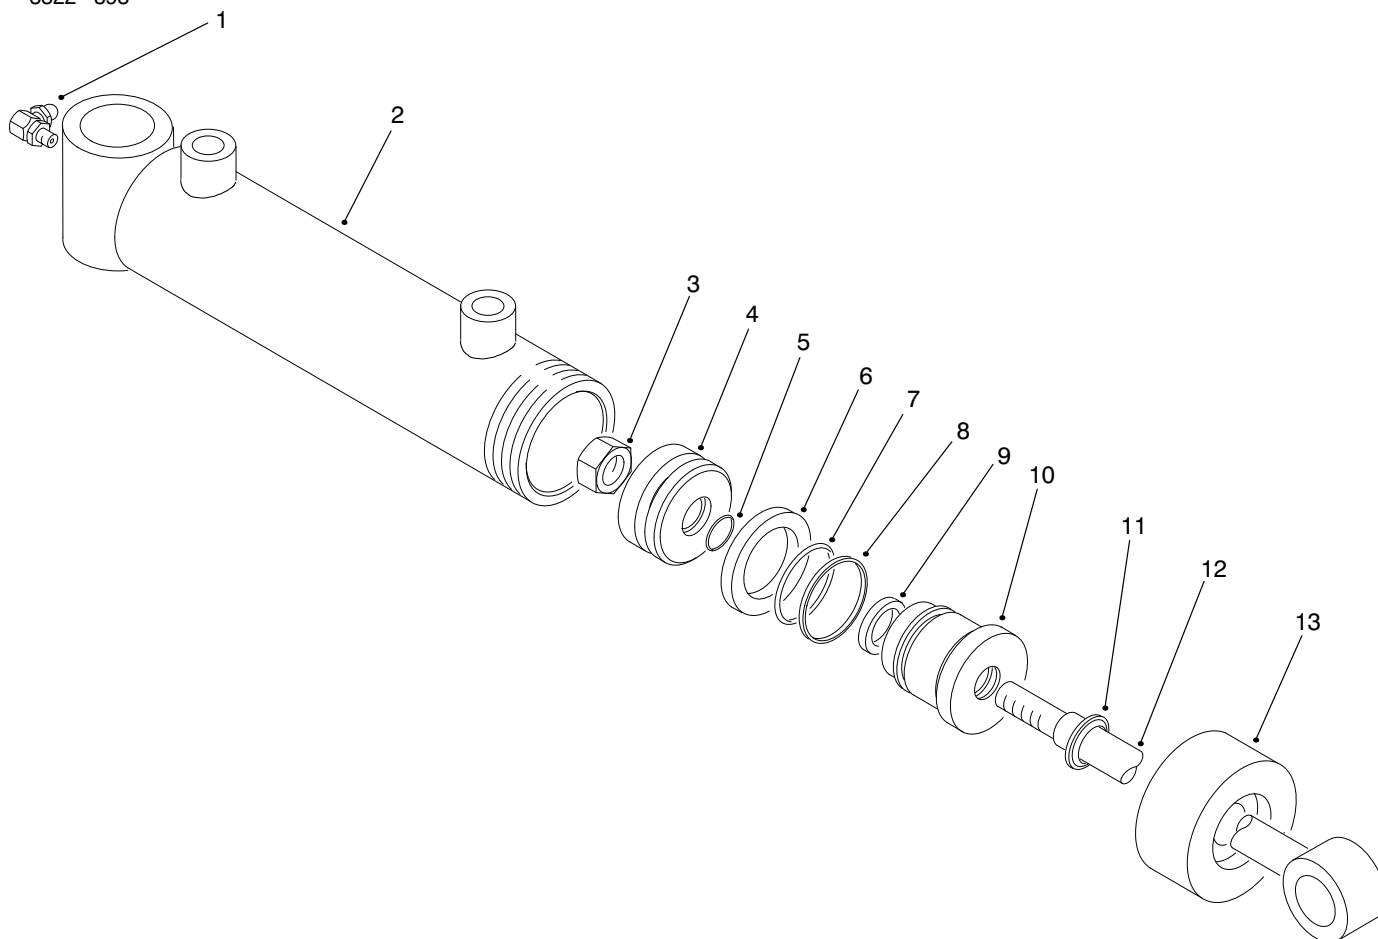

T-2363-1


HYDRAULIC LIFT CYLINDER NO. 6 & 7 (93-2631)

Ref. No.	Part No.	Description	No. Used
1	302-33	Fitting—Grease 90°	1
†2		Asm—Barrel	1
3	32152-10	Nut—Lock	1
4	94-2603	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	94-2604	Head	1
†11		Seal—Dust	1
12	94-2606	Shaft	1
13	94-2605	Collar	1
*	94-2608	Kit—Seal Repair (Incl. Ref. #5-9 & 11)	1

*Not Illustrated

 
†Not Serviced Separately.

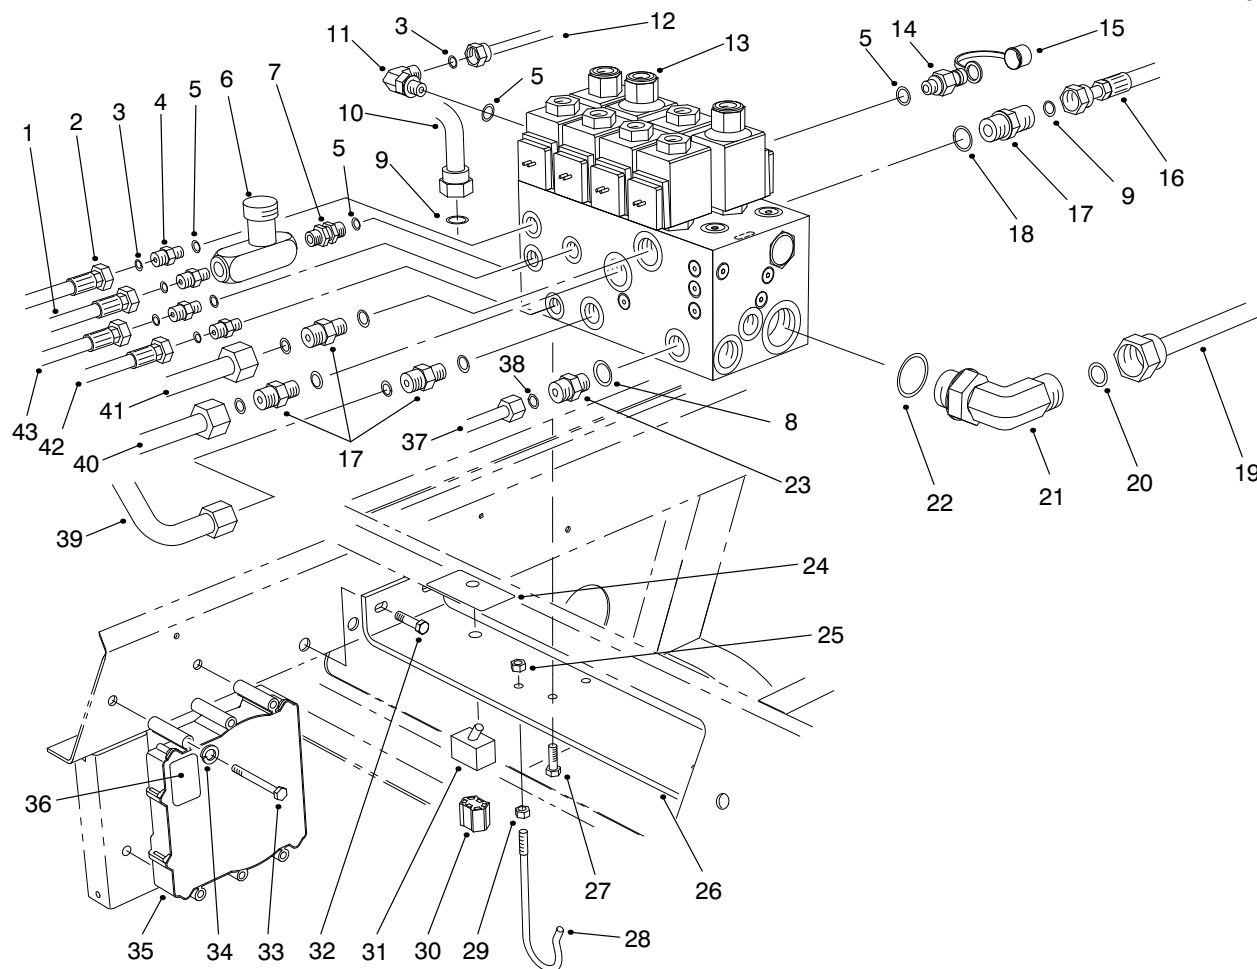

T-2374-1

FRONT HYDRAULIC BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-6490	Asm-Hose	1	22	237-81	O-Ring	1
2	92-7562	Asm-Hose	1	23	340-2	Adapter-Hydraulic (Incl. Ref. #8 & 38)	1
3	237-21	O-Ring	5	24	93-1264	Decal-Switch, Backlap	1
4	340-92	Fitting-Hydraulic (Incl. Ref. #3 & 5)	4	24	94-4580	Decal-Switch, Backlap (Japan)	1
5	237-78	O-Ring	8	25	3296-29	Nut-Lock	1
6	93-7489	Valve-Control, Flow	1	26	92-7519	Bracket-Block, Manifold	1
7	93-7597	Fitting-SAE (Incl. Ref. #5)	1	27	33104-016	Screw-HHF	4
8	237-42	O-Ring	1	28	93-7970	Form-Wire, Hose Mount	1
9	237-30	O-Ring	4	29	3217-6	Nut-Jam	1
10	92-7479	Asm-Tube	1	30	99-8963	Harness-Wire, Main	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #3 & 5)	1	31	93-7487	Switch-Toggle	1
12	92-7591	Asm-Tube	1	32	3234-17	Screw-HFH	4
13	92-7418	Asm-Block, Control	1	33	321-36	Screw-HH	3
14	354-77	Fitting-Quick Connect (Incl. Ref. #5)	1	34	3253-3	Washer-Lock	3
15	354-79	Cap-Fitting	1	35	92-5720	Controller-Solid State	2
16	92-7491	Asm-Hose	1	36	93-8053	Decal-ECU Label (Europe)	1
17	340-4	Fitting-Hydraulic (Incl. Ref. #9 & 18)	4	37	93-4222	Asm-Tube, Drain Return	1
18	237-79	O-Ring	4	38	237-22	O-Ring	1
19	92-7557	Asm-Tube	1	39	94-1447	Asm-Tube, Steering Ret.	1
20	237-65	O-Ring	1	40	93-4217	Asm-Tube	1
21	340-139	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1	41	93-4216	Asm-Tube	1
				42	92-7565	Asm-Hose	1
				43	92-7564	Asm-Hose	1

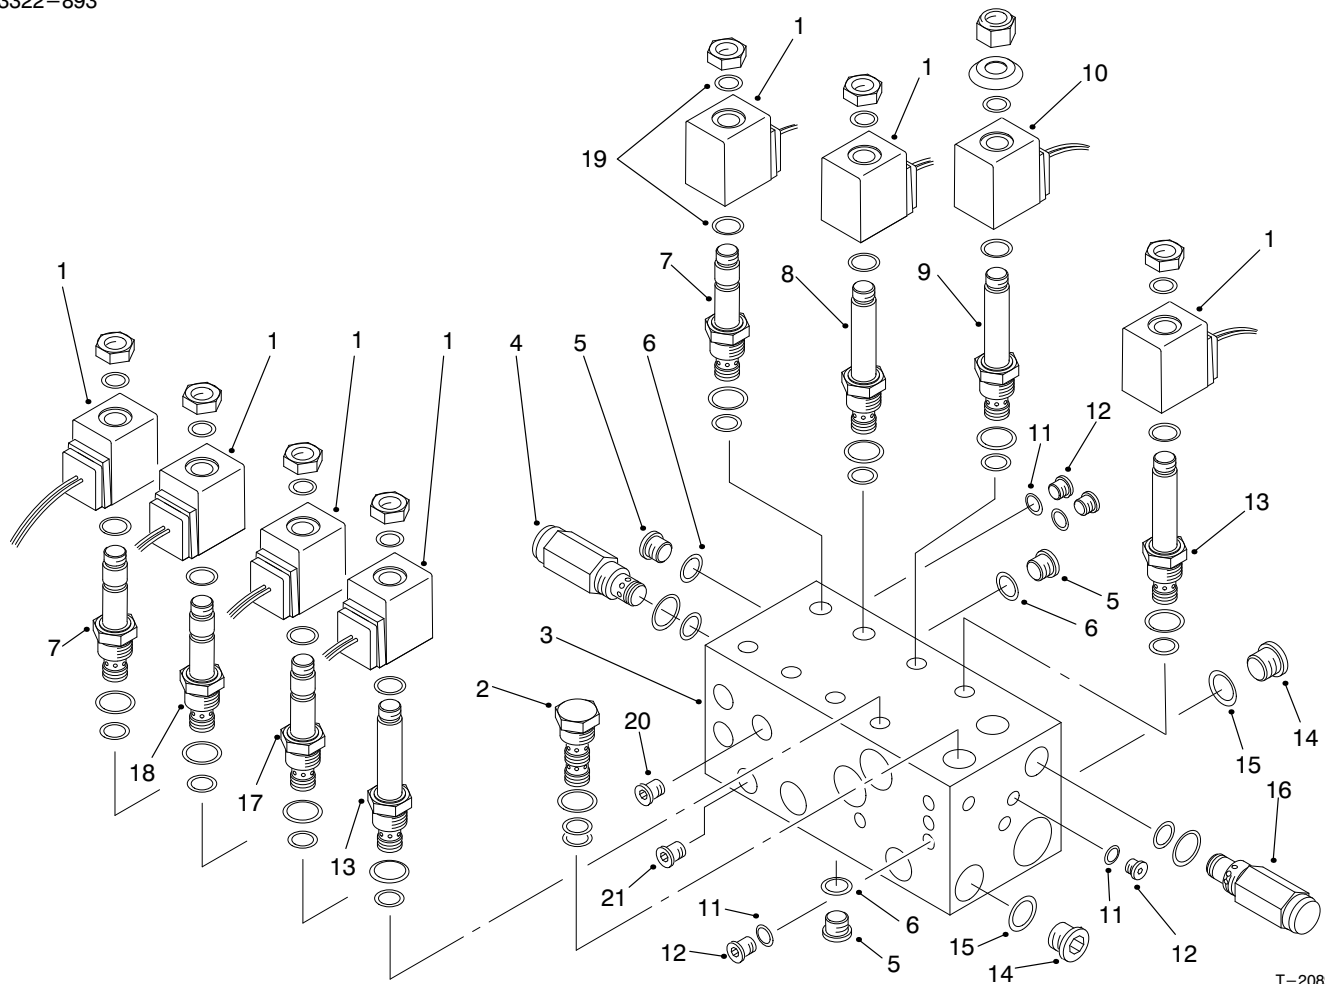 

T-2089-2


FRONT MANIFOLD BLOCK ASSEMBLY NO. 92-7418

Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid-20 Watt	7
2	93-7491	Cartridge-Pilot Check (Use Seal Kit 69-4260)	1
†3		Block-Manifold, Front	1
4	93-7492	Cartridge-Relief 2300 psi (Use Seal Kit 75-2080)	1
5	353-990	Plug (Incl. Ref. #6)	10
6	237-78	O-Ring	10
7	88-6990	Cartridge-N.C. (Use Seal Kit 75-2080)	2
8	92-3071	Solenoid (Use Seal Kit 69-4260)	1
9	95-3459	Cartridge-N.O. (Use Seal Kit 75-2080)	1
10	88-9200	Solenoid-28 Watt	1
11	237-156	O-Ring	10
12	353-991	Plug (Incl. Ref. #11)	10

Ref. No.	Part No.	Description	No. Used
13	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2
14	353-989	Plug (Incl. Ref. #15)	5
15	237-42	O-Ring	5
16	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
17	88-6980	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	1
18	92-6315	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1
19	94-5438	Seal-Solenoid	16
20	94-3077	Plug-Orifice	1
21	94-8140	Plug-Orifice	1
*	75-2080	Seal Kit	7
*	69-4260	Seal Kit	2

*Not Illustrated

 
†Not Serviced Separately

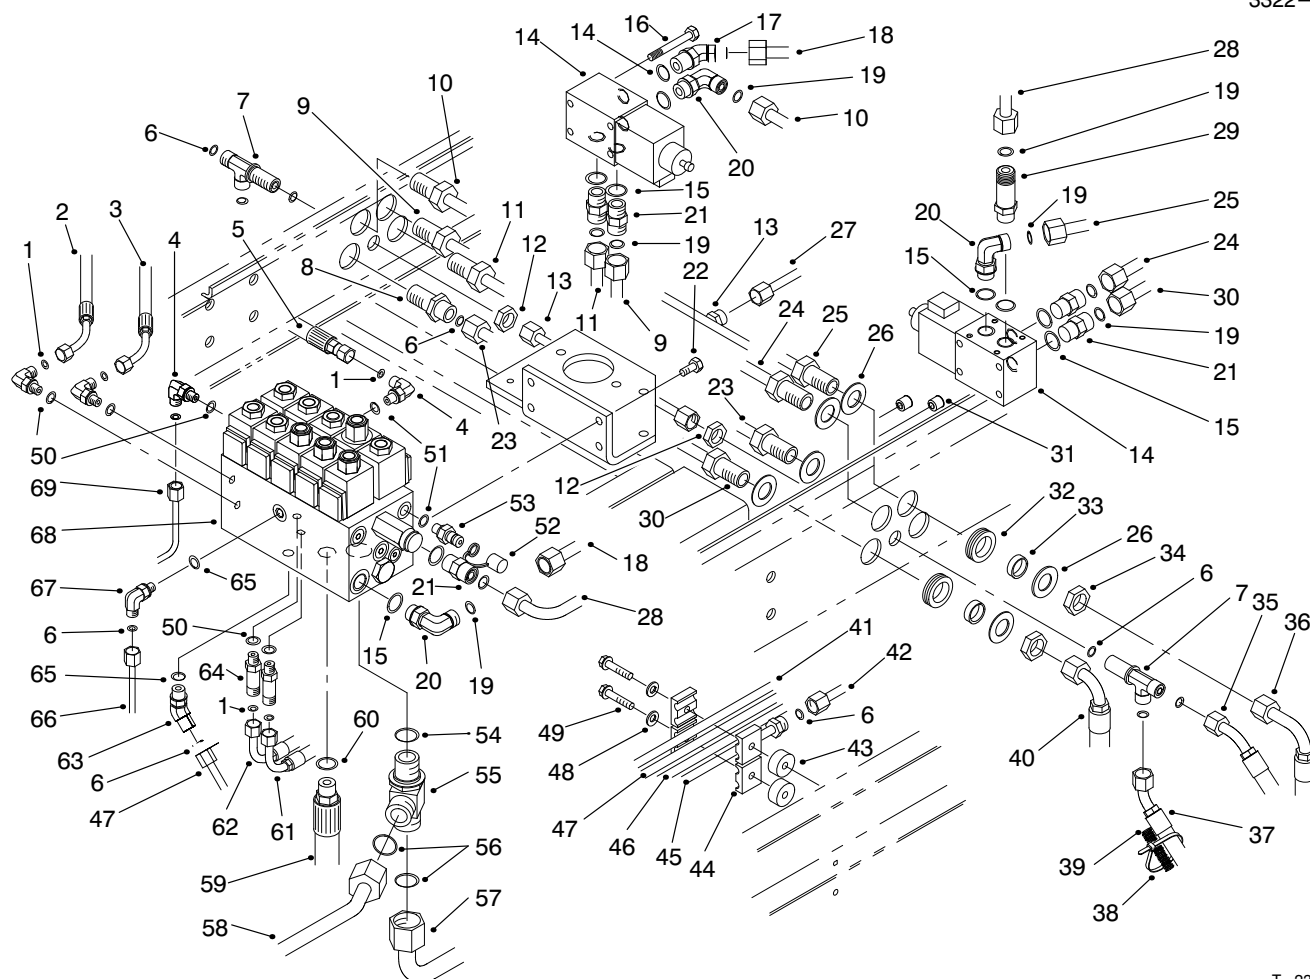

T-2360-2

REAR HYDRAULIC MANIFOLD BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-21	O-Ring	4	28	93-7950	Asm-Tube	1
2	92-7635	Asm-Hose	1	29	94-2628	Adapter-Hydraulic	1
3	92-7641	Asm-Hose	1	30	93-7954	Asm-Tube	1
4	340-132	Fitting-90°	4	31	32148-7	Nut-Clinch	4
5	92-7638	Asm-Hose	1	32	240-5	Grommet-Rubber	4
6	237-22	O-Ring	10	33	69-8960	Spacer	4
7	340-68	Fitting-Tee	2	34	340-127	Nut-Bulkhead	4
8	340-161	Fitting-Bulkhead Adapter	1	35	94-1433	Asm-Hose	2
9	93-7957	Asm-Tube	1	36	94-1432	Asm-Hose	4
10	93-7955	Asm-Tube	1	37	99-5614	Asm-Hose	2
11	93-7956	Asm-Tube	1	38	3290-378	Tie-Cable	6
12	340-70	Nut-Lock, Bulkhead	2	39	99-8963	Harness-Wire, Main	1
13	93-7959	Asm-Tube	1	40	99-5613	Asm-Hose	4
14	76-9970	Asm-Valve, Solenoid	2	41	92-7495	Asm-Steering Tube, Rear	1
15	237-79	O-Ring	9	42	92-7553	Asm-Tube, Rear Drain	1
16	340-101	Fitting-45°	1	43	80-8660	Spacer	2
17	93-7951	Asm-Tube	1	44	56-7973	Clamp-Tube	10
18	237-30	O-Ring	9	45	92-7598	Asm-Tube, Front Drain	1
19	340-98	Fitting-90°	3	46	92-7601	Asm-Tube, Rear Aux.	1
20	340-4	Fitting-Hydraulic	5	47	92-7494	Asm-Steering Tube, Rear	1
21	33104-025	Screw-HHF	4	48	3256-23	Washer-Flat	7
22	93-7958	Asm-Tube	1	49	32104-37	Screw-HH	2
23	93-7053	Asm-Tube	1	50	237-78	O-Ring	5
24	93-7952	Asm-Tube	1	51	354-77	Fitting-Quick Connect	1
25	69-8930	Washer	16	52	354-79	Cap-Fitting	1
26	94-2629	Asm-Tube, Drain	1	54	237-81	O-Ring	1

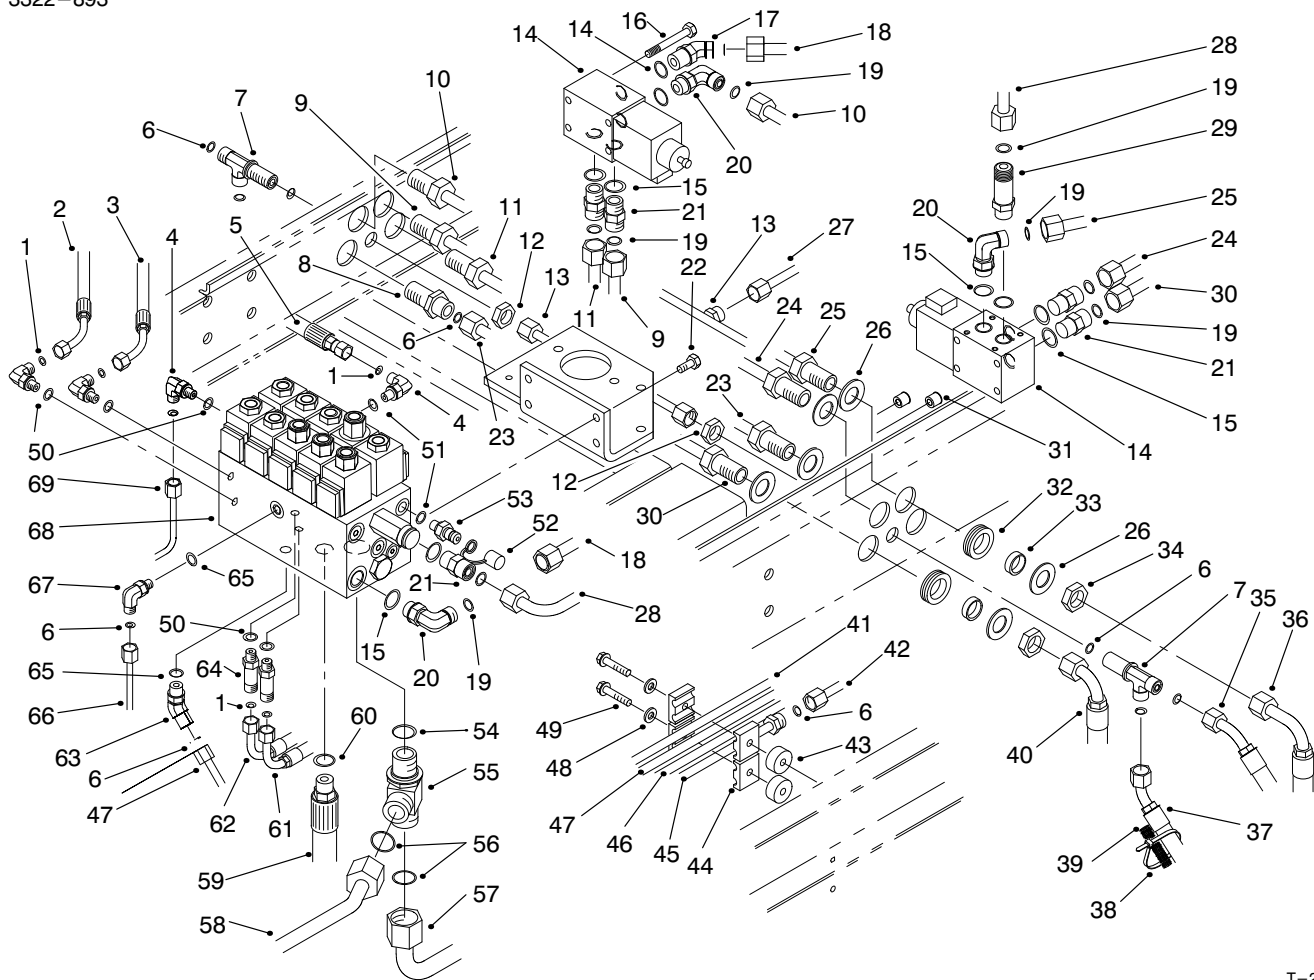 


T-2360-2

REAR HYDRAULIC MANIFOLD BLOCK & HOSES (Cont.)

Ref. No.	Part No.	Description	No. Used
55	340-148	Fitting-Tee	1
56	237-58	O-Ring	2
57	92-7558	Asm-Rear Cooler Tube	1
58	92-7557	Asm-Front Cooler Tube	1
59	92-7492	Asm-Hose	1
60	237-80	O-Ring	1
61	92-7640	Asm-Hose	1
62	92-7639	Asm-Hose	1

Ref. No.	Part No.	Description	No. Used
63	340-87	Fitting-45°	1
64	94-1403	Adapter-Hydraulic	2
65	237-42	O-Ring	2
66	92-7602	Asm-Tube, Aux. Return	1
67	340-77	Fitting-90°	1
68	92-7384	Asm-Block, Manifold	1
69	92-7592	Asm-Tube	1

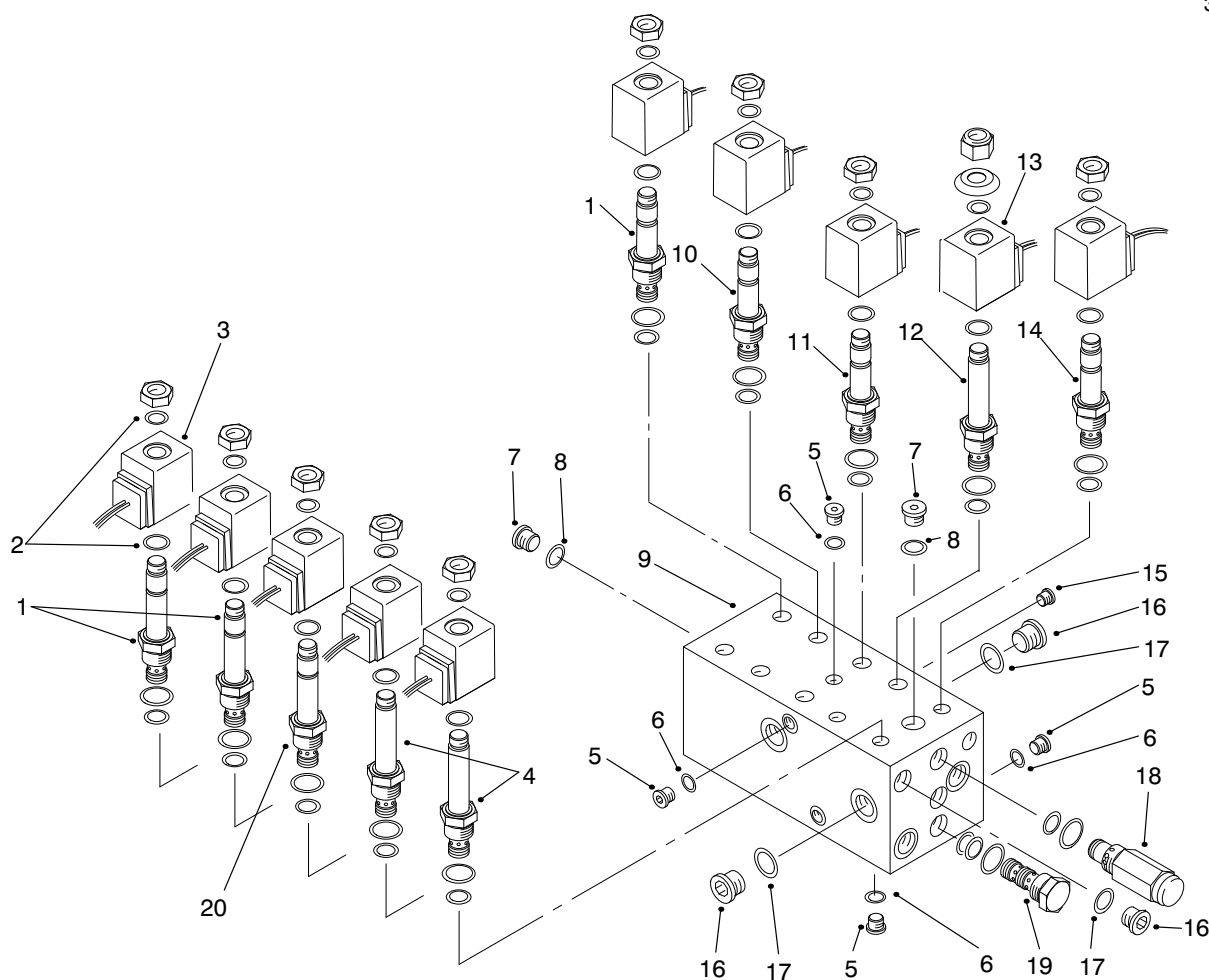 


T-2372-1

REAR MANIFOLD BLOCK ASSEMBLY NO. 92-7384

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-6990	Cartridge-N.C. Spool (Use Seal Kit 75-2080)	3	13	88-9200	Solenoid-28 Watt	1
2	94-5438	Seal-Solenoid	20	14	88-6980	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1
3	88-9190	Solenoid-20 Watt	9	15	94-2626	Plug-Orifice	1
4	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2	16	353-989	Plug (Incl. Ref. #17)	5
5	353-991	Plug (Incl. Ref. #6)	13	17	237-42	O-Ring	5
6	237-156	O-Ring	13	18	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
7	353-990	Plug (Incl. Ref. #8)	5	19	93-7491	Cartridge-N.O. Poppet (Use Seal Kit 69-4260)	1
8	237-78	O-Ring	5	20	93-7495	Cartridge-3W2P Pull (Use Seal Kit 69-4260)	1
†9		Block-Manifold, Rear	1	*	69-4260	Seal Kit	2
10	92-6315	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1	*	75-2080	Seal Kit	6
11	94-2627	Cartridge-W/2P (Use Seal Kit 75-2090)	1	*	75-2090	Seal Kit	1
12	95-3459	Cartridge-No Flow (Use Seal Kit 75-2080)	1				

*Not Illustrated

 †Not Serviced Separately

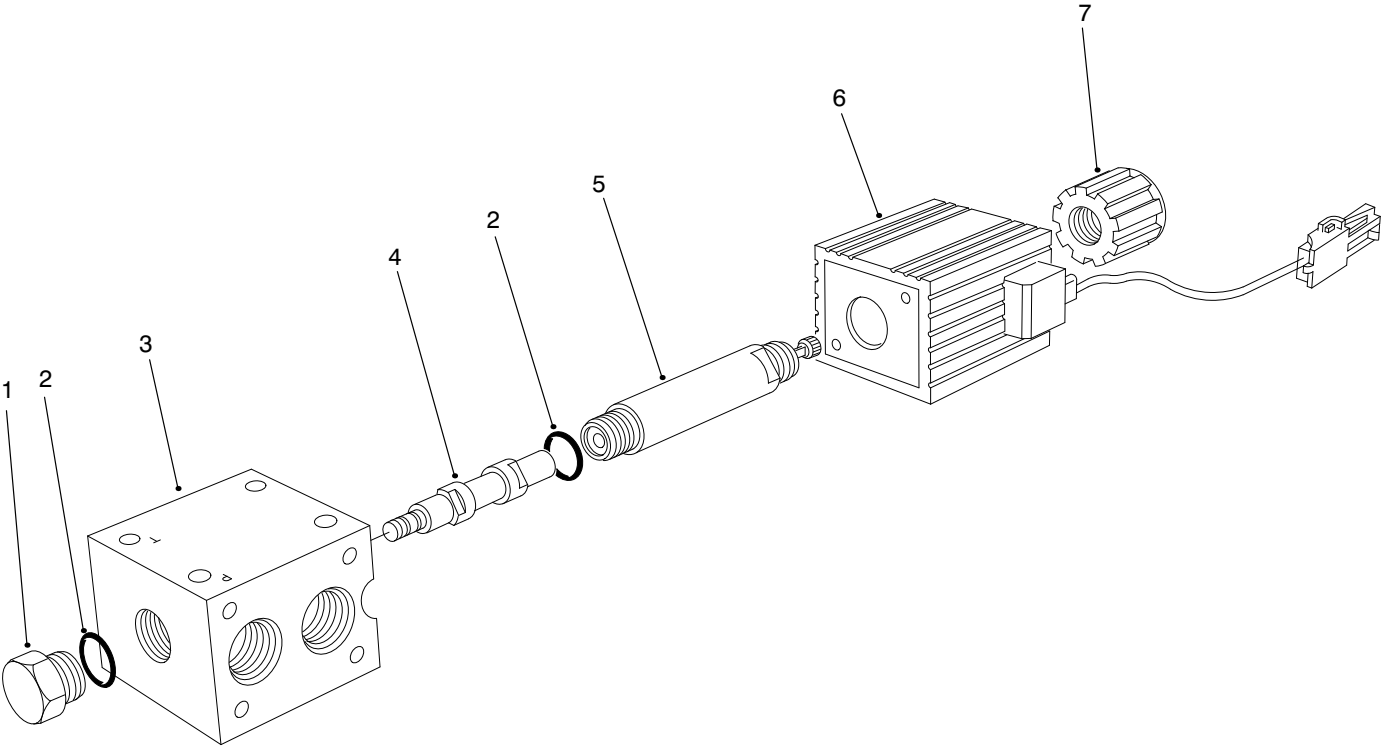


T-1126-1

SOLENOID VALVE ASSEMBLY NO. 76-9970

Ref. No.	Part No.	Description	No. Used
1	237-80	Asm-Adapter (Incl. Ref. #2)	1
2		O-Ring	2
3		Valve-Directional	1
4		Spool	1

Ref. No.	Part No.	Description	No. Used
5	218-591	Asm-Tube (Incl. Ref. #2)	1
6		Asm-Coil	1
7		Nut-Coil	1

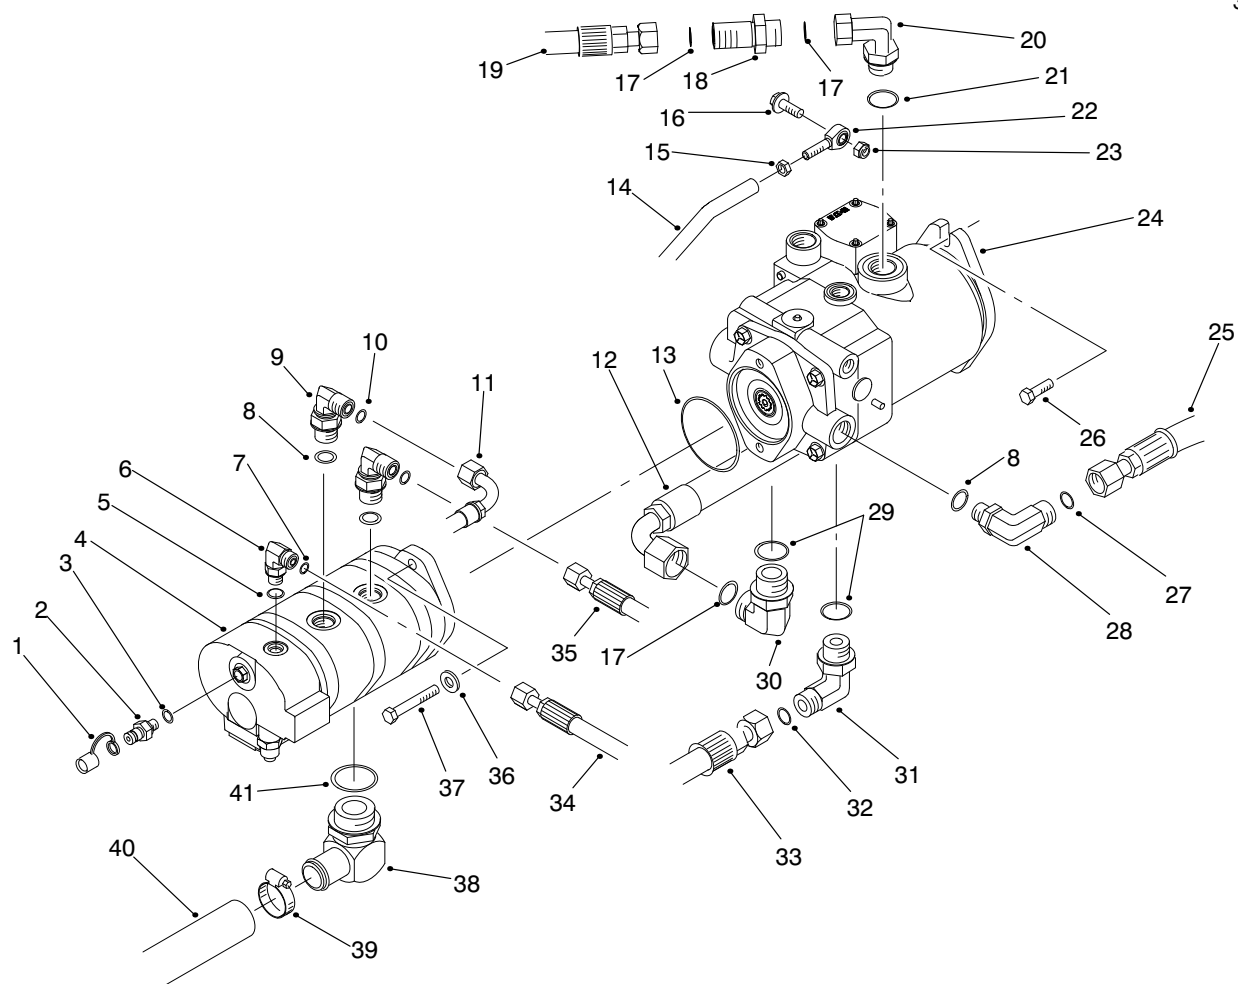 


T-2370-1

PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	354-79	Cap-Dust	4	21	237-81	O-Ring	1
2	354-77	Fitting-Quick Connect (Incl. Ref. #3)	4	22	2411-36	Bearing-Rod End	1
3	237-78	O-Ring	4	23	3296-59	Nut-Lock	1
4	94-3066	Asm-Pump, Gear	1	24	98-3730	Pump-Piston	1
5	237-42	O-Ring	1	25	92-7490	Asm-Hose, Filter	1
6	340-77	Fitting-Hydraulic 90° (Incl. Ref. #5 & 7)	1	26	82-5050	Screw-HH	2
7	237-22	O-Ring	1	27	237-65	O-Ring	1
8	237-80	O-Ring	3	28	340-17	Fitting-Hydraulic 90° (Incl. Ref. #8 & 27)	1
9	340-105	Fitting-Hydraulic 90° (Incl. Ref. #8 & 10)	2	29	237-146	O-Ring	2
10	237-30	O-Ring	2	30	340-15	Fitting-Hydraulic 90° (Incl. Ref. #17 & 29)	1
11	92-7491	Asm-Hose	1	31	340-129	Fitting-Hydraulic 90° (Incl. Ref. #29 & 32)	1
12	92-7484	Asm-Hose	1	32	340-65	O-Ring	2
13	237-99	O-Ring	1	33	92-7485	Asm-Hose	1
14	92-7531	Tube-Rod, Control	1	34	92-7622	Asm-Hose, Steering	1
15	3220-3	Nut-Jam	1	35	92-7492	Asm-Hose	1
16	3234-11	Screw-HFH	1	36	3256-46	Washer-Flat	2
17	237-58	O-Ring	3	37	323-7	Screw-HH	2
18	94-2637	Fitting-Hydraulic, Straight (Incl. Ref. #17)	1	38	92-7526	Fitting-Hydraulic, Suction	1
19	92-7489	Hose-Return	1	39	2412-111	Clamp-Hose	2
20	94-2636	Fitting-Hydraulic 90°	1	40	92-7465	Hose-Suction	1
				41	237-101	O-Ring	1

 SERVO CONTROLLED PISTON PUMP ASM. NO. 98-3730

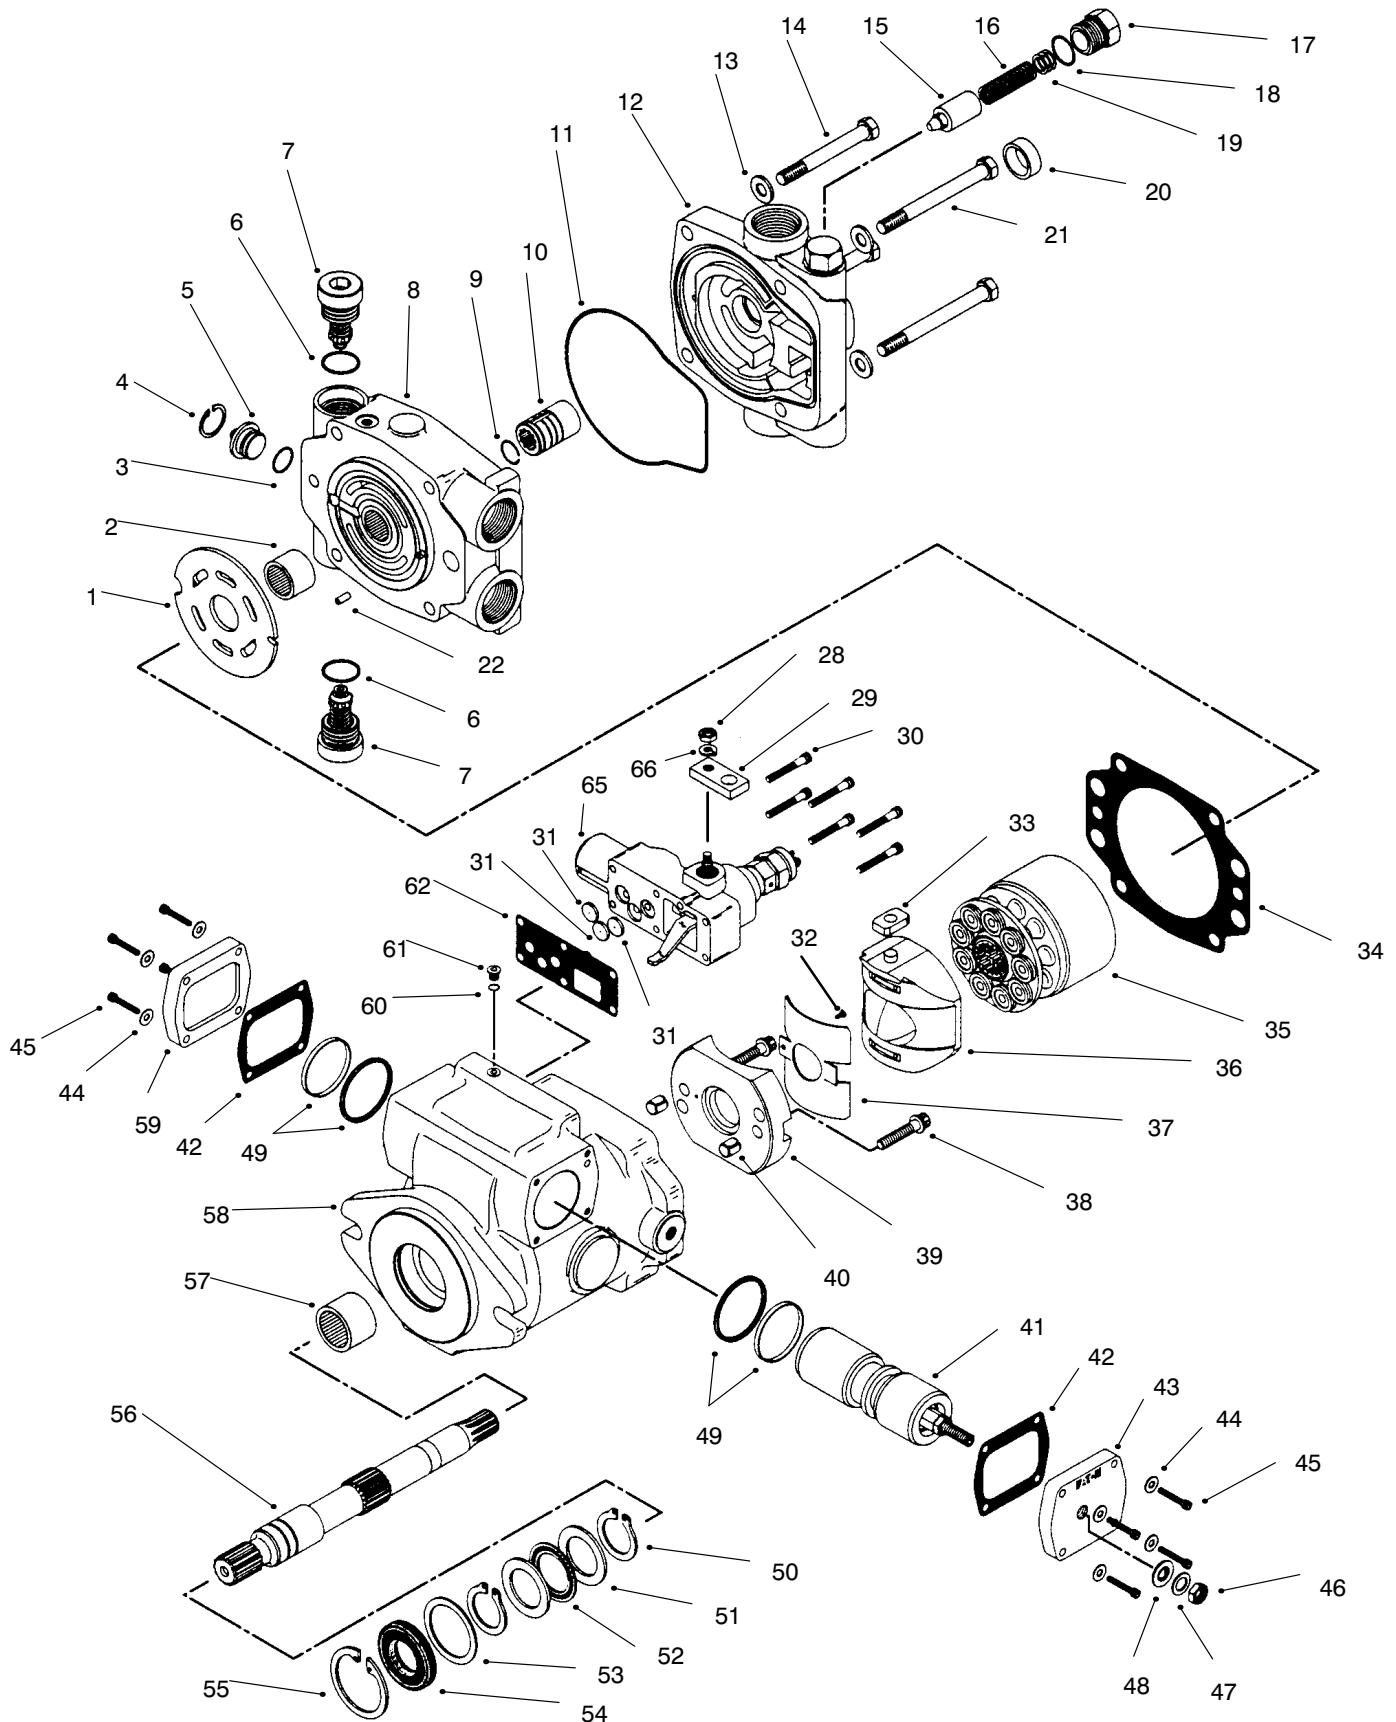


SERVO CONTROLLED PISTON PUMP ASM. NO. 98-3730

Ref. No.	Part No.	Description	No. Used
1	94-3022	Plate-Valve	1
†2		Bearing	1
3	94-3036	Ring-Quad	1
4	94-3037	Ring-Retaining	1
5	94-3038	Plug-Dump Valve	1
†6		O-Ring	2
7	94-9999	Valve-Relief	2
8	94-3016	Asm-Backplate (Incl. Ref. #2 & 22)	1
9	94-3035	Ring-Lock	1
10	94-3023	Coupler	1
†11		O-Ring, Molded	1
12	94-3017	Adaptor-Charge Relief (Incl. Ref. #15-20)	1
13	3256-24	Washer-Flat	4
14	94-3028	Screw	2
†15		Poppet	2
†16		Spring	2
†17		Plug	1
†18		O-Ring	1
†19		Washer	3
†20		Bushing	1
21	94-3029	Screw	2
†22		Pin-Roll	1
28	3217-5	Nut	1
29	94-3031	Arm-Control	1
30	3274-59	Screw	6
31	94-3040	Orifice-Valve, Control	3
†32		Screw	1
33	94-3032	Follower-Piston	1
†34		Gasket-Housing	1
35	94-3021	Asm-Kit, Rotating	1
36	94-3026	Asm-Camplate	1

Ref. No.	Part No.	Description	No. Used
†37		Bushing	1
†38		Screw	1
†39		Asm-Cradle	1
†40		Dowel-Bushing	2
41	94-3025	Asm-Piston, Servo	1
†42		Gasket-Plate, Cover	2
43	94-3034	Plate-Cover	1
44	3256-77	Washer-Flat	8
45	3274-81	Screw	8
46	3220-3	Nut-Jam	1
47	94-3030	Washer	1
48	94-3027	Washer-Seal	1
†49		Seal	2
50	76-7000	Ring-Retaining	2
51	76-6950	Race-Thrust	1
52	76-6960	Bearing-Thrust	1
53	94-3007	Washer	1
54	94-3008	Seal-Shaft	1
55	76-7010	Ring-Retaining	1
56	94-3020	Shaft-Drive	1
†57		Bearing	1
58	94-3018	Asm-Housing (Incl. Ref. #32, 37-40, 49, 57, & 60-61)	1
59	94-3033	Plate-Cover	1
†60		O-Ring	1
†61		Plug	1
†62		Gasket	1
65	94-3019	Control-Servo, Manual	1
66	3253-3	Washer-Lock	1
*	94-3039	Kit-Seal (Incl. Ref. #11, 34, 42 & 62)	1

*Not Illustrated

 †Not Serviced Separately.

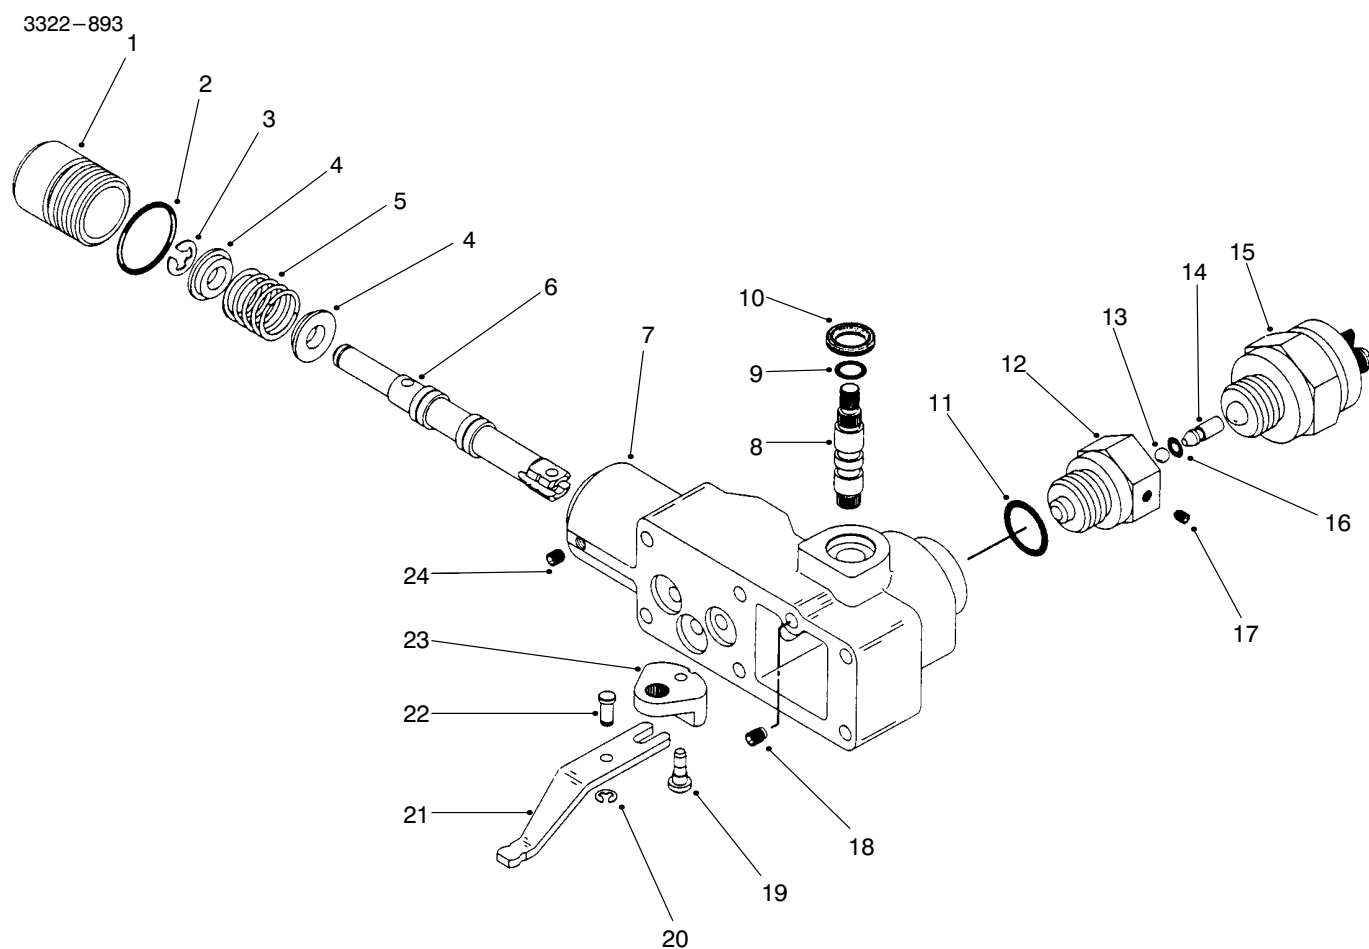

T-2119-1


MANUAL SERVO CONTROL NO. 94-3019

Ref. No.	Part No.	Description	No. Used
1		Plug	1
2		O-Ring	1
3		Ring-Retaining	1
4		Retainer-Spring	2
5		Spring	1
6		Valve-Spool	1
7		Housing-Control	1
8		Shaft-Input	1
9		O-Ring	1
10		Seal-Wiper	1
11		O-Ring	1
12		Adaptor	1
13		Ball	1

Ref. No.	Part No.	Description	No. Used
14		Pin	1
15	94-3043	Switch	1
16		O-Ring	1
17		Screw-Set	1
18		Screw-Set	1
19		Pin	1
20		Ring-Retaining	1
21		Link	1
22		Pin-Dowel	1
23		Crank-Bell	1
24		Screw-Set	1
*	94-3044	Kit-Seal (Incl. Ref. #2, 9-11 & 16)	1

*Not Illustrated

 GEAR PUMP ASSEMBLY NO. 94-3066

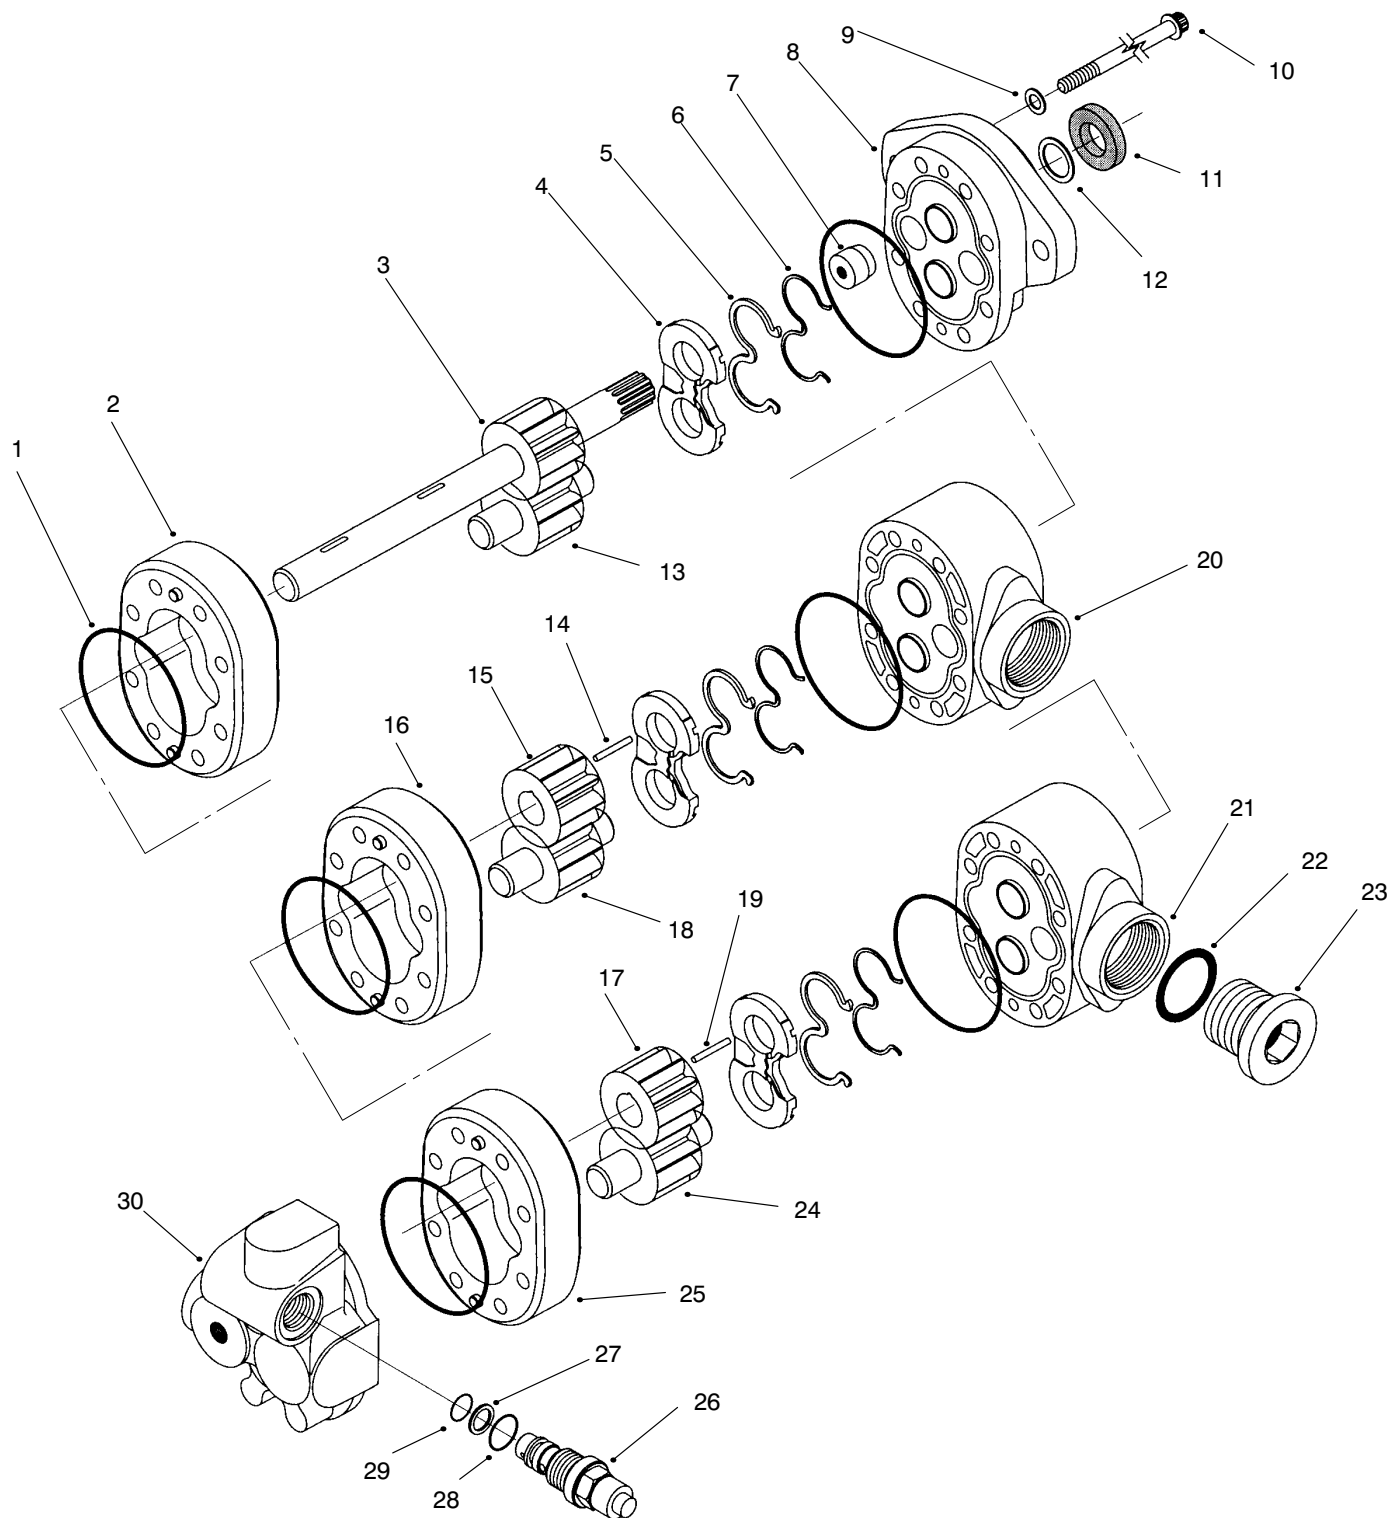


GEAR PUMP ASSEMBLY NO. 94-3066

Ref. No.	Part No.	Description	No. Used
1	56-6710	O-Ring	6
†2		Body	1
†3		Asm-Gear, Drive	1
4		Plate-Wear	3
5		Seal-Pressure, Balance	3
6		Gasket-Backup	3
7	94-3011	Plug	1
†8		Asm-Plate, Front	1
9	74-8920	Washer-Copper	4
10	94-3012	Screw-Cap	8
11	49-2640	Seal-Shaft	1
12	60-5890	Washer	1
†13		Gear-Idler	1
†14		Key	1
†15		Gear	1
†16		Body	1
†17		Gear	1

Ref. No.	Part No.	Description	No. Used
†18		Gear-Idler	1
†19		Key	1
†20		Plate-Adaptor	1
†21		Plate-Adaptor	1
†22		O-Ring	1
23	94-3013	Plug (Incl. Ref. #22)	1
†24		Gear-Idler	1
†25		Body	1
26	94-3014	Valve-Relief (Incl. Ref. #27-29)	1
†27		Washer-Backup	1
†28		O-Ring	1
†29		O-Ring	1
†30		Asm-Backplate	1
*	94-3015	Kit-Seal (Incl. Ref. #1, & 4-6)	1

*Not Illustrated

 † Not Serviced Separately.

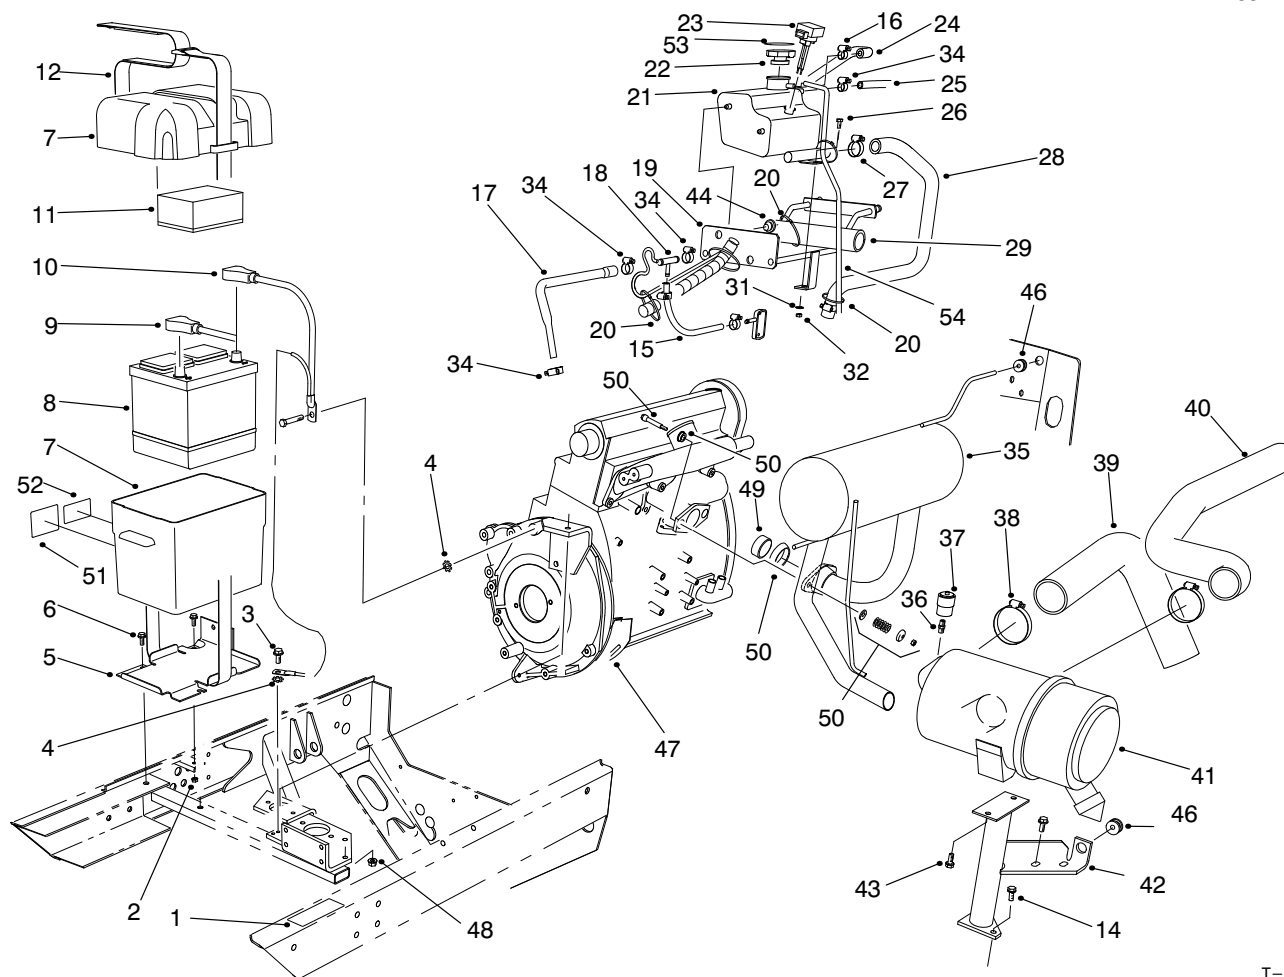


T-2373-7

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-1265	Decal-Hot Surface	1	27	2412-129	Clamp-Hose	2
1	94-4578	Decal-Hot Surface (Japan)	1	28	93-7589	Hose-Overflow	1
2	3296-29	Nut-Lock	1	29	93-4215	Hose-Radiator, Upper Rear	1
3	32144-11	Screw-TAP	1	31	33093-00	Washer	1
4	3255-9	Washer-Lock	2	32	33023-00	Nut-Lock	1
5	93-7974	Plate-Battery, Box	1	34	2412-36	Clamp-Hose	4
6	3234-5	Screw-FH	3	35	93-9178	Muffler	1
7	93-7595	Asm-Box, Battery	1	*	94-2849	Muffler-Spark Arrestor	1
†8		Battery	1	36	94-1416	Adapter-Indicator	1
9	75-1370	Cable-Battery, Positive	1	37	93-9164	Indicator-Service	1
10	94-1411	Cable-Battery, Negative	1	38	2412-125	Clamp-Hose	2
11	93-7968	Pad-Foam, Battery	1	39	94-2624	Hose-Manifold	1
12	94-1445	Strap-Battery	1	40	93-7584	Hose-Intake	1
14	33105-030	Screw-HHF	2	41	93-7485	Asm-Filter, Air	1
15	63-7622	Hose-Fuel	1	42	94-8108	Support-Filter, Air	1
16	2412-108	Clamp-Hose	3	43	33104-016	Screw-HHF	2
17	94-2630	Hose-Return	1	†44	94-2801	Grommet-Rubber	2
18	93-4207	Fitting-Tee	1	46	94-2812	Grommet	2
19	94-1408	Wireform-Overflow	1	†47	77-3600	Plate-Closing	1
20	3290-378	Tie-Cable	5	48	33005-00	Nut-HF	2
†21	98-1805	Box-Degassing	1	†49	94-2815	Sleeve-Exhaust Flange	1
†22	94-2800	Cap-Radiator	1	†50	94-2814	Kit-Exhaust Coupler	1
†23	94-9984	Sensor-Water Level	1	51	93-6668	Decal-Charging (Europe)	1
24	93-7591	Hose-Return	1	52	93-7276	Decal-Danger (Europe)	1
25	92-7424	Hose-Overflow, Radiator	1	53	93-7840	Decal-Cap (Europe)	1
26	33103-020	Screw-HHF	1	54	55-4130	Hose-Fuel	1

† Furnished with engine.

 ‡ Obtain locally.

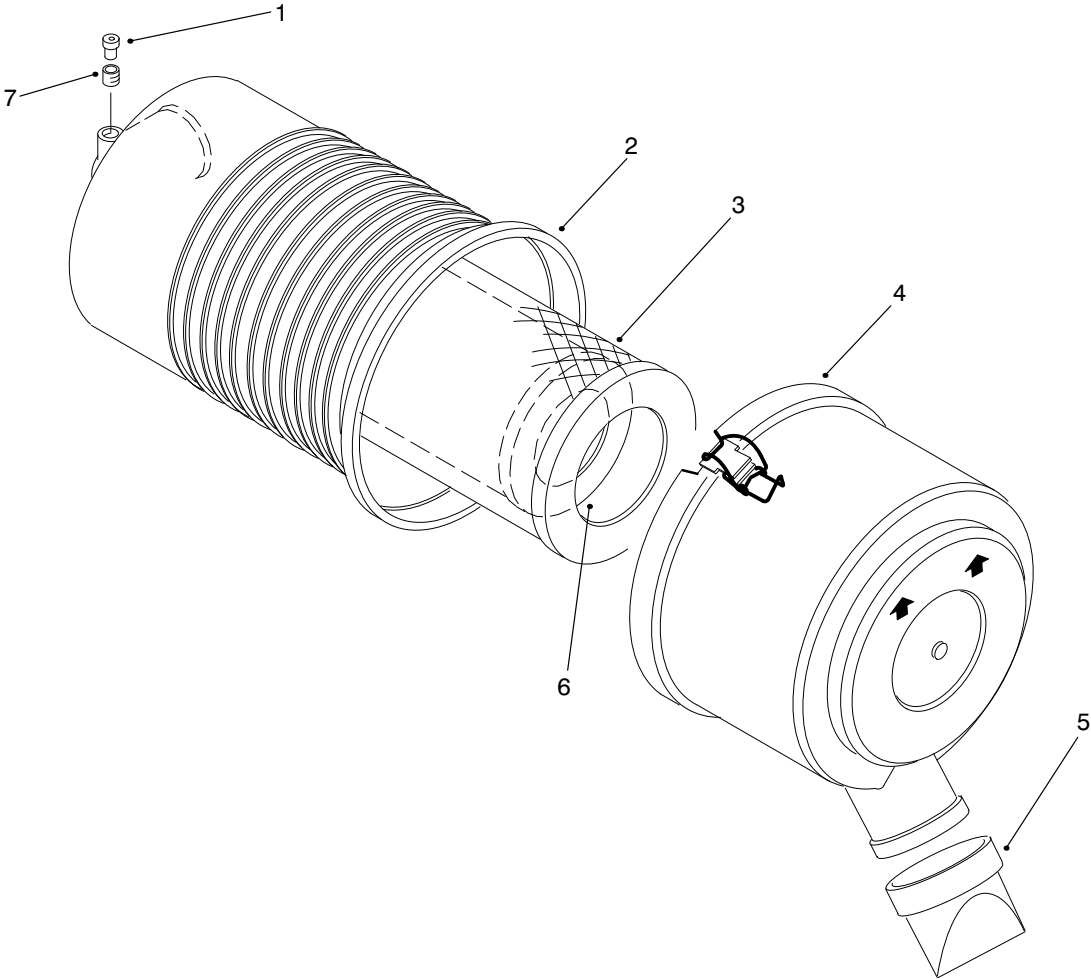


T-2076-1

AIR CLEANER ASSEMBLY NO. 93-7485

Ref. No.	Part No.	Description	No. Used
1	93-9164	Indicator	1
2		Asm-Body	1
3	93-9162	Filter-Primary	1
4	93-5986	Asm-Cover	1


Ref. No.	Part No.	Description	No. Used
5	94-1414	Valve-Vacuator	1
6	93-9163	Filter-Safety	1
7	94-1416	Asm-Adaptor	1

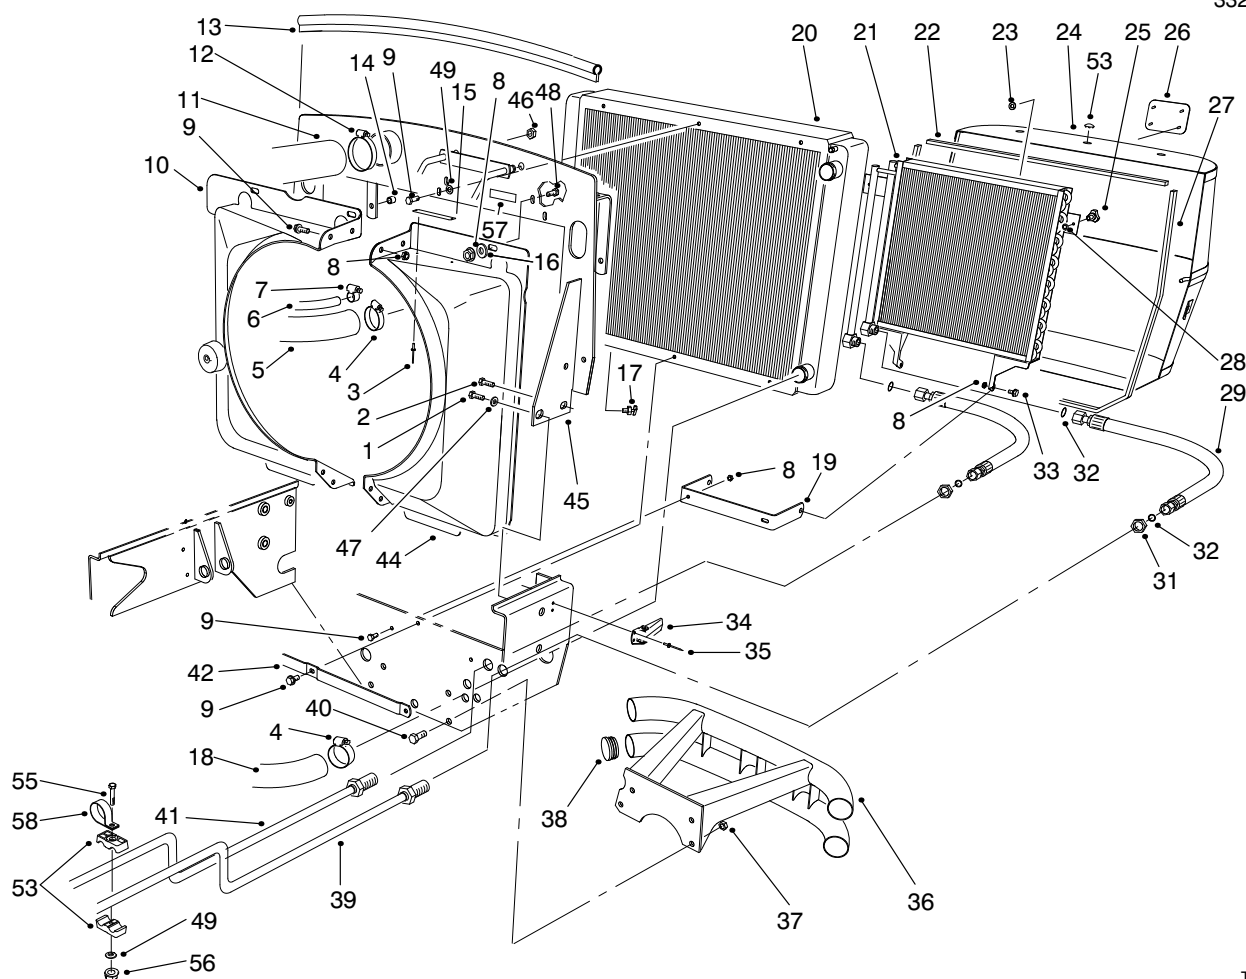 

T-2073-7

RADIATOR & SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33108-025	Screw-HHF	2	28	32151-72	Retainer-Push On	2
2	3234-18	Screw-HHF	2	29	92-7535	Asm-Hose, Oil Cooler	2
3	3290-271	Rivet-Pop	2	31	340-74	Nut-Bulkhead	2
4	2412-3	Clamp-Hose	2	32	237-65	O-Ring	4
5	93-4215	Hose-Radiator, Upper Rear	1	33	37-8771	Bolt-Shoulder	2
6	92-7424	Hose-Radiator, Overflow	1	34	69-3020	Latch-Draw	2
7	2412-36	Clamp-Hose	1	35	3269-4	Rivet-Pop	4
8	32128-20	Nut-HFH	4	36	92-7623	Bumper	1
9	3234-5	Screw-HF	9	37	3296-23	Nut-Lock	4
10	92-7374	Shroud-Fan RH	1	38	2410-42	Cap-Bumper	4
11	93-7584	Hose-Intake	1	39	92-7493	Asm-Tube, Filter	1
12	2412-125	Clamp-Hose	1	40	325-5	Screw-HH	2
13	93-7553	Seal-Hood	1	41	92-7558	Asm-Tube, Cooler	1
14	32148-10	Nut-Clinch	2	42	92-7416	Strap-Radiator	1
15	76-8750	Plate-Warning, Fan	1	44	92-7375	Shroud-Fan LH	1
16	3256-56	Washer-Flat	3	45	92-7388	Support-Radiator	1
17	304-46	Nut-Drain Cock	1	46	3296-23	Nut-Lock	2
18	92-7463	Hose-Radiator, Lower	1	47	3256-27	Washer-Flat	2
19	92-7516	Bracket-Support, Cooler	1	48	3230-2	Screw-Carriage	3
20	74-3410	Asm-Radiator	1	49	3256-23	Washer-Flat	4
21	82-3740	Cooler-Oil	1	53	2410-64	Button-Plug	3
22	92-7631	Sealstrip-Screen	1	54	94-8105	Clamp-Tube	2
23	94-2638	Nut-Push On	4	55	322-9	Screw-HH	1
24	92-7505	Screen	1	56	3296-47	Nut-Lock	1
25	77-3620	Retainer-Cover	2	57	93-6681	Decal-Warning, (Europe)	1
26	93-6028	Plate-Logo, Toro	1	58	2412-147	Clamp-R	1
27	93-4208	Strip-Seal, Screen	1				

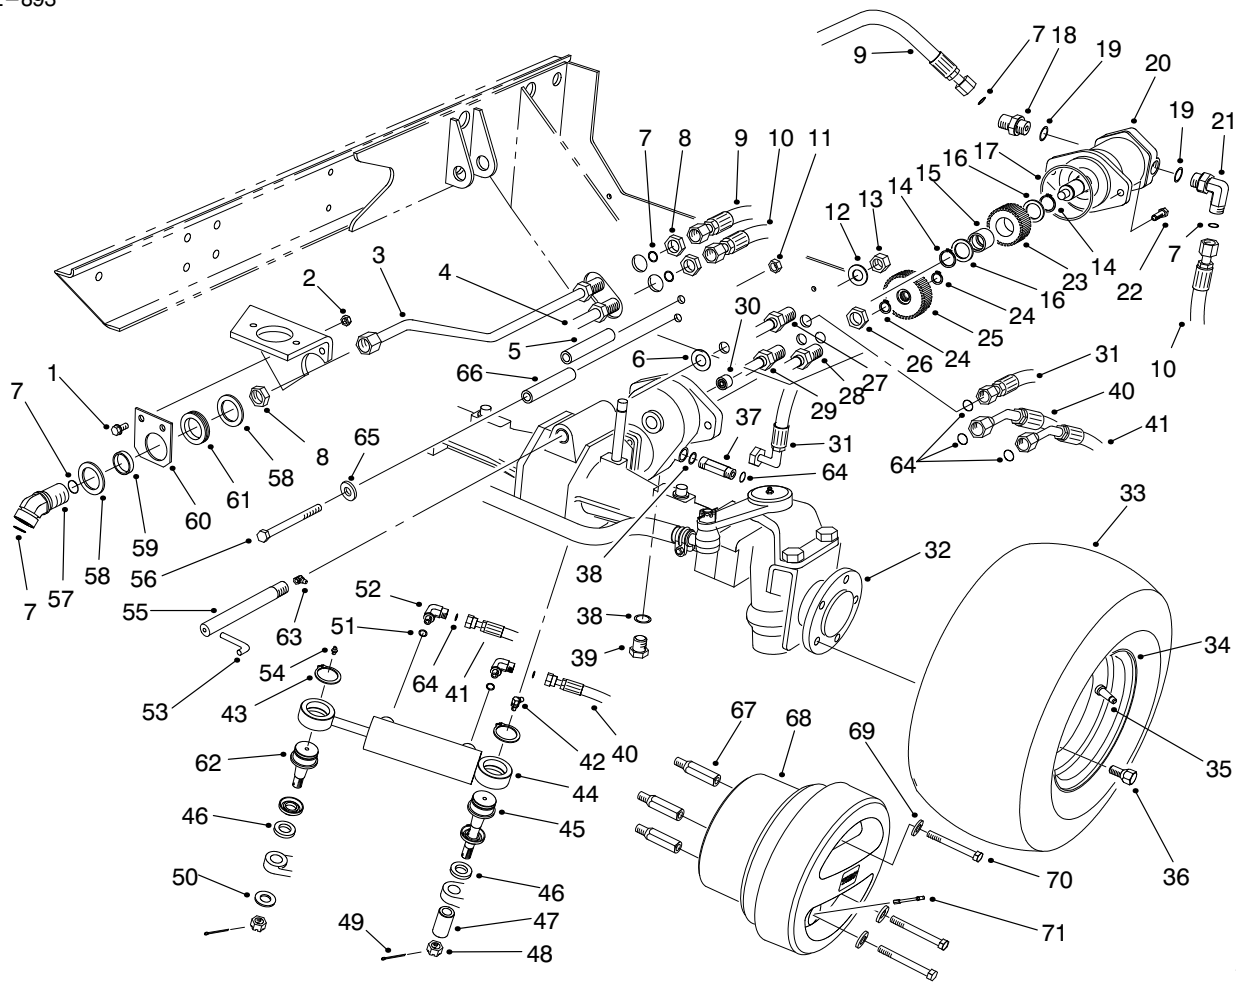 


T-2077-6

4-WD AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-HH	2
2	32128-21	Nut-HFH	2
3	92-7472	Asm-Tube, Rear (Incl. Ref. #7)	1
4	92-7473	Asm-Tube, Rear (Incl. Ref. #7)	1
5	76-8350	Stop-Axle, 4WD	2
6	93-7247	Washer-Thrust	1
7	237-58	O-Ring	6
8	340-126	Nut-Bulkhead	3
9	92-7536	Asm-Hose, Rear Motor	1
10	92-7537	Asm-Hose, Rear Motor	1
11	3296-45	Nut-Lock	4
12	3256-29	Washer-Flat	1
13	94-8000	Nut-Lock	1
14	32151-96	Ring-Retaining	1
15	71-4580	Clutch-Roller	1
16	71-4590	Washer-Thrust	2
17	237-166	O-Ring	1
18	340-9	Fitting-Hydraulic (Incl. Ref. #7 & 19)	1
19	237-81	O-Ring	2
20	92-7386	Motor-Hydraulic	1
21	340-142	Fitting-Hydraulic 90° (Incl. Ref. #7 & 19)	1
22	325-4	Screw-HH	2
23	94-3099	Gear-Driver	1
24	32120-15	Ring-Retaining	2


Ref. No.	Part No.	Description	No. Used
25	94-3098	Gear-Driven	1
26	340-70	Nut-Lock	3
27	92-7553	Asm-Tube, Rear Drain (Incl. Ref. #64)	1
28	92-7495	Asm-Tube, Steering (Incl. Ref. #64)	1
29	92-7494	Asm-Tube, Steering (Incl. Ref. #64)	1
30	74-5700	Bearing-Needle	1
31	92-7534	ASM-Hose	1
32	98-2447	Axle-4WD	1
33	86-5910	Tire	2
34	217-125	Wheel	2
35	232-27	Stem-Valve	2
36	74-5500	Bolt-Wheel	10
37	340-2	Adapter (Incl. Ref. #38 & 64)	1
38	237-42	O-Ring	2
39	353-508	Plug (Incl. Ref. #38)	1
40	92-7539	Asm-Hose	1
41	92-7538	Asm-Hose	1
42	302-60	Fitting-Grease 90°	1
43	98-9973	Ring-Retaining	2
44	94-8141	Cylinder-Hydraulic	1
45	92-5839	Ball Joint	1
46	92-5833	Spacer-Ball Joint	2
47	92-5844	Spacer-Ball Joint	1

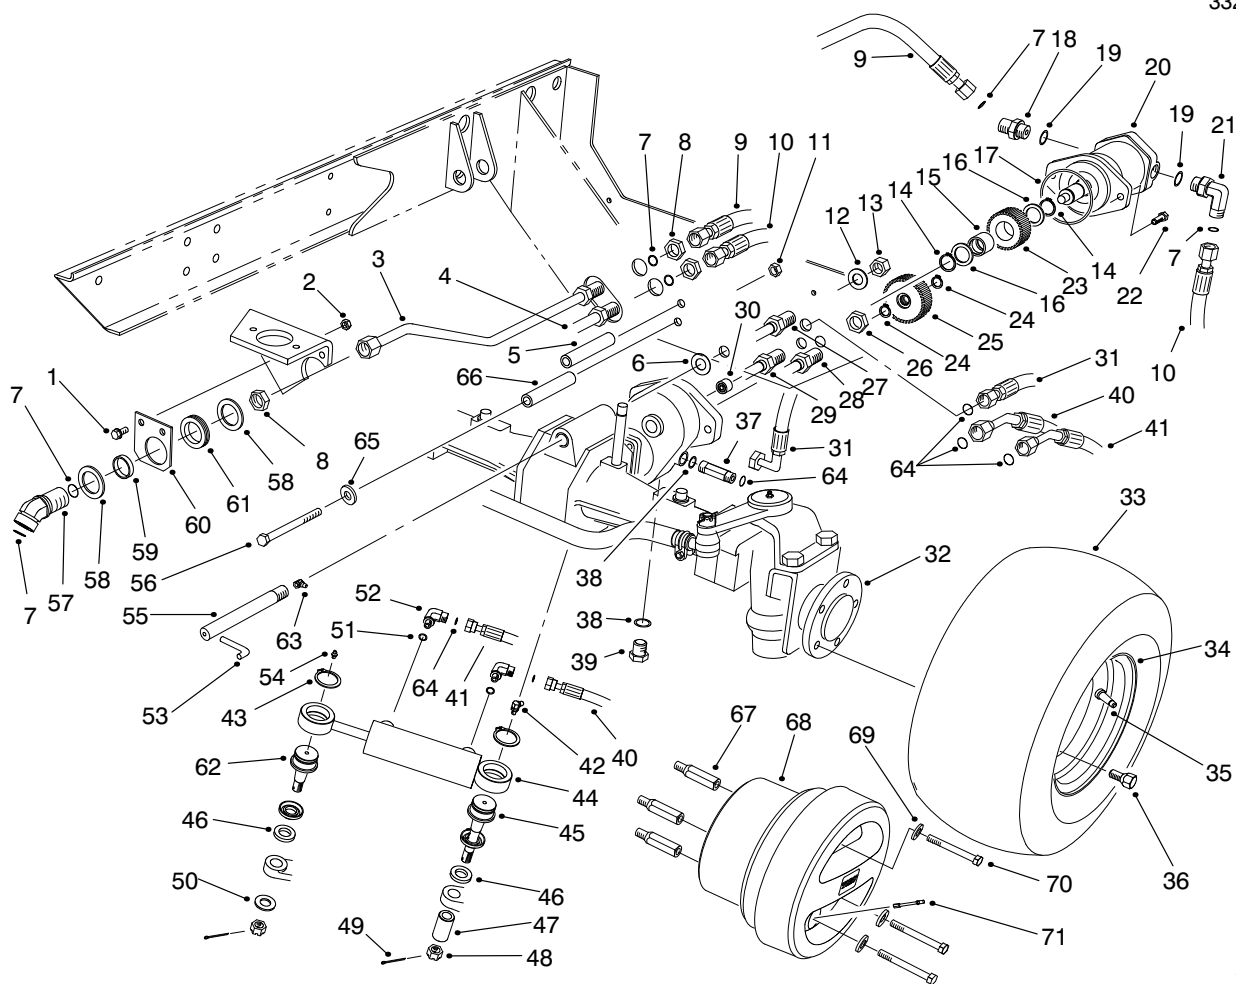 

T-2077-6

4-WD AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
48	32136-14	Nut-Hex. Slotted	2	60	92-7552	Bracket-Bulkhead	1
49	3272-12	Pin-Cotter	2	61	240-7	Grommet	1
50	92-5836	Washer-Axle	1	62	92-5838	Ball Joint	1
51	237-78	O-Ring	2	63	302-33	Fitting-Grease 90°	1
52	340-97	Fitting-Hydraulic 90° (Incl. Ref. #51 & 64)	2	64	237-22	O-Ring	6
53	92-7604	Pin-Stop	1	65	3256-26	Washer-Flat	7
54	302-5	Fitting-Grease	1	66	88-1550	Stop-Axle	2
55	94-8115	Pin-Axle, Pivot	1	67	94-2806	Adapter-Bolt, Wheel (Europe)	6
56	325-33	Screw-HH	4	68	94-3052	Weight-Wheel (Europe)	2
57	92-7646	Fitting-Hydraulic 45° (Incl. Ref. #7)	1	69	3256-26	Washer-Flat (Europe)	6
58	69-8910	Washer	2	70	3213-14	Screw-HH (Europe)	6
59	69-8900	Spacer	1	71	94-3063	Extension-Valve (Europe)	2

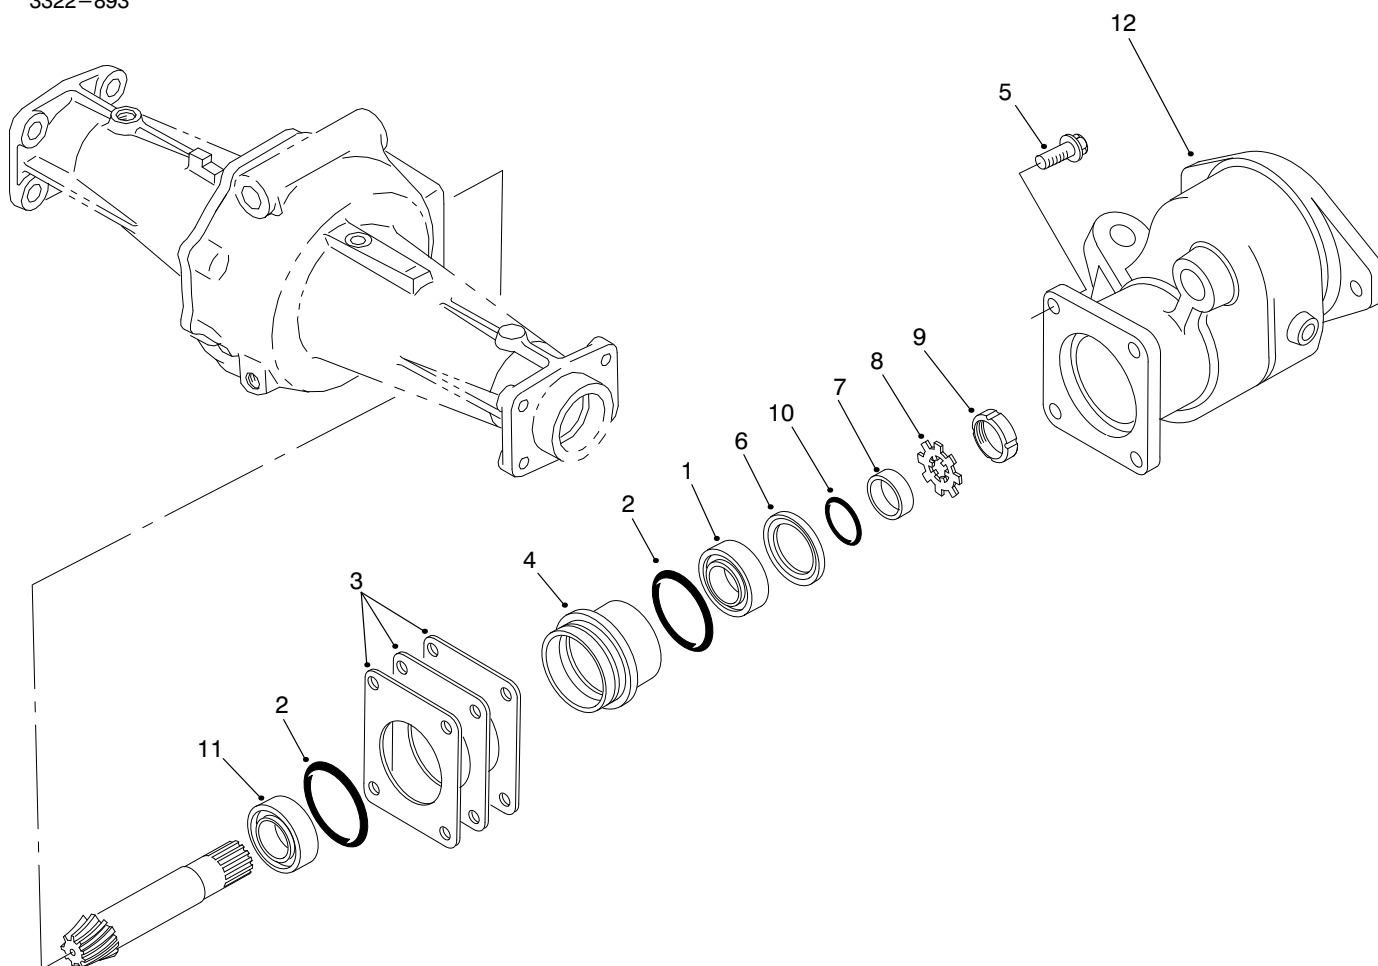 


T-1109-3

SLEEVE ASSEMBLY AXLE NO. 98-2447

Ref. No.	Part No.	Description	No. Used
1	76-7330	Bearing	1
2	76-7400	O-Ring	2
3	76-7410	Shim-0.1 mm	A/R
*	76-7420	Shim-0.2 mm	A/R
*	76-7430	Shim-0.4 mm	A/R
4	76-7320	Sleeve	1
5	93-7773	Bolt	4
6	76-7340	Seal-Oil	1

Ref. No.	Part No.	Description	No. Used
7	76-7350	Bushing	1
8	76-7380	Washer	1
9	76-7390	Nut-Lock	1
10	76-7360	O-Ring	1
11	76-7370	Bearing	1
12	76-8070	Adapter	1
*	77-4010	Shim Set (Incl. Ref. #3)	1

 
*Not Illustrated

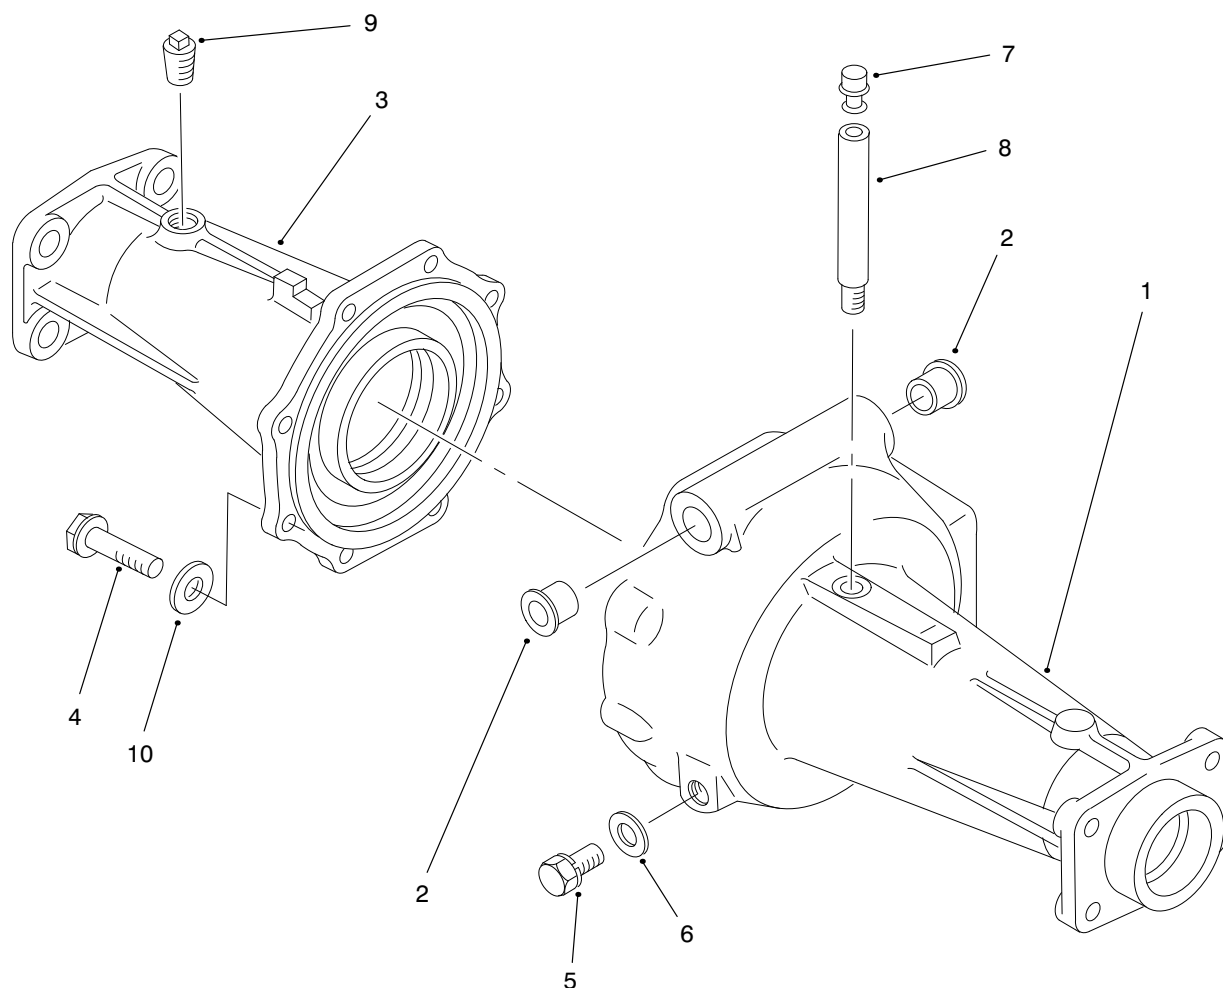

T-1112-2

AXLE HOUSING ASSEMBLY NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7778	Housing-Axle A	1	6	76-7120	Seal-Washer	1
2	93-7787	Bushing-Flange	2	7	76-7480	Plug-Vent	1
3	93-7779	Housing-Axle B	1	8	76-7470	Pipe	1
4	93-7782	Screw-HHF	8	9	76-7140	Plug	1
5	76-7110	Plug	1	10	93-7781	Washer	8

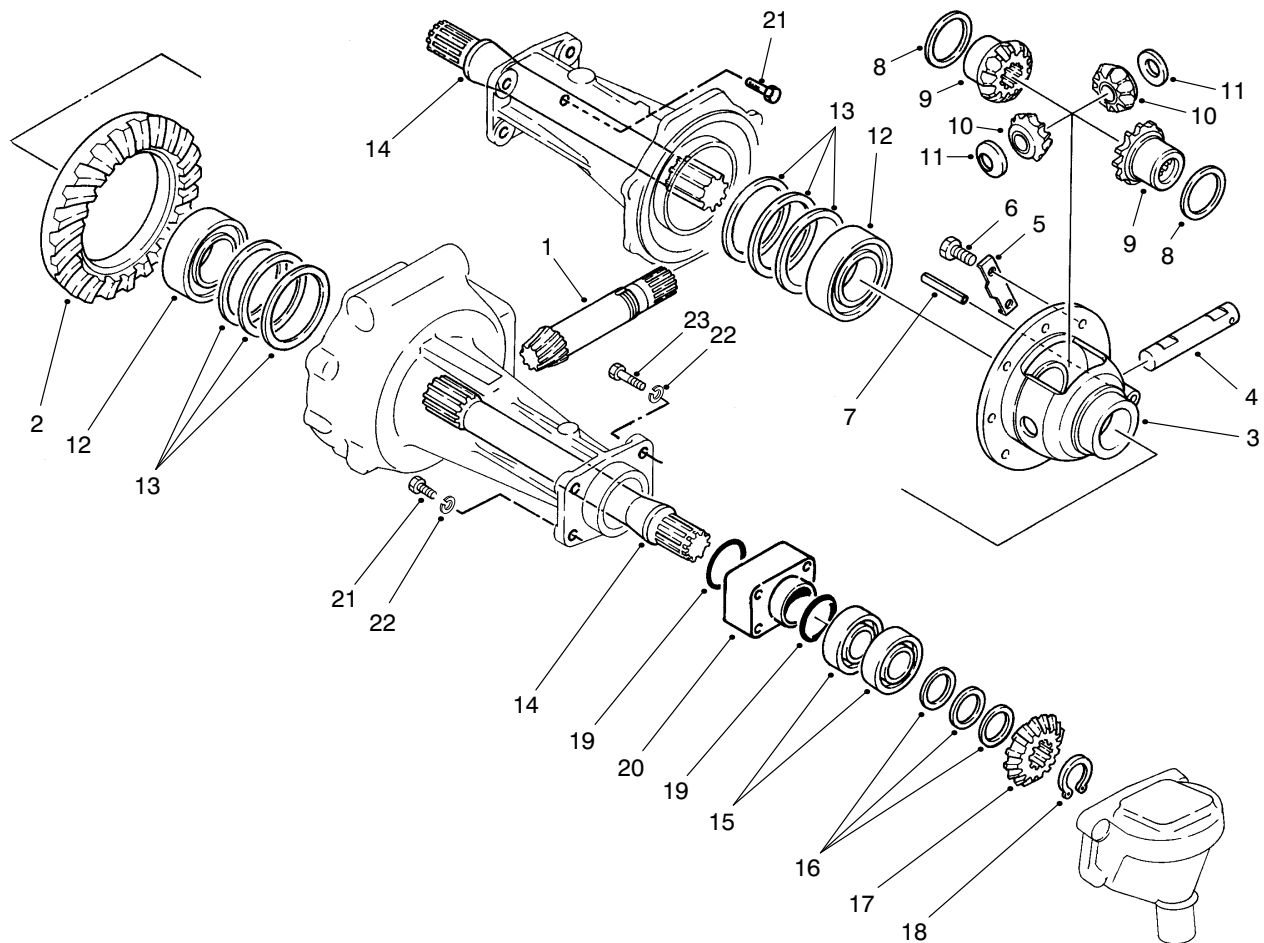 


T-1111-2

DIFFERENTIAL & SHAFT ASM NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft-Drive	1	16	76-7520	Shim-0.1 mm	A/R
2	76-7240	Ring-Gear	1	*	76-7530	Shim-0.2 mm	A/R
3	76-7170	Case-Differential	1	*	76-7540	Shim-0.4 mm	A/R
4	76-7200	Shaft-Pinion	1	17	76-7510	Pinion-14T	2
5	76-7230	Washer-Lock	4	18	76-7550	Ring-Retaining	2
6	76-7260	Bolt	8	19	76-7580	O-Ring	4
7	76-7270	Pin-Spring	1	20	76-7590	Spacer	2
8	76-7220	Washer-Thrust	2	21	76-7600	Bolt-Reamer	2
9	76-7190	Gear-Side	2	22	76-7620	Washer-Lock	8
10	76-7180	Pinion-Mate	2	23	76-7610	Bolt	6
11	76-7210	Washer-Thrust	2	*	76-7160	Asm-Gear Case (Incl. Ref. #2-11)	1
12	76-7280	Bearing	2	*	77-4000	Shim Set (Incl. Ref. #13)	1
13	76-7290	Shim-0.1 mm	A/R	*	77-4020	Shim Set (Incl. Ref. #16)	1
*	76-7300	Shim-0.2 mm	A/R				
*	76-7310	Shim-0.3 mm	A/R				
14	76-7490	Shaft-Differential	2				
15	76-7500	Bearing	4				

 *Not Illustrated

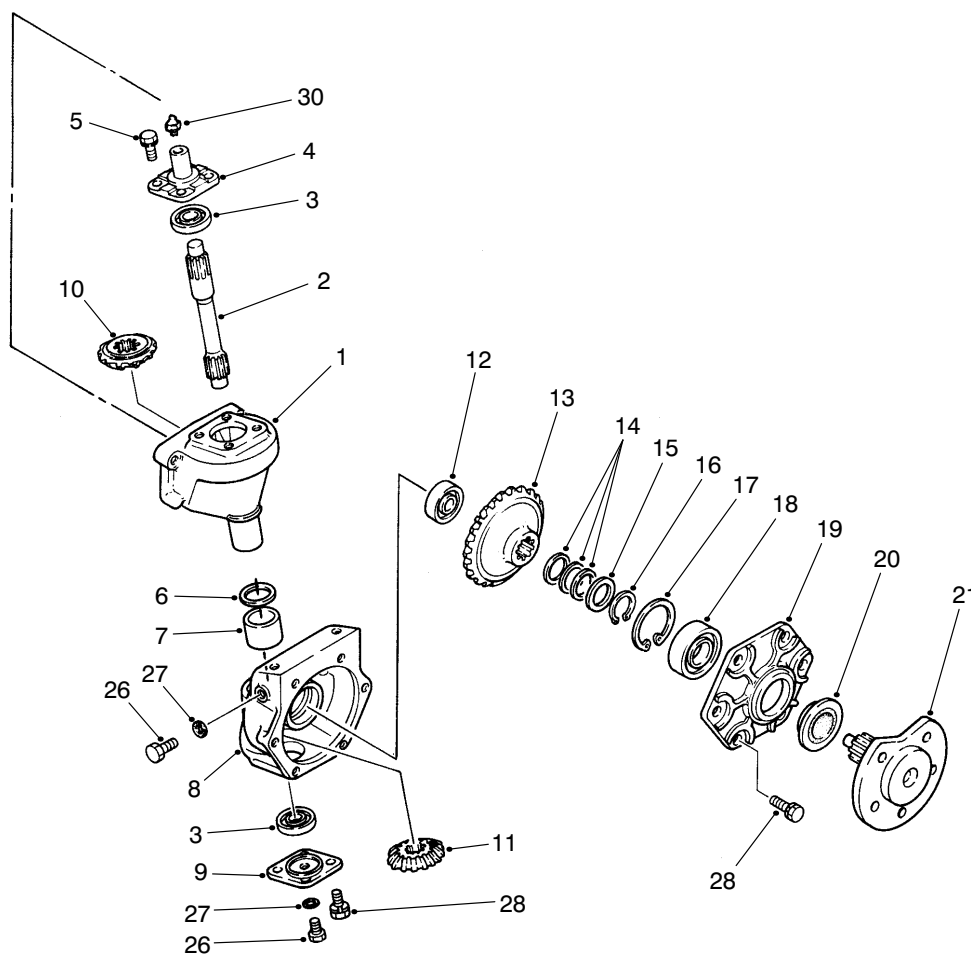


T-1110-1

STEERING GEAR CASE ASM NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7560	Case-Gear	2	*	76-7910	Shim-0.4 mm	A/R
2	76-7650	Shaft-Final Drive	2	15	76-7880	Spacer	2
3	76-7670	Bearing	4	16	76-7920	Ring-Retaining	2
4	76-7660	Holder-20 mm LH	1	17	76-7930	Ring-Retaining	2
*	76-7630	Holder-25 mm RH	1	18	93-7775	Bearing	2
5	76-7640	Bolt	8	19	76-7810	Holder-Bearing	2
6	76-7740	Seal-Oil	2	20	76-7870	Seal-Oil	2
7	76-7730	Bushing	2	21	76-7830	Shaft-Wheel	2
8	76-7680	Case-Final Drive	2	26	76-7110	Plug	4
9	76-7770	Cover	2	27	76-7120	Seal-Washer	4
10	76-7510	Pinion-14T	2	28	76-7640	Bolt	20
11	76-7750	Pinion-15T	2	30	76-7960	Fitting-Grease	2
12	94-2803	Bearing	2	*	77-4030	Shim Set (Incl. Ref. #14)	1
13	76-7840	Gear-Bevel	2				
14	76-7890	Shim-0.15 mm	A/R				
*	76-7900	Shim-0.2 mm	A/R				

 *Not Illustrated

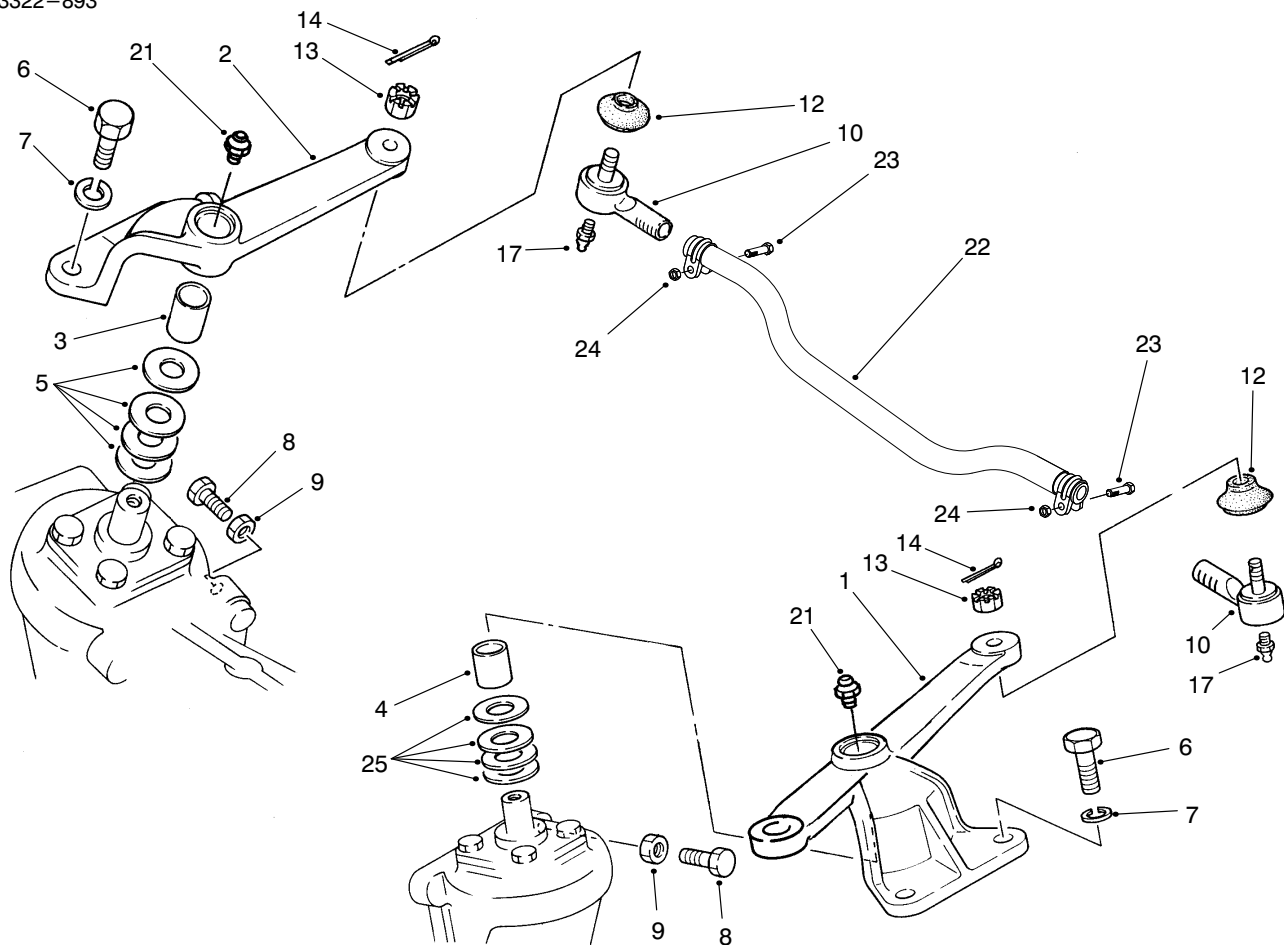


T-2937-1

STEERING ARM LINKAGE ASM NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used
1	98-2444	Arm- Drag Link	1
2	98-2446	Arm- Tie Rod	1
3	76-4260	Bushing	1
4	76-7950	Bushing	1
5	76-7820	Shim-1.0 mm	A/R
*	76-7970	Shim-1.4 mm	A/R
*	76-7980	Shim-1.2 mm	A/R
*	76-7990	Shim-.08 mm	A/R
6	76-8000	Bolt	4
7	76-8010	Washer	2
8	76-7710	Bolt	2
9	76-7720	Nut	4
10	2411-45	Tie Rod End	2
12	71-4760	Seal	2
13	32136-13	Nut-Hex. Slotted	2
14	3272-7	Pin-Cotter	2

Ref. No.	Part No.	Description	No. Used
17	302-55	Fitting-Grease	2
21	76-7960	Fitting-Grease	2
22	98-8841	Asm-Bar & Clamp	1
23	323-9	Screw-HH	2
24	3296-39	Nut-Lock	2
25	76-7700	Shim-0.8 mm	A/R
*	76-7760	Shim-1.0 mm	A/R
*	76-7780	Shim-1.2 mm	A/R
*	76-7790	Shim-1.4 mm	A/R
*	77-4050	Shim Set (Incl. Ref. #5)	1
*	77-4040	Shim Set (Incl. Ref. #25)	1
*	98-8838	Tie Rod-4WD (Incl. Ref. #10-13, 17 & 22-24)	1

 *Not Illustrated

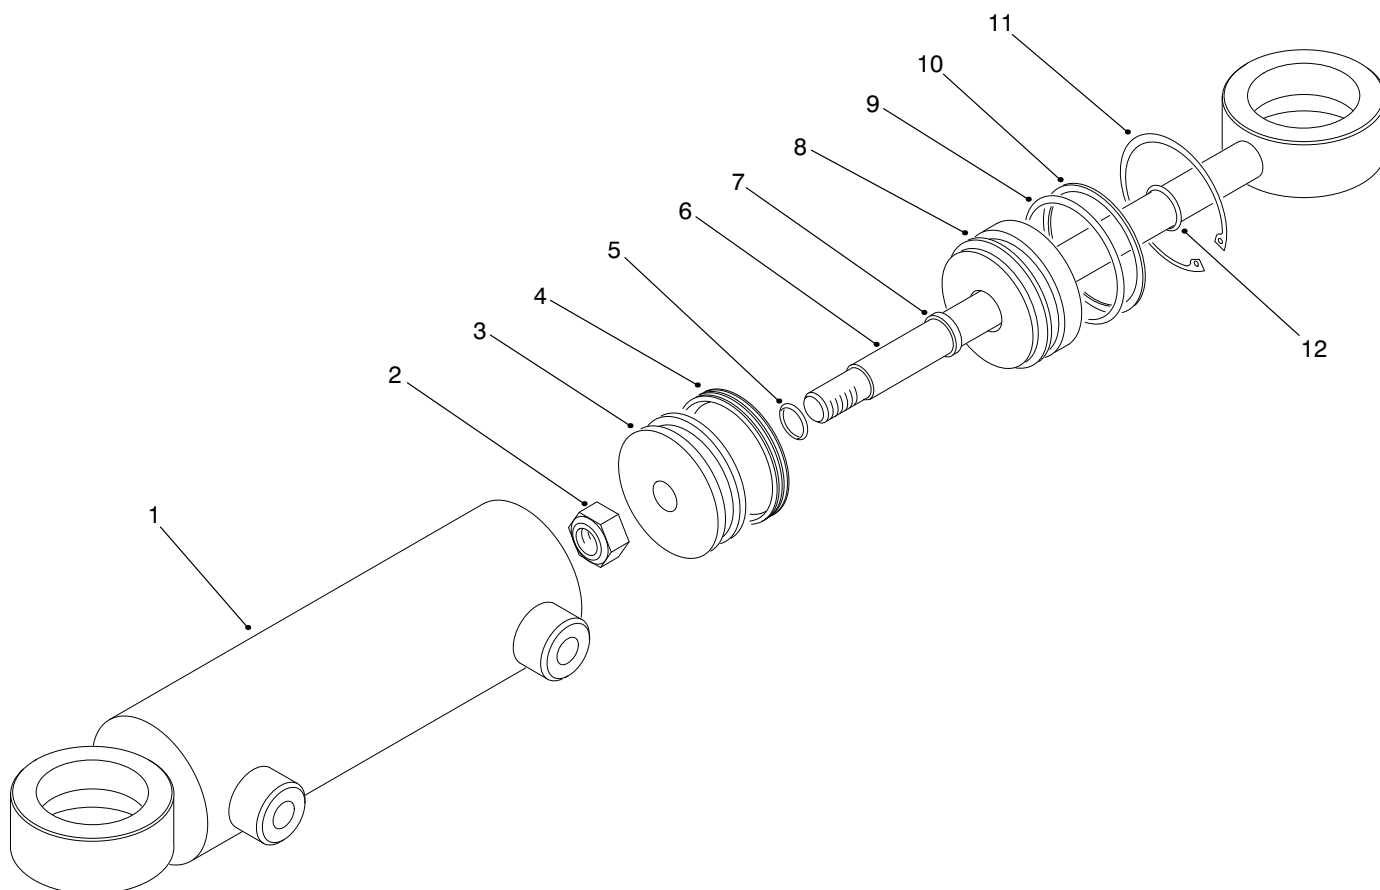


T-2452-1

HYDRAULIC STEERING CYLINDER NO. 94-8141

Ref. No.	Part No.	Description	No. Used
1	94-9955	Asm-Barrel	1
2	32152-10	Nut-Lock	1
3	94-9957	Piston	1
4		Uniring	1
5		O-Ring	1
6	94-9956	Asm-Piston Rod	1
7		Seal-Rod	1
8	94-9958	Gland-Cylinder	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		Backup	1
11	32120-8	Ring-Retaining	1
12		O-Ring	1
*	86-5390	Kit-Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12)	1

 *Not Illustrated

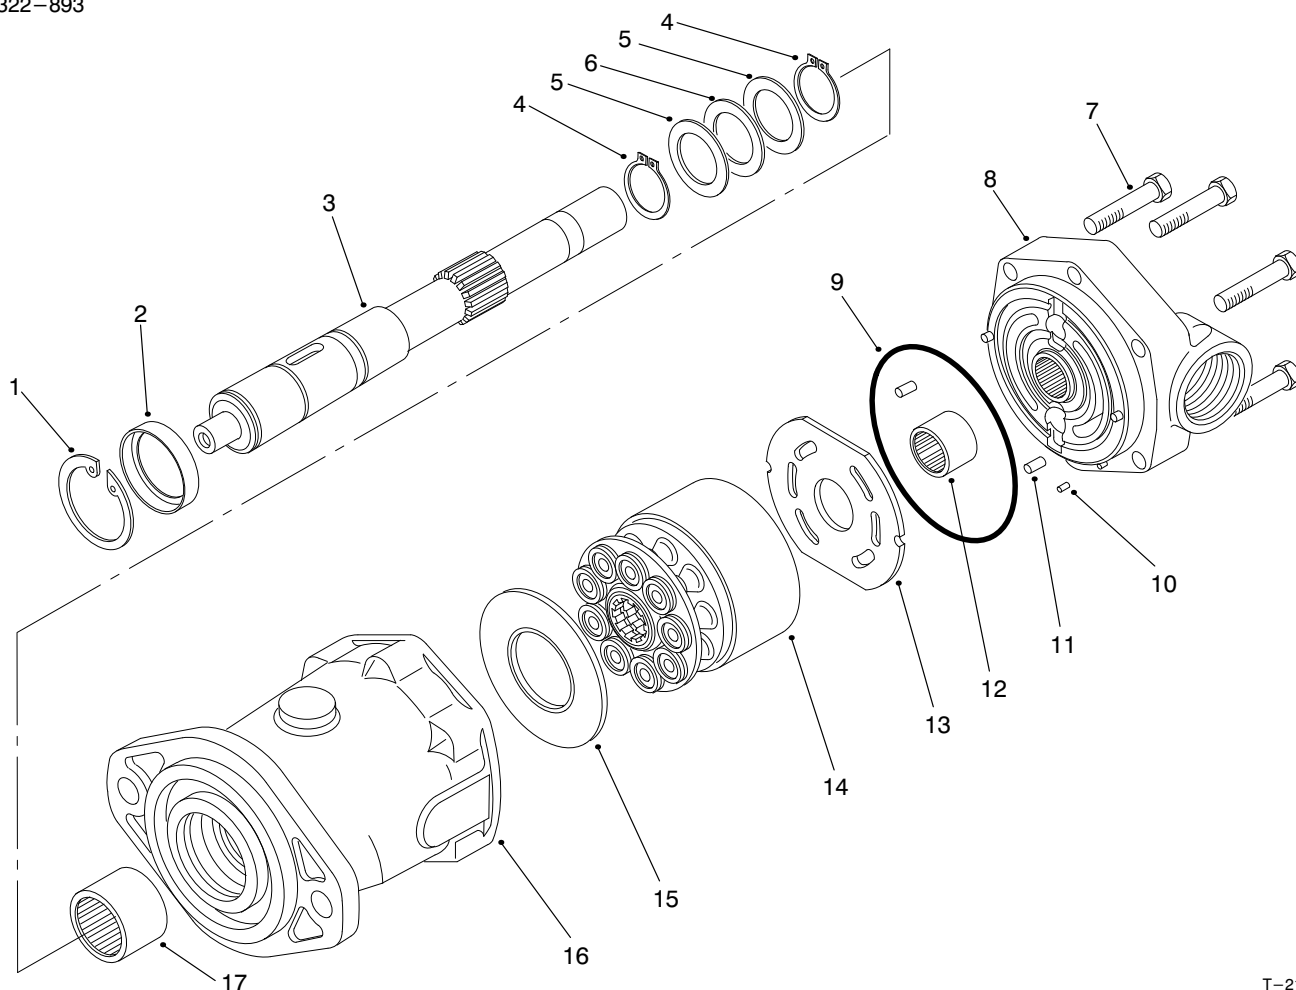


T-2118-1

4 WD HYDRAULIC MOTOR ASSEMBLY NO. 92-7386

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	76-7020	Spacer	1
3	76-6930	Shaft-Drive, Straight	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3002	Screw-HH	6
8	94-3000	Asm-Backplate (Incl. Ref. #10-12)	1
9	76-6980	O-Ring	1

Ref. No.	Part No.	Description	No. Used
10		Pin-Dowel	3
11		Pin-Dowel	1
12		Bearing-Needle	1
13	94-3003	Plate-Valve	1
14	76-6910	Kit-Rotating	1
15	76-6970	Insert-Camplate	1
16	94-3001	Housing (Incl. Ref. #17)	1
17		Bearing-Needle	1

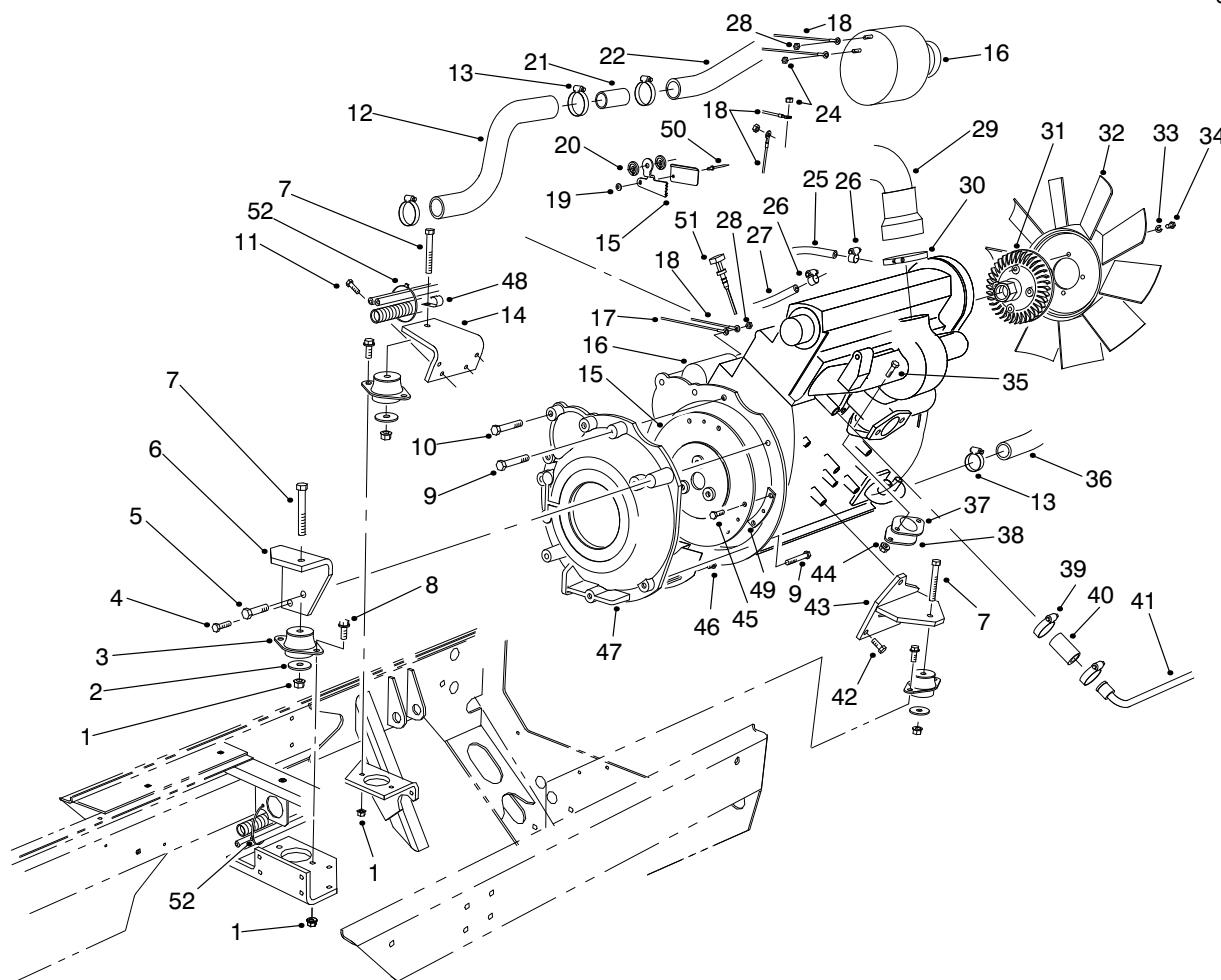 


T-2074-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33005-00	Nut-HF	9	27	63-7627	Hose-Fuel	1
2	87-5100	Washer-Snubbing	3	28	48-7930	Nut-Hex.	2
3	53-9681	Mount-Rubber	3	29	94-2624	Hose-Manifold	1
4	48-9470	Screw	1	30	2412-125	Clamp-Hose	1
5	48-7840	Screw-HH	1	31	92-7466	Clutch-Fan	1
6	92-7425	Support-Mount, Engine	1	32	74-3650	Fan-Engine	1
7	33105-070	Screw-HHF	3	33	3253-4	Washer-Lock	4
8	33105-030	Screw-HHF	6	34	33104-016	Screw-HH	4
9	48-7570	Screw-HH	3	35	33104-020	Screw-HHF	2
10	48-7810	Screw-HH	3	36	92-7463	Hose-Radiator, Lower	1
11	66-3160	Screw	4	37	77-3700	Gasket-Exhaust, Manifold	1
12	94-1418	Hose-Radiator, Upper	1	38	92-7382	Cover-Manifold	1
13	2412-3	Clamp-Hose	4	39	2412-129	Clamp-Hose	4
14	92-7429	Mount-Motor, RH	1	40	74-6490	Hose-Water Line	2
15	94-1421	Coupling-Center, Spring	1	41	92-7381	Tube-Water, Return	1
16	93-4233	Asm-Engine	1	42	48-7780	Screw-HH	3
17	75-1370	Cable-Battery, Positive	1	43	92-7426	Mount-Motor	1
18	99-8963	Harness-Wire, Main	1	44	33004-00	Nut-HF	2
*	94-9967	Circuit Breaker-50 Amp	1	45	48-7700	Screw-HH	6
*	94-9968	Circuit Breaker-100 Amp	1	46	48-7610	Screw-HH	3
19	3256-49	Washer-Flat	1	47	82-5120	Adapter-Pump To Engine	1
20	86-2990	Mount-Cable, Throttle	2	48	2412-150	J-Clip	1
21	93-7594	Spacer-Tubular	1	49	92-1422	Spacer-Coupler	3
22	93-4215	Hose-Radiator, Upper Rear	1	50	3290-282	Rivet-Pop	1
24	48-7880	Nut	3	51	93-9176	Dipstick-Peugeot	1
25	92-7521	Hose-Fuel	1	52	3290-378	Tie-Cable	2
26	2412-108	Clamp-Hose	2				

 *Not Illustrated

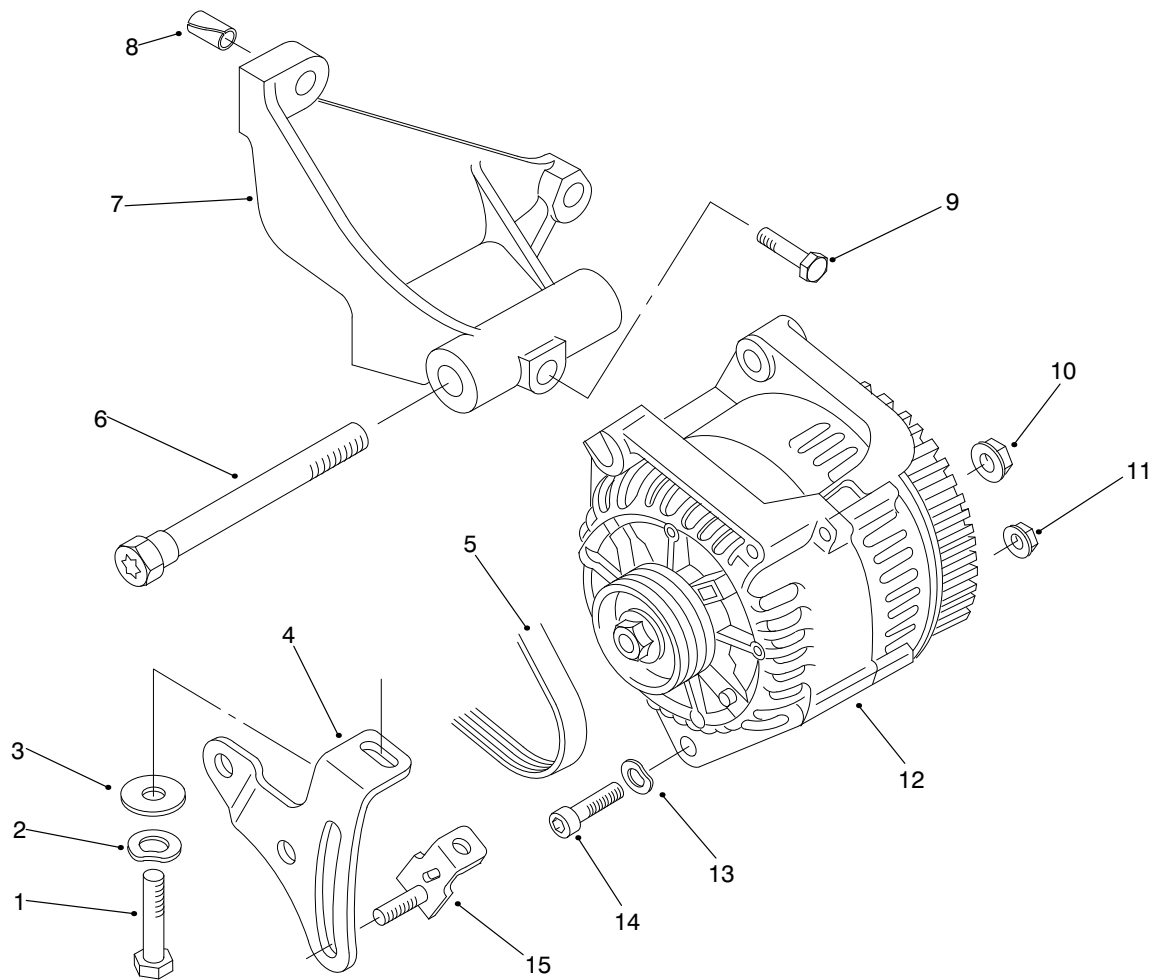


T-2147

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5060	Screw	1
2	76-5010	Washer-Spring	1
3	94-3260	Washer-Flat	1
4	94-3255	Slide	1
5	94-3256	Belt	1
6	94-3254	Screw	1
7	94-3253	Bracket	1
8	74-8610	Pin	2


Ref. No.	Part No.	Description	No. Used
9	94-3259	Screw	1
10	94-3262	Nut	1
11	94-3261	Nut	1
12	94-3252	Alternator	1
13	94-3257	Washer-Spring	1
14	94-3258	Screw	1
15	76-4990	Bracket	1

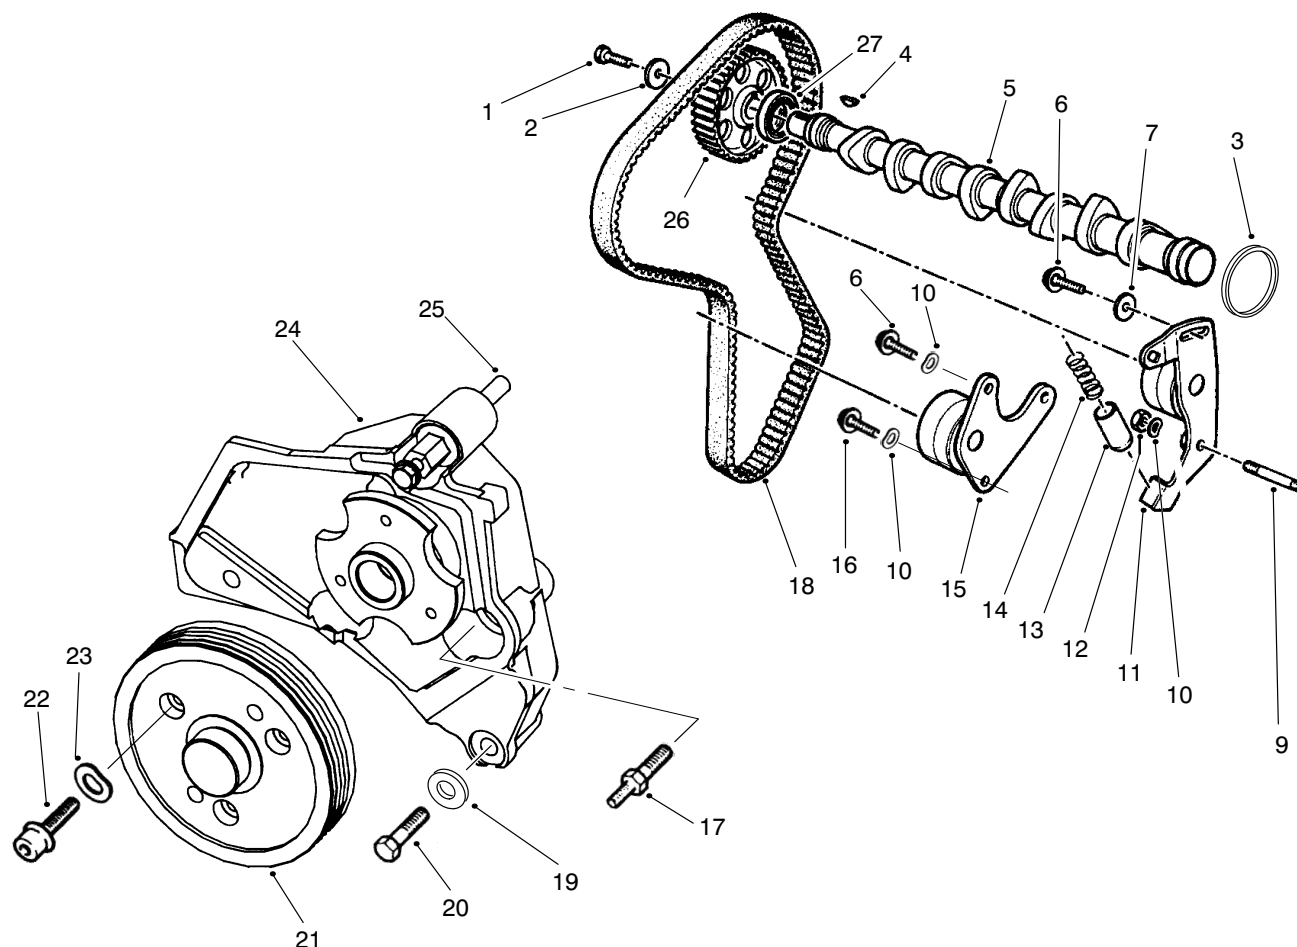 

T-2141-1

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2	15	94-3160	Asm-Roller	1
2	77-3450	Washer	2	16	94-3161	Screw	2
3	77-3420	Gasket	1	17	94-3170	Screw	1
4	77-3410	Key	1	18	74-8830	Belt	1
5	77-3400	Camshaft	1	19	94-3172	Washer	3
6	94-3163	Screw	1	20	94-3171	Screw	2
7	94-3166	Washer-Flat	1	21	94-3168	Pulley-Fan	1
9	94-3162	Stud	1	22	94-3173	Screw	3
10	94-3164	Washer-Spring	4	23	76-5010	Washer	3
11	94-3159	Asm-Roller	1	24	94-3167	Bracket-Fan	1
12	94-3165	Nut-Lock	1	25	94-3169	Screw	1
13	77-3520	Cup	1	26	92-7787	Pulley-Camshaft	1
14	77-3510	Spring	1	27	94-9994	Gasket-Camshaft	1

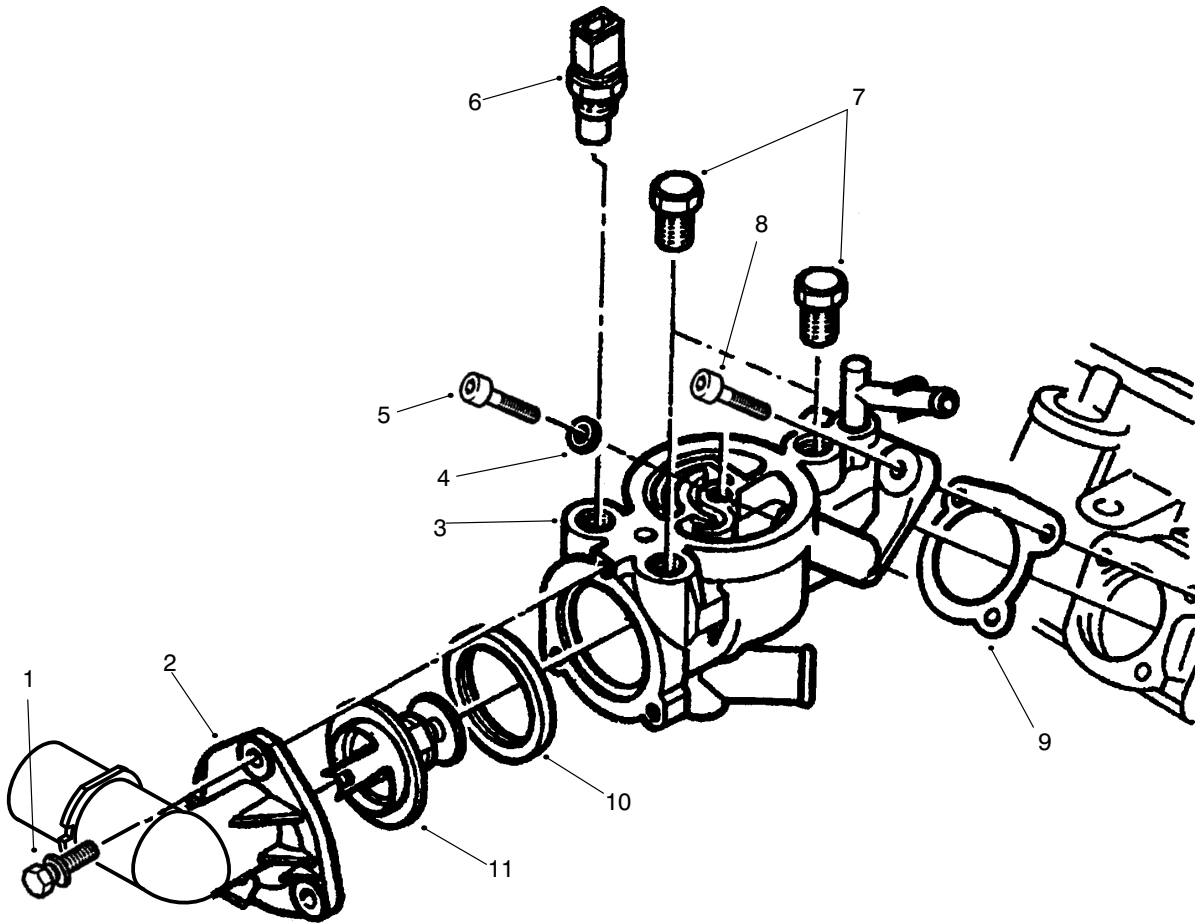 


T-2143-3

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3131	Screw	3
2	94-3208	Stub-Outlet	1
3	98-9970	Box-Outlet	1
4	94-3207	Ring	1
5	94-3214	Screw	1
6	94-3211	Temp Sending Unit	1

Ref. No.	Part No.	Description	No. Used
7	94-3212	Plug	2
8	94-3213	Screw	1
9	94-3206	Gasket	1
10	94-3210	Gasket	1
11	94-3209	Thermostat	1

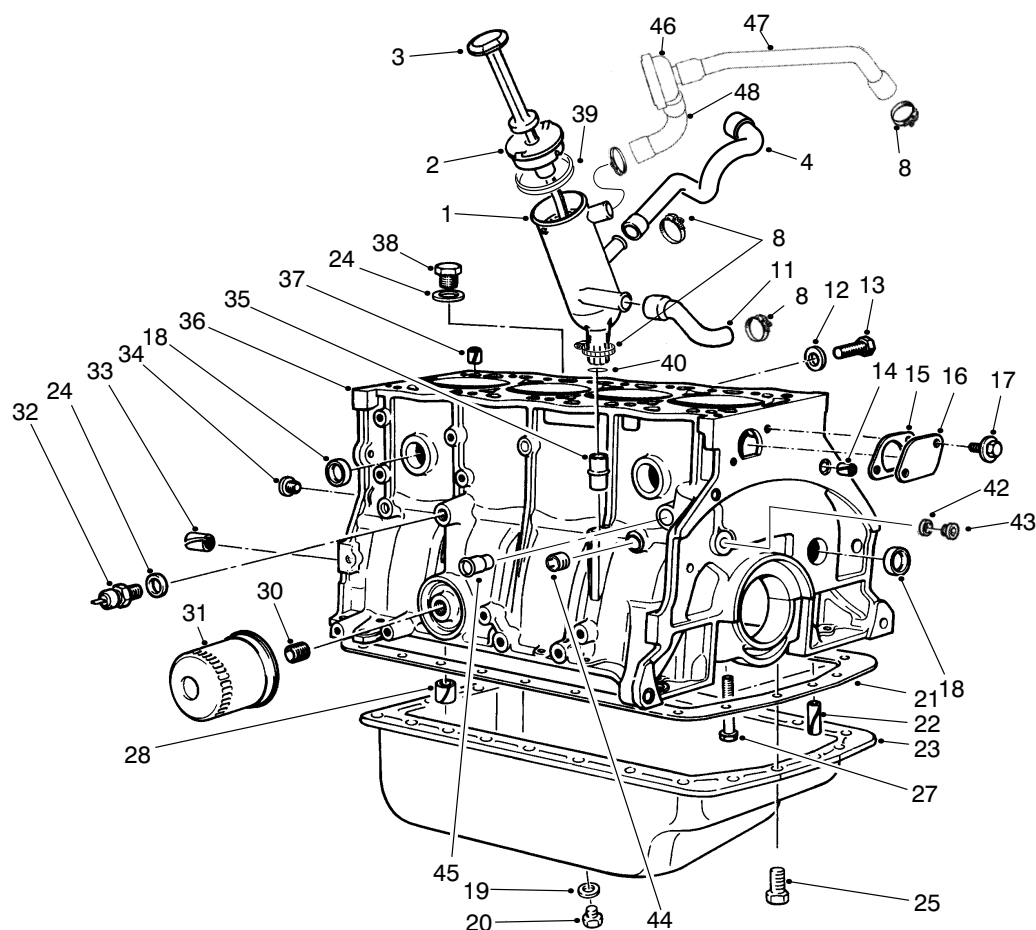 


T-2142-3

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3181	Oil Filler (Incl. Ref. 39)	1	27	74-7930	Screw-Bearing Cap	10
2	94-3182	Plug	1	28	74-7940	Bushing-Spring	1
3	93-9176	Dipstick-Oil	1	29	74-7950	Screw-Plate	6
4	94-3184	Union	1	30	74-7960	Stud-Filter	1
8	2412-129	Clamp-Hose	8	31	74-7970	Filter-Oil	1
11	74-7770	Hose-Crankcase	1	32	94-3180	Switch-Pressure	1
12	74-7780	Gasket	1	33	74-7990	Pin-Spring	4
13	74-7790	Screw	1	34	74-8000	Plug	2
14	94-3102	Pin	2	35	74-8010	Guide-Dipstick	1
15	74-7810	Gasket-Plate	1	36	94-3100	Asm-Short Block (Incl. Pistons next page)	1
16	74-7820	Plate	1	37	74-8030	Pin-Spring	1
17	94-3112	Screw-Washer Hd.	2	38	94-3105	Plug-Drain	1
18	74-7840	Plug-27 mm Dia.	8	39	94-3183	Gasket	1
*	94-3108	Plug-27.5 mm Dia.	8	40	94-3186	O-Ring	1
*	94-3109	Plug-28.5 mm Dia.	9	42	94-3106	Gasket	2
19	74-7320	Gasket	1	43	94-3104	Plug-Threaded	2
20	74-7310	Plug-Threaded	1	44	94-3103	Plug-Threaded	1
21	74-7380	Gasket-Oil Pan	1	45	94-3110	Stud	1
22	94-3111	Pin-Groove	2	46	94-3190	PCV Valve	1
23	74-7300	Pan-Oil	1	47	94-3192	Union	1
24	94-3107	Gasket	2	48	94-3191	Union	1
25	74-7330	Screw-HH	23	*	94-3101	Gasket Set (Without Head Gasket)	1
26	77-3790	Plug-Drain	1				

 *Not Illustrated

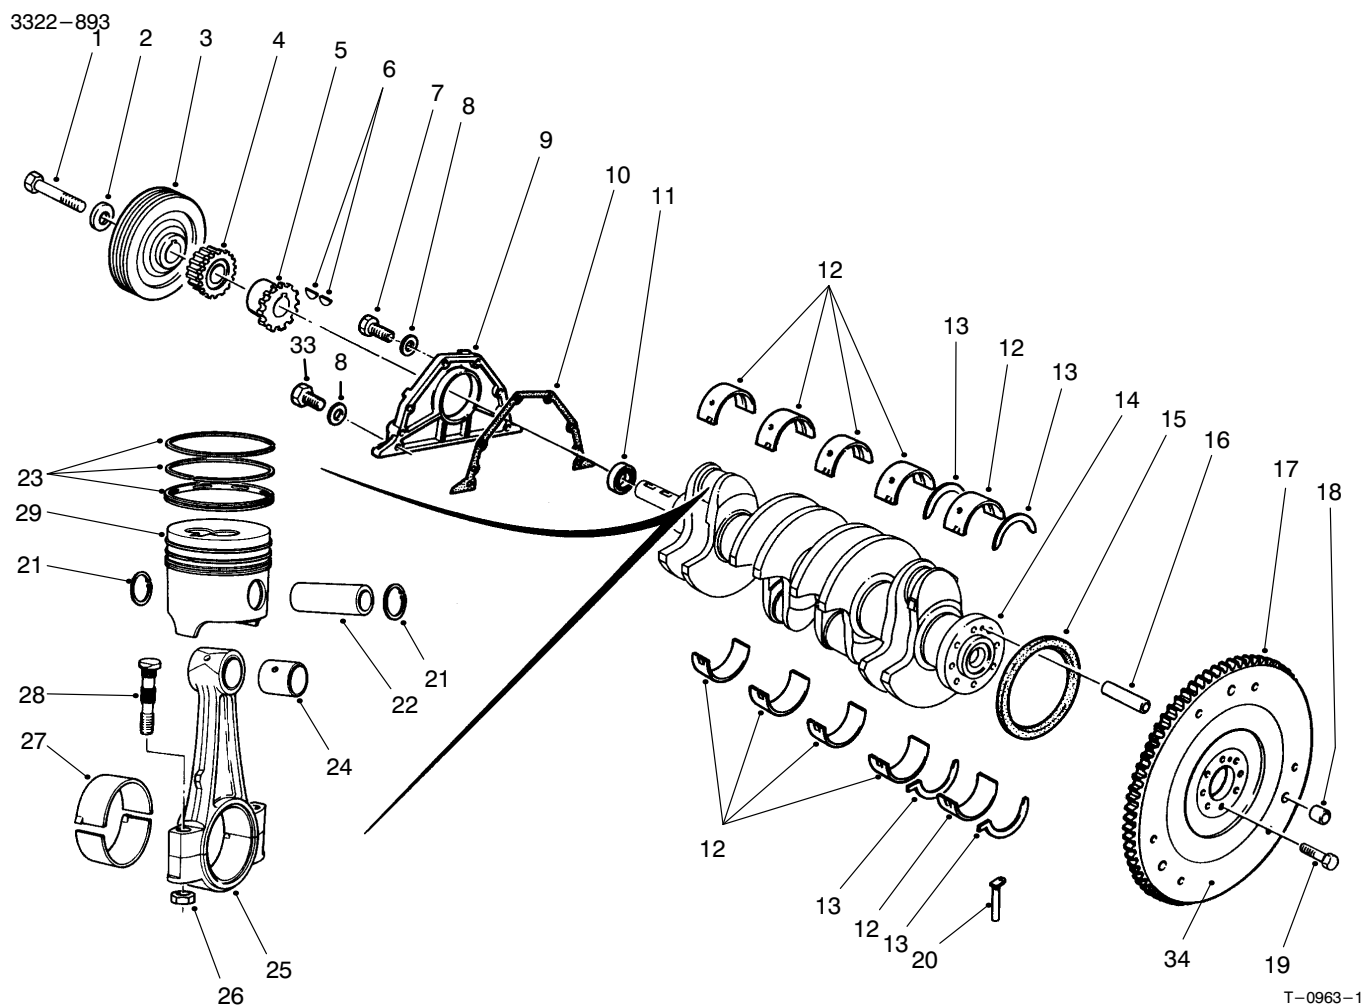


T-0963-1

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3145	Screw-HH	1
2	94-3146	Washer	1
3	94-3144	Pulley	1
4	74-8100	Gear-Pinion	1
5	95-3485	Sprocket-Oil Pump	1
6	74-8120	Key-Woodruff	2
7	94-3150	Screw-HH	4
8	94-3151	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket-Cover	1
11	94-3148	Seal-Shaft	1
12	74-8170	Bearing Set (Std.)	2
*	94-3140	Bearing Set (.30mm OS)	2
13	94-3141	Thrust Bearing Set (Std.)	2
*	94-3142	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	94-3143	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	94-3147	Seal	1
16	74-7990	Pin	1
17	94-3149	Gear-Flywheel	1
18	74-8270	Pin	3
19	95-3484	Screw-HH	8
20	74-8290	Seal-#1 Bearing Cap	2
21	74-8300	Clip-Piston Pin	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
22	74-8310	Pin-Piston	4
23	94-3158	Piston Ring Set Std.	4
*	74-8320	Piston Ring Set-0.20 mm	4
*	74-8330	Piston Ring Set-0.50 mm	4
*	74-8340	Piston Ring Set-0.80 mm	4
24	98-9965	Bushing-Sleeve	4
25	74-8360	Rod-Connecting (Set of 4)	4
26		Nut-Hex.	8
27	74-8380	Bearing-Connecting Rod (Std.)	4
*	94-3155	Bearing-Connecting Rod (49.7mm ID)	4
28	94-3156	Bolt-Connecting Rod (Incl. Ref. #26)	8
29	94-3157	Piston Set-Std. (Incl. Ref. #21-23)	1
29	74-8420	Piston Set-Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
*	74-8430	Piston Set-Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set-Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	94-3152	Screw-HH	2
34	74-8260	Flywheel	1

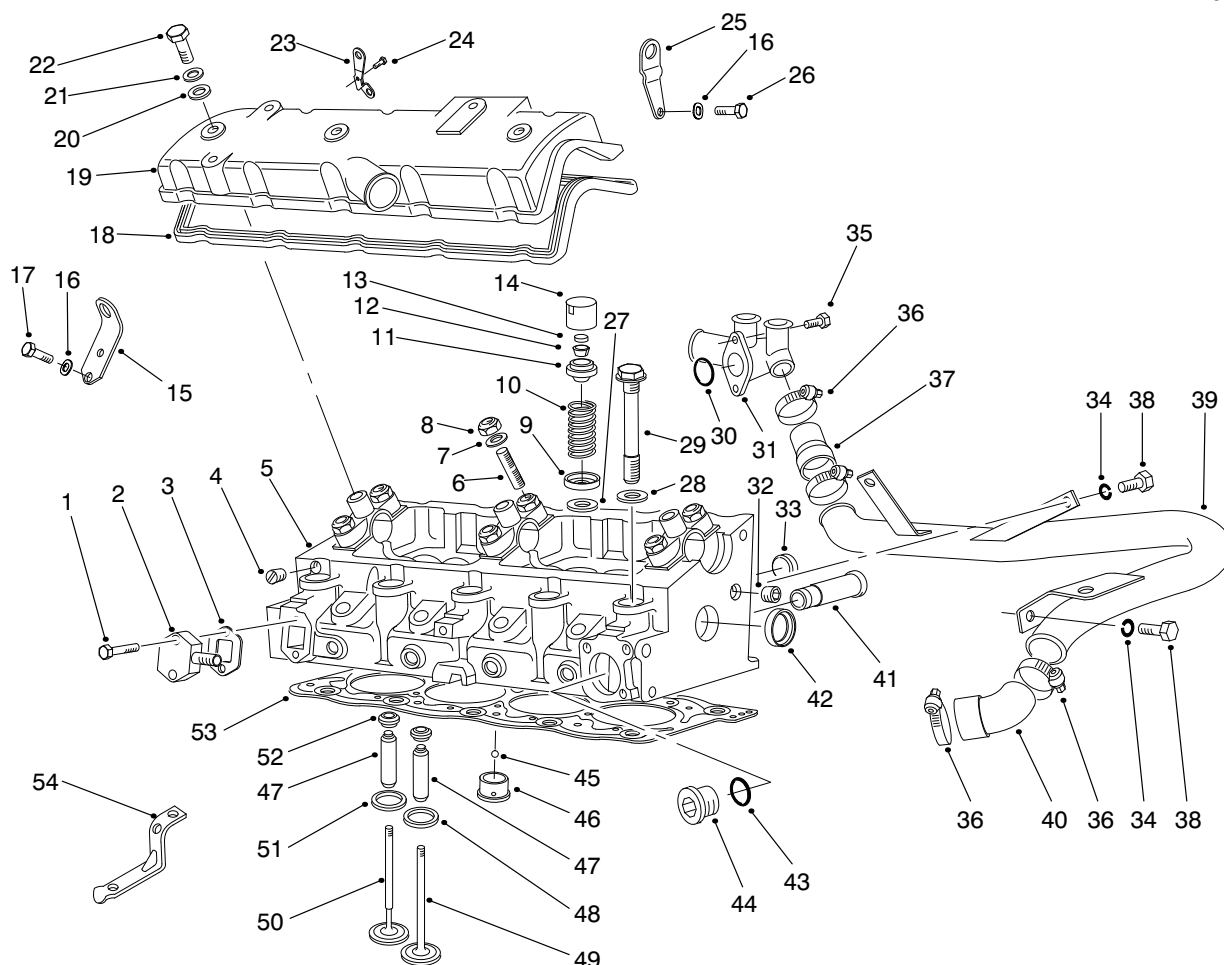 


T-2148-4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3123	Screw-HH	2	13	74-6720	Insert-Valve (2.400mm)	8
2	94-3117	Plate	1	*	74-6730	Insert-Valve (2.425mm)	8
3	94-3116	Gasket	1	*	74-6740	Insert-Valve (2.450mm)	8
4	74-7600	Plug	4	*	74-6750	Insert-Valve (2.475mm)	8
5	94-3113	Asm-Cylinder Head	1	*	74-6760	Insert-Valve (2.500mm)	8
6	76-5130	Stud	6	*	74-6770	Insert-Valve (2.525mm)	8
7	74-8900	Washer-Flat	6	*	74-6780	Insert-Valve (2.550mm)	8
8	94-3115	Nut-Lock	6	*	74-6790	Insert-Valve (2.575mm)	8
9	74-6570	Cup-Lower Valve Spring	8	*	74-6800	Insert-Valve (2.600mm)	8
10	74-6560	Spring-Valve	8	*	74-6810	Insert-Valve (2.625mm)	8
11	74-6550	Cup-Upper Valve Spring	8	*	74-6820	Insert-Valve (2.650mm)	8
12	74-7240	Collar-Split	16	*	74-6830	Insert-Valve (2.675mm)	8
13	74-6580	Insert-Valve (1.650mm)	8	*	74-6840	Insert-Valve (2.700mm)	8
*	74-6590	Insert-Valve (1.725mm)	8	*	74-6850	Insert-Valve (2.725mm)	8
*	74-6600	Insert-Valve (1.800mm)	8	*	74-6860	Insert-Valve (2.750mm)	8
*	74-6610	Insert-Valve (1.900mm)	8	*	74-6870	Insert-Valve (2.775mm)	8
*	74-6620	Insert-Valve (1.975mm)	8	*	74-6880	Insert-Valve (2.800mm)	8
*	74-6630	Insert-Valve (2.050mm)	8	*	74-6890	Insert-Valve (2.825mm)	8
*	74-6640	Insert-Valve (2.125mm)	8	*	74-6900	Insert-Valve (2.850mm)	8
*	74-6650	Insert-Valve (2.225mm)	8	*	74-6910	Insert-Valve (2.875mm)	8
*	74-6660	Insert-Valve (2.250mm)	8	*	74-6920	Insert-Valve (2.900mm)	8
*	74-6670	Insert-Valve (2.275mm)	8	*	74-6930	Insert-Valve (2.925mm)	8
*	74-6680	Insert-Valve (2.300mm)	8	*	74-6940	Insert-Valve (2.950mm)	8
*	74-6690	Insert-Valve (2.325mm)	8	*	74-6950	Insert-Valve (2.975mm)	8
*	74-6700	Insert-Valve (2.350mm)	8	*	74-6960	Insert-Valve (3.000mm)	8
*	74-6710	Insert-Valve (2.375mm)	8	*	74-6970	Insert-Valve (3.025mm)	8

 *Not Illustrated

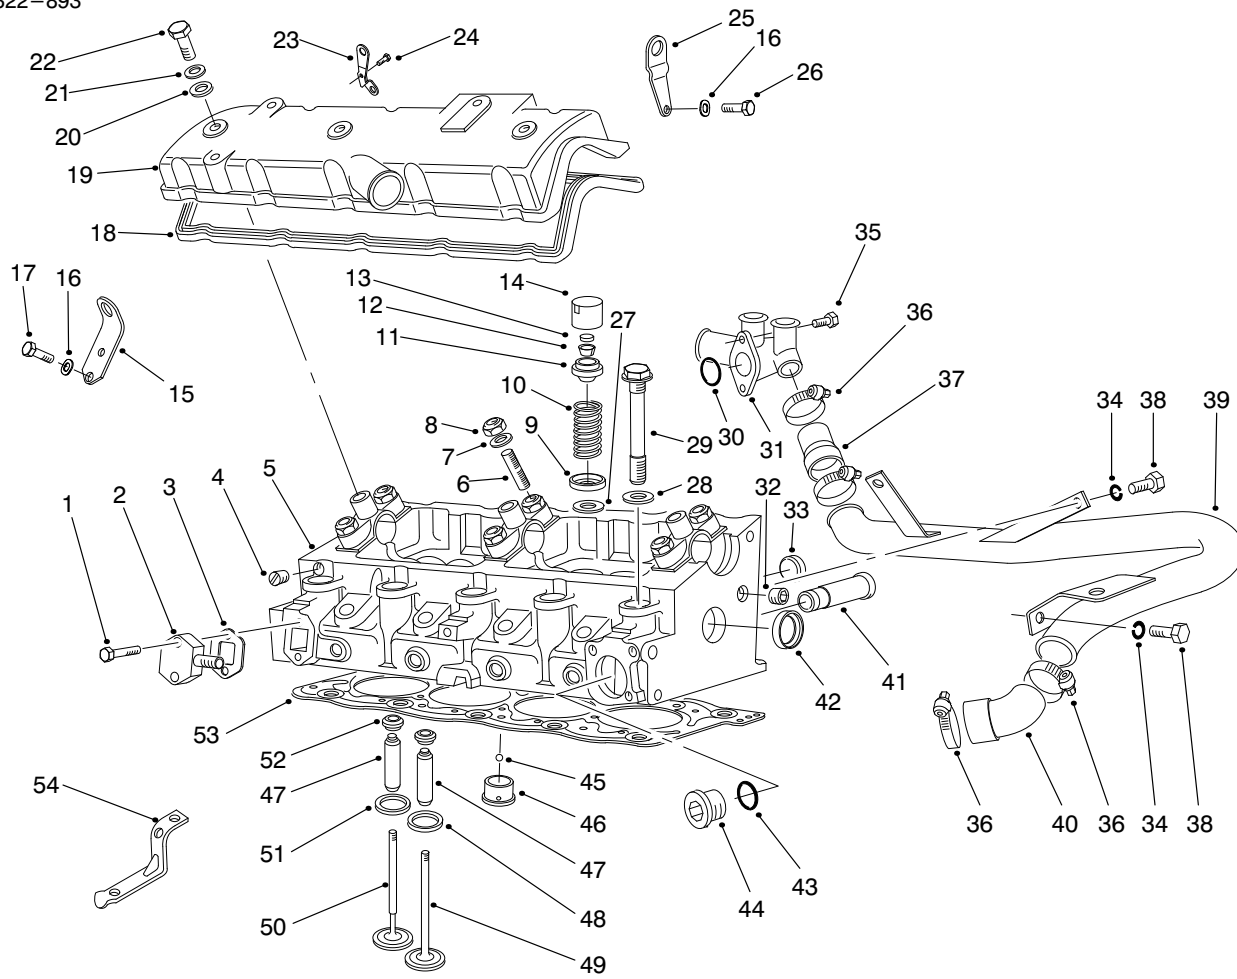


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
13	74-6980	Insert-Valve (3.050mm)	8
*	74-6990	Insert-Valve (3.075mm)	8
*	74-7000	Insert-Valve (3.100mm)	8
*	74-7010	Insert-Valve (3.125mm)	8
*	74-7020	Insert-Valve (3.150mm)	8
*	74-7030	Insert-Valve (3.175mm)	8
*	74-7040	Insert-Valve (3.200mm)	8
*	74-7050	Insert-Valve (3.225mm)	8
*	74-7060	Insert-Valve (3.250mm)	8
*	74-7070	Insert-Valve (3.275mm)	8
*	74-7080	Insert-Valve (3.300mm)	8
*	74-7090	Insert-Valve (3.325mm)	8
*	74-7100	Insert-Valve (3.350mm)	8
*	74-7110	Insert-Valve (3.375mm)	8
*	74-7120	Insert-Valve (3.400mm)	8
*	74-7130	Insert-Valve (3.425mm)	8
*	74-7140	Insert-Valve (3.450mm)	8
*	74-7150	Insert-Valve (3.475mm)	8
*	74-7160	Insert-Valve (3.500mm)	8
*	74-7170	Insert-Valve (3.550mm)	8
*	74-7180	Insert-Valve (3.625mm)	8
*	74-7190	Insert-Valve (3.700mm)	8
*	74-7200	Insert-Valve (3.775mm)	8
*	74-7210	Insert-Valve (3.850mm)	8
*	74-7220	Insert-Valve (3.925mm)	8
*	74-7230	Insert-Valve (4.000mm)	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
14	74-6540	Tappet-Valve	8
15	94-3135	Bracket-Lifting	1
16	74-7560	Washer-Spring	3
17	76-5440	Screw	2
18	74-7630	Gasket-Valve Cover	1
19	74-7640	Cover-Valve	1
20	74-7650	Washer-Flat	3
21	94-3125	Washer	3
22	94-3124	Bolt-Valve Cover	3
23	94-3136	Bracket-Lifting	1
24	94-3138	Screw	1
25	94-3137	Bracket-Lifting	1
26	94-3139	Screw	1
27	94-3174	Washer	8
28	74-7270	Washer-Flat	10
29	74-7260	Bolt-Head	10
30	94-3197	O-Ring	1
31	94-3196	Inlet-Water	1
32	94-3118	Plug	1
33	74-7840	Plug-27 mm Dia.	2
*	94-3108	Plug-27.5 mm Dia.	2
*	94-3109	Plug-28.5 mm Dia.	2
34	68-9420	Washer-Lock	3
35	94-3198	Screw	2
36	2412-129	Clamp-Hose	4
37	94-3200	Hose-By-Pass	1

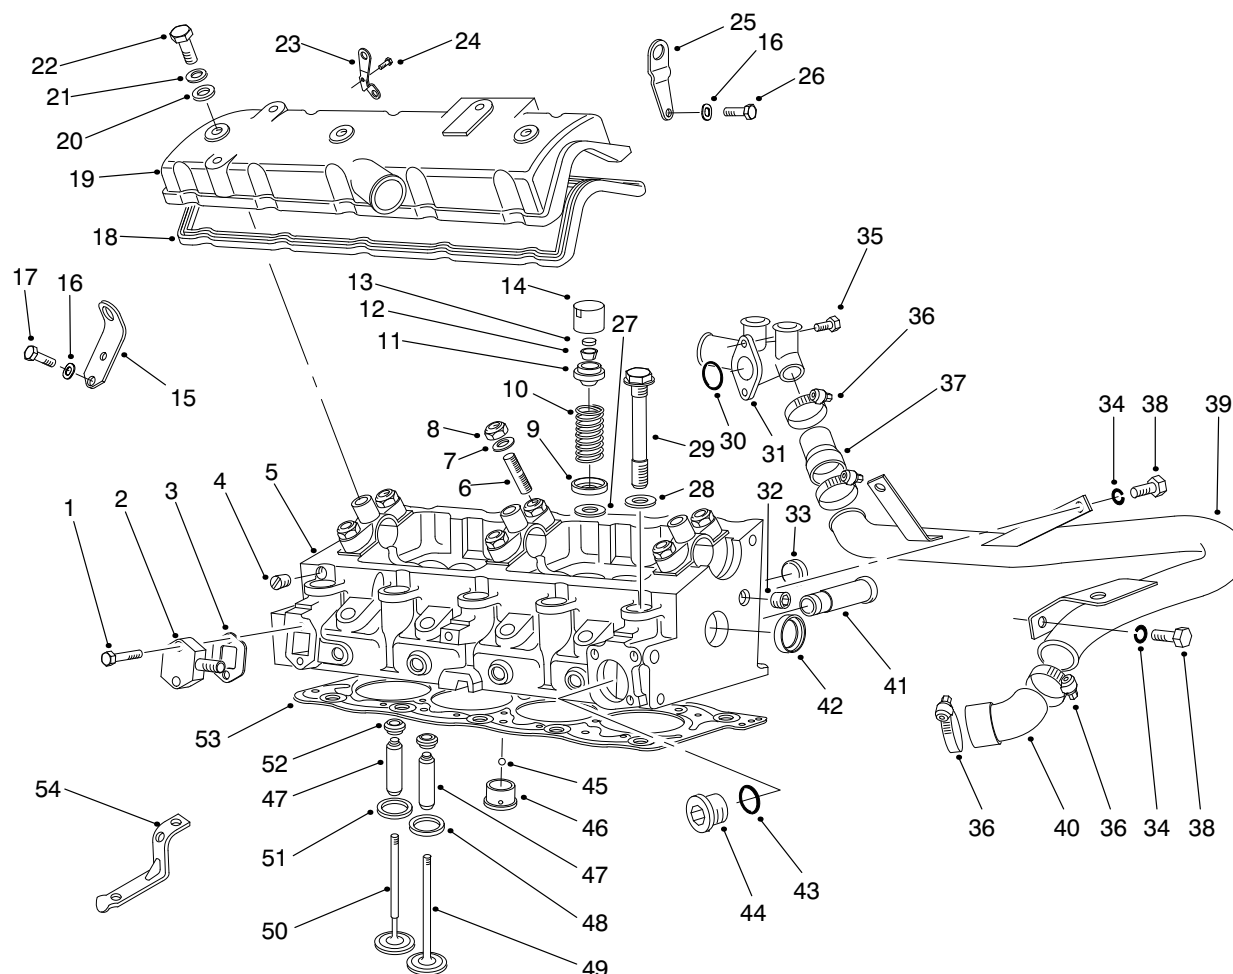 


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
38	48-7700	Screw-HH	3	49	74-7480	Valve-Intake	4
39	94-3199	Pipe-By-Pass	1	50	92-7794	Valve-Exhaust	4
40	98-9971	Hose-By-Pass	1	51	92-7795	Seat-Exhaust Valve (34.5mm)	4
41	74-7400	Tube	1	52	92-7791	Seal-Valve	8
42	74-7840	Plug	2	53	94-8132	Gasket-Head (1.48 mm)	1
43	94-3122	Gasket	1	*	94-8133	Gasket-Head (1.52 mm)	1
44	94-3121	Plug	1	*	94-8134	Gasket-Head (1.58 mm)	1
45	74-7420	Ball	4	*	94-8135	Gasket-Head (1.62 mm)	1
46	74-7430	Chamber-Turbulence (32.45mm)	4	54	94-3120	Bracket	1
*	74-7440	Chamber-Turbulence (32.65mm)	4	*	74-7670	Head Bolt & Washer Set (Incl. Ref. #28 & 29)	1
47	92-7792	Guide-Valve (14.29mm)	8	*	94-3119	Kit-Gasket	1
*	92-7793	Guide-Valve (14.59mm)	8	*	94-9965	Asm-Head, Cylinder	1
48	74-7450	Seat-Intake Valve (39.3mm)	4				
*	74-7460	Seal-Intake Valve (39.5mm)	4				

*Not Illustrated

 3322-893

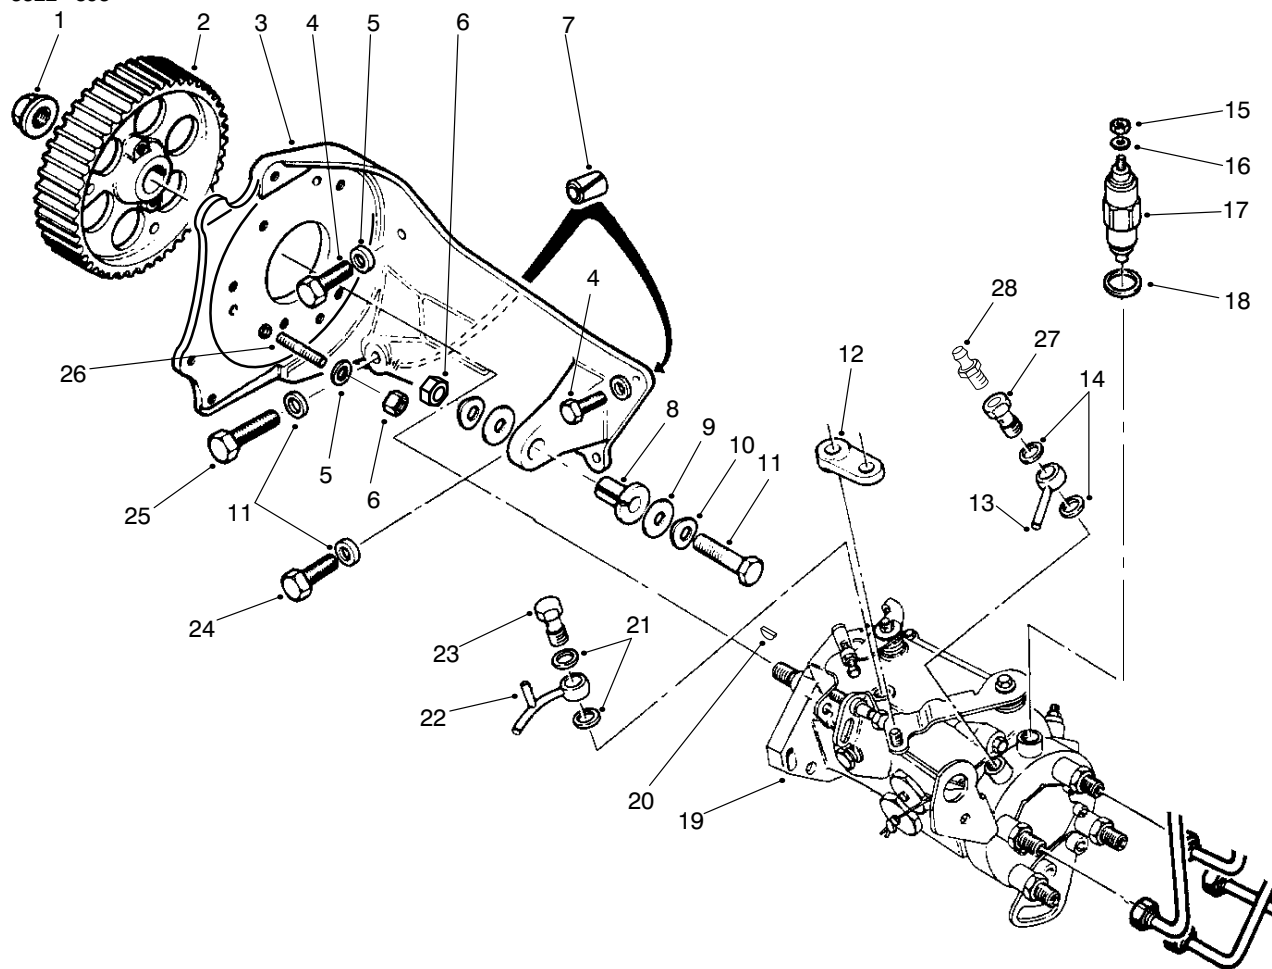


T-2146-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4950	Nut	1
2	76-4940	Gear-Pump, Injection	1
3	94-3220	Bracket	1
4	94-3225	Screw	2
5	76-4930	Washer	3
6	94-3165	Nut	4
7	74-8610	Pin	2
8	74-8630	Bushing-Flange	1
9	94-3224	Washer-Flat	2
10	94-3164	Washer-Spring	6
11	94-3221	Screw	1
12	74-8650	Journal	1
13	74-8670	Union-Inlet	1
14	74-8680	Gasket	2

Ref. No.	Part No.	Description	No. Used
15	94-3251	Nut	1
16	74-8710	Washer	1
17	98-8806	Valve-Solenoid	1
18	94-3274	O-Ring	1
19	94-3219	Pump-Injection	1
20	94-3222	Key	1
21	74-8870	Gasket	2
22	94-3249	Tube-Outlet	1
23	94-3250	Screw-Connection	1
24	94-3161	Screw	1
25	94-3223	Screw	1
26	76-4910	Stud	3
27	94-9969	Screw-Connection	1
28	93-5835	Screw-Purge	1

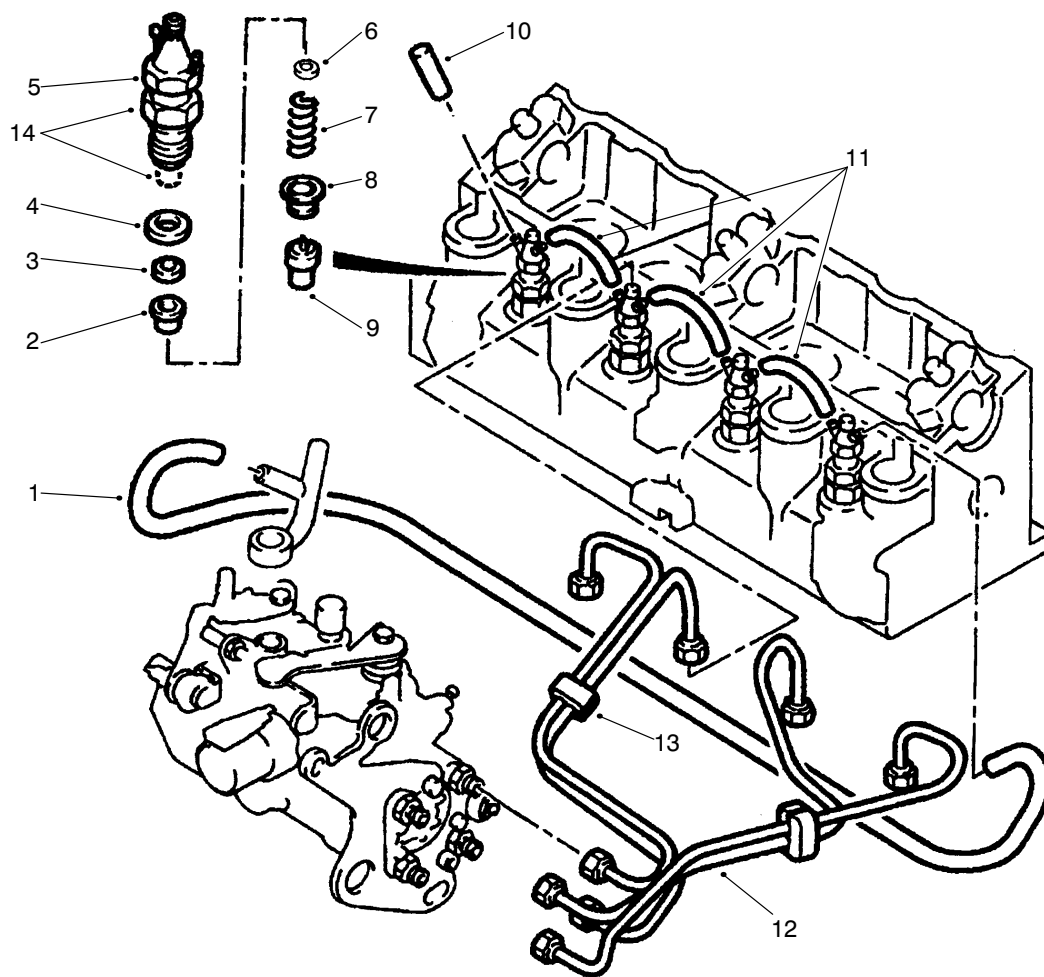 


T-2145-2

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3230	Hose	1	6	94-3242	Washer-1.30 mm	4
2	76-5540	Plug	4	*	94-3243	Washer-1.33 mm	4
3	76-5530	Gasket-Injector	4	*	94-3244	Washer-1.36 mm	4
4	94-3226	Gasket-Injector	4	*	94-3245	Washer-1.39 mm	4
5	76-5520	Holder-Injector	4	*	94-3246	Washer-1.42 mm	4
6	94-3232	Washer-0.79 mm	4	*	94-3247	Washer-1.45 mm	4
*	94-3233	Washer-0.82 mm	4	*	94-3248	Washer-1.48 mm	4
*	94-3234	Washer-0.85 mm	4	7	94-3228	Spring	4
*	94-3235	Washer-0.88 mm	4	8	94-3227	Spacer	4
*	94-3236	Washer-0.91 mm	4	9	94-8147	Nozzle-Injector	4
*	94-3237	Washer-0.94 mm	4	10	74-8770	Plug	1
*	94-3238	Washer-0.97 mm	4	11	94-3229	Union	3
*	94-3239	Washer-1.00 mm	4	12	74-8750	Pipe	1
*	94-3240	Washer-1.03 mm	4	13	94-3231	Bracket	2
*	94-3241	Washer-1.06 mm	4	14	76-5600	Asm-Holder, Injector	4

*Not Illustrated

 3322-893

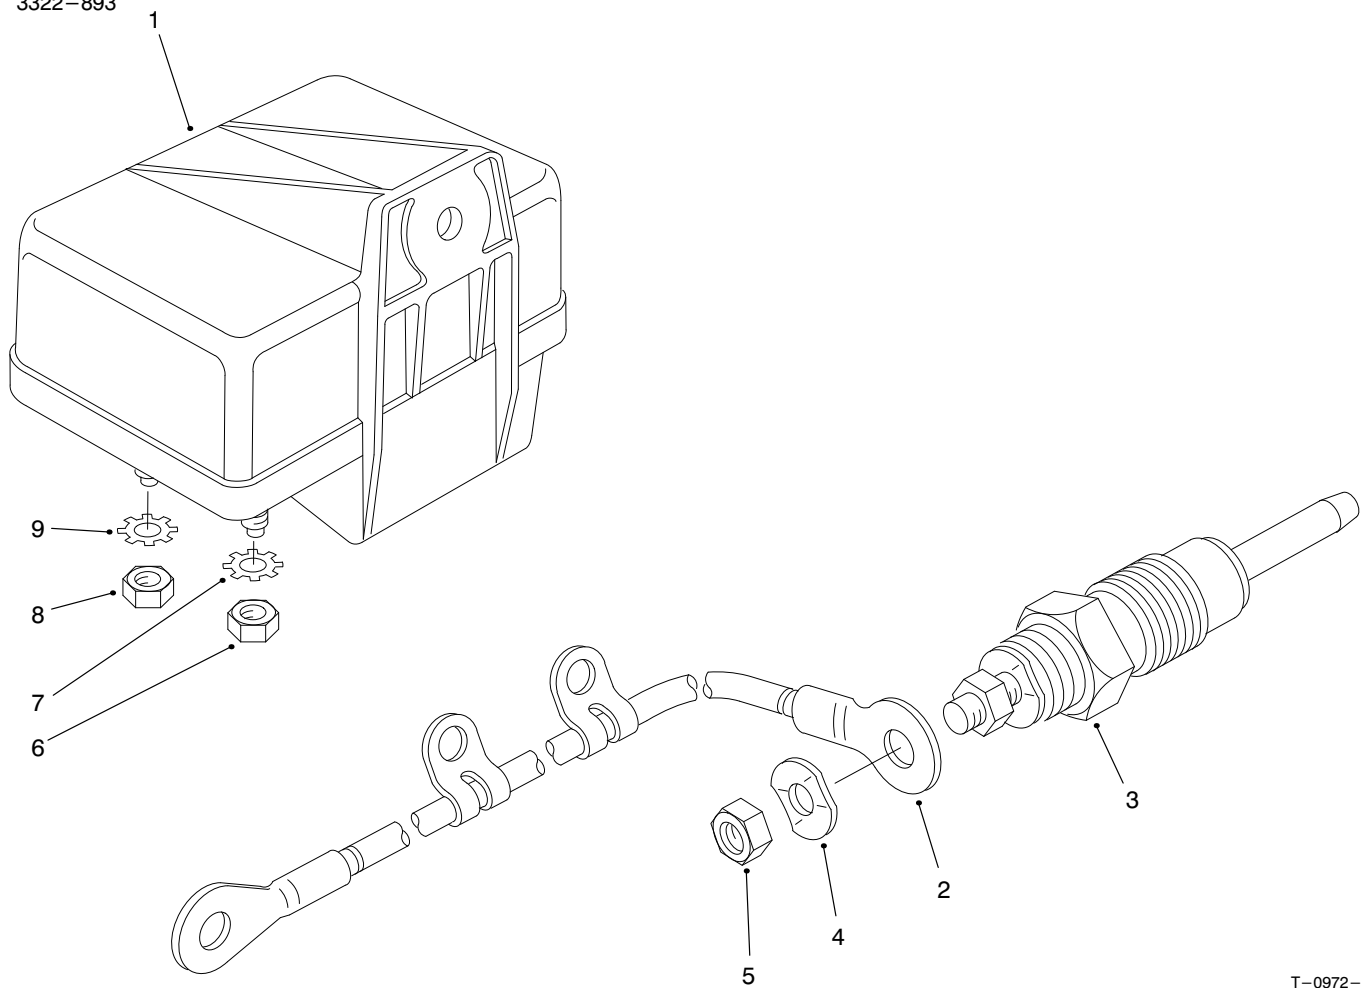


T-0972-1

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay-Glow Plug	1
2	94-3265	Cable-Glow Plug	4
3	94-3264	Plug-Glow	4
4	76-5290	Washer-Spring	4
5	94-3266	Nut-Hex.	4

Ref. No.	Part No.	Description	No. Used
6	94-3267	Nut-Lock	1
7	76-5310	Washer-Lock	1
8	94-3251	Nut-Lock	1
9	74-8710	Washer-Lock	1

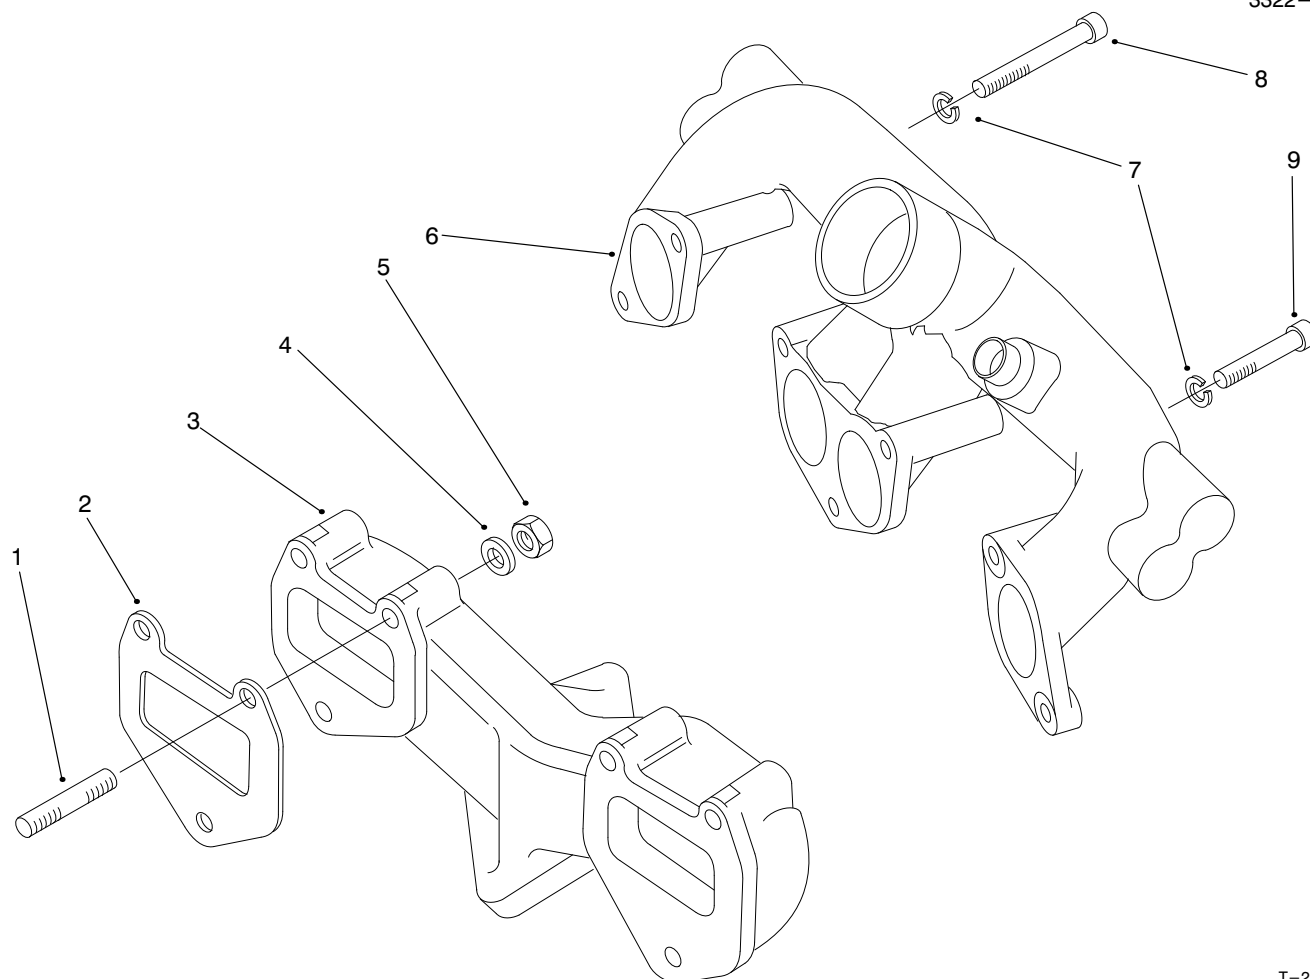 


T-2149-3

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-3300	Stud	6	6	94-3215	Manifold-Intake	1
2	77-3310	Gasket	2	7	94-3164	Washer-Spring	7
3	77-3340	Manifold-Exhaust	1	8	94-3216	Screw	5
4	68-9420	Washer-Lock	6	9	94-3217	Screw	4
5	77-3320	Nut-Hex	6	*	94-3218	Screw	1

 *Not Illustrated

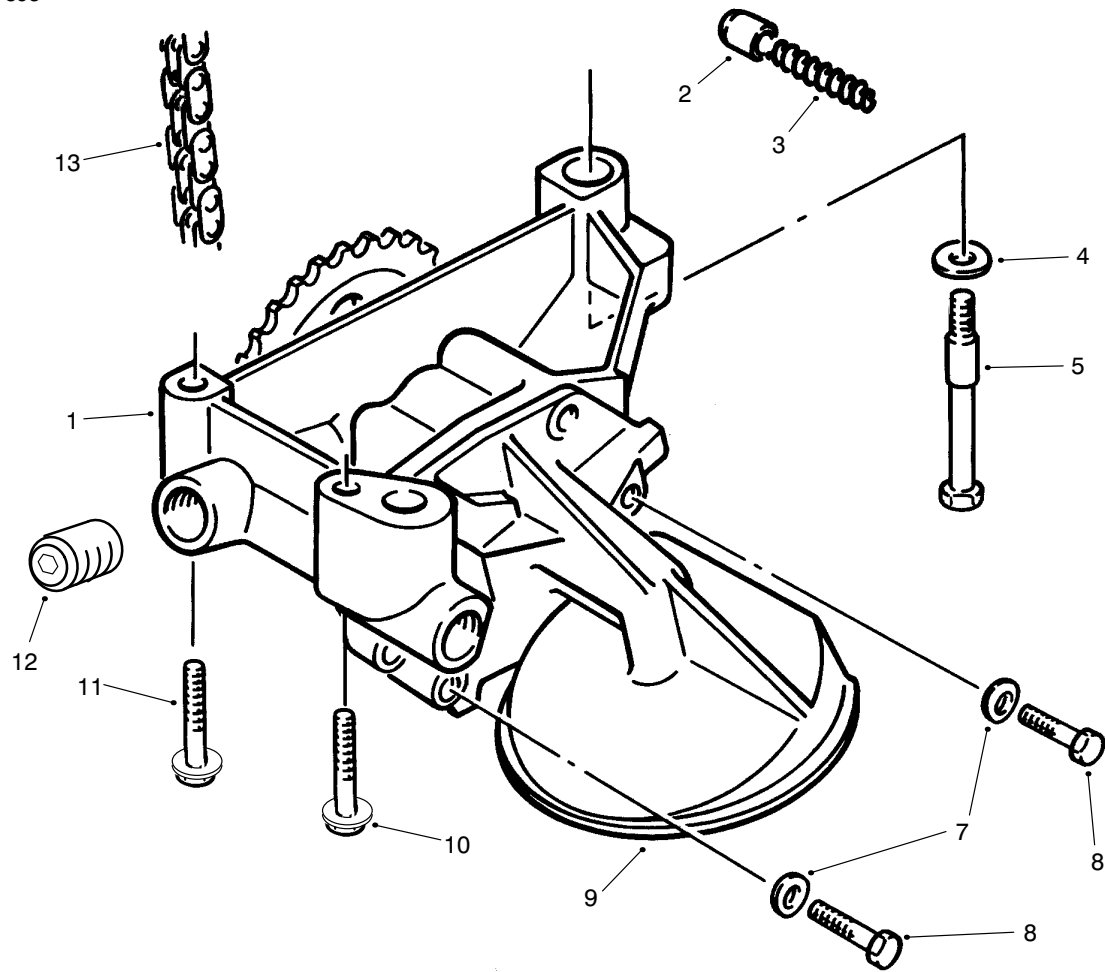


T-0964-2

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5070	Asm-Oil Pump	1
2	94-3176	Gear-Oil Pump	1
3	76-5090	Spring-Piston	1
4	94-3179	Washer-Spring	3
5	76-5100	Bolt-Shoulder	1
7	76-5010	Washer-Spring	5

Ref. No.	Part No.	Description	No. Used
8	94-3124	Screw-HH	2
9	94-3178	Strainer	1
10	77-3470	Screw	1
11	77-3490	Screw	1
12	94-3177	Plug	2
13	76-5170	Chain-Pump Drive	1

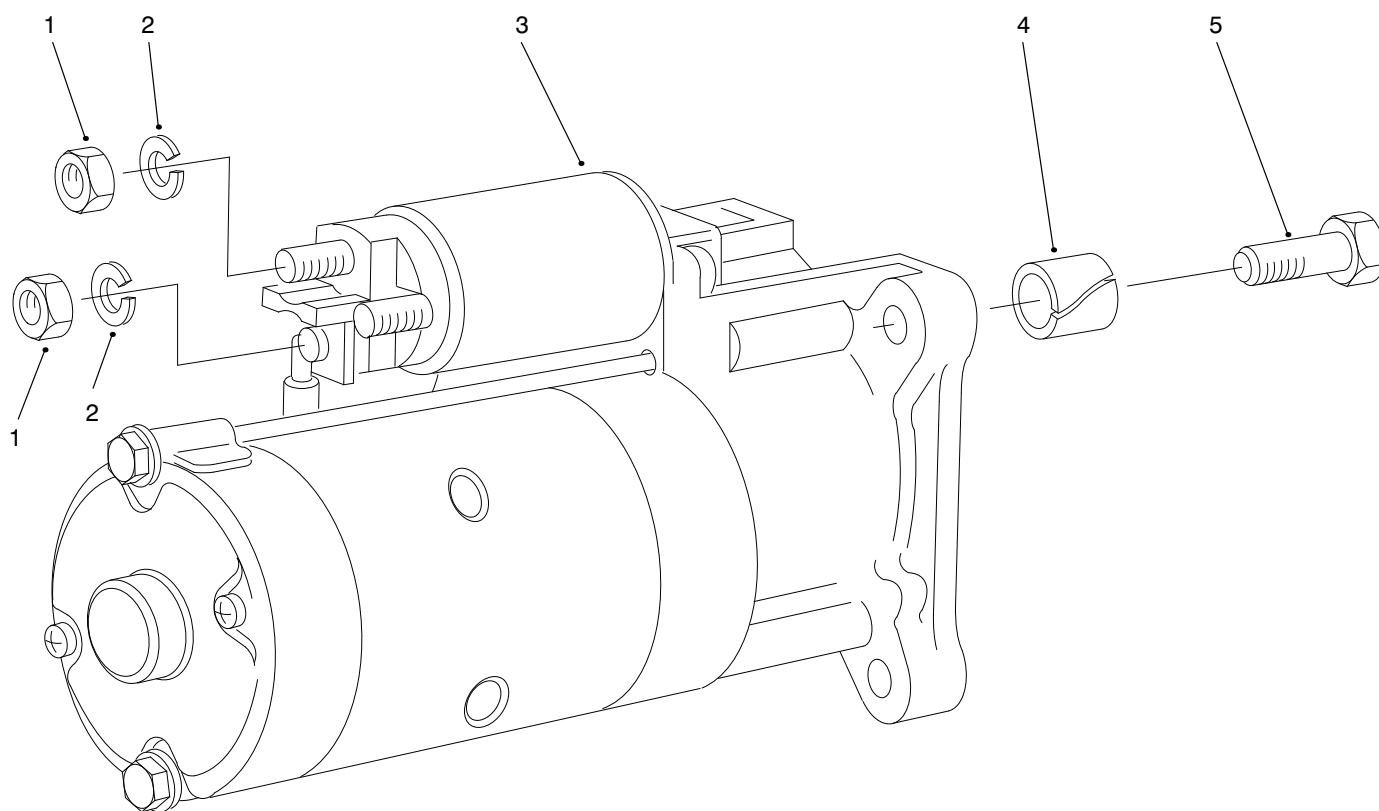 


T-0968-1

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	76-5580	Starter	1
4	76-5590	Sleeve-Spring	1

Ref. No.	Part No.	Description	No. Used
5 *	48-7810 94-3275	Screw-Mounting Solenoid-Starter	3 1

 *Not Illustrated

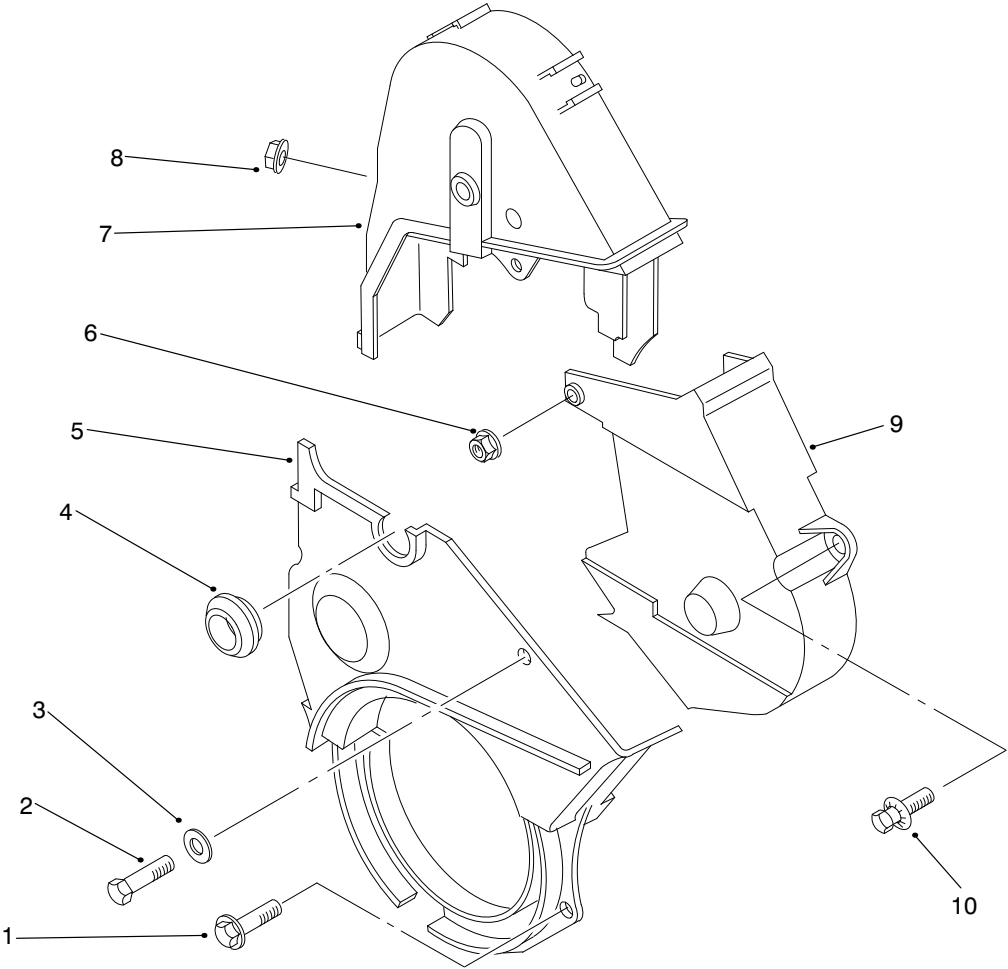


T-2140-2

TIMING COVER

Ref. No.	Part No.	Description	No. Used
1	94-3132	Screw	2
2	94-3130	Screw	1
3	94-3125	Washer-Flat	1
4	94-3129	Plug	1
5	94-3126	Protector-Lower	1

Ref. No.	Part No.	Description	No. Used
6	94-3133	Nut W/Washer	1
7	94-3127	Case-Timing, Left	1
8	94-3134	Nut	1
9	94-3128	Case-Timing, Right	1
10	94-3131	Screw	1

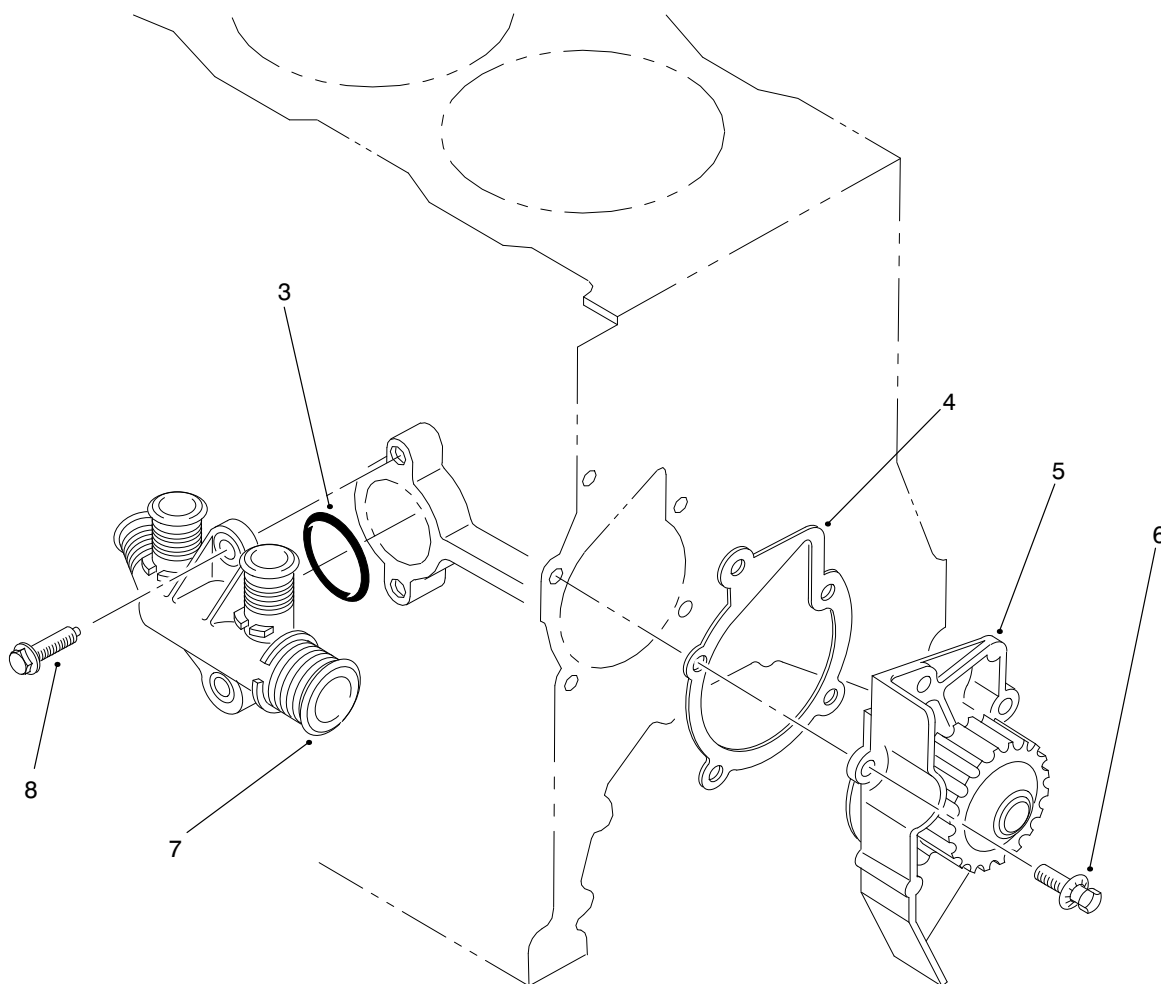 


T-2144-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	94-3197	O-Ring	1
4	94-3195	Gasket-Pump, Water	1
5	98-9972	Cover-Pump, Water (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
6	76-5500	Screw	5
7	94-3196	Inlet-Water	1
8	94-3198	Screw	2

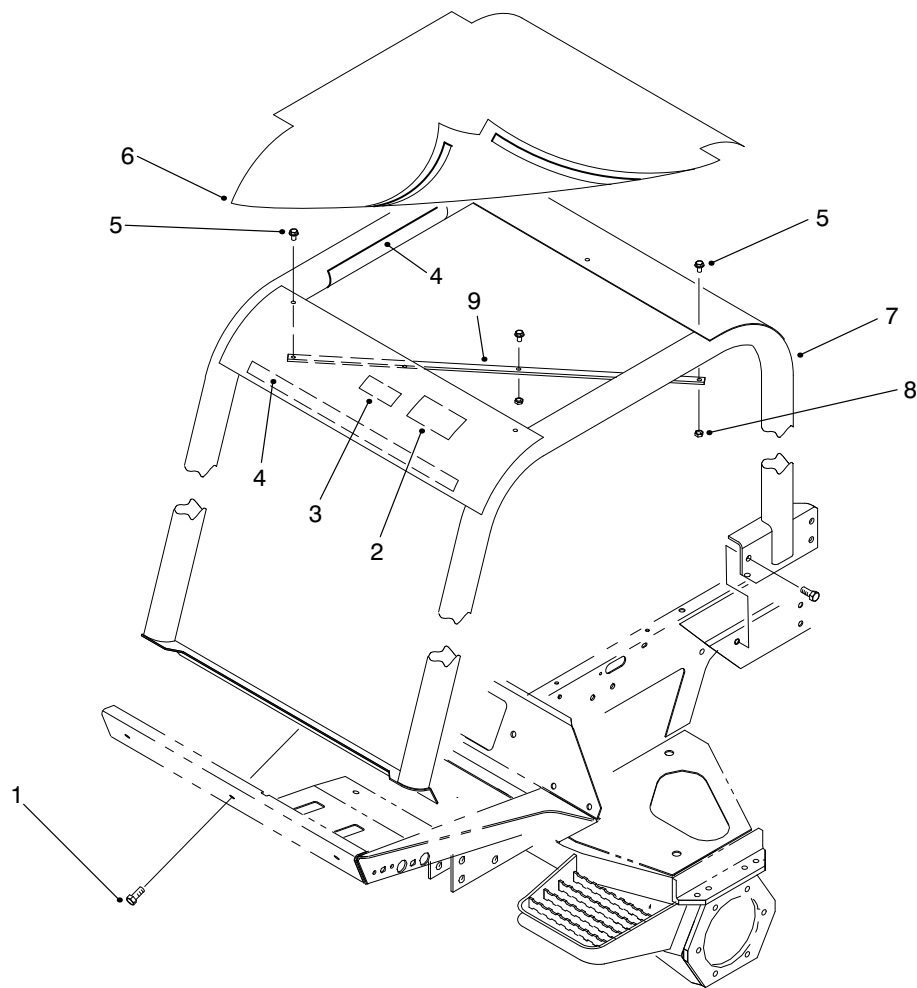 


T-2092-1

ROLL OVER PROTECTION SYSTEM (ROPS)

Ref. No.	Part No.	Description	No. Used
1	33106-035	Screw-HHF	3
2	83-7430	Decal-Danger	1
2	93-8050	Decal-Warning (Europe)	1
2	84-4300	Decal-Danger (Japan)	1
3	92-7540	Decal-ROPS	1
3	93-8073	Decal-Blank (Europe)	1
4	93-9157	Velcro	4

Ref. No.	Part No.	Description	No. Used
5	33104-030	Screw-HHF	5
6	93-9160	Cover-ROPS	1
7	94-2643	Frame-ROPS (Incl. Ref. #2-4)	1
8	33024-00	Nut-Lock	5
9	93-9159	Strap-Cover	2

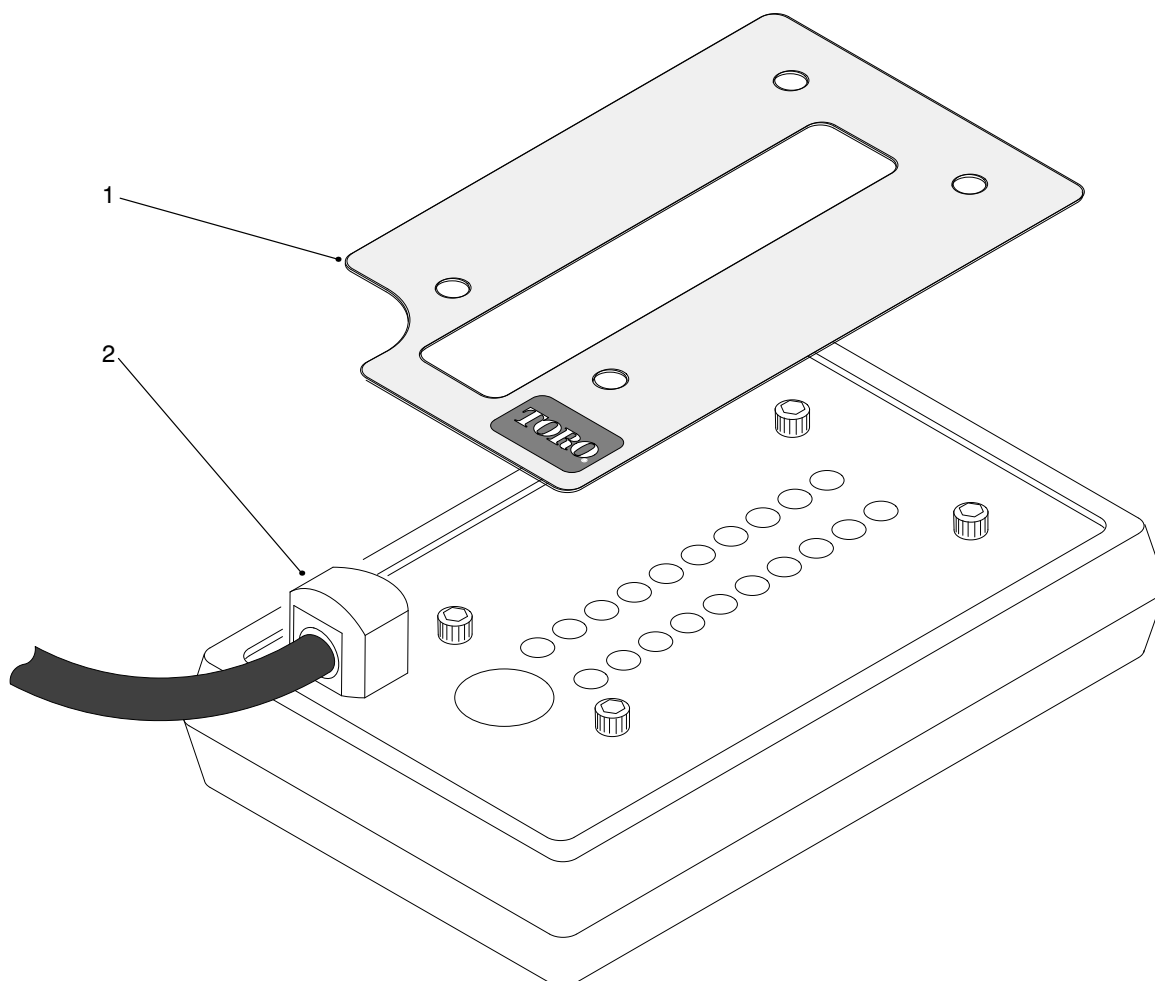 

T-1458-1


DIAGNOSTIC-ACE DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
■1	92-7549	Decal-Diagnostic ACE V 1.0 (English)	1	▲1	99-8985	Decal-Diagnostic ACE V 1.0 (Danish)	1
▲1	99-8983	Decal-Diagnostic ACE V 1.0 (English)	1	▲1	99-8986	Decal-Diagnostic ACE V 1.0 (Dutch)	1
■1	94-4588	Decal-Diagnostic ACE V 1.0 (Danish)	1	▲1	99-8987	Decal-Diagnostic ACE V 1.0 (Finnish)	1
■1	94-4589	Decal-Diagnostic ACE V 1.0 (Dutch)	1	▲1	99-8988	Decal-Diagnostic ACE V 1.0 (French)	1
■1	94-4590	Decal-Diagnostic ACE V 1.0 (Finnish)	1	▲1	99-8989	Decal-Diagnostic ACE V 1.0 (German)	1
■1	94-4591	Decal-Diagnostic ACE V 1.0 (French)	1	▲1	99-8990	Decal-Diagnostic ACE V 1.0 (Italian)	1
■1	94-4592	Decal-Diagnostic ACE V 1.0 (German)	1	▲1	99-8991	Decal-Diagnostic ACE V 1.0 (Norwegian)	1
■1	94-4593	Decal-Diagnostic ACE V 1.0 (Italian)	1	▲1	99-8992	Decal-Diagnostic ACE V 1.0 (Portuguese)	1
■1	94-4595	Decal-Diagnostic ACE V 1.0 (Norwegian)	1	▲1	99-8993	Decal-Diagnostic ACE V 1.0 (Spanish)	1
■1	94-4596	Decal-Diagnostic ACE V 1.0 (Portuguese)	1	▲1	99-8994	Decal-Diagnostic ACE V 1.0 (Swedish)	1
■1	94-4597	Decal-Diagnostic ACE V 1.0 (Spanish)	1	▲1	99-8984	Decal-Diagnostic ACE V 1.0 (Japan)	1
■1	94-4598	Decal-Diagnostic ACE V 1.0 (Swedish)	1	2	85-4750	Display-Diagnostic ACE	1
■1	94-4594	Decal-Diagnostic ACE V 1.0 (Japan)	1				

*Not Illustrated

▲Controller No.1

 ■Controller No.2

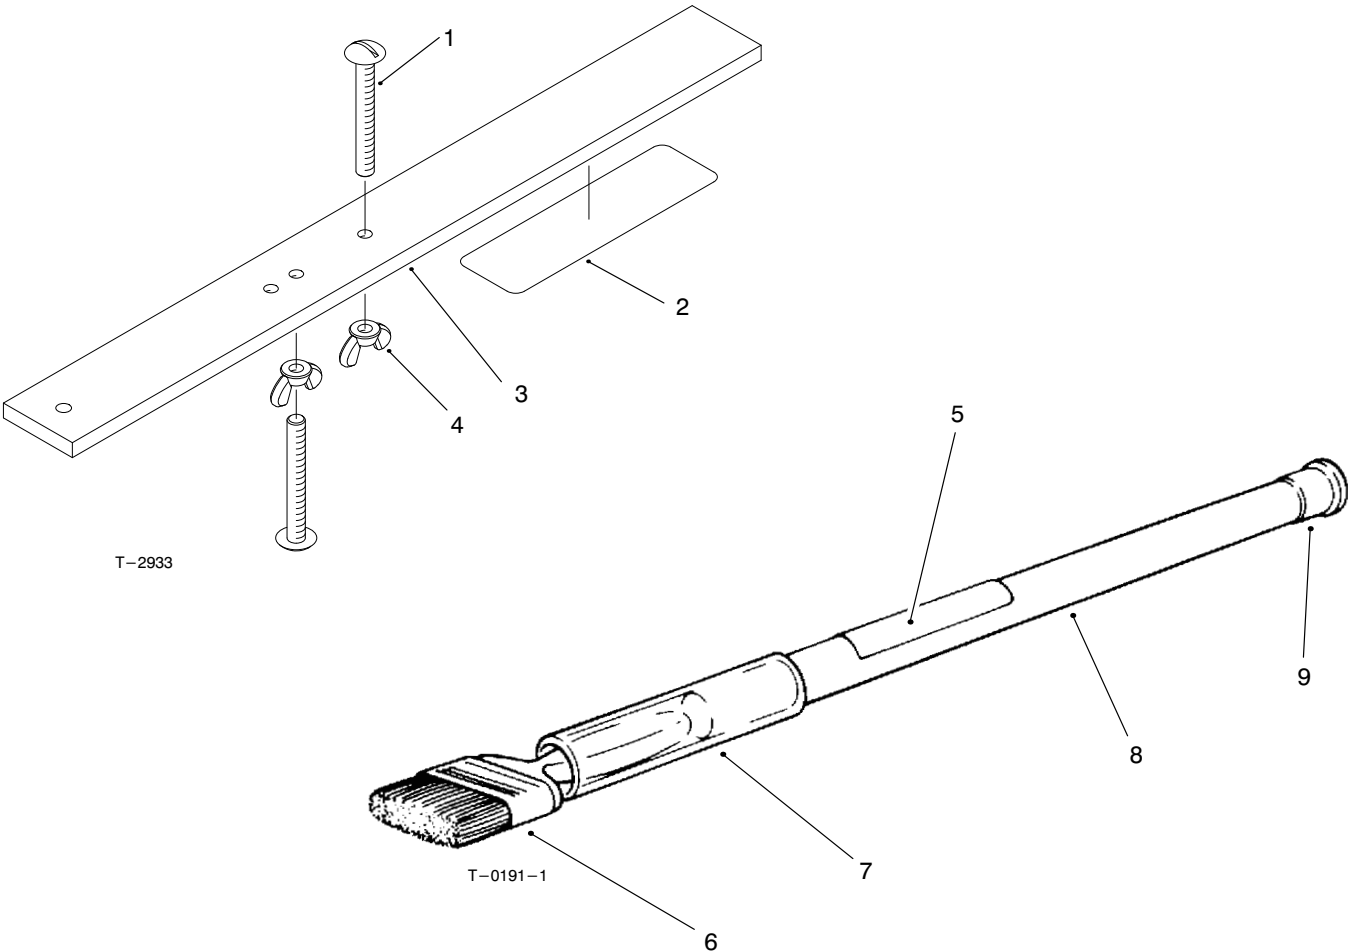


GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw-Machine Slot Hd.	2
2	98-7976	Decal	1
3	98-1852	Asm-Gauge Bar (Incl. Ref. #1-2 & 4)	1
4	32103-3	Nut-Wing	2
5	12-9140	Decal	1

Ref. No.	Part No.	Description	No. Used
6	36-4310	Brush	1
7	29-9090	Hose-Handle	1
8	29-9080	Handle	1
9	2410-18	Plug	1
*	29-9100	Asm-Backlapping Brush (Incl. Ref. #5-9)	1


*Not Illustrated

 RM6700D HYDRAULIC SCHEMATIC

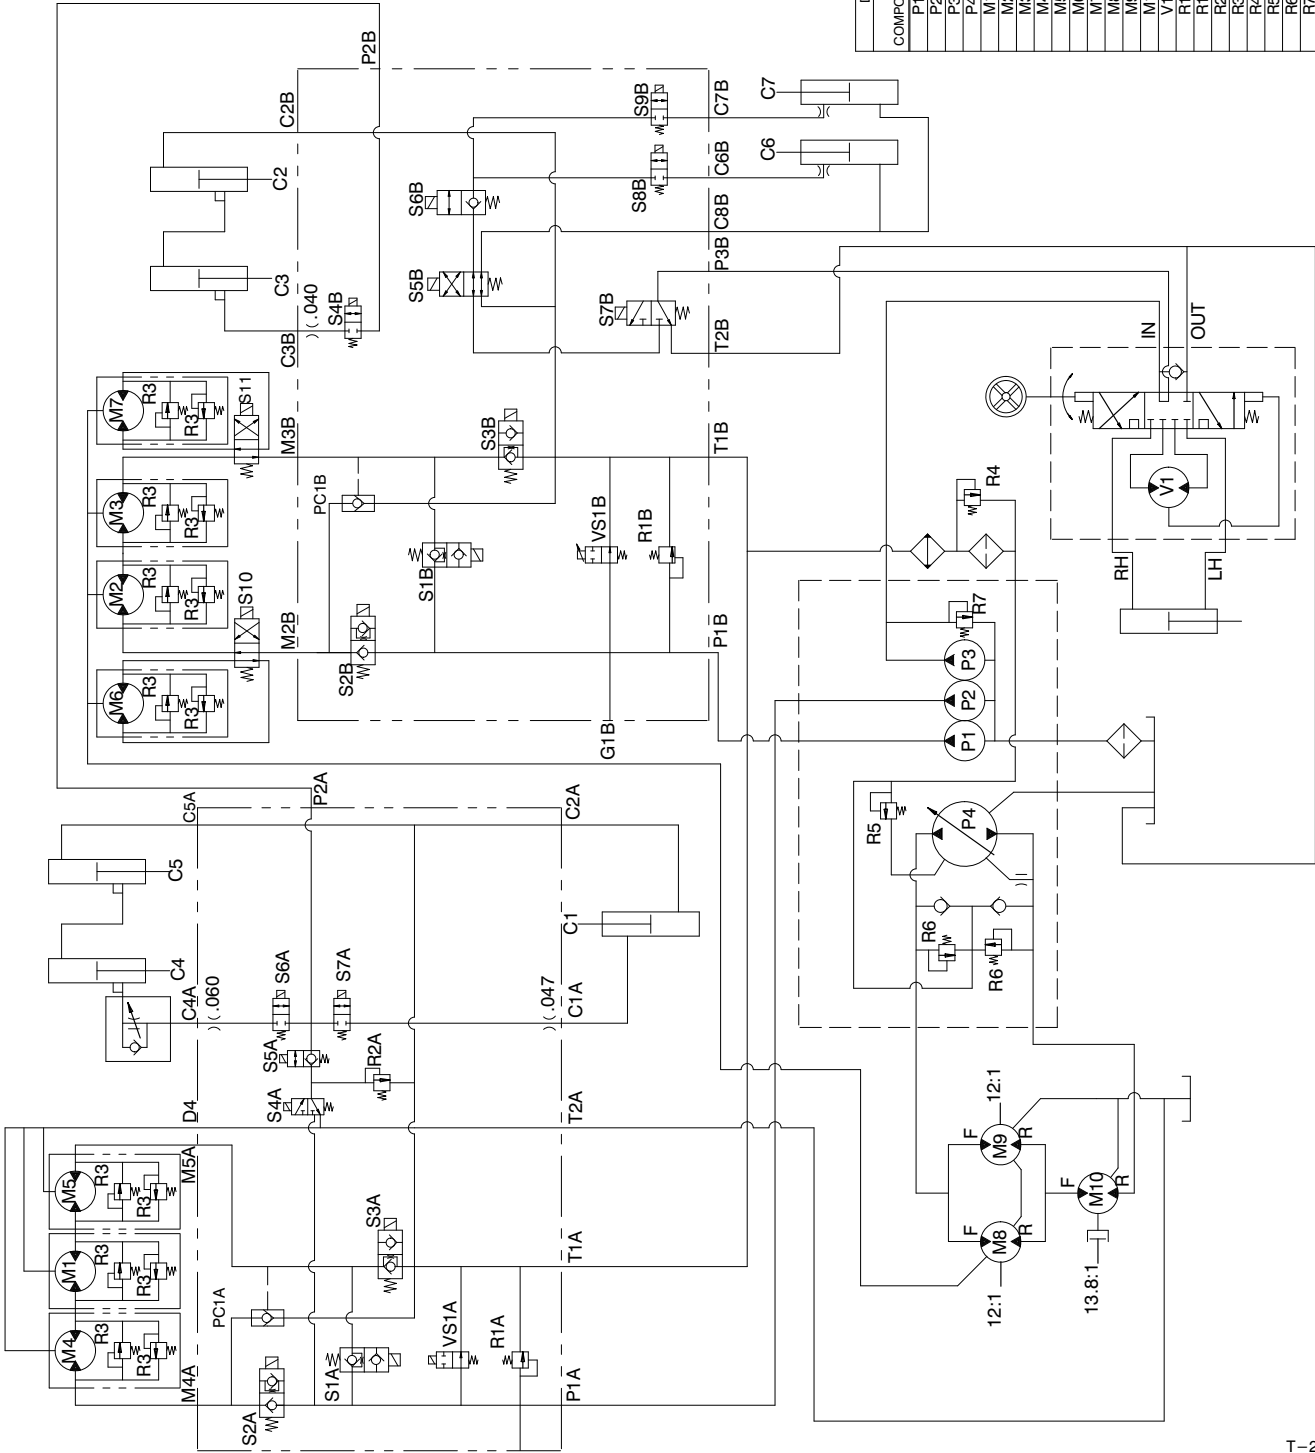

DISPLACEMENT, FLOW RATE, AND PRESSURE CHART				
COMPONENT	DISPLACEMENT in ³ /rev	PRESSURE lbs/in ²	FLOW RATE *	
			GPM	LPM
P1	.58	9.5	6.8	25.6
P2	.58	9.5	6.8	25.6
P3	.31	5.1	3.6	13.7
P4	2.48	40.6	28.9	109.5
M1	1.16	19		
M2	1.16	19		
M3	1.16	19		
M4	1.16	19		
M5	1.16	19		
M6	1.16	19		
M7	1.16	19		
M8	2.01	32.9		
M9	2.48	40.6		
M10	.66	10.8		
V1				
R1A		3000	207	
R1B		3000	207	
R2A		2750	190	
R3		1500	103	
R4		50	3	
R5		180	12	
R6		4000	276	
R7		1250	86	

 * FLOW RATE CALCULATED AT 2750 RPM AND 98% EFFICIENCY.



PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 6700D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 6700D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Manual Servo Control No. 94-3019	40
Reel Motor & Hoses	3	Gear Pump Assembly No. 94-3066	41-42
Reel Motor Assembly No. 98-9999	4	Engine Components Assembly	43
Steering Tower Assembly	5-6	Air Cleaner Assembly No. 93-7485	44
Steering Valve Assembly 99-8959	7	Radiator & Shroud Assembly	45
Traction & Brake Pedal Assembly	8	4-WD Axle Assembly	46-47
Front Hydraulic Drive & Brake Assembly	9	Sleeve Assembly Axle No. 98-2447	48
Planetary Drive Assembly No. 92-7415	10	Axle Housing Assembly No. 98-2447	49
Brake Assembly No. 92-7414 RH & 92-7417 LH	11	Differential & Shaft Assembly No. 98-2447	50
Hydraulic Motor Assembly No. 92-7385 RH & 93-7476 LH	12	Steering Gear Case Assembly No. 98-2447	51
Hydraulic Tubes & Clamps	13	Steering Arm Linkage No. 98-2447	52
Seat Frame & Throttle Assembly	14-15	Hydraulic Steering Cylinder No. 94-8141	53
Seat Suspension Assembly	16	4-WD Hydraulic Motor Assembly No. 92-7386	54
Control Console Assembly	17-18	Engine Installation Assembly	55
Hydraulic Filter & Reservoir Assembly	19	Alternator Assembly	56
Fuel Tank & Filter Assembly	20	Camshaft & Fan Support Assembly	57
Fuel Filter Assembly No. 76-5300	21	Collector Assembly	58
Front Lift Arms Assembly - No. 1, 4 & 5	22	Crankcase Assembly	59
Rear Lift Arm Assembly - No. 2 & 3	23	Crankshaft Assembly	60
Lift Arm Assembly - No. 6 & 7	24	Cylinder Head Assembly	61-63
Hydraulic Cylinder No. 1 (93-2650)	25	Fuel Injection Pump Assembly	64
Hydraulic Cylinder No. 4 (98-8811))	26	Fuel Injector Assembly	65
Hydraulic Cylinder No. 5 (98-9069)	27	Glow Plug & Glow Relay	66
Hydraulic Cylinder No. 2 (98-8813)	28	Intake & Exhaust Manifold Assembly	67
Hydraulic Cylinder No. 3 (98-8812)	29	Oil Pump Assembly	68
Hydraulic Cylinder No. 6 & 7 (93-2631)	30	Starter Assembly	69
Front Hydraulic Block & Hoses	31	Timing Cover	70
Front Manifold Block Assembly No. 92-7418	32	Water Pump Assembly	71
Rear Hydraulic Manifold Block & Hoses	33-34	Roll Over Protection System (ROPS)	72
Rear Manifold Block Assembly No. 92-7384	35	Diagnostic - ACE Display Assembly	73
Solenoid Valve Assembly No. 76-9970	36	Gauge Bar & Backlapping Brush Assembly	74
Pump Installation Assembly	37	RM6700D Hydraulic Schematic	75
Servo Controlled Piston Pump Assembly No. 98-3730	38-39	RM6700D Electrical Schematic	76
		Controller Electrical Schematic	77

[illegible]

MAINTENANCE RECORD

[illegible]