

Count on it.

Parts Catalog

Network LTC® Plus Satellite Controller

Model No. NETWORK LTC PLUS



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Network LTC Plus Sat Internal Components	. 4
Network LTC Plus Satellite 4.0, Metal Cabinet	8
N. LTC Plus, Power Supply, Early Model	. 10
Power Supply, N. LTC Plus and E-Series OSMAC	. 12
Network LTC Plus Radio Assembly	1⊿

Network LTC Plus Sat. - Internal Components

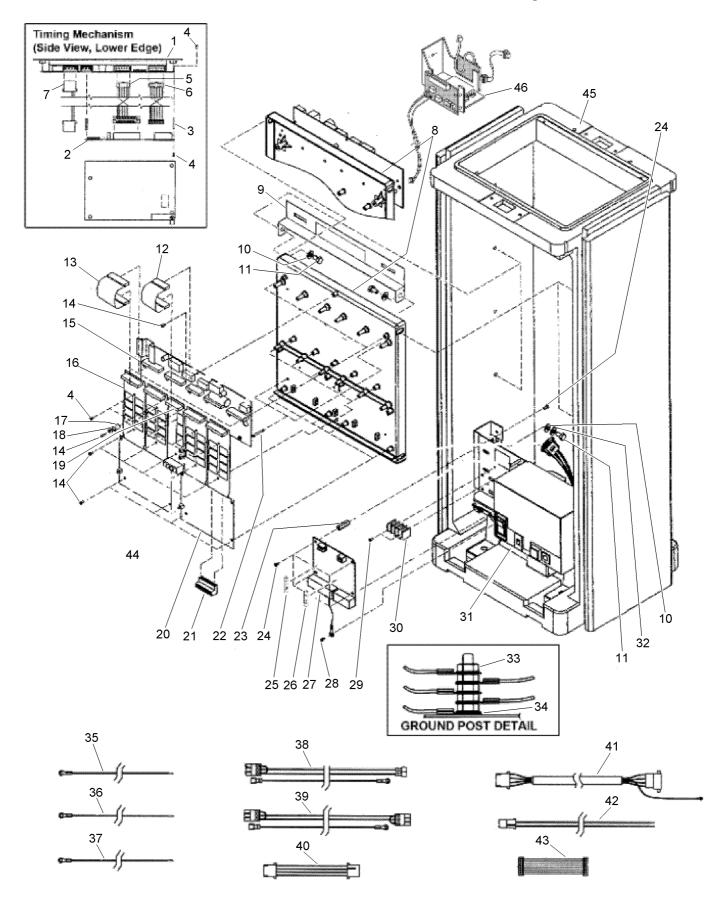

Network LTC Plus Sat. - Internal Components (continued)


Ref.	Part Number	Otre	Description	Ref.	Part Number	Ofu	Description
1 1	102-0794	4 <i>ty.</i>	Timing Mechanism	32	363-1623		Washer, Lock
I	102-0794	1	Assembly (Includes Items 1,	32 33	303-1023	4 5	Hex Nut, #8-32 W/External
			3, 4 & 6) •	33		5	Tooth Lock Washer ▲
2	89-9026	1	Modem, Standard (Includes	34	360-0600	1	Washer, Lock, Ext T
_	05-3020	'	Items 2-5) ●	35	300-0000	'	Wire Assy., Ground, 14
3		4	Standoff, Hex 1/4" X 1.5" ▲	00			Awg X 8" (See Service Item
4	1-3078	4	Screw, Machine, #6-32 X				89-9049) 📤
			1/4"	36		1	Wire Assy., Ground, 14 Awg
5	89-9043	1	Cable Assy., Ribbon, Timing				X 10.5" (See Service Item
			Mechanism To Modem				89-9049) 📤
6	89-9042	1	Cable Assy., Ribbon, Timing	37		1	Wire Assy., Ground, 14 Awg
			Mechanism To Distribution				X 13" (See Service Item
7	00 0044	4	Board	20		4	89-9049) ▲
7	89-9041	1	Cable Assy., 2-Wire, Timing	38		1	Cable Assy., Modem To
8	89-9027	2	Mechanism Power Frame, Black Plastic Assy.				Terminal Block (See Service Item 89-9044) ▲
O	09-9021	2	(Includes Item 22)	39		1	Cable Assy., Modem To
9		1	Bracket, Reinforce (Plastic	39		ı	Surge Board (See Service
3		'	Cabinet Models Only) ▲				Item 89-9044) ▲
10	360-0140	4	Washer-Flat	40	89-9045	1	Cable Assy., 4-Wire Jumper
11	360-0595	8	Screw, Machine, 1/4-20 X	41	89-9046	1	Cable Assy., 4-Wire,
			1/2"				Shielded
12	102-0803	1	Cable Assy., Ribbon,	42	89-9047	1	Cable Assy., 2-Wire,
			12-Pin (Pump/Common To				Pump/Com Board To Surge
			Distribution)				Board
13	102-0802	4	Cable Assy., Ribbon,	43	89-9048	1	Cable Assy., Ribbon,
			16-Pin (8-Station Output To		400 =040014		Jumper
1.1	262 1255		Distribution)	44	102-5940SK		Kit, Station Labels,
14 15	363-1355 102-0793	4	Screw, Tap, #6 ◆	45		1	Numbered, Plastic •
15	102-0793	1	Parallel Distribution Board (Includes Item 14) ●	40		ı	Satellite Plastic Pedestal (See Satellite Plastic
16	102-0796	1	Output Module, 8-Station				Pedestal Section) ▲
10	102 07 00		Svc. (Includes Items 4, 13,	46		1	Radio Assembly (See
			& 14) ◆ • □			•	Network Ltc Plus Radio
17		2	Retainer ▲				Assembly Section) ▲
18	363-5083	2	Washer, Brass		89-9027		Frame, Black Plastic Assy.
19	102-0795	1	Pump/Com Module Svc.				(Includes Item 22) ●■
			(Includes Items 12, 14, 17,		89-9033		16-Station Output Board
			18, & 19) •□				W/O Surge Pills Or Switches
20			16-Station Output Board		00.0004		(Includes Item 14) □ • ■
			(See Services Items		89-9034		16-Station Output Board
21	89-9032		89-9033 To 89-9039) ▲ Connector, Terminal Block,				W/Switches (Includes Item 14) □ • ■
21	09-9032		8-Station •		89-9035		16-Station Output Board
22	363-3587	2	Screw, Tap, #8 X 1.5"		00 0000		W/Surge Pills (Includes Item
23	363-3603	4	Standoff, Hex, 5/16" X 1"				14) □ • ■
24	360-0285	8	Screw, Machine, 6-32 X 3/8		89-9036		16-Station Output Board
25	363-2638	4	Fuse, 0.5 Amp, 250V ●				W/Surge Pills Or Switches
26	363-2635	4	Fuse, 7.5 Amp, 250V ●				(Includes Item 14) □ • ■
27	118-1524SK	1	Pump/Common/Communication	on	89-9044		Cable Assy. Svc., Surge To
			Surge Board (Includes				Modem & Surge To Terminal
	000 0/55		Items 23, 24, & 27)				Block (Includes Items 37 &
28	360-0136	1	Screw, Tap, #8				38) ● ■
29	4-1063	2	Screw, Tap, #6				
30 31	363-3574	1	Terminal Block, 2-Position				
31	102-0645	1	Power Supply Assy. (See Power Supply Assembly.)				
			i owei ouppiy Assembly.)				

SERVICE ITEMS
 ▲ Not serviced separately
 □ Order Through Finished Goods Distribution System - Minneapolis

[■] Not illustrated

[◆] Quantity Varies With Model


Network LTC Plus Sat. - Internal Components (continued)

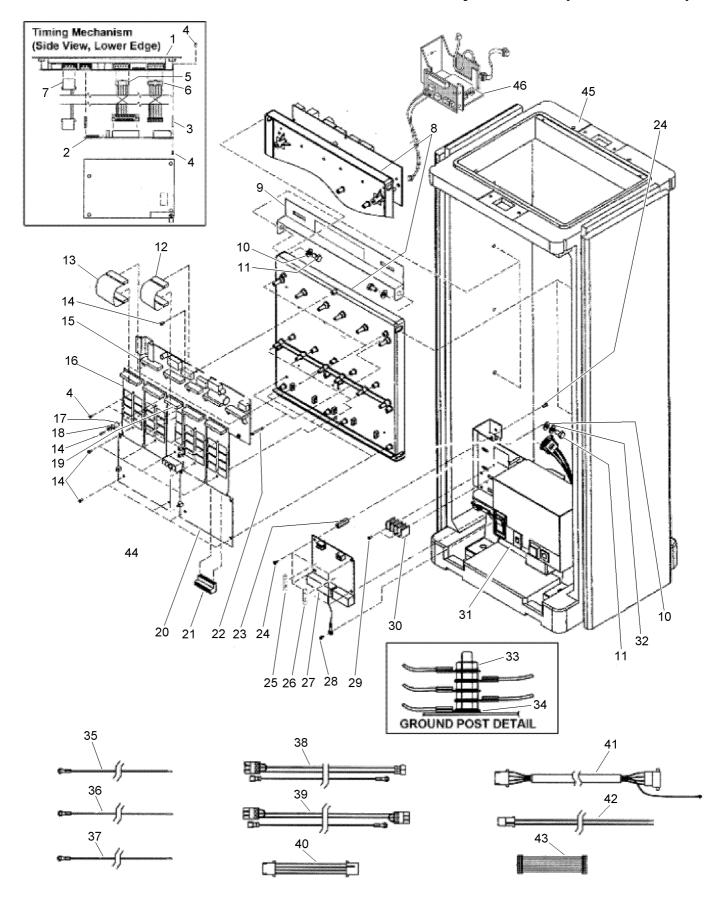

Network LTC Plus Sat. - Internal Components (continued)

- SERVICE ITEMS
 ▲ Not serviced separately
 □ Order Through Finished Goods Distribution System Minneapolis
- Not illustrated ◆ Quantity Varies With Model

Network LTC Plus Satellite 4.0, Metal Cabinet

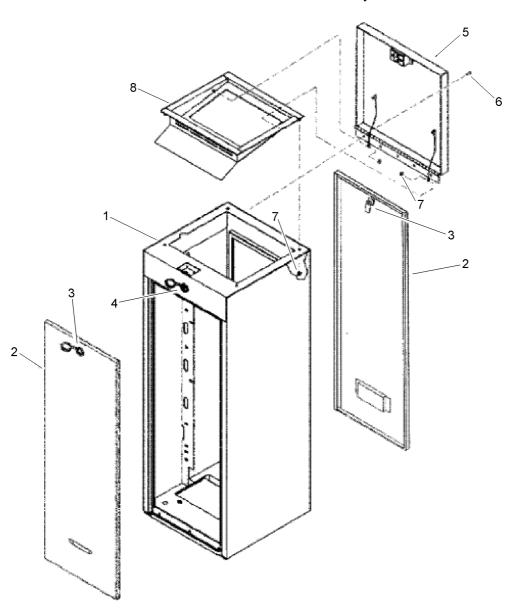


Network LTC Plus Satellite 4.0, Metal Cabinet (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	102-0702	1	Base, Pedestal Green, Sst	5	102-0703	1	Cover, Pedestal Green, Sst
			W/Lock Assy, Svc. (Includes	6	363-3438	5	Screw, #10-32 X 3/4", Sst
			Item 4, Cover & Keys) ●	7	363-1752	4	Hex Nut, #10-32, Sst
2	102-0704	2	Door, Pedestal, Green, Sst, Service (Includes Item 3,	8	102-0684	1	Mount, Timing Mechanism, Sst
3	102-0714	2	Lock Cover & Keys) ● Lock Kit, Door, And Keys,		360-0565		Keys, Two W/ Ring (Golf #1382) ● ■
			Service ●		89-8294		Pedestal Assy., Green, Sst,
4	102-0705	2	Lock Kit, Cover And Keys, Service ●				Service (Includes Items 1-7) ■■

● SERVICE ITEMS ■ Not illustrated

N. LTC Plus, Power Supply, Early Model

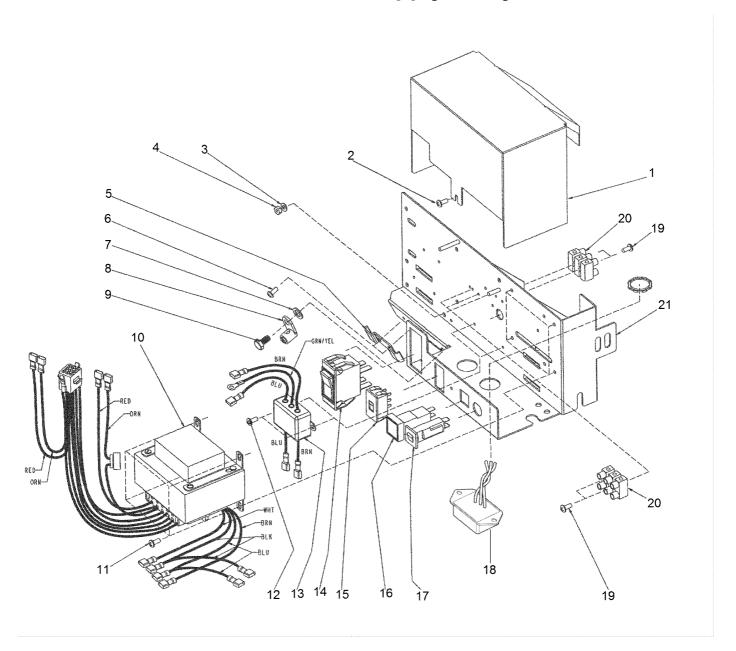

10


N. LTC Plus, Power Supply, Early Model (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	102-0800	1	Cover, Power Supply, Svc. •	15	102-0648	1	Slide Switch 115/230V
2	360-0136	1	Screw, Tap, #8	16	102-0788	1	3.2A Fuse Holder Assy.
3	360-0600	1	Washer, Lock, Ext T	17	102-0651	1	Circuit Breaker, 4.0 Amp
4		1	Nut, Hex, #8-32 ▲	18	118-0538SK	1	Toro Transient Filter, Ttf
5		1	Clamp, Com Cable ▲	19	360-0297	4	Screw, #6 X 3/4"
6	1-6051	1	Screw	20	102-0792	2	Terminal Block, 3-Position,
7	363-1623	1	Washer, Lock				Svc. (Includes Item 19) ●
8	363-1553	1	Lug, Grounding	21	102-0801	1	Plate, Transformer
9	360-0595	1	Screw, Machine, 1/4-20 X				Mounting, Svc. ●
			1/2"		102-0650	10	Fuse, 3.2 Amp, Slow-Blow
10	102-0791	1	Transformer W/Wire				(10-Pack) ● ■
			Harness Assy., Svc. ●		89-9037	1	Power Supply Assembly,
11		4	Screw, Tap, #10 X 3/8" ▲				W/O Surge (Includes 1-17
12	4-1063	2	Screw, Tap, #6				And 19-21) ■ •
13	102-0700	1	Filter Assy., Rfi		89-9038	1	Power Supply Assembly, W/
14	102-0666	1	On/Off Switch				Surge (Includes 1-21) ■●

■ Not illustrated

SERVICE ITEMSNot serviced separately

Power Supply, N. LTC Plus and E-Series OSMAC

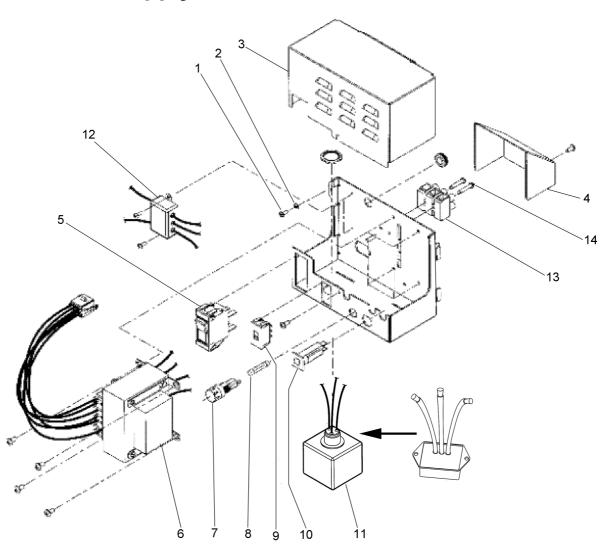


Power Supply, N. LTC Plus and E-Series OSMAC (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	4-1063	2	Screw, Tap, #6	9	102-0648	1	Slide Switch 115/230V
2		2	Washer, Lock, #6 ▲	10	102-0651	1	Circuit Breaker, 4.0 Amp
3	102-0646	1	Cover, Power Supply	11	118-0538SK	1	Toro Transient Filter, Ttf
4	102-0695	1	Cover, Wire Terminal	12	102-0700	1	Filter Assy., Rfi
5	102-0666	1	On/Off Switch	13	102-0667	1	Terminal Block, 115/230V
6	102-0647	1	Transformer Assy., Svc. ●				(Includes Item 14)
7	102-0649	1	Fuse Holder W/Cap	14	360-0297	2	Screw, #6 X 3/4"
8	102-0650	1	Fuse, 3.2 Amp, Slow-Blow		102-0645	1	Power Supply Assembly
			(10-Pack) ●				(Includes Items 1-14)■

■ Not illustrated

[●] SERVICE ITEMS
▲ Not serviced separately

Network LTC Plus Radio Assembly

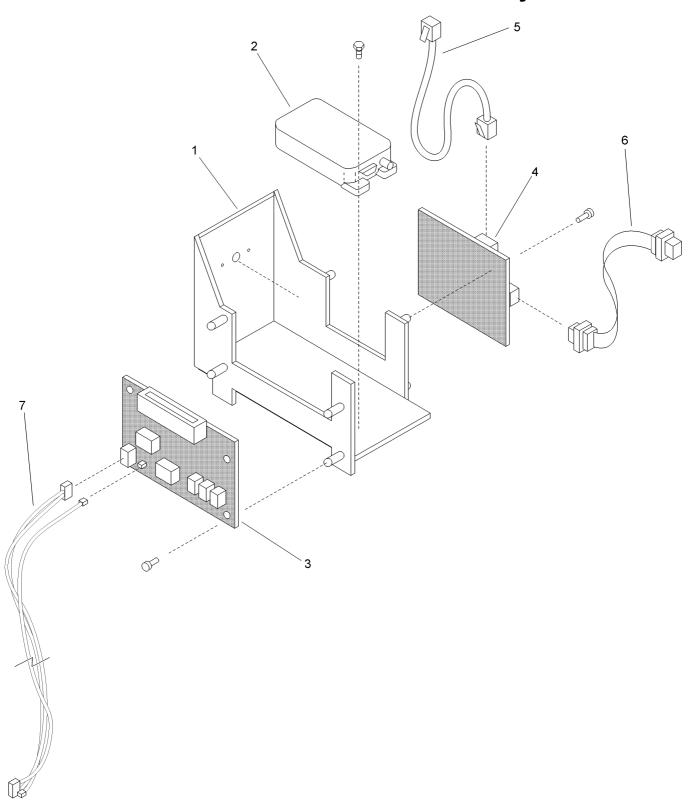

Network LTC Plus Radio Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Bracket, Radio Assy. (Uhf Models Only) ●	5	363-3619SK	1	Rj-45 Cable Assy. (Uhf Models Only)■
2	363-4638SK	1	Maxon Radio (Uhf Models Only)(See Service Item	6	102-3257SK	1	Db-9 Cable Assy. (Uhf Models Only)■
			363-4638)	7		1	Cable Assy., Modem To
3	89-7701	1	Universal Modem (Uhf Models Only)■				Surge Board (Uhf Models Only) ●
4	102-3125SK	1	Radio Interface Board (Uhf Models Only) ■				

Not serviced separately
 Order Through Finished Goods Distribution System - Minneapolis

