



Wheel Horse[®]

265-6 Yard & Garden Tractor

Model No. 72049-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Hood & Grill Assembly	3	Rear Wheel Assembly	20
Front Axle Assembly	4	Crankshaft	21
Battery Assembly	5	Crankcase	22
Fuel Tank Assembly	6	Oil Pan / Lubrication	23
Lower Steering Assembly	7	Cylinder Head / Valve / Breather	24
Steering Wheel & Tilt Assembly	8	Ignition / Electrical	25
Hoodstand & Firewall Assembly	9	Blower Housing & Baffles	26
Lift Lever & HOC Assembly	10	Starting System	27
Frame Assembly	11	Fuel System	28
Single Cyl Engine, Muffler & PTO Assembly	12	Engine Controls	29
Fender & Footrests Assembly	13	Air Intake / Filtration	30
Seat Assembly	14	Exhaust	31
Dash Assembly	15	Peerless Transaxle 820–024	32–33
Gear Shift Linkage Assembly	16	Wire Schematic	34
Gear Drive Assembly	17	Engine Wire Routing Assembly	35
Clutch/Brake Assembly	18	Transmission Wire Routing Assembly	36
Gear Transaxle Assembly	19	Maintenance	37–39


Accessories

Description	Model / Part No.	Description	Model / Part No.
38" Side Discharge Mower	Model No. 78216	48" Blade Adapter	Part. No. 92–6828
42" Side Discharge Mower	Model No. 78231	42" Snowthrower Adapter	Part No. 93–7625
48" Side Discharge Mower	Model No. 78261	Power Lift Kit	Part No. 94–5439
52" Side Discharge Mower	Model No. 78281	48" Recycler Kit	Model No. 79195
11 Cu Ft Twin Bagger		48" Blade Skid Shoe	Part No. 92–6840
(For 38" S.D. Mower)	Model No. 79202	Rear Wheel Weights	Model No. 81115
11 Cu Ft Vac-Bagger		Front Wheel Weights	Model No. 81214
(For 42" & 48" S.D. Mower)	Model No. 79203	Tire Chains	Model No. 82522
36" Tiller	Model No. 79271	Snow Cab	Model No. 79911
48" Dozer Blade	Model No. 79253	Non Metallic Hubcap – 8"	Part No. 94–3717
42" Snowthrower	Model No. 79263	Non Metallic Hubcap – 12"	Part No. 94–3718
38" Recycler Kit	Model No. 79170	R.H. Cleat Tire	Part No. 92–6789
Leaf Baffle Kit		L.H. Cleat Tire	Part No. 92–6790
(For 42" S.D. Mower)	Model No. 85501		
Indicator Lights	Part No. 92–6831		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

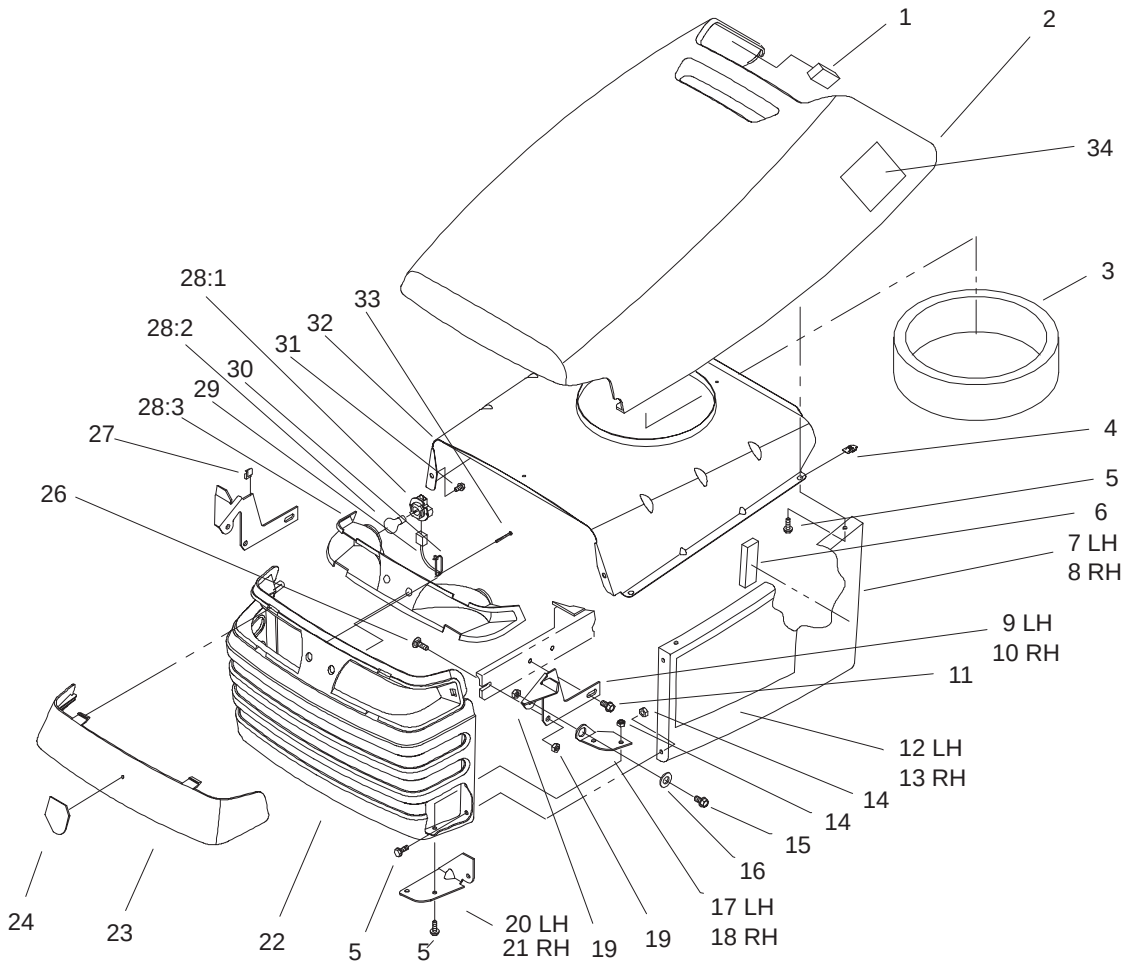


Sheet No.:2

Hood & Grill Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-1980	2	Foam – Hood	26	3230-1	2	Screw-CARR
2	93-0490	1	Hood ASM	27	519337	1	Clip-Cable
3	92-7077	1	Seal-Air Inlet Single	*	88-3970	1	Reflector & Lamp ASM
4	92-7006	4	Nut – J Type	28:1	111686	2	Socket-Light
5	32105-15	12	Screw-Machine	28:2	7228	2	Bulb –No. 1156
6	92-7148	2	Foam – Sidepanel	28:3	93-8741	1	Reflector
7	93-0491	1	Hood-Side, LH	29	88-4320	1	Wire Harness-Lights
8	93-0492	1	Hood-Side, RH	30	614249	1	Tie Strap
9	92-6918-03	1	Bracket-Hinge, LH	31	46-8093	2	Screw-Plastite
10	92-6917-03	1	Bracket-Hinge, RH	32	92-6914-03	1	Baffle-Hood Upper
11	32144-14	2	Screw-HWH	33	32144-32	2	Screw
12	95-0801	1	Decal-Hood, LH	34	100-8712	1	Decal-Maintenance
13	95-0800	1	Decal-Hood, RH				
14	32128-10	8	Locknut-Flange				
15	322-3	2	Screw-HH				
16	105503	2	Bushing				
17	92-6997-03	1	Hinge-Hood, LH				
18	92-6996-03	1	Hinge-Hood, RH				
19	3296-29	4	Nut-Lock, NI				
20	92-7049-03	1	Bracket-Hood Hinge, RH				
21	92-7048-03	1	Bracket-Hood Hinge, LH				
22	100-6068	1	Grill				
23	92-6656	1	Lens – Headlight				
24	92-6987	1	Emblem-Horsehead				

* Not illustrated

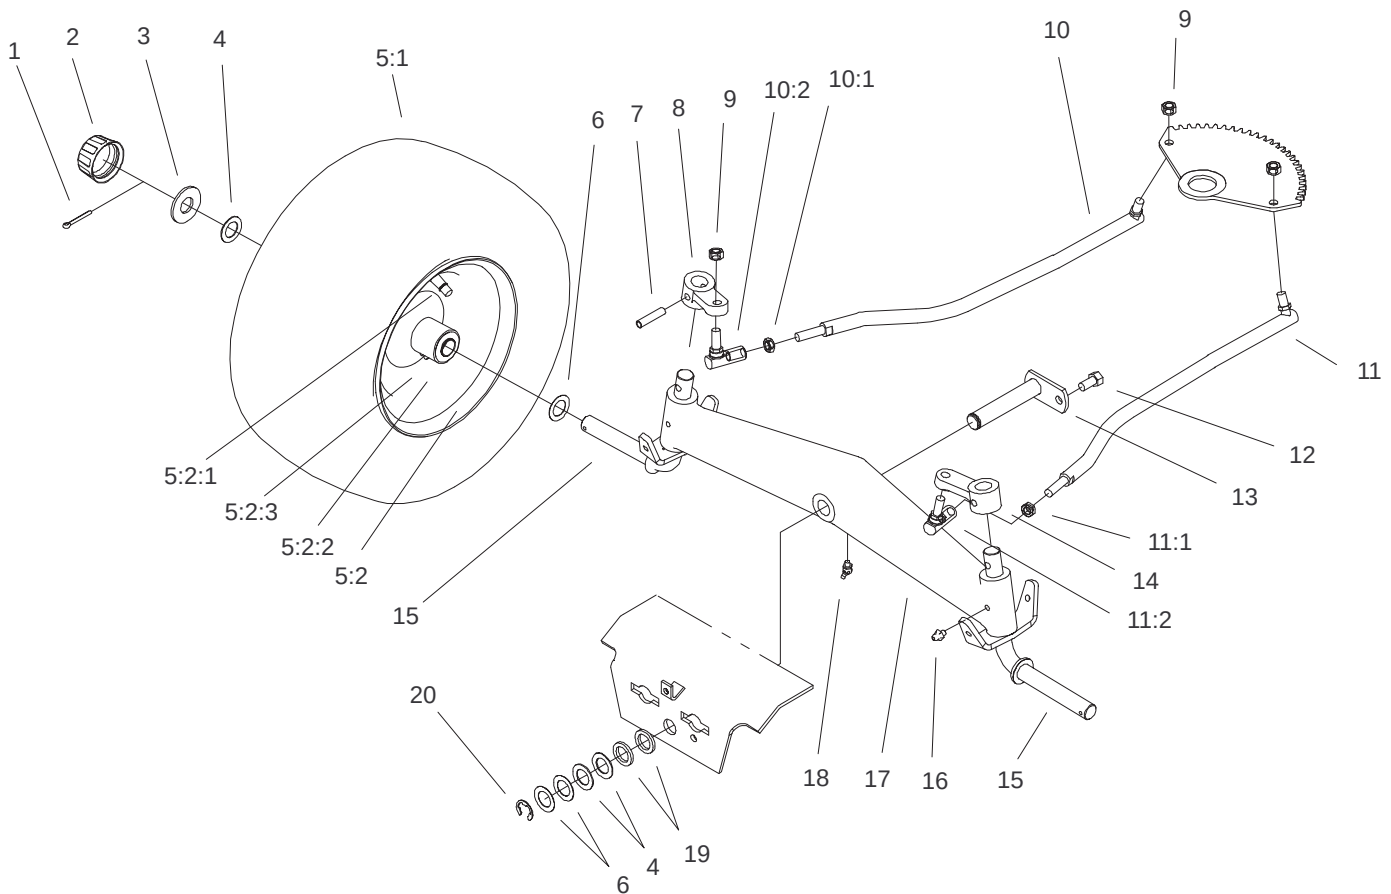


Sheet No.:4

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-17	2	Pin-Cotter
2	61-9780	2	Cap-Hub
3	28-2480	2	Washer
4	1278	4	Washer
5:1	99-2336	1	Tire
5:2	93-9801	1	Wheel ASM
5:2:1	5108	1	Valve-Tubeless Tire
5:2:2	110513	2	Bearing-Wheel
5:2:3	109500	1	Zerk-Grease
*	105293	1	Tube
6	5210	4	Washer-Shim
7	933270	2	Pin
8	78-1950-01	1	Arm-Front Spindle
9	9150026	4	Nut-Eslok
10	92-6883	1	Linkage-Steering, RH
10:1	9150854	1	Jam Nut
10:2	78-2920	1	Ball-Joint
11	92-6884	1	Linkage-Steering, LH
11:1	9150854	1	Jam Nut
11:2	78-2920	1	Ball-Joint
12	9267154	1	Screw
13	92-7057-03	1	Pin-Axle
14	78-1940-01	1	Arm-Front Spindle
15	78-2601-01	2	Spindle
16	302-5	2	Fitting-Lube
17	78-7960-01	1	Axle-Front

Ref. No.	Part No.	Qty.	Description
18	302-11	1	Fitting-Lube, 45°
19	9202324	2	Washer
20	5618	1	E-Ring


* Not illustrated

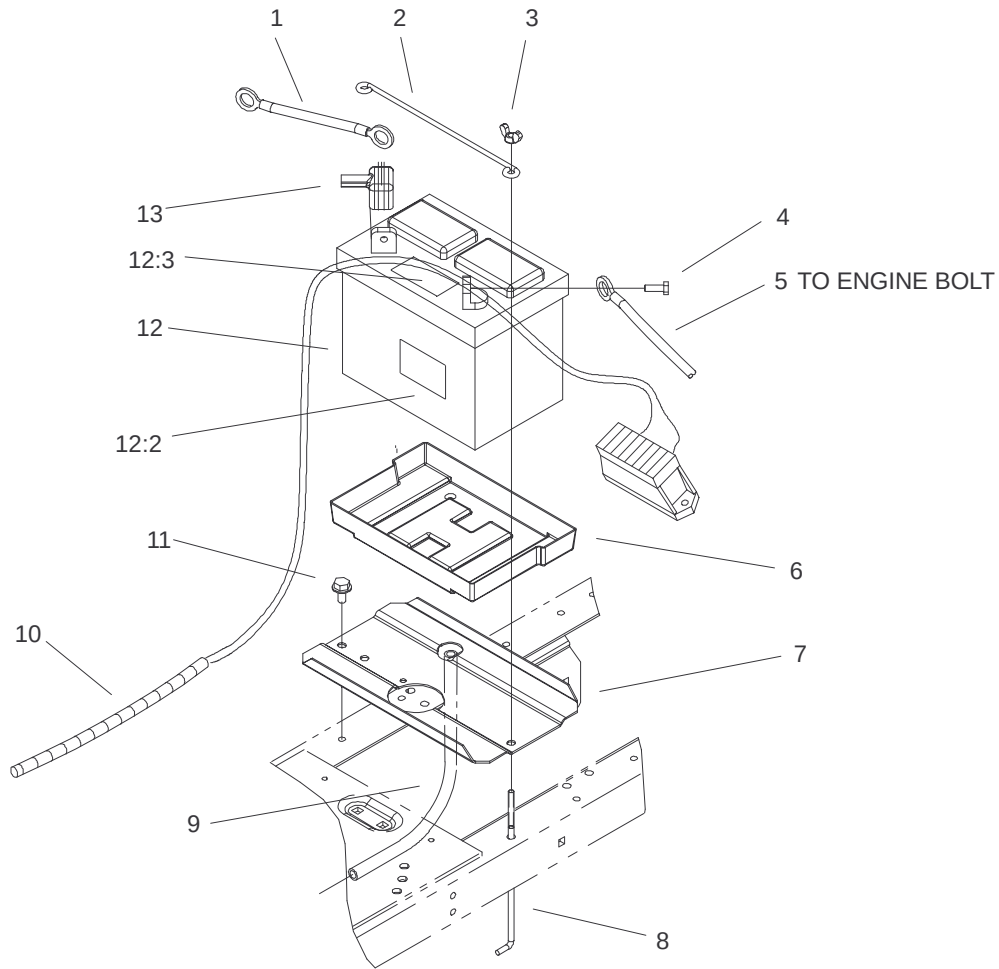

Sheet No.:6

Battery Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4186	1	Battery Cable-Red				
2	117316	1	Rod-Battery Hold Dwn				
3	32103-22	4	Nut-Wing				
4	321-4	2	Screw-HH				
5	111078	1	Wire - 10" Black				
6	106948	1	Tray-Battery				
7	78-6820-03	1	Plate-Battery				
8	109547	2	Hook				
9	114720	1	Tube-21" Battery Drain				
10	100-6155	1	Harness - Wire, 265-6				
11	32144-14	1	Screw-HWH				
12	94-6665	1	ASM-Battery w/Decals				
12:2	93-6668	1	Decal - Battery				
12:3	93-7276	1	Decal - Danger				
13	28-8080	1	Boot-Terminal				

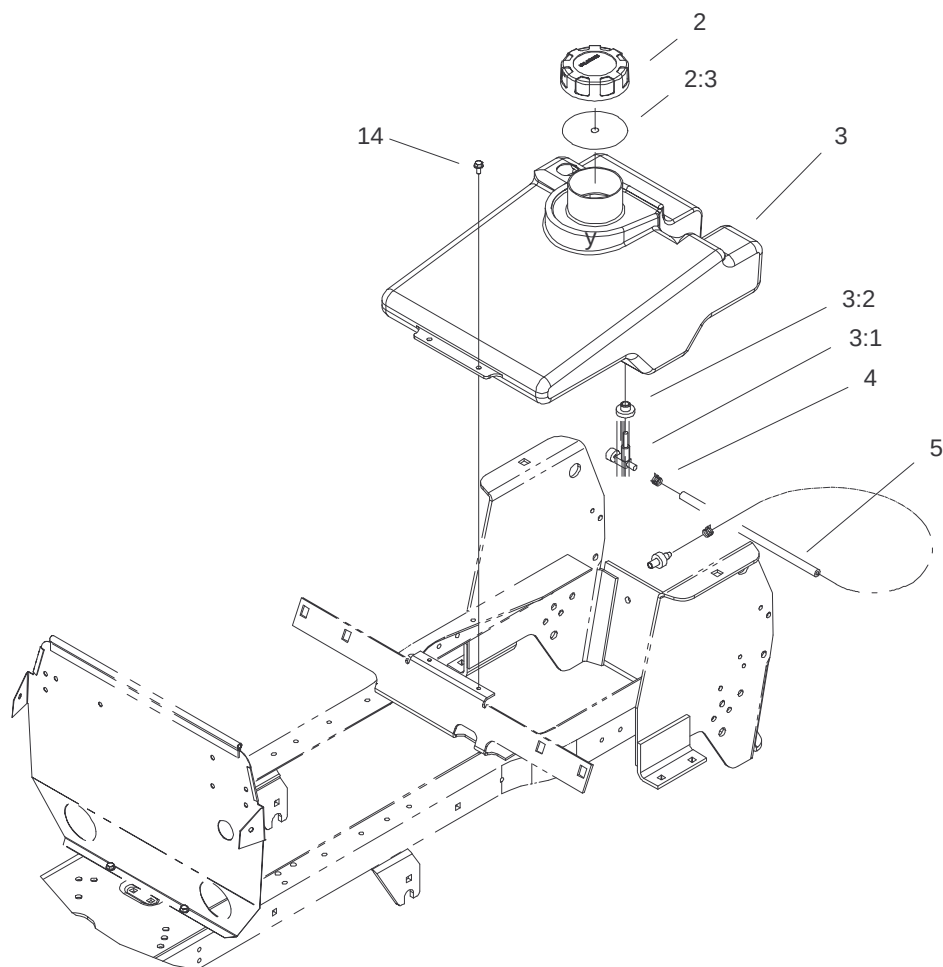


Sheet No.:7

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
2	88-3980	1	Gas Cap Assembly
2:3	88-4010	1	Gasket-Gas Cap
3	94-6928	1	Tank - Gas
3:1	104048	1	Valve-Fuel
3:2	104047	1	Bushing
4	2412-98	2	Clamp
5	92-6754	1	Hose - Fuel Line Single
14	32144-4	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

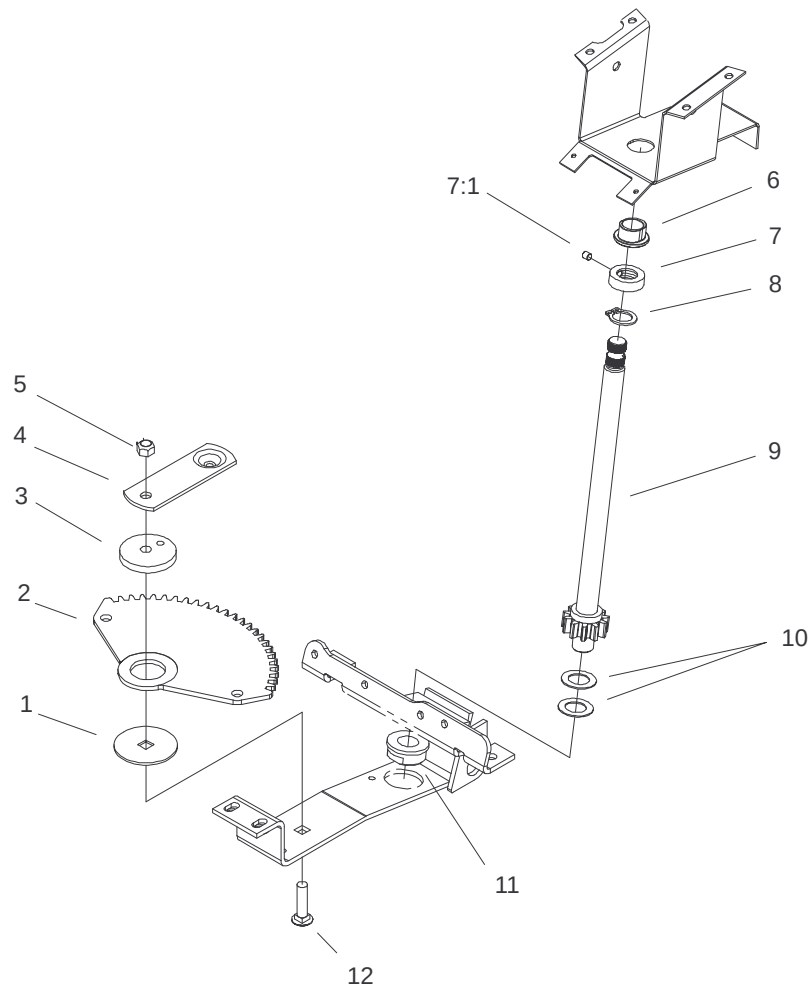


Sheet No.:8

Lower Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	111419	1	Bearing-Washer
2	78-2610	1	Gear-Sector
3	111418	1	Bushing
4	78-9150-03	1	Plate
5	108881	1	Nut-Differential
6	109189	1	Bearing-Flanged
7	111383	1	Collar
7:1	3245-32	1	Screw-HS
8	111646	1	Grip Ring
9	92-6702	1	Lower Strg Shaft Wa
10	1278	2	Washer
11	110391	1	Bearing Wheel
12	3231-4	1	Screw-CARR

Ref. No.	Part No.	Qty.	Description

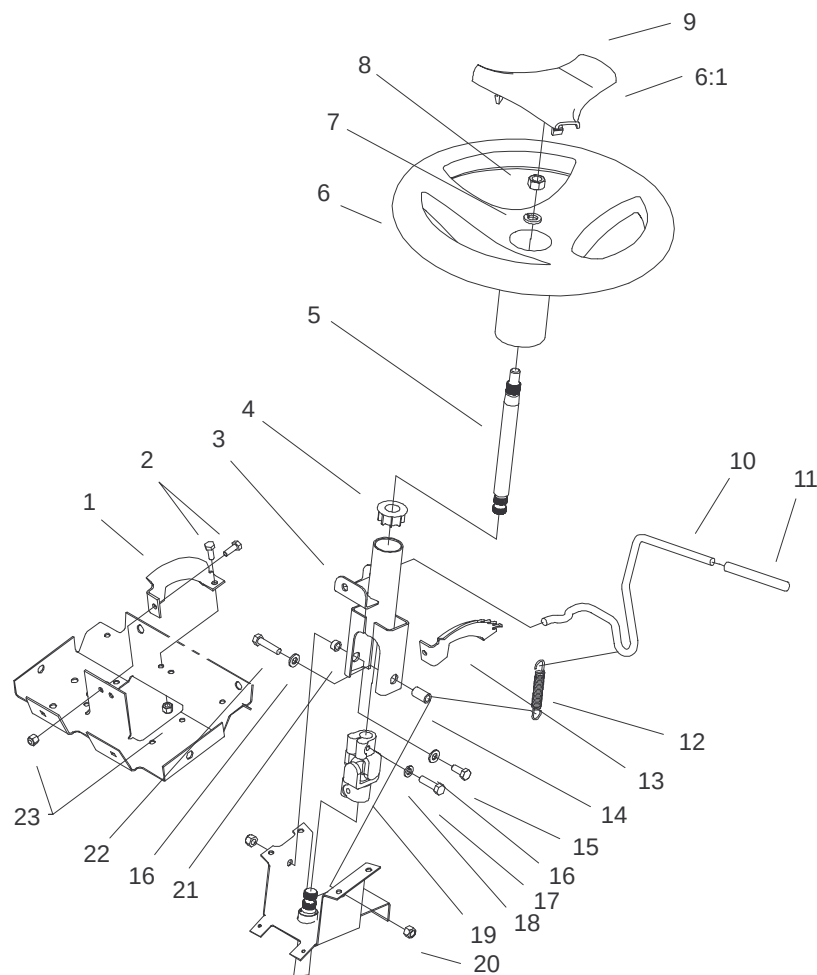


Sheet No.:9

Steering Wheel & Tilt Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6777-03	1	Brkt – Supt Column
2	321-4	4	Screw-HH
3	93-1148-03	1	Column – Wa
4	93-1146	1	Bushing – Upper Strg
5	94-2874	1	Shaft – Short Steering
6	98-1471	1	Wheel – Steering 14"
6:1	98-1468	1	Cover – Wheel, Steering
7	3253-7	1	Washer-Lock/Sp
8	3217-9	1	Nut-Hex
9	98-1459	1	Decal-Toro
10	92-6971	1	Lever – Tilt Plated
11	92-6798	1	Cap – Rod Tilt
12	93-1357	1	Spring – Ext., Steering
13	92-6776	1	Bracket – Detent
14	92-6999	1	Spacer – Yoke
15	322-3	1	Screw-HH
16	3256-23	2	Washer-Flat
17	33114-030	2	Screw-HH
18	3253-4	2	Washer
19	92-6717	1	U Joint – Steering
20	3296-29	2	Nut-Lock, NI
21	92-6998	1	Spacer – Yoke, Right
22	322-17	1	Screw-HH
23	3296-8	4	Nut-Lock NI


Ref. No.	Part No.	Qty.	Description

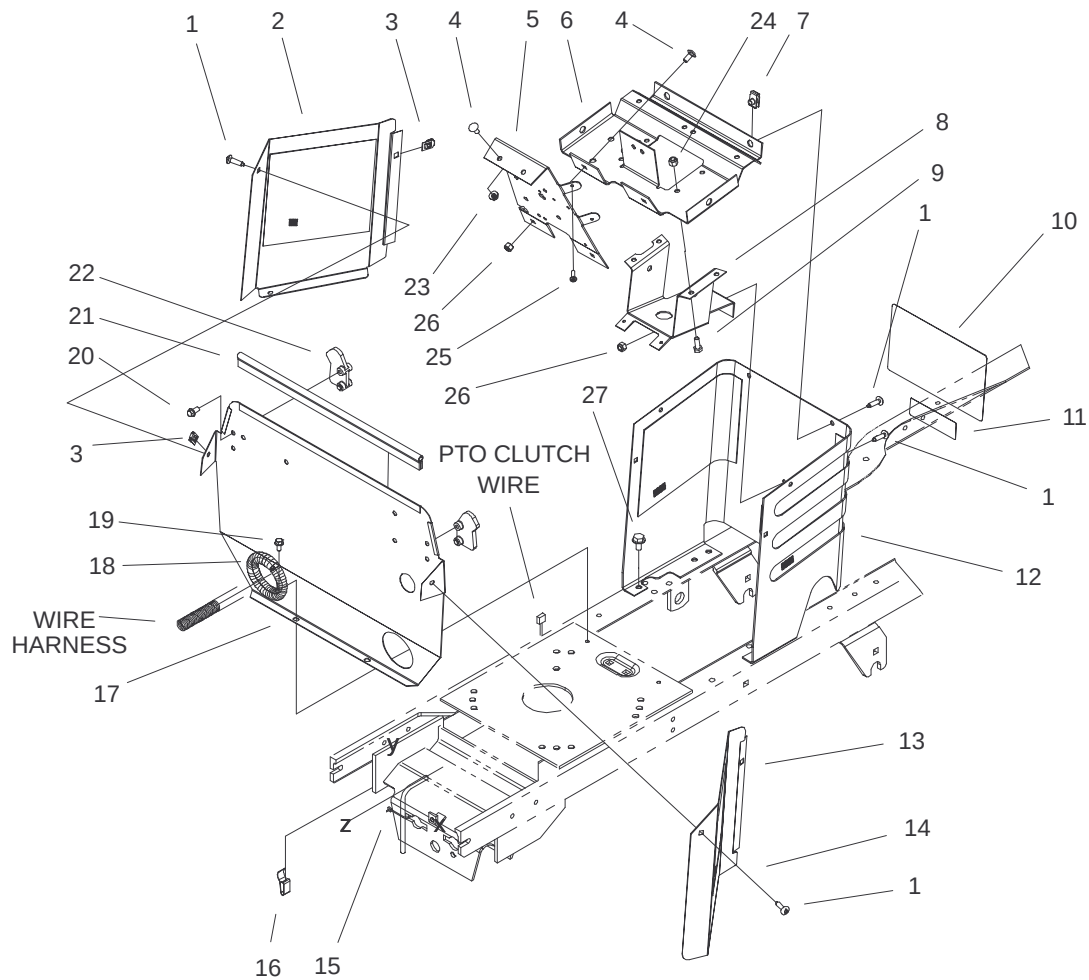

Sheet No.:10

Hoodstand & Firewall Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-HH	26	3296-42	3	Nut-Lock
2	92-6937-03	1	Cover-RH Side Wa	27	32144-14	2	Screw-HWH
3	92-7006	4	Nut - J Type				
4	3229-11	4	Screw-CARR				
5	100-6064-03	1	Panel-Support, Dash				
6	92-6859-03	1	Support - Dash				
7	107069	4	Clip				
8	92-6778-03	1	Brkt - Lower Column				
9	321-4	4	Screw-HH				
10	93-0301	1	Decal - Danger				
11	83-6620	1	Decal - Instruction				
12	100-6069	1	Hoodstand w/Decals				
13	92-6936-03	1	Cover-LH Side Wa				
14	95-0803	2	Decal - 265 6-Speed				
15	614249	1	Tie Strap				
16	212-93	1	Casing Clamp				
17	94-1749-03	1	Firewall				
18	24-7924	2	Drive Shaft Cover				
19	32144-4	2	Screw-HH				
20	46-8093	2	Screw-Plastite				
21	93-1131	1	Trim-Seal Firewall				
22	92-6960	2	Latch - Hood				
23	32149-2	2	Nut-Keps				
24	3296-8	4	Nut-Lock NI				
25	32144-8	2	Screw-HH				

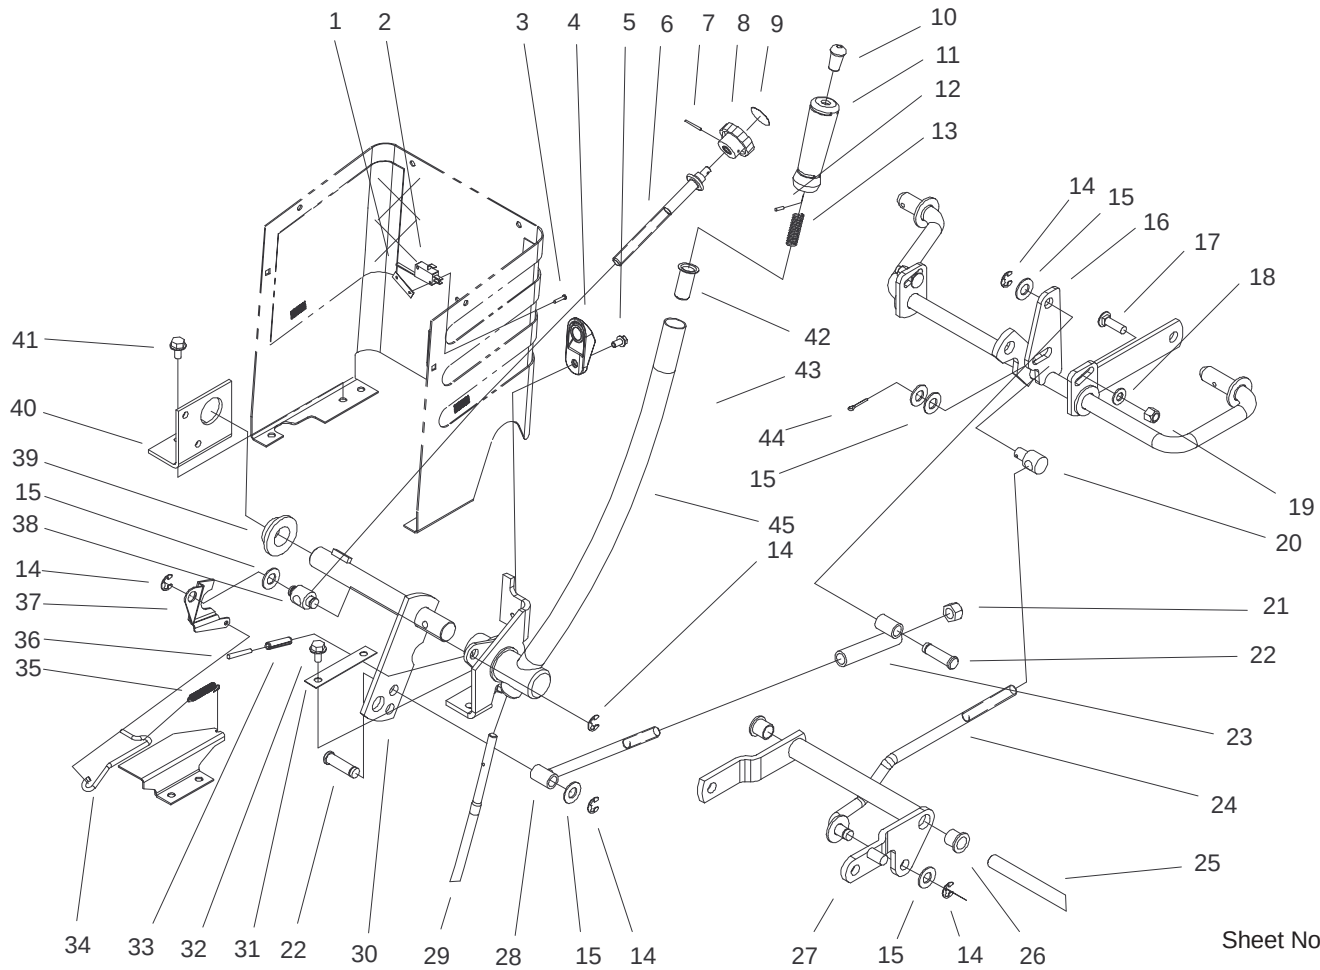


Sheet No.:11

Lift Lever & HOC Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-354	1	Nut-Speed
2	88-9930	1	Switch-Micro
3	95-3003	2	Screw-HH
4	92-6794	1	Wedge - HOC
5	32144-4	1	Screw-HH
6	92-6965	1	Rod - HOC
7	933141	1	Pin-Spirol
8	115593	1	Knob
9	78-9740	1	Decal-Height Knob
10	92-6711	1	Tip - Rod
11	92-6710	1	Grip - Handle
12	933148	1	Spirol Pin
13	3624	1	Spring-Compression
14	32120-47	5	Ring-Retaining, Ext
15	3256-26	6	Washer-Flat
16	79-3401-03	1	Shaft-Gage
17	3231-25	2	Screw-CARR
18	3256-24	2	Washer-Flat
19	3296-39	2	Nut-Lock, NI
20	8870	1	Rod-Trunnion Lift
21	3296-23	1	Nut-Lock, NI
22	79-1250	2	Pin
23	78-7390	1	Tube
24	78-2431	1	Rod
25	94-4944	1	Shaft - Pedal Pivot
26	256-90	2	Bushing-Flange


Ref. No.	Part No.	Qty.	Description
27	92-6855-03	1	Arm-Pivot
28	78-7360	1	Wldmt-Rod
29	92-6977-03	1	Rod - Lift Lever
30	94-3552-03	1	Shaft-Lift
31	78-6810-03	1	Plate
32	32144-14	2	Screw-HWH
33	32121-25	1	Pin-Roll
34	92-6978	1	Rod - HOC Indicator
35	92-7007	1	Spring - Extension
36	32121-103	1	Pin-Spring
37	92-6979	1	Plate - HOC Gage
38	78-2140	1	Trunnion
39	106269	1	Bearing-Flange
40	93-0523-03	1	Brkt-Pivot Linkage
41	32144-70	2	Screw-HH
42	8130	1	Retainer-Spring
43	112168	1	Decal-Lift
44	3272-6	1	Pin-Cotter
45	94-3761-03	1	Wa- Lift Lever

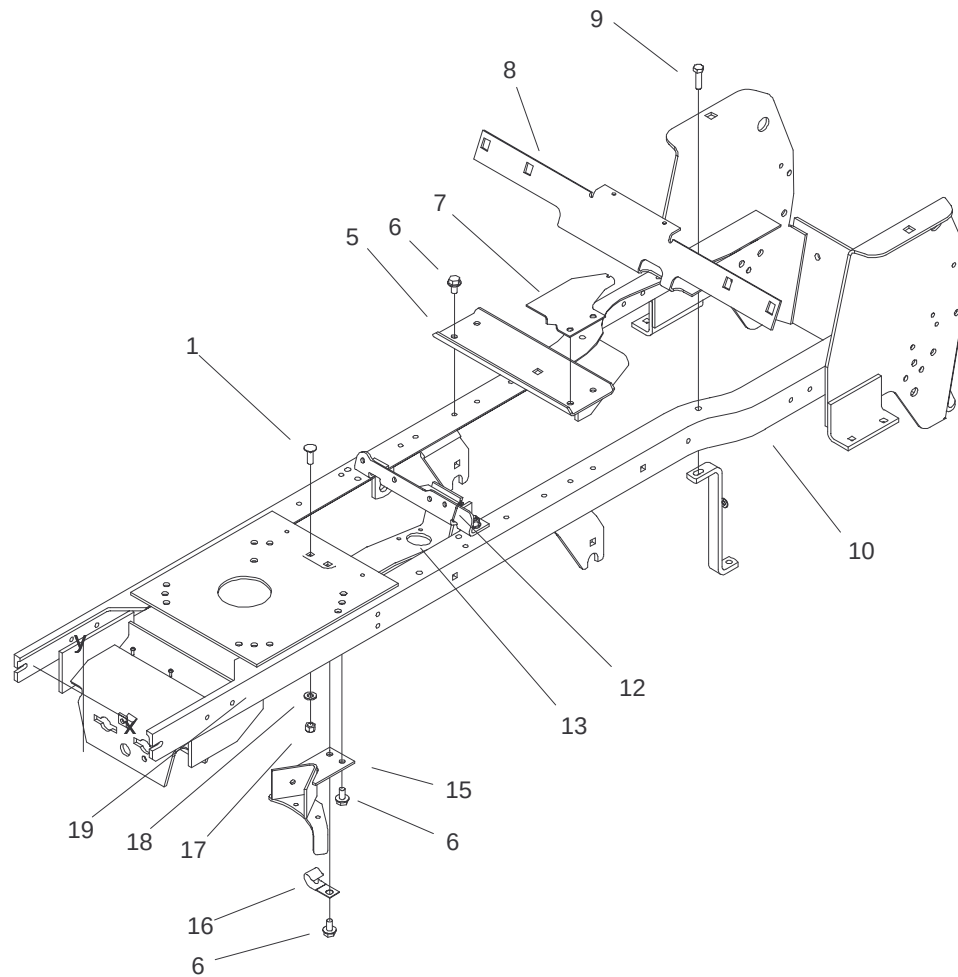

Sheet No.:14

Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-2	2	Screw-CARR				
5	92-6868-03	1	Brkt-Idler Plate				
6	32144-14	6	Screw-HWH				
7	92-6964-03	1	Bracket-HOC Gage				
8	100-1341-03	1	Fender-Support				
9	322-6	2	Screw-HH				
10	100-1345-03	1	Frame W.a.				
12	614249	1	Tie Strap				
13	100-3522-03	1	Steering Bracket W.a.				
15	100-3526-03	1	PTO Stop ASM, Welded				
16	8830	1	Clip				
17	3296-29	2	Nut-Lock, NI				
18	3256-23	2	Washer-Flat				
19	92-8747	2	Decal Attach-A-Matic				

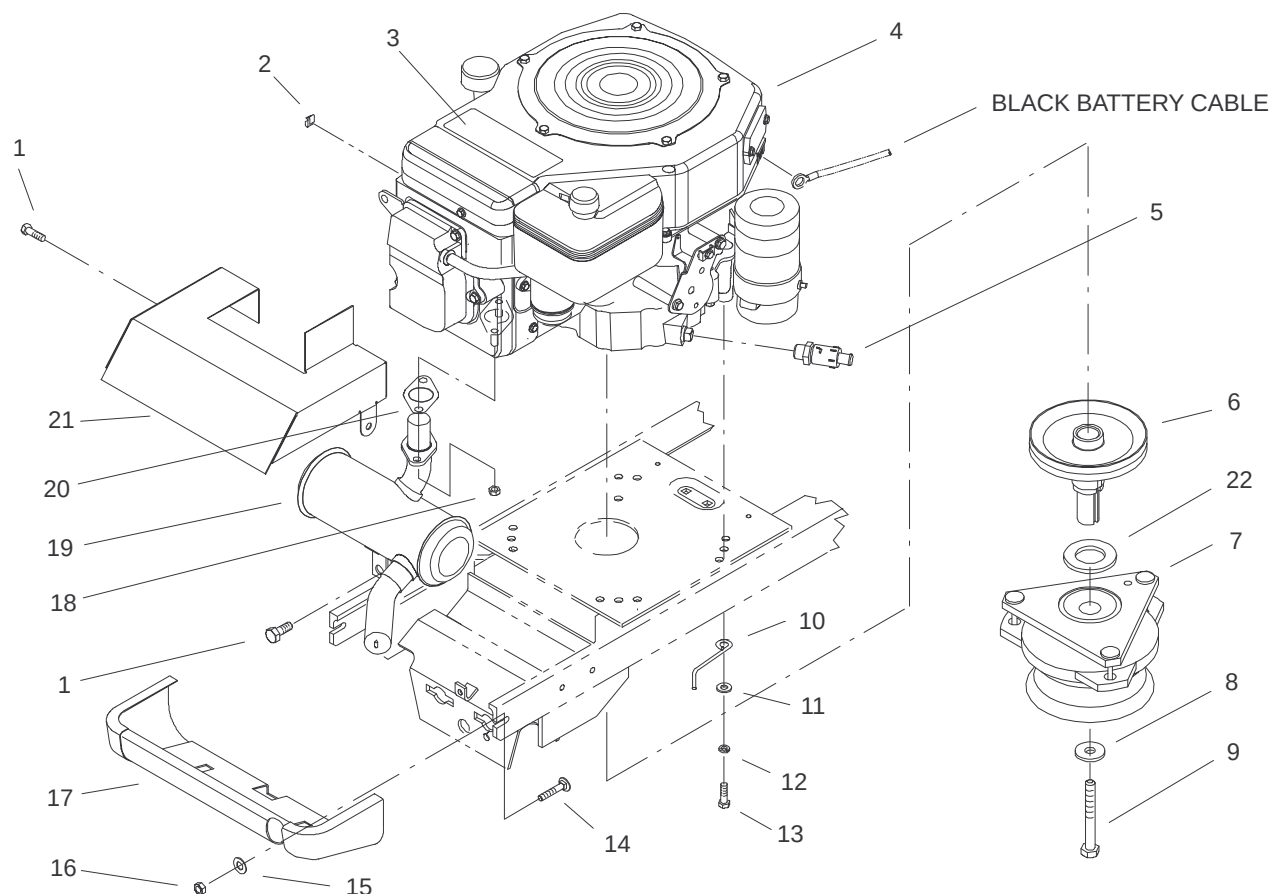


Sheet No.:16

Single Cyl Engine, Muffler & PTO Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-14	3	Screw-HWH
2	702366	1	Clip-Wire Retainer
3	94-2970	1	Decal – Toro Power + 15
4	95-3041	1	Engine – Kohler 15
5	92-6877	1	Valve – Oil Drain
6	93-0321	1	Pulley- Engine Gear
7	100-6059	1	Clutch-PTO
8	112843	1	Washer
9	9114466	1	Screw-HH
10	79-0390	1	Guide-Belt
11	3256-23	1	Washer-Flat
12	3253-4	4	Washer
13	33114-030	4	Screw-HH
14	3231-25	2	Screw-CARR
15	3256-24	2	Washer-Flat
16	3296-39	2	Nut-Lock, NI
17	100-3541-01	1	Muffler Shield ASM,Welded
18	92-6780	2	Nut-Hex Flange
19	98-1761	1	Muffler – Single
20	92-6716	1	Gasket-Exh.single F/W
21	92-6878-03	1	Shield-Mufflr Single
22	100-1340	1	Spacer-Cluth


Ref. No.	Part No.	Qty.	Description

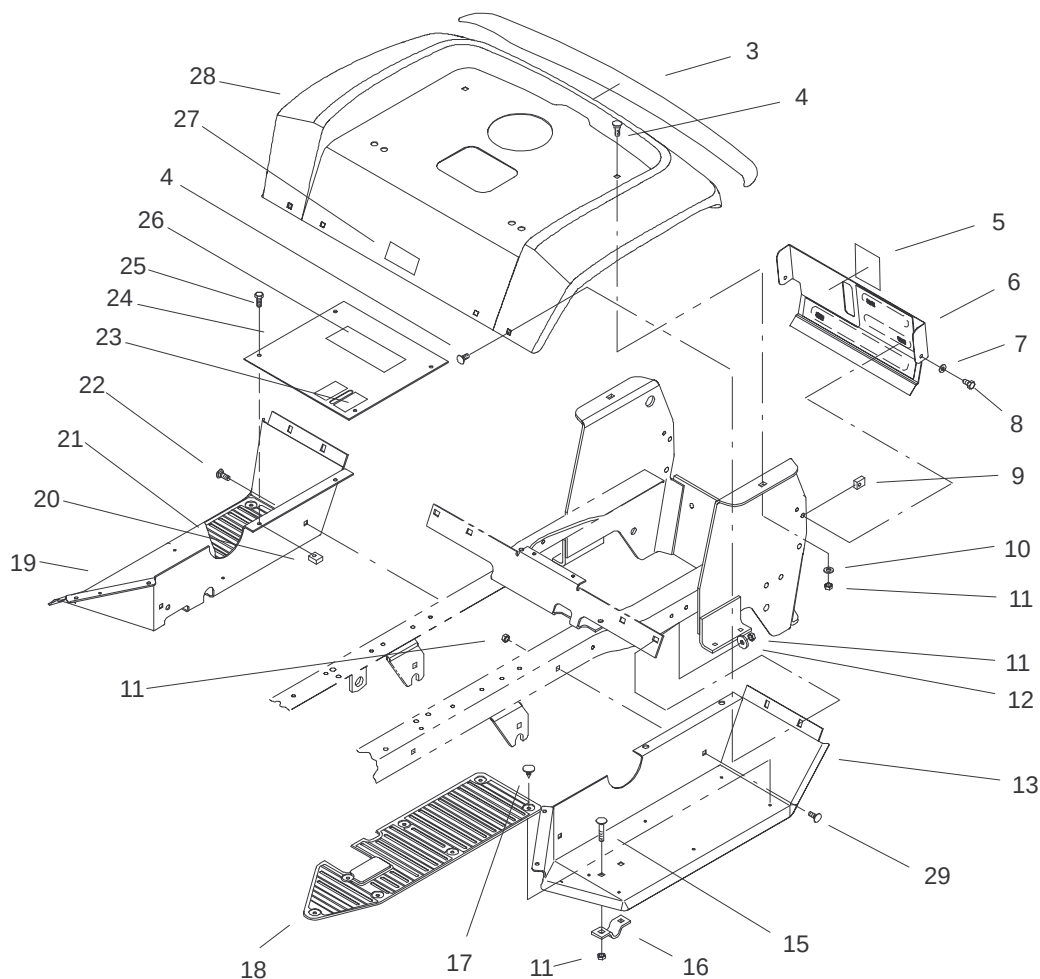

Sheet No.:17

Fender & Footrests Assembly


Ref. No.	Part No.	Qty.	Description
3	95-0802	1	Decal – Rear Fender
4	3230-31	6	Screw– Carriage
5	92-6727	1	Decal – Fuel Level
6	99-6765-03	1	Rear Panel ASM
7	3256-22	2	Washer–Flat
8	321-4	2	Screw–HH
9	609900	2	Nut–Speed
10	3256-23	2	Washer–Flat
11	3296-29	14	Nut–Lock, NI
12	94-2869	4	Washer
13	92-6745-01	1	LH Footrest
15	3230-1	4	Screw–CARR
16	106288	2	Clamp
17	3290-479	14	Fastener–Panel
18	92-6690	1	Foot Mat–LH
19	92-6744-01	1	Footrest–RH
20	107069	4	Clip
21	92-6689	1	Foot Mat–RH
22	3230-23	3	Screw–CARR
23	92-6725	1	Decal – HOC
24	93-0489-01	1	Plt – Ftrest w/Decal
25	92-7020	4	Screw–HH
26	92-8946	1	Decal – Danger
27	76-1340	1	Decal – USA
28	92-6795-01	1	Fender
29	3230-2	1	Screw–CARR

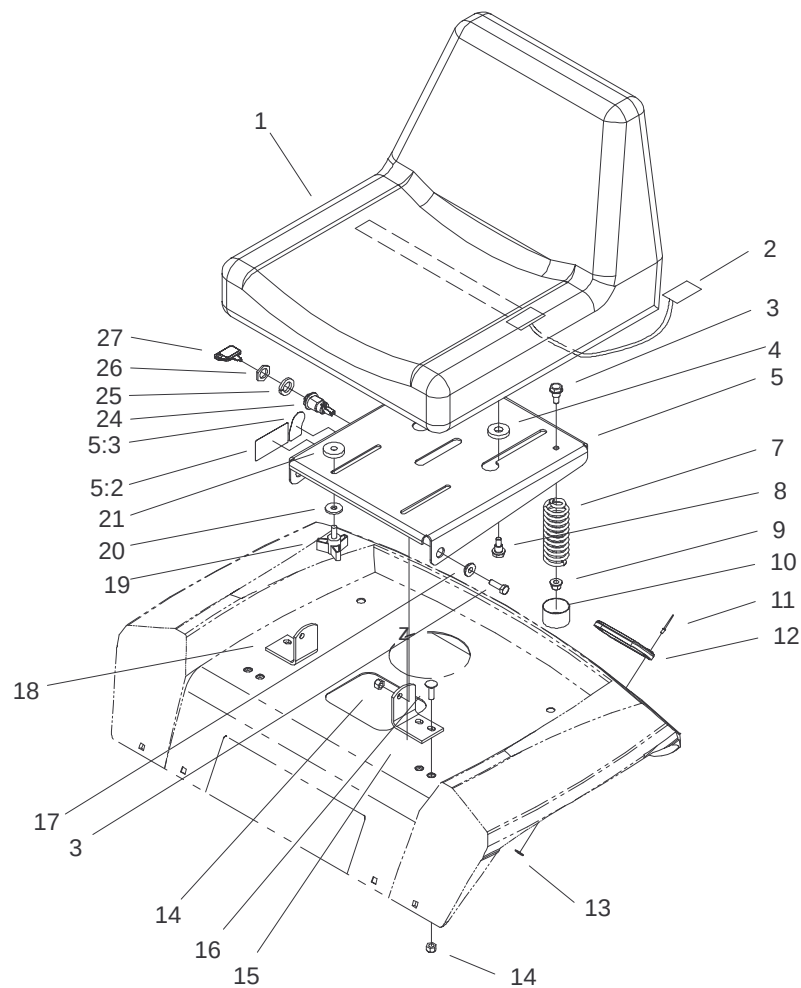

Sheet No.:18

Seat Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-3950	1	Seat – Medium Back				
2	38-1420	1	Switch–Seat				
3	322-5	4	Screw–HH				
4	92-6750	2	Spacer – Nylon				
5	99-8031	1	Support–Seat				
5:2	99-2985	1	Decal–Danger				
5:3	99-5339	1	Decal–Nmir Switch				
7	92-7054	2	Spring – Compression				
8	92-6986	2	Bolt – Shoulder				
9	3296-58	2	Nut–Lock NI				
10	701178	2	Cap–Protector				
11	3290-282	4	Rivet–Pop, Steel				
12	106557	2	Reflector–Stick On				
13	3256-49	4	Washer–Flat				
14	3296-29	6	Nut–Lock, NI				
15	79-0950-03	1	Brkt–Pivot R.h. (Black)				
16	3230-2	4	Screw–CARR				
17	105503	2	Bushing				
18	79-0970-03	1	Brkt–Pivot L.h.				
19	700806	2	Knob				
20	94-2869	2	Washer				
21	109989	2	Spacer – Nylon				
24	46-5780	1	Switch–Starter				
25	3254-5	1	Washer–Lock/Int				
26	218-461	1	Nut–HH				
27	62-7770	1	Key–Ignition				

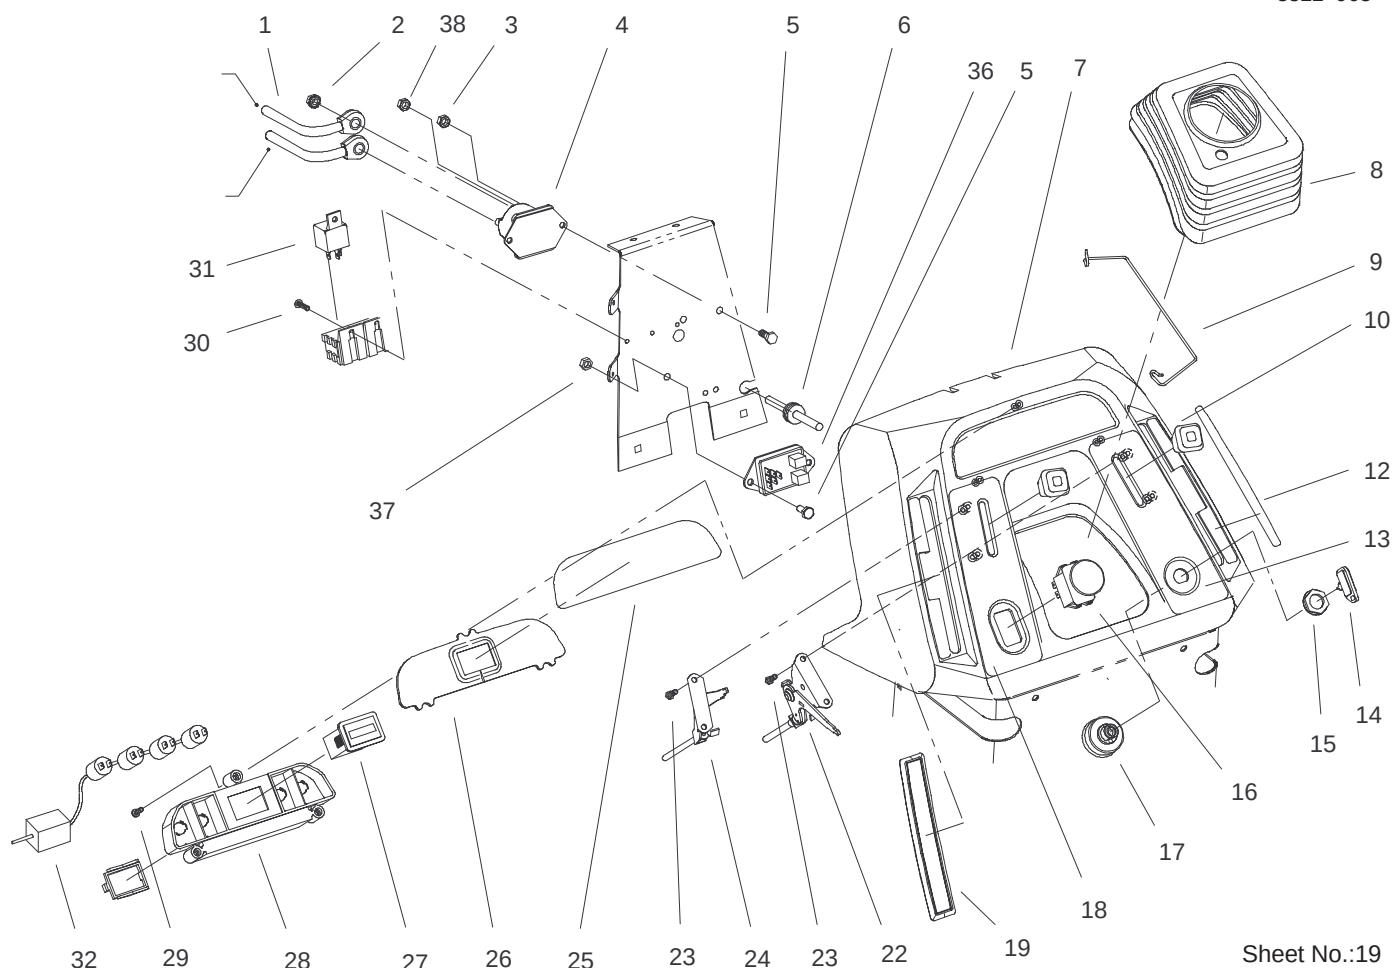

Sheet No.:19

Dash Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4187	1	Battery Cable-Red	30	32144-8	2	Screw-HH
2	32149-1	2	Nut-Keps	31	98-7249	2	Relay-Speedometer
3	3296-42	2	Nut-Lock	32	99-8066	1	Harness-Lamp
4	28-4210	1	Solenoid	36	99-3701	1	Module-Nmir, Clutch
5	321-4	4	Screw-HH	37	3296-42	2	Nut-Lock
6	237-141	1	Grommet-Rubber	38	32149-8	2	Keps Nut
7	94-1895	1	Dash				
8	92-6680	1	Steering Boot				
9	94-2966	1	Clip - Boot				
10	66-0120	2	Knob				
12	92-6722	1	Decal - Shift				
13	92-6721	1	Decal - Throttle/Ign				
14	62-7770	1	Key-Ignition				
15	700919	1	Nut				
16	93-9998	1	Switch - PTO Toro				
17	92-6785	1	Switch - Ignition				
18	92-6720	1	Decal - PTO/Choke				
19	92-6797	1	Cover - Slot LH				
22	94-9779	1	Control - Throttle				
23	32144-32	4	Screw				
24	92-6781	1	Control-Choke Single				
25	99-8038	1	Decal - Dash Lens				
26	92-6705	1	Lens - Dash Hm				
27	94-4208	1	Hourmeter				
28	92-6732	1	Hsg - Indicator Light				
29	94-6961	3	Screw				

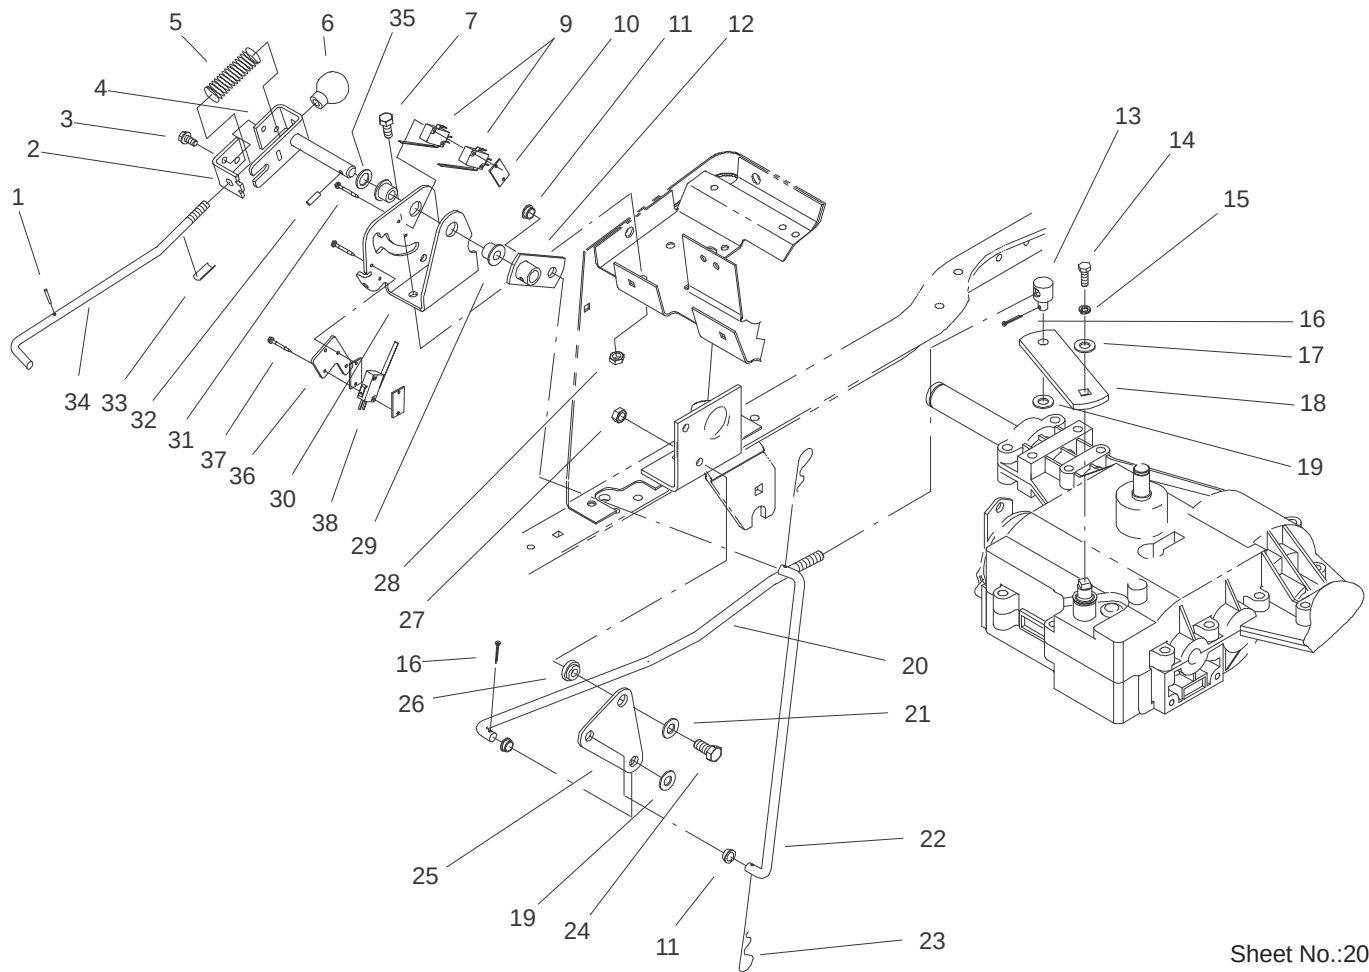


Sheet No.:20

Gear Shift Linkage Assembly

Ref. No.	Part No.	Qty.	Description
1	32121-97	1	Pin
2	92-6921	1	Bracket – Shaft
3	32144-4	2	Screw-HH
4	94-9767	1	Arm-Pivot
5	3624	1	Spring-Compression
6	233-42	1	Knob
7	322-3	2	Screw-HH
9	115230	2	Switch – Clutch
10	3290-354	3	Nut-Speed
11	92-6875	3	Brg – Shift Linkage
12	92-6926-03	1	Tube-Linkage
13	101161	1	Trunion
14	329-23	1	Screw-HH
15	3253-3	1	Washer-Lock/Sp
16	3272-6	2	Pin-Cotter
17	7-5461	1	Spacer
18	92-6886	1	Brk-Trasxl Shi
19	3256-24	2	Washer-Flat
20	92-6896	1	Rod – Transaxle Shift
21	3256-71	1	Washer-Flat
22	92-7005	1	Rod – Linkage
23	3290-307	2	Pin-Hair
24	322-5	1	Screw-HH
25	93-0524	1	Bracket – Pivot
26	105503	1	Bushing
27	3296-29	1	Nut-Lock, NI


Ref. No.	Part No.	Qty.	Description
28	3296-29	2	Nut-Lock, NI
29	256-219	2	Bushing
30	99-8041-03	1	Brkt-Pivot Mtg
31	93-0539	2	Screw-HH
32	32121-4	1	Pin-Roll
33	93-3141	1	Decal – Reverse Gear
34	94-9766	1	Rod – Shift
35	41-8440	1	Washer
36	99-8042	1	Bracket-Switch, Nmir
37	147665	4	Screw-HH
38	88-9932	1	Switch-Micro

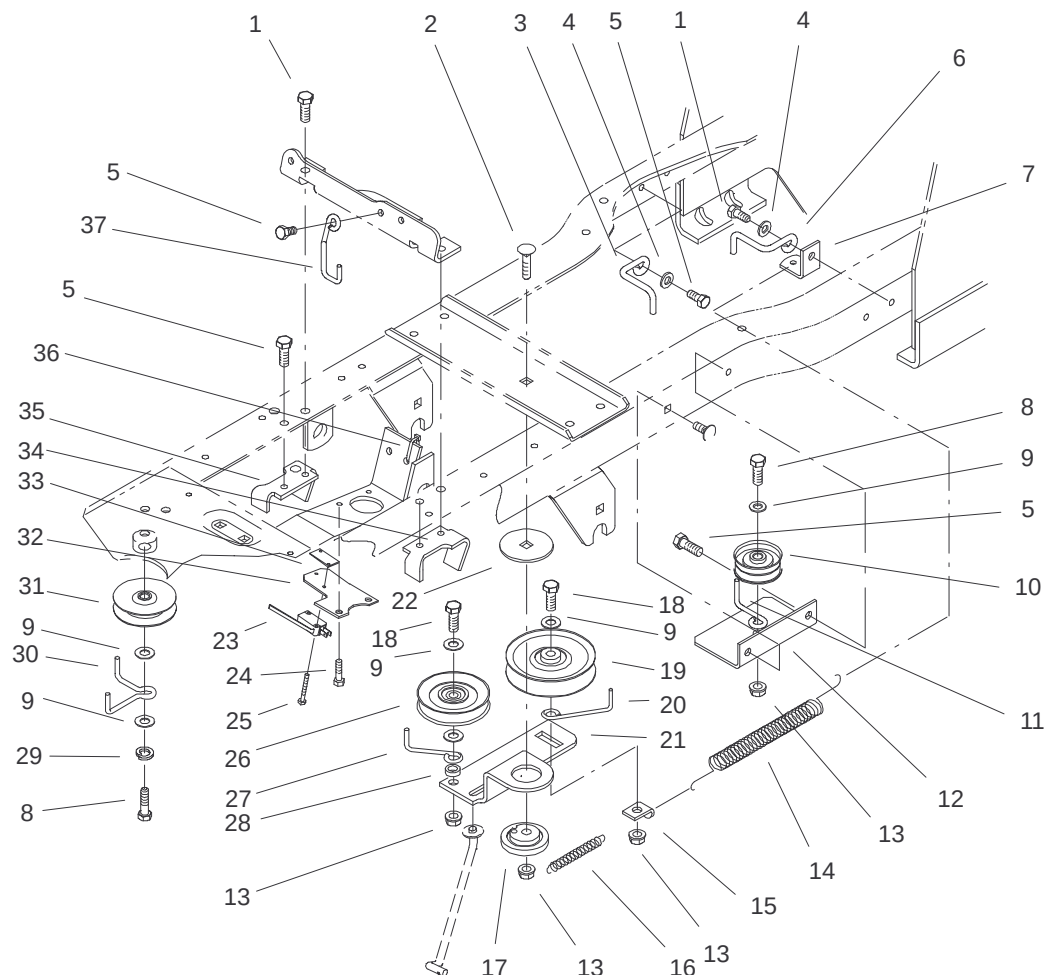

Sheet No.:21

Gear Drive Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32144-70	3	Screw-HH	27	79-0400	1	Guide-Belt
2	3231-25	1	Screw-CARR	28	93-3658	1	Spacer
3	92-7001	1	Guide - Belt RH	29	3253-5	1	Washer-Lock/Sp
4	3256-23	3	Washer-Flat	30	93-0547	1	Guide-Belt
5	32144-14	4	Screw-HWH	31	93-0320	1	Pulley - Idler
6	92-7002	1	Guide-Belt LH	32	93-0526-03	1	Brkt-Microswitch Gear
7	92-6891-03	1	Brkt-Idler Spring Plt	33	3290-354	1	Nut-Speed
8	323-9	2	Screw-HH	34	92-6670	1	Clutch Pedal Stop
9	3256-24	6	Washer-Flat	35	92-6671	1	Brake Bracket Plated
10	607978	1	Pulley Idler Nhi	36	614249	1	Tie Strap
11	93-0549	1	Guide-Belt	37	93-0548	1	Guide-Belt
12	92-6894-03	1	Bracket-Rear Idler				
13	3296-39	4	Nut-Lock, NI				
14	79-7530	1	Spring - Clutch				
15	2534	1	Clip - Spring				
16	107788	1	Spring-Extension				
17	111418	1	Bushing				
18	323-10	2	Screw-HH				
19	92-7101	1	Pulley - Flat Idler				
20	79-0390	1	Guide-Belt				
21	78-6771	1	Arm-Idler				
22	111419	1	Bearing-Washer				
23	88-9932	1	Switch-Micro				
24	32144-4	2	Screw-HH				
25	147665	2	Screw-HH				
26	92-7102	1	Pulley - Idler				

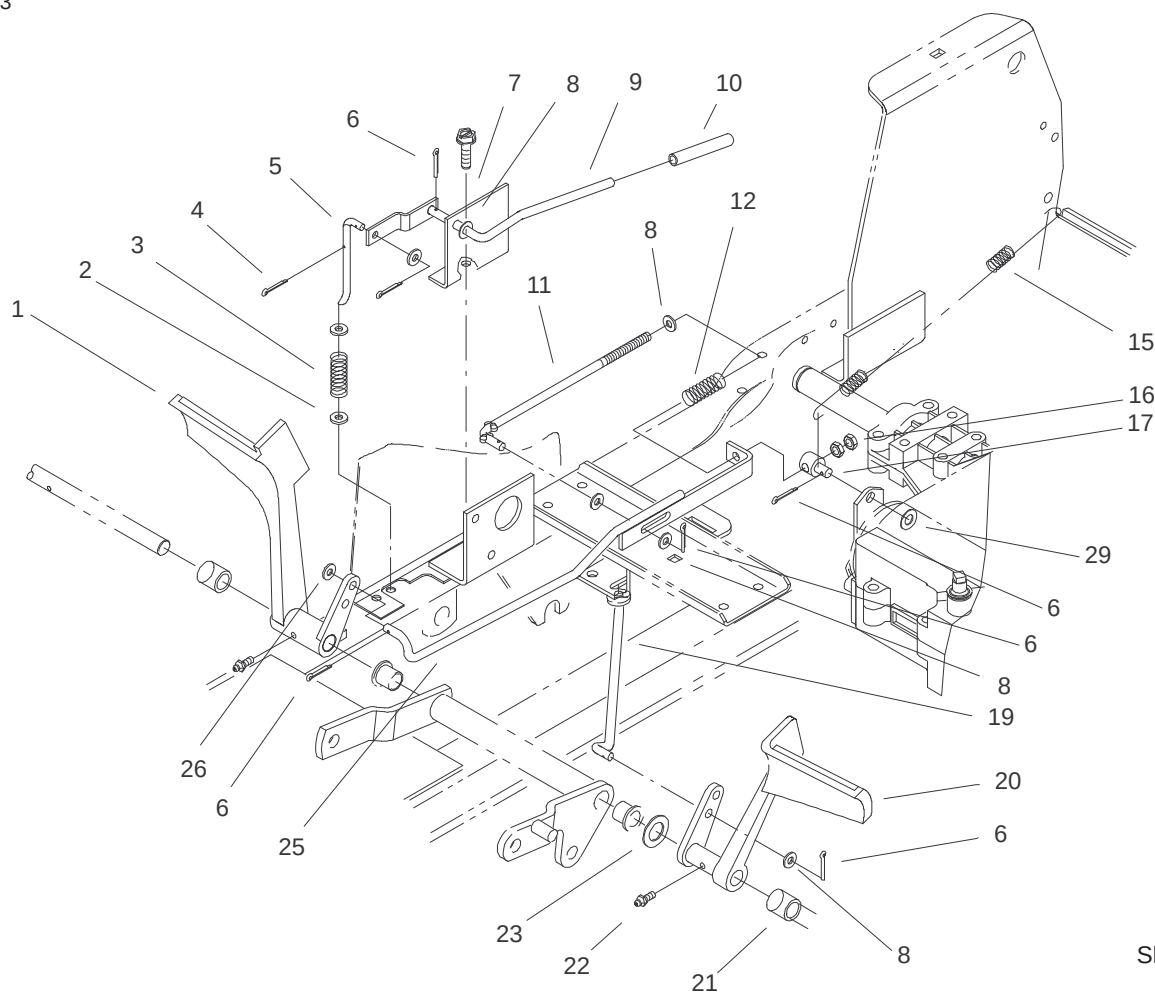


Sheet No.:22

Clutch/Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3228-03	1	Pedal – Brake
2	3256-22	3	Washer-Flat
3	92-7116	1	Spring – Compression
4	3272-2	2	Pin-Cotter
5	100-6053	1	Rod-Parking Brake
6	3272-6	4	Pin-Cotter
7	92-6929-03	1	Brkt-Parking Brake
8	3256-23	4	Washer-Flat
9	100-6051-03	1	Parking Brake Lever ASM,Welded
10	92-7009	1	Grip – Parking Brake
11	94-1729	1	Rod – Spring
12	94-1734	1	Spring – Compression
15	94-1733	1	Spring – Extension
16	3218-2	2	Nut-Jam
17	94-2688	1	Trunion
19	92-6924	1	Clutch Rod Wa
20	78-8180-03	1	Pedal-Clutch
21	94-1862	2	Spacer
22	302-5	2	Fitting-Lube
23	111712	1	Washer-Wave
25	95-3039-03	1	Arm-Brake
26	3256-3	1	Washer-Flat
29	3256-24	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description

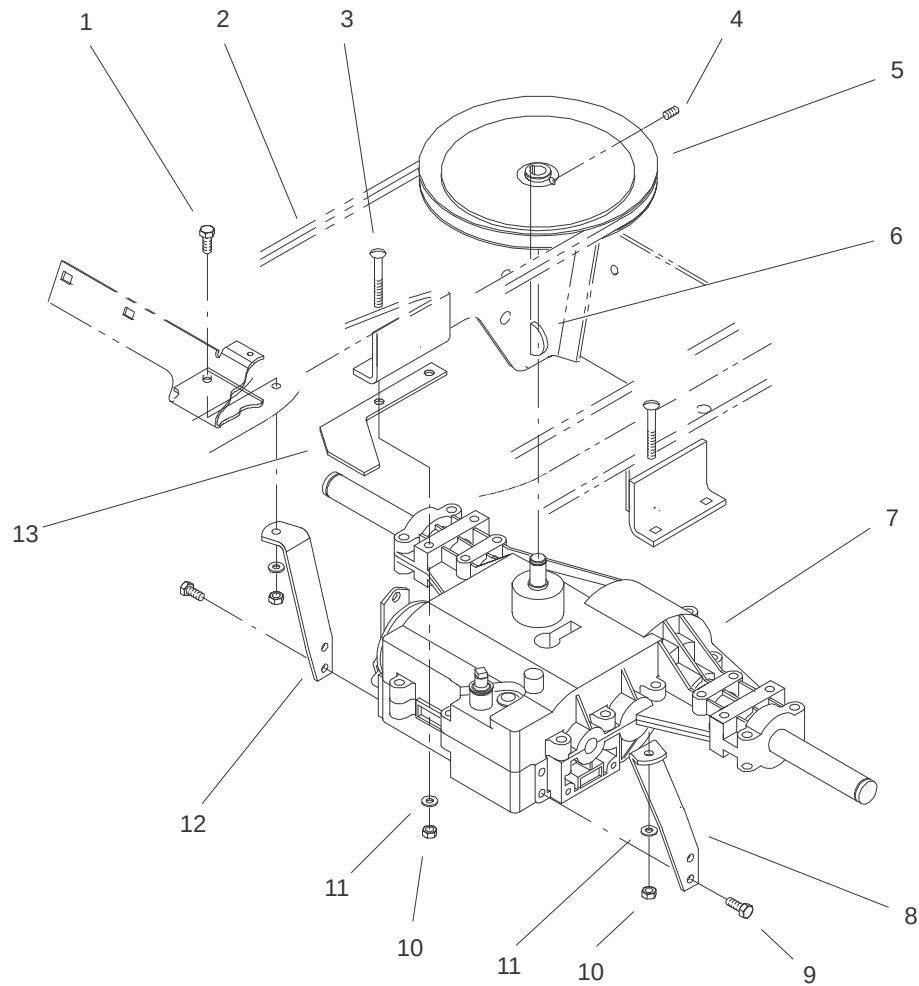


Sheet No.:23

Gear Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	322-6	1	Screw-HH
2	92-6955	1	Belt - V Gear
3	3230-26	4	Screw-CARR
4	909543	2	Screw-Sq Hd Set
5	92-6887	1	Pulley-Trans (Gear)
6	937225	1	Key-Hi-Pro
7	92-6761	1	Transaxle 820-024
8	92-6889-03	1	Strap - LH Torque
9	32144-70	4	Screw-HH
10	3296-29	6	Nut-Lock, NI
11	3256-23	6	Washer-Flat
12	92-6890-03	1	Strap - RH Torque
13	94-1723-03	1	Stop - Brake

Ref. No.	Part No.	Qty.	Description

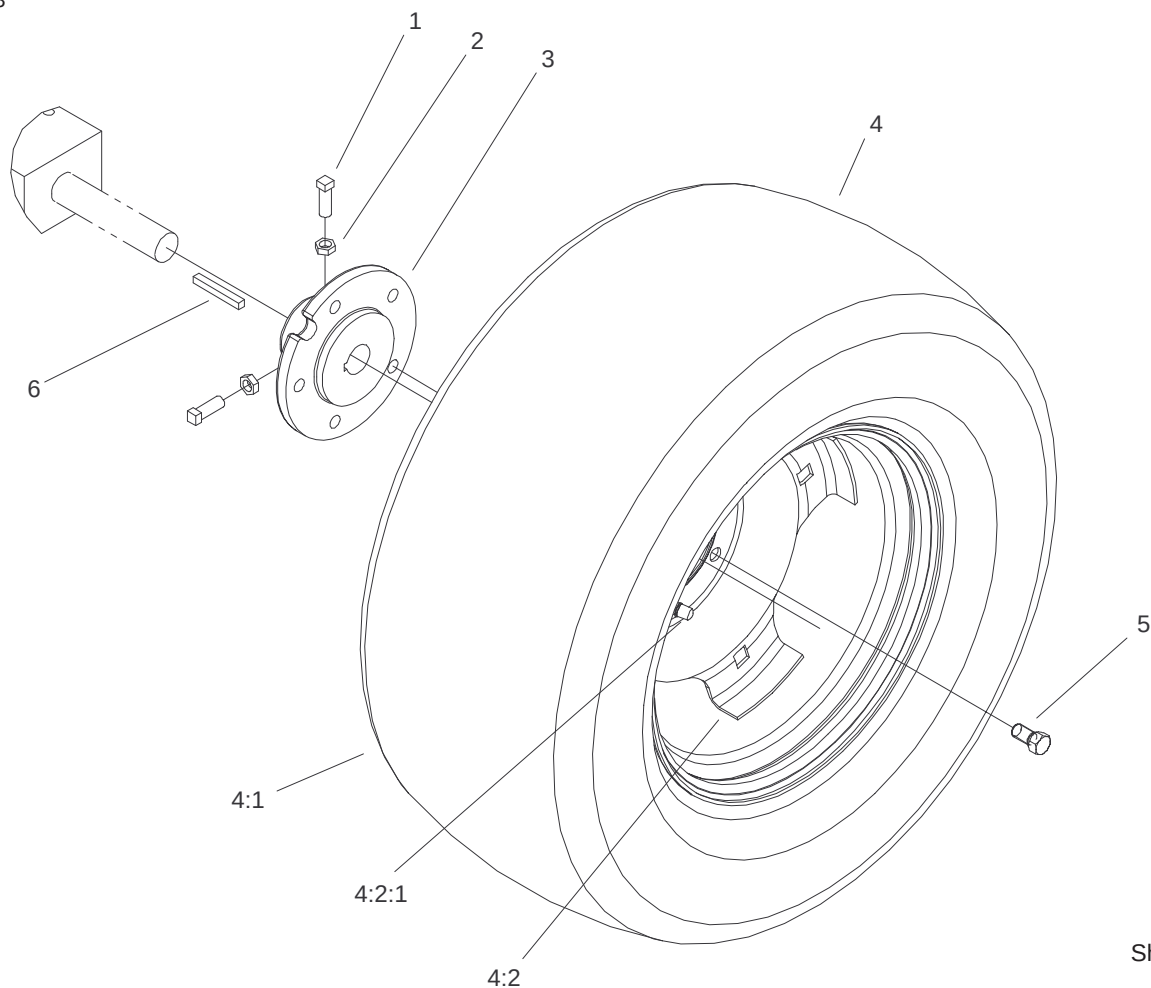


Sheet No.:24

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	3243-5	4	Screw-Set
2	3218-3	4	Nut-Jam
3	93-3659-03	2	Hub-Wheel
4		2	Wheel&tire ASM,Rear
4:1	99-2334	1	Tire
4:2	78-1221	1	Wheel
4:2:1	5108	1	Valve-Tubeless Tire
*	7007	1	Tube-Inner
5	83-2720	10	Lug-Bolt
6	5-1336	2	Key

Ref. No.	Part No.	Qty.	Description


* Not illustrated

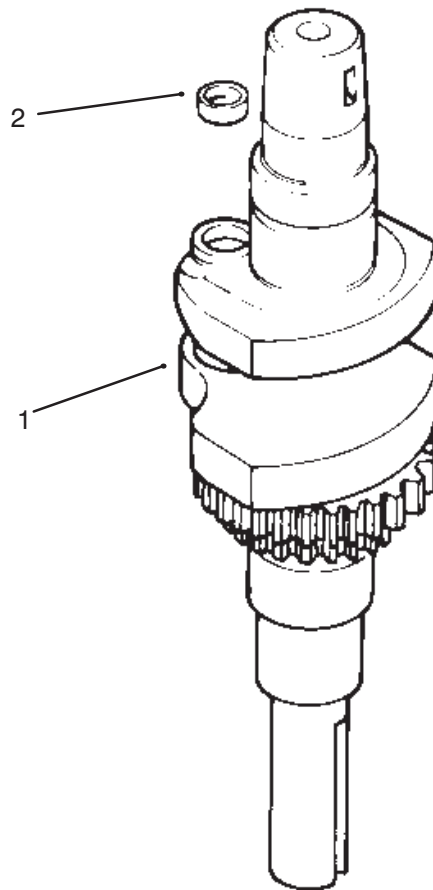

Sheet No.: 101
C-1948

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	12 014 37	1	Crankshaft
2	12 139 01	1	Plug-Cup

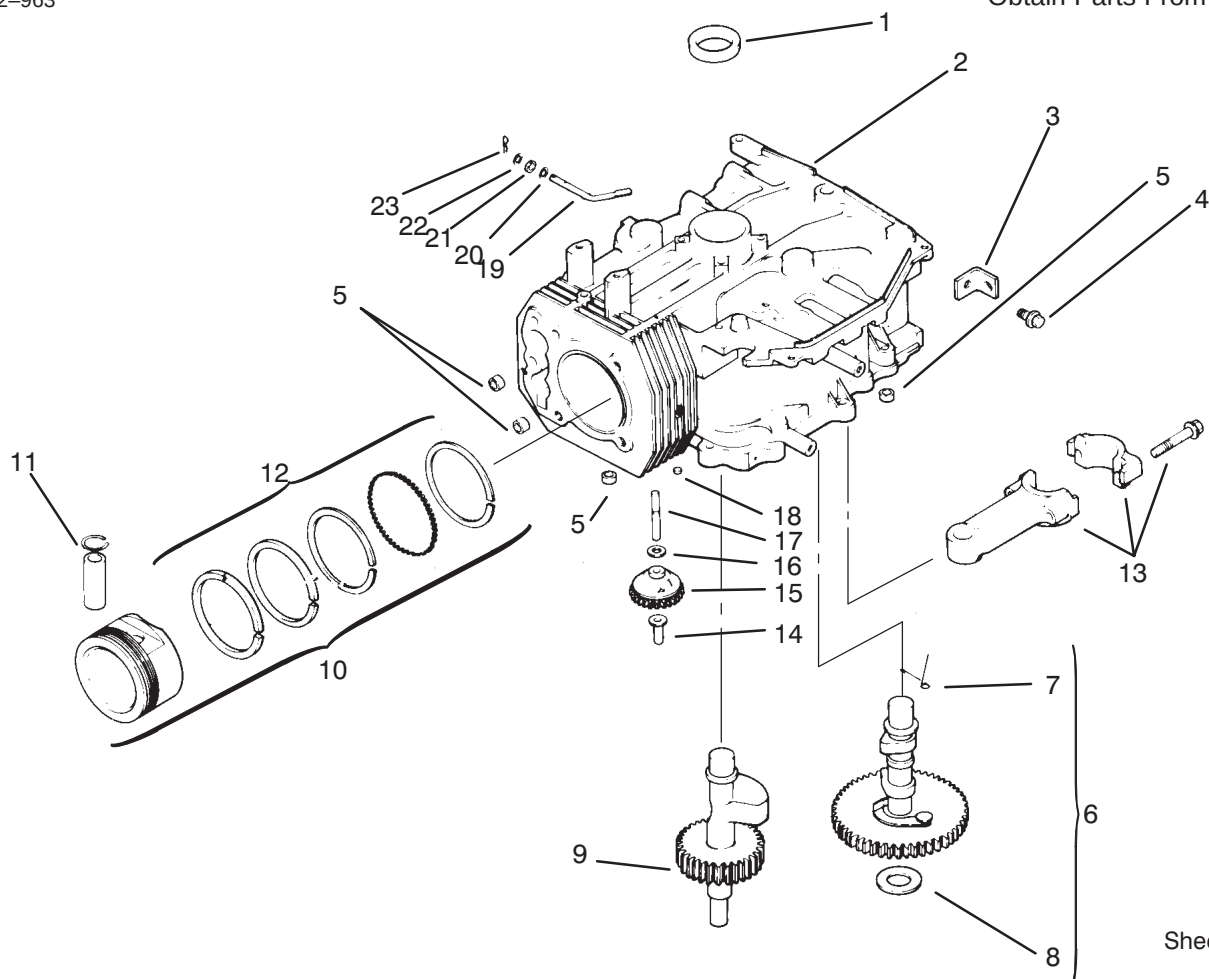

Sheet No.: 102

C-1949


Crankcase

Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal-Crankshaft
2	12 522 18	1	Block-Short
3	12 445 02	1	Strap-Lifting
4	M-0839025	1	Screw M8x1.25x22
5	12 380 03	4	Dowel-Locating
6	12 755 49	1	Kit-Camshaft INC 7-8
†7	12 089 18	1	Spring-Actuating
†8	12 422 07	1	Shim-Camshaft A/R
†8	12 422 08	1	Shim-Camshaft A/R
†8	12 422 09	1	Shim-Camshaft A/R
†8	12 422 10	1	Shim-Camshaft A/R
†8	12 422 11	1	Shim-Camshaft A/R
†8	12 422 12	1	Shim-Camshaft A/R
†8	12 422 13	1	Shim-Camshaft A/R
9	12 144 27	1	Shaft-Balance
10	12 874 07	1	Piston ASM STD Incl 11-2
10	12 874 08	1	Piston ASM .25 Incl 11-2
10	12 874 09	1	Piston ASM .50 Incl 11-2
†11	12 018 02	2	Retainer-Piston Pin
12	12 018 07	1	Ring Set STD
12	12 018 08	1	Ring Set .25
12	12 018 09	1	Ring Set .50

Ref. No.	Part No.	Qty.	Description
13	12 067 05	1	Rod Connecting STD
13	12 067 06	1	Rod Connecting .25
14	12 380 01	1	Pin-Governor Regulating
15	12 043 05	1	Gear-Governor ASM
16	M-0631005	1	Washer-Governor
17	12 144 02	1	Shaft-Governor Gear
18	52 139 09	1	Plug-Cup
19	12 755 64	1	Shaft-Governor Cross
20	M-0631015	1	Washer-Governor Shaft
21	12 032 01	1	Seal-Governor Shaft
22	X-25-102	1	Washer-Flat
23	12 154 05	1	Pin-Governor Hitch
*	12 722 59	1	Gasket Set

† Included in a service kit or in an assembly

* Not illustrated

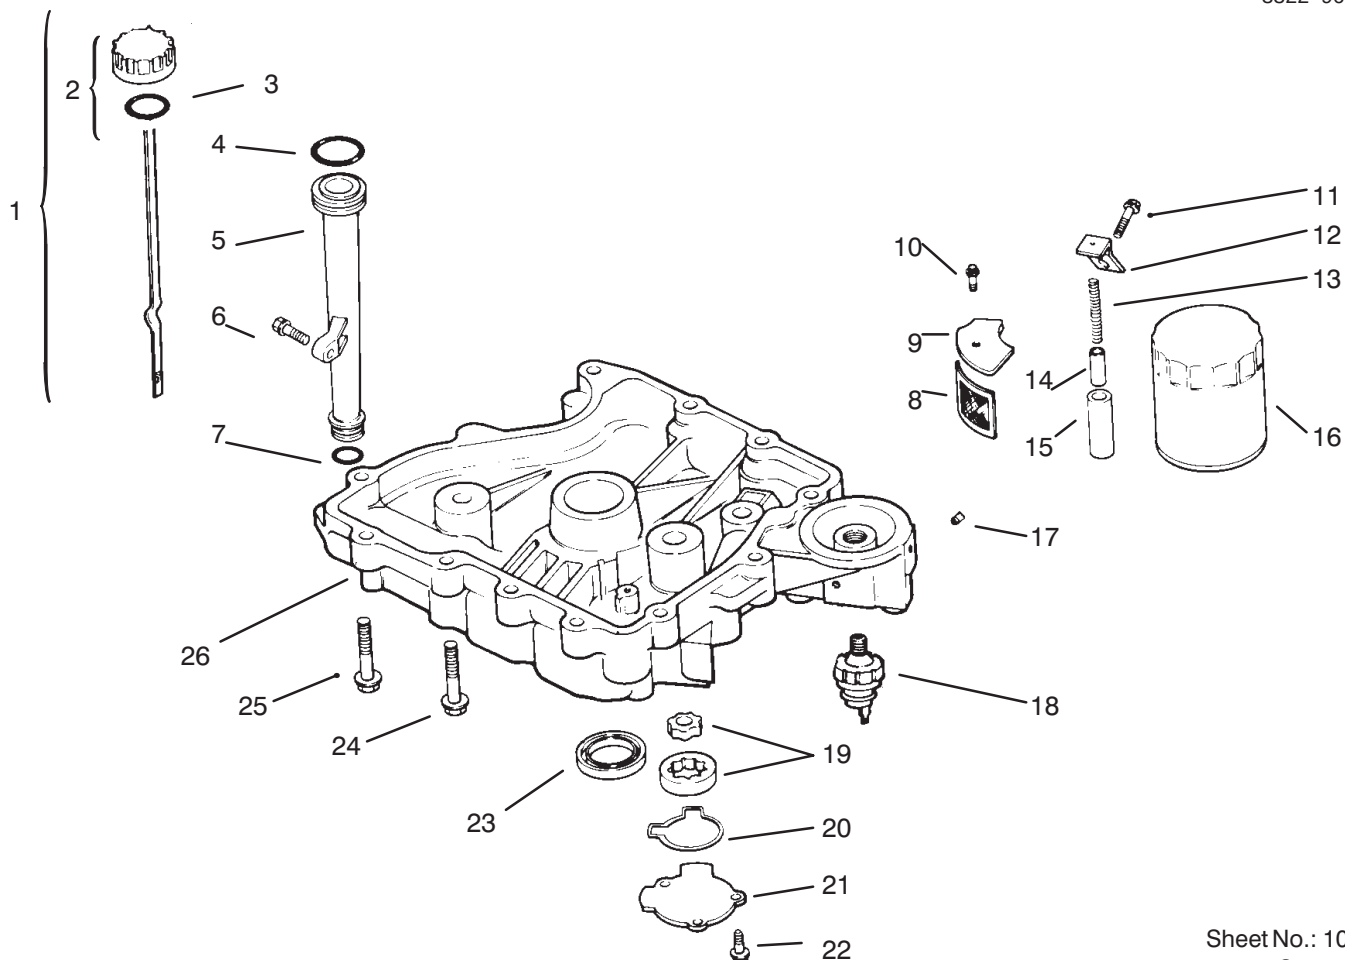


Sheet No.: 103
C-1950

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2-3	22	M-0545016	3	Screw M5x0.8x16
†2	25 755 13	1	Kit-Oil Cap INC 3	23	12 032 03	1	Seal-Crankshaft
†3	12 153 03	1	O Ring-Fill Cap	24	24 086 16	11	Screw M8x1.25x45
4	12 153 02	1	O Ring-Upper Fill Tube	25	24 086 17	11	Screw M8x1.25x45
5	12 123 04	1	Tube-Oil Fill	26	12 199 21	1	Pan-Oil
6	M-0545020	1	Screw M5x0.8x20	*	52 518 21	1	Lead-Oil Switch w/Tabs
7	12 153 01	1	O Ring-Lower Fill Tube				
8	12 162 07	1	Screen-Oil Pickup				
9	12 096 03	1	Cover-Oil Pickup Screen				
10	M-0545016	1	Screw M5x0.8x16				
11	M-1039025	1	Screw M10x1.5x25				
12	12 126 02	1	Bracket-Oil Pump Relief				
13	12 089 03	1	Spring-Oil Relief Valve				
14	12 462 01	1	Piston-Oil Relief Valve				
15	12 208 01	1	Body-Oil Relief Valve				
16	12 050 01	1	Filter-Oil				
17	X-75-10	2	Plug-SH 3/8 NPTF				
18	52 099 06	1	Switch-Oil Pressure				
19	12 393 01	1	Pump-Oil				
20	12 032 04	1	O Ring-Oil Pump Cover				
21	12 096 02	1	Cover-Oil Pump				

† Included in a service kit or in an assembly

* Not illustrated

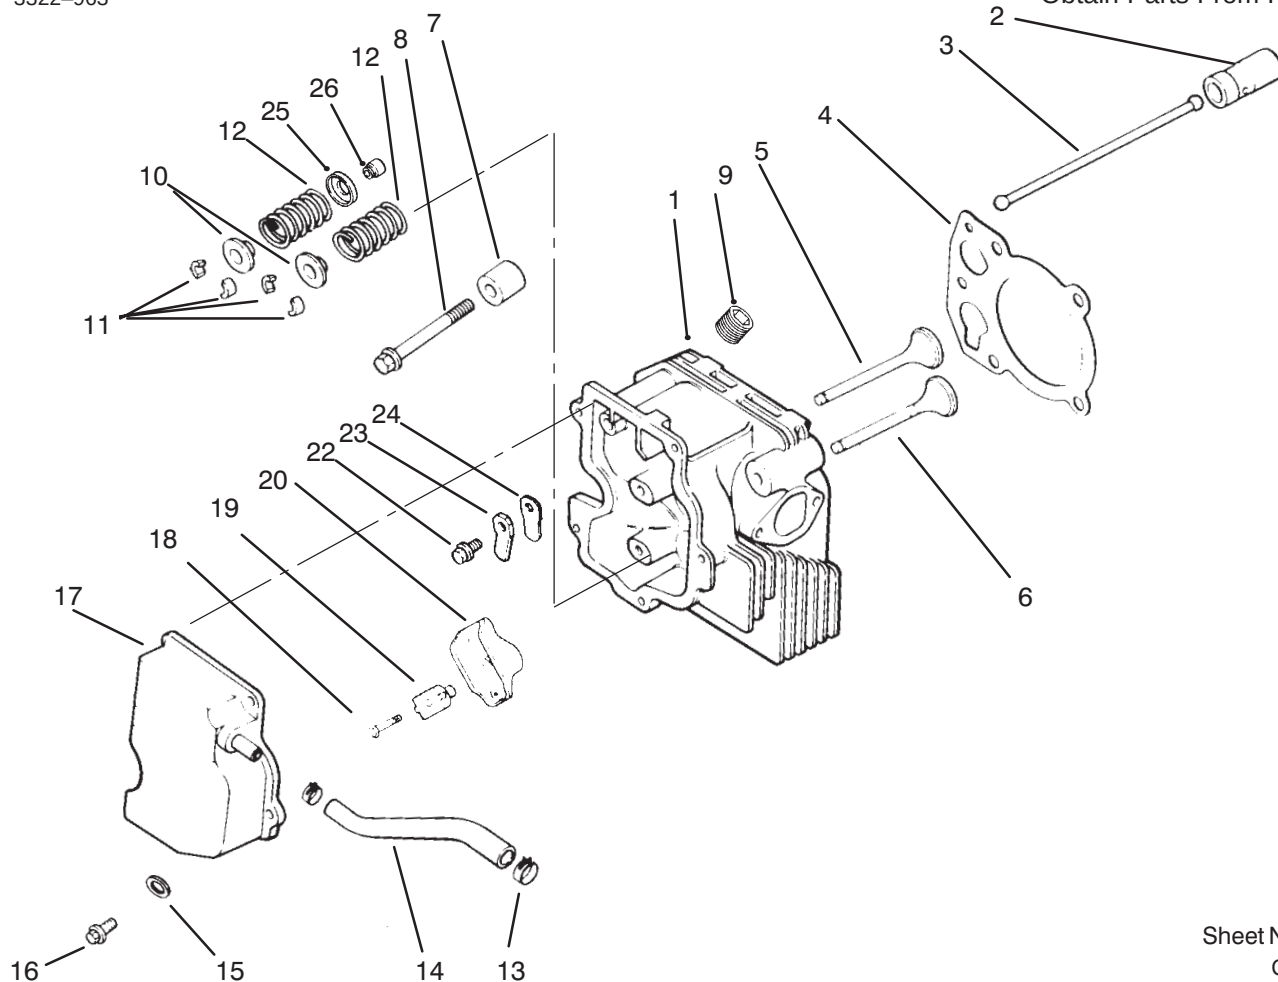
Sheet No.: 104
C-1951

Cylinder Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	12 318 15	1	Cylinder Head
2	12 351 02	1	Lifter-Valve
3	12 411 01	2	Rod-Push
4	12 041 10	1	Gasket-Cylinder Head
5	12 017 01	1	Valve-Intake STD
5	12 017 02	1	Valve-Intake .25
6	12 016 01	1	Valve-Exhaust STD
6	12 016 02	1	Valve-Exhaust .25
7	12 112 13	1	Spacer-Head Bolt Exhaust
8	12 086 15	5	Screw M10x1.5x80
9	X-75-23	1	Plug
10	12 173 01	2	Cap-Valve Spring
11	12 755 03	2	Kit-Retainer
12	12 089 01	2	Spring-Valve
13	X-426-9	2	Clamp-Hose
14	12 326 03	1	Hose-Breather
15	12 468 05	1	Washer-Flat
16	M-0645020	5	Screw-HH M6x1.0x20
17	12 096 07	1	Cover-Valve w/Nipple
18	M-0640034	2	Screw M6x1.0x34
19	12 599 03	2	Pivot-Rocker Arm
20	25 186 01	2	Arm-Rocker
22	M-0545010	1	Screw M5x0.8x10
23	12 018 01	1	Retainer-Breather Reed

Ref. No.	Part No.	Qty.	Description
24	24 402 02	1	Reed-Breather
25	235011	2	Retainer-Spring
26	24 032 05	2	Seal-Valve Stem
*	12 755 63	1	Kit-Cylinder Head (Incl. 3-12,17-20 25 & 26)

* Not illustrated

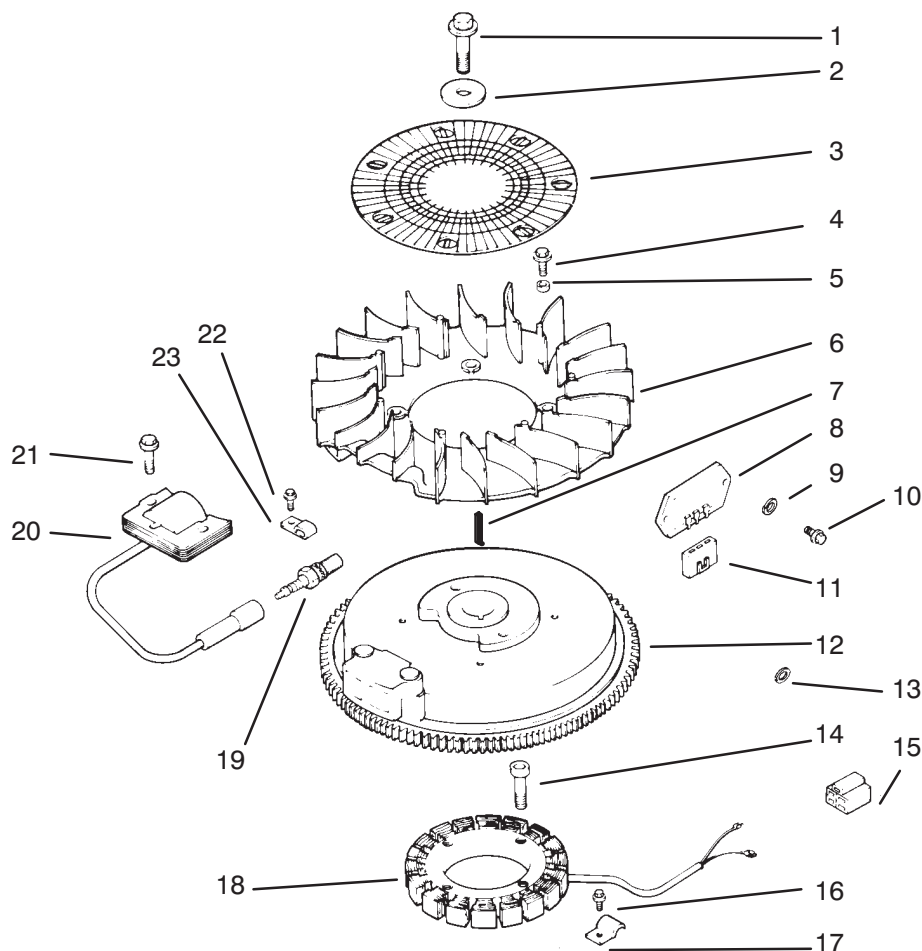


Sheet No.: 105
C-1952

Ignition / Electrical


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw-Flywheel Mounting	*	25 518 05	1	Lead-Black
2	12 468 03	1	Washer-Flywheel Screw	*	25 518 29	1	Lead-Black
3	24 162 03	1	Screen-Grass				
4	M-0639016	4	Screw M6x1.0x16				
5	12 112 01	4	Spacer-Fan				
6	12 157 02	1	Fan				
7	X-42-15	1	Key				
8	41 403 09	1	Rectifier-Regulator				
9	X-22-11	1	Washer-Lock				
10	M-0639016	2	Screw M6x1.0x16				
11	236602	1	Connector-Regulator				
12	12 025 15	1	Flywheel ASM				
13	X-25-5	1	Washer-Flat				
14	M-0548025	4	Screw M5x0.8x25				
15	48 155 01	1	Connector-5 Contact				
16	M-0545010	1	Screw M5x0.8x10				
17	12 154 02	1	Clip-Stator Harness				
18	24 085 01	1	Stator-15 Amp				
19	12 132 02	1	Spark Plug				
20	12 584 01	1	Module-Ignition				
21	M-0545020	2	Screw M5x0.8x20				
22	M-0545010	1	Screw M5x0.8x10				
23	X-728-1	1	Clip-Kill Lead				
*	12 518 01	1	Lead-White				

 * Not illustrated



Ref. No.	Part No.	Qty.	Description
1	12 146 07	1	Plate-Blower Housing
2	M-0545010	8	Screw M5x0.8x10
3	24 086 18	2	Screw-Phillips
4	X-25-92	2	Washer-Flat
5	12 027 32	1	Housing-Blower
6	25 154 02	3	Clip
7	M-0545020	3	Screw M5x0.8x20
8	12 063 05	1	Baffle-Carburetor
9	12 063 08	1	Baffle-Cylinder Head
10	M-0645016	2	Screw-HH M6x1.0x16
11	M-0645020	1	Screw-HH M6x1.0x20
12	24 096 05	1	Cover-Pinion
13	12 063 01	1	Baffle-Cylinder Barrel
14	220534	2	Washer Plain 5/16
15	24 468 10	1	Washer Plain 1/4

26

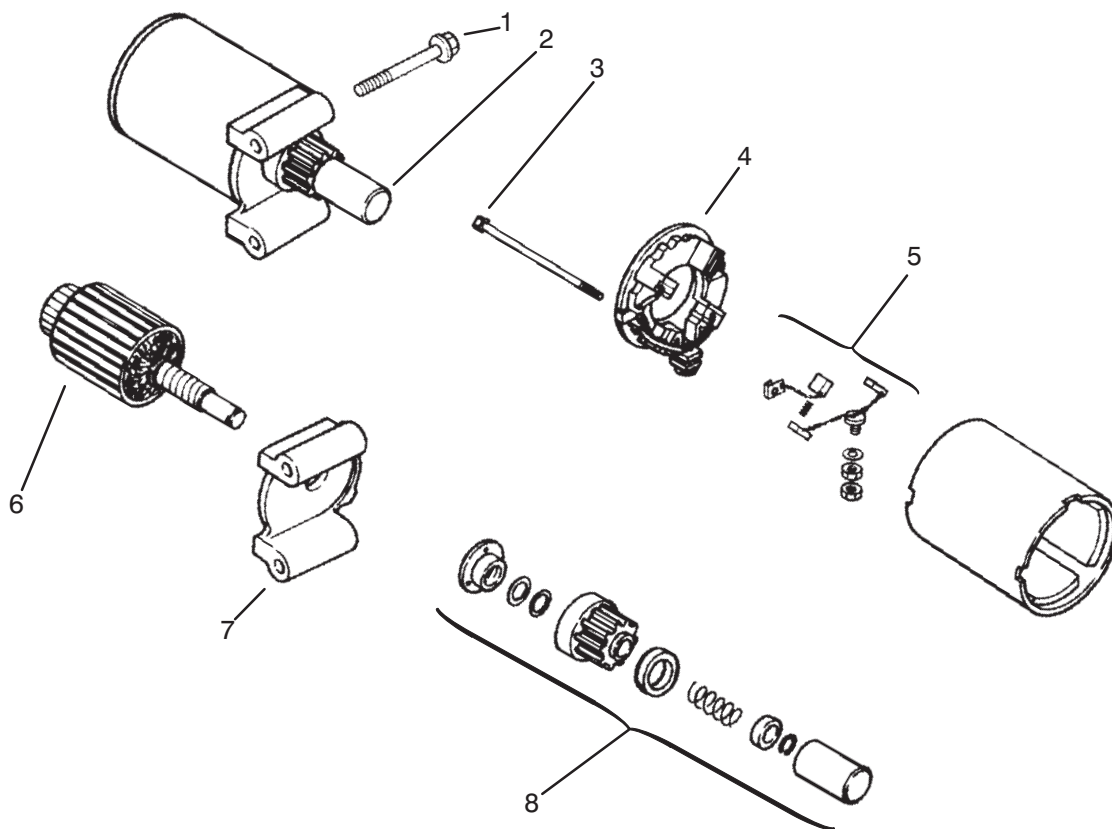

Sheet No.: 107


C-

Starting System

Ref. No.	Part No.	Qty.	Description
1	M0839070	2	Screw M8x1.25x70
2	12 098 13	1	Starter ASM Incl 3–8
†3	12 211 01	2	Bolt
†4	12 227 13	1	Cap–Commutator Incl 5
†5	12 221 01	1	Kit–Brush And Spring
†6	12 170 05	1	Armature–Starter
†7	12 227 05	1	Cap–Drive End
†8	12 755 53	1	Kit–Drive
*	52 357 01	1	Lubricant–Starter

† Included in a service kit or in an assembly

* Not illustrated

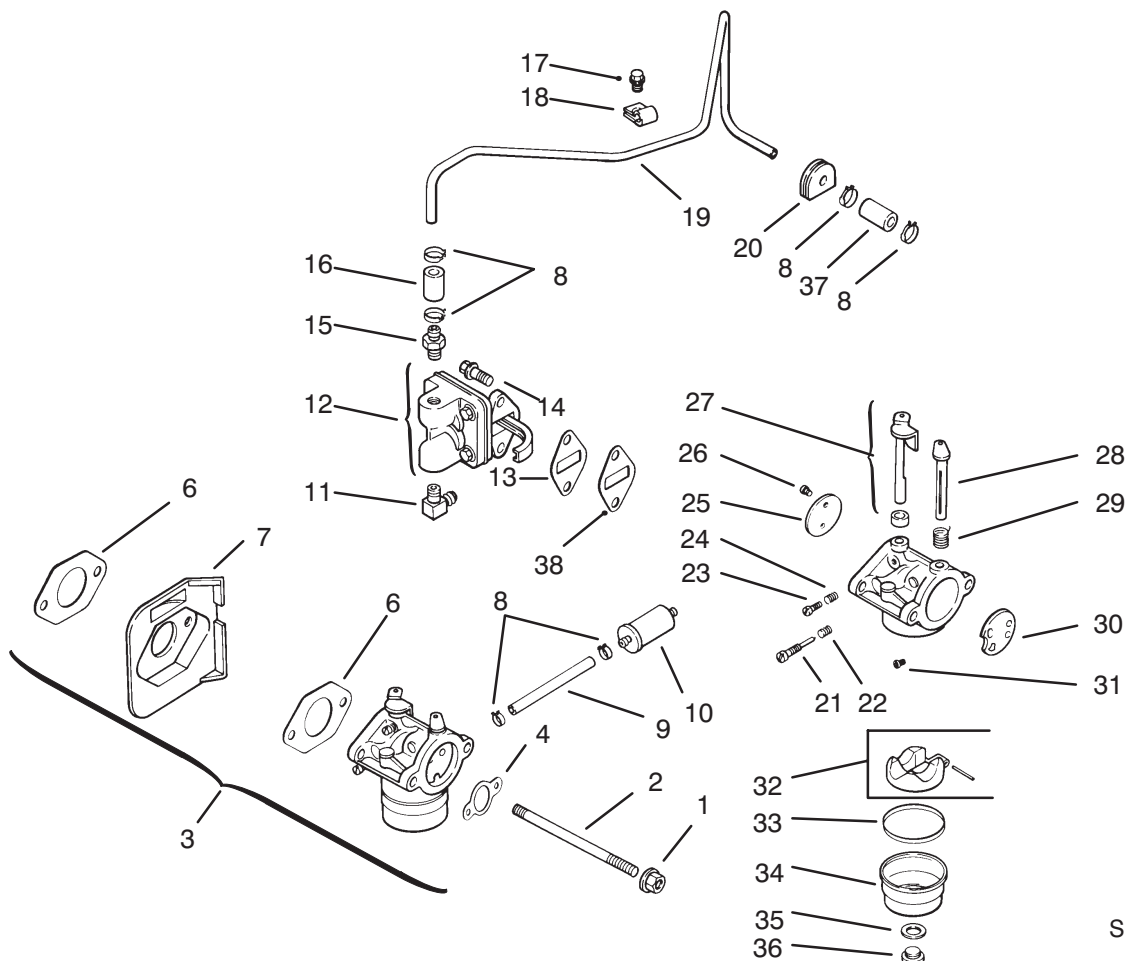

Sheet No.: 108

C-


Fuel System

Ref. No.	Part No.	Qty.	Description
1	M-0641060	2	Nut M6x1.0
2	M-0629122	2	Stud M6x1.0x110
3	12 853 57	1	Kit-Carburetor w/Gasket Incl 4-6
†4	12 041 02	1	Gasket-Air Cleaner
†5	12 053 57	1	Carurator ASM Incl 21-36
†6	12 041 01	2	Gasket-Carburetor
7	12 265 04	1	Deflector-Heat
8	X-426-9	1	Clamp-Hose
9	12 353 10	1	Line-Fuel
10	25 050 02	1	Filter-Fuel
11	25 155 02	1	Connector-90°
12	12 559 01	1	Kit-Pump INC 13-14
†13	25 041 09	1	Gasket-Fuel Pump
†14	M-0645020	2	Screw-HH M6x1.0x20
15	X-380-1	1	Connector-Straight
16	12 353 01	1	Line-Fuel 1.25 Inch
17	M-0545010	1	Screw M5x0.8x10
18	12 154 01	1	Clamp-Fuel Line
19	12 123 19	1	Line-Fuel
20	12 313 01	1	Grommet
†21	12 368 05	1	Needle-Idle Fuel Adjust
†22	12 089 09	1	Spring-Idle Fuel

Ref. No.	Part No.	Qty.	Description
†23	12 086 04	1	Screw-Idle Speed Adjust
†24	12 089 09	1	Spring-Idle Fuel
†25	12 146 03	1	Plate-Throttle
†26	25 086 27	1	Screw-Throttle Plate
†27	12 144 09	1	Shaft-w/Lever & Seal
†28	12 144 08	1	Shaft-Choke
†29	12 089 10	1	Spring-Choke Return
†30	12 146 02	1	Plate-Choke
†31	12 337 03	1	Jet-Main
†32	12 757 02	1	Kit-Float
†33	12 041 05	1	Gasket-Bowl
†34	12 104 01	1	Bowl-Fuel
†35	12 041 06	1	Gasket-Bowl Screw
†36	12 086 05	1	Screw-Fuel Bowl
37	25 353 02	1	Line-Fuel 3"
38	12 112 05	1	Spacer-Fuel Pump
*	12 041 01	1	Gasket-Carburetor
*	12 757 03	1	Kit-Carburetor Repair

† Included in a service kit or in an assembly

* Not illustrated

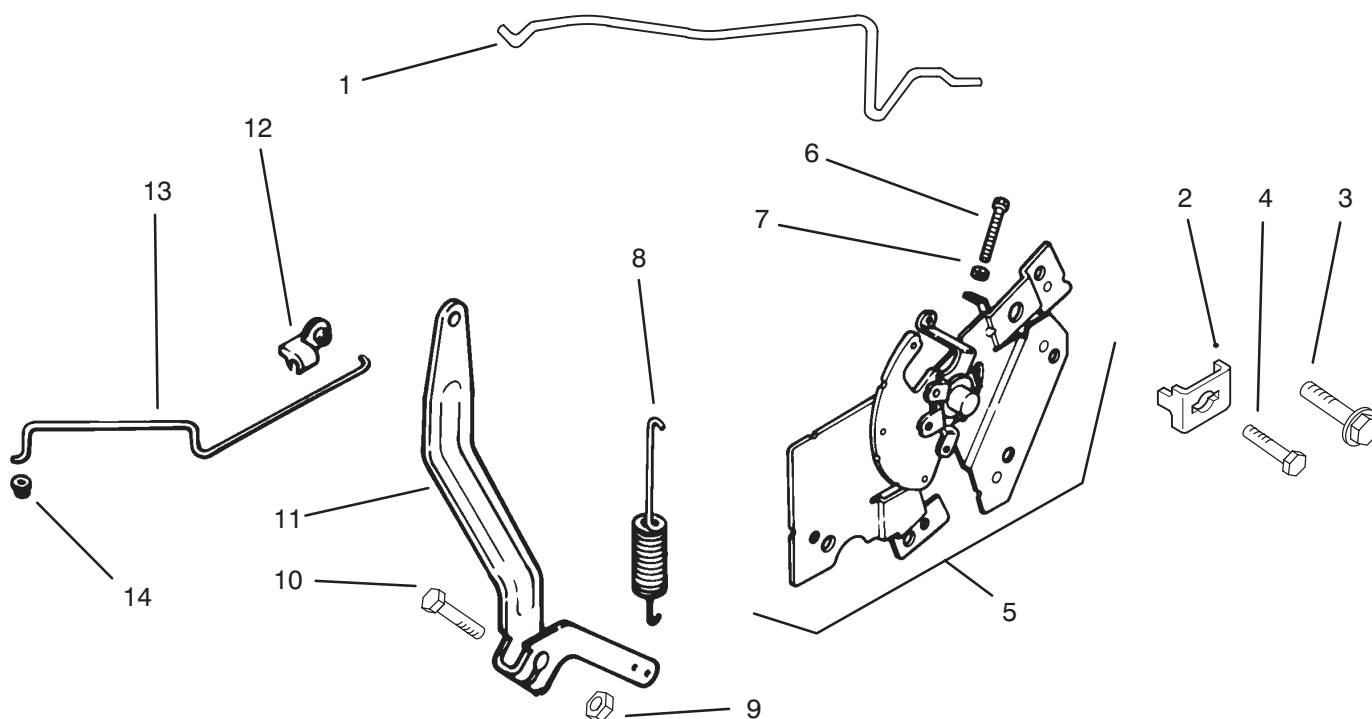


Sheet No.: 109
C-1956

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	2	Clamp–Cable
3	M–0664020	2	Screw Socket
4	M–0545016	2	Screw M5x0.8x16
5	12 536 02	1	Control–ASM INC 6–7
†6	M–0401030	1	Screw–HHF M4x0.7x28
†7	M–0446030	1	Nut–Hex M4x0.7
8	52 089 07	1	Spring–Governor
9	M–0641060	1	Nut M6x1.0
10	Sm–0642025	1	Screw M6x1.0x25
11	12 090 05	1	Lever–Governor
12	25 158 11	1	Bushing–Linkage
13	12 079 01	1	Linkage–Throttle
14	25 158 08	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

29

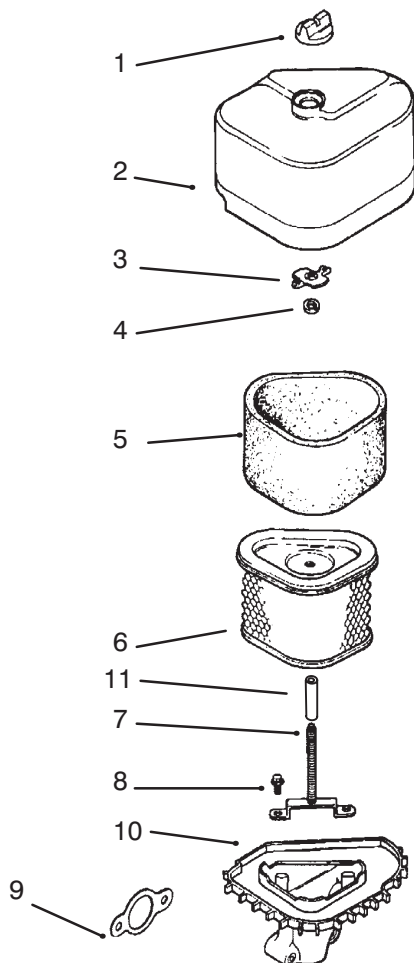


Sheet No.: 110

Air Intake / Filtration

Ref. No.	Part No.	Qty.	Description
1	25 341 03	1	Knob–Air Cleaner Cover
2	12 096 45	1	Cover–Air Cleaner
3	12 100 01	1	Nut–Wing
4	X–25–63	1	Washer–Flat
5	12 083 05	1	Element–Air Cleaner Incl 11
6	12 083 08	1	Precleaner–Element
7	12 072 05	1	Stud–Mounting Plate
8	12 086 01	1	Screw–Mounting Plate
9	12 041 02	1	Gasket–Air Cleaner
10	12 094 05	1	Base–Air Cleaner Incl 7
11	12 032 10	1	Seal
*	12 113 04	1	Decal–Air Cleaner
*	12 743 04	1	Kit–Air Cleaner Incl 1–11

Ref. No.	Part No.	Qty.	Description

 * Not illustrated




Ref. No.	Part No.	Qty.	Description
1	M-0829033	2	Stud M8x1.25x20
2	12 455 06	1	Strap-Lifting
3	12 041 03	1	Gasket-Exhaust Manifold
4	M-0645025	1	Screw-Valve Cover

Ref. No.	Part No.	Qty.	Description

Peerless Transaxle 820-024

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	772098A	1	Cover-Transaxle	58	778200	1	Gear Spur 20t
2	780155	1	Bearing-Needle	59	778201	1	Gear Spur 25t
3	770088	1	Case-Transaxle	60	778202	1	Gear Spur 28t
4	776291	1	Countershaft-Gear 9t	61	778222	1	Gear Spur 30t
5	776275	1	Shaft-Output	65	780109	1	Washer
6	778247	1	Gear-Output 35t	66	776293	1	Shaft-Input 30.910" Lg
7	778253	1	Gear-Spur 15t	67	776313	1	Shaft-Shifter/Brake (820-024 Only)
8	792138	4	Key-Shift (820-024 Only)	67	776385	1	Shaft-Shifter/Brake (820-024A Only)
8	792180	4	Key-Shift (820-024A Only)	71	788069	1	Ring-Square Cut
9	784216	1	Collar-Shift (820-024 Only)	72	792165	1	Plug-Threaded 5/16-18
9	784352	1	Collar-Shift (820-024A Only)	76	780090	1	Washer-Flat (820-024A Only)
10	784342	1	Fork-Shift (820-024 Only)	77	788078A	2	Ring-Retaining (820-024A Only)
10	784375	1	Fork-Shift (820-024A Only)	79	792144	1	Spring
11	778246	1	Gear-Bevel 33t	81	786062A	1	Chain-Roller #41 22" Lg
12	778245	1	Pinion-Input Bevel 13t	82	786061	1	Sprocket 10t
13	778198	2	Gear-Bevel 16t	83	786124	1	Sprocket-Reverse 14t
14	778197	2	Pinion-Bevel 10t	84	786131	1	Cap-Bearing
15	778248	1	Gear-Ring	87	788042	1	Seal-Oil 3/4"
16	786027	2	Block-Drive	88	780119	1	Bearing-Ball
17	786019	1	Pin-Drive	89	780050	2	Bearing-Ball
18	786121	1	Spacer .350-.340 Thick	90	788067B	1	Grease 32 Oz Bentonite
20	792077	1	Ball-Steel	96	780084	1	Bearing-Thrust
21	792078	1	Screw-Set 3/8-16x3/8	97	780051	2	Washer
22	792079	1	Spring	98	780165	1	Washer
24	780071	1	Bearing-Thrust	99	788077	1	O Ring
25	792129A	17	Screw 5/16-18x1 1/4	100	780166	1	Washer-Cupped
26	792018	2	Ring-Retaining	101	774833	1	Carrier-Differential
27	792018	1	Ring-Retaining	102	774834	1	Carrier-Differential
28	788040	1	Ring-Retaining	103	792020	8	Screw 14-20x2 1/4
29	780072	3	Washer	104	792006	8	Washer-Lock
30	780108	5	Washer	105	780153	1	Washer
31	780128	2	Washer	106	786144	1	Sleeve
36	790043	1	Disk	107	780152	1	Bearing-Needle
37	790007	1	Plate-Brake Pad	108	780150	1	Bearing-Needle
38	799021	1	Pad-Brake 2/Pkg	109	792001	5	O Ring
39	786026	2	Pin-Dowel	110	786142	2	Sleeve
40	792076A	1	Washer	111	788071	2	Ring-Square Cut
41	790013	1	Lever-Brake	112	780168	2	Bearing-Needle
42	792073	2	Screw 1/4-20x1 1/4	113	786143	2	Sleeve
43	792075	1	Nut-Lock 5/16x24	114	780151	2	Bearing-Needle
44	790025	1	Holder-Brake Pad	115	786145	2	Sleeve
46	786086	1	Bracket-Brake Lever	116	788070	4	Ring-Square Cut
47	774958	1	Axle 12 9/16" Long	117	780031	2	Bearing-Needle
48	774959	1	Axle 16 7/16" Long	150	510334	1	Gasket Loctite #515
49	778216A	1	Gear-Spur 41t	200	786122	1	Spacer .276-.268 Thick
50	778206A	1	Gear-Spur 35t	201	792073	2	Screw 1/4-20x1 1/4
51	778205A	1	Gear-Spur 30t	202	780107	2	Washer
52	778204A	1	Gear Spur 25t	203	780042	4	Washer
53	778203A	1	Gear Spur 22t	204	792145	1	Nut-Push
54	778273	1	Gear Spur 19t	205	780091	1	O Ring
57	778199	1	Gear Spur 15t				

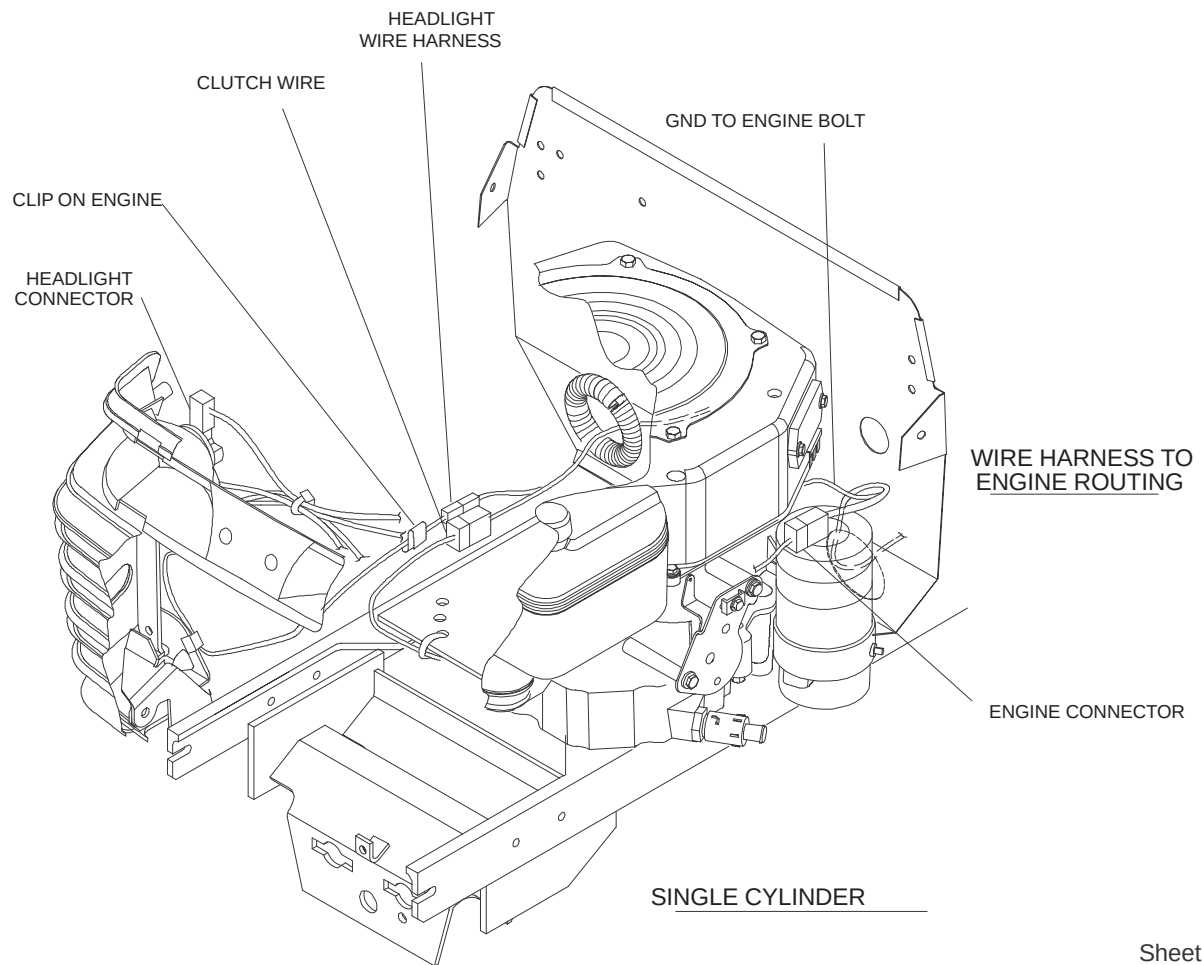


Sheet No.:31

Engine Wire Routing Assembly

Ref. No.	Part No.	Qty.	Description

Ref. No.	Part No.	Qty.	Description

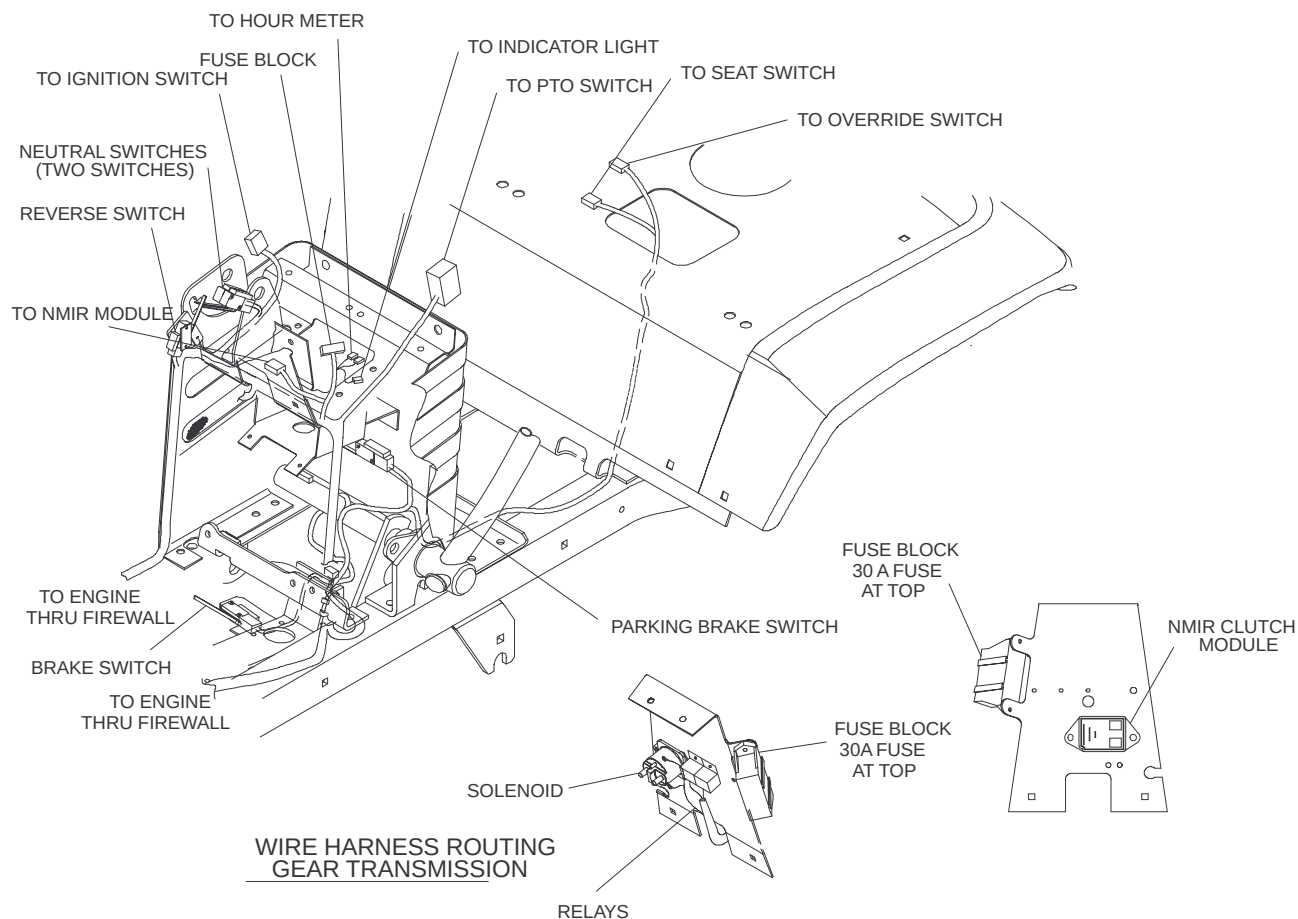

Sheet No.:32

Transmission Wire Routing Assembly

Ref. No.	Part No.	Qty.	Description

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

