



Carefree[®] Recycler[®] Mower

120V Electric

Model No. 20050 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck, Liner, & Wheel Assembly	1	Electrical Wiring Assembly	5
Motor & Blade Assembly	2	Electrical Wiring Schematic	6
Cover, Mulch Plug & Panel Assembly	3	Maintenance	7-9
Handle & Controls Assembly	4	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

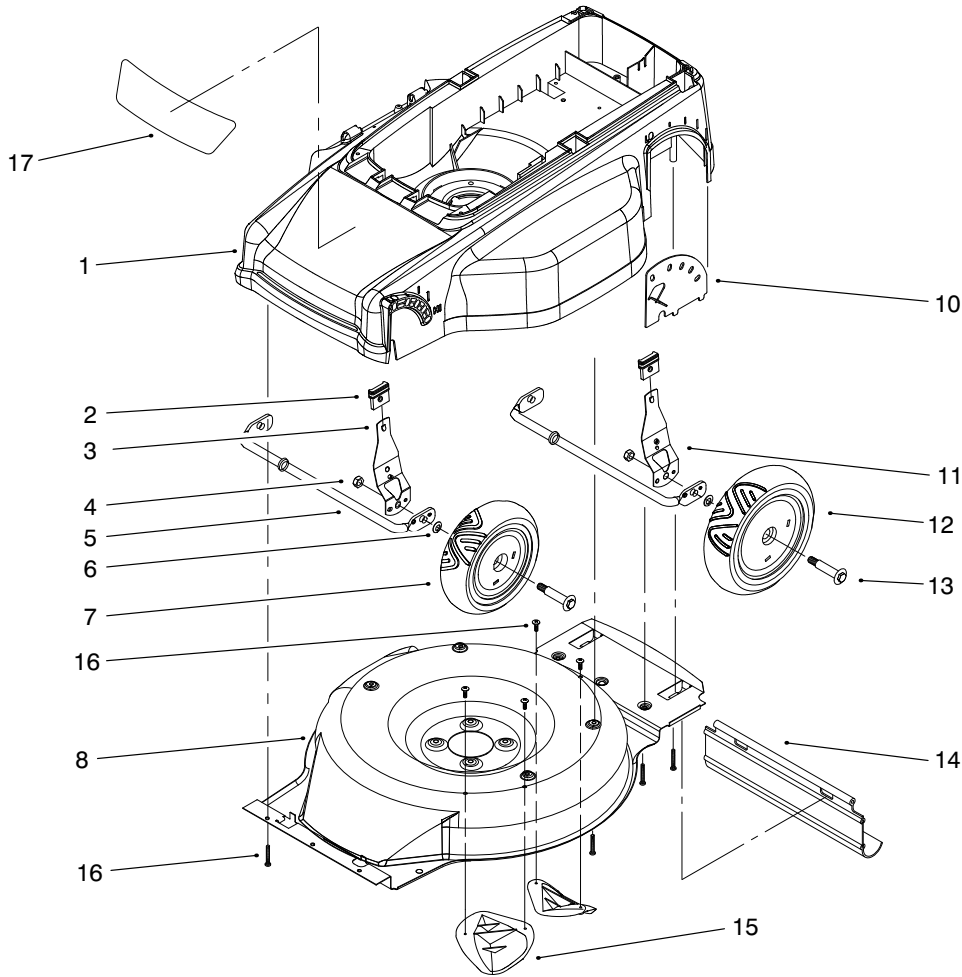

Sheet No.:2

Deck, Liner, & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-3895	1	ASM – Toro Deck (Service)				
2	92-1008	2	Knob-Height Adj. Lever				
3	94-3870	1	ASM-HOC Lever, Front				
4	610358	4	Nut-Jam, Locking				
5	93-3952	2	Axle				
6	40-1940	4	Washer-Wheel Bolt				
7	92-9586	2	Assy – Wheel, 7"				
8	95-5167	1	ASM-Liner Toro (Service)				
9	93-3985	11	Screw – PH Pan				
10	95-5037	1	Plate – HOC				
11	94-3871	1	ASM-HOC Lever Rear				
12	93-0344	2	Assy – Wheel, 8"				
13	92-1057	4	Bolt-Shoulder				
14	94-7417	1	Trailing Shield				
15	76-2160	2	Kicker Plate				
16	94-6961	4	Screw				
17	99-6727	1	Decal Deck				

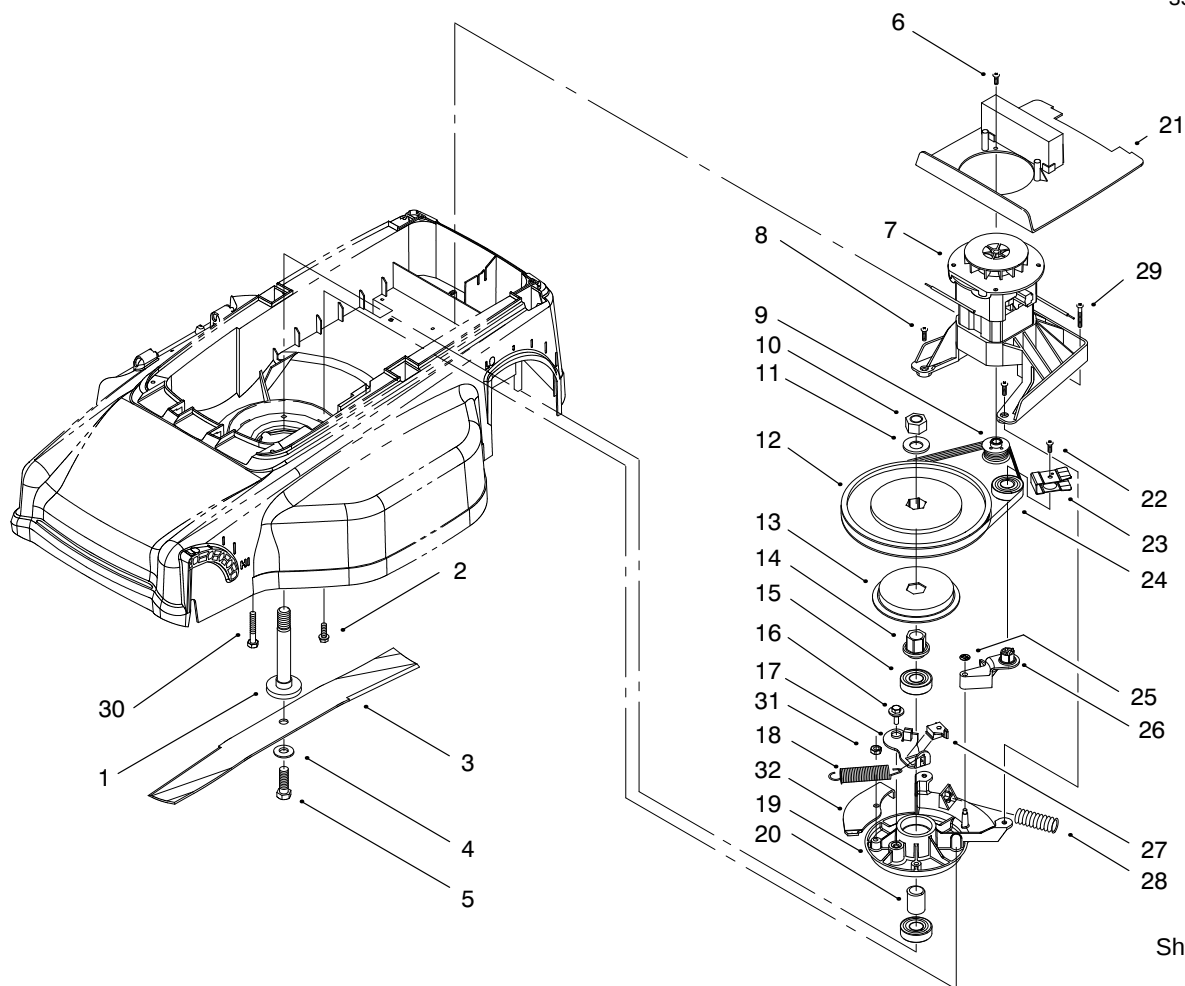


Sheet No.:3

Motor & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3329	1	Shaft – Spindle
2	32144-44	3	Screw
3	93-3954	1	Blade – 17.5, 120v (Raw)
4	3290-465	1	Washer–Belleville
5	26-0671	1	Screw–Blade
6	94-4496	4	Screw–Pan Hd
7	94-6917	1	ASM – Motor 120v (Service)
8	32144-8	2	Screw–HH
9	93-3331	1	Pulley – Motor
10	3219-6	1	Nut–Hex
11	3256-27	1	Washer–Flat
12	93-3321	1	Pulley – Driven
13	93-3328	1	Drum – Brake
14	93-3330	1	Hub – Pulley
15	61-8780	3	Ball Bearing
16	92-9698	1	Screw–Shoulder V
17	93-3991	1	Brake Lever Assy
18	93-3995	1	Spring – Brake Switch
19	93-3325	1	Spindle
20	93-3980	1	Spacer – Bearing
21	94-3873	1	ASM – Baffle Toro
22	94-6961	1	Screw
23	94-3866	1	Guide – Belt
24	93-3989	1	Belt – Poly V, J5 28"


Ref. No.	Part No.	Qty.	Description
25	93-3988	1	Pushnut – 3/16" Tinner
26	93-3323	1	Idler Arm
27	93-3322	1	Mount – Cable
28	61-8880	1	Idler Arm Spring
29	93-3985	2	Screw – PH Pan
30	32144-110	1	Screw–HWH
31	3296-56	1	Nut–Lock Ni
32	94-9155	1	Bracket – Spring

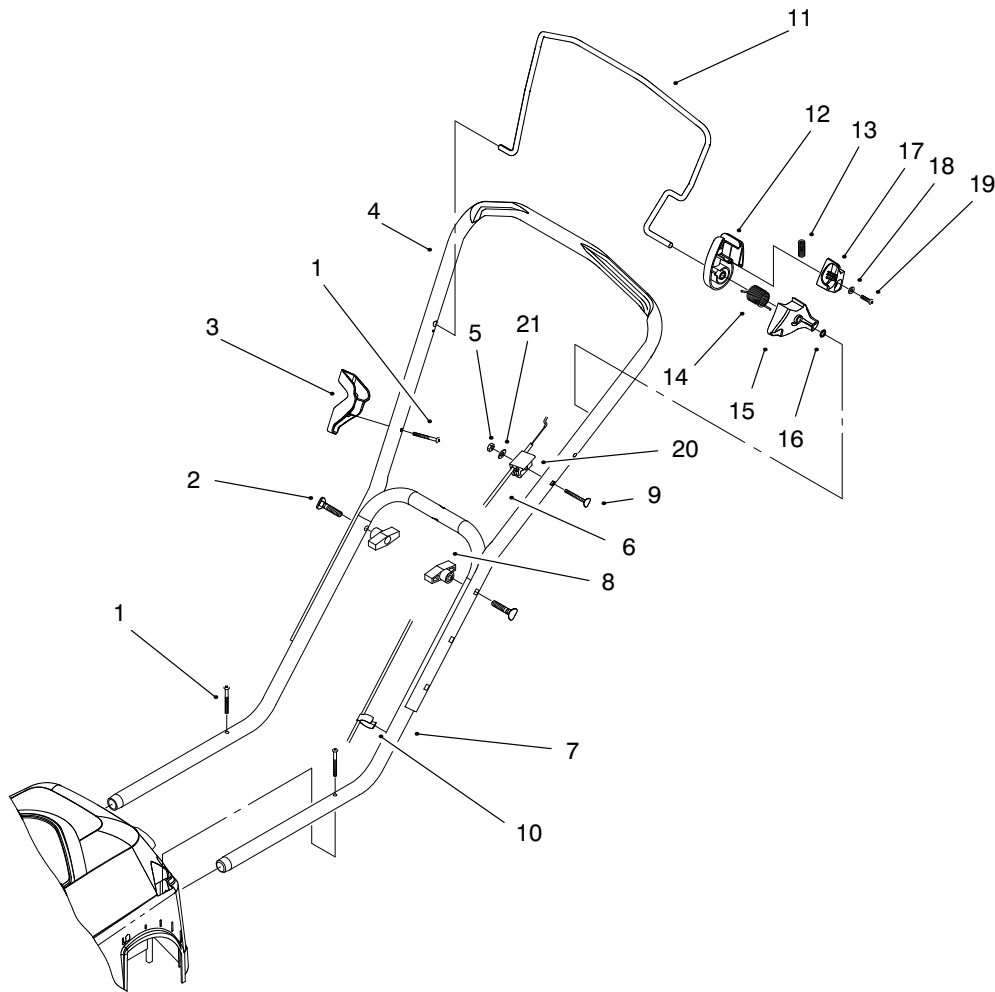

Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3986	3	Screw – PPH
2	92-2260	2	Screw-Handle
3	93-3996	1	Lock – Cord
4	95-2742-05	1	Handle – Upper
5	3296-8	1	Nut-Lock Ni
6	93-3978	1	Cable – Control
7	93-3972-05	1	Handle – Lower
8	98-7134	2	Knob-Handle
9	92-2269	1	Screw-Handle
10	94-7409	1	Clip – Cable
11	95-3000-03	1	Bail – Comfortgrip
12	93-3969	1	Housing – Bail
13	94-3851	1	Spring – Comp Slide
14	94-1154	1	Spring – Bail
15	93-3967	1	Cam
16	94-1191	1	Nut – Push
17	93-3968	1	Slide
18	94-3868	1	Washer – Flat
19	94-4496	1	Screw-Pan Hd
20	94-7407	1	Support – Cable
21	3256-2	1	Washer-Flat

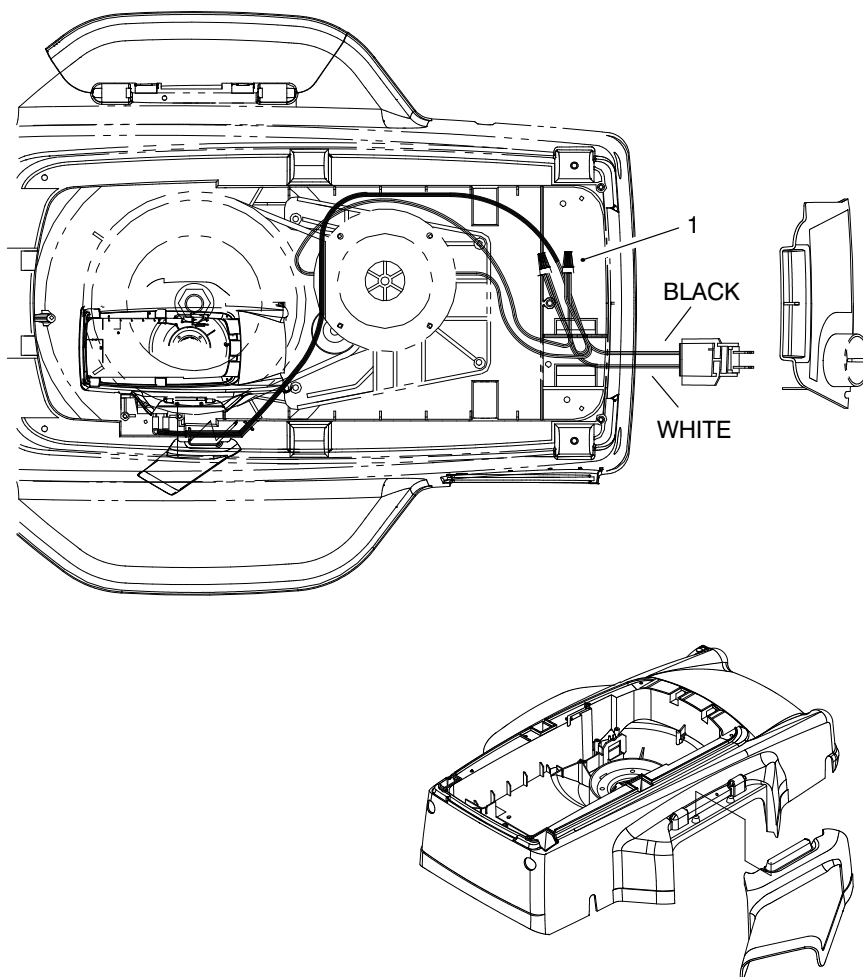


Sheet No.:6

Electrical Wiring Assembly

Ref. No.	Part No.	Qty.	Description
1	73-6570	2	Connector-Wire Nut
2	93-3963	1	Chute - Side

Ref. No.	Part No.	Qty.	Description

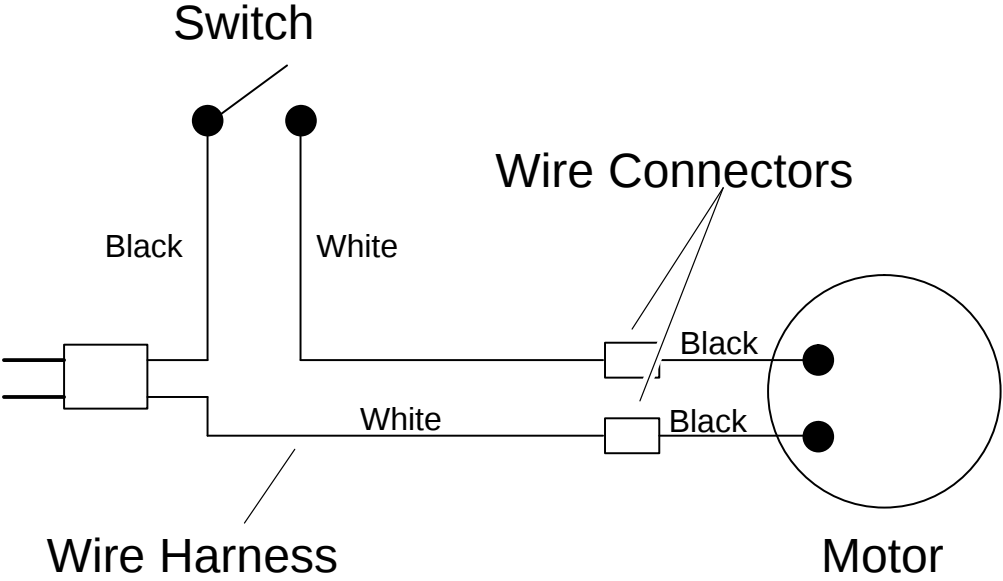

Electrical Wiring Schematic

Ref. No.	Part No.	Qty.	Description

Ref. No.	Part No.	Qty.	Description

7

[illegible]

9