

Parts Catalog

36in Spreader/Sprayer

Model No. 34220—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4

Engine Assembly 6

Hydraulic Assembly 8

Park Brake Assembly 10

Electrical Assembly 12

Motion Control Assembly 14

Wheel Assembly 16

Fuel Tank Assembly 18

Spray System Assembly 20

Left Tank Assembly 22

Right Tank Assembly 24


Manifold Assembly 26

Liquid Valve Assembly 28

Boom Assembly 30

Spreader Assembly 32


Main Frame Assembly

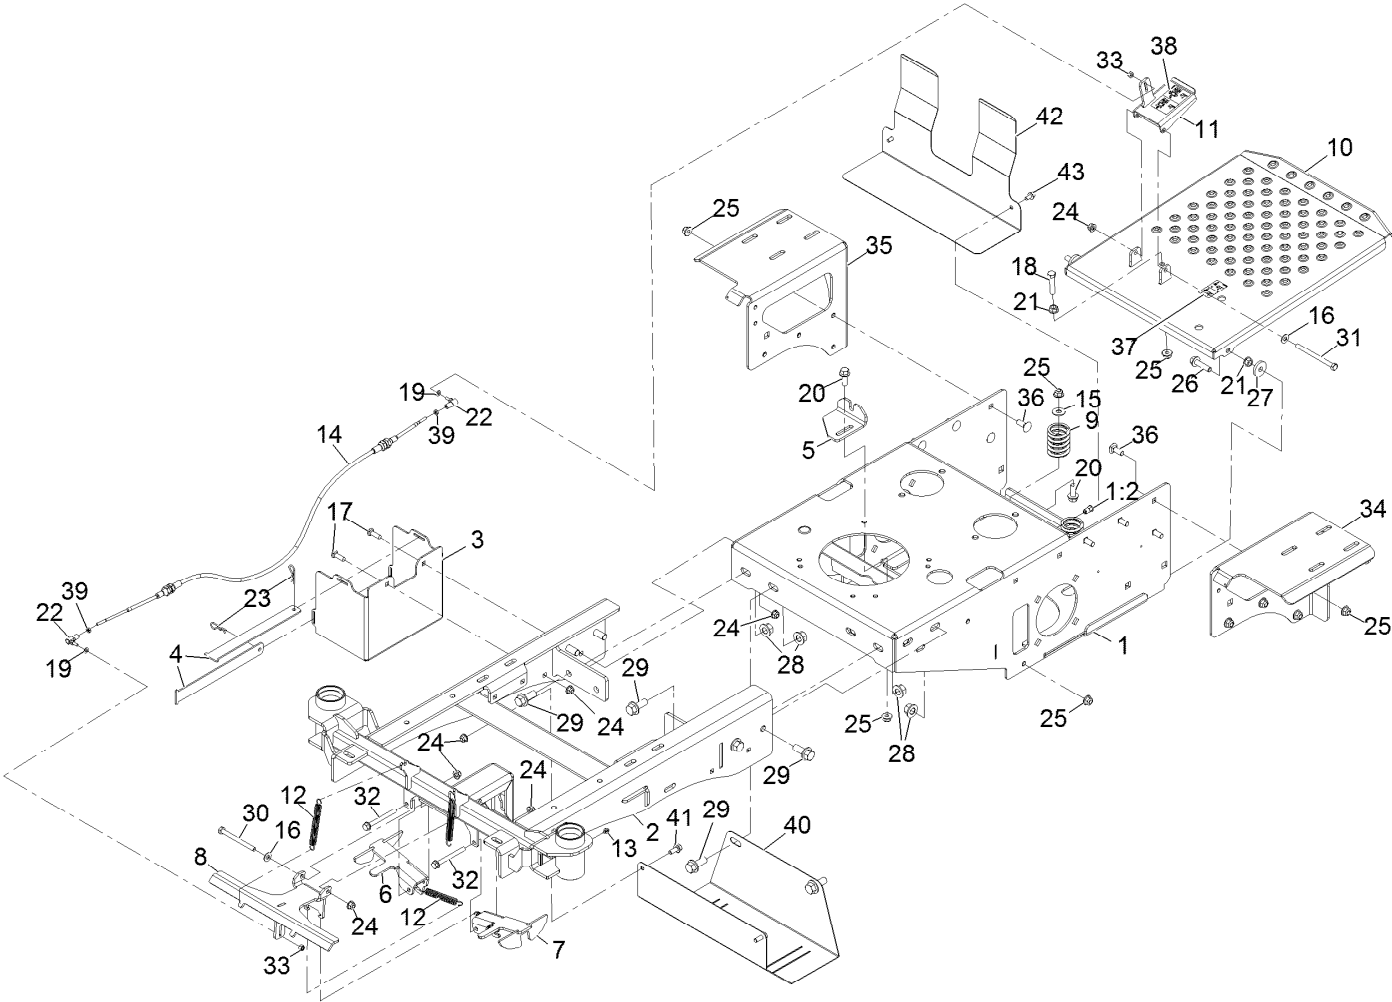

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-7823	1	Frame-Rear	24	135-6109	8	Nut-Hex Flange
1:2	138-2758	2	Nut-Clinch,Hex	25	135-6110	15	Nut-Hex Flange
2	142-0778	1	Wld, Front Frame, Jr36 24 Gallon Unit	26	135-6278	2	Screw-HHF
3	142-0781	1	Tray, Jr36 Battery	27	126-3875	2	Washer
4	135-5493	2	Strap-Battery	28	135-6111	8	Nut-Hex Flange
5	135-5494	1	Bracket-Cable, Lower	29	135-6207	8	Screw-HHF
6	135-5195	1	Wing-Capture, Rt	30	135-6217	1	Screw-HH
7	135-5194	1	Wing-Capture, Lt	31	135-6218	1	Screw-HH
8	142-0806	1	Wld, Capture, T-Bar, Jr36	32	135-6222	2	Screw-HHF
9	135-5654	3	Spring-Compression	33	HDW05856	2	Nut-NYL Lock,#10-32,ST/ST 18-8
10	135-7508	1	Wld, Foot Plate, Jr36	34	142-0775	1	Wld, Mount, Fert Box, L, Jr36
11	142-1923	1	Wld, Foot Pedal, Lcs	35	142-0777	1	Wld, Mount, Fert Box, R, Jr36,
12	135-5652	4	Spring-Extension	36	126-0980	8	Screw-Carriage 3/8-16 X 1 SS
13	302-63	2	Zerk	37	135-6728	1	Decal-Button, Foot (Spray)
14	135-5644	1	Cable-Caster, Locking	38	135-6430	1	Decal-Lock, Caster
15	1126	3	Washer-Flat	39	520-0019	2	Nut-Hex, Jam
16	107-0279	2	Washer	40	142-0744	1	Guard, Muffler, Jr36
17	HDW17294	2	Bolt,Carriage,5/16-18X1,ST/ST 18-8	41	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
18	126-0710	1	Screw-HH	42	135-8653	1	Shield, Heat, Hydraulic Pump, Jr36
19	126-0759	2	Washer-Flat	43	135-6280	2	Screw-HHF
20	135-6208	4	Screw-HHF				
21	135-6806	3	Nut-Hex Flange				
22	135-5682	2	Ball Joint-SS				
23	135-6284	2	Pin-Hair				


Engine Assembly

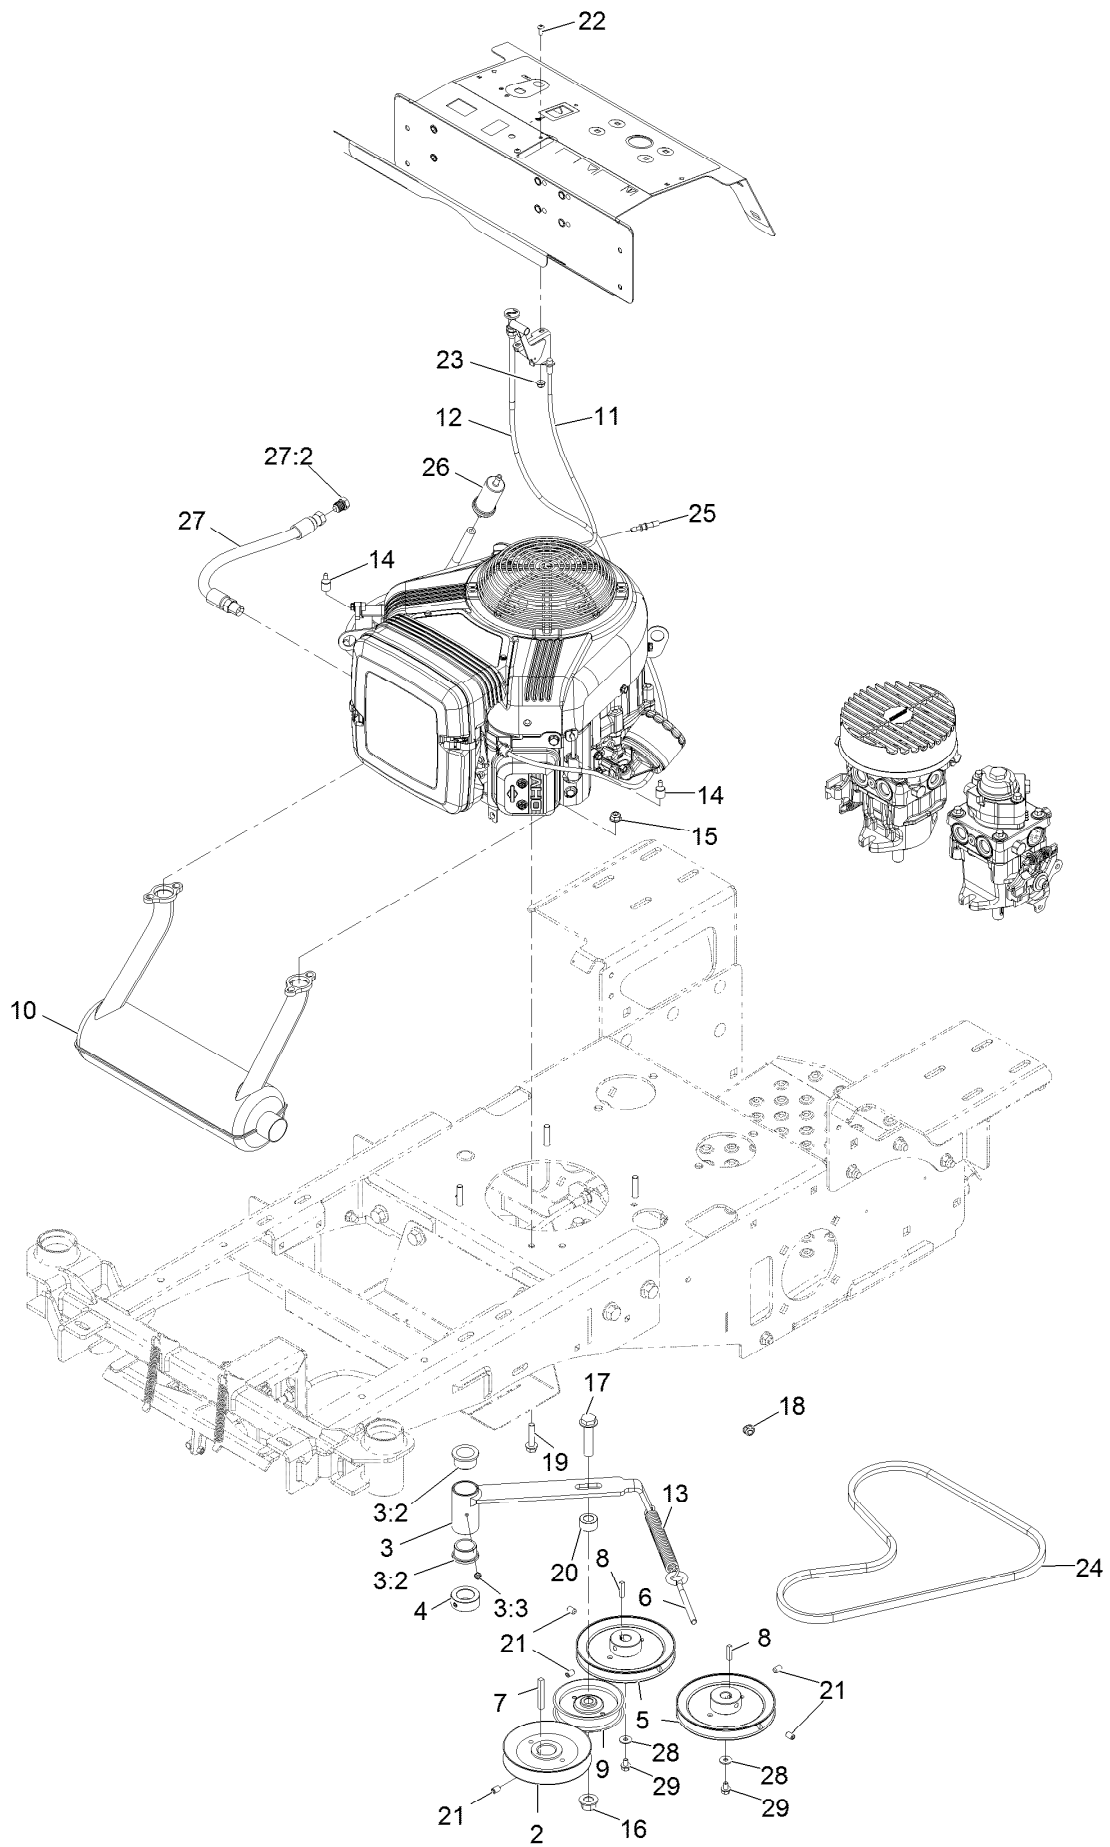

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-5657	1	Pulley-Drive	16	99-5107	1	Nut-Lock 1/2-13
3	135-6833	1	ASM, Arm-Tension	17	3234-46	1	Screw-HHF
3:2	256-132	2	Bushing-Flange	18	104-8300	1	Nut-Nyloc 5/16-18 Flg
3:3	302-63	1	Zerk	19	142-0559	4	Screw-HHF
4	135-5382	1	Collar	20	116-2959	1	Spacer
5	135-9068	2	Pulley ASM	21	3246-17	5	Setscrew-HSH
6	142-0418	1	Bolt, Eye - 5/8 X 5/16-18 X 5	22	135-6374	2	Screw-HSBH
7	103-4177	1	Key	23	135-6342	2	Nut-Hex Flange
8	1-807272	2	Key-5Mm X 5Mm X 25Mm	24	135-9078	1	Belt-V, A48
9	135-5662	1	Pulley-Idler, Flat	25	135-5678	1	Barb-Fuel
10	135-9245	1	Briggs 16/18 HP Muffler	26	135-6687	1	Filter-Fuel
11	135-5260	1	Cable-Throttle	27	135-5365	1	Oil Drain Hose ASM
12	135-5707	1	Cable-Choke				(W/Plug)
13	135-5780	1	Spring-Extension	27:2	AU218-774	1	Plug
14	135-5677	2	Tube-Shrink, Heat	28	135-6273	2	Washer
15	135-6109	4	Nut-Hex Flange	29	81-1280	2	Screw-HHF

Hydraulic Assembly

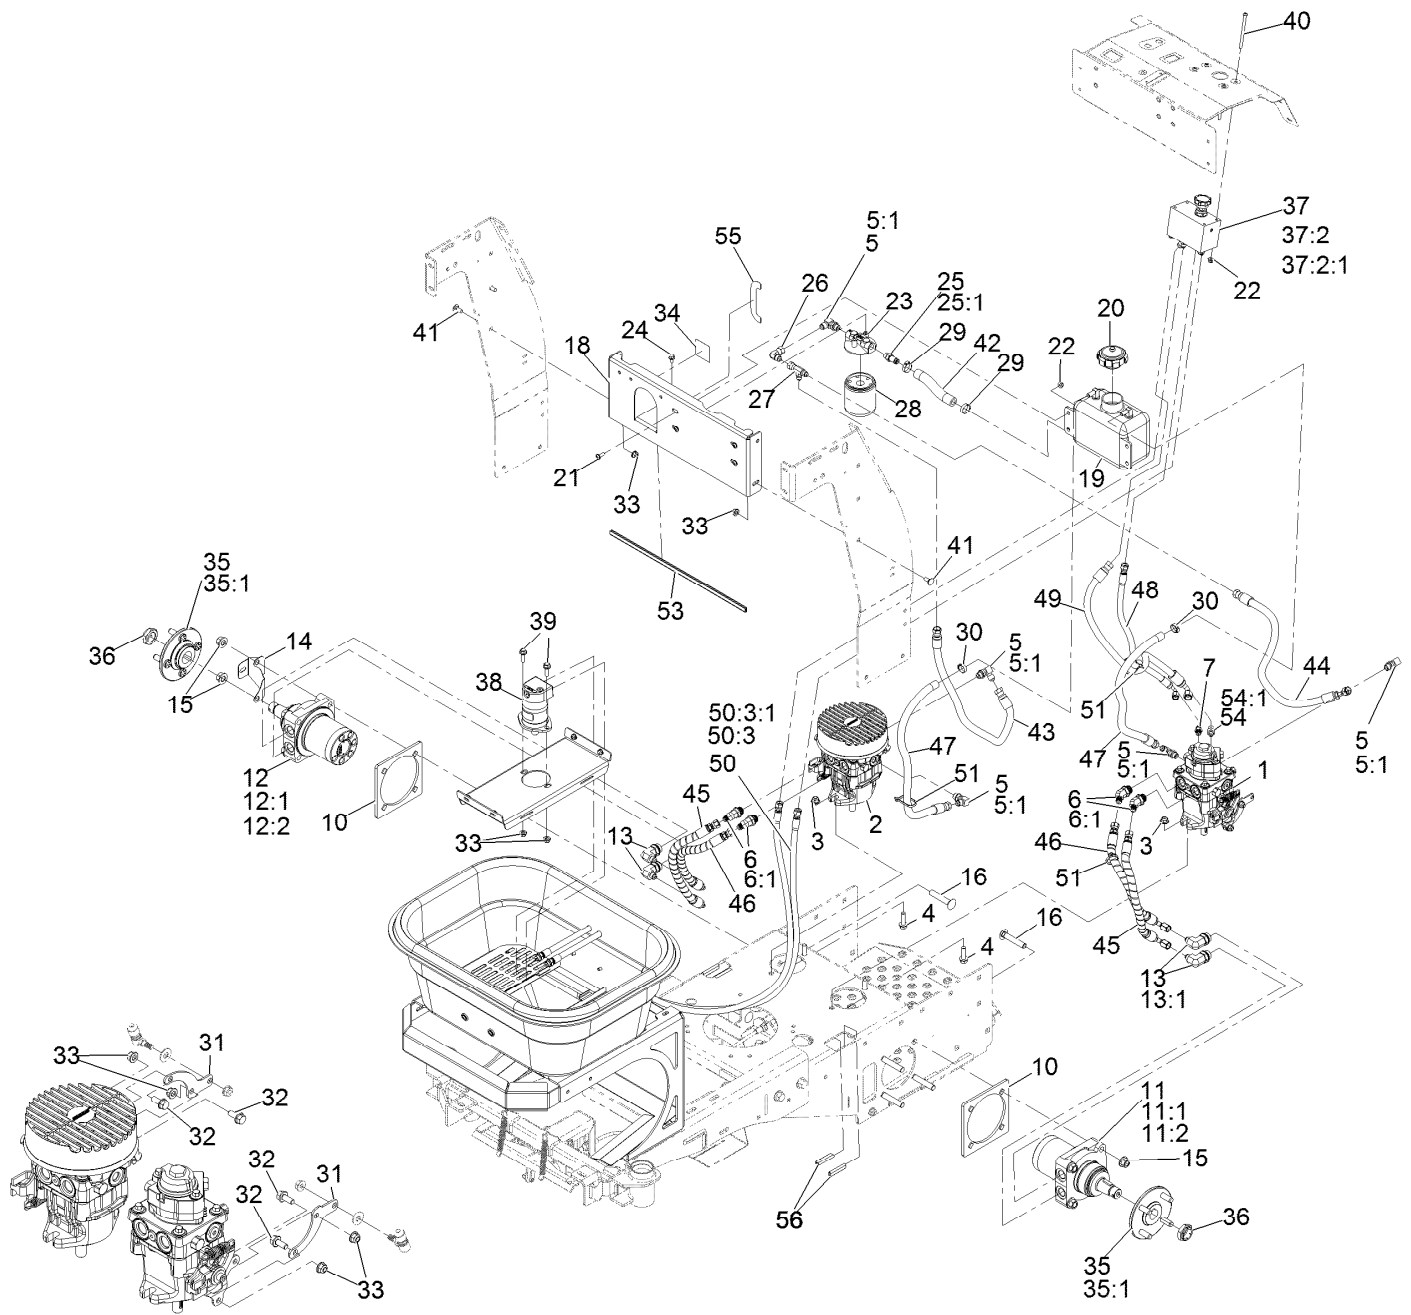


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5250	1	Pump-Hydro, Pg With Aux	30	135-5757	2	Clamp-Oetiker, 167
2	135-5251	1	Pump-Hydro, Pg	31	135-8846	2	Extension, Hydro-Pump, Jr36
3	135-6110	4	Nut-Hex Flange	32	126-2712	4	Screw-HHF 5/16-18 X 3/4 SS
4	135-6211	4	Screw-HHF	33	135-6109	9	Nut-Hex Flange
5	103-1802	5	Fitting-Elbow, 90 DEG	34	135-6398	1	Decal-Oil
5:1	237-42	1	O-Ring	35	135-7525	2	Hub-Wheel
6	131-1308	4	Fitting	35:1	135-7526	4	Stud-1/2-20 X 1.55
6:1	237-79	1	O-Ring	36	116-1399	2	Locknut
7	353-545	1	Fitting-Straight	37	135-5256	1	Manifold-Hopper, W/Out Relief
10	142-0709	2	Backplate, Wheel, Jr36	37:2	353-212	1	Fitting-Elbow, 45 DEG
11	135-6689	1	Motor-Wheel,Lt	37:2:1	237-42	1	O-Ring
11:1	3257-42	1	Key-Woodruff 5/16 X 1	38	135-5243	1	Motor-Hydraulic, Spreader
11:2	135-7497	1	Kit-Seal, Tj Motor	39	135-6272	2	Screw-HHF
12	135-6688	1	Motor-Wheel,Rt	40	135-6385	4	Screw-HSBH
12:1	3257-42	1	Key-Woodruff 5/16 X 1	41	126-0695	3	Screw-CARR
12:2	135-7497	1	Kit-Seal, Tj Motor	42	109-5577	1	Hose-Hydraulic
13	AU218-5281	4	Fitting-Elbow, 90 DEG	43	135-9977	1	Hose ASM, HYD LP
13:1	237-80	1	O-Ring	44	135-7822	1	Hose ASM, HYD LP
14	135-5574	1	Bracket-Hopper, Speedometer Sensor	45	135-9993	2	Hose ASM, HYD HP
15	99-5107	8	Nut-Lock 1/2-13	46	135-9994	2	Hose ASM, HYD HP
16	126-0095	8	Bolt-Carriage 1/2-13 X 2 3/4	47	135-9978	2	Hose ASM, HYD LP
18	135-9773	1	Mount, Hydraulic Filter, Jr36	48	135-7820	1	Hose ASM, HYD HP
19	135-9056	1	2 Qt Flambeau Hydro Tank	49	135-7821	1	Hose ASM, HYD LP
20	135-5713	1	Cap-Vented	50	135-5356	2	Hose ASM, HYD HP
21	135-7080	4	Screw-Hsbhf	50:3		1	Fitting-Straight, Rigid ●
22	135-6108	8	Nut-Hex Flange	50:3:1	237-42	1	O-Ring
23	104-7836	1	Filter-Head	51	3290-378	3	Tie-Cable
24	135-6280	2	Screw-HHF	53	135-7494	1	Strip-Trim, 17.88"
25	109-3278	1	Adapter-Straight	54	AU218-5352	1	Adapter-Straight
25:1	237-42	1	O-Ring	54:1	237-78	1	O-Ring
26	AU218-980	1	Fitting-Swivel, 90 DEG	55	135-7911	1	Decal-Hydro Level
27	353-877	1	Fitting-HYD, Tee	56	135-7948	4	Strip-Trim, 2.0"
28	135-5695	1	Filter-Hydraulic				
29	135-5692	2	Clamp-Oetiker, 167				

● Not serviced separately


Park Brake Assembly

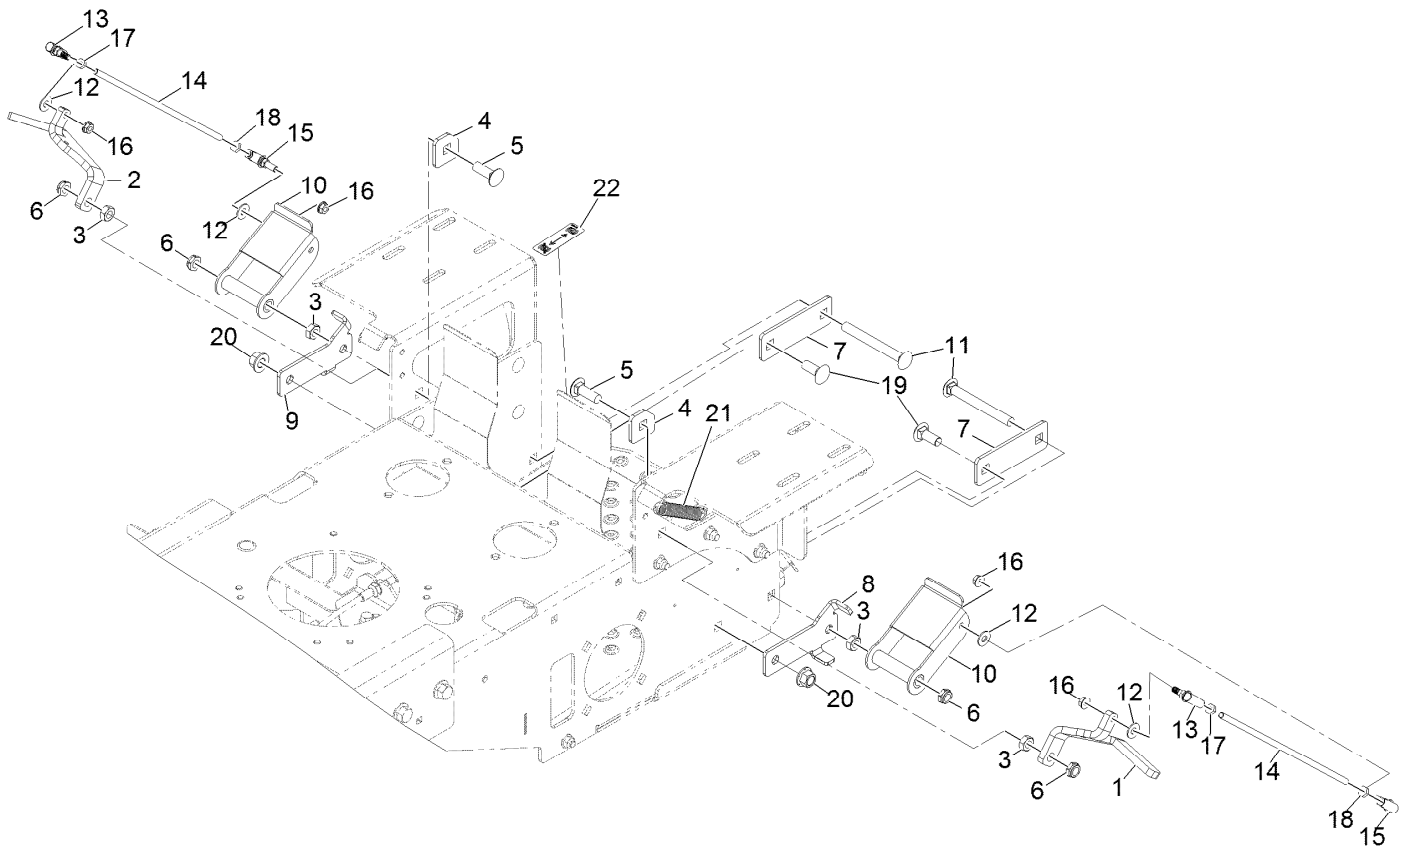

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0703-03	1	Chock, L, Brake, Jr36	11	3233-7	2	Screw-CARR
2	142-0704-03	1	Chock, L, Brake, Jr36, Ms, 0.375	12	HDW14535	4	Flat Washer, 5/16 Nom,ST/ST,18-8
3	3218-5	4	Nut-Jam 1/2-13	13	135-9812	2	Balljoint-SS
4	142-0732	2	Backplate, Brake Mount, Jr36	14	135-8635	2	Brake Linkage Rod
5	3233-2	2	Screw-CARR	15	135-5257	2	Balljoint-SS
6	3296-45	4	Nut-Nyloc 1/2-13 Thin	16	107-0380	4	Nut-HHF
7	142-0733	2	Backplate, Brake Pedal, Jr36	17	107-0282	2	Nut-Hex
8	142-0730	1	Stop, Foot Pedal, Brake, Jr36	18	135-6512	2	Nut-Hex
9	142-0731	1	Stop, Jr36 Foot Pedal Brake	19	3233-1	2	Screw-CARR
10	142-0794	2	Wld, Foot Pedal, Brake, Jr36	20	135-6111	2	Nut-Hex Flange
				21	126-2127	2	Spring-Extension
				22	115-9625	2	Decal-Brake, Parking


Electrical Assembly

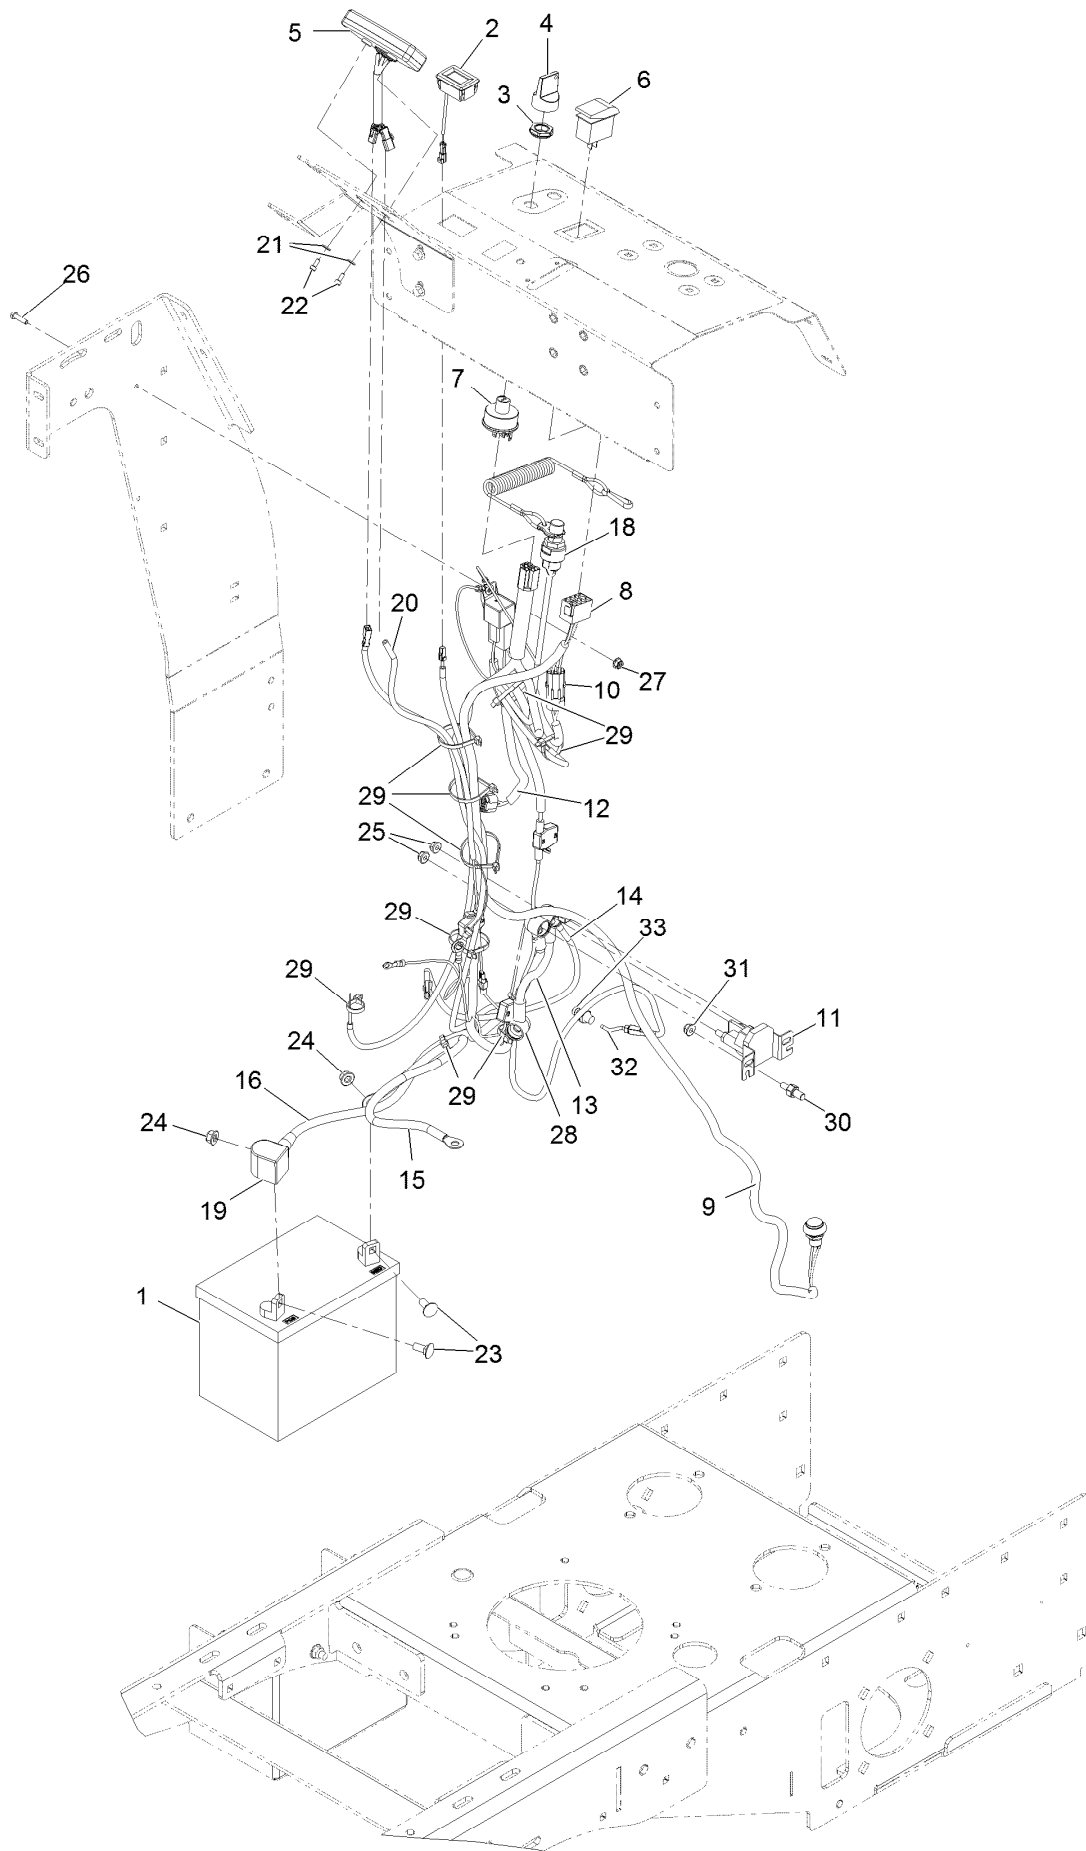

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-4657	1	Battery (340 CCA, Wet)	18	135-6121	1	Switch-Op
2	135-5259	1	Meter-Tach/Hour	19	135-2304	1	Insulator-Battery
3	135-5715	1	Nut-Switch, Key	20	135-6443	1	Harness-Striker
4	1-603511	1	Key-Ignition	21	126-0759	2	Washer-Flat
4	135-5708	1	Key-Umbrella	22	135-6357	2	Screw-HSH
5	135-8900	1	Striker-Head Only	23	126-0695	2	Screw-CARR
6	100-8469	1	Switch-Rocker	24	135-6109	2	Nut-Hex Flange
7	135-6052	1	Switch-Ignition	25	104-7201	2	Nut-Nyloc 1/4-20 Flg
8	32160-008	1	Connector-Carling, 8F	26	135-6356	1	Screw-HH
9	135-6054	1	Switch-Push Button	27	135-6342	1	Nut-Hex Flange
10	32160-072	1	Connector-Wp,2M	28	1-543393	3	Insulator-Solenoid
11	135-6189	1	Solenoid-Starter	29	3290-378	9	Tie-Cable
12	135-6113	1	Harness-Main	30	135-7273	1	Stud-Engine
13	138-3132	1	Cable-Battery, Positive	31	135-6108	1	Nut-Hex Flange
14	135-6115	1	Wire-Solenoid	32	135-8898	1	Cable-Sensor, Trail Tech
15	135-6116	1	Cable-Ground	33	135-8903	1	Magnet-Speedometer
16	135-6117	1	Cable-Positive				


Motion Control Assembly

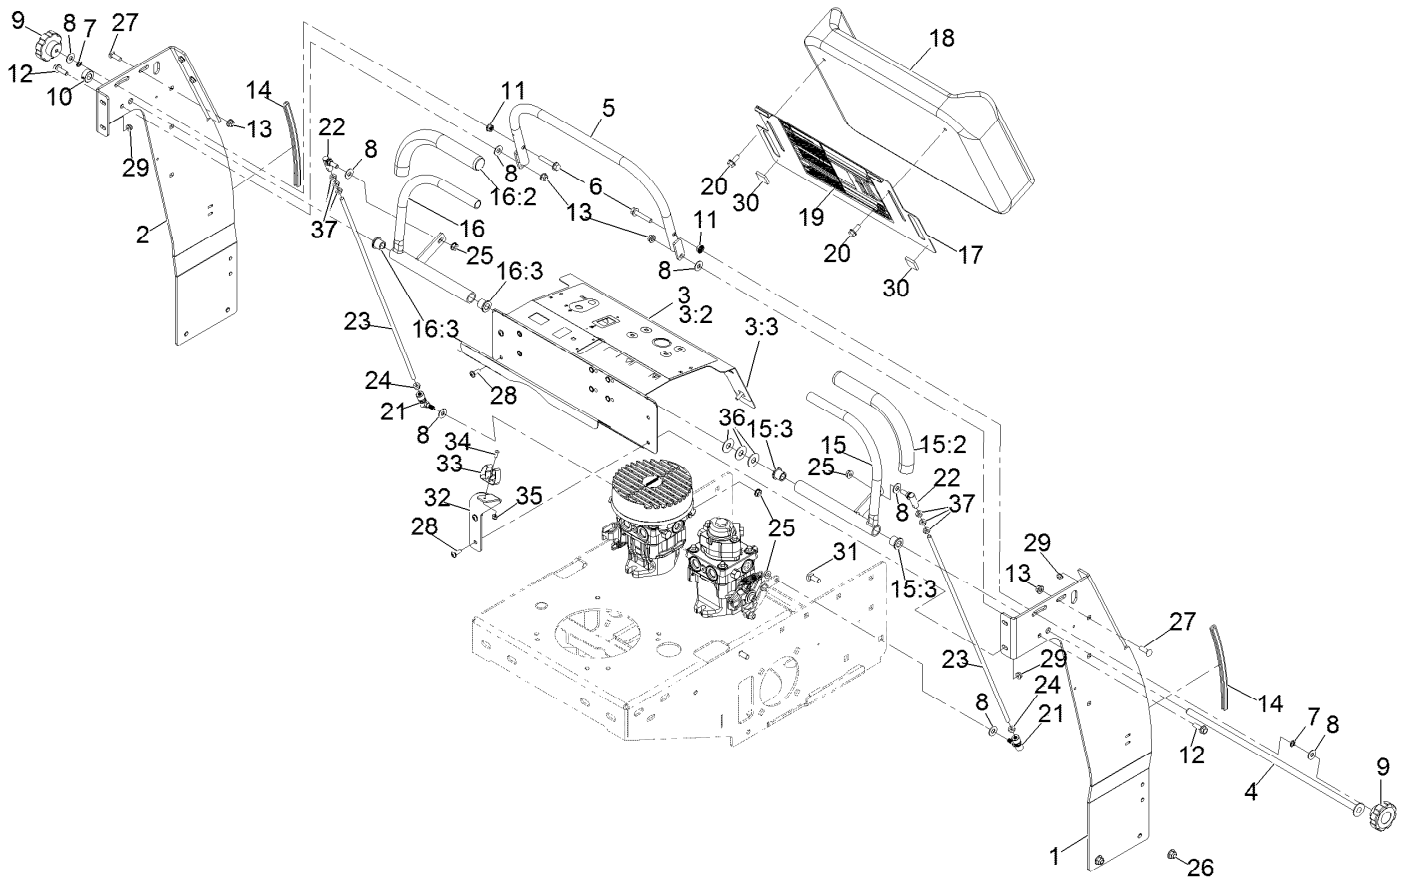

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0688	1	Upright-LH, Jr36	18	135-5334	1	Pad-Knee
2	142-0689	1	Upright-RH, Jr36	19	135-6281	1	Decal-Chart, Spray
3	135-7703	1	Panel-Control	20	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
3:2	135-7811	1	Decal-Control	21	135-5718	2	Ball Joint-Quick Disconnect, SS
3:3	138-2760	6	Nut-Clinch, Hex	22	135-5257	2	Balljoint-SS
4	135-5430	1	Rod-Pivot, Joy Stick	23	135-7481	2	Linkage-Control, SS
5	135-5427	1	Bar-Speed	24	107-0282	2	Nut-Hex
6	135-5779	2	Screw-HHF	25	107-0380	4	Nut-HHF
7	135-6286	2	Washer-Lock	26	135-6110	4	Nut-Hex Flange
8	HDW14535	8	Flat Washer, 5/16 Nom,ST/ST,18-8	27	HDW17294	2	Bolt,Carriage,5/16-18X1,ST/ST 18-8
9	135-5689	2	Knob-Fluted	28	135-7080	8	Screw-Hsbhf
10	135-6192	1	Collar	29	135-6108	8	Nut-Hex Flange
11	118-1722	2	Nut-Hex Flange	30	93-9155	2	Velcro
12	135-6272	2	Screw-HHF	31	126-0980	4	Screw-Carriage 3/8-16 X 1 SS
13	135-6109	4	Nut-Hex Flange	32	142-0745	1	Mount, Gun, Jr36
14	135-7000	2	Strip-Trim, 9.0"	33	135-5661	1	Holder-Tool, Clip
15	135-7002	1	Regulator-Yanmar	34	135-6374	1	Screw-HSBH
15:2	1-633257	1	Grip-Control, Motion	35	135-6342	1	Nut-Hex Flange
15:3	135-5694	2	Bushing-Flange	36	135-5586	3	Washer
16	135-7003	1	Stick-Joy, Rt	37	135-6512	6	Nut-Hex
16:2	1-633257	1	Grip-Control, Motion				
16:3	135-5694	2	Bushing-Flange				
17	142-0727	1	Plate, Knee Pad, Jr36				


Wheel Assembly

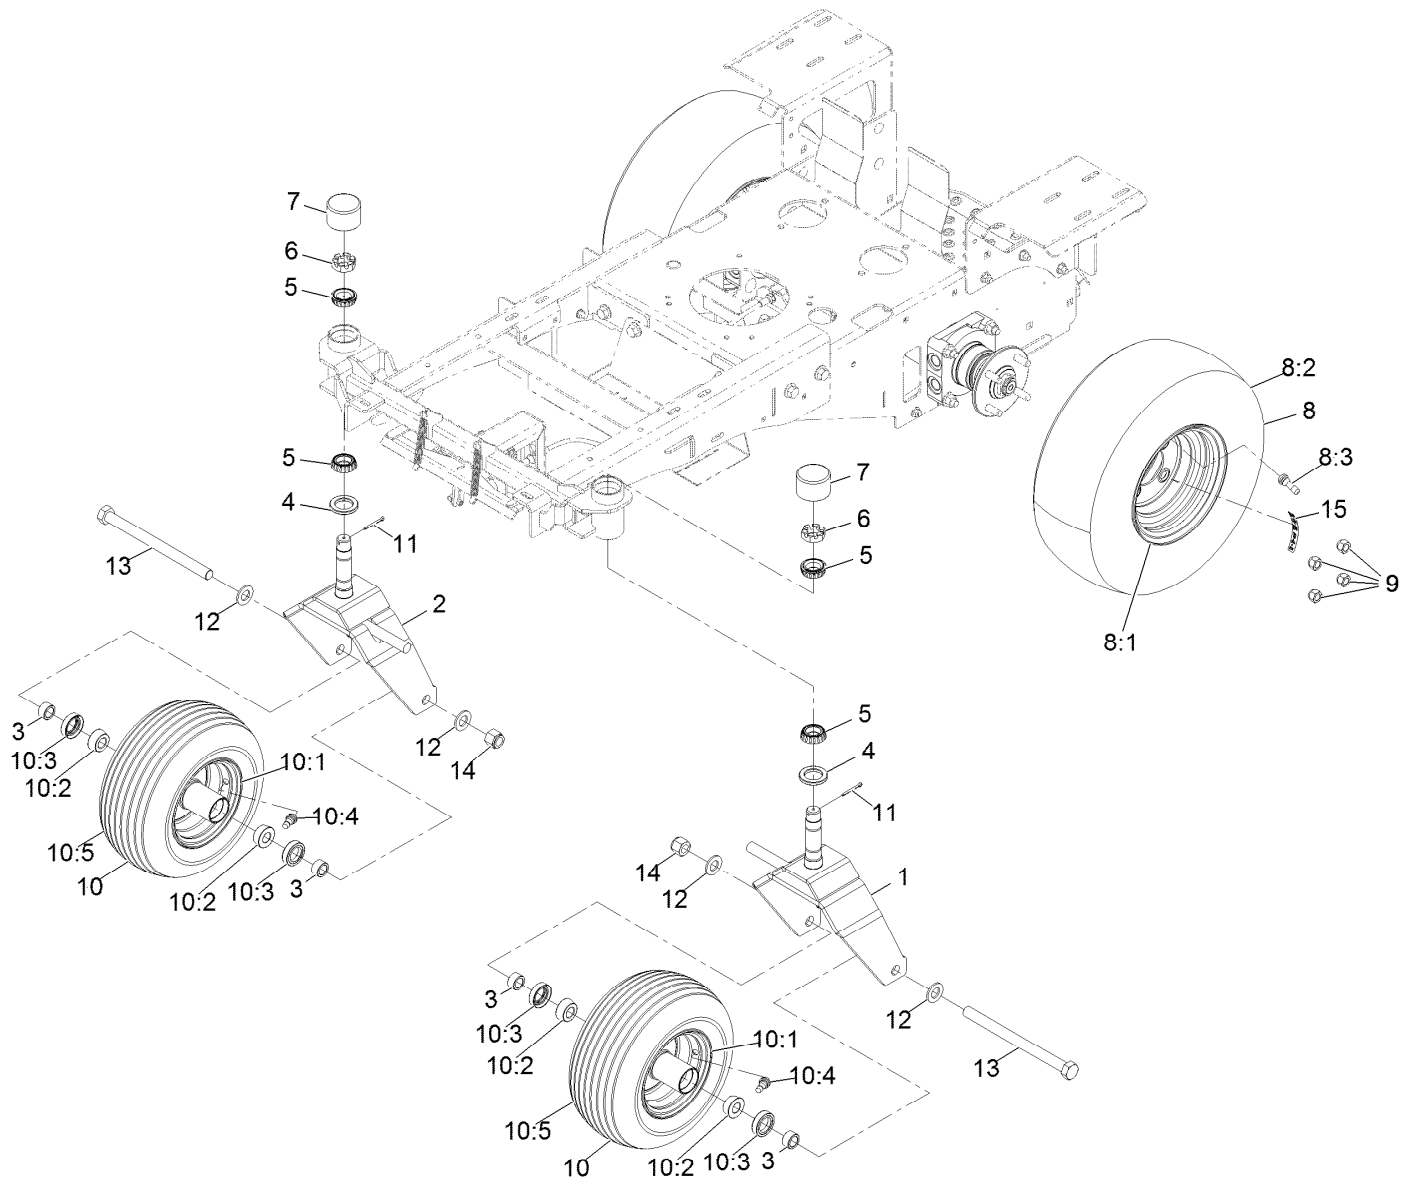

Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0918-03	1	Wld, Caster, L, Jr36, 36R	10:1	135-6680	1	Rim-6 X 4.5
2	142-0919-03	1	Wld, Caster, R, Jr36, 36R	10:2	1-633585	2	Bearing-Cone Tapered Roller
3	135-5683	4	Spacer-Axle	10:3	103-0063	2	Seal-Double Lip
4	1-543511	2	Seal-Grease	10:4	5108	1	Valve
5	254-92	4	Cone-Bearing, Outer	10:5	135-6681	1	Tire-Rib
6	1-809082	2	Nut-SHH	11	135-6292	2	Pin-Cotter
7	135-5756	2	Cap-Dust, Rubber	12	3256-28	4	Washer-3/4 SAE
8	135-8621	2	Tire/Rim ASM, K500-4H-Blk	13	135-6300	2	Screw-HH
8:1	135-6679	1	Rim-8X5.375, Centered	14	3296-51	2	Nut-Nyloc 3/4-10
8:2	126-1618	1	Tire	15	126-2055	2	Decal-Torque, Wheel Hub
8:3	232-27	1	Stem-Valve				Lug
9	242-50	8	Nut-Lug 1/2-20				
10	135-8615	2	Wheel And Tire				


Fuel Tank Assembly

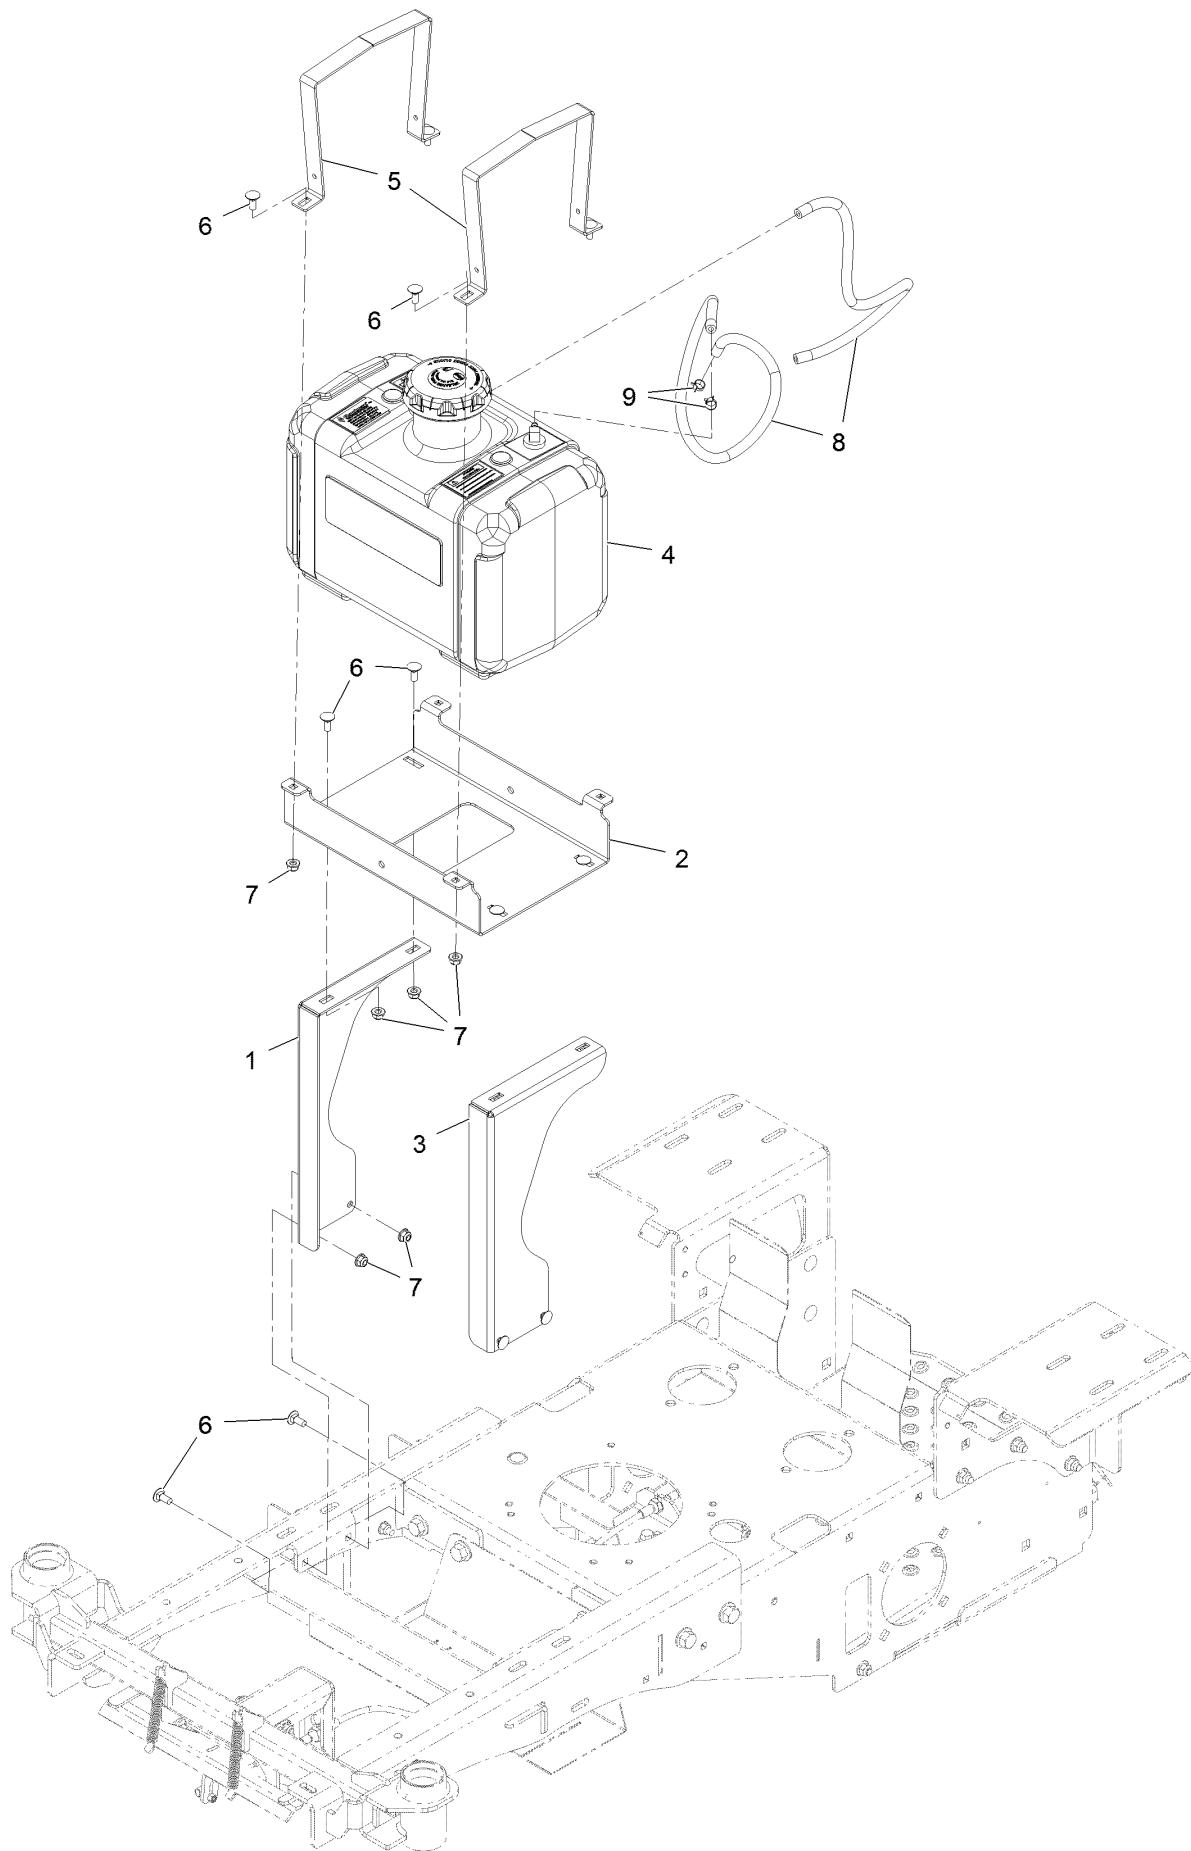

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0756	1	Panel, Platform, Fuel Tank, Jr36	5	135-7211	2	Strap-Tank, Gas
2	135-7243	1	Mount-Tank, Fuel	6	126-0695	12	Screw-CARR
3	142-0755	1	Panel, Platform, Fuel Tank, Jr36, SS,.12	7	135-6109	12	Nut-Hex Flange
4	135-7172	1	Fuel Tank ASM	8	109-1395	2	Hose-Fuel Line 27"
				9	2412-98	2	Clamp-Hose

Spray System Assembly

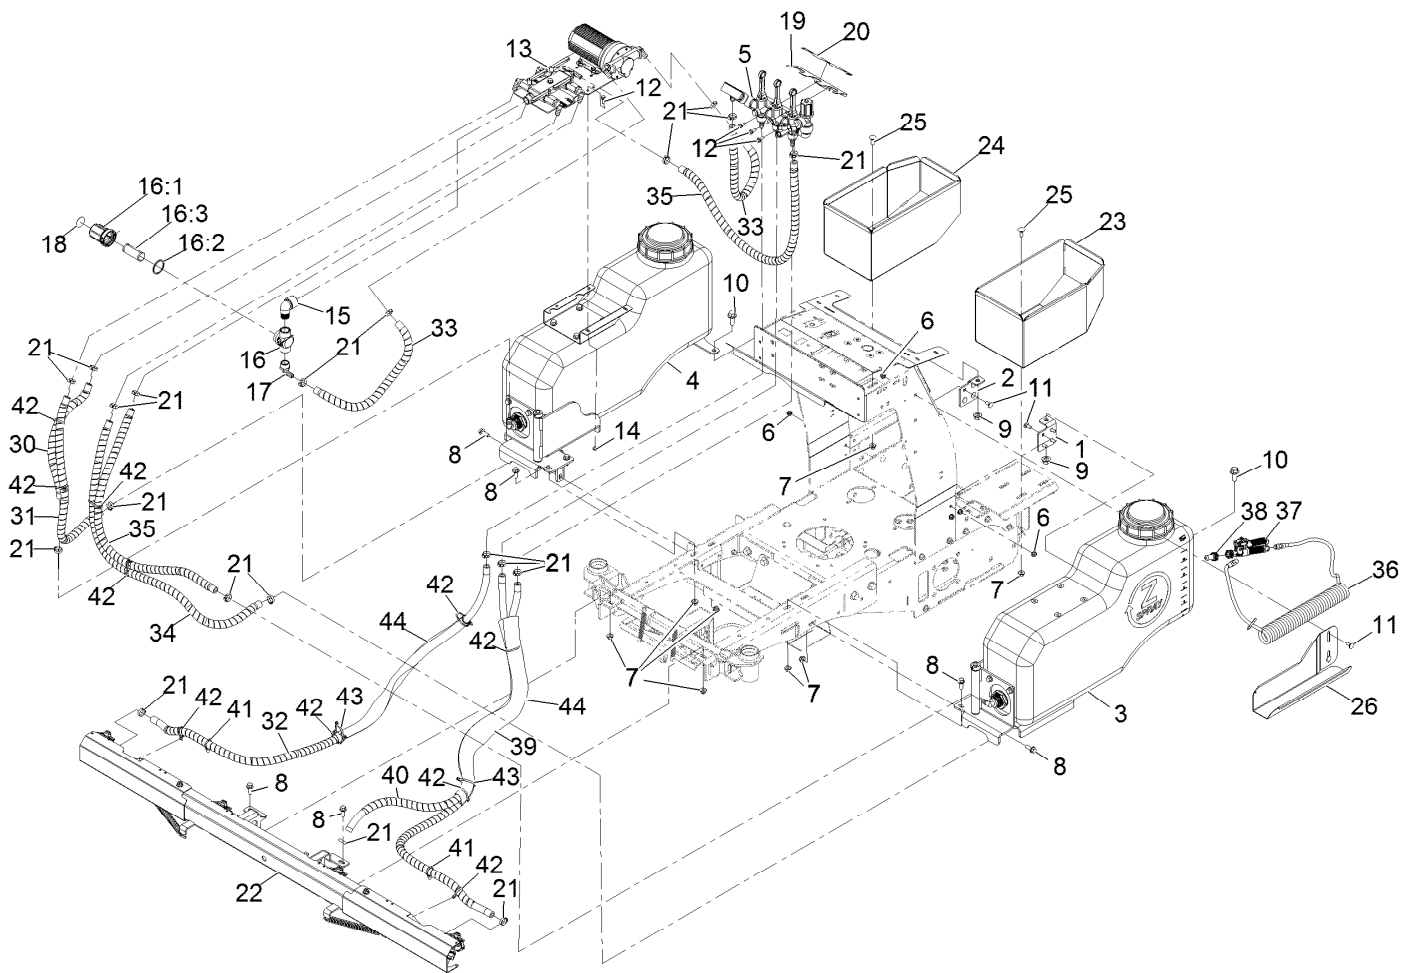


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0722	1	Pin, Support, Jr36	20	135-6285	1	Decal-Valve, Boom
2	142-0723	1	Pin, Support, Jr36, SS, 0.188	21	135-5692	20	Clamp-Oetiker, 167
3	135-6683	1	ASM-Tank, Lt	22		1	ASM-Boom ●
4	135-6684	1	ASM-Tank, Rt	23	135-5470	1	Box-Fert, Lt
5		1	ASM-Manifold ●	24	135-5473	1	Box-Fert, Rt
6	135-6109	10	Nut-Hex Flange	25	126-0980	8	Screw-Carriage 3/8-16 X 1 SS
7	135-6110	16	Nut-Hex Flange	26	142-0749	1	Tray, Gun, Jr36
8	135-6208	8	Screw-HHF	30	142-0042	1	Hose-Spray, Wrapped
9	135-6111	2	Nut-Hex Flange	31	142-0039	1	Hose-Spray, Wrapped
10	135-6207	2	Screw-HHF	32	142-0014	1	Hose-Spray, Wrapped
11	126-0695	10	Screw-CARR	33	142-0041	2	Hose-Spray, Wrapped
12	135-6221	7	Screw-HHF	34	142-0036	1	Hose-Spray, Wrapped
13		1	ASM, Liquid Valve ●	35	142-0037	2	Hose-Spray, Wrapped
14	135-6108	2	Nut-Hex Flange	36	135-6612	1	Hose-Coiled, 15 Ft
15	132-7706	1	Elbow-90 DEG ■	37	135-5773	1	Gun-Spray, Spot
16	135-5765	1	Strainer-Inline	38	135-5778	1	Tip-Spray, #12 Spot
16:1	126-7195	1	Bowl-Strainer	39	142-0013	1	Hose-Spray, Wrapped
16:2	126-2272	1	Gasket-Head, Line Strainer	40	135-5294	1	Hose-Spray, Wrapped
16:3	135-5766	1	Screen-Strainer, 50 Mesh	41	32180-030	2	Clip-Tie
17	135-5744	1	Fitting-Elbow, 90 ■	42	3290-378	11	Tie-Cable
18	135-6424	1	Decal-Cap, Strainer	43	3290-379	2	Tie-Cable
19	135-5570	1	Bracket-Manifold	44	135-6484	2	Guard-Mesh

● Not serviced separately

■ Apply pipe sealant to all pipe threads.

Left Tank Assembly

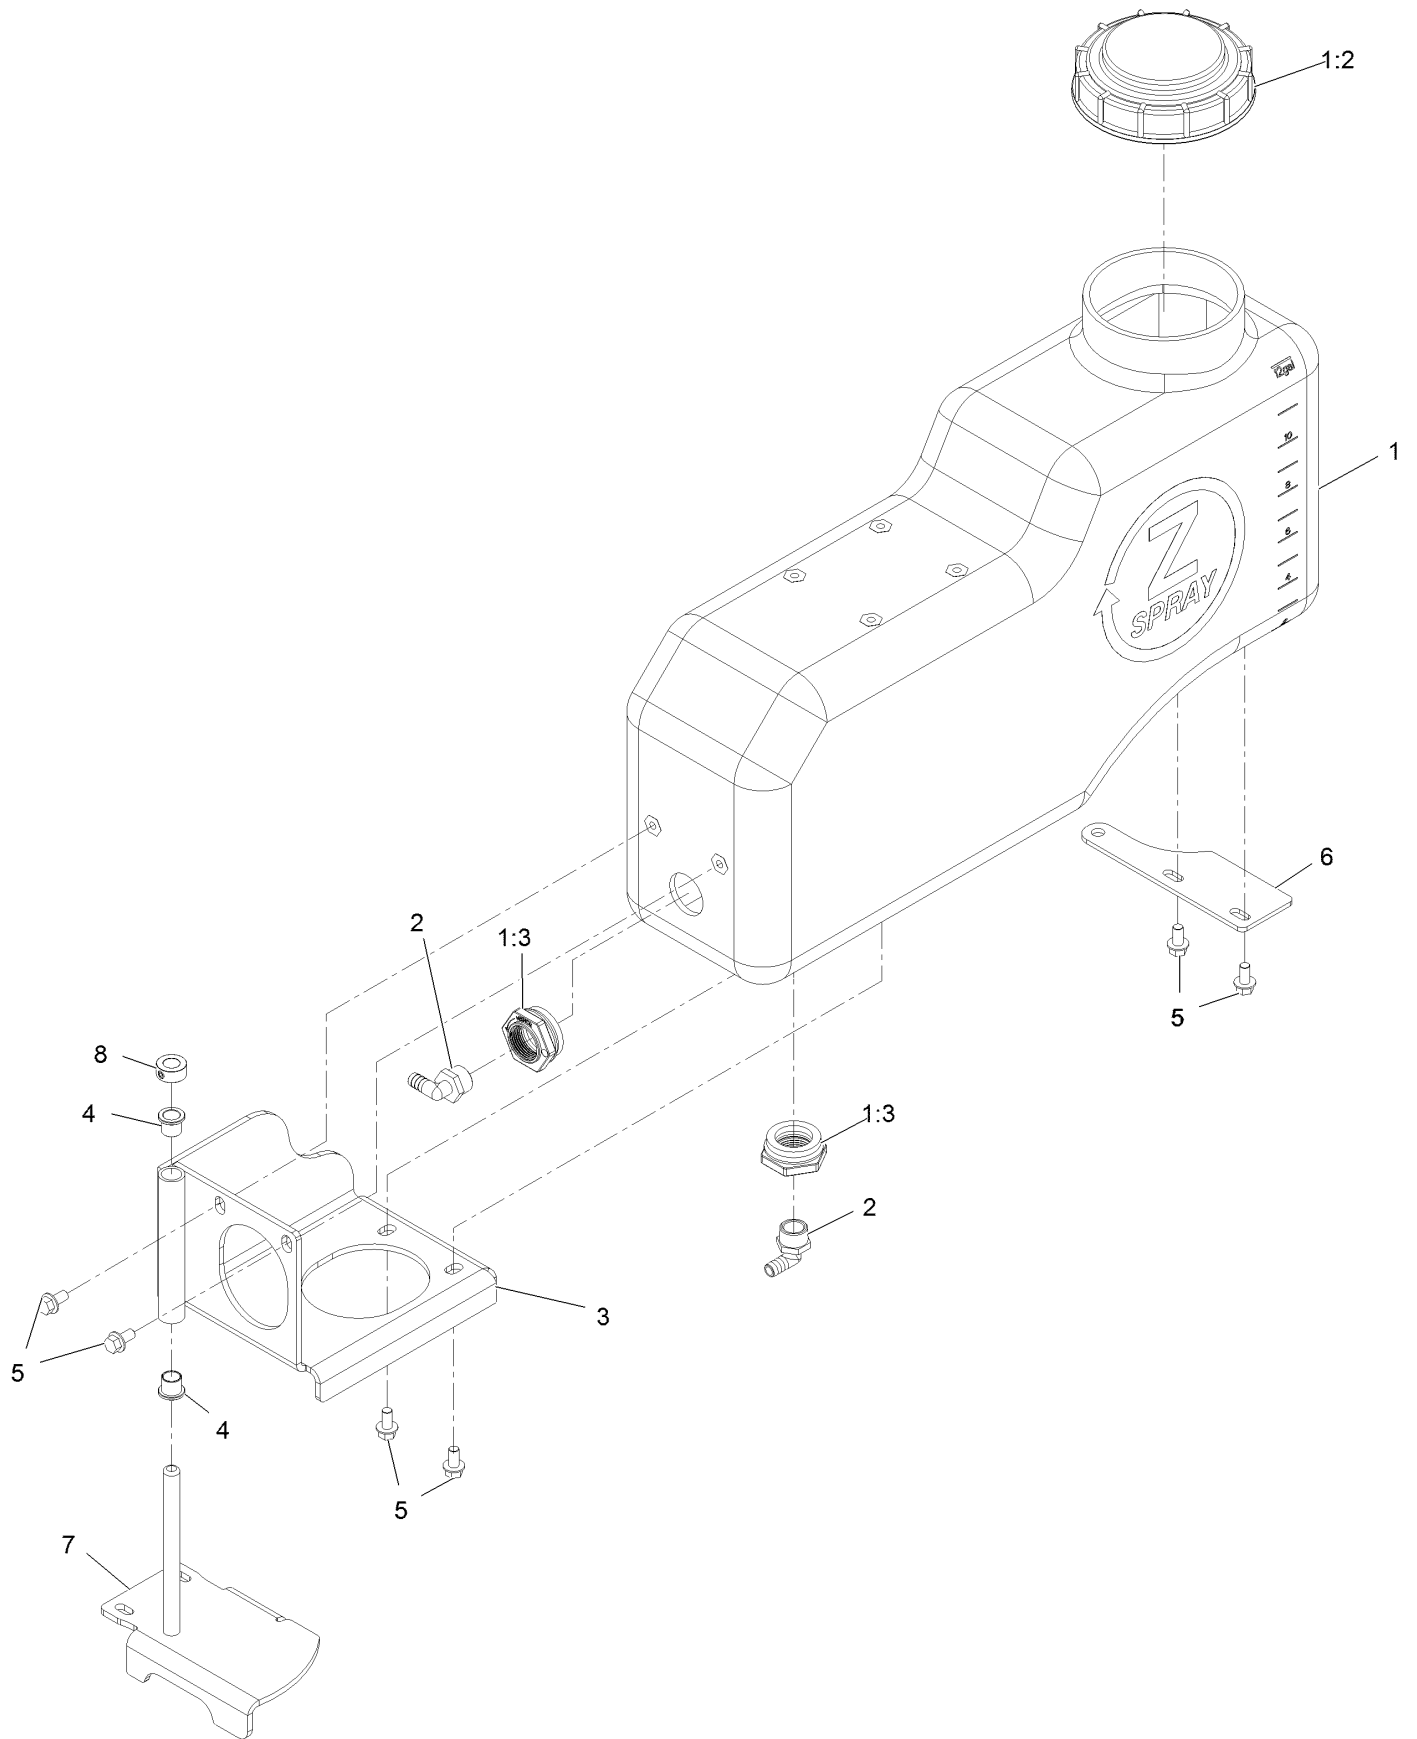


Left Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-8451	1	Tank, L, 12 Gal, J36	4	135-9063	2	Bushing-Flange
1:2	135-5916	1	Cap-Tank, Spray	5	135-6274	6	Screw-HHF
1:3	126-4393	2	Fitting-Bulkhead	6	142-0724	1	Plate, Pivot Lock, Tank, Jr36
2	135-5744	2	Fitting-Elbow, 90 ●	7	142-0791	1	Wld, Wing, Tank, Bottom, L, Jr36
3	142-0789	1	Wld, Wing, Tank, Bottom, L, Jr36	8	142-1443	1	5/8 Shaft Collar

● Apply pipe sealant to all pipe threads.

Right Tank Assembly

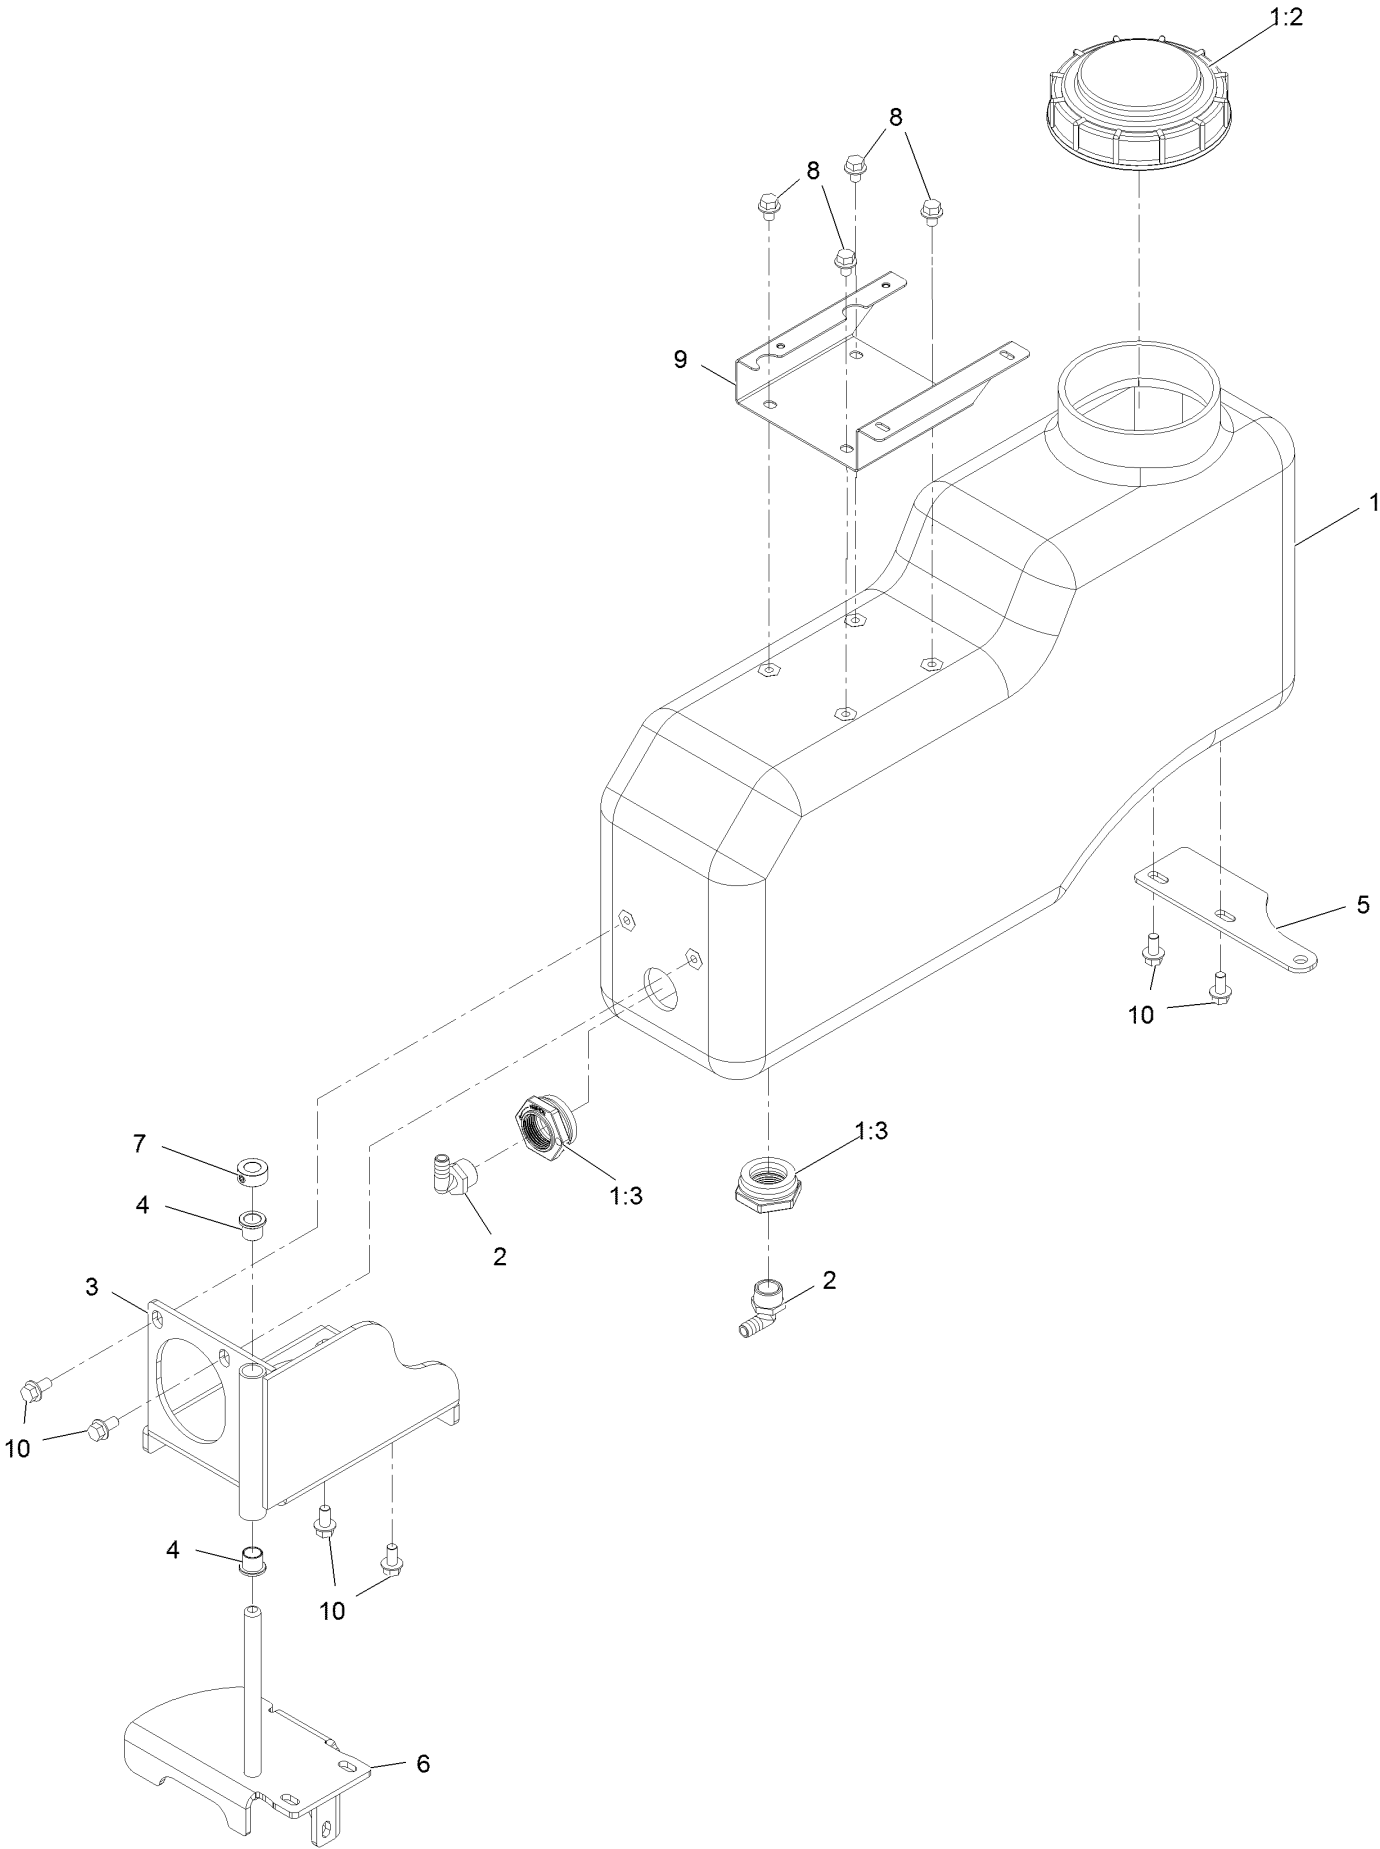


Right Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-8452	1	Tank, R, 12 Gal, J36	5	142-0724	1	Plate, Pivot Lock, Tank, Jr36
1:2	135-5916	1	Cap-Tank, Spray	6	142-0792	1	Wld, Wing, Tank, Bottom, R, Jr36
1:3	126-4393	2	Fitting-Bulkhead	7	142-1443	1	5/8 Shaft Collar
2	135-5744	2	Fitting-Elbow, 90 ●	8	135-7096	4	Screw-HHF
3	142-0790	1	Wld, Wing, Tank, Bottom, R, Jr36	9	135-6904	1	Platform-Valve, Liquid
4	135-9063	2	Bushing-Flange	10	135-6274	6	Screw-HHF

● Apply pipe sealant to all pipe threads.

Manifold Assembly

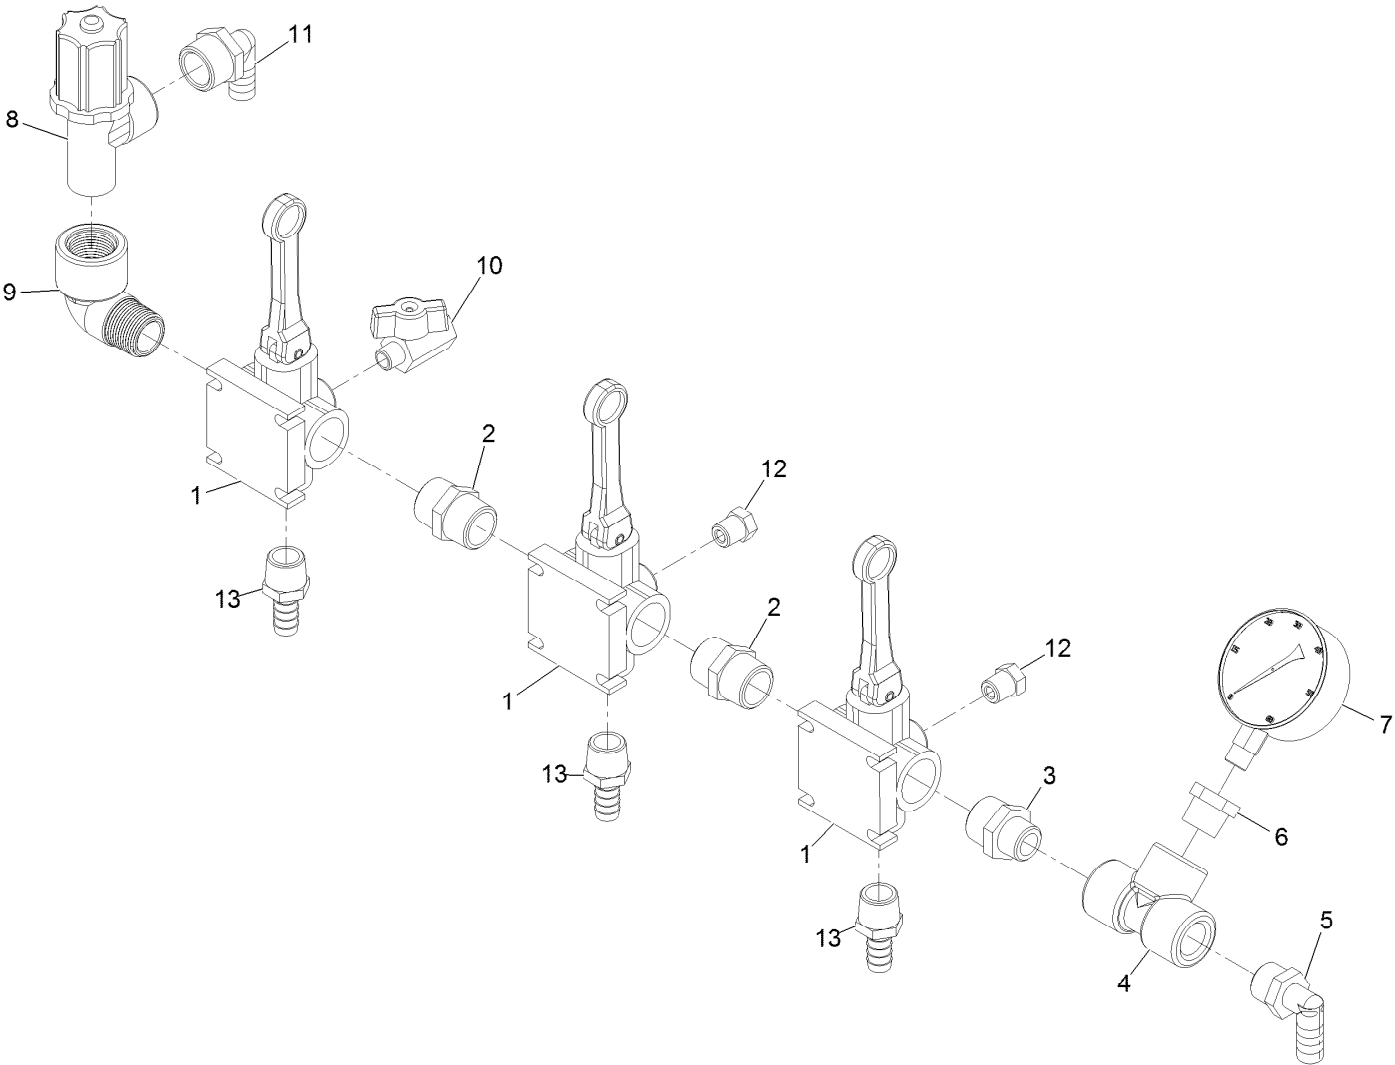


Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5721	3	Valve-Directo	8	135-5736	1	Valve-Throttle ●
2	135-5741	2	Fitting-Nipple ●	9	132-7706	1	Elbow-90 DEG ●
3	135-5742	1	Fitting-Nipple ●	10	135-5737	1	Valve-Chrome, 1/4 ●
4	94-7100	1	Tee	11	135-5744	1	Fitting-Elbow, 90 ●
5	120-8673	1	Fitting-Elbow, Hosebarb ●	12	135-5735	2	Plug-Valve ●
6	135-5743	1	Fitting-Reducer ●	13	120-8671	3	Fitting-Hosebarb ●
7	135-5740	1	Gauge ●				

● Apply pipe sealant to all pipe threads.

Liquid Valve Assembly

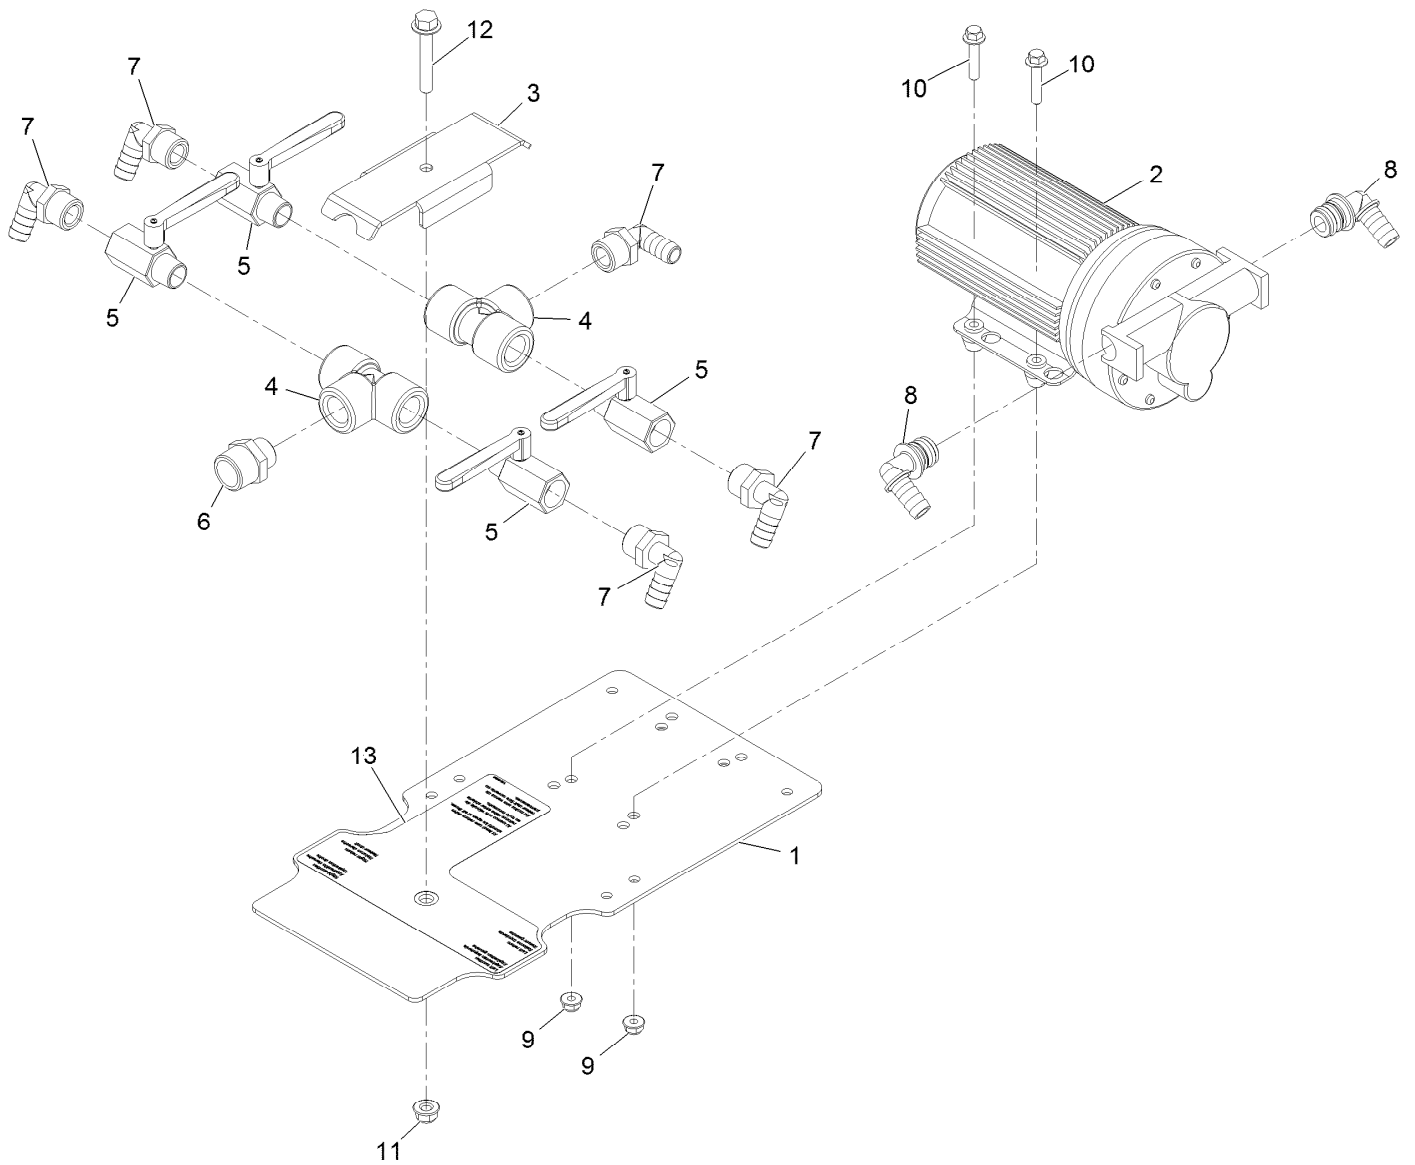


Liquid Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5491	1	Mount-Plate, Liquid Valve	7	120-8673	5	Fitting-Elbow, Hosebarb ●
2	135-5759	1	Pump-5.0 GPM	8	126-0961	2	Fitting-Elbow, Barbed
3	135-5504	1	Plate-Clamp, Liquid Valve Fittings	9	135-6108	4	Nut-Hex Flange
4	94-7100	2	Tee	10	135-6312	4	Screw-HHF
5	135-5760	4	Valve-Chrome, 1/2 ●	11	135-6109	1	Nut-Hex Flange
6	135-5742	1	Fitting-Nipple ●	12	126-2711	1	Screw-HHF
				13	135-6420	1	Decal-Valve, Tank

● Apply pipe sealant to all pipe threads.


Boom Assembly

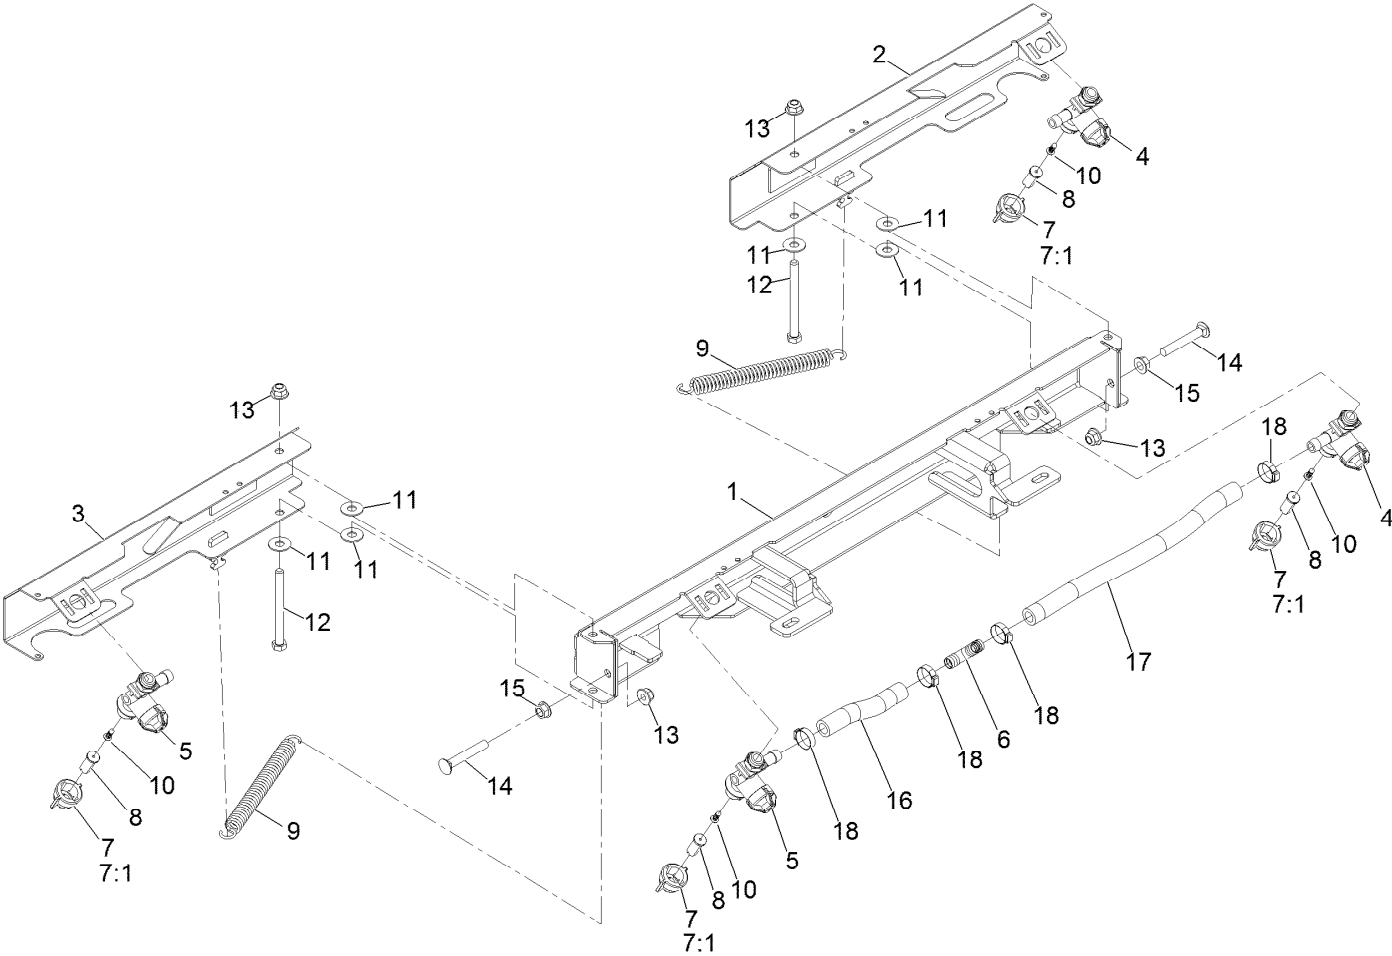

Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-6798	1	Boom-Center	10	126-3943	4	Strainer-Nozzle, 50M 5PSI
2	135-6800	1	Boom-Wing, Rt				Check
3	135-6799	1	Boom-Wing, Lt	11	1126	6	Washer-Flat
4	135-5790	2	Body-Nozzle, Right	12	135-6310	2	Screw-HH
5	135-5788	2	Body-Nozzle, Left	13	135-6110	4	Nut-Hex Flange
6	138-2751	1	Fitting-Tee, Barb	14	126-0702	2	Screw-CARR
7	135-5781	4	Cap-Nozzle	15	135-6806	2	Nut-Hex Flange
7:1	40998	1	Seat-Gasket	16	135-6298	1	Hose-Spray
8	135-5791	4	Avi-110025 1/3 Spray Tip	17	135-7129	1	Hose-Spray
9	135-5780	2	Spring-Extension	18	135-5692	4	Clamp-Oetiker, 167

Spreader Assembly

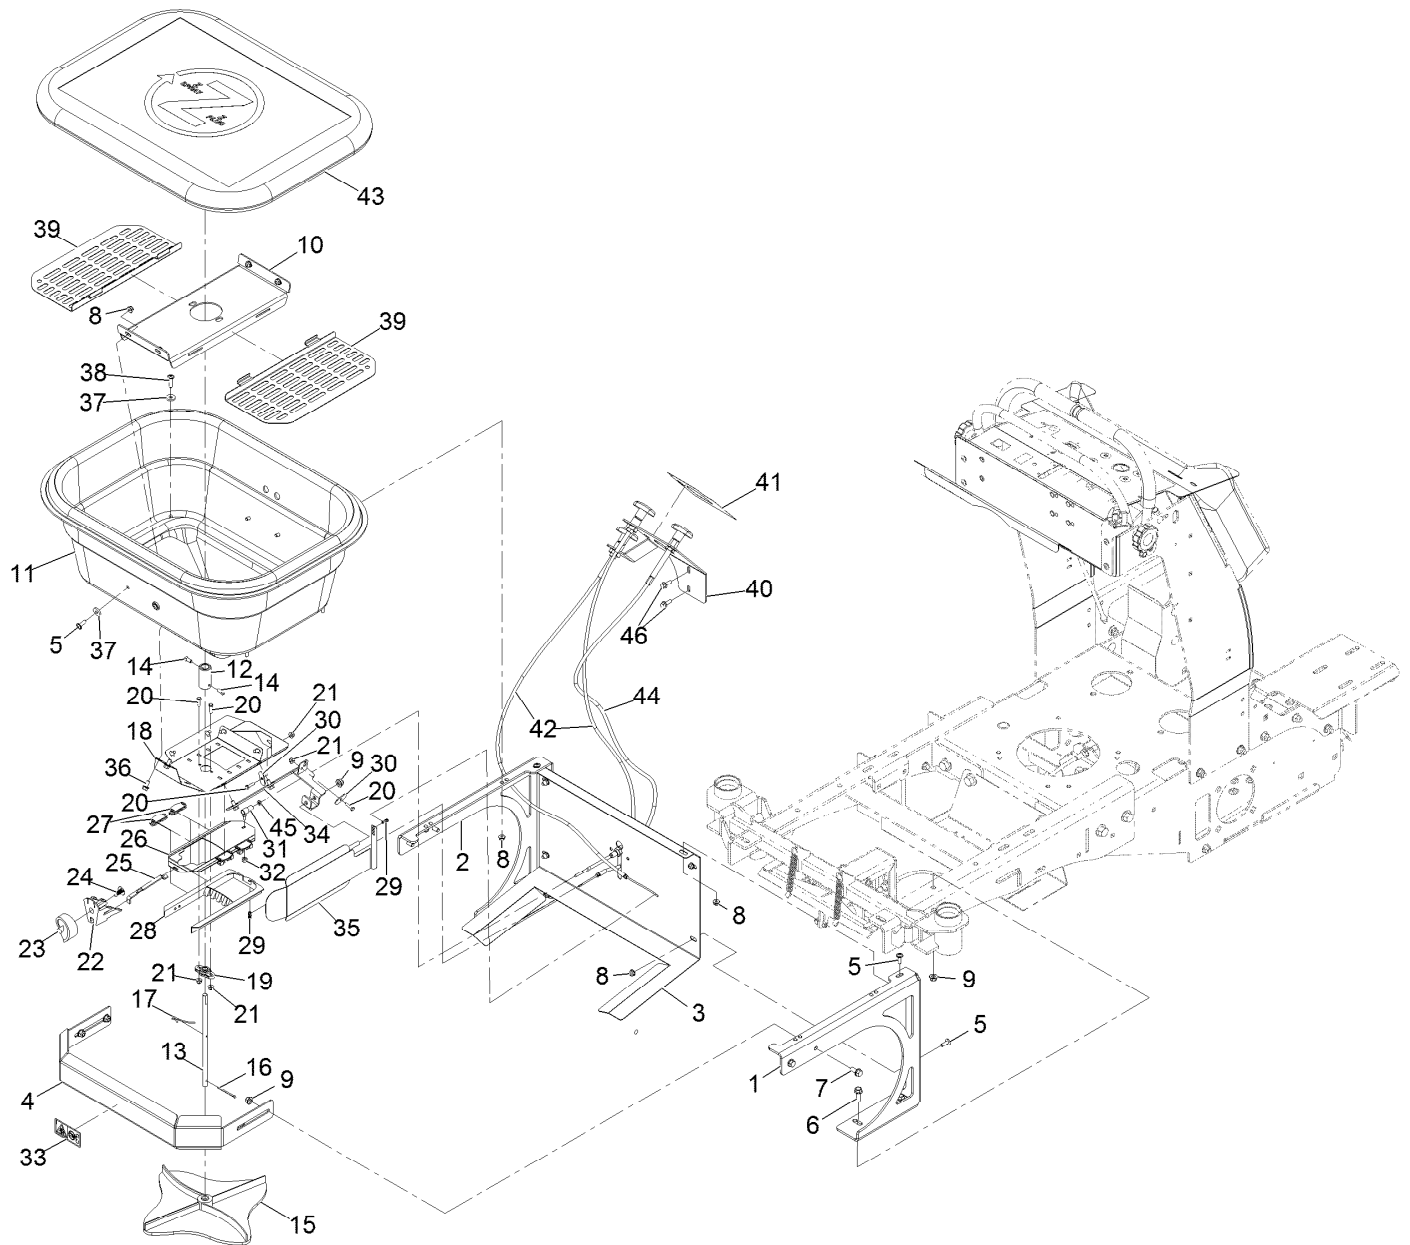

Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0784	1	Wld, Frame, Hopper, L, 120	25	135-5965	1	Linkage-Gate, Rate
2	142-0785	1	Wld, Frame, Hopper, R, 120	26	135-5573	1	Slide-Door, Hopper
3	142-0708	1	Backshield, Hopper, Jr36	27	126-0990	4	Guide-Rate, Gate
4	142-0698	1	Bumper, Front, Hopper, 120	28	126-0991	1	Diffuser
5	135-7080	10	Screw-Hsbhf	29	135-5961	2	Retainer-Cable, Wire
6	135-6272	4	Screw-HHF	30	135-5569	2	Retainer, Cable
7	126-2712	4	Screw-HHF 5/16-18 X 3/4 SS	31	135-5682	1	Ball Joint-SS
8	135-6108	14	Nut-Hex Flange	32	HDW05856	1	Nut-NYL Lock,#10-32,ST/ST 18-8
9	135-6109	9	Nut-Hex Flange	33	135-6725	1	Decal-Dismemberment Hazard
10	142-1987	1	Pan-Hopper, 120	34	135-5388	1	Mount-Deflector, Side
11	135-8519	1	Hopper-120Lb	35	135-5589	1	Deflector-Side, Spreader
12	135-5937	1	Coupler-SS	36	135-6280	8	Screw-HHF
13	135-8504	1	Shaft-Hopper, 120	37	135-6341	8	Washer
14	3241-7	2	Screw-SQH	38	135-7081	4	Screw-Hsbhf
15	135-5954	1	Spinner-Spreader	39	142-1995	2	Screen-Hopper, 120
16	135-6340	1	Pin-Cotter	40	135-5505	1	Mount-Speedometer
17	135-5957	1	Wire-Agitator	41	135-6279	1	Decal-Hopper Control
18	142-1990	1	Base-Hopper, 120	42	135-5931	2	Cable-Push/Pull
19	135-5943	1	Bearing-Flange	43	135-8483	1	Small Hopper Cover 120
20	135-6356	4	Screw-HH	44	135-8492	1	120Lb Hopper Cable
21	135-6342	4	Nut-Hex Flange	45	520-0019	1	Nut-Hex, Jam
22	126-0985	1	Mount-Dial	46	135-6221	2	Screw-HHF
23	126-0988	1	Dial				
24	126-0986	1	Clip				

Notes:

Notes:

