



Count on it.

Parts Catalog

Utility Task Vehicle

Model No. UTV700AAC000EP—Serial No. 4UF16MPV9GT309933
and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

 
TAP: self tapping

TTH: torx truss head

Contents


ACCELERATOR ASSEMBLY [301846]	1
AIR INTAKE ASSEMBLY [301849]	2
BATTERY AND STARTER MOTOR ASSEMBLY [301857]	4
CAM CHAIN ASSEMBLY [301861]	5
CARGO BOX AND TAILGATE ASSEMBLY [301833]	6
CASE/BELT COOLING ASSEMBLY [301852]	8
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY [301864]	9
CONSOLE, FLOOR PANEL & STORAGE BOX ASSEMBLY [301831]	11
COOLING ASSEMBLY [301851]	13
CRANK BALANCER ASSEMBLY [301866]	15
CRANKCASE ASSEMBLY [301862]	16
CRANKSHAFT AND PISTON ASSEMBLY [301863]	18
CYLINDER ASSEMBLY [301859]	19
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY [301874]	20
DASH ASSEMBLY [301838]	22
DRIVE TRAIN ASSEMBLY [301853]	24
ENGINE AND EXHAUST [301850]	26
FRAME AND RELATED PARTS [301835]	28
FRONT DRIVE GEARCASE ASSEMBLY [301854]	30
FRONT SUSPENSION ASSEMBLY [301841]	32
GAS TANK ASSEMBLY [301847]	34
GEAR SHIFTING ASSEMBLY [301871]	36
HOOD AND HEADLIGHT ASSEMBLY [301829]	38
HYDRAULIC BRAKE ASSEMBLY [301845]	40
MAGNETO ASSEMBLY [301873]	42
OIL FILTER/PUMP ASSEMBLY [301867]	43
REAR DRIVE GEARCASE ASSEMBLY [301855]	44
REAR SUSPENSION ASSEMBLY [301842]	46
ROPS AND TAILLIGHT ASSEMBLY [301837]	48
SEAT ASSEMBLY [301836]	50
SECONDARY DRIVE ASSEMBLY [301872]	52
SECONDARY TRANSMISSION ASSEMBLY [301870]	54
SHIFTER ASSEMBLY [301848]	56
STARTER CLUTCH ASSEMBLY [301865]	57
STEERING ASSEMBLY [301839]	58
SWAY BAR ASSEMBLY [301843]	60
THROTTLE BODY ASSEMBLY [301858]	61
TILT FRAME ASSEMBLY [301832]	63
TRANSMISSION ASSEMBLY [301869]	65
WATER PUMP ASSEMBLY [301868]	67
WHEEL AND TIRE ASSEMBLY [301844]	68
WIRING HARNESS ASSEMBLY [301856]	69

ACCELERATOR ASSEMBLY [301846]

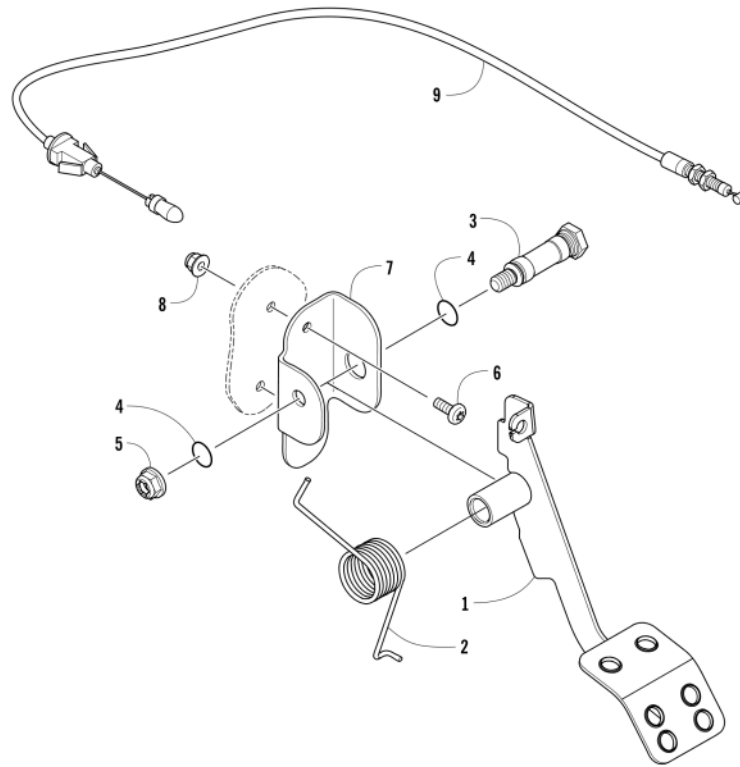

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2692		1	Pedal, Accelerator		
2	132-1811		1	Spring		
3	132-1784		1	Axle		
4	132-2703		2	O-Ring		
5	132-3077		1	Nut, Lock		
6	132-3113		2	Screw, Machine		
7	132-2041		1	Bracket, Accelerator Pedal		
8	130-8129		2	Nut, Lock		
9	132-3259		1	Cable, Throttle		

 
AIR INTAKE ASSEMBLY [301849]

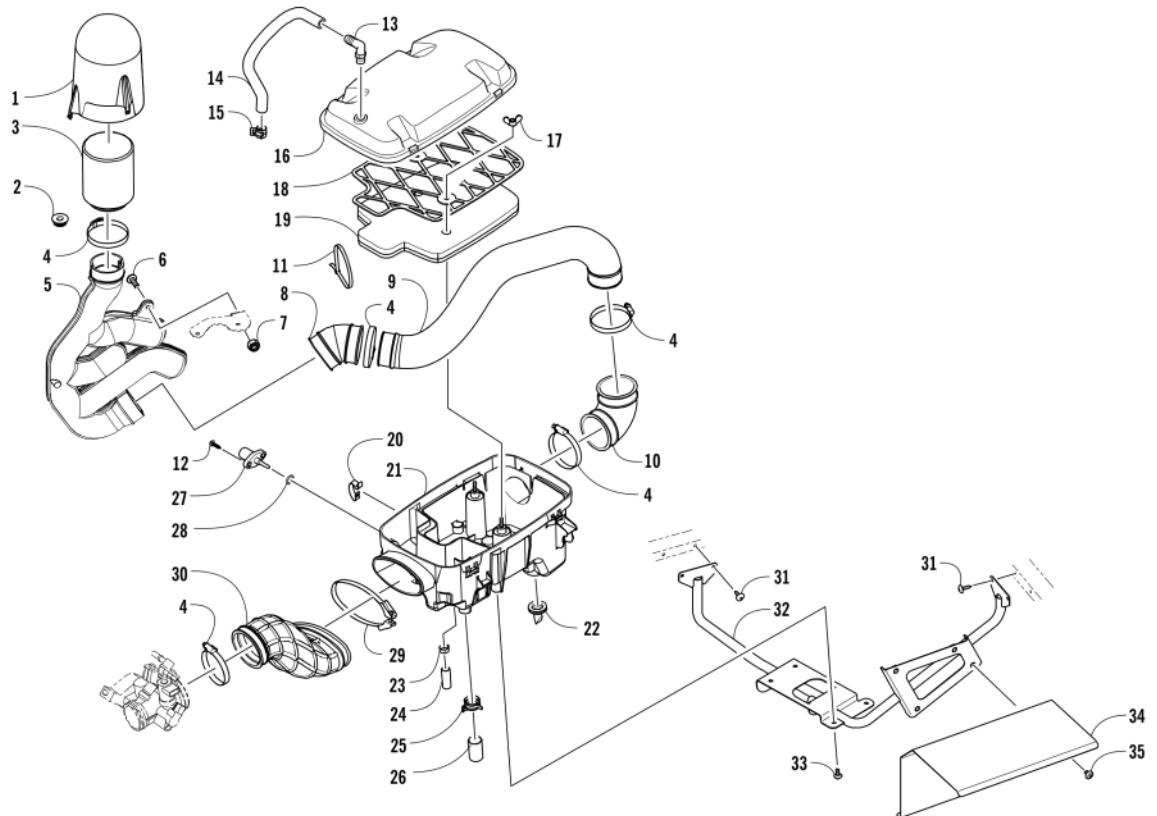

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2672		1	Filter Cover		
2	132-1950		3	Grommet		
3	132-2010		1	Filter, Intake		
4	132-1891		6	Clamp		
5	132-2076		1	Duct, Intake		
6	132-3111		1	Screw, Machine		
7	132-3085		1	Nut, Lock		
8	132-1884		1	Boot, Intake		
9	132-2671		1	Duct, Intake		
10	132-1868		2	Boot, Intake		
11	132-1755		AR	Tie, Cable - 11.5 in.		
12	132-1907		2	Screw, Self-Tapping		
13	132-2016		1	Fitting, Elbow		
14	132-1842		1	Hose, Vent		
15	132-2710		1	Clamp, Hose		
16	132-2014		1	Cover, Air Intake		
17	130-8110		2	Nut, Locking - Wing		
18	132-2674		1	Screen, Air Fliter		
19	132-2673		1	Filter, Air		
20	132-1926		4	Clip, Spring		


Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-2087		1	Housing, Air Intake		
22	132-1997		1	Valve, Drain		
23	132-2092		1	Clamp, Hose		
24	132-2015		1	Cap, Drain		
25	132-2711		1	Clamp, Hose		
26	132-1954		1	Cap, Drain		
27	132-1973		1	Sensor, Air Temperature	(inc. 28)	
28	132-3031		1	O-Ring		
29	132-2641		1	Clamp		
30	132-2675		1	Boot, Intake		
31	132-2107		4	Screw, Self-Tapping		
32	132-2785		1	Mount, Airbox		
33	132-3089		4	Screw, Machine		
34	132-2020		1	Shield, Heat		
35	132-3112		4	Screw, Machine		

 BATTERY AND STARTER MOTOR ASSEMBLY [301857]

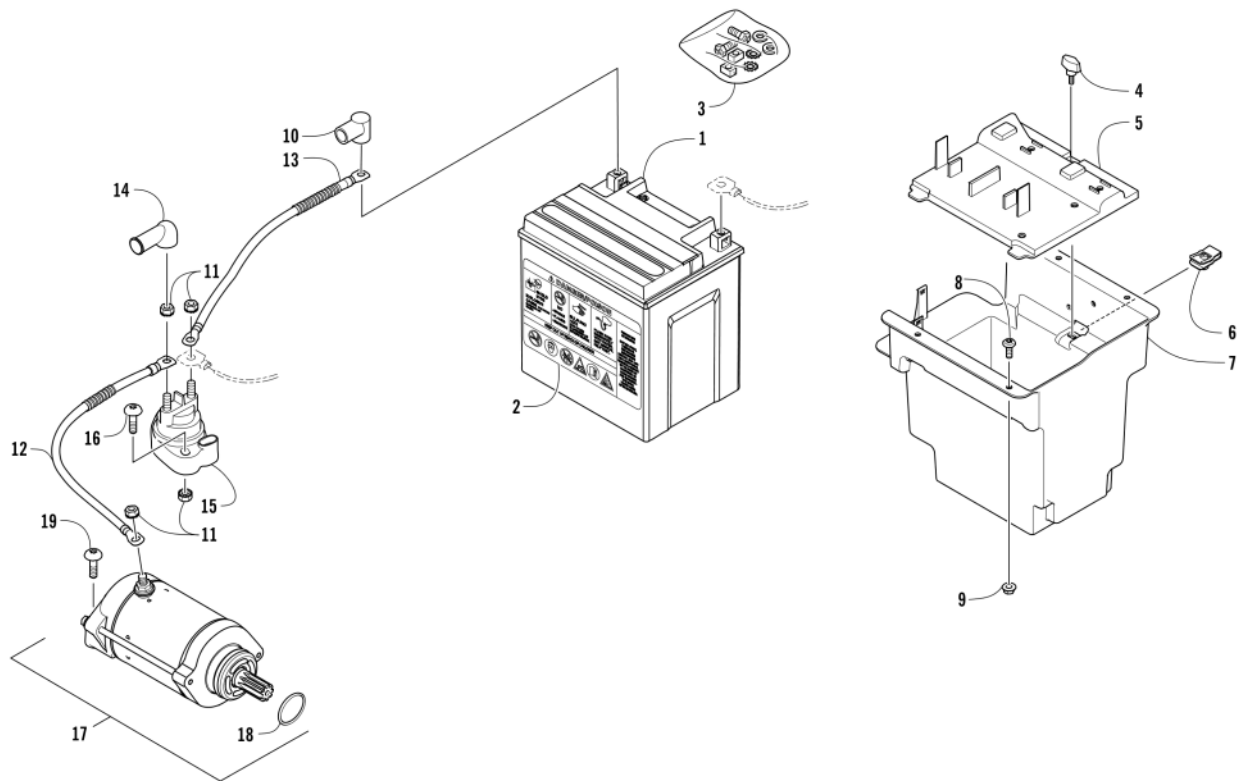


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-1996		1	Battery	(inc. 2-3)	
2	132-2114		2	Decal, Warning		
3	132-1995		1	Kit, Hardware		
4	132-2668		1	Screw, Thumb		
5	132-2957		1	Cover, Battery Box		
6	132-1942		1	Clip, U-Nut		
7	132-2728		1	Box, Battery		
8	132-3105		4	Screw, Machine		
9	132-3079		4	Nut		
10	132-2112		2	Boot, Terminal		
11	132-2094		4	Nut w/Washer		
12	132-1994		1	Cable, Solenoid/Starter		
13	132-3237		2	Cable, Battery/Solenoid		
14	132-2113		1	Boot, Terminal - Solenoid		
15	132-1993		1	Solenoid		
16	132-3107		2	Screw, Machine		
17	132-2353		1	Motor, Starter - Assembly	(inc. 18)	
18	132-2519		1	O-Ring		
19	132-3257		2	Screw, Cap		

 CAM CHAIN ASSEMBLY [301861]

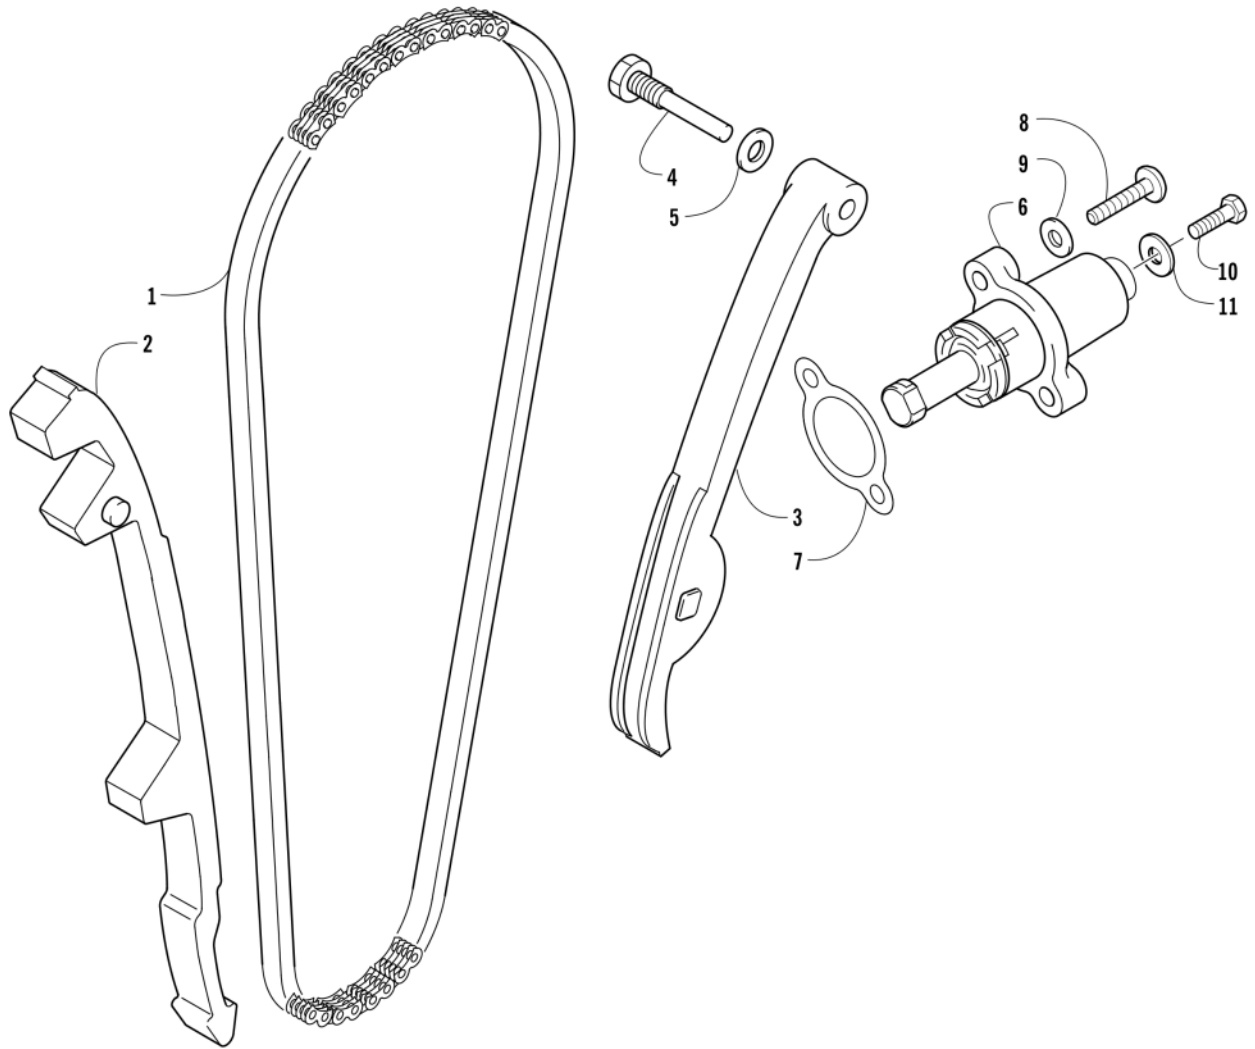

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2201		1	Chain, Cam		
2	132-2206		1	Guide, Chain		
3	132-2207		1	Tensioner, Chain		
4	132-2366		1	Pivot, Tensioner		
5	132-2472		1	Washer, Crush		
6	132-2202		1	Adjuster, Tensioner - Assembly		
7	132-2471		1	Gasket		
8	132-3092		2	Screw, Machine		
9	132-2484		2	Gasket		
10	132-3052		1	Screw, Cap		
11	132-2442		1	Washer		

 
CARGO BOX AND TAILGATE ASSEMBLY [301833]

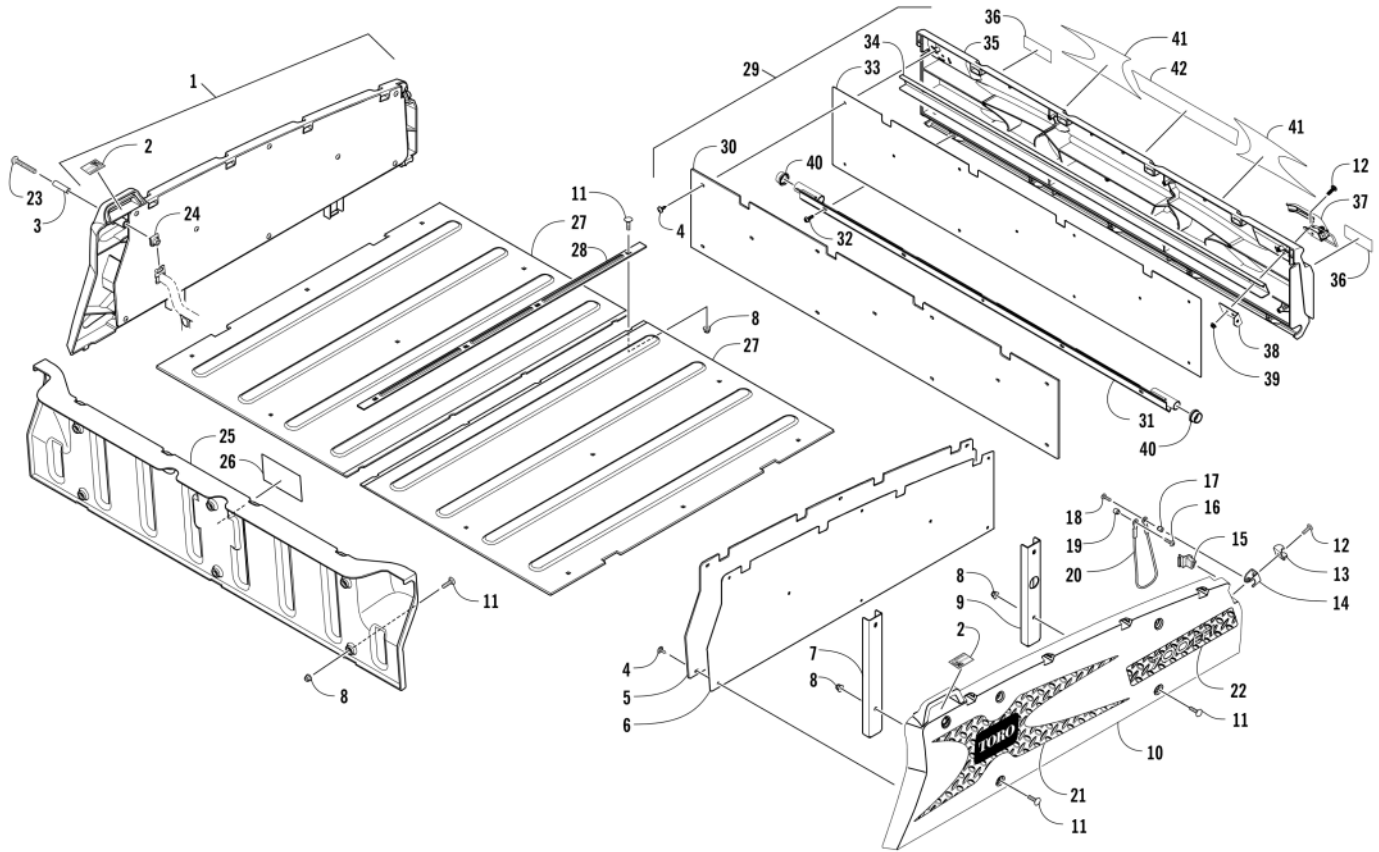

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	130-8126		1	Side, Cargo Box - Assembly - Right	(inc. 2-15)	
1	130-8127		1	Side, Cargo Box - Assembly - Left	(inc. 2-15)	
2	132-2975		2	Decal, Warning - Pinch Point		
3	132-2742		2	Spacer		
4	132-2628		27	Screw, Self-Tapping		
5	130-8125		2	Panel, Side - Inner		
6	132-2760		2	Pad, Foam		
7	132-2979		2	Brace, Support - Front		
8	132-3081		30	Nut, Lock		
9	132-2978		2	Brace, Support - Rear		
10	132-2748		1	Side, Cargo Box - Right		
10	132-2749		1	Side, Cargo Box - Left		
11	132-1948		30	Bolt, Carriage		
12	132-2631		6	Screw, Machine		
13	132-2786		2	Bracket, Retaining - Latch		
14	132-2745		2	Bracket, Retaining - Cable		
15	132-2746		1	Insert, Panel - Right		
15	132-2747		1	Insert, Panel - Left		
16	132-3103		2	Screw, Machine		
17	132-2626		2	Spacer		


Item	Part No.	New Part	Qty	Name	Context	Footnote
18	130-8130		2	Screw, Machine		
19	130-8103		2	Spacer		
20	132-2028		2	Cable, Tailgate		
21	132-2995		1	Decal, Box - Forward - Right		
21	132-2996		1	Decal, Box - Forward - Left		
22	132-3002		1	Decal, Box - Rear - Right		
22	132-3003		1	Decal, Box - Rear - Left		
23	132-2627		2	Screw, Machine		
24	132-2744		2	Clip, U-Nut		
25	132-2967		1	Panel, Front		
26	130-8114		1	Decal, Warning - Cargo Box		
27	132-2751		2	Panel, Lower		
28	132-2795		1	Bracket, Retaining - Lower Panel		
29	132-2987		1	Tailgate Assembly	(inc. 30-39)	
30	132-2986		1	Panel, Tailgate - Inner		
31	132-2989		1	Shaft, Pivot - Tailgate		
32	132-2642		5	Screw, Self-Tapping		
33	132-2761		1	Pad, Foam		
34	132-2762		1	Brace, Support		
35	132-2750		1	Panel, Tailgate - Outer		
36	132-2730		2	Decal, Reflector - Red		
37	132-2789		2	Latch, Tailgate - Assembly		
38	132-2743		2	Bracket, Support - Latch		
39	132-3079		4	Nut		
40	132-2737		2	Bushing		
41	132-2999		1	Decal, Tailgate - Right		
41	132-3000		1	Decal, Tailgate - Left		
42	132-3001		1	Decal, Tailgate - Center		

 CASE/BELT COOLING ASSEMBLY [301852]

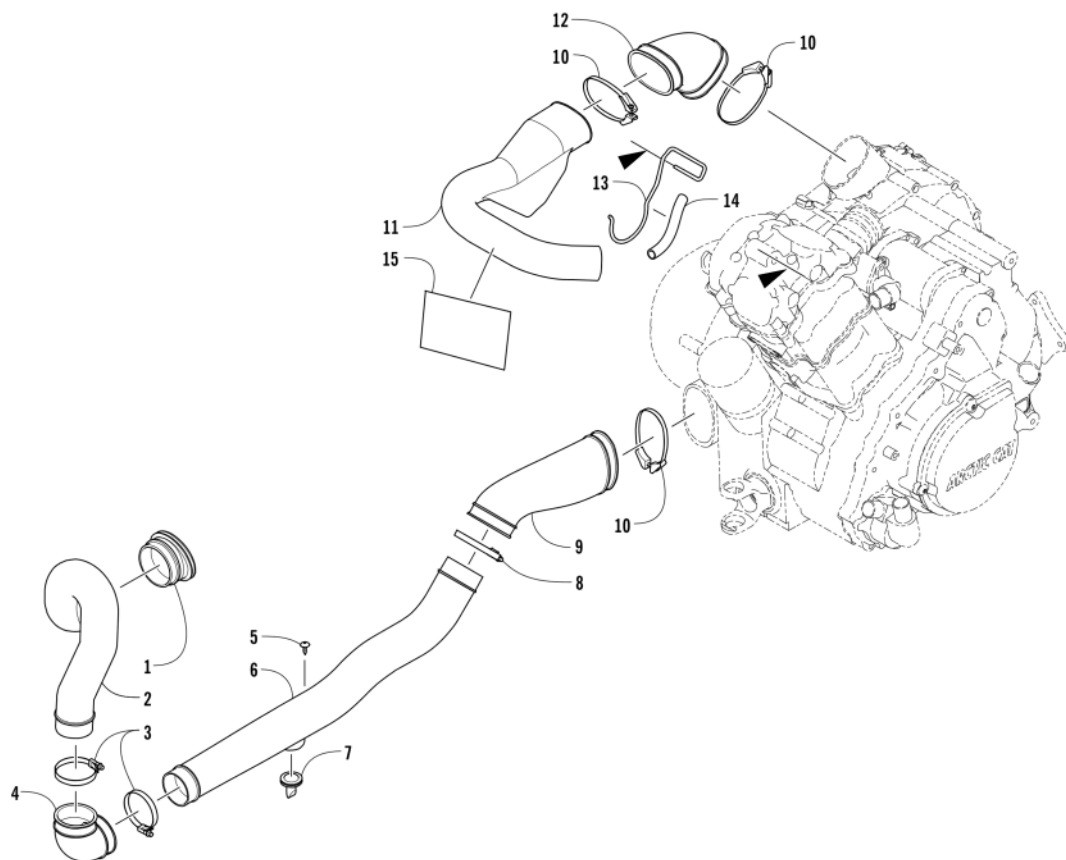

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2735		1	Boot, Air-In		
2	132-1879		1	Duct, Air-In		
3	132-1891		2	Clamp		
4	132-1868		1	Boot, Intake		
5	132-2107		1	Screw, Self-Tapping		
6	132-1875		1	Duct, Air-In		
7	132-1997		1	Valve, Drain		
8	132-1890		1	Clamp		
9	132-1878		1	Boot, Air-In		
10	132-1953		3	Clamp		
11	132-1880		1	Duct, Air-Out		
12	132-1869		1	Duct, Air-Out		
13	132-1881		1	Wire Form, Support		
14	132-2091		AR	Hose - 25 ft		
15	130-8121		AR	Foil		

 
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY [301864]

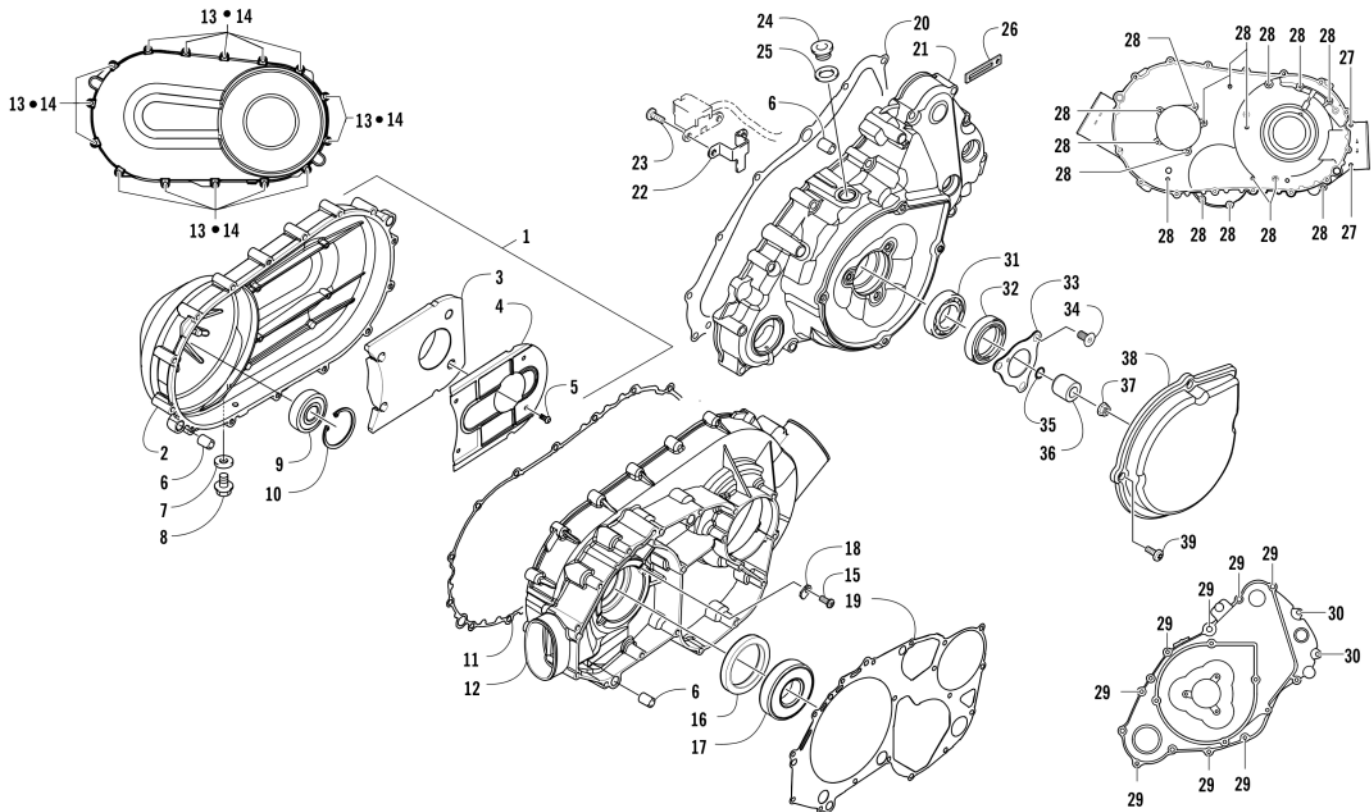

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2161		1	Cover, V-Belt Assembly	(inc. 2-5)	
2	132-2164		1	Cover, V-Belt - Black		
3	132-2162		1	Dampener, Pad		
4	132-2163		1	Retainer, Cover Dampener		
5	132-2653		1	Screw, Machine		
6	132-2446		6	Pin, Dowel		
7	132-2468		1	Washer, Crush		
8	132-3056		1	Screw, Cap		
9	132-2554		1	Bearing		
10	132-2531		1	Ring, Retaining		
11	132-2535		1	Gasket, V-Belt Cover		
12	132-3206		1	Cover, Clutch		
13	132-2445		15	Washer		
14	132-2390		15	Screw, Machine		
15	132-2362		2	Screw, Machine		
16	132-3210		1	Seal		
17	132-2537		1	Bearing		
18	132-2284		2	Retainer, Bearing		
19	132-3211		1	Gasket, Clutch Cover		
20	132-2488		1	Gasket, Magneto Cover		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-3205		1	Cover, Magneto		
22	132-2135		1	Clamp, Routing		
23	132-3102		2	Screw, Machine		
24	132-2389		1	Plug		
25	132-2469		1	Washer, Crush		
26	132-2713		1	Clamp, Routing		
27	132-3222		2	Screw, Machine		
28	132-3221		16	Screw, Machine		
29	132-3093		8	Screw, Machine		
30	132-3092		2	Screw, Machine		
31	132-2704		1	Bearing		
32	132-2518		1	Seal		
33	132-2140		1	Retainer, Seal		
34	132-2363		3	Screw, Machine		
35	132-2485		1	O-Ring		
36	132-2281		1	Bushing		
37	132-2392		1	Nut		
38	132-2159		1	Cover, Magneto		
39	132-3090		4	Screw, Machine		

 
CONSOLE, FLOOR PANEL & STORAGE BOX ASSEMBLY [301831]

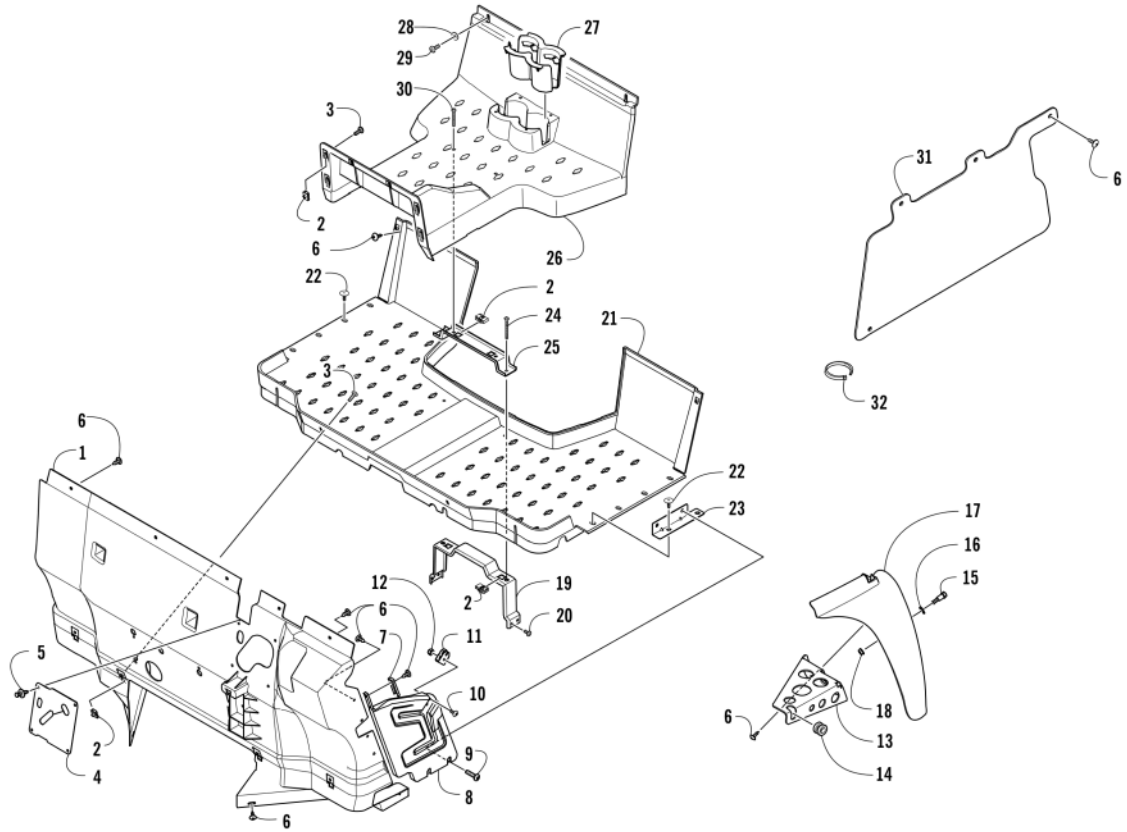

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2793		1	Panel, Fender - Inner		
2	132-1942		17	Clip, U-Nut		
3	132-1945		10	Screw, Machine		
4	132-1815		1	Seal, Steering Column		
5	132-2101		4	Rivet, Reinstallable		
6	132-2107		32	Screw, Self-Tapping		
7	132-2988		2	Cap, Reinforcement		
8	132-2764		2	Panel, Side		
9	132-3092		4	Screw, Machine		
10	132-1922		4	Screw, Machine		
11	132-2763		2	Latch, Side Restraint		
12	132-2096		4	Nut, Lock		
13	132-2773		1	Bracket, Support - Right		
13	132-2774		1	Bracket, Support - Left		
14	132-1925		2	Grommet		
15	132-2109		2	Screw, Shoulder		
16	132-3049		2	Washer		
17	132-2970		1	Fender, Front - Right - Red		
17	132-2971		1	Fender, Front - Left - Red		
18	132-3048		2	Nut, Lock		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-2780		1	Bracket, Support		
20	132-3105		4	Screw, Machine		
21	130-8118		1	Floor		
22	132-1936		8	Screw, Shoulder		
23	132-2980		1	Bracket, Side Panel - Right		
23	132-2981		1	Bracket, Side Panel - Left		
24	132-3098		2	Screw, Machine		
25	132-2756		1	Bracket, Support - Center Footrest		
26	132-2754		1	Footrest, Center		
27	132-2736		1	Insert, Cupholder		
28	132-3087		2	Washer		
29	132-3108		2	Screw, Machine		
30	132-3096		2	Screw, Machine		
31	132-2966		2	Panel,Splash - Rear		
32	132-1753		AR	Tie, Cable - 8 in.		

 
COOLING ASSEMBLY [301851]

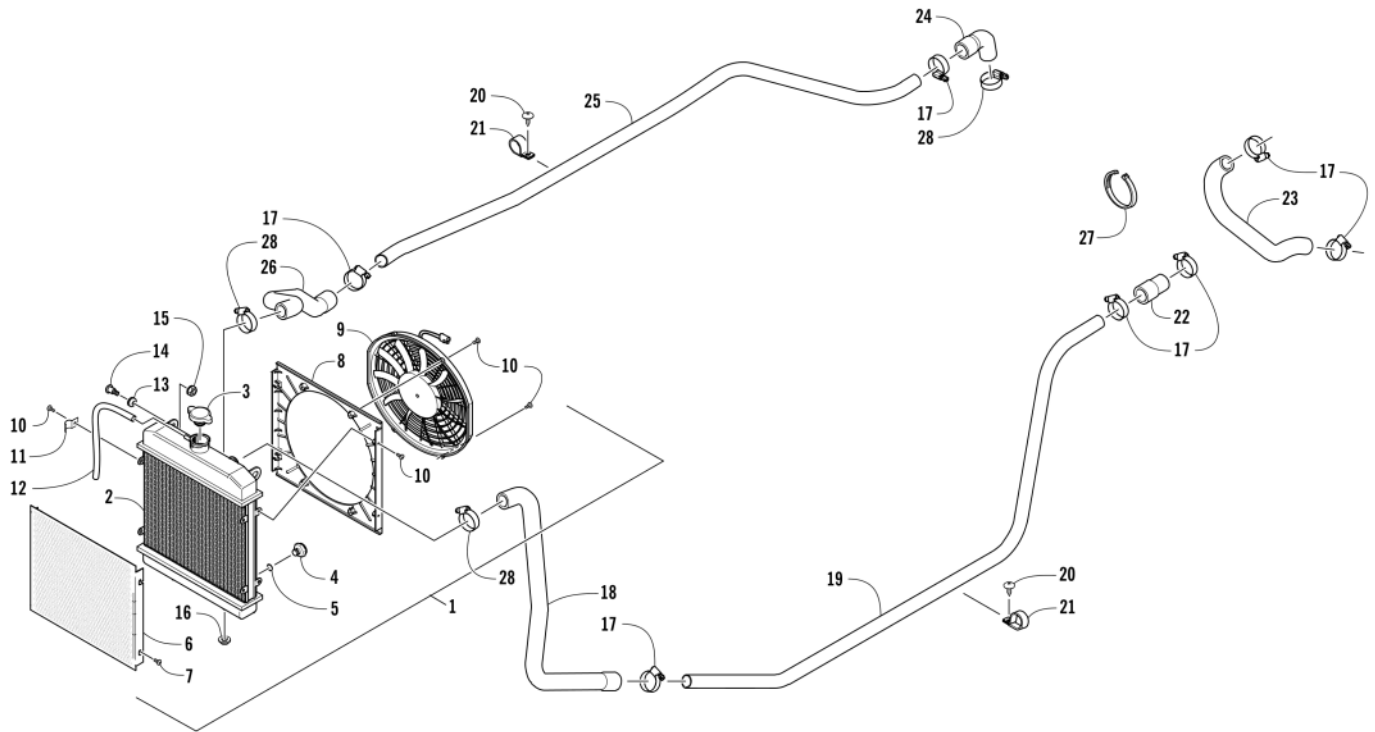

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-1877		1	Radiator - Assembly	(inc. 2-13)	
2	132-1873		1	Radiator		
3	132-1876		1	Cap, Radiator		
4	132-1871		1	Plug, Drain		
5	132-2703		1	O-Ring		
6	132-1867		1	Screen, Radiator		
7	132-3104		4	Screw, Machine		
8	132-1872		1	Shroud, Fan		
9	132-1870		1	Fan, Cooling		
10	132-2102		8	Screw, Self-Tapping		
11	132-1908		1	Clamp, Wire		
12	132-2090		AR	Hose - 25 ft		
12	132-2089		AR	Hose - 100 ft		
13	132-1893		2	Grommet		
14	132-1927		2	Screw, Shoulder		
15	132-2094		2	Nut w/Washer		
16	132-1892		2	Bushing, Stem		
17	132-1930		7	Clamp, Hose		
18	132-1834		1	Hose, Coolant - Upper Radiator		
19	132-1839		1	Pipe, Coolant - Upper		


Item	Part No.	New Part	Qty	Name	Context	Footnote
20	132-2107		2	Screw, Self-Tapping		
21	132-1943		2	Clamp, Routing		
22	132-1841		1	Hose, Coolant - Pipe/Thermostat Cover		
23	132-1836		1	Hose, Coolant - Rear		
24	132-1837		1	Hose, Coolant		
25	132-1840		1	Pipe, Coolant - Lower		
26	132-1835		1	Hose, Coolant - Lower Radiator		
27	132-2106		AR	Tie, Cable - Reusable		
28	132-1928		3	Clamp, Hose		

 CRANK BALANCER ASSEMBLY [301866]

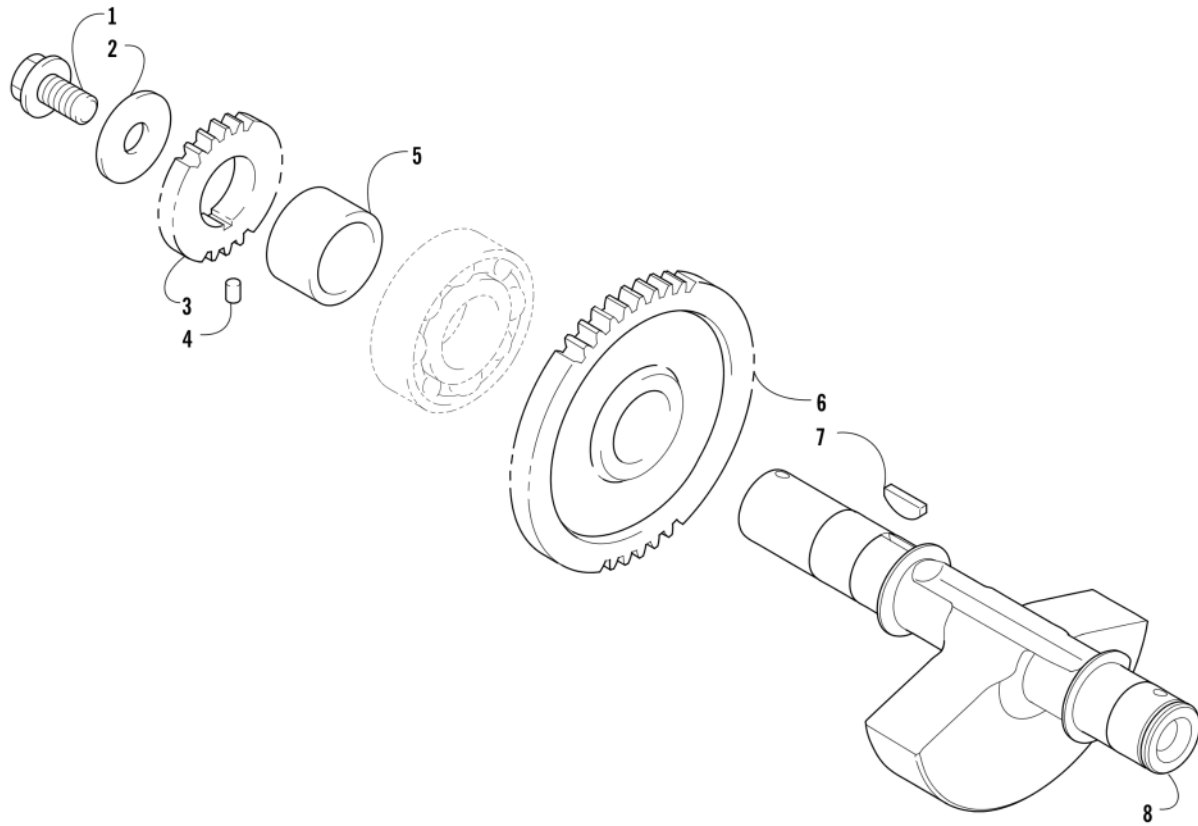

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2364		1	Screw, Cap		
2	132-2406		1	Washer		
3	132-2208		1	Gear, Oil Pump Drive		
4	132-2449		1	Pin, Dowel		
5	132-2209		1	Spacer		
6	132-2212		1	Gear, Driven		
7	132-2448		1	Key		
8	132-2147		1	Balancer, Crank		

 
CRANKCASE ASSEMBLY [301862]

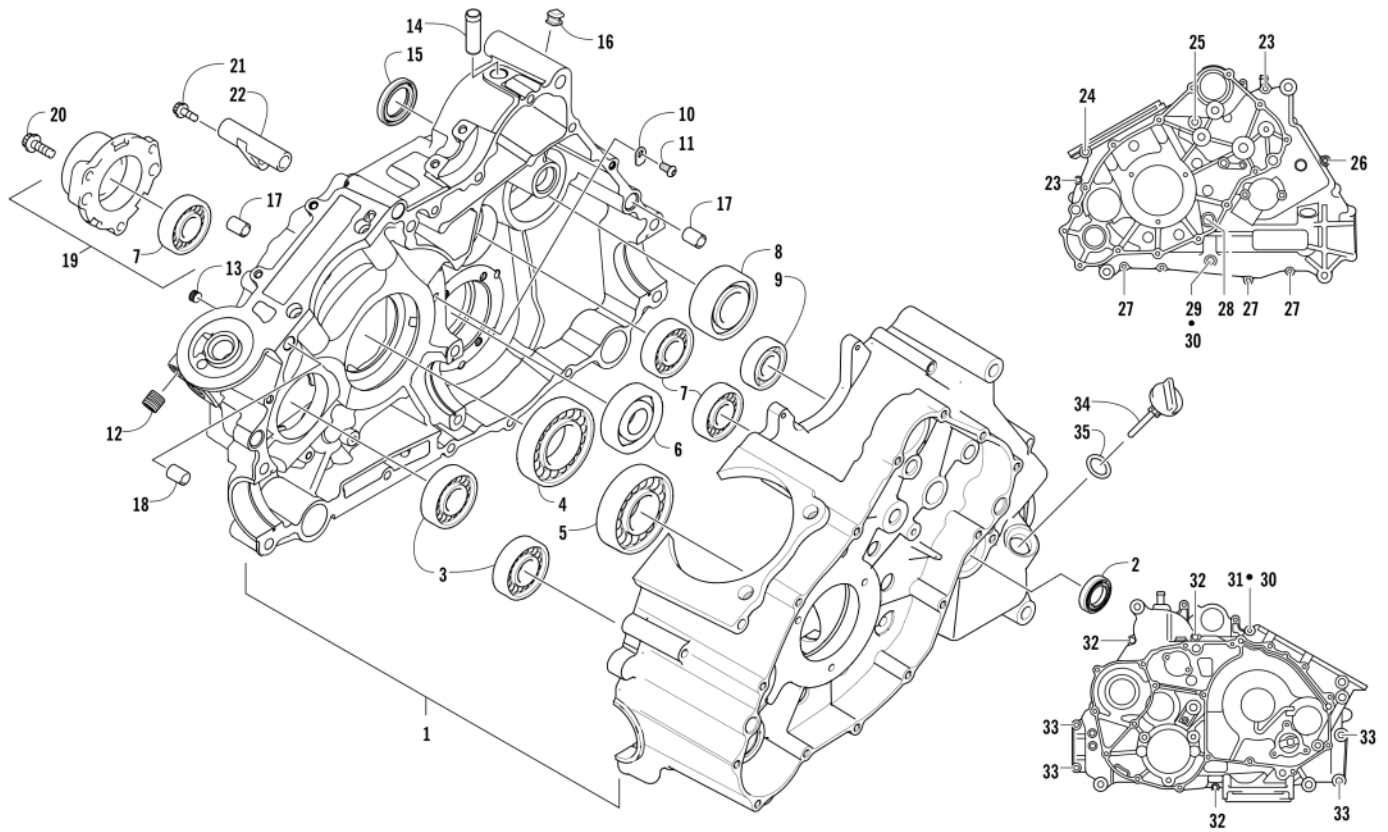

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2123		1	Crankcase Assembly	(inc. 2-15)	
2	132-2294		1	Seal, Countershaft		
3	132-2536		2	Bearing		
4	132-2547		1	Bearing		
5	132-2548		1	Bearing		
6	132-2558		1	Bearing		
7	132-2552		3	Bearing		
8	132-2550		1	Bearing		
9	132-2551		1	Bearing		
10	132-2284		4	Retainer, Bearing		
11	132-2376		4	Screw, Machine		
12	132-2226		2	Plug		
13	132-2117		1	Plug		
14	132-2119		1	Pipe, Breather		
15	132-2475		1	Seal, Driveshaft		
16	132-2516		1	Grommet		
17	132-2446		5	Pin, Dowel		
18	132-2447		1	Pin, Dowel		
19	132-2120		1	Housing, Secondary Shaft	(inc. one No. 7)	


Item	Part No.	New Part	Qty	Name	Context	Footnote
20	132-2377		3	Screw, Cap		
21	132-2367		1	Screw, Cap		
22	132-2121		1	Pipe, Breather		
23	132-3099		2	Screw, Machine		
24	132-3258		1	Screw, Machine		
25	132-3100		1	Screw, Machine		
26	132-3101		1	Screw, Machine		
27	132-3095		3	Screw, Machine		
28	132-2359		1	Screw, Cap		
29	132-3075		1	Screw, Cap		
30	132-2466		2	Gasket		
31	132-2360		1	Screw, Cap		
32	132-3096		3	Screw, Machine		
33	132-3074		4	Screw, Cap		
34	132-2122		1	Stick, Oil Level		
35	132-2467		1	O-Ring		

 CRANKSHAFT AND PISTON ASSEMBLY [301863]

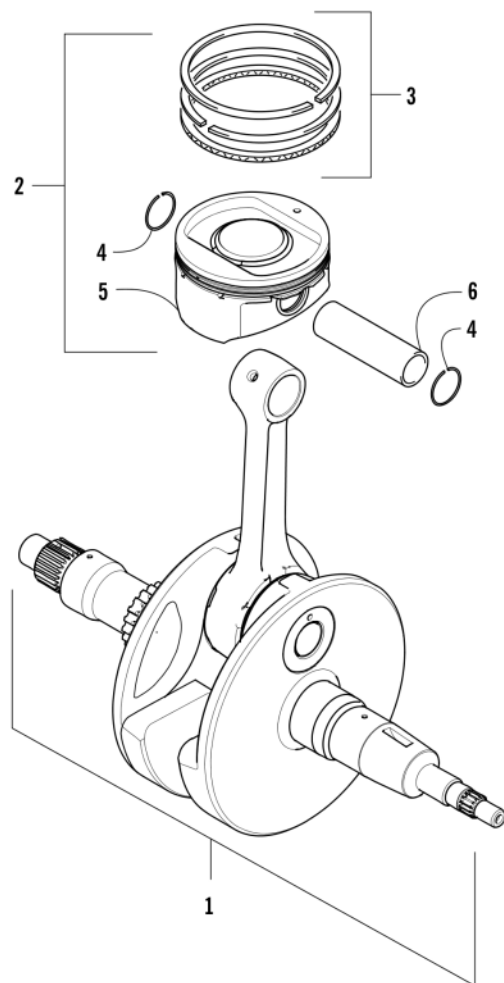


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2149		1	Crankshaft Assembly		
2	132-2146		1	Piston Set	(inc. 3-6)	
3	132-2144		1	Ring, Piston - Set		
4	132-2520		2	Circlip, Piston Pin		
5	0		1	Piston		Not Serviced Individually
6	132-2145		1	Pin, Piston		

 CYLINDER ASSEMBLY [301859]

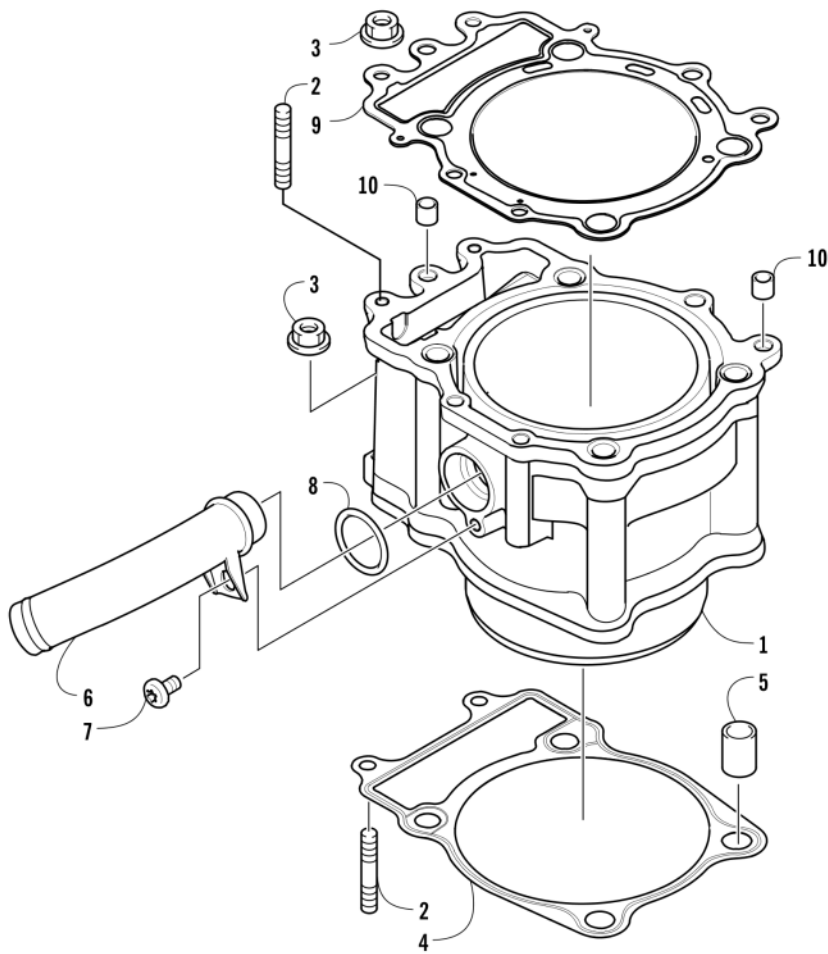

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2139		1	Cylinder		
2	132-2391		4	Bolt, Stud		
3	132-3080		4	Nut		
4	132-2486		1	Gasket, Base		
5	132-2446		2	Pin, Dowel		
6	132-2137		1	Union, Coolant Hose		
7	132-3089		1	Screw, Machine		
8	132-2465		1	O-Ring		
9	132-2517		1	Gasket, Cylinder Head		
10	132-2463		2	Pin, Dowel		

 
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY [301874]

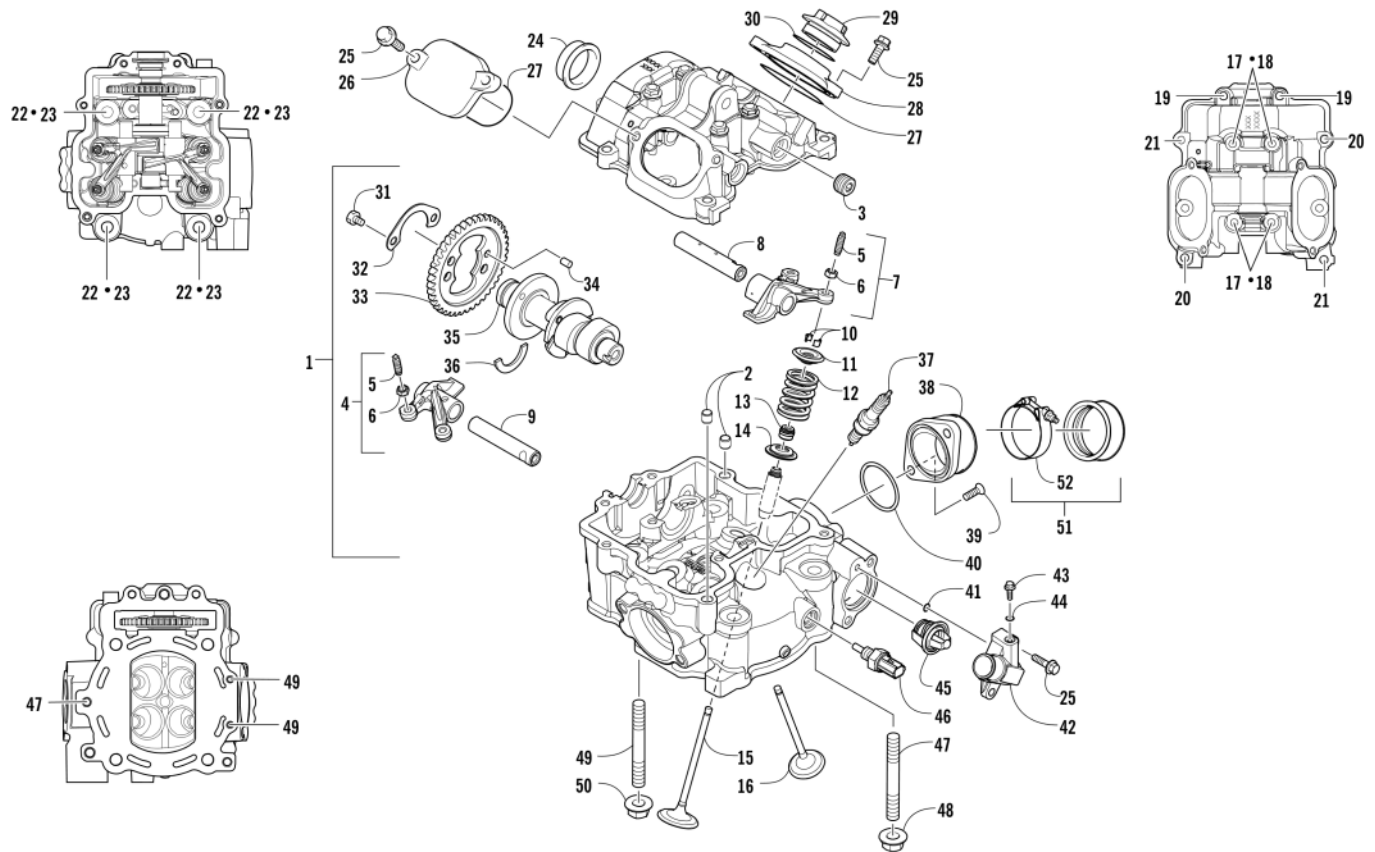

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2174		1	Head, Cylinder - Assembly	(inc. 2-17)	
2	132-2463		2	Pin, Dowel		
3	132-2534		2	Plug, Shaft		
4	132-2200		1	Arm, Valve Rocker - Exhaust	(inc. two No. 5-6)	
5	132-2188		4	Screw, Adjuster		
6	132-2404		4	Nut		
7	132-2199		1	Arm, Valve Rocker - Intake	(inc. two No. 5-6)	
8	132-2189		1	Shaft, Rocker Arm - Intake		
9	132-2190		1	Shaft, Rocker Arm - Exhaust		
10	132-2187		8	Cotter, Valve		
11	132-2186		4	Retainer, Spring		
12	132-2185		4	Spring, Valve		
13	132-2504		4	Seal, Oil		
14	132-3247		4	Seat, Spring - Valve		
15	132-2183		2	Valve, Intake		
16	132-2184		2	Valve, Exhaust		
17	132-2386		4	Screw, Cap		
18	132-2496		4	Gasket		
19	132-2354		2	Screw, Cap		
20	132-2355		2	Screw, Cap		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-2356		2	Screw, Cap		
22	132-2166		4	Screw, Cap		
23	132-2494		4	Washer		
24	132-2167		1	Plug, Cylinder Head		
25	132-2357		6	Screw, Cap		
26	132-2165		1	Cap, Inspection		
27	132-2464		2	O-Ring		
28	132-2172		1	Cap, Inspection		
29	132-2236		1	Plug, Oil Fill		
30	132-2515		1	O-Ring		
31	132-2365		2	Screw, Cap		
32	132-2407		1	Plate, Retainer		
33	132-2181		1	Sprocket		
34	132-2460		1	Pin, Dowel		
35	132-2191		1	Camshaft		
36	132-2176		1	C-Ring		
37	132-1759		1	Spark Plug - CPR8E		
38	132-2001		1	Flange, Intake Manifold		
39	132-2358		2	Screw, Machine		
40	132-2483		1	O-Ring		
41	132-2500		1	O-Ring		
42	132-2173		1	Cover, Thermostat	(inc. 43-44)	
43	132-3054		1	Screw, Cap		
44	132-1905		1	O-Ring		
45	132-2168		1	Thermostat		
46	132-2170		1	Switch, Engine Coolant Temperature		
47	132-2399		1	Bolt, Stud		
48	132-3082		1	Nut		
49	132-2398		2	Bolt, Stud		
50	132-3080		2	Nut		
51	132-1987		1	Boot	(inc. 52)	
52	132-2633		1	Clamp, Manifold		

 
DASH ASSEMBLY [301838]

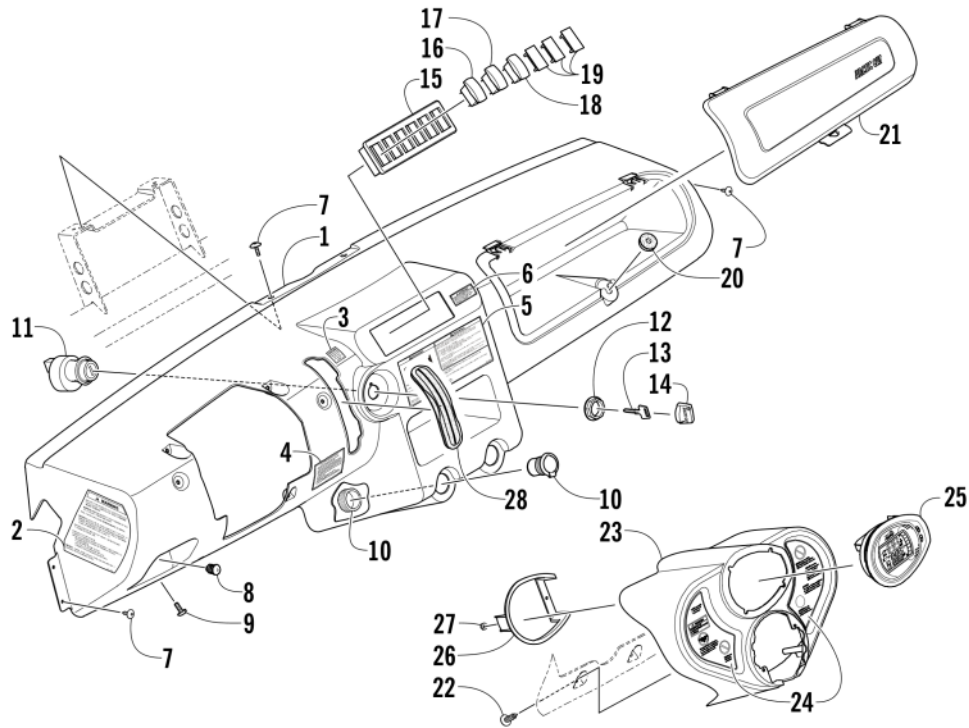

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	130-8115		1	Panel, Dash		
2	132-2973		1	Decal, Warning - Dash Side		
3	132-2733		1	Decal, Caution - Engine RPM		
4	132-2732		1	Decal, Starting		
5	132-2953		1	Decal, Warning - Dash Center		
6	132-2624		1	Decal, Warning - Differential Lock		
7	132-2107		8	Screw, Self-Tapping		
8	132-2712		1	Plug, Hole		
9	132-1945		3	Screw, Machine		
10	132-2111		2	Outlet, Accessory - 12V		
11	132-3241		1	Switch, Ignition	(inc. 12-14)	
12	132-3243		1	Nut, Retaining		
13	132-3235		1	Key, Ignition		
13	132-3236		1	Key, Ignition		
14	132-3244		1	Cover, Key		
15	132-1832		1	Panel, Switch - Mount		
16	132-1826		1	Switch, Light		
17	132-1824		1	Switch, 2WD/4WD/Differential Lock		
18	132-1828		1	Switch, Reverse Override		
19	132-1827		3	Plug, Switch Hole		

Item	Part No.	New Part	Qty	Name	Context	Footnote
20	132-1935		1	Grommet, Latch - Glove Box		
21	132-2972		1	Cover, Glove Box		
22	132-1907		6	Screw, Self-Tapping		
23	130-8106		1	Pod, Instrument		
24	130-8112		1	Decal, Warning - Dash - Right		
24	130-8111		1	Decal, Warning - Dash - Left		
25	132-2078		1	Gauge, Analog LCD		
26	132-1888		1	Bracket, Retaining		
27	132-1929		2	Nut w/Washer		
28	132-1989		1	Boot, Shift		

 
DRIVE TRAIN ASSEMBLY [301853]

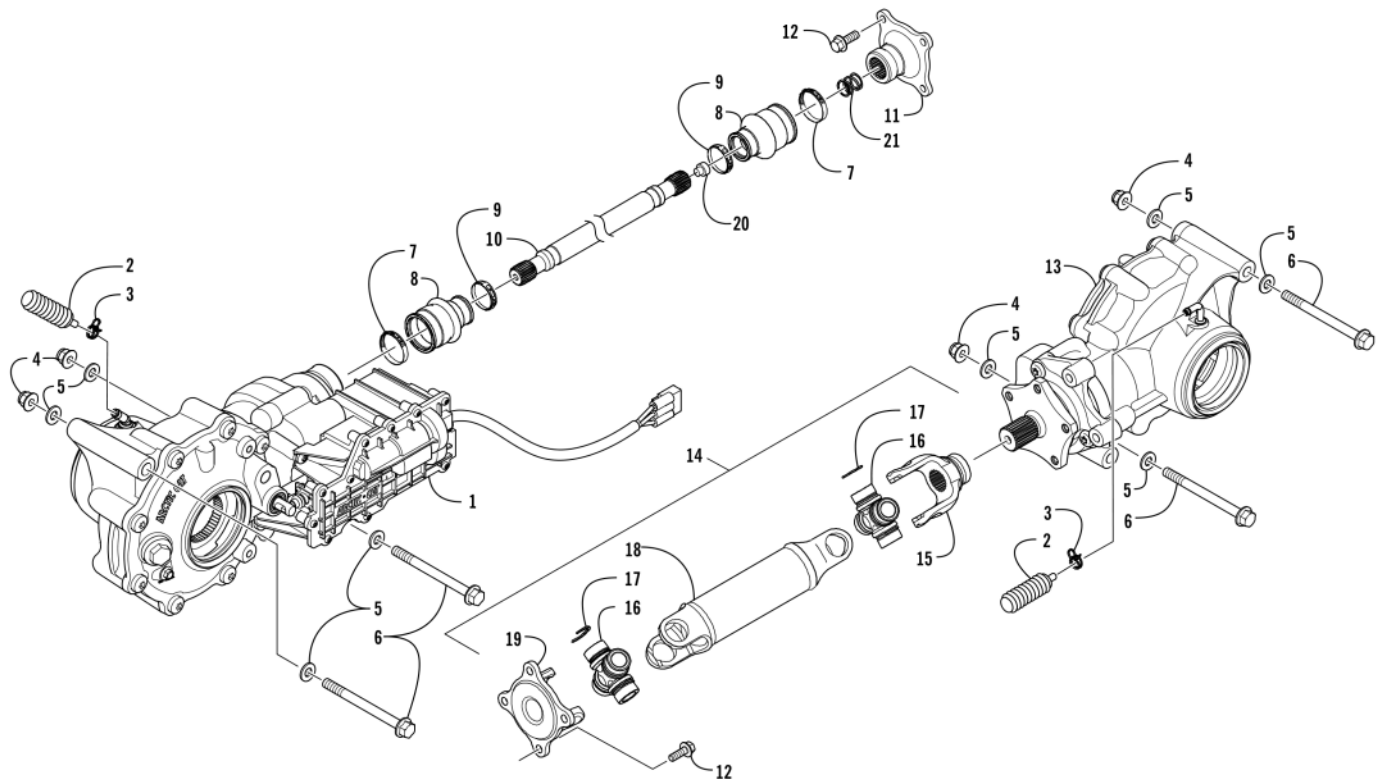

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2769		1	Front Drive Gearcase		
2	132-2593		2	Bladder, Gearcase		
3	132-1906		2	Clamp, Hose		
4	130-8102		4	Nut, Lock		
5	132-1924		8	Washer		
6	132-1916		4	Screw, Cap		
7	132-1912		2	Clamp		
8	132-1790		2	Boot		
9	132-1919		2	Clamp		
10	130-8105		1	Shaft, Propeller - Front		
11	132-1787		1	Flange, Output		
12	132-3057		8	Screw, Cap		
13	132-2770		1	Rear Drive Gearcase		
14	132-2687		1	Driveshaft, Rear - Assembly	(inc. 15-19)	
15	132-2592		1	Yoke, Slip		
16	132-1785		2	Joint, Universal	(inc.17)	
17	132-1913		8	Ring, Retaining		
18	132-2686		1	Driveshaft, Rear		
19	132-2595		1	Yoke, Flange		
20	132-3245		1	Bumper		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-3248		1	Spring		

 
ENGINE AND EXHAUST [301850]

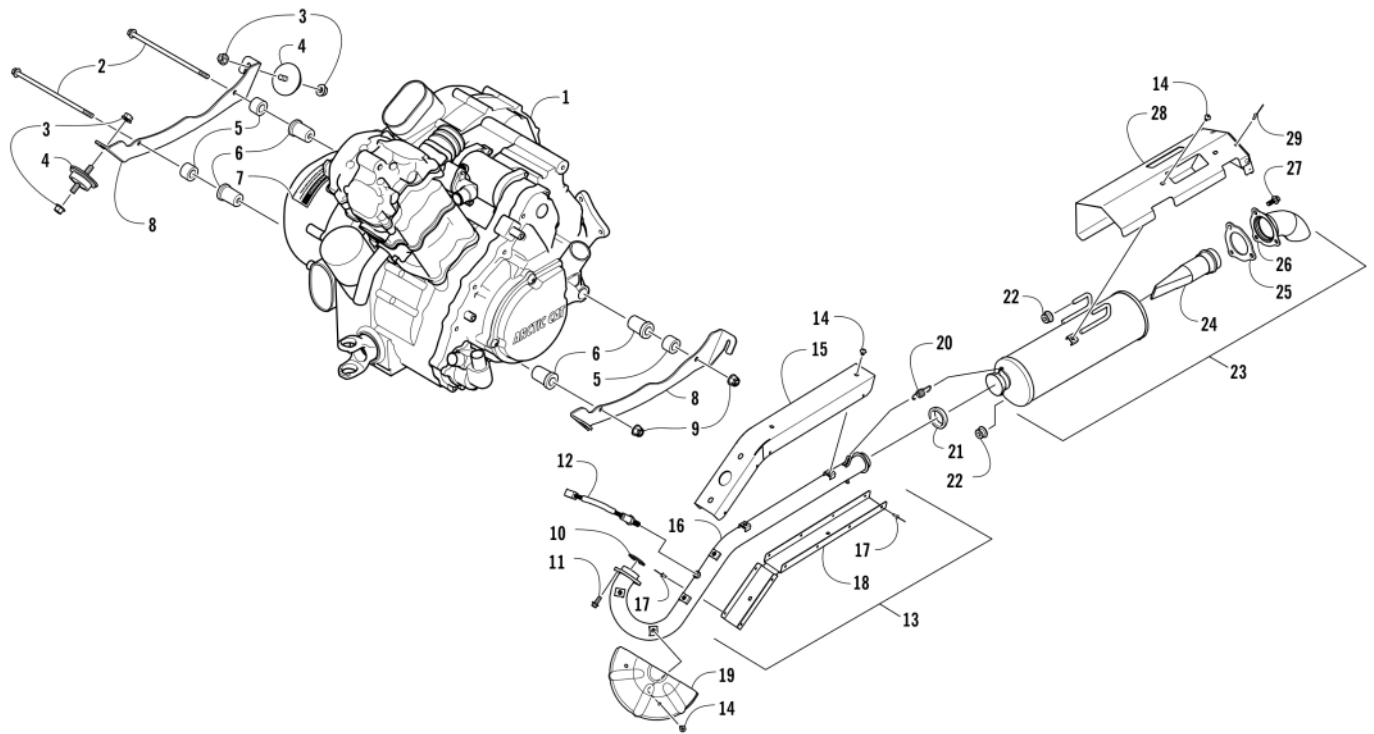

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2116		1	Engine, A700L		
2	132-2639		2	Screw, Cap		
3	132-3078		8	Nut		
4	132-1820		4	Mount, Engine		
5	132-2630		3	Spacer		
6	132-3246		4	Bushing		
7	132-1850		1	Decal, Warning		
8	132-2790		1	Bracket, Engine - Right		
8	132-2791		1	Bracket, Engine - Left		
9	130-8102		2	Nut, Lock		
10	132-1853		1	Gasket, Exhaust		
11	132-3057		2	Screw, Cap		
12	132-2110		1	Sensor, Oxygen		
13	132-2073		1	Pipe, Exhaust - Assembly	(inc. four No. 14 and 15-18)	
14	132-3112		11	Screw, Machine		
15	132-1858		1	Shield, Pipe - Upper Rear		
16	0		1	Pipe, Exhaust	Not Serviced Individually	
17	132-2708		12	Rivet		
18	132-1866		1	Shield, Pipe - Lower Front		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-2066		1	Shield, Pipe - Forward		
20	132-2093		2	Spring		
21	132-1854		1	Seal, Exhaust		
22	132-1855		3	Bushing		
23	132-2070		1	Muffler - Assembly	(inc. 24-27)	
24	132-2069		1	Spark Arrester Assembly		
25	132-1856		1	Gasket, Spark Arrester		
26	132-2072		1	Pipe, Tail		
27	132-3055		3	Screw, Cap		
28	132-2071		1	Shield, Heat - Muffler	(inc. 29)	
29	132-3051		3	Rivet		

 
FRAME AND RELATED PARTS [301835]

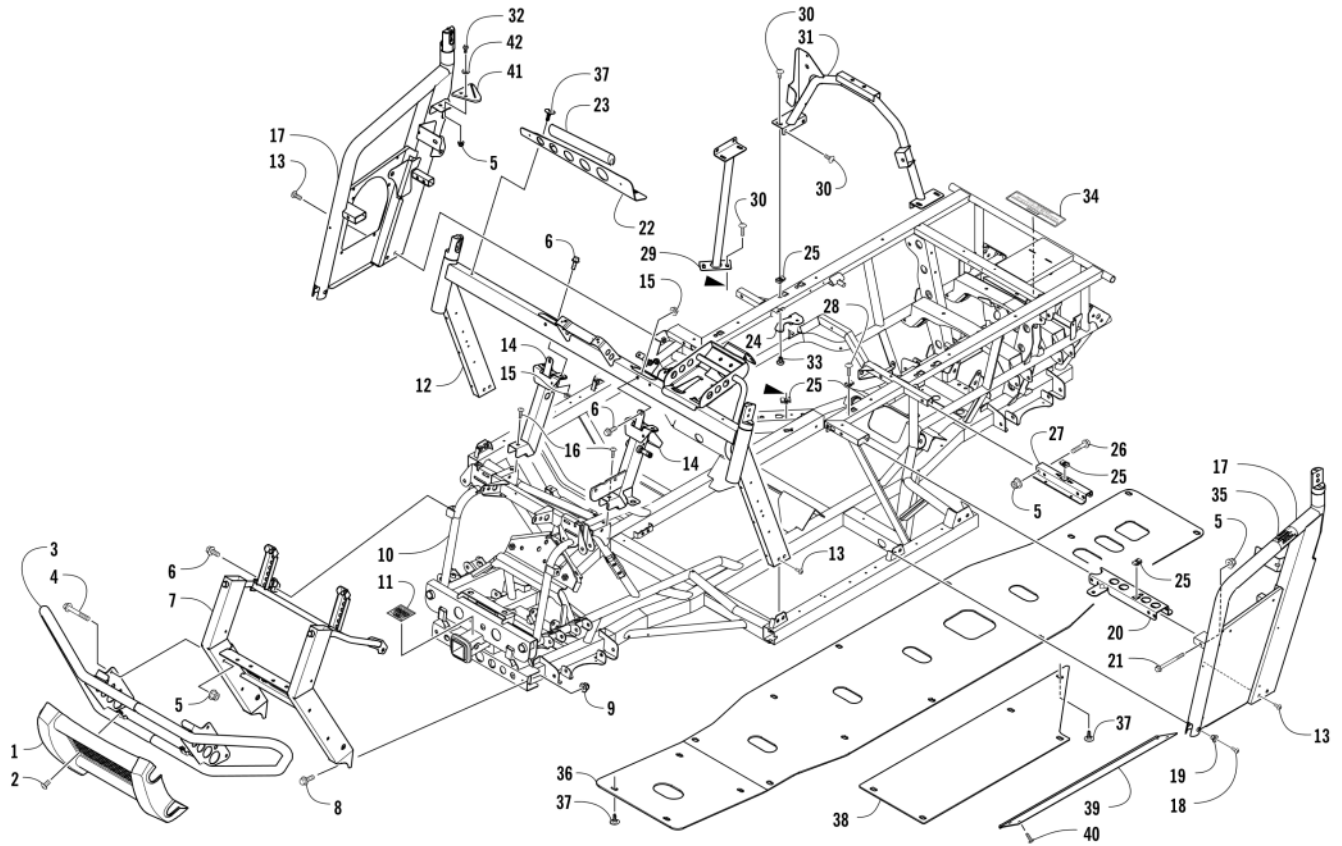

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2727		1	Fascia, Bumper - Front		
2	132-3113		4	Screw, Machine		
3	132-2777		1	Bumper		
4	132-3064		4	Screw, Cap		
5	132-3085		18	Nut, Lock		
6	132-3057		8	Screw, Cap		
7	132-2781		1	Bracket, Mounting - Bumper		
8	132-3068		2	Screw, Cap		
9	132-3083		2	Nut, Lock		
10	130-8131		1	Frame, Main		
11	132-2623		1	Decal, Warning - Towing - Front		
12	130-8116		1	Support, Steering		
13	132-1955		8	Screw, Machine		
14	132-2057		1	Bracket, Steering Support - Right		
14	132-2696		1	Bracket, Steering Support - Left		
15	132-3081		6	Nut, Lock		
16	132-3110		2	Screw, Machine		
17	132-3044		1	Support, Overhead - Right		
17	132-3045		1	Support, Overhead - Left		
18	132-1958		2	Screw, Machine		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-2636		2	Spacer		
20	132-2783		1	Bracket, Seat Support - Front - Right		
20	132-2784		1	Bracket, Seat Support - Front - Left		
21	132-3065		4	Screw, Cap		
22	132-2778		1	Bracket, Hood Support - Right		
22	132-2779		1	Bracket, Hood Support - Left		
23	132-1887		AR	Trim, Dash Support		
24	132-1885		1	Bracket, Air Intake		
25	132-1942		16	Clip, U-Nut		
26	132-3063		6	Screw, Cap		
27	132-2702		2	Bracket, Seat Support - Rear		
28	132-3114		4	Screw, Machine		
29	132-2792		1	Tube, Support		
30	132-3105		6	Screw, Machine		
31	130-8123		1	Support, ROPS		
32	132-3227		4	Screw, Cap		
33	132-1945		2	Screw, Machine		
34	132-2731		1	Decal, Warning - Towing - Rear		
35	132-2955		1	Decal, Warning - ROPS		
36	130-8117		1	Plate, Skid - Center		
37	132-1936		30	Screw, Shoulder		
38	132-2755		2	Panel, Belly - Side		
39	132-2776		2	Plate, Skid - Side		
40	132-2651		8	Screw, Self-Tapping		
41	132-3226		2	Guide, Seat Belt		
42	132-3050		4	Washer		

 
FRONT DRIVE GEARCASE ASSEMBLY [301854]

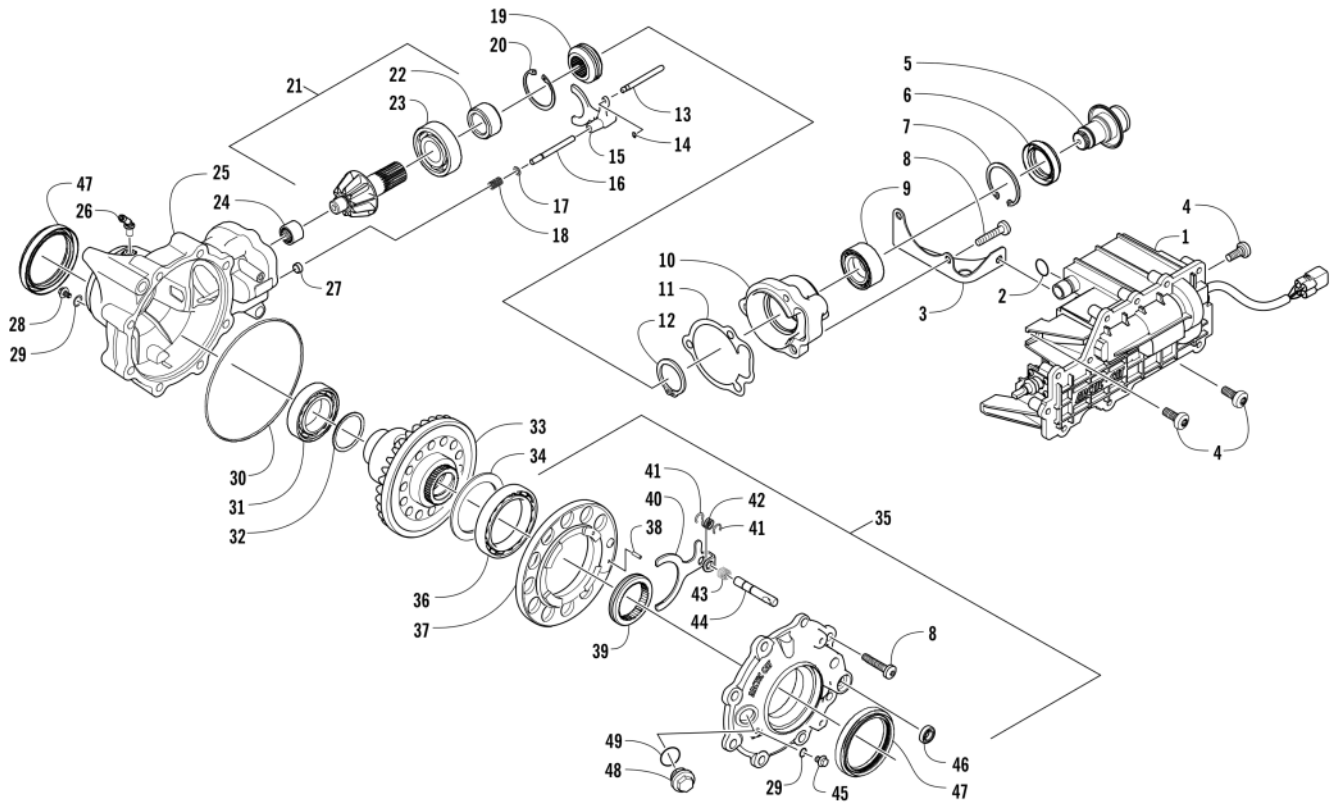

Item	Part No.	New Part	Qty	Name	Context	Footnote
-	132-2769		1	Front Drive Gearcase		
1	132-2772		1	Actuator	(inc. 2)	
2	132-2609		1	O-Ring		
3	132-2678		1	Bracket, Actuator		
4	132-1914		3	Screw, Self-Tapping		
5	132-2676		1	Shaft, Input		
6	132-2566		1	Seal		
7	132-1923		1	Ring, Retaining		
8	132-1899		11	Screw, Self-Tapping		
9	132-2569		1	Bearing		
10	132-2032		1	Housing, Pinion		
11	132-1786		1	Gasket, Flange		
12	132-1921		1	Ring, Retaining		
13	132-1791		1	Shaft, Selector		
14	132-1915		1	Ring, Retaining		
15	132-1792		1	Fork, Selector		
16	132-1777		1	Shaft, Shuttle		
17	132-1900		1	O-Ring		
18	132-1793		1	Spring, Return		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-1776		1	Coupler, Drive		
20	132-2640		1	Ring, Retaining		
21	132-2691		1	Gear, Pinion - Assembly - 10T	(inc. 22-23)	
22	132-2608		1	Collar, Retaining		
23	132-1764		1	Bearing		
24	132-1765		1	Bearing		
25	132-2689		1	Housing, Gearcase		
26	132-2719		1	Fitting, Elbow		
27	132-1775		1	Pin, Dowel		
28	132-2582		1	Plug, Fill	(inc. one No. 29)	
29	132-1902		3	O-Ring		
30	132-1901		1	O-Ring		
31	132-1769		1	Bearing		
32	132-1770		AR	Shim, 41 x 49 x 1.3 mm		
32	132-1771		AR	Shim, 41 x 49 x 1.4 mm		
32	132-1772		AR	Shim, 41 x 49 x 1.5 mm		
32	132-1773		AR	Shim, 41 x 49 x 1.6 mm		
32	132-1774		AR	Shim, 41 x 49 x 1.7 mm		
33	132-2690		1	Gear, Ring - 36T		
34	132-2576		AR	Shim, 61 x 69 x 1.3 mm		
34	132-2577		AR	Shim, 61 x 69 x 1.4 mm		
34	132-2578		AR	Shim, 61 x 69 x 1.5 mm		
34	132-2579		AR	Shim, 61 x 69 x 1.6 mm		
34	132-2580		AR	Shim, 61 x 69 x 1.7 mm		
35	132-2771		1	Cover, Gearcase	(inc. one No. 29, 36-46, and one No. 47)	
36	132-2570		1	Bearing		
37	132-2031		1	Flange, Bearing		
38	132-2581		1	Pin, Parallel		
39	132-2568		1	Collar, Sliding		
40	132-2571		1	Fork		
41	132-2574		2	Ring, Retaining		
42	132-2573		1	Spring		
43	132-2575		1	Spring		
44	132-2594		1	Shaft, Lock		
45	132-2583		1	Plug, Oil Level	(inc. one No. 29)	
46	132-2572		1	Seal		
47	132-2718		2	Seal		
48	132-1766		1	Plug, Magnetic	(inc. 49)	
49	132-1903		1	O-Ring		

 
FRONT SUSPENSION ASSEMBLY [301841]

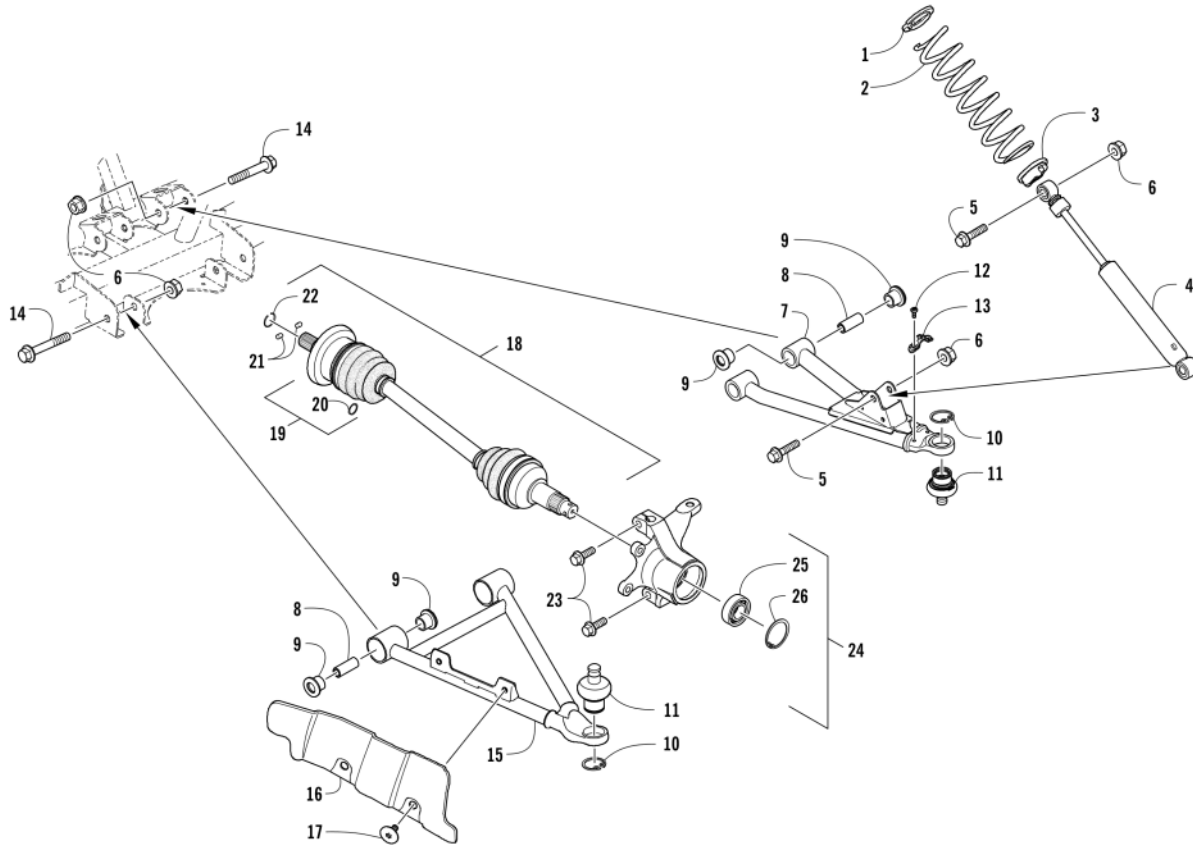

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2706		2	Retainer, Spring		
2	132-1794		2	Spring, Suspension		
3	132-1806		2	Cam, Spring Adjuster		
4	132-3199		2	Shock Absorber		
5	132-3070		4	Screw, Cap		
6	130-8102		12	Nut, Lock		
7	132-2044		1	A-Arm, Upper Right	(inc. two No. 8, four No. 9, and one No. 10-11)	
7	132-2045		1	A-Arm, Upper Left	(inc. two No. 8, four No. 9, and one No. 10-11)	
8	132-1799		8	Axle		
9	132-1797		16	Bushing		
10	132-1889		4	Ring, Retaining		
11	132-1818		4	Ball Joint		
12	132-1965		4	Screw, Self-Tapping		
13	132-2682		2	Clamp, Routing		
14	132-3072		8	Screw, Cap		
15	132-2042		1	A-Arm, Lower Right	(inc. two No. 8, four No. 9, and one No. 10-11)	

Item	Part No.	New Part	Qty	Name	Context	Footnote
15	132-2043		1	A-Arm, Lower Left	(inc. two No. 8, four No. 9, and one No. 10-11)	
16	132-2610		1	Guard, Boot - Right		
16	132-2611		1	Guard, Boot - Left		
17	132-1936		4	Screw, Shoulder		
18	130-8109		2	Kit, Halfshaft	(inc. 19-22)	
19	132-2661		2	Repair Kit, Boot	(inc. 20)	
20	132-2669		2	Clip, Retaining		
21	132-2601		4	Pin, Detent		
22	132-2602		2	Clip, Retaining		
23	132-1966		4	Screw, Shoulder		
24	132-2054		1	Knuckle - Assembly - Right	(inc. one No. 25-26)	
24	132-2055		1	Knuckle - Assembly - Left	(inc. one No. 25-26)	
25	132-2599		2	Bearing		
26	132-1923		2	Ring, Retaining		

 
GAS TANK ASSEMBLY [301847]

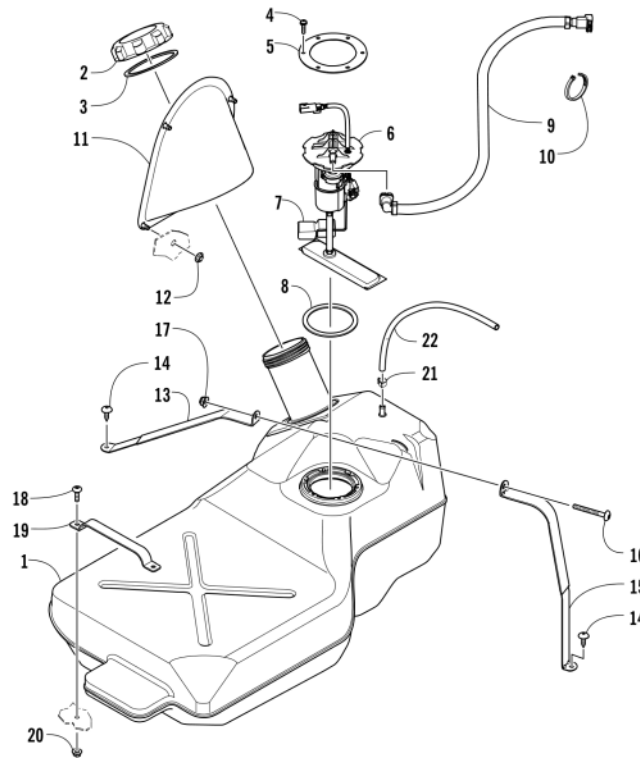

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2082		1	Tank, Gas - Assembly	(inc. 2-5)	
2	132-1999		1	Cap, Gas Tank	(inc. 3)	
3	132-2714		1	Gasket, Gas Tank Cap		
4	132-1960		6	Screw, Self-Tapping		
5	132-2798		1	Plate, Retaining		
6	132-2084		1	Pump, Fuel - Assembly	(inc. 7-8)	
7	132-2799		1	Float		
8	132-2011		1	Seal		
9	132-2003		1	Hose, Gasline		
10	132-1753		AR	Tie, Cable - 8 in.		
11	132-2619		1	Insert, Gas Tank Cap		
12	132-1910		4	Nut, Stamped		
13	132-2008		1	Bracket, Hold-Down - Right		
14	132-2107		2	Screw, Self-Tapping		
15	132-2009		1	Bracket, Hold-Down - Left		
16	132-3109		1	Screw, Machine		
17	132-3084		1	Nut, Lock		
18	132-3105		2	Screw, Machine		
19	132-2000		1	Bracket, Hold-Down - Front		
20	132-2094		2	Nut w/Washer		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-1951		AR	Clamp, Hose		
22	132-1833		AR	Hose, Gasline - 25 ft		

 
GEAR SHIFTING ASSEMBLY [301871]

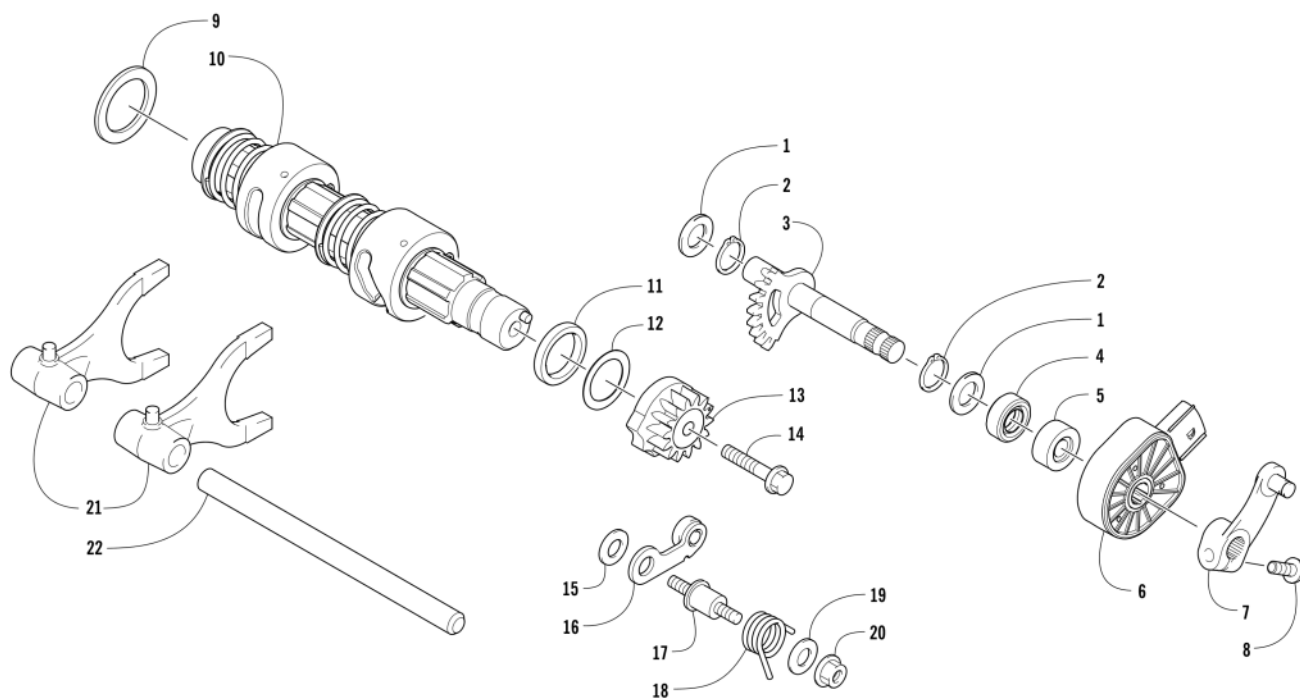

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2423		2	Washer		
2	132-2524		2	Ring, Retaining		
3	132-2269		1	Shaft, Sub-Gear Shift		
4	132-2477		1	Seal, Sub-Gear Shift Shaft		
5	132-2268		1	Spacer		
6	132-1831		1	Switch, Gear Position		
7	132-2270		1	Arm, Select		
8	132-3091		1	Screw, Machine		
9	132-2426		1	Washer		
10	132-2265		1	Shaft, Gear Shift - Assembly		
11	132-2444		1	Spacer		
12	132-2424		1	Washer		
13	132-2266		1	Cam, Gear Shift		
14	132-2356		1	Screw, Cap		
15	132-2425		1	Washer		
16	132-2253		1	Stopper, Cam		
17	132-2254		1	Support, Cam Stopper		
18	132-2267		1	Spring		
19	132-2422		1	Washer		
20	132-3079		1	Nut		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-2260		2	Fork, Shift		
22	132-2255		1	Shaft, Shift Fork		

 
HOOD AND HEADLIGHT ASSEMBLY [301829]

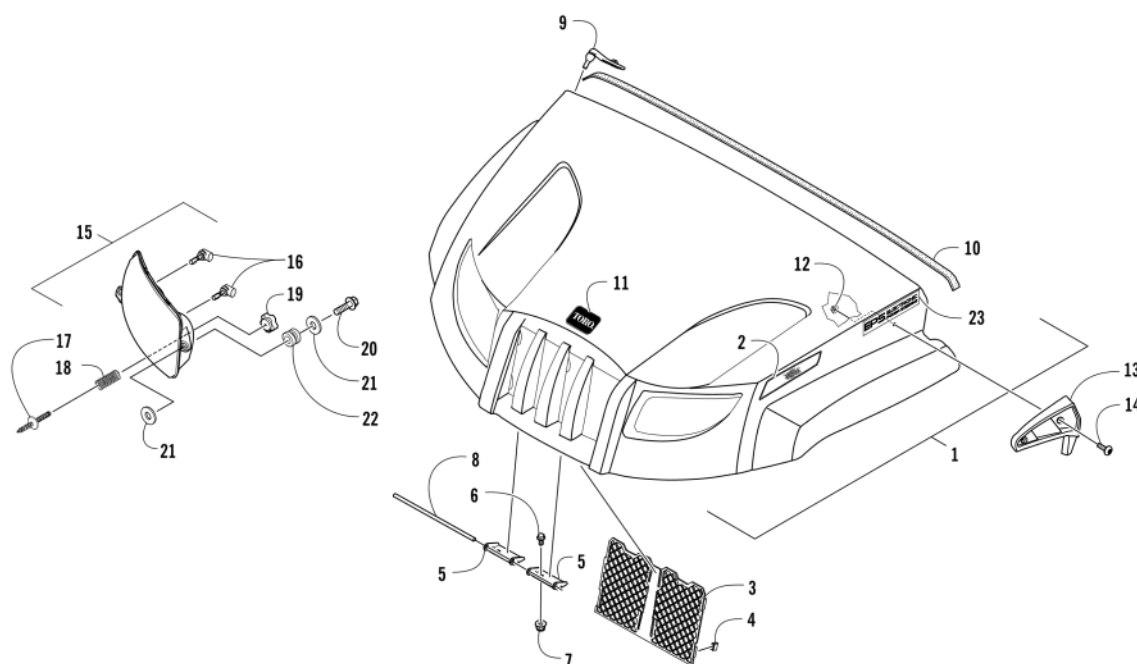

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-3041		1	Hood - Assembly - Red	(inc. 2)	
2	132-1851		1	Decal, Reflector - Right - Amber		
2	132-1852		1	Decal, Reflector - Left - Amber		
3	132-2617		1	Screen, Grille		
4	132-1756		8	Clip, U		
5	132-2782		2	Bracket, Hood		
6	132-3057		4	Screw, Cap		
7	132-3085		4	Nut, Lock		
8	132-2620		1	Pin, Hood		
9	132-2797		2	Strap, Hold-Down		
10	132-1886		1	Trim, Hood/Dash		
11	132-2977		1	Decal, Hood		
12	130-8129		4	Nut, Lock		
13	132-2758		1	Louver - Right		
13	132-2759		1	Louver - Left		
14	132-1909		4	Screw, Shoulder		
15	132-2065		1	Headlight Assembly - Right	(inc. two No. 16)	
15	132-2064		1	Headlight Assembly - Left	(inc. two No. 16)	
16	132-1821		4	Bulb, Headlight		
17	132-1933		2	Stud, Adjuster		

Item	Part No.	New Part	Qty	Name	Context	Footnote
18	132-1934		2	Spring, Adjuster		
19	132-1932		2	Knob, Adjuster		
20	132-2108		4	Screw, Self-Tapping		
21	132-3049		8	Washer		
22	132-1925		4	Grommet		
23	130-8119		1	Decal, EPS		

 
HYDRAULIC BRAKE ASSEMBLY [301845]

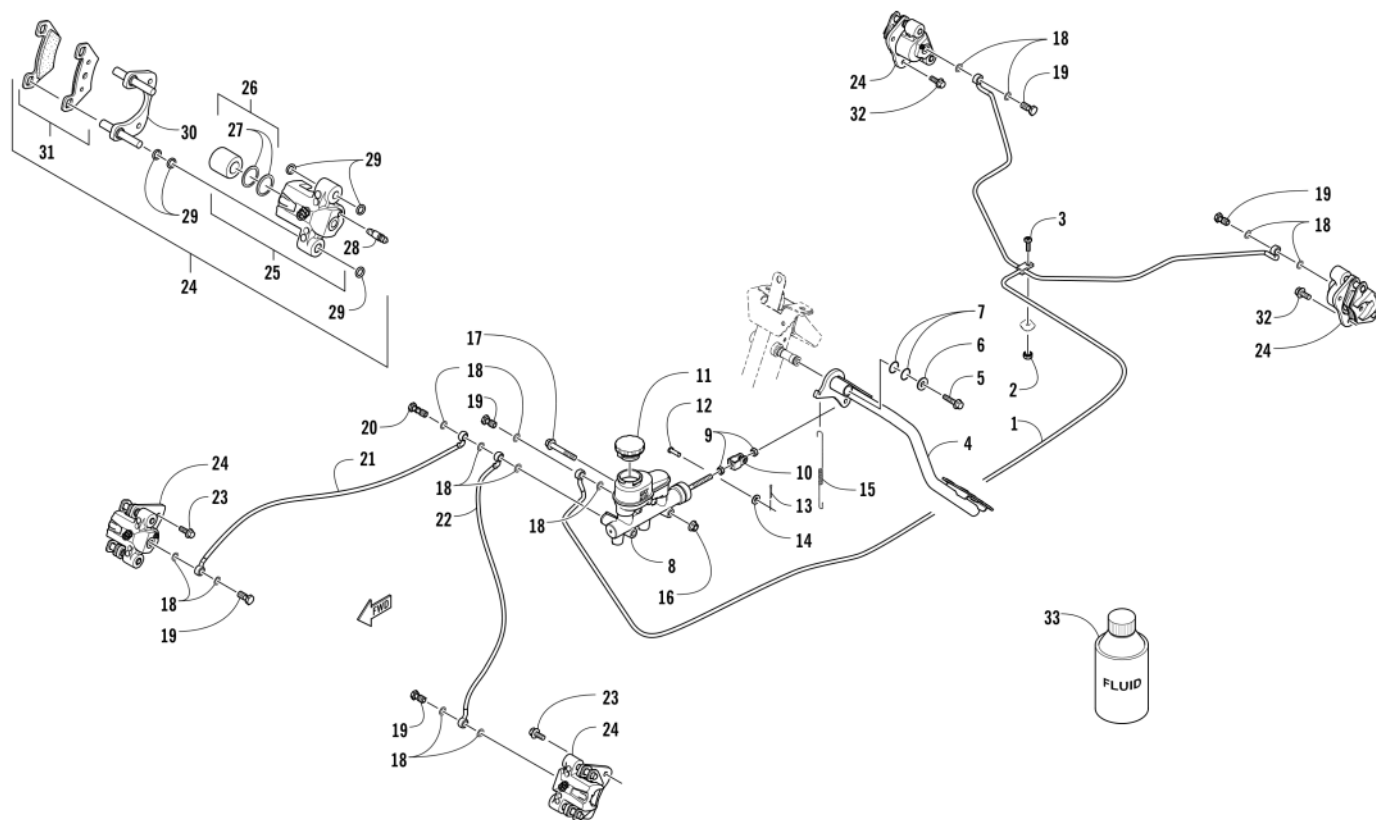

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2604		1	Hose, Rear Brake		
2	132-2094		1	Nut w/Washer		
3	132-3105		1	Screw, Machine		
4	132-2683		1	Lever, Brake		
5	132-3059		1	Screw, Cap		
6	132-2095		1	Washer		
7	132-2703		2	O-Ring		
8	132-2765		1	Cylinder, Master Brake - Assembly	(inc. 9-11)	
9	132-1783		2	Nut		
10	132-2591		1	Clevis		
11	132-2766		1	Cap, Reservoir		
12	132-2588		1	Pin, Clevis		
13	132-1752		1	Pin, Cotter		
14	132-3049		1	Washer		
15	132-2039		1	Spring, Brake Switch		
16	132-3085		2	Nut, Lock		
17	132-3064		2	Screw, Cap		
18	132-1904		13	Washer, Crush		
19	132-1920		6	Bolt, Banjo-Fitting		
20	132-1946		1	Bolt, Double Banjo-Fitting		


Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-2586		1	Hose, Brake - Right		
22	132-2589		1	Hose, Brake - Left		
23	132-3060		4	Screw, Cap		
24	132-2684		1	Caliper, Brake	(inc. 25-31)	Front Right
24	132-2685		1	Caliper, Brake	(inc. 25-31)	Front Left
24	132-2663		1	Caliper, Brake	(inc. 25-32)	Rear Right
24	132-2664		1	Caliper, Brake	(inc. 25-32)	Rear Left
25	132-2654		2	Housing, Caliper - Assembly	(inc. 26-28)	Front Right & Rear Right
25	132-2655		2	Housing, Caliper - Assembly	(inc. 26-28)	Front Left & Rear Left
26	132-2034		4	Piston/Seal Set	(inc. 27)	
27	132-2035		4	Seal Set		
28	132-2037		4	Valve, Bleed		
29	132-2036		4	O-Ring, Guide - Set		
30	132-2040		2	Bracket Assembly		
30	132-2033		2	Bracket Assembly		
31	132-2662		4	Pad, Brake - Set		
32	132-3058		4	Screw, Cap		
33	132-3039		AR	Fluid, Brake - 12 oz		

 MAGNETO ASSEMBLY [301873]

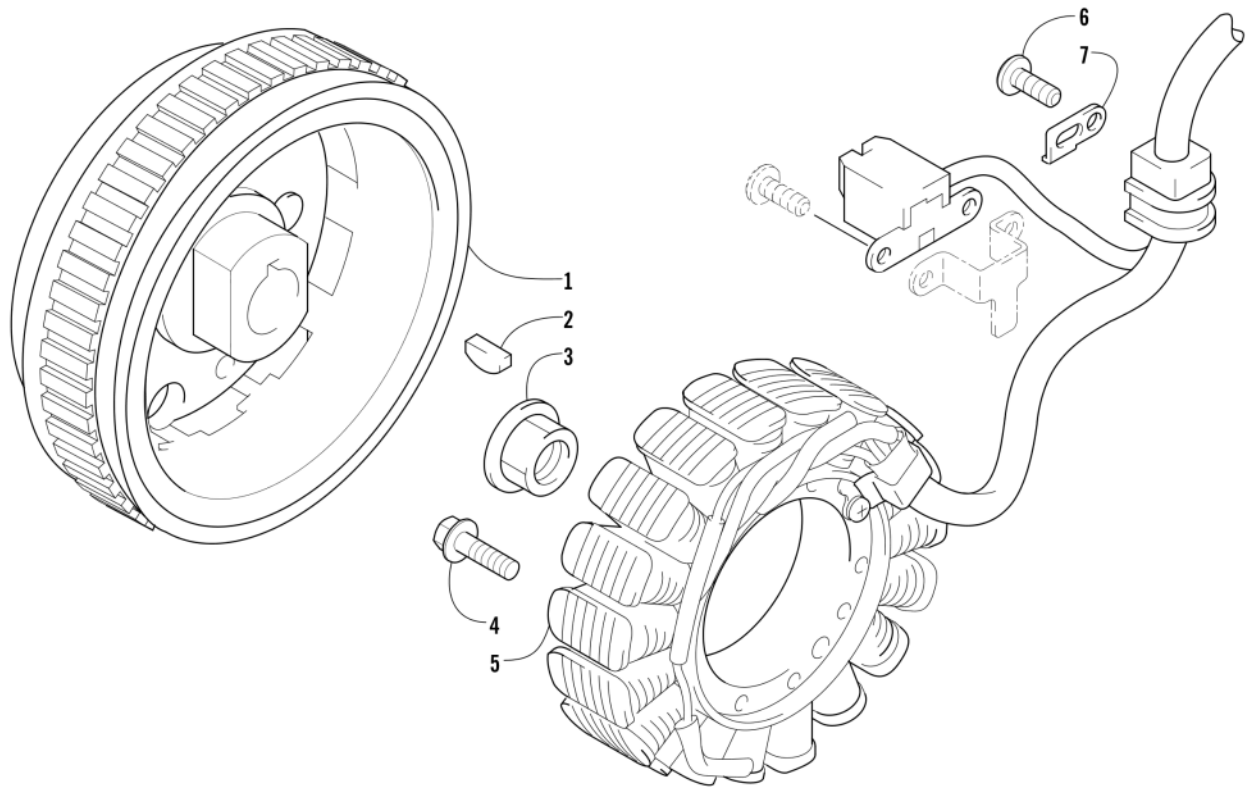


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2133		1	Rotor/Flywheel		
2	132-2451		1	Key		
3	132-2396		1	Nut		
4	132-3073		3	Screw, Cap		
5	132-2136		1	Stator - Assembly		
6	132-3102		1	Screw, Machine		
7	132-2130		1	Clamp - No. 1		

 OIL FILTER/PUMP ASSEMBLY [301867]

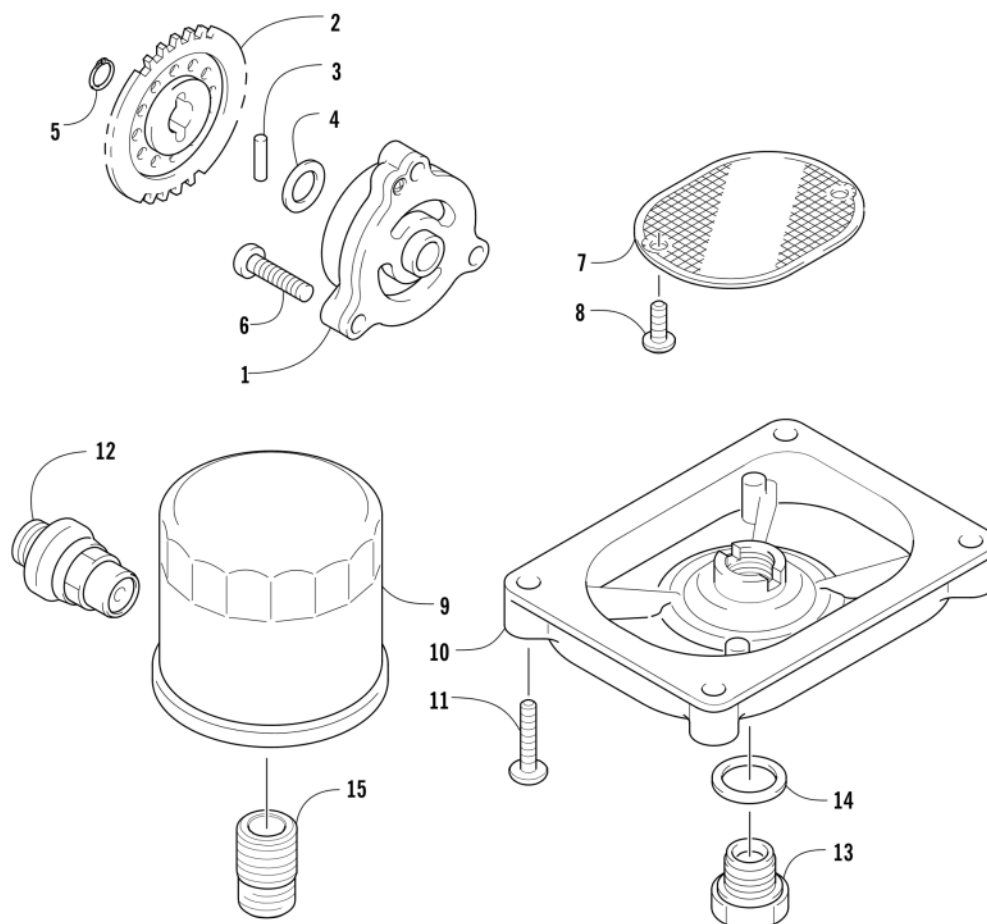

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2219		1	Pump, Oil		
2	132-2231		1	Gear, Driven		
3	132-2450		1	Pin		
4	132-2408		1	Washer		
5	132-2521		1	Ring, Retaining		
6	132-2368		3	Screw, Machine		
7	132-2225		1	Strainer, Oil		
8	132-2369		2	Screw, Machine		
9	132-2220		1	Filter, Oil		
10	132-2224		1	Cap, Oil Strainer		
11	132-3092		4	Screw, Machine		
12	132-2217		1	Valve, Oil-Relief - Assembly		
13	132-2216		1	Plug, Drain		
14	132-2470		1	Gasket, Drain Plug		
15	132-2228		1	Union, Oil Filter		

 
REAR DRIVE GEARCASE ASSEMBLY [301855]

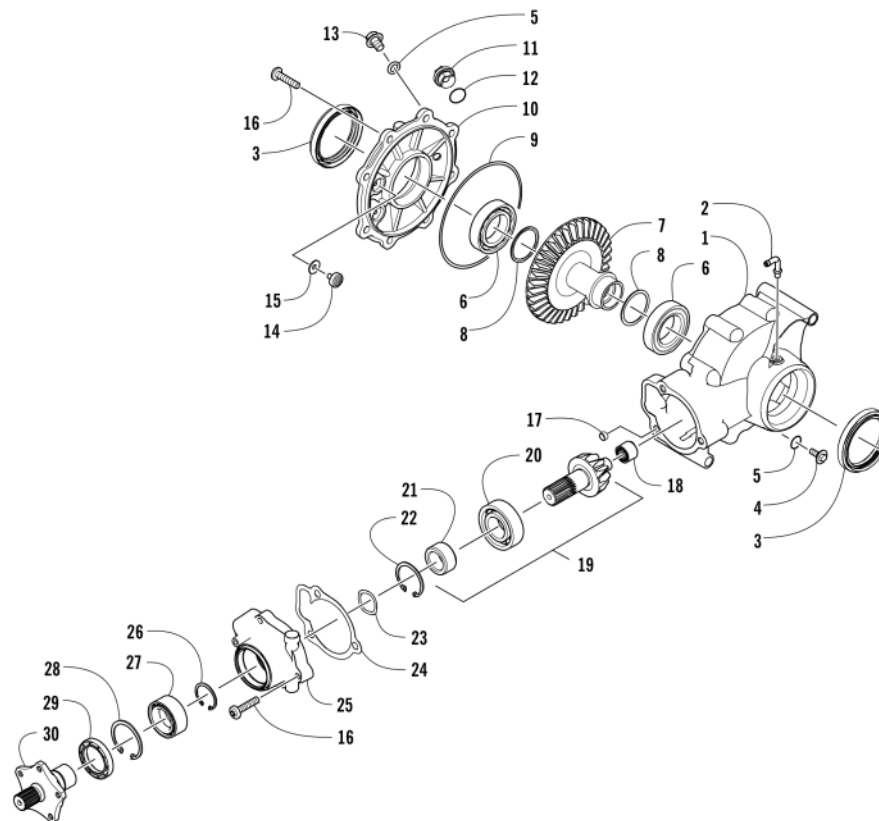

Item	Part No.	New Part	Qty	Name	Context	Footnote
-	132-2770		1	Rear Drive Gearcase		
1	132-2693		1	Housing, Gearcase		
2	132-2720		1	Fitting, Elbow		
3	132-2718		2	Seal		
4	132-2582		1	Plug, Fill	(inc. one No. 5)	
5	132-1902		2	O-Ring		
6	132-1769		2	Bearing		
7	132-2567		1	Gear, Ring - 36T		
8	132-1770		AR	Shim, 41 x 49 x 1.3 mm		
8	132-1771		AR	Shim, 41 x 49 x 1.4 mm		
8	132-1772		AR	Shim, 41 x 49 x 1.5 mm		
8	132-1773		AR	Shim, 41 x 49 x 1.6 mm		
8	132-1774		AR	Shim, 41 x 49 x 1.7 mm		
9	132-1901		1	O-Ring		
10	132-2694		1	Cover, Gearcase		
11	132-1766		1	Plug, Magnetic	(inc. 12)	
12	132-1903		1	O-Ring		
13	132-2583		1	Plug, Oil Level	(inc. one No. 5)	
14	132-1763		1	Button, Thrust		
15	132-1778		AR	Shim, 6.3 x 18 x 1.3 mm		

Item	Part No.	New Part	Qty	Name	Context	Footnote
15	132-1779		AR	Shim, 6.3 x 18 x 1.4 mm		
15	132-1780		AR	Shim, 6.3 x 18 x 1.5 mm		
15	132-1781		AR	Shim, 6.3 x 18 x 1.6 mm		
15	132-1782		AR	Shim, 6.3 x 18 x 1.7 mm		
16	132-1899		11	Screw, Self-Tapping		
17	132-1775		1	Pin, Dowel		
18	132-1765		1	Bearing		
19	132-2691		1	Gear, Pinion - Assembly - 10T	(inc. 20-21)	
20	132-1764		1	Bearing		
21	132-2608		1	Collar, Retaining		
22	132-2640		1	Ring, Retaining		
23	132-1789		1	Washer, Wave		
24	132-1786		1	Gasket, Flange		
25	132-2038		1	Housing, Pinion		
26	132-1937		1	Ring, Retaining		
27	132-1762		1	Bearing		
28	132-1768		1	Ring, Retaining		
29	132-2587		1	Seal		
30	132-2688		1	Shaft, Input		

 
REAR SUSPENSION ASSEMBLY [301842]

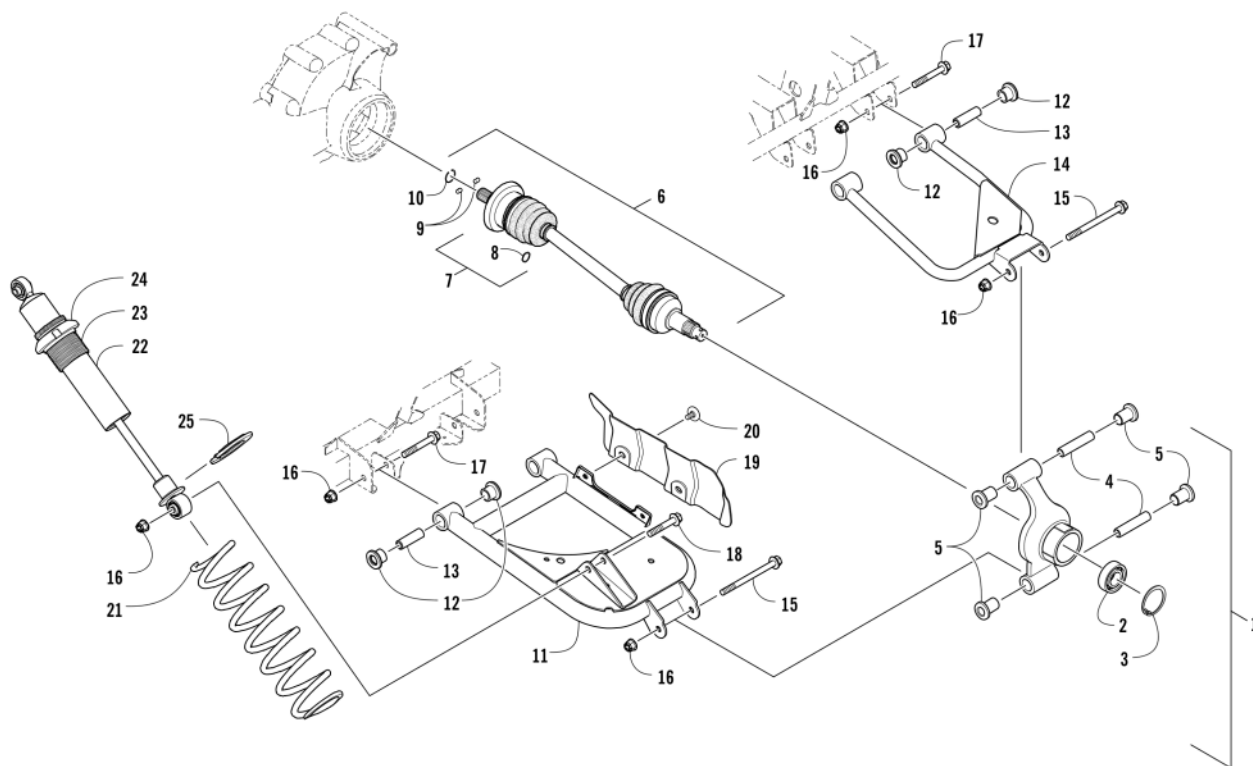

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2048		2	Knuckle, Rear - Assembly	(inc. 2-5)	
2	132-2599		2	Bearing		
3	132-1923		2	Ring, Retaining		
4	132-1798		4	Axle		
5	132-1796		8	Bushing		
6	130-8108		2	Kit, Halfshaft	(inc. 7-10)	
7	132-2661		2	Repair Kit, Boot	(inc. 8)	
8	132-2669		2	Clip, Retaining		
9	132-2600		4	Pin, Detent		
10	132-2603		2	Clip, Retaining		
11	132-2046		1	A-Arm, Rear - Lower Right	(inc. 12-13)	
11	132-2047		1	A-Arm, Rear - Lower Left	(inc. 12-13)	
12	132-1797		16	Bushing		
13	132-1799		8	Axle		
14	132-2052		1	A-Arm, Rear - Upper Right	(inc. 12-13)	
14	132-2053		1	A-Arm, Rear - Upper Left	(inc. 12-13)	
15	132-3066		4	Screw, Cap		
16	130-8102		16	Nut, Lock		
17	132-3072		8	Screw, Cap		
18	132-3071		4	Screw, Cap		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-2612		1	Guard, Boot - Right		
19	132-2613		1	Guard, Boot - Left		
20	132-1936		4	Screw, Shoulder		
21	132-2700		2	Spring, Suspension - Black		
22	132-1803		2	Shock Absorber	(inc. 23)	
23	132-1961		2	Sleeve, Shock - Threaded		
24	132-1962		2	Nut, Retainer		
25	132-1963		2	Retainer, Spring		

 
ROPS AND TAILLIGHT ASSEMBLY [301837]

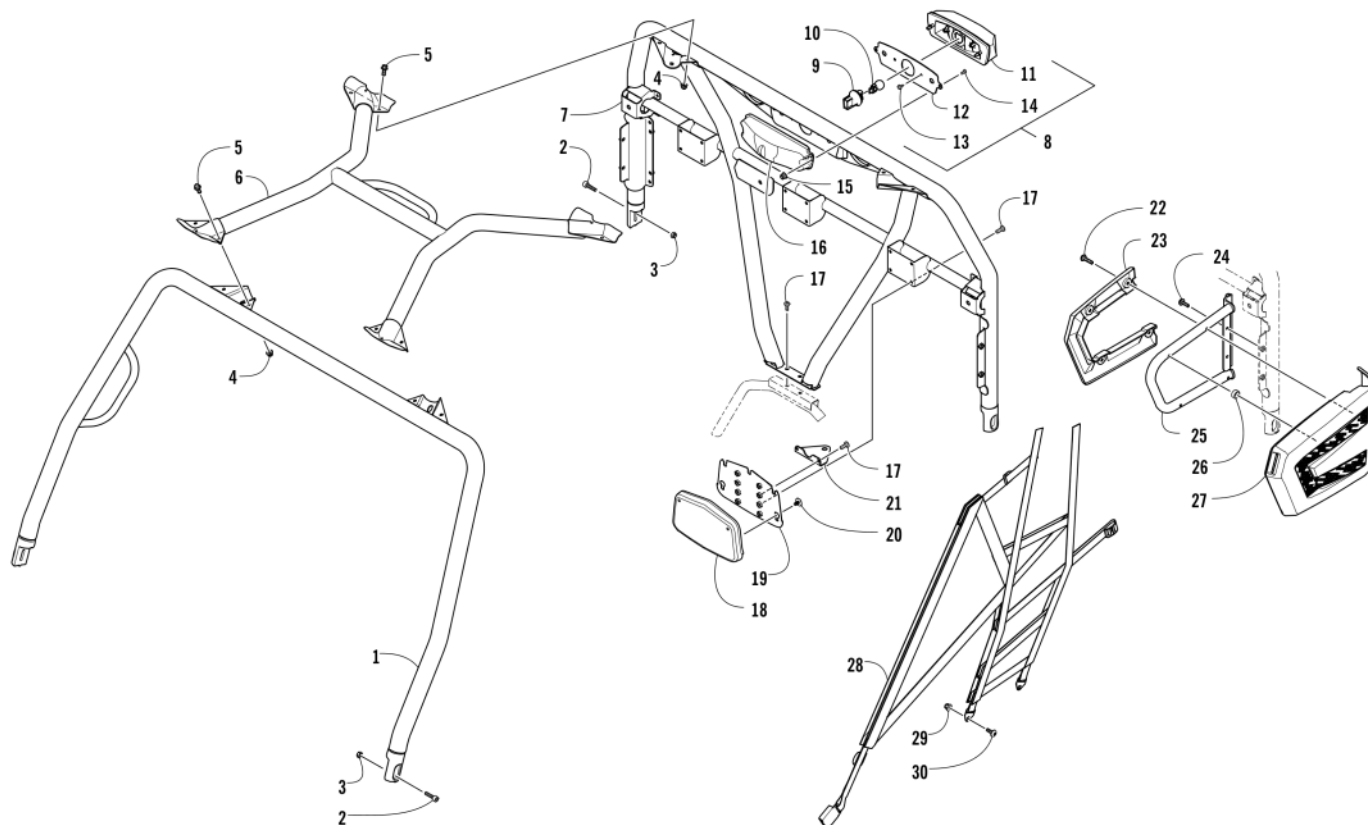

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2992		1	ROPS - Front		
2	132-2643		8	Screw, Cap		
3	132-2645		8	Nut, Lock		
4	132-3083		8	Nut, Lock		
5	132-2644		8	Screw, Cap		
6	132-2993		1	Support, ROPS		
7	132-3046		1	ROPS - Rear		
8	132-2062		1	Taillight Assembly	(inc. 9-11)	
9	132-1823		1	Socket, Taillight		
10	132-1822		1	Bulb, Taillight		
11	132-2063		1	Housing, Taillight		
12	132-2726		1	Bracket, Taillight Mounting		
13	132-2099		2	Screw, Self-Tapping		
14	132-3090		2	Screw, Machine		
15	132-3084		2	Nut, Lock		
16	132-2796		1	Cover, Taillight		
17	132-1911		14	Screw, Machine		
18	132-2969		3	Pad, Headrest		
19	132-2701		3	Mount, Headrest		
20	132-2103		15	Clip, Retaining		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-2982		1	Bracket, Mounting - Flag		
22	132-3115		8	Screw, Machine		
23	132-2960		1	Panel, Side Restraint - Inner Right		
23	132-2961		1	Panel, Side Restraint - Inner Left		
24	132-3114		8	Screw, Machine		
25	132-2990		1	Support, Side Restraint - Right		
25	132-2991		1	Support, Side Restraint - Left		
26	132-2647		2	Spacer		
27	132-2958		1	Panel, Side Restraint - Outer Right		
27	132-2959		1	Panel, Side Restraint - Outer Left		
28	132-2962		1	Restraint, Side - Right		
28	132-2963		1	Restraint, Side - Left		
29	132-2646		4	Nut, Lock		
30	132-2650		4	Screw, Shoulder		

 
SEAT ASSEMBLY [301836]

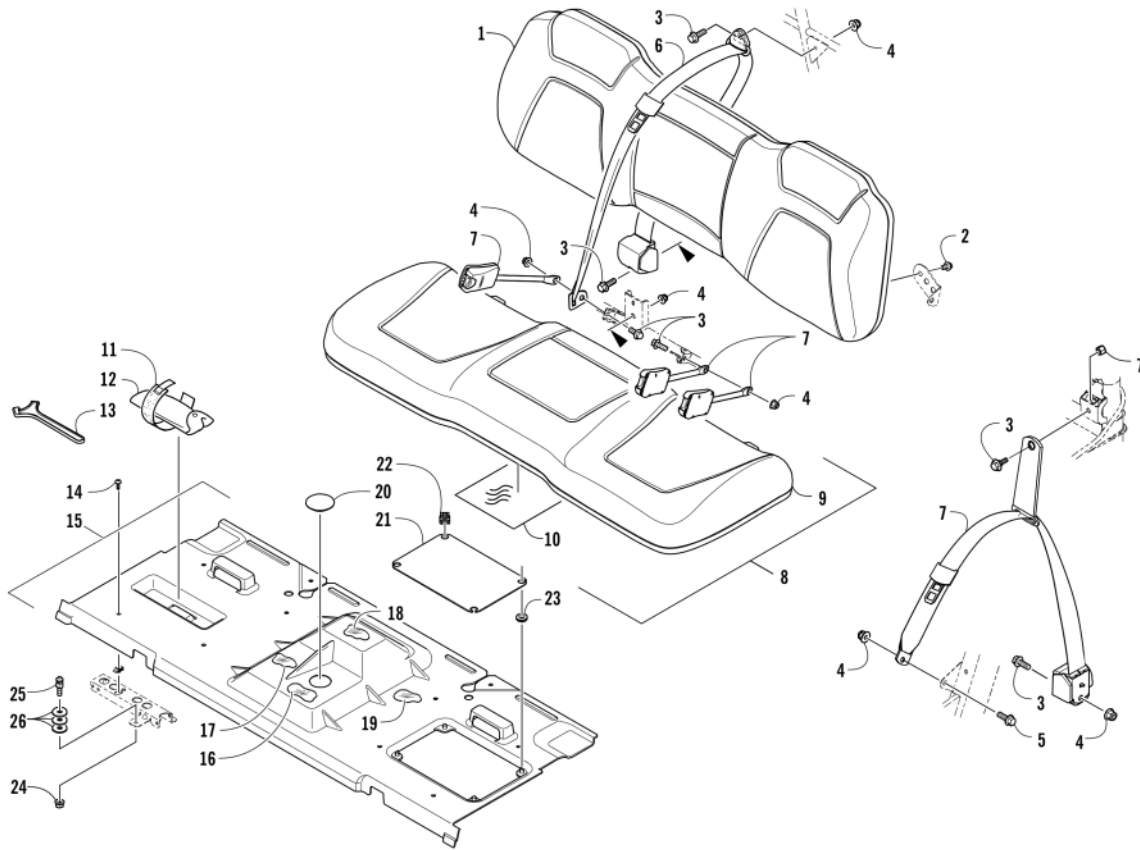

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	130-8124		1	Backrest Assembly		
2	132-3057		4	Screw, Cap		
3	132-2648		2	Screw, Cap		
4	132-2649		4	Nut, Lock		
5	132-3213		2	Screw, Cap		
6	132-3026		2	Belt, Seat		
7	132-3027		1	Belt, Seat - 3 Point		
8	132-3043		1	Seat Assembly	(inc. 9-10)	
9	0		1	Seat, Bench		Not Serviced Individually
10	132-1860		1	Foil, Protective		
11	132-2115		1	Retainer, Toolkit		
12	132-2794		1	Kit, Tool		
13	132-1990		1	Wrench, Spanner		
14	132-1945		8	Screw, Machine		
15	132-3022		1	Base, Seat	(inc. 16-19)	
16	132-1861		1	Foil, Protective		
17	132-1865		1	Foil, Protective		
18	132-1862		1	Foil, Protective		
19	132-1863		1	Foil, Protective		

Item	Part No.	New Part	Qty	Name	Context	Footnote
20	132-2104		1	Plug		
21	132-2757		1	Cover, Access		
22	132-1942		4	Clip, U-Nut		
23	132-2709		4	Grommet		
24	132-3078		2	Nut		
25	130-8101		2	Stud, Latch - Seat		
26	132-1896		6	Washer		

 
SECONDARY DRIVE ASSEMBLY [301872]

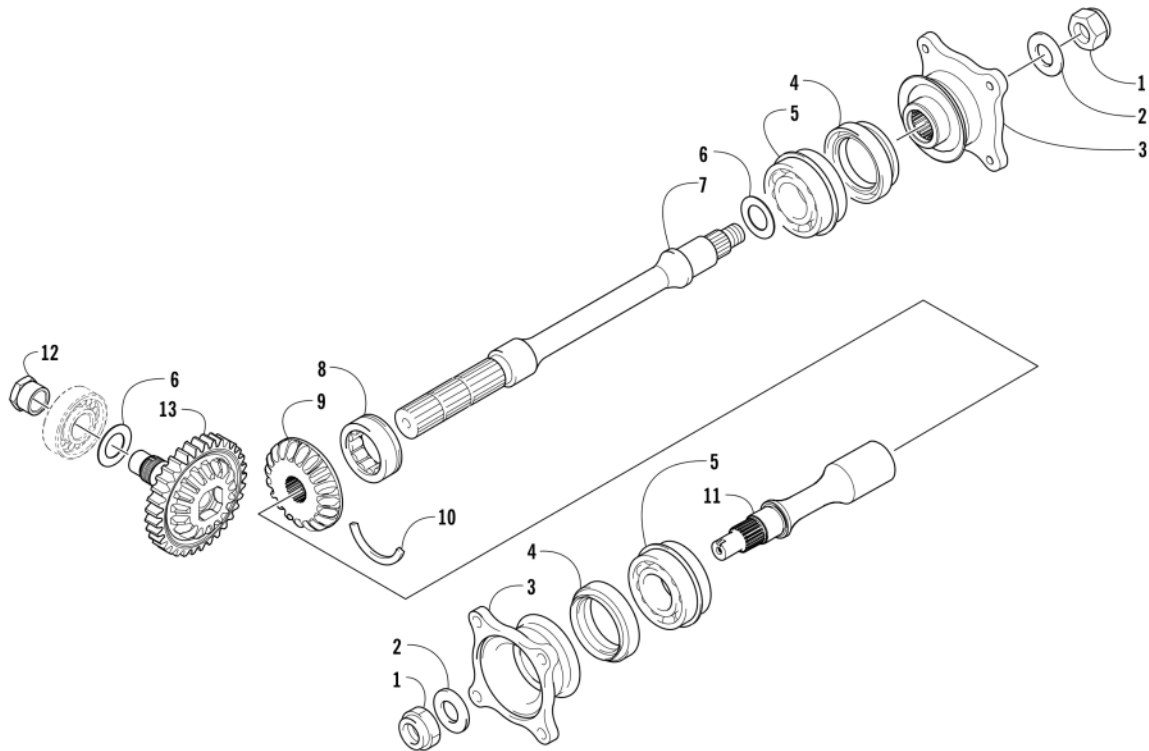

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2395		2	Nut		
2	132-2412		2	Washer		
3	132-2271		2	Flange, Output Joint		
4	132-2476		2	Seal, Oil		
5	132-2539		2	Bearing		
6	132-2413		AR	Shim, 25 x 34 x 0.25 mm		
6	132-2414		AR	Shim, 25 x 34 x 0.30 mm		
6	132-2415		AR	Shim, 25 x 34 x 0.70 mm		
6	132-2416		AR	Shim, 25 x 34 x 0.90 mm		
6	132-2417		AR	Shim, 25 x 34 x 0.95 mm		
6	132-2418		AR	Shim, 25 x 34 x 1.00 mm		
6	132-2419		AR	Shim, 25 x 34 x 1.05 mm		
6	132-2420		AR	Shim, 25 x 34 x 1.10 mm		
6	132-2421		AR	Shim, 25 x 34 x 1.15 mm		
7	132-2280		1	Shaft, Secondary Driven - Front		
8	132-2538		1	Bearing		
9	132-2301		1	Gear, Secondary Driven		
10	132-2272		1	Ring, Driven Bearing		

Item	Part No.	New Part	Qty	Name	Context	Footnote
11	132-2278		1	Shaft, Secondary Driven - Rear		
12	132-2402		1	Nut		
13	132-2309		1	Gear, Secondary Driven		

 
SECONDARY TRANSMISSION ASSEMBLY [301870]

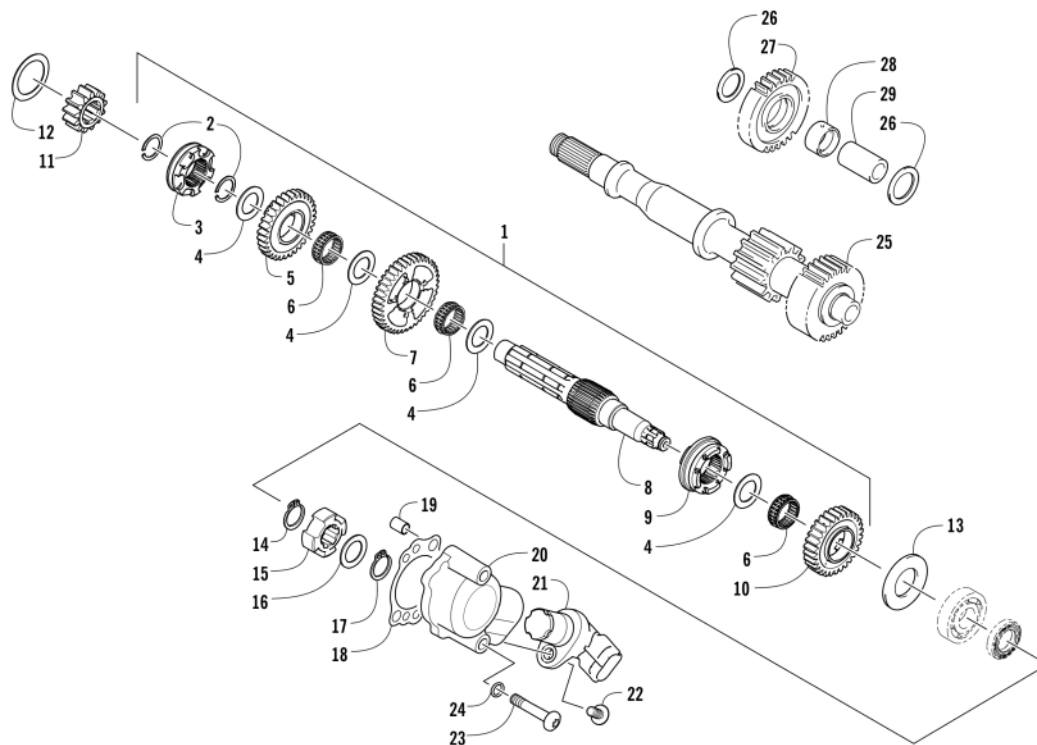

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2310		1	Countershaft Assembly	(inc. 2-10)	
2	132-2532		2	Ring, Retaining		
3	132-2305		1	Gear Select, Reverse		
4	132-2306		4	Shim		
5	132-2304		1	Gear, Reverse Driven		
6	132-2560		3	Bearing		
7	132-2303		1	Gear, Driven - Low		
8	132-2302		1	Countershaft		
9	132-2311		1	Gear Select, Sliding		
10	132-2312		1	Gear, Driven - High		
11	132-2307		1	Gear, Drive		
12	132-2411		1	Washer, Thrust		
13	132-2409		1	Washer		
14	132-2527		1	Ring, Retaining		
15	132-2293		1	Trigger, Speedometer Sensor		
16	132-2428		1	Washer, Thrust		
17	132-2526		1	Ring, Retaining		
18	132-2489		1	Gasket		
19	132-2452		2	Pin, Dowel		
20	132-2292		1	Housing, Speedometer Sensor		


Item	Part No.	New Part	Qty	Name	Context	Footnote
21	132-3202		1	Sensor, Speedometer		
22	132-3091		1	Screw, Machine		
23	132-3095		2	Screw, Machine		
24	132-2484		2	Gasket		
25	132-2283		1	Driveshaft		
26	132-2410		2	Washer, Thrust		
27	132-2285		1	Gear, Reverse Idle		
28	132-2286		1	Bushing		
29	132-2287		1	Shaft, Reverse Idle		

 SHIFTER ASSEMBLY [301848]

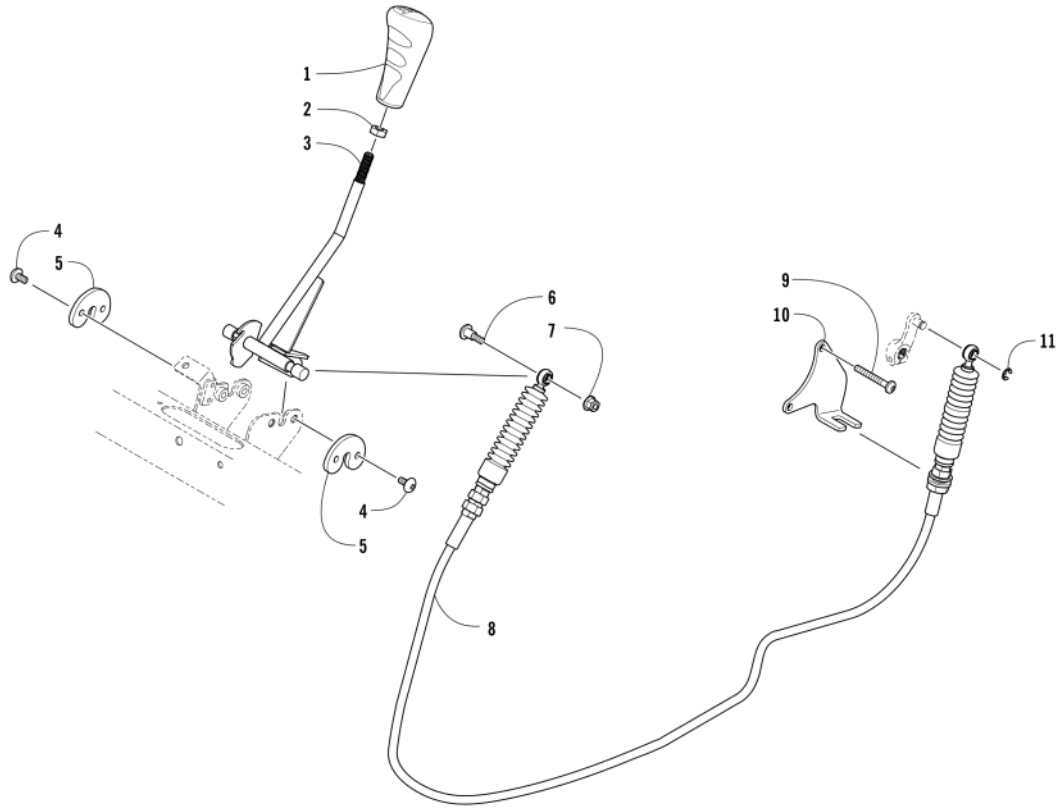


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2715		1	Knob, Shift		
2	132-1957		1	Nut		
3	132-2695		1	Lever, Shift		
4	132-2362		4	Screw, Machine		
5	132-2585		2	Retainer, Shift Linkage		
6	132-1909		1	Screw, Shoulder		
7	130-8129		1	Nut, Lock		
8	132-2030		1	Cable, Shift		
9	132-3095		2	Screw, Machine		
10	132-2968		1	Bracket, Shift Cable		
11	132-1757		1	E-Ring		

 STARTER CLUTCH ASSEMBLY [301865]

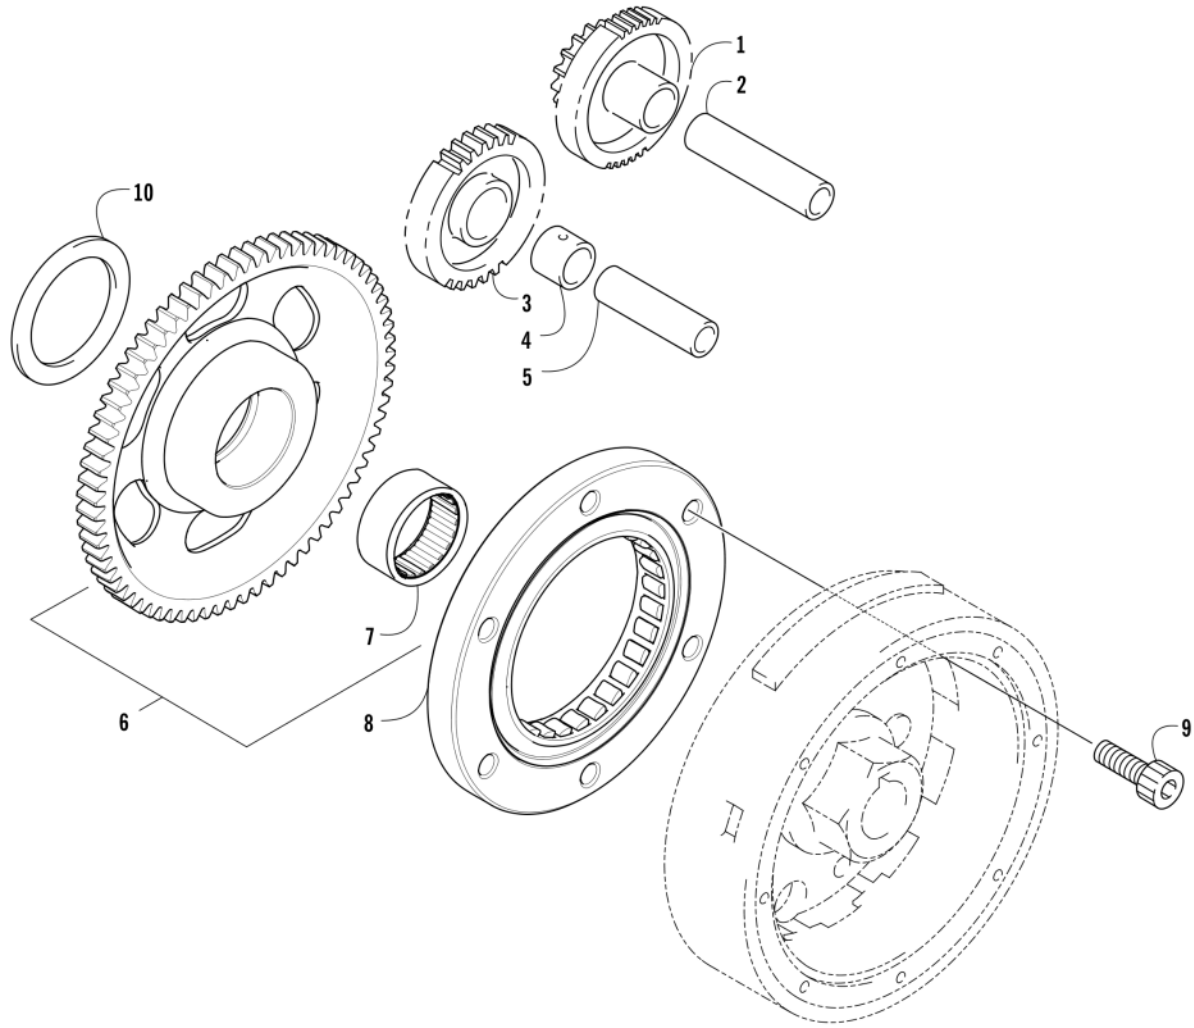

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2252		1	Gear, Starter Idler - No. 1		
2	132-2453		1	Shaft, Starter Gear		
3	132-2244		1	Gear, Starter Idler - No. 2		
4	132-2245		1	Spacer, Starter Idler Gear No. 2		
5	132-2454		1	Shaft, Starter Gear		
6	132-2246		1	Gear, Starter Clutch	(inc. 7)	
7	132-2559		1	Bearing		
8	132-2131		1	Clutch, Starter		
9	132-2375		6	Screw, Machine		
10	132-2440		1	Washer		

 
STEERING ASSEMBLY [301839]

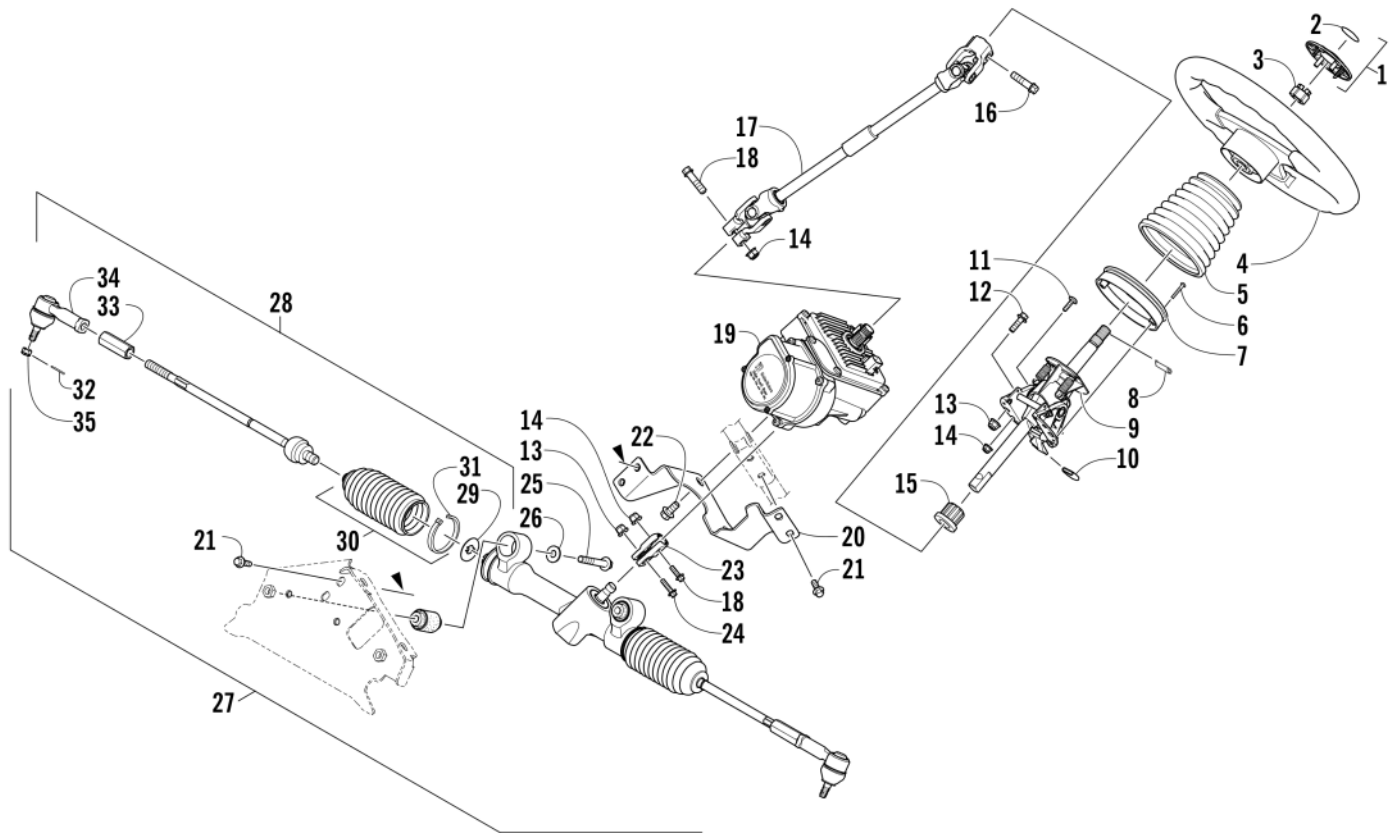

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-1813		1	Cap, Steering Wheel	(inc. 2)	
2	132-2994		1	Decal, Steering Wheel		
3	132-1956		1	Nut		
4	132-1814		1	Wheel, Steering - Assembly		
5	132-3231		1	Boot		
6	132-3234		2	Screw, Self-Tapping		
7	132-3230		1	Support		
8	132-2634		1	Clip, Retaining		
9	132-3239		1	Mechanism, Tilt		
10	130-8107		1	Cap, Tilt Lever		
11	132-3106		2	Screw, Machine		
12	132-3227		2	Screw, Cap		
13	132-3085		3	Nut, Lock		
14	130-8129		4	Nut, Lock		
15	132-1809		1	Bushing		
16	132-2635		1	Screw, Cap		
17	132-3232		1	Shaft, Steering - Assembly		
18	132-3249		1	Screw, Cap		
19	132-3240		1	Assembly, Electronic Power Steering		
20	130-8122		1	Bracket, Mounting		


Item	Part No.	New Part	Qty	Name	Context	Footnote
21	130-8128		4	Screw, Cap		
22	132-3068		4	Screw, Cap		
23	132-3233		1	Coupler, Steering		
24	132-2637		1	Screw, Cap		
25	132-3053		2	Screw, Cap		
26	132-2105		2	Washer		
27	132-2058		1	Housing, Rack and Pinion	(inc. 28-34)	
28	132-2061		2	Tie Rod - Assembly	(inc. 29-30)	
29	132-1816		2	Plate, Retaining		
30	132-2060		2	Kit, Tie Rod Boot	(inc. 31-32)	
31	132-1755		2	Tie, Cable - 11.5 in.		
32	132-2098		2	Pin, Cotter		
33	132-2056		2	Kit, Nut		
34	132-2059		2	Kit, Tie Rod End		
35	132-1895		2	Nut		

 SWAY BAR ASSEMBLY [301843]

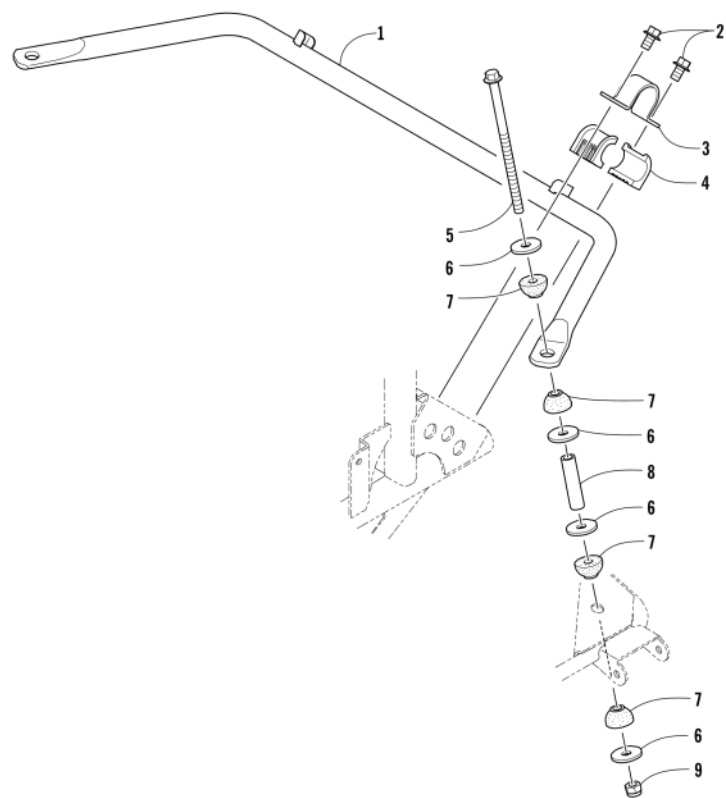

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2050		1	Bar, Sway		
2	132-3067		4	Screw, Cap		
3	132-2049		2	Clamp, Sway Bar Bushing		
4	132-1804		4	Half-Clamp		
5	132-1952		2	Screw, Cap		
6	132-1896		8	Washer		
7	132-2590		8	Bushing		
8	132-2632		2	Spacer		
9	130-8102		2	Nut, Lock		

 
THROTTLE BODY ASSEMBLY [301858]

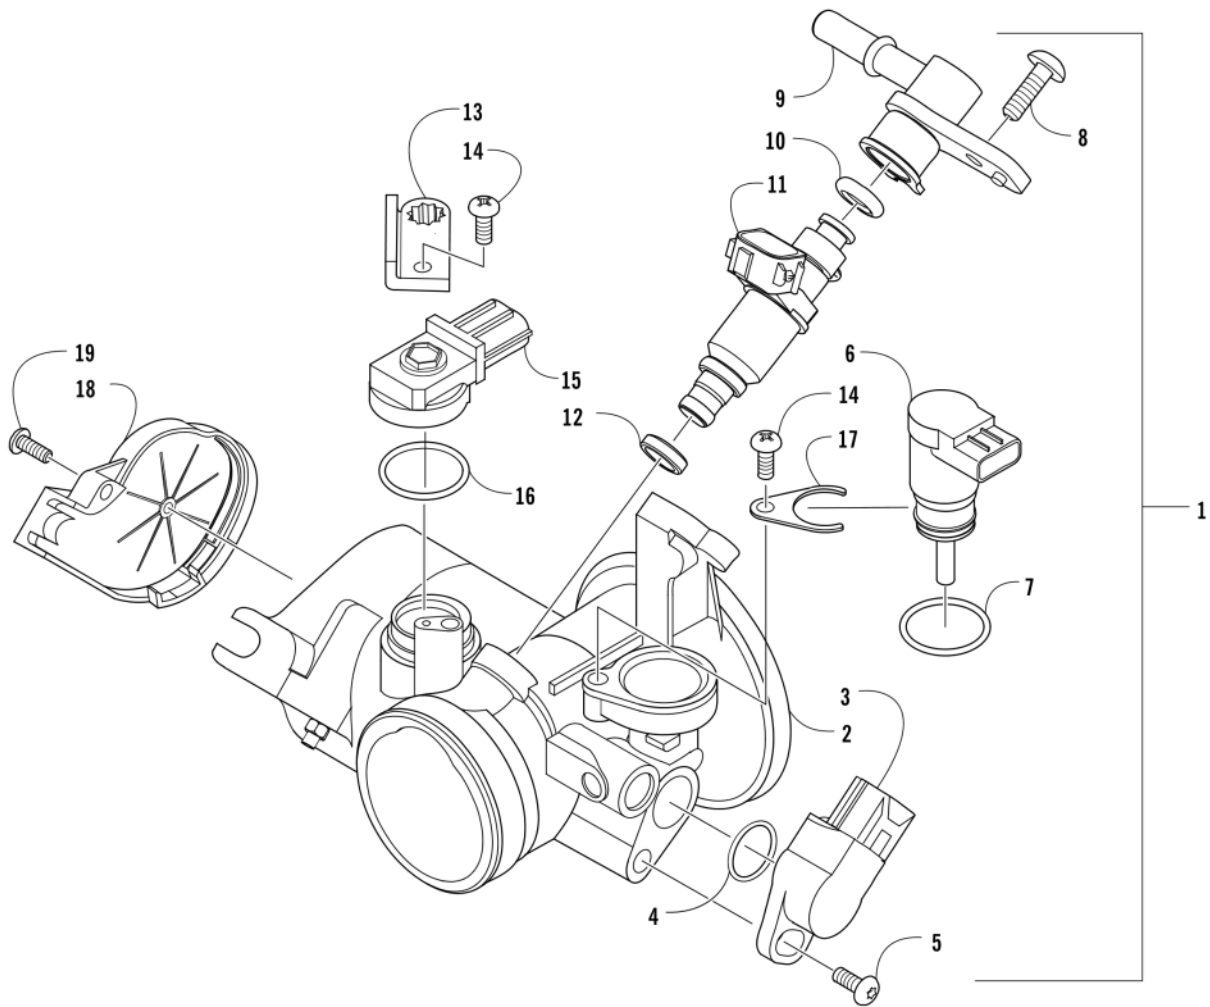

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2004		1	Throttle Body - Assembly	(inc. 2-19)	
2	0		1	Throttle Body		Not Serviced Individually
3	132-1974		1	Sensor, Throttle Position		
4	132-3037		1	O-Ring, Throttle Position Sensor		
5	132-3034		1	Screw, Machine		
6	132-1976		1	Valve, ISC		
7	132-3036		1	O-Ring, ISC Valve		
8	132-3038		1	Screw, Machine		
9	132-2002		1	Rail, Fuel		
10	132-2006		1	O-Ring, Fuel Injector		
11	132-2005		1	Injector, Fuel		
12	132-2007		1	Seal, Fuel Injector		
13	132-3032		1	Bracket, MAP Sensor		
14	132-3029		2	Screw, Machine		
15	132-1975		1	Sensor, MAP		

Item	Part No.	New Part	Qty	Name	Context	Footnote
16	132-3035		1	O-Ring, MAP Sensor		
17	132-3033		1	Plate, Retaining		
18	132-3030		1	Cover		
19	132-3028		1	Screw, Machine		

 
TILT FRAME ASSEMBLY [301832]

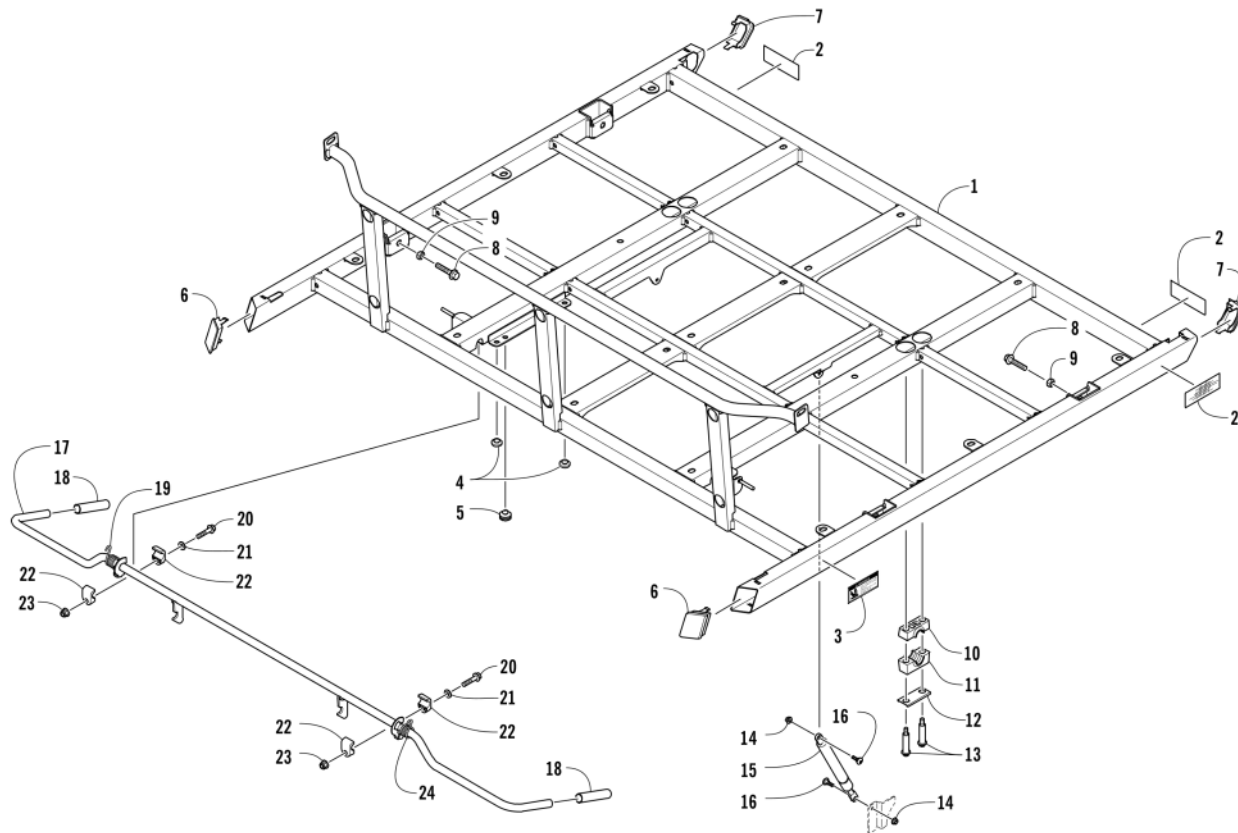

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2787		1	Frame,Tilt - Assembly		
2	132-2730		4	Decal, Reflector - Red		
3	130-8113		2	Decal, Warning - Pinch Point		
4	132-1819		4	Bumper		
5	132-2638		2	Bumper		
6	132-2740		1	Endcap, Front - Right		
6	132-2741		1	Endcap, Front - Left		
7	132-2738		1	Endcap, Rear - Right		
7	132-2739		1	Endcap, Rear - Left		
8	132-2629		4	Screw, Cap		
9	132-3076		4	Nut		
10	132-1808		2	Housing, Upper		
11	132-1807		2	Housing, Lower		
12	132-1810		2	Cap, Housing		
13	132-1931		4	Screw, Shoulder		
14	132-2096		4	Nut, Lock		
15	132-2775		2	Support, Lift		
16	132-1909		4	Screw, Shoulder		
17	132-2788		1	Rod, Latch - Tilt Frame		
18	132-2618		2	Grip, Latch Rod		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-2752		1	Spring, Latch - Right		
20	132-3062		2	Screw, Cap		
21	132-1898		2	Washer		
22	132-2615		4	Half-Clamp		
23	132-3085		2	Nut, Lock		
24	132-2753		1	Spring, Latch - Left		

 
TRANSMISSION ASSEMBLY [301869]

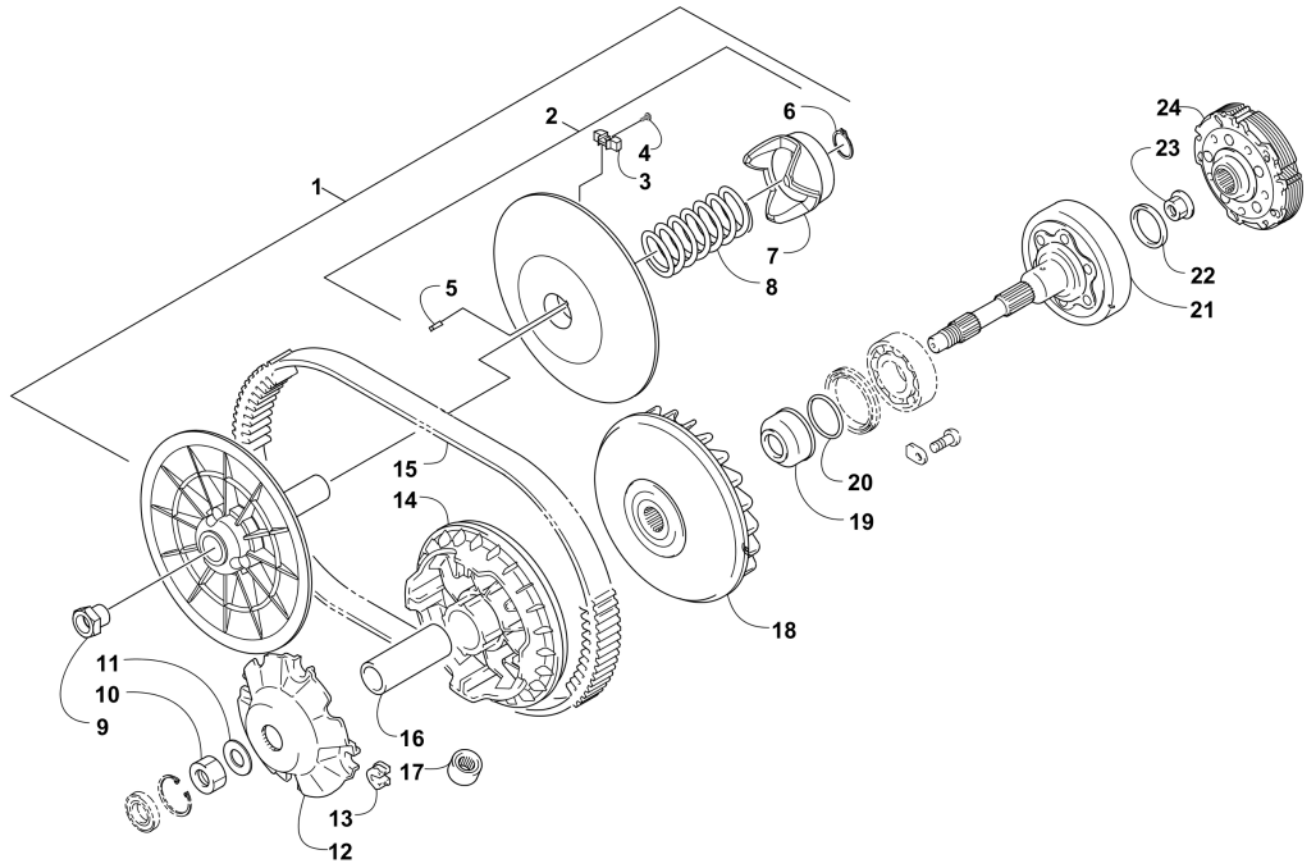

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-3208		1	Pulley, Driven - Assembly	(inc. 2-9)	
2	132-3209		1	Pulley, Driven - Uncalibrated	(inc. 3-6)	
3	132-2339		3	Shoe, Cam		
4	132-2317		3	Screw, Machine		
5	132-2336		1	Key		
6	132-2340		1	Ring, Snap - External		
7	132-2338		1	Cam		
8	132-2335		1	Spring - White		
9	132-2318		1	Nut		
10	132-2393		1	Nut		
11	132-2441		1	Washer		
12	132-2327		1	Plate, Movable Drive Face		
13	132-2328		4	Damper, Movable Drive Face		
14	132-2326		1	Face, Movable Drive		
15	132-2313		1	Belt, Drive		
16	132-2324		1	Spacer		


Item	Part No.	New Part	Qty	Name	Context	Footnote
17	132-2316		8	Roller		
18	132-2325		1	Face, Fixed Drive		
19	132-2314		1	Spacer, Fixed Drive Face		
20	132-1998		1	O-Ring		
21	132-2334		1	Housing, Clutch - Assembly		
22	132-2506		1	Seal		
23	132-2394		1	Nut		
24	132-2342		1	Clutch, Centrifugal - 6 Plate		

 WATER PUMP ASSEMBLY [301868]

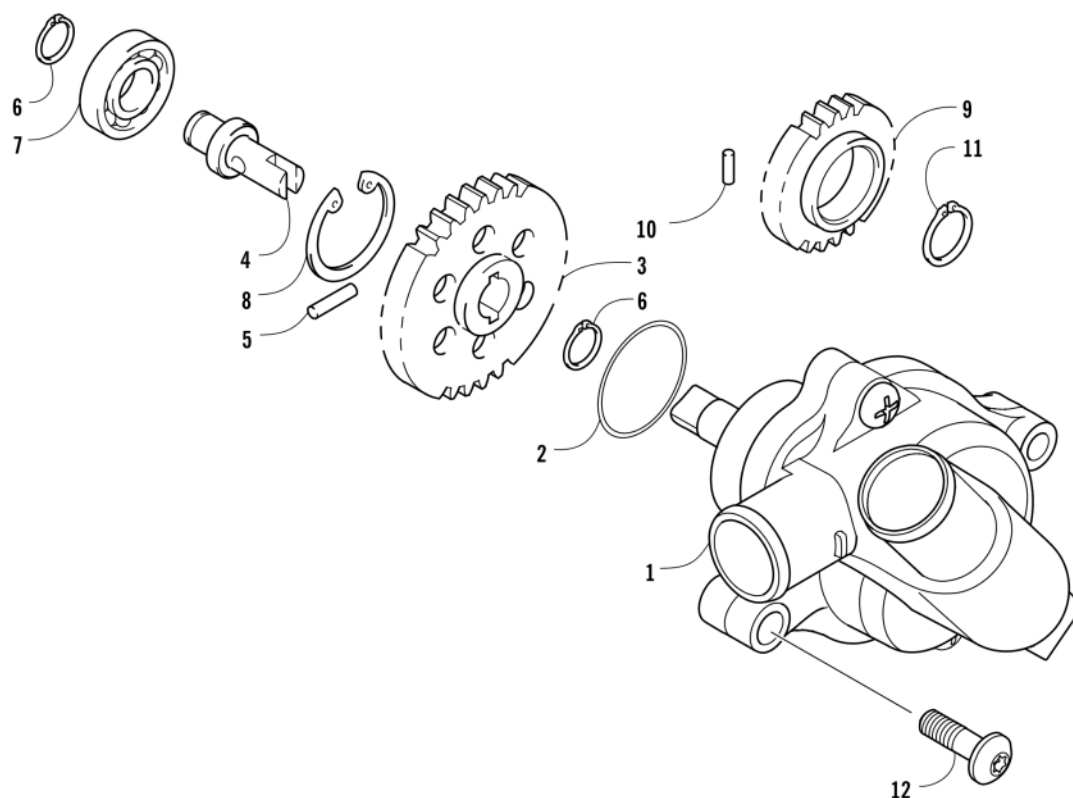


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-2237		1	Pump, Water - Assembly	(inc. 2)	
2	132-2473		1	O-Ring		
3	132-2238		1	Gear, Driven		
4	132-2239		1	Shaft, Driven Gear		
5	132-2450		1	Pin		
6	132-2521		2	Ring, Retaining		
7	132-2549		1	Bearing, Shaft		
8	132-2522		1	Ring, Retaining		
9	132-2208		1	Gear, Oil Pump Drive		
10	132-2449		1	Pin, Dowel		
11	132-2523		1	Ring, Retaining		
12	132-3097		2	Screw, Machine		

 WHEEL AND TIRE ASSEMBLY [301844]

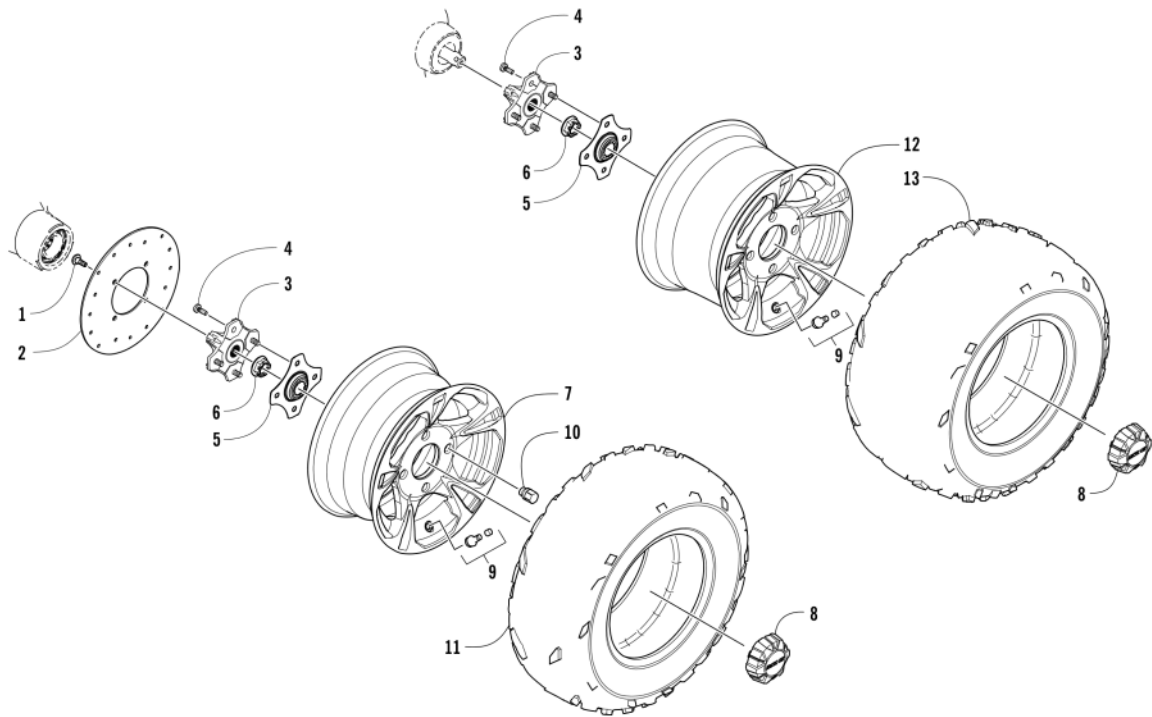

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-1939		16	Screw, Shoulder		
2	132-2660		2	Disc, Brake	10 inch	
2	132-2656		2	Disc, Brake - Rear	8 inch	
3	132-2679		2	Hub, Wheel - Front	(inc. 4)	
3	132-2681		2	Hub, Wheel - Rear	(inc. 4)	
4	132-1788		16	Stud		
5	130-8104		4	Plate, Hub		
6	132-1944		4	Nut, Castle		
7	132-2723		2	Wheel - Front	(inc. 8)	
8	132-2725		4	Cap, Wheel		
9	132-1760		4	Stem, Valve		
10	132-1947		16	Nut, Lug		
11	132-2606		2	Tire - Front		
12	132-2724		2	Wheel - Rear	(inc. 8)	
13	132-2607		2	Tire - Rear		

 WIRING HARNESS ASSEMBLY [301856]

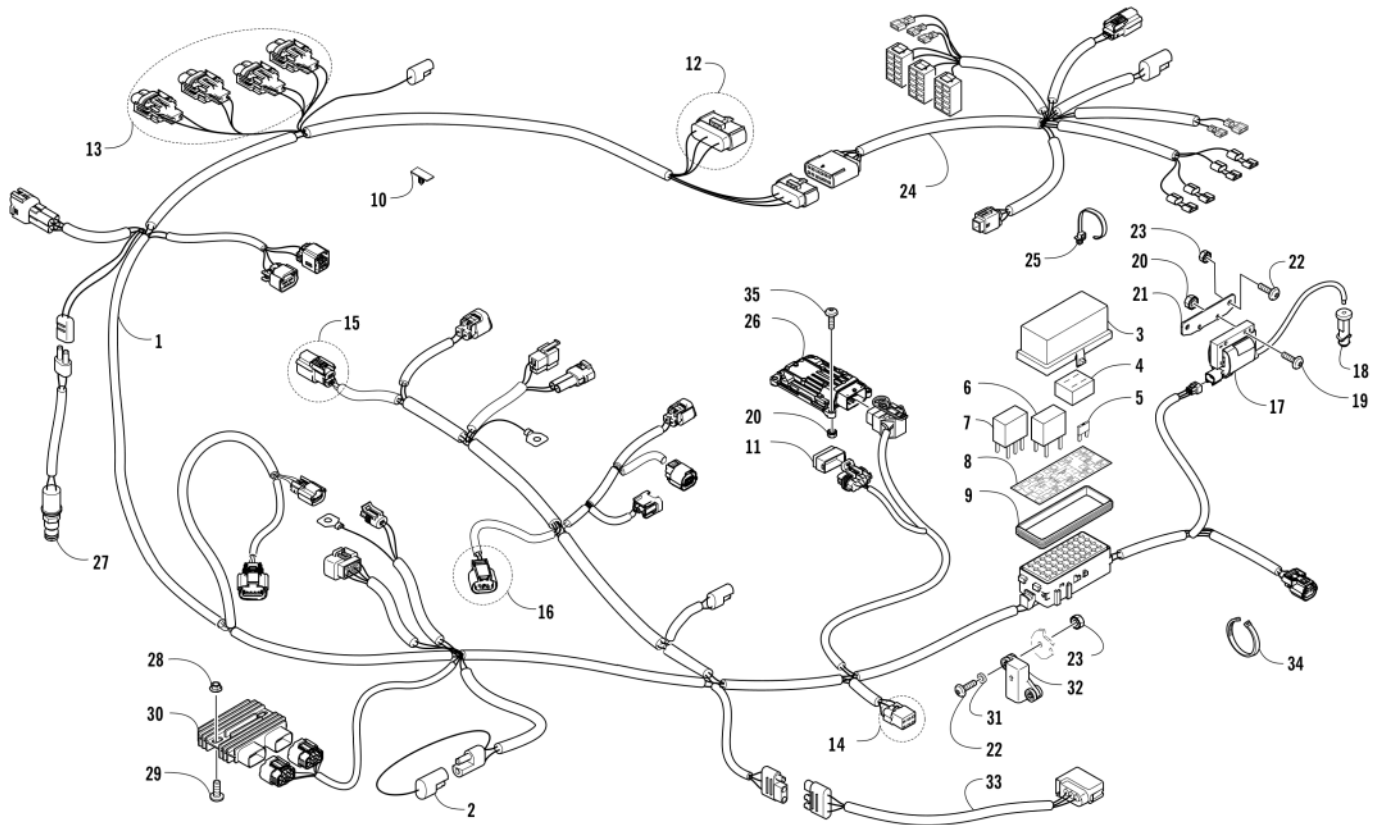

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	132-3238		1	Harness, Main	(inc. 2-11)	
2	132-2021		1	Tether, Accessory Connector		
3	132-1977		1	Cover, Fuse Block		
4	132-1971		1	Holder, Fuse		
5	132-1969		7	Fuse - 10 Amp		
5	132-1968		3	Fuse - 15 Amp		
5	132-1967		4	Fuse - 30 Amp		
6	132-1972		3	Relay (4-Pin) - 20 Amp		
7	132-1970		1	Relay (5-Pin) - 30 Amp		
8	132-2954		1	Decal, Fuse Block		
9	132-1978		1	Seal		
10	132-1980		AR	Clip, Routing		
11	132-1981		1	Cover, Diagnostics Connector		
12	132-2667		1	Repair Kit, Connector - LCD Gauge		
13	132-2657		AR	Repair Kit, Connector - Headlight		
14	132-2659		1	Repair Kit, Connector - Tilt Sensor		
15	132-1988		1	Repair Kit, Connector - Idle Speed Control		
16	132-2665		1	Repair Kit, Connector - 3P Map		
17	132-2351		1	Coil, Ignition - Assembly	(inc. 18)	
18	132-2343		1	Cap, Spark Plug		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	132-3105		2	Screw, Machine		
20	132-2094		6	Nut w/Washer		
21	132-2956		1	Bracket, Coil		
22	132-3088		4	Screw, Machine		
23	132-1929		4	Nut w/Washer		
24	132-2023		1	Harness, Console		
25	132-3242		AR	Tie, Cable - Push-Mount		
26	132-2080		1	ECM		
27	132-1830		1	Switch, Brake - Assembly		
28	132-3079		2	Nut		
29	132-3107		2	Screw, Machine		
30	132-2352		1	Regulator, Voltage		
31	132-1754		2	Washer		
32	132-1825		1	Sensor, Tilt		
33	132-2022		1	Harness, Adapter - Taillight		
34	132-1753		AR	Tie, Cable - 8 in.		
34	132-1755		AR	Tie, Cable - 11.5 in.		
34	132-2097		AR	Tie, Cable - 17.5 in.		
35	132-3106		4	Screw, Machine		

Attachments and Accessories

For UTV500AAC00000 and UTV700AAC00000 Utility Task Vehicles

Product Name	Model/Part
Kit-LXC Cab	132-3116
Kit-VXC Cab	132-3117
Kit-Winch, PV3000	132-3118
Light Bar-9-Led, 5 Watt, 1-Row	132-3119
Light Bar-Baja	132-3120
Kit-Hitch	132-3121
Kit-Hitch Ball, 1 7/8 In.	132-3122
Kit-Hitch Ball, 2 In	132-3123
Kit-Mirror	132-3124
Kit-Panel, Switch Mount	132-3125
Kit-LXC Windshield Wiper	132-3126
Kit-LXC Windshield Washer	132-3127
Kit-Heater, 2 Def	132-3128
Kit-Snow Plow	132-3129
Kit-Box Enclosure, PR	132-3130
Kit-Bumper, Front	132-3131
Kit-Bumper, Rear	132-3132
Kit-Nerf Bars	132-3133
Mirror-Sideview, LH	132-3134
Mirror-Sideview, RH	132-3135
Tiger Trax2 (UTV700AAC00000 only)	132-3136
Kit-Clutch, 4-Season Tracks	132-3137
Kit-Mounting Brackets	132-3138
Quick Attach TigerTrax Extension	132-3139
Kit-Stereo, Complete	132-3140
Kit-LXC Windshield	132-3141
Kit-LXC Door Kit, Pair	132-3142
Kit-LXC Rear Panel	132-3143
Kit-LXC Roof/Headliner	132-3144
Kit-VXC Door Kit	132-3145
Kit-Roof, 2-Piece	132-3146
Kit-Full Windshield	132-3147
Kit-VXC Windshield, Glass	132-3148
Kit-VXC Rear Panel	132-3149
Kit-Windshield, Tip-Out Polycarbonate	132-3150
Kit-Windshield, Vented-Full Polycarbonate	132-3151
Kit-Windshield, Low (RP)-G2	132-3152
Rope-Winch, Synthetic	132-3153
Windshield Wiper, Manual	132-3154
Tire-Kenda	132-3155
Storage Box, Under Hood	132-3156
Oil Cooler	132-3157
Fast Clamp	132-3158
Storage Box, RH	132-3159
Storage Box, LH	132-3160
80W-90 HP Gear Lube	38906
0W-40 Full Synthetic Oil - 1 Qt Btl	38918
15W-50 Full Synthetic Oil – 1 Qt Btl	38919

Tools

For UTV500AAC00000 and UTV700AAC00000 Utility Task Vehicles

Product Name	Model/Part
Tool-Crankcase Separator, Large	132-3161
Tool-Installation, Seal.....	132-3162
Tool-Gear Holder, Secondary Drive, 950	132-3163
Set-Rotor Removal [M50 X 1.5]	132-3164
Tool-Valve Gap, Short Shank.....	132-3165
Wrench-Driven Clutch Holder with Instructions	132-3166
Tool-Seal Install, Clutch Cover with Instructions.....	132-3167
Adapter-Sidecase Puller, ATV Eng [M16xm6]	132-3168
Toolkit - UTV Ver 1 (With Crankcase Separator).....	132-1750
Toolkit - UTV Ver 2 (Without Crankcase Separator)	132-3197
Tool-CATT II, Cat Advanced Tech [Ver 2]	132-3170
Driver, 48mm - Internal Hex	132-3171
Tool-Clamp, CV Boot	132-3172
Tool-Removal, Pinion Gear & Shaft	132-3173
Tool-Separator, Universal Joint	132-3174
Gauge-Drive Belt	132-3175
Tool-Valve Gap, 9mm Hex.....	132-3176
Flywheel Puller [E001]	132-3177
Flywheel Puller [E003]	132-3178
Kit-Compression Tester	132-3179
Holder-CVT Pulley	132-3180
Retainer-Bevel Gear Shaft	132-3181
Harness-Electric Choke Test.....	132-3182
Protector-Crankshaft, M20 X 1.5 Threads	132-3183
Bolt-Crank Rotation, Valve Adjustment	132-3184
Tool-Seal Protector, 950 Crankshaft	132-3185
Wrench-Hub Retaining with Instructions.....	132-3186
Harness-EFI Diagnostic	132-3187
Wrench-Combination Spanner with Instructions.....	132-3188
Kit-Oil Pressure Test.....	132-3189
Kit-Engine Leak Down.....	132-3190
Tool-Hose Clamp Pincher	132-3191
Wrench-Oil Filter	132-3192
Spring Tool	132-3193
Tester-Battery, Yuasa Battery 01	132-3194
Kit-TPS Adjustment Tool.....	132-3195
Charger-Battery, 3.3 A 12v [Ctek]	132-3196
Kit-Fuel Pressure Tester	132-3198

Notes:

Notes:

Notes:



Count on it.