



**Count on it.**

Form No. 3414-760 Rev B

# Parts Catalog

## Engine Kit

**GreensPro™ 1200 Greens Roller**

Model No. 136-6189



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Engine Assembly No. 136-6189 ..... 4

Cylinder Head Assembly..... 6

Cylinder Barrel Assembly ..... 8

Crankcase Cover Assembly ..... 10

Crankshaft Assembly..... 12

Piston and Connecting Rod Assembly ..... 14

Camshaft Assembly..... 16

Recoil Starter Assembly ..... 18

Fan Cover Assembly ..... 20

Carburetor Assembly..... 22

Air Cleaner Assembly ..... 24

Muffler Assembly ..... 26

Fuel Tank Assembly..... 28

Flywheel Assembly ..... 30

Ignition Coil Assembly..... 32

Control Assembly..... 34


Label Assembly ..... 36

Wrench..... 38

Decal Assembly ..... 40

Gasket Kit ..... 42

# Engine Assembly No. 136-6189

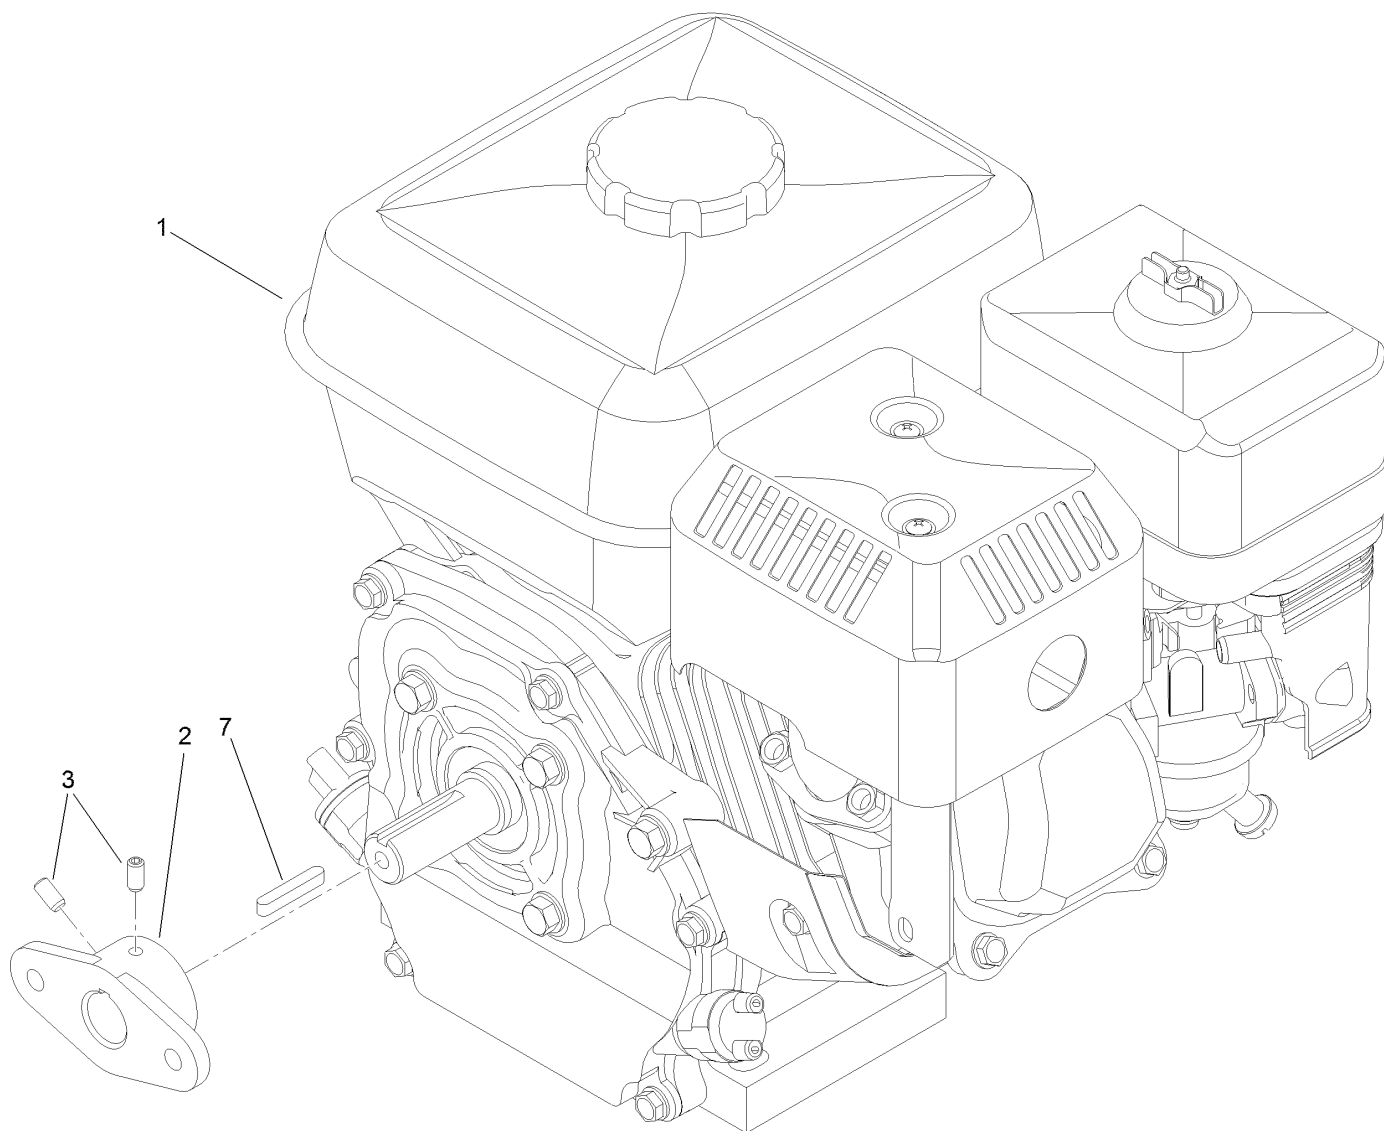


## Engine Assembly No. 136-6189 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 133-5627           | 1           | Engine-Honda       |
| 2           | 138-2243           | 1           | Hub-Engine         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 3           | 133-1717           | 2           | Screw-Set          |
| 7           | 103-2739           | 1           | Key                |


# Cylinder Head Assembly

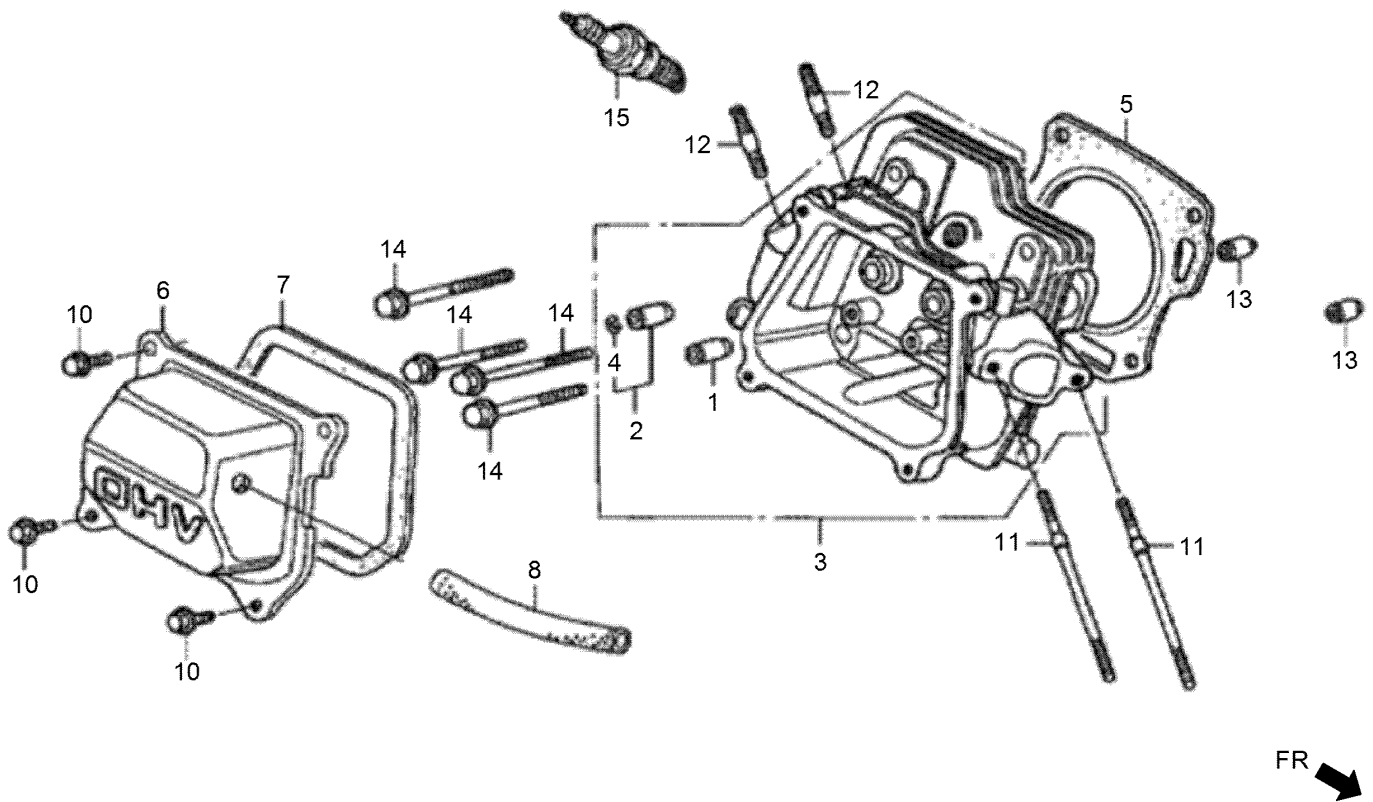

## Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-0118           | 1           | Guide-Intake Valve   | 8           | 132-0234           | 1           | Tube-Breather      |
| 2           | 132-0119           | 1           | Guide-Exhaust Valve  | 10          | 132-4880           | 4           | Bolt-Flange-6X12   |
| 3           | 132-0124           | 1           | Cylinder Head ASM    | 11          | 132-0612           | 2           | Bolt-Stud-6X112    |
| 4           | 132-0125           | 1           | Clip-Valve Guide     | 12          | 132-0615           | 2           | Bolt-Stud-8X32     |
| 5           | 132-0126           | 1           | Gasket-Cylinder Head | 13          | 132-0697           | 2           | Dowel Pin-10X16    |
| 6           | 132-0127           | 1           | Head Cover ASM       | 14          | 131-8226           | 4           | Bolt-Flange-8X60   |
| 7           | 132-0133           | 1           | Packing-Head Cover   | 15          | 131-8233           | 1           | Sparkplug          |


# Cylinder Barrel Assembly

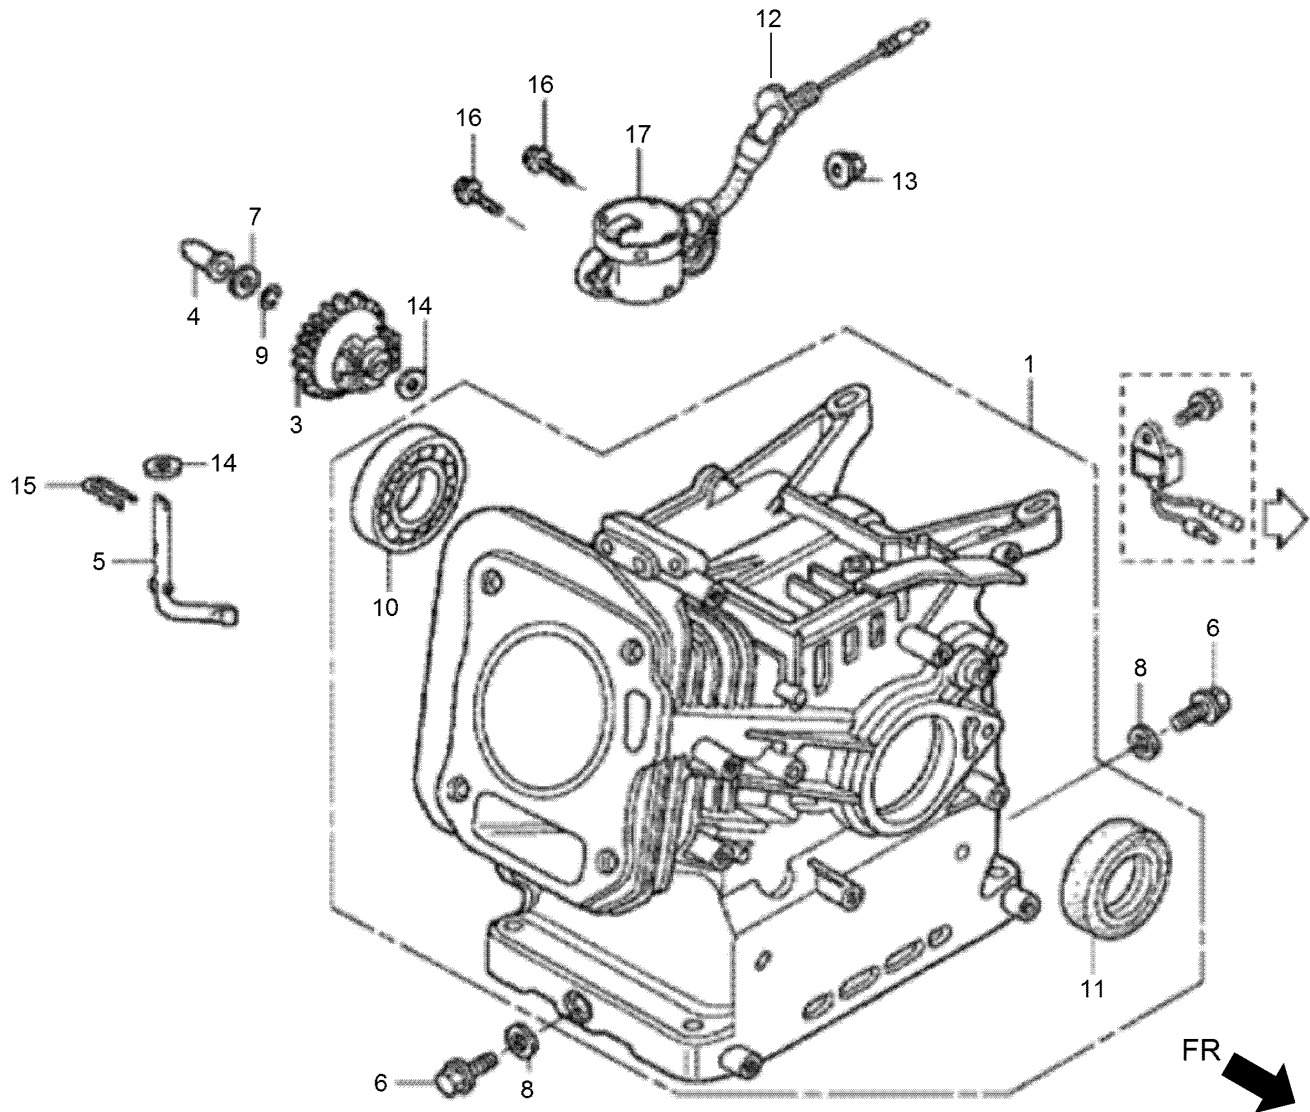

## Cylinder Barrel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 132-0114           | 1           | Barrel ASM-Cylinder      | 10          | 132-0649           | 1           | Bearing-Radial Ball  |
| 3           | 132-0294           | 1           | Governor ASM             | 11          | 132-0654           | 1           | Oil Seal-25X41X6     |
| 4           | 132-0304           | 1           | Slider-Governor          | 11          | 132-0658           | 1           | Oil Seal-25X41.25X6  |
| 5           | 132-0307           | 1           | Shaft-Governor Arm       | 12          | 132-0668           | 1           | O-Ring-14Mm          |
| 6           | 132-0622           | 2           | Bolt-Drain Plug          | 13          | 132-0686           | 1           | Nut-Flange-10Mm      |
| 7           | 132-0635           | 1           | Washer-Thrust-6Mm        | 14          | 132-0688           | 2           | Washer-Plain-6Mm     |
| 8           | 132-0640           | 2           | Washer-Drain Plug-10.2Mm | 15          | 132-0693           | 1           | Pin-Lock-8Mm         |
| 9           | 132-0642           | 1           | Clip-Governor Holder     | 16          | 131-8221           | 2           | Bolt-Flange-6X12     |
| 10          | 132-0651           | 1           | Bearing-Radial Ball      | 17          | 132-0532           | 1           | Switch ASM-Oil Level |
| 10          | 132-0650           | 1           | Bearing-Radial Ball      |             |                    |             |                      |


# Crankcase Cover Assembly

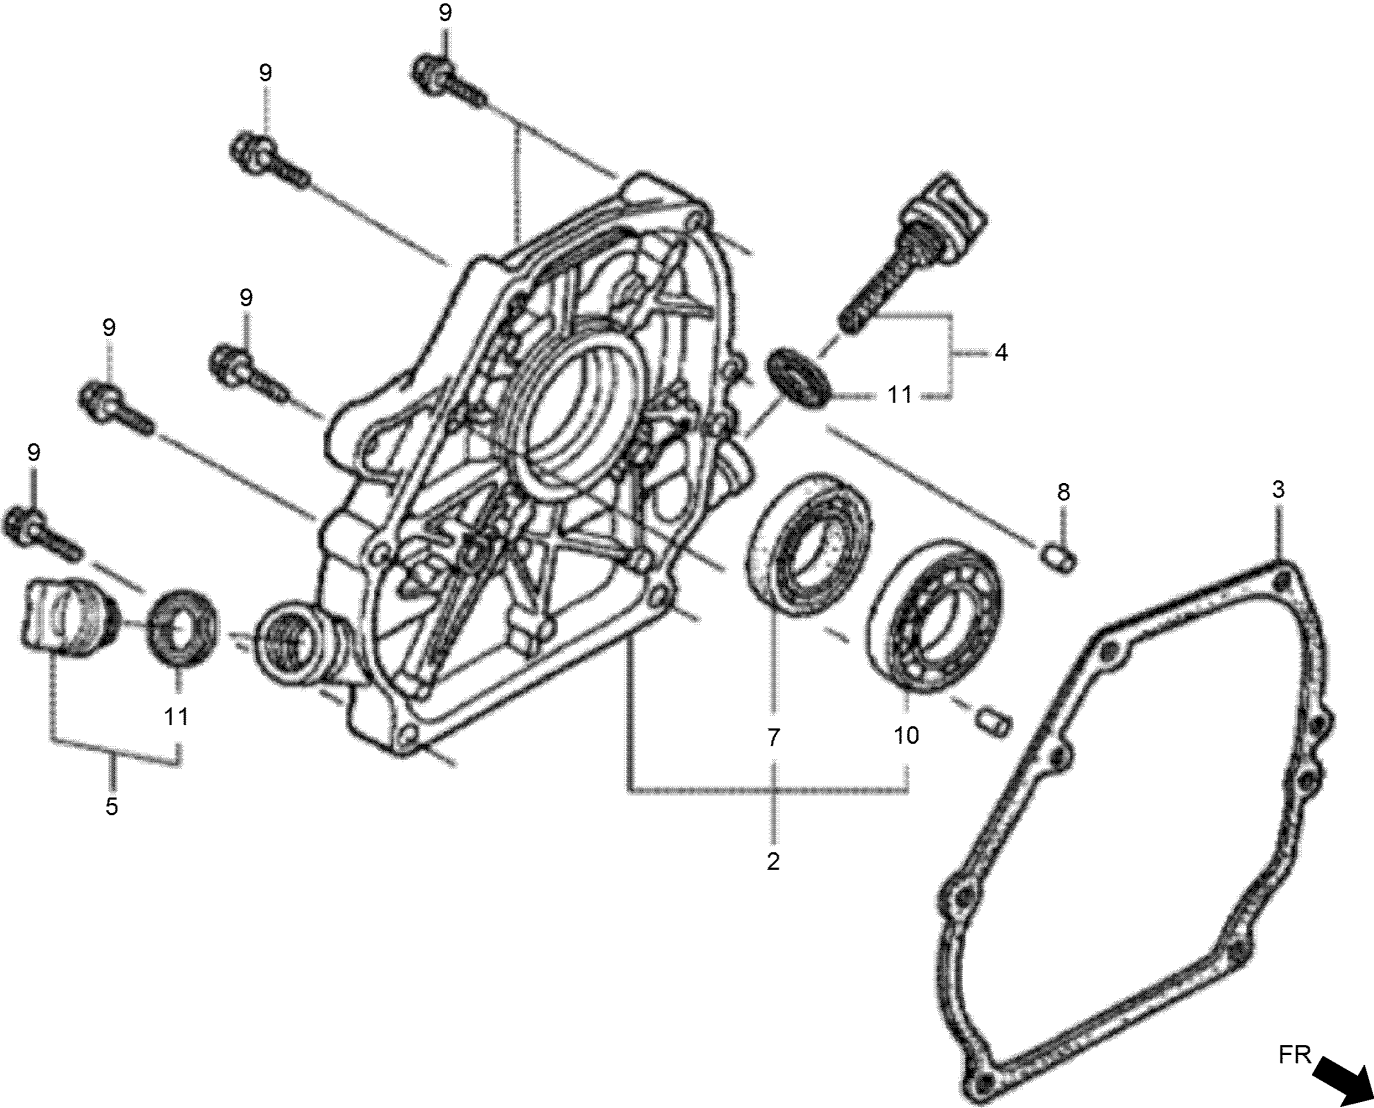

## Crankcase Cover Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------------|
| 2           | 132-0103           | 1           | Cover ASM-Crankcase | 7           | 132-0658           | 1           | Oil Seal-25X41.25X6      |
| 3           | 132-0108           | 1           | Packing-Case Cover  | 8           | 132-0695           | 2           | Dowel Pin-8X14           |
| 4           | 132-0220           | 1           | Cap ASM-Oil Filler  | 9           | 131-8225           | 6           | Bolt-Flange-8X32         |
| 5           | 132-0221           | 1           | Cap ASM-Oil Filler  | 10          | 131-8227           | 1           | Bearing-Radial Ball-6205 |
| 7           | 132-0654           | 1           | Oil Seal-25X41X6    | 11          | 132-0224           | 2           | Packing-Oil Filler Cap   |

# Crankshaft Assembly

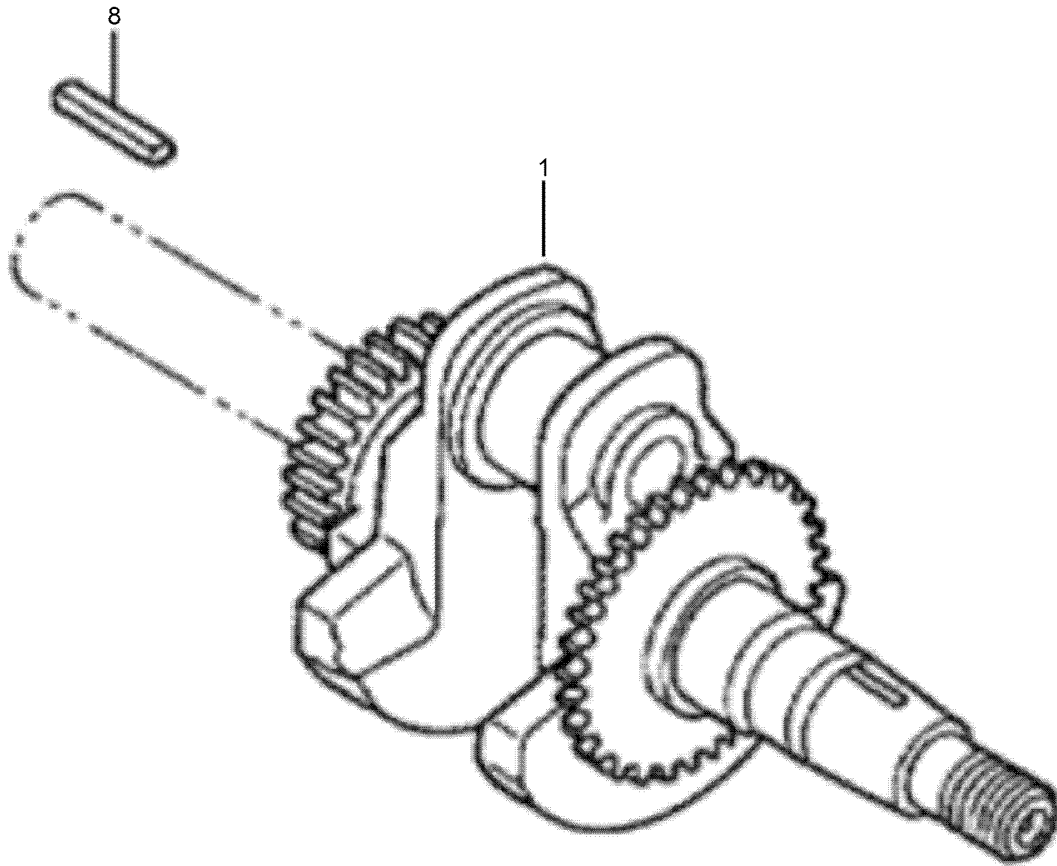


FR 

## Crankshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-0164           | 1           | Crankshaft ASM     |
| 8           | 132-0647           | 1           | Key-5X5X33         |


# Piston and Connecting Rod Assembly

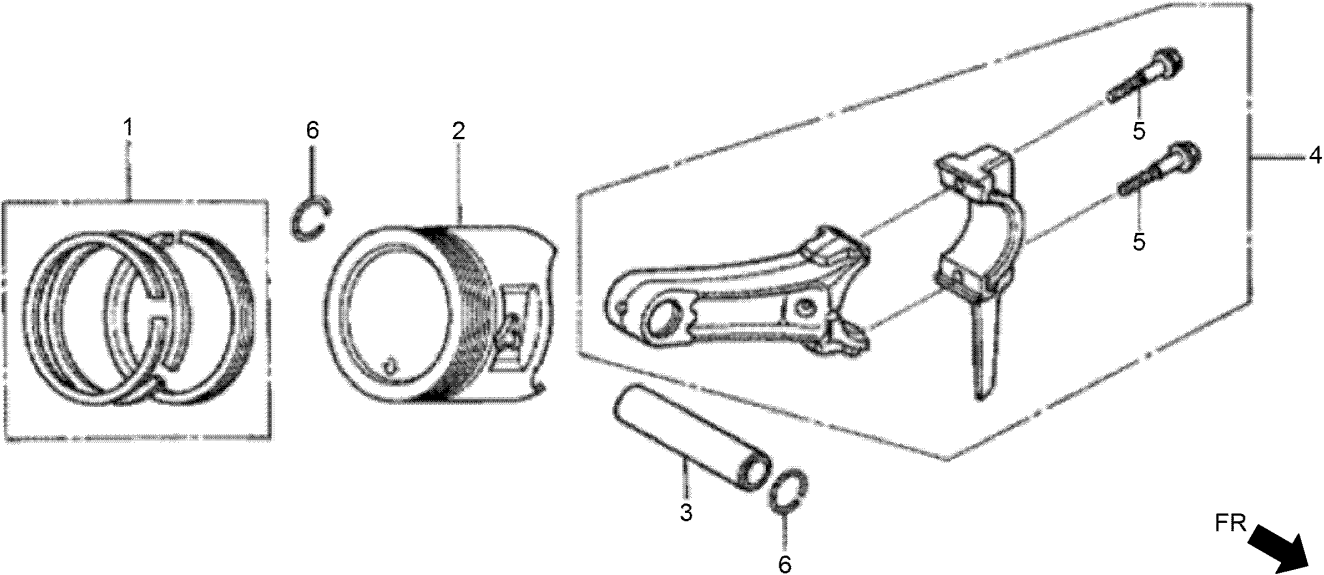

## Piston and Connecting Rod Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 132-0137           | 1           | Ring Set-Piston (STD) | 4           | 132-0155           | 1           | Rod ASM-Connecting   |
| 1           | 132-0138           | 1           | Ring Set-Piston (STD) | 5           | 132-0573           | 2           | Bolt-Connecting Rod  |
| 2           | 132-0144           | 1           | Piston                | 6           | 132-0637           | 2           | Clip-Piston Pin-18Mm |
| 3           | 132-0150           | 1           | Pin-Piston            |             |                    |             |                      |


# Camshaft Assembly

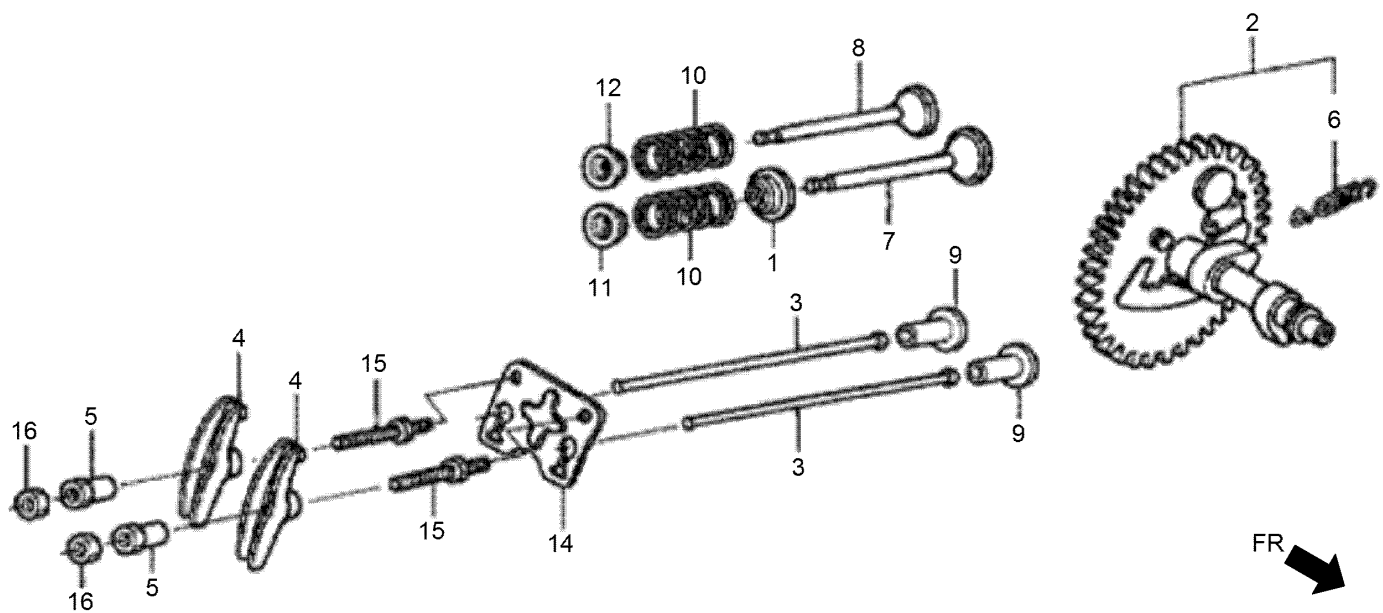

## Camshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------------|
| 1           | 132-0120           | 1           | Seal-Valve Stem      | 10          | 132-0206           | 2           | Spring-Valve                 |
| 2           | 132-0172           | 1           | Camshaft ASM         | 11          | 132-0211           | 1           | Retainer-Intake Valve Spring |
| 3           | 132-0181           | 2           | Rod-Push             | 12          | 132-0211           | 1           | Retainer-Intake Valve Spring |
| 4           | 132-0184           | 2           | Arm-Valve Rocker     | 14          | 132-0215           | 1           | Plate-Push Rod Guide         |
| 5           | 132-0188           | 2           | Pivot-Rocker Arm     | 15          | 132-0592           | 2           | Bolt-Pivot-8Mm               |
| 6           | 132-0191           | 1           | Spring-Weight Return | 16          | 132-0629           | 2           | Nut-Pivot Adjusting          |
| 7           | 132-0194           | 1           | Valve-Intake         |             |                    |             |                              |
| 8           | 132-0198           | 1           | Valve-Exhaust        |             |                    |             |                              |
| 9           | 132-0203           | 2           | Lifter-Valve         |             |                    |             |                              |


# Recoil Starter Assembly

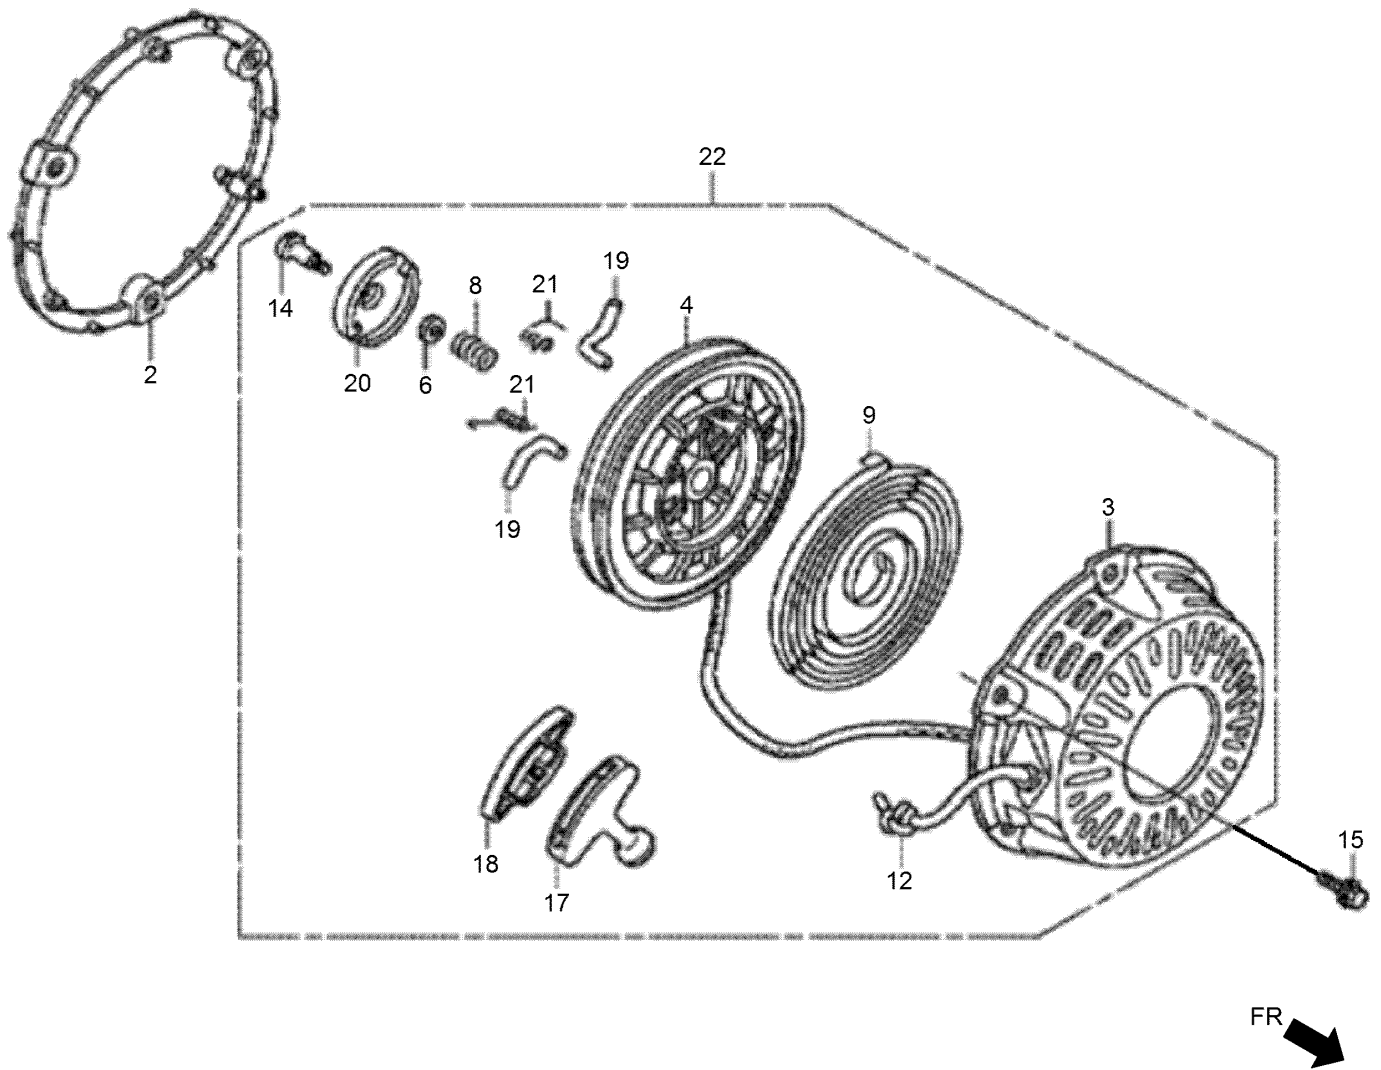

## Recoil Starter Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|-----------------------------------|-------------|--------------------|-------------|---------------------|
| 2           | 132-0485           | 1           | Spacer-Recoil Starter Mtg         | 14          | 132-0579           | 1           | Screw-Setting       |
| 3           | 132-0486           | 1           | Recoil Starter Case ASM<br>(R280) | 15          | 131-8223           | 3           | Bolt-Flange-6X18    |
| 4           | 138-9142           | 1           | Reel-Recoil, Starter              | 17          | 132-0502           | 1           | Knob-Recoil Starter |
| 6           | 132-0492           | 1           | Plate-Friction                    | 18          | 132-0509           | 1           | Knob-Reinforcement  |
| 8           | 132-0494           | 1           | Spring-Friction                   | 19          | 138-9143           | 2           | Ratchet-Starter     |
| 9           | 132-0495           | 1           | Spring-Recoil Starter             | 20          | 138-9144           | 1           | Guide-Ratchet       |
| 12          | 132-0507           | 1           | Rope-Recoil Starter               | 21          | 138-9145           | 2           | Spring-Return       |
|             |                    |             |                                   | 22          | 138-9123           | 1           | Starter ASM-Recoil  |


Fan Cover Assembly

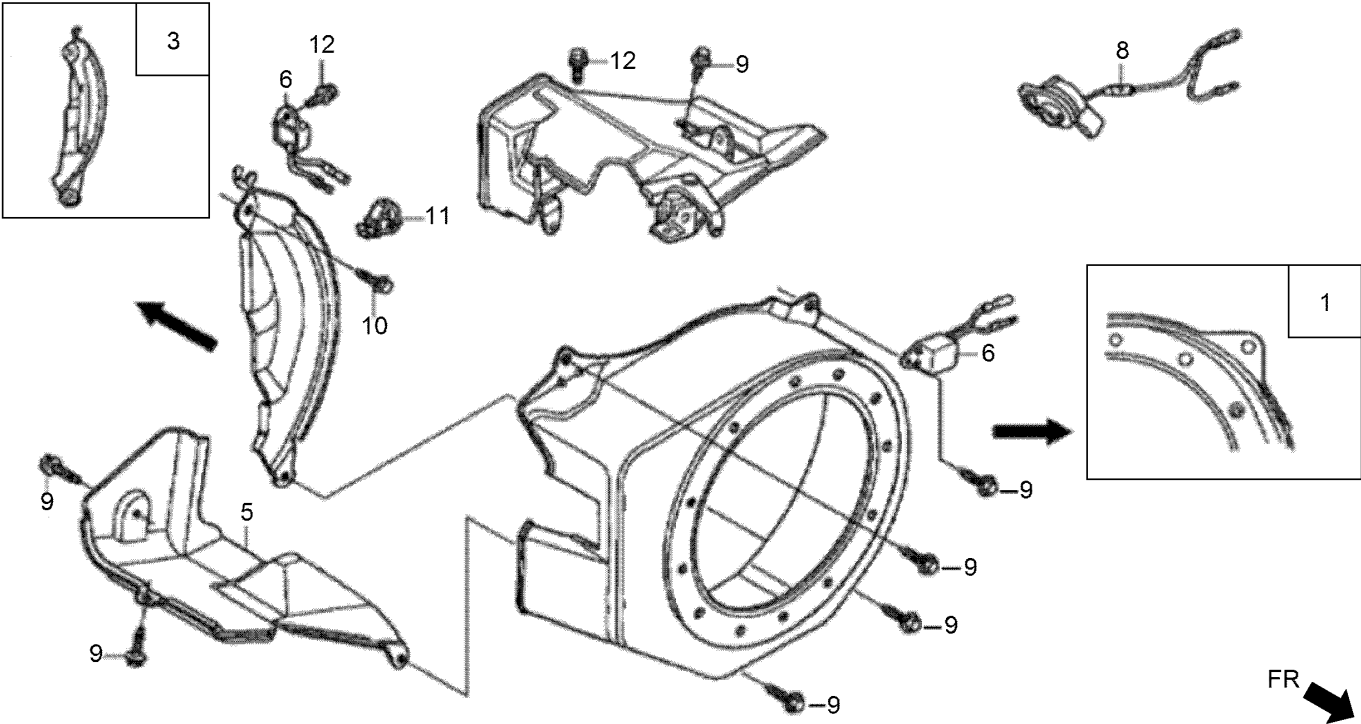

## Fan Cover Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               |
|-------------|--------------------|-------------|---------------------------------------|-------------|--------------------|-------------|----------------------------------|
| 1           | 132-0464           | 1           | Fan Cover ASM (R280)                  | 8           | 140-0252           | 1           | Switch ASM., Engine Stop (Minda) |
| 3           | 132-0469           | 1           | Side Plate ASM                        | 9           | 132-4880           | 6           | Bolt-Flange-6X12                 |
| 5           | 132-0473           | 1           | Shroud ASM                            | 10          | 132-0605           | 1           | Bolt-Flange-6X20                 |
| 6           | 132-0529           | 1           | Alert Unit-Oil                        | 11          | 132-0641           | 1           | Clip-Harness                     |
| 8           | 140-0251           | 1           | Switch ASM., Engine Stop (Toyo Denso) | 12          | 131-8220           | 1           | Bolt-Flange-6X8                  |


Carburetor Assembly

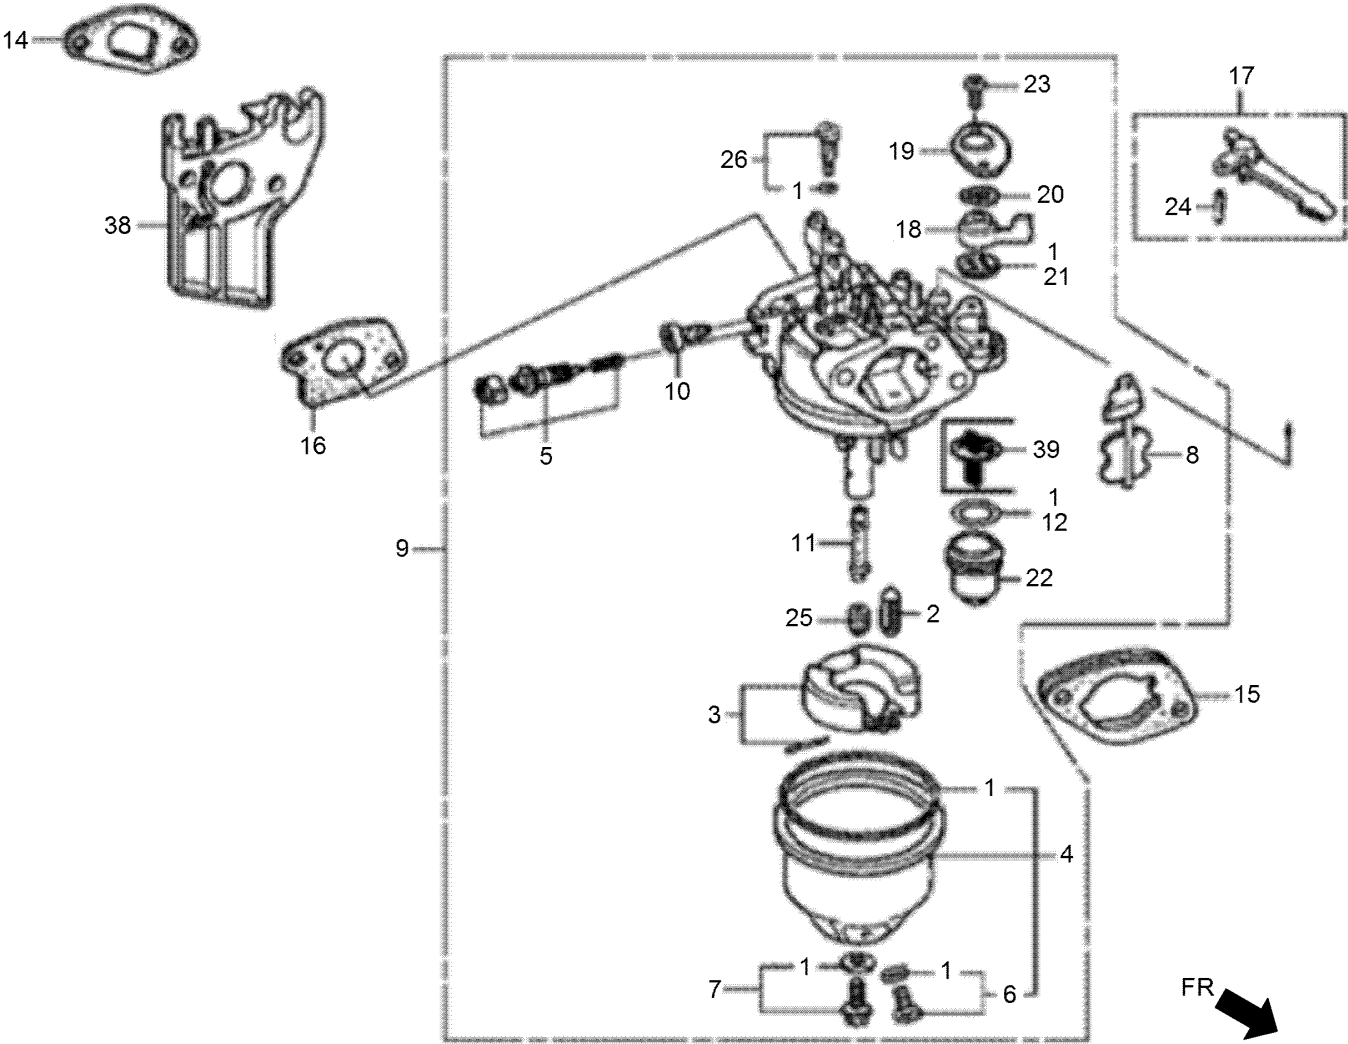

## Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 132-0239           | 1           | Gasket Set                | 16          | 132-0287           | 1           | Packing-Carburetor    |
| 2           | 132-0241           | 1           | Valve Set-Float           | 17          | 132-0343           | 1           | Choke Lever ASM       |
| 3           | 132-0242           | 1           | Float Set                 | 18          | 132-0359           | 1           | Lever-Cock            |
| 4           | 132-0247           | 1           | Chamber Set-Float         | 19          | 132-0360           | 1           | Plate-Lever Setting   |
| 5           | 132-0250           | 1           | Screw Set-Pilot           | 20          | 132-0362           | 1           | Spring-Cock Lever     |
| 6           | 132-0251           | 1           | Screw Set-Drain           | 21          | 132-0364           | 1           | Packing-Fuel Cock     |
| 7           | 132-0253           | 1           | Screw Set                 | 22          | 132-0366           | 1           | Cup-Fuel Strainer     |
| 8           | 132-0257           | 1           | Choke Set                 | 23          | 132-0676           | 2           | Screw-Pan-3X6         |
| 9           | 132-0265           | 1           | Carburetor ASM            | 24          | 132-0698           | 1           | Pin-Spring-2X12       |
| 10          | 132-0268           | 1           | Screw-Throttle Stop       | 25          | 131-8237           | 1           | Jet-Main, No. 75      |
| 11          | 132-0272           | 1           | Nozzle-Main               | 26          | 131-8239           | 1           | Jet Set-Pilot, No. 40 |
| 12          | 132-0276           | 1           | Packing-Fuel Strainer Cup | 38          | 132-0278           | 1           | Insulator-Carburetor  |
| 14          | 132-0281           | 1           | Packing-Insulator         | 39          | 132-0365           | 1           | Filter-Cup            |
| 15          | 132-0284           | 1           | Carburetor Spacer ASM     |             |                    |             |                       |


# Air Cleaner Assembly

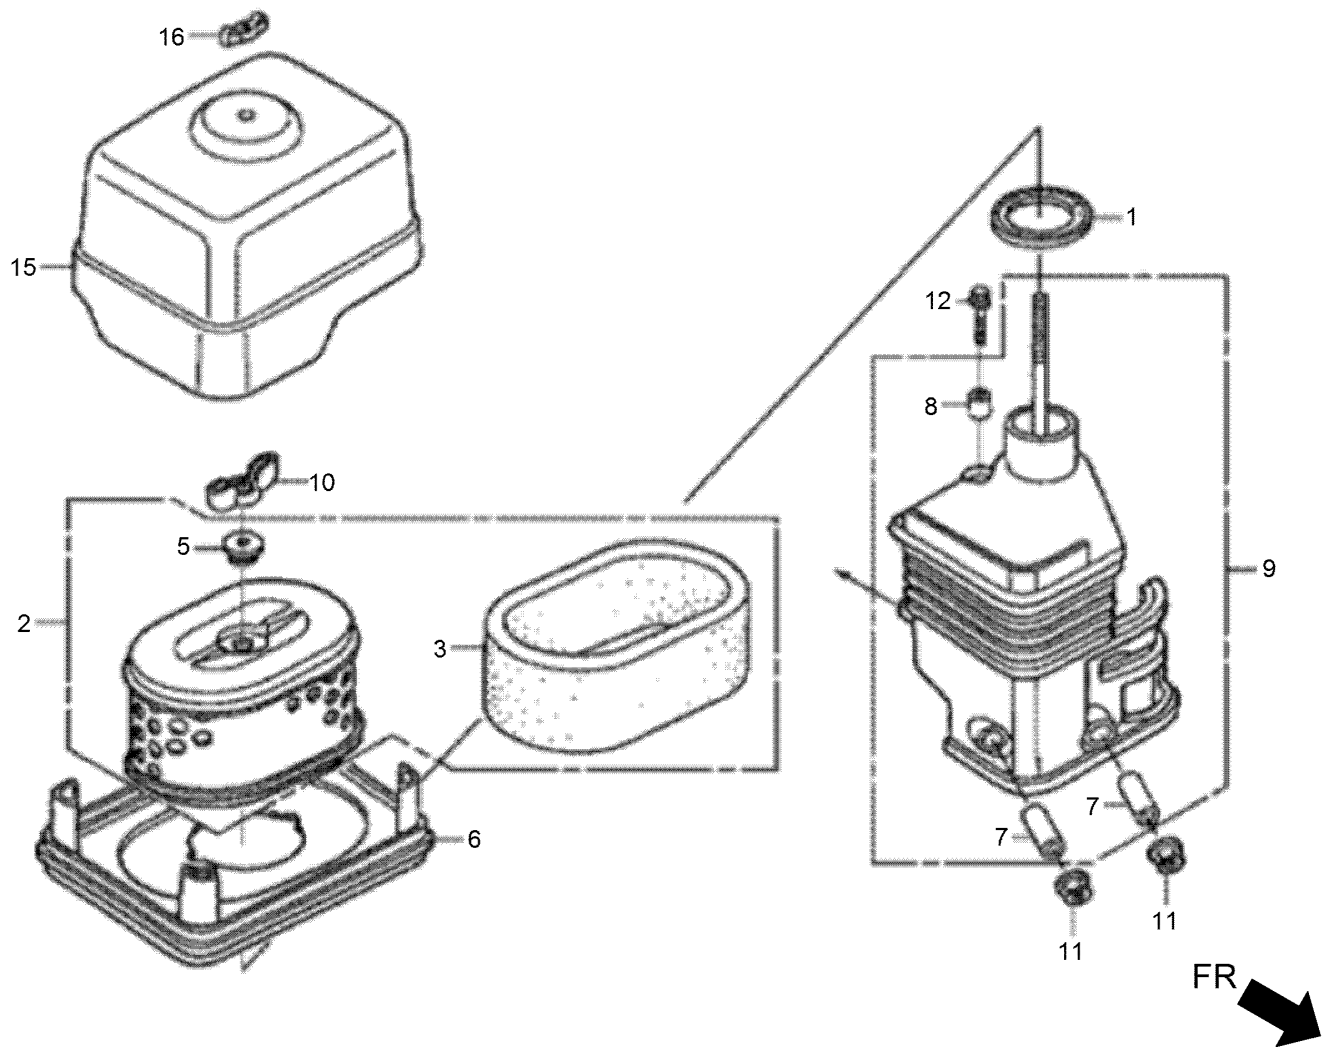

## Air Cleaner Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 132-0291           | 1           | Packing-Elbow               | 9           | 132-0396           | 1           | Elbow Comp-Air Cleaner |
| 2           | 138-9146           | 1           | Element, Air Cleaner (Dual) | 10          | 132-0631           | 1           | Nut-Tool Box Setting   |
| 3           | 132-0372           | 1           | Filter-Outer                | 11          | 132-4881           | 2           | Nut-Flange-6Mm         |
| 5           | 132-0391           | 1           | Grommet-Air Cleaner         | 12          | 131-8224           | 1           | Bolt-Flange-6X20       |
| 6           | 132-0392           | 1           | Nose-Silencer               | 15          | 132-0388           | 1           | Cover-Air Cleaner      |
| 7           | 132-0393           | 2           | Collar-Air Cleaner          | 16          | 138-9147           | 1           | Nut, Air Cleaner       |
| 8           | 132-0394           | 1           | Collar B-Air Cleaner        |             |                    |             |                        |


Muffler Assembly

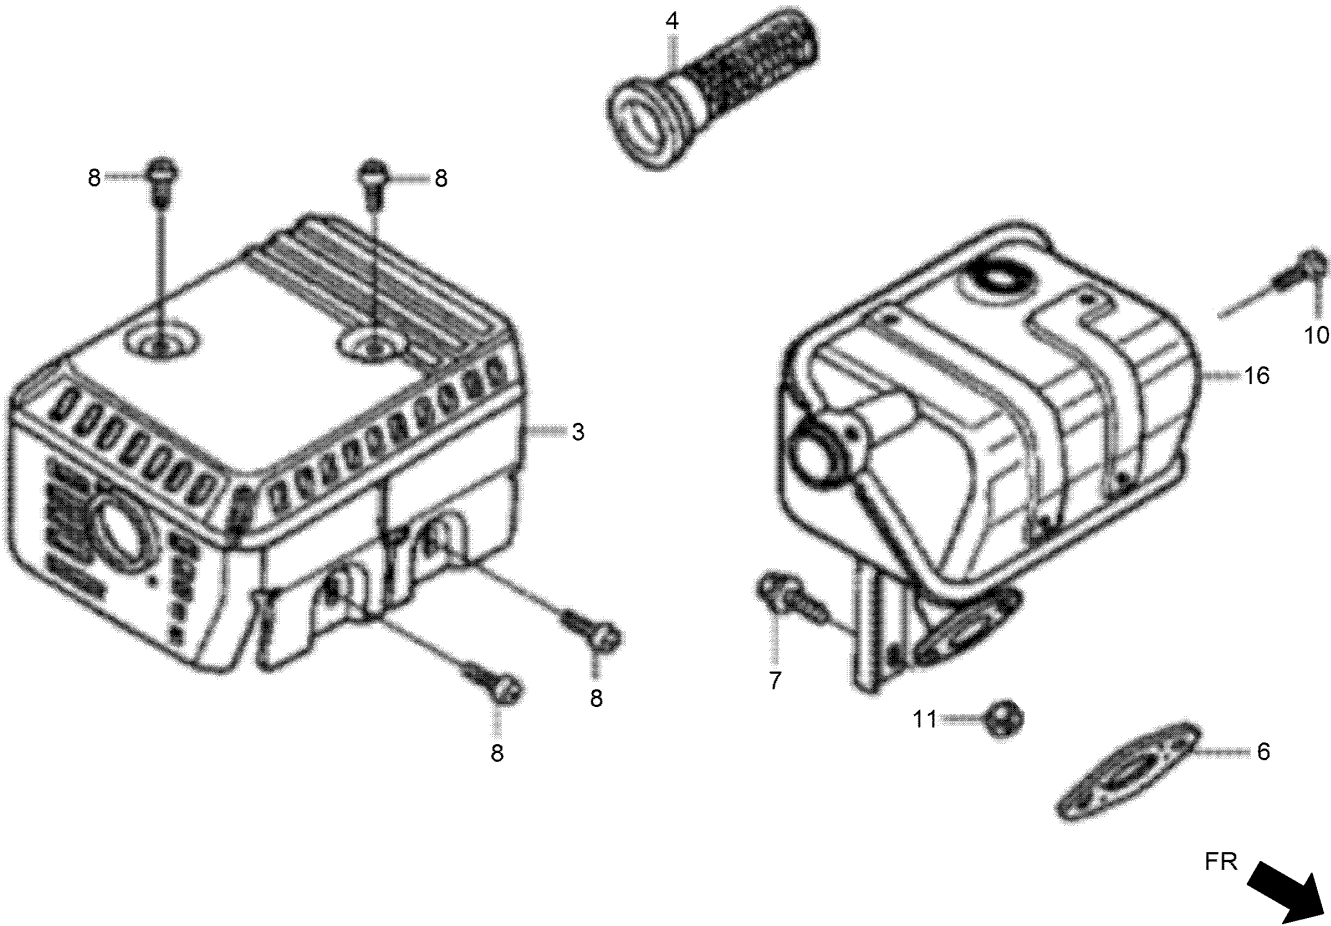

## Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 3           | 132-0453           | 1           | Muffler Protector ASM | 8           | 132-0616           | 4           | Screw-Tapping-5X8  |
| 4           | 132-0456           | 1           | Arrester-Spark        | 10          | 132-0617           | 1           | Screw-Tapping-4X6  |
| 6           | 132-0457           | 1           | Gasket-Muffler        | 11          | 132-0684           | 2           | Nut-Hex-8Mm        |
| 7           | 132-0600           | 1           | Bolt-Flange-6X13      | 16          | 132-0446           | 1           | Muffler ASM        |


# Fuel Tank Assembly

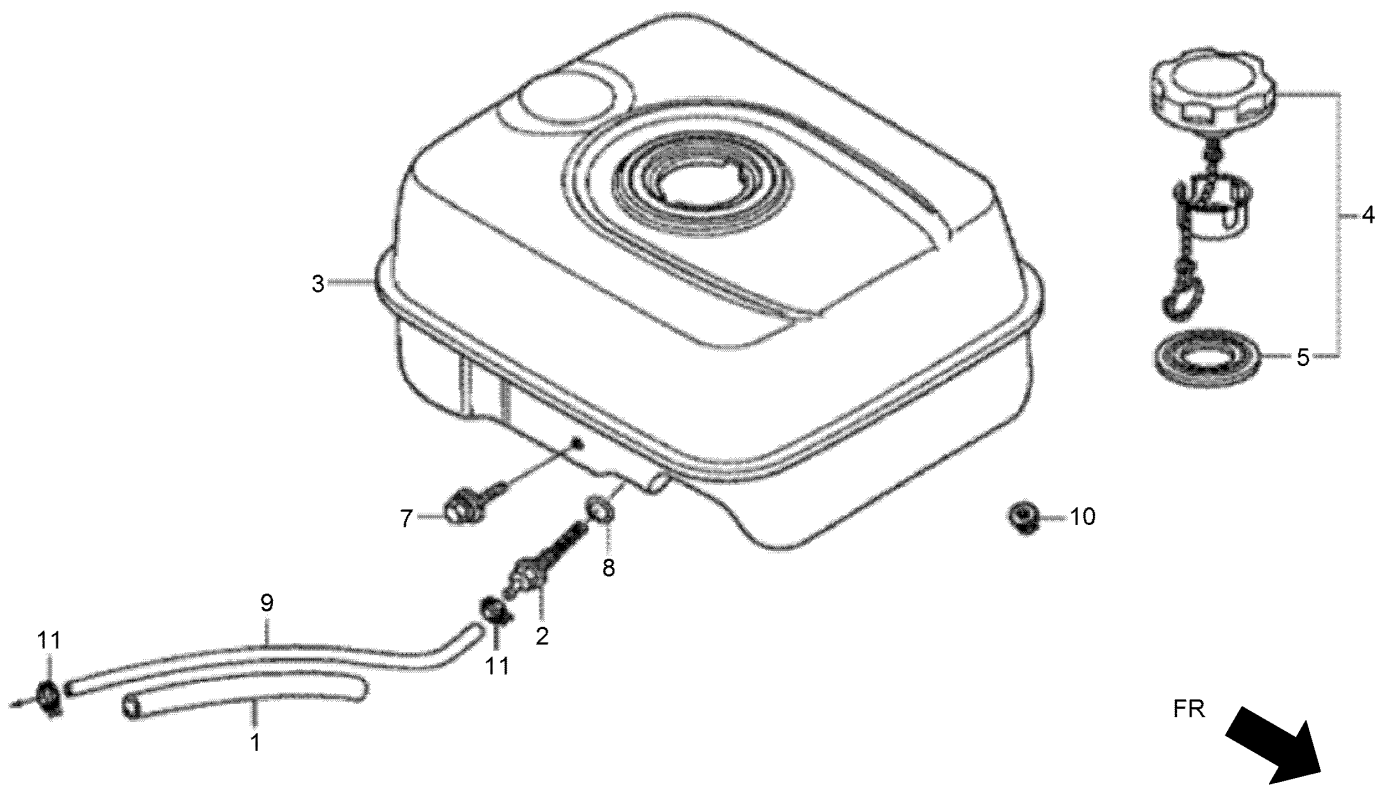

## Fuel Tank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-0349           | 1           | Rubber-Supporter        | 7           | 132-0583           | 1           | Bolt-Flange-6X34   |
| 2           | 132-0361           | 1           | Joint-Fuel Tank         | 8           | 132-0668           | 1           | O-Ring-14Mm        |
| 3           | 132-0397           | 1           | Fuel Tank ASM (Nh31)    | 9           | 132-0669           | 1           | Tube-Fuel-4.5X145  |
| 4           | 132-0414           | 1           | Fuel Filler Cap ASM     | 10          | 132-4881           | 2           | Nut-Flange-6Mm     |
| 5           | 132-0431           | 1           | Packing-Fuel Filler Cap | 11          | 131-8211           | 2           | Clamp-Tube         |


# Flywheel Assembly

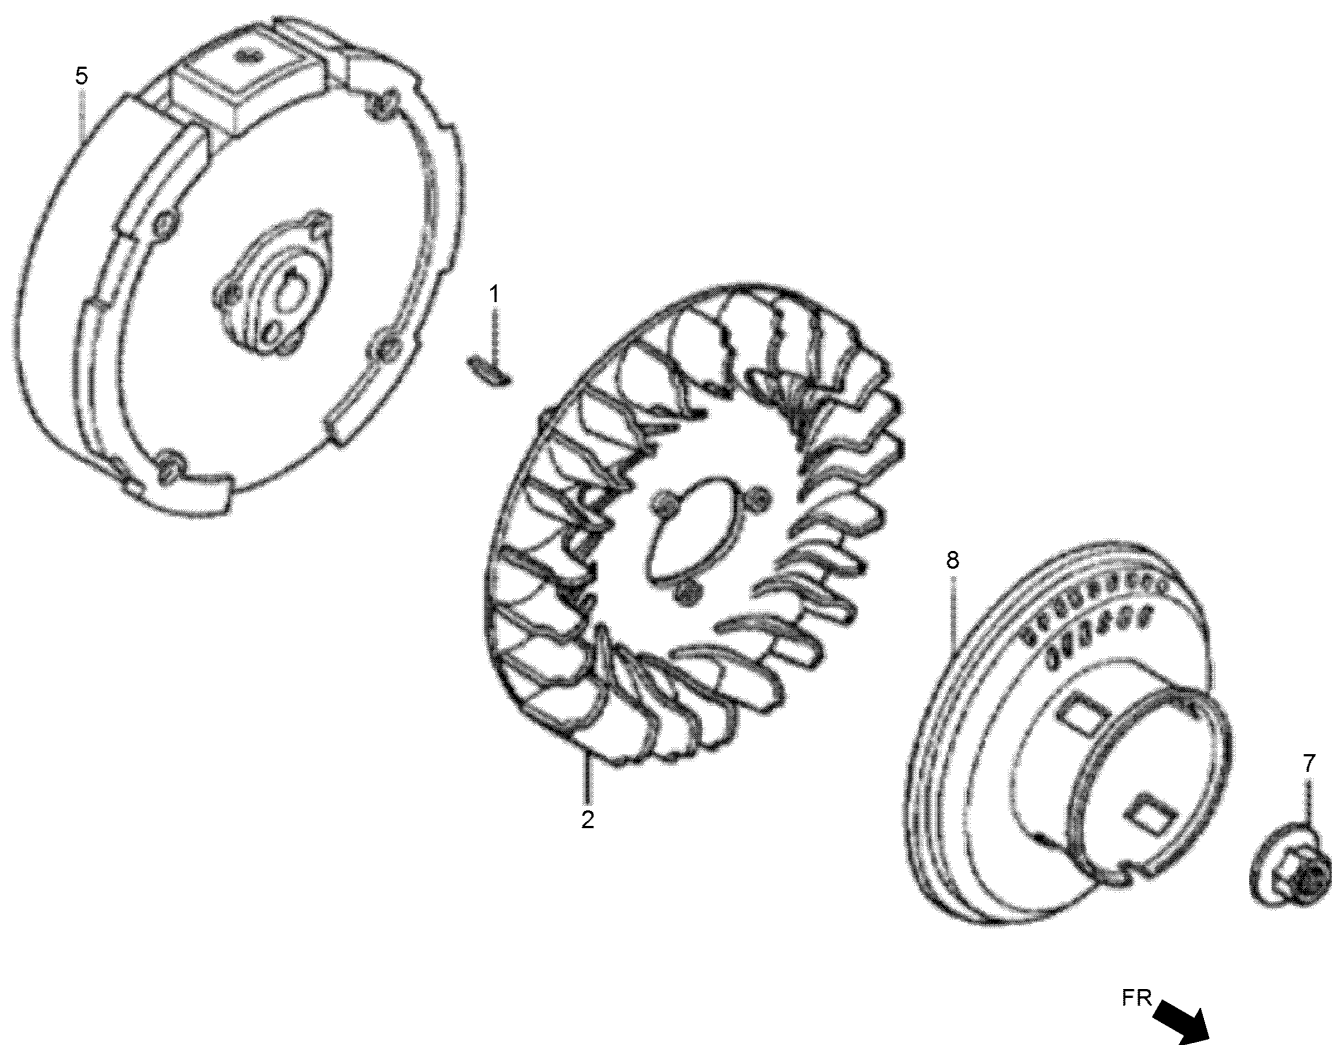

## Flywheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-0167           | 1           | Key-Special<br>Woodruff-25X18 | 5           | 132-0519           | 1           | Flywheel ASM       |
| 2           | 132-0461           | 1           | Fan-Cooling                   | 7           | 132-0625           | 1           | Nut-Special-14Mm   |
|             |                    |             |                               | 8           | 138-9148           | 1           | Pulley-Starter     |


# Ignition Coil Assembly

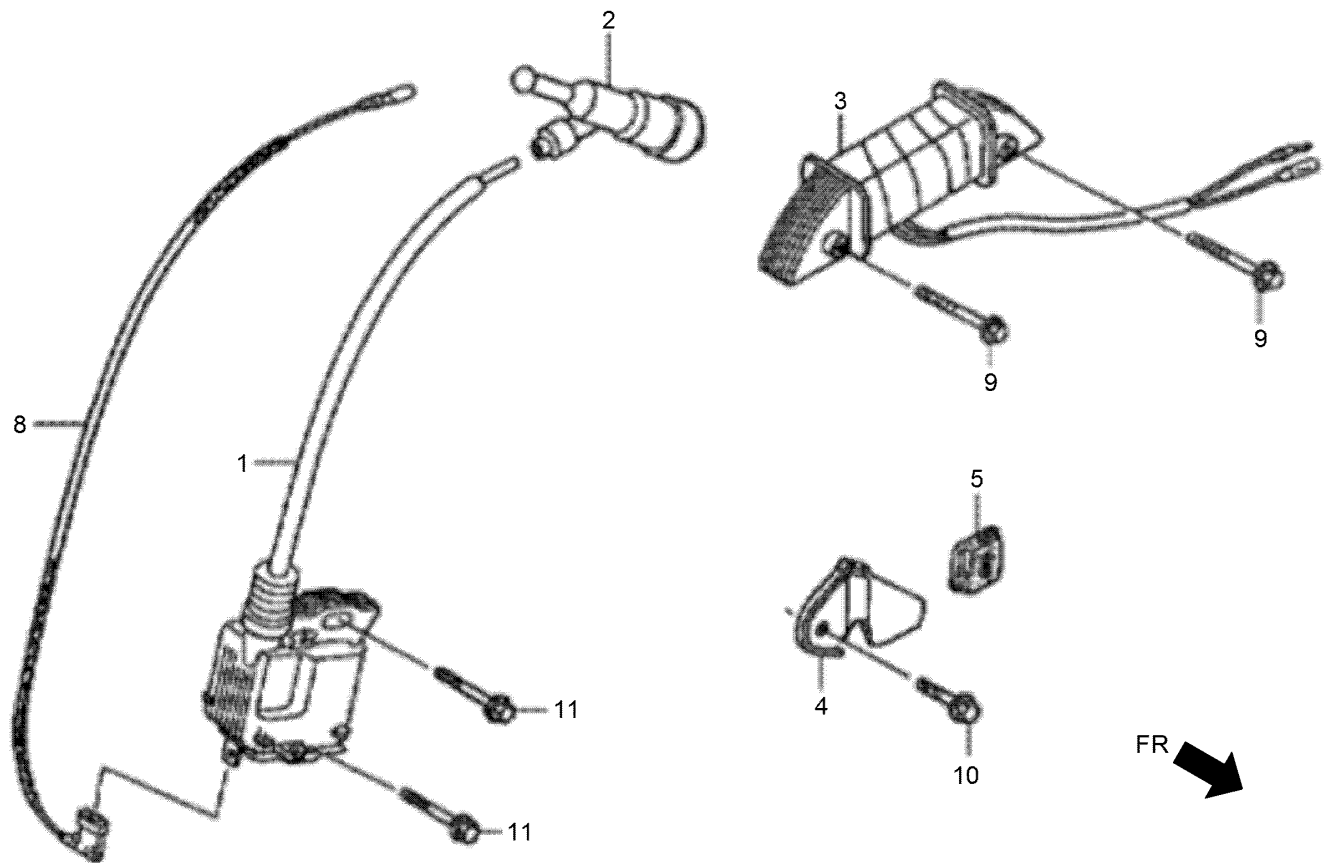

## Ignition Coil Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 138-9149           | 1           | Coil ASM-Ignition (Tec)  | 8           | 140-0250           | 1           | Cord, Stop Switch (370Mm) |
| 2           | 132-0515           | 1           | Cap ASM-Noise Suppressor | 9           | 132-0596           | 2           | Bolt-Flange-6X28          |
| 3           | 132-0521           | 1           | Coil ASM-Lamp            | 10          | 132-0604           | 1           | Bolt-Flange-5X10          |
| 4           | 132-0522           | 1           | Clamper-Cord             | 11          | 132-0620           | 2           | Bolt-Flange-6X25          |
| 5           | 132-0523           | 1           | Grommet-Cord             |             |                    |             |                           |


# Control Assembly

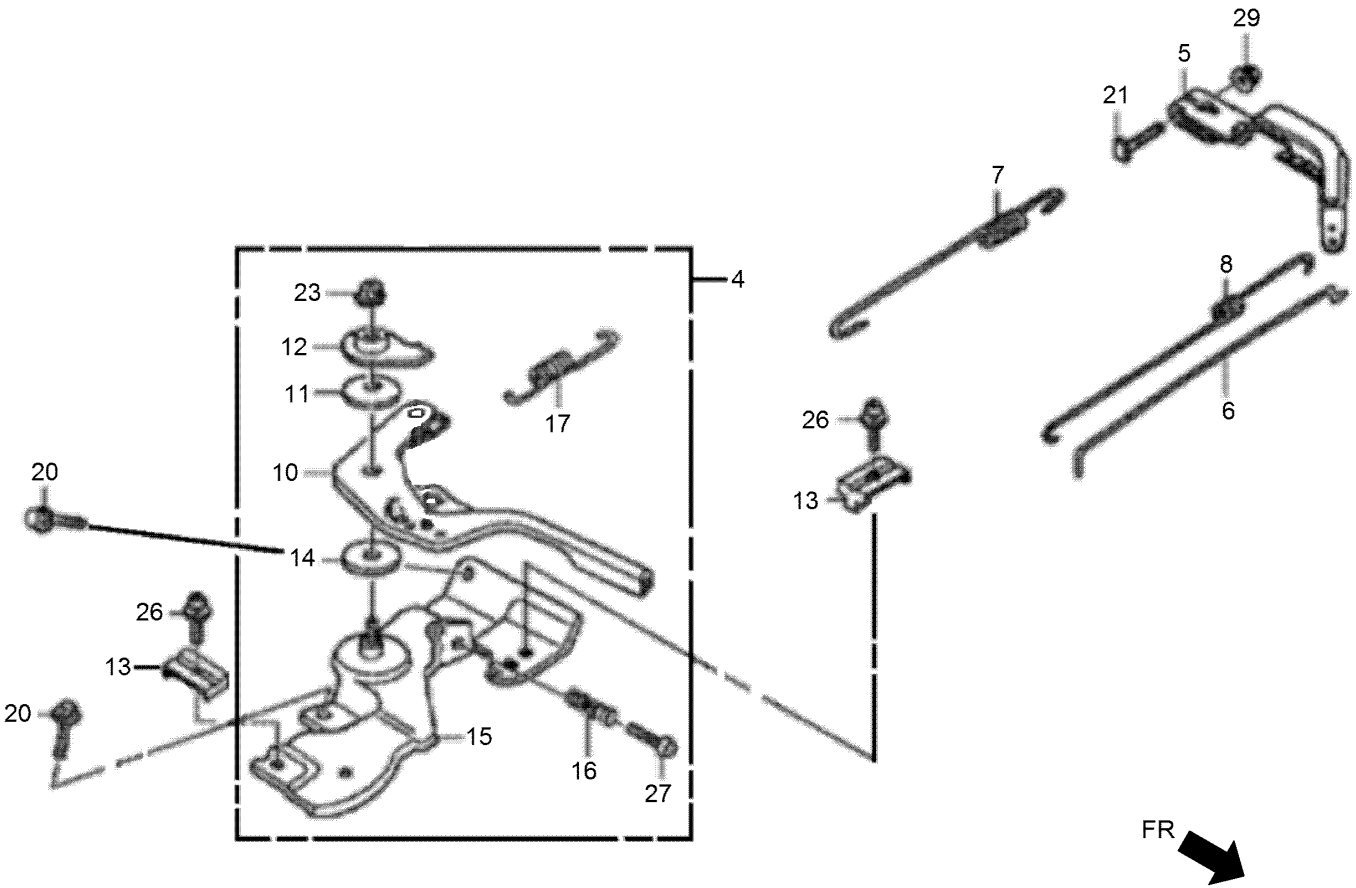

## Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------------|
| 4           | 132-0292           | 1           | Control ASM            | 15          | 132-0337           | 1           | Control Base ASM         |
| 5           | 132-0311           | 1           | Arm-Governor           | 16          | 132-0340           | 1           | Spring-Control Adjusting |
| 6           | 132-0316           | 1           | Rod-Governor           | 17          | 132-0341           | 1           | Spring-Cable Return      |
| 7           | 132-0320           | 1           | Spring-Governor        | 20          | 132-4880           | 2           | Bolt-Flange-6X12         |
| 8           | 132-0324           | 1           | Spring-Throttle Return | 21          | 132-0597           | 1           | Bolt-Governor Arm        |
| 10          | 132-0328           | 1           | Lever-Control          | 23          | 132-0619           | 1           | Nut-Self-Lock-6Mm        |
| 11          | 132-0329           | 1           | Spring-Lever           | 26          | 132-0678           | 1           | Screw-Pan-5X16           |
| 12          | 132-0330           | 1           | Washer-Control Lever   | 27          | 132-0679           | 1           | Screw-Pan-5X25           |
| 13          | 132-0331           | 1           | Holder-Cable           | 29          | 132-4881           | 1           | Nut-Flange-6Mm           |
| 14          | 132-0332           | 1           | Spacer-Control Lever   |             |                    |             |                          |


# Label Assembly

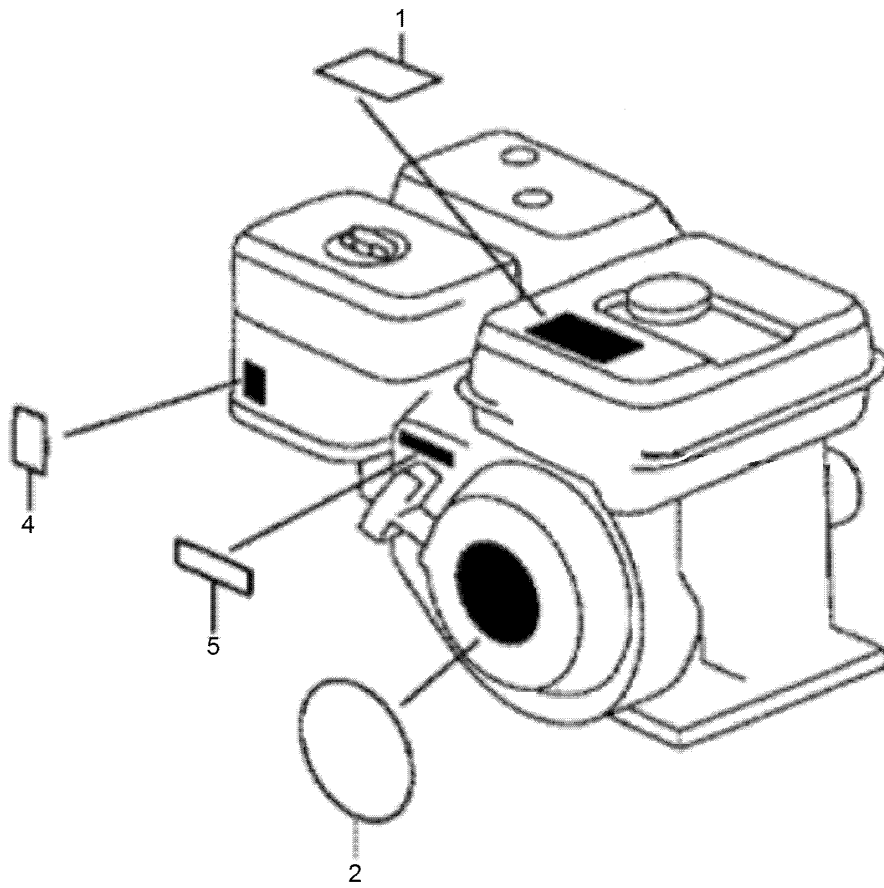

## Label Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 132-0559           | 1           | Mark-Operator Caution | 4           | 132-0566           | 1           | Mark-Choke               |
| 2           | 132-0561           | 1           | Emblem                | 5           | 132-0567           | 1           | Mark-Throttle Indication |



# Wrench

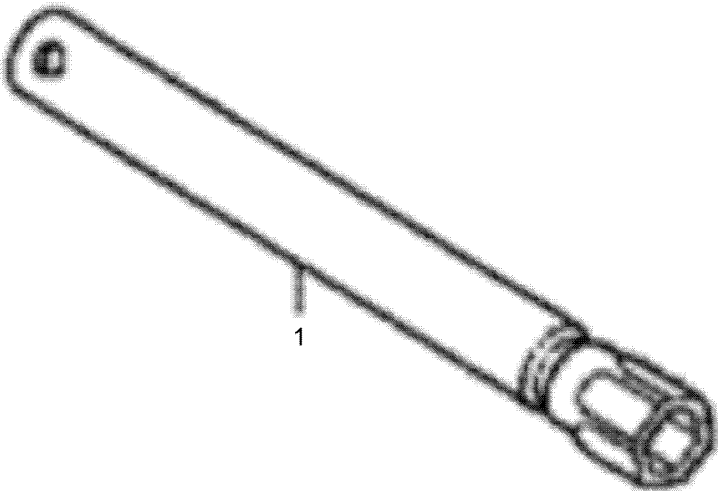

## Wrench (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-0572           | 1           | Wrench-Spark Plug  |


# Decal Assembly

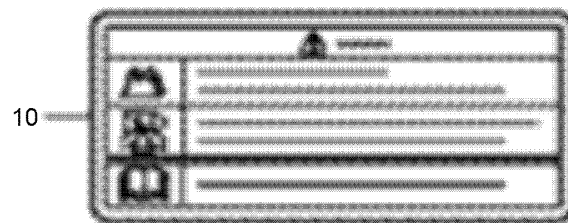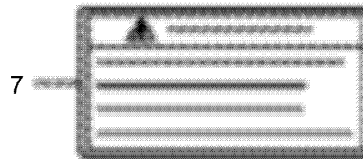

## Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                 | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                 |
|-------------|--------------------|-------------|------------------------------------|-------------|--------------------|-------------|------------------------------------|
| 5           | 132-0552           | 1           | Mark-Operator Caution<br>(English) | 7           | 132-0571           | 1           | Mark-Exhaust Caution<br>(French)   |
| 5           | 132-0553           | 1           | Mark-Operator Caution<br>(French)  | 10          | 132-0557           | 1           | Mark-Operator Caution<br>(Chinese) |
| 7           | 132-0570           | 1           | Mark-Exhaust Caution<br>(English)  |             |                    |             |                                    |

# Gasket Kit

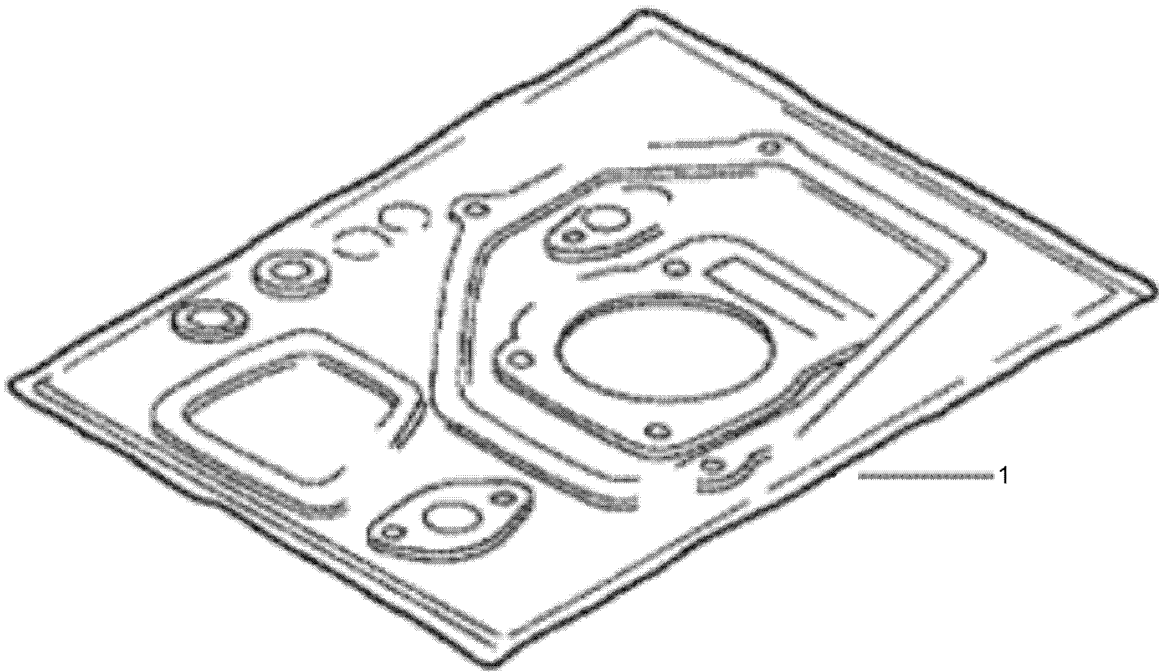

## Gasket Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-0100           | 1           | Gasket Kit         |



**Count on it.**