



Broom

Dingo[®] Attachment

Model No. 22415 – 200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Main Mount Assembly	3	Rotor Assembly	6
Pivot Assembly	4	Rotor Assembly (Continued)	7
Head Assembly	5	Hydraulic Motor Assembly No. 99–6566	8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

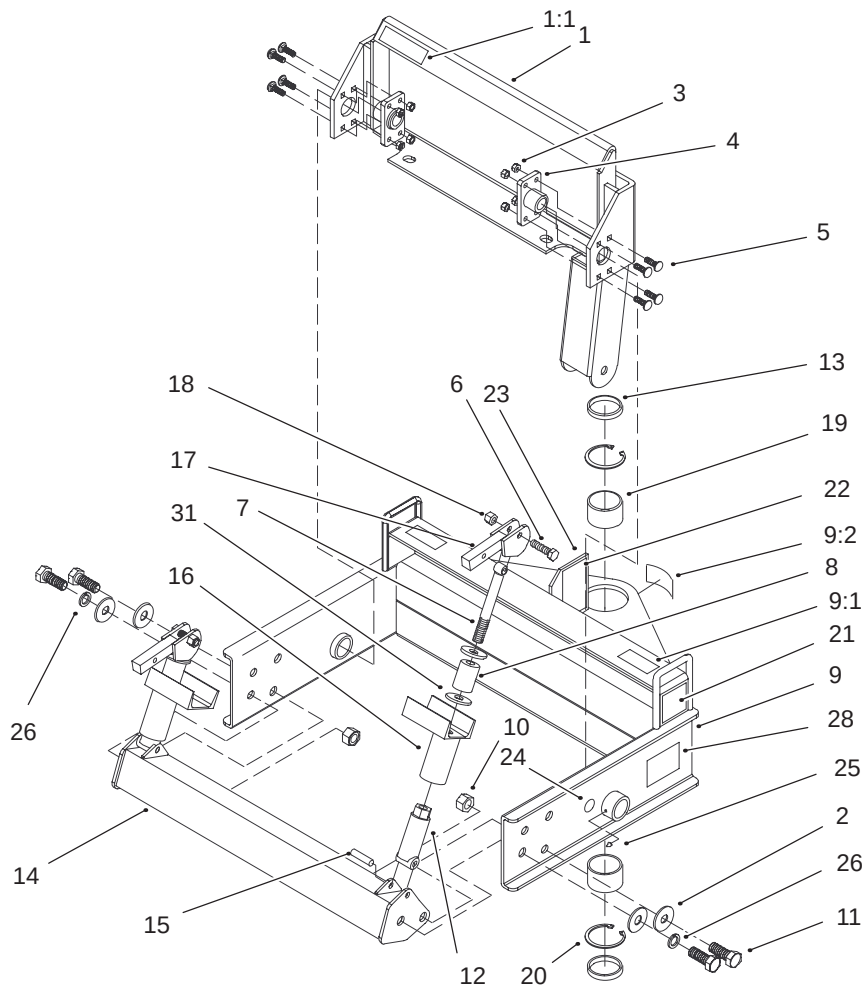

Sheet No.:2
C-2805

Main Mount Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-6576	1	Q-Tach Frame ASM, Serv	19	95-5127	2	Bushing
1:1	100-4654	1	Decal-Warning	20	99-6593	2	Snap Ring
2	3256-28	4	Washer-Flat	21	93-9084	2	Decal - Lift Point
3	3296-59	8	Nut-Lock, NI	22	100-4661	1	Decal-Height,Right
4	99-6580	2	Pivot Retainer ASM	23	100-4660	1	Decal-Height,Left
5	3231-25	8	Screw-CARR	24	58-6520	3	Decal-Grease
6	325-8	2	Screw-HH	25	302-19	5	Fitting - Grease
7	99-6590	2	Adjustment Screw ASM	26	3253-9	2	Washer-Lock/Sp
8	99-6556	2	Absorber-Shock	28	99-4349	2	Decal-Logo, Siteworks
9	100-4791	1	Main Mount Frame ASM	31	3256-8	4	Washer-Flat
9:1	100-4650	2	Decal-Warning				
9:2	100-4652	1	Decal-Warning				
10	3296-51	2	Nut-Lock NI				
11	328-26	4	Screw-HH				
12	99-6592	2	Arm Clamp Swivel ASM				
13	99-6577	2	Seal				
14	99-6579	1	Mount Crossmember ASM				
15	32121-122	2	Pin - Roll				
16	99-6591	2	Arm Clamp ASM				
17	99-6589	2	Lock Lever ASM				
18	32146-13	2	Nut-Eslok				

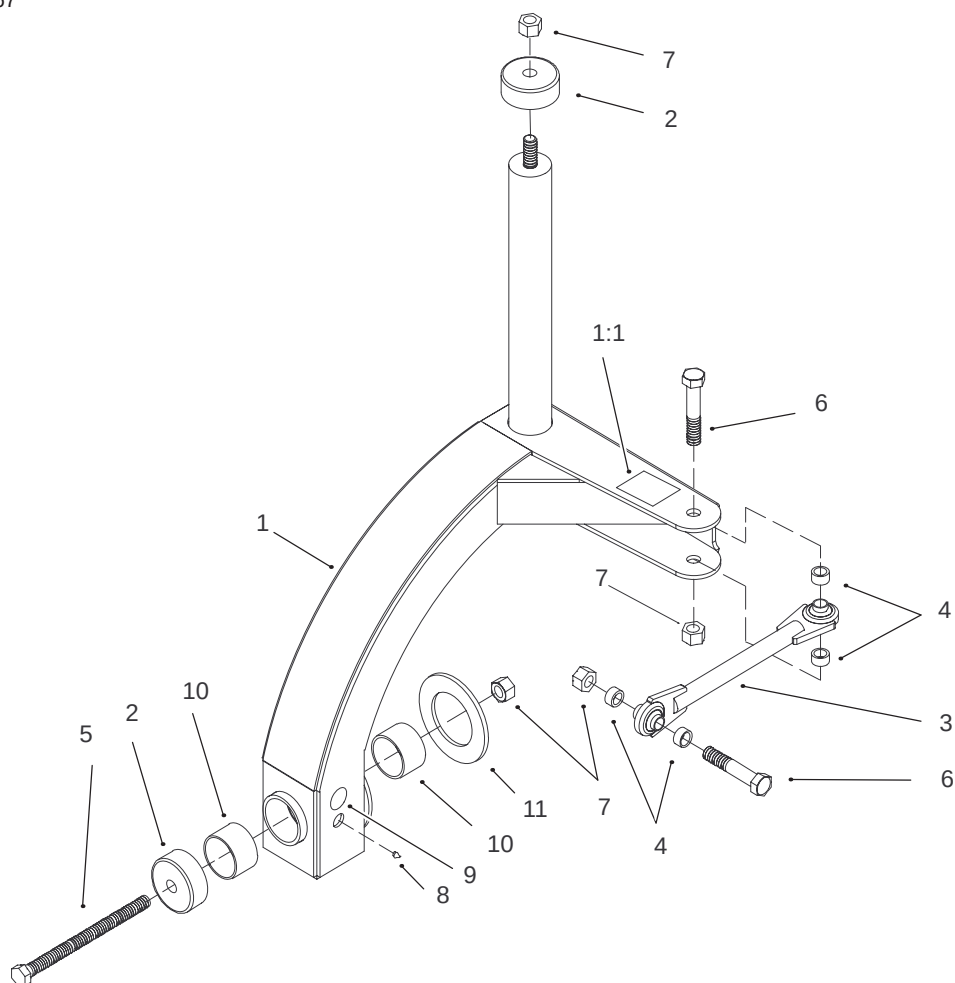


Sheet No.:3

C-2808

Pivot Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6551	1	Pivot Arm Frame,
1:1	100-4650	1	Decal-Warning
2	95-3202-01	2	Cap - Pivot R
3	100-4792	1	Link-Pivot
4	99-6565	4	Spacer-Pivot Link
5	99-6581	1	Screw-HH
6	328-7	2	Screw-HH
7	3296-51	4	Nut-Lock NI
8	302-19	1	Fitting - Grease
9	58-6520	1	Decal-Grease
10	95-5127	2	Bushing
11	95-3204	1	Washer - Pivot

Ref. No.	Part No.	Qty.	Description

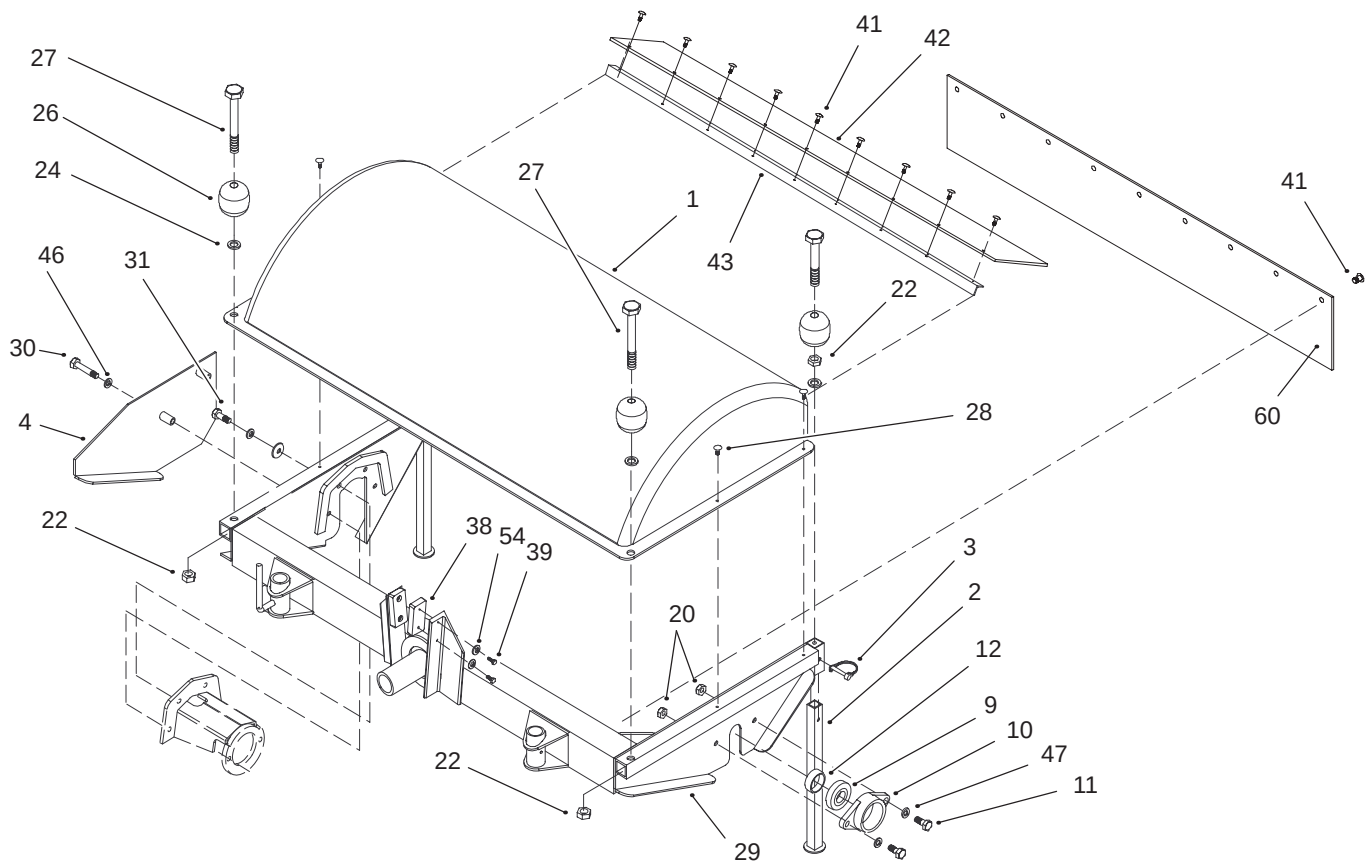


Sheet No.:4

C-2806

Head Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-6555	1	Cover-Broom	54	3253-3	4	Washer-Lock/Sp
2	99-6553	2	Stand-Broom Head	60	104-1877	1	Flap-Rear
3	99-6584	2	Pin-Lynch				
4	99-6554	1	Plate-Motor Guard				
9	99-6571	1	Bearing				
10	99-6595	1	Housing-Bearing				
11	325-6	4	Screw-HH				
12	99-6594	1	Collar-Locking				
20	32146-13	4	Nut-Eslok				
22	3218-7	4	Nut-Jam				
24	99-6583	4	Washer				
26	99-9975	4	Roller				
27	328-22	2	Screw-HH				
28	94-8663	9	Screw				
29	104-1876	1	Broom Head Frame ASM				
30	325-12	2	Screw-HH				
31	325-6	2	Screw-HH				
38	86-5350	2	Bumper-Rubber				
39	321-4	4	Screw-HH				
41	3269-11	18	Rivet				
42	99-6560	1	Belting-Rubber				
43	99-6587	1	Plate-Mount, Guard				
46	3253-7	4	Washer-Lock/Sp				
47	3256-26	2	Washer-Flat				

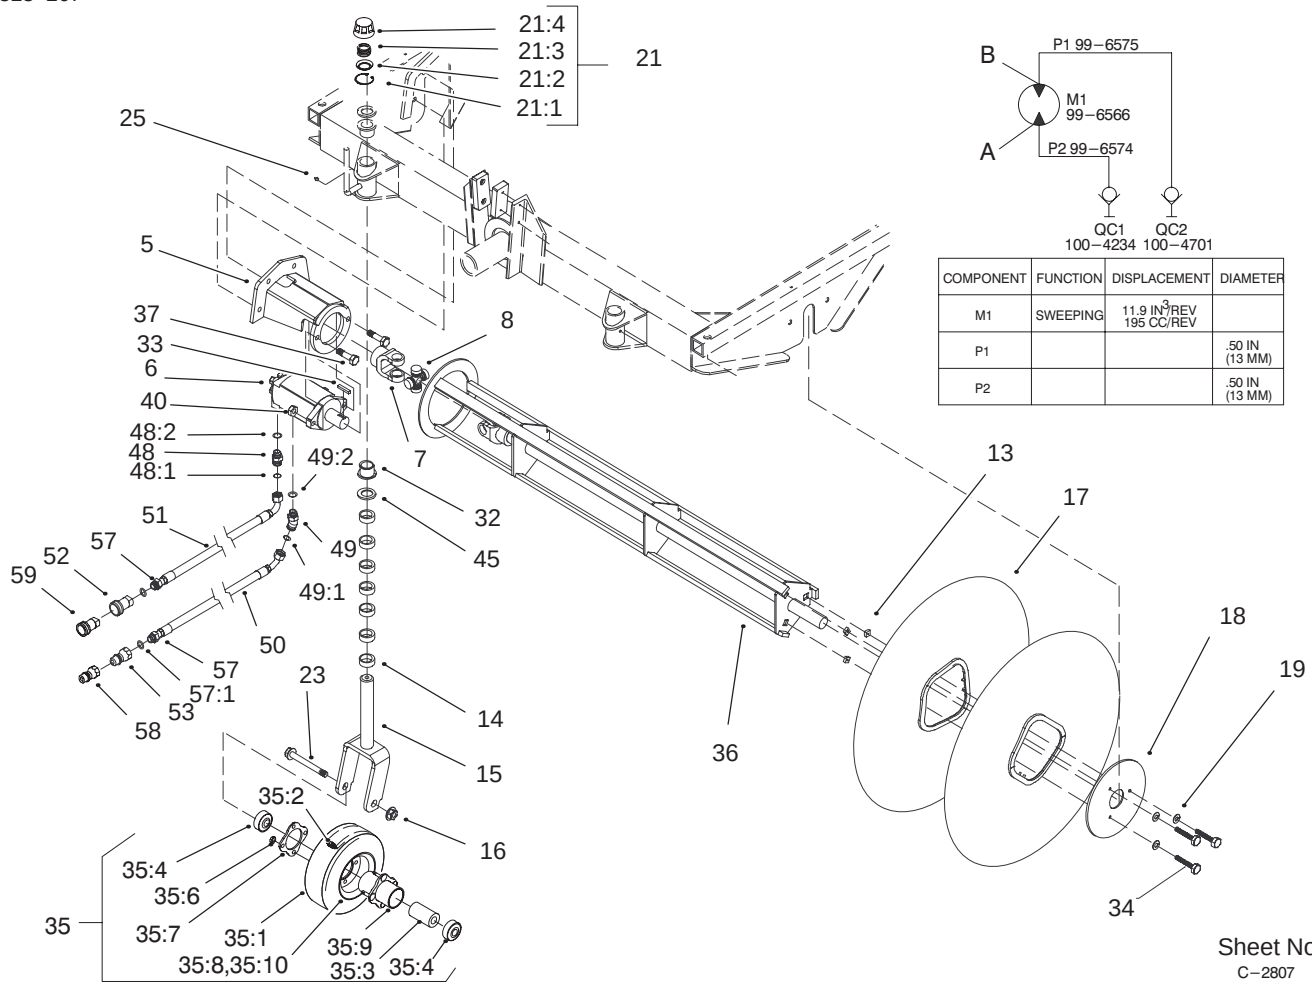


Sheet No.:A
C-2807

Rotor Assembly

Ref. No.	Part No.	Qty.	Description
5	99-6564	1	Hyd Motor Mount ASM
6	99-6566	1	Motor-Hydraulic
7	99-6569	1	Yoke-Keyed
8	99-6570	1	Cross-Yoke
13	99-6585	3	Retainer-Nut
14	63-0070	14	Spacer
15	93-8431-01	2	Castor Fork ASM
16	3296-53	2	Nut-Lock NI
17	94-7372	26	Element - Brush, Poly
17	95-5942	26	Element-Brush, Wire (Optional)
18	99-6563	1	Plate-Retainer,Brush
19	3253-5	3	Washer-Lock/Sp
21	92-8862	2	Cap ASM-HOC
21:1	92-5581	1	Ring-Retaining
21:2	92-5583	1	Washer-Cap
21:3	92-5584	1	Spring-Compression
21:4	92-8861	1	Cap-HOC
23	327-24	2	Screw-HH
25	302-19	9	Fitting - Grease
32	28-9290	4	Spec Bushing
33	99-6567	1	Key-Step
34	323-12	3	Screw-HH
35	93-9938	2	Wheel ASM
35:1	93-9939	1	Tire
35:2	68-8950	1	Tube w/Valve

Ref. No.	Part No.	Qty.	Description
35:3	93-4241	1	Spacer - Bearing, Inner
35:4	93-4237	2	Bearing
35:6	32128-16	4	Nut-HHF
35:7	93-4242	1	Plate
35:8	93-4239	1	Rim-Wheel, Half
35:9	93-5980	1	Hub
35:10	95-2741	1	Rim-Wheel, Half (w/ Valve Stem Hole)
36	99-6562	1	Rotor Frame ASM
37	325-8	2	Screw-HH
40	328-8	2	Screw-HH
45	99-6582	4	Washer
48	340-7	1	Adapter
48:1	237-65	1	O-Ring
48:2	237-80	1	O-Ring
49	340-14	1	Fitting-Hyd., 45°
49:1	237-65	1	O-Ring
49:2	237-80	1	O-Ring
50	99-6575	1	Hydraulic Hose ASM
51	99-6574	1	Hydraulic Hose ASM
52	100-4234	1	Coupler-Face, Flush
*52:1	100-6119	1	Kit-Seal
53	100-4701	1	Nipple-Connect, Pressure
*53:1	100-6120	1	Kit-Seal

* Not illustrated

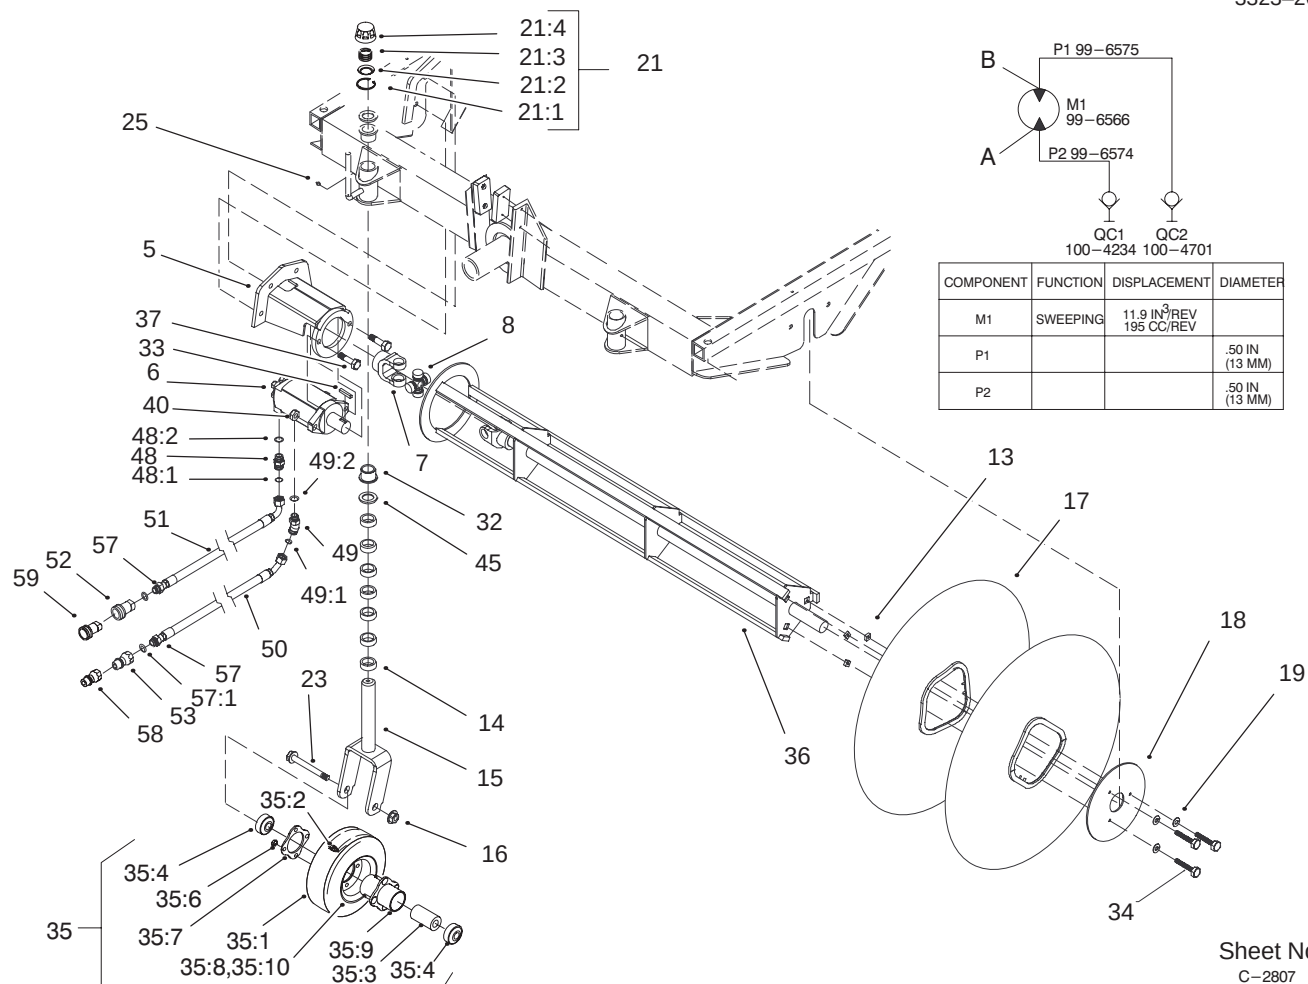


Rotor Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
57	100-4617	2	Adapter-Hyd
57:1	237-80	1	O-Ring
58	100-4702	1	Disconnect-Quick, Male
59	100-4703	1	Disconnect-Quick, Female
*59:1	100-4165	1	Seal

Ref. No.	Part No.	Qty.	Description

* Not illustrated

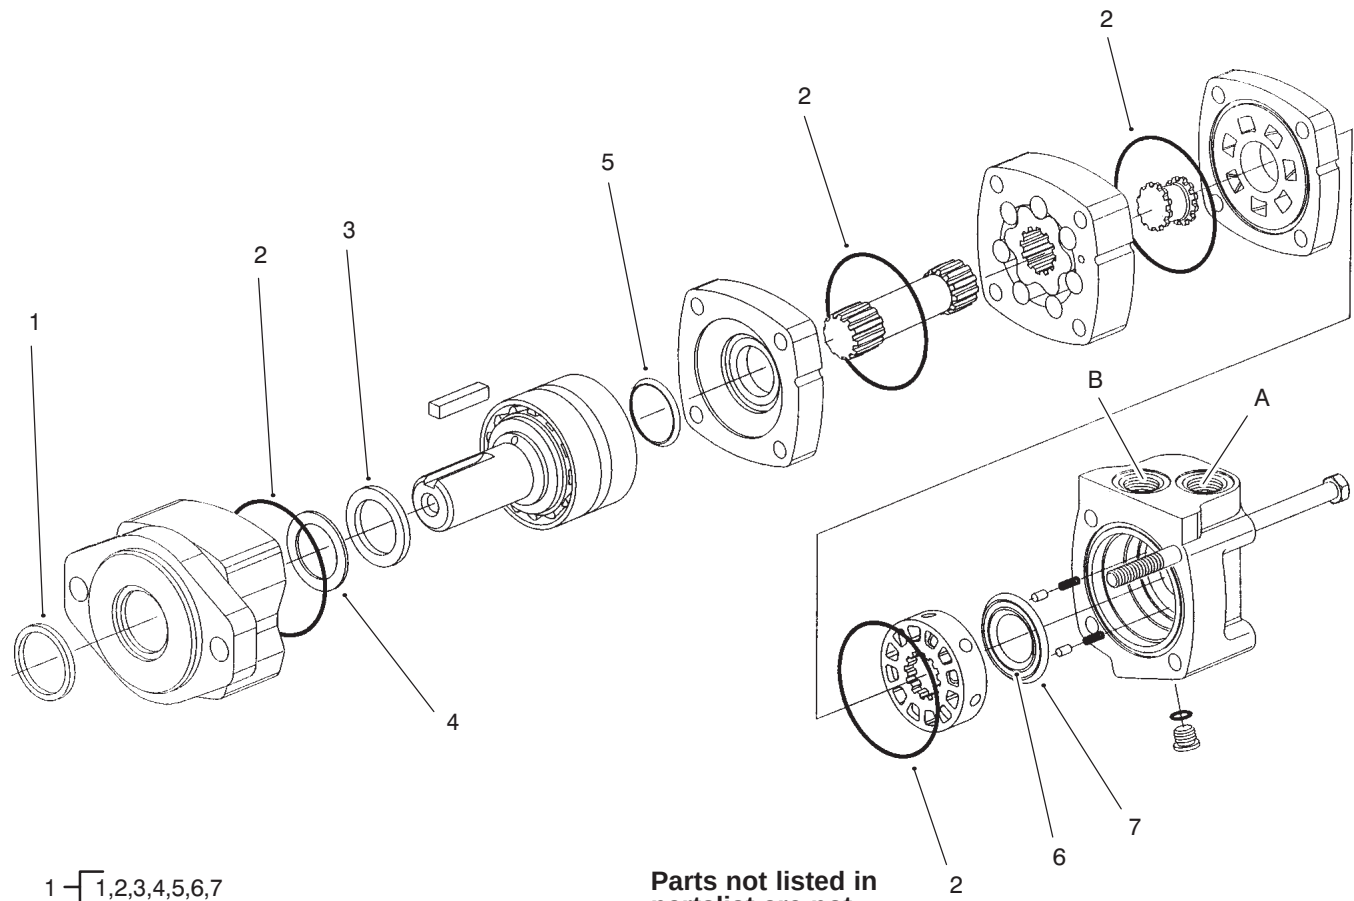

Sheet No.:A1
C-2754

Hydraulic Motor Assembly No. 99–6566

Ref. No.	Part No.	Qty.	Description
*1	56–6890	1	Kit–seal

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Maintenance Record

[illegible]

Maintenance Record

[illegible]

