


TORO®

MODEL NO. 22437-990001 & UP

PARTS CATALOG


VIBRATORY PLOW For Toro® Sitework™ Systems

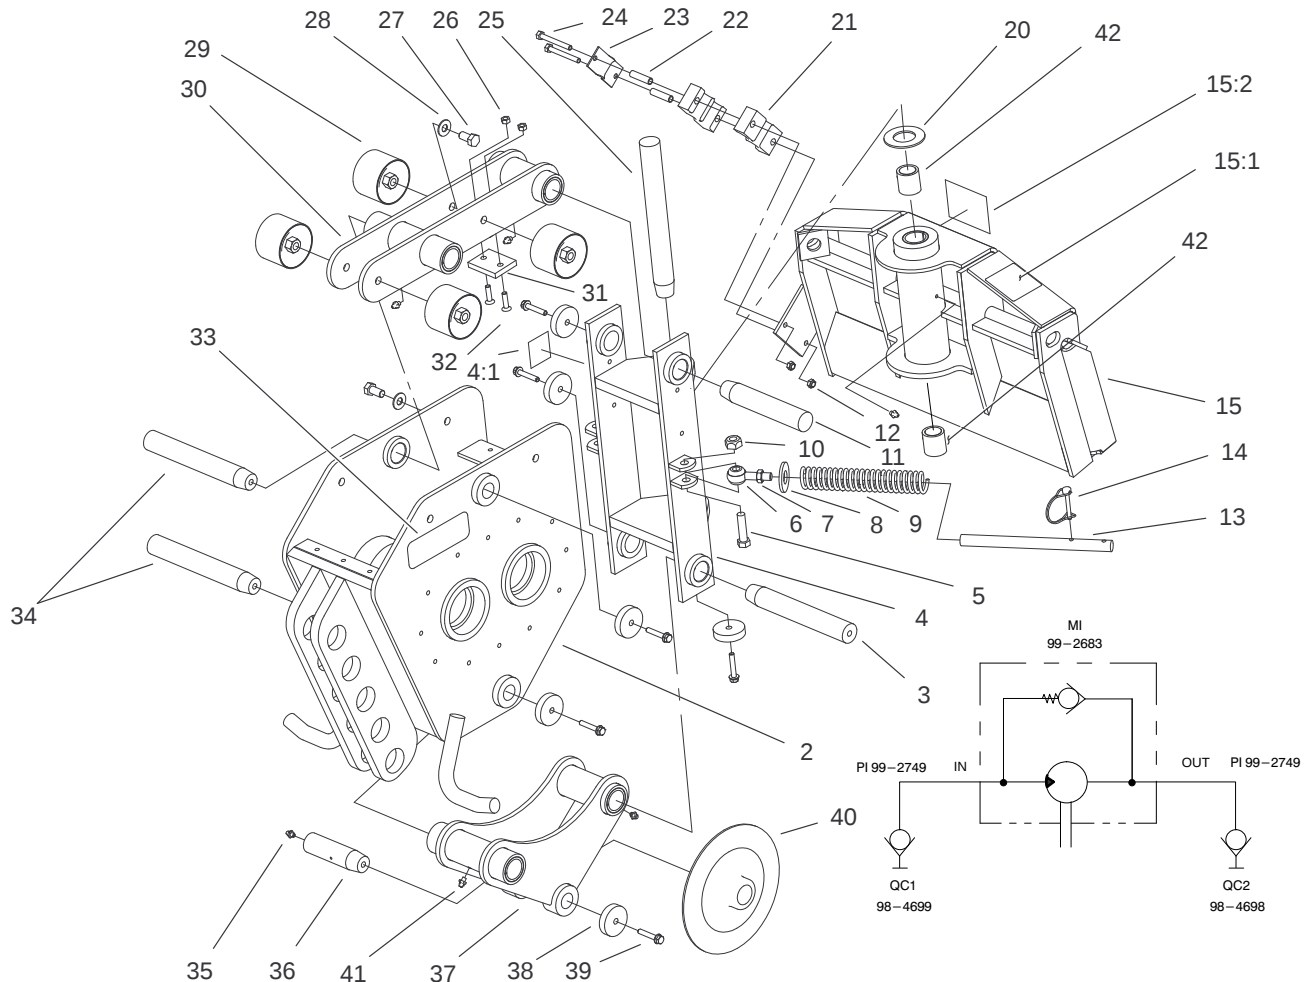

VIBRATORY PLOW ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	99-2703-03	Frame	1
3	99-8646	Pin-Tapered	1
4	99-8632	Pivot Frame	1
4:1	99-1699	Decal-Warning	1
5	325-8	Screw-HH	2
6	99-2695	End-Rod	2
7	3220-5	Nut-Hex	2
8	99-2659	Washer	2
9	99-2686	Spring	2
10	32146-13	Nut-Hex Lock	2
11	99-2720	Pin-Tapered	1
12	3296-29	Nut-Hex Lock	3
13	99-2725	Rod-Threaded	2
14	100-1663	Pin-Snapper	2
15	99-8633	Quick Attach	
15:1	100-4649	Decal-Danger	1


Ref. No.	Part No.	Description	No. Used
15:2	98-3269	Decal-Made in USA	1
20	99-2707	Washer	1
21	82-8170	Clamp	2
22	93-7960	Spacer	2
23	93-7961	Clamp-Case Drain	1
24	322-13	Screw-HH	2
25	99-2721	Pin-Tapered	1
26	32152-1	Nut-Lock Cone	2
27	3213-1	Screw-HH	8
28	3256-40	Washer-Flat	8
29	99-2693	Mount-Sandwich	4
30	99-2715	Link	1
31	99-2653	Pad-Stop	1
32	32108-103	Screw	2
33	99-6893	Decal-Siteworks	2
34	99-2719	Pin-Tapered	2

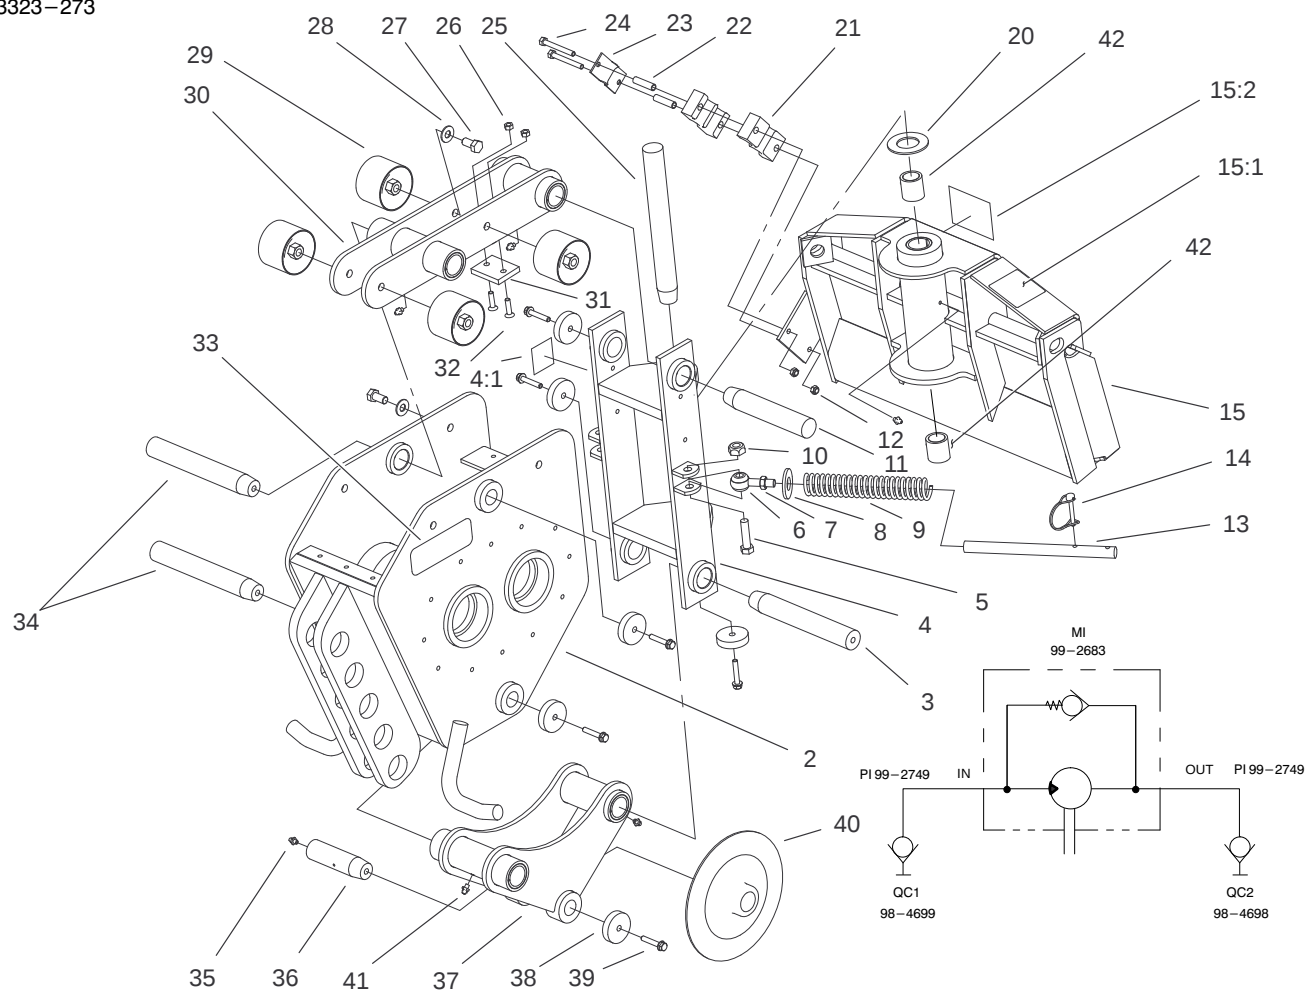

VIBRATORY PLOW ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
35	302-5	Fitting-Grease	4
36	99-2722	Pin-Tapered	1
37	99-2735-03	Link	1
38	84-1580	Washer-Clutch	7


Ref. No.	Part No.	Description	No. Used
39	3234-19	Screw-Flange	7
40	99-2726	Coulter	1
41	302-40	Fitting-Grease	2
42	99-2713	Bushing-Tension	2

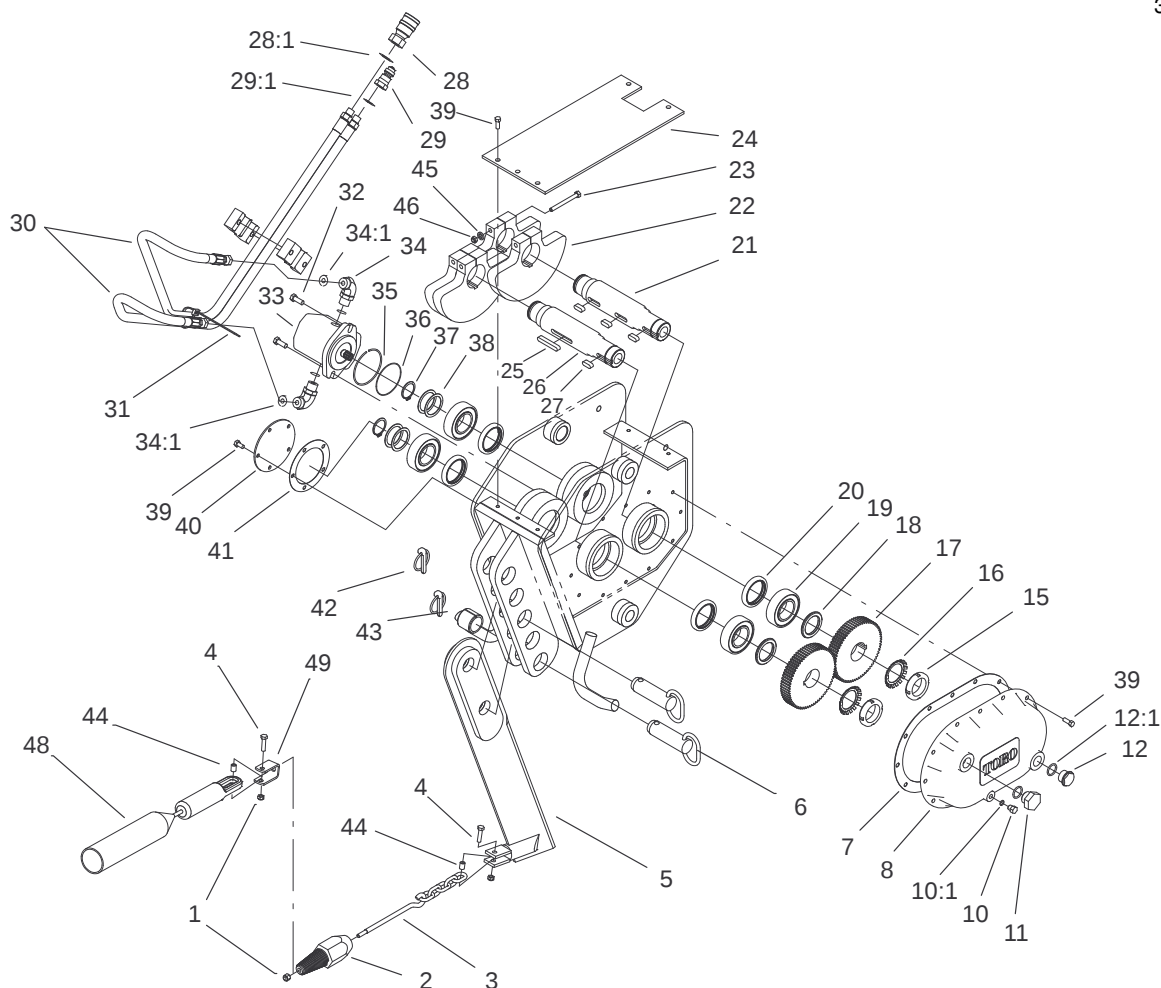

HYDRAULIC ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-69	Nut-Lock	1	27	99-2674	Key-Short	4
2	99-2748-03	Puller-Pipe	1	28	98-4699	Female-Quick Disconnect	1
3	99-2728	Chain	1	28:1	237-79	"O"Ring	1
4	322-7	Screw-HH	1	29	98-4698	Male-Quick Disconnect	1
5	99-2682-03	Blade (1/4" x 12")	1	29:1	237-79	"O"Ring	1
*	99-8647-03	Blade (3/8" x 12")	1	30	99-2749	Hose-Hydraulic	2
*	99-8600-03	Blade (1/2" x 18")	1	31	3290-379	Tie-Cable	1
6	99-2710	Blade Pin Asm	2	32	323-6	Screw-HH	2
7	99-2744	Gasket	1	33	99-2683	Motor-Hyd. (Incl. Ref. #47)	1
8	99-2723-03	Cover	1	34	340-105	Elbow	2
10	353-512	Plug	1	34:1	237-80	"O"Ring	2
10:1	237-115	"O"Ring	1	35	99-2746	Ring-Pilot	1
11	354-74	Fitting	1	36	237-167	O-Ring	1
12	69-1170	Glass-Sight	1	37	32151-95	Ring-Retaining Ext.	2
12:1	237-81	"O"Ring	1	38	99-2654	Washer	4
15	99-2706	Nut	2	39	100-1668	Screw-Flange	27
16	99-2708	Retainer-Nut	2	40	99-2724-03	Plate-Cover	1
17	99-2676	Gear	2	41	99-2745	Gasket	1
18	99-2677	Spacer	2	42	283-71	Pin-Lynch	2
19	99-2670	Spherical-Roll Bearing	4	43	99-2740	Bushing-Tension	10
20	99-2714	Seal-Oil	4	44	99-8611	Spacer	1
21	99-2672	Shaft-Splined	1	45	3256-47	Washer	4
22	99-2673	Weight-Counter	4	46	3296-39	Nut-Hex Lock	4
23	323-15	Screw-HH	2	*47	99-8608	Seal Kit	1
24	99-2699-03	Plate-Top	1	48	100-1661	Basket-Grip, 1-1.25	1
25	99-2675	Key-Long	1	48	100-1662	Basket-Grip, 1.25-1.50	1
26	99-2671	Shaft	1	49	100-1664	Clevis	1

* Not Illustrated

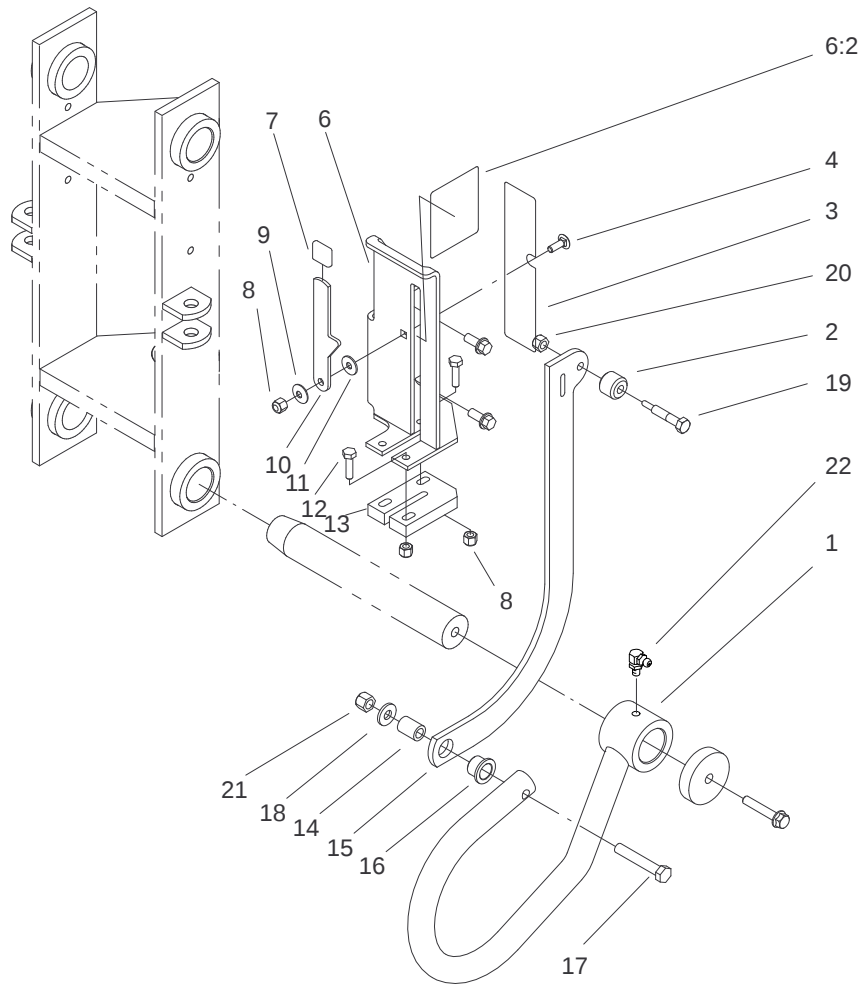

VIBRATORY PLOW ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	99-8644-03	Rod	1
2	100-1657	Nylon-Stop	1
3	99-8609	Decal-Indicator	1
4	3229-28	Screw-Carriage	1
6	100-1665	Plate-Indicator	1
6:2	100-4650	Decal-Warning	1
7	100-1655	Grip-Handle	1
8	3296-16	Nut-Hex Lock	4
9	3290-436	Washer-Belleville	1
10	100-1653	Lever-Indicator	1
11	3290-388	Washer	1

Ref. No.	Part No.	Description	No. Used
12	321-8	Screw-HH	3
13	100-1652	Block-Bearing	1
14	100-1654	Spacer	1
15	100-1667-03	Bar-Indicator	1
16	256-287	Bushing-Flange	1
17	323-47	Screw-HH	1
18	3256-3	Washer-Flat	1
19	100-1656	Screw-Special	1
20	3296-47	Nut-Lock	1
21	3296-39	Nut-Lock	1
22	302-40	Fitting-Lube, 90 Degree	1