



Form No. 3433-196 Rev A

**Count on it.**

# Parts Catalog

## TimeCutter® SWX 5000 Riding Mower

Model No. 74795—Serial No. 402793287 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                   |    |
|-------------------------------------------------------------------|----|
| Frame Assembly . . . . .                                          | 4  |
| Deck Lift Assembly . . . . .                                      | 6  |
| Caster Wheel Assembly . . . . .                                   | 8  |
| Traction Drive Assembly . . . . .                                 | 10 |
| Left Hand Hydro Transaxle Assembly No. 119-3350 . . . . .         | 12 |
| Right Hand Hydro Transaxle Assembly No. 119-3351 . . . . .        | 14 |
| Brake Assembly . . . . .                                          | 16 |
| Rear Tire Assembly . . . . .                                      | 18 |
| Seat Assembly . . . . .                                           | 20 |
| Seat Assembly No. 138-2608 . . . . .                              | 22 |
| Motion Control Assembly . . . . .                                 | 24 |
| Engine Assembly . . . . .                                         | 26 |
| Fuel System Assembly with Non-Canister Style Air Filter . . . . . | 28 |
| Carburetor Assembly . . . . .                                     | 30 |
| Air Intake and Filtration Assembly . . . . .                      | 32 |
| Ignition and Cooling Fan . . . . .                                | 34 |
| Crankcase and Crankshaft Assembly . . . . .                       | 36 |
| Governor Control Assembly . . . . .                               | 38 |
| Piston and Cylinder Head Assembly . . . . .                       | 40 |
| Blower Housing Assembly . . . . .                                 | 42 |
| Gasket and Seal Kit . . . . .                                     | 44 |
| Body Styling and Fuel Tank Assembly . . . . .                     | 46 |
| Battery and Electrical Assembly . . . . .                         | 48 |
| 50 Inch Deck Assembly . . . . .                                   | 50 |
| 50 Inch Deck and Decal Assembly No. 131-3614 . . . . .            | 52 |
| Model Specific Decal Assembly . . . . .                           | 54 |
| Steering Assembly . . . . .                                       | 56 |
| Decal Assembly . . . . .                                          | 58 |
| Clutch Assembly . . . . .                                         | 60 |
| Steering Gear and Cable Assembly . . . . .                        | 62 |
| Attachments and Accessories . . . . .                             | 64 |

# Frame Assembly

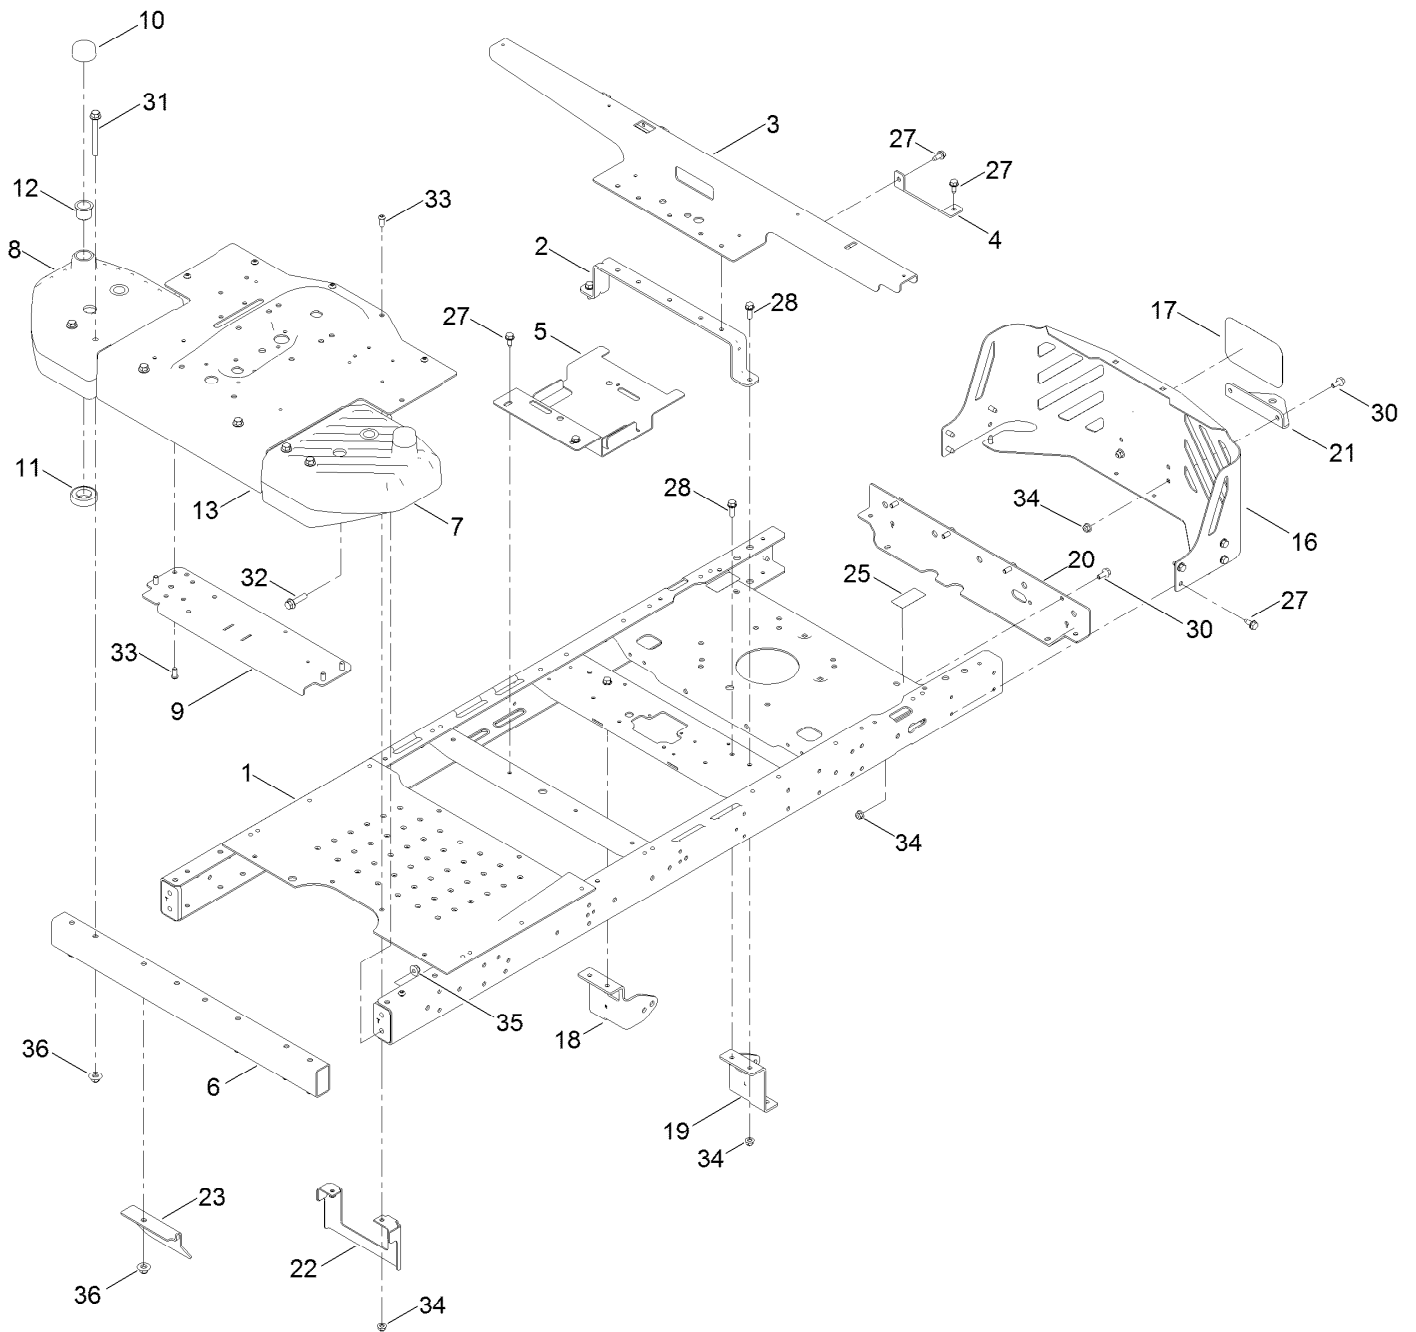

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 130-0805-01        | 1           | Frame ASM (Wide)           | 19          | 137-7021-01        | 1           | Mount-Hydro, Front (Left) |
| 2           | 135-0687-03        | 1           | Brace-Seat, Rear (Wide)    | 20          | 130-6946-01        | 1           | Crossmember-Rear, Wide    |
| 3           | 131-1039-03        | 1           | Support-Pod, Wide          | 21          | 117-1232-03        | 1           | Bracket-Hitch             |
| 4           | 119-3431-03        | 2           | Support-Tank, Rear         | 22          | 132-0941-03        | 1           | Bracket-Upstop            |
| 5           | 135-0507-03        | 1           | Bracket-Battery            | 23          | 132-0868-03        | 1           | Guard-Front               |
| 6           | 130-0829-03        | 1           | Tube-Front, Wide           | 25          | 121-2989           | 2           | Decal-Bypass              |
| 7           | 130-0748-05        | 1           | Housing-Spindle, LH        | 27          | 32144-70           | 16          | Screw-HWHTF               |
| 8           | 130-0746-05        | 1           | Housing-Spindle, RH        | 28          | 3234-29            | 4           | Screw-HHF                 |
| 9           | 130-6979-03        | 1           | Plate-Bridge, Wide         | 30          | 3234-47            | 8           | Screw-HHF                 |
| 10          | 130-7015           | 2           | Cap-Caster                 | 31          | 115-7660           | 6           | Screw-HHF                 |
| 11          | 109-3678           | 2           | Bearing-Ball               | 32          | 114-4681           | 4           | Screw-HHF                 |
| 12          | 126-1963           | 2           | Bushing-Pivot              | 33          | 3274-55            | 10          | Screw-HSBH                |
| 13          | 132-9346-05        | 1           | Pan-Steer, Front           | 34          | 104-8300           | 18          | Nut-HF, NI                |
| 16          | 130-0701-03        | 1           | Guard-Engine, Wide         | 35          | 104-8301           | 4           | Nut-HF, NI                |
| 17          | 99-4693            | 1           | Decal                      | 36          | 109-6658           | 6           | Nut-Flange, NI            |
| 18          | 137-7020-01        | 1           | Mount-Hydro, Front (Right) |             |                    |             |                           |


# Deck Lift Assembly



## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-6878-03        | 1           | Lift-Deck (Wide)      | 14          | 108-7845           | 2           | Block-Pivot        |
| 2           | 119-8875           | 2           | Bracket-Lift          | 15          | 120-5499           | 2           | Screw-HSBH         |
| 3           | 32144-70           | 4           | Screw-HWHTF           | 16          | 3296-29            | 2           | Nut-Lock, NI       |
| 4           | 119-3427-03        | 1           | Lever-Lift            | 23          | 3256-26            | 3           | Washer-Flat        |
| 5           | 1-633268           | 1           | Grip-Lever            | 24          | 119-8810           | 1           | Pin-Pivot          |
| 7           | 3234-29            | 2           | Screw-HHF             | 25          | 133-4319           | 1           | Rod-Mount, Deck    |
| 8           | 104-8300           | 2           | Nut-HF, NI            | 26          | 3296-19            | 1           | Nut-Hex            |
| 12          | 119-3347           | 1           | Arm-Lift, Rear (Wide) | 27          | 3272-11            | 2           | Pin-Cotter         |
| 13          | 108-7840           | 2           | Link-Lift             | 28          | 1-806005           | 1           | Pin-Cotter         |

# Caster Wheel Assembly

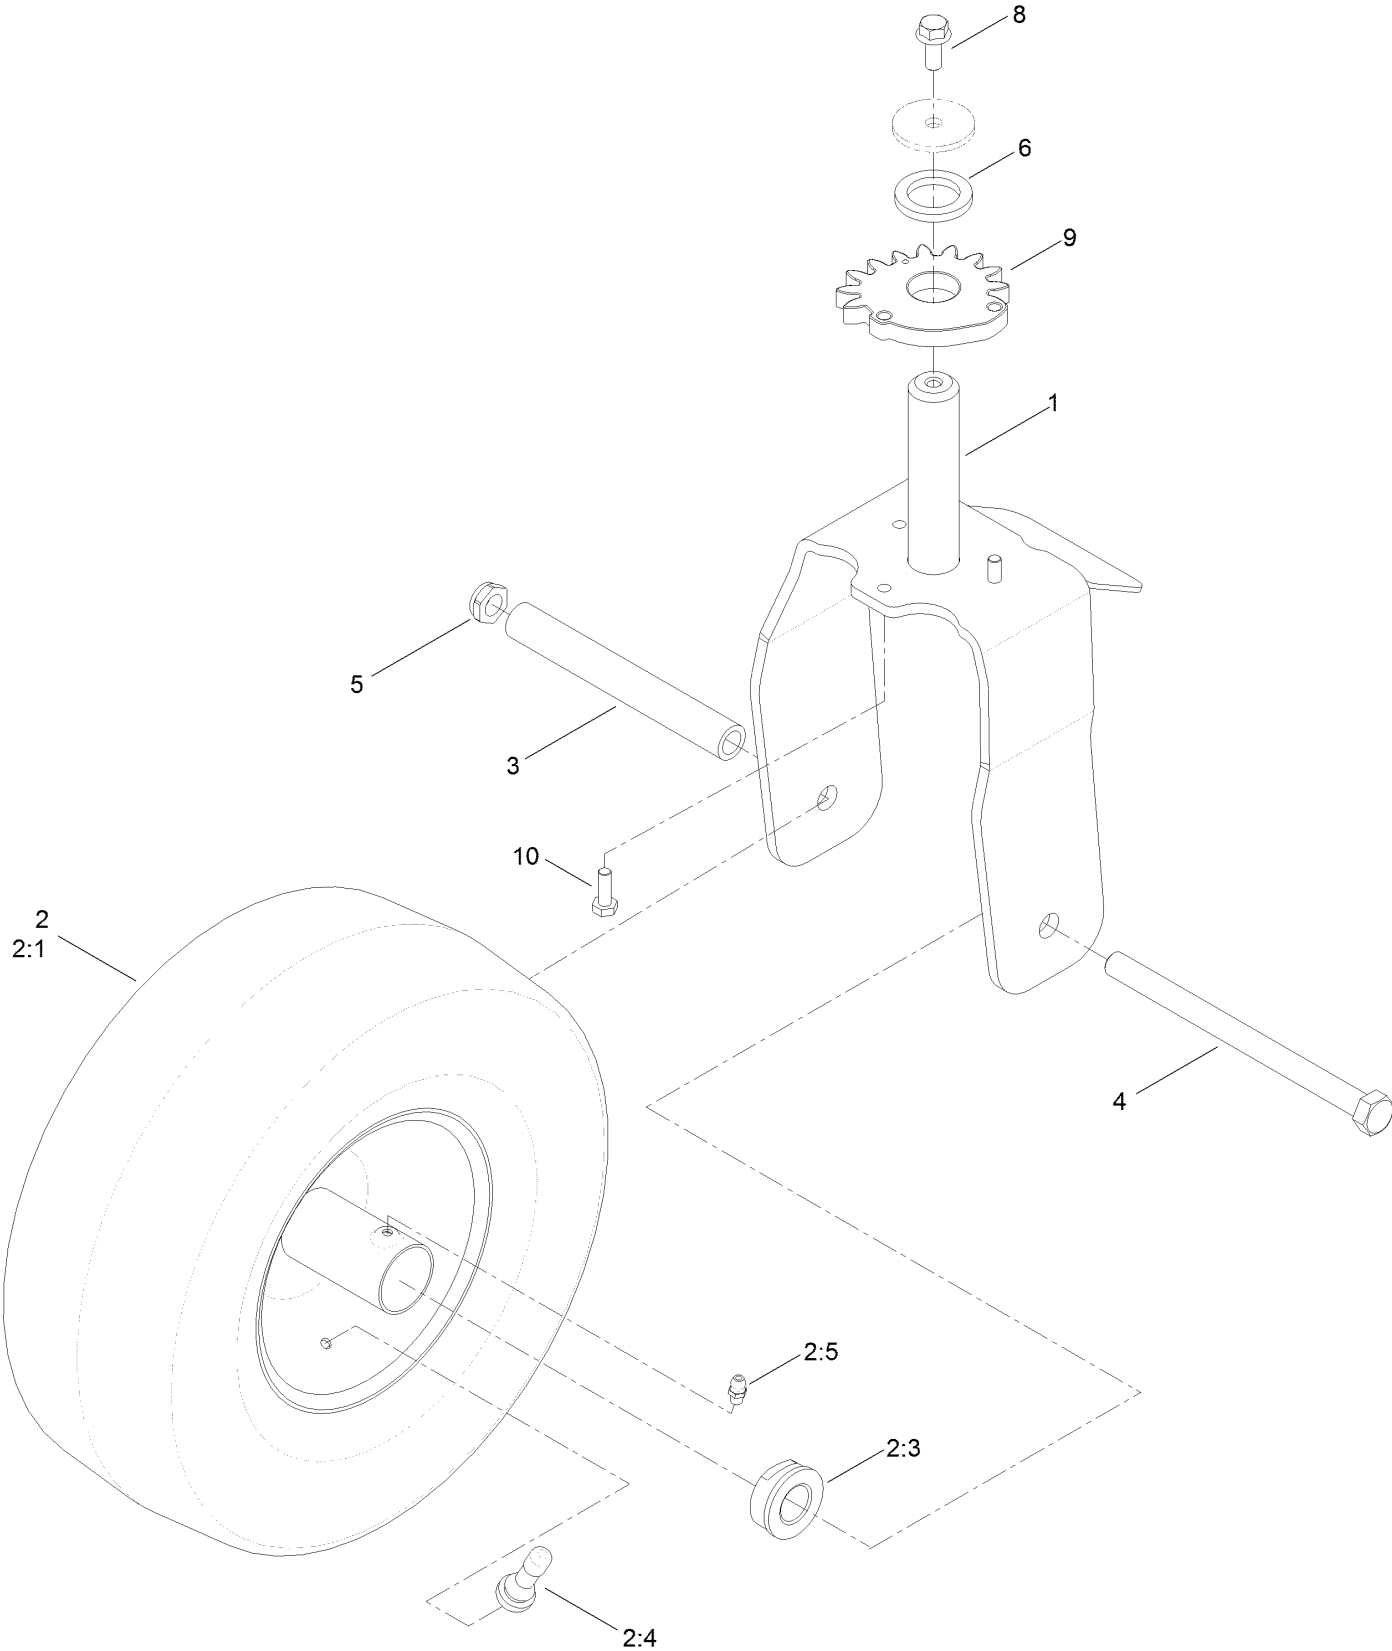


## Caster Wheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            |
|-------------|--------------------|-------------|-------------------------------|
| 1           | 130-0670-03        | 2           | Caster Fork ASM               |
| 2           | 119-3473           | 2           | 13 Inch Wheel And Tire<br>ASM |
| 2:1         | 119-3471           | 1           | Tire-13 Inch                  |
| 2:3         | 114-1640           | 2           | Bushing-Flange                |
| 2:4         | 232-27             | 1           | Stem-Valve                    |
| 2:5         | 302-5              | 1           | Fitting-Grease                |
| 2:99        | 232-46             | 1           | Tube-Inner ●                  |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 3           | 119-3475           | 2           | Spanner              |
| 4           | 325-37             | 2           | Screw-HH             |
| 5           | 3296-45            | 2           | Nut-Hex              |
| 6           | 117-7394           | 2           | Washer-Thrust        |
| 8           | 3234-47            | 2           | Screw-HHF            |
| 9           | 130-0689           | 2           | Gear-Wheel, 15 Tooth |
| 10          | 321-4              | 4           | Screw-HH             |

● Not illustrated
 
# Traction Drive Assembly

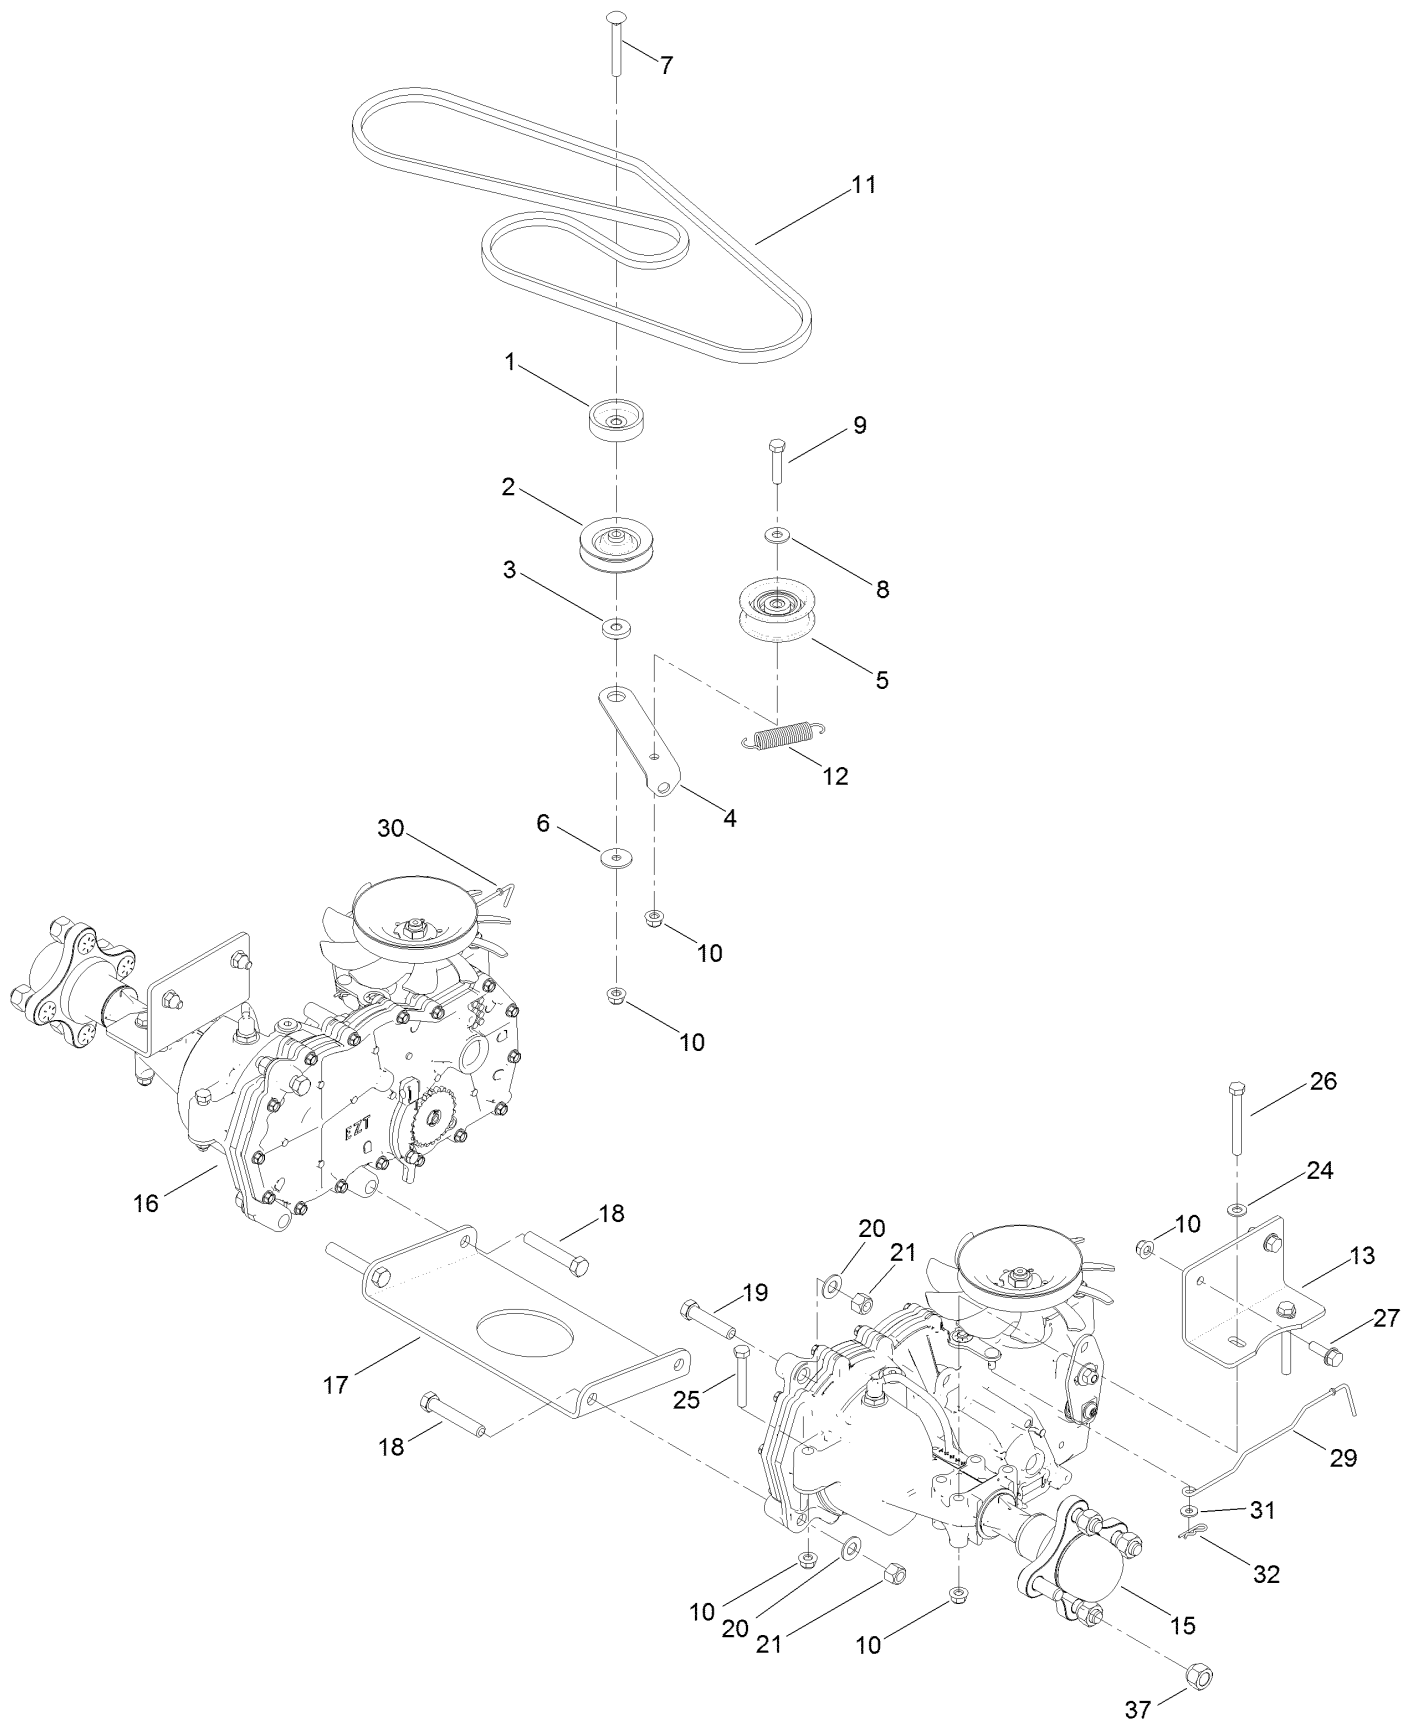

## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 119-3353           | 1           | Spacer                 | 17          | 119-3342-03        | 1           | Plate-Cross, Hydro   |
| 2           | 119-8822           | 1           | Pulley-Idler           | 18          | 324-10             | 4           | Screw-HH             |
| 3           | 119-3327           | 1           | Spacer-Arm, Idler      | 19          | 324-8              | 2           | Screw-HH             |
| 4           | 119-3326           | 1           | Arm-Idler              | 20          | 3256-25            | 6           | Washer-Flat          |
| 5           | 106-2176           | 1           | Pulley-Idler           | 21          | 3296-48            | 6           | Nut-Hex              |
| 6           | 5-4460             | 1           | Washer-Pivot           | 24          | 3256-23            | 6           | Washer-Plain         |
| 7           | 3230-8             | 1           | Screw-CARR             | 25          | 322-11             | 4           | Screw-HH             |
| 8           | 3256-3             | 1           | Washer-Flat            | 26          | 322-13             | 4           | Screw-HH             |
| 9           | 322-7              | 1           | Screw-HH               | 27          | 3234-29            | 4           | Screw-HHF            |
| 10          | 104-8300           | 14          | Nut-HF, NI             | 29          | 131-0900           | 1           | *obs* Rod-Bypass, LH |
| 11          | 130-6976           | 1           | V-Belt                 | 30          | 130-7049           | 1           | Rod-Bypass, RH       |
| 12          | 104-6415           | 1           | Spring-Return, Pedal   | 31          | 119-8952           | 2           | Washer               |
| 13          | 117-7264-03        | 2           | Mount-Hydro            | 32          | 3290-307           | 2           | Pin-Cotter           |
| 15          | 119-3350           | 1           | LH Hydro Transaxle ASM | 37          | 242-50             | 8           | Nut-Lug              |
| 16          | 119-3351           | 1           | RH Hydro Transaxle ASM |             |                    |             |                      |

# Left Hand Hydro Transaxle Assembly No. 119-3350

 


# Left Hand Hydro Transaxle Assembly No. 119-3350 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 106-8695           | 1           | Main Housing ASM      | 42          | 104-5317           | 1           | Gear-10T/48T              |
| 2           | 106-8696           | 1           | Side ASM              | 43          | 104-5318           | 1           | Gear-Jackshaft, 10T       |
| 4           | 110-8561           | 1           | Pump Block ASM        | 44          | 104-5329           | 1           | Pin-Jackshaft             |
| 6           | 103-2666           | 1           | Cylinder Block Kit    | 46          | 112-9855           | 1           | Gear-52T, Bull            |
| 7           | 104-2189           | 1           | Plug-Thread, Straight | 47          | 112-9856           | 1           | Washer                    |
| 9           | 104-5305           | 16          | Screw-HHF             | 48          | 112-9857           | 1           | Bearing-Sleeve            |
| 15          | 106-8678           | 1           | Rod-Bypass            | 49          | 120-7104           | 1           | Shaft-Axle                |
| 19          | 104-5304           | 1           | Swashplate-Trunnion   | 50          | 112-9859           | 1           | Bushing-Axle              |
| 21          | 104-2116           | 1           | Stud                  | 52          | 106-8686           | 1           | Seal Kit ●                |
| 22          | 112-9853           | 1           | Puck-Friction         | 54          | 121-5746           | 1           | Fan Pulley Kit            |
| 24          | 114-8491           | 1           | Washer                | 55          | 106-8688           | 1           | Brake Arm Kit             |
| 27          | 120-5537           | 1           | Spring-Compression    | 57          | 112-9861           | 1           | Center Section Filter Kit |
| 28          | 120-5538           | 1           | Washer                | 58          | 104-2147           | 1           | Sealant ●                 |
| 29          | 104-5306           | 1           | Shaft-Input           | 59          | 120-5549           | 1           | Bypass Kit                |
| 30          | 104-5311           | 1           | Bearing-Ball          | 61          | 114-1634           | 1           | Filter Kit                |
| 32          | 104-5308           | 1           | Spacer                | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 35          | 94-6922            | 2           | Bearing-Thrust        | 138         | 112-9866           | 1           | Breather Kit              |
| 36          | 104-5339           | 1           | Washer-Flat           | 139         | 114-1635           | 1           | Breather ASM              |
| 38          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 115-5057           | 1           | Cover-Nut, Axle           |
| 39          | 106-8683           | 1           | Shaft-Motor           | 151         | 120-7109           | 1           | Tube-Axle                 |
| 40          | 104-5360           | 1           | Washer                | 200         | 117-5362           | 1           | Control Arm Kit           |
| 41          | 119-5541           | 2           | Washer                | 224         | 109-5939           | 1           | Hub Kit                   |

● Not illustrated

## Right Hand Hydro Transaxle Assembly No. 119-3351

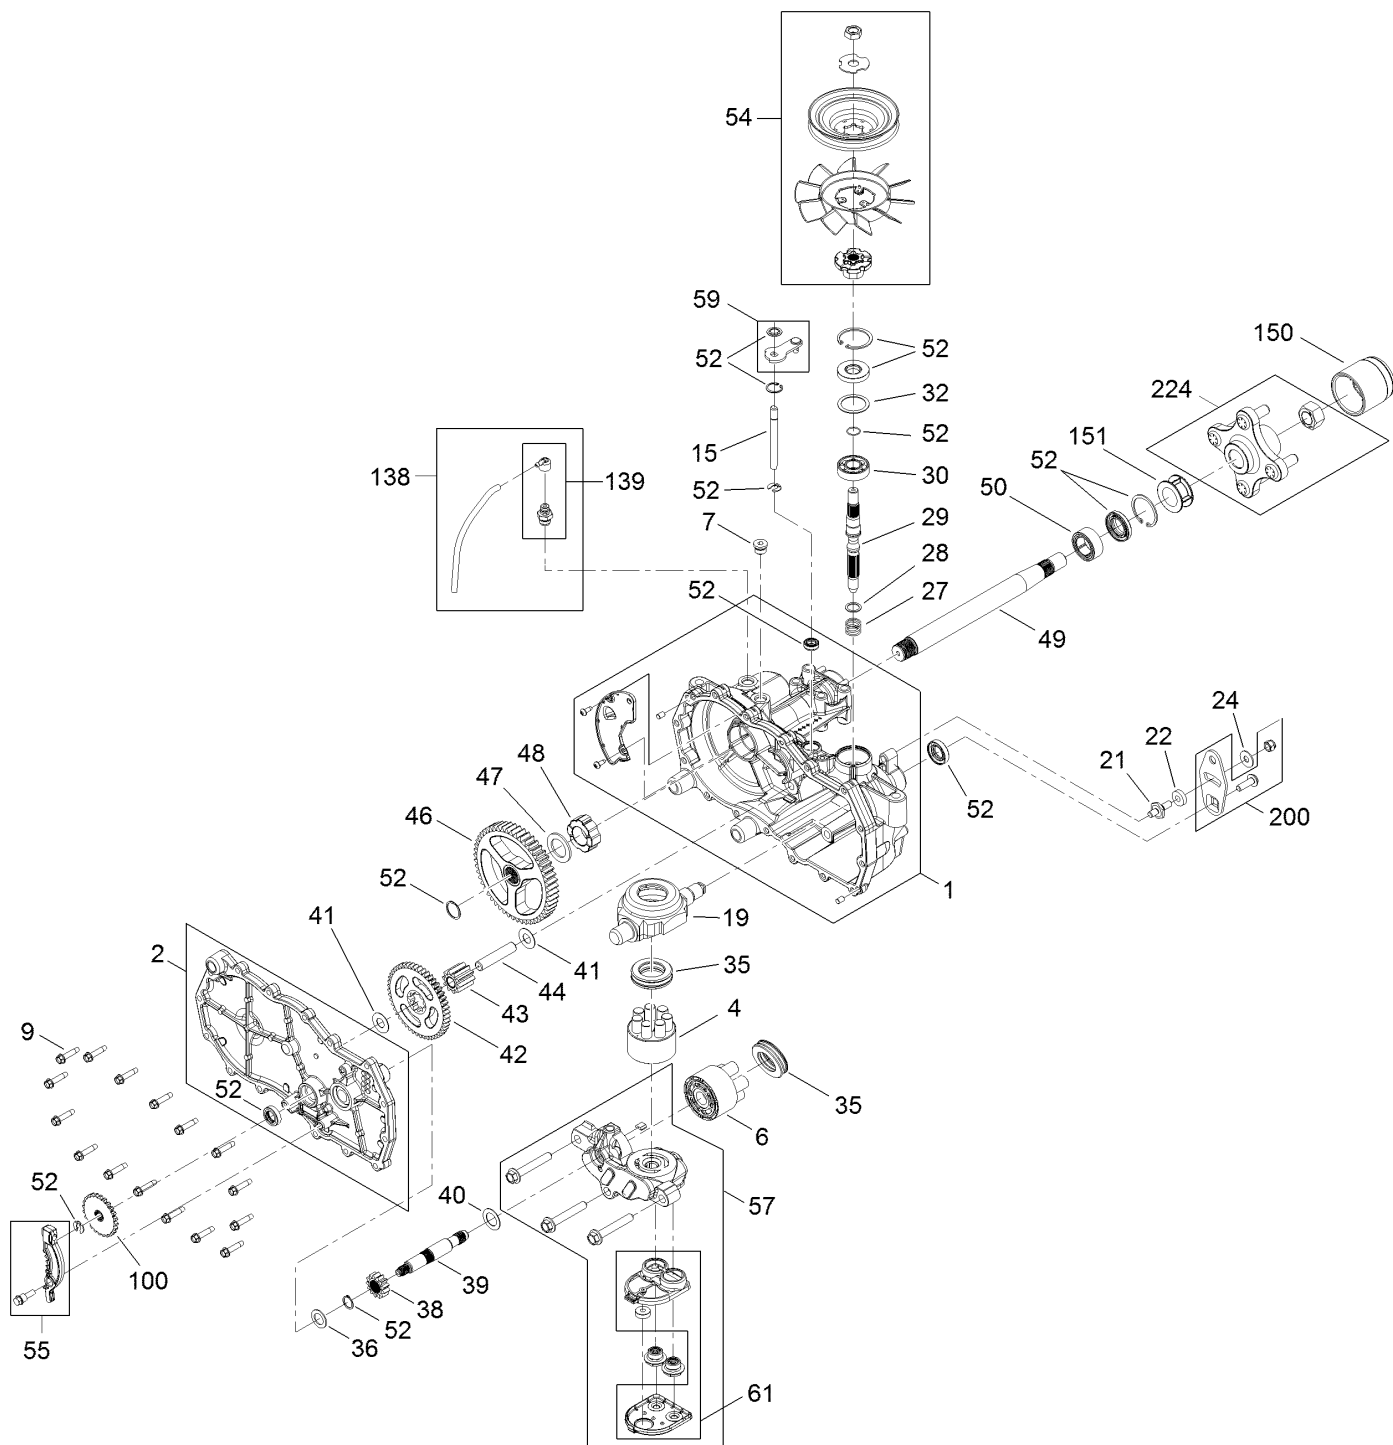


# Right Hand Hydro Transaxle Assembly No. 119-3351 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 106-8674           | 1           | Main Housing ASM      | 42          | 104-5317           | 1           | Gear-10T/48T              |
| 2           | 106-8675           | 1           | Side ASM              | 43          | 104-5318           | 1           | Gear-Jackshaft, 10T       |
| 4           | 110-8561           | 1           | Pump Block ASM        | 44          | 104-5329           | 1           | Pin-Jackshaft             |
| 6           | 103-2666           | 1           | Cylinder Block Kit    | 46          | 112-9855           | 1           | Gear-52T, Bull            |
| 7           | 104-2189           | 1           | Plug-Thread, Straight | 47          | 112-9856           | 1           | Washer                    |
| 9           | 104-5305           | 16          | Screw-HHF             | 48          | 112-9857           | 1           | Bearing-Sleeve            |
| 15          | 106-8678           | 1           | Rod-Bypass            | 49          | 120-7104           | 1           | Shaft-Axle                |
| 19          | 104-5304           | 1           | Swashplate-Trunnion   | 50          | 112-9859           | 1           | Bushing-Axle              |
| 21          | 104-2116           | 1           | Stud                  | 52          | 106-8686           | 1           | Seal Kit ●                |
| 22          | 112-9853           | 1           | Puck-Friction         | 54          | 121-5746           | 1           | Fan Pulley Kit            |
| 24          | 114-8491           | 1           | Washer                | 55          | 106-8688           | 1           | Brake Arm Kit             |
| 27          | 120-5537           | 1           | Spring-Compression    | 57          | 112-9862           | 1           | Center Section Filter Kit |
| 28          | 120-5538           | 1           | Washer                | 58          | 104-2147           | 1           | Sealant ●                 |
| 29          | 104-5306           | 1           | Shaft-Input           | 59          | 107-2489           | 1           | Bypass Arm Kit            |
| 30          | 104-5311           | 1           | Bearing-Ball          | 61          | 114-1634           | 1           | Filter Kit                |
| 32          | 104-5308           | 1           | Spacer                | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 35          | 94-6922            | 2           | Bearing-Thrust        | 138         | 112-9866           | 1           | Breather Kit              |
| 36          | 104-5339           | 1           | Washer-Flat           | 139         | 114-1635           | 1           | Breather ASM              |
| 38          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 115-5057           | 1           | Cover-Nut, Axle           |
| 39          | 106-8683           | 1           | Shaft-Motor           | 151         | 120-7109           | 1           | Tube-Axle                 |
| 40          | 104-5360           | 1           | Washer                | 200         | 117-5362           | 1           | Control Arm Kit           |
| 41          | 119-5541           | 2           | Washer                | 224         | 109-5939           | 1           | Hub Kit                   |

● Not illustrated
 
# Brake Assembly

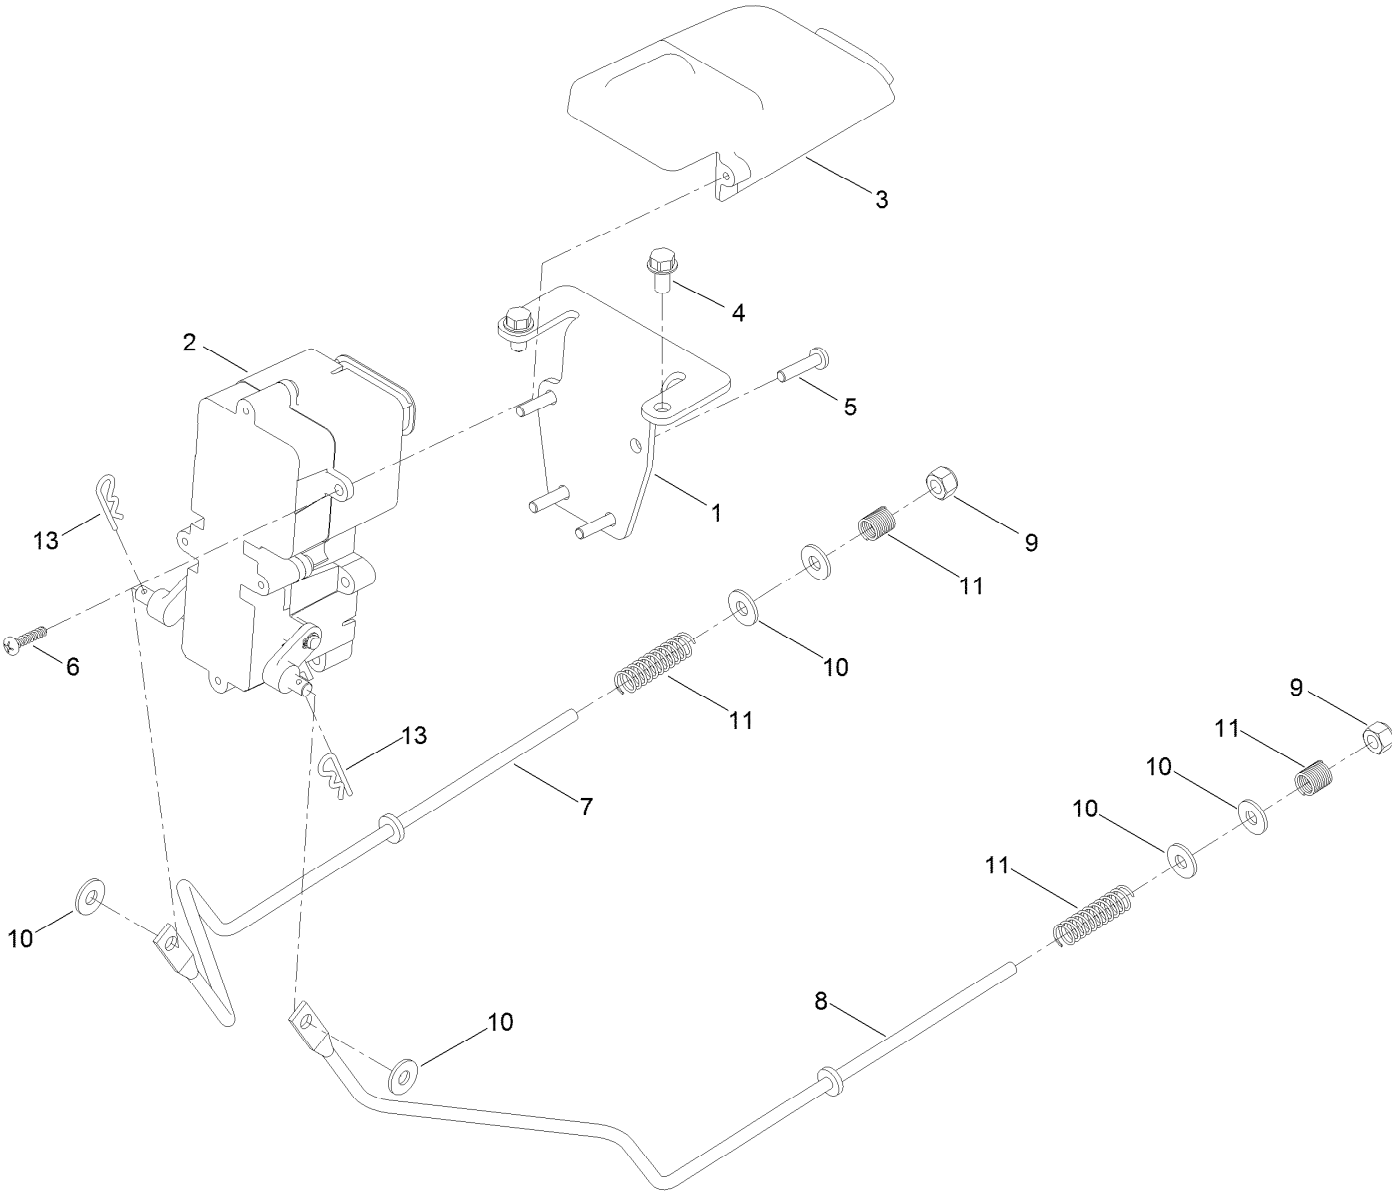

## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 130-0790-03        | 1           | Bracket-Mount, Brake | 7           | 121-2976           | 1           | Rod-Brake, Wide (RH) |
| 2           | 136-4214           | 1           | Brake Box ASM        | 8           | 121-2977           | 1           | Rod-Brake, Wide (LH) |
| 3           | 132-6949           | 1           | Cover-Connector      | 9           | 3296-42            | 2           | Nut-Lock, NI         |
| 4           | 32144-4            | 2           | Screw-HWH            | 10          | 119-8952           | 6           | Washer               |
| 5           | 32144-36           | 4           | Screw-PPH            | 11          | 117-1169           | 4           | Spring-Compression   |
| 6           | 94-4496            | 2           | Screw-PPH            | 13          | 3290-307           | 2           | Pin-Cotter           |

Rear Tire Assembly



 
## Rear Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|
| 1           | 131-3672           | 2           | 2 Ply Tire And Wheel ASM |
| 1:1         | 131-3679           | 1           | Tire-2Ply                |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:3         | 232-27             | 1           | Stem-Valve         |
| 1:99        | 232-37             | 1           | Tube ●             |

● Not illustrated


Seat Assembly

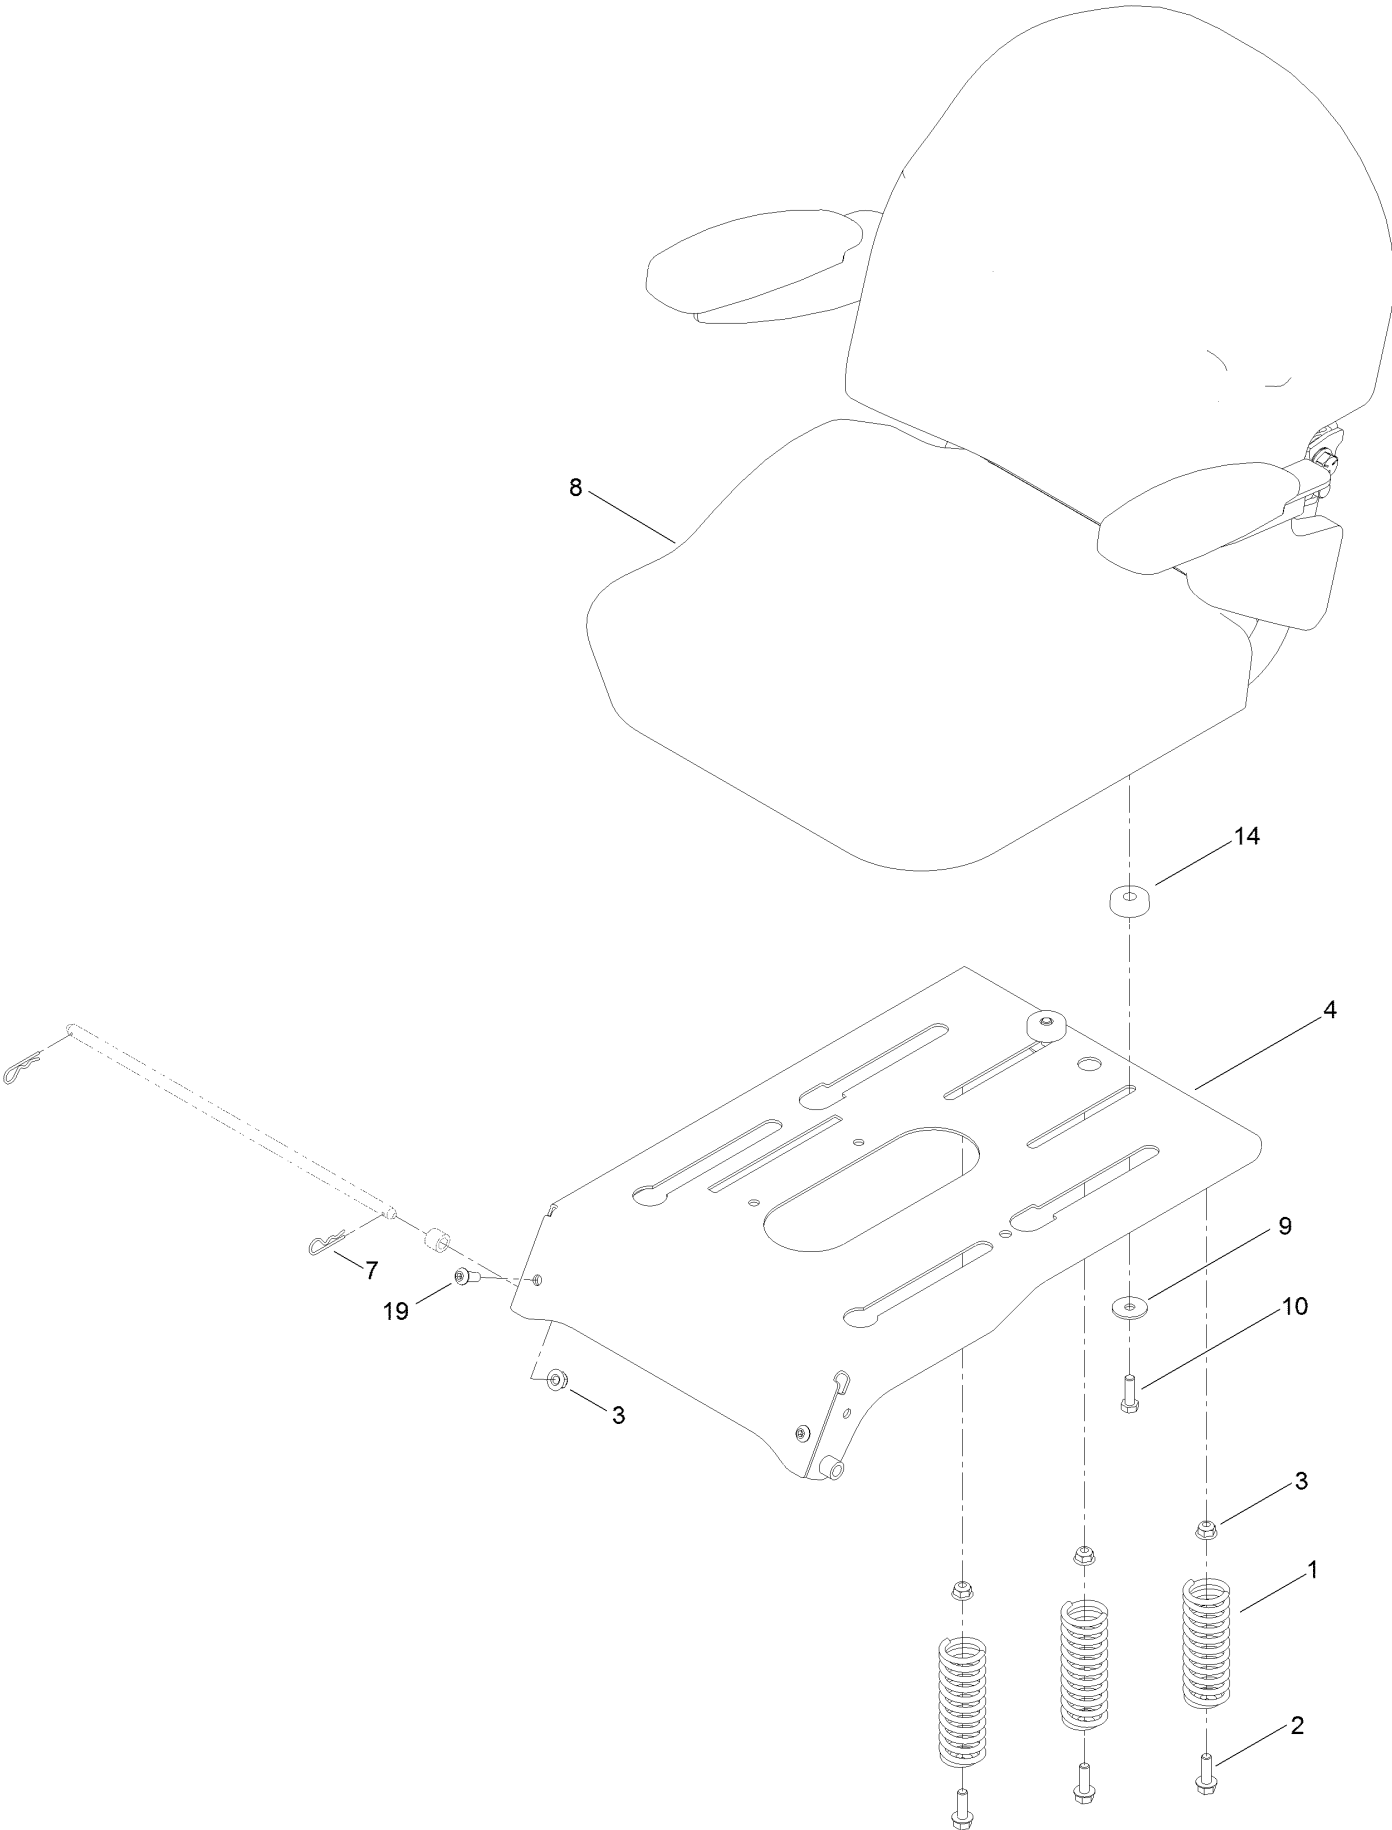

## Seat Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 1           | 92-7054            | 3           | Spring-Compression | 8           | 138-2608           | 1           | Seat ASM            |
| 2           | 3234-29            | 3           | Screw-HHF          | 9           | 5-4460             | 2           | Washer-Pivot        |
| 3           | 104-8300           | 5           | Nut-HF, NI         | 10          | 322-5              | 2           | Screw-HH            |
| 4           | 136-5571-03        | 1           | Pan-Seat, Deluxe   | 14          | 136-5572           | 2           | Bushing-Slide, Seat |
| 7           | 3290-250           | 2           | Pin-Cotter         | 19          | 3274-55            | 2           | Screw-HSBH          |
 
# Seat Assembly No. 138-2608

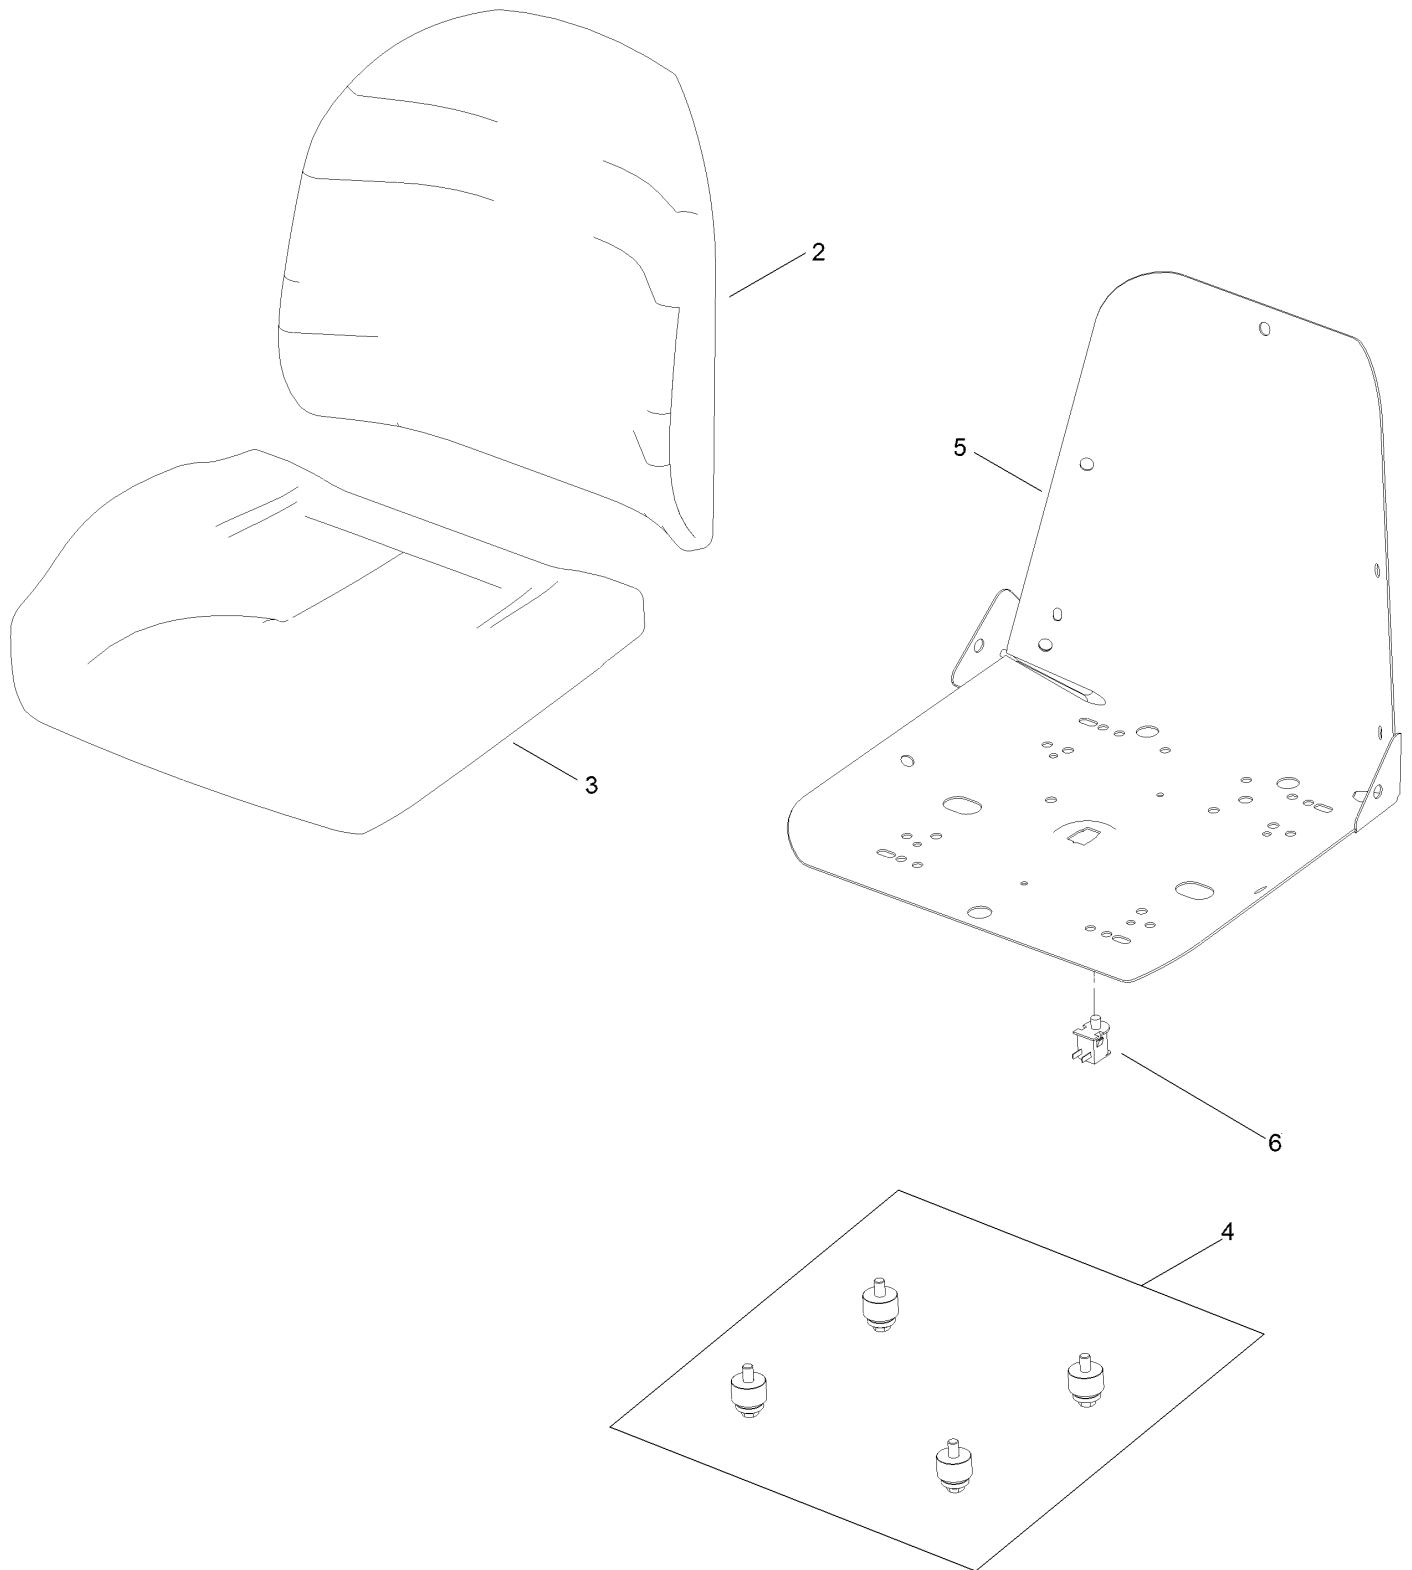


## Seat Assembly No. 138-2608 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 2           | 131-4149           | 1           | Cushion-Seat, Back   |
| 3           | 131-4151           | 1           | Cushion-Seat, Bottom |
| 4           | 131-4154           | 1           | Bushing ASM          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 138-2609           | 1           | Shell              |
| 6           | 82-2190            | 1           | Switch-Bail        |

 
# Motion Control Assembly

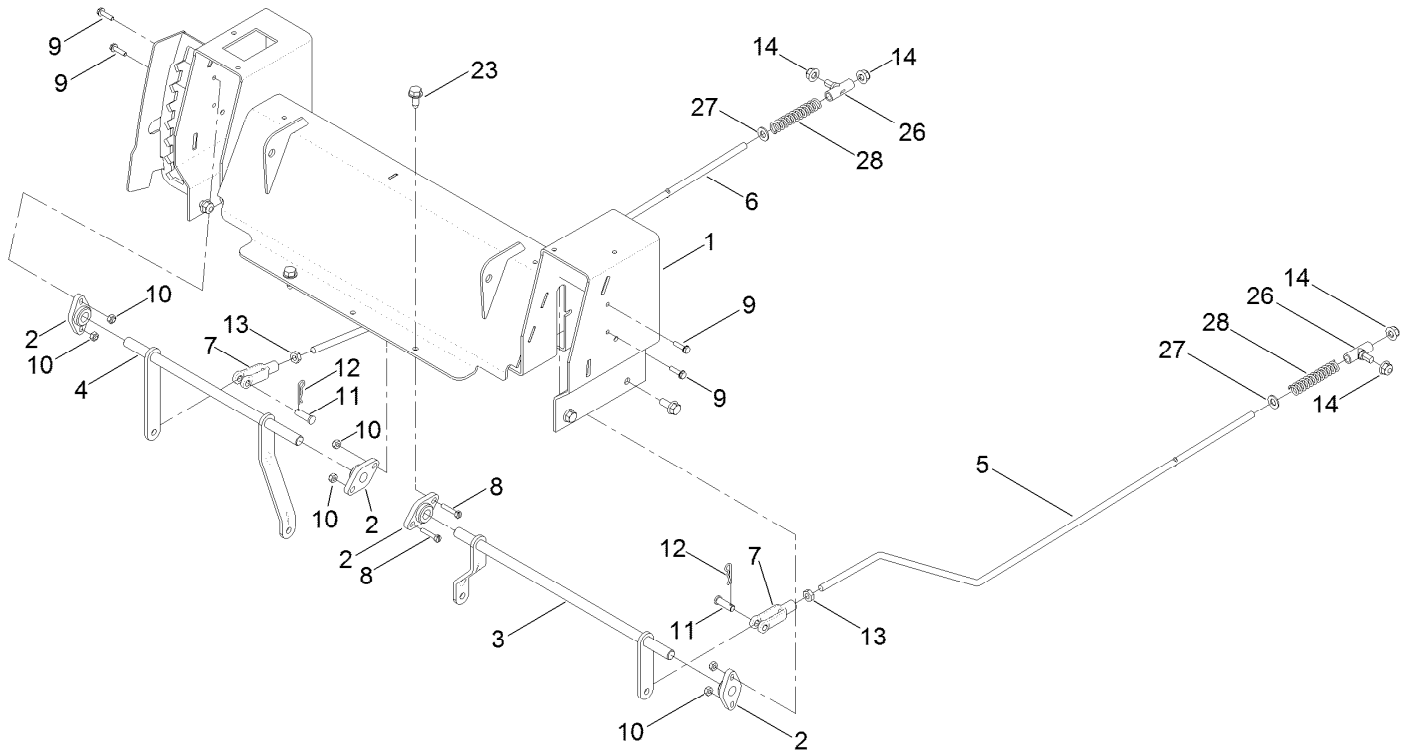

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 125-5458-03        | 1           | Box-Control, Wide  | 11          | 1-808280           | 2           | Pin-Clevis             |
| 2           | 127-0146           | 4           | Bearing-Flange     | 12          | 1-806003           | 2           | Pin-Cotter             |
| 3           | 132-6880           | 1           | Bellcrank-LH       | 13          | 3220-2             | 2           | Nut-Jam                |
| 4           | 132-6886           | 1           | Bellcrank-RH       | 13          | 3234-47            | 6           | Screw-HHF              |
| 5           | 125-1812           | 1           | Rod-Hydro, LH      | 14          | 104-8300           | 10          | Nut-HF, NI             |
| 6           | 127-3378           | 1           | Rod-Hydro, RH      | 23          | 32144-70           | 2           | Screw-HWHTF            |
| 7           | 1-303105           | 2           | Yoke-Adjustable    | 26          | 119-8842           | 2           | Mount-Rod, Hydro       |
| 8           | 32105-12           | 2           | Screw              | 27          | 3256-23            | 2           | Washer-Plain           |
| 9           | 3290-126           | 4           | Screw-HWH          | 28          | 1-603807           | 2           | Spring-Return, Neutral |
| 10          | 3296-2             | 6           | Nut-Lock, NI       |             |                    |             |                        |
 
# Engine Assembly

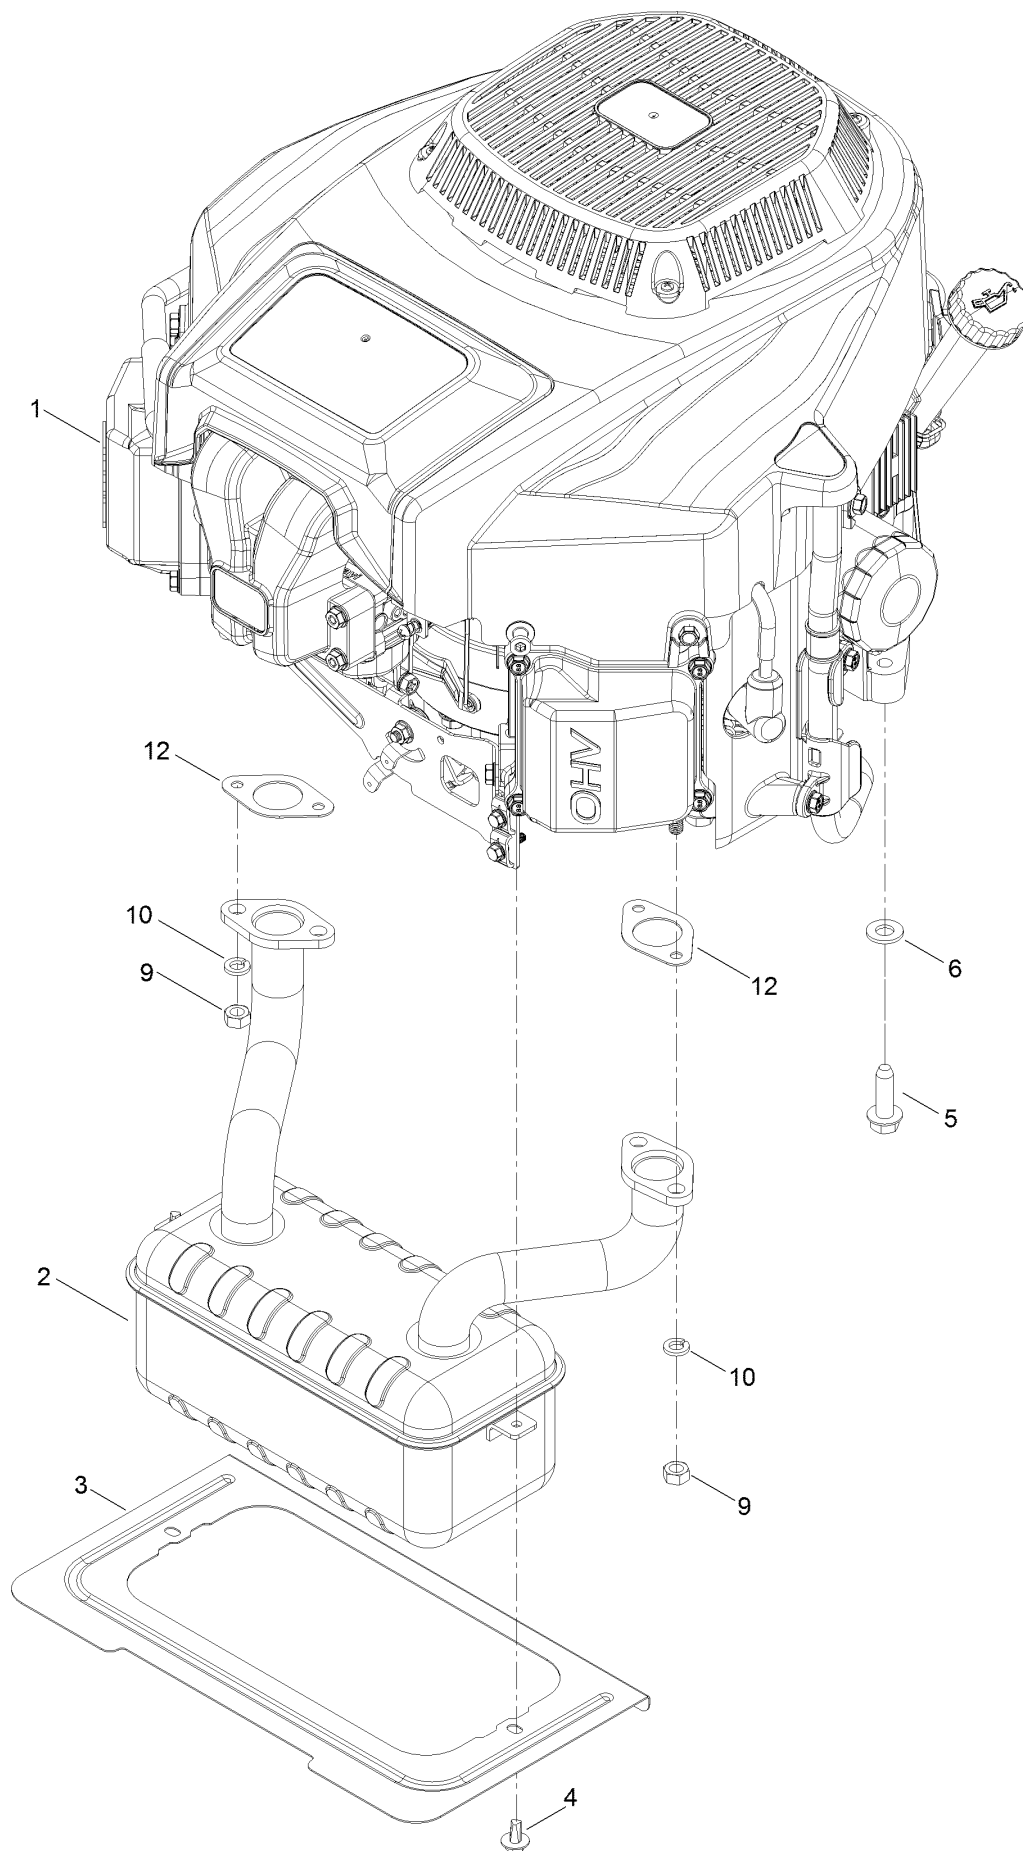

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 136-7816           | 1           | Engine-2P77F       | 6           | 3256-24            | 3           | Washer-Flat        |
| 2           | 130-6851           | 1           | Muffler            | 9           | 121-0199           | 4           | Nut-HH             |
| 3           | 131-1071-03        | 1           | Shield-Heat        | 10          | 127-9279           | 4           | Washer-Lock, Split |
| 4           | 46-8560            | 2           | Screw-HHFTF        | 12          | 120-4317           | 2           | Gasket-Exhaust     |
| 5           | 32144-109          | 4           | Screw-Thd          |             |                    |             |                    |


Diagram illustrating the assembly of a carburetor. The main assembly includes the carburetor body (1), various hoses (2, 3, 4, 5, 6, 7, 16), and fasteners (8, 9, 10, 11, 12, 13, 14, 15). Callouts 96, 97, and 98 indicate specific gasket and hose components.

## Fuel System Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 133-1563           | 1           | Filter-Fuel        | 11          | 127-9245           | 4           | Stud                       |
| 2           | 120-4251           | 6           | Clamp-Fuel Line    | 12          | 127-9246           | 2           | Gasket-Carburetor          |
| 3           | 120-4371           | 1           | Line-Fuel          | 13          | 127-9247           | 1           | Insulator-Carburetor       |
| 4           | 127-9206           | 1           | Pump-Fuel          | 14          | 133-9963           | 1           | Linkage-Throttle           |
| 5           | 120-4225           | 2           | Screw-HHF          | 15          | 133-9964           | 1           | Spring-Return, Throttle    |
| 6           | 127-9205           | 1           | Hose-Fuel          | 16          | 127-9355           | 1           | Sleeve-Fuel Line Protector |
| 7           | 127-9207           | 1           | Hose-Fuel          | 96          | 136-7840           | 1           | Carburetor Replacement Kit |
| 8           | 127-9230           | 2           | Gasket-Intake      | 97          | 127-9290           | 1           | Carburetor Repair Kit      |
| 9           | 120-4284           | 4           | Screw-HHF          | 98          | 127-9292           | 1           | Solenoid Kit               |
| 10          | 127-9244           | 1           | Manifold-Intake    | 99          | 133-9833           | 1           | High Altitude Kit ●        |

● Not illustrated

 
# Carburetor Assembly

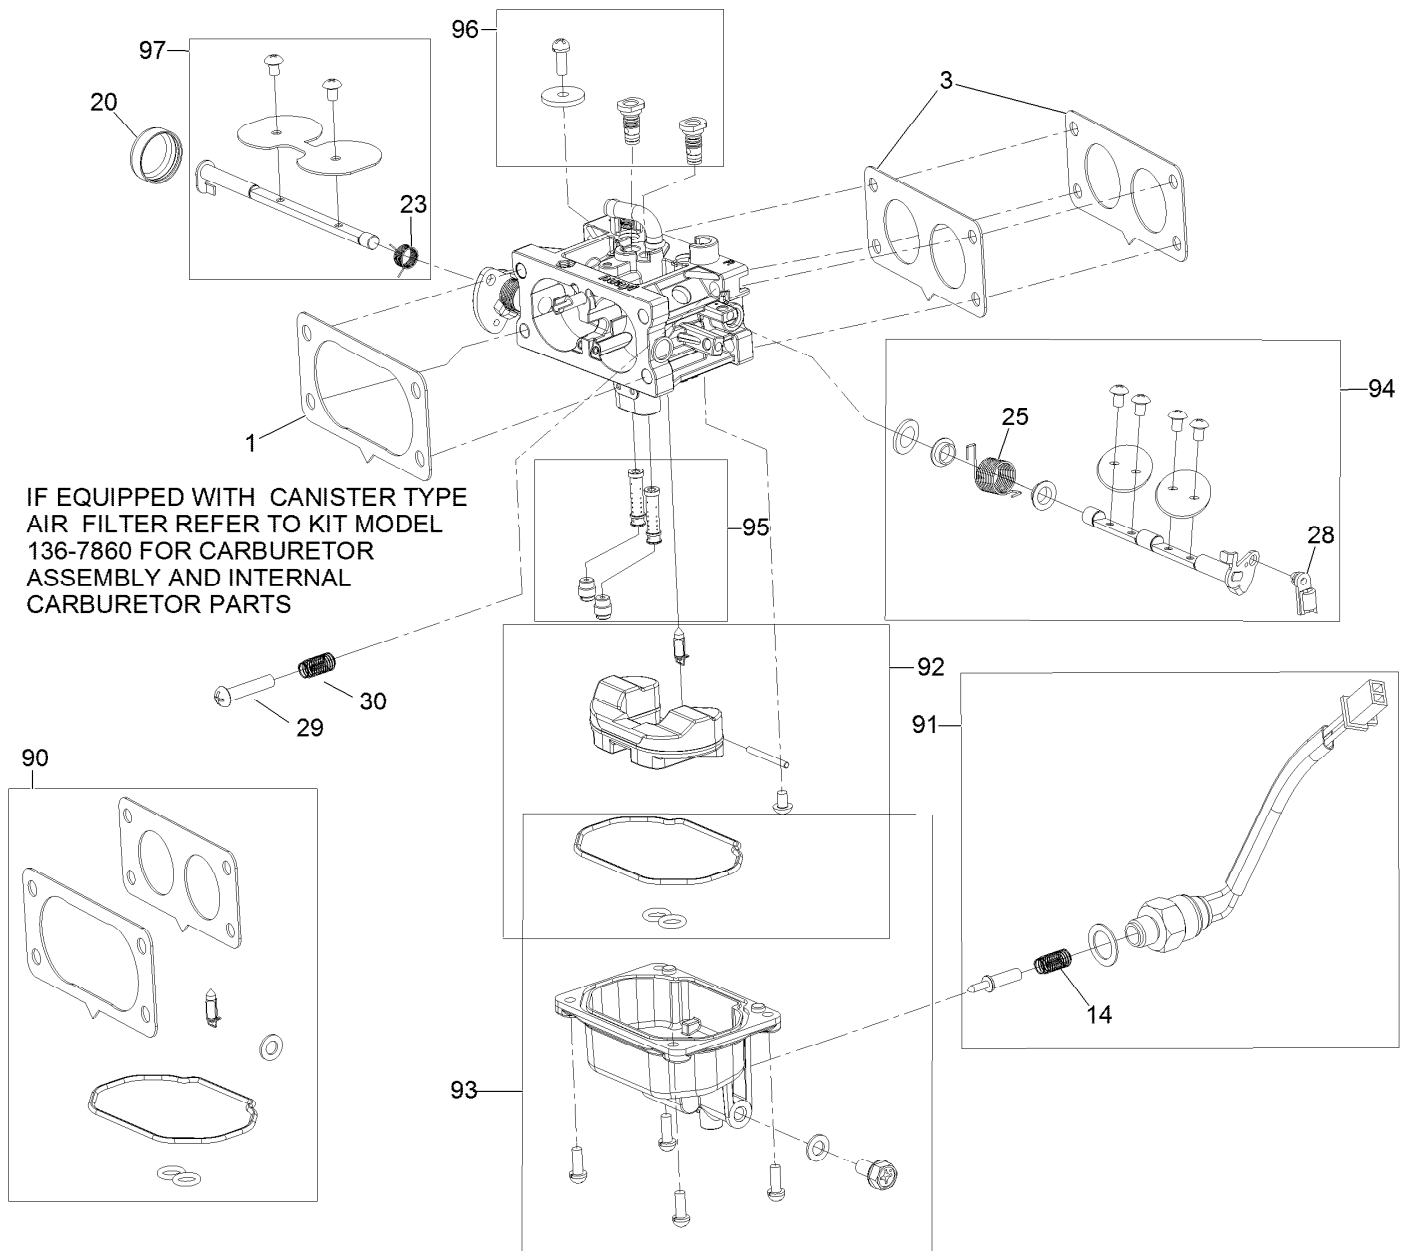

## Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 127-9251           | 1           | Gasket-Carburetor  | 90          | 127-9290           | 1           | Carburetor Repair Kit |
| 3           | 127-9246           | 2           | Gasket-Carburetor  | 91          | 127-9292           | 1           | Solenoid Kit          |
| 14          | 127-9319           | 1           | Spring             | 92          | 127-9340           | 1           | Float Kit             |
| 20          | 127-9325           | 1           | Cover-Shaft, Choke | 93          | 127-9341           | 1           | Bowl Kit              |
| 23          | 127-9328           | 1           | Spring             | 94          | 133-9817           | 1           | Throttle Shaft Kit    |
| 25          | 127-9330           | 1           | Spring             | 95          | 136-7844           | 1           | Nozzle And Jet Kit    |
| 28          | 127-9333           | 1           | Clamp-Lock         | 96          | 136-7899           | 1           | Idle Jet Kit          |
| 29          | 127-9334           | 1           | Screw-PPH          | 97          | 127-9345           | 1           | Choke Shaft Kit       |
| 30          | 127-9335           | 1           | Spring             |             |                    |             |                       |

 
# Air Intake and Filtration Assembly

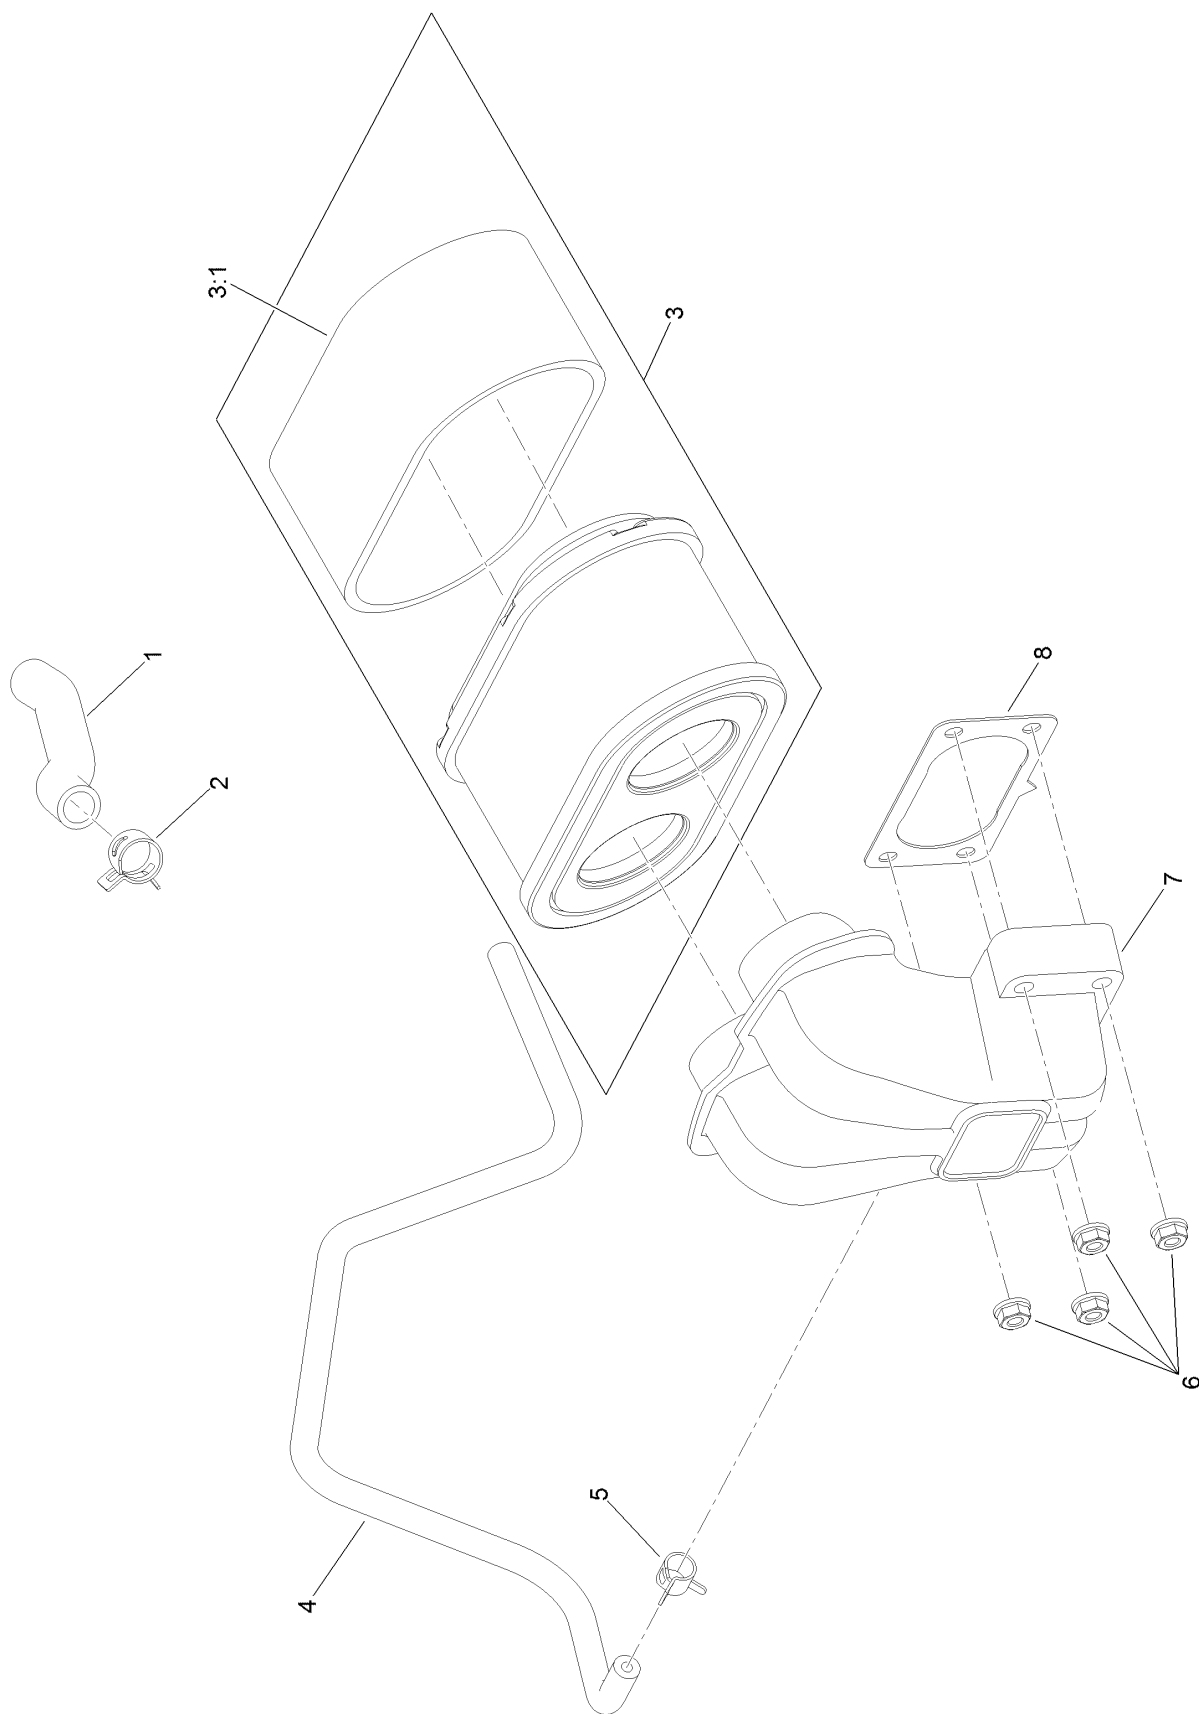

## Air Intake and Filtration Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 127-9235           | 1           | Tube-Breather        | 5           | 127-9187           | 1           | Clamp-Hose           |
| 2           | 127-9234           | 2           | Clamp-Hose           | 6           | 120-4236           | 4           | Nut-Flange           |
| 3           | 127-9252           | 1           | Filter-Air, Complete | 7           | 127-9047           | 1           | Manifold-Filter, Air |
| 3:1         | 127-9288           | 1           | Filter-Pre, Foam     | 8           | 127-9251           | 1           | Gasket-Carburetor    |
| 4           | 127-9253           | 1           | Hose-Fuel            |             |                    |             |                      |
 
# Ignition and Cooling Fan

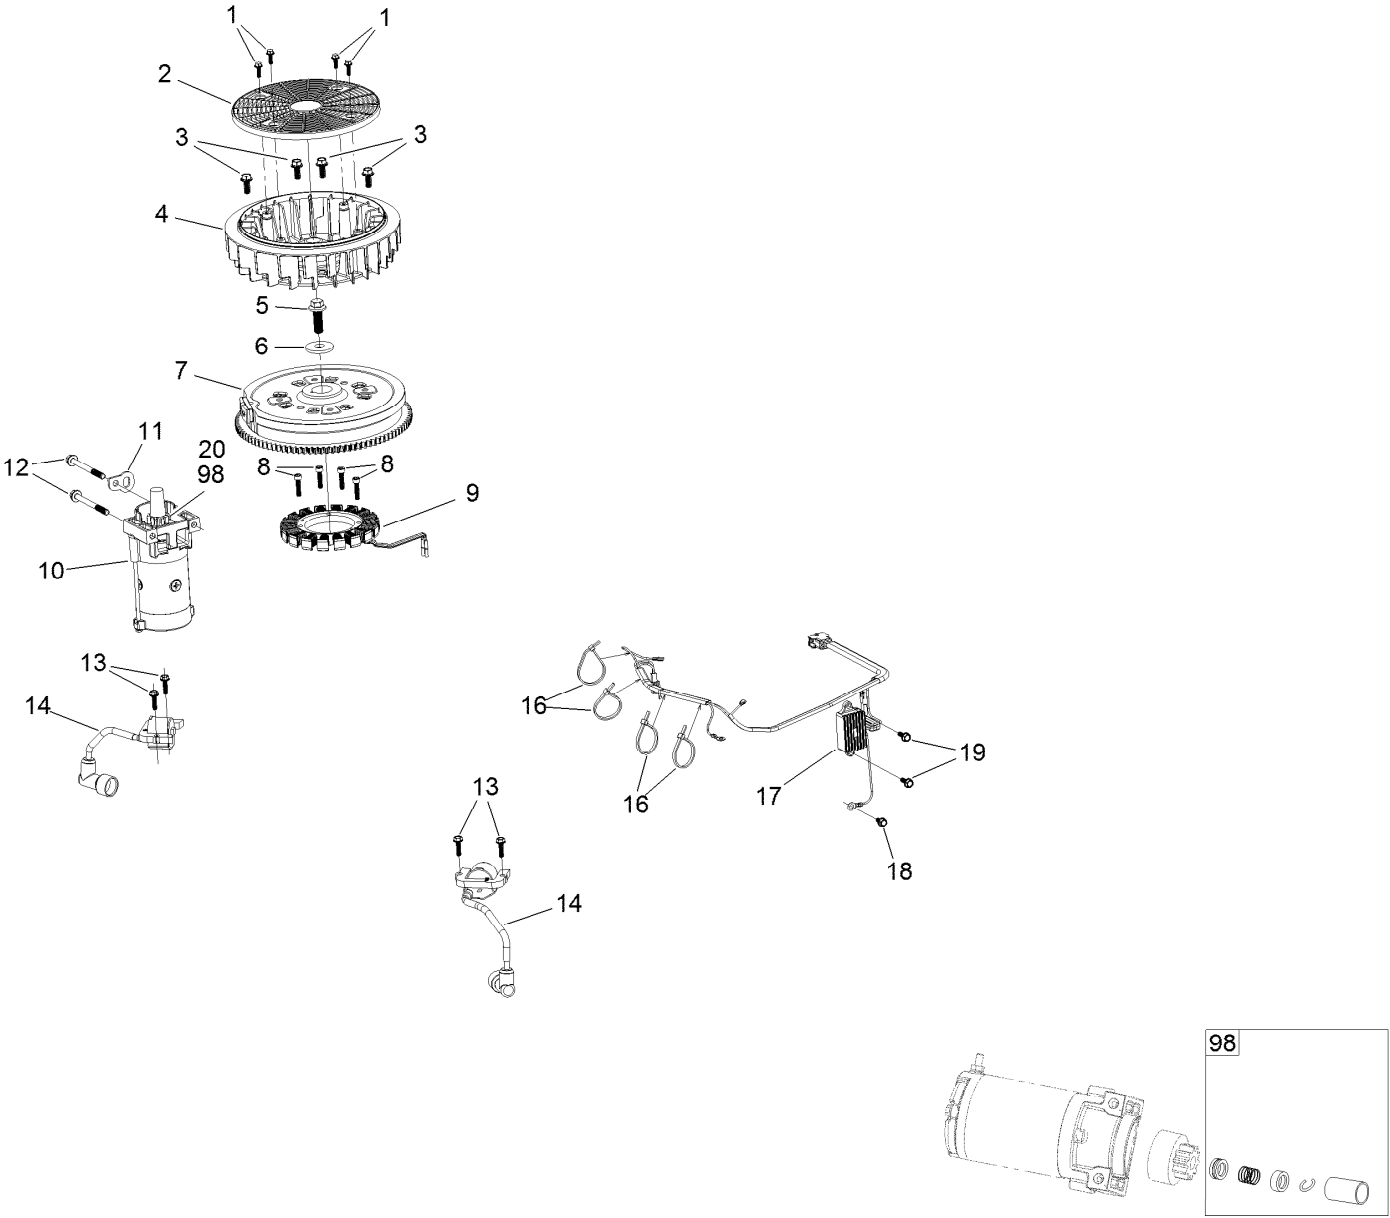


## Ignition and Cooling Fan (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9197           | 4           | Screw-HWH          |
| 2           | 127-9198           | 1           | Screen-Rotating    |
| 3           | 127-9199           | 4           | Screw-HWH          |
| 4           | 127-9200           | 1           | Fan-Cooling        |
| 5           | 127-9201           | 1           | Screw-HWH          |
| 6           | 127-9202           | 1           | Washer-Spring      |
| 7           | 127-9306           | 1           | Flywheel           |
| 8           | 127-9210           | 4           | Screw-HSH          |
| 9           | 136-7876           | 1           | Alternator         |
| 10          | 136-7880           | 1           | Motor-Starter      |
| 11          | 127-9208           | 1           | Bracket-Lift       |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|---------------------------------|
| 12          | 120-4231           | 2           | Screw-HHF                       |
| 13          | 121-0007           | 4           | Bolt-Flange                     |
| 14          | 136-7883           | 2           | Ignition Coil ASM               |
| 16          | 127-9220           | 4           | Tie-Zip                         |
| 17          | 136-7879           | 1           | Regulator-Voltage,<br>W/Harness |
| 18          | 120-4216           | 1           | Screw-HHF                       |
| 19          | 120-4232           | 2           | Screw-HHF                       |
| 20          | 133-1562           | 1           | Pinion-Starter                  |
| 98          | 133-1566           | 1           | Starter Repair Kit              |

 
# Crankcase and Crankshaft Assembly

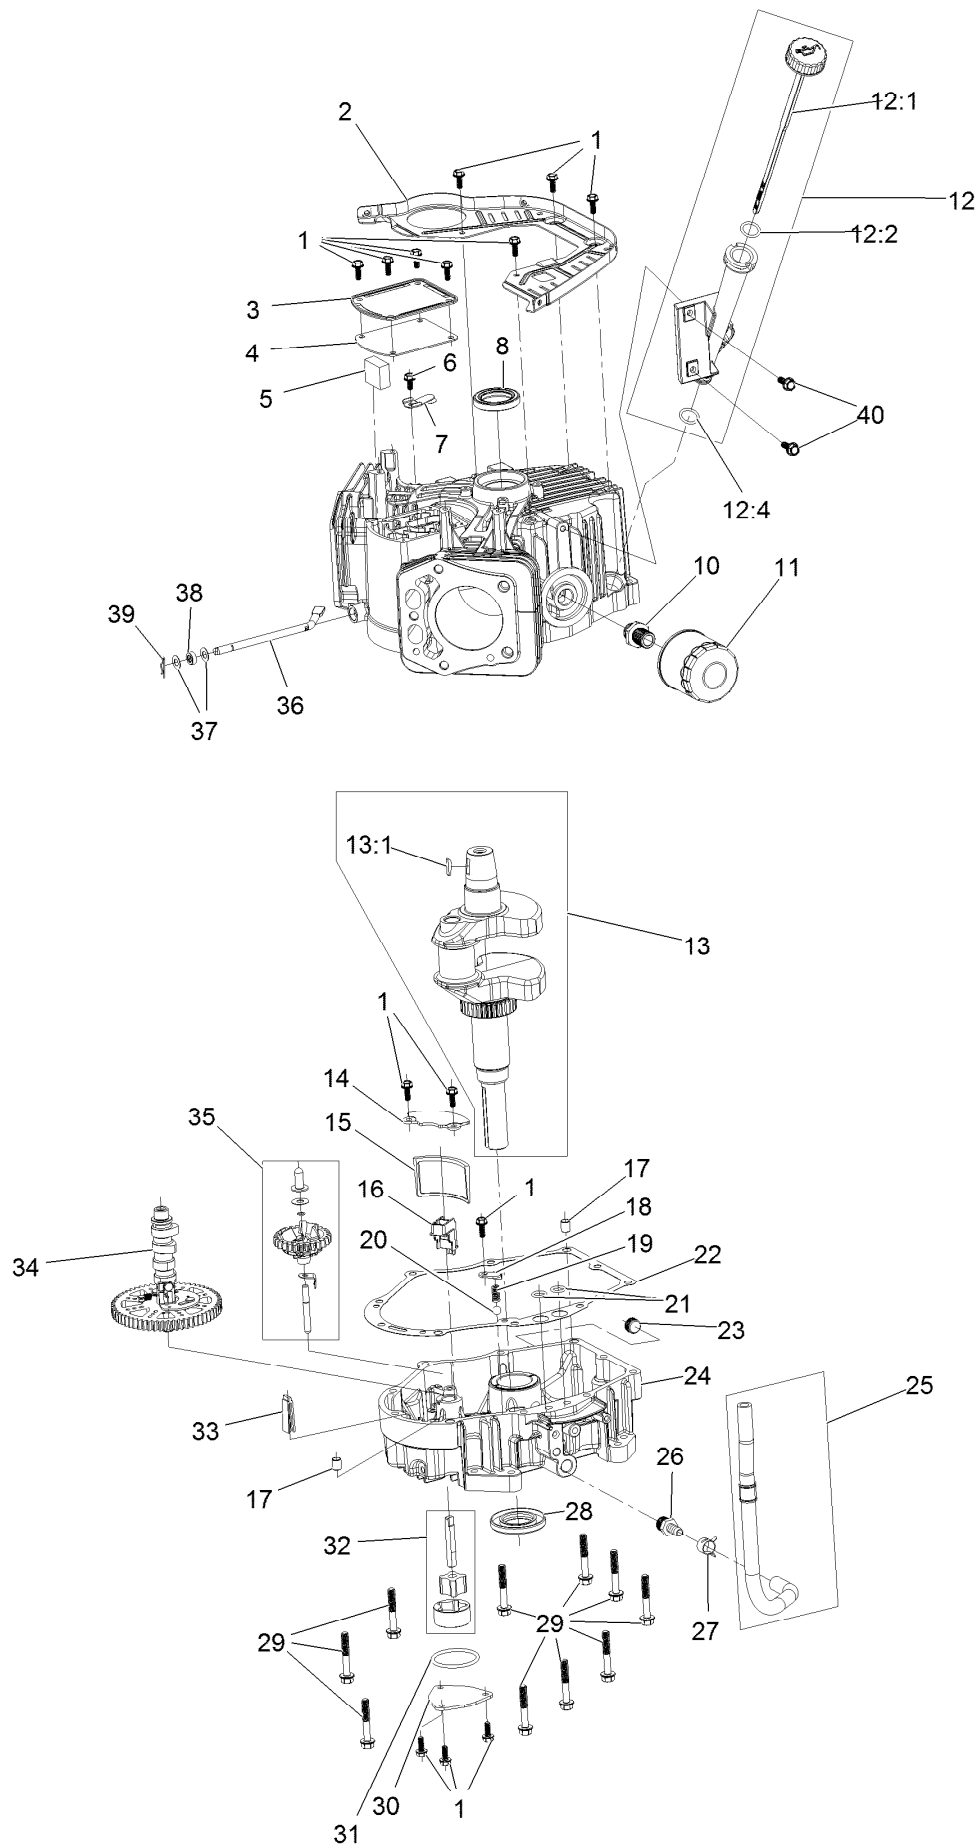

## Crankcase and Crankshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4232           | 14          | Screw-HHF           | 20          | 127-9266           | 1           | Valve-Ball              |
| 2           | 127-9212           | 1           | Baffle              | 21          | 120-4262           | 2           | O-Ring                  |
| 3           | 127-9213           | 1           | Cover-Breather      | 22          | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 4           | 127-9214           | 1           | Gasket-Breather     | 23          | 133-9805           | 1           | Plug-Drain              |
| 5           | 127-9215           | 1           | Filter-Breather     | 24          | 133-9806           | 1           | Cover-Crankcase         |
| 6           | 120-4216           | 1           | Screw-HHF           | 25          | 127-9293           | 1           | Oil Drain Hose ASM      |
| 7           | 127-9217           | 1           | Valve-Breather      | 26          | 127-9275           | 1           | Fitting-Hose            |
| 8           | 120-4267           | 1           | Seal-Oil            | 27          | 127-9276           | 1           | Clamp-Hose              |
| 10          | 136-7884           | 1           | Adaptor-Filter, Oil | 28          | 127-9271           | 1           | Seal                    |
| 11          | 136-7848           | 1           | Filter-Oil          | 29          | 121-0473           | 10          | Screw-HHF               |
| 12          | 127-9218           | 1           | Oil Tube ASM        | 30          | 127-9274           | 1           | Cover-Oil Pump          |
| 12:1        | 127-9283           | 1           | Dipstick            | 31          | 127-9273           | 1           | O-Ring                  |
| 12:2        | 127-9284           | 1           | O-Ring              | 32          | 127-9272           | 1           | Oil Pump ASM            |
| 12:4        | 127-9286           | 1           | O-Ring              | 33          | 120-4275           | 1           | Deflector-Oil, Rubber   |
| 13          | 127-9255           | 1           | Crankshaft          | 34          | 133-1568           | 1           | Camshaft                |
| 13:1        | 120-4320           | 1           | Key-Woodruff        | 35          | 136-7882           | 1           | Governor ASM            |
| 14          | 127-9261           | 1           | Cover-Screen, Oil   | 36          | 127-9238           | 1           | Shaft-Governor          |
| 15          | 127-9262           | 1           | Screen-Oil          | 37          | 120-4258           | 2           | Washer-Plain            |
| 16          | 127-9263           | 1           | Retainer-Screen     | 38          | 120-4257           | 1           | Seal-Oil                |
| 17          | 120-4274           | 2           | Pin-Dowel           | 39          | 120-4256           | 1           | Pin-Hair                |
| 18          | 127-9264           | 1           | Plate-Retainer      | 40          | 120-4232           | 2           | Screw-HHF               |
| 19          | 127-9265           | 1           | Spring              |             |                    |             |                         |



 
# Governor Control Assembly

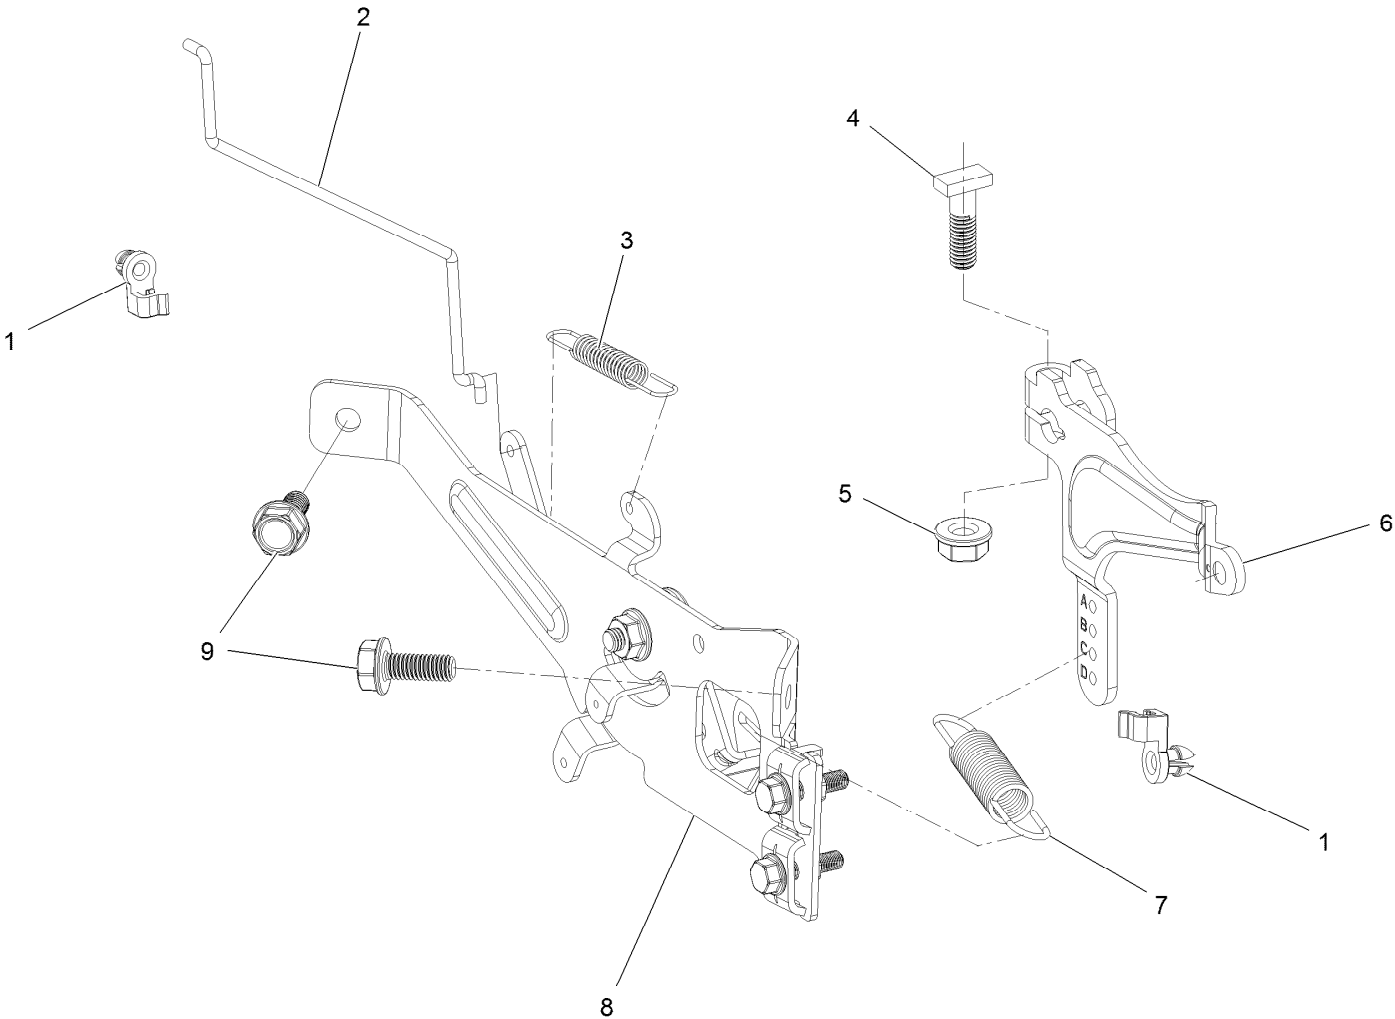

## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9250           | 2           | Clip-Linkage       | 6           | 133-9961           | 1           | Arm-Governor       |
| 2           | 127-9242           | 1           | Linkage-Choke      | 7           | 133-9962           | 1           | Spring-Governor    |
| 3           | 127-9241           | 1           | Spring-Governor    | 8           | 133-1570           | 1           | Control Plate ASM  |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor | 9           | 120-4232           | 2           | Screw-HHF          |
| 5           | 120-4236           | 1           | Nut-Flange         |             |                    |             |                    |
   
# Piston and Cylinder Head Assembly

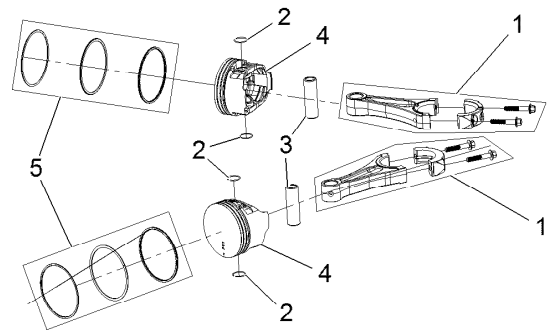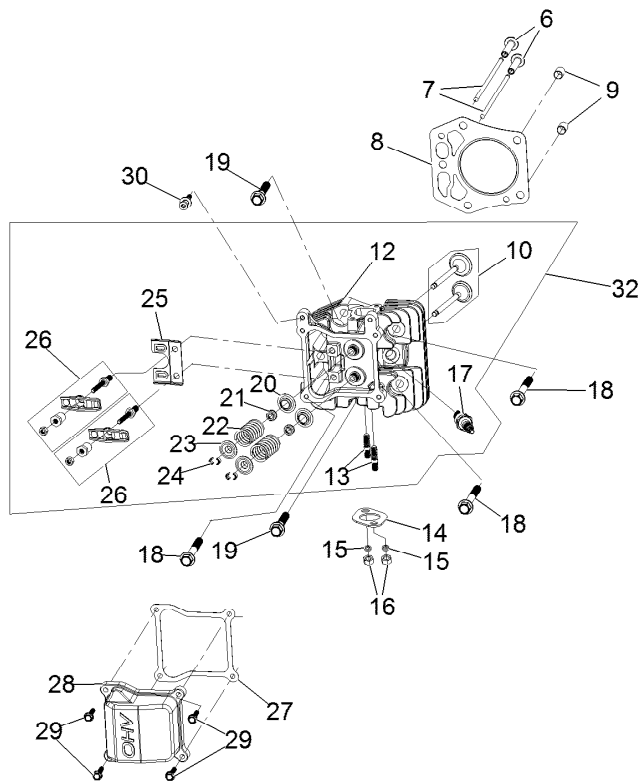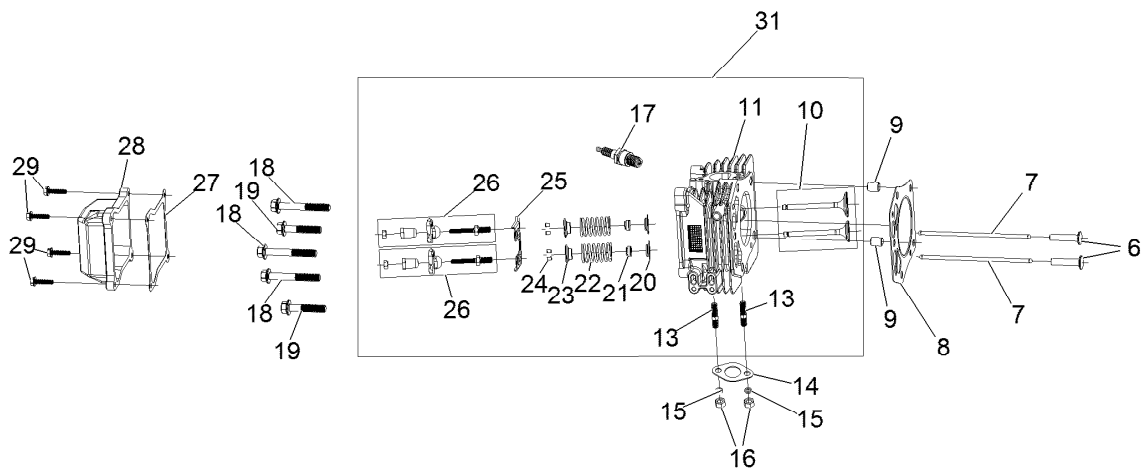

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-9256           | 2           | Connecting Rod ASM    | 17          | 81-3250            | 2           | Spark Plug              |
| 2           | 127-9258           | 4           | Clip-Pin, Piston      | 18          | 127-9231           | 6           | Screw-HWH               |
| 3           | 127-9257           | 2           | Pin-Piston            | 19          | 127-9232           | 4           | Screw-HWH               |
| 4           | 127-9259           | 2           | Piston                | 20          | 120-4303           | 4           | Seat-Spring, Valve      |
| 5           | 127-9260           | 2           | Piston Ring Set       | 21          | 120-4304           | 4           | Seal-Stem, Valve        |
| 6           | 127-9224           | 4           | Lifter-Valve          | 22          | 120-4305           | 4           | Spring-Valve            |
| 7           | 127-9225           | 4           | Rod-Push              | 23          | 120-4306           | 4           | Retainer-Spring, Valve  |
| 8           | 127-9226           | 2           | Gasket-Head, Cylinder | 24          | 120-4307           | 8           | Keeper-Valve            |
| 9           | 127-9227           | 4           | Pin-Dowel             | 25          | 127-9233           | 2           | Plate-Guide, Push Rod   |
| 10          | 127-9228           | 2           | Valve Set             | 26          | 136-7881           | 4           | Rocker Arm ASM          |
| 11          | 133-9802           | 1           | Head-Cylinder, Right  | 27          | 127-9295           | 2           | Gasket-Valve Cover      |
| 12          | 133-9804           | 1           | Head-Cylinder, Left   | 28          | 127-9050           | 2           | Cover-Valve             |
| 13          | 121-0464           | 4           | Stud-Exhaust          | 29          | 120-4225           | 8           | Screw-HHF               |
| 14          | 120-4317           | 2           | Gasket-Exhaust        | 30          | 120-4214           | 1           | Screw-Shoulder, HH      |
| 15          | 127-9279           | 4           | Washer-Lock, Split    | 31          | 136-7891           | 1           | Complete Right Head ASM |
| 16          | 121-0199           | 4           | Nut-HH                | 32          | 136-7892           | 1           | Complete Left Head ASM  |

# Blower Housing Assembly



 
## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 133-1571           | 4           | Screw-PPH, Plastic  |
| 2           | 127-9045           | 1           | Cover-Fan           |
| 3           | 127-9196           | 6           | Screw-Shoulder, HWH |
| 4           | 133-1572           | 1           | Shroud-Engine       |
| 5           | 127-9046           | 1           | Door-Filter, Air    |
| 6           | 127-9280           | 2           | Pin-Hair            |
| 7           | 127-9282           | 2           | Pin                 |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 8           | 127-9281           | 1           | Plate-Spring        |
| 9           | 136-7877           | 1           | Baffle-Air, Left    |
| 10          | 120-4210           | 2           | Screw-Shoulder, HHF |
| 11          | 136-7878           | 1           | Baffle-Air, Right   |
| 12          | 127-9287           | 1           | Cleat-Hose          |
| 13          | 120-4232           | 2           | Screw-HHF           |

# Gasket and Seal Kit

1

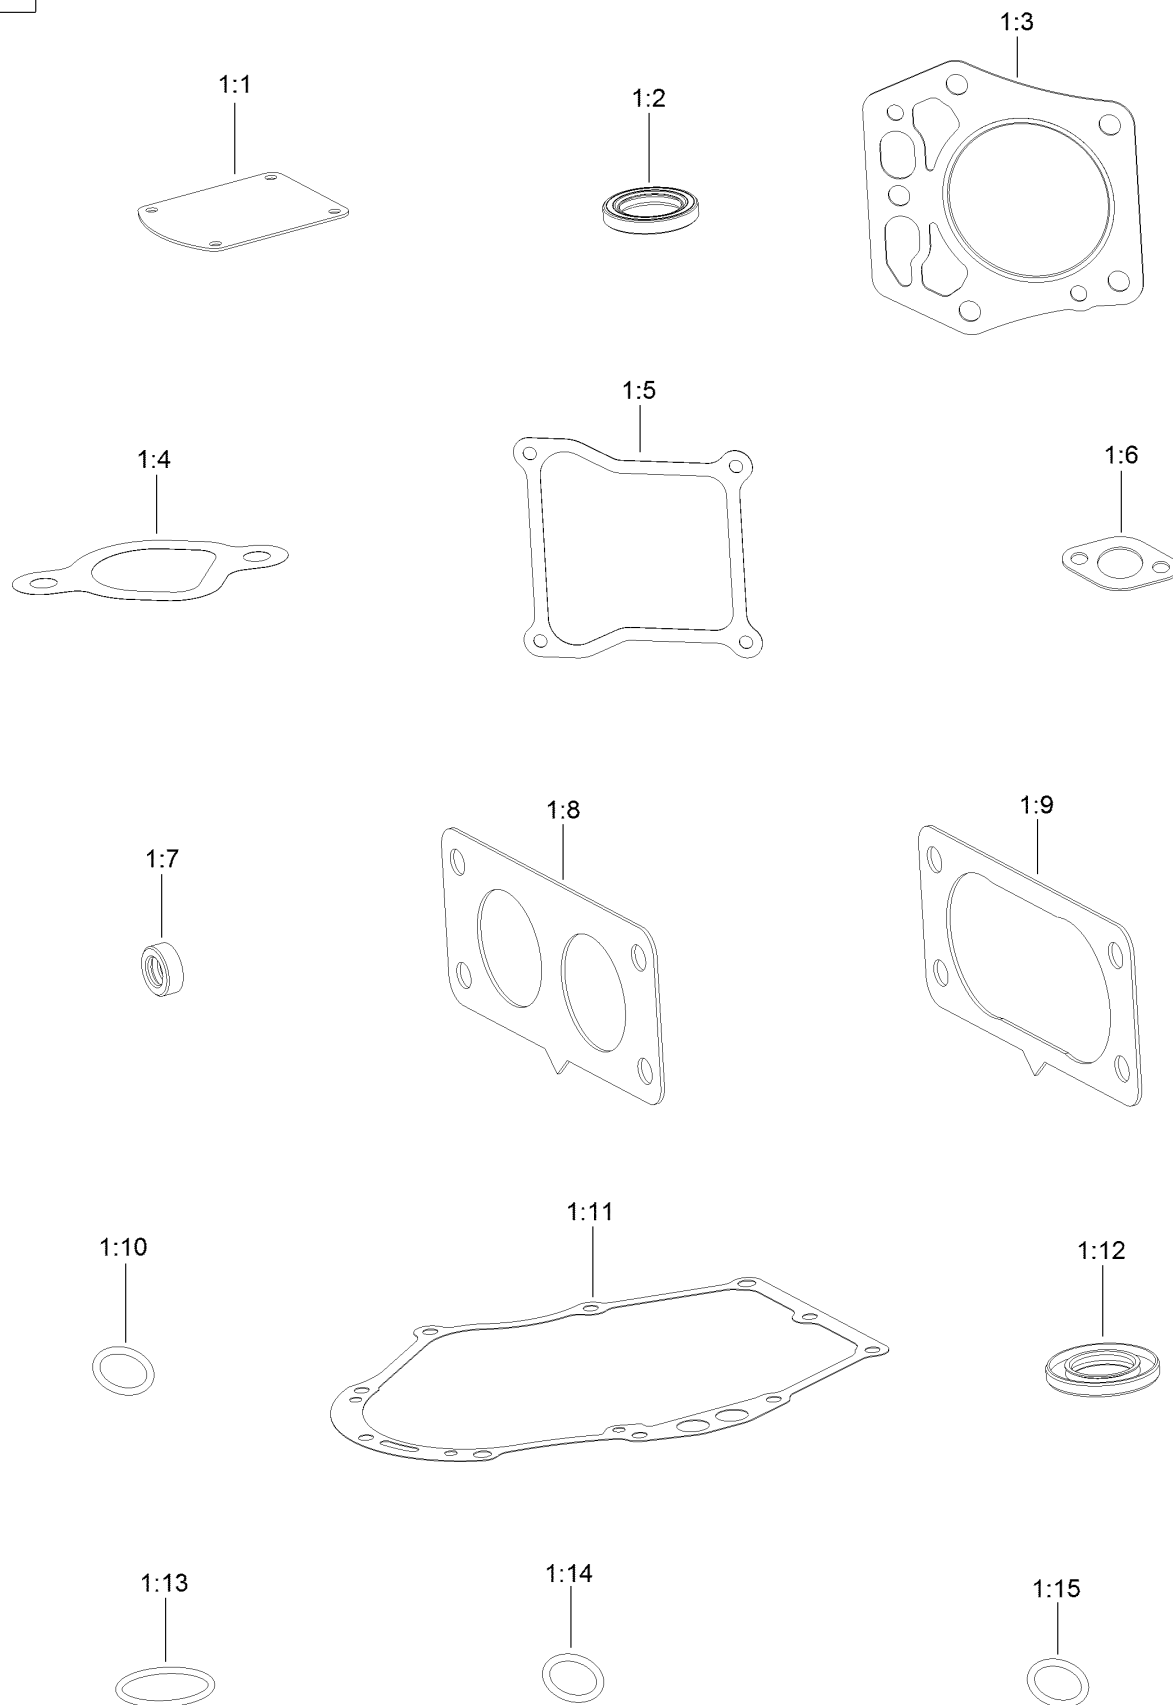


## Gasket and Seal Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 127-9296           | 1           | Gasket And Seal Kit   |
| 1:1         | 127-9214           | 1           | Gasket-Breather       |
| 1:2         | 120-4267           | 1           | Seal-Oil              |
| 1:3         | 127-9226           | 2           | Gasket-Head, Cylinder |
| 1:4         | 127-9230           | 2           | Gasket-Intake         |
| 1:5         | 127-9295           | 2           | Gasket-Valve Cover    |
| 1:6         | 120-4317           | 2           | Gasket-Exhaust        |
| 1:7         | 120-4257           | 1           | Seal-Oil              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 1:8         | 127-9246           | 2           | Gasket-Carburetor       |
| 1:9         | 127-9251           | 1           | Gasket-Carburetor       |
| 1:10        | 120-4262           | 2           | O-Ring                  |
| 1:11        | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 1:12        | 127-9271           | 1           | Seal                    |
| 1:13        | 127-9273           | 1           | O-Ring                  |
| 1:14        | 127-9284           | 1           | O-Ring                  |
| 1:15        | 127-9286           | 1           | O-Ring                  |
 
# Body Styling and Fuel Tank Assembly

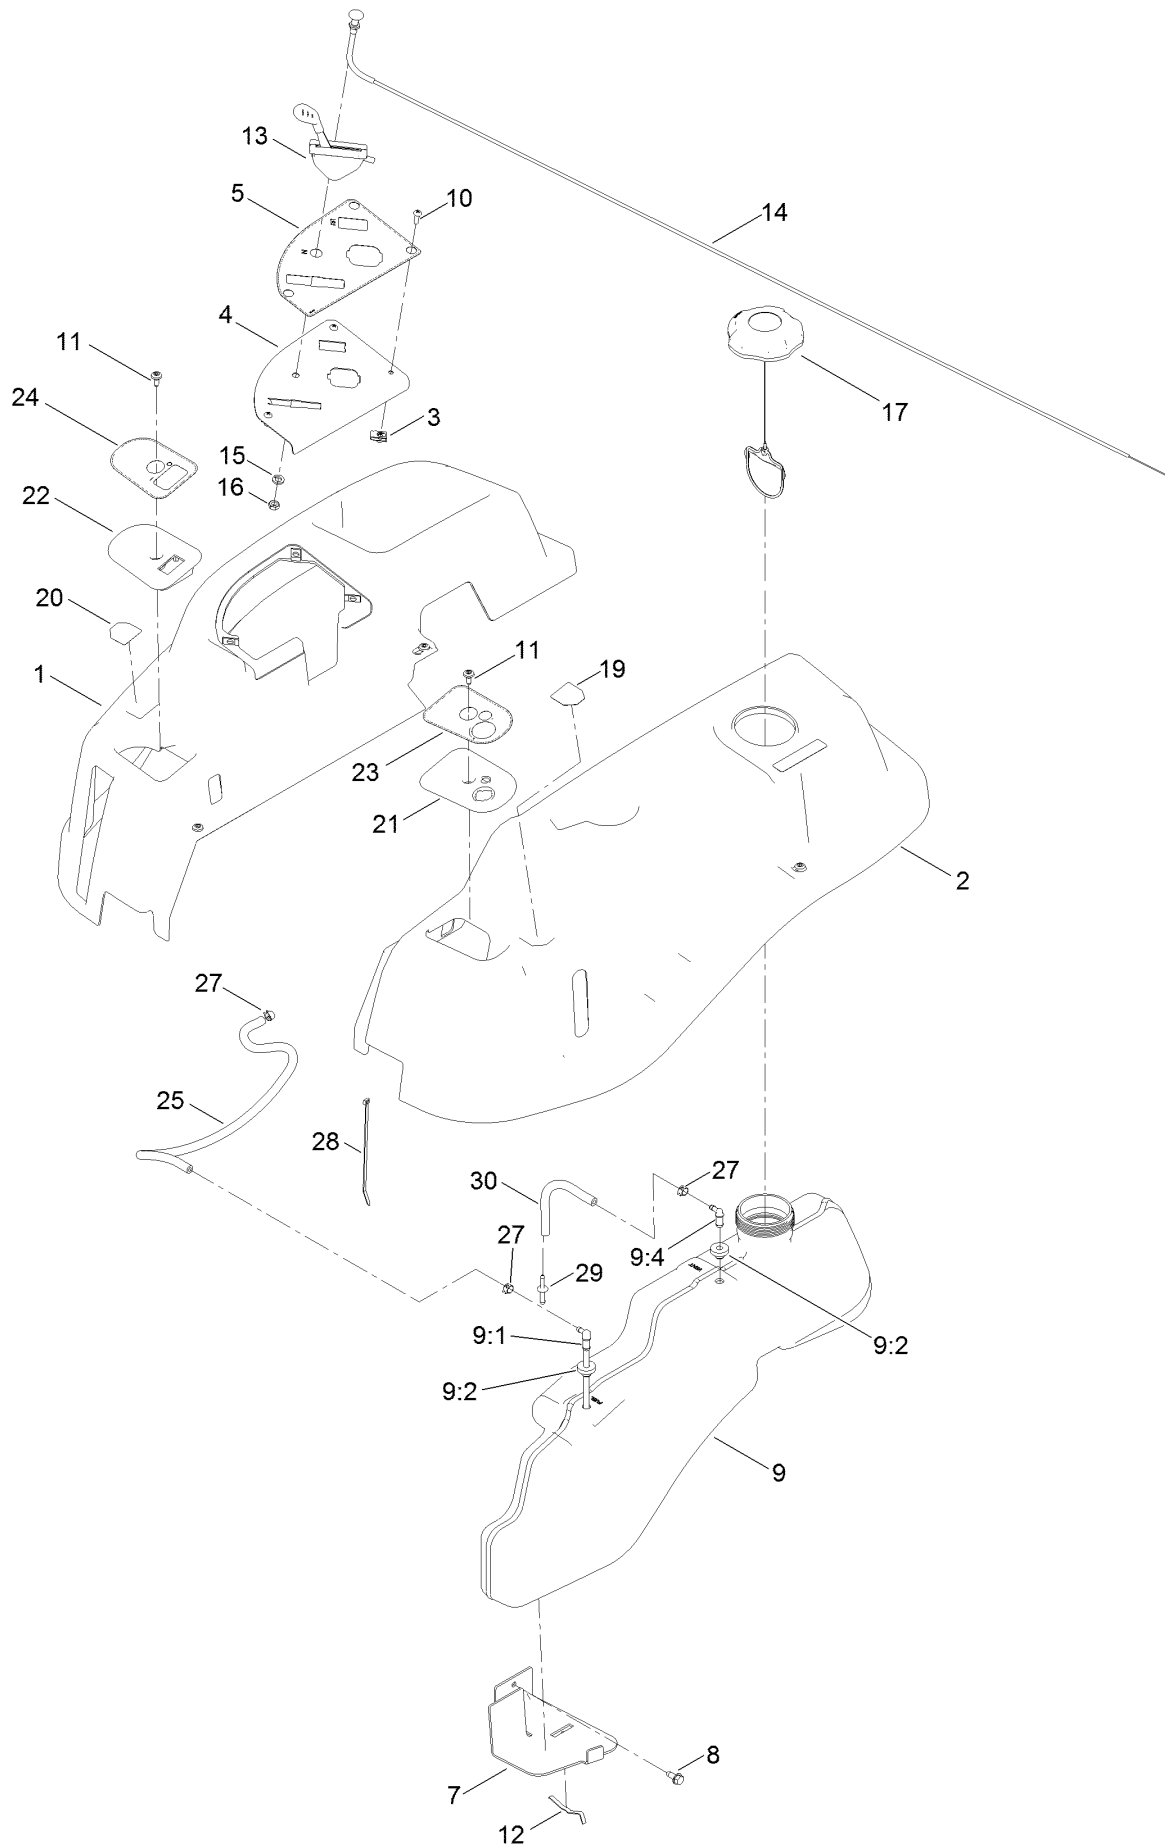


## Body Styling and Fuel Tank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 119-3338           | 1           | Pod-RH                  | 14          | 112-9753           | 1           | Cable-Choke          |
| 2           | 119-3337           | 1           | Pod-LH                  | 15          | 3253-21            | 1           | Washer-Lock          |
| 3           | 107069             | 3           | Clip                    | 16          | 3220-3             | 1           | Nut-HJ               |
| 4           | 119-3377-03        | 1           | Plate-Control           | 17          | 137-4119           | 1           | Cap-Fuel, Ratcheting |
| 5           | 121-0773           | 1           | Decal-Panel, Control    | 19          | 131-3621           | 1           | Decal-Nmir           |
| 7           | 119-3395-03        | 1           | Support-Tank, Front     | 20          | 131-3620           | 1           | Decal-Control, Pedal |
| 8           | 32144-70           | 2           | Screw-HWHTF             | 21          | 130-7040           | 1           | Cover-LH             |
| 9           | 119-3324           | 1           | Fuel Tank ASM           | 22          | 130-7039           | 1           | Cover-RH             |
| 9:1         | 121-0793           | 1           | Connector-Elbow, 90 DEG | 23          | 131-3664           | 1           | Decal-Keychoice      |
| 9:2         | 46-6560            | 2           | Bushing                 | 24          | 131-3954           | 1           | Decal-Brake, Parking |
| 9:4         | 117-7400           | 1           | Fitting-Plastic         | 25          | 109-0281           | 1           | Hose-Fuel            |
| 10          | 3258-166           | 3           | Screw-PRH               | 27          | 2412-98            | 3           | Clamp-Hose           |
| 11          | 120-7950           | 8           | Screw-Shoulder          | 28          | 614249             | 1           | Tie-Cable ●          |
| 12          | 609830             | 2           | Spring                  | 29          | 117-5399           | 1           | Adaptor-Orifice      |
| 13          | 121-0769           | 1           | Cable-Throttle          | 30          | 110-1876           | 1           | Hose-Fuel            |

● Not illustrated
 
# Battery and Electrical Assembly

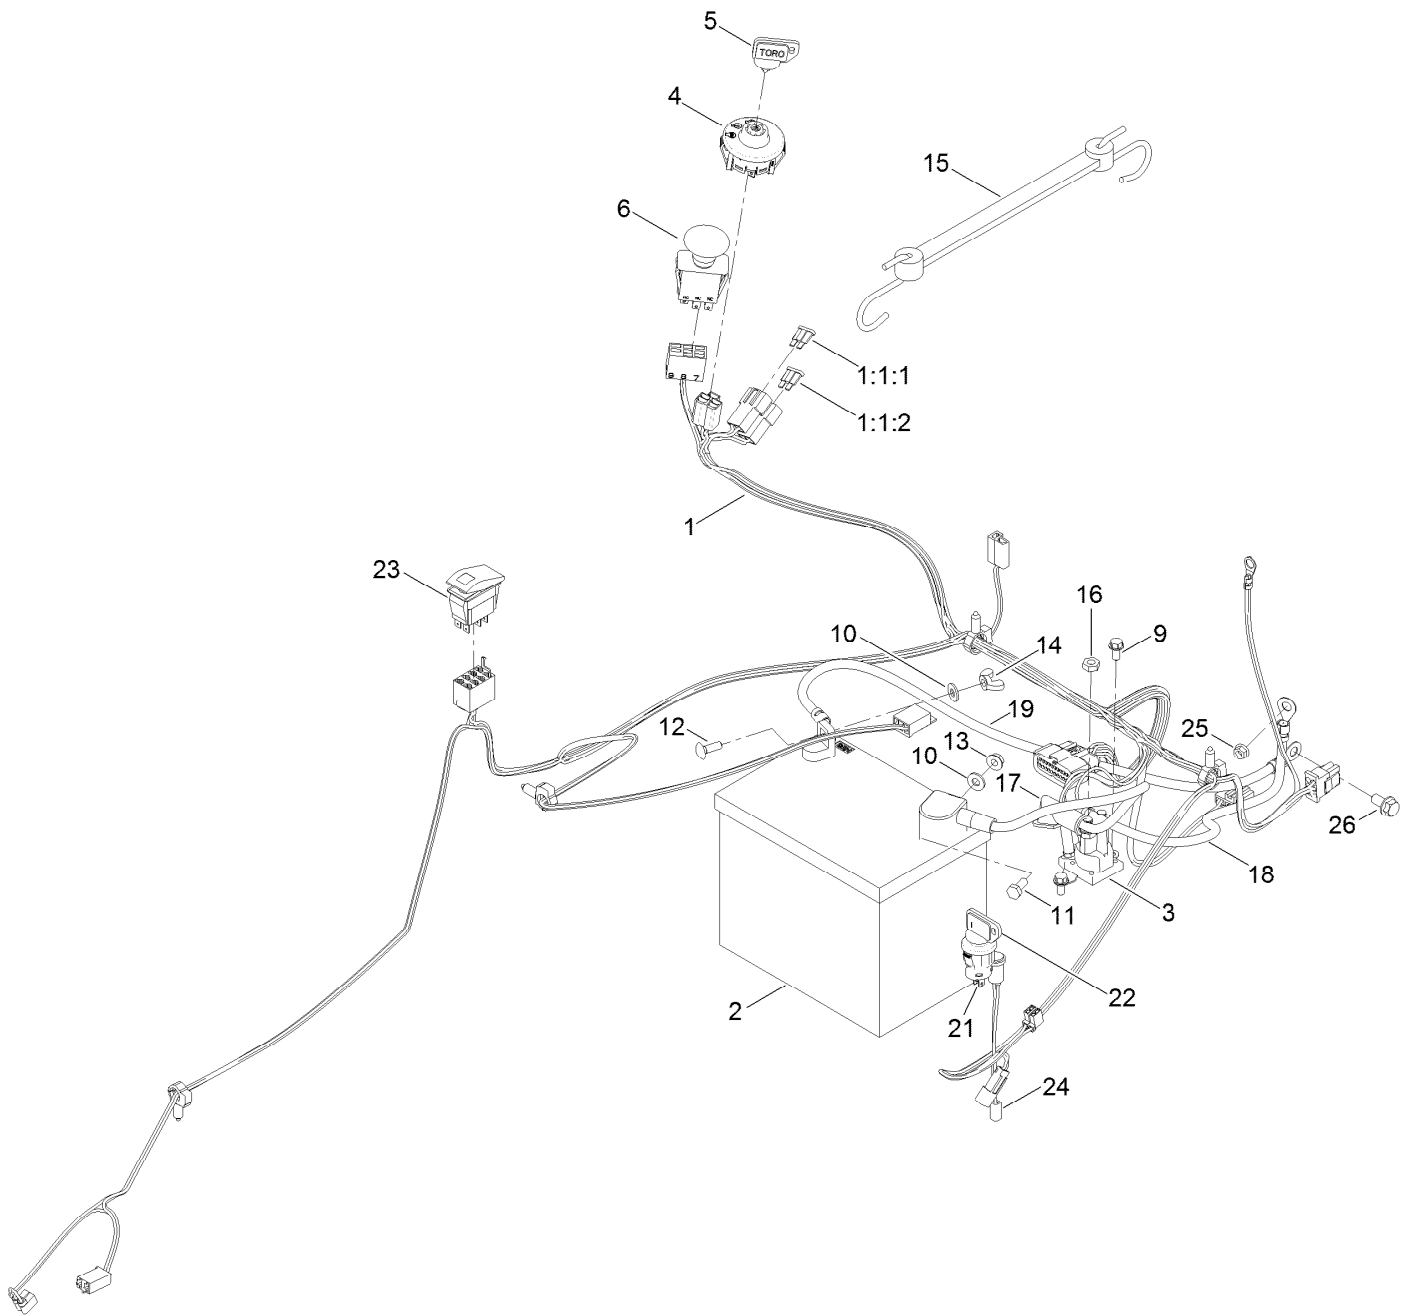

## Battery and Electrical Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 136-7483           | 1           | Harness-Wire       |
| 1:1         |                    | 1           | Harness-Wire ●■    |
| 1:1:1       | 109103             | 1           | Fuse-Blade, 30 Amp |
| 1:1:2       | 109102             | 1           | Fuse-Blade, 25 Amp |
| 2           | 105-1692           | 1           | Battery            |
| 3           | 117-1197           | 1           | Solenoid           |
| 4           | 137-4100           | 1           | Switch-Ignition    |
| 5           | 63-8360            | 1           | Key-Ignition       |
| 6           | 114-0279           | 1           | Switch-PTO, On-On  |
| 9           | 32144-4            | 2           | Screw-HWH          |
| 10          | 3256-22            | 2           | Washer-Flat        |
| 11          | 321-3              | 1           | Screw-HH           |
| 12          | 3229-1             | 1           | Bolt-CARR          |
| 13          | 32128-33           | 1           | Nut-HF             |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|---------------------------------|
| 14          | 32103-22           | 1           | Nut-Wing                        |
| 15          | 104-2466           | 1           | Holddown-Battery                |
| 16          | 3220-2             | 2           | Nut-Jam                         |
| 17          | 119-8897           | 1           | Cable-Battery, Red              |
| 18          | 121-0711           | 1           | Cable-Battery, Positive         |
| 19          | 119-8899           | 1           | Cable-Battery, Black            |
| 21          | 119-3068           | 1           | Switch-Momentary, N.O.          |
| 22          | 131-3639           | 1           | Key-Toro                        |
| 23          | 132-9302           | 1           | Switch-Rocker,<br>(On)-Off-(On) |
| 24          | 131-4136           | 1           | Light-Indicator                 |
| 25          | 33003-00           | 1           | Nut-HF                          |
| 26          | 3234-14            | 1           | Screw-HHF                       |

● Not illustrated

■ Not serviced separately


# 50 Inch Deck Assembly

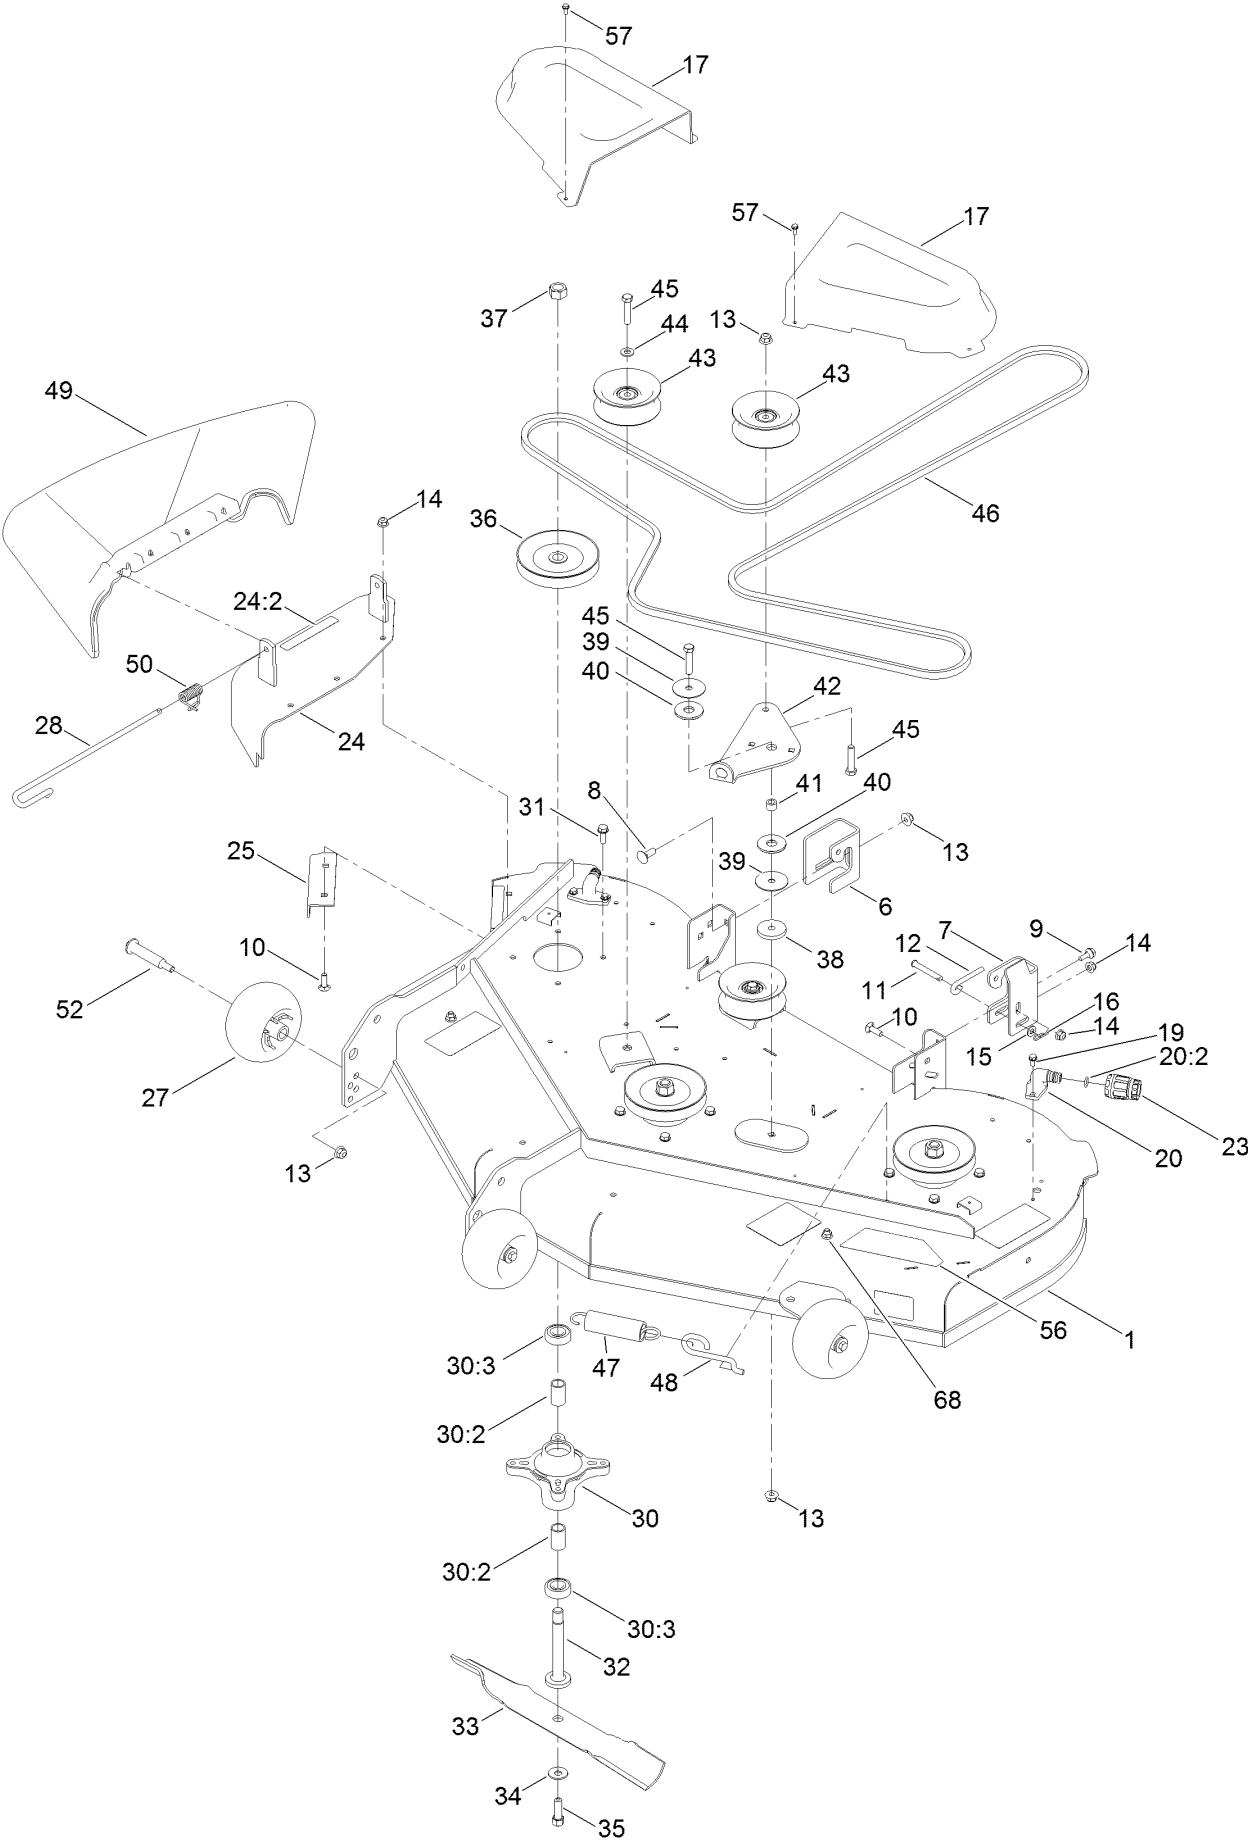

## 50 Inch Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 131-3614           | 1           | Deck And Decal ASM  | 31          | 32144-41           | 12          | Screw-Taptite              |
| 6           | 131-4138           | 1           | Bracket-Hanger, RH  | 32          | 117-7268           | 3           | Shaft-Spindle              |
| 7           | 131-1091           | 1           | Bracket-Hanger, LH  | 33          | 115-5059-03        | 3           | Blade-Hi Lift              |
| 8           | 3231-2             | 2           | Bolt-CARR           | 34          | 3290-465           | 3           | Washer-Belleville          |
| 9           | 120-7024           | 1           | Screw-Shoulder, HWH | 35          | 26-0671            | 3           | Screw-HH                   |
| 10          | 3230-22            | 5           | Screw-CARR          | 36          | 125-5575           | 3           | Pulley                     |
| 11          | 110-0618           | 1           | Pin-Clevis          | 37          | 3219-6             | 3           | Nut-Hex                    |
| 12          | 131-0955           | 1           | Rod-Level, Deck     | 38          | 110-9981           | 1           | Washer-Plain               |
| 13          | 104-8301           | 7           | Nut-HF, NI          | 39          | 120-2229           | 2           | Washer                     |
| 14          | 104-8300           | 8           | Nut-HF, NI          | 40          | 114-0463           | 2           | Washer-Friction, Composite |
| 15          | 3256-23            | 1           | Washer-Plain        | 41          | 115-4986           | 1           | Spacer                     |
| 16          | 1-806003           | 1           | Pin-Cotter          | 42          | 114-8540           | 1           | Arm-Idler                  |
| 17          | 108-7890           | 2           | Cover-Belt          | 43          | 132-9420           | 3           | Pulley-Idler, Flat         |
| 19          | 32144-4            | 4           | Screw-HWH           | 44          | 3256-24            | 2           | Washer-Flat                |
| 20          | 133-9289           | 2           | Fitting-Washout     | 45          | 323-9              | 4           | Screw-HH                   |
| 20:2        | 133-9290           | 1           | O-Ring              | 46          | 119-8820           | 1           | V-Belt                     |
| 23          | 95-3270            | 1           | Connector-Hose      | 47          | 1-603414           | 1           | Spring-Extension           |
| 24          | 131-3962           | 1           | Cover ASM W/Decal   | 48          | 112-3973           | 1           | Hook-Return, Spring        |
| 24:2        | 93-7009            | 1           | Decal-Danger        | 49          | 121-0739           | 1           | Deflector-Discharge        |
| 25          | 120-7951-03        | 1           | Baffle-Cutoff       | 50          | 121-2983           | 1           | Spring-Torsion             |
| 27          | 1-603299           | 3           | Roller-Scalp, Anti  | 52          | 112-3977           | 3           | Bolt-Shoulder              |
| 28          | 109-8854           | 1           | Pin-Chute           | 56          | 121-0792           | 1           | Decal-Deck                 |
| 30          | 121-0751           | 3           | Spindle ASM         | 57          | 32144-1            | 6           | Screw-Taptite              |
| 30:2        | 120-7935           | 2           | Spacer              | 68          | 322-2              | 2           | Screw-HH                   |
| 30:3        | 136-5441           | 2           | Bearing-Ball        |             |                    |             |                            |
 
# 50 Inch Deck and Decal Assembly No. 131-3614

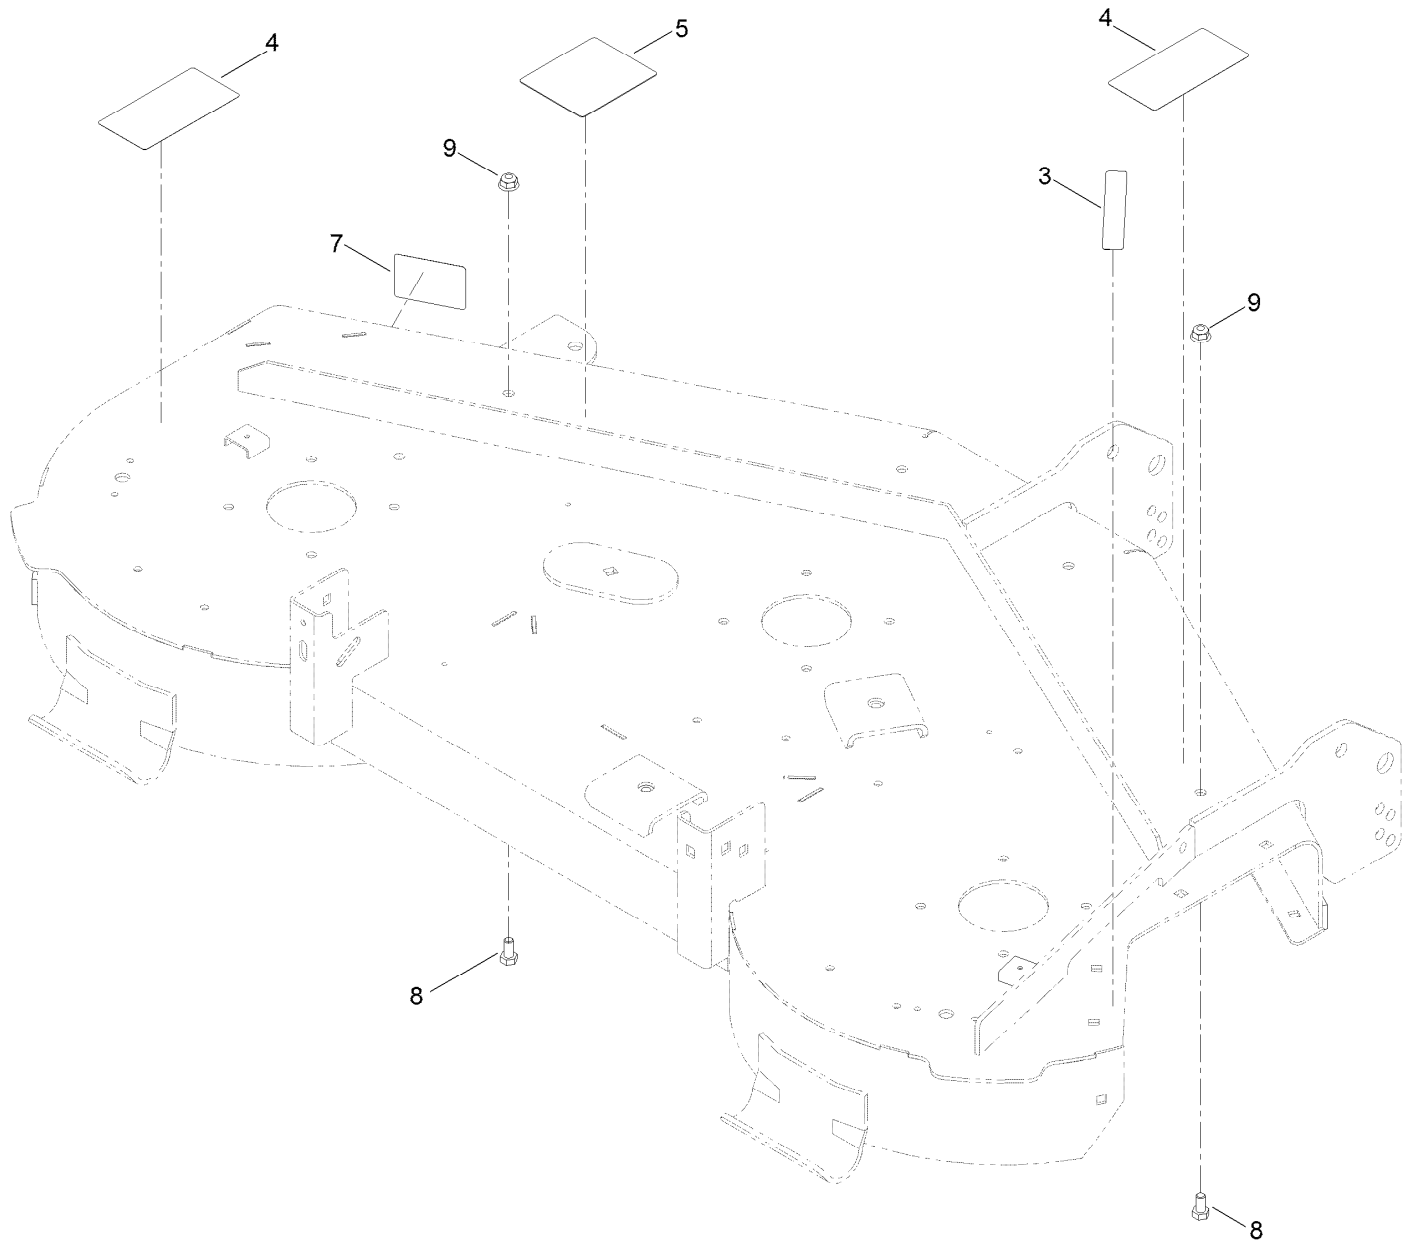


## 50 Inch Deck and Decal Assembly No. 131-3614 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 3           | 93-7009            | 1           | Decal-Danger        |
| 4           | 132-0872           | 2           | Decal-Danger, Deck  |
| 5           | 99-3943            | 1           | Decal-Routing, Belt |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 7           | 112-9840           | 1           | Decal-Scalp, Anti  |
| 8           | 322-2              | 2           | Screw-HH           |
| 9           | 104-8300           | 2           | Nut-HF, NI         |

 
# Model Specific Decal Assembly

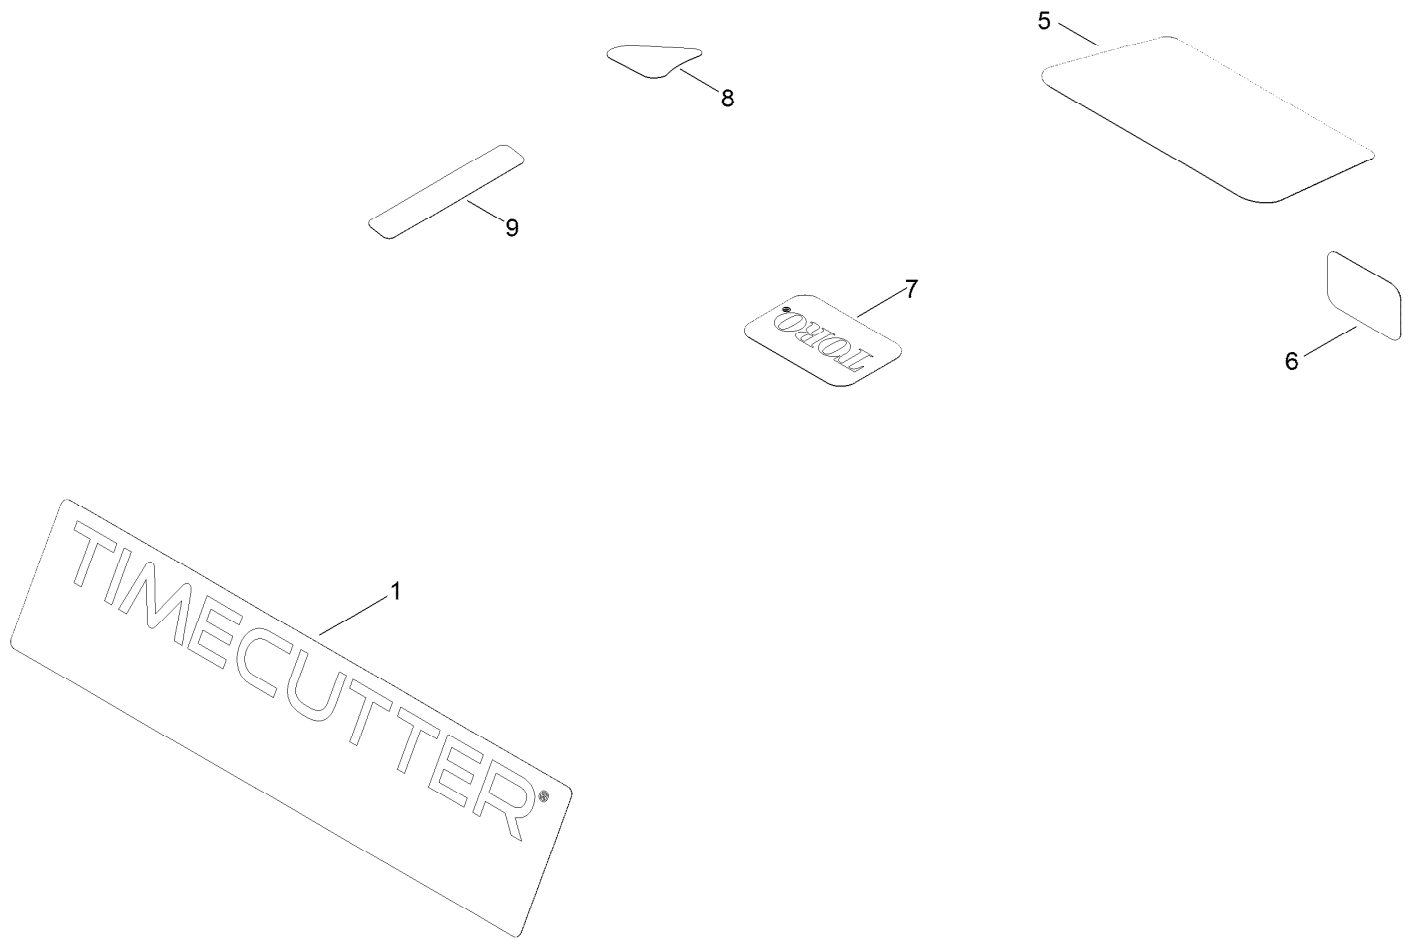

## Model Specific Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-2008           | 1           | Decal-Timecutter   | 7           | 131-4157           | 1           | Decal              |
| 5           | 136-5597           | 1           | Decal-Engine       | 8           | 131-1097           | 1           | Decal-Drain, Oil   |
| 6           | 127-9076           | 1           | Placard-Intake     | 9           | 132-0904           | 1           | Decal-Shutdown     |

 
# Steering Assembly

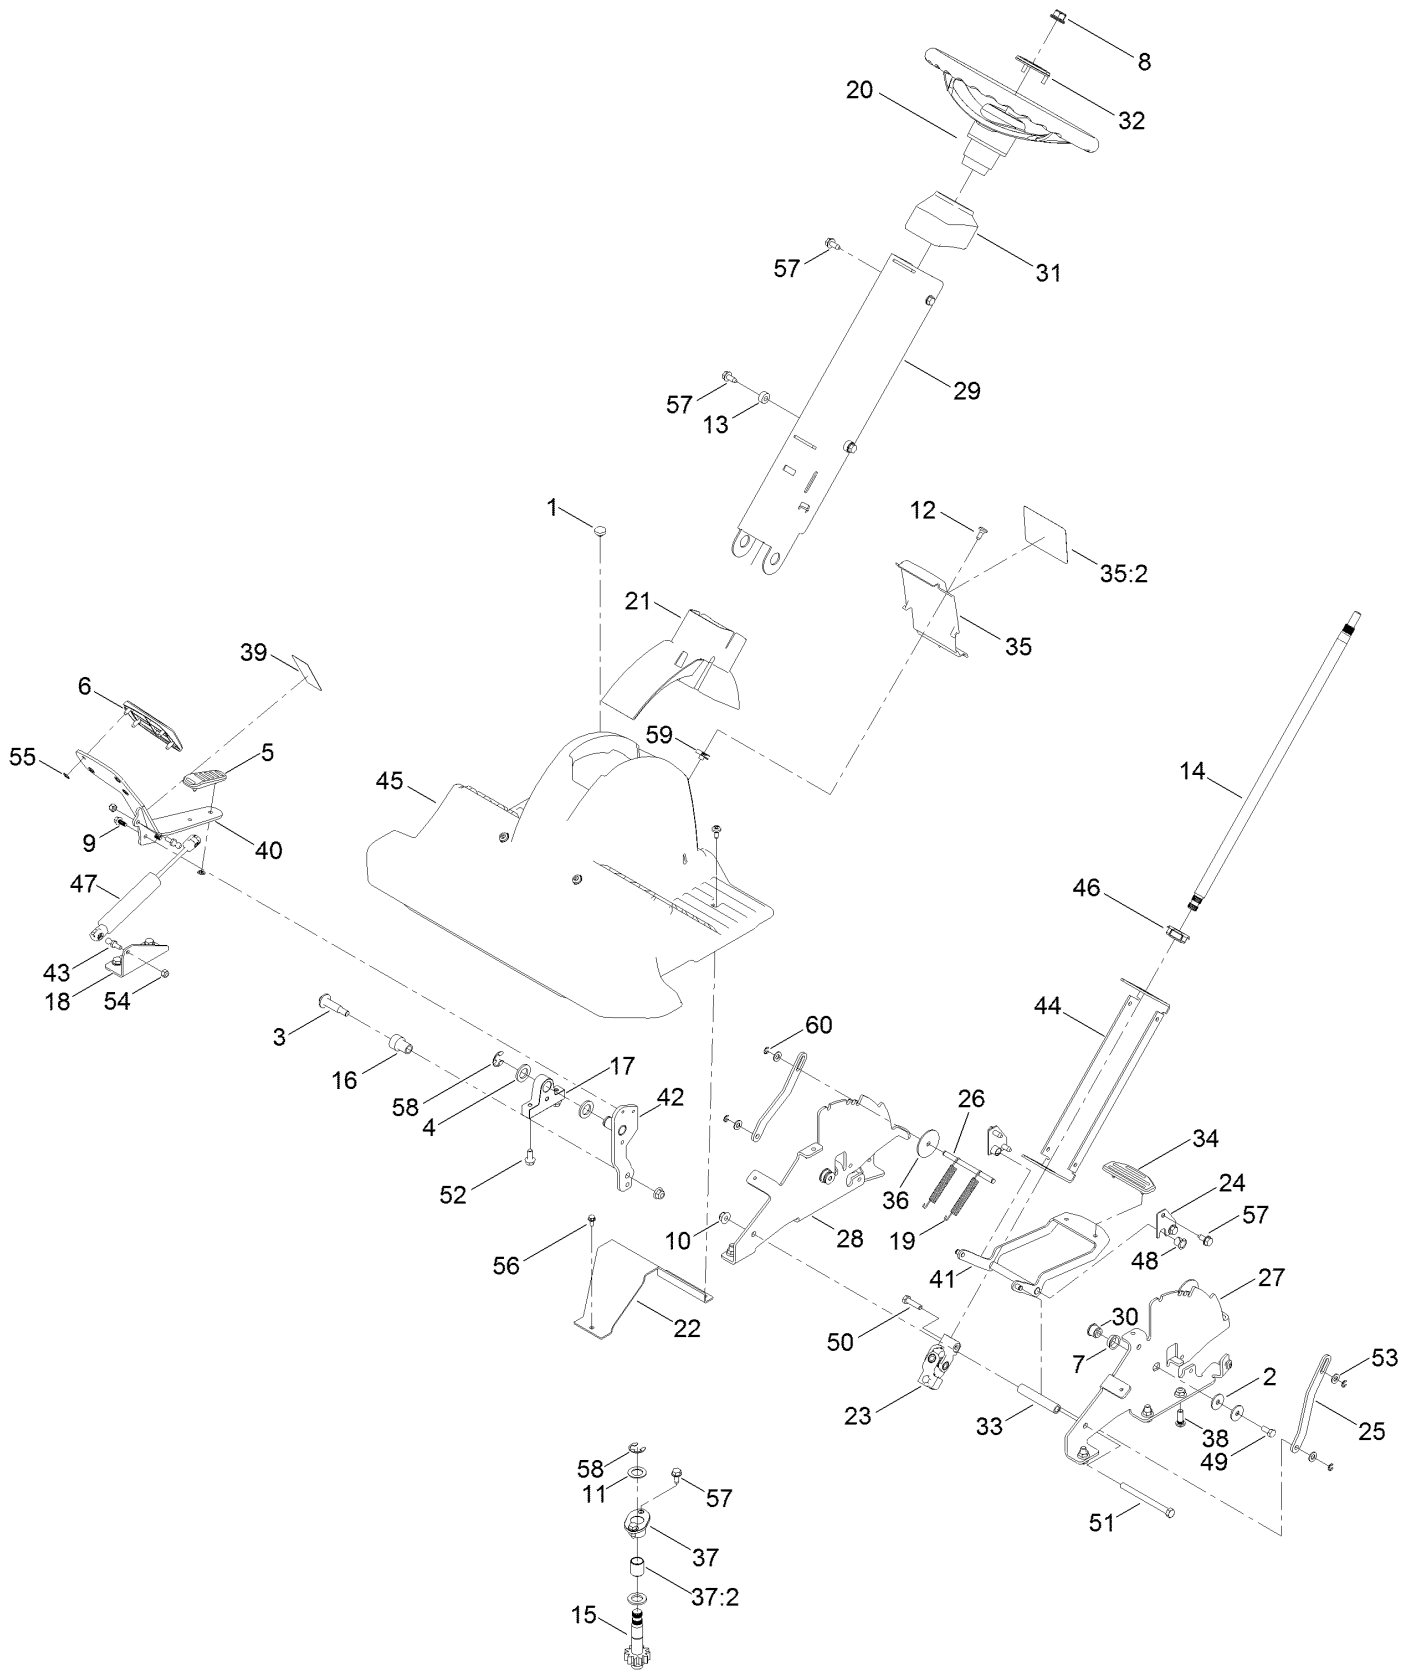

## Steering Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 1-513658           | 1           | Bumper                     | 32          | 131-3630           | 1           | Cap-Wheel, Steering      |
| 2           | 5-4460             | 5           | Washer-Pivot               | 33          | 131-3697           | 1           | Spacer                   |
| 3           | 136-7198           | 1           | Bolt-Shoulder              | 34          | 131-4096           | 1           | Pad-Tilt Pedal           |
| 4           | 70-1160            | 3           | Washer                     | 35          | 131-4099           | 1           | Rear Cover And Decal ASM |
| 5           | 98-9039            | 1           | Pad-Heel, Hydro Pedal      | 35:2        | 132-0870           | 1           | Decal-Danger             |
| 6           | 98-9040            | 1           | Pad-Toe, Hydro Pedal       | 36          | 131-8729           | 2           | Washer-Shaft, Tilt       |
| 7           | 99-4243            | 2           | Bushing-Flange             | 37          | 131-8733           | 1           | Flange Bearing ASM       |
| 8           | 99-5107            | 2           | Nut-Lock                   | 37:2        | 115-7019           | 1           | Bushing-Straight         |
| 9           | 99-6810            | 2           | Screw-HHF                  | 38          | 132-0921           | 6           | Stud-Push-In             |
| 10          | 104-8301           | 8           | Nut-HF, NI                 | 39          | 132-6863           | 1           | Decal-Release, Break     |
| 11          | 119-7640           | 1           | Washer-Thrust              | 40          | 132-6865-01        | 1           | Pedal-Traction           |
| 12          | 120-7950           | 9           | Screw-Shoulder             | 41          | 132-6868           | 1           | Release Pedal ASM        |
| 13          | 121-1759           | 2           | Spacer                     | 42          | 132-6907           | 1           | Pivot Lever ASM          |
| 14          | 125-5507           | 1           | Shaft-Steering, Upper      | 43          | 132-6917           | 2           | Ball Stud                |
| 15          | 125-5508           | 1           | Lower Steering Shaft ASM   | 44          | 132-9315-01        | 1           | Column-Back              |
| 16          | 127-3397           | 1           | Roller                     | 45          | 133-1152           | 1           | Shroud-Styling, Front    |
| 17          | 130-6887           | 1           | Mount-Pedal Pivot          | 46          | 133-1160           | 1           | Bearing-Spherical        |
| 18          | 130-6910-03        | 1           | Bracket-Damper             | 47          | 133-1171           | 1           | Damper-Non Cavitating    |
| 19          | 130-6998           | 2           | Spring-Extension           | 48          | 256-257            | 2           | Bushing-Nyliner          |
| 20          | 131-0957           | 1           | Wheel-Steering             | 49          | 322-3              | 2           | Screw-HH                 |
| 21          | 131-1028           | 1           | Cover-Pivot, Column        | 50          | 322-6              | 2           | Screw-HH                 |
| 22          | 131-1029-03        | 1           | Support-Footrest           | 51          | 323-23             | 1           | Screw-HH                 |
| 23          | 131-1030           | 1           | U-Joint ASM                | 52          | 3234-47            | 2           | Screw-HHF                |
| 24          | 131-1043           | 2           | Plate-Retainer             | 53          | 3256-23            | 4           | Washer-Plain             |
| 25          | 131-1049           | 2           | Plate-Plunger              | 54          | 3296-42            | 2           | Nut-Lock, NI             |
| 26          | 131-1050           | 1           | Rod-Plunger                | 55          | 32112-6            | 8           | Nut-Push                 |
| 27          | 131-1052-03        | 1           | Bracket-Pivot, Column (LH) | 56          | 32144-4            | 3           | Screw-HWH                |
| 28          | 131-1053-03        | 1           | Bracket-Pivot, Column (RH) | 57          | 32144-70           | 12          | Screw-HWHTF              |
| 29          | 131-1054-01        | 1           | Column-Front               | 58          | 32151-48           | 2           | E-Ring                   |
| 30          | 131-1056           | 2           | Spacer-Pivot, Column       | 59          | 107069             | 2           | Clip                     |
| 31          | 131-1066           | 1           | Cap-Column                 | 60          | 701197             | 4           | E-Ring                   |

 
# Decal Assembly

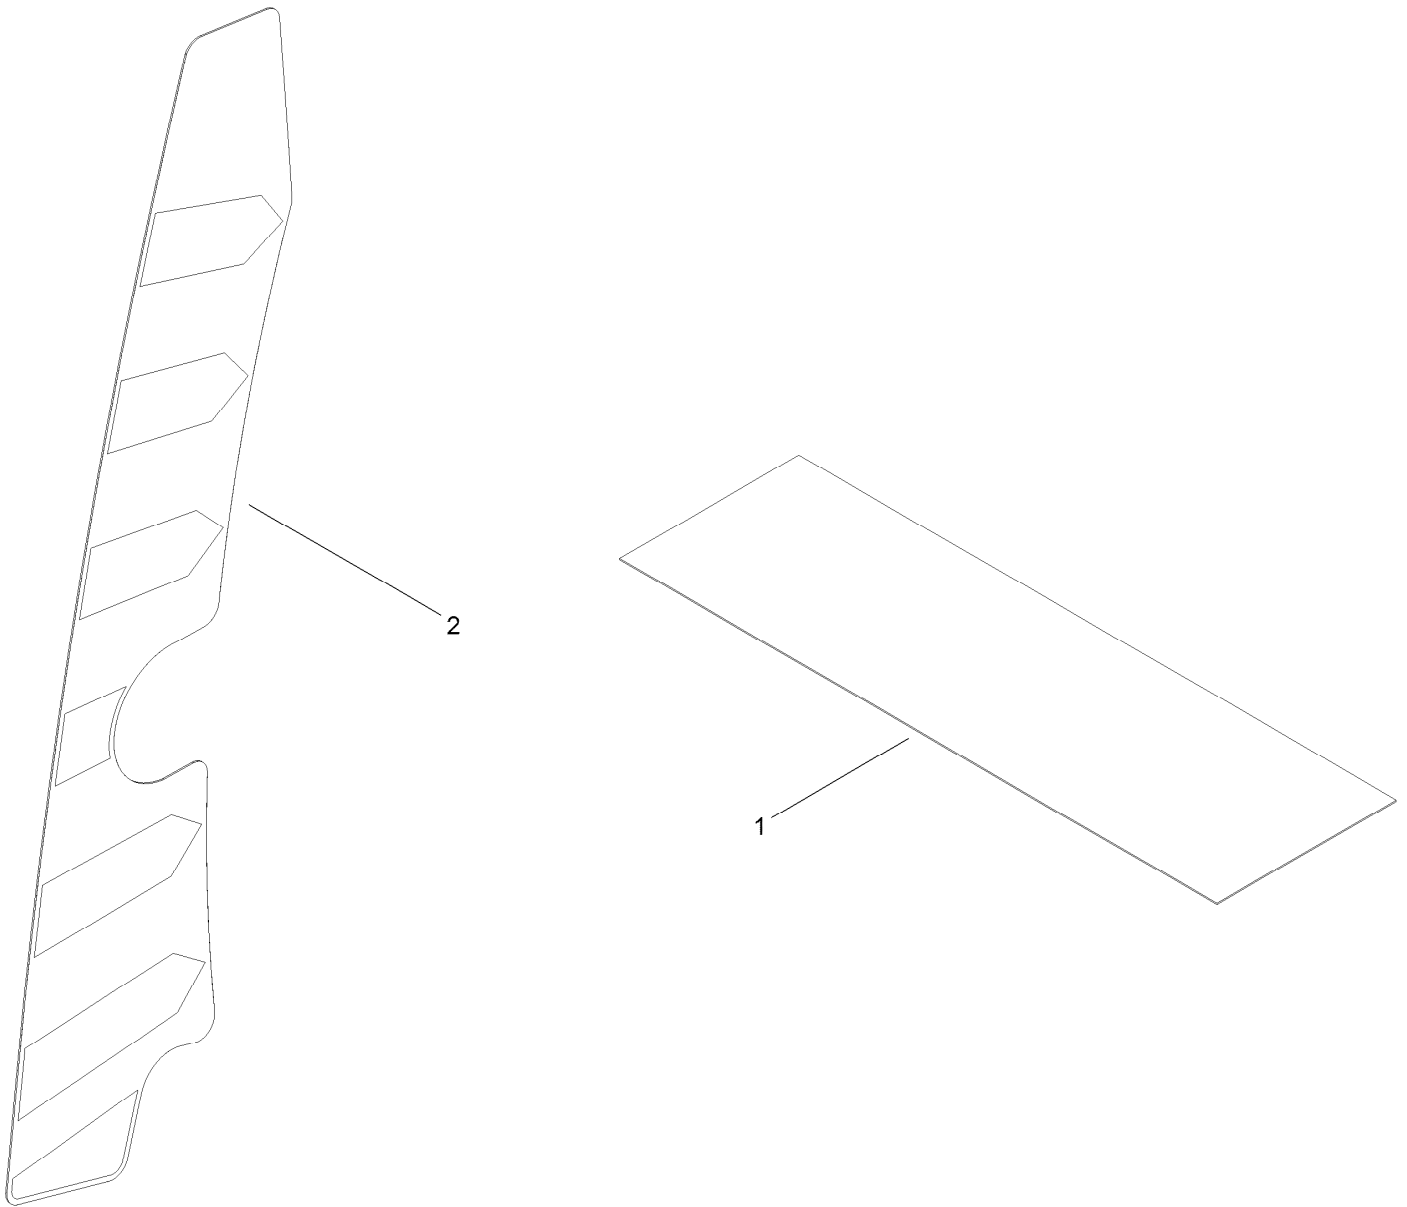

## Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 106-8717           | 1           | Decal-Service, CE  |
| 2           | 119-8870           | 1           | Decal-HOC          |

 
# Clutch Assembly

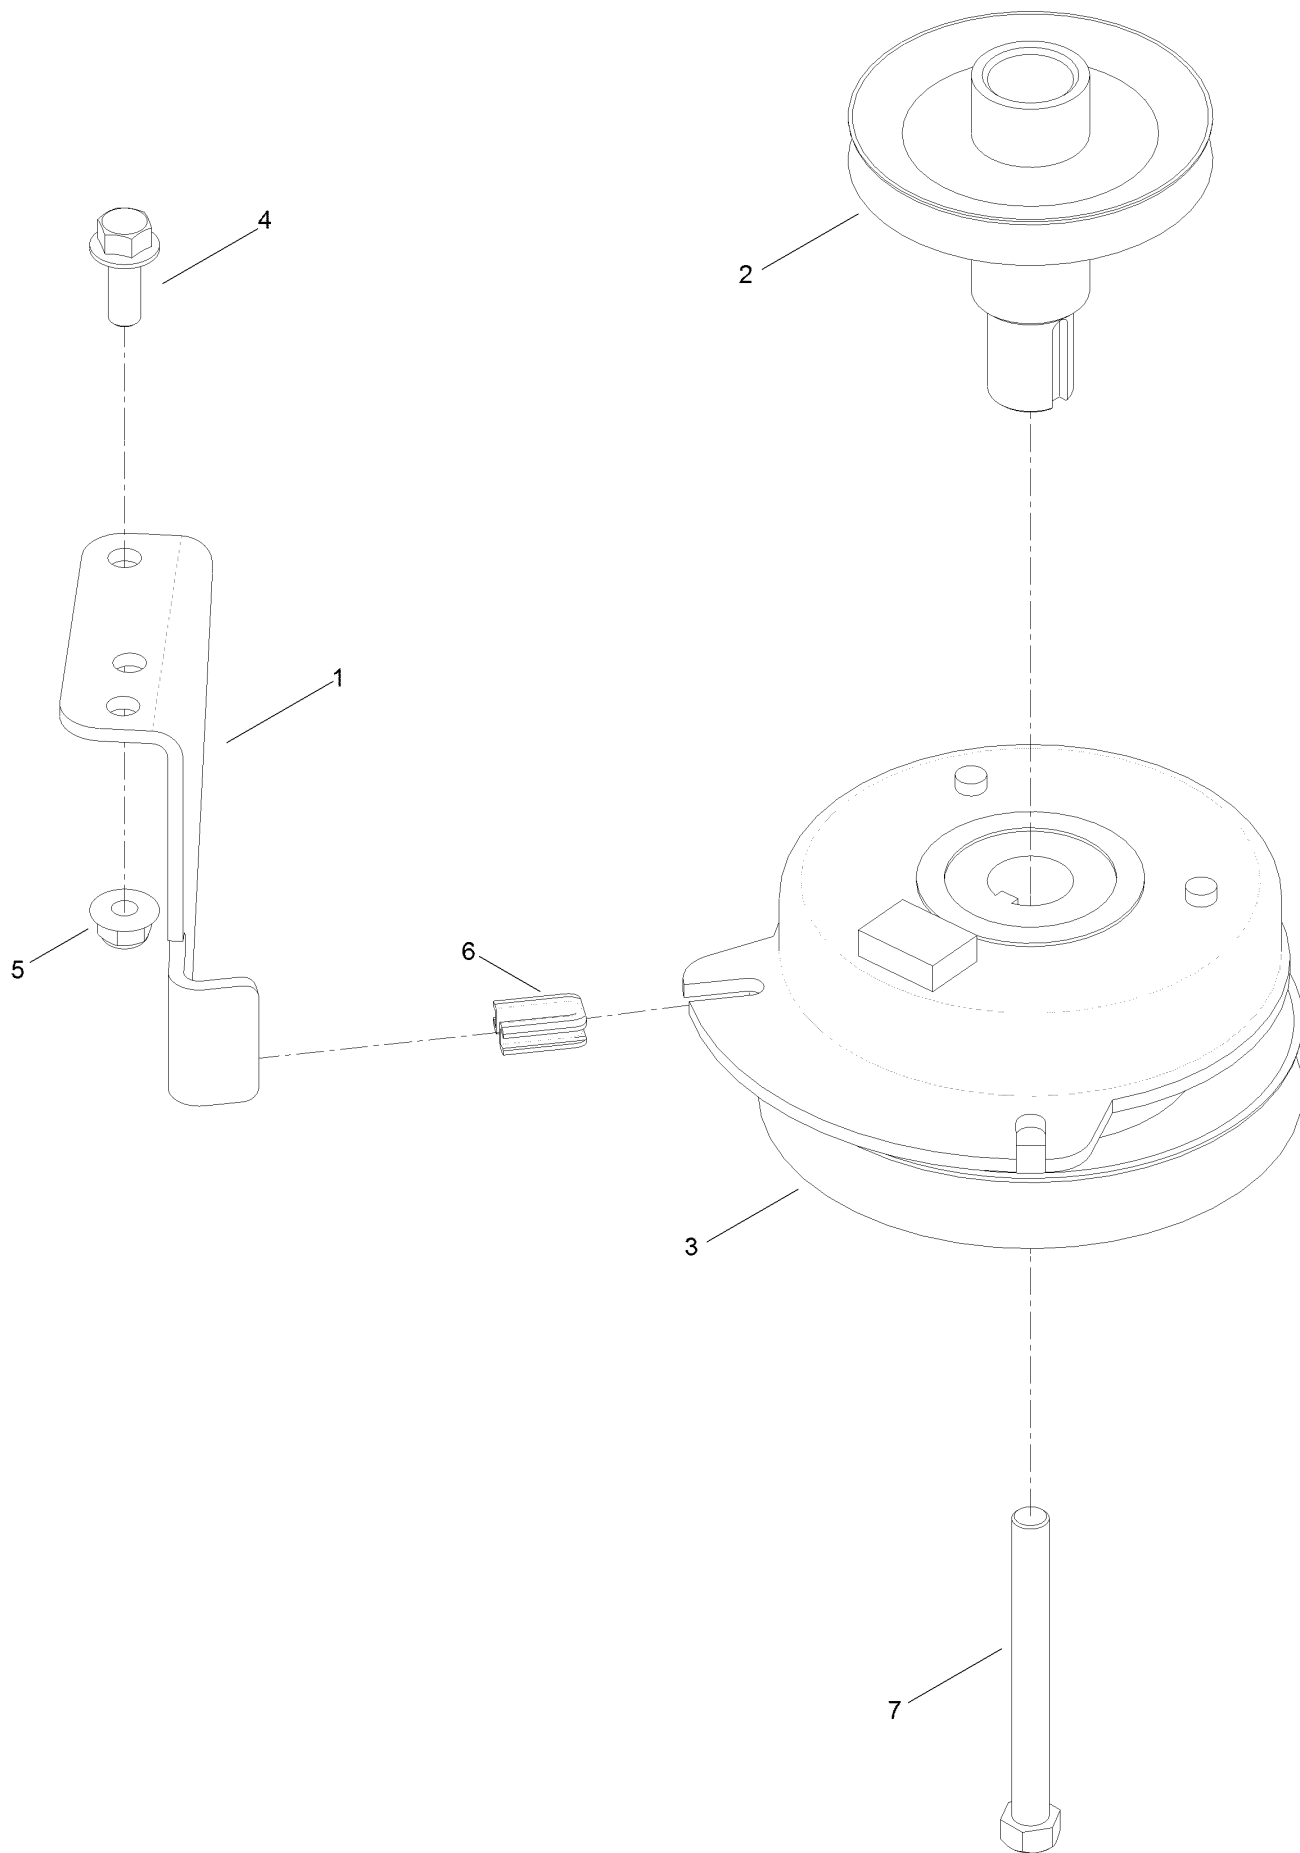

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-7000           | 1           | Stop-Clutch (Wide) | 5           | 104-8301           | 1           | Nut-HF, NI         |
| 2           | 130-6854           | 1           | Pulley-Engine      | 6           | 120-2217           | 1           | Isolator-Clutch    |
| 3           | 127-3408           | 1           | Clutch-PTO         | 7           | 3212-17            | 1           | Screw-HH           |
| 4           | 3234-42            | 1           | Screw-HHF          |             |                    |             |                    |
 
# Steering Gear and Cable Assembly

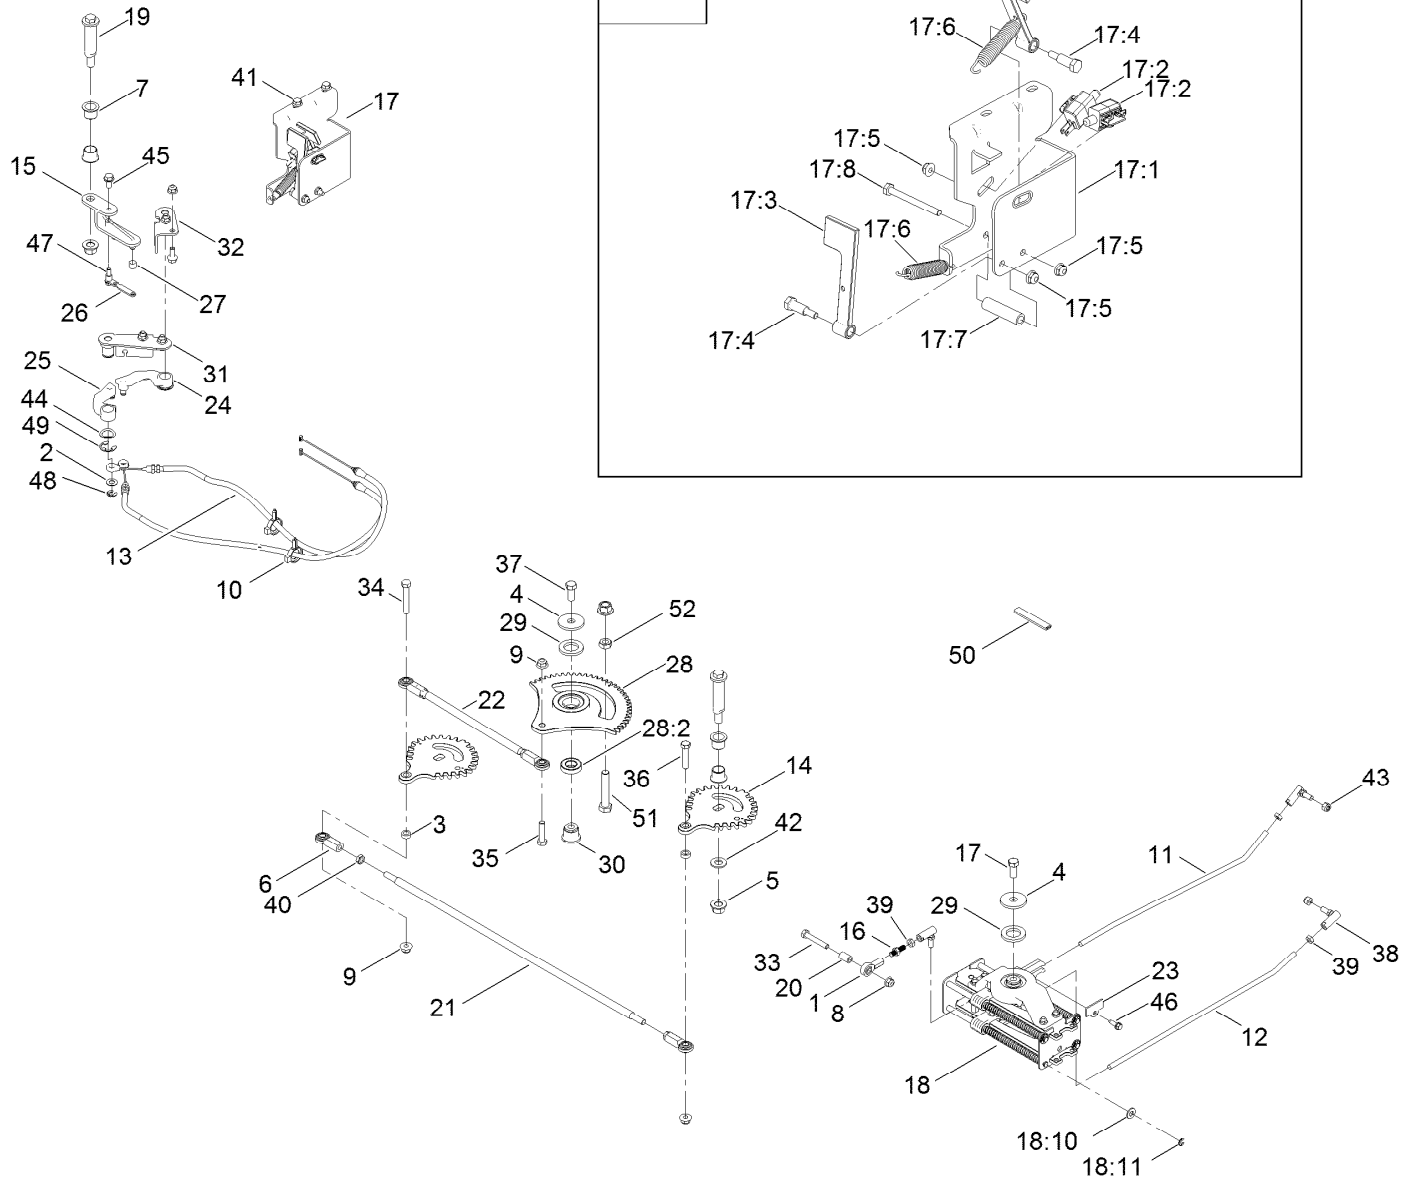

## Steering Gear and Cable Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 1-543017           | 1           | Balljoint-RH           | 23          | 131-1041           | 2           | Cover-End Rod            |
| 2           | 37-8080            | 2           | Washer-Thrust          | 24          | 131-3623           | 1           | Arm-Cable, RH            |
| 3           | 83-1050            | 3           | Spacer                 | 25          | 131-3647           | 1           | Arm-Cable, LH            |
| 4           | 84-1560            | 2           | Washer-Thrust          | 26          | 131-3950           | 1           | Strap-Roller             |
| 5           | 99-5107            | 3           | Nut-Lock               | 27          | 131-3951           | 2           | Bushing                  |
| 6           | 103-0608           | 4           | Joint-Ball, End        | 28          | 131-8731           | 1           | Sector Gear ASM          |
| 7           | 103-4398           | 4           | Bearing-Flange, Iglide | 28:2        | 109-3678           | 1           | Bearing-Ball             |
| 8           | 104-8300           | 7           | Nut-HF, NI             | 29          | 131-8736           | 2           | Spacer-Bearing           |
| 9           | 104-8301           | 3           | Nut-HF, NI             | 30          | 131-8737           | 1           | Pivot-Bearing            |
| 10          | 105-1853           | 2           | Clamp-Hose             | 31          | 132-6943           | 1           | Cable Bracket ASM        |
| 11          | 127-0115           | 1           | Rod-Hydro, RH          | 32          | 132-6944           | 1           | Cable Bracket ASM        |
| 12          | 127-0116           | 1           | Rod-Hydro, LH          | 33          | 322-10             | 1           | Screw-HH                 |
| 13          | 127-0118           | 2           | Cable-Steering         | 34          | 323-11             | 1           | Screw-HH                 |
| 14          | 130-0830           | 2           | Gear-Wheel, 30 Tooth   | 35          | 323-8              | 1           | Screw-HH                 |
| 15          | 130-6878           | 1           | Lever-Cable            | 36          | 323-9              | 1           | Screw-HH                 |
| 16          | 130-6906           | 1           | Rod-Threaded           | 37          | 324-4              | 2           | Screw-HH                 |
| 17          | 131-0903           | 1           | Neutral Return ASM     | 38          | 2411-33            | 3           | Balljoint-RH (W/Grommet) |
| 17:1        | 132-0909-03        | 1           | Bracket-Switch         | 39          | 3220-2             | 8           | Nut-Jam                  |
| 17:2        | 110-6765           | 2           | Switch                 | 40          | 3220-3             | 4           | Nut-HJ                   |
| 17:3        | 130-0782           | 2           | Arm-Switch             | 41          | 3234-47            | 6           | Screw-HHF                |
| 17:4        | 119-2309           | 2           | Bolt-Shoulder          | 42          | 3256-26            | 1           | Washer-Flat              |
| 17:5        | 104-7201           | 3           | Nut-HF                 | 43          | 3296-4             | 3           | Nut-Lock                 |
| 17:6        | 132-6915           | 2           | Spring-Extension       | 44          | 7896               | 2           | Washer-Bowed             |
| 17:7        | 131-3976           | 1           | Spacer                 | 45          | 32144-14           | 1           | Screw-HWHTF              |
| 17:8        | 321-14             | 1           | Screw-HH               | 46          | 32144-44           | 2           | Screw-HWH, Thread Roll   |
| 18          | 131-0904           | 1           | Speed Control ASM      | 47          | 32144-86           | 1           | Screw-HWHTF              |
| 18:10       | 131-8667           | 12          | Washer-Thrust          | 48          | 32151-47           | 2           | Ring-Retaining           |
| 18:11       | 32120-18           | 8           | E-Ring                 | 49          | 32151-48           | 2           | E-Ring                   |
| 19          | 131-1031           | 2           | Bolt-Shoulder          | 50          | 105-7699           | 1           | Strip-Seal               |
| 20          | 131-1034           | 1           | Spacer                 | 51          | 325-11             | 1           | Screw-HH                 |
| 21          | 130-6986           | 1           | Rod-Cross, Wide        | 52          | 3218-5             | 1           | Nut-Jam                  |
| 22          | 131-1037           | 1           | Rod-Steering, Wide     |             |                    |             |                          |

# Attachments and Accessories

## For 74795 TimeCutter SWX 5000 Riding Mower

| Product Name                                                                  | Model/Part   |
|-------------------------------------------------------------------------------|--------------|
| Attachment Mount Kit .....                                                    | 131-3966     |
| Weight Kit .....                                                              | 131-7658     |
| 42in Bagger Timecutter SS (2017 And Up) .....                                 | 79397        |
| Bagging Enhancement Kit .....                                                 | 137-7048     |
| Striping Kit .....                                                            | 137-5030     |
| Replacement Blade Kit .....                                                   | 137-1999-03P |
| Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower ..... | 79010        |
| Floor Mat Kit .....                                                           | 132-6921     |
| Sunshade Kit .....                                                            | 79011        |
| Hourmeter Kit .....                                                           | 116-5461     |
| Assist Handle and Step Kit .....                                              | 79339        |
| Storage Cover .....                                                           | 490-7516     |
| Fuel Stabilizer .05 oz .....                                                  | 130-2393     |
| Toro Premium Fuel Treatment 12 Oz Bottle .....                                | 131-6572     |
| Seat Cover w/Arm Rest .....                                                   | 117-0097     |
| All Season Synthetic Oil (10W30, QT) .....                                    | 117-0066     |
| 10w30 4-Cycle Engine Oil (32oz Bottle).....                                   | 38280        |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....                                   | 38903        |
| Deluxe Seat Kit.....                                                          | 131-7699     |
| Jack Mount Kit .....                                                          | 126-5251     |
| Jack Kit .....                                                                | 127-6666     |
| Weight Kit .....                                                              | 138-2452     |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....                                    | 131-3823     |
| HD Air Cleaner Kit .....                                                      | 136-7860     |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**