



**21" Proline**  
**Side Discharge Mower**  
Model No. 22026—200000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

## Contents

Description	Page	Description	Page
Housing & Wheel Assembly .....	3	Muffler Assembly (Model No. 48PW) .....	10
Housing & Wheel Assembly (cont.) .....	4	Ignition Assembly (Model No. 48PW) .....	11
Engine Assembly .....	5	Governor Assembly (Model No. 48PW) .....	12
Fuel Tank Assembly .....	6	Recoil Assembly (Model No. 48PW) .....	13
Brake Assembly .....	7	Carburetor Assembly (Model No. 48PW) .....	14
Handle Assembly .....	8	Maintenance .....	15
Crankshaft Assembly (Model No. 48PW) .....	9		


## Accessories

Description	Model / Part No.	Description	Model / Part No.
Spark Arrestor Muffler .....	Part No. 81-0200		
Bagging Kit .....	Part No. 38-0050		

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR .....	as required	INC .....	incorporated
ASM .....	assembly	LH .....	left hand
CARR .....	carriage	NI .....	nylon insert
DEG .....	degrees	PPH .....	Phillips pan head
FH .....	flat head	PTH .....	Phillips truss head
GA .....	gauge	PTO .....	power take off
HF .....	hex flange	RH .....	right hand
HH .....	hex head	SFH .....	slotted fillister head
HHF .....	hex head flange	SHH .....	slotted hex head
HLH .....	hex lag head	SQH .....	square head
HJ .....	hex jam	SHWH .....	slotted hex washer head
HOC .....	height-of-cut	SPH .....	slotted pan head
HS .....	hex socket	SRH .....	slotted round head
HSBH .....	hex socket button head	STD .....	standard
HSFH .....	hex socket flat head	TAP .....	self tapping
HSH .....	hex socket head	TTH .....	Torx truss head
HWH .....	hex washer head	WH .....	wing head
HWHTF .....	hex washer head thread forming		

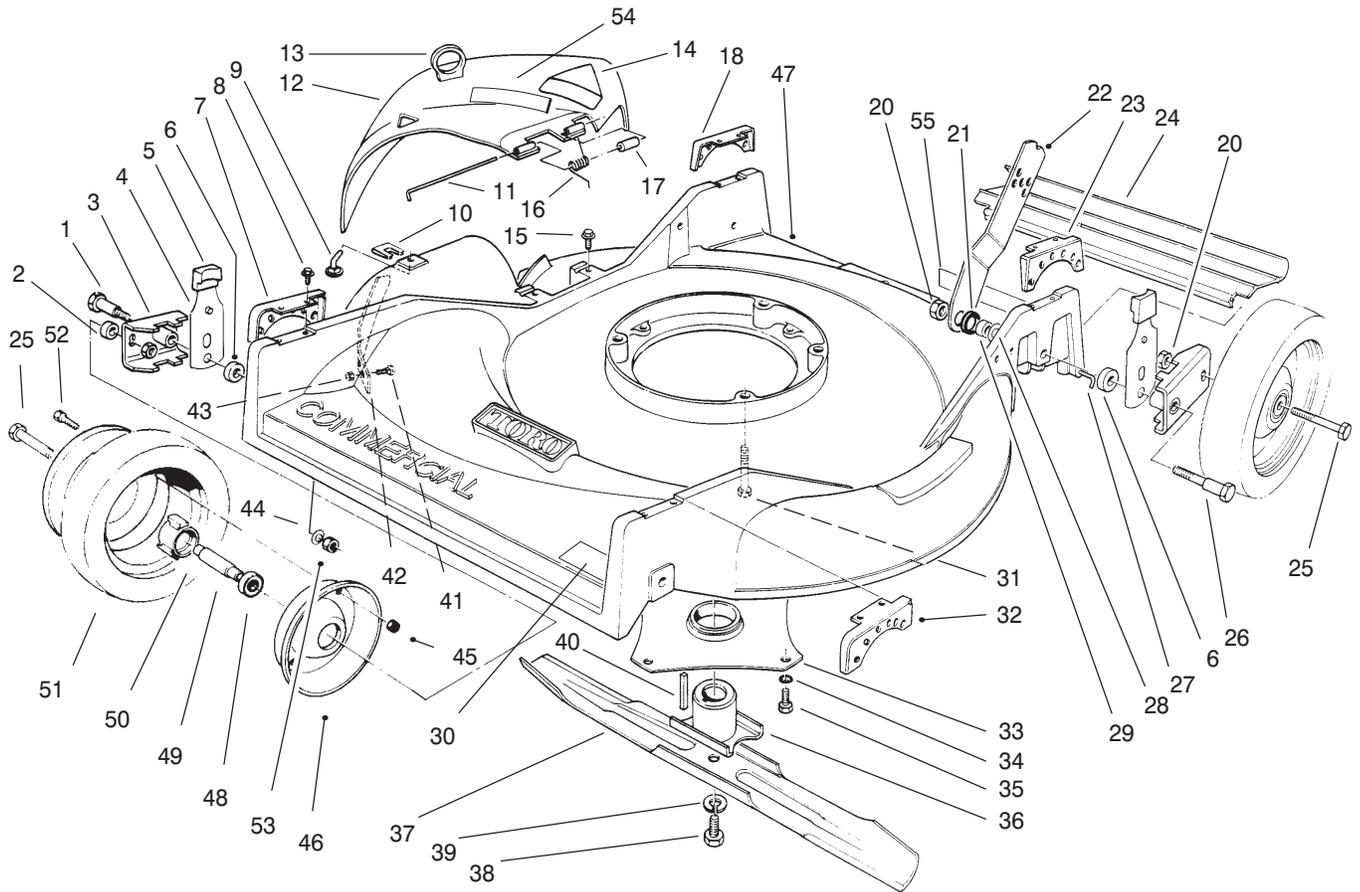

Sheet No.:

## Housing & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	49-9180	2	Screw - Pivot
2	52-2480	4	Spacer - Wheel
3	49-9160	4	Pivot Arm Assembly
4	49-8800	4	Spring Arm Assembly
5	25-7740	4	Knob - Arm
6	53-7930	4	Spacer - Pivot Arm
7	52-2510	1	Quadrant - Front R.H.
8	49-2040	8	Screw - Thread Forming
9	28-3260	1	Pin - Chute
10	28-3250	1	Clip - Pin
11	52-2570	1	Pin - Deflector Hinge
12	12-4739	1	Deflector (Incl. Ref. #14)
13	28-1430	1	Loop - Lift
14	39-5770	1	Decal - Danger
15	46-6811	2	Screw/Washer Assembly
16	52-2560	1	Spring - Deflector
17	28-3270	1	Sleeve - Spring
18	52-2530	1	Quadrant - Rear R.H.
20	3296-39	6	Nut - Lock
21	27-6510	2	Spacer - Latch, Handle
22	100-3286-03	2	Latch - Handle
23	52-2540	1	Quadrant - Rear L.H.
24	52-2640	1	Shield - Rear, Safety

Ref. No.	Part No.	Qty.	Description
25	323-12	4	Screw - Cap, Hex Hd.
26	52-2260	2	Screw - Pivot, Rear
27	33-3201	1	Rod - Shield
28	3290-340	2	Washer - Belleville
29	52-2360	2	Spacer - Handle, Brace
30	68-7410	1	Decal - Blade Warning
31	66-9303	4	Screw - Hex. Washer Hd.
32	52-2520	1	Quadrant - Front L.H.
33	52-2500	1	Crankshaft Protector
34	3254-6	4	Washer - Lock, Int. Tooth
35	32144-70	4	Screw - Thread Forming
36	52-2170	1	Retainer, Blade
37	8-5230	1	Blade 21"
38	26-0671	1	Screw - Blade
39	3253-22	1	Washer - Lock
40	27-8590	1	Key - Square
41	3230-16	2	Bolt - Carriage
42	52-2650-01	1	Bar - Safety
43	3296-29	2	Nut - Lock
44	3290-455	2	Washer - Belleville
45	3296-42	16	Nut - Lock
46	53-7780-06	8	Plate - Wheel Half












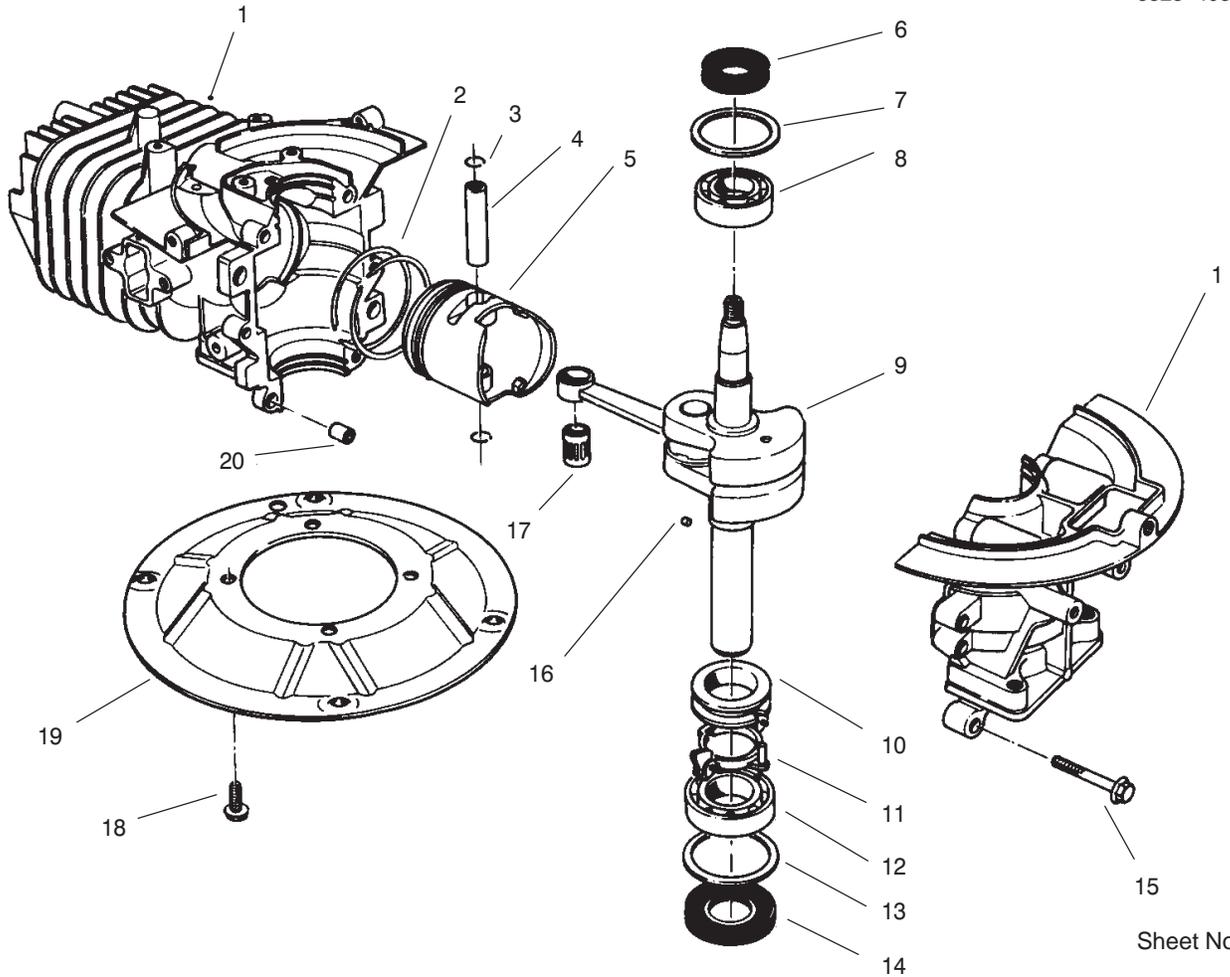


Sheet No.:

## Crankshaft Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	94-1685	1	Crankcase/Cylinder Assy.
2	81-0590	1	Piston Ring Set
3	81-0620	2	Circlip
4	81-0600	1	Pin - Wrist
5	81-2140	1	Piston - 58mm
6	81-0720	1	Seal - Oil, Upper
7	81-0710	1	Washer - Thrust, Upper
8	81-0690	1	Bearing - Upper 20mm
9	81-4680	1	Crankshaft/Connecting Rod Assembly
10	81-0770	1	Spacer - Governor
11	81-0750	1	Bracket - Arm, Governor
12	81-0700	1	Bearing - Lower 25mm
13	81-0730	1	Washer - Thrust, Lower
14	81-0740	1	Seal - Oil, Lower
15	81-0540	5	Bolt 30mm Lg.
16	81-0760	1	Pin - Crankshaft
17	81-0610	1	Bearing - Wrist Pin
18	81-0570	4	Bolt
19	81-0560	1	Plate - Mounting
20	81-0520	2	Pin - Crankcase

Ref. No.	Part No.	Qty.	Description
*	98-2041	1	Short Block

\*Not Illustrated

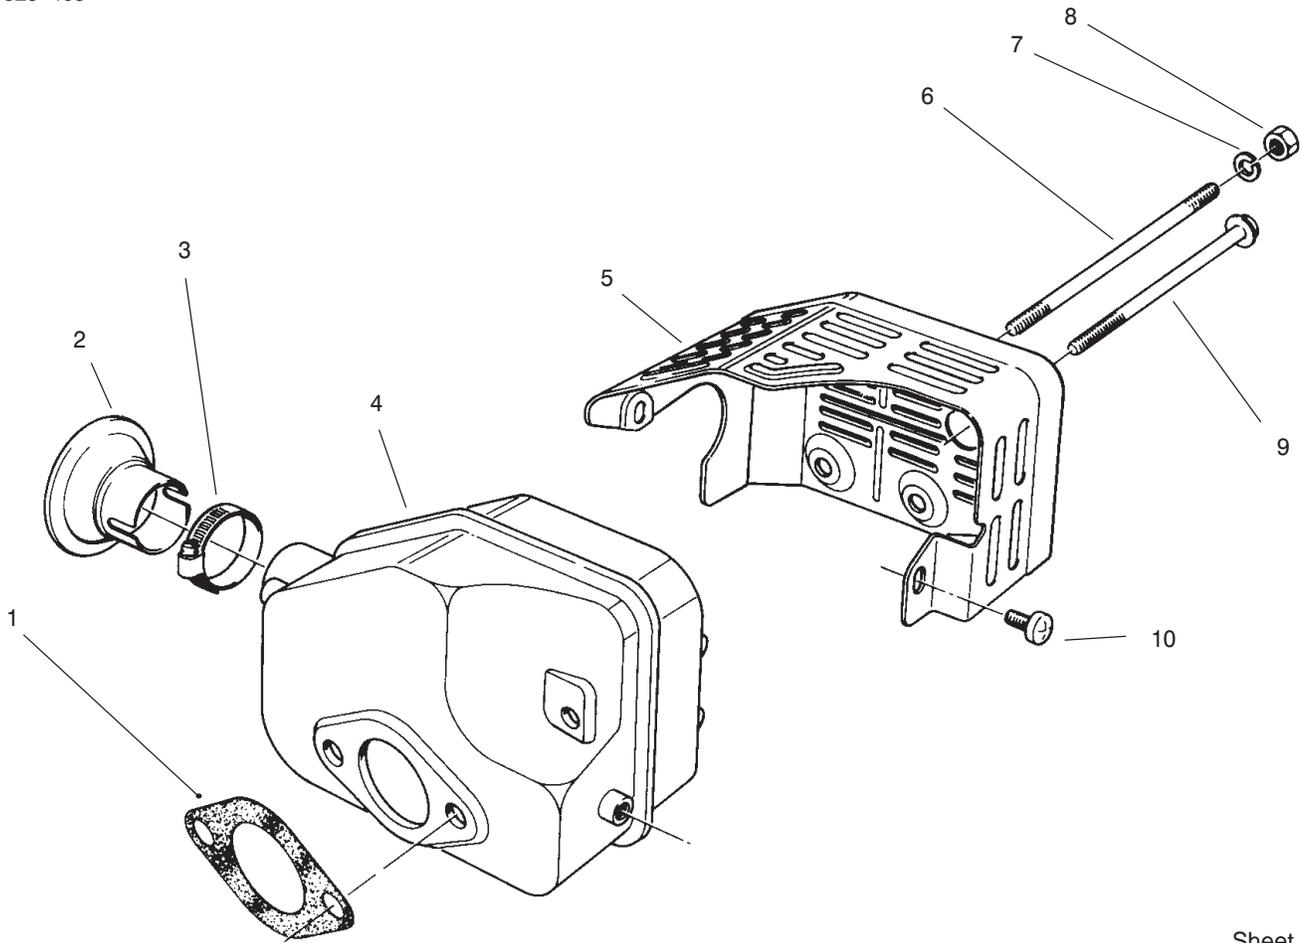

Sheet No.:


### Muffler Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-1080	1	Gasket – Muffler
2	81-0200	1	Spark Arrester (Optional)
†3		1	Clamp
4	81-5690	1	Muffler
5	81-2450	1	Cover – Muffler
6	81-1100	2	Bolt
7	81-1120	2	Washer – Lock
8	81-1110	2	Nut
9	81-1150	1	Bolt – Self Tapping
10	81-1140	2	Screw – Phillips Hd.

Ref. No.	Part No.	Qty.	Description

† Obtain Locally



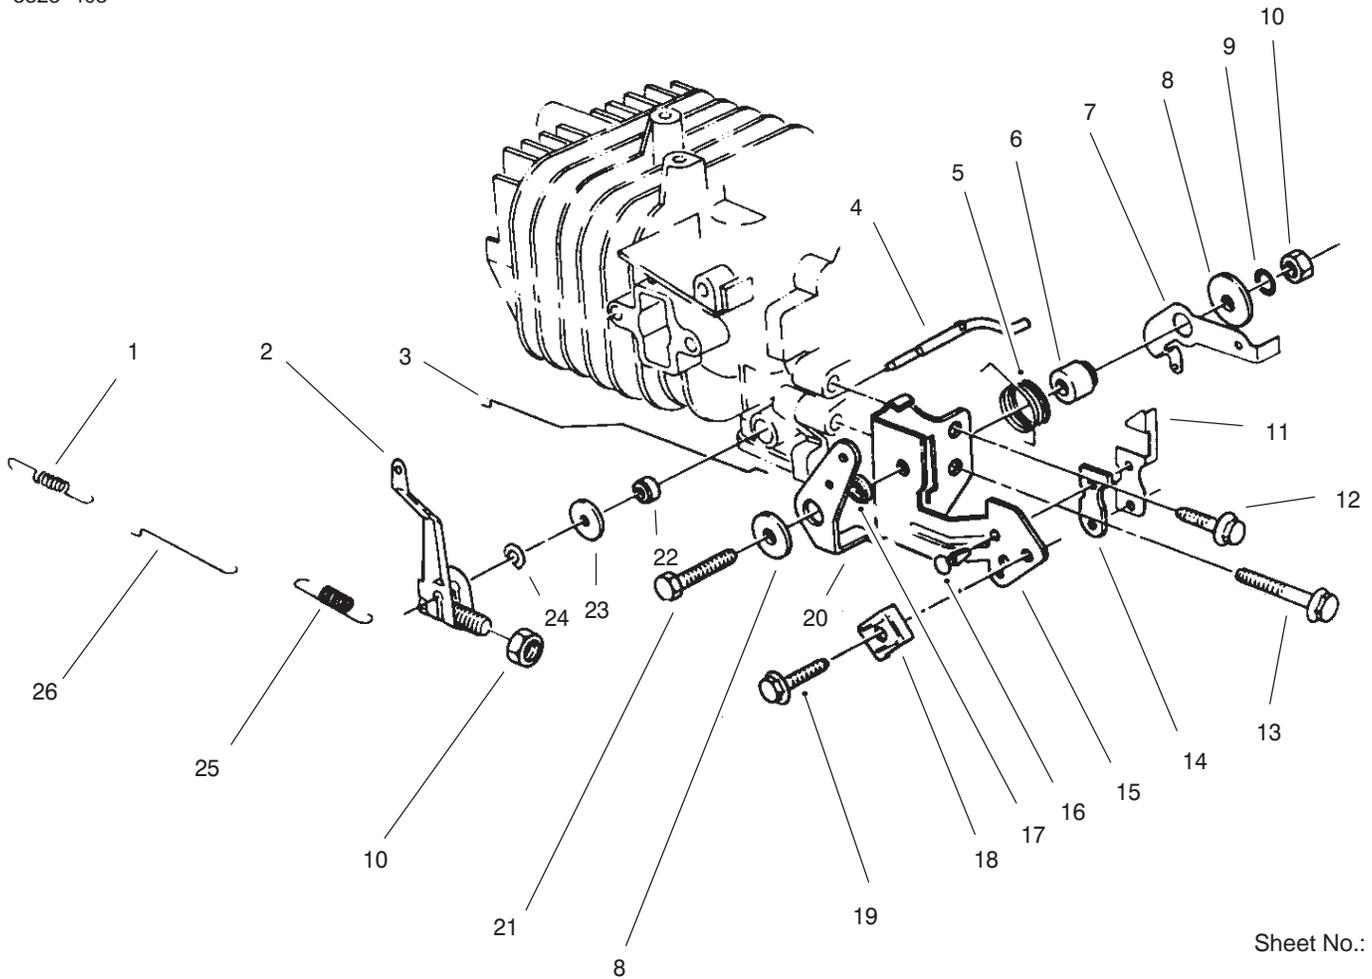


Sheet No.:

## Governor Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-0920	1	Spring - Carburetor Rod
2	81-5420	1	Governor Arm/Bolt Assy.
3	81-5410	1	Rod - Choke
4	81-2880	1	Shaft - Governor
5	81-2460	1	Spring - Lever, Choke
6	81-5780	1	Spacer - Lever, Governor
7	81-2850	1	Lever - Governor
8	81-1750	2	Washer - Lever, Choke
9	81-1450	1	Washer - Lock
10	81-0900	2	Nut
11	81-1840	1	Terminal - Kill Switch
12	81-1170	1	Bolt - Self Tapping
13	81-0540	1	Bolt
14	81-1830	1	Insulator - Kill Switch
15	81-2420	1	Bracket - Throttle
16	81-4530	2	Rivet - Kill Switch
17	81-2470	1	Spacer - Lever, Choke
18	81-2430	1	Clamp - Cable
19	50-0130	1	Bolt - Clamp, Cable
20	81-1710	1	Lever - Choke
21	81-1730	1	Bolt - Bracket, Throttle
22	81-0850	1	Seal - Shaft, Governor
23	81-0860	1	Washer

Ref. No.	Part No.	Qty.	Description
24	81-0870	1	Ring - Retaining
25	81-2830	1	Spring - Governor
26	81-0910	1	Rod - Carburetor

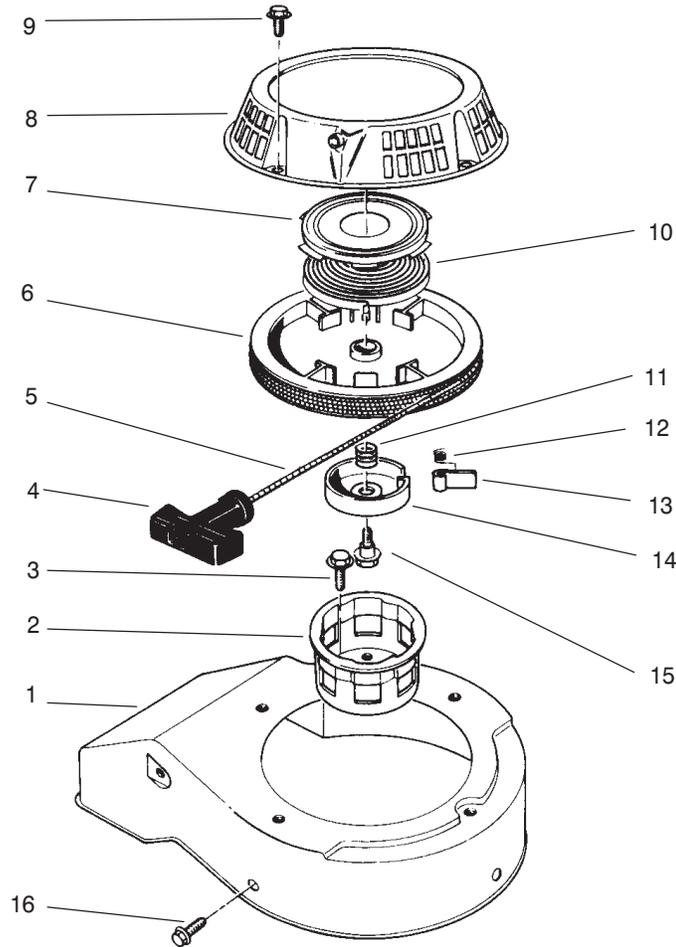


Sheet No.:

### Recoil Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	81-2080	1	Cover – Fan, Cooling				
2	81-2170	1	Cup – Pulley, Starter				
3	81-1300	3	Bolt				
4	81-1630	1	Handle – Recoil				
5	81-1270	1	Rope				
6	81-1210	1	Pulley – Rope				
7		1	Retainer – Spring, Recoil				
8	81-2100	1	Case – Starter				
9	81-1280	4	Bolt				
10		1	Spring – Recoil				
11	81-1240	1	Spring – Compression				
12	81-1220	1	Spring – Dog				
13	81-1230	1	Dog – Starter				
14	81-1250	1	Retainer – Dog				
15	81-1260	1	Bolt – Shoulder				
16	53-1340	3	Bolt – Self Tapping (15mm Lg.)				
*	81-5940	1	Starter Assembly (Incl. Ref. #4-15)				
*	81-2300	1	Spring & Retainer Assembly (Incl. Ref. #7 & 10)				

\*Not Illustrated

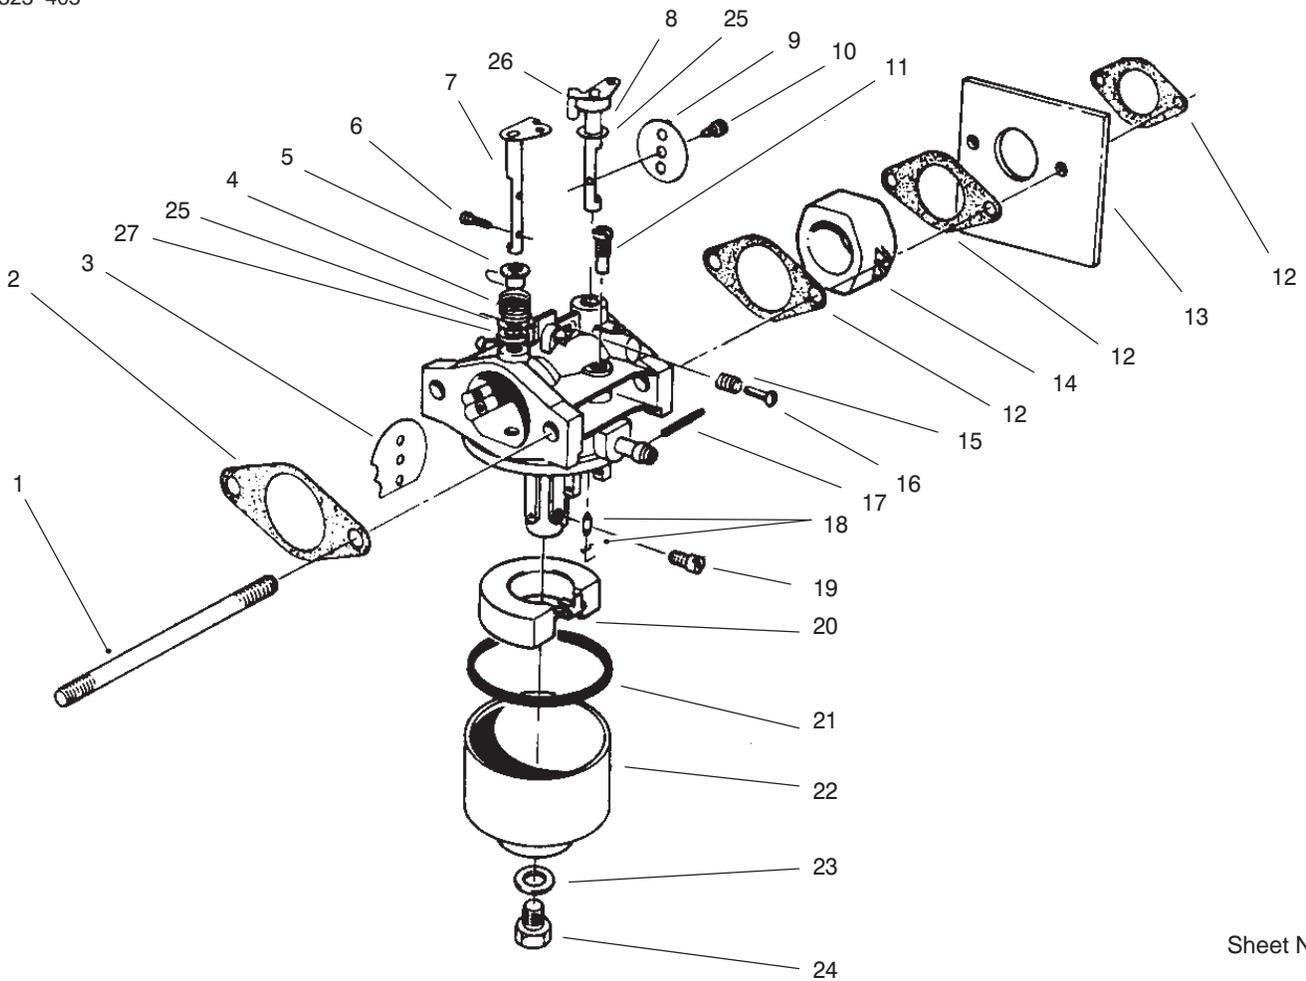

Sheet No.:

## Carburetor Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-5450	2	Stud Bolt, Carburetor
2	81-0090	1	Gasket
3	81-0240	1	Valve - Choke
4	81-0230	1	Spring - Choke
5	81-0220	1	Bushing - Choke
6	81-2160	2	Screw - Choke Plate
7	81-1950	1	Shaft - Choke
8	81-0250	1	Shaft - Throttle
9	81-0260	1	Valve - Throttle
10	81-0270	1	Screw - Throttle
11	94-1684	1	Jet - Pilot #42.5
12	81-0780	3	Gasket - Carburetor
13	81-5490	1	Shield - Carburetor
14	81-5440	1	Insulator - Carburetor
15	81-2580	1	Spring - Idle Stop
16	50-0250	1	Screw - Idle Stop
17	81-2600	1	Pin - Float
18	81-4910	1	Needle Valve
19	81-1060	1	Jet - Main #75
*	81-2340		Jet - Main #72.5 High Alt.
		A/R	Above 6,000 Ft. (Optional)
20	81-0970	1	Float
21	81-1010	1	Gasket - Bowl, Float
22	81-5660	1	Bowl - Float

Ref. No.	Part No.	Qty.	Description
23	81-1020	1	Gasket - Capscrew, Bowl
24	81-5670	1	Capscrew - Bowl
25	81-2530	2	Seal
26	81-2540	1	Ring
27	81-2550	1	Packing
*	12-6379		Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)
*	81-2520	1	Carburetor Assy. Complete
*	81-5810	1	Seat Kit (Incl. Valve Seat & Ref. #18)
*	94-1687	1	Carburetor Ass'y w/Primer

\*Not Illustrated



