



21" Proline Side Discharge Mower

Model No. 22026—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing & Wheel Assembly	3	Muffler Assembly (Model No. 48PW)	10
Housing & Wheel Assembly (cont.)	4	Ignition Assembly (Model No. 48PW)	11
Engine Assembly	5	Governor Assembly (Model No. 48PW)	12
Fuel Tank Assembly	6	Recoil Assembly (Model No. 48PW)	13
Brake Assembly	7	Carburetor Assembly (Model No. 48PW)	14
Handle Assembly	8	Maintenance	15
Crankshaft Assembly (Model No. 48PW)	9		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Spark Arrestor Muffler	Part No. 81–0200		
Bagging Kit	Part No. 38 –0050		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

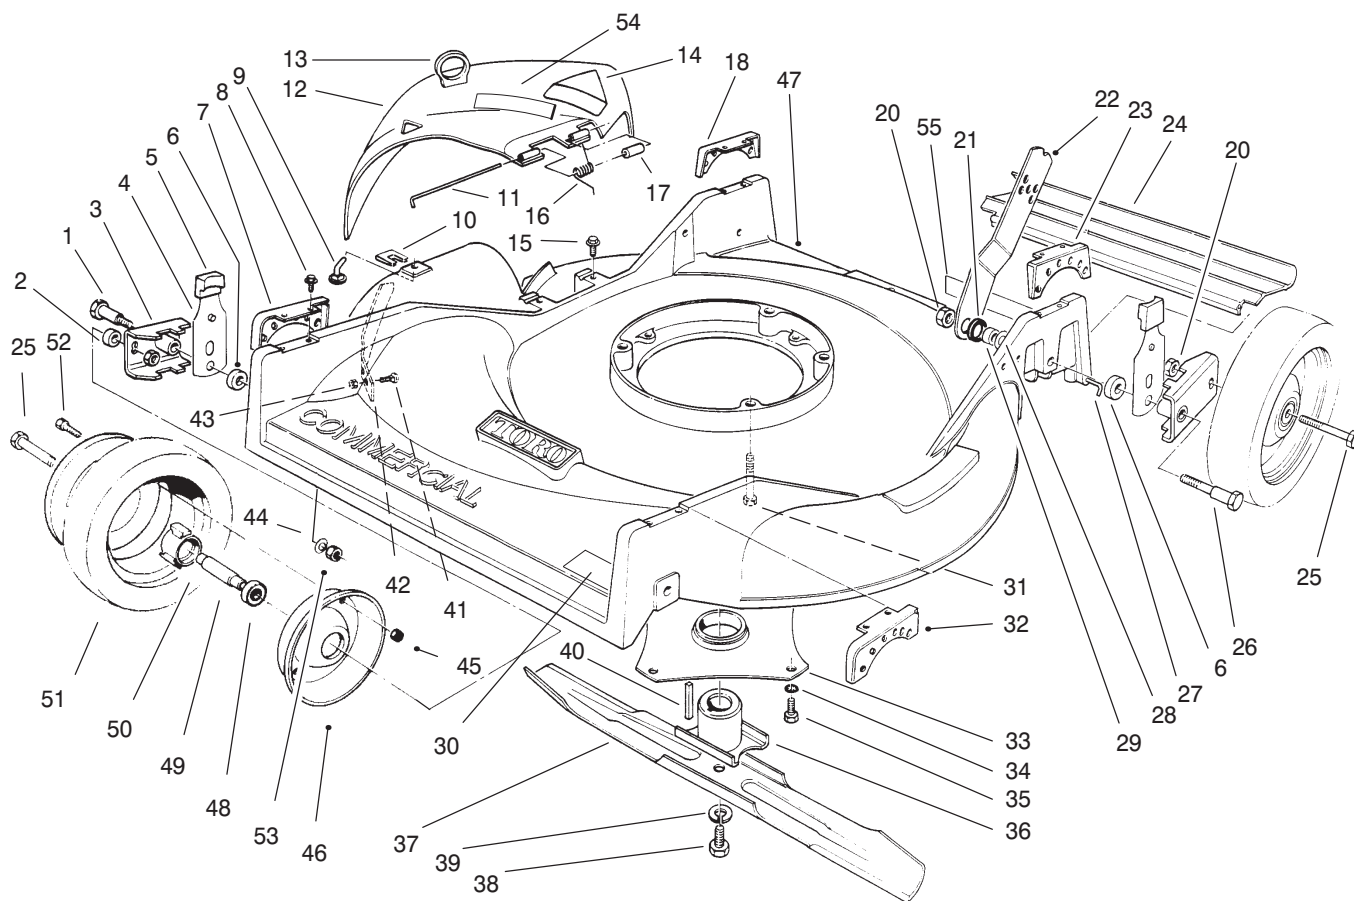


Sheet No.:

Housing & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	49-9180	2	Screw – Pivot
2	52-2480	4	Spacer – Wheel
3	49-9160	4	Pivot Arm Assembly
4	49-8800	4	Spring Arm Assembly
5	25-7740	4	Knob – Arm
6	53-7930	4	Spacer – Pivot Arm
7	52-2510	1	Quadrant – Front R.H.
8	49-2040	8	Screw – Thread Forming
9	28-3260	1	Pin – Chute
10	28-3250	1	Clip – Pin
11	52-2570	1	Pin – Deflector Hinge
12	12-4739	1	Deflector (Incl. Ref. #14)
13	28-1430	1	Loop – Lift
14	39-5770	1	Decal – Danger
15	46-6811	2	Screw/Washer Assembly
16	52-2560	1	Spring – Deflector
17	28-3270	1	Sleeve – Spring
18	52-2530	1	Quadrant – Rear R.H.
20	3296-39	6	Nut – Lock
21	27-6510	2	Spacer – Latch, Handle
22	100-3286-03	2	Latch – Handle
23	52-2540	1	Quadrant – Rear L.H.
24	52-2640	1	Shield – Rear, Safety

Ref. No.	Part No.	Qty.	Description
25	323-12	4	Screw – Cap, Hex Hd.
26	52-2260	2	Screw – Pivot, Rear
27	33-3201	1	Rod – Shield
28	3290-340	2	Washer – Belleville
29	52-2360	2	Spacer – Handle, Brace
30	68-7410	1	Decal – Blade Warning
31	66-9303	4	Screw – Hex. Washer Hd.
32	52-2520	1	Quadrant – Front L.H.
33	52-2500	1	Crankshaft Protector
34	3254-6	4	Washer – Lock, Int. Tooth
35	32144-70	4	Screw – Thread Forming
36	52-2170	1	Retainer, Blade
37	8-5230	1	Blade 21"
38	26-0671	1	Screw – Blade
39	3253-22	1	Washer – Lock
40	27-8590	1	Key – Square
41	3230-16	2	Bolt – Carriage
42	52-2650-01	1	Bar – Safety
43	3296-29	2	Nut – Lock
44	3290-455	2	Washer – Belleville
45	3296-42	16	Nut – Lock
46	53-7780-06	8	Plate – Wheel Half

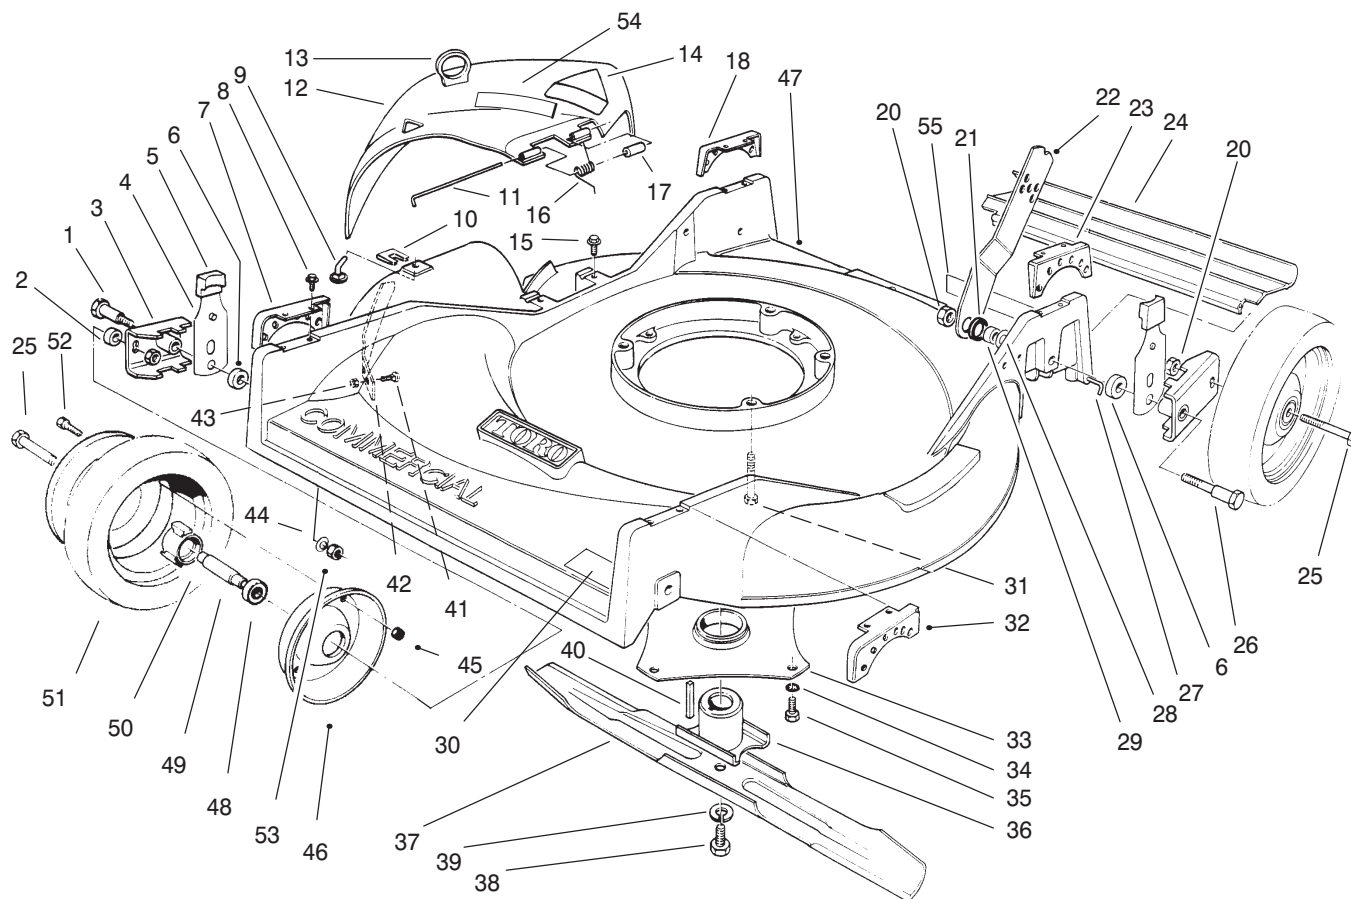


Sheet No.:

Housing & Wheel Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
47	12-4729	1	Housing (Incl. Ref. #19, & 55)
48	52-2450	8	Bearing – Wheel
49	52-2440	4	Spacer – Bearing
50	52-2410	4	Hub
51	53-7740	4	Tire
52	321-2	16	Screw – Cap, Hex. Hd.
53	32152-2	2	Nut –Lock
54	71-8650	1	Decal – Danger
55	92-1779	1	Decal – Warning
*	53-7720		Tire & Wheel Assembly (Incl. Ref. #45, 46 & 48-52)

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

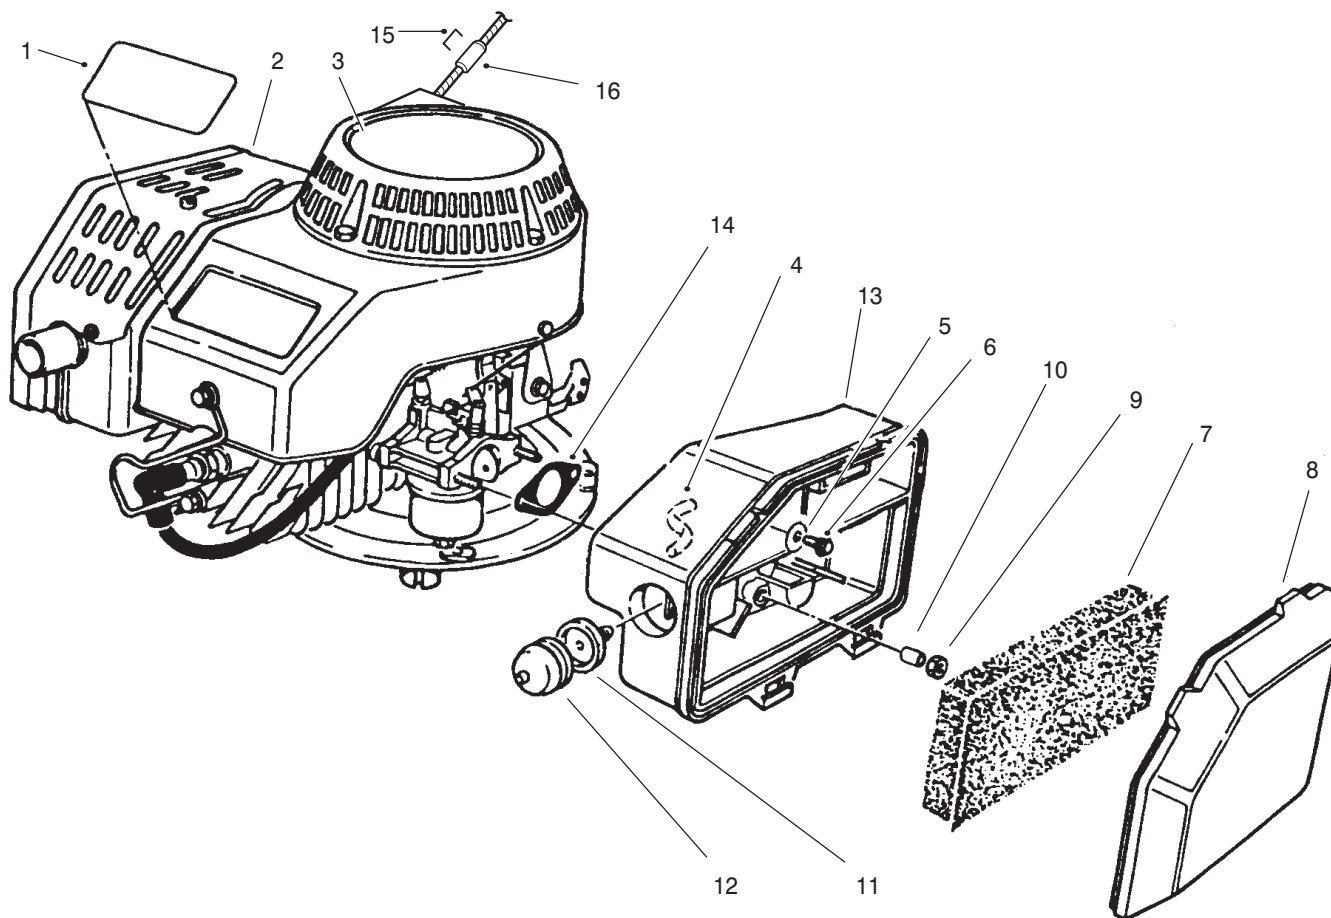


Sheet No.:

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	71-1260	1	Decal – Pro Line
2	61-8062	1	Engine – Complete
3	77-0040	1	Decal – Recoil
4	44-3172	1	Hose – Primer
5	3256-16	1	Washer
6	51-2690	1	Screw – Hex. Flange Hd.
7	63-9380	1	Filter – Foam
8	63-9340	1	Cover – Air Cleaner
9	50-7180	2	Nut
10	62-3980	2	Sleeve
11	44-2750	1	Body – Primer
12	66-7460	1	Bulb – Primer
13	63-9330	1	Body – Air Cleaner
14	81-0090	1	Gasket – Air Cleaner
†15		1	Staple
16	47-2480	1	Stop – Recoil

Ref. No.	Part No.	Qty.	Description

† Obtain Locally

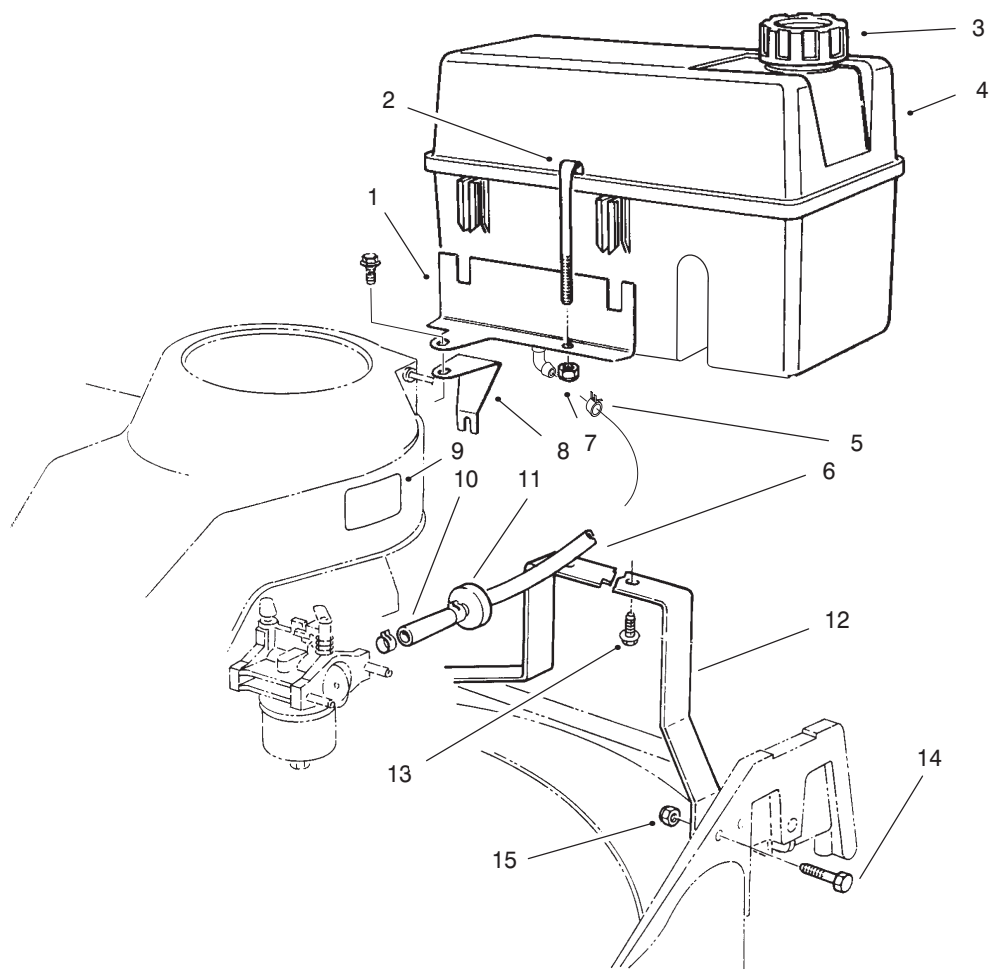


Sheet No.:

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	74-2110-03	1	Bracket – Tank
2	77-2840	1	Retainer – Fuel Tank
3	55-3575	1	Gas Cap Assembly
4	94-5827	1	Fuel Tank Assembly
5	2412-95	4	Clamp – Fuel Line
6	68-3633	1	Hose – Fuel
7	3296-42	1	Nut – Lock
8	77-0520-03	1	Support – Bracket
9	62-7600	1	Decal – Fuel Mix
10	51-3211	1	Hose – Fuel
11	71-9280	1	Filter – Fuel
12	74-2020-03	1	Base – Tank, Fuel
13	46-8091	2	Screw – Hex. Washer Hd.
14	322-6	2	Screw – Cap, Hex. Hd.
15	3296-29	2	Nut – Lock

Ref. No.	Part No.	Qty.	Description

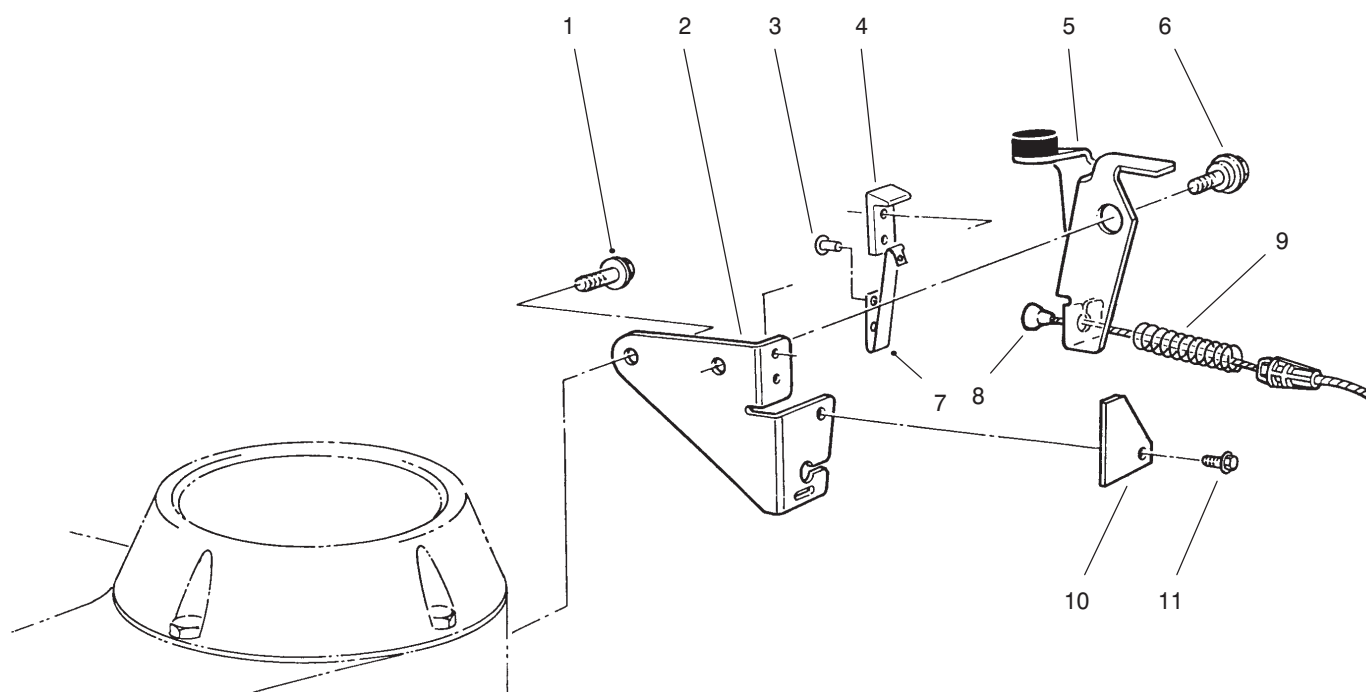


Sheet No.:

Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-10	1	Screw – Self Tapping
2	84-7820	1	Plate – Mounting
3	3290-459	2	Rivet
4	77-5260	1	Strap – Insulation
5	66-5380	1	Brake Plate Assembly
6	92-9698	1	Screw – Shoulder, Metric
7	60-9010	1	Strap – Ground
8	85-6870	1	Cable – Brake
9	66-5370	1	Spring – Compression
10	53-4690	1	Stop – Ground Strap
11	32144-112	1	Screw – Self Tapping
*	14-6009		Mounting Plate Assembly
		1	(Incl. Ref. #2-4, & 7)

Ref. No.	Part No.	Qty.	Description

*Not Illustrated

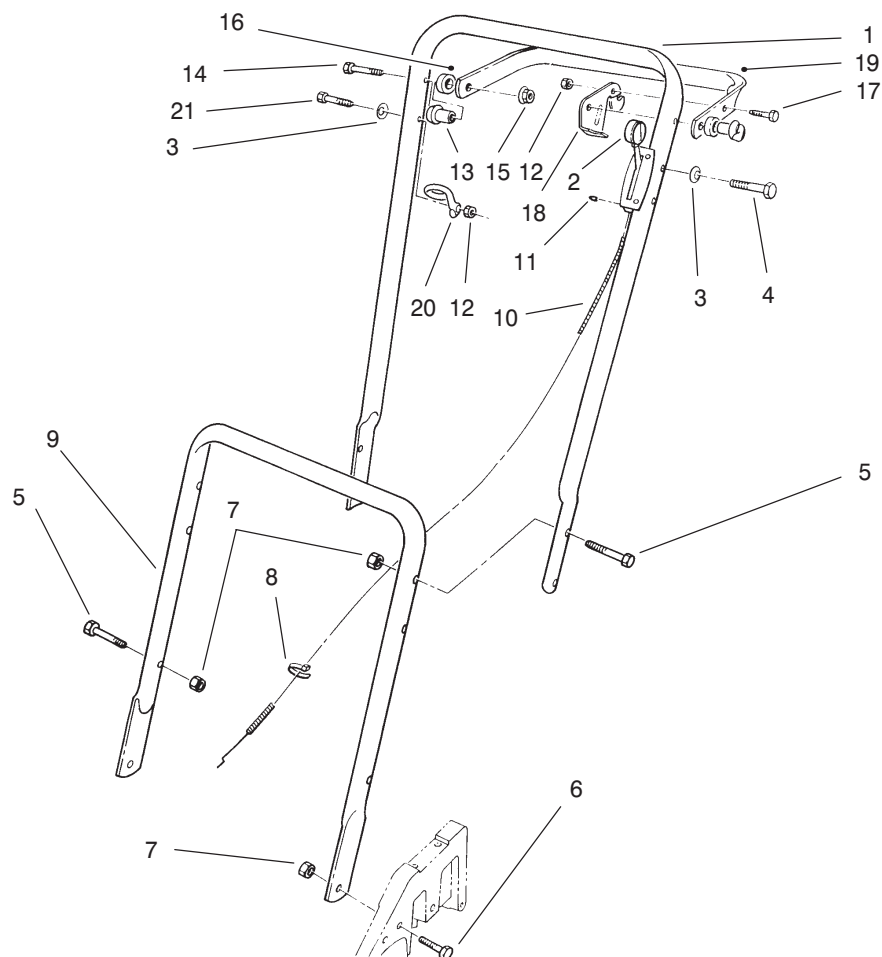


Sheet No.:

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	74-2150-03	1	Handle – Upper
2	82-9950	1	Bracket – Throttle
3	3-7501	3	Washer – Curved
4	321-13	2	Screw – Cap, Hex. Hd.
5	322-7	6	Screw – Cap, Hex. Hd.
6	322-6	2	Screw – Cap, Hex. Hd.
7	3296-29	8	Nut – Lock
8	3290-378	1	Tie – Cable
9	52-2370-03	1	Handle – Lower
10	70-1062	1	Cable – Throttle
11	32151-86	2	Clip – Throttle
12	3296-42	2	Nut – Lock
13	49-1630	2	Support – Spacer
14	322-10	2	Screw – Hex Hd. Cap
15	3296-58	2	Nut – Lock
16	256-276	1	Spacer
17	321-4	1	Screw – Hex Hd. Cap
18	66-5350	1	Lever – Control
19	61-8270-03	1	Bar – Control
20	46-8081	1	Guide – Rope
21	321-9	1	Screw – Hex Hd. Cap

Ref. No.	Part No.	Qty.	Description

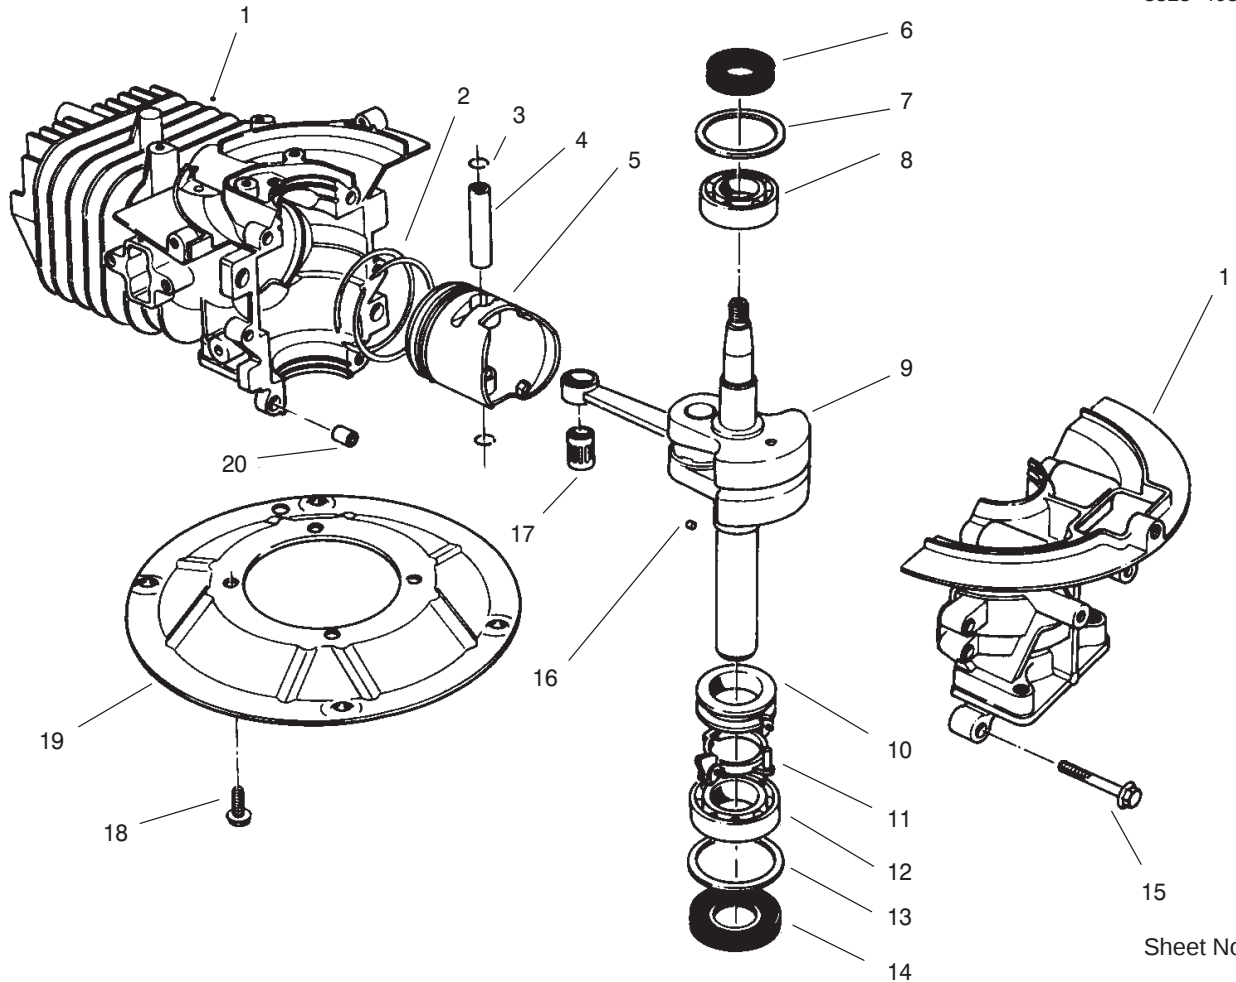


Sheet No.:

Crankshaft Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	94-1685	1	Crankcase/Cylinder Assy.
2	81-0590	1	Piston Ring Set
3	81-0620	2	Circlip
4	81-0600	1	Pin - Wrist
5	81-2140	1	Piston - 58mm
6	81-0720	1	Seal - Oil, Upper
7	81-0710	1	Washer - Thrust, Upper
8	81-0690	1	Bearing - Upper 20mm
9	81-4680	1	Crankshaft/Connecting Rod Assembly
10	81-0770	1	Spacer - Governor
11	81-0750	1	Bracket - Arm, Governor
12	81-0700	1	Bearing - Lower 25mm
13	81-0730	1	Washer - Thrust, Lower
14	81-0740	1	Seal - Oil, Lower
15	81-0540	5	Bolt 30mm Lg.
16	81-0760	1	Pin - Crankshaft
17	81-0610	1	Bearing - Wrist Pin
18	81-0570	4	Bolt
19	81-0560	1	Plate - Mounting
20	81-0520	2	Pin - Crankcase

Ref. No.	Part No.	Qty.	Description
*	98-2041	1	Short Block

*Not Illustrated

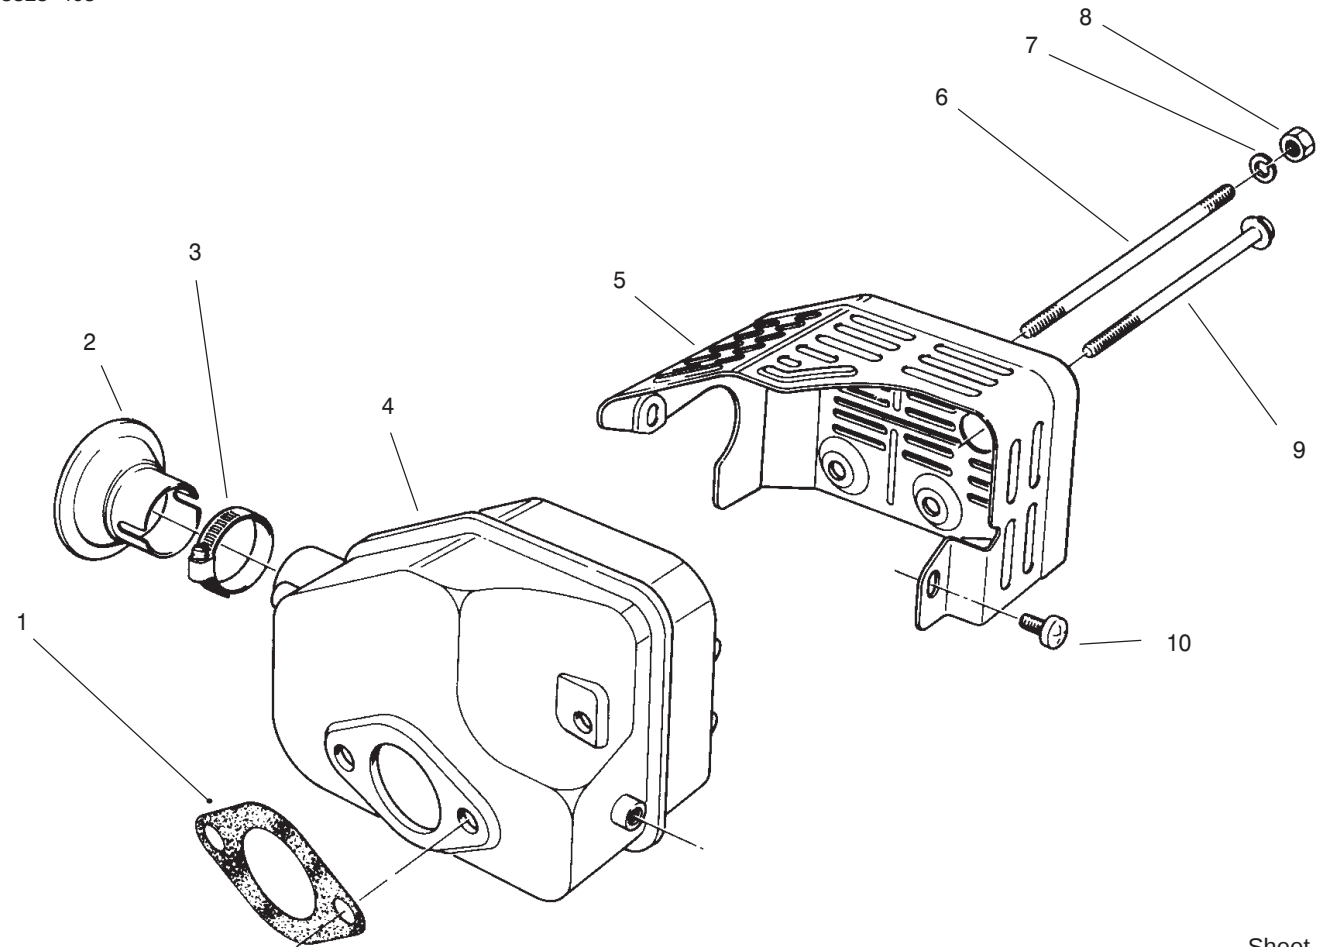


Sheet No.:

Muffler Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-1080	1	Gasket – Muffler
2	81-0200	1	Spark Arrester (Optional)
†3		1	Clamp
4	81-5690	1	Muffler
5	81-2450	1	Cover – Muffler
6	81-1100	2	Bolt
7	81-1120	2	Washer – Lock
8	81-1110	2	Nut
9	81-1150	1	Bolt – Self Tapping
10	81-1140	2	Screw – Phillips Hd.

Ref. No.	Part No.	Qty.	Description

† Obtain Locally

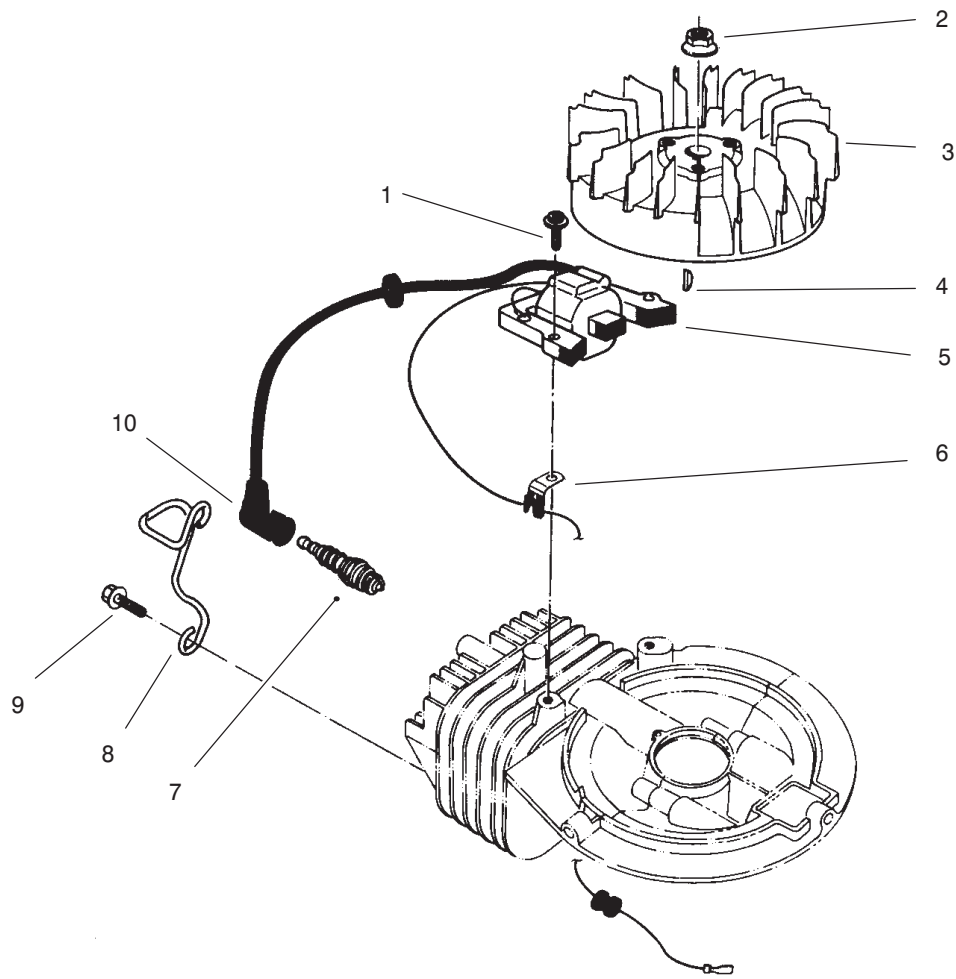


Sheet No.:

Ignition Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-5680	2	Screw – Cap, Hex Hd.
2	81-1330	1	Nut
3	81-2810	1	Flywheel – Magneto
4	81-2370	1	Key – Flywheel
5	81-2820	1	Coil/Ignition Assembly
6	81-1480	1	Clamp
7	81-0181	1	Spark Plug
8	81-2120	1	Guard – Spark Plug
9	81-2350	2	Bolt – Self Tapping (20mm Lg.)
10	81-1500	1	Cap Assembly – Spark Plug
*	41-7650	1	Puller – Flywheel

*Not Illustrated

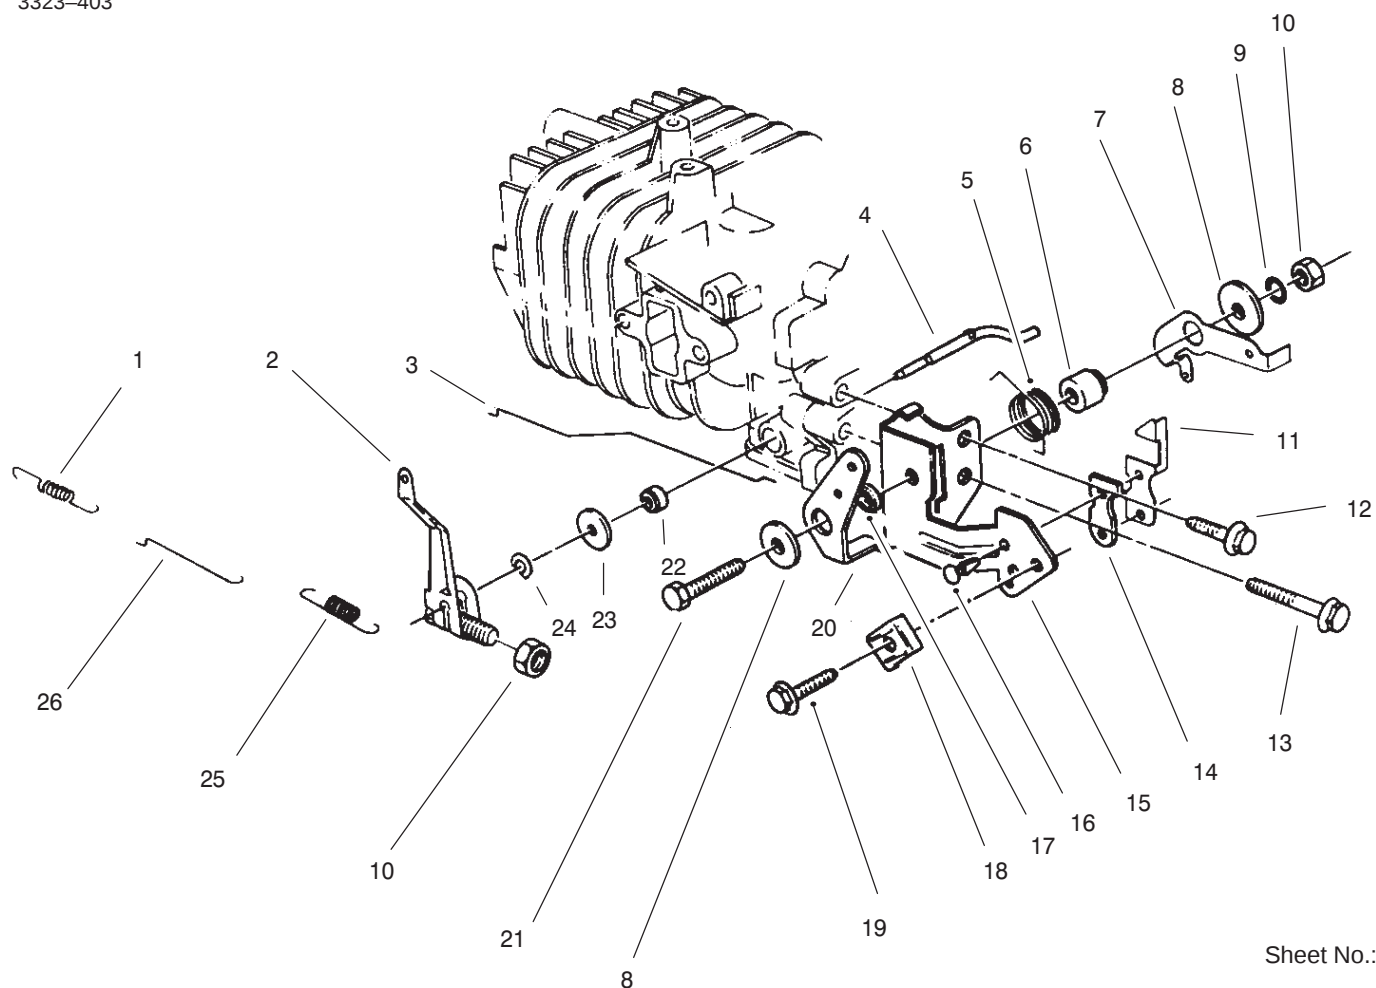


Sheet No.:

Governor Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-0920	1	Spring – Carburetor Rod
2	81-5420	1	Governor Arm/Bolt Assy.
3	81-5410	1	Rod – Choke
4	81-2880	1	Shaft – Governor
5	81-2460	1	Spring – Lever, Choke
6	81-5780	1	Spacer – Lever, Governor
7	81-2850	1	Lever – Governor
8	81-1750	2	Washer – Lever, Choke
9	81-1450	1	Washer – Lock
10	81-0900	2	Nut
11	81-1840	1	Terminal – Kill Switch
12	81-1170	1	Bolt – Self Tapping
13	81-0540	1	Bolt
14	81-1830	1	Insulator – Kill Switch
15	81-2420	1	Bracket – Throttle
16	81-4530	2	Rivet – Kill Switch
17	81-2470	1	Spacer – Lever, Choke
18	81-2430	1	Clamp – Cable
19	50-0130	1	Bolt – Clamp, Cable
20	81-1710	1	Lever – Choke
21	81-1730	1	Bolt – Bracket, Throttle
22	81-0850	1	Seal – Shaft, Governor
23	81-0860	1	Washer

Ref. No.	Part No.	Qty.	Description
24	81-0870	1	Ring – Retaining
25	81-2830	1	Spring – Governor
26	81-0910	1	Rod – Carburetor

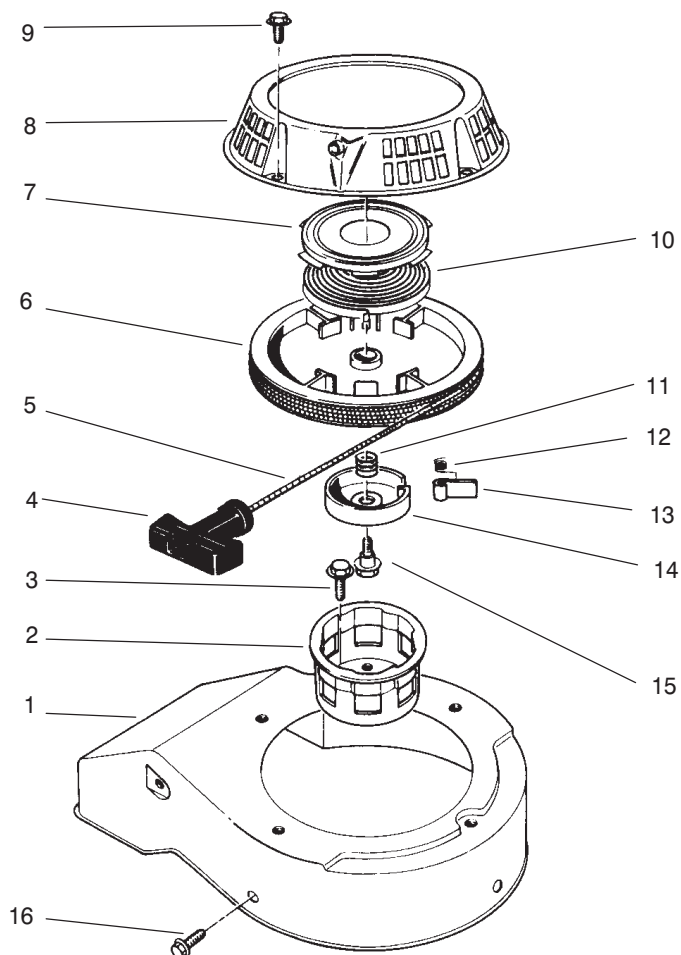


Sheet No.:

Recoil Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-2080	1	Cover – Fan, Cooling
2	81-2170	1	Cup – Pulley, Starter
3	81-1300	3	Bolt
4	81-1630	1	Handle – Recoil
5	81-1270	1	Rope
6	81-1210	1	Pulley – Rope
7		1	Retainer – Spring, Recoil
8	81-2100	1	Case – Starter
9	81-1280	4	Bolt
10		1	Spring – Recoil
11	81-1240	1	Spring – Compression
12	81-1220	1	Spring – Dog
13	81-1230	1	Dog – Starter
14	81-1250	1	Retainer – Dog
15	81-1260	1	Bolt – Shoulder
16	53-1340	1	Bolt – Self Tapping
		3	(15mm Lg.)
*	81-5940	1	Starter Assembly (Incl. Ref. #4-15)
*	81-2300	1	Spring & Retainer Assembly (Incl. Ref. #7 & 10)

*Not Illustrated

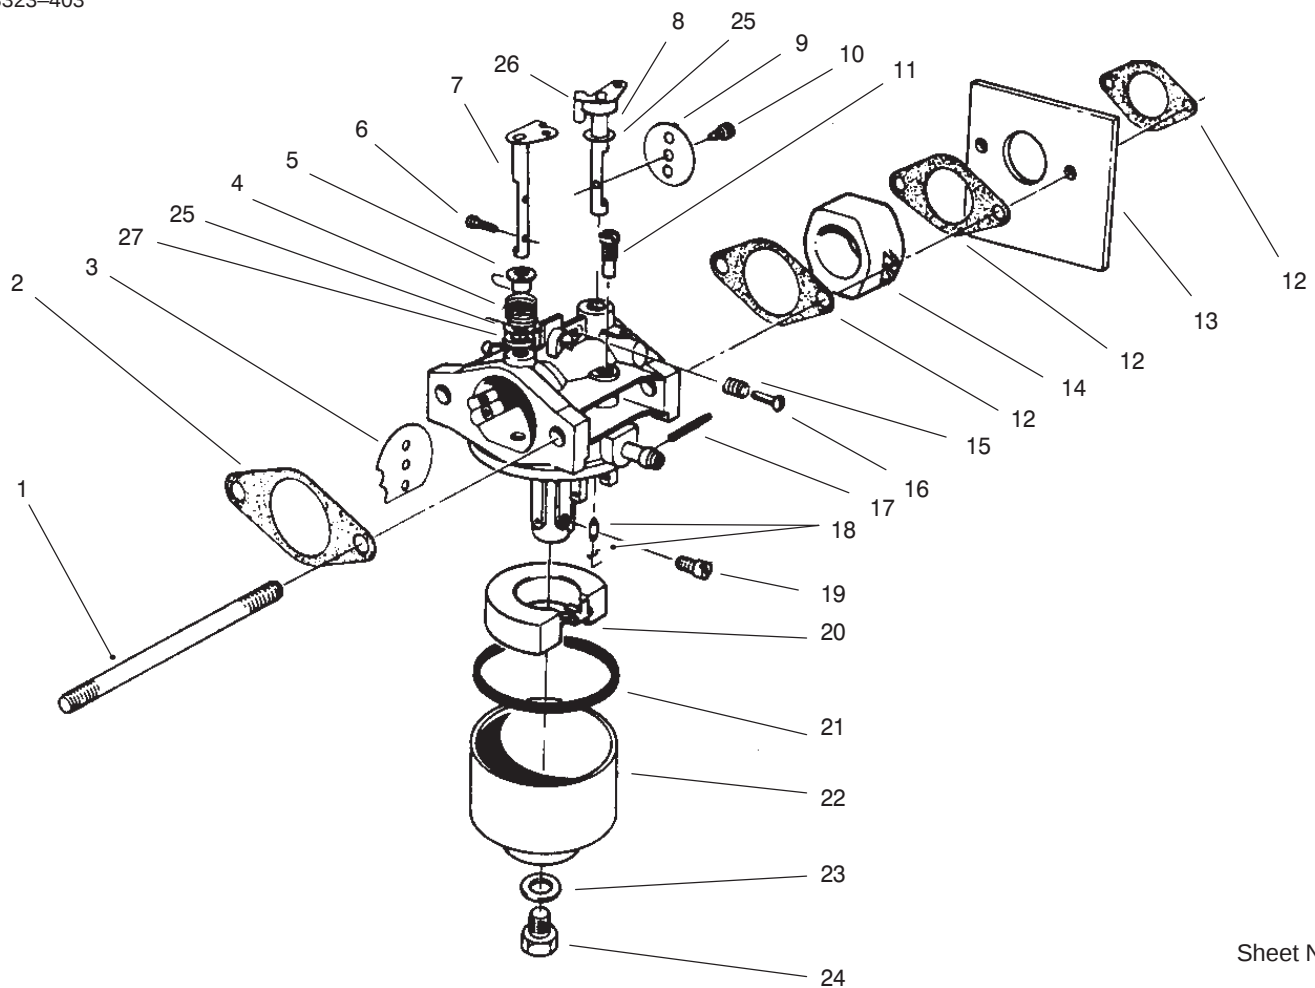

Sheet No.:

Carburetor Assembly (Model No. 48PW)

Ref. No.	Part No.	Qty.	Description
1	81-5450	2	Stud Bolt, Carburetor
2	81-0090	1	Gasket
3	81-0240	1	Valve – Choke
4	81-0230	1	Spring – Choke
5	81-0220	1	Bushing – Choke
6	81-2160	2	Screw – Choke Plate
7	81-1950	1	Shaft – Choke
8	81-0250	1	Shaft – Throttle
9	81-0260	1	Valve – Throttle
10	81-0270	1	Screw – Throttle
11	94-1684	1	Jet – Pilot #42.5
12	81-0780	3	Gasket – Carburetor
13	81-5490	1	Shield – Carburetor
14	81-5440	1	Insulator – Carburetor
15	81-2580	1	Spring – Idle Stop
16	50-0250	1	Screw – Idle Stop
17	81-2600	1	Pin – Float
18	81-4910	1	Needle Valve
19	81-1060	1	Jet – Main #75
*	81-2340	A/R	Jet – Main #72.5 High Alt. Above 6,000 Ft. (Optional)
20	81-0970	1	Float
21	81-1010	1	Gasket – Bowl, Float
22	81-5660	1	Bowl – Float

Ref. No.	Part No.	Qty.	Description
23	81-1020	1	Gasket – Capscrew, Bowl
24	81-5670	1	Capscrew – Bowl
25	81-2530	2	Seal
26	81-2540	1	Ring
27	81-2550	1	Packing
*	12-6379		Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)
*	81-2520	1	Carburetor Assy. Complete
*	81-5810	1	Seat Kit (Incl. Valve Seat & Ref. #18)
*	94-1687	1	Carburetor Ass'y w/Primer

*Not Illustrated

