



Proline 21"

Recycler[®] /Rear Bagging Mower

Model No. 22172-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Housing Assembly	3
Housing Assembly (cont.)	4
Front Tire & Wheel Assembly	5
Gear Case Assembly	6
Engine & BBC Assembly	7
Cylinder/Crankcase	8
Valve/Camshaft	9
Control Equipment	10
Fuel Tank/Fuel Valve	11
Electric Equipment	12
Carburetor	13

Description	Page
Piston/Crankshaft	14
Air Filter/Muffler	15
Cooling Equipment	16
Lubrication Equipment	17
Starter	18
Handle Assembly	19
Panel & Controls Assembly	20
Rear Axle Assembly	21
Rear Wheel & Tire Assembly	22
Bagging Assembly	23

Accessories

 
Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit	Model No. 59199		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming


Abbreviation	Meaning
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

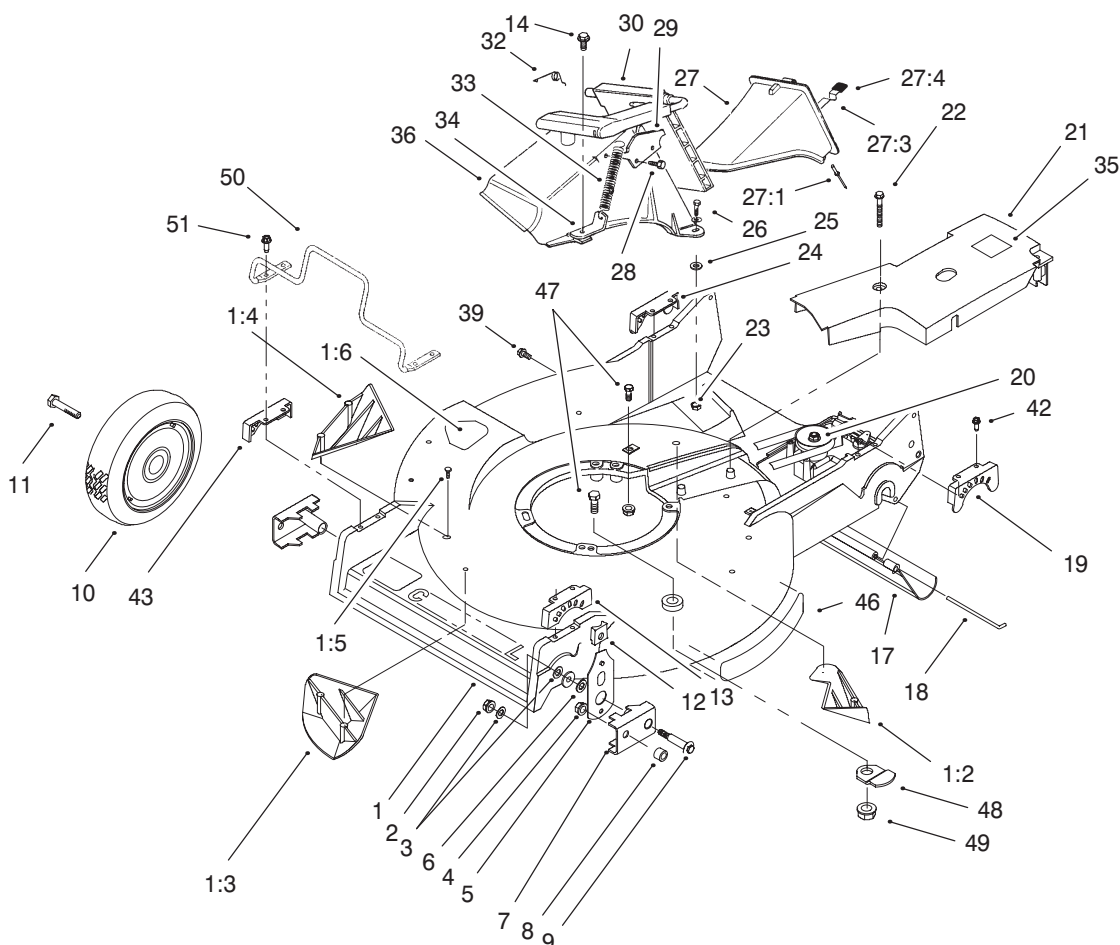

Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7146	1	Housing – Service	22	37-7260	2	Screw-HH
1:2	92-1750	1	Kicker – Rear, Sp	23	3296-42	2	Nut-Lock NI
1:3	92-1720	1	Kicker – Front	24	49-8750	1	Quadrant-RH Rear
1:4	92-1730	1	Kicker – R.h.	25	3256-22	2	Washer-Flat
1:5	32144-111	6	Screw-Plask	26	321-7	2	Screw-HH
1:6	43-8480	1	Decal-Danger	27	77-0500	1	Discharge Plug Assembly
2	3296-6	2	Nut-Lock NI	27:1	3295-35	1	Rivet-Alum
3	40-1940	4	Washer-Wheel Bolt	27:3	76-4640	1	Latch-Disc. Plug
4	32152-2	2	Nut-Conelock	27:4	76-4650	1	Grip-Latch
5	66-7560	2	Front Spring Arm ASM	28	46-8090	2	Screw-Plastite
6	257-3	2	Washer-Thrust	29	93-3154	1	Latch-Plate
7	61-8300	2	Pivot Arm Wa – Front	30	93-7351	1	ASM – Discharge Door
8	52-2480	2	Spacer-Wheel	32	80-3770	1	Spring-Door Ret
9	27-6232	2	Bolt-Wheel	33	76-4660	1	Spring-Door
10	53-7720	2	Wheel & Tire ASM	34	71-9350	1	Bracket-Spring
11	323-12	2	Screw-HH	35	52-2620	1	Label-Sp Grease
12	25-7740	2	Knob-Arm	36	82-9152	1	Tunnel-Discharge
13	49-8760	1	Quadrant-LH Front	39	46-6810	1	Screw & Washer ASM
14	46-6811	1	Screw/Washer	42	49-2040	4	Screw-Taptite
17	44-0580	1	Shield – Trailing	43	49-8770	1	Quadrant-RH Front
18	33-3208	1	Rod-Shield	46	92-7988	1	Decal – Recycler
19	49-8740	1	Quadrant-LH Rear	47	323-6	3	Screw-HH
20	74-1861	1	Gear Case ASM (Service)	48	84-8930	2	Shield-Retainer
21	99-6298	1	Cover-Belt, Sp (Commercial)	49	3296-39	3	Nut-Lock NI

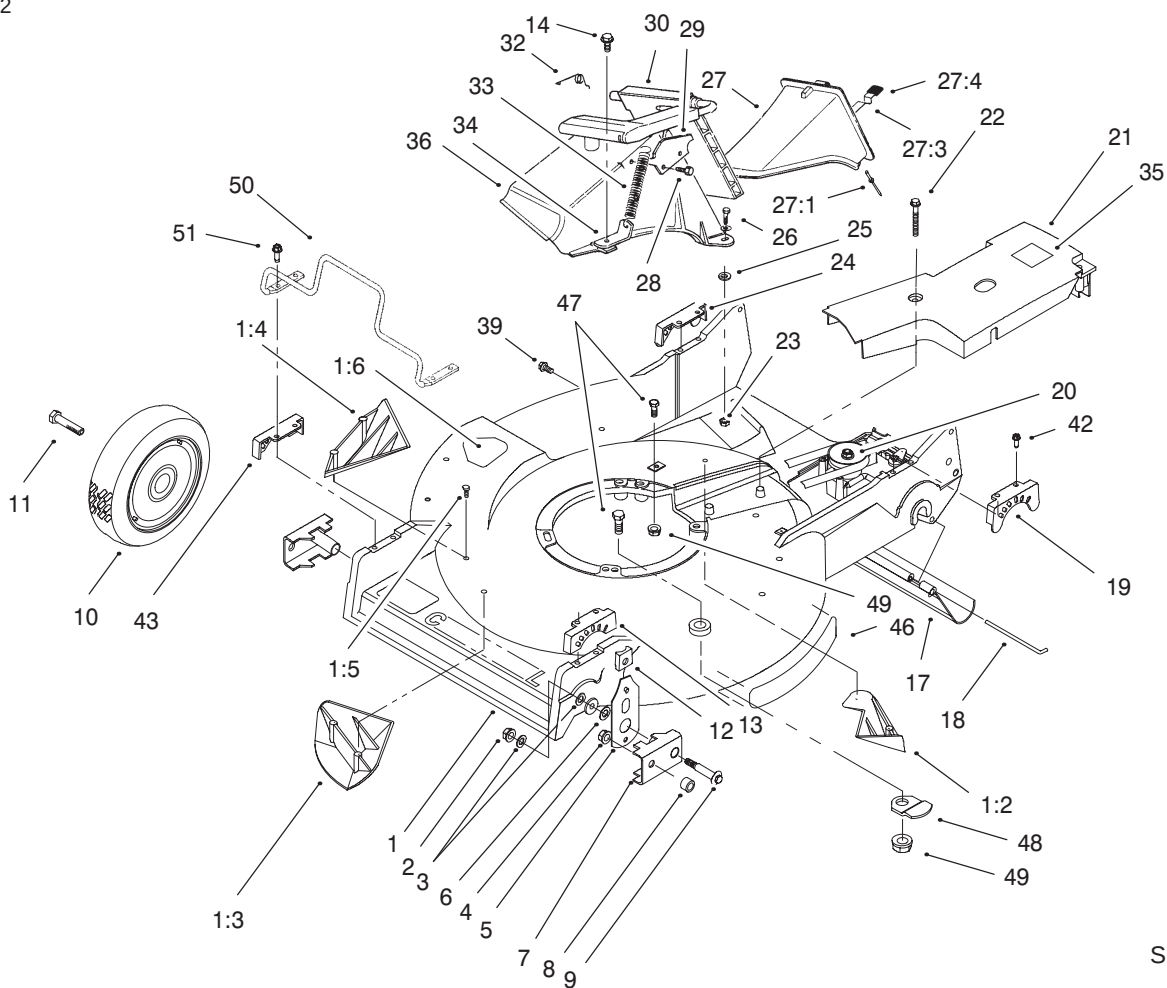 


Sheet No.:2

Housing Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
50	99-6722	1	Guard Engine
51	32144-86	4	Screw-HH


Ref. No.	Part No.	Qty.	Description

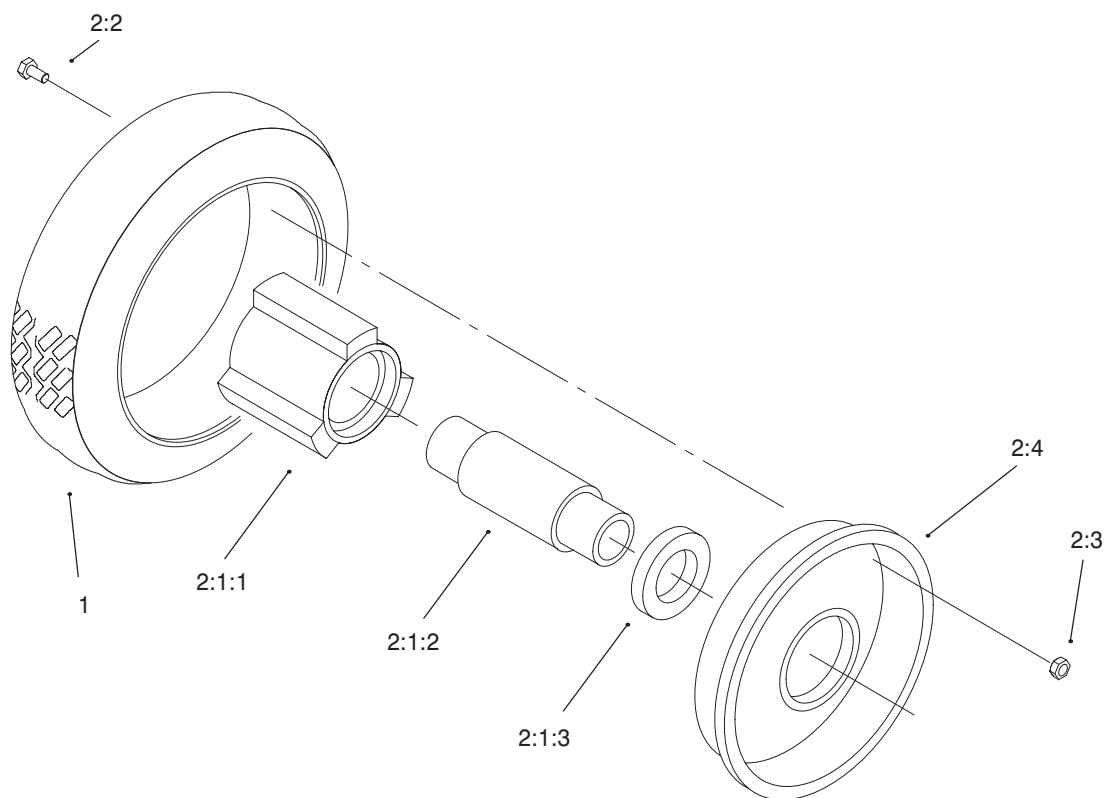 

Sheet No.:2b

Front Tire & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM HP
2:1		1	Hub & Brg ASM
2:1:1	52-2410	1	Hub-Bearing Supt
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock NI
2:4	53-7780-06	2	Plate-Wheel Half

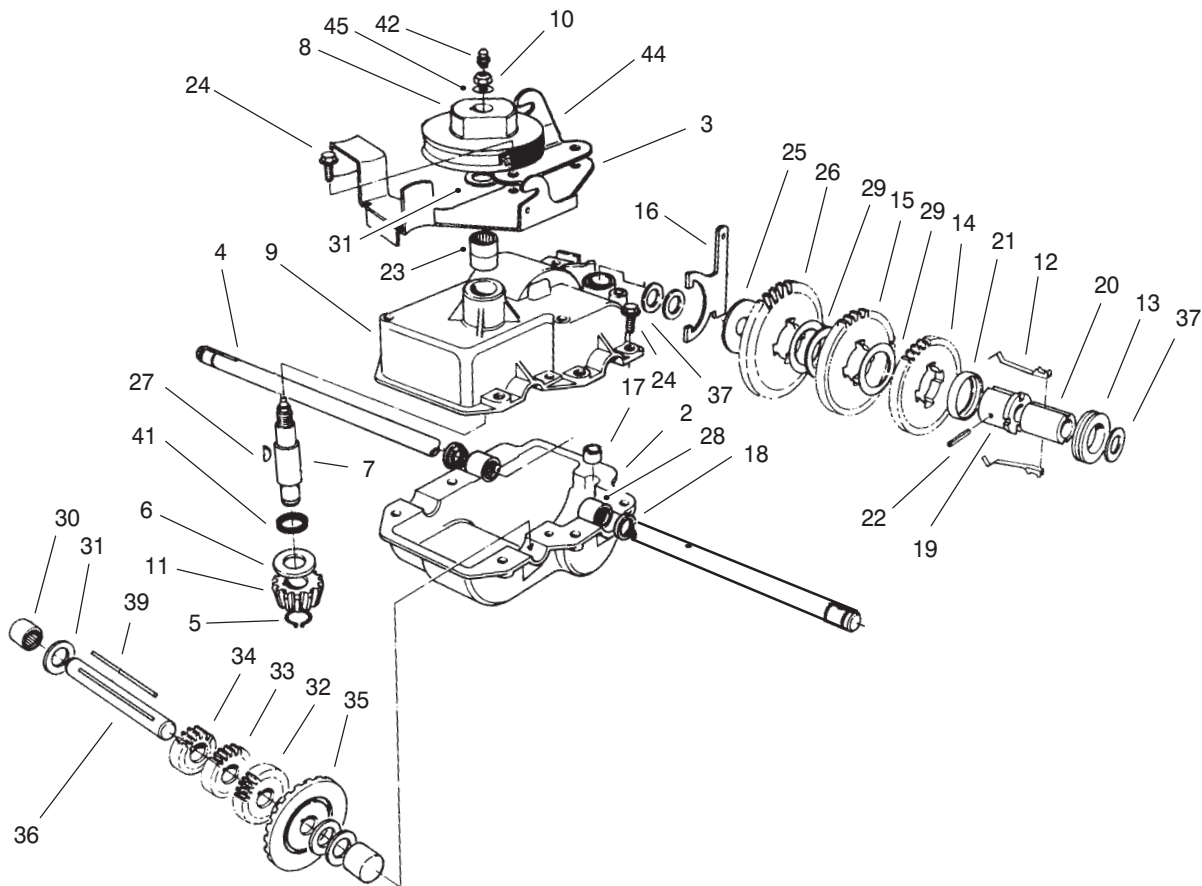 


Sheet No.:2a

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
2	74-1920	2	Case-Lower Gear
3	49-8461-03	1	Bracket-Belt Guide
4	74-1890	2	Shaft-Output
5	32151-57	2	Ring-Retaining
6	47-2910	2	Washer-Thrust
7	13-5149	1	Input Shaft w/Zerk
8	39-6740	2	Pulley
9	74-1880	2	Case-Upper Gear
10	3296-5	2	Nut-Lock NI
11	39-6660	2	Pinion-Bevel
12	29-9330	4	Key
13	29-9340	2	Collar-Shift
14	42-4740	2	Gear-38 Tooth
15	29-9271	2	Gear-42 Tooth
16	60-8870	2	Yoke-Shift
17	29-9570	2	Bushing-Yoke
18	47-6730	4	Seal-Oil
19	55-8010	2	Sleeve-Gear
20	39-6720	2	Sleeve
21	55-8020	2	Retainer-Key
22	3285-19	2	Pin-Groove
23	47-7270	4	Bearing
24	49-2040	14	Screw-Taptite
25	29-9690	2	Washer
26	46-3560	2	Gear
27	3257-1	4	Key-Woodruff


Ref. No.	Part No.	Qty.	Description
28	48-2060	4	Bearing-Roller
29	36-4770	6	Washer
30	252-103	4	Bearing-Closed
31	36-4792	8	Washer-Thrust
32	39-6650	2	Gear-18t
33	46-3550	2	Gear
34	46-3540	2	Gear
35	74-1760	2	Gear-Bevel
36	53-7950	2	Shaft-Intermediate
37	36-4780	6	Washer
39	39-7842	2	Key
41	47-7260	2	Seal
42	302-63	2	Zerk
44	74-1750-03	1	Brk-Traction Engage
45	3256-45	2	Washer-Flat
*	74-1861	1	Gear Case ASM (Service)

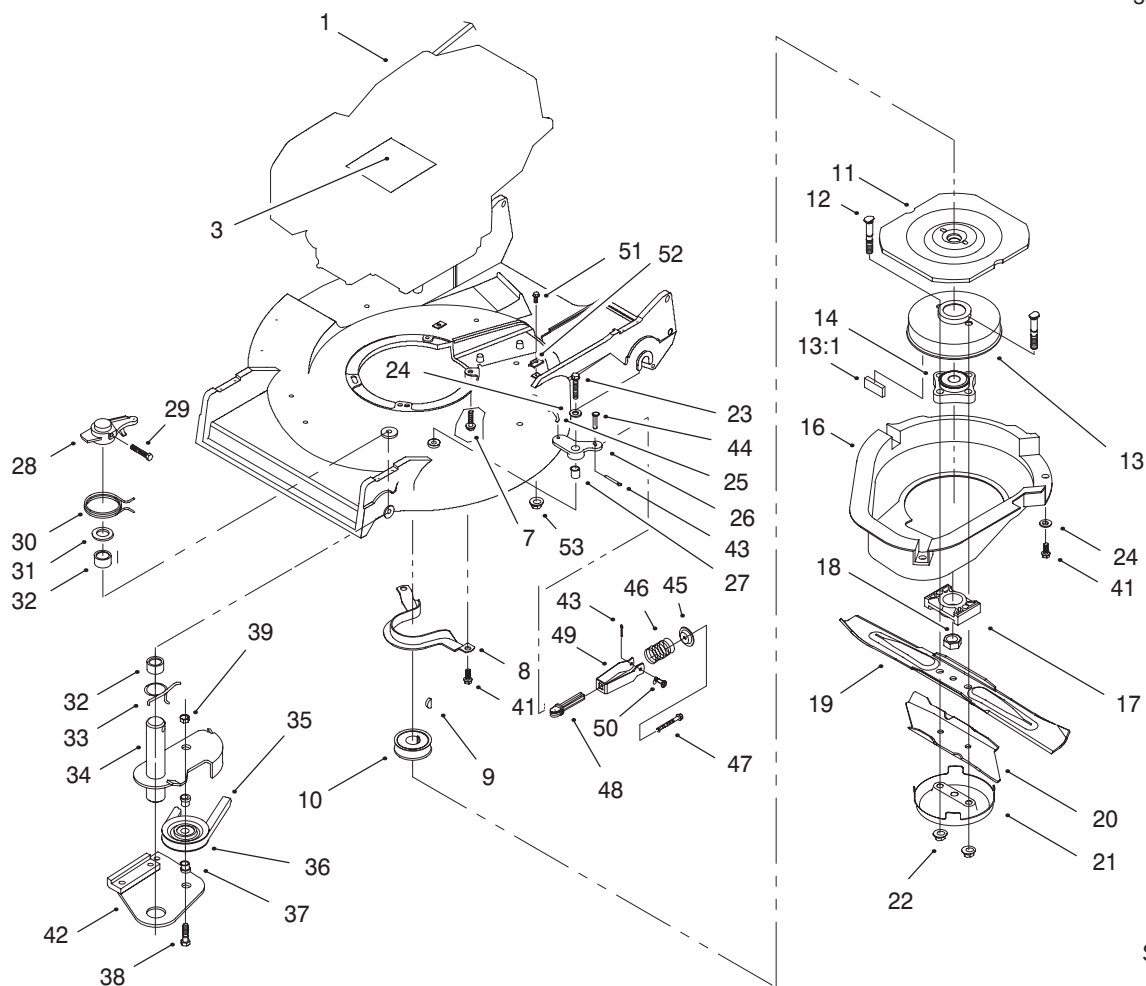 

Sheet No.:3

Engine & BBC Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-6499	1	Engine-4cyc Bbc	31	70-1160	1	Washer - Pm
3	99-6297	1	Decal Engine	32	68-9780	2	Bearing
7	100-2835	3	Screw-Engine Mount	33	85-6880	1	Spring-Torsion
8	66-0570-03	1	Brkt-Belt Guide	34	84-9130	1	Brake Plate Wa
9	3257-17	1	Key-Hi-Pro	35	42-0884	1	V-Belt
10	56-6180	1	Driver-Pulley	36	46-5650	1	Pulley-Idler
11	56-6160	1	Flywheel *B	37	46-5631	2	Hub-Idler Pulley
12	42-3190	2	Bolt-Blade	38	322-6	1	Screw-HH
13	94-9431	1	ASM - Brake Drum	39	3296-47	1	Nut-Lock NI
13:1	52-3480	2	Dampner-Vibration	41	32144-70	3	Screw-Taptite
14	42-6890	1	Hub ASM (Bbc)	42	84-9180	1	Brake Plate Assembly
16	46-5693	1	Shield-Bbc	43	3272-1	2	Pin-Cotter
17	62-4280	1	Spacer-Blade	44	84-9050	1	Pin-Spring
18	3296-33	1	Nut-Lock NI	45	65-5280	1	Retainer-Spring
19	14-9419	1	Blade w/Decal	46	84-9100	1	Spring-Bbc
20	91-2255-03	1	Stiffener-Blade Bbc	47	46-7040	1	Screw-Thd Form
21	80-2770	1	Anti-Scalp Cup	48	84-8870	1	Guide-Spring
22	54-9190	2	Nut-Lock	49	84-8880-03	1	Bracket-Spring
23	32104-107	1	Screw-HH	50	84-9040	1	Pin-Cable
24	3256-23	1	Washer-Flat	51	322-6	1	Screw-HH
25	49-2810	1	Link - Control	52	62-3720	1	Cable Clamp
26	49-7960	1	Bellcrank	53	3296-58	1	Nut-Lock NI
27	49-7950	1	Sleeve-Bellcrank				
28	49-2820	1	Lever				
29	32104-96	1	Screw-HH				
30	49-7970	1	Spring-Torsion				

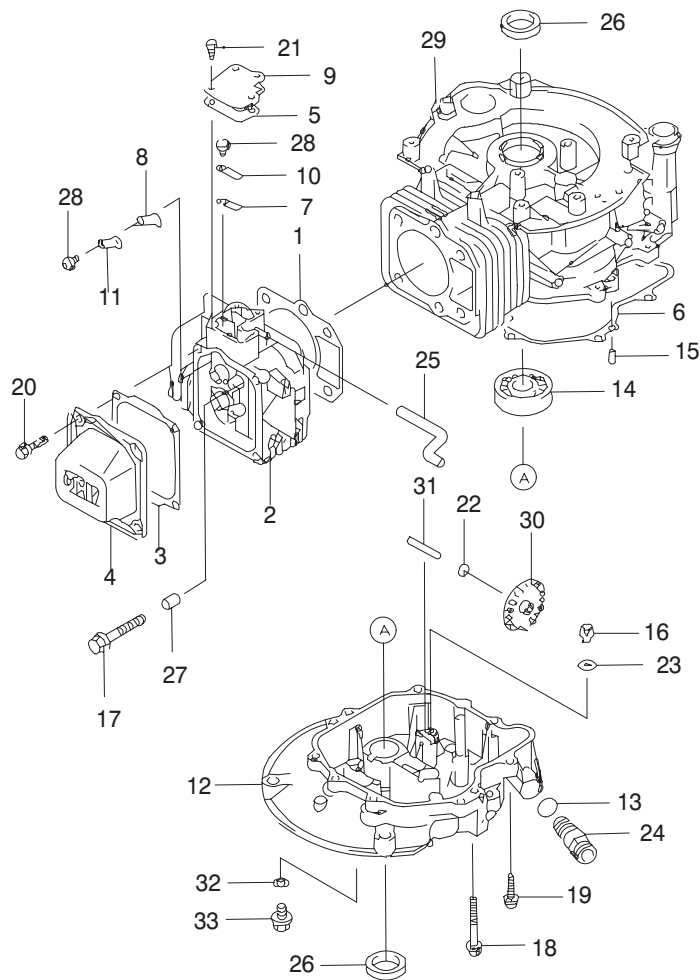 

Sheet No.:3a

Cylinder/Crankcase

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head	25	100-2846	1	Tube
2	100-2743	1	Head-Complete-Cylinder	26	100-2847	2	Seal Oil
3	100-2744	1	Gasket Rocker Case	27	100-2848	2	Pin
4	100-2745	1	Case-Rocker	28	93-8549	2	Screw
5	100-2746	1	Gasket Cover	29	100-2849	1	Crankcase Complete
6	100-2747	1	Gasket Crankcase Cover	30	99-6728	1	Oil Slinger
7	100-2748	1	Plate	31	99-6729	1	Shaft
8	100-2749	1	Plate	32	99-6730	1	Gasket
9	100-2779	1	Cover	33	100-2855	1	Bolt Flanged
10	100-2780	1	Valve				
11	100-2781	1	Valve				
12	100-2782	1	Cover-Crankcase				
13	100-2840	1	O-Ring				
14	100-2841	1	Ball Bearing				
15	93-8516	2	Pin				
16	100-2842	1	Bolt Upset Wsp				
17	Kw10035	4	Bolt, Flanged 8x45				
18	Kw10033	1	Bolt, Flanged 8x12				
19	100-2610	6	Bolt Flanged				
20	100-2804	4	Bolt-Flanged				
21	100-2609	4	Bolt Flanged				
22	100-2843	1	Washer 6x12x1.6				
23	100-2844	1	Washer 5x16x0.8				
24	100-2854	1	Plug				

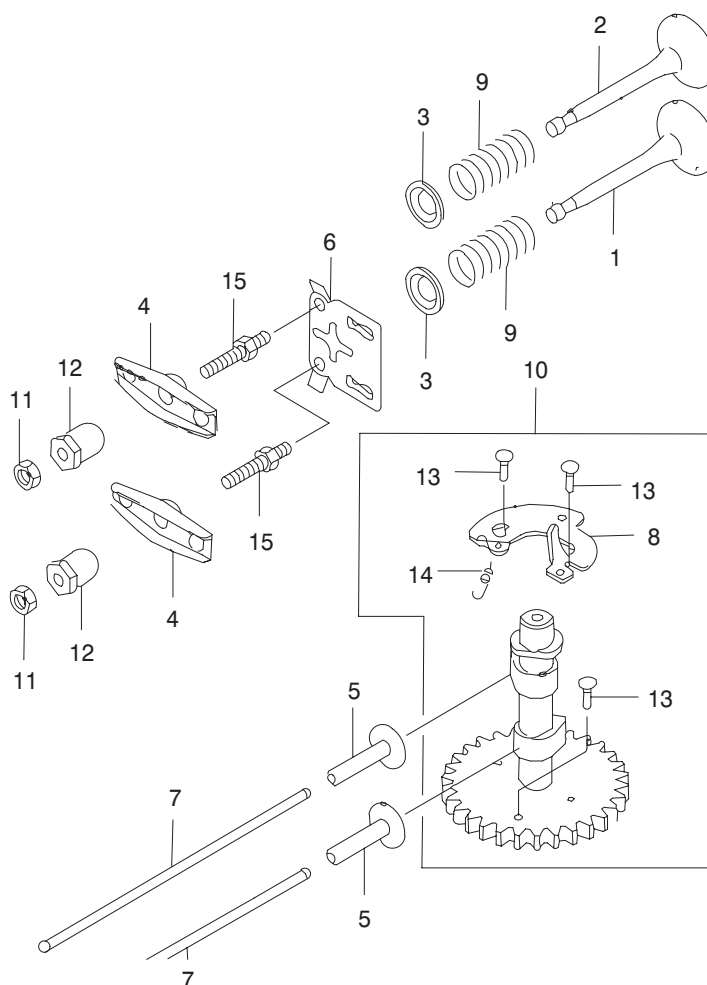 


Sheet No.:3k

Valve/Camshaft

Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Valve Spring
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Engine Valve
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

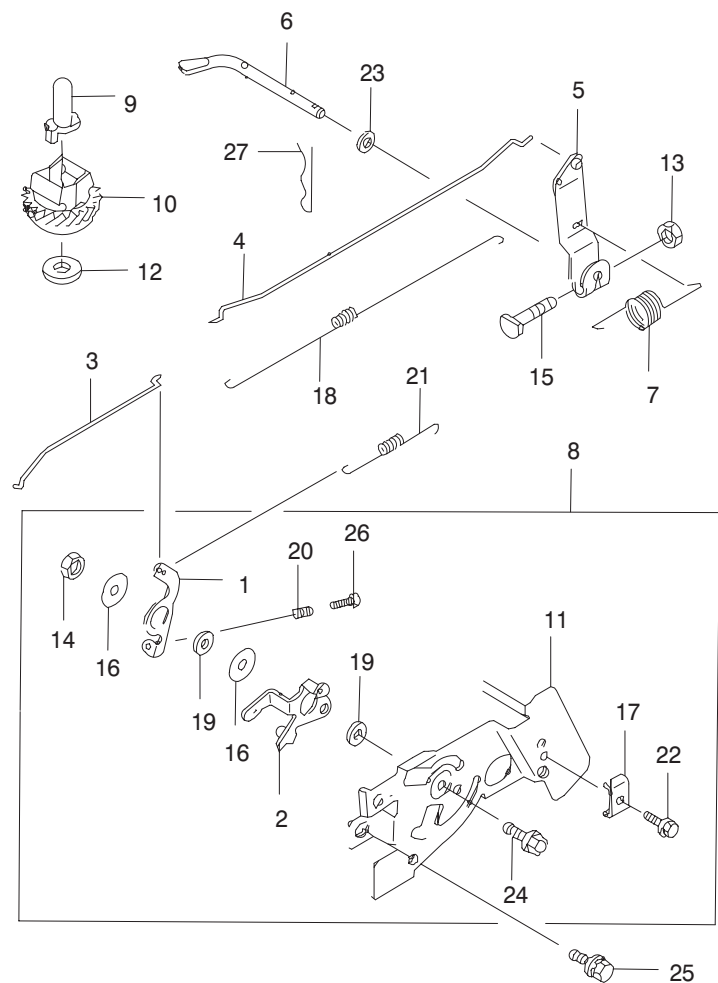 


Sheet No.:3b

Control Equipment

Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever
2	100-2701	1	Lever
3	100-2702	1	Link-Choke
4	100-2703	1	Link
5	100-2704	1	Arm-ASM
6	100-2705	1	Arm-Pivot
7	100-2706	1	Spring-Governor
8	100-2707	1	Panel-ASM Control
9	100-2708	1	Sleeve
10	93-8611	1	Governor ASM
11	100-2710	1	Panel-Control
12	93-8608	1	Washer
13	93-8631	3	Nut
14	93-8595	1	Nut
15	94-6842	1	Washer
16	100-2715	2	Washer 6x9x1.2
17	95-9849	1	Clamp
18	100-2717	1	Spring Link
19	100-2718	2	Collar 6x13x2.3
20	93-8588	1	Spring
21	100-2720	1	Spring
22	95-9853	1	Bolt
23	93-8608	1	Washer
24	95-9837	1	Bolt - Flanged
25	100-2724	2	Bolt-Upset-Wsp


Ref. No.	Part No.	Qty.	Description
26	100-2725	1	Screw-Pan
27	93-8607	1	Pin-Snap

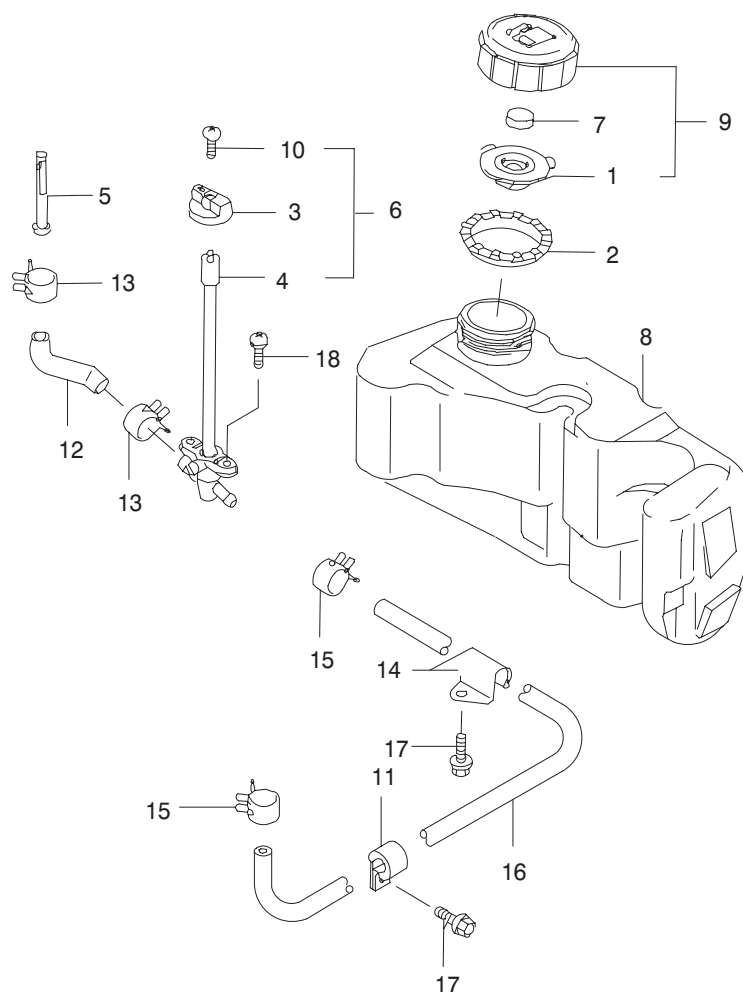 

Sheet No.:3c

Fuel Tank/Fuel Valve

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter Complete
5	100-2812	1	Filter Fuel
6	100-2814	1	Filter Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank Complete Fuel
9	100-2816	1	Cap-ASM-Tank
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube 4.8x10.3x433
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan-Wp

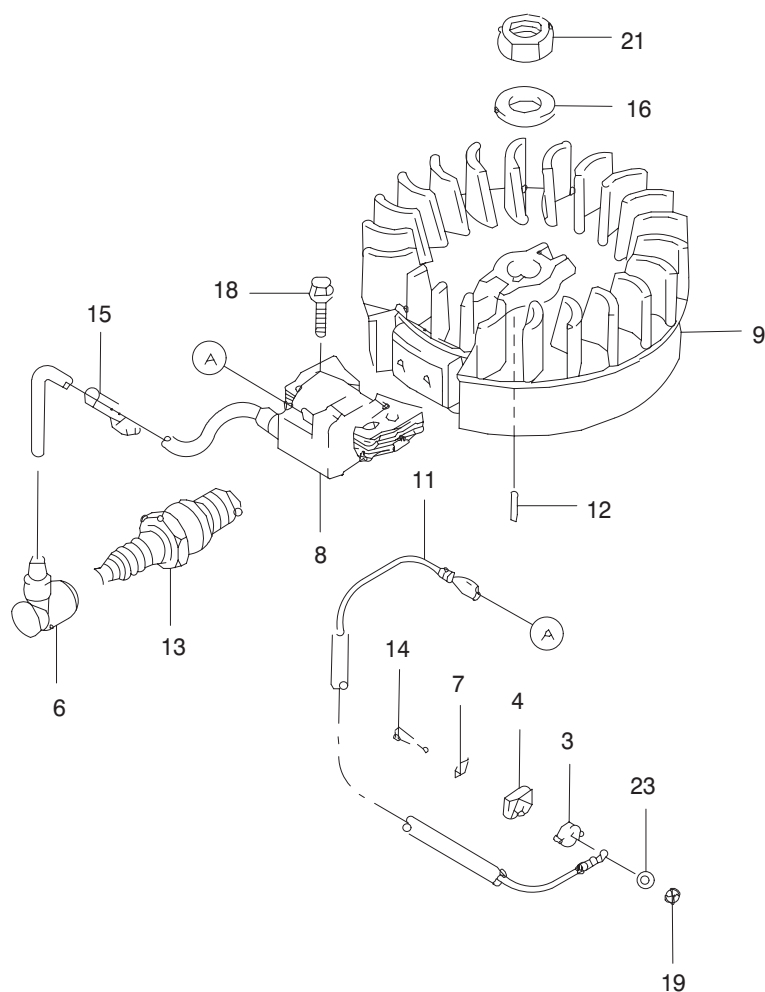 


Sheet No.:3d

Electric Equipment

Ref. No.	Part No.	Qty.	Description
3	100-2652	1	Cover
4	100-2653	1	Insulator
6	Kw10087	1	Cap Plug
7	100-2796	1	Terminal
8	100-2657	1	Coil ASM Ignition
9	100-2658	1	Flywheel Complete
11	100-2660	1	Wire Lead L=300mm
12	93-8571	1	Key
13	100-2662	1	Plug-Spark Bpr5es(Ngk)
14	100-2663	1	Bolt 4x20
15	100-2664	1	Clamp
16	100-2665	1	Washer
18	100-2610	2	Bolt Flanged
19	100-2668	1	Nut Hex
21	93-8568	1	Nut
23	100-2798	1	Washer Plain


Ref. No.	Part No.	Qty.	Description

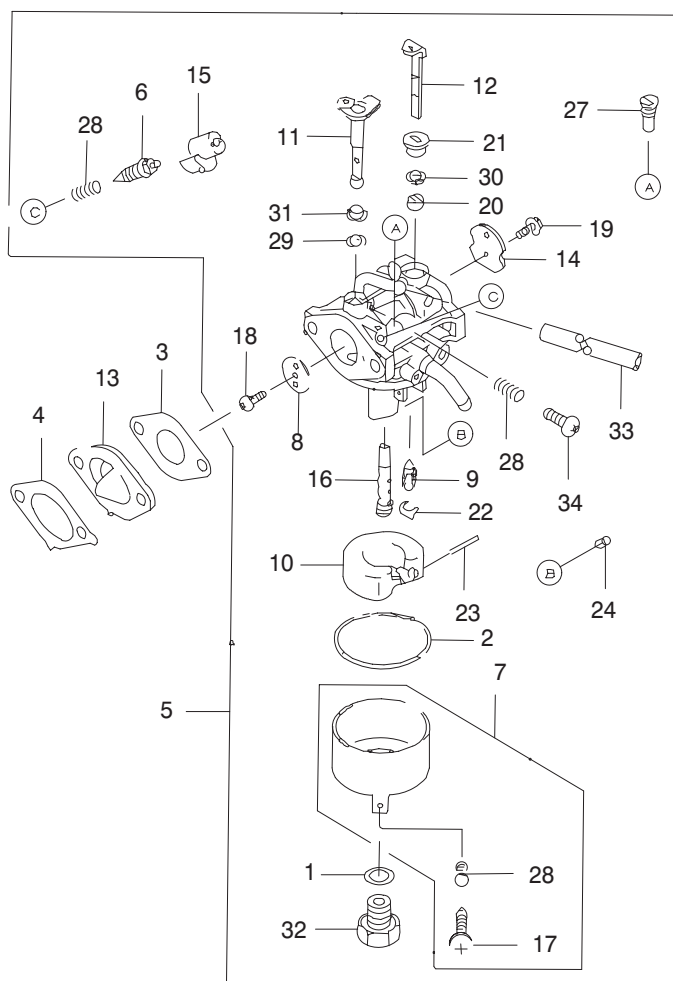 

Sheet No.:3e

Carburetor

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket	27	100-2635	1	Jet Pilot #37.5
2	100-2612	1	Gasket	28	100-2636	3	Spring
3	100-2613	1	Gasket Carburetor	29	100-2637	1	Seal
4	100-2614	1	Gasket Insulator	30	100-2638	1	Seal
5	100-2615	1	Carburetor ASM	31	100-2639	1	Collar
6	100-2616	1	Screw Pilot Air	32	100-2640	1	Bolt
7	100-2617	1	Chamber Float	33	100-2641	1	Tube 4x7x125
8	100-2618	1	Valve Throttle	34	100-2642	1	Screw Pan
9	100-2619	1	Valve Float				
10	100-2620	1	Float				
11	100-2621	1	Shaft Carburetor Throttle				
12	100-2622	1	Shaft Carburetor Choke				
13	100-2623	1	Insulator				
14	100-2624	1	Valve				
15	100-2625	1	Limit				
16	100-2626	1	Nozzle Main				
17	100-2627	1	Screw				
18	100-2628	1	Screw				
19	100-2629	2	Screw				
20	100-2630	1	Collar				
21	100-2631	1	Collar				
22	Kw10297	1	Clip				
23	100-2633	1	Pin				
24	100-2634	1	Jet Main #62.5				

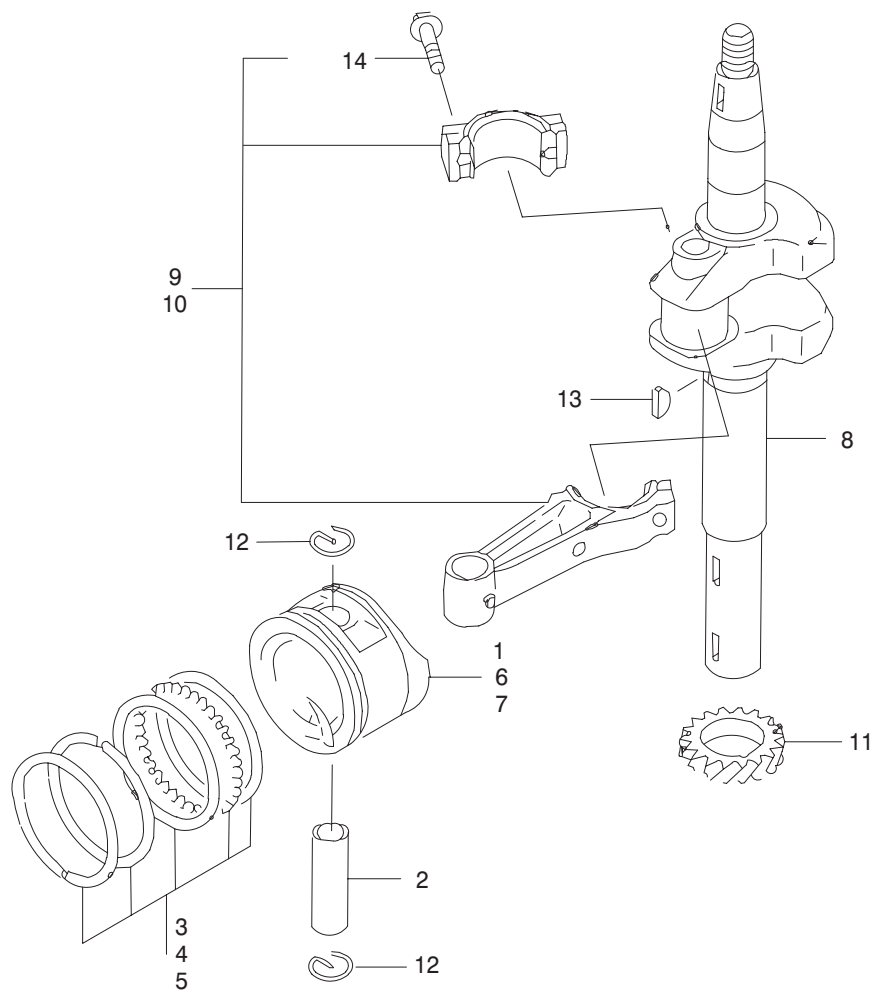 


Sheet No.:3f

Piston/Crankshaft

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Ring Set Piston
4	100-2675	1	Ring Set Piston L0.25
5	100-2676	1	Ring Set Piston L0.50
6	100-2677	1	Piston Engine L0.25
7	100-2678	1	Piston Engine L0.50
8	100-2828	1	Crankshaft
9	100-2680	1	Rod ASM Connecting
10	100-2681	1	Rod ASM Connecting U/S=0.50
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod


Ref. No.	Part No.	Qty.	Description

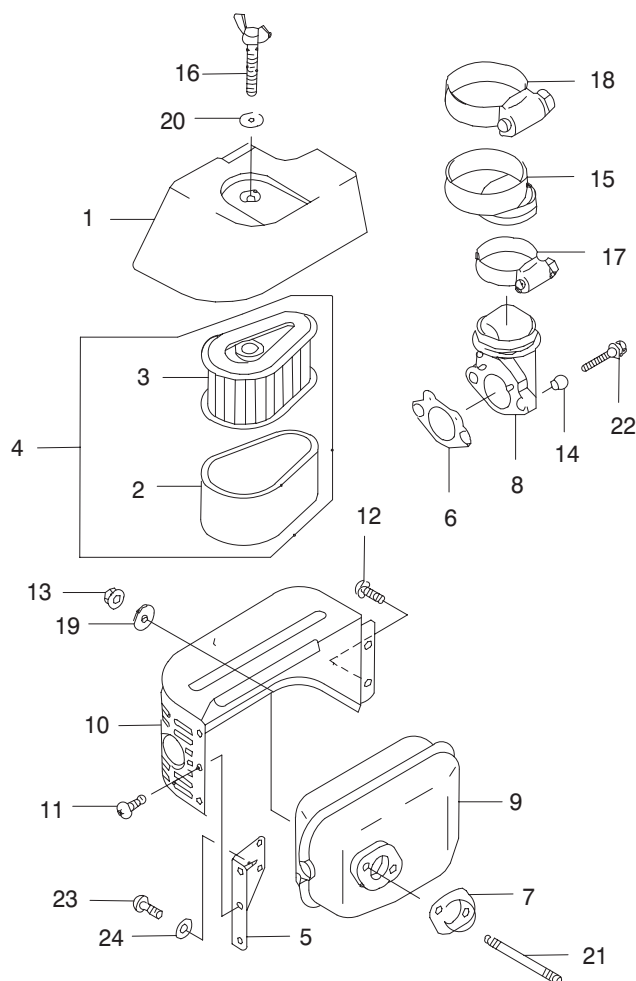 

Sheet No.:3g

Air Filter/Muffler

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap Air Filter				
2	100-2692	1	Element Air Filter				
3	100-2693	1	Element Air Filter				
4	100-2694	1	Element ASM Air Filter				
5	100-2695	1	Bracket				
6	100-2696	1	Gasket Intake Pipe				
7	100-2697	1	Gasket Muffler				
8	100-2698	1	Pipe-Intake				
9	100-2699	1	Muffler Complete				
10	100-2750	1	Cover Muffler				
11	93-8549	3	Screw				
12	95-9716	2	Screw				
13	93-8631	2	Nut				
14	100-2754	2	Spacer 6.2x7.8x8				
15	100-2755	1	Tube				
16	100-2756	1	Bolt				
17	100-2757	1	Clamp				
18	100-2758	1	Clamp				
19	100-2759	2	Washer 7x21x2.3				
20	100-2760	1	Washer 6.5x18x2.0				
21	100-2761	2	Bolt-Stud				
22	100-2762	2	Bolt Upset Wp				
23	100-2763	2	Screw Pan				
24	93-8639	2	Washer				


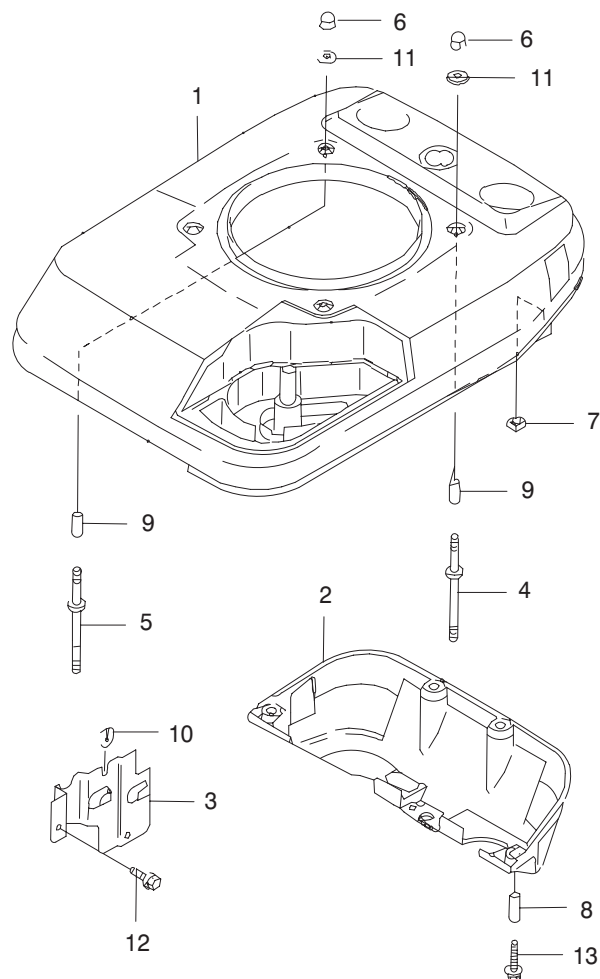 


Sheet No.:3h

Cooling Equipment

Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover Upper
2	100-2793	1	Cover Lower
3	100-2794	1	Cover
4	100-2601	3	Stud
5	100-2602	1	Stud
6	100-2603	4	Nut
7	100-2604	4	Nut 6mm
8	100-2606	4	Spacer 6.2x7.8x17
9	100-2605	4	Spacer 6.2x7.8x22
10	100-2607	1	Grommet
11	100-2760	4	Washer 6.5x18x2.0
12	100-2609	2	Bolt Flanged
13	100-2610	4	Bolt Flanged

Ref. No.	Part No.	Qty.	Description

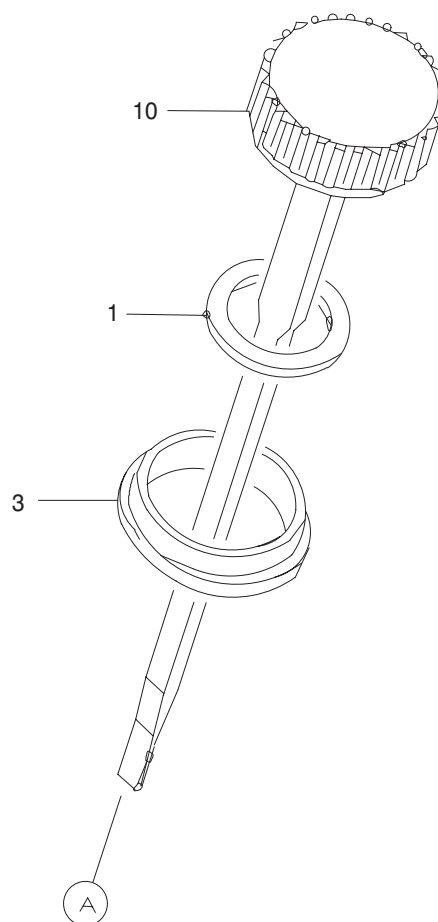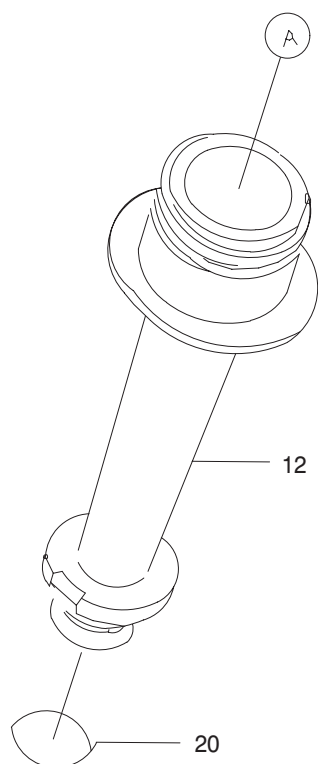  


Sheet No.:3i

Lubrication Equipment

Ref. No.	Part No.	Qty.	Description
1	Kw10010	1	Gasket
3	100-2687	1	Guide
10	100-2688	1	Gauge
12	100-2689	1	Filler
20	100-2690	1	O-Ring
*21	100-2831	1	O Ring
*22	100-2830	1	Cover
*23	100-2804	3	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

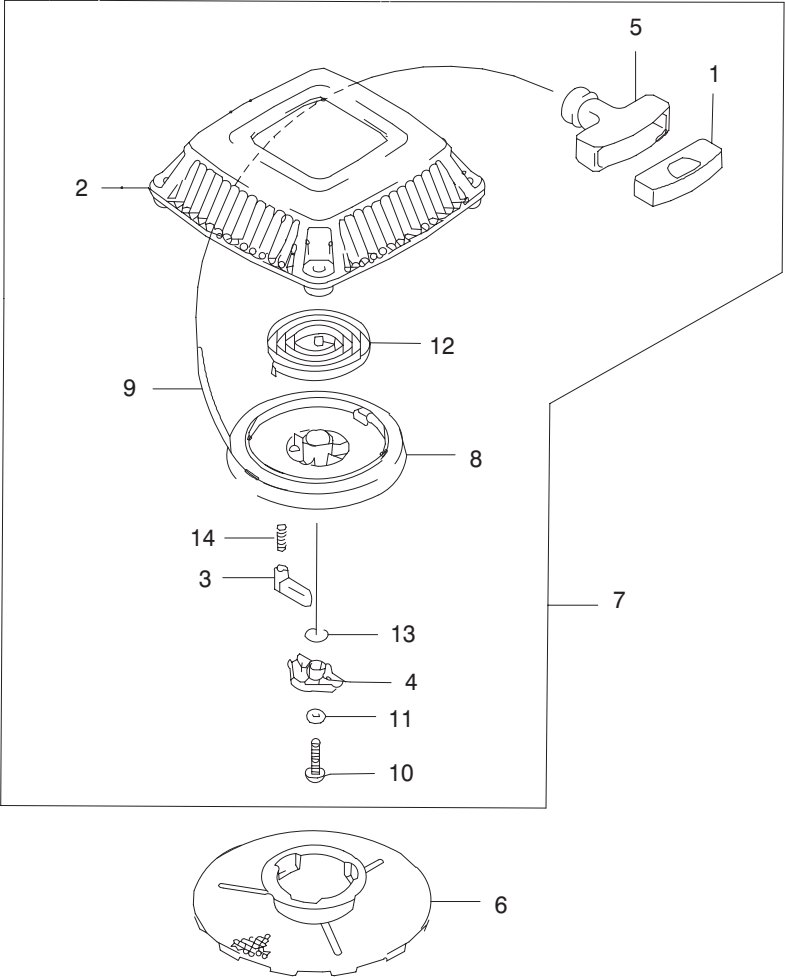


Sheet No.:3j

Starter

Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap – Grip
2	100-2766	1	Holder
3	100-2767	1	Pawl Recoil Starter
4	100-2768	1	Retainer-Spring
5	100-2769	1	Grip Recoil Starter
6	100-2770	1	Pulley-Starting
7	100-2837	1	Starter Recoil
8	100-2772	1	Reel Recoil Starter
9	100-2773	1	Rope 3.8x1400
10	100-2774	1	Screw 5x18
11	100-2775	1	Washer 5x12.8x1.2
12	100-2776	1	Spring Recoil
13	100-2777	1	Spring
14	93-8555	1	Spring-Return

Ref. No.	Part No.	Qty.	Description

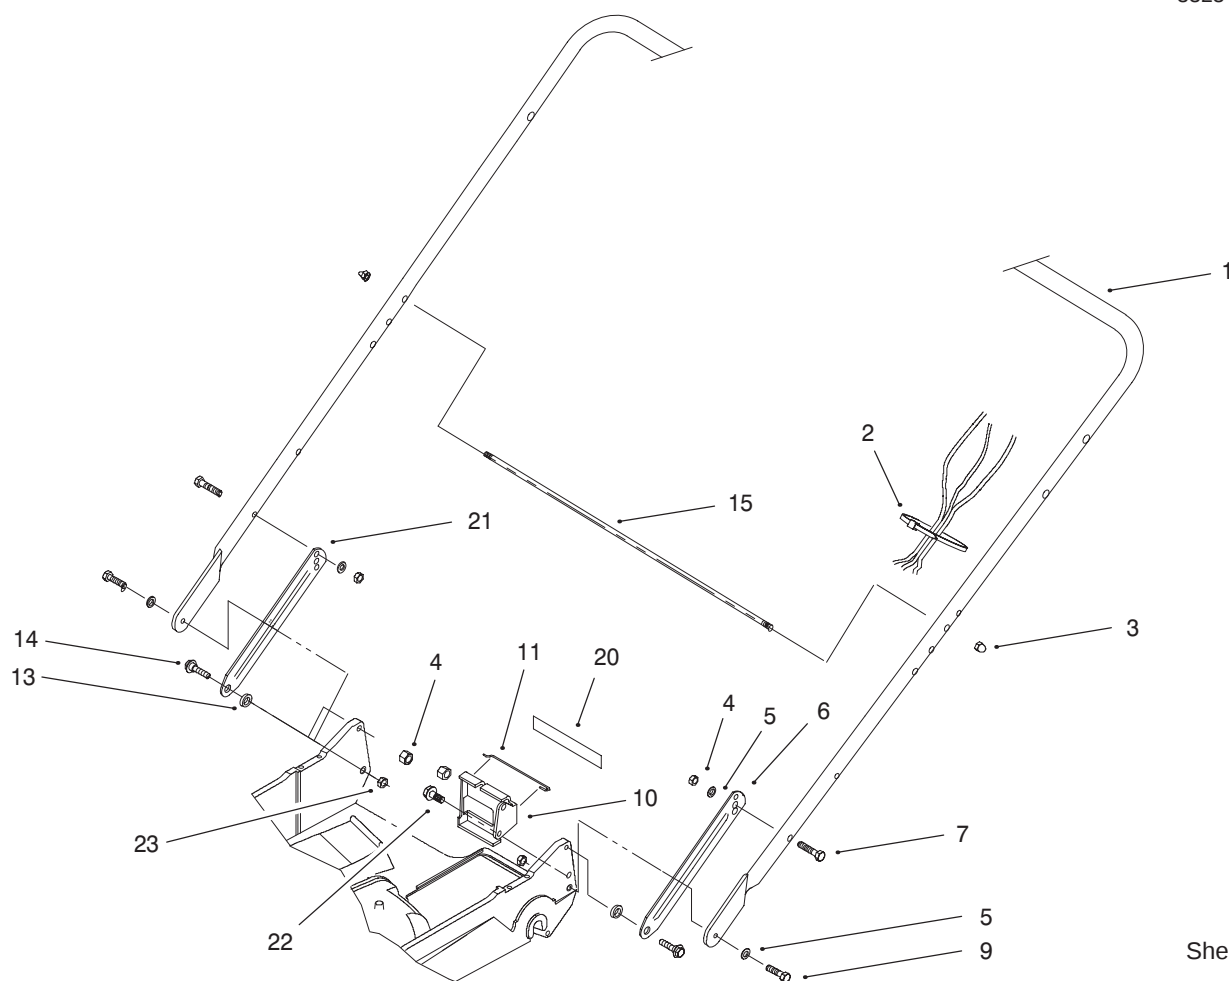 


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290-378	3	Tie-Cable
3	32111-7	2	Nut-Cap
4	3296-29	4	Nut-Lock NI
5	3290-456	4	Washer-Belleville
6	100-3298-03	1	Latch-LH Handle
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741-03	1	Brkt-Traction Adj.
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer-Handle Latch
14	27-7210	2	Screw-Shoulder
15	48-2810	1	Rod-Bag Support
20	74-1970	1	Decal - Gear Position
21	100-3297-03	1	Latch-RH Handle
22	32144-70	1	Screw-Taptite
23	3296-47	2	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description

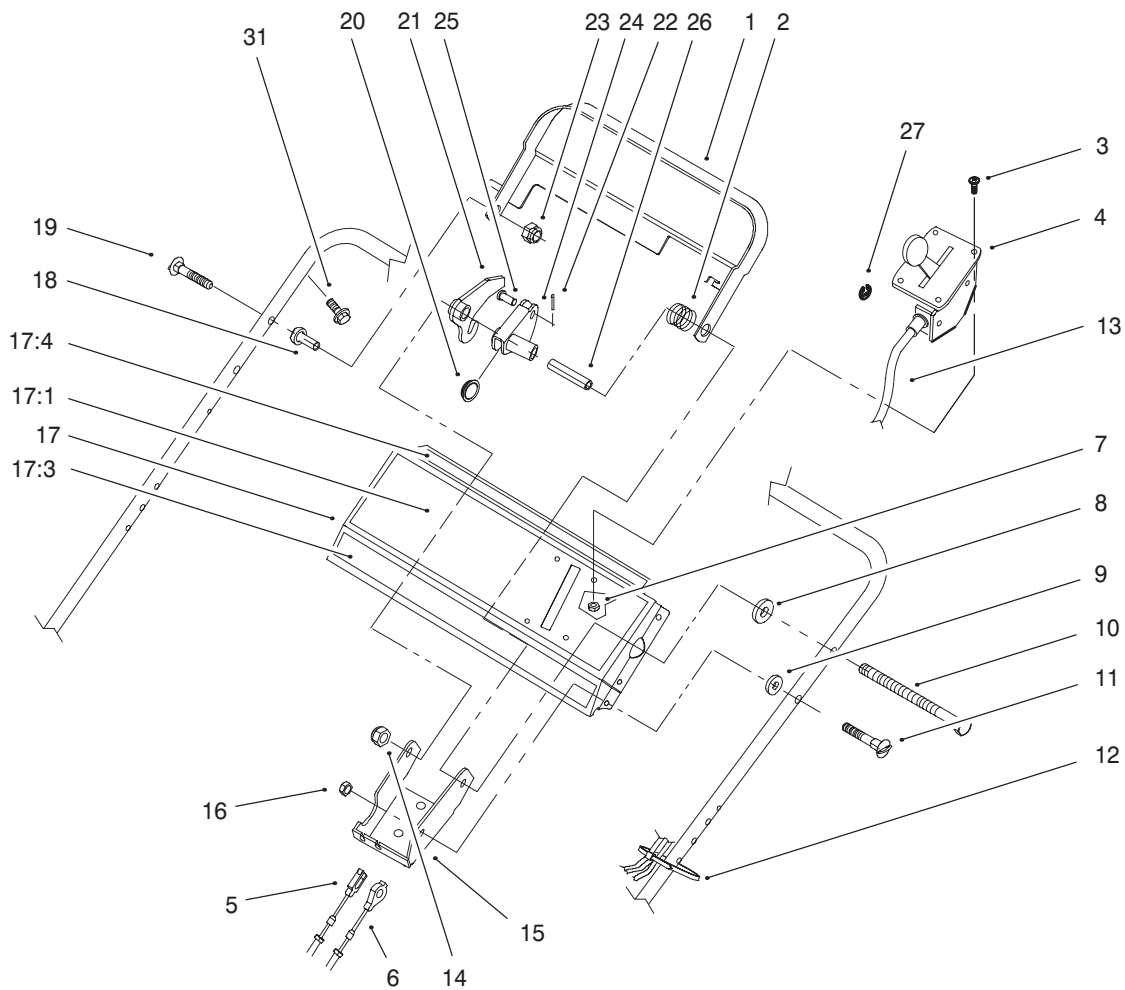 


Sheet No.:5

Panel & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	84-8940-03	1	Control Bar Wa
2	85-6750	1	Spring-Control
3	3250-12	4	Screw-PPH
4	85-6770	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	4	10-24 Lt Esna
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	1	Tie-Cable
13	100-2839	1	Cable-Throttle
14	3296-29	1	Nut-Lock NI
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock NI
17	14-7709	1	Panel w/Decals
17:1	85-6730	1	Decal-Panel
17:3	85-6720	1	Decal-Proline Panel
17:4	63-9060	1	Decal-Danger
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw-Hdle
20	86-9320	1	Bushing-Nylon Flange
21	84-9000	1	Traction Lever Wa
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description
24	84-8990	1	Bbc Lever Wa
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Control Bracket
27	32151-86	1	E-Ring - Throt & Tract
31	32104-76	6	Screw-Acorn Slot

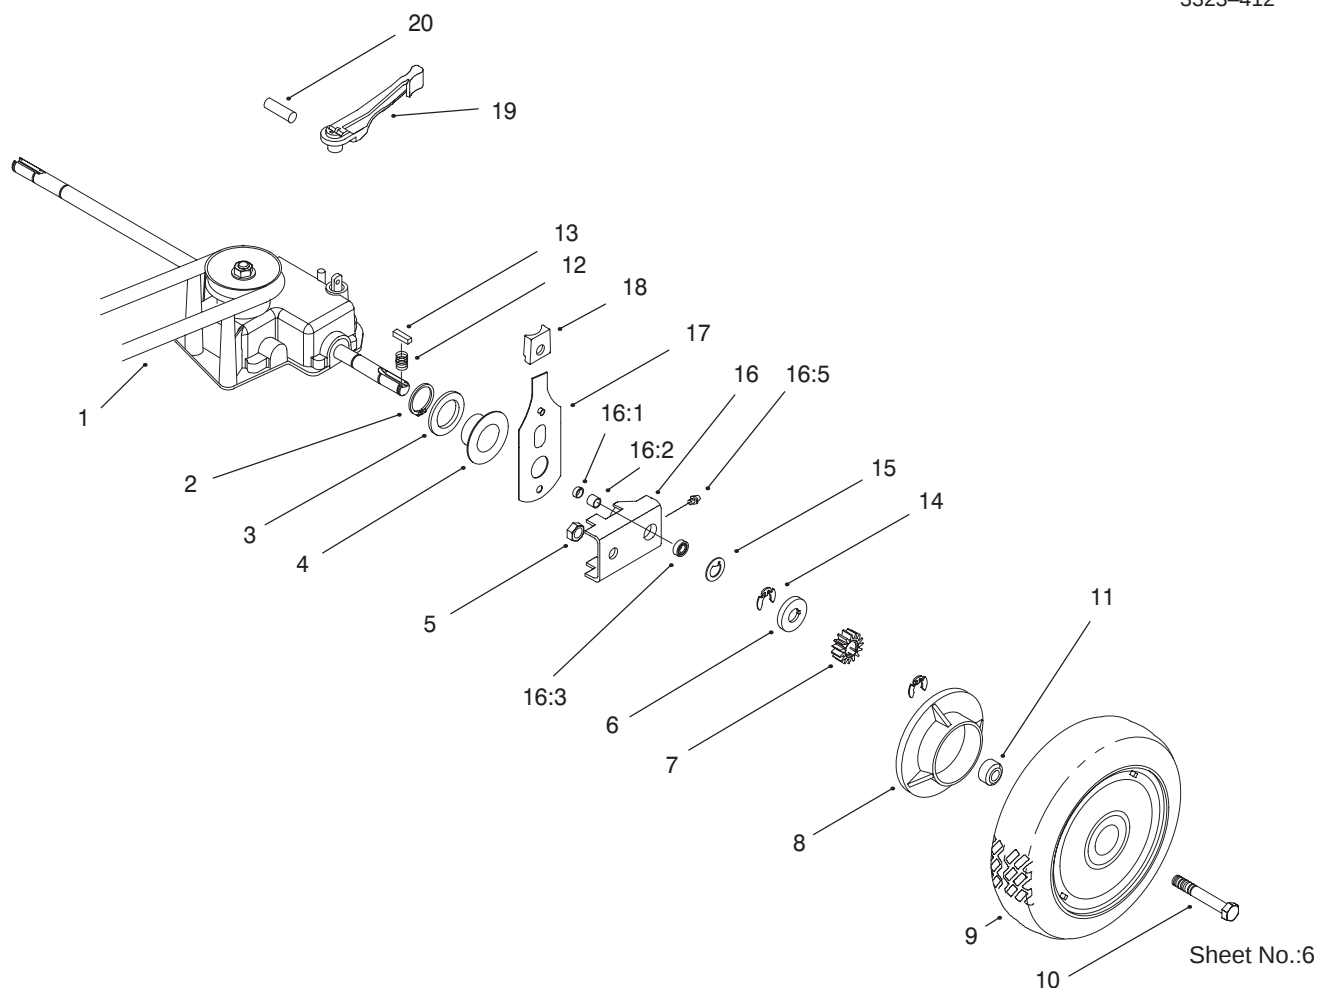 

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Outer Thrust
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM Sp
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Wheel Cover
12	39-9650	2	Spring-Comp
13	612066	2	Key Burg-Nort
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Outer Thrust
16	74-1851	2	Pivot Arm Assembly
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk - Special Drive
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Coil

Ref. No.	Part No.	Qty.	Description

Exploded view diagram of a mechanical assembly. The components are labeled as follows:


- 1: Main housing or flange.
- 2:1:1: A cylindrical component with a flange.
- 2:1:2: A long cylindrical shaft or tube.
- 2:1:3: A small circular washer or spacer.
- 2:2: A small bolt or screw.
- 2:3: A small nut.
- 2:4: A circular flange or cover plate.
- 2:5: A circular flange or cover plate.

The diagram shows the assembly sequence and relative positions of these parts.

Bagging Assembly

Ref. No.	Part No.	Qty.	Description

 22

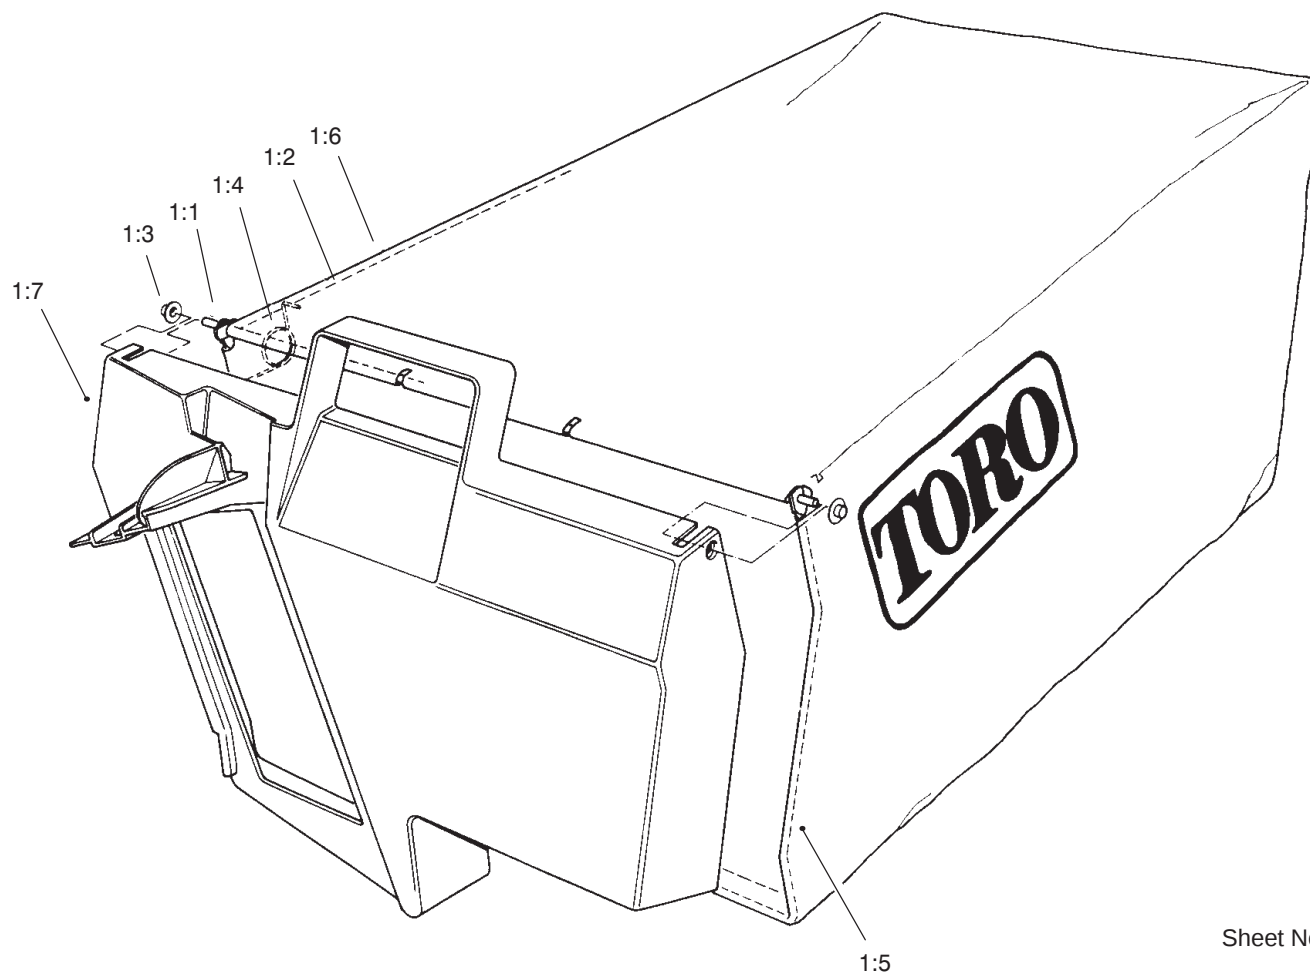

Sheet No.:6b

Bagging Assembly

Ref. No.	Part No.	Qty.	Description
*	99-2535	1	Grass Bag Assy-Service Only
1:1	33-4820	1	Hinge-Bag Door
1:2	42-4030	1	Frame-Upper Bag
1:3	3290-422	2	Nut-Push
1:4	36-6910	2	Spring
1:5	42-4020	1	Frame-Bag
1:6	98-9222	1	ASM - Grass Bag
1:7	48-2840	1	Door-grass Bag

*Not illustrated

