

TORO

MODEL NO. 59112

INSTALLATION
INSTRUCTIONS**SIDE DISCHARGE KIT**

Since this instruction sheet covers only a minimal amount of information necessary to maintain and operate your machine, we suggest that you keep this material with your Operator's Manual so that both may be referred to for instructions concerning safe operation and proper maintenance procedures.

ASSEMBLE CHUTE

1. Secure chute hanger bracket to discharge chute with stress plate, (2) washer head capscrews and locknuts as shown in fig.1.

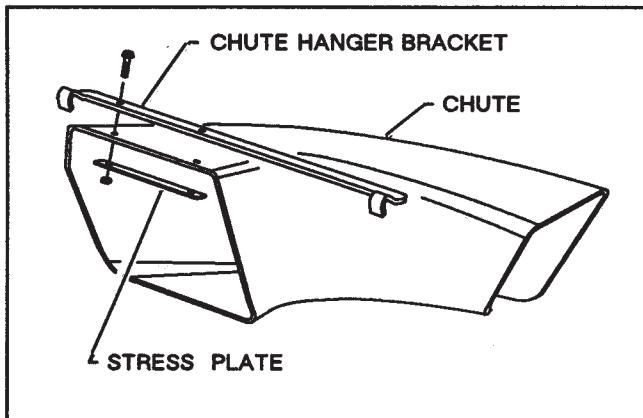


Figure 1

MOUNT SIDE DISCHARGE CHUTE

1. Be sure engine has stopped running so cutter blade is not moving.
2. Raise discharge door and hook chute hanger bracket onto hinge pins (Fig.2). Allow chute to rest on mower housing over discharge opening.

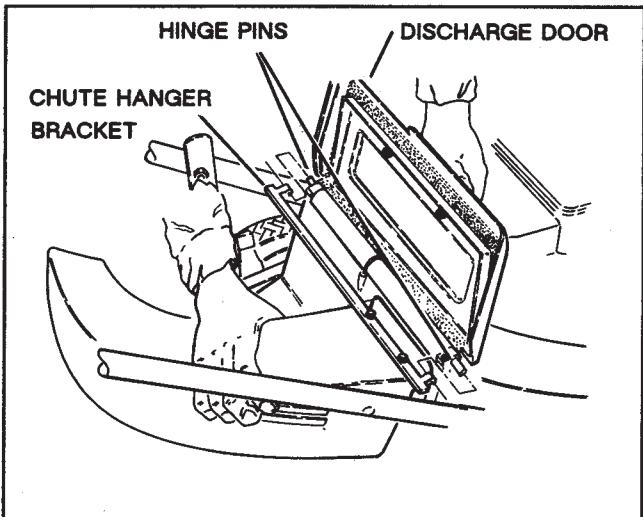


Figure 2

3. Close door, allowing it to rest on top of chute (Fig.3).

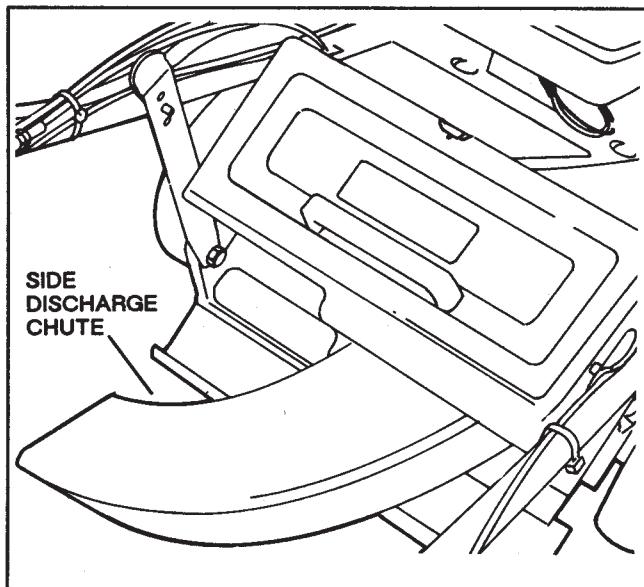


Figure 3

OPERATION

1. Keep hands and feet away from chute and mower while engine is running.
2. In tall grass or extreme conditions, mow area in a clockwise direction so grass clippings are discharged onto cut area and not recut.
3. See Operator's Manual for mowing operation instructions.