



**Count on it.**

Form No. 3398-356 Rev C

# Parts Catalog

## Reelmaster® 3100-D

### Traction Unit With Sidewinder®

Model No. 03171—Serial No. 316000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                       |    |
|-------------------------------------------------------|----|
| Frame and Platform Assembly . . . . .                 | 5  |
| Front Wheel and Brake Assembly . . . . .              | 6  |
| Hydraulic Motor Assembly No. 110-8785 . . . . .       | 8  |
| Hydraulic Motor Assembly No. 110-8786 . . . . .       | 9  |
| Brake Assembly No. 104-7705 . . . . .                 | 10 |
| Steering Column Assembly . . . . .                    | 11 |
| Steering Valve Assembly No. 121-7856 . . . . .        | 12 |
| Rear Fork and Tire Assembly . . . . .                 | 13 |
| Hydraulic Cylinder Assembly No. 94-8141 . . . . .     | 15 |
| Hydraulic Motor Assembly No. 95-8694 . . . . .        | 16 |
| Control Panel Assembly . . . . .                      | 17 |
| Front Platform Assembly . . . . .                     | 18 |
| Traction Pedal Assembly . . . . .                     | 19 |
| Control Valve Installation Assembly . . . . .         | 20 |
| Valve Assembly No. 95-8581 . . . . .                  | 21 |
| Rear Lift Arm Assembly . . . . .                      | 22 |
| Hydraulic Cylinder Assembly No. 112-9916 . . . . .    | 24 |
| Neutral Arm Assembly . . . . .                        | 25 |
| Engine Assembly . . . . .                             | 26 |
| Air Cleaner and Muffler Assembly . . . . .            | 27 |
| Air Cleaner Assembly No. 93-2190 . . . . .            | 28 |
| Radiator Assembly . . . . .                           | 29 |
| Hood Assembly . . . . .                               | 30 |
| Fuel System Assembly . . . . .                        | 31 |
| Manifold Block Assembly . . . . .                     | 33 |
| Hydraulic Manifold Assembly No. 108-9037 . . . . .    | 34 |
| Hydraulic Tank Assembly . . . . .                     | 35 |
| Hydrostat Assembly . . . . .                          | 36 |
| Hydraulic Pump Assembly No. 104-4890 . . . . .        | 38 |
| Gear Pump Assembly No. 95-8601 . . . . .              | 40 |
| Carrier Assembly . . . . .                            | 41 |
| Scissor Assembly . . . . .                            | 43 |
| Reel Motor Assembly . . . . .                         | 44 |
| Gear Motor Assembly No. 115-8250 . . . . .            | 45 |
| Battery Assembly . . . . .                            | 46 |
| Parking Brake Assembly . . . . .                      | 47 |
| Seat Assembly . . . . .                               | 48 |
| Crankcase Assembly . . . . .                          | 49 |
| Oil Pan and Dipstick Assembly . . . . .               | 50 |
| Cylinder Head Assembly . . . . .                      | 51 |
| Gear Case and Oil Filter Cartridge Assembly . . . . . | 52 |
| Cylinder Head Cover Assembly . . . . .                | 53 |
| Main Bearing Case Assembly . . . . .                  | 54 |
| Camshaft and Idle Gear Shaft Assembly . . . . .       | 55 |
| Piston and Crankshaft Assembly . . . . .              | 56 |
| Fuel Camshaft and Governor Shaft Assembly . . . . .   | 57 |
| Idle Apparatus Assembly . . . . .                     | 58 |
| Stop Solenoid and Fuel Pump Cover Assembly . . . . .  | 59 |
| Injection Pump Assembly . . . . .                     | 60 |
| Governor Assembly . . . . .                           | 61 |
| Speed Control Plate Assembly . . . . .                | 62 |
| Nozzle Holder and Glow Plug Assembly . . . . .        | 63 |
| Nozzle Holder Assembly . . . . .                      | 64 |
| Alternator, Pulley and Fan Assembly . . . . .         | 65 |

# Contents (continued)

Alternator Components Assembly ..... 66

Starter and Flywheel Assembly ..... 67

Starter Component Assembly ..... 68

Water Flange and Thermostat Assembly ..... 69

Water Pump and Water Pipe Assembly ..... 70

Valve and Rocker Arm Assembly ..... 71

 
Inlet and Exhaust Manifold Assembly ..... 72

Miscellaneous Engine Parts ..... 73

Upper Engine Gasket Kit ..... 74

Lower Engine Gasket Kit ..... 75


Attachments and Accessories ..... 76

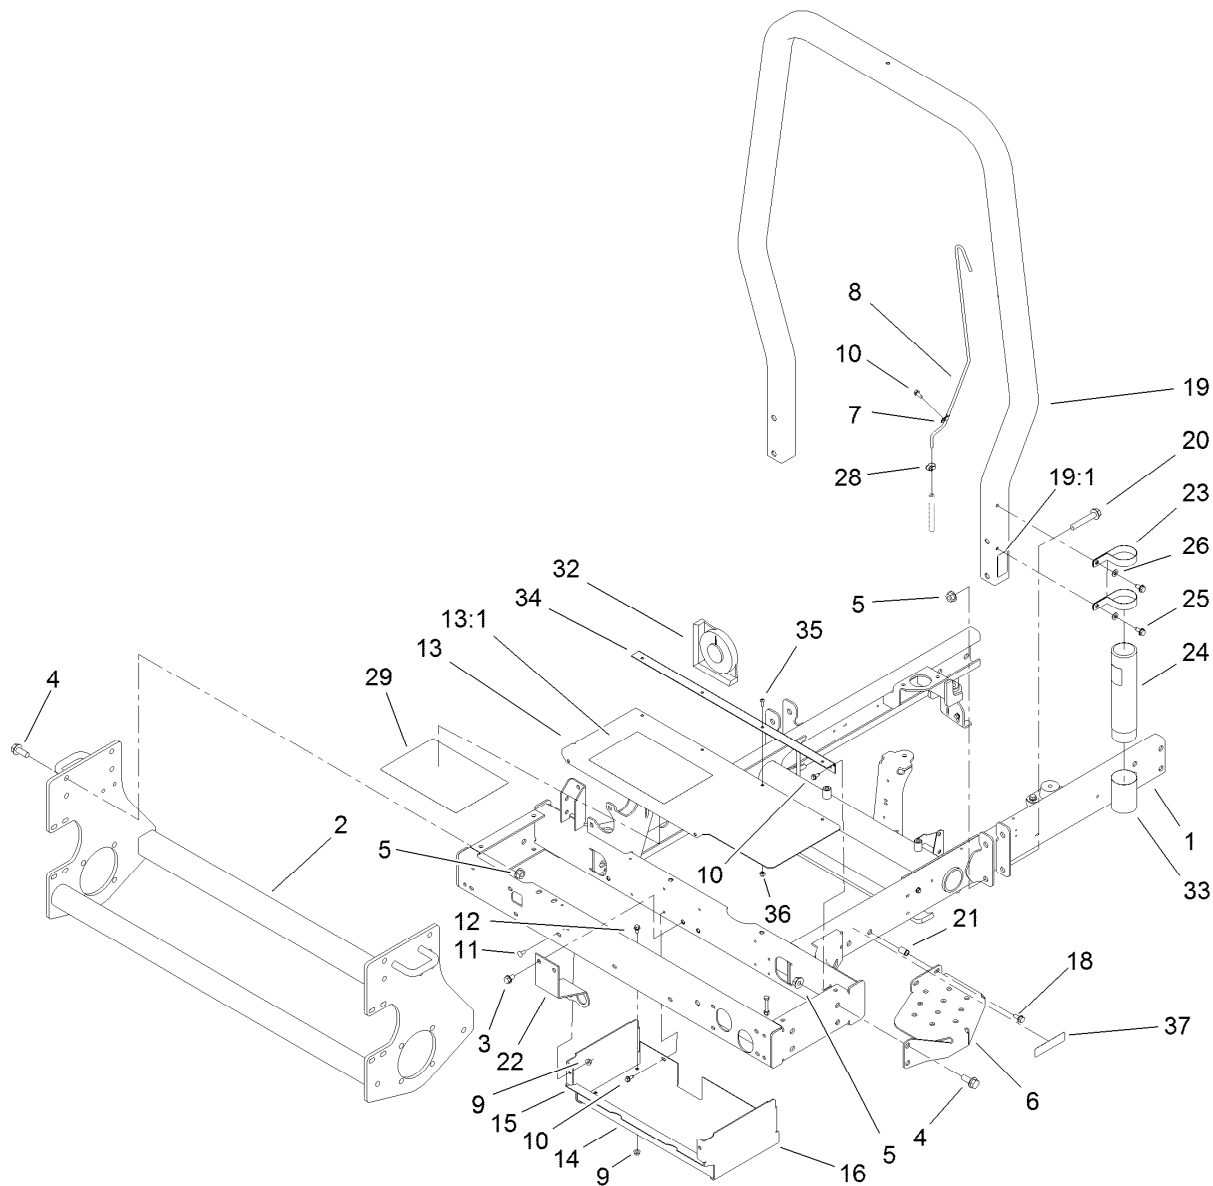

## Frame and Platform Assembly

| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 1    | 95-8590-03  | 1    | Frame ASM                      |
| 2    | 95-8568-03  | 1    | Frame-Lower                    |
| 3    | 32144-15    | 2    | Screw-HHFTF                    |
| 4    | 3234-38     | 8    | Screw-HHF                      |
| 5    | 32128-49    | 12   | Nut-HHF                        |
| 6    | 99-3375-03  | 1    | Step                           |
| 7    | 2412-72     | 3    | Clip-Closed, Insulated         |
| 8    | 95-8615     | 1    | Tube-Breather                  |
| 9    | 32128-33    | 6    | Nut-HF                         |
| 10   | 32144-10    | 11   | Screw-HWH                      |
| 11   | 3229-11     | 2    | Screw-CARR                     |
| 12   | 3234-13     | 4    | Screw-HHF                      |
| 13   | 119-2029    | 1    | Toolbox Cover ASM              |
| 13:1 | 121-3596    | 1    | Decal -Danger, Reelmaster (CE) |
| 13:1 | 99-3496     | 1    | Decal-Danger                   |
| 14   | 99-3430-03  | 1    | Bottom-Toolbox                 |
| 15   | 99-3431-03  | 1    | End-Toolbox, RH                |
| 16   | 99-3432-03  | 1    | End-Toolbox, LH                |
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 18   | 3234-5      | 2    | Screw-HHF                 |
| 19   | 107-7833    | 1    | ROPS ASM                  |
| 19:1 | 107-7831    | 1    | Decal-ROPS                |
| 20   | 3234-40     | 4    | Screw-HF                  |
| 21   | 32148-8     | 2    | Nut-Clinch                |
| 22   | 115-3417-03 | 1    | Bracket-Bulkhead, Scissor |
| 23   | 104-7050    | 1    | Tube-Manual               |
| 24   | 2412-133    | 2    | Clamp-R                   |
| 25   | 32144-70    | 2    | Screw-HWHTF               |
| 26   | 3256-23     | 2    | Washer-Plain              |
| 28   | 2412-108    | 1    | Clamp-Worm                |
| 29   | 121-3607    | 1    | Decal-Service             |
| 32   | 99-3503     | 1    | Indicator-Angle           |
| 33   | 104-7048    | 1    | Cap-Housing               |
| 34   | 119-2034    | 1    | Hinge-Toolbox             |
| 35   | 119-6906    | 4    | Screw-HSBH                |
| 36   | 3296-42     | 4    | Nut-Lock, NI              |
| 37   | 117-2718    | 1    | Decal-Arrester, Spark     |

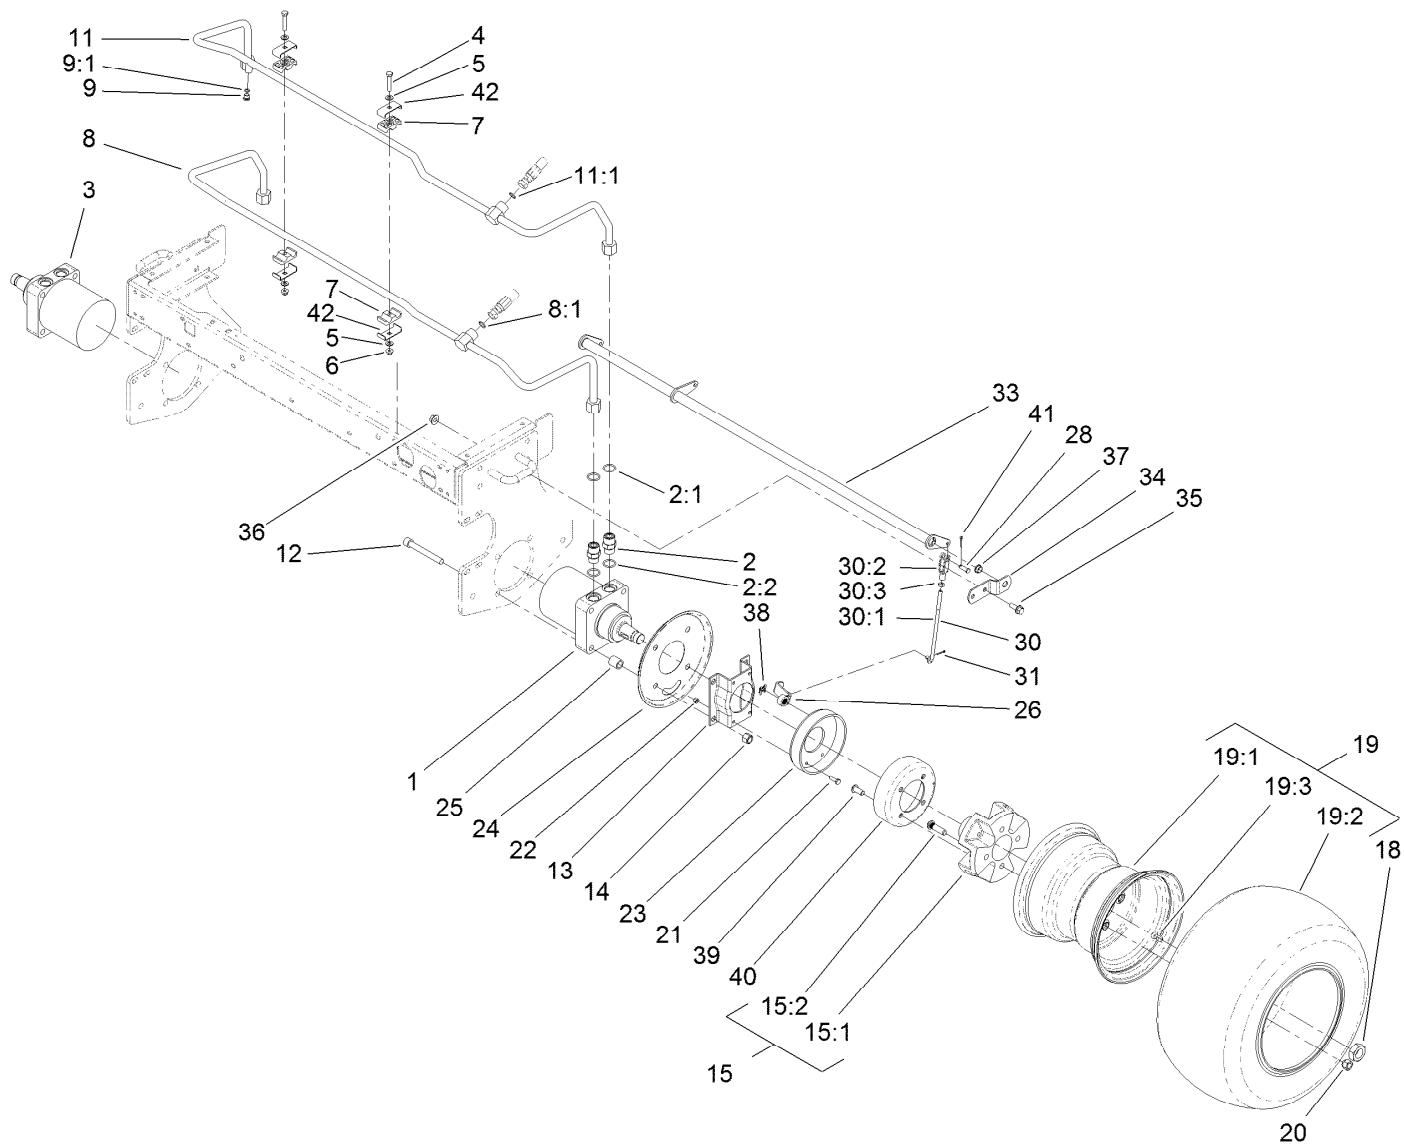


## Front Wheel and Brake Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 110-8785    | 1    | HYD Motor ASM (CCW) |
| 2    | 340-7       | 4    | Fitting-Straight    |
| 2:1  | 237-65      | 1    | O-Ring              |
| 2:2  | 237-80      | 1    | O-Ring              |
| 3    | 110-8786    | 1    | HYD Motor ASM (CW)  |
| 4    | 322-9       | 2    | Screw-HH            |
| 5    | 3256-23     | 4    | Washer-Plain        |
| 6    | 3296-29     | 2    | Nut-Lock, NI        |
| 7    | 56-7971     | 4    | Clamp-Tube          |
| 8    | 95-8783     | 1    | Tube ASM            |
| 8:1  | 237-65      | 1    | O-Ring              |
| 9    | 353-990     | 1    | Plug ASM            |
| 9:1  | 237-78      | 1    | O-Ring              |
| 11   | 95-8784     | 1    | Tube ASM            |
| 11:1 | 237-65      | 1    | O-Ring              |
| 12   | 3274-99     | 8    | Screw-HSH           |
| 13   | 84-2000-03  | 2    | Bracket-Brake       |
| 14   | 3296-23     | 8    | Nut-Lock, NI        |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 15   |             | 2    | Wheel Hub / Stud ASM ● |
| 15:1 | 104-0462    | 1    | Hub-Wheel, Spacer      |
| 15:2 | 10-6830     | 4    | Stud-Type, Drive       |
| 18   | 26-3790     | 2    | Nut-Lock               |
| 19   |             | 2    | Tire And Rim ASM ●     |
| 19:1 | 121-3548    | 1    | Rim                    |
| 19:2 | 117-5125    | 1    | Tire                   |
| 19:3 | 232-27      | 1    | Stem-Valve             |
| 20   | 242-50      | 8    | Nut-Lug                |
| 21   | 321-5       | 8    | Screw-HH               |
| 22   | 3296-42     | 8    | Nut-Lock, NI           |
| 23   | 104-7705    | 2    | Brake ASM              |
| 24   | 104-0485-03 | 2    | Shield-Wheel           |
| 25   | 119-8238    | 8    | Spacer-Deck Pulley     |
| 26   | 114-2726    | 2    | Lever-Brake            |
| 28   | 283-1       | 2    | Pin-Clevis             |
| 30   | 115-6672    | 2    | Brake Lever ASM        |
| 30:1 | 104-4627    | 1    | Rod-Adjusting          |

 ● Not serviced separately

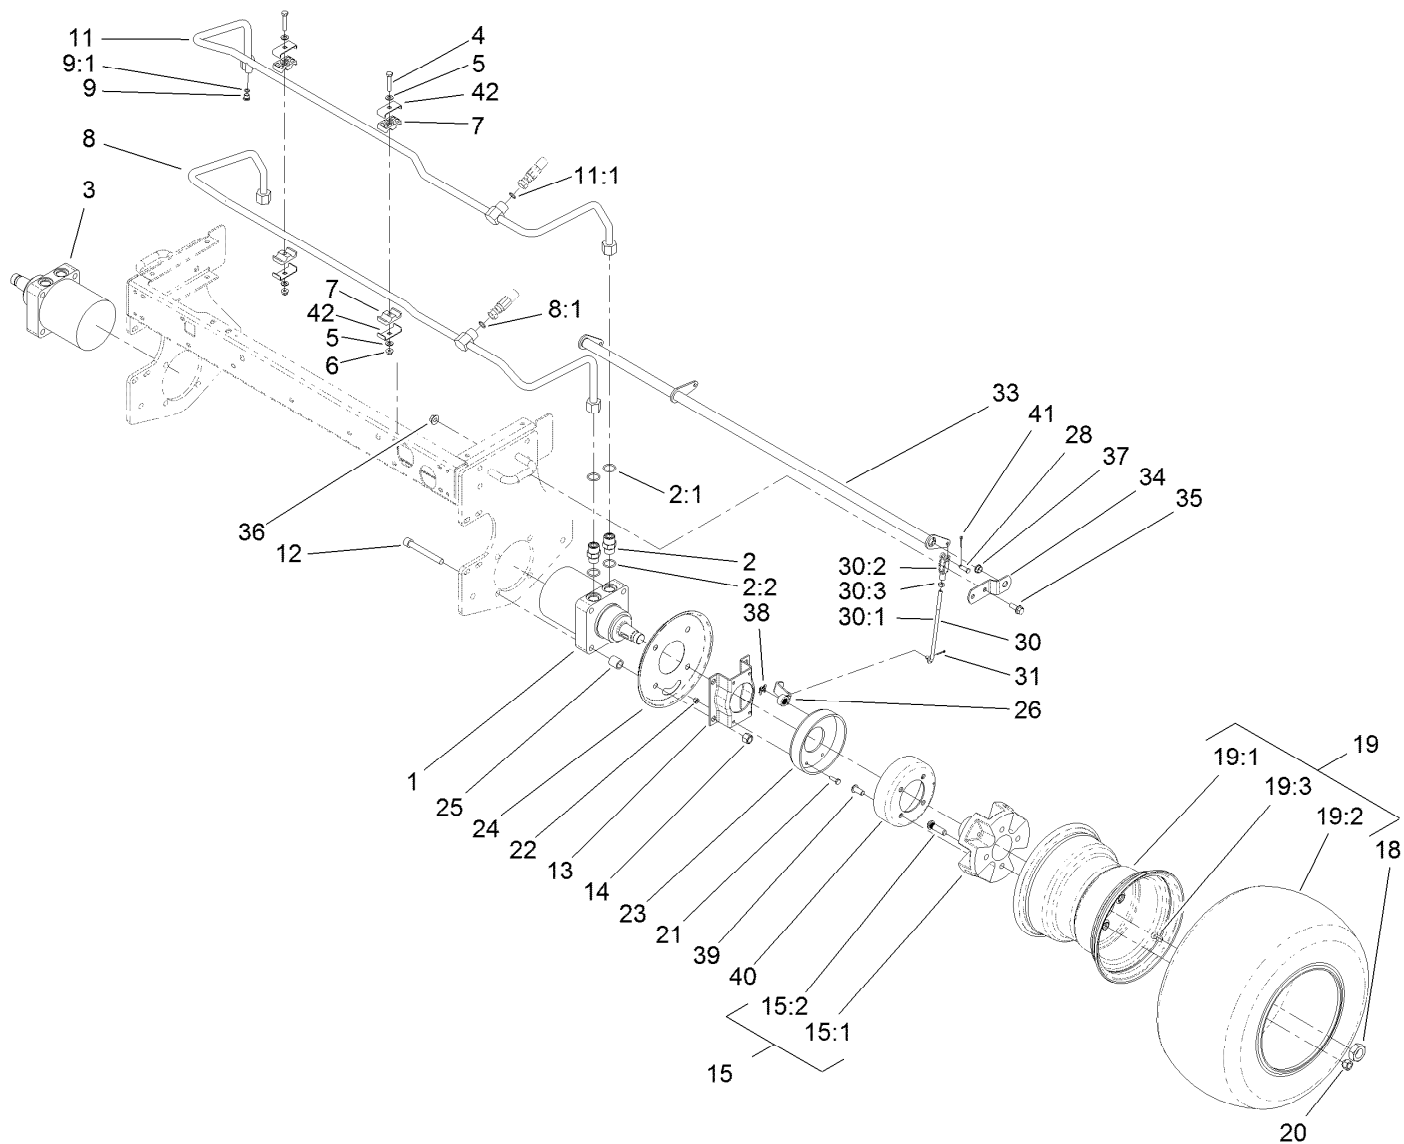


## Front Wheel and Brake Assembly (continued)

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 30:2 | 1-303105    | 1    | Yoke-Adjustable      |
| 30:3 | 3220-2      | 1    | Nut-Jam              |
| 31   | 3272-6      | 2    | Pin-Cotter           |
| 33   | 104-4625-03 | 1    | Shaft-Pivot, Brake   |
| 34   | 95-8683     | 2    | Bracket-Pivot, Brake |
| 35   | 3234-11     | 4    | Screw-HHF            |
| 36   | 32128-43    | 4    | Nut-Flange           |

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 37   | 256-156     | 2    | Bushing-Flange |
| 38   | 104-7706    | 2    | E-Ring, Bowed  |
| 39   | 3274-105    | 8    | Screw-HSBH     |
| 40   | 104-4809    | 2    | Drum-Brake     |
| 41   | 3272-10     | 2    | Pin-Cotter     |
| 42   | 119-1419    | 4    | Plate-Clamp    |

 
● Not serviced separately

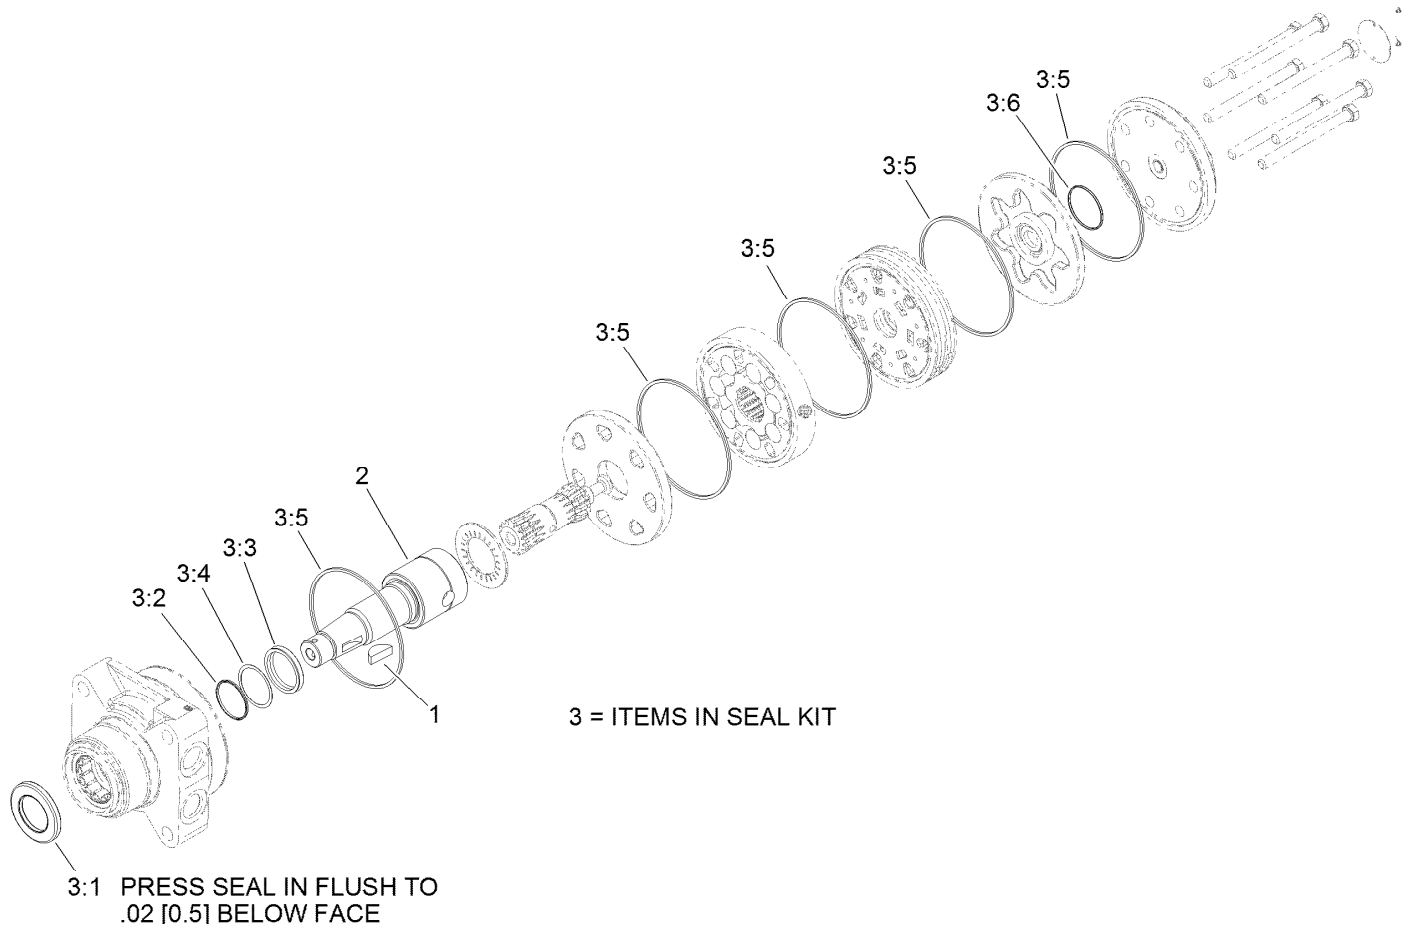

## Hydraulic Motor Assembly No. 110-8785

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 3257-42     | 1    | Key-Woodruff                |
| 2    | 99-3090     | 1    | Shaft-Coupling              |
| 3    | 94-8178     | 1    | Seal Kit                    |
| 3:1  |             | 1    | Seal-Dirt And Water ●       |
| 3:2  |             | 1    | Backup-Ring ●               |
| 3:3  |             | 1    | Seal-Shaft ●                |
| 3:4  |             | 1    | Washer-Backup ●             |
| 3:5  |             | 5    | Seal-Square, Ring (Inner) ● |
| 3:6  |             | 1    | Seal-Commutator ●           |

 
● Not serviced separately

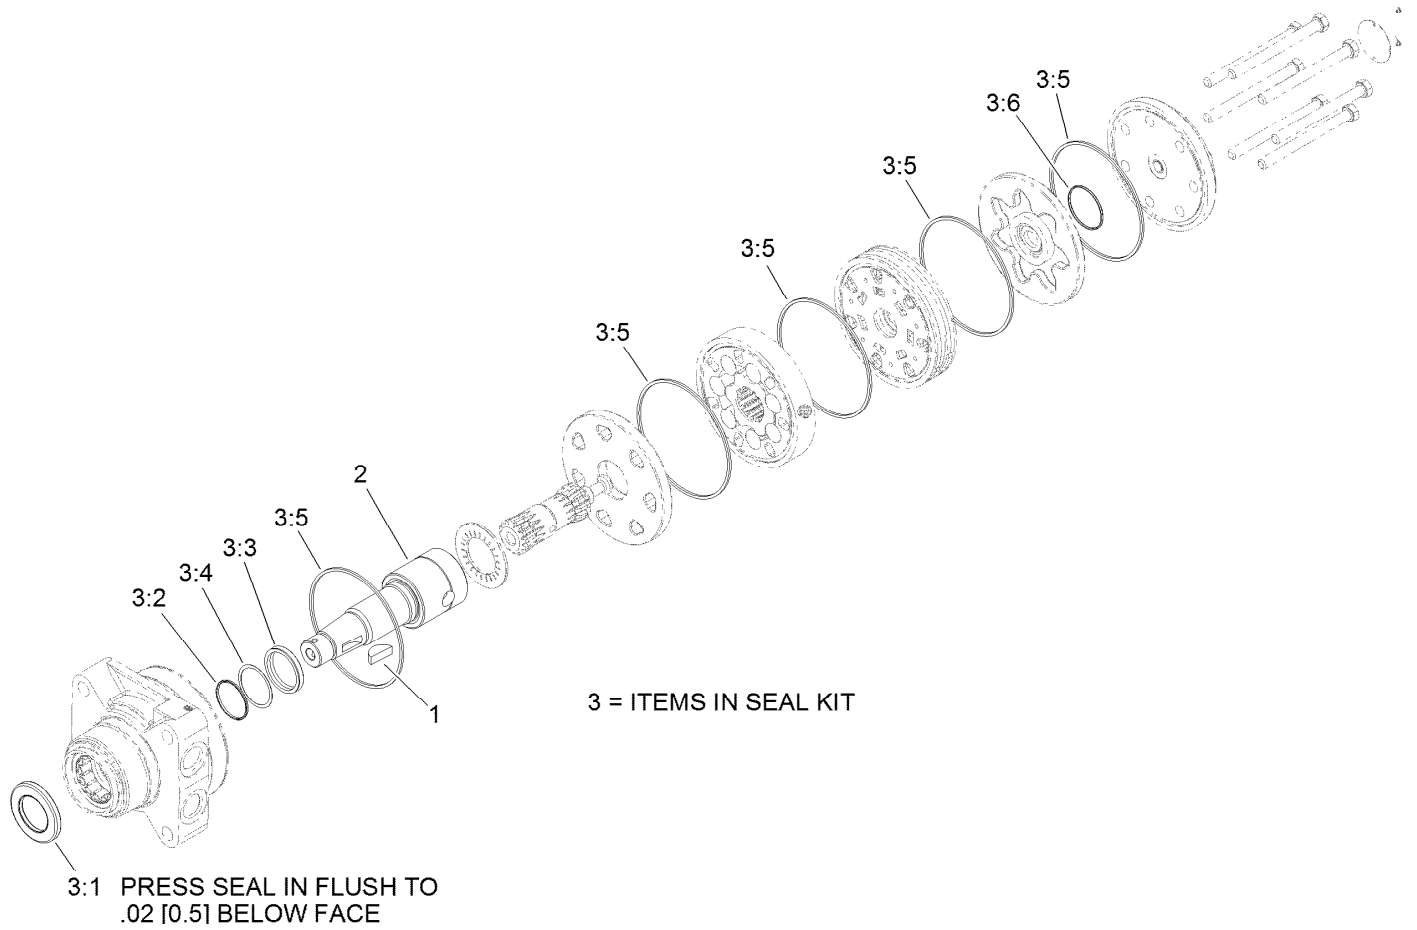

## Hydraulic Motor Assembly No. 110-8786


| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 3257-42     | 1    | Key-Woodruff                |
| 2    | 99-3090     | 1    | Shaft-Coupling              |
| 3    | 94-8178     | 1    | Seal Kit                    |
| 3:1  |             | 1    | Seal-Dirt And Water ●       |
| 3:2  |             | 1    | Backup-Ring ●               |
| 3:3  |             | 1    | Seal-Shaft ●                |
| 3:4  |             | 1    | Washer-Backup ●             |
| 3:5  |             | 5    | Seal-Square, Ring (Inner) ● |
| 3:6  |             | 1    | Seal-Commutator ●           |

 ● Not serviced separately

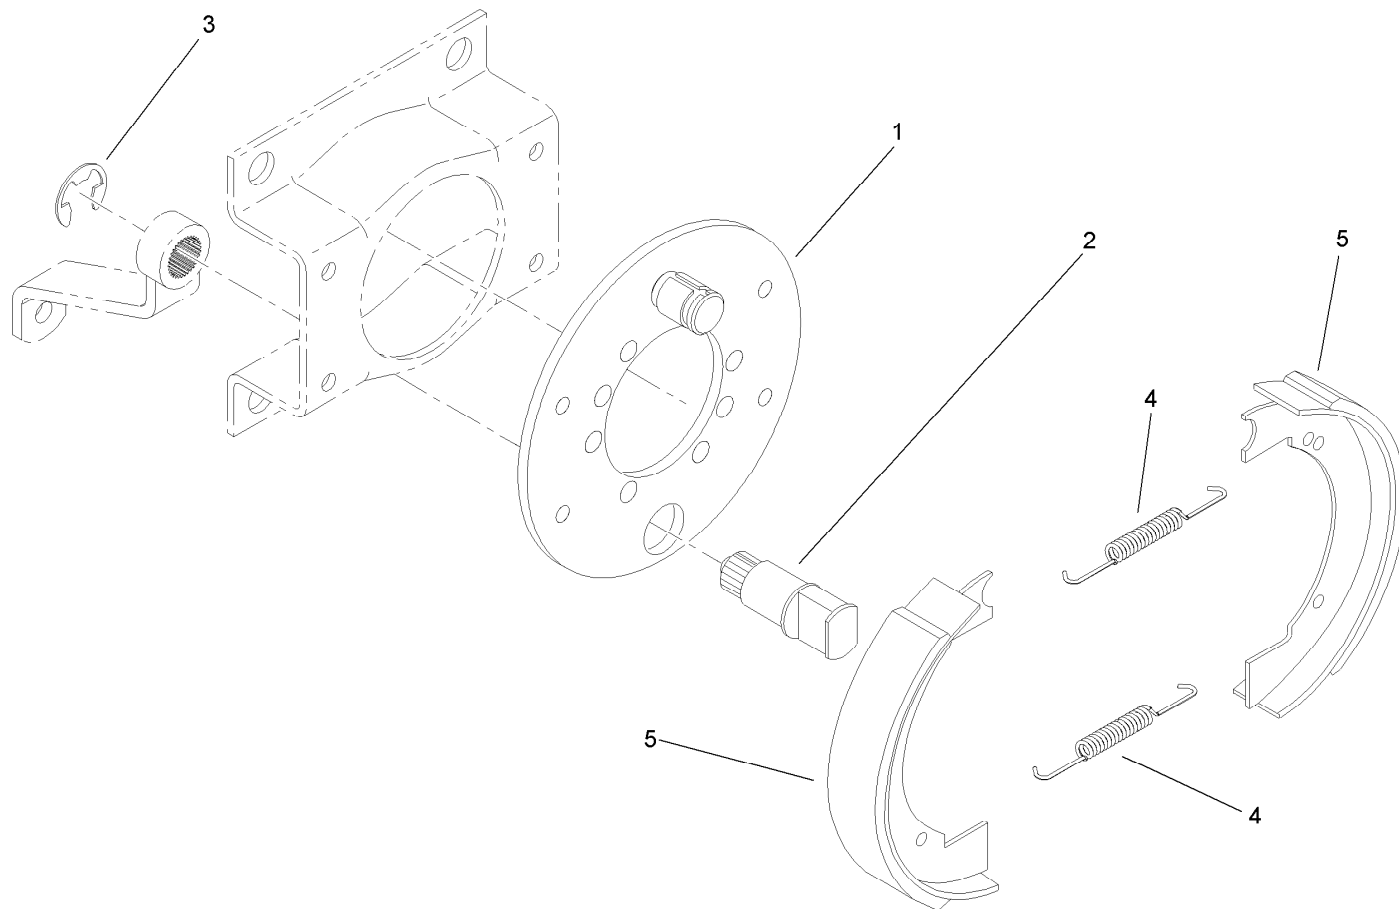

## Brake Assembly No. 104-7705

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 70-9870            | 1           | Plate-Backing      |
| 2           | 104-7707           | 1           | Shaft-Cam, Brake   |
| 3           | 104-7706           | 1           | E-Ring, Bowed      |
| 4           | 70-9880            | 2           | Spring-Return      |
| 5           | 70-9840            | 2           | Shoe-Brake         |

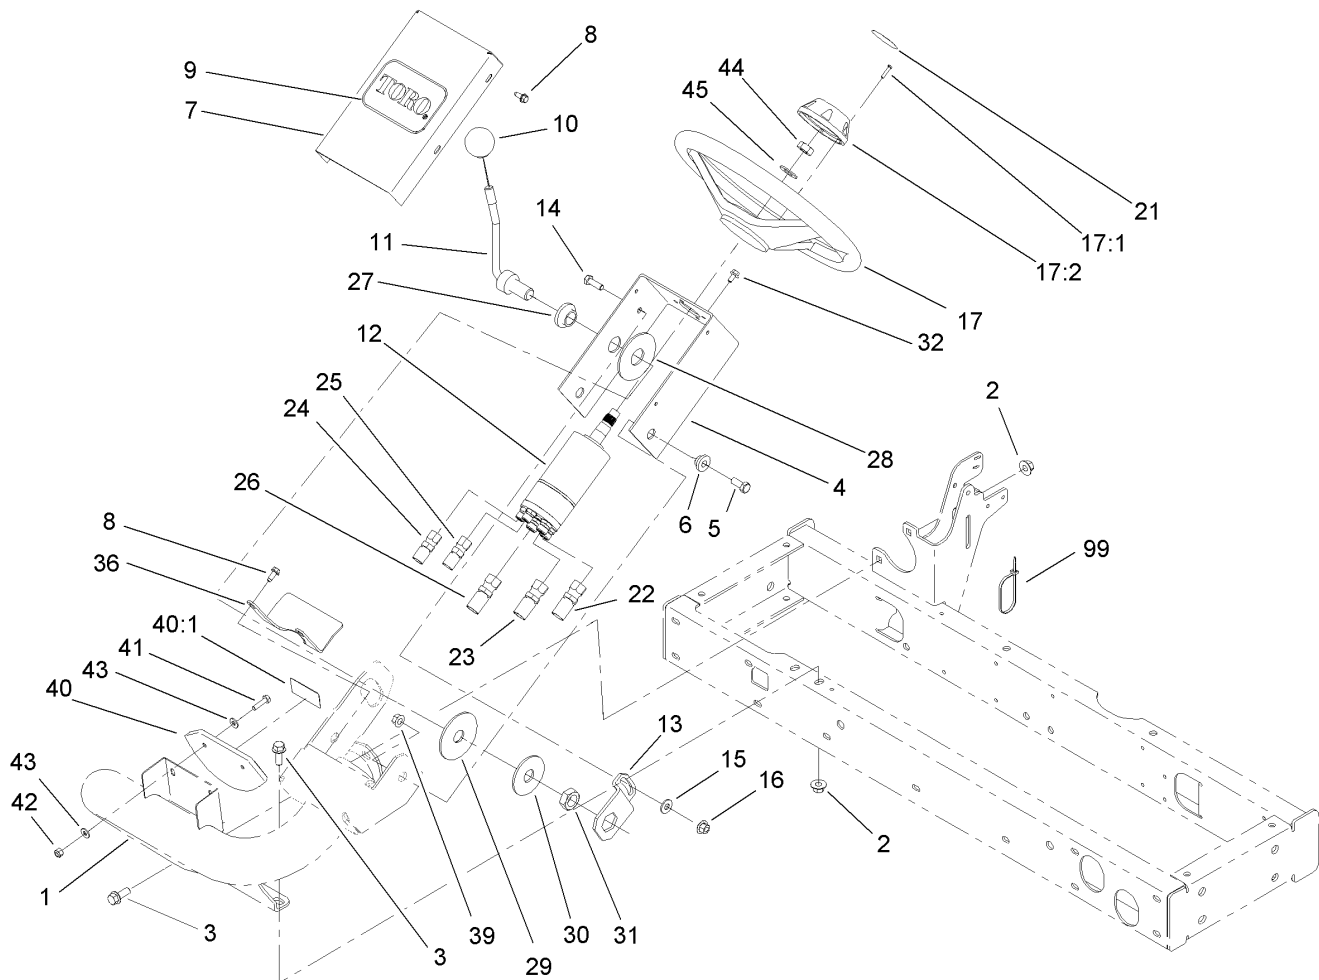

## Steering Column Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 105-8536-01 | 1    | Arm-Steering            |
| 2    | 32128-43    | 4    | Nut-Flange              |
| 3    | 3234-11     | 4    | Screw-HHF               |
| 4    | 104-5185-01 | 1    | Bracket-Valve, Steering |
| 5    | 323-5       | 2    | Screw-HH                |
| 6    | 93-5988     | 2    | Hub-Pivot               |
| 7    | 95-8794-01  | 1    | Cover-Valve, Steering   |
| 8    | 32144-10    | 5    | Screw-HWH               |
| 9    | 67-1300     | 1    | Decal                   |
| 10   | 233-48      | 1    | Knob                    |
| 11   | 95-8798-03  | 1    | Lever-Steering          |
| 12   | 121-7856    | 1    | Steering Valve ASM      |
| 13   | 80-2880     | 1    | Bracket-Tilt            |
| 14   | 322-5       | 1    | Screw-HH                |
| 15   | 3256-3      | 1    | Washer-Flat             |
| 16   | 32128-44    | 1    | Nut                     |
| 17   | 75-0560     | 1    | Steering Wheel ASM      |
| 17:1 | 32144-21    | 1    | Screw                   |
| 17:2 | 68-5140     | 1    | Cap-Wheel, Steering     |
| 21   | 68-5370     | 1    | Decal                   |
| 22   | 95-8842     | 1    | Hose-HYD                |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 23   | 95-8843     | 1    | Hose-HYD                |
| 24   | 95-8844     | 1    | Hose ASM                |
| 25   | 95-8845     | 1    | Hose ASM                |
| 26   | 95-8846     | 1    | Hose-HYD                |
| 27   | 99-3502     | 1    | Boss                    |
| 28   | 31-0390     | 1    | Disc-Friction           |
| 29   | 82-9010     | 1    | Disc-Friction           |
| 30   | 80-2930     | 1    | Washer-Flat             |
| 31   | 3218-7      | 1    | Nut-Jam                 |
| 32   | 33103-012   | 4    | Screw-HHF               |
| 36   | 99-3405-01  | 1    | Shield-Steering         |
| 39   | 32128-21    | 2    | Nut-HF                  |
| 40   | 100-4929    | 1    | Slope Indicator ASM     |
| 40:1 | 100-4837    | 1    | Decal-Danger            |
| 40:1 | 121-3598    | 1    | Decal-Danger, 17 Degree |
| 41   | 321-7       | 2    | Screw-HH                |
| 42   | 3296-42     | 2    | Nut-Lock, NI            |
| 43   | 3256-22     | 4    | Washer-Flat             |
| 44   | 3296-33     | 1    | Nut-Lock, NI            |
| 45   | 3256-27     | 1    | Washer-Flat             |
| 99   | 3290-378    | 2    | Tie-Cable               |

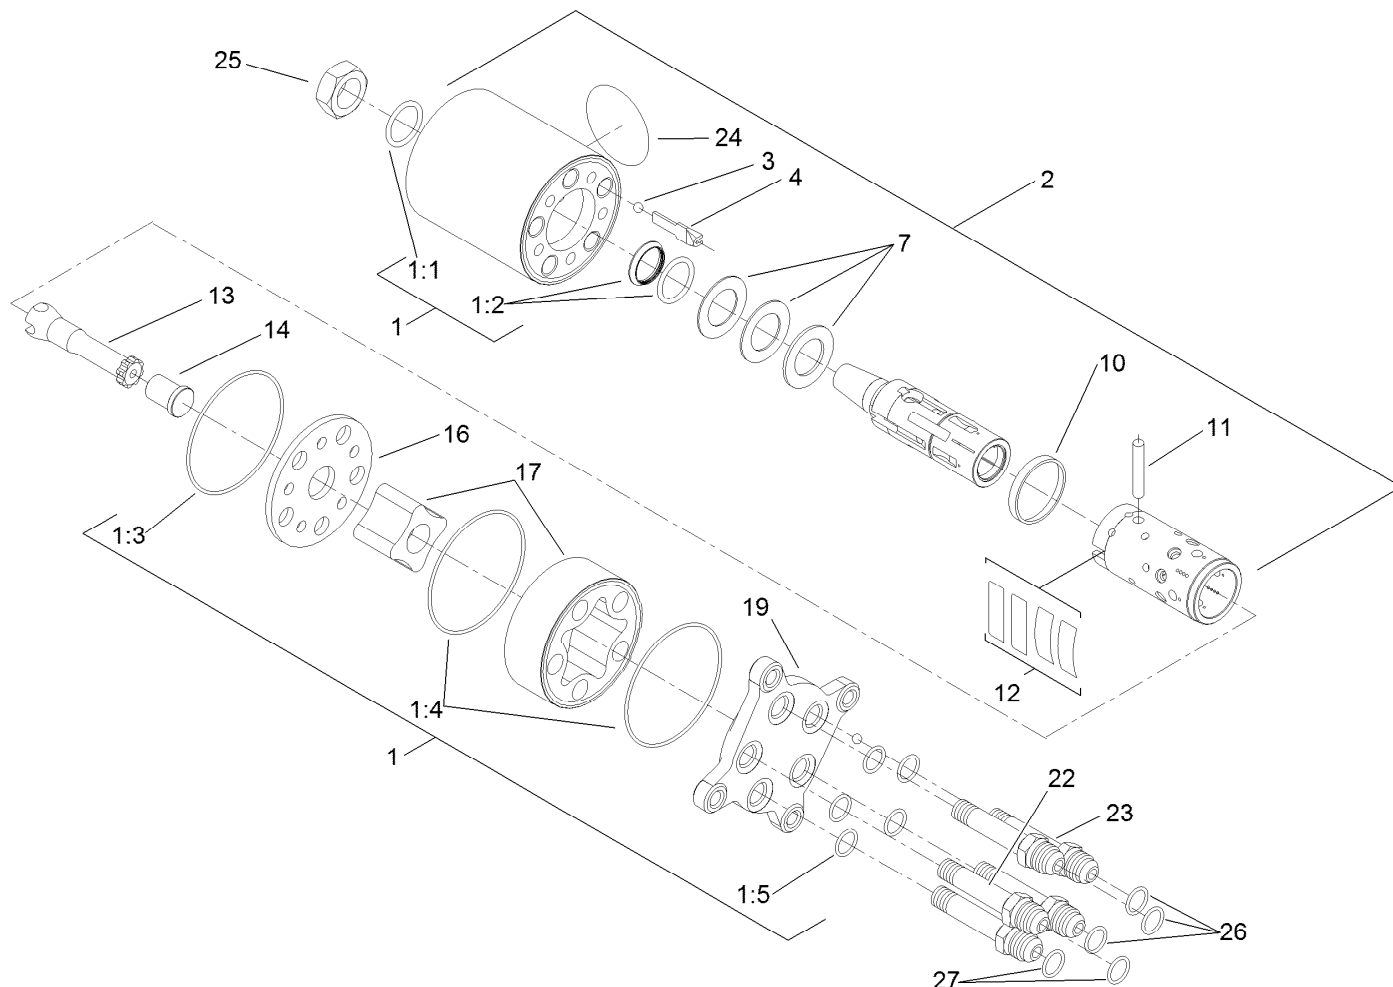


## Steering Valve Assembly No. 121-7856

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 106-6716    | 1    | Seal Kit          |
| 1:1  |             | 1    | Ring-Seal, Dust ● |
| 1:2  |             | 1    | Seal-Shaft ●      |
| 1:3  |             | 1    | O-Ring ●          |
| 1:4  |             | 2    | O-Ring ●          |
| 1:5  |             | 5    | O-Ring ●          |
| 2    |             | 1    | Housing ●         |
| 3    |             | 1    | Ball ●            |
| 4    |             | 1    | Stop-Ball ●       |
| 7    |             | 1    | Bearing ASM ●     |
| 10   |             | 1    | Ring ●            |
| 11   |             | 1    | Pin-Cross ●       |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 12   |             | 1    | Springs ●           |
| 13   |             | 1    | Shaft ●             |
| 14   |             | 1    | Spacer ●            |
| 16   |             | 1    | Plate-Distributor ● |
| 17   |             | 1    | Gearwheel Set ●     |
| 19   |             | 1    | Cover-End ●         |
| 22   |             | 1    | Screw-Special ●     |
| 23   |             | 4    | Screw-Special ●     |
| 24   |             | 1    | Plate-Name ●        |
| 25   | 3296-33     | 1    | Nut-Lock, NI        |
| 26   | 237-22      | 3    | O-Ring              |
| 27   | 237-21      | 2    | O-Ring              |

 ● Not serviced separately

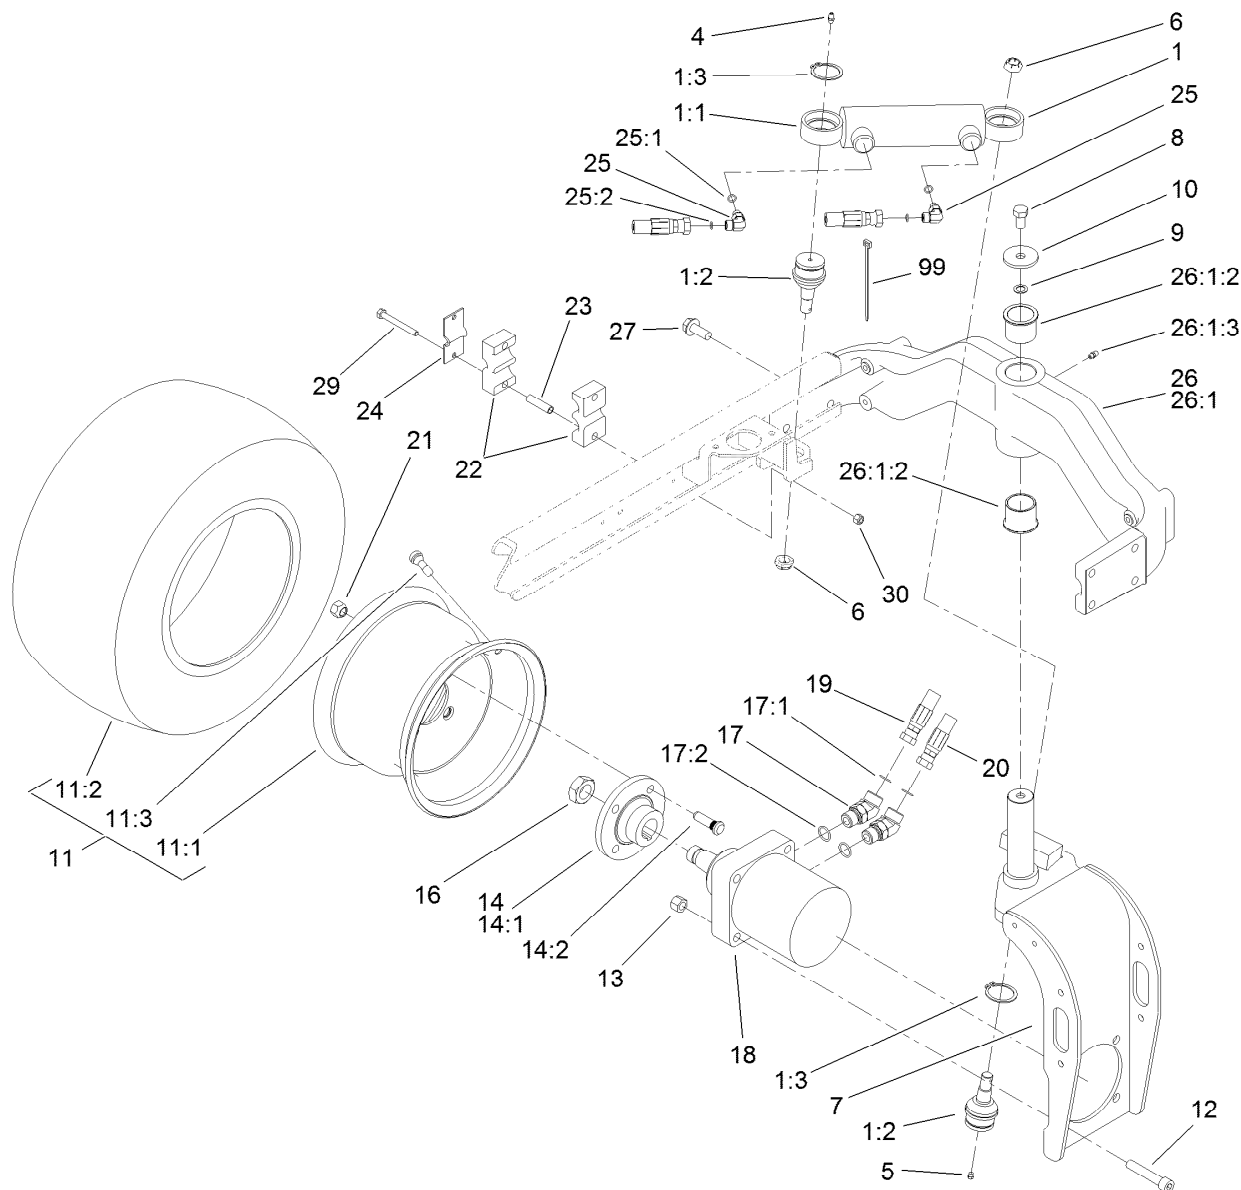


## Rear Fork and Tire Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    |             | 1    | Steering Cylinder ASM ●  |
| 1:1  | 94-8141     | 1    | HYD Cylinder ASM         |
| 1:2  | 121-3605    | 2    | Ball Joint               |
| 1:3  | 32151-104   | 2    | Ring-Retaining, External |
| 4    | 302-5       | 1    | Fitting-Grease           |
| 5    | 302-59      | 1    | Plug-Threaded            |
| 6    | 121-3611    | 2    | Nut-Hex, Flextop         |
| 7    | 95-8905-01  | 1    | Fork-Rear                |
| 8    | 325-3       | 1    | Screw-HH                 |
| 9    | 3255-2      | 1    | Washer-Lock, EXT         |
| 10   | 75-7730     | 1    | Washer-Thrust            |
| 11   |             | 1    | Wheel And Tire ASM ●     |
| 11:1 | 117-5129    | 1    | Rim                      |
| 11:2 | 115-1572    | 1    | Tire                     |
| 11:3 | 232-27      | 1    | Stem-Valve               |
| 12   | 3274-93     | 4    | Screw-HSH                |
| 13   | 3296-23     | 4    | Nut-Lock, NI             |
| 14   |             | 1    | Wheel Hub / Stud ASM ●   |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 14:1 | 10-6870-03  | 1    | Hub-Wheel             |
| 14:2 | 10-6830     | 4    | Stud-Type, Drive      |
| 16   | 26-3790     | 1    | Nut-Lock              |
| 17   | 340-14      | 2    | Fitting-HYD, 45 DEG   |
| 17:1 | 237-65      | 1    | O-Ring                |
| 17:2 | 237-80      | 1    | O-Ring                |
| 18   | 95-8694     | 1    | HYD Motor ASM         |
| 19   | 105-1221    | 1    | Hose ASM              |
| 20   | 105-1222    | 1    | Hose ASM              |
| 21   | 242-50      | 4    | Nut-Lug               |
| 22   | 82-8170     | 2    | Clamp                 |
| 23   | 93-7960     | 2    | Spacer                |
| 24   | 93-7961     | 1    | Clamp-Drain, Case     |
| 25   | 340-132     | 2    | Fitting-Elbow, 90 DEG |
| 25:1 | 237-78      | 1    | O-Ring                |
| 25:2 | 237-21      | 1    | O-Ring                |
| 26   | 107-7828-03 | 1    | Casting-Rear          |
| 26:1 |             | 1    | Rear Casting ASM ●    |

 ● Not serviced separately

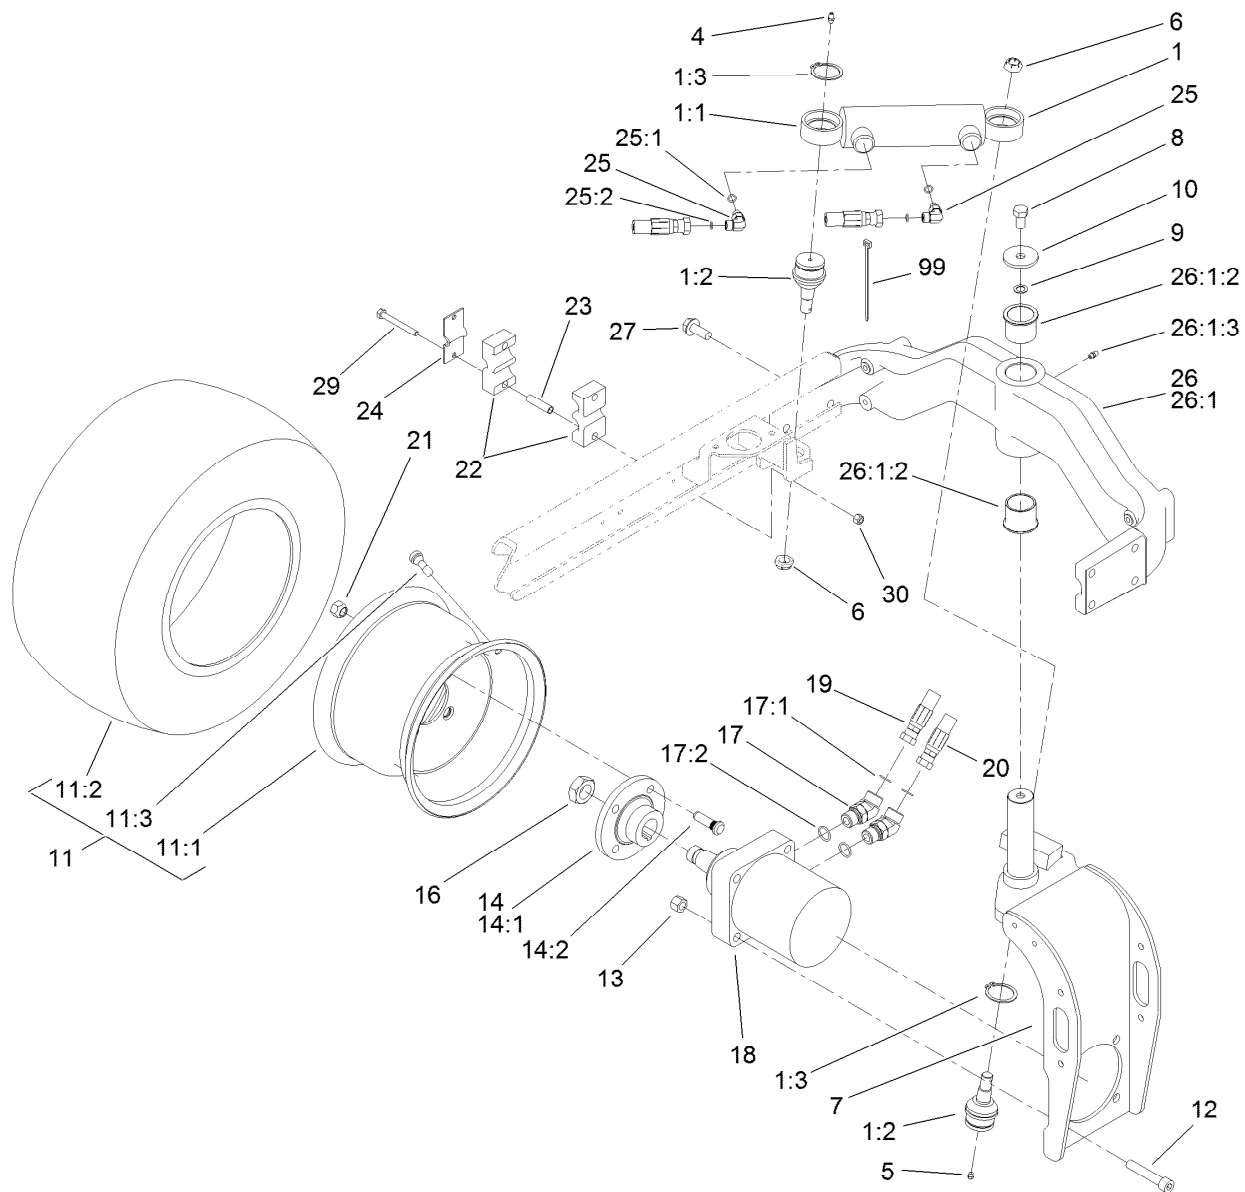


## Rear Fork and Tire Assembly (continued)

| Ref.   | Part Number | Qty. | Description    |
|--------|-------------|------|----------------|
| 26:1:2 | 95-8805     | 2    | Bushing        |
| 26:1:3 | 302-5       | 1    | Fitting-Grease |
| 27     | 3234-38     | 8    | Screw-HHF      |

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 29   | 322-13      | 2    | Screw-HH     |
| 30   | 3296-29     | 2    | Nut-Lock, NI |
| 99   | 3290-378    | 5    | Tie-Cable    |

 
● Not serviced separately

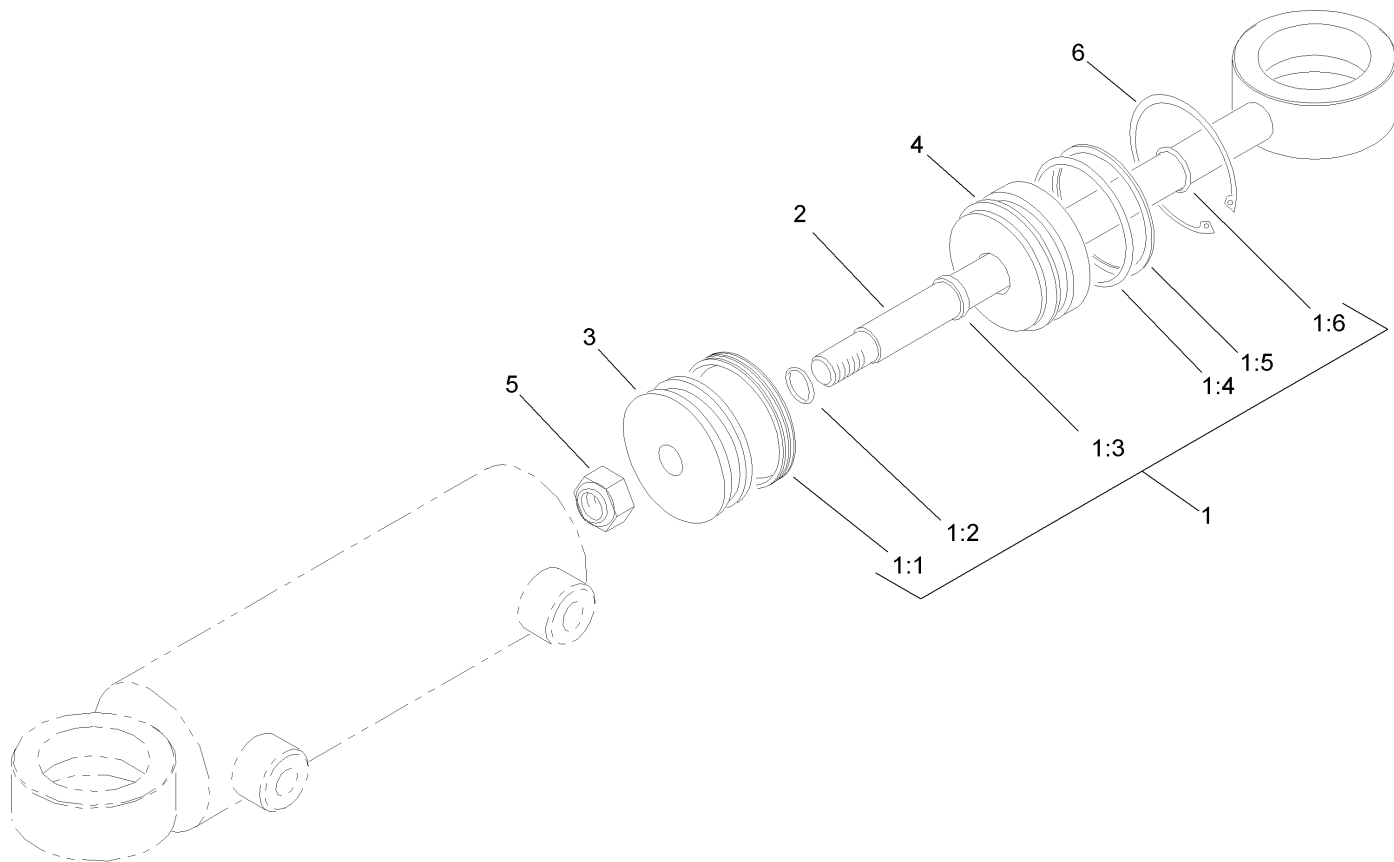

## Hydraulic Cylinder Assembly No. 94-8141

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 86-5390            | 1           | Seal Kit           |
| 1:1         |                    | 1           | Uniring ●          |
| 1:2         |                    | 1           | O-Ring ●           |
| 1:3         |                    | 1           | Seal-Rod ●         |
| 1:4         |                    | 1           | O-Ring ●           |
| 1:5         |                    | 1           | Ring-Backup ●      |
| 1:6         |                    | 1           | O-Ring ●           |
| 2           |                    | 1           | Rod ●              |
| 3           |                    | 1           | Piston ●           |
| 4           |                    | 1           | Gland ●            |
| 5           |                    | 1           | Nut-Lock ●         |
| 6           |                    | 1           | Ring-Retaining ●   |

 ● Not serviced separately

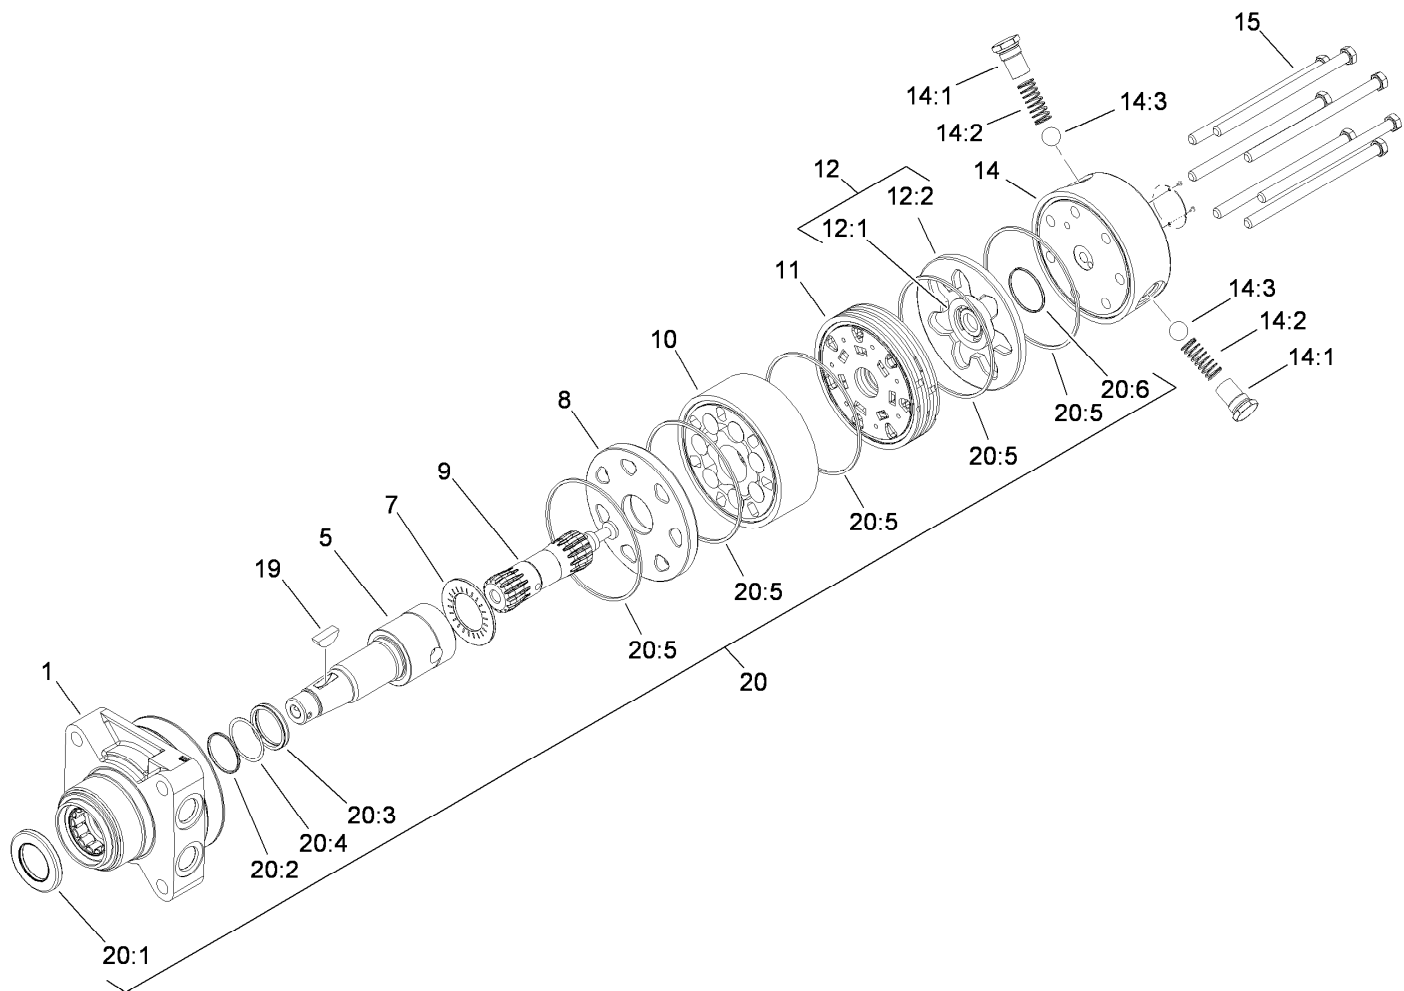


## Hydraulic Motor Assembly No. 95-8694

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 76-0810     | 1    | Housing ASM                 |
| 5    | 99-3090     | 1    | Shaft-Coupling              |
| 7    | 76-0850     | 1    | Bearing-Thrust              |
| 8    | 76-0870     | 1    | Plate-Wear                  |
| 9    | 99-3537     | 1    | Link-Drive                  |
| 10   | 99-3539     | 1    | Set-Rotor                   |
| 11   | 99-3535     | 1    | Manifold                    |
| 12   | 76-0880     | 1    | Commutator ASM              |
| 12:1 |             | 1    | Commutator ●                |
| 12:2 |             | 1    | Ring-Commutator ●           |
| 14   | 99-3538     | 1    | End Cover ASM               |
| 14:1 |             | 1    | Spring Cap And O-Ring ASM ● |


| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 14:2 | 99-3541     | 1    | Spring                      |
| 14:3 | 99-3540     | 1    | Ball                        |
| 15   | 99-3536     | 7    | Screw-HH                    |
| 19   | 3257-42     | 1    | Key-Woodruff                |
| 20   | 94-8178     | 1    | Seal Kit                    |
| 20:1 |             | 1    | Seal-Dirt And Water ●       |
| 20:2 |             | 1    | Backup-Ring ●               |
| 20:3 |             | 1    | Seal-Shaft ●                |
| 20:4 |             | 1    | Washer-Backup ●             |
| 20:5 |             | 5    | Seal-Square, Ring (Inner) ● |
| 20:6 |             | 1    | Seal-Commutator ●           |

 ● Not serviced separately

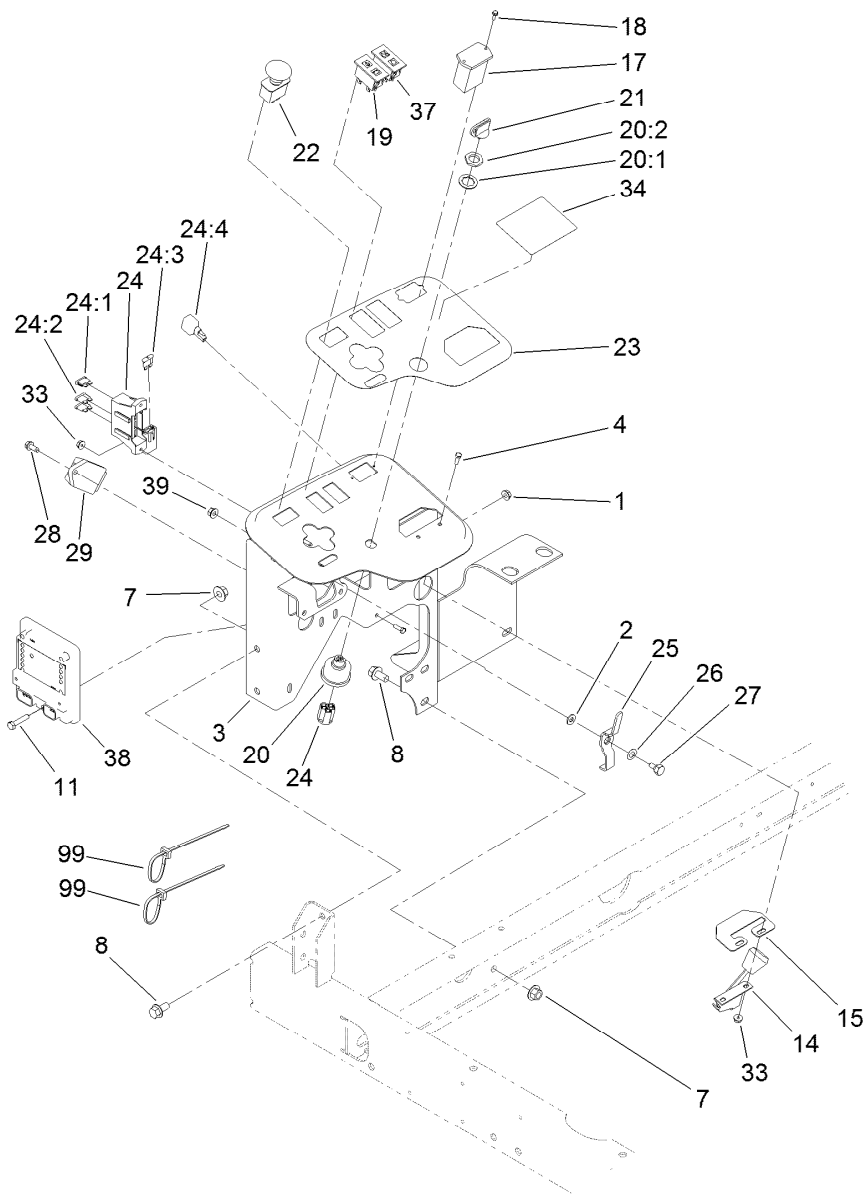

## Control Panel Assembly

 
| Ref. | Part Number | Qty. | Description          | Ref. | Part Number | Qty. | Description              |
|------|-------------|------|----------------------|------|-------------|------|--------------------------|
| 1    | 32128-33    | 3    | Nut-HF               | 24   | 122-0258    | 1    | Harness-Wire             |
| 2    | 3256-22     | 1    | Washer-Flat          | 24:1 | 218-578     | 1    | Fuse-Blade, 10 Amp       |
| 3    | 115-3496-03 | 1    | Panel-Control        | 24:2 | 109355      | 1    | Fuse-Blade, 15 Amp       |
| 4    | 3290-134    | 4    | Screw                | 24:3 | 94-6710     | 1    | Fuse-2 Amp               |
| 7    | 32128-43    | 5    | Nut-Flange           | 24:4 | 100-4918    | 1    | Diode                    |
| 8    | 3234-1      | 5    | Screw-HHF            | 25   | 99-3401-03  | 1    | Lever-Valve, Lock        |
| 11   | 321-8       | 3    | Screw-HH             | 26   | 3290-477    | 1    | Washer-Curved            |
| 14   | 110-8795    | 1    | Cable-Throttle       | 27   | 63-3410     | 1    | Screw-Shoulder           |
| 15   | 104-0421    | 1    | Plate-Stop, Throttle | 28   | 32144-10    | 1    | Screw-HWH                |
| 17   | 75-6820     | 1    | Hourmeter            | 29   | 98-7611     | 1    | Controller-Glow          |
| 18   | 32144-18    | 2    | Screw-HWH            | 33   | 3290-148    | 4    | Nut-HF                   |
| 19   | 100-8070    | 1    | Lamp-Warning         | 34   | 99-3558     | 1    | Decal-Console, CE        |
| 20   | 104-2541    | 1    | Ignition Switch ASM  | 37   | 100-8071    | 1    | Lamp-Warning             |
| 20:1 | 218-461     | 1    | Nut-HH               | 38   | 106-9277    | 1    | Module-Control, Standard |
| 20:2 | 3254-5      | 1    | Washer-Lock          | 39   | 32128-32    | 1    | Nut-HHF                  |
| 21   | 63-8360     | 2    | Key-Ignition         | 99   | 3290-378    | 3    | Tie-Cable                |
| 22   | 93-9999     | 1    | Switch-PTO           | 99   | 3290-379    | 4    | Tie-Cable                |
| 23   | 121-3582    | 1    | Decal-Console        |      |             |      |                          |

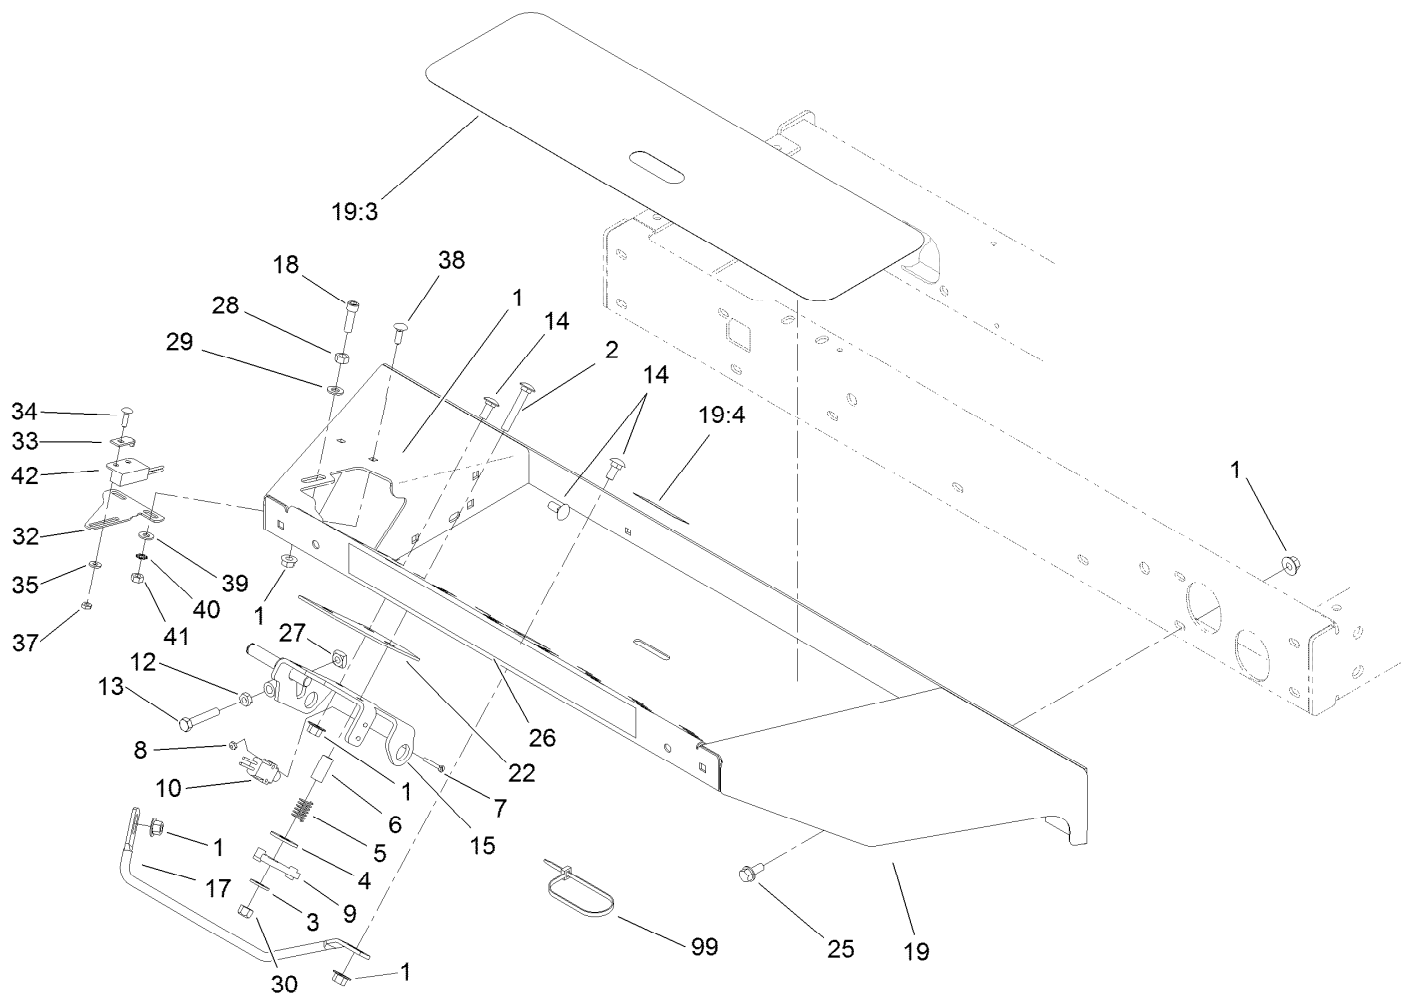

## Front Platform Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 32128-20    | 18   | Nut-HF                  |
| 2    | 3230-6      | 1    | Bolt-CARR               |
| 3    | 3256-3      | 1    | Washer-Flat             |
| 4    | 3256-40     | 1    | Washer-Flat             |
| 5    | 65-9940     | 1    | Spring                  |
| 6    | 95-8866     | 1    | Tube-Arm, Rocker        |
| 7    | 32105-9     | 2    | Screw                   |
| 8    | 3296-9      | 2    | Nut-Hex                 |
| 9    | 99-3593     | 1    | Arm-Rocker              |
| 10   | 95-8900     | 1    | Switch                  |
| 12   | 3218-2      | 1    | Nut-Jam                 |
| 13   | 322-41      | 1    | Screw-HH                |
| 14   | 3230-23     | 7    | Screw-CARR              |
| 15   | 95-8869-03  | 1    | Bracket-Pedal, Traction |
| 17   | 95-8893     | 1    | Bar-Deflector           |
| 18   | 3274-22     | 1    | Screw-HSH               |
| 19   | 106-4154    | 1    | Floorplate ASM          |
| 19:3 | 99-3478     | 1    | Tread-Foot              |
| 19:4 | 99-3444     | 1    | Decal-Mow / Transport   |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 22   | 106-2661-01 | 1    | Plate-Support           |
| 25   | 3234-5      | 10   | Screw-HHF               |
| 26   | 99-3388     | 1    | Decal                   |
| 27   | 99-3565     | 1    | Nut-Square              |
| 28   | 3217-6      | 1    | Nut-Hex                 |
| 29   | 3256-23     | 1    | Washer-Plain            |
| 30   | 3296-29     | 1    | Nut-Lock, NI            |
| 32   | 100-4871    | 1    | Bracket-Switch, Neutral |
| 33   | 100-4872    | 1    | Plate-Switch, Neutral   |
| 34   | 3229-20     | 1    | Screw-CARR              |
| 35   | 3256-14     | 1    | Washer-Flat             |
| 37   | 3296-2      | 1    | Nut-Lock, NI            |
| 38   | 3229-1      | 2    | Bolt-CARR               |
| 39   | 3256-22     | 2    | Washer-Flat             |
| 40   | 3255-7      | 2    | Washer-Lock/EXT         |
| 41   | 3217-5      | 2    | Nut-Hex                 |
| 42   | 100-1270    | 1    | Switch-Proximity        |
| 99   | 3290-379    | 2    | Tie-Cable               |

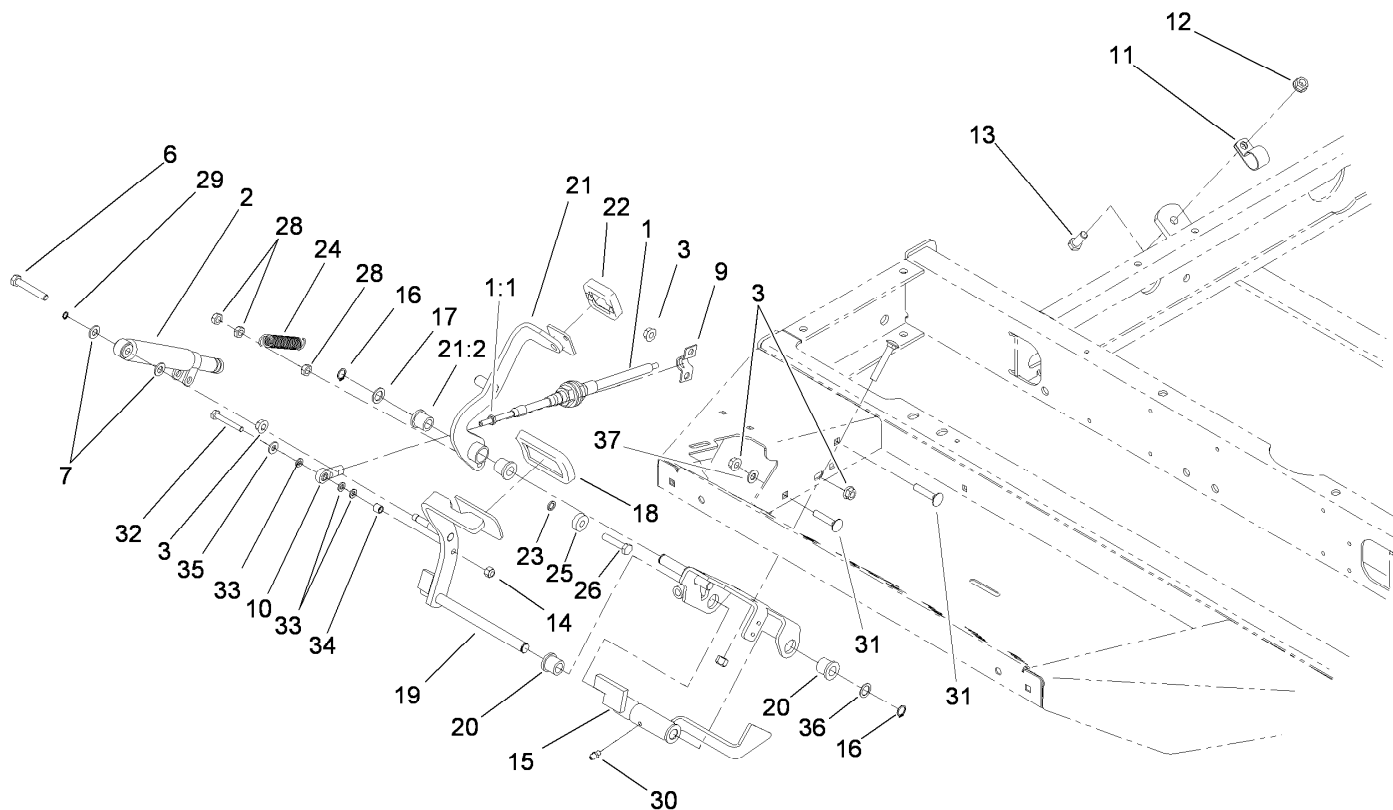

## Traction Pedal Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 100-4815    | 1    | Cable-Control, Traction |
| 1:1  | 3220-1      | 2    | Nut-Jam                 |
| 2    | 76-8870     | 1    | Damper-Lever            |
| 3    | 32128-20    | 5    | Nut-HF                  |
| 6    | 322-10      | 1    | Screw-HH                |
| 7    | 3256-23     | 2    | Washer-Plain            |
| 9    | 93-2092     | 1    | Clamp-Cable             |
| 10   | 2411-41     | 1    | Rod End-Ball Joint      |
| 11   | 2412-41     | 1    | Clamp-R                 |
| 12   | 3290-357    | 1    | Nut-HHF, Whiz           |
| 13   | 323-6       | 1    | Screw-HH                |
| 14   | 3296-42     | 1    | Nut-Lock, NI            |
| 15   | 95-8861     | 1    | Slide                   |
| 16   | 32151-84    | 2    | Ring-Shaft, EXT         |
| 17   | 41-8440     | 1    | Washer                  |
| 18   | 74-9100     | 1    | Pad-Pedal, Forward      |
| 19   | 104-4852-03 | 1    | Pedal-Traction          |
| 20   | 256-243     | 2    | Bearing-Flange          |

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 21   | 99-3379     | 1    | Pedal-Reverse      |
| 21:2 | 256-243     | 2    | Bearing-Flange     |
| 22   | 74-9110     | 1    | Pad-Pedal, Reverse |
| 23   | 75-5470     | 1    | Spacer-Bearing     |
| 24   | 99-3476     | 1    | Spring-Extension   |
| 25   | 251-259     | 1    | Bearing-Ball       |
| 26   | 322-7       | 1    | Screw-HH           |
| 28   | 3296-47     | 3    | Nut-Lock, NI       |
| 29   | 32151-3     | 1    | Ring-Grip          |
| 30   | 302-5       | 1    | Fitting-Grease     |
| 31   | 3230-27     | 1    | Screw-CARR         |
| 32   | 321-10      | 1    | Screw-HH           |
| 33   | 33093-00    | 3    | Washer-Flat        |
| 34   | 99-3545     | 1    | Spacer             |
| 35   | 3256-22     | 1    | Washer-Flat        |
| 36   | 73-0040     | 4    | Washer-Thrust      |
| 37   | 3256-24     | 1    | Washer-Flat        |

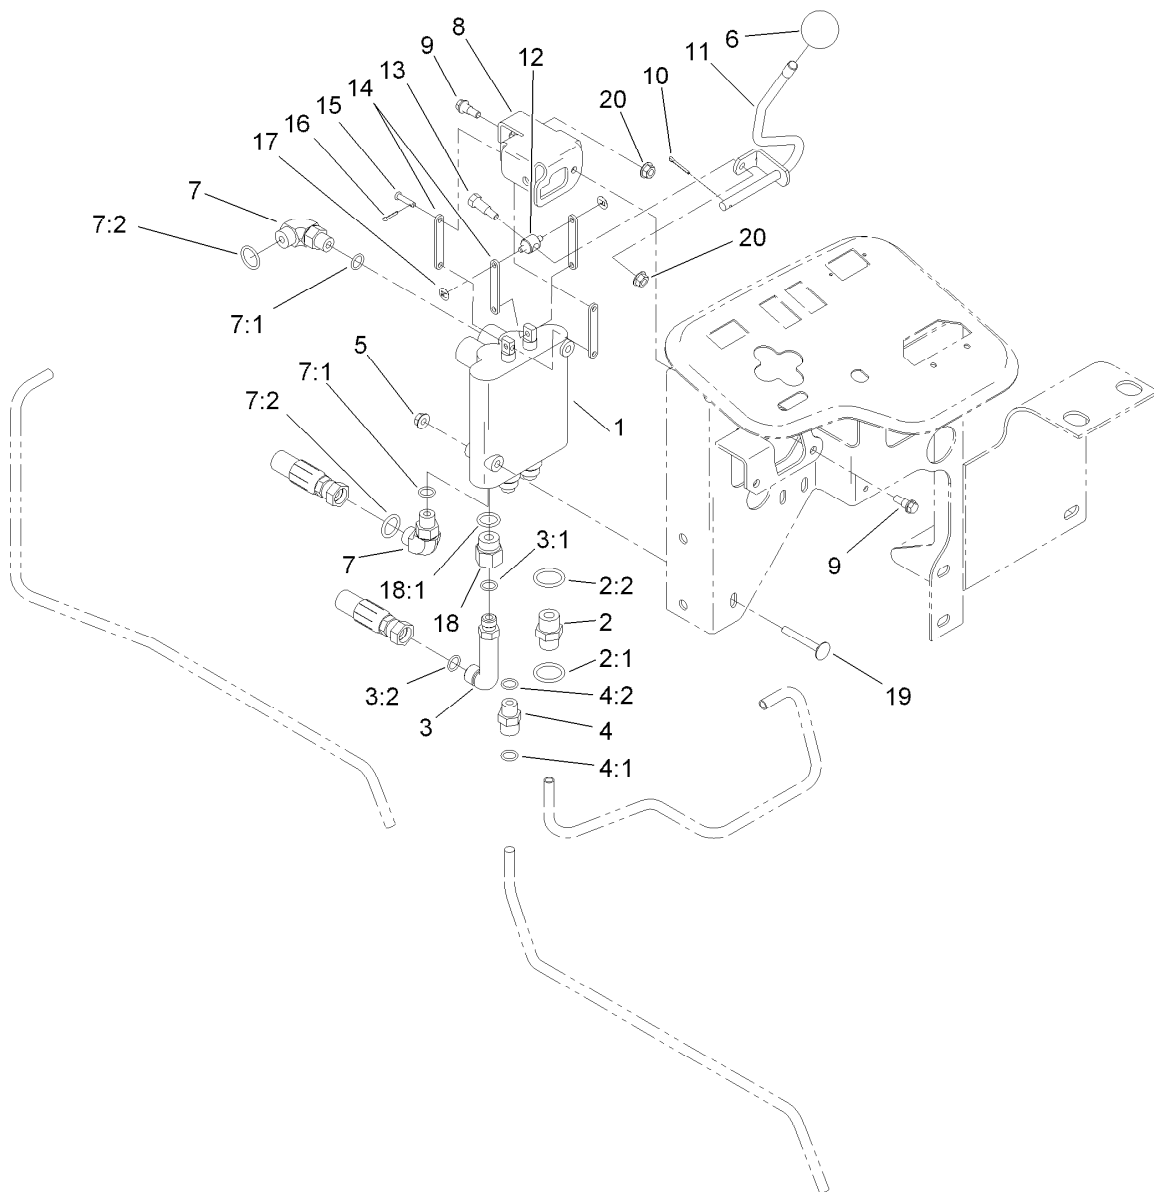

## Control Valve Installation Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 95-8581     | 1    | 2-Spool Control Valve ASM |
| 2    | 340-3       | 1    | Fitting-Straight          |
| 2:1  | 237-22      | 1    | O-Ring                    |
| 2:2  | 237-79      | 1    | O-Ring                    |
| 3    | 69-4320     | 1    | Fitting-HYD, 90 DEG       |
| 3:1  | 237-22      | 1    | O-Ring                    |
| 3:2  | 237-42      | 1    | O-Ring                    |
| 4    | 340-2       | 1    | Fitting-Straight          |
| 4:1  | 237-22      | 1    | O-Ring                    |
| 4:2  | 237-42      | 1    | O-Ring                    |
| 5    | 32128-33    | 2    | Nut-HF                    |
| 6    | 233-42      | 1    | Knob                      |
| 7    | 340-77      | 2    | Fitting-Elbow, 90 DEG     |
| 7:1  | 237-22      | 1    | O-Ring                    |
| 7:2  | 237-42      | 1    | O-Ring                    |

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 8    | 95-8633     | 1    | Bracket-Valve, Actuator  |
| 9    | 42-3560     | 2    | Bolt-Shoulder            |
| 10   | 3272-6      | 1    | Pin-Cotter               |
| 11   | 95-8635     | 1    | Lever-Valve              |
| 12   | 95-8638     | 1    | Trunnion-Valve, Actuator |
| 13   | 92-8916     | 1    | Bolt-Shoulder            |
| 14   | 95-8634     | 4    | Link                     |
| 15   | 283-16      | 3    | Pin-Clevis               |
| 16   | 3272-1      | 3    | Pin-Cotter               |
| 17   | 32151-106   | 2    | Ring-Retaining           |
| 18   | 353-397     | 1    | Reducer-Adapter          |
| 18:1 | 237-79      | 1    | O-Ring                   |
| 19   | 3230-33     | 2    | Screw-CARR               |
| 20   | 32128-32    | 3    | Nut-HHF                  |

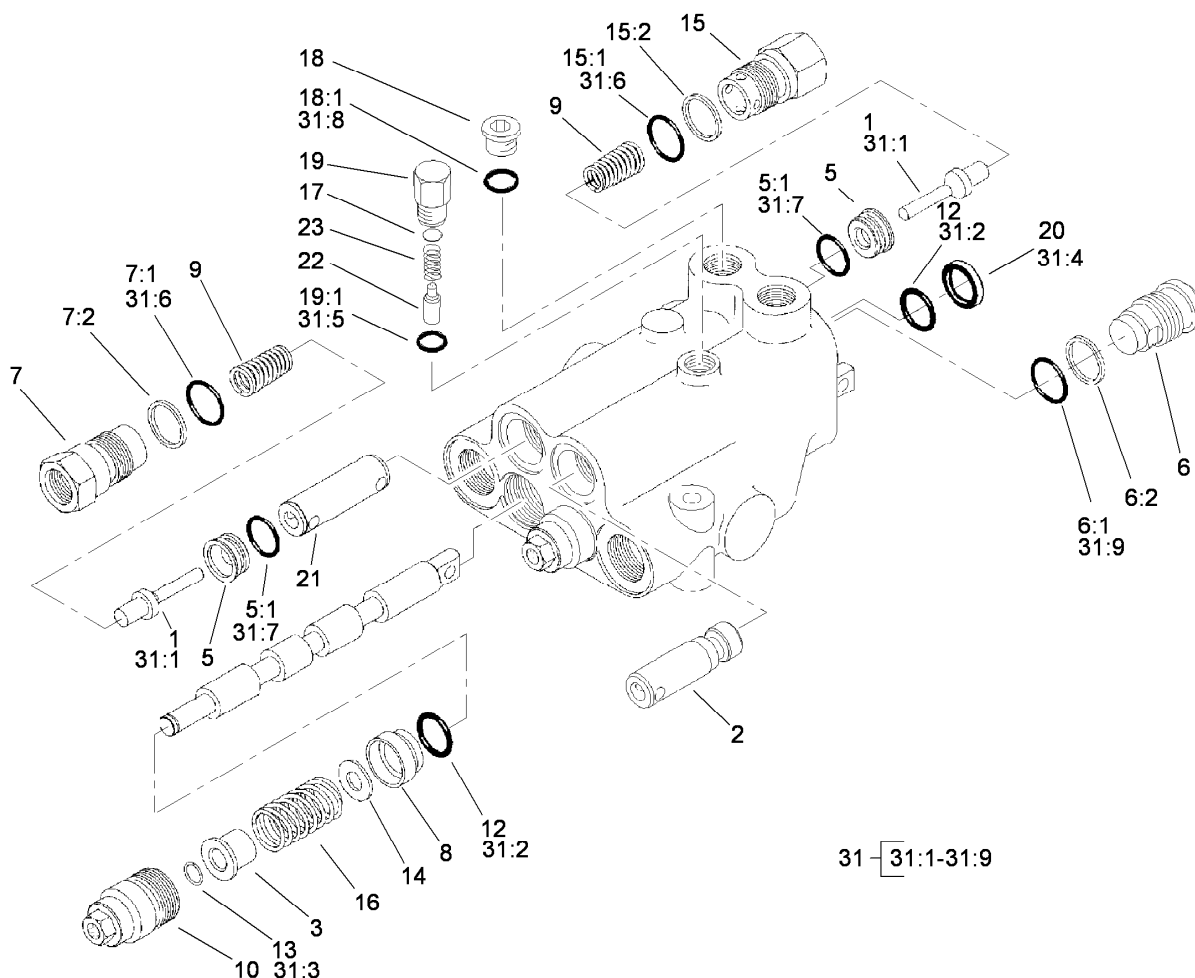

## Valve Assembly No. 95-8581


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 58-6290     | 3    | Poppet         |
| 2    | 69-1840     | 1    | Plunger        |
| 3    | 58-6310     | 2    | Spacer         |
| 5    | 58-6330     | 3    | Seat           |
| 5:1  | 58-6340     | 1    | O-Ring         |
| 6    | 58-6350     | 1    | Plug           |
| 6:1  | 60-5720     | 1    | O-Ring         |
| 6:2  | 58-6370     | 1    | Washer         |
| 7    | 69-1800     | 2    | Plug ASM       |
| 7:1  | 60-5720     | 1    | O-Ring         |
| 7:2  | 58-6370     | 1    | Washer         |
| 8    | 58-6400     | 2    | Bushing        |
| 9    | 69-1810     | 3    | Spring         |
| 10   | 58-6420     | 2    | Cap            |
| 12   | 58-6450     | 4    | O-Ring         |
| 13   | 58-6460     | 2    | Ring-Retaining |
| 14   | 65-2770     | 2    | Washer         |
| 15   | 99-3526     | 1    | Plug ASM       |
| 15:1 | 60-5720     | 1    | O-Ring         |
| 15:2 | 59-7730     | 1    | Washer-Backup  |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 16   | 99-3531     | 2    | Spring           |
| 17   | 60-6450     | 1    | Disc             |
| 18   | 353-989     | 1    | Plug-Hex, Hollow |
| 18:1 | 237-42      | 1    | O-Ring           |
| 19   | 58-6780     | 1    | Plug             |
| 19:1 | 58-6790     | 1    | O-Ring           |
| 20   | 58-6320     | 2    | Wiper            |
| 21   | 99-3528     | 1    | Plunger          |
| 22   | 58-6770     | 1    | Plunger          |
| 23   | 58-6760     | 1    | Spring           |
| 31   | 99-3530     | 1    | Seal Kit         |
| 31:1 | 58-6290     | 3    | Poppet           |
| 31:2 | 58-6450     | 4    | O-Ring           |
| 31:3 | 58-6460     | 2    | Ring-Retaining   |
| 31:4 | 58-6320     | 2    | Wiper            |
| 31:5 | 58-6790     | 1    | O-Ring           |
| 31:6 | 60-5720     | 4    | O-Ring           |
| 31:7 | 58-6340     | 2    | O-Ring           |
| 31:8 | 237-42      | 1    | O-Ring           |
| 31:9 | 59-7730     | 2    | Washer-Backup    |

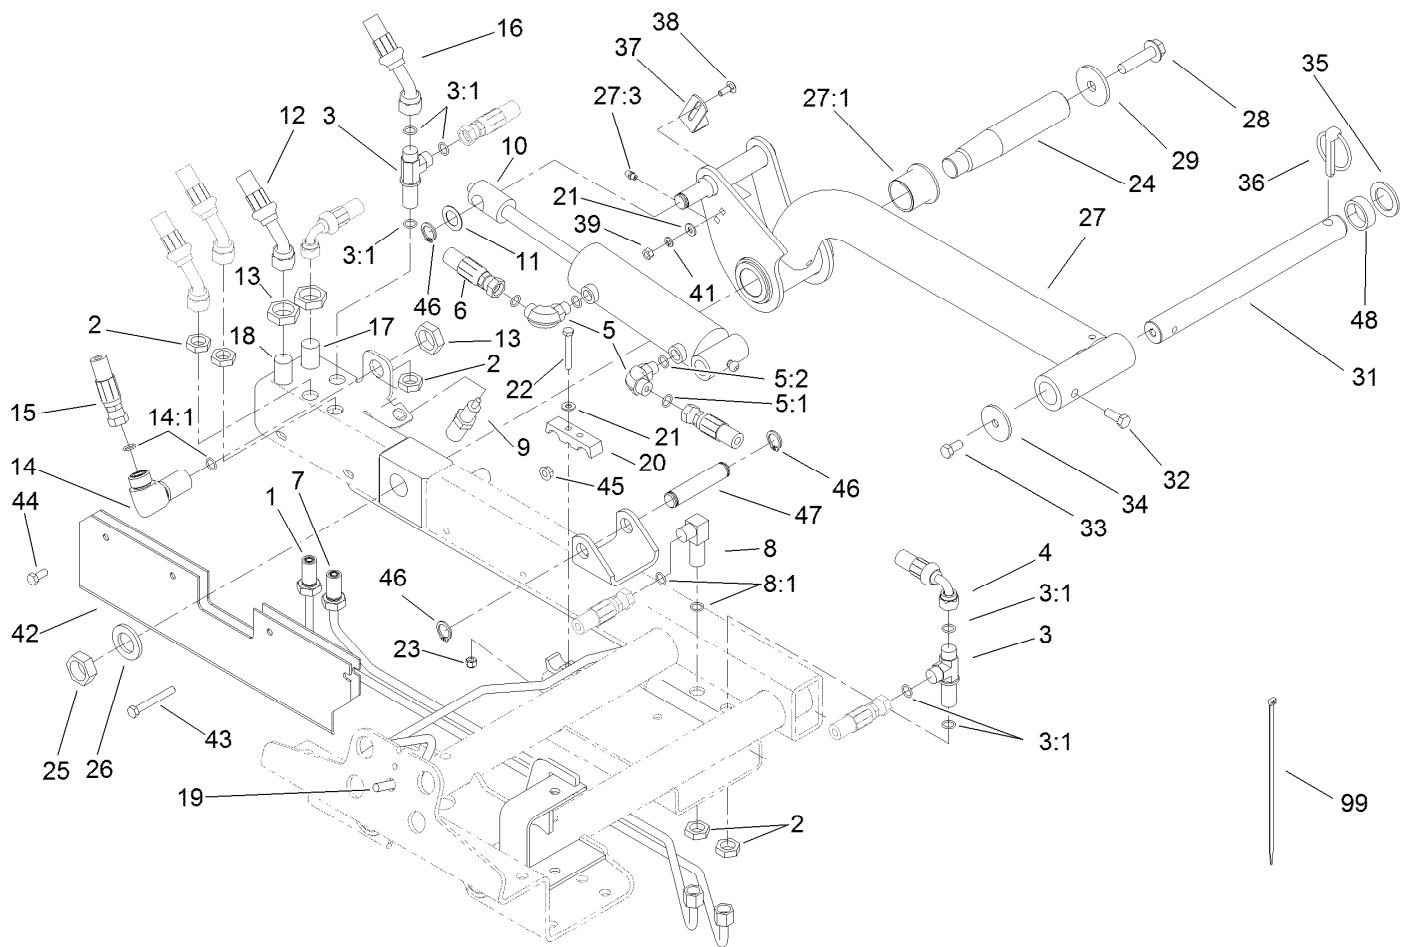

## Rear Lift Arm Assembly

 
| Ref. | Part Number | Qty. | Description           | Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-----------------------|------|-------------|------|-------------------|
| 1    | 95-8984     | 1    | Tube-HYD              | 17   | 95-8980     | 1    | Tube ASM          |
| 2    | 340-70      | 5    | Nut-Lock              | 18   | 95-8981     | 1    | Tube ASM          |
| 3    | 340-68      | 2    | Fitting-Tee, Bulkhead | 19   | 95-8982     | 1    | Tube ASM          |
| 3:1  | 237-22      | 3    | O-Ring                | 20   | 93-2509     | 2    | Clamp-Tube        |
| 4    | 95-8831     | 1    | Hose-HYD              | 21   | 3256-22     | 6    | Washer-Flat       |
| 5    | 340-77      | 2    | Fitting-Elbow, 90 DEG | 22   | 321-11      | 2    | Screw-HH          |
| 5:1  | 237-22      | 1    | O-Ring                | 23   | 3296-42     | 2    | Nut-Lock, NI      |
| 5:2  | 237-42      | 1    | O-Ring                | 24   | 95-8990     | 1    | Shaft-Pivot, Rear |
| 6    | 95-8823     | 1    | Hose ASM              | 25   | 3220-9      | 1    | Nut-Jam           |
| 7    | 95-8983     | 1    | Tube-HYD              | 26   | 86-1480     | 1    | Washer            |
| 8    | 340-154     | 1    | Union-Bulkhead        | 27   | 115-3475    | 1    | Rear Liftarm ASM  |
| 8:1  | 237-22      | 2    | O-Ring                | 27:1 | 69-6470     | 2    | Bushing-Castor    |
| 9    | 93-6762     | 1    | Switch-Ball           | 27:3 | 302-5       | 1    | Fitting-Grease    |
| 10   | 112-9916    | 1    | HYD Cylinder ASM      | 28   | 3234-27     | 1    | Screw-HHF         |
| 11   | 3-6498      | 1    | Washer-Thrust         | 29   | 75-7730     | 1    | Washer-Thrust     |
| 12   | 95-8820     | 1    | Hose ASM              | 31   | 104-1392    | 1    | Shaft-Pivot       |
| 13   | 340-127     | 3    | Nut-Bulkhead          | 32   | 323-6       | 1    | Screw-HH          |
| 14   | 93-9151     | 1    | Fitting-HYD           | 33   | 323-4       | 1    | Screw-HH          |
| 14:1 | 237-30      | 2    | O-Ring                | 34   | 63-7400     | 1    | Washer-Rebound    |
| 15   | 95-8824     | 1    | Hose ASM              | 35   | 3-6781      | 1    | Washer-Thrust     |
| 16   | 115-3411    | 1    | Hose-HYD              | 36   | 283-71      | 1    | Pin-Lynch         |

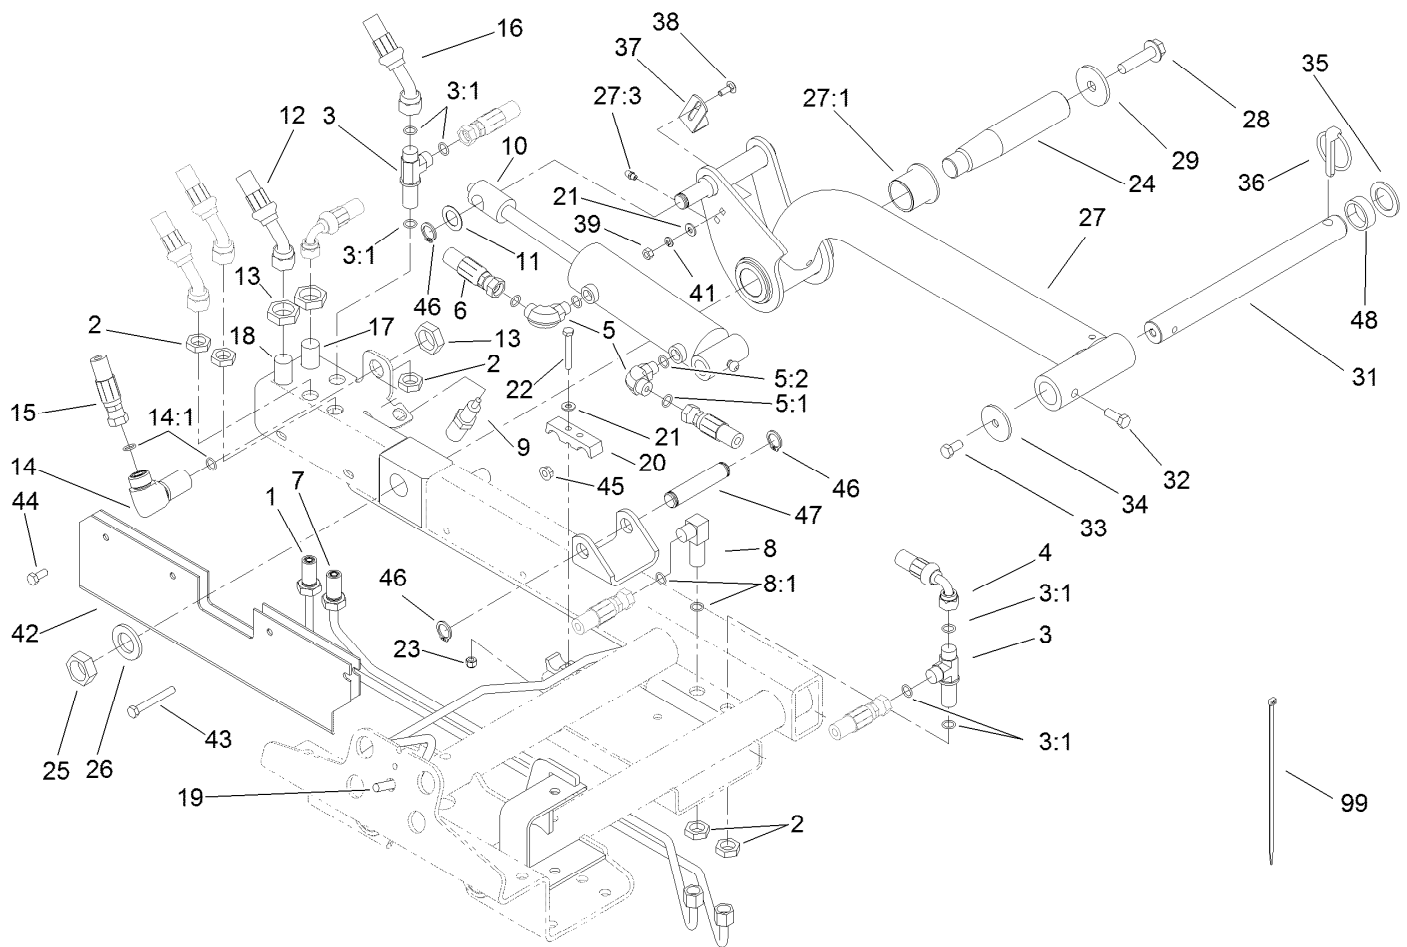

## Rear Lift Arm Assembly (continued)


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 37   | 95-8613     | 1    | Bracket-Switch |
| 38   | 3229-1      | 2    | Bolt-CARR      |
| 39   | 3217-5      | 2    | Nut-Hex        |
| 41   | 3253-3      | 2    | Washer-Lock    |
| 42   | 104-0453-03 | 1    | Guard          |
| 43   | 322-12      | 2    | Screw-HH       |
| 44   | 322-3       | 2    | Screw-HH       |
 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 45   | 32128-20    | 4    | Nut-HF         |
| 46   | 32120-93    | 3    | Ring-Retaining |
| 47   | 95-8575     | 1    | Pin-Clevis     |
| 48   | 63-0070     | 1    | Spacer         |
| 99   | 3290-379    | 1    | Tie-Cable      |
| 99   | 3334-945    | 1    | Tie-Cable      |

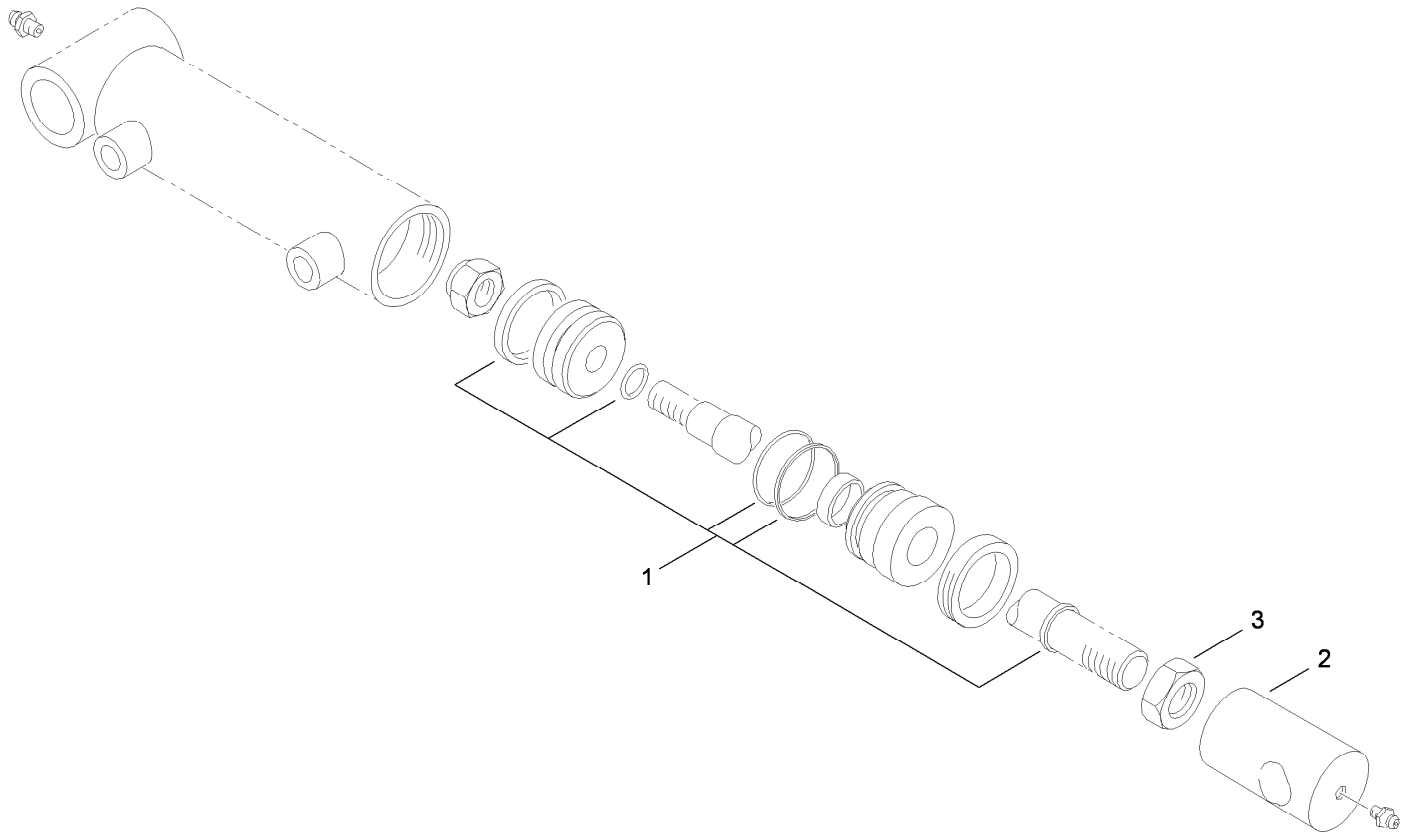

## Hydraulic Cylinder Assembly No. 112-9916

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 115-3410           | 1           | Seal Kit           |
| 2           | 108-9035           | 1           | Clevis             |
| 3           | 3220-7             | 1           | Nut-Jam            |

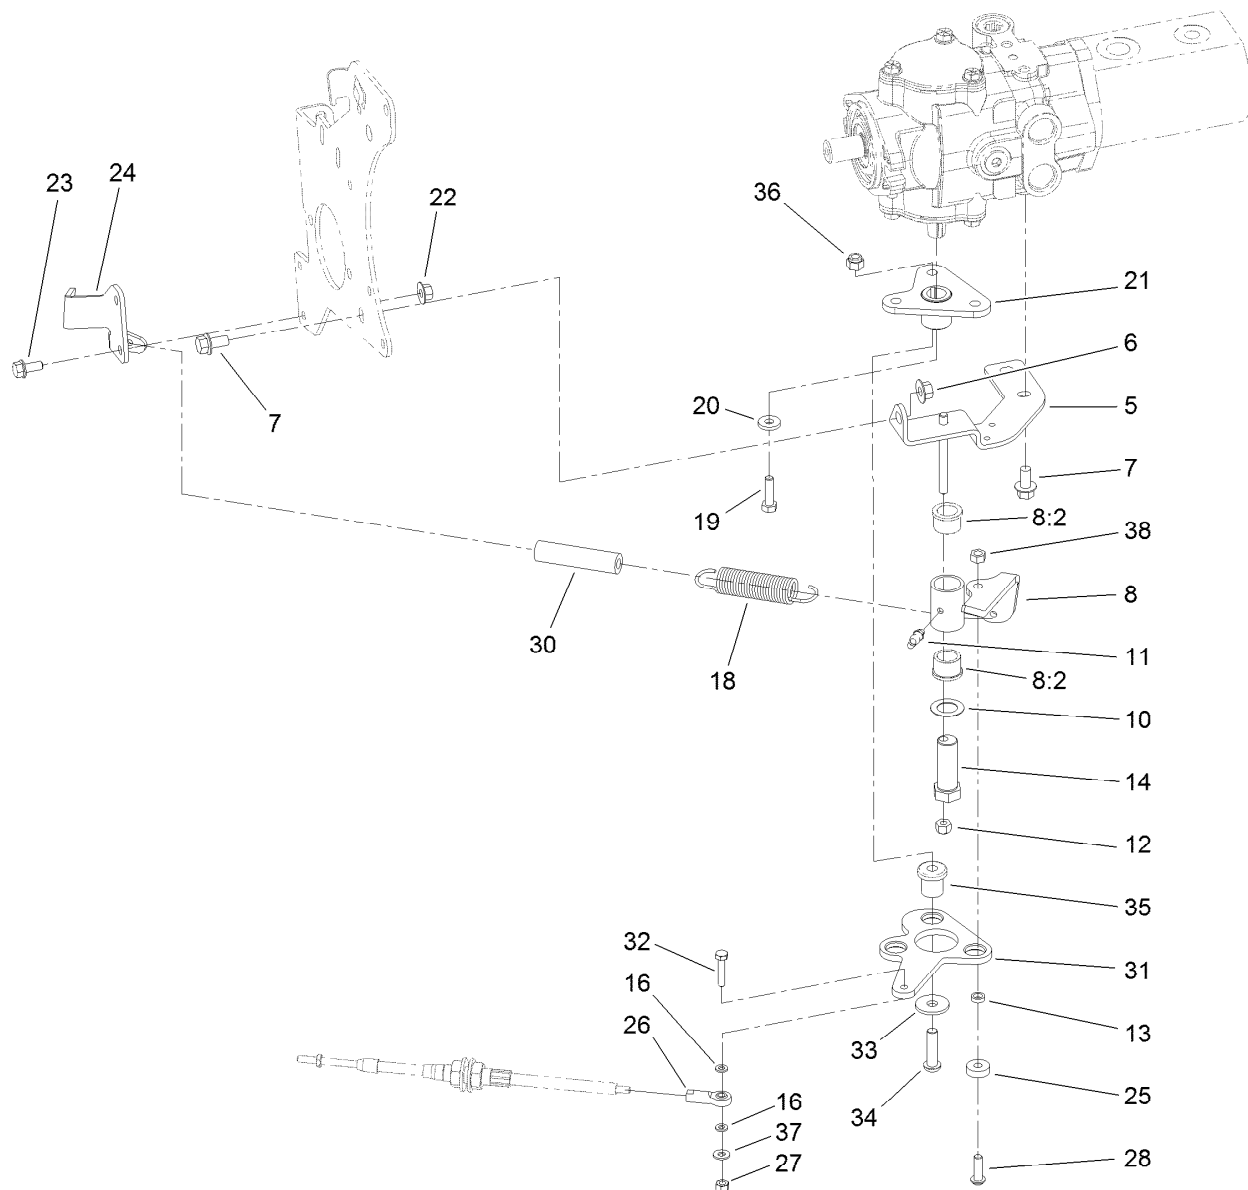

## Neutral Arm Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 5    | 95-8960-03  | 1    | Bracket-Neutral  |
| 6    | 32128-43    | 1    | Nut-Flange       |
| 7    | 3234-1      | 3    | Screw-HHF        |
| 8    | 104-0422    | 1    | Neutral Arm ASM  |
| 8:2  | 256-113     | 2    | Bushing-Flange   |
| 10   | 3-6498      | 1    | Washer-Thrust    |
| 11   | 302-60      | 1    | Fitting-Grease   |
| 12   | 3296-29     | 1    | Nut-Lock, NI     |
| 13   | 100-4817    | 1    | Spacer-Bearing   |
| 14   | 76-8640     | 1    | Stud-Traction    |
| 16   | 33093-00    | 2    | Washer-Flat      |
| 18   | 94-1369     | 1    | Spring-Extension |
| 19   | 3210-6      | 1    | Screw-HH         |
| 20   | 88-7200     | 1    | Washer-Flat      |
| 21   | 120-5566    | 1    | Hub              |
| 22   | 32128-44    | 2    | Nut              |

 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 23   | 3234-5      | 2    | Screw-HHF              |
| 24   | 104-0464-03 | 1    | Bracket-Support, Cable |
| 25   | 251-259     | 1    | Bearing-Ball           |
| 26   | 2411-41     | 1    | Rod End-Ball Joint     |
| 27   | 3296-42     | 1    | Nut-Lock, NI           |
| 28   | 3274-104    | 1    | Screw-HSBH             |
| 30   | 99-3556     | 1    | Hose                   |
| 31   | 99-3594-03  | 1    | Lever-Pump             |
| 32   | 321-8       | 1    | Screw-HH               |
| 33   | 2844        | 3    | Washer                 |
| 34   | 95-3857     | 3    | Screw-HSBH             |
| 35   | 63-9750     | 3    | Mount                  |
| 36   | 3296-39     | 3    | Nut-Lock, NI           |
| 37   | 3256-22     | 1    | Washer-Flat            |
| 38   | 32153-3     | 1    | Nut-Hex, Side Deform   |

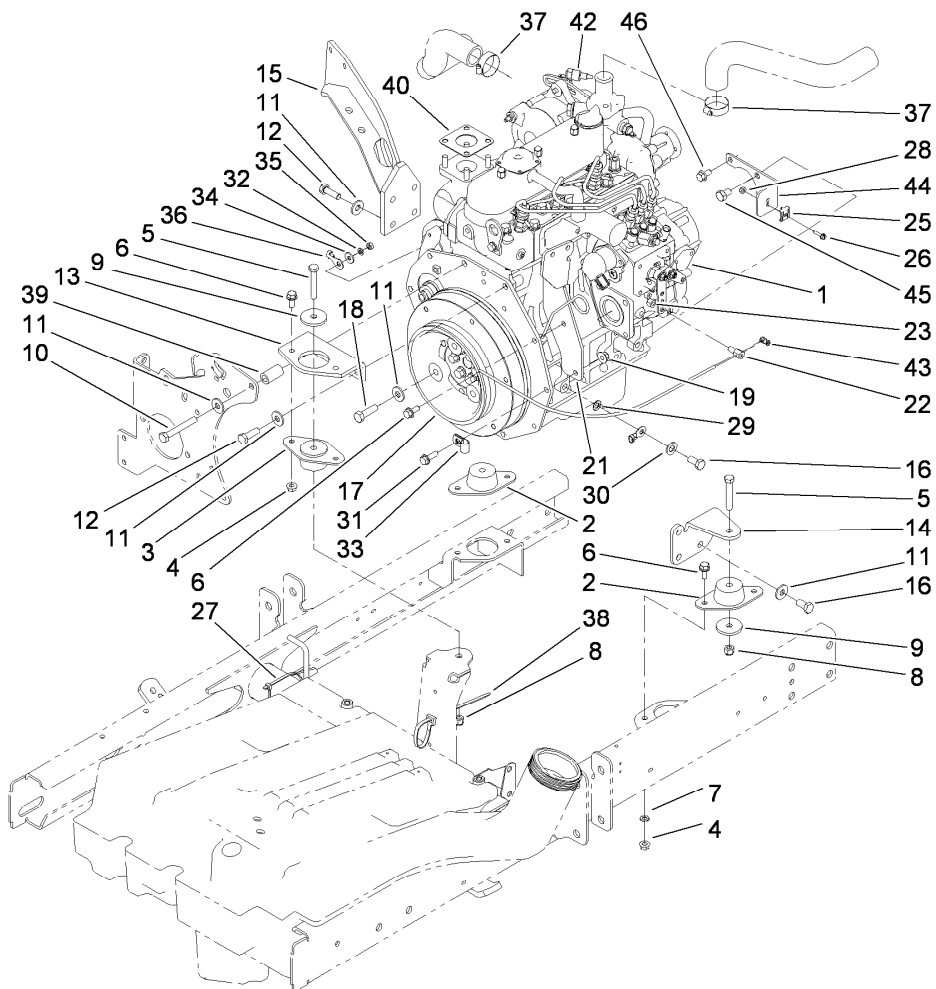

## Engine Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 127-9659    | 1    | Engine-Kubota, D1105       |
| 2    | 121-9076    | 2    | Mount-Engine               |
| 3    | 93-5265     | 1    | Mount-Engine               |
| 4    | 32128-20    | 6    | Nut-HF                     |
| 5    | 323-11      | 3    | Screw-HH                   |
| 6    | 3234-5      | 7    | Screw-HHF                  |
| 7    | 3255-8      | 1    | Washer-Lock                |
| 8    | 3296-39     | 3    | Nut-Lock, NI               |
| 9    | 80-8560     | 3    | Washer-Hardened            |
| 10   | 42-9370     | 1    | Screw-HH                   |
| 11   | 80-6990     | 12   | Washer-Hardened            |
| 12   | 95-8812     | 5    | Screw-HH                   |
| 13   | 95-8926-03  | 1    | Mount-Engine, Front        |
| 14   | 95-8937-03  | 1    | Mount-Engine, LH           |
| 15   | 100-4838-03 | 1    | Mount-Engine               |
| 16   | 63-7790     | 4    | Screw-Cap                  |
| 17   | 99-3412-03  | 1    | Pulley                     |
| 18   | 56-2140     | 3    | Screw-HH                   |
| 19   | 32128-44    | 2    | Nut                        |
| 21   | 115-3487-03 | 1    | Bracket-Mount, Fuel Filter |
| 22   | 98-9311     | 1    | Swivel-Throttle            |
| 23   | 3296-20     | 1    | Nut-Lock, NI               |

 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 25   | 81-1690     | 1    | Clamp-Cable                |
| 26   | 32105-13    | 1    | Screw-HWH                  |
| 27   | 3290-379    | 2    | Tie-Cable                  |
| 28   | 3296-2      | 1    | Nut-Lock, NI               |
| 29   | 3255-9      | 1    | Washer-Lock                |
| 30   | 3256-25     | 1    | Washer-Flat                |
| 31   | 3234-17     | 1    | Screw-HHF                  |
| 32   | 3256-78     | 1    | Washer-Flat                |
| 33   | 2412-10     | 1    | Clamp-R                    |
| 34   | 43-5930     | 1    | Washer-Lock, Spring        |
| 35   | 48-7890     | 1    | Nut-Hex                    |
| 36   | 99-3441     | 1    | Harness-Wire, Fusible Link |
| 37   | 2412-34     | 2    | Clamp-Hose                 |
| 38   | 3290-378    | 1    | Tie-Cable                  |
| 39   | 95-8736     | 1    | Spacer                     |
| 40   | 98-9611     | 1    | Gasket                     |
| 42   | 99-3582     | 1    | Thermoswitch               |
| 43   | 112-9919    | 1    | Stop-Cable, Throttle       |
| 44   | 110-9009-03 | 1    | Bracket-Cable, Throttle    |
| 45   | 70-8470     | 1    | Screw-HH                   |
| 46   | 33104-016   | 1    | Screw-HHF                  |

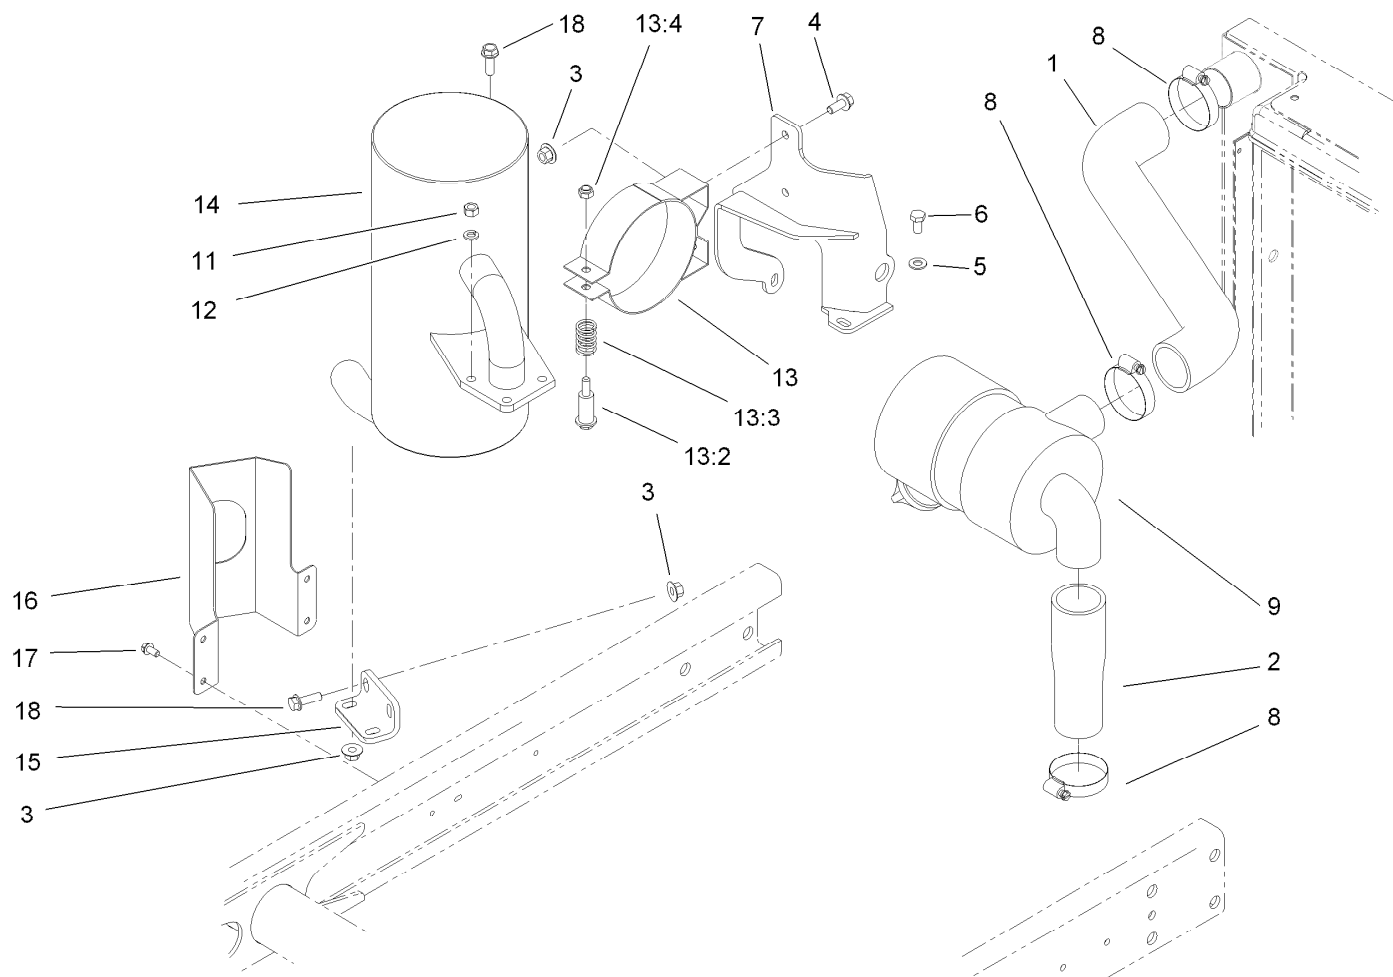

## Air Cleaner and Muffler Assembly


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 95-8946     | 1    | Hose-Upper, Air Inlet |
| 2    | 95-8947     | 1    | Hose-Air Inlet, Lower |
| 3    | 32128-44    | 6    | Nut                   |
| 4    | 3234-5      | 3    | Screw-HHF             |
| 5    | 3256-23     | 2    | Washer-Plain          |
| 6    | 33114-016   | 2    | Screw-HH              |
| 7    | 99-3355-03  | 1    | Bracket-Filter, Air   |
| 8    | 2412-92     | 4    | Clamp-Hose            |
| 9    | 93-2190     | 1    | Air Cleaner ASM       |
| 11   | 33014-00    | 4    | Nut-Hex               |
| 12   | 3253-4      | 4    | Washer-Lock           |
 
| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 13   | 93-2191     | 1    | Air Cleaner Mounting Band ASM |
| 13:2 | 94-3653     | 1    | Bolt                          |
| 13:3 | 94-3654     | 1    | Spring                        |
| 13:4 | 48-9510     | 1    | Nut                           |
| 14   | 104-4834    | 1    | Muffler                       |
| 15   | 95-8943-03  | 1    | Bracket-Muffler               |
| 16   | 99-3425-03  | 1    | Guard-Exhaust                 |
| 17   | 32144-4     | 4    | Screw-HWH                     |
| 18   | 3234-17     | 3    | Screw-HHF                     |

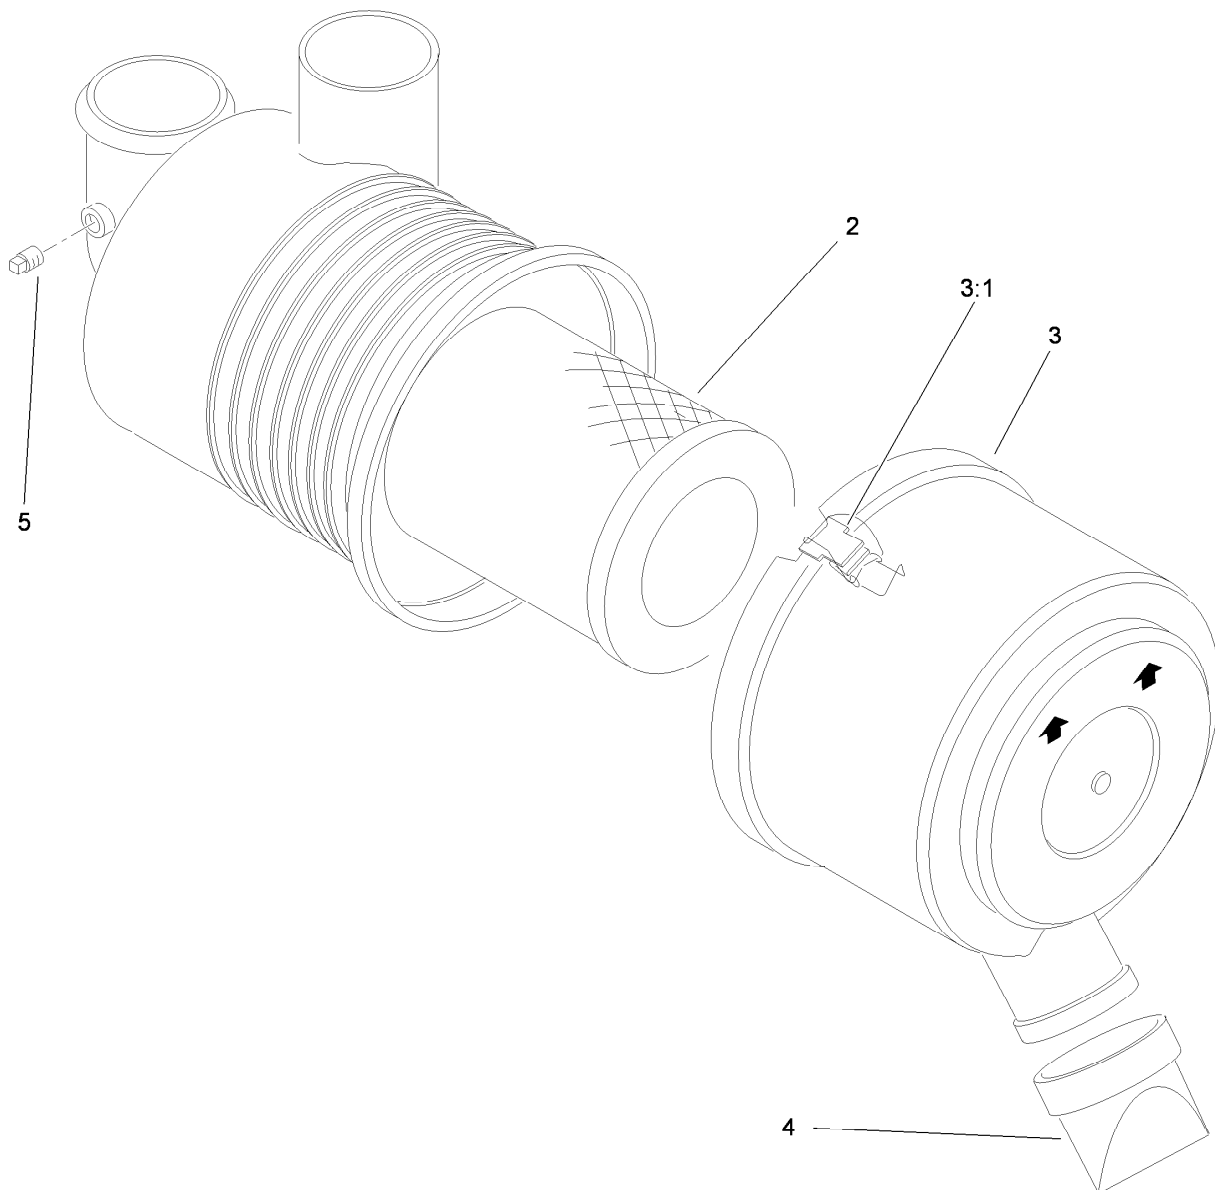

## Air Cleaner Assembly No. 93-2190

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 2    | 108-3811    | 1    | Filter-Air         |
| 3    | 94-3652     | 1    | Cover ASM          |
| 3:1  | 1-643283    | 2    | Latch-Cleaner, Air |
| 4    | 87-9400     | 1    | Valve-Vacuator     |
| 5    | 285-17      | 1    | Plug-Pipe          |

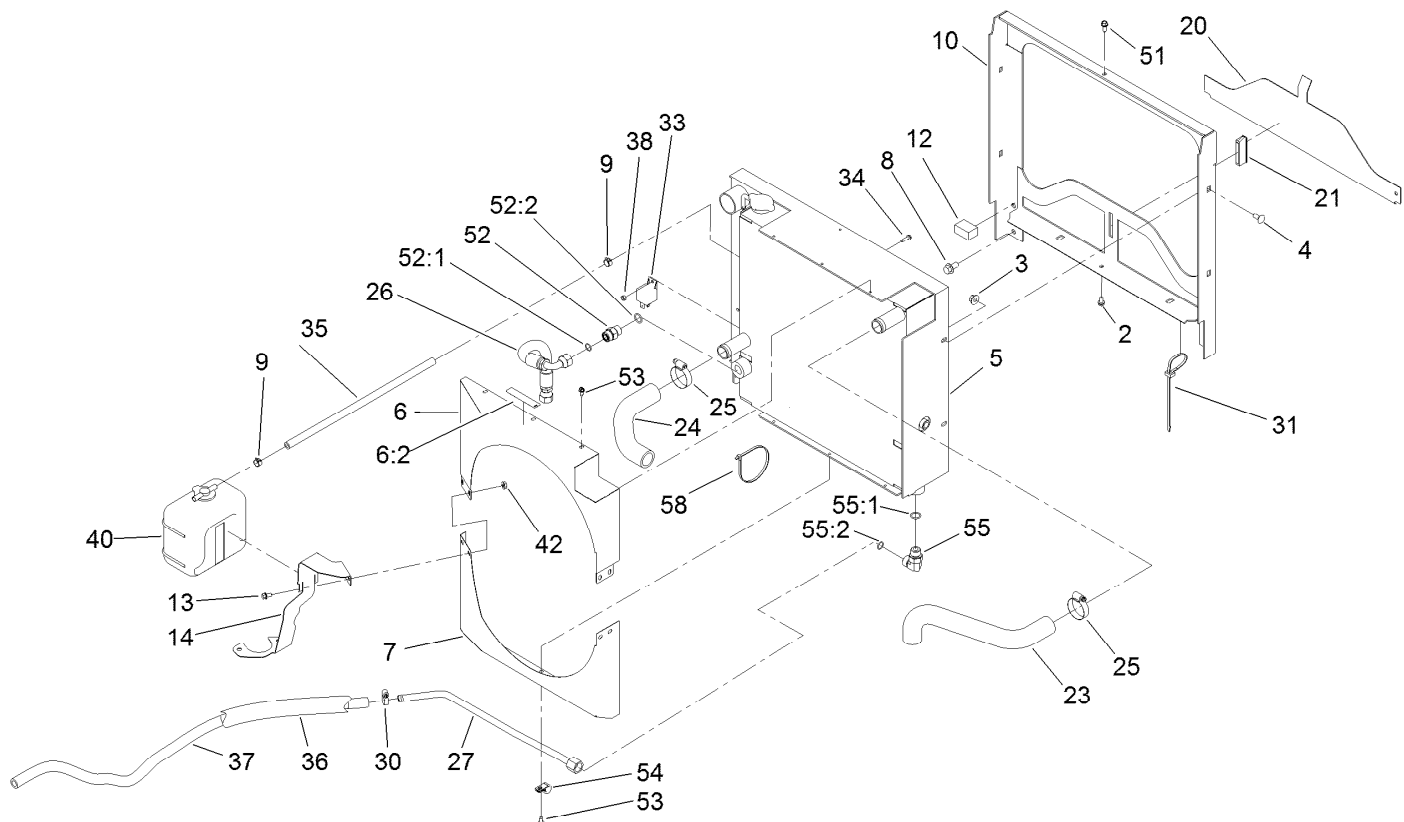

## Radiator Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 2    | 32104-116   | 6    | Screw-HWHTF                 |
| 3    | 32128-44    | 4    | Nut                         |
| 4    | 3230-1      | 4    | Bolt-CARR                   |
| 5    | 120-3392    | 1    | Radiator/Oil Cooler         |
| 6    | 121-3584    | 1    | Shroud-Fan, Top             |
| 6:2  | 93-6681     | 1    | Decal-Warning, Fan          |
| 7    | 121-6254-03 | 1    | Shroud-Fan, Bottom          |
| 8    | 3234-1      | 4    | Screw-HHF                   |
| 9    | 92-2379     | 2    | Clamp-Hose                  |
| 10   | 100-4903-03 | 1    | Frame-Radiator              |
| 12   | 95-8962     | 2    | Seal-Foam, Radiator         |
| 13   | 3234-13     | 4    | Screw-HHF                   |
| 14   | 121-3604-03 | 1    | Bracket-Mounting, Reservoir |
| 20   | 95-8702-03  | 1    | Shield-Radiator, Lower      |
| 21   | 99-3497     | 1    | Magnet                      |
| 23   | 121-3571    | 1    | Hose-Radiator, Upper        |
| 24   | 119-6748    | 1    | Hose-Radiator, Lower        |
| 25   | 2412-111    | 2    | Clamp                       |
| 26   | 104-2806    | 1    | Hose-HYD                    |
| 27   | 121-3572    | 1    | Tube-HYD                    |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 30   | 2412-36     | 1    | Clamp-Hose            |
| 31   | 3290-378    | 2    | Tie-Cable             |
| 33   | 99-7435     | 1    | Relay                 |
| 34   | 32105-13    | 1    | Screw-HWH             |
| 35   | 110-4105    | 1    | Hose-Fuel             |
| 36   | 56-7985     | 1    | Sleeve-Protective     |
| 37   | 93-6804     | 1    | Hose                  |
| 38   | 3296-2      | 1    | Nut-Lock, NI          |
| 40   | 104-9318    | 1    | Bottle-Overflow       |
| 42   | 32128-33    | 4    | Nut-HF                |
| 51   | 119-2038    | 1    | Screw-HWH             |
| 52   | 340-4       | 1    | Fitting-Straight      |
| 52:1 | 237-30      | 1    | O-Ring                |
| 52:2 | 237-79      | 1    | O-Ring                |
| 53   | 32104-95    | 6    | Screw-HWH             |
| 54   | 2412-73     | 2    | Clamp-R               |
| 55   | 340-98      | 1    | Fitting-Elbow, 90 DEG |
| 55:1 | 237-79      | 1    | O-Ring                |
| 55:2 | 237-30      | 1    | O-Ring                |
| 58   | 3290-379    | 1    | Tie-Cable             |

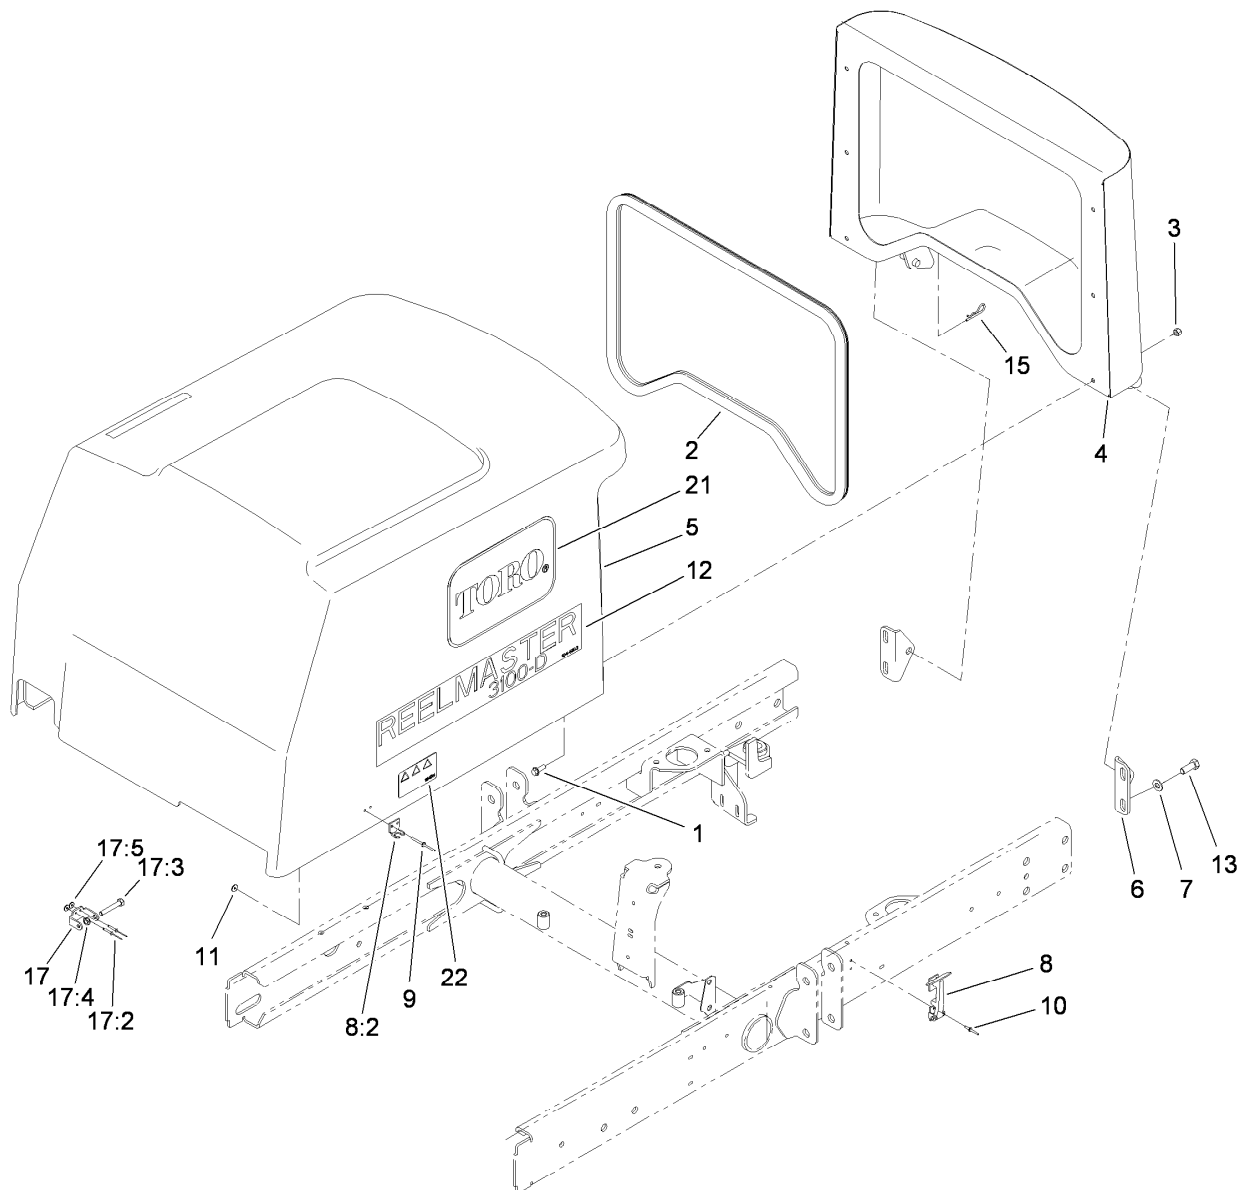


## Hood Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 3234-4      | 6    | Screw-HHF              |
| 2    | 95-8809     | 1    | Trim-Seal              |
| 3    | 3296-42     | 6    | Nut-Lock, NI           |
| 4    | 95-8724-03  | 1    | Screen-Hood            |
| 5    | 95-8935     | 1    | Hood ASM               |
| 5:1  | 106-8114    | 1    | Heat Tape Repair Kit ● |
| 6    | 95-8728     | 2    | Bracket-Pivot, Hood    |
| 7    | 3256-24     | 8    | Washer-Flat            |
| 8    | 59-9740     | 2    | Flex Draw Latch ASM    |
| 8:2  | 249-40      | 1    | Keeper                 |
| 9    | 107-0333    | 4    | Rivet-Pop              |
| 10   | 3290-55     | 4    | Rivet-Pop              |

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 11   | 3269-10     | 4    | Washer-Back  |
| 12   | 104-5153    | 2    | Decal-Hood   |
| 13   | 323-6       | 4    | Screw-HH     |
| 15   | 3290-467    | 1    | Pin-Hair     |
| 17   | 119-2004    | 1    | CE Latch Kit |
| 17:2 | 107-0333    | 2    | Rivet-Pop    |
| 17:3 | 322-10      | 1    | Screw-HH     |
| 17:4 | 3296-47     | 1    | Nut-Lock, NI |
| 17:5 | 3269-10     | 2    | Washer-Back  |
| 21   | 66-6140     | 2    | Decal        |
| 22   | 106-6754    | 1    | Decal-Danger |

 
● Not illustrated

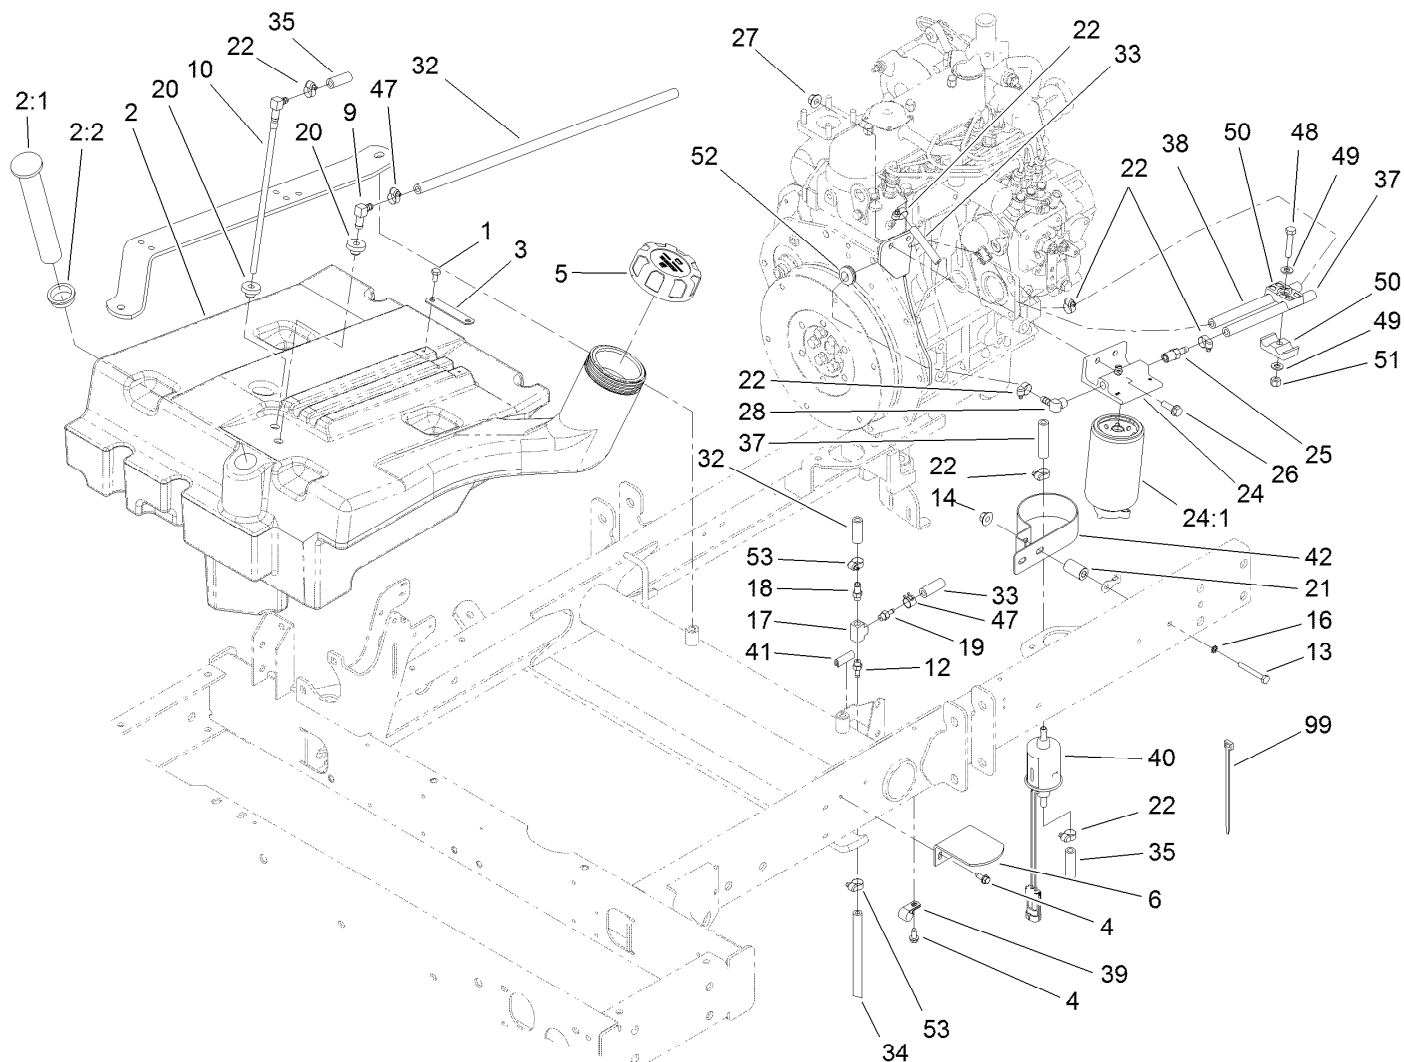

## Fuel System Assembly


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 321-2       | 2    | Screw-HH              |
| 2    | 95-8620     | 1    | Tank-Fuel             |
| 2:1  | 95-8971     | 1    | Gauge-Fuel            |
| 2:2  | 95-8972     | 1    | Grommet               |
| 3    | 95-8881     | 1    | Strap-Line, Fuel      |
| 4    | 32144-10    | 3    | Screw-HWH             |
| 5    | 114-5064    | 1    | Cap-Diesel            |
| 6    | 95-8968-03  | 1    | Support-Tank, Fuel    |
| 9    | 46-6550     | 1    | Fitting-Elbow, 90 DEG |
| 10   | 110-9689    | 1    | Pipe-Stand            |
| 12   | 304-73      | 1    | Fitting-Straight      |
| 13   | 321-14      | 1    | Screw-HH              |
| 14   | 32128-33    | 1    | Nut-HF                |
| 16   | 3256-22     | 1    | Washer-Flat           |
| 17   | 354-20      | 1    | Fitting-Tee           |
| 18   | 354-21      | 1    | Fitting-Barbed        |
| 19   | 354-22      | 1    | Fitting-Barbed        |
| 20   | 46-6560     | 2    | Bushing               |
| 21   | 77-3180     | 1    | Spacer                |
| 22   | 92-2379     | 7    | Clamp-Hose            |
| 24   | 110-9044    | 1    | Separator-Filter      |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 24:1 | 110-9049    | 1    | Filter-Spin On     |
| 25   | 353-783     | 1    | Fitting-STR        |
| 26   | 3234-17     | 2    | Screw-HHF          |
| 27   | 32128-44    | 2    | Nut                |
| 28   | 353-781     | 1    | Fitting-HYD, 90    |
| 32   | 110-6187    | 1    | Hose-Fuel          |
| 33   | 110-8751    | 1    | Hose-Fuel          |
| 34   | 110-5701    | 1    | Hose-Fuel          |
| 35   | 110-4100    | 1    | Hose-Fuel          |
| 37   | 110-4109    | 1    | Hose-Fuel          |
| 38   | 110-4113    | 1    | Hose-Fuel          |
| 39   | 2412-73     | 1    | Clamp-R            |
| 40   | 110-8806    | 1    | Pump-Fuel          |
| 41   | 110-8754    | 1    | Trim               |
| 42   | 110-8817    | 1    | Bracket-Pump, Fuel |
| 47   | 2412-80     | 2    | Clamp-Hose         |
| 48   | 322-8       | 1    | Screw-HH           |
| 49   | 3256-23     | 2    | Washer-Plain       |
| 50   | 56-7971     | 2    | Clamp-Tube         |
| 51   | 3296-29     | 1    | Nut-Lock, NI       |
| 52   | 1-543296    | 1    | Grommet            |

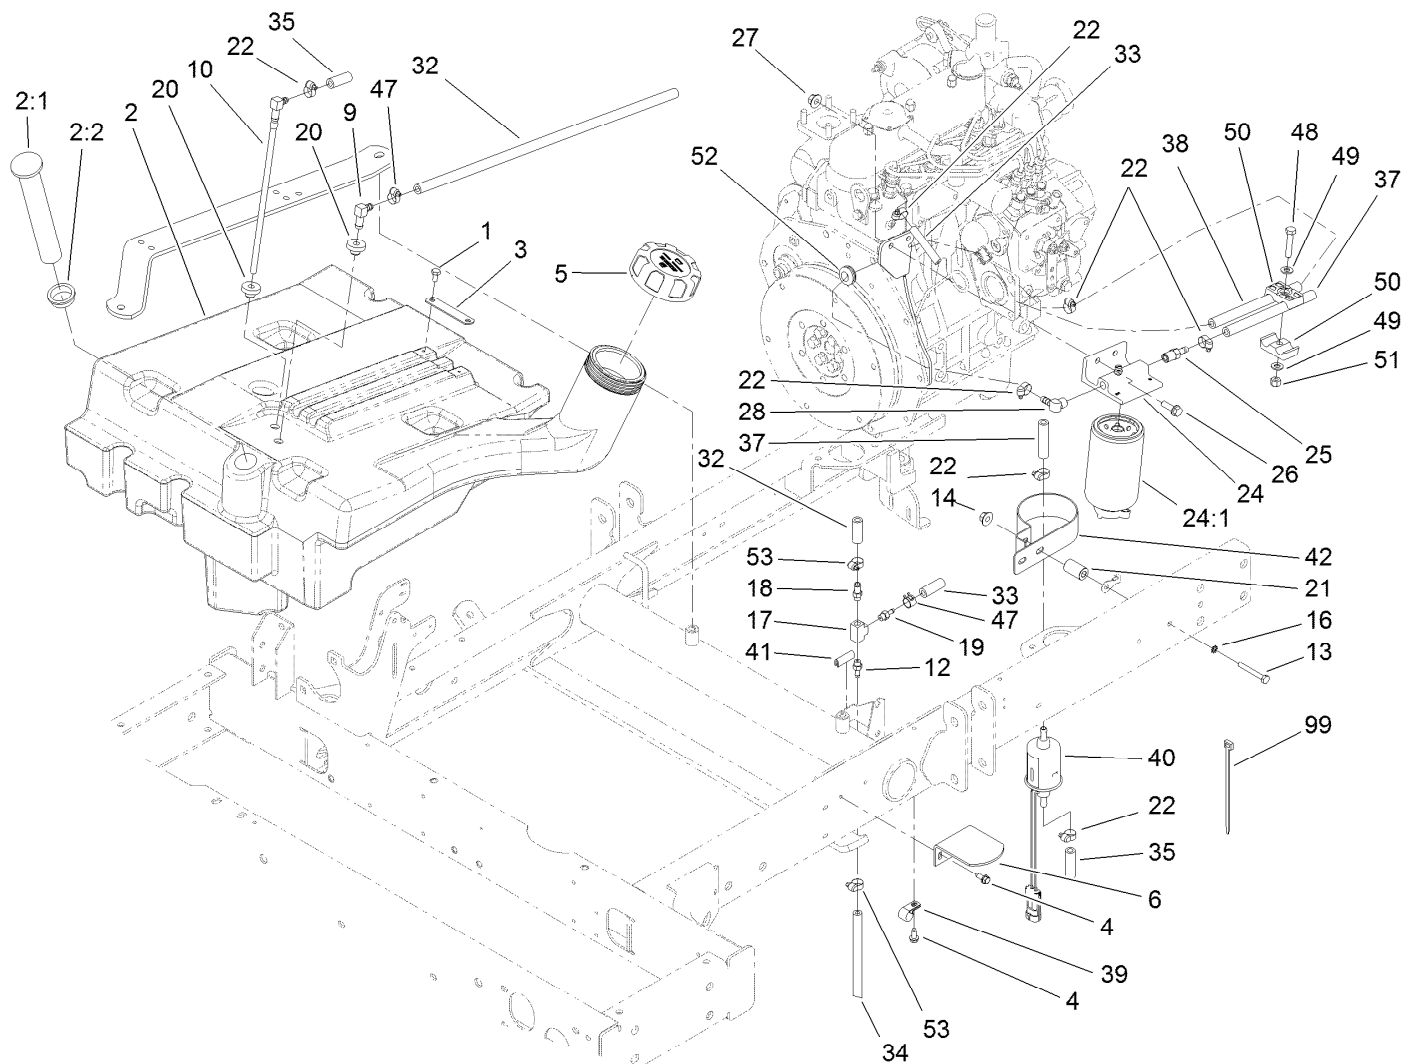

## Fuel System Assembly (continued)

 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 53   | 2412-108    | 2    | Clamp-Worm  |
| 99   | 3290-379    | 2    | Tie-Cable   |

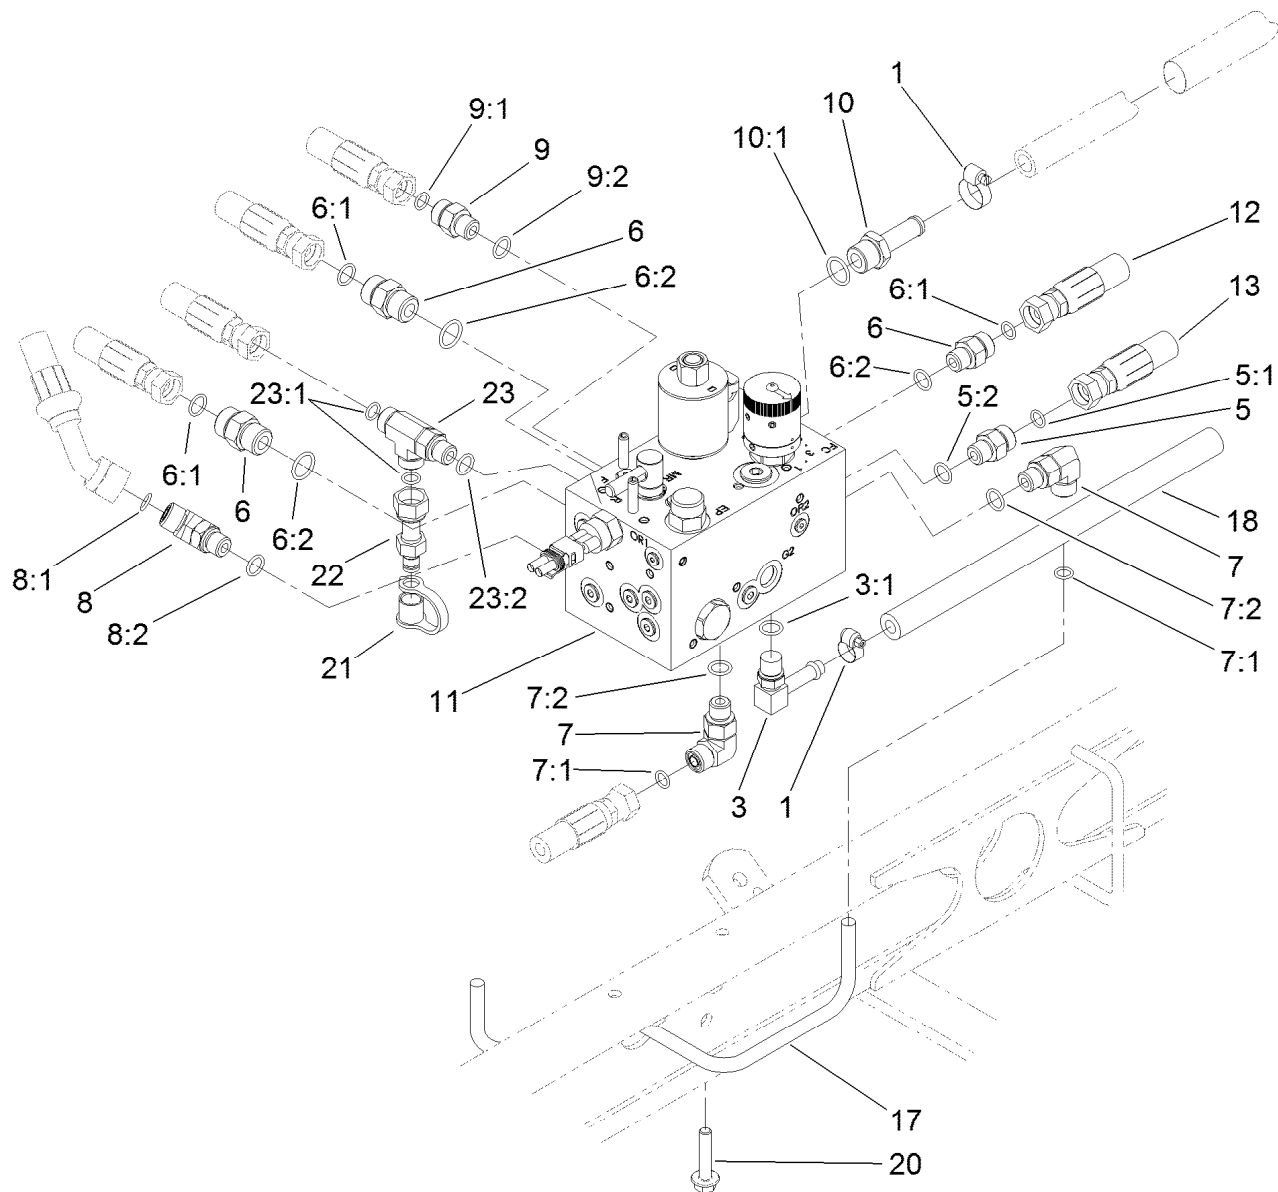

## Manifold Block Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 2412-36     | 2    | Clamp-Hose            |
| 3    | 100-4887    | 1    | Fitting-Elbow, 90     |
| 3:1  | 237-42      | 1    | O-Ring                |
| 5    | 340-2       | 1    | Fitting-Straight      |
| 5:1  | 237-22      | 1    | O-Ring                |
| 5:2  | 237-42      | 1    | O-Ring                |
| 6    | 340-4       | 3    | Fitting-Straight      |
| 6:1  | 237-30      | 1    | O-Ring                |
| 6:2  | 237-79      | 1    | O-Ring                |
| 7    | 340-77      | 2    | Fitting-Elbow, 90 DEG |
| 7:1  | 237-22      | 1    | O-Ring                |
| 7:2  | 237-42      | 1    | O-Ring                |
| 8    | 340-87      | 1    | Fitting-Elbow, 45 DEG |
| 8:1  | 237-22      | 1    | O-Ring                |
| 8:2  | 237-42      | 1    | O-Ring                |
| 9    | 340-92      | 1    | Fitting-Straight      |
 
| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 9:1  | 237-78      | 1    | O-Ring       |
| 9:2  | 237-21      | 1    | O-Ring       |
| 10   | 354-121     | 1    | Fitting-STR  |
| 10:1 | 237-79      | 1    | O-Ring       |
| 11   | 108-9037    | 1    | Manifold ASM |
| 12   | 95-8829     | 1    | Hose ASM     |
| 13   | 106-4197    | 1    | Hose ASM     |
| 17   | 95-8792     | 1    | Tube ASM     |
| 18   | 80-7342     | 1    | Hose-HYD     |
| 20   | 104-8300    | 2    | Nut-HF, NI   |
| 21   | 354-79      | 1    | Cap-Dust     |
| 22   | 86-5480     | 1    | Nipple-Test  |
| 23   | 340-86      | 1    | Fitting-Tee  |
| 23:1 | 237-22      | 2    | O-Ring       |
| 23:2 | 237-42      | 1    | O-Ring       |

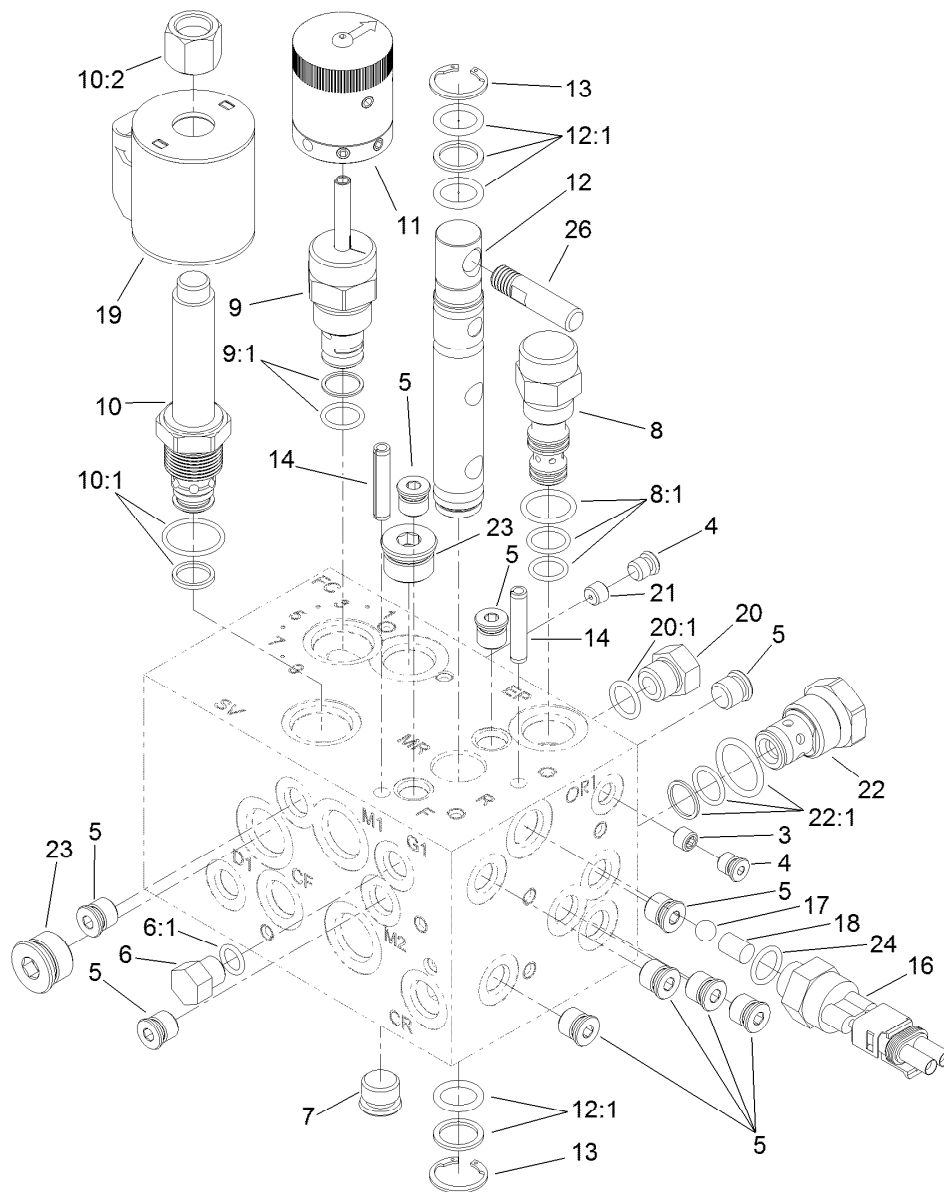


## Hydraulic Manifold Assembly No. 108-9037

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 3    | 110-8771    | 1    | Orifice-.020               |
| 4    | 106-1024    | 2    | Plug-Leak, Zero            |
| 5    | 106-1025    | 10   | Plug-HYD                   |
| 6    | 353-512     | 1    | Plug                       |
| 6:1  | 237-78      | 1    | O-Ring                     |
| 7    | 106-1026    | 1    | Plug-HYD                   |
| 8    | 110-8770    | 1    | Logic Element              |
| 8:1  | 110-8773    | 1    | Seal Kit                   |
| 9    | 110-8769    | 1    | Valve-Control, Manual Flow |
| 9:1  | 110-2633    | 1    | Seal Kit ●                 |
| 10   | 110-8768    | 1    | Valve-Relief, Solenoid     |
| 10:1 | 110-6316    | 1    | Seal Kit ●                 |
| 10:2 | 110-2635    | 1    | Nut-Coil                   |
| 11   | 110-8767    | 1    | Rotary Handle ASM          |
| 12   | 117-0108    | 1    | Spool-Rotary               |

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 12:1 | 117-0109    | 1    | Seal Kit       |
| 13   | 112-6532    | 2    | Ring-Retaining |
| 14   | 112-6531    | 2    | Pin-Spring     |
| 16   | 72-4310     | 1    | Switch-Ball    |
| 17   | 110-8762    | 1    | Ball-Chrome    |
| 18   | 110-8761    | 1    | Pin-Dowel      |
| 19   | 110-6344    | 1    | Coil-12V, DC   |
| 20   | 353-508     | 1    | Plug-HH        |
| 20:1 | 237-42      | 1    | O-Ring         |
| 21   | 110-8760    | 1    | Orifice-.073   |
| 22   | 110-8759    | 1    | Valve-Check    |
| 22:1 | 110-8772    | 1    | Seal Kit ●     |
| 23   | 106-1027    | 2    | Plug           |
| 24   | 110-8757    | 1    | O-Ring         |
| 26   | 110-8758    | 1    | Handle-Spool   |

 
● Not illustrated

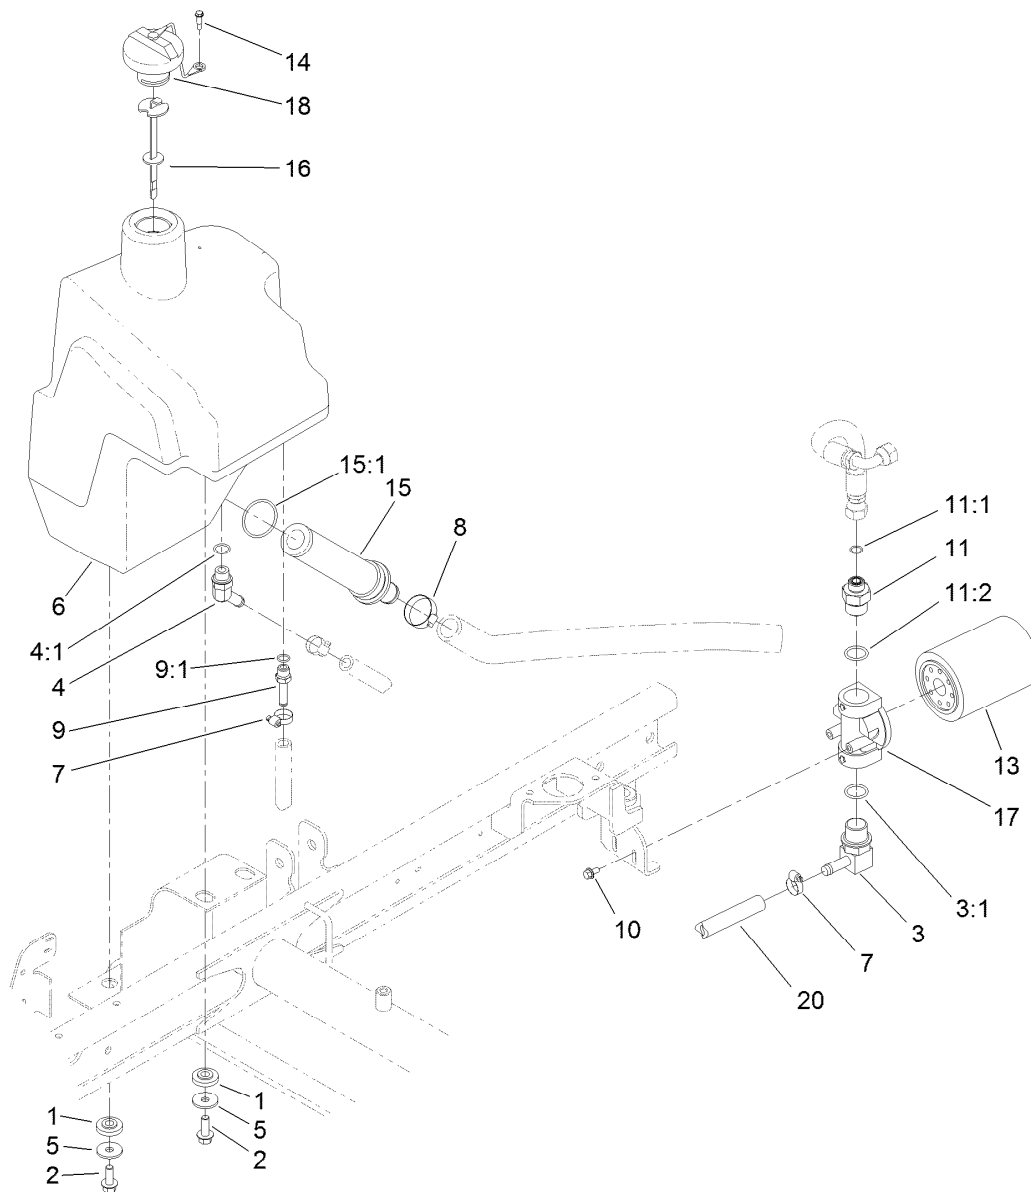

## Hydraulic Tank Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 240-11      | 4    | Bushing-Flange    |
| 2    | 3234-11     | 4    | Screw-HHF         |
| 3    | 95-8814     | 1    | Fitting-90        |
| 3:1  | 237-81      | 1    | O-Ring            |
| 4    | 354-126     | 1    | Fitting-Elbow, 45 |
| 4:1  | 237-79      | 1    | O-Ring            |
| 5    | 63-8410     | 4    | Washer            |
| 6    | 104-4840    | 1    | Tank-HYD          |
| 7    | 2412-36     | 3    | Clamp-Hose        |
| 8    | 2412-34     | 1    | Clamp-Hose        |
| 9    | 353-979     | 1    | Fitting-STR       |
| 9:1  | 237-42      | 1    | O-Ring            |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 3234-13     | 2    | Screw-HHF                |
| 11   | 100-4240    | 1    | Fitting-STR              |
| 11:1 | 237-30      | 1    | O-Ring                   |
| 11:2 | 237-81      | 1    | O-Ring                   |
| 13   | 54-0110     | 1    | Filter-Oil, Transmission |
| 14   | 57-5420     | 1    | Screw-Shoulder           |
| 15   | 104-7546    | 1    | Tank Strainer ASM        |
| 15:1 | 340-136     | 1    | O-Ring                   |
| 16   | 119-6968    | 1    | Dipstick-Oil             |
| 17   | 92-5821     | 1    | Head-Filter              |
| 18   | 93-7160     | 1    | Cap-Oil, HYD             |
| 20   | 99-3501     | 1    | Hose                     |

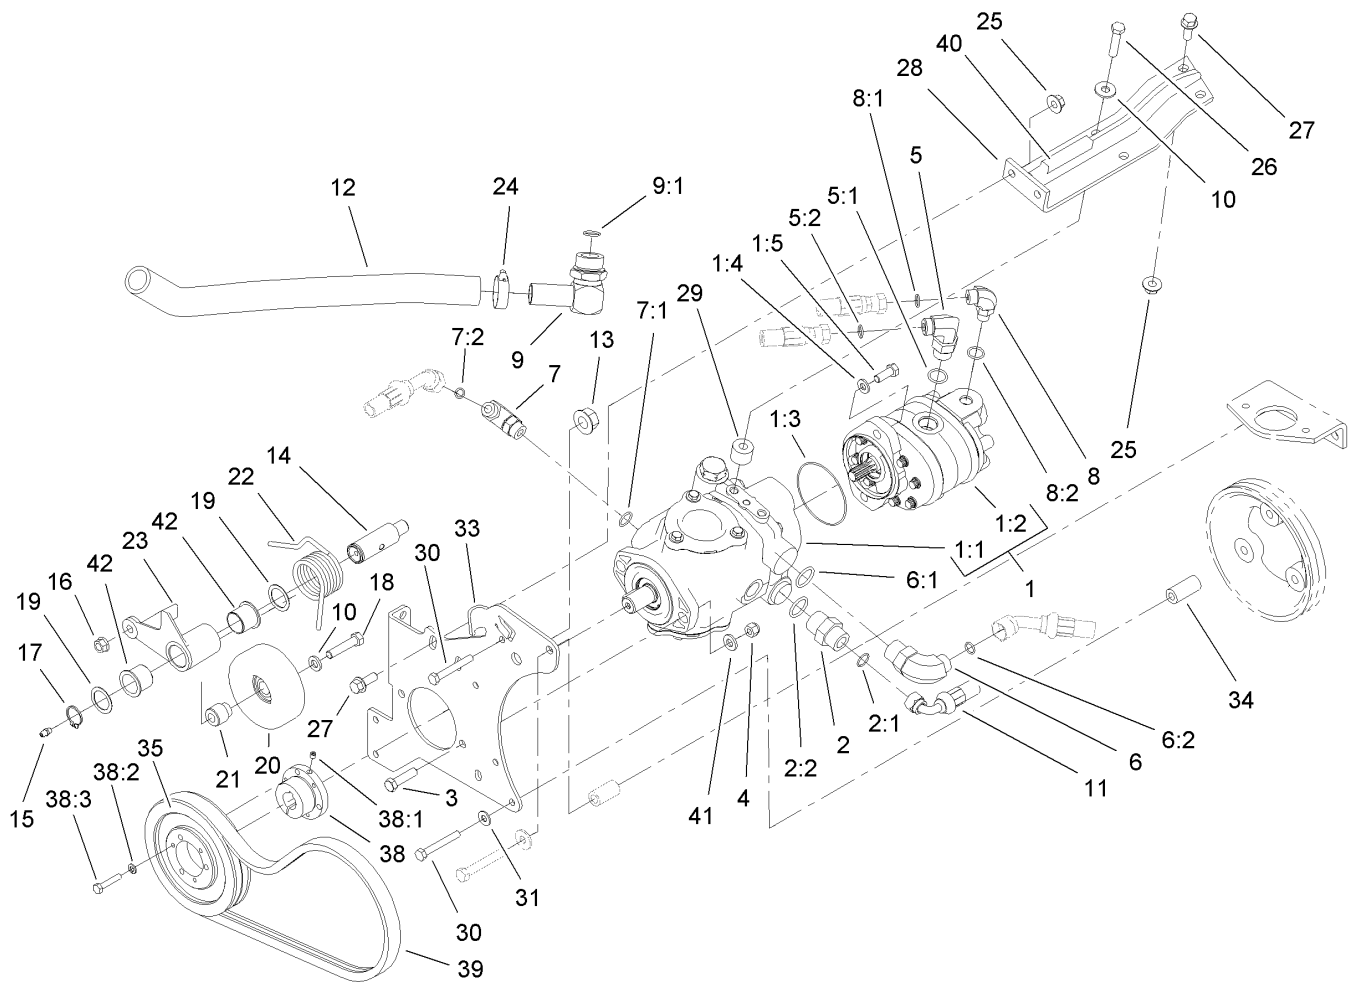


## Hydrostat Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    |             | 1    | Tandem Pump ASM ●     |
| 1:1  | 104-4890    | 1    | Piston Pump ASM       |
| 1:2  | 95-8601     | 1    | Gear Pump ASM         |
| 1:3  | 60-3520     | 1    | O-Ring                |
| 1:4  | 3256-24     | 2    | Washer-Flat           |
| 1:5  | 3274-1      | 2    | Screw-HSH             |
| 2    | 340-8       | 1    | Fitting-Straight      |
| 2:1  | 237-65      | 1    | O-Ring                |
| 2:2  | 237-81      | 1    | O-Ring                |
| 3    | 323-8       | 2    | Screw-HH              |
| 4    | 3296-39     | 2    | Nut-Lock, NI          |
| 5    | 340-105     | 1    | Fitting-Elbow, 90 DEG |
| 5:1  | 237-80      | 1    | O-Ring                |
| 5:2  | 237-30      | 1    | O-Ring                |
| 6    | 340-139     | 1    | Fitting-Elbow 90      |
| 6:1  | 237-81      | 1    | O-Ring                |
| 6:2  | 237-65      | 1    | O-Ring                |
| 7    | 340-18      | 1    | Fitting-HYD, 90 DEG   |
| 7:1  | 237-79      | 1    | O-Ring                |
| 7:2  | 237-22      | 1    | O-Ring                |
| 8    | 340-77      | 1    | Fitting-Elbow, 90 DEG |
| 8:1  | 237-22      | 1    | O-Ring                |
| 8:2  | 237-42      | 1    | O-Ring                |
| 9    | 56-9530     | 1    | Fitting-HYD, 90 DEG   |
| 9:1  | 237-117     | 1    | O-Ring                |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 80-6990     | 3    | Washer-Hardened    |
| 11   | 105-1214    | 1    | Hose-HYD           |
| 12   | 104-4845    | 1    | Hose-Suction       |
| 13   | 32128-54    | 1    | Nut-HF             |
| 14   | 99-3529     | 1    | Shaft-Pivot, Idler |
| 15   | 302-5       | 1    | Fitting-Grease     |
| 16   | 32128-21    | 1    | Nut-HF             |
| 17   | 32151-36    | 1    | Ring-Retaining     |
| 18   | 323-10      | 1    | Screw-HH           |
| 19   | 74-1810     | 2    | Washer             |
| 20   | 95-8802     | 1    | Pulley-Idler       |
| 21   | 95-8806     | 1    | Spacer             |
| 22   | 95-8917     | 1    | Spring-Torsion     |
| 23   | 99-3623-03  | 1    | Arm-Idler          |
| 24   | 2412-34     | 1    | Clamp-Hose         |
| 25   | 32128-43    | 4    | Nut-Flange         |
| 26   | 323-19      | 2    | Screw-HH           |
| 27   | 3234-11     | 4    | Screw-HHF          |
| 28   | 99-3436-03  | 1    | Support-Pump       |
| 29   | 99-3440     | 2    | Spacer             |
| 30   | 33114-060   | 4    | Screw-HH           |
| 31   | 87-8640     | 3    | Washer-Flat        |
| 33   | 95-8933-03  | 1    | Plate-Mount, Pump  |
| 34   | 95-8941     | 4    | Spacer-Mount, Pump |
| 35   | 93-6841     | 1    | Pulley             |

 ● Not serviced separately

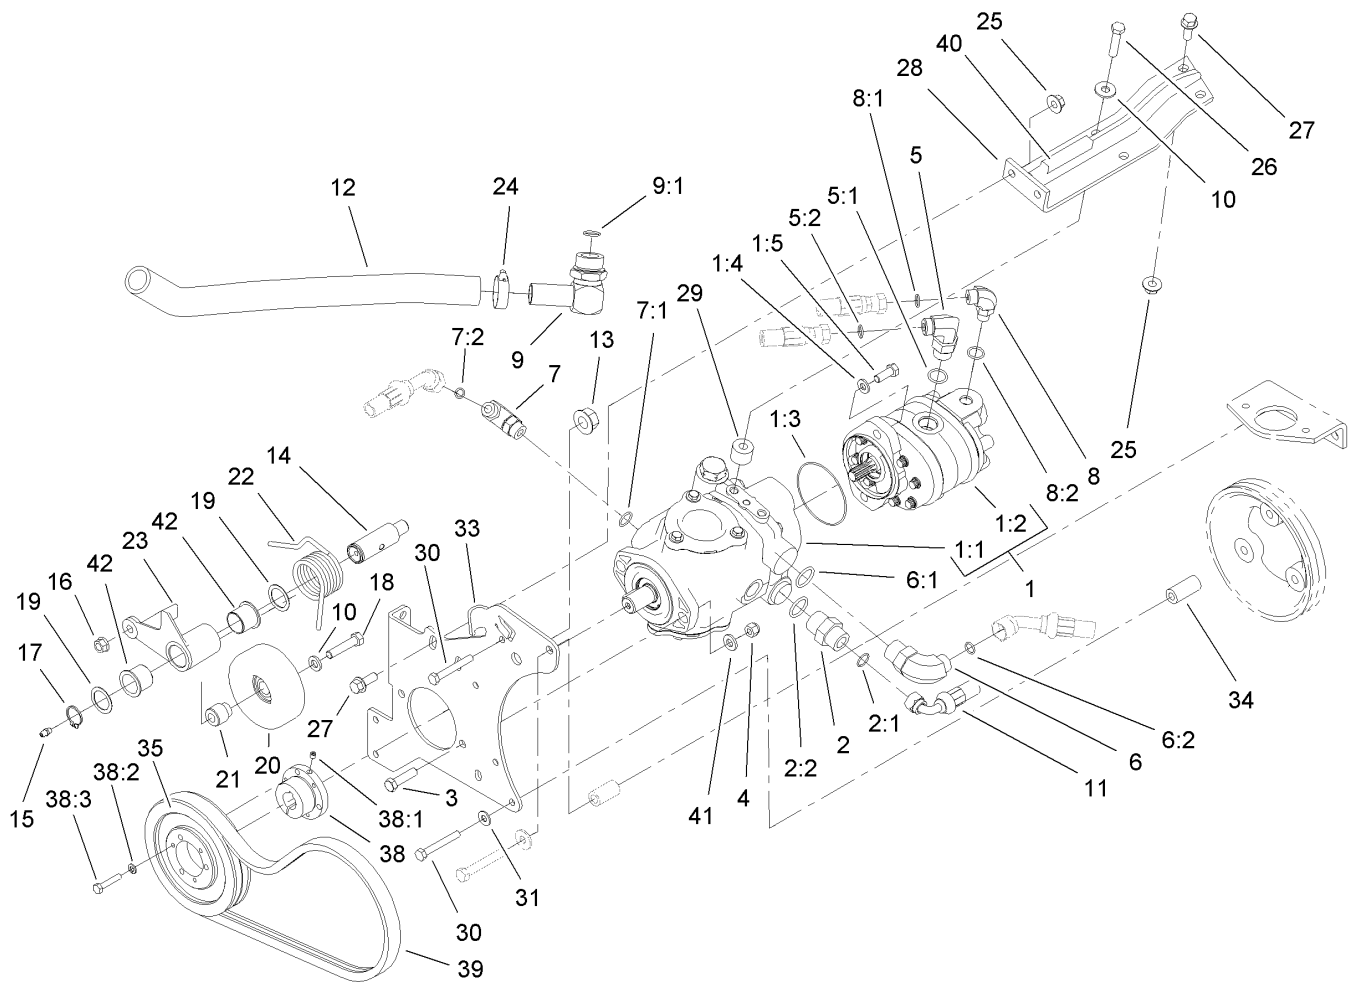


## Hydrostat Assembly (continued)

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 38   | 93-6842     | 1    | Bushing-Lock, Taper |
| 38:1 | 3245-36     | 1    | Screw-Set, HSH      |
| 38:2 | 321-13      | 3    | Screw-HH            |
| 38:3 | 3253-2      | 3    | Washer-Lock         |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 39   | 95-8730     | 1    | V-Belt          |
| 40   | 70-2041     | 1    | Trim            |
| 41   | 100-4852    | 2    | Washer-Hardened |
| 42   | 99-3631     | 2    | Bushing-Flange  |

● Not serviced separately

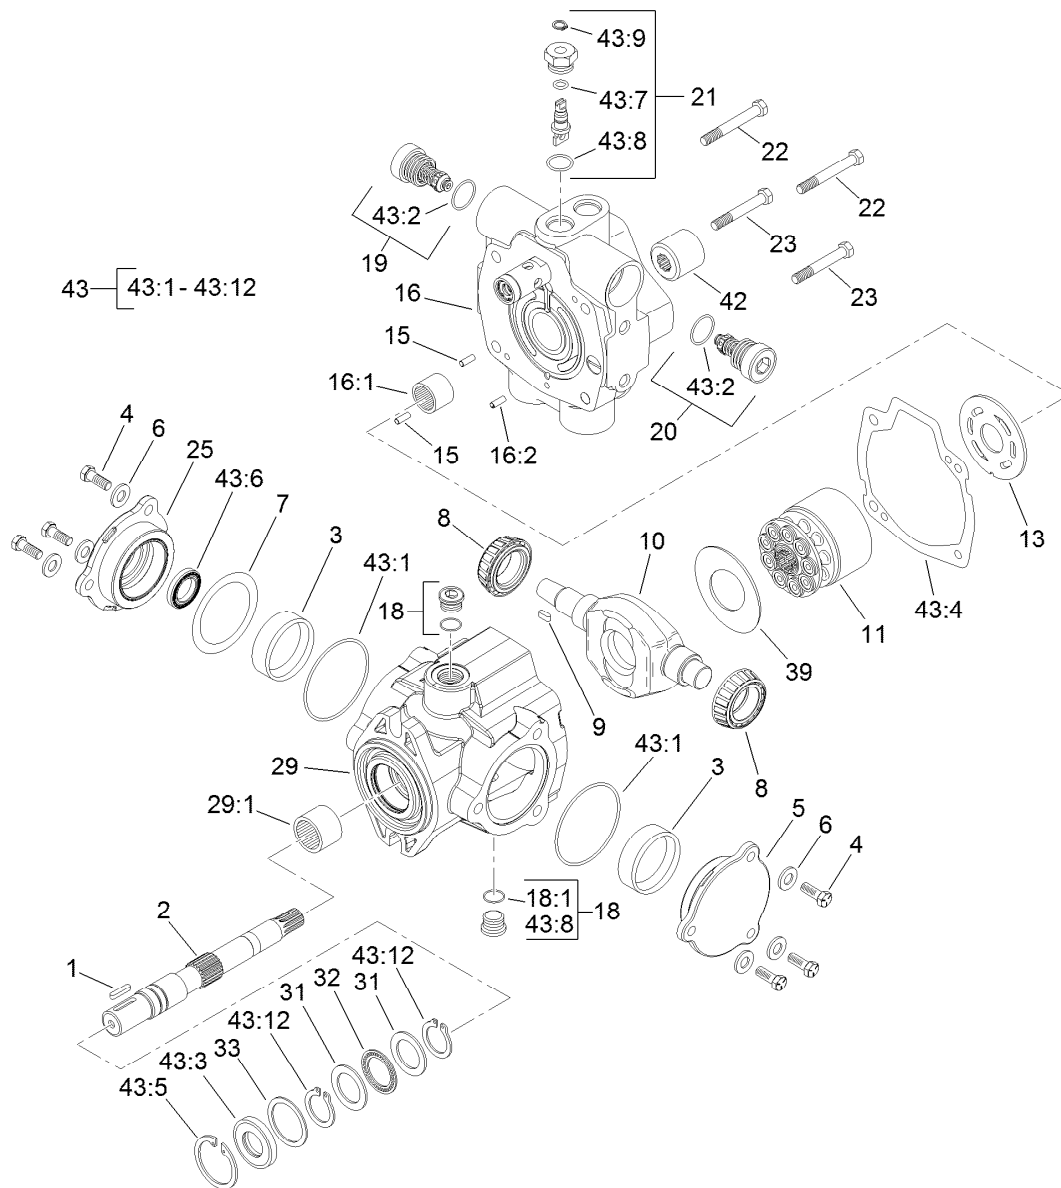


## Hydraulic Pump Assembly No. 104-4890

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 94-3645     | 1    | Key              |
| 2    | 94-6359     | 1    | Shaft-Drive      |
| 3    | 104-4046    | 2    | Bearing-Cup      |
| 4    | 98-4640     | 6    | Screw-Cap        |
| 5    | 98-4644     | 1    | Plate-Cover      |
| 6    | 105-9762    | 6    | Washer           |
| 7    | 100-3182    | 2    | Shim Kit         |
| 8    | 98-4639     | 2    | Bearing-Cone     |
| 9    | 94-3646     | 1    | Key              |
| 10   | 104-4888    | 1    | Swashplate       |
| 11   | 76-6070     | 1    | Rotating Kit     |
| 13   | 104-0429    | 1    | Plate-Valve      |
| 15   | 76-6150     | 2    | Pin-Dowel        |
| 16   | 105-3813    | 1    | Endcover Sub ASM |
| 16:1 | 94-6368     | 1    | Bearing          |
| 16:2 |             | 1    | Pin-Roll ■       |
| 18   | 74-9280     | 2    | Plug ASM         |
| 18:1 |             | 1    | O-Ring ■         |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 19   | 104-4889    | 1    | Relief Valve ASM  |
| 20   | 105-3812    | 1    | Valve-Check       |
| 21   | 105-3811    | 1    | Valve-Bypass      |
| 22   | 76-6170     | 2    | Capscrew          |
| 23   | 76-6160     | 2    | Capscrew          |
| 25   | 98-4645     | 1    | Plate-Cover       |
| 29   | 100-3176    | 1    | Housing ASM       |
| 29:1 | 94-6363     | 1    | Bearing           |
| 31   | 252-71      | 2    | Washer-Thrust     |
| 32   | 252-66      | 1    | Bearing-Thrust    |
| 33   | 33-3720     | 1    | Washer            |
| 39   | 98-4635     | 1    | Insert-Plate, Cam |
| 42   | 74-9040     | 1    | Coupler           |
| 43   | 120-5754    | 1    | Seal Kit          |
| 43:1 |             | 2    | O-Ring ■          |
| 43:2 |             | 2    | O-Ring ■          |
| 43:3 |             | 1    | Seal-Shaft ■      |
| 43:4 |             | 1    | Gasket ■          |

● Not illustrated

 ■ Not serviced separately

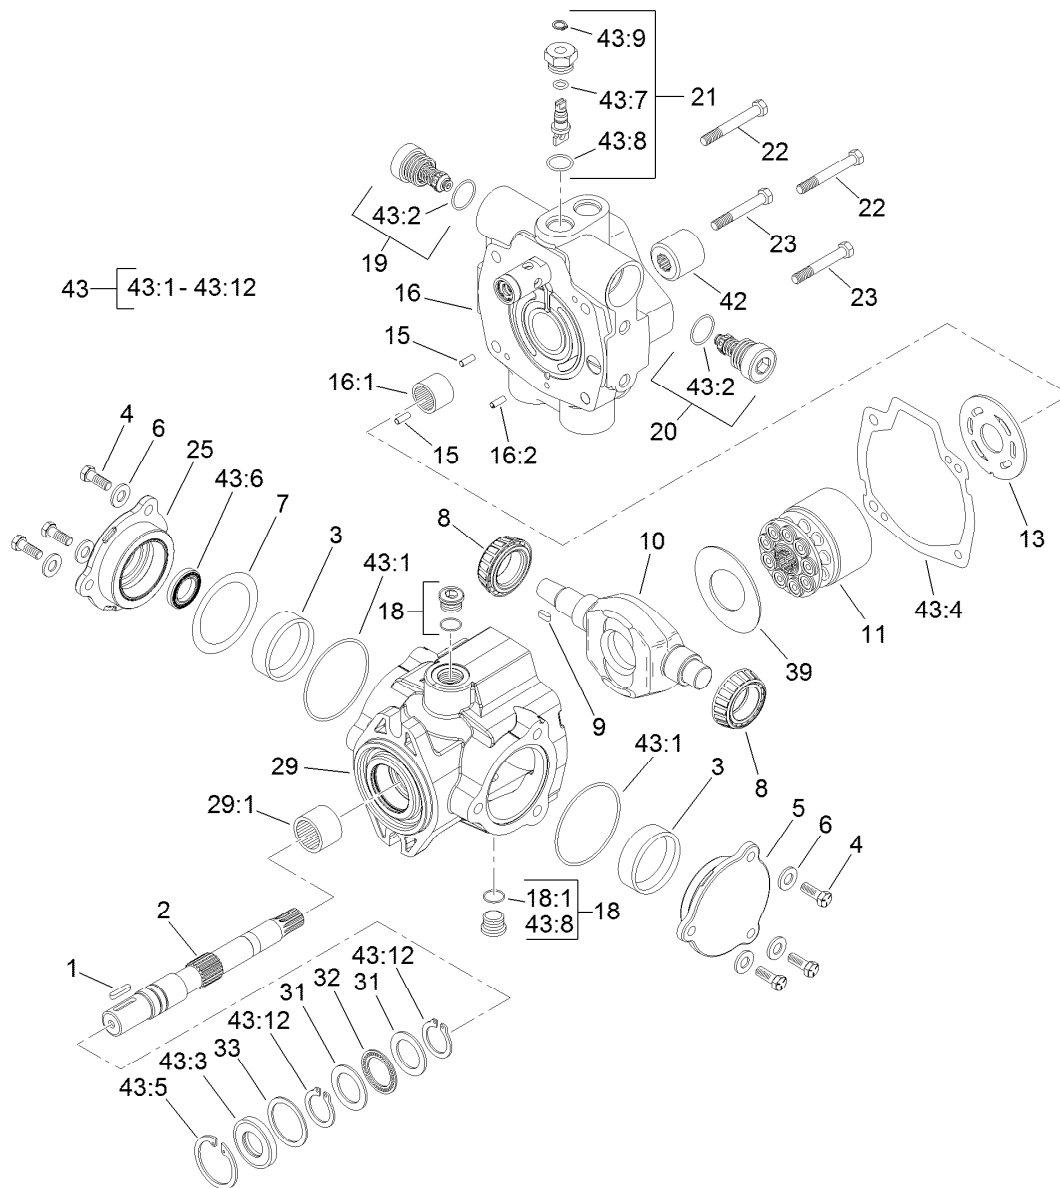


## Hydraulic Pump Assembly No. 104-4890 (continued)

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 43:5 |             | 1    | Ring-Retaining ■ |
| 43:6 |             | 1    | Seal-Shaft ■     |
| 43:7 |             | 1    | O-Ring ■         |
| 43:8 |             | 5    | O-Ring ■         |
| 43:9 |             | 1    | Ring-Retaining ■ |

| Ref.  | Part Number | Qty. | Description      |
|-------|-------------|------|------------------|
| 43:10 |             | 1    | O-Ring ●■        |
| 43:11 |             | 1    | O Ring-Molded ●■ |
| 43:12 |             | 2    | Ring-Retaining ■ |
| 43:13 |             | 1    | O-Ring ■         |

● Not illustrated

 ■ Not serviced separately

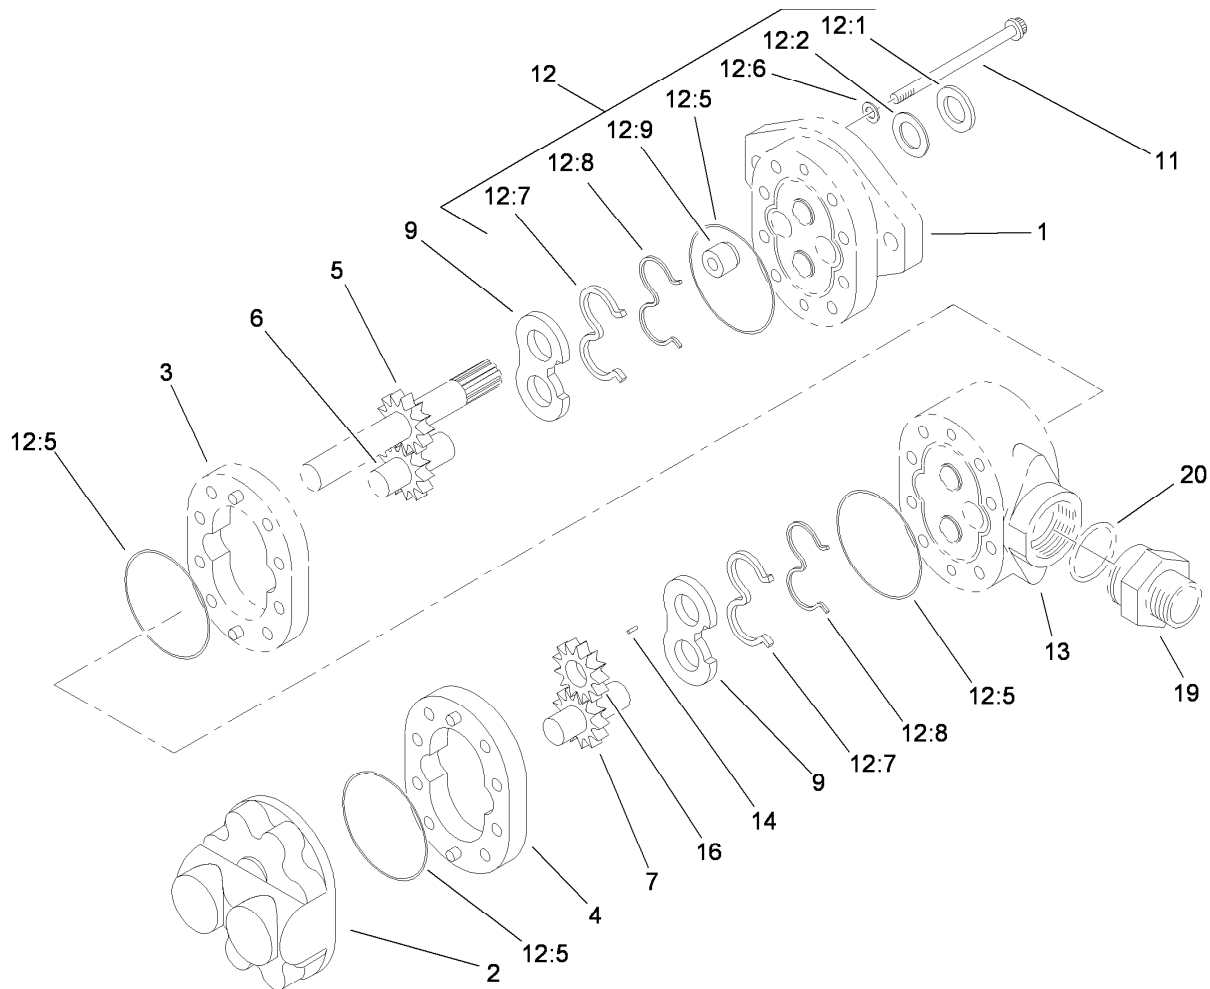


## Gear Pump Assembly No. 95-8601

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    |             | 1    | Plate-Front ■     |
| 2    |             | 1    | Plate-Back ■      |
| 3    |             | 1    | Body ■            |
| 4    | 95-4364     | 1    | Body              |
| 5    |             | 1    | Gear-Drive ■      |
| 6    |             | 1    | Gear-Idler ■      |
| 7    | 95-4366     | 1    | Gear-Idler        |
| 9    | 95-4368     | 2    | Plate-Wear        |
| 11   | 94-8158     | 8    | Screw-Cap         |
| 12   | 94-8161     | 1    | Seal Repair Kit ● |
| 12   |             | 4    | O-Ring ■          |
| 12:1 | 49-2640     | 1    | Seal-Shaft        |
| 12:2 | 60-5890     | 1    | Washer            |
| 12:5 |             | 4    | O-Ring ■          |
| 12:6 | 94-8160     | 4    | Washer            |
| 12:7 | 95-4369     | 2    | Seal-Pressure     |
| 12:8 | 95-4367     | 2    | Gasket-Backup     |
| 12:9 | 94-3011     | 1    | Plug              |
| 13   |             | 1    | Plate-Adapter ■   |
| 14   |             | 1    | Key ■             |
| 16   | 95-4373     | 1    | Gear-Fit, Slip    |
| 19   | 49-2640     | 1    | Seal-Shaft        |
| 20   | 60-5890     | 1    | Washer            |

● Not illustrated

 
■ Not serviced separately

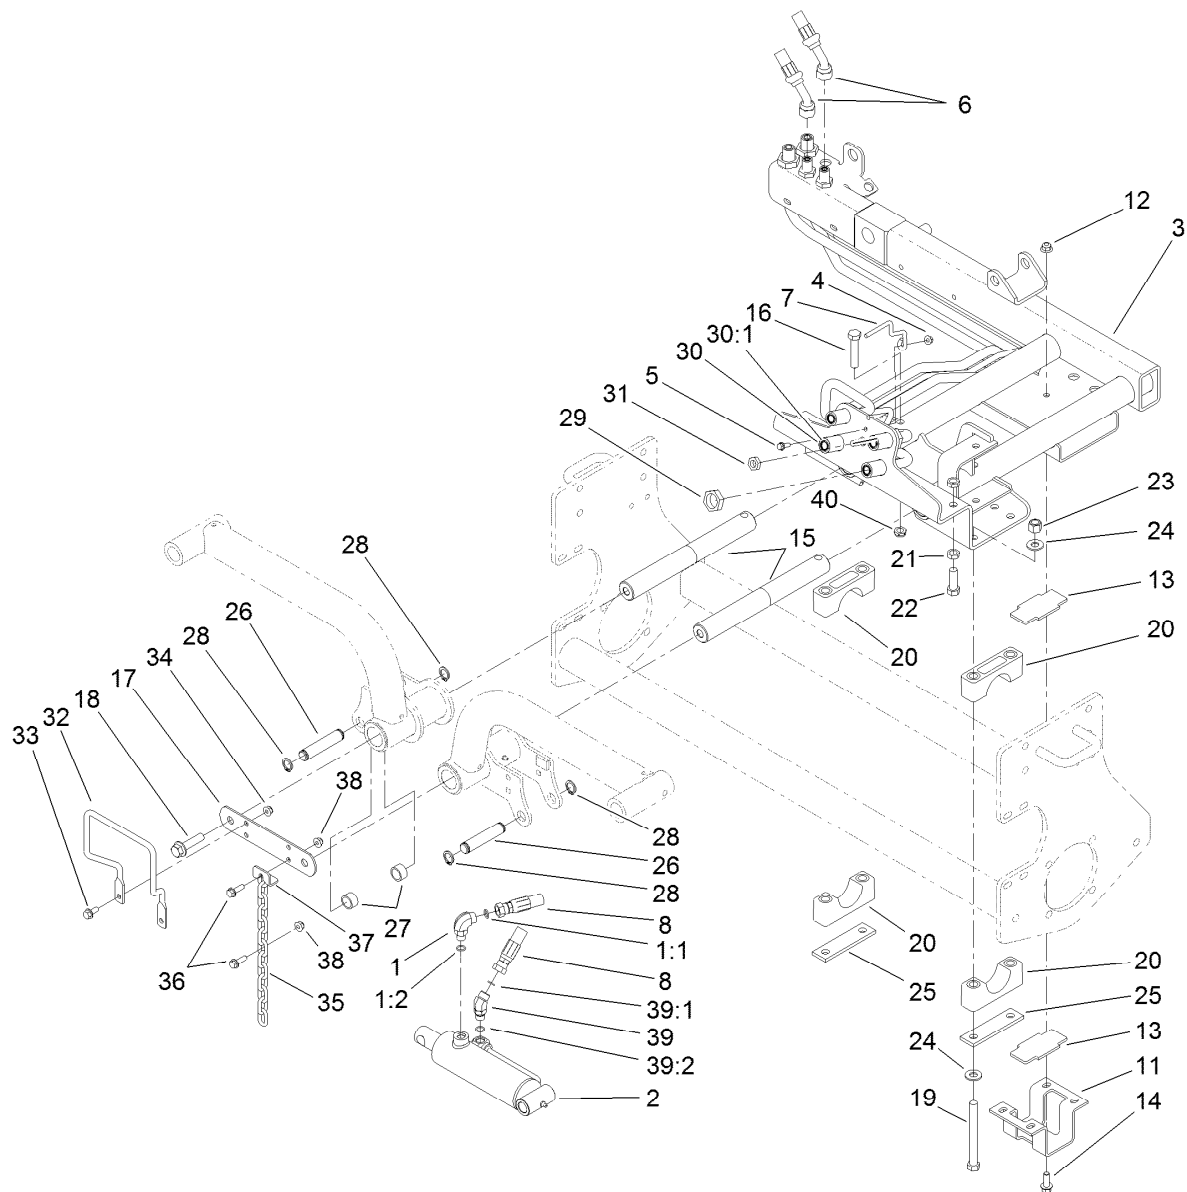

## Carrier Assembly


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 340-77      | 1    | Fitting-Elbow, 90 DEG |
| 1:1  | 237-22      | 1    | O-Ring                |
| 1:2  | 237-42      | 1    | O-Ring                |
| 2    | 117-5109    | 1    | HYD Cylinder ASM      |
| 3    | 100-4930-03 | 1    | Carrier ASM           |
| 4    | 32128-33    | 1    | Nut-HF                |
| 5    | 3234-4      | 1    | Screw-HHF             |
| 6    | 95-8822     | 2    | Hose-HYD              |
| 7    | 99-3433     | 1    | Wire-Center           |
| 8    | 117-5147    | 2    | Hose-HYD              |
| 11   | 95-8519-03  | 1    | Bracket-Slide         |
| 12   | 32128-43    | 4    | Nut-Flange            |
| 13   | 95-8538     | 2    | Slide-Plastic         |
| 14   | 3234-11     | 4    | Screw-HHF             |
| 15   | 95-8531     | 2    | Shaft-Pivot, Liftarm  |
| 16   | 325-10      | 2    | Screw-HH              |
| 17   | 95-8532-03  | 1    | Link-Shaft, Pivot     |
| 18   | 3234-27     | 2    | Screw-HHF             |
| 19   | 325-19      | 8    | Screw-HH              |
| 20   | 104-4865    | 8    | Cap-Bearing           |
| 21   | 3218-5      | 4    | Nut-Jam               |
 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 22   | 325-7       | 2    | Screw-HH               |
| 23   | 3296-23     | 8    | Nut-Lock, NI           |
| 24   | 87-7270     | 16   | Washer-Thrust          |
| 25   | 99-3373     | 4    | Bar-Support, Slide     |
| 26   | 95-8575     | 2    | Pin-Clevis             |
| 27   | 75-9590     | 2    | Spacer-Cylinder        |
| 28   | 32120-93    | 4    | Ring-Retaining         |
| 29   | 340-74      | 4    | Nut-Lock, Bulkhead     |
| 30   | 99-3640     | 1    | Tube ASM               |
| 30:1 | 237-65      | 2    | O-Ring                 |
| 31   | 340-78      | 1    | Nut-Lock               |
| 32   | 99-3492     | 1    | Rod-Formed, Hose Guard |
| 33   | 3234-5      | 2    | Screw-HHF              |
| 34   | 104-8300    | 2    | Nut-HF, NI             |
| 35   | 98-7981     | 2    | Chain-Link, Straight   |
| 36   | 3234-17     | 4    | Screw-HHF              |
| 37   | 99-3550     | 2    | Clip-Link              |
| 38   | 104-8300    | 4    | Nut-HF, NI             |
| 39   | 340-87      | 1    | Fitting-Elbow, 45 DEG  |
| 39:1 | 237-22      | 1    | O-Ring                 |

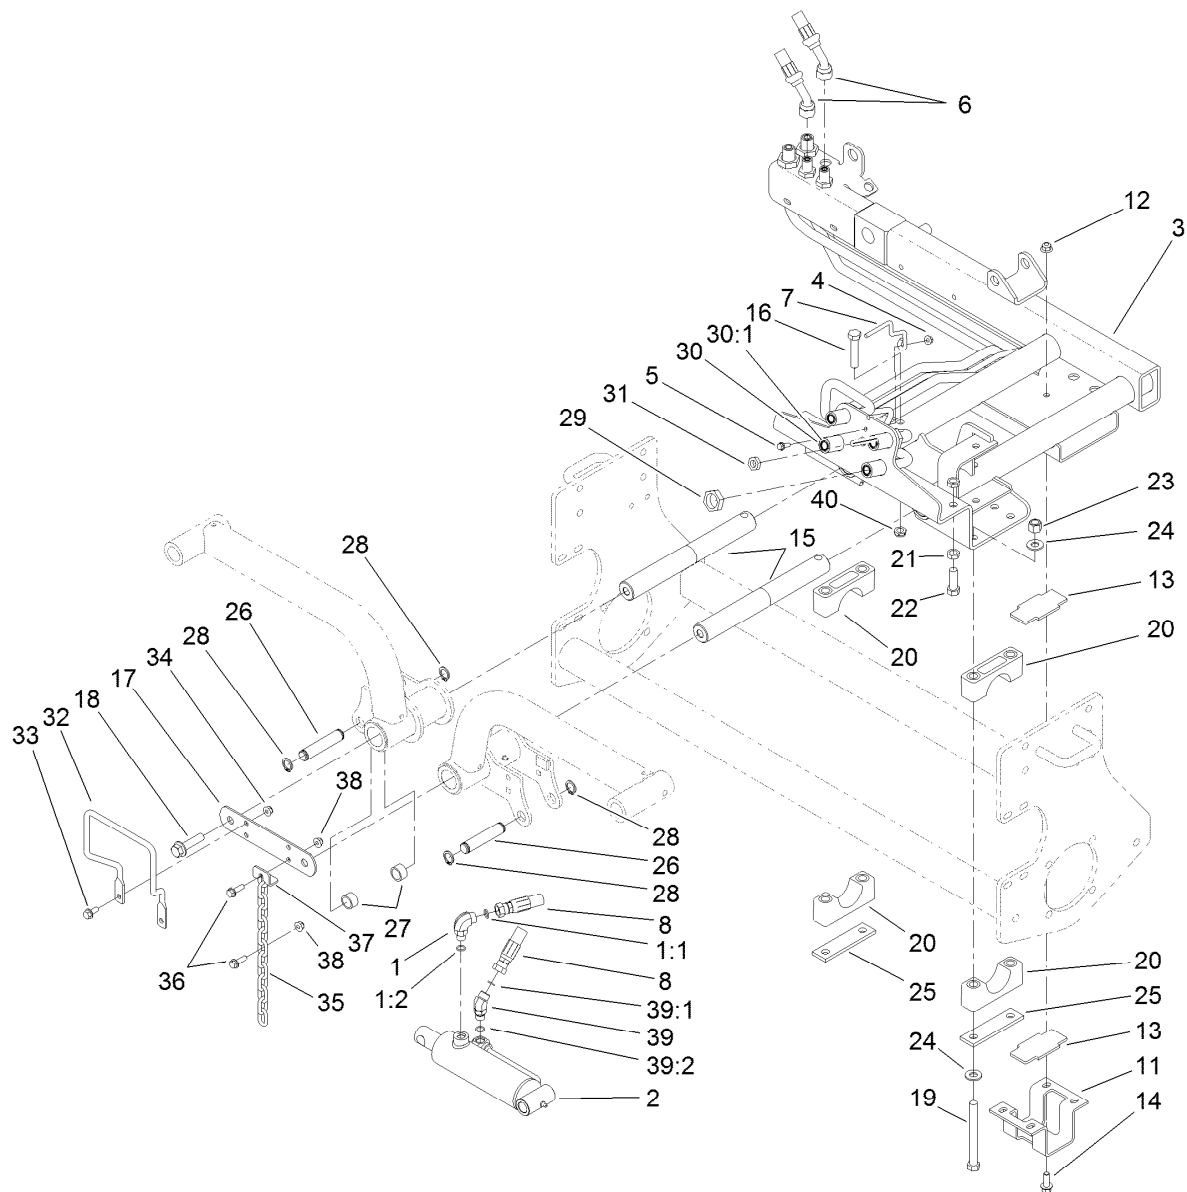

## Carrier Assembly (continued)

 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 39:2 | 237-42      | 1    | O-Ring      |
| 40   | 3296-45     | 2    | Nut-Hex     |

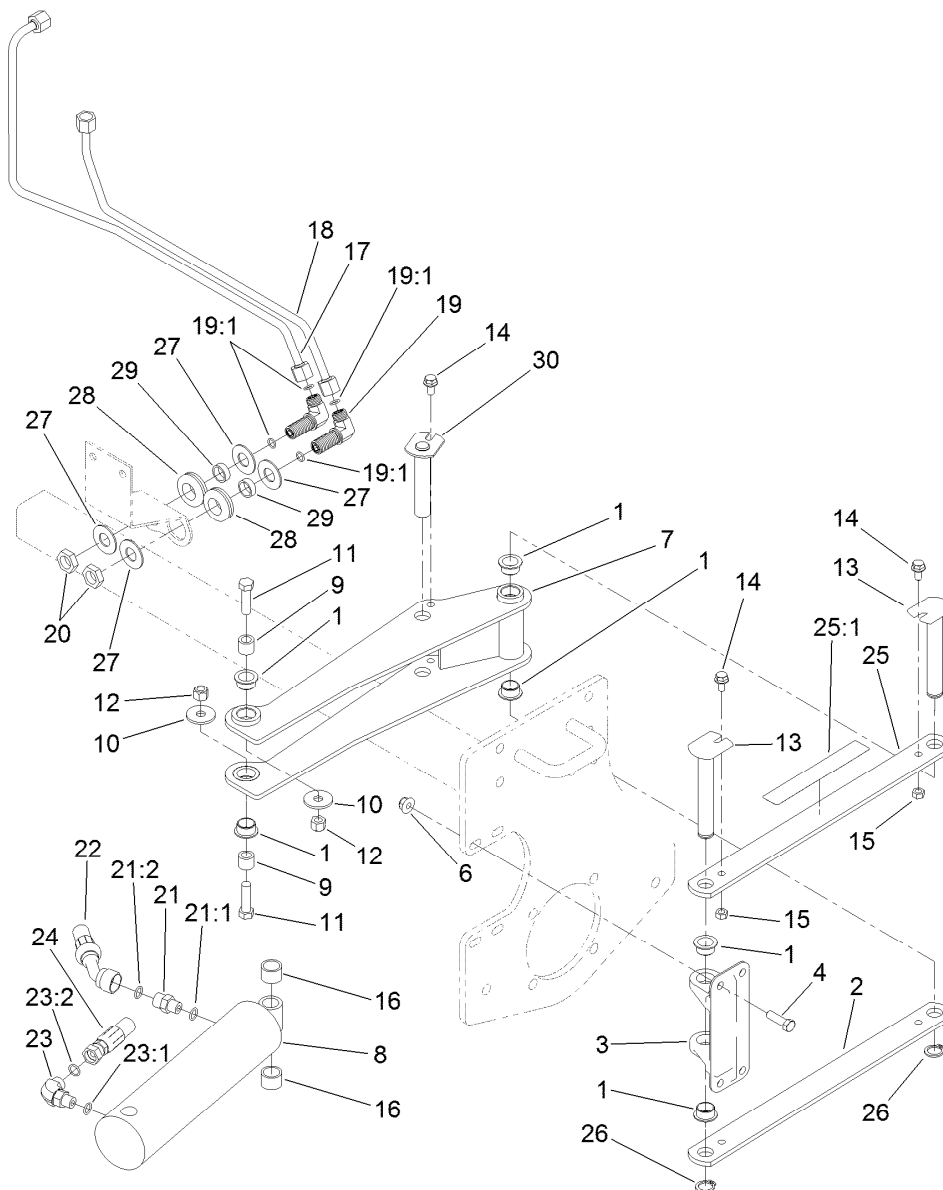

## Scissor Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 95-8526     | 6    | Bushing-Plastic |
| 2    | 95-8527-03  | 1    | Link-Scissor    |
| 3    | 95-8883     | 1    | Mount-Scissor   |
| 4    | 323-7       | 4    | Screw-HH        |
| 6    | 104-8301    | 4    | Nut-HF, NI      |
| 7    | 95-8521-03  | 1    | Frame-Scissor   |
| 8    | 95-8512     | 1    | Cylinder-HYD    |
| 9    | 95-8603     | 2    | Spacer          |
| 10   | 87-5330     | 2    | Washer          |
| 11   | 324-6       | 2    | Screw-HH        |
| 12   | 3296-48     | 2    | Nut-Hex         |
| 13   | 125-1914    | 2    | Pin-Pivot       |
| 14   | 3234-14     | 3    | Screw-HHF       |
| 15   | 32152-1     | 3    | Nut-Lock, Cone  |
| 16   | 46-6350     | 2    | Spacer          |
| 17   | 95-8790     | 1    | Tube-HYD        |
| 18   | 95-8791     | 1    | Tube-HYD        |
| 19   | 340-154     | 2    | Union-Bulkhead  |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 19:1 | 237-22      | 2    | O-Ring                |
| 20   | 340-70      | 2    | Nut-Lock              |
| 21   | 85-9720     | 1    | Fitting-STR, Orifice  |
| 21:1 | 237-78      | 1    | O-Ring                |
| 21:2 | 237-21      | 1    | O-Ring                |
| 22   | 95-8838     | 1    | Hose-HYD              |
| 23   | 340-132     | 1    | Fitting-Elbow, 90 DEG |
| 23:1 | 237-78      | 1    | O-Ring                |
| 23:2 | 237-21      | 1    | O-Ring                |
| 24   | 95-8839     | 1    | Hose-HYD              |
| 25   | 99-3505     | 1    | Scissors Link ASM     |
| 25:1 | 94-3353     | 1    | Decal-Point, Pinch    |
| 26   | 32120-93    | 2    | Ring-Retaining        |
| 27   | 69-8940     | 4    | Washer                |
| 28   | 240-4       | 2    | Grommet-Rubber        |
| 29   | 69-8970     | 2    | Spacer                |
| 30   | 120-3199    | 1    | Pin-Pivot             |

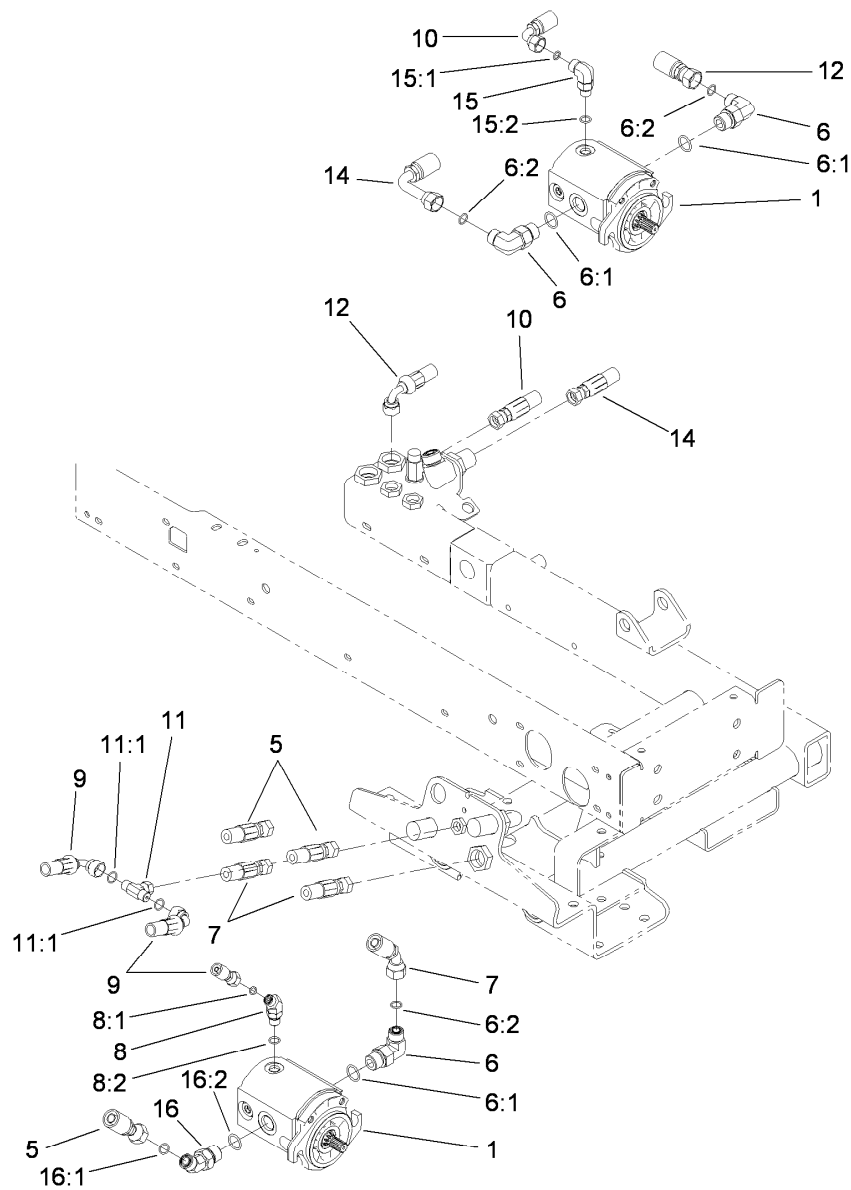

## Reel Motor Assembly


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 115-8250    | 3    | Gear Motor ASM        |
| 5    | 117-5142    | 2    | Hose-HYD              |
| 6    | 340-105     | 4    | Fitting-Elbow, 90 DEG |
| 6:1  | 237-80      | 1    | O-Ring                |
| 6:2  | 237-30      | 1    | O-Ring                |
| 7    | 117-5143    | 2    | Hose-HYD              |
| 8    | 340-137     | 2    | Fitting               |
| 8:1  | 237-21      | 1    | O-Ring                |
| 8:2  | 237-42      | 1    | O-Ring                |
| 9    | 117-5144    | 2    | Hose-HYD              |
| 10   | 114-5500    | 1    | Hose-HYD              |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 11   | 99-3477     | 1    | Fitting-Tee           |
| 11:1 | 237-42      | 2    | O-Ring                |
| 12   | 117-5146    | 1    | Hose-HYD              |
| 14   | 117-5145    | 1    | Hose-HYD              |
| 15   | 340-77      | 1    | Fitting-Elbow, 90 DEG |
| 15:1 | 237-22      | 1    | O-Ring                |
| 15:2 | 237-42      | 1    | O-Ring                |
| 16   | 340-89      | 2    | Fitting-HYD, 45 DEG   |
| 16:1 | 237-30      | 1    | O-Ring                |
| 16:2 | 237-80      | 1    | O-Ring                |

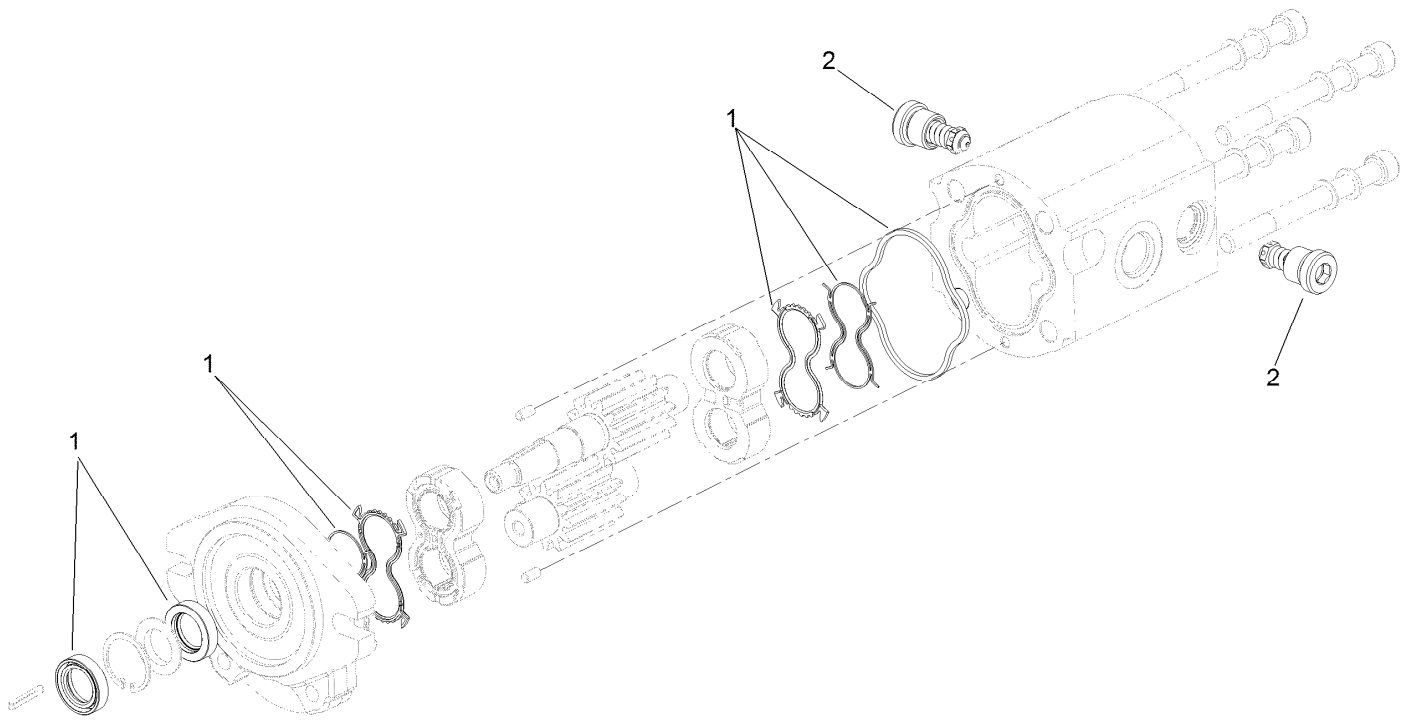

## Gear Motor Assembly No. 115-8250

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 125-1682           | 1           | Motor Seal Kit     |
| 2           | 117-5107           | 2           | Valve-Check        |

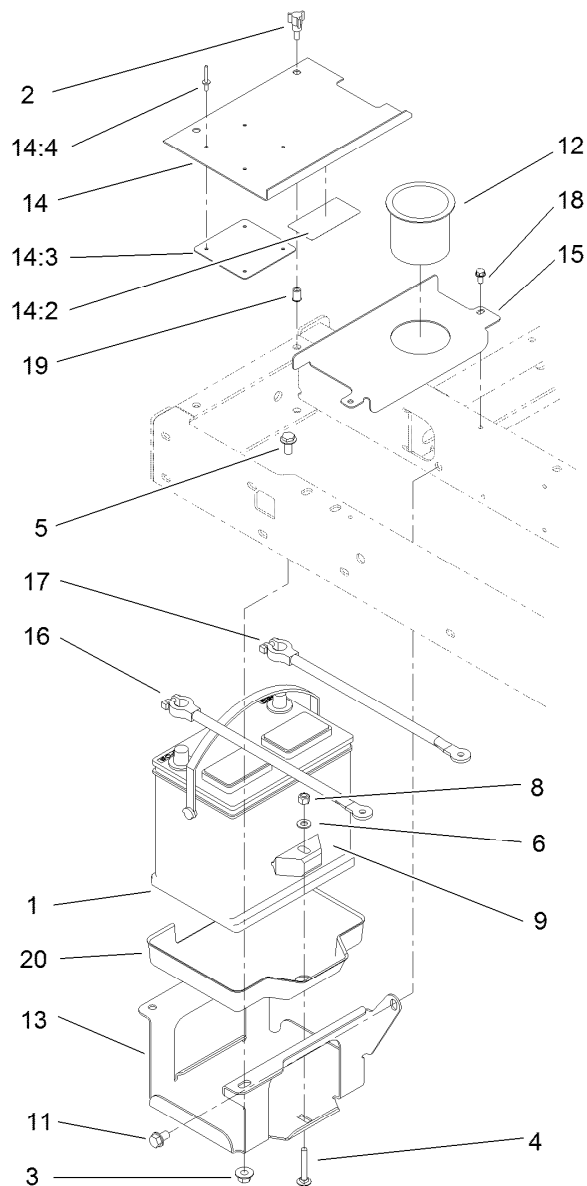

## Battery Assembly

| Ref. | Part Number | Qty. | Description          | Ref. | Part Number | Qty. | Description              |
|------|-------------|------|----------------------|------|-------------|------|--------------------------|
| 1    | 104-9979    | 1    | Battery              | 14   |             | 1    | Battery Cover ASM ●      |
| 2    | 233-70      | 2    | Knob-Star, Three     | 14:2 | 93-7276     | 1    | Decal-Danger             |
| 3    | 32128-43    | 3    | Nut-Flange           | 14:3 | 87-7620     | 1    | Shield-Terminal, Battery |
| 4    | 3230-6      | 1    | Bolt-CARR            | 14:4 | 3269-27     | 4    | Rivet-Snap               |
| 5    | 3234-1      | 3    | Screw-HHF            | 15   | 95-8817-01  | 1    | Cover-Battery, Inner     |
| 6    | 3256-23     | 1    | Washer-Plain         | 16   | 95-8853     | 1    | Cable-Battery, Positive  |
| 8    | 3296-29     | 1    | Nut-Lock, NI         | 17   | 95-8854     | 1    | Cable-Battery, Negative  |
| 9    | 66-2490     | 1    | Retainer-Battery     | 18   | 32144-4     | 2    | Screw-HWH                |
| 11   | 32144-15    | 1    | Screw-HHFTF          | 19   | 32148-6     | 2    | Nut-Clinch               |
| 12   | 94-1410     | 1    | Holder-Can, Beverage | 20   | 99-3513     | 1    | Tray-Battery             |
| 13   | 95-8796-03  | 1    | Support-Battery      |      |             |      |                          |

 
● Not serviced separately

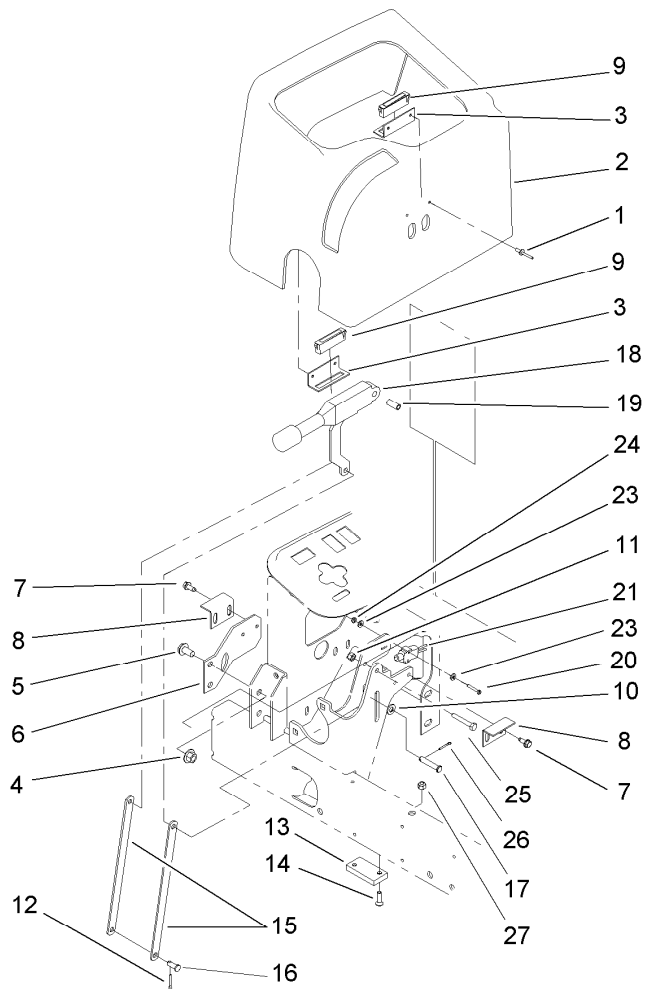

## Parking Brake Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 3269-5      | 4    | Rivet-Pop                |
| 2    | 95-8707     | 1    | Cover-Dash               |
| 3    | 95-8763     | 2    | Bracket-Hold Down, Cover |
| 4    | 32128-43    | 2    | Nut-Flange               |
| 5    | 3234-1      | 2    | Screw-HHF                |
| 6    | 95-8764-03  | 1    | Support-Magnet           |
| 7    | 32144-10    | 4    | Screw-HWH                |
| 8    | 95-8765     | 2    | Bracket-Strike, Magnet   |
| 9    | 58-4250     | 2    | Catch-Magnetic           |
| 10   | 3256-23     | 3    | Washer-Plain             |
| 11   | 3296-42     | 1    | Nut-Lock, NI             |
| 12   | 3272-10     | 1    | Pin-Cotter               |
| 13   | 95-8684     | 1    | Pad-Bumper               |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 14   | 3289-4      | 2    | Screw-FH              |
| 15   | 104-4628-03 | 2    | Link-Brake, Parking   |
| 16   | 283-62      | 1    | Pin-Clevis            |
| 17   | 94-3829     | 1    | Pin-Clevis            |
| 18   | 104-4817    | 1    | Lever-Brake           |
| 19   | 87-4710     | 1    | Spacer-Brake, Parking |
| 20   | 32105-9     | 2    | Screw                 |
| 21   | 95-8900     | 1    | Switch                |
| 23   | 3256-21     | 4    | Washer-Flat           |
| 24   | 3296-9      | 2    | Nut-Hex               |
| 25   | 321-10      | 1    | Screw-HH              |
| 26   | 3272-6      | 1    | Pin-Cotter            |
| 27   | 104-7201    | 2    | Nut-HF                |

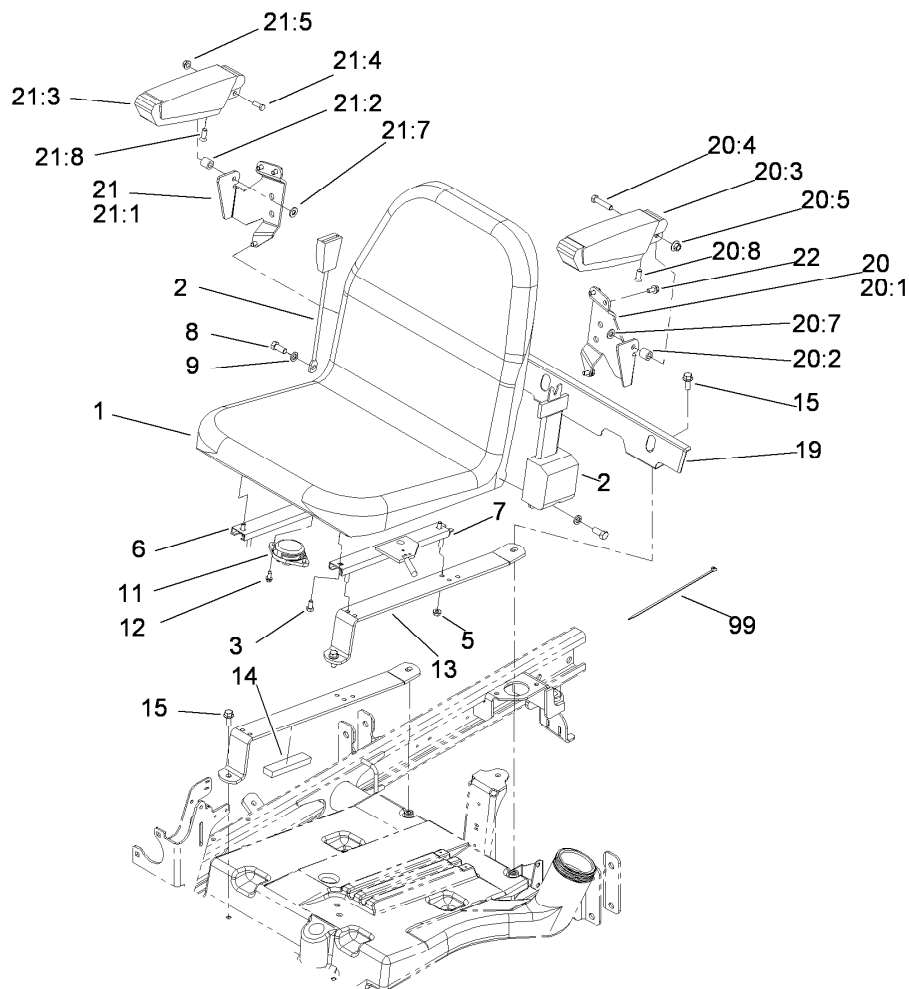

## Seat Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 104-4620    | 1    | Seat                |
| 2    | 100-4928    | 1    | Belt-Seat           |
| 3    | 3234-14     | 4    | Screw-HHF           |
| 5    | 104-8300    | 4    | Nut-HF, NI          |
| 6    | 92-8990     | 1    | Adjuster-Slave      |
| 7    | 92-8991     | 1    | Adjuster (W/Latch)  |
| 8    | 3212-4      | 2    | Screw-HH            |
| 9    | 3253-6      | 2    | Washer-Lock         |
| 11   | 92-6282     | 1    | Switch-Seat         |
| 12   | 32144-10    | 2    | Screw-HWH           |
| 13   | 104-4847-03 | 2    | Strap-Support, Seat |
| 14   | 95-8896     | 2    | Foam                |
| 15   | 3234-11     | 4    | Screw-HHF           |
| 19   | 104-4833-03 | 1    | Shield-Heat         |
| 20   | 92-7307     | 1    | LH Armrest ASM      |
| 20:1 | 69-0760     | 1    | Bracket-Arm, LH     |
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 20:2 | 92-7301     | 1    | Spacer          |
| 20:3 | 69-1180     | 1    | Armrest         |
| 20:4 | 323-9       | 1    | Screw-HH        |
| 20:5 | 32128-19    | 1    | Nut-HF          |
| 20:7 | 3256-24     | 1    | Washer-Flat     |
| 20:8 | 92-7318     | 1    | Screw           |
| 21   | 92-7306     | 1    | RH Armrest ASM  |
| 21:1 | 69-0770     | 1    | Bracket-Arm, RH |
| 21:2 | 92-7301     | 1    | Spacer          |
| 21:3 | 69-1180     | 1    | Armrest         |
| 21:4 | 323-9       | 1    | Screw-HH        |
| 21:5 | 32128-19    | 1    | Nut-HF          |
| 21:7 | 3256-24     | 1    | Washer-Flat     |
| 21:8 | 92-7318     | 1    | Screw           |
| 22   | 3234-14     | 6    | Screw-HHF       |
| 99   | 3290-378    | 1    | Tie-Cable       |

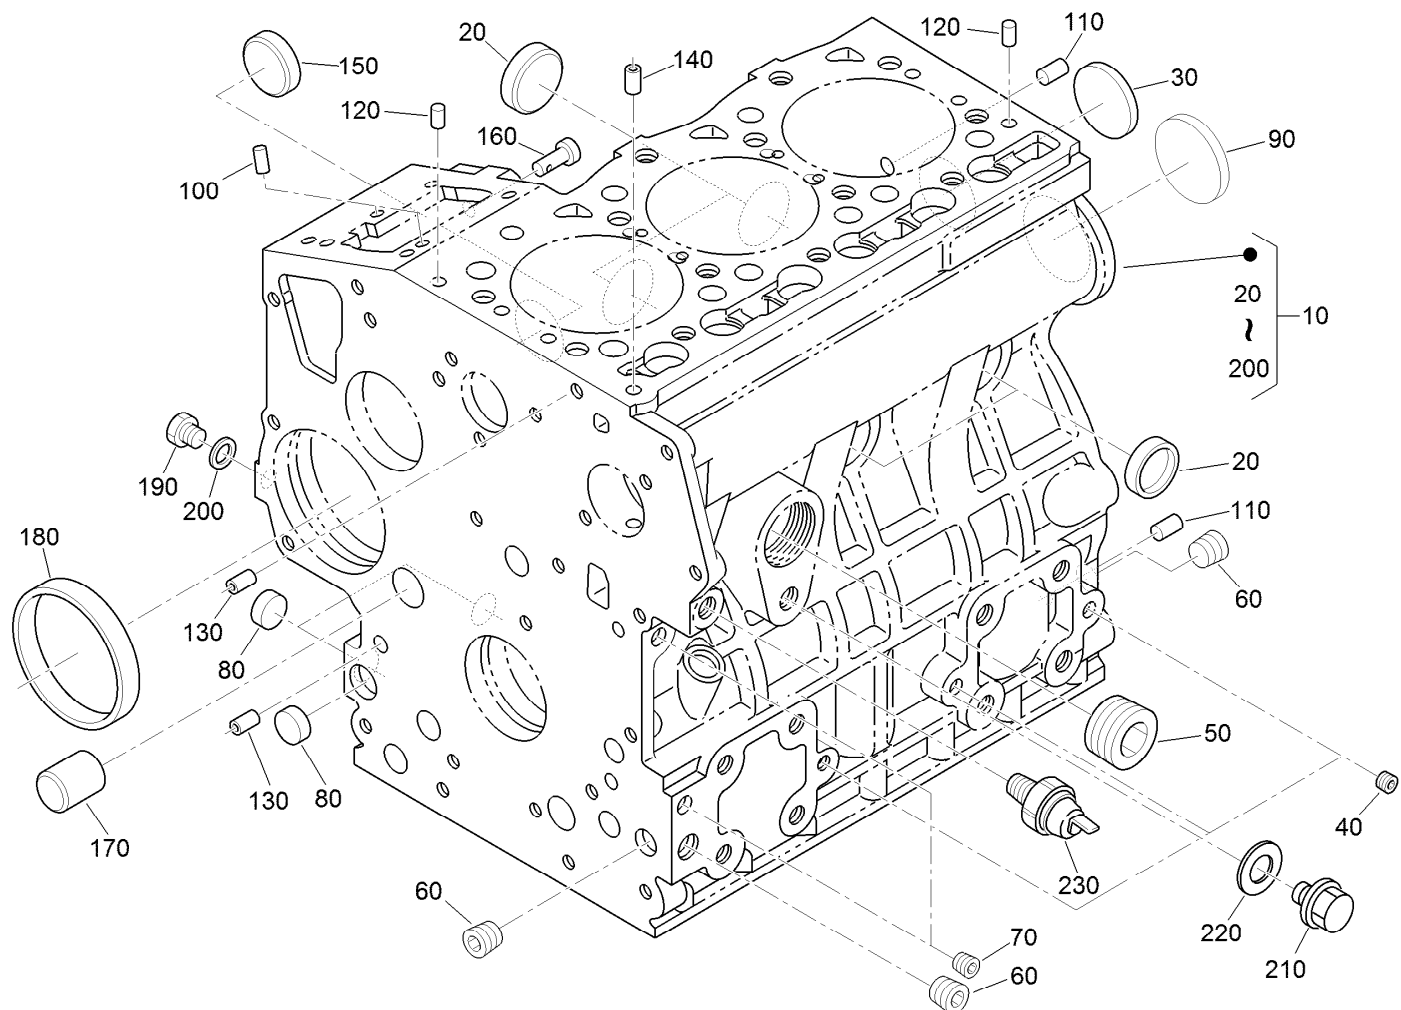


## Crankcase Assembly
 
| Ref. | Part Number | Qty. | Description    | Ref. | Part Number | Qty. | Description            |
|------|-------------|------|----------------|------|-------------|------|------------------------|
| 10   | 115-3443    | 1    | Crankcase ASM  | 130  | 98-9387     | 2    | Pin-Pipe               |
| 20   | 98-9398     | 4    | Cap-Sealing    | 140  | 98-9539     | 1    | Pin-Pipe               |
| 30   | 98-7539     | 1    | Cap-Sealing    | 150  | 98-9599     | 1    | Plug                   |
| 40   | 98-9687     | 3    | Plug           | 160  | 98-9630     | 1    | Pin-Spring, Start      |
| 50   | 105-3779    | 1    | Plug           | 170  | 98-9675     | 1    | Plug                   |
| 60   | 98-9597     | 3    | Plug           | 180  | 98-9656     | 1    | Bushing-Governor, Gear |
| 70   | 98-7487     | 2    | Plug           | 190  | 120-2559    | 1    | Plug                   |
| 80   | 98-9379     | 3    | Plug-Expansion | 200  | 98-7428     | 1    | Gasket                 |
| 90   | 98-9668     | 1    | Plug-Expansion | 210  | 99-3447     | 1    | Plug                   |
| 100  | 98-9375     | 2    | Pin-Straight   | 220  | 106-7056    | 1    | Gasket                 |
| 110  | 98-9377     | 2    | Pin-Straight   | 230  | 98-9416     | 1    | Switch-Oil             |
| 120  | 98-9376     | 2    | Pin-Straight   |      |             |      |                        |

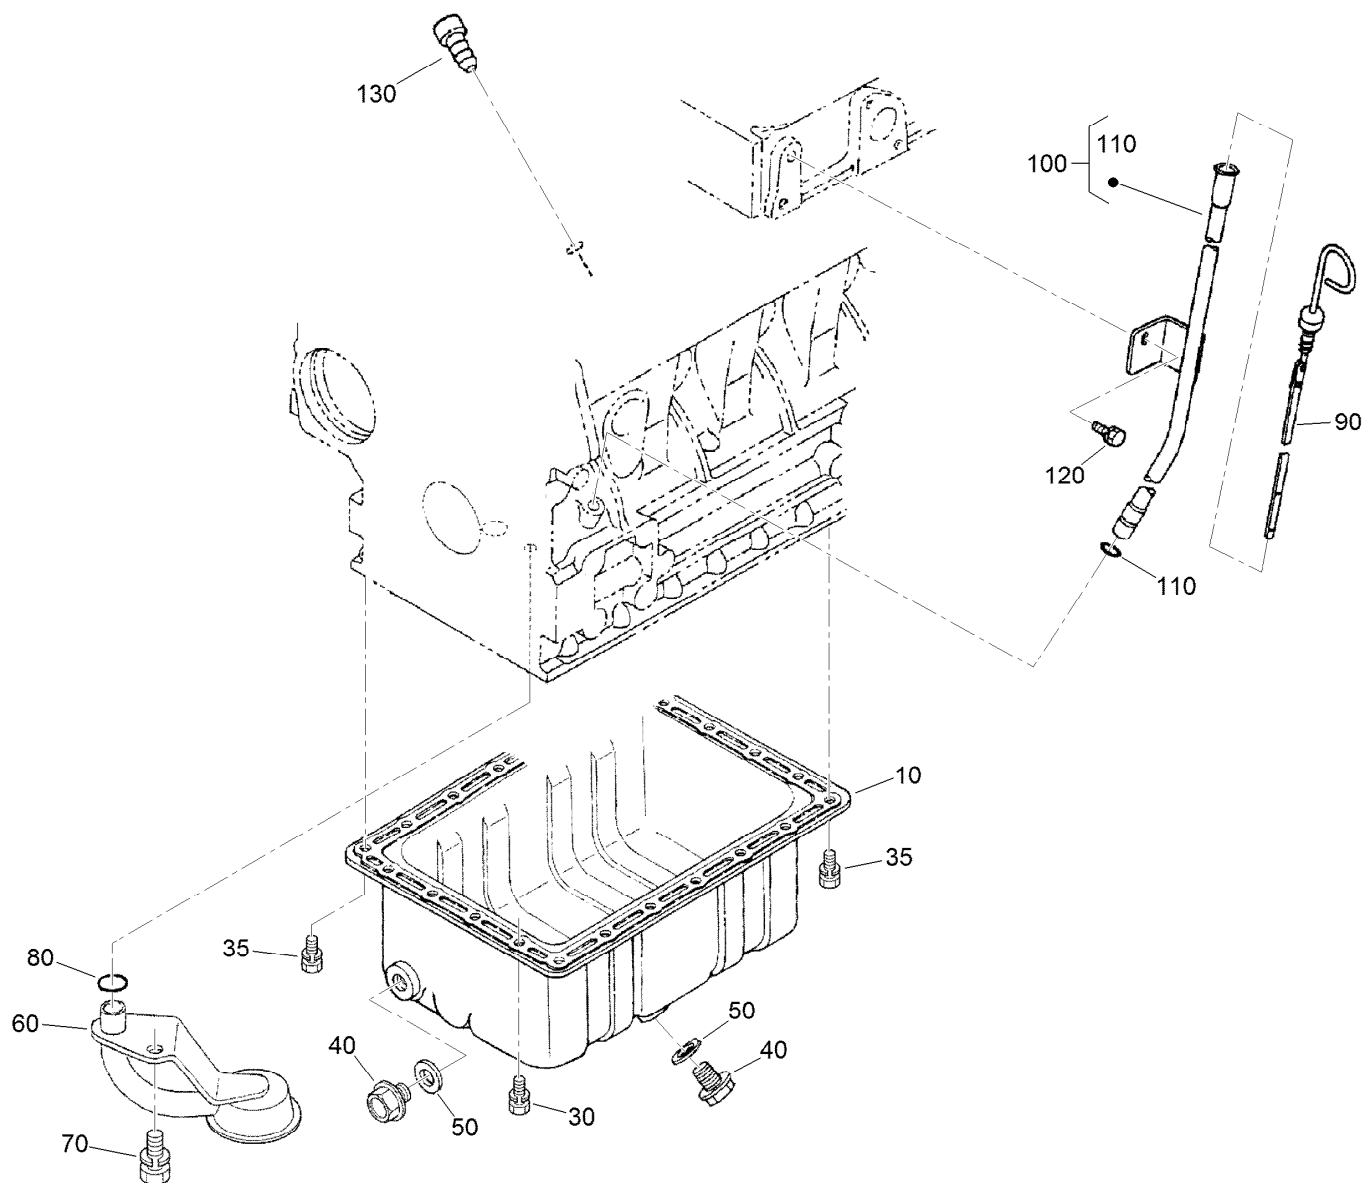


## Oil Pan and Dipstick Assembly
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 98-9685     | 1    | Pan-Oil             |
| 30   | 98-9351     | 20   | Bolt                |
| 35   | 98-9351     | 2    | Bolt                |
| 40   | 114-8151    | 1    | Plug-Drain          |
| 50   | 98-7524     | 1    | Gasket              |
| 60   | 108-1401    | 1    | Base-Filter         |
| 70   | 98-7526     | 1    | Bolt                |
| 80   | 105-3776    | 1    | O-Ring              |
| 90   | 98-9670     | 1    | Gauge-Oil           |
| 100  | 98-9672     | 1    | Oil Gauge Guide ASM |
| 110  | 98-9722     | 1    | O-Ring              |
| 120  | 100-9195    | 1    | Bolt                |
| 130  | 110-3720    | 1    | Plug-Gauge, Oil     |

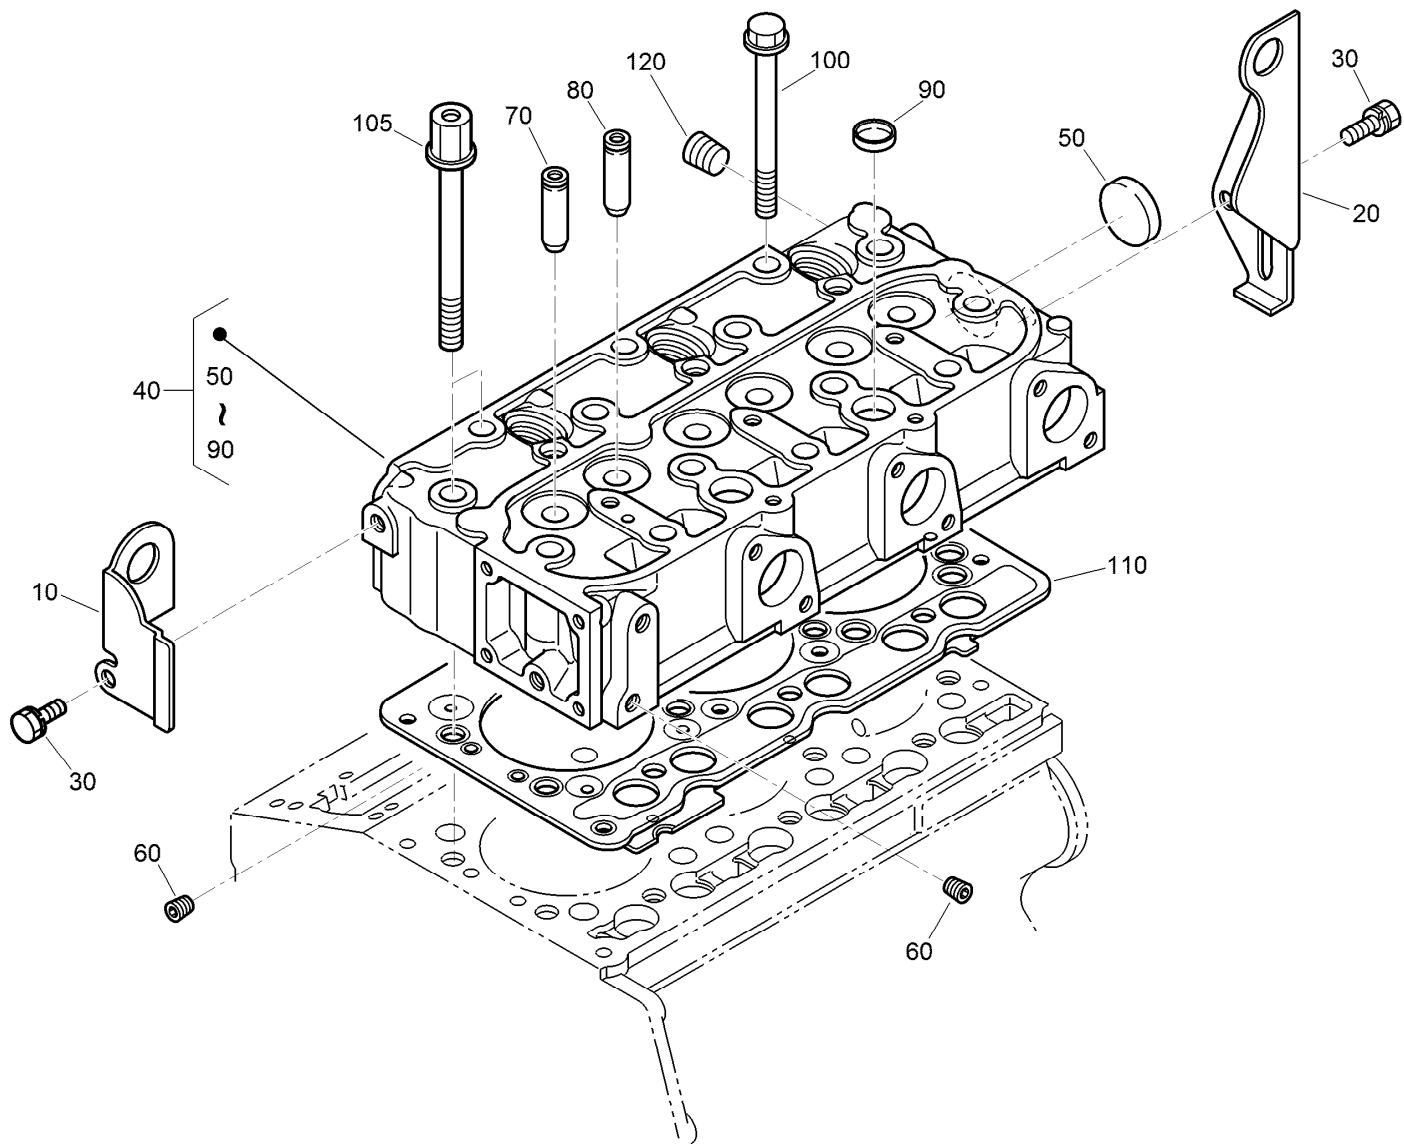

## Cylinder Head Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 10   | 130-1231    | 1    | Hook-Engine           |
| 20   | 98-9478     | 1    | Hook-Engine           |
| 30   | 100-9195    | 2    | Bolt                  |
| 40   | 138-6997    | 1    | Cylinder Head ASM     |
| 50   | 105-3705    | 1    | Cap-Sealing           |
| 60   | 98-9687     | 2    | Plug                  |
| 70   | 107-9066    | 3    | Guide-Valve, Inlet    |
| 80   | 107-9067    | 3    | Guide-Valve, Exhaust  |
| 90   | 98-9389     | 2    | Cap-Sealing           |
| 100  | 98-9479     | 12   | Bolt-Head, Cylinder   |
| 105  | 98-9647     | 2    | Bolt-Head, Cylinder   |
| 110  | 108-6573    | 1    | Gasket-Head, Cylinder |
| 120  | 98-9444     | 1    | Plug                  |

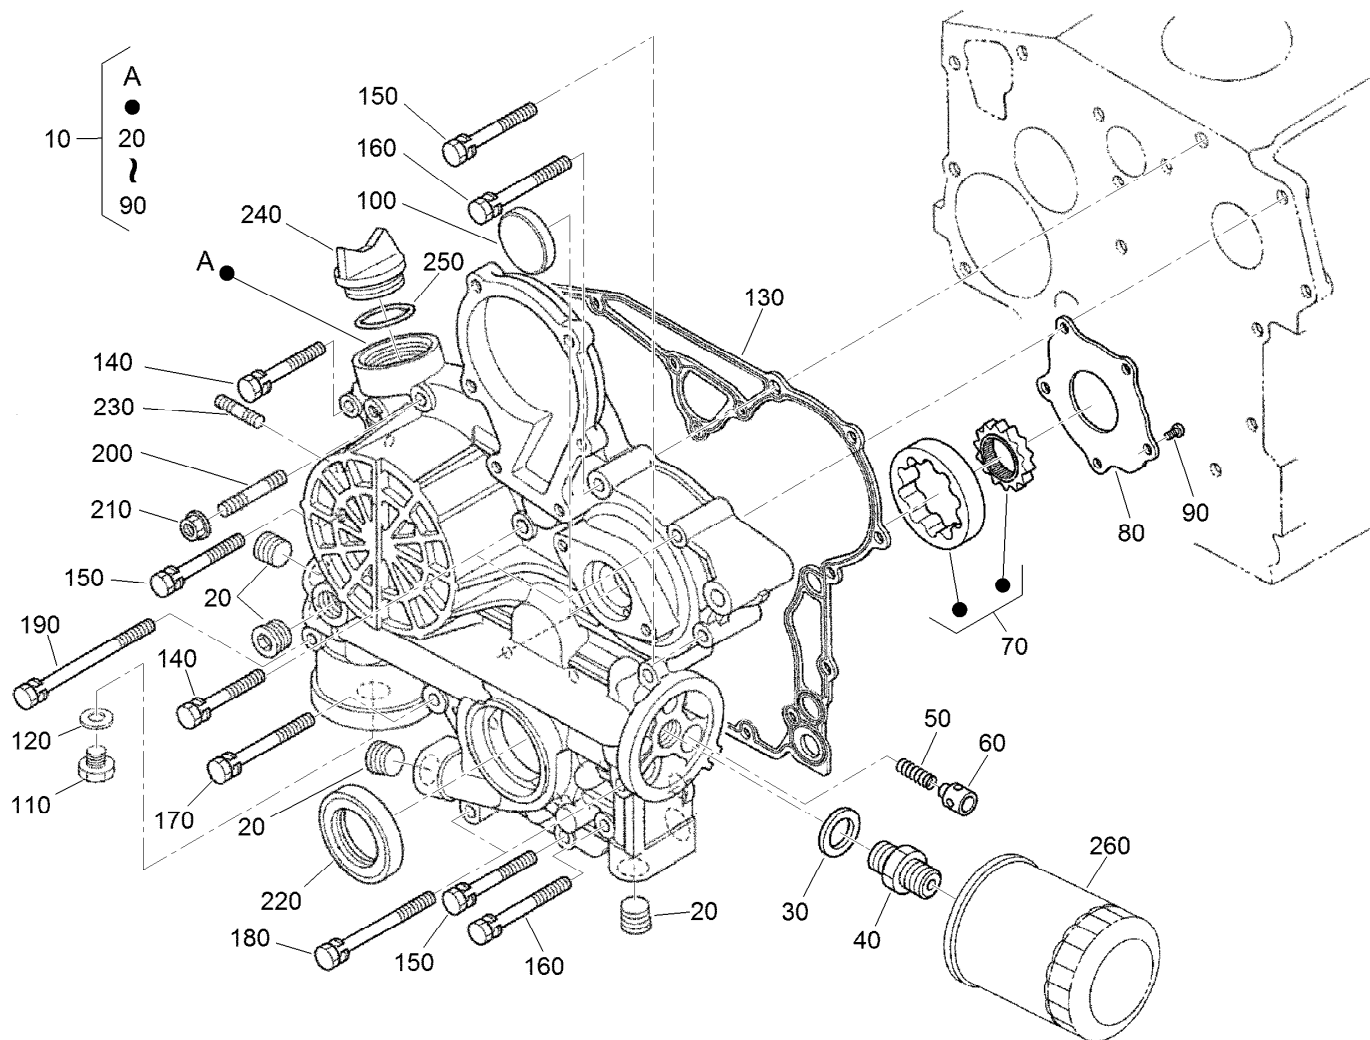

## Gear Case and Oil Filter Cartridge Assembly


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 130-1500    | 1    | Gear Case ASM     |
| 20   | 98-9598     | 5    | Plug              |
| 30   | 98-7562     | 1    | Washer-Plain      |
| 40   | 98-9388     | 1    | Joint-Pipe        |
| 50   | 130-1511    | 1    | Spring            |
| 60   | 130-1510    | 1    | Valve-Relief      |
| 70   | 130-1508    | 1    | Rotor ASM         |
| 80   | 130-1509    | 1    | Cover-Pump, Oil   |
| 90   | 130-1164    | 5    | Screw-Binding     |
| 100  | 98-9641     | 1    | Cover-Case, Gear  |
| 110  | 99-3450     | 1    | Plug              |
| 120  | 99-3451     | 1    | Plug-Packing      |
| 130  | 98-9633     | 1    | Gasket-Case, Gear |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 140  | 100-1765    | 3    | Bolt             |
| 150  | 125-9063    | 4    | Bolt-Sems        |
| 160  | 98-9356     | 2    | Bolt             |
| 170  | 98-9437     | 1    | Bolt             |
| 180  | 98-9586     | 2    | Bolt             |
| 190  | 99-3511     | 1    | Bolt             |
| 200  | 105-3709    | 1    | Stud             |
| 210  | 100-2203    | 1    | Nut-Flange       |
| 220  | 119-8038    | 1    | Seal-Oil         |
| 230  | 105-3710    | 2    | Stud             |
| 240  | 107-9075    | 1    | Plug-Filler, Oil |
| 250  | 99-3446     | 1    | O-Ring           |
| 260  | 127-0511    | 1    | Filter-Oil       |

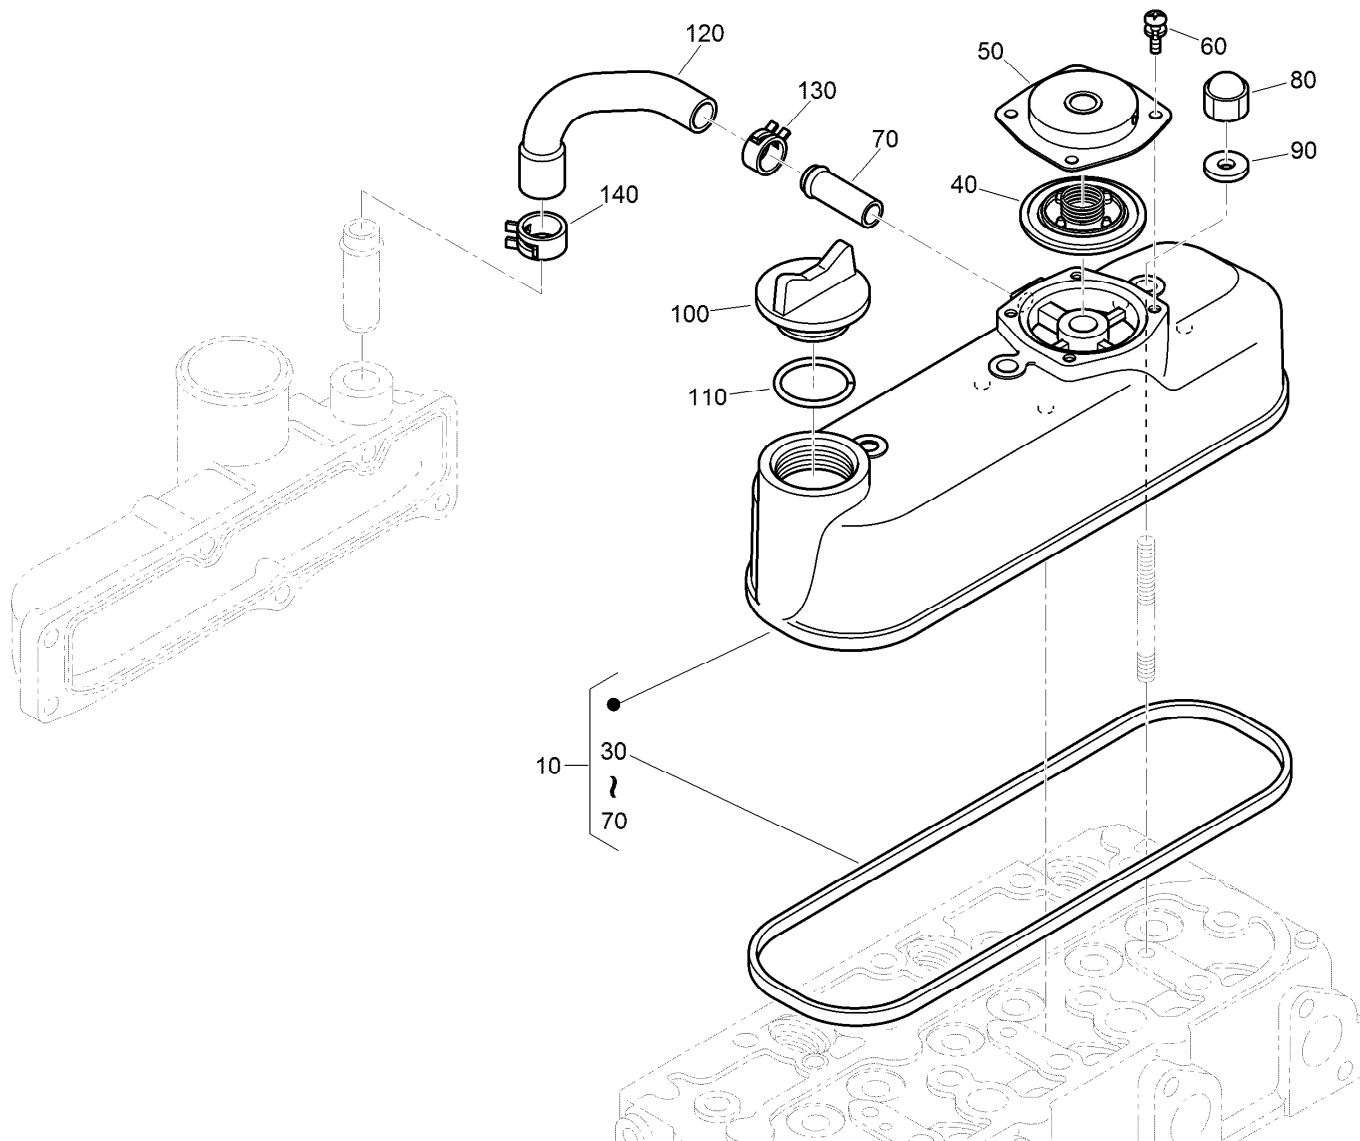

## Cylinder Head Cover Assembly

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 130-1372    | 1    | Cylinder Head Cover ASM |
| 30   | 130-1249    | 1    | Gasket-Head Cover       |
| 40   | 110-3715    | 1    | Valve-Breather          |
| 50   | 110-3714    | 1    | Cover-Breather          |
| 60   | 98-9364     | 4    | Screw (With Washer)     |
| 70   | 98-7766     | 1    | Pipe-Return, Water      |
| 80   | 98-9455     | 3    | Nut-Cap                 |
| 90   | 98-9454     | 3    | Gasket                  |
| 100  | 107-9075    | 1    | Plug-Filler, Oil        |
| 110  | 99-3446     | 1    | O-Ring                  |
| 120  | 107-7836    | 1    | Tube-Breather           |
| 130  | 108-2859    | 1    | Clamp-Hose              |
| 140  | 108-2860    | 1    | Clamp-Hose              |

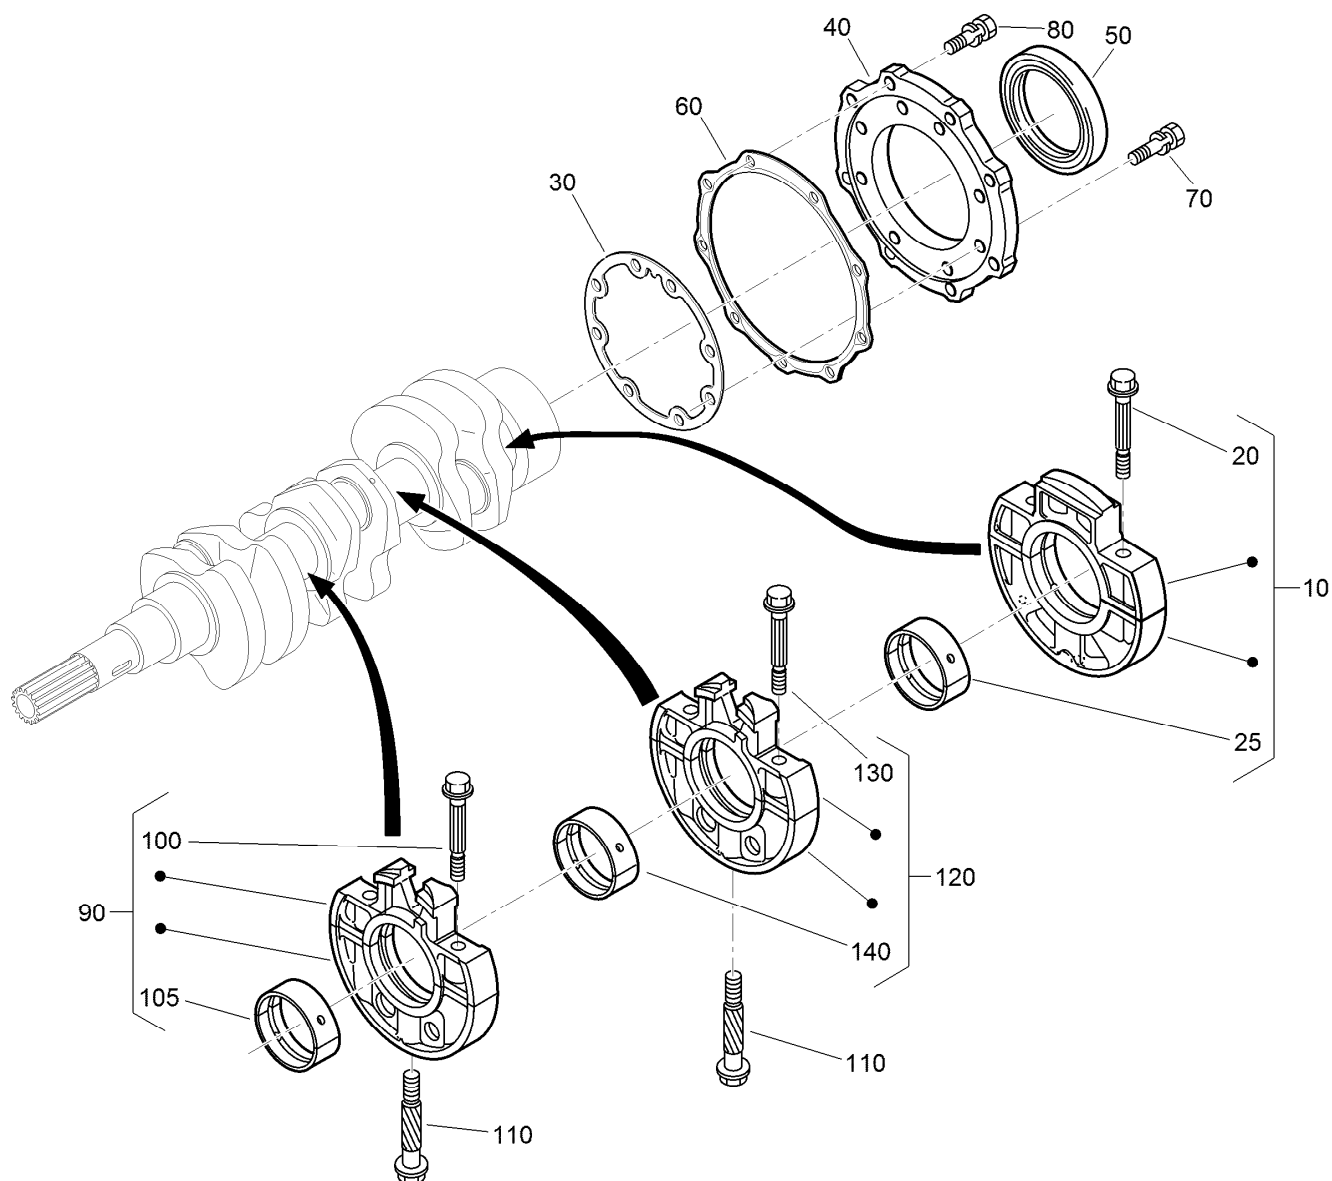

## Main Bearing Case Assembly


| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 10   | 112-7026    | 1    | Wheel Bearing Case ASM    |
| 20   | 98-9484     | 2    | Bolt-Case, Bearing        |
| 25   | 115-4121    | 1    | Metal-Crankshaft (STD)    |
| 25   | 112-7039    | 1    | Metal-Crankshaft (0.2Mm)  |
| 25   | 112-7040    | 1    | Metal-Crankshaft (-0.4Mm) |
| 30   | 127-0440    | 1    | Gasket-Case, Bearing      |
| 40   | 112-7046    | 1    | Cover-Case, Bearing       |
| 50   | 112-0180    | 1    | Seal-Oil                  |
| 60   | 112-7037    | 1    | Gasket-Cover, Case        |
| 70   | 127-0441    | 8    | Bolt                      |
| 80   | 127-0442    | 9    | Bolt                      |
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 90   | 115-4106    | 1    | Main Bearing Case ASM      |
| 100  | 98-9484     | 2    | Bolt-Case, Bearing         |
| 105  | 98-9524     | 1    | Metal-Crankshaft (STD Set) |
| 105  | 127-0433    | 1    | Metal-Crankshaft (-0.2Mm)  |
| 105  | 98-9531     | 1    | Bearing-Main (0.4Mm)       |
| 110  | 98-9485     | 2    | Bolt-Case, Bearing         |
| 120  | 115-4107    | 1    | Main Bearing Case ASM      |
| 130  | 98-9484     | 2    | Bolt-Case, Bearing         |
| 140  | 98-9524     | 1    | Metal-Crankshaft (STD Set) |
| 140  | 127-0433    | 1    | Metal-Crankshaft (-0.2Mm)  |
| 140  | 98-9531     | 1    | Bearing-Main (0.4Mm)       |

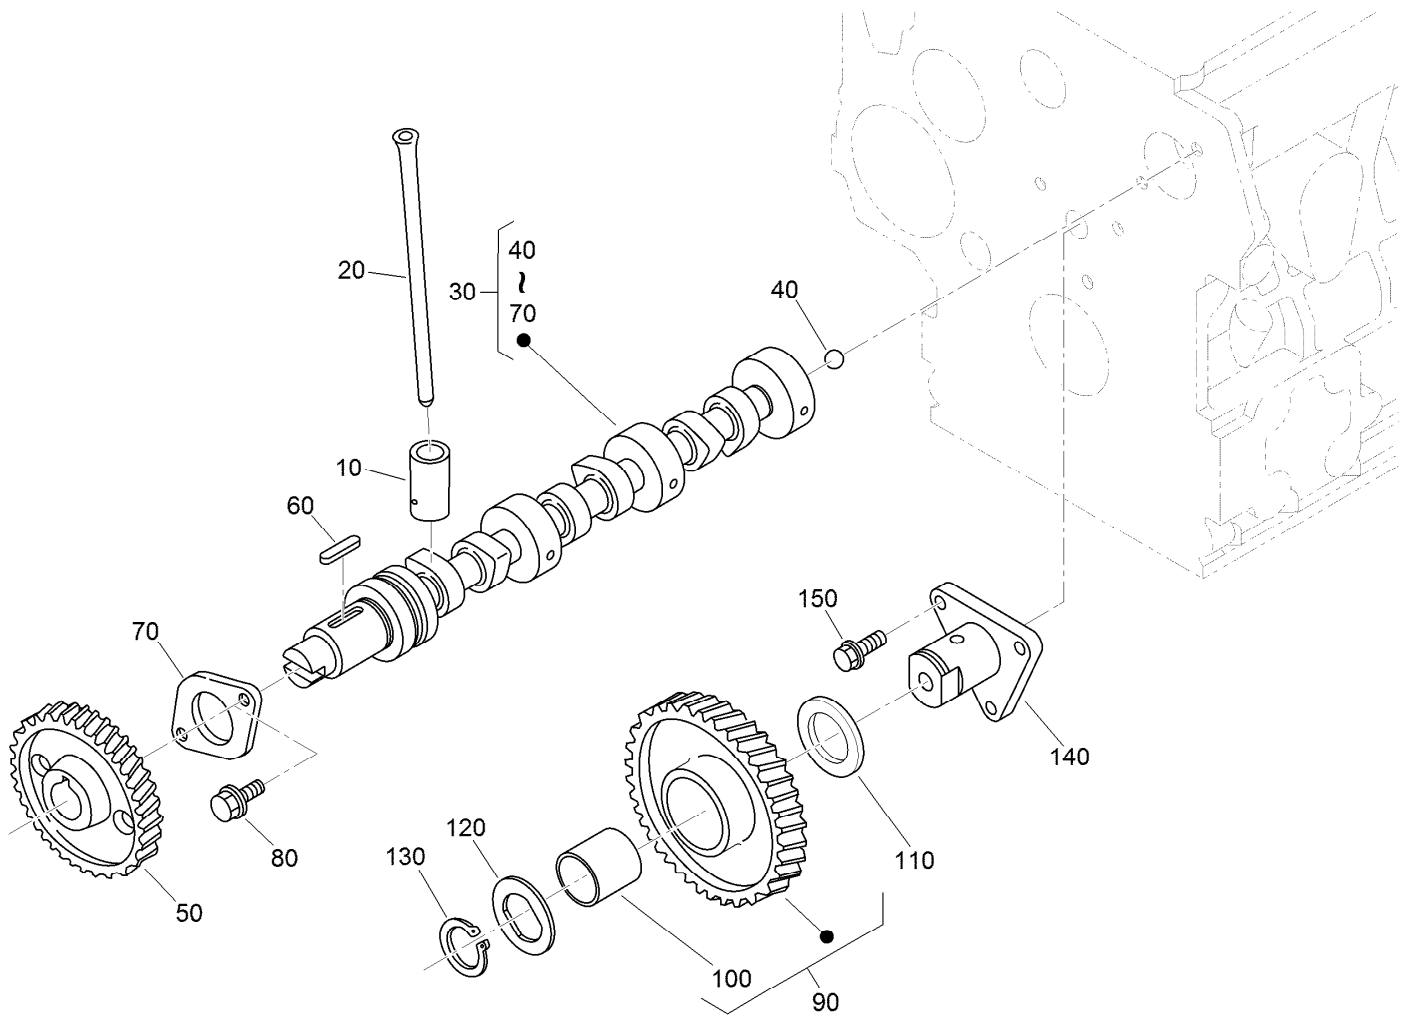

## Camshaft and Idle Gear Shaft Assembly

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 112-0185    | 6    | Tappet             |
| 20   | 127-0421    | 6    | Rod-Push           |
| 30   | 130-1505    | 1    | Camshaft ASM       |
| 40   | 110-3729    | 1    | Ball               |
| 50   | 98-9512     | 1    | Gear-Cam           |
| 60   | 98-9378     | 1    | Key-Feather        |
| 70   | 98-9510     | 1    | Stopper-Camshaft   |
| 80   | 98-7692     | 2    | Bolt               |
| 90   | 117-7584    | 1    | Idler Gear ASM     |
| 100  | 117-7585    | 1    | Bushing-Gear, Idle |
| 110  | 98-9535     | 1    | Collar-Gear, Idle  |
| 120  | 98-9536     | 1    | Collar-Gear, Idle  |
| 130  | 98-9534     | 1    | Circlip-Gear, Idle |
| 140  | 98-9533     | 1    | Shaft-Gear, Idle   |
| 150  | 98-7692     | 3    | Bolt               |

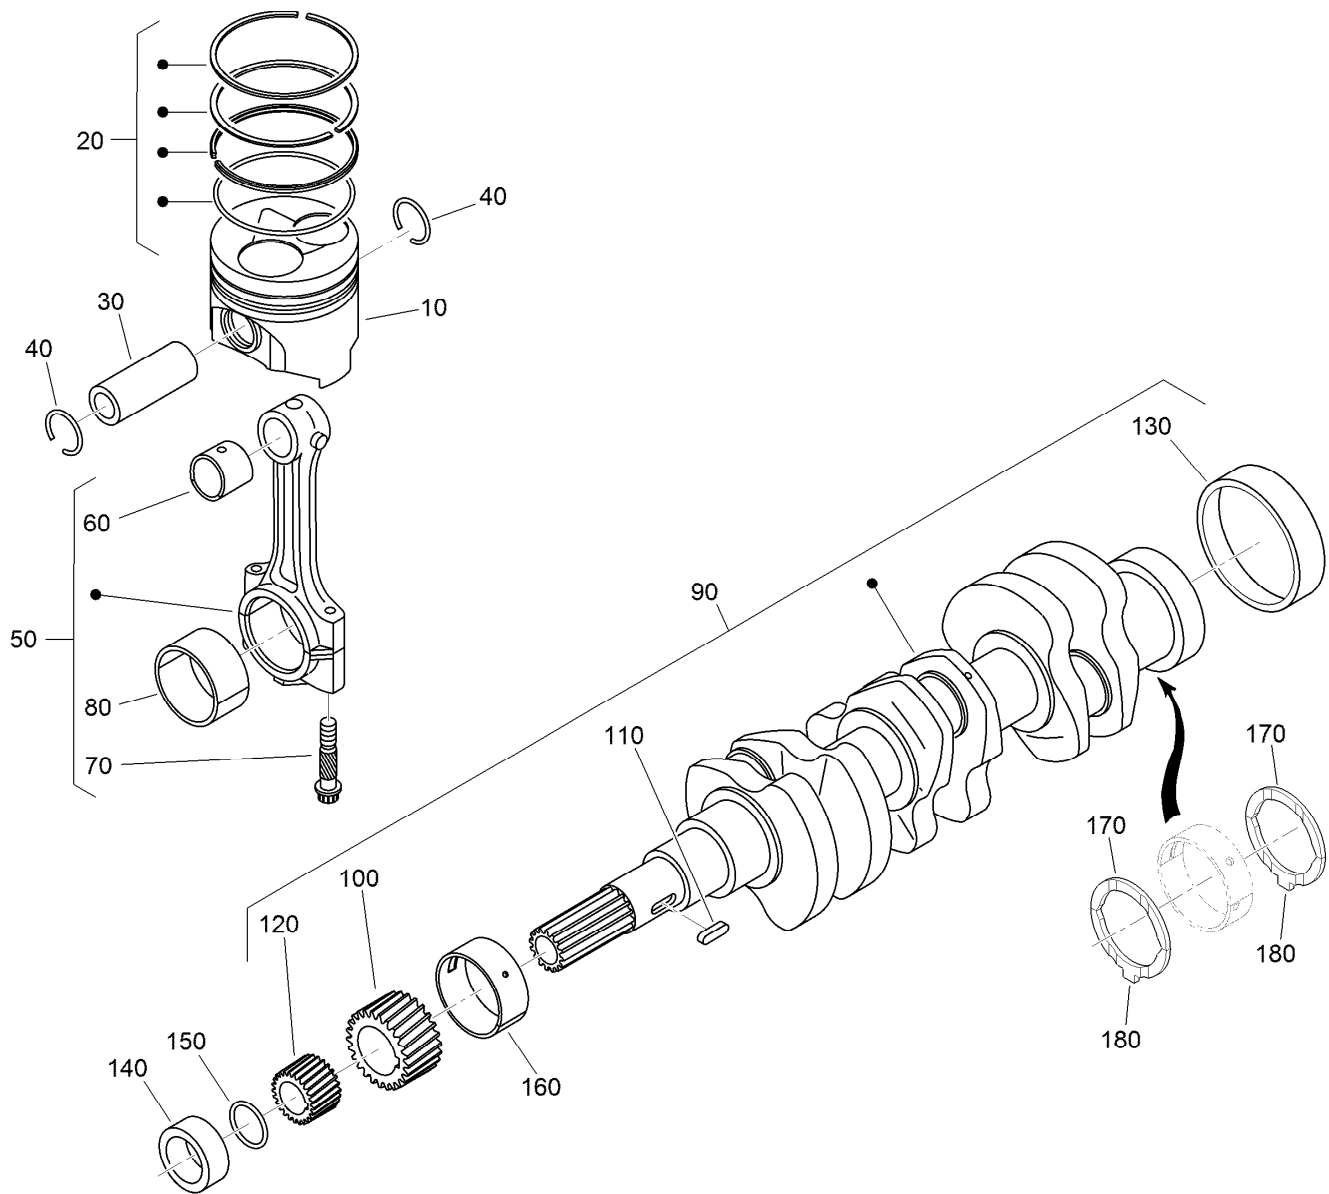

## Piston and Crankshaft Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 10   | 130-1546    | 3    | Piston (STD)              |
| 10   | 130-1549    | 3    | Piston (+0.50Mm)          |
| 20   | 130-1506    | 3    | Piston Ring ASM (STD)     |
| 20   | 130-1507    | 3    | Piston Ring ASM (+0.50Mm) |
| 30   | 98-9513     | 3    | Pin-Piston                |
| 40   | 98-9514     | 6    | Circlip-Pin, Piston       |
| 50   | 117-7586    | 3    | Connecting Rod ASM        |
| 60   | 115-3014    | 3    | Bushing-Pin, Piston       |
| 70   | 98-9517     | 6    | Bolt-Rod, Connecting      |
| 80   | 98-9553     | 3    | Bearing-Rod (STD)         |
| 80   | 117-7587    | 3    | Metal-Crankpin (-0.2Mm)   |
| 80   | 117-7588    | 3    | Metal-Crankpin (-0.4Mm)   |
| 90   | 130-1375    | 1    | Crankshaft ASM            |
| 100  | 117-7561    | 1    | Gear-Crankshaft           |

 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 110  | 98-9666     | 1    | Key                        |
| 120  | 127-0445    | 1    | Gear-Drive, Oil Pump       |
| 130  | 98-9522     | 1    | Sleeve-Crankshaft          |
| 140  | 127-0444    | 1    | Collar-Crankshaft          |
| 150  | 105-3783    | 1    | O-Ring                     |
| 160  | 112-7005    | 1    | Bearing-Main (STD)         |
| 160  | 98-9528     | 1    | Bearing-Main (-0.2Mm)      |
| 160  | 130-1274    | 1    | Metal-Crankshaft (-0.40Mm) |
| 170  | 98-9413     | 2    | Bearing-Thrust (STD)       |
| 170  | 127-0416    | 2    | Metal-Side (+0.2Mm)        |
| 170  | 127-0417    | 2    | Metal-Side (+0.40Mm)       |
| 180  | 98-9688     | 2    | Bearing-Thrust (STD)       |
| 180  | 127-0437    | 2    | Metal-Side (+0.2Mm)        |
| 180  | 127-0438    | 2    | Metal-Side (+0.40Mm)       |

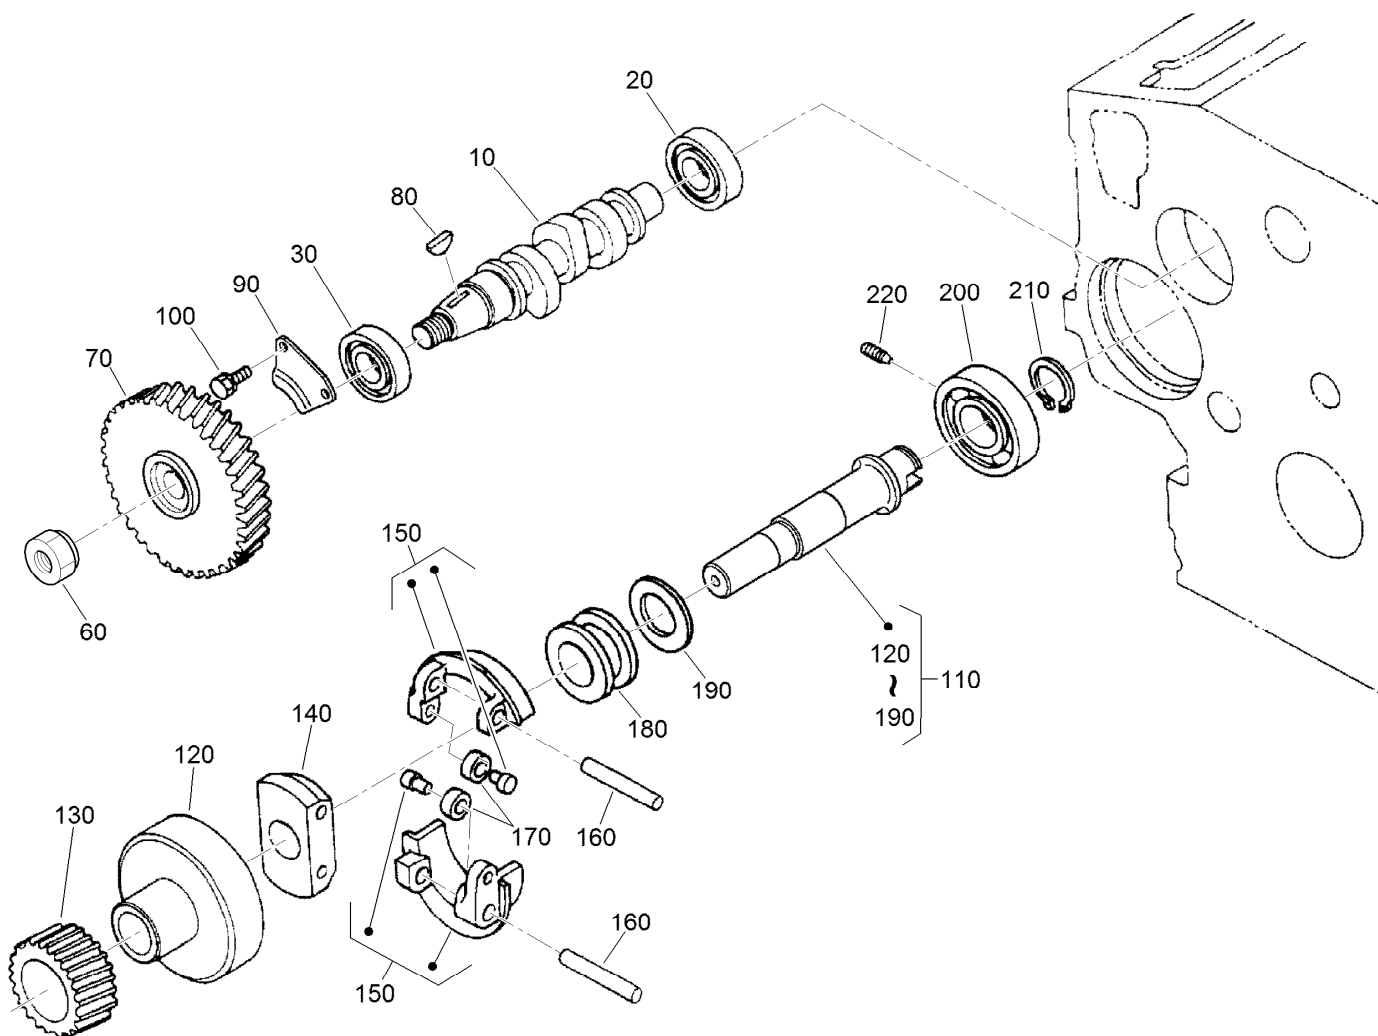

## Fuel Camshaft and Governor Shaft Assembly


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 10   | 98-9459     | 1    | Camshaft-Fuel          |
| 20   | 107-9077    | 1    | Bearing-Ball           |
| 30   | 107-9078    | 1    | Bearing-Ball           |
| 60   | 130-1512    | 1    | Nut                    |
| 70   | 130-1378    | 1    | Gear-Injection Pump    |
| 80   | 98-9595     | 1    | Key-Woodruff           |
| 90   | 98-9511     | 1    | Stopper-Fuel, Camshaft |
| 100  | 98-7692     | 2    | Bolt                   |
| 110  | 130-1255    | 1    | Governor Shaft ASM     |
| 120  | 98-9562     | 1    | Holder-Gear, Governor  |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 130  | 98-9673     | 1    | Gear-Governor           |
| 140  | 98-9561     | 1    | Holder-Weight, Governor |
| 150  | 130-1240    | 2    | Governor Weight ASM     |
| 160  | 98-9560     | 2    | Shaft-Weight, Governor  |
| 170  | 98-9692     | 2    | Roller                  |
| 180  | 98-9563     | 1    | Sleeve-Governor         |
| 190  | 98-9564     | 1    | Washer-Thrust           |
| 200  | 107-9079    | 1    | Bearing-Ball            |
| 210  | 98-9657     | 1    | Circlip-Shaft, Governor |
| 220  | 98-9565     | 1    | Screw-Set               |

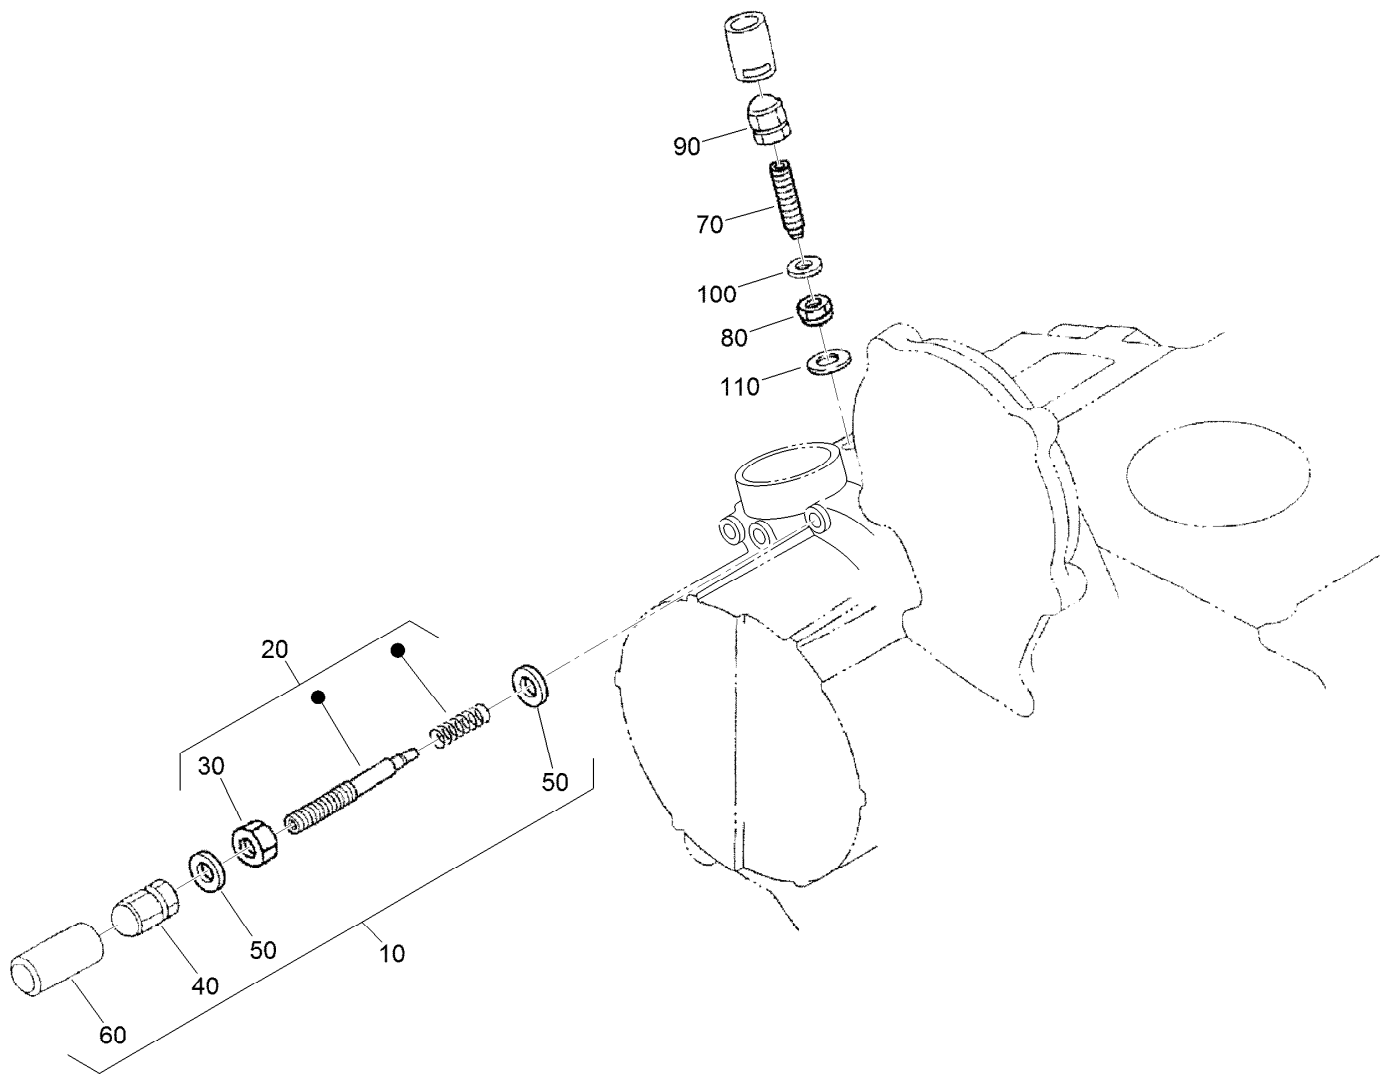


## Idle Apparatus Assembly
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 107-7838    | 1    | Apparatus-Idling   |
| 20   | 130-1253    | 1    | Adjusting Bolt ASM |
| 30   | 98-9439     | 1    | Nut                |
| 40   | 112-0181    | 1    | Nut                |
| 50   | 98-7654     | 2    | Gasket             |
| 60   | 98-7656     | 1    | Cap                |
| 70   | 112-7015    | 1    | Bolt-Adjusting     |
| 80   | 100-2175    | 1    | Nut-Lock           |
| 90   | 112-0181    | 1    | Nut                |
| 100  | 98-7654     | 1    | Gasket             |
| 110  | 107-9081    | 1    | Gasket             |

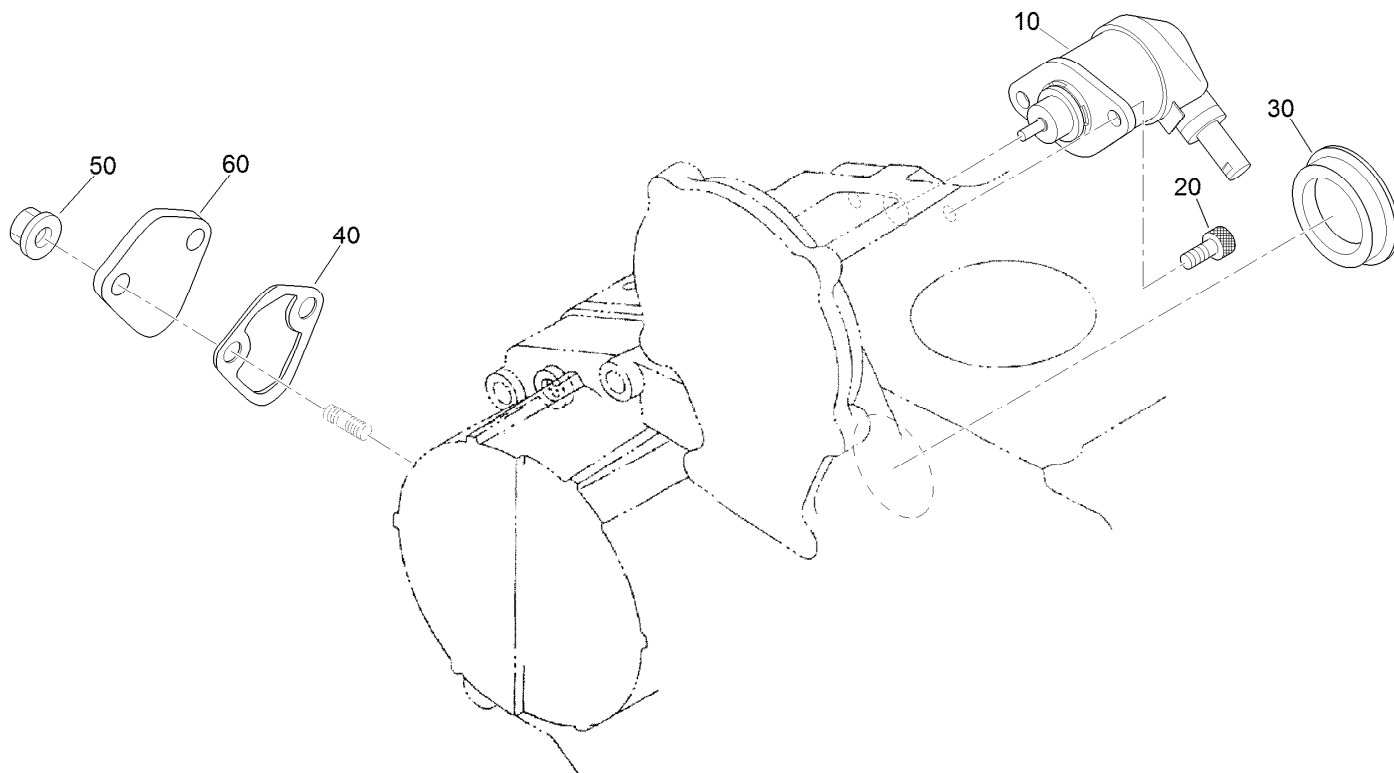

## Stop Solenoid and Fuel Pump Cover Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 104-5155           | 1           | Solenoid-Stop      |
| 20          | 130-1155           | 2           | Screw-HSH          |
| 30          | 99-3514            | 1           | Cover              |
| 40          | 117-7562           | 1           | Gasket-Pump, Fuel  |
| 50          | 100-2203           | 2           | Nut-Flange         |
| 60          | 112-7016           | 1           | Cover-Pump         |

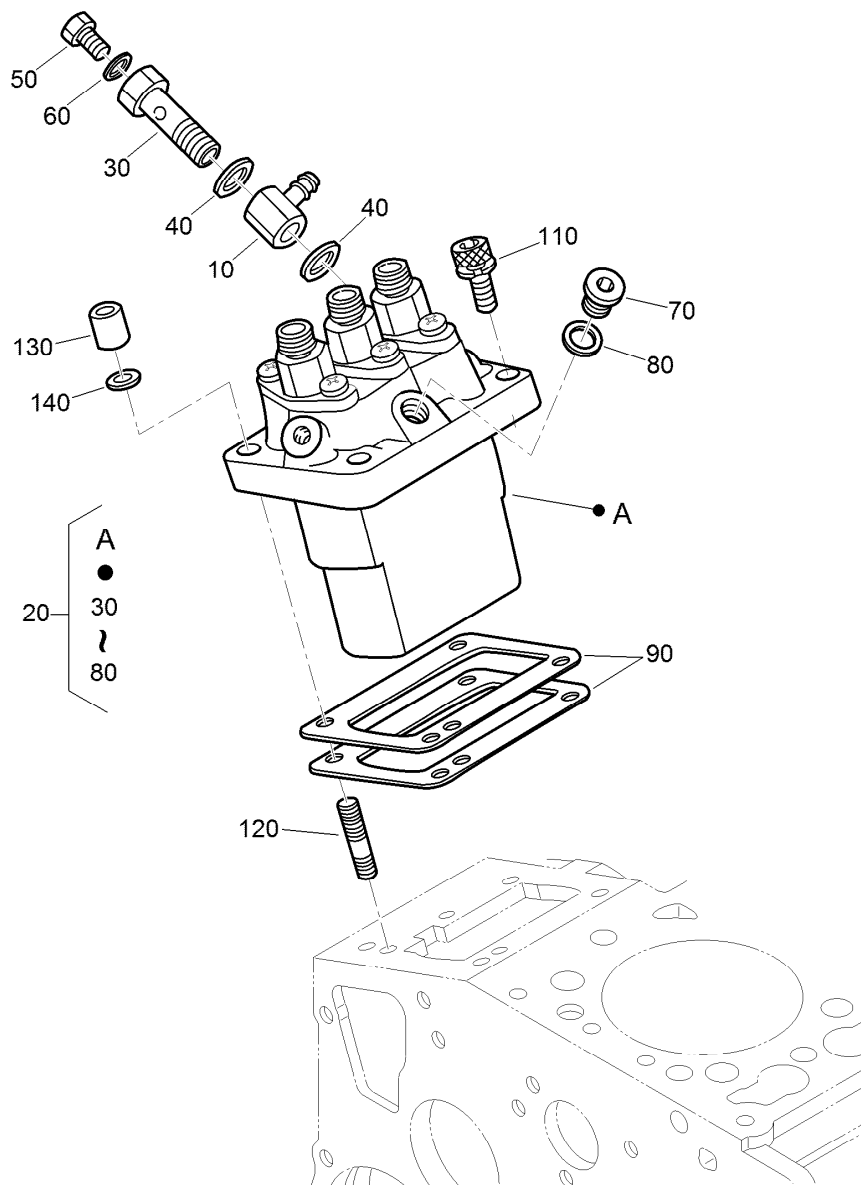


## Injection Pump Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 98-9596     | 1    | Joint-Eye               |
| 20   | 98-9643     | 1    | Injection Pump ASM      |
| 30   | 98-9464     | 1    | Bolt-Joint              |
| 40   | 98-9445     | 2    | Gasket                  |
| 50   | 98-9430     | 1    | Screw                   |
| 60   | 98-9446     | 1    | Gasket                  |
| 70   | 98-9466     | 1    | Plug                    |
| 80   | 98-9451     | 1    | Gasket                  |
| 90   | 98-9456     | 1    | Shim-Injection (0.20Mm) |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 90   | 98-9457     | 1    | Shim-Injection (0.25Mm)  |
| 90   | 98-9458     | 1    | Shim-Injection (0.30Mm)  |
| 90   | 115-3046    | 1    | Shim-Injection (0.35Mm)  |
| 90   | 115-3045    | 1    | Shim-Injection (0.175Mm) |
| 110  | 117-7564    | 2    | Bolt-Hex Soc HD          |
| 120  | 98-9438     | 2    | Stud                     |
| 130  | 98-9440     | 2    | Nut-Cap                  |
| 140  | 98-7699     | 2    | Washer-Spring            |




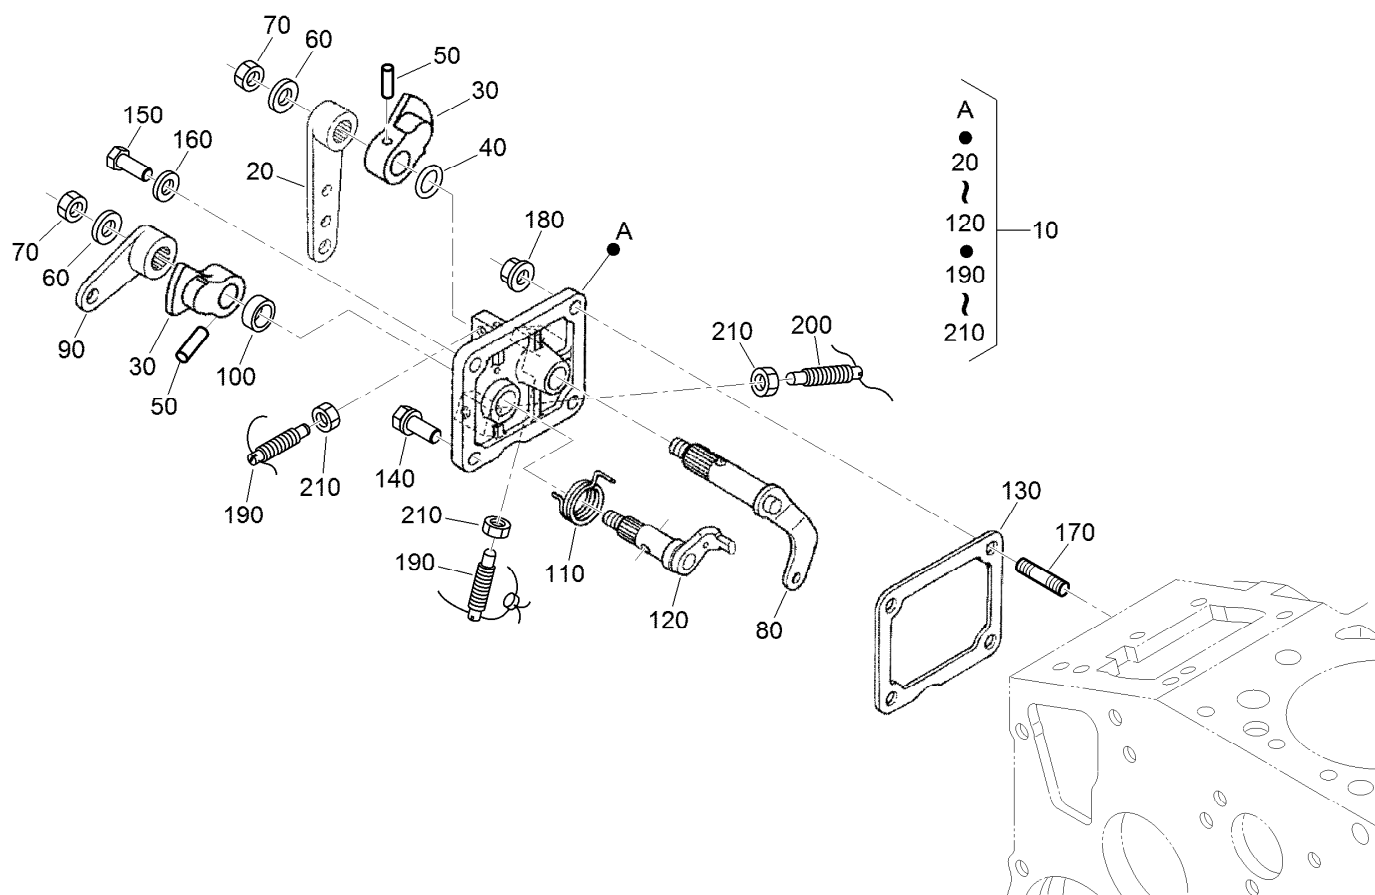

## Speed Control Plate Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 105-3735    | 1    | Control Plate ASM    |
| 20   | 98-9662     | 1    | Lever-Control, Speed |
| 30   | 98-9572     | 2    | Lever-Control, Speed |
| 40   | 105-3788    | 1    | O-Ring               |
| 50   | 98-7602     | 2    | Pin-Spring           |
| 60   | 98-9594     | 2    | Washer-Plain         |
| 70   | 98-9589     | 2    | Nut                  |
| 80   | 98-9658     | 1    | Governor Lever ASM   |
| 90   | 98-9663     | 1    | Lever-Stop, Engine   |
| 100  | 98-7601     | 1    | Seal-Oil             |
| 110  | 98-9472     | 1    | Spring-Return        |
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 120  | 98-9664     | 1    | Shaft-Lever, Stop |
| 130  | 98-9637     | 1    | Gasket            |
| 140  | 98-7692     | 1    | Bolt              |
| 150  | 127-0401    | 1    | Bolt-Hex          |
| 160  | 98-7654     | 1    | Gasket            |
| 170  | 105-3710    | 2    | Stud              |
| 180  | 100-2203    | 2    | Nut-Flange        |
| 190  | 117-7565    | 2    | Bolt-Adjusting    |
| 200  | 117-7566    | 1    | Bolt-Adjusting    |
| 210  | 98-7572     | 3    | Nut               |

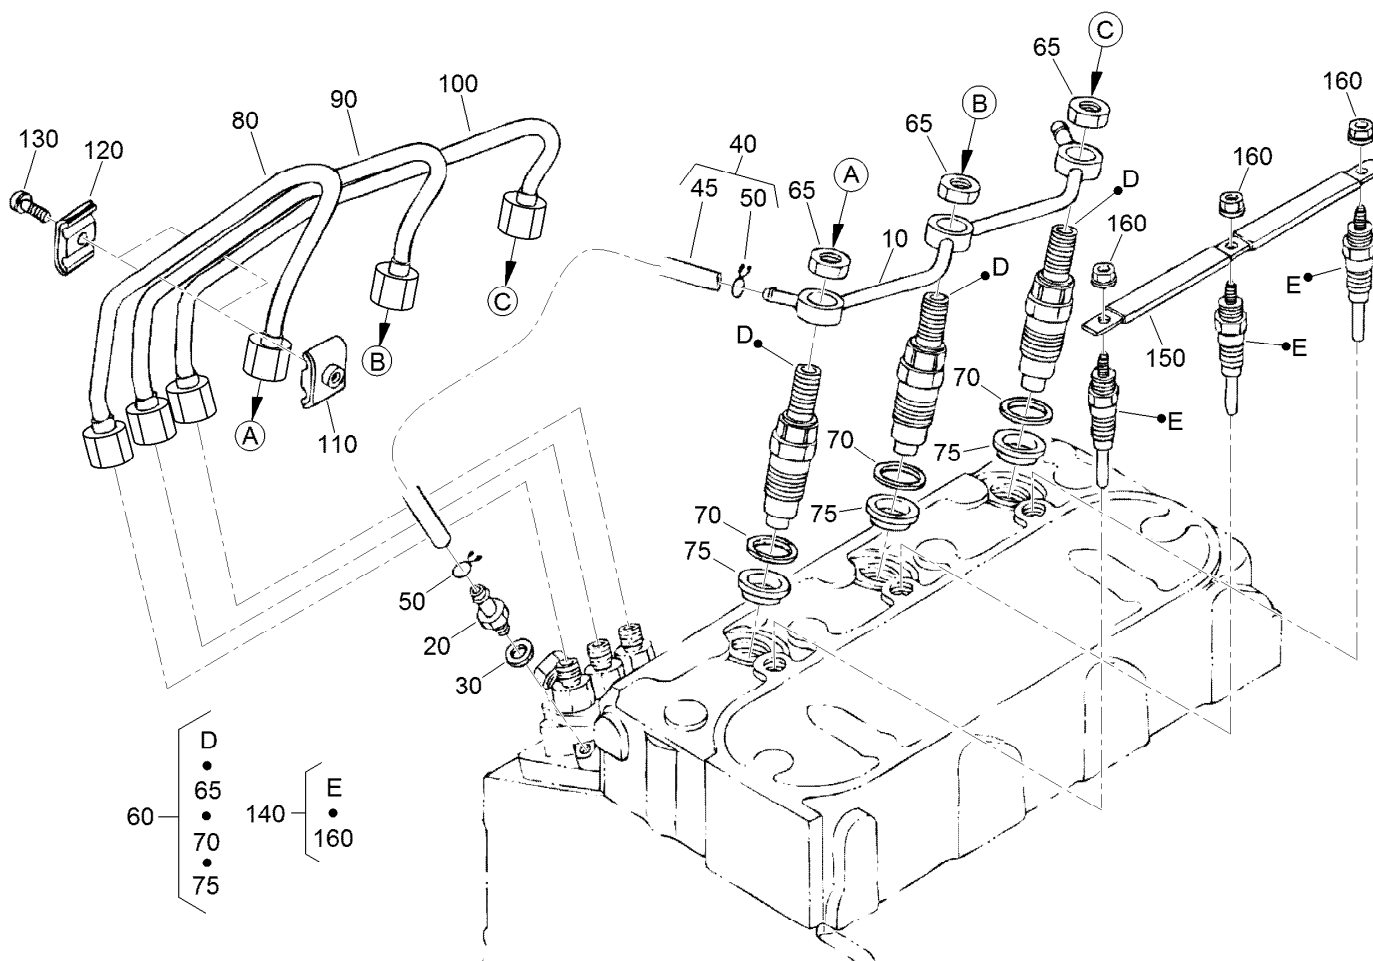


## Nozzle Holder and Glow Plug Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 98-9620     | 1    | Overflow Pipe ASM  |
| 20   | 98-9431     | 1    | Screw-Bleeder, Air |
| 30   | 98-7654     | 1    | Gasket             |
| 40   | 98-9420     | 1    | Overflow Pipe ASM  |
| 45   | 112-0182    | 1    | Pipe-Overflow      |
| 50   | 98-7671     | 2    | Clip-Pipe          |
| 60   | 130-1410    | 3    | Nozzle Holder Kit  |
| 65   | 121-2411    | 3    | Nut                |
| 70   | 98-7676     | 3    | Gasket             |
| 75   | 98-7677     | 3    | Seal-Heat          |

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 80   | 98-9622     | 1    | Pipe-Injection   |
| 90   | 98-9654     | 1    | Pipe-Injection   |
| 100  | 98-9655     | 1    | Pipe-Injection   |
| 110  | 98-7682     | 2    | Clamp-Pipe       |
| 120  | 98-7683     | 2    | Clamp-Pipe       |
| 130  | 98-7684     | 2    | Screw (W/Washer) |
| 140  | 130-1411    | 3    | Plug-Glow        |
| 150  | 98-9631     | 1    | Cord-Plug, Glow  |
| 160  | 99-8377     | 3    | Nut-Flange       |



 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|------------------------|
| 10          | 130-1410           | 3           | Nozzle Holder Kit      | 110         | 99-8311            | 3           | Washer-Adjust (0.20Mm) |
| 20          | 121-2411           | 3           | Nut                    | 110         | 99-8312            | 3           | Washer-Adjust (0.30Mm) |
| 30          | 99-8302            | 3           | Washer-Adjusting       | 110         | 99-8313            | 3           | Washer-Adjust (0.40Mm) |
| 40          | 99-8303            | 3           | Spring-Nozzle          | 110         | 99-8314            | 3           | Washer-Adjust (0.50Mm) |
| 50          | 99-8304            | 3           | Spacer-Distance        | 110         | 99-8315            | 3           | Washer-Adjust (0.52Mm) |
| 60          | 99-8305            | 3           | Rod-Push               | 110         | 99-8316            | 3           | Washer-Adjust (0.54Mm) |
| 70          | 99-8306            | 3           | Nut-Nozzle             | 110         | 99-8317            | 3           | Washer-Adjust (0.56Mm) |
| 80          | 99-8307            | 3           | Washer-Plain           | 110         | 99-8318            | 3           | Washer-Adjust (0.58Mm) |
| 90          | 115-3020           | 3           | Piece-Nozzle           | 110         | 99-8319            | 3           | Washer-Adjust (0.80Mm) |
| 100         | 99-8309            | 3           | Adjusting Washer ASM   | 120         | 98-7676            | 3           | Gasket                 |
| 110         | 99-8310            | 3           | Washer-Adjust (0.10Mm) | 130         | 98-7677            | 3           | Seal-Heat              |

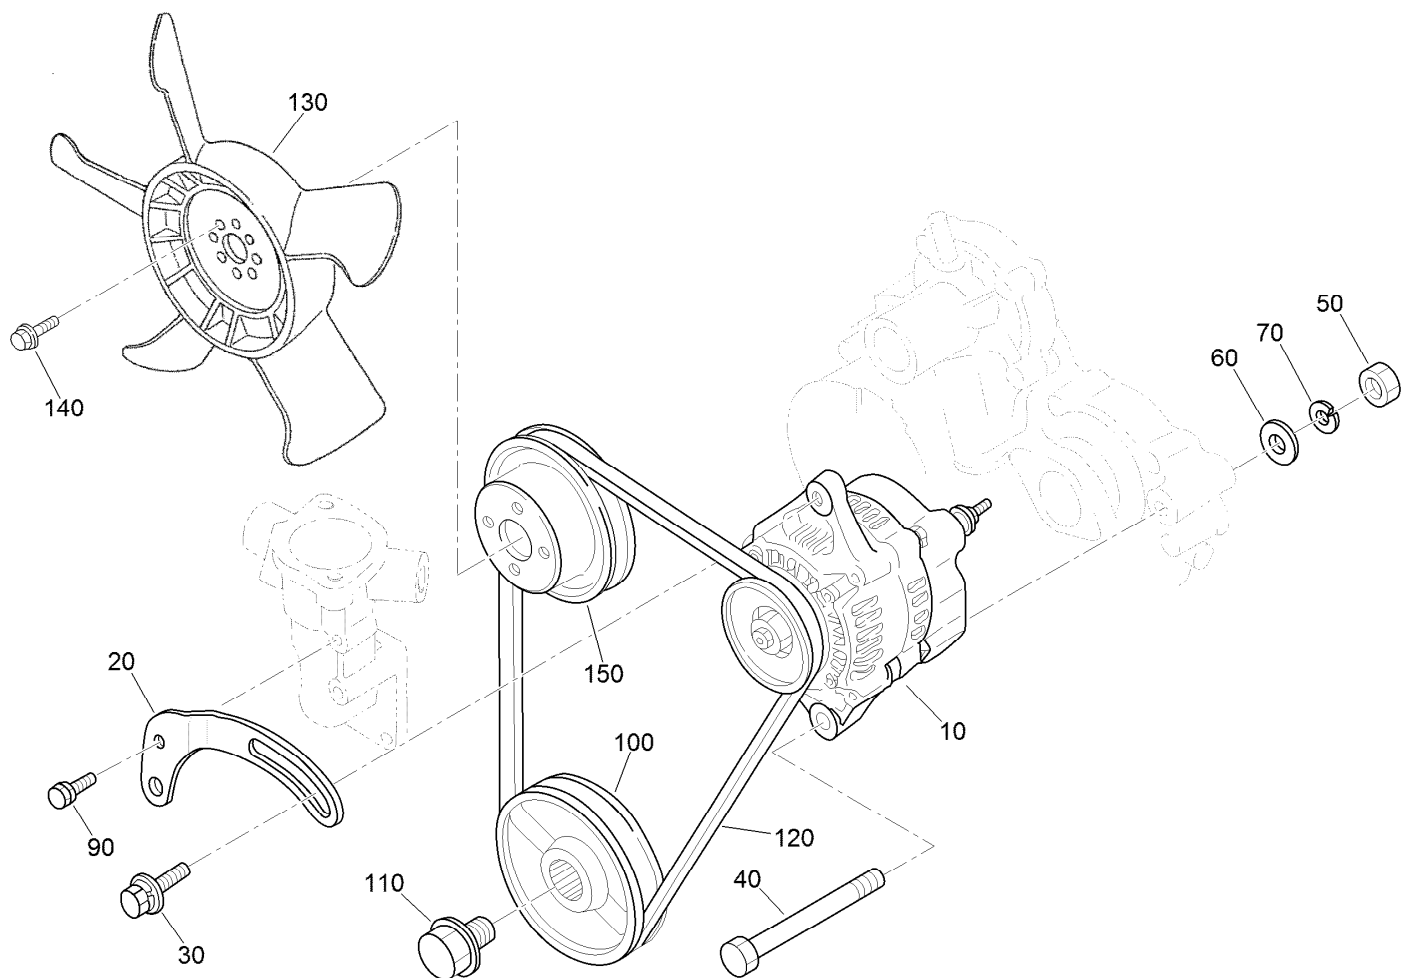

## Alternator, Pulley and Fan Assembly

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 98-9474     | 1    | Alternator ASM    |
| 20   | 112-7047    | 1    | Stay-Dynamo       |
| 30   | 108-7088    | 1    | Bolt              |
| 40   | 98-9360     | 1    | Bolt              |
| 50   | 98-7737     | 1    | Nut               |
| 60   | 98-9366     | 1    | Washer-Plain      |
| 70   | 98-7738     | 1    | Washer-Spring     |
| 90   | 98-7692     | 1    | Bolt              |
| 100  | 99-3456     | 1    | Pulley-Drive, Fan |
| 110  | 98-9585     | 1    | Bolt              |
| 120  | 130-1241    | 1    | V Belt            |
| 130  | 99-3461     | 1    | Fan               |
| 140  | 99-8363     | 4    | Bolt-Flange       |
| 150  | 99-3453     | 1    | Pulley-Fan        |

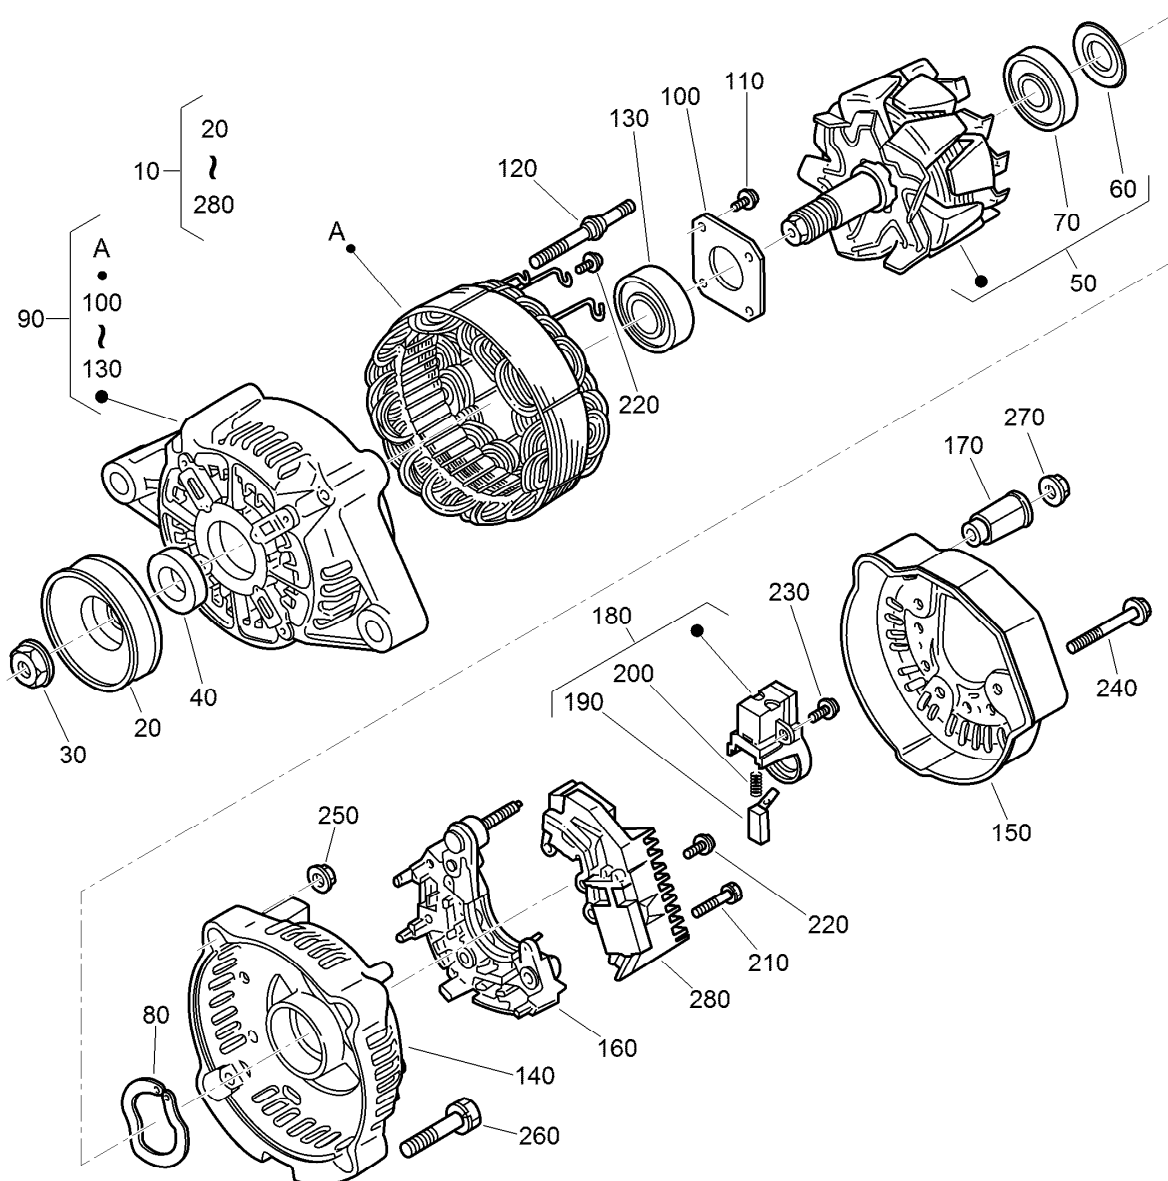

## Alternator Components Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 98-9474     | 1    | Alternator ASM      |
| 20   | 98-9453     | 1    | Pulley-Dynamo       |
| 30   | 98-7708     | 1    | Nut                 |
| 40   | 98-7709     | 1    | Collar              |
| 50   | 107-0136    | 1    | Rotor ASM           |
| 60   | 98-7711     | 1    | Cover-Bearing       |
| 70   | 107-0138    | 1    | Bearing-Ball        |
| 80   | 98-7713     | 1    | Washer-Thrust       |
| 90   | 107-0139    | 1    | Drive End Frame ASM |
| 100  | 98-7715     | 1    | Plate-Retainer      |
| 110  | 98-7716     | 4    | Screw-Head, Round   |
| 120  | 98-7717     | 2    | Bolt-Through        |
| 130  | 107-0137    | 1    | Bearing-Ball        |
| 140  | 107-9087    | 1    | Frame-End           |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 150  | 107-0140    | 1    | Cover-End          |
| 160  | 127-1612    | 1    | Rectifier ASM      |
| 170  | 98-7722     | 1    | Bushing-Insulation |
| 180  | 107-0141    | 1    | Brush Holder ASM   |
| 190  | 98-7724     | 2    | Brush              |
| 200  | 98-7725     | 2    | Spring-Brush       |
| 210  | 98-7726     | 2    | Screw-Head, Round  |
| 220  | 98-7727     | 6    | Screw-Head, Round  |
| 230  | 98-7728     | 1    | Screw-Head, Round  |
| 240  | 98-7729     | 3    | Bolt               |
| 250  | 98-7730     | 2    | Nut                |
| 260  | 98-7731     | 2    | Bolt               |
| 270  | 98-7732     | 1    | Nut                |
| 280  | 110-3799    | 1    | Regulator ASM      |

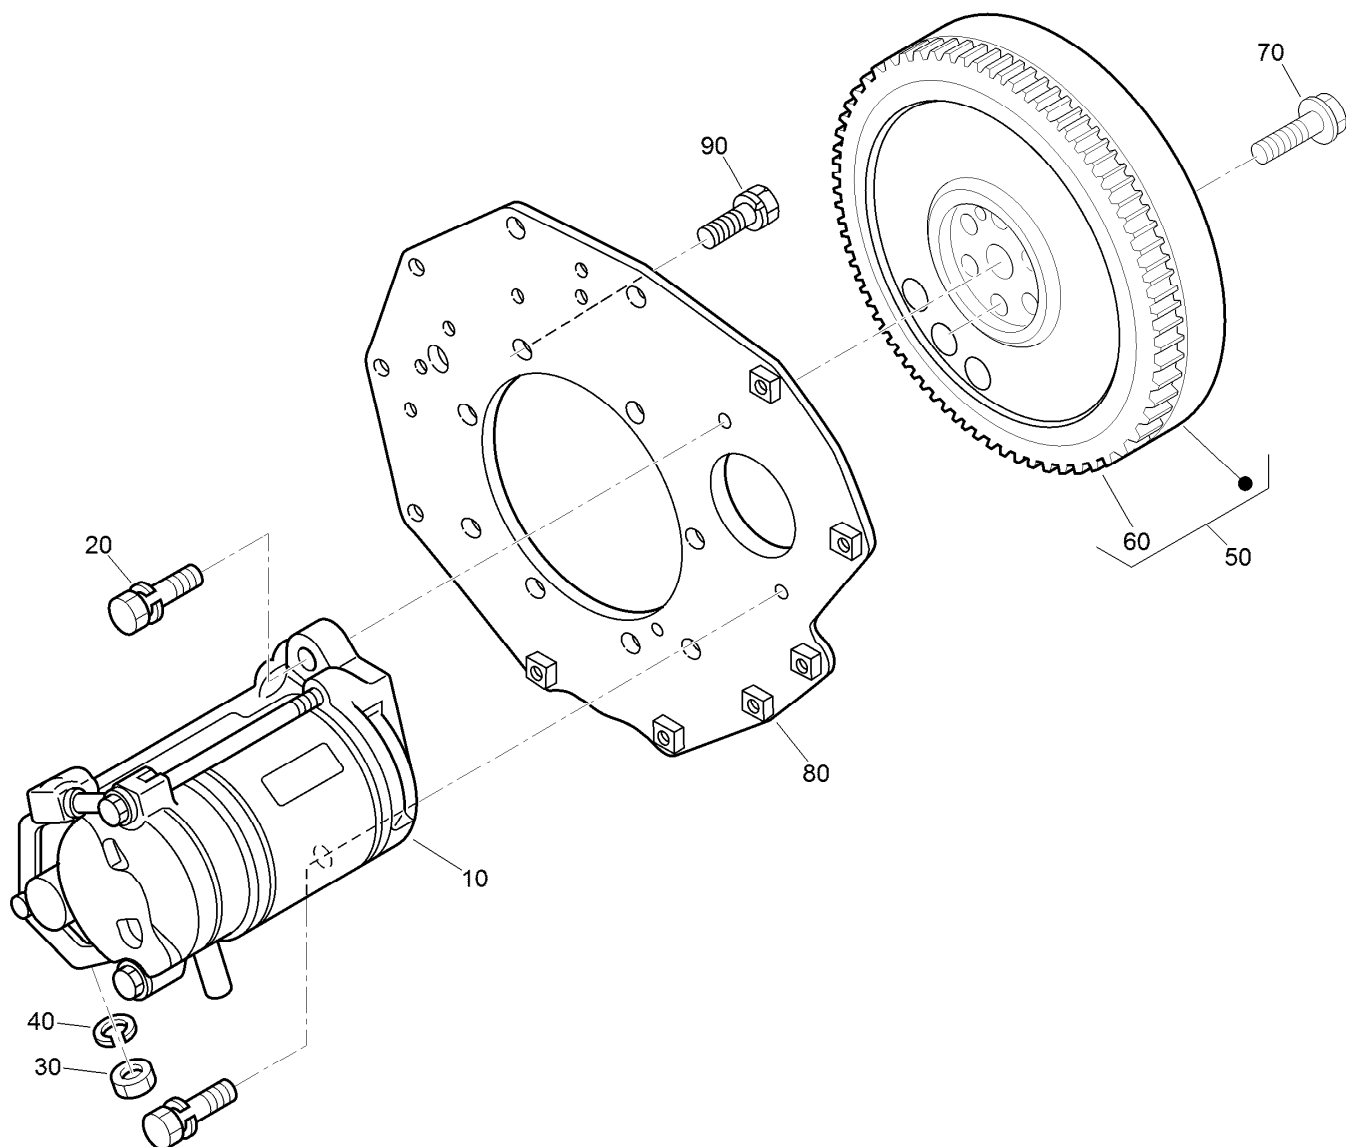

## Starter and Flywheel Assembly

 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 10   | 98-9705     | 1    | Starter ASM     |
| 20   | 98-7697     | 2    | Bolt            |
| 30   | 98-7739     | 1    | Nut             |
| 40   | 105-2893    | 1    | Washer-Spring   |
| 50   | 105-3784    | 1    | Flywheel ASM    |
| 60   | 115-3015    | 1    | Gear-Ring       |
| 70   | 98-9537     | 6    | Bolt-Flywheel   |
| 80   | 98-9486     | 1    | Plate-End, Rear |
| 90   | 98-9392     | 8    | Bolt            |

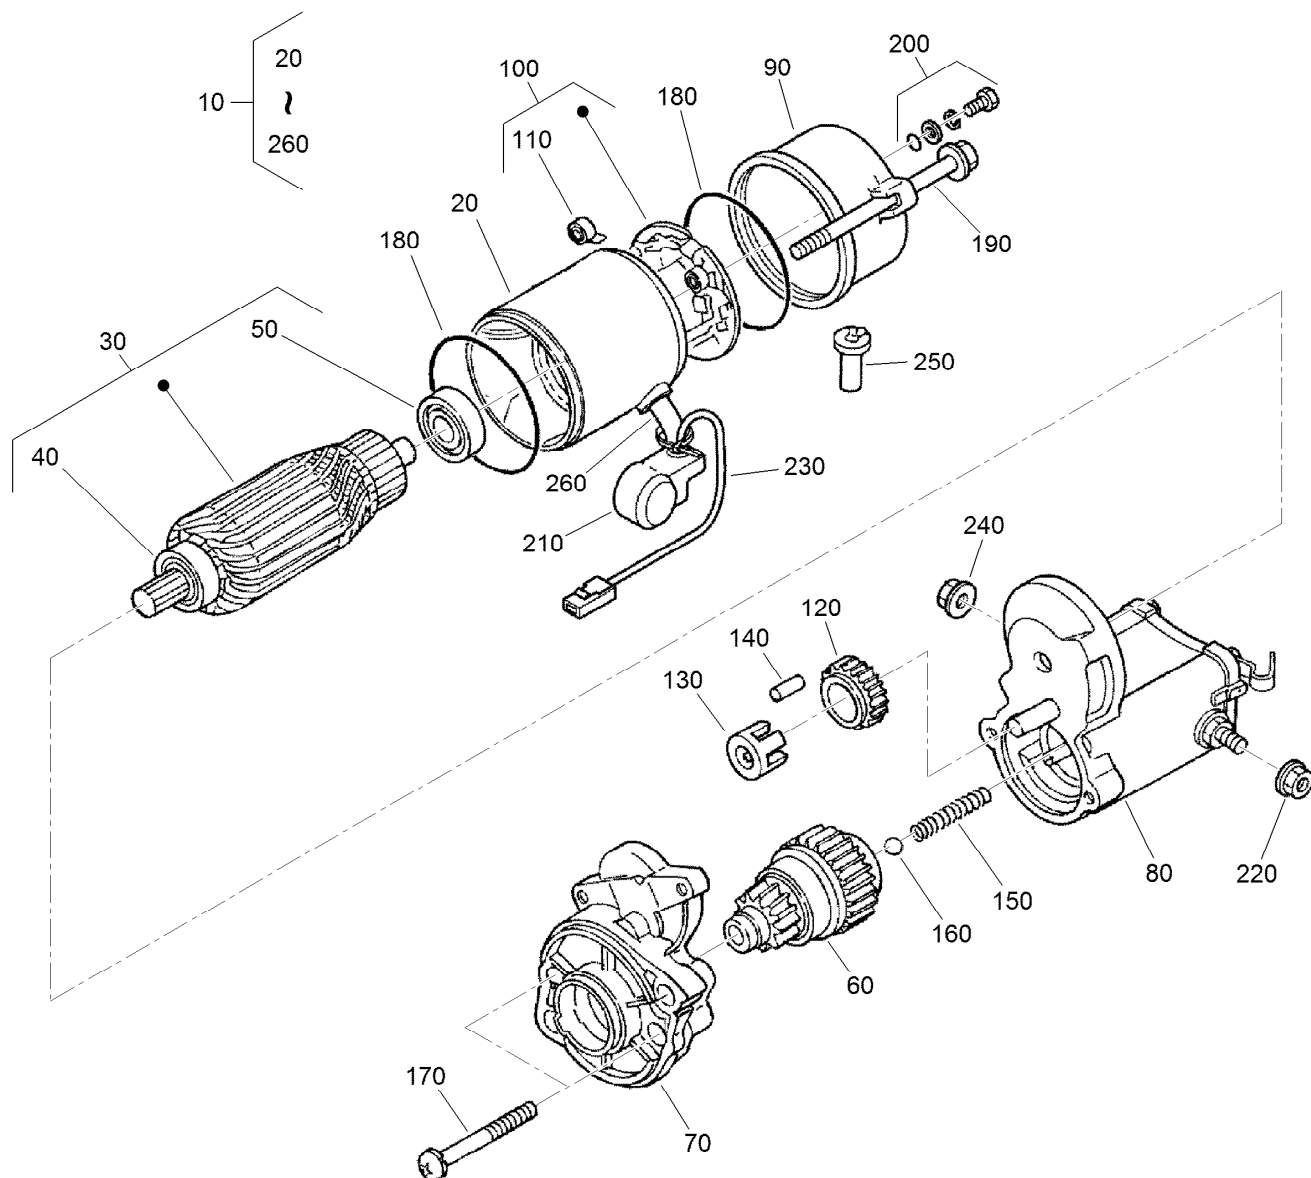

## Starter Component Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 98-9705     | 1    | Starter ASM          |
| 20   | 104-8608    | 1    | Yoke ASM             |
| 30   | 98-7742     | 1    | Armature ASM         |
| 40   | 98-7744     | 1    | Bearing              |
| 50   | 98-7743     | 1    | Bearing              |
| 60   | 99-8373     | 1    | Clutch-Running, Over |
| 70   | 99-8374     | 1    | Frame-End, Drive     |
| 80   | 105-3746    | 1    | Magnetic Switch ASM  |
| 90   | 98-7748     | 1    | Frame-End            |
| 100  | 98-7749     | 1    | Brush Holder ASM     |
| 110  | 98-7750     | 4    | Spring-Brush         |
| 120  | 98-7751     | 1    | Gear                 |
| 130  | 98-7752     | 1    | Retainer             |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 140  | 98-7753     | 5    | Roller              |
| 150  | 98-7754     | 1    | Spring              |
| 160  | 98-7755     | 1    | Ball                |
| 170  | 98-7756     | 2    | Bolt                |
| 180  | 98-7757     | 2    | O-Ring              |
| 190  | 100-9240    | 2    | Bolt                |
| 200  | 98-7758     | 2    | Bolt ASM            |
| 210  | 99-8375     | 1    | Cover               |
| 220  | 99-8371     | 1    | Nut-Hex             |
| 230  | 98-9711     | 1    | Cord-Solenoid, Stop |
| 240  | 99-8376     | 1    | Nut-Hex             |
| 250  | 98-7759     | 1    | Pipe-Drain          |
| 260  | 98-9712     | 1    | Band-Cover          |

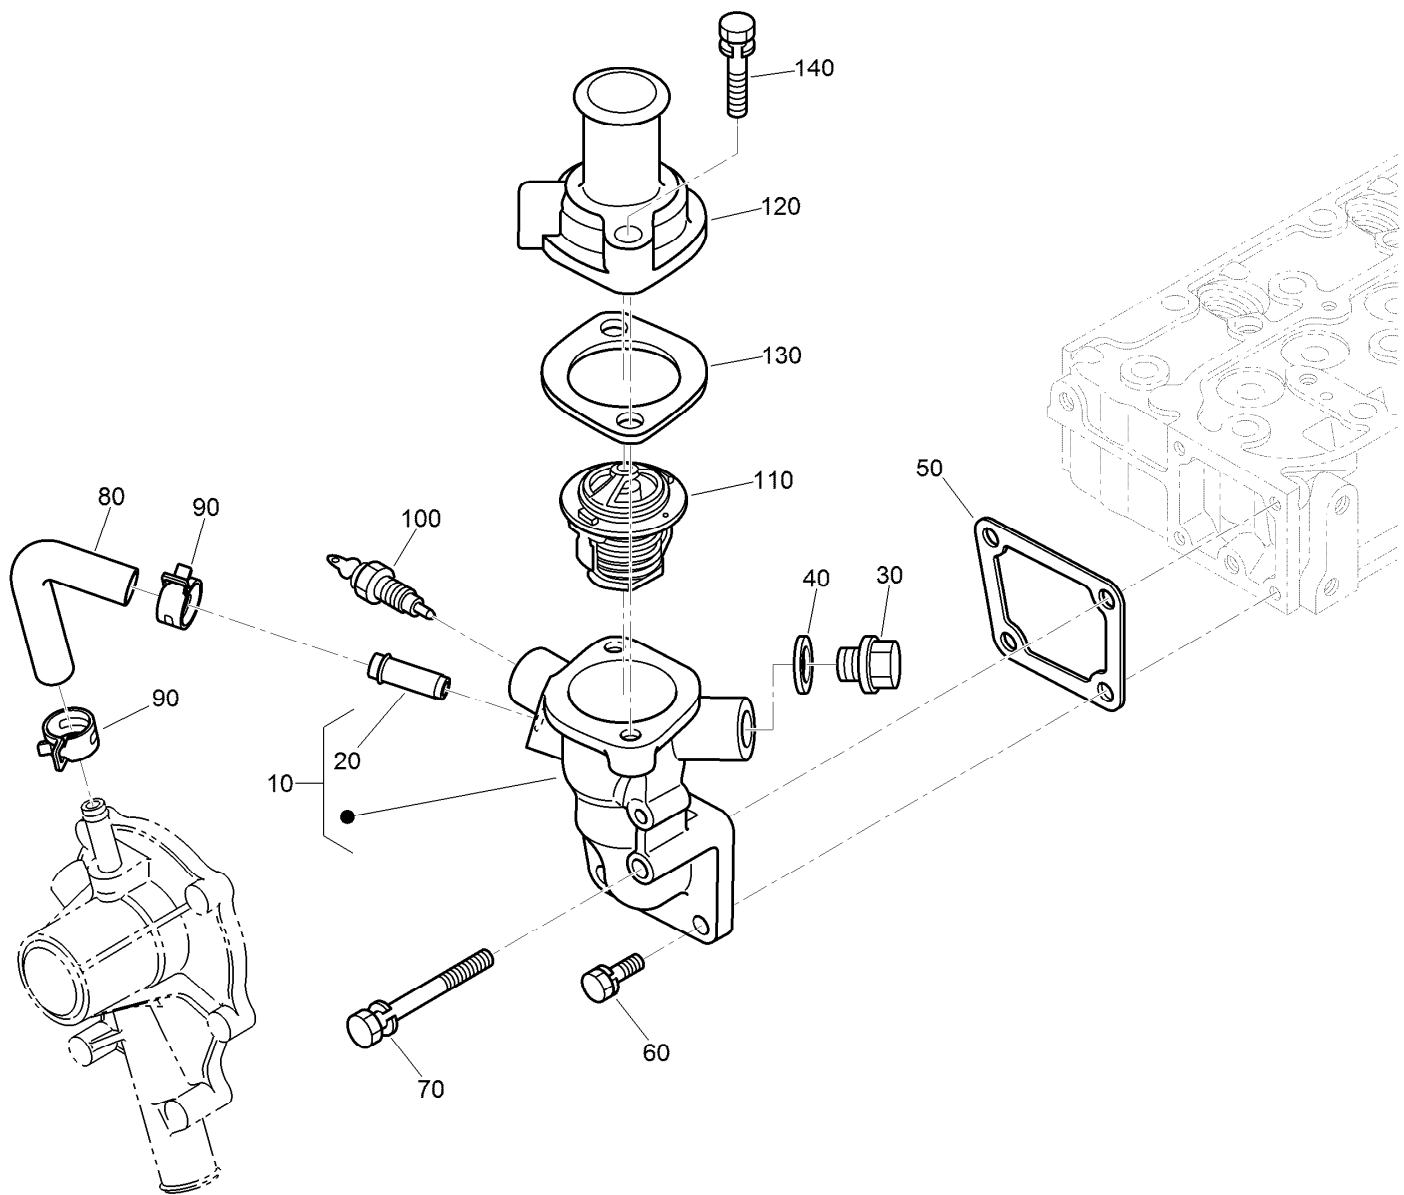


## Water Flange and Thermostat Assembly
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 98-9713     | 1    | Water Flange ASM     |
| 20   | 98-9580     | 1    | Pipe-Return, Water   |
| 30   | 105-3747    | 1    | Plug                 |
| 40   | 99-3583     | 1    | Gasket               |
| 50   | 98-9638     | 1    | Gasket-Flange, Water |
| 60   | 98-7692     | 3    | Bolt                 |
| 70   | 98-9356     | 1    | Bolt                 |
| 80   | 98-9578     | 1    | Pipe-Return, Water   |
| 90   | 125-9078    | 2    | Clamp-Hose           |
| 100  | 98-9719     | 1    | Thermoswitch         |
| 110  | 98-7778     | 1    | Thermostat ASM       |
| 120  | 98-9471     | 1    | Cover-Thermostat     |
| 130  | 105-3748    | 1    | Gasket-Thermostat    |
| 140  | 98-7777     | 2    | Bolt                 |

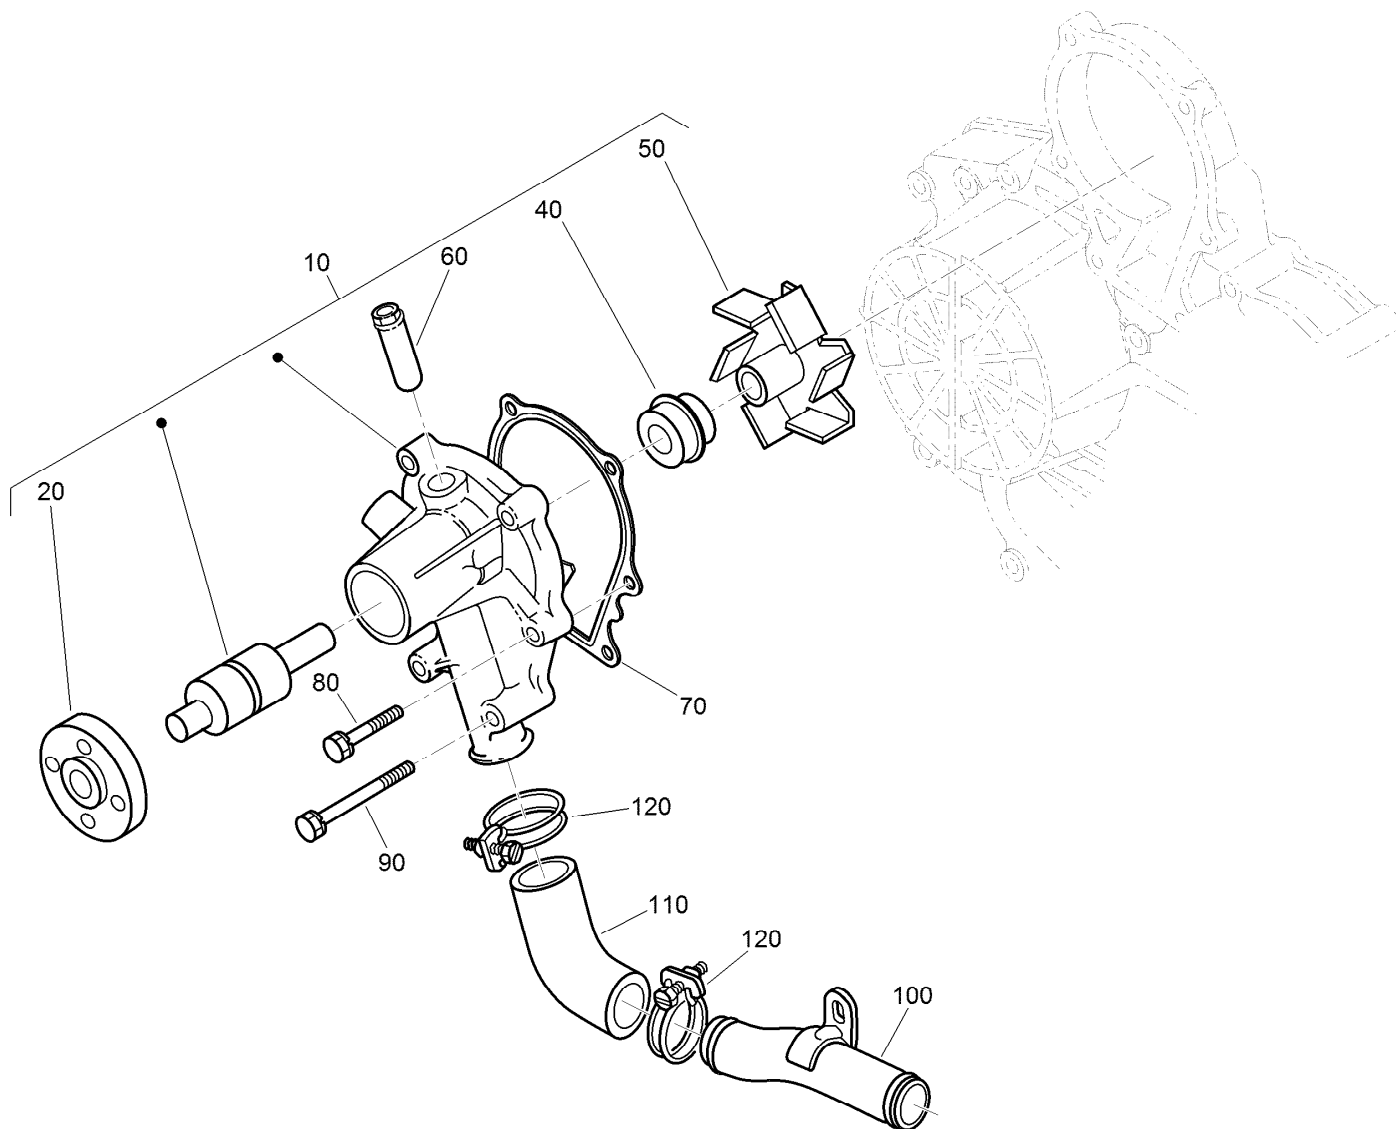

## Water Pump and Water Pipe Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 107-9089    | 1    | Water Pump ASM       |
| 20   | 99-3516     | 1    | Flange-Pump, Water   |
| 40   | 105-3750    | 1    | Mechanical Seal ASM  |
| 50   | 112-7017    | 1    | Impeller-Pump, Water |
| 60   | 100-1932    | 1    | Pipe-Return, Water   |
| 70   | 99-3454     | 1    | Gasket-Pump, Water   |
| 80   | 98-9353     | 4    | Bolt                 |
| 90   | 98-9357     | 2    | Bolt                 |
| 100  | 98-9716     | 1    | Pipe-Water           |
| 110  | 107-9091    | 1    | Pipe-Water           |
| 120  | 127-0439    | 2    | Clamp-Hose           |

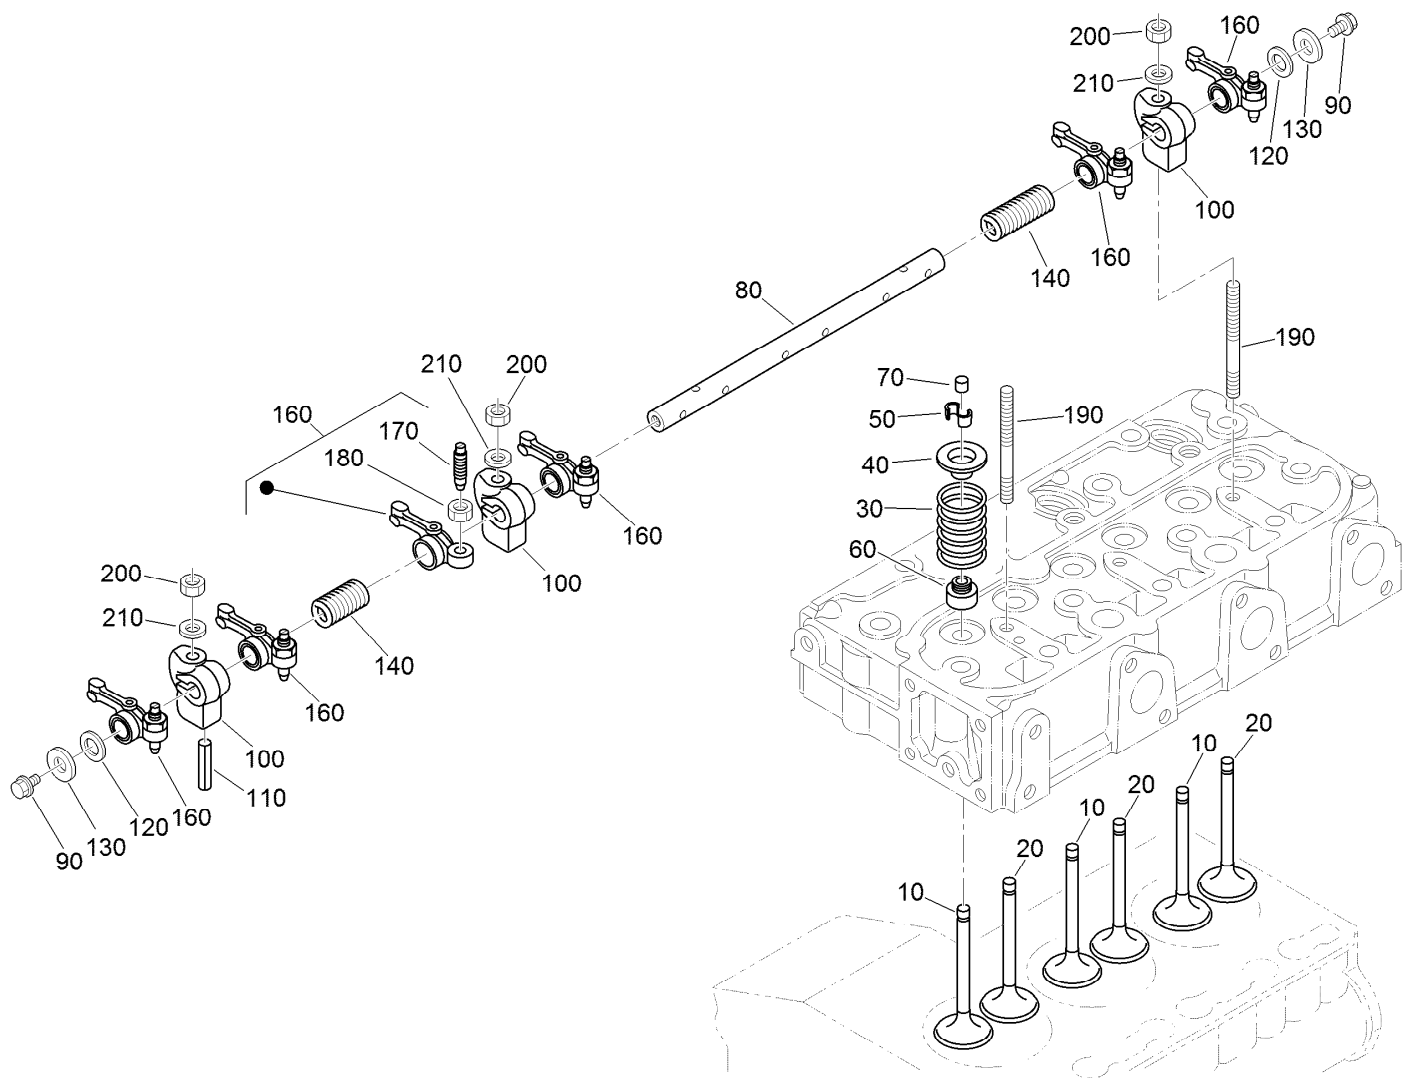

## Valve and Rocker Arm Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 112-7018    | 3    | Valve-Inlet          |
| 20   | 120-2564    | 3    | Valve-Exhaust        |
| 30   | 98-9648     | 6    | Spring-Valve         |
| 40   | 107-9092    | 6    | Retainer-Spring      |
| 50   | 117-7572    | 6    | Collet-Spring, Valve |
| 60   | 99-8385     | 6    | Seal-Stem, Valve     |
| 70   | 98-9497     | 6    | Cap-Valve            |
| 80   | 130-1248    | 1    | Shaft-Arm, Rocker    |
| 90   | 99-8363     | 2    | Bolt-Flange          |
| 100  | 98-9505     | 3    | Bracket-Arm, Rocker  |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 110  | 105-3758    | 1    | Pin-Spring               |
| 120  | 98-9507     | 2    | Washer-Shaft, Rocker Arm |
| 130  | 110-3832    | 2    | Washer-Plain             |
| 140  | 98-9504     | 2    | Spring-Arm, Rocker       |
| 160  | 112-7020    | 6    | Rocker Arm ASM           |
| 170  | 98-9502     | 6    | Screw-Adjusting          |
| 180  | 98-9503     | 6    | Nut                      |
| 190  | 98-9506     | 3    | Stud                     |
| 200  | 98-9393     | 3    | Nut                      |
| 210  | 98-9385     | 3    | Washer-Flat              |

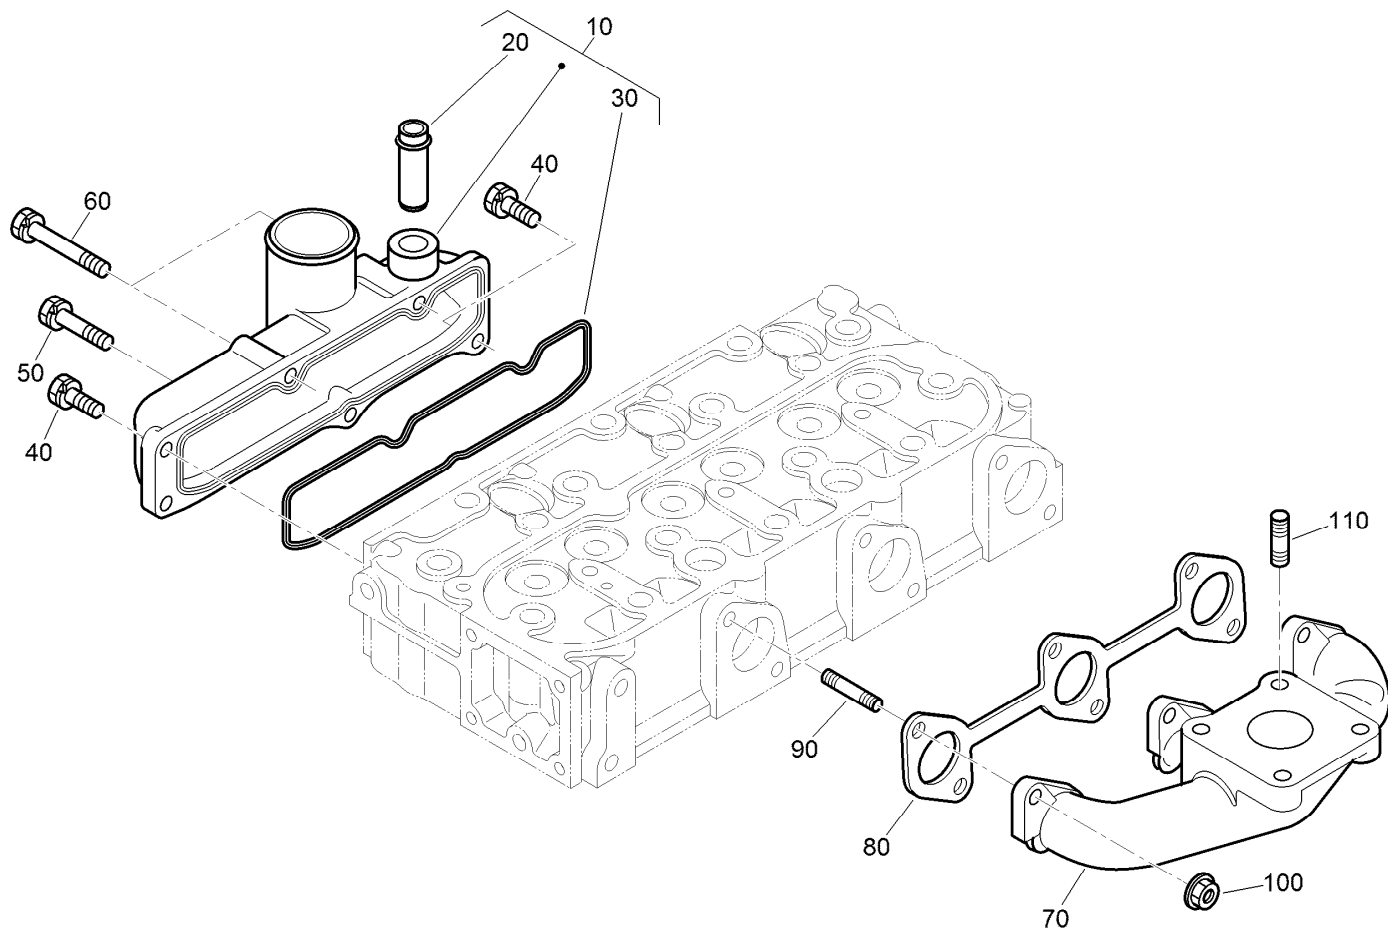


## Inlet and Exhaust Manifold Assembly
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 107-7843    | 1    | Manifold Inlet ASM       |
| 20   | 98-9492     | 1    | Joint-Pipe, Breather     |
| 30   | 98-9609     | 1    | Gasket-Manifold, Inlet   |
| 40   | 127-0403    | 3    | Bolt-Flange              |
| 50   | 98-9353     | 1    | Bolt                     |
| 60   | 125-9063    | 2    | Bolt-Sems                |
| 70   | 107-9093    | 1    | Manifold-Exhaust         |
| 80   | 99-8327     | 1    | Gasket-Manifold, Exhaust |
| 90   | 98-9588     | 6    | Stud                     |
| 100  | 98-9665     | 6    | Nut                      |
| 110  | 98-7769     | 4    | Stud                     |

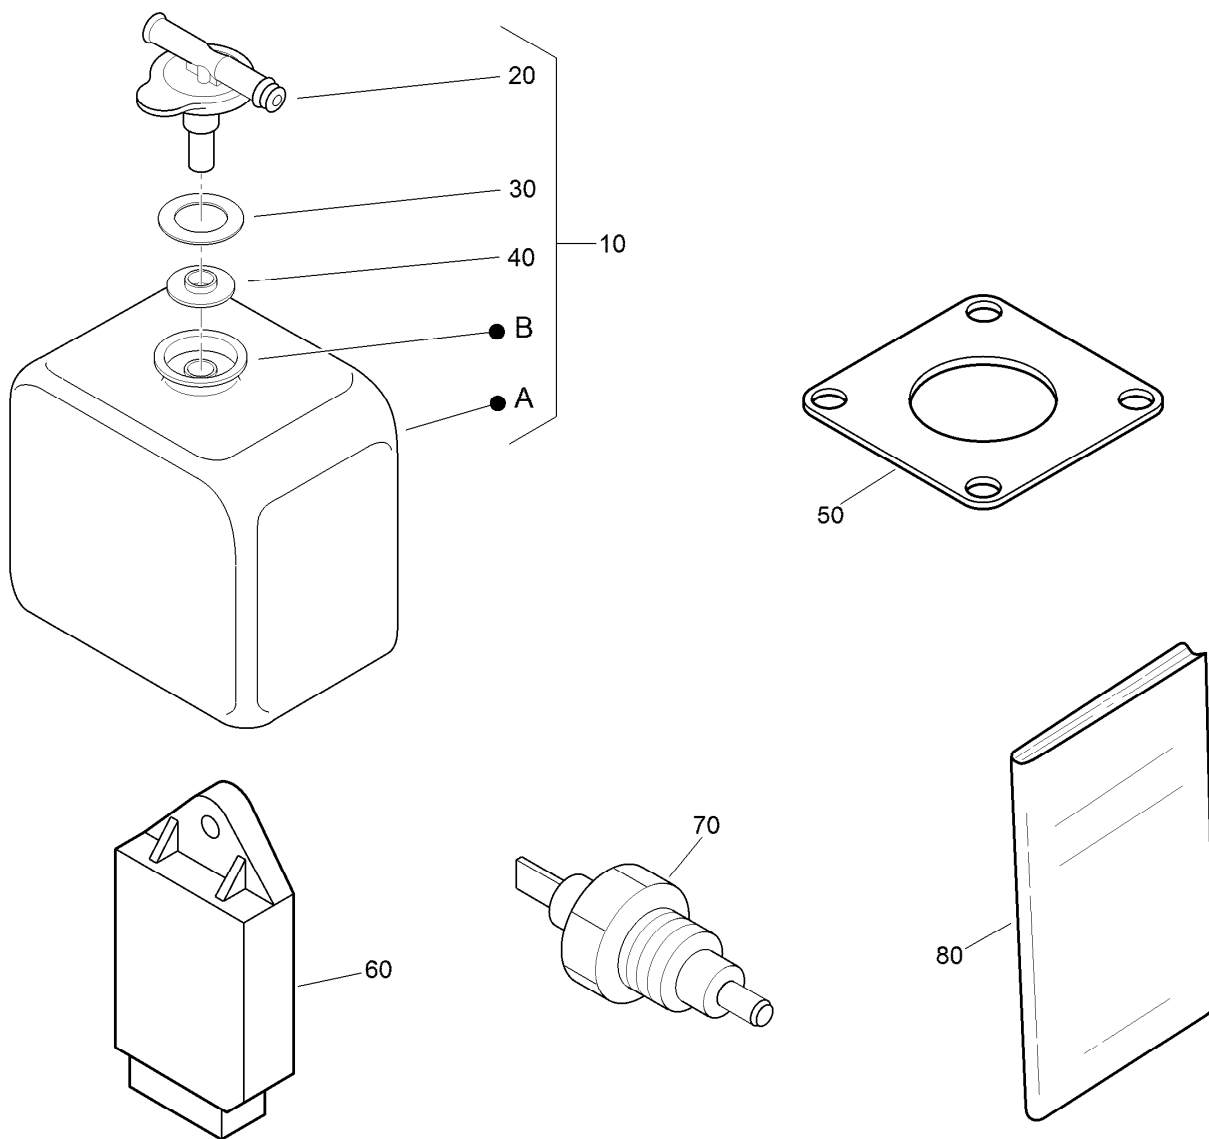


## Miscellaneous Engine Parts
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 10   | 104-9318    | 1    | Bottle-Overflow |
| 20   | 115-4132    | 1    | Cap             |
| 30   | 105-3755    | 1    | Gasket          |
| 40   | 105-3756    | 1    | Plate           |
| 50   | 99-8343     | 1    | Gasket-Muffler  |
| 60   | 98-7611     | 1    | Controller-Glow |
| 70   | 106-7772    | 1    | Thermoswitch    |
| 80   | 130-1543    | 1    | Manual-Operator |

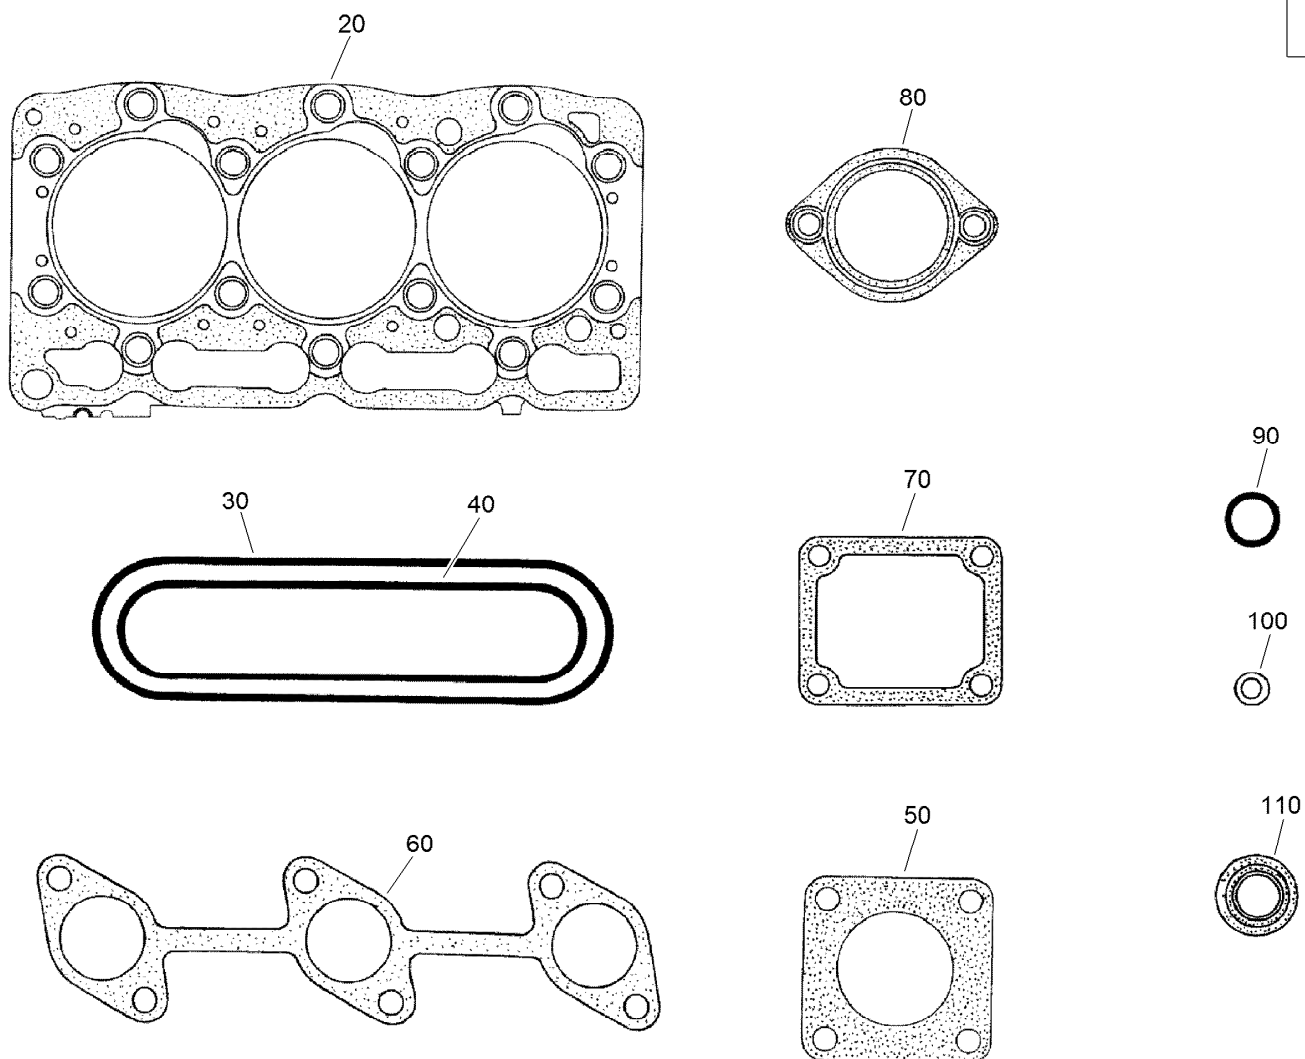

## Upper Engine Gasket Kit
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 130-1363    | 1    | Upper Gasket Kit         |
| 20   | 108-6573    | 1    | Gasket-Head, Cylinder    |
| 30   | 130-1249    | 1    | Gasket-Head Cover        |
| 40   | 98-9609     | 1    | Gasket-Manifold, Inlet   |
| 50   | 99-8343     | 1    | Gasket-Muffler           |
| 60   | 99-8327     | 1    | Gasket-Manifold, Exhaust |
| 70   | 98-9638     | 1    | Gasket-Flange, Water     |
| 80   | 105-3748    | 1    | Gasket-Thermostat        |
| 90   | 99-3446     | 2    | O-Ring                   |
| 100  | 98-9454     | 3    | Gasket                   |
| 110  | 99-8385     | 6    | Seal-Stem, Valve         |

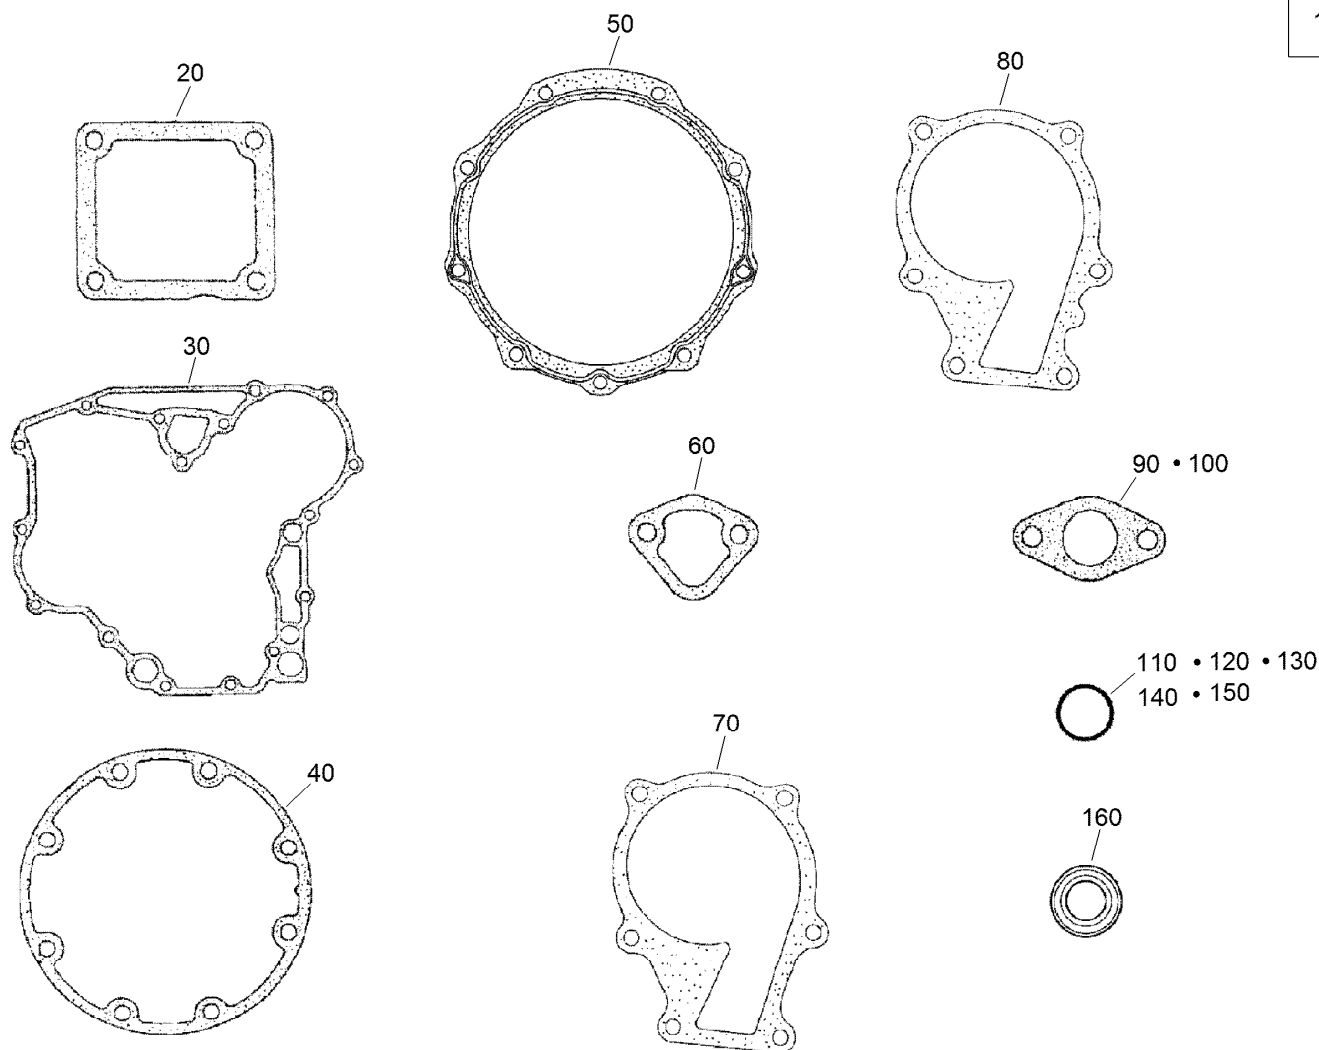

## Lower Engine Gasket Kit

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 130-1364    | 1    | Lower Gasket Kit     |
| 20   | 98-9637     | 1    | Gasket               |
| 30   | 98-9633     | 1    | Gasket-Case, Gear    |
| 40   | 127-0440    | 1    | Gasket-Case, Bearing |
| 50   | 112-7037    | 1    | Gasket-Cover, Case   |
| 60   | 117-7562    | 1    | Gasket-Pump, Fuel    |
| 70   | 98-9632     | 1    | Gasket-Pump, Water   |
| 80   | 99-3454     | 1    | Gasket-Pump, Water   |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 90   | 98-9682     | 1    | Gasket                 |
| 100  | 98-9683     | 1    | Gasket-Cover, Solenoid |
| 110  | 105-3781    | 2    | O-Ring                 |
| 120  | 105-3777    | 2    | O-Ring                 |
| 130  | 105-3783    | 1    | O-Ring                 |
| 140  | 105-3776    | 1    | O-Ring                 |
| 150  | 105-3788    | 1    | O-Ring                 |
| 160  | 98-7601     | 1    | Seal-Oil               |

# Attachments and Accessories

## For 03171 Reelmaster 3100-D Traction Unit With Sidewinder

| Product Name                        | Model/Part |
|-------------------------------------|------------|
| 27in Lift Arm Kit .....             | 03172      |
| 32in Lift Arm Kit .....             | 03173      |
| 5-Blade 27in DPA Cutting Unit ..... | 03180      |
| 8-Blade 27in DPA Cutting Unit ..... | 03181      |
| 8-blade 32in DPA Cutting Unit ..... | 03182      |
| 11-blade 27in DPA Cutting Unit..... | 03183      |
| 27in Verticutter.....               | 03184      |
| Gauge Bar Assembly.....             | 108-6715   |
| Premium Seat Kit.....               | 30629      |
| Arm Rest Kit.....                   | 30707      |
| Work Light Kit .....                | 30841      |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**