



Super Recycler[®] Mower

SR-210S

Model No. 20046-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket & Wheel Assembly . .	3	Fuel Tank & Valve Assembly	12
Gear Case Assembly No. 99–1525	4	Flywheel & Ignition Assembly	13
Engine & Blade Assembly	5	Carburetor Assembly	14
Gear Case & Wheel Assembly	6	Piston & Crankcase Assembly	15
Handle & Controls Assembly	7	Air Filter & Muffler Assembly	16
Cylinder & Crankcase Assembly	8	Cover & Cooling Assembly	17
Valve & Camshaft Assembly	9	Dipstick & Oil Filter Assembly	18
Control Linkage Assembly	10	Recoil Starter Assembly	19
Brake Band Assembly	11		

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Recycler Side Discharge Kit	59197	Recycler Bagging Kit	59195
Dethatcher Kit	59131	Traction Assist Handle	59196

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

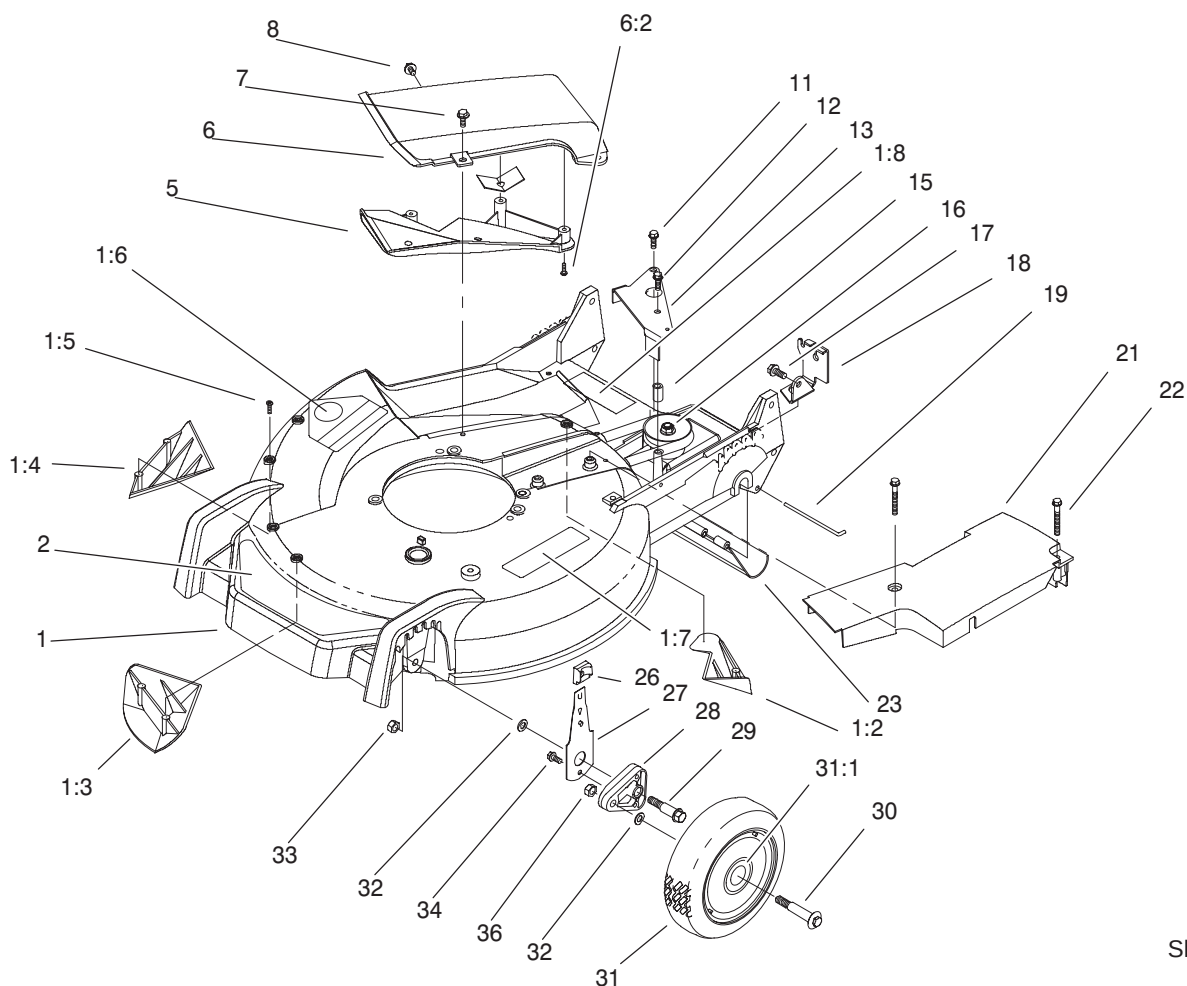

Sheet No.: 2

Housing, Handle Bracket & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2887	1	Housing	22	37-7260	2	Screw-HH
1:2	92-1750	1	Kicker-Rear	23	44-0580	1	Shield-Trailing
1:3	92-1720	1	Kicker-Front	26	25-7740	2	Knob-Arm
1:4	92-1730	1	Kicker-RH	27	66-0541	2	Spring Arm
1:5	32144-111	6	Screw-PPH				ASM-Front
1:6	43-8480	1	Decal-Danger	28	66-0580	2	Arm-Pivot, Front
1:7	93-0248	1	Decal - Warning	29	66-0560	2	Screw-Shoulder
1:8	99-6018	1	Decal - Warning	30	92-1057	2	Bolt-Shoulder
2	99-6347	1	Decal - Deck	31	98-7130	2	Wheel ASM
5	82-8620	1	Deflector	31:1	27-6250	2	Bushing
6	100-8775	1	Recycler Cover ASM	32	40-1940	4	Washer
6:2	32144-111	5	Screw-PPH	33	3296-6	2	Nut-Lock, NI
7	46-6811	3	Screw-HWH	34	32144-85	2	Screw-HH
8	46-6810	1	Screw & Washer ASM	36	603773	2	Nut
11	49-2040	1	Screw-Taptite				
12	92-1616	1	Screw-HWHTF				
13	99-1513-03	1	Bracket-Transmission Actuator				
15	614673	1	Bushing-Plate, Actuator				
16	99-1525	1	Gearcase ASM				
17	32144-70	1	Screw-HH				
18	99-1512-03	1	Bracket-Cable, Traction				
19	33-3208	1	Rod-Shield				
21	100-1182	1	Belt Cover ASM				

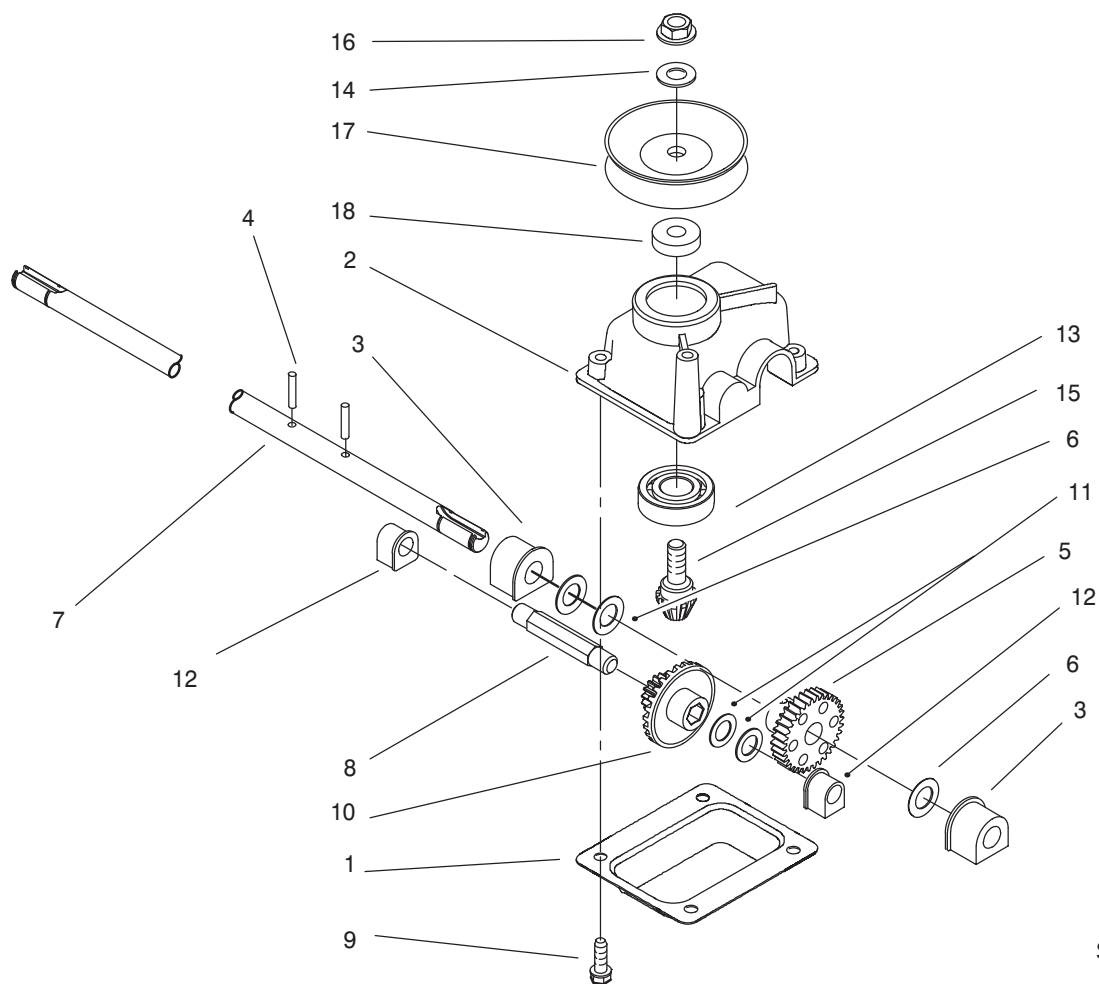 


Sheet No.: A1

C-2963

Gear Case Assembly No. 99-1525

Ref. No.	Part No.	Qty.	Description
1	614668	1	Cover-Case, Gear
2	92-7727	1	Gearcase
3	60-8850	2	Bushing-Output
4	3285-19	2	Pin-Groove
5	614596	1	Gear
6	36-4780	2	Washer
7	92-3131	1	Shaft-Output
8	614696	1	Shaft-Intermediate
9	49-2040	4	Screw-Taptite
10	55-3760	1	Gear-Bevel
11	36-4791	2	Washer-Thrust
12	60-8750	2	Bushing
13	38-7820	1	Bearing-Ball
14	3256-24	1	Washer-Flat
15	60-8890	1	Gear-Bevel, Pinion
16	3296-5	1	Nut-Lock, NI
17	100-1176	2	Pulley-Half
18	62-6660	1	Spacer


Ref. No.	Part No.	Qty.	Description

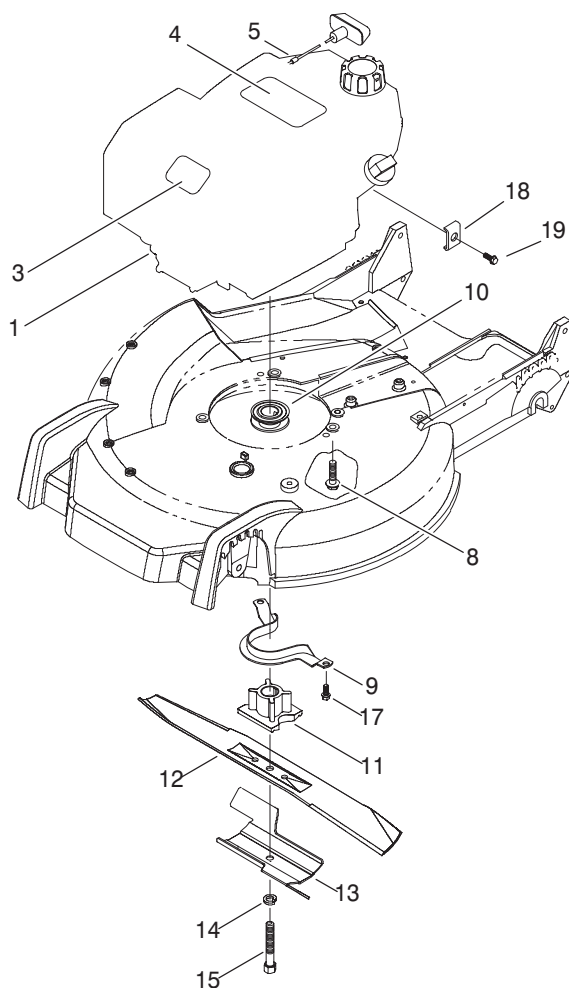 

Sheet No.: 3

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-6397	1	Engine				
3	92-2289	1	Plate-Logo				
4	100-1110	1	Decal - Recoil				
5	2210-316	1	Stop-Rope				
8	100-2835	3	Screw-Mount, Engine				
9	99-1526-03	1	Guide-Belt				
10	100-6393	1	Pulley ASM				
11	100-1101	1	Retainer - Blade				
12	93-4106	1	Blade				
13	94-1608-03	1	Accelerator-Blade				
14	3253-22	1	Washer-Lock/Sp				
15	26-0670	1	Screw-Blade				
17	32144-70	2	Screw-HH				
18	95-9849	1	Clamp				
19	95-9853	1	Bolt				

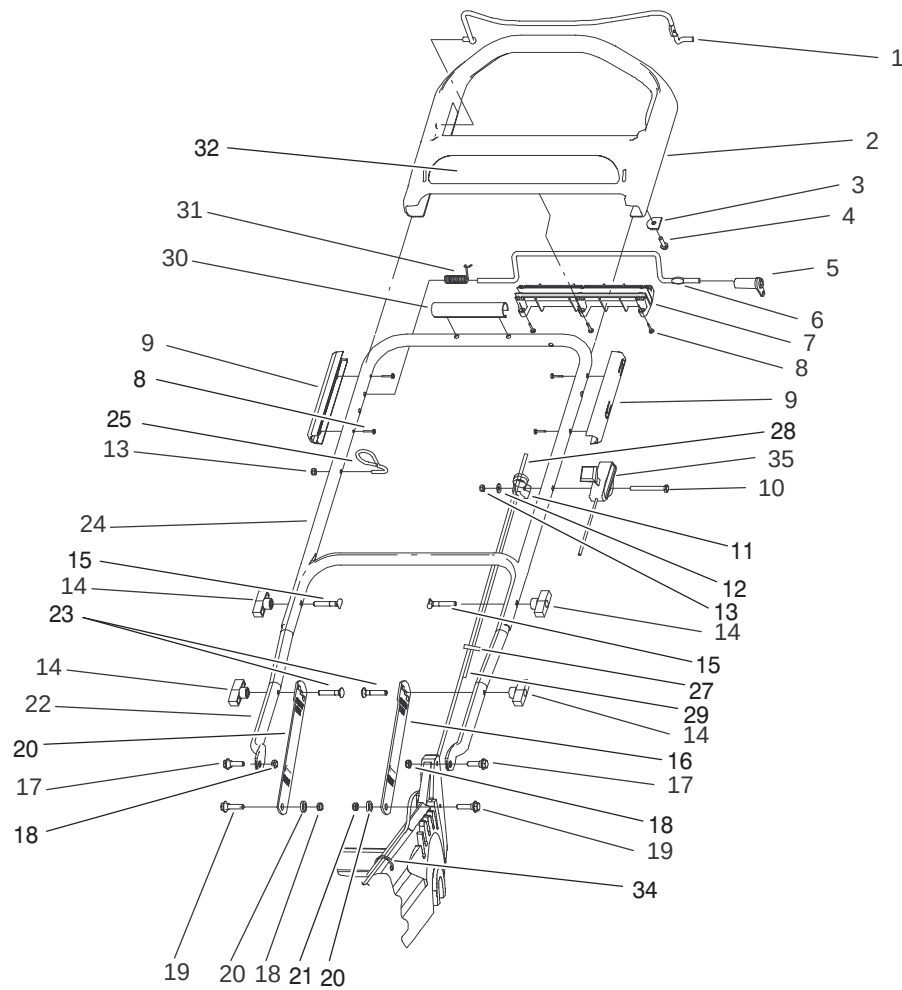 

Sheet No.: 5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake	27	3290-378	1	Tie-Cable
2	99-1582	1	Handle-Control	28	100-6392	1	Cable-Brake
3	99-1595	1	Retainer-Cable, Brake	29	99-1584	1	Cable-Traction
4	46-8091	1	Screw-HWH	30	99-6339	1	Cover-Handle
5	99-1589	1	Lever-Traction	31	99-1592	1	Spring-Torsion, RH
6	99-1588	1	Bar-Control, Traction	32	100-8783	1	Decal-Personal Pace
7	99-6008	1	Retainer-Control Rod, Traction	34	100-2894	1	Tie-Cable
8	94-4496	10	Screw-PPH	35	100-6396	1	Control-throttle
9	99-1590	2	Guide-Handle, Control				
10	321-55	1	Screw-HH				
11	99-5239	1	Anchor-Cable				
12	3256-1	1	Washer-Flat				
13	3296-73	2	Nut-Lock, NI				
14	98-7134	4	Knob-Handle				
15	92-2260	4	Screw-Handle				
16	99-5248-03	2	Latch-Handle				
17	27-7211	2	Screw-Shoulder				
18	3296-72	3	Nut-Lock, NI				
19	27-7210	2	Screw-Shoulder				
20	3-3287	2	Spacer-Latch, Handle				
21	3296-47	1	Nut-Lock, NI				
22	99-5249-05	1	Handle-Lower				
23	99-6019	2	Screw-CARR				
24	99-1596-05	1	Handle-Upper				
25	86-9671	1	Guide-Rope				

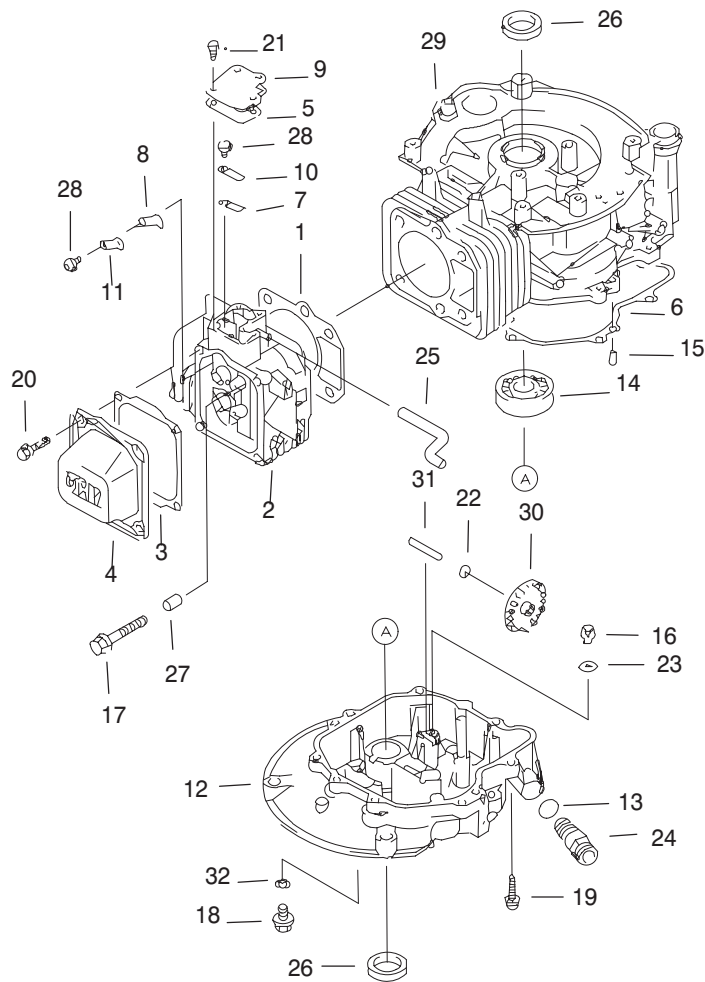 


Sheet No.: 3

Cylinder & Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head
2	100-2743	1	Head-Cylinder, Complete
3	100-2744	1	Case-Rocker, Gasket
4	100-2834	1	Case Rocker
5	100-2746	1	Cover-Gasket
6	100-2747	1	Gasket-Cover, Crankcase
7	100-2748	1	Plate
8	100-2749	1	Plate
9	100-2779	1	Cover
10	100-2780	1	Valve
11	100-2781	1	Valve
12	100-2833	1	Cover Crankcase
13	100-2840	1	O-Ring
14	100-2841	1	Bearing-Ball
15	93-8516	2	Pin
16	100-2842	1	Bolt
17	Kw10035	4	Bolt-Flanged
18	Kw10033	1	Bolt-Flanged
19	100-2610	7	Bolt-Flanged
20	100-2804	4	Bolt-Flanged
21	100-2609	4	Bolt-Flanged
22	100-2843	1	Washer
23	100-2844	1	Washer
24	100-2854	1	Plug

Ref. No.	Part No.	Qty.	Description
25	100-2846	1	Tube
26	100-2847	2	Seal-Oil
27	100-2848	2	Pin
28	93-8549	2	Screw
29	100-2849	1	Crankcase-Complete
30	99-6728	1	Slinger-Oil
31	99-6729	1	Shaft
32	99-6730	1	Gasket

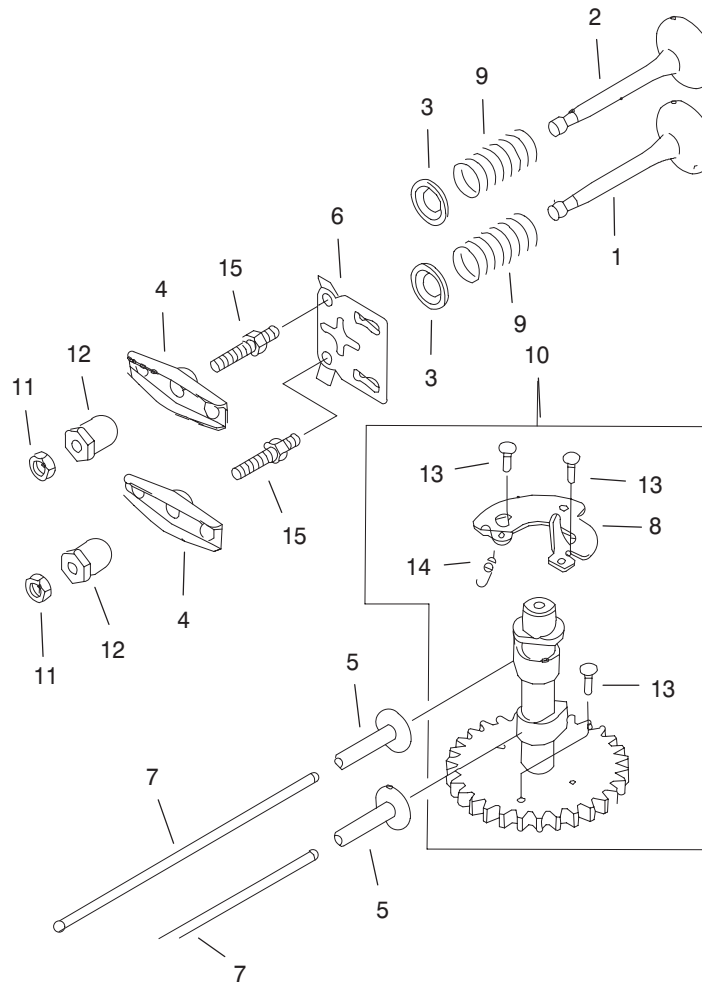 


Sheet No.: 4

Valve & Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Spring, Valve
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Valve, Engine
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

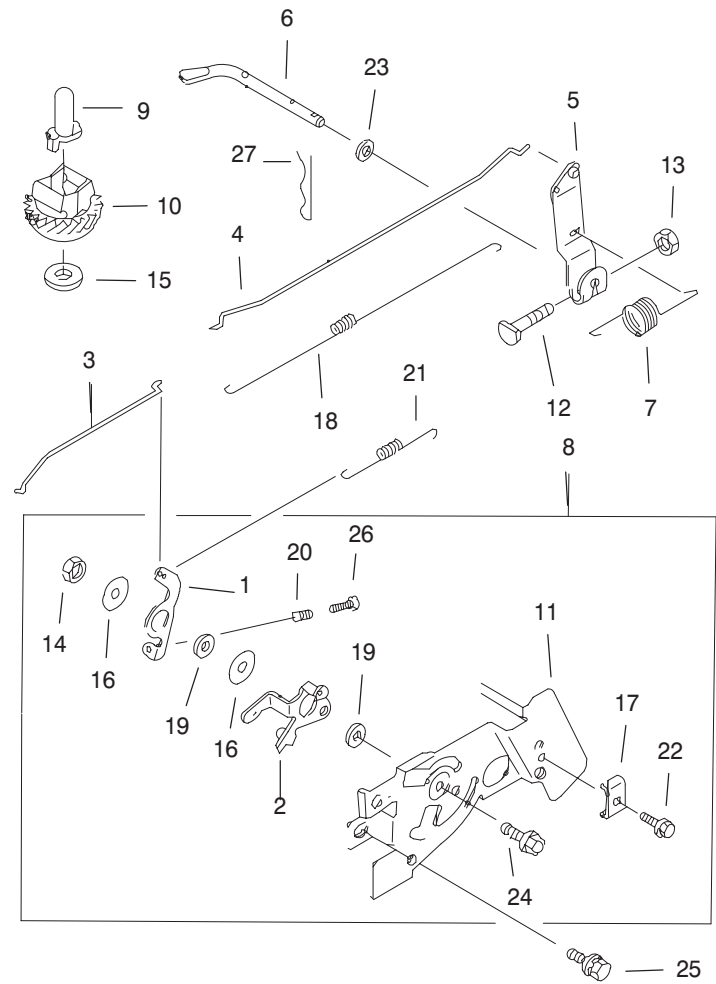 


Sheet No.: 5

Control Linkage Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever
2	100-2701	1	Lever
3	100-2702	1	Link-Choke
4	100-2703	1	Link
5	100-2704	1	Arm ASM
6	100-2705	1	Arm-Pivot
7	100-2706	1	Spring-Governor
8	100-2707	1	Control Panel ASM
9	100-2708	1	Sleeve
10	93-8611	1	Governor ASM
11	100-2710	1	Panel-Control
12	93-8606	1	Bolt
13	93-8631	1	Nut
14	93-8595	1	Nut
15	94-6842	1	Washer
16	100-2715	2	Washer
17	95-9849	1	Clamp
18	100-2717	1	Link-Spring
19	100-2718	2	Collar
20	93-8588	1	Spring
21	100-2720	1	Spring
22	95-9853	1	Bolt
23	93-8608	1	Washer
24	95-9837	1	Bolt - Flanged
25	100-2724	2	Bolt

Ref. No.	Part No.	Qty.	Description
26	100-2725	1	Screw-Pan
27	93-8607	1	Pin-Snap

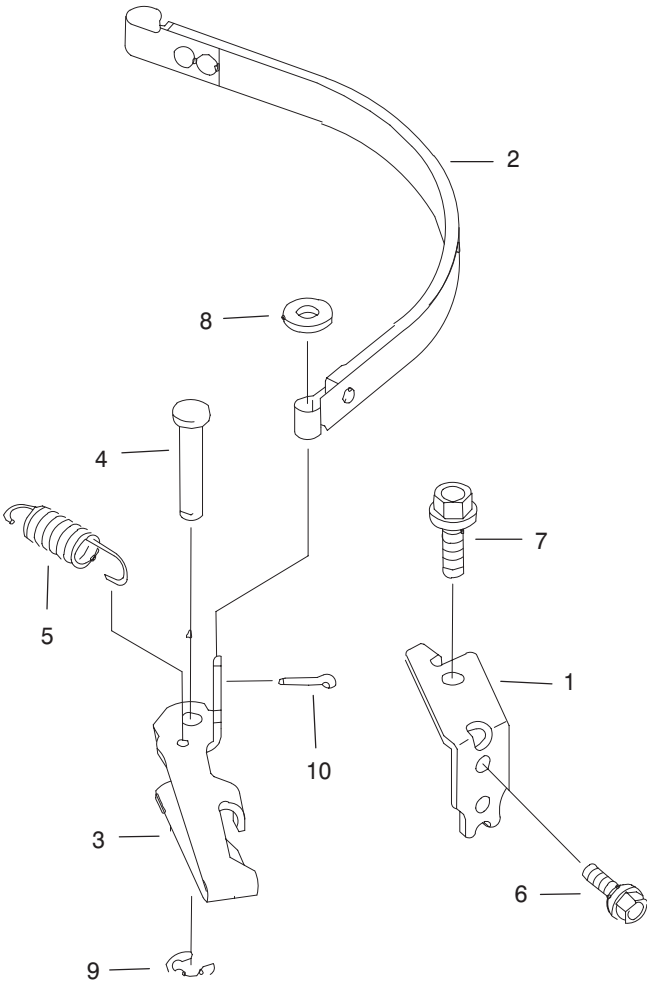 


Sheet No.: 6

Brake Band Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2783	1	Bracket
2	100-2784	1	Band-Brake
3	100-2785	1	Lever-Brake
4	100-2786	1	Pin
5	100-2787	1	Spring
6	100-2609	1	Bolt-Flanged
7	Kw10029	1	Bolt, Flanged 6x10
8	100-2671	1	Washer Plain S
9	100-2791	1	Circlip-Type-E
10	100-2792	2	Pin Cotter

Ref. No.	Part No.	Qty.	Description

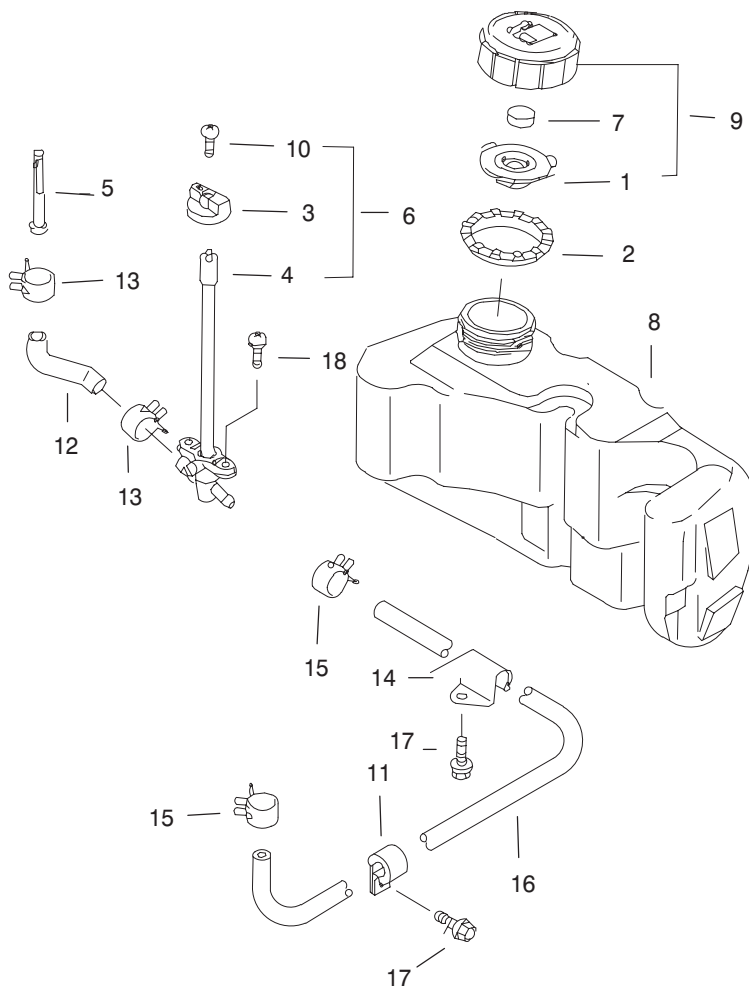 


Sheet No.: 7

Fuel Tank & Valve Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter-Complete
5	100-2812	1	Filter-Fuel
6	100-2814	1	Valve - Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank-Fuel, Complete
9	100-2816	1	Tank Cap ASM
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan


Ref. No.	Part No.	Qty.	Description

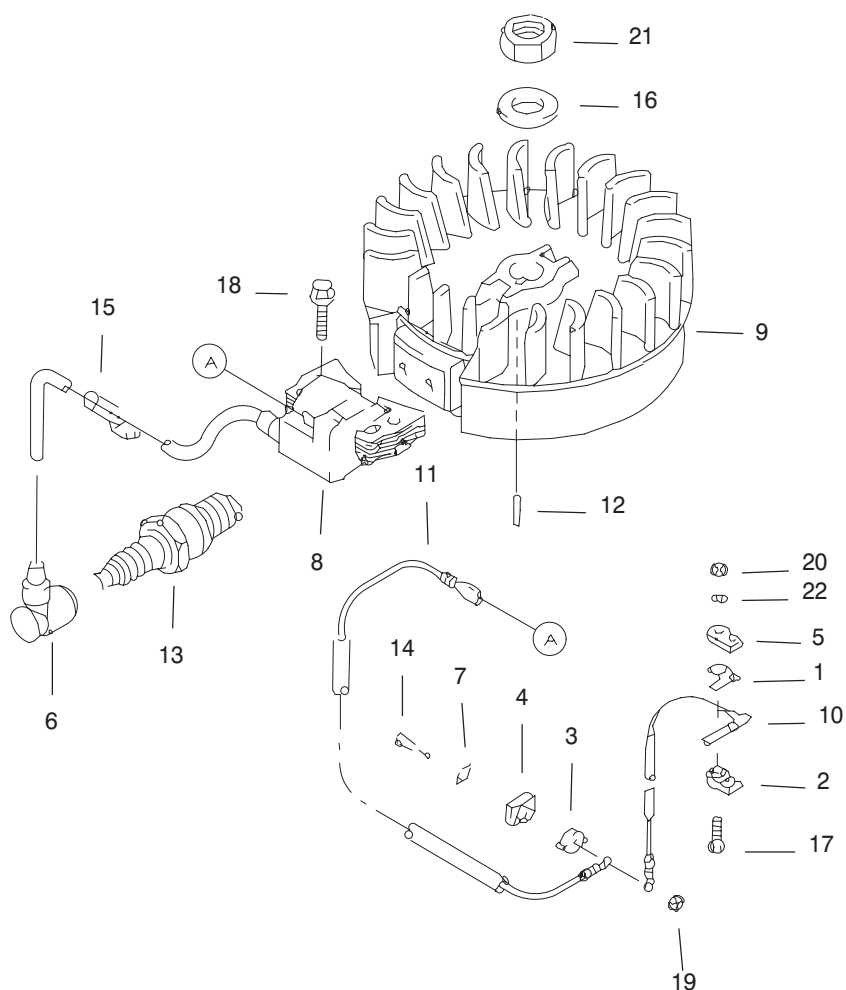 

Sheet No.: 8

Flywheel & Ignition Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2650	1	Plate
2	100-2651	1	Cover
3	100-2652	1	Cover
4	100-2653	1	Insulator
5	100-2654	1	Insulator
6	Kw10087	1	Plug-Cap
7	100-2656	1	Terminal
8	100-2657	1	Ignition Coil ASM
9	100-2658	1	Flywheel-Complete
10	100-2659	1	Wire Lead
11	100-2660	1	Wire-Lead
12	93-8571	1	Key
13	Kw10676	1	Plug-Spark
14	100-2663	1	Bolt
15	100-2664	1	Clamp
16	100-2665	1	Washer
17	100-2666	1	Bolt Upset
18	100-2610	2	Bolt-Flanged
19	100-2668	1	Nut-Hex
20	100-2669	1	Nut Hex
21	93-8568	1	Nut
22	100-2671	1	Washer Plain S

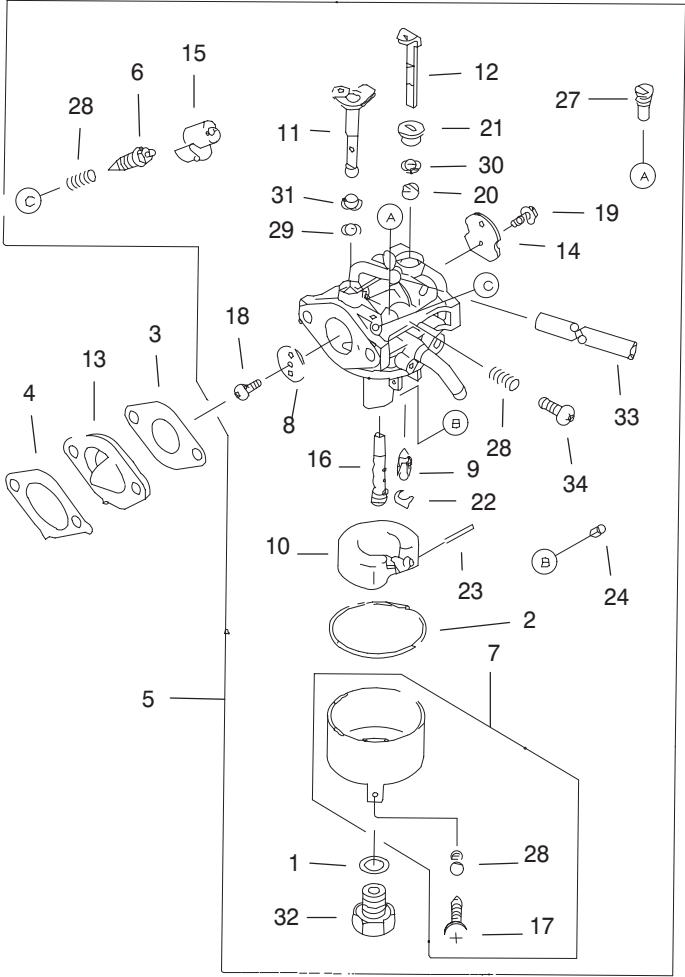 


Sheet No.: 9

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket
2	100-2612	1	Gasket
3	100-2613	1	Gasket-Carburetor
4	100-2614	1	Gasket-Insulator
5	100-2615	1	Carburetor ASM
6	100-2616	1	Screw-Pilot, Air
7	100-2617	1	Float-Chamber
8	100-2618	1	Valve-Throttle
9	100-2619	1	Valve-Float
10	100-2620	1	Float
11	100-2621	1	Shaft-Throttle, Carburetor
12	100-2622	1	Shaft-Choke, Carburetor
13	100-2623	1	Insulator
14	100-2624	1	Valve
15	100-2625	1	Limiter
16	100-2626	1	Nozzle-Main
17	100-2627	1	Screw
18	100-2628	1	Screw
19	100-2629	2	Screw
20	100-2630	1	Collar
21	100-2631	1	Collar
22	Kw10297	1	Clip
23	100-2633	1	Pin
24	100-2634	1	Jet-Main

Ref. No.	Part No.	Qty.	Description
27	100-2635	1	Jet-Pilot
28	100-2636	3	Spring
29	100-2637	1	Seal
30	100-2638	1	Seal
31	100-2639	1	Collar
32	100-2640	1	Bolt
33	100-2641	1	Tube
34	100-2642	1	Screw-Pan

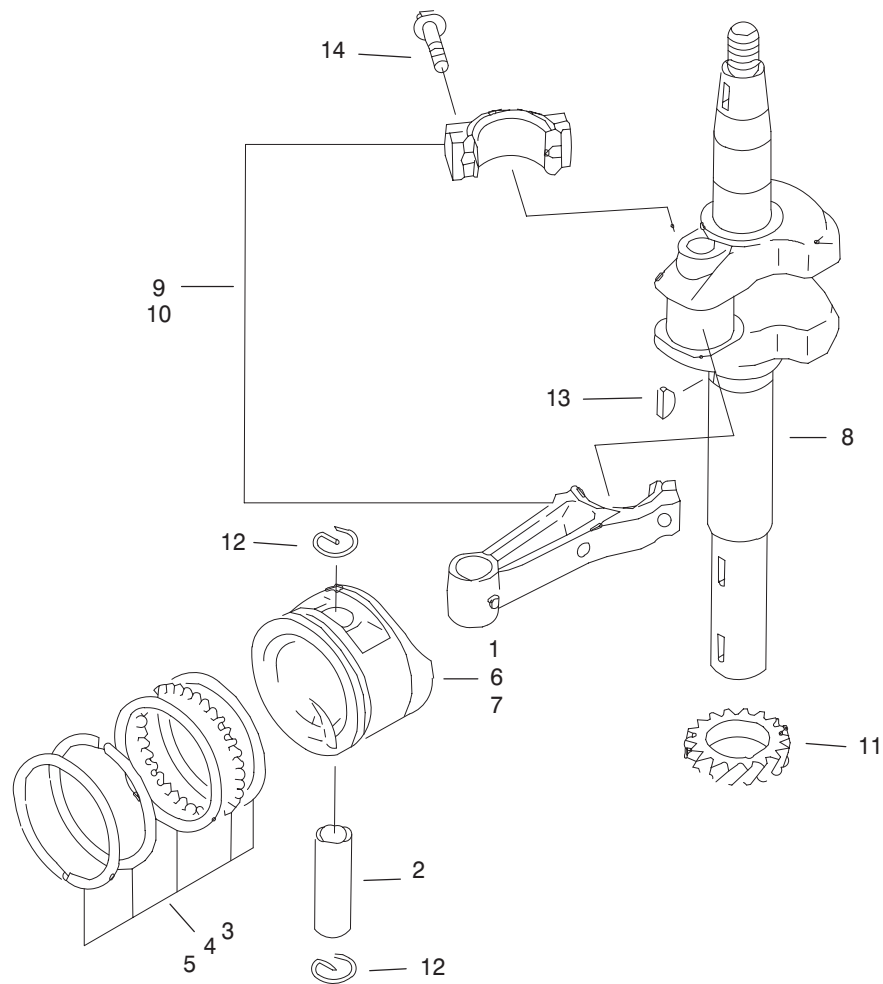 


Sheet No.: 10

Piston & Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston-Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Set-Ring, Piston
4	100-2675	1	Set-Ring, Piston-L0.25
5	100-2676	1	Set-Ring, Piston-L0.50
6	100-2677	1	Piston-Engine, L0.25
7	100-2678	1	Piston-Engine, L0.50
8	100-2827	1	Crankshaft
9	100-2680	1	Connecting Rod ASM
10	100-2681	1	Connecting Rod ASM (U/S=0.50)
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod

Ref. No.	Part No.	Qty.	Description

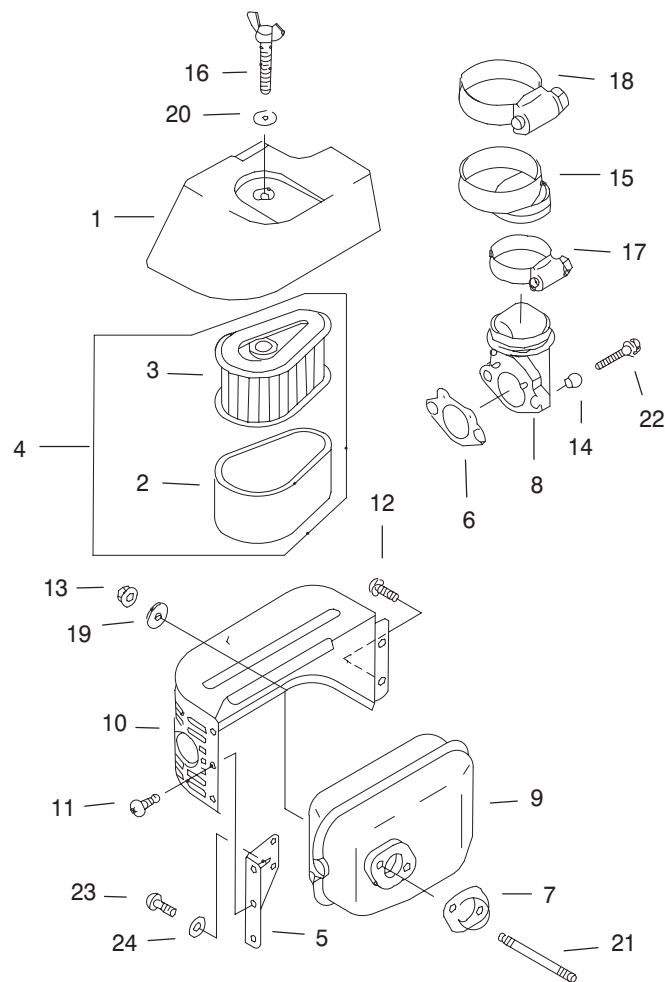 


Sheet No.: 11

Air Filter & Muffler Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap-Filter, Air
2	100-2692	1	Element-Filter, Air
3	100-2693	1	Element-Filter, Air
4	100-2694	1	Air Filter Element ASM
5	100-2695	1	Bracket
6	100-2696	1	Gasket-Pipe, Intake
7	100-2697	1	Gasket-Muffler
8	100-2698	1	Pipe-Intake
9	100-2699	1	Muffler-Complete
10	100-2795	1	Cover Muffler Gold
11	93-8549	3	Screw
12	95-9716	2	Screw
13	93-8631	2	Nut
14	100-2754	2	Spacer
15	100-2755	1	Tube
16	100-2756	1	Bolt
17	100-2757	1	Clamp
18	100-2758	1	Clamp
19	100-2759	2	Washer
20	100-2760	1	Washer
21	100-2761	2	Bolt-Stud
22	100-2762	2	Bolt
23	100-2763	2	Screw-Pan
24	93-8639	2	Washer

Ref. No.	Part No.	Qty.	Description

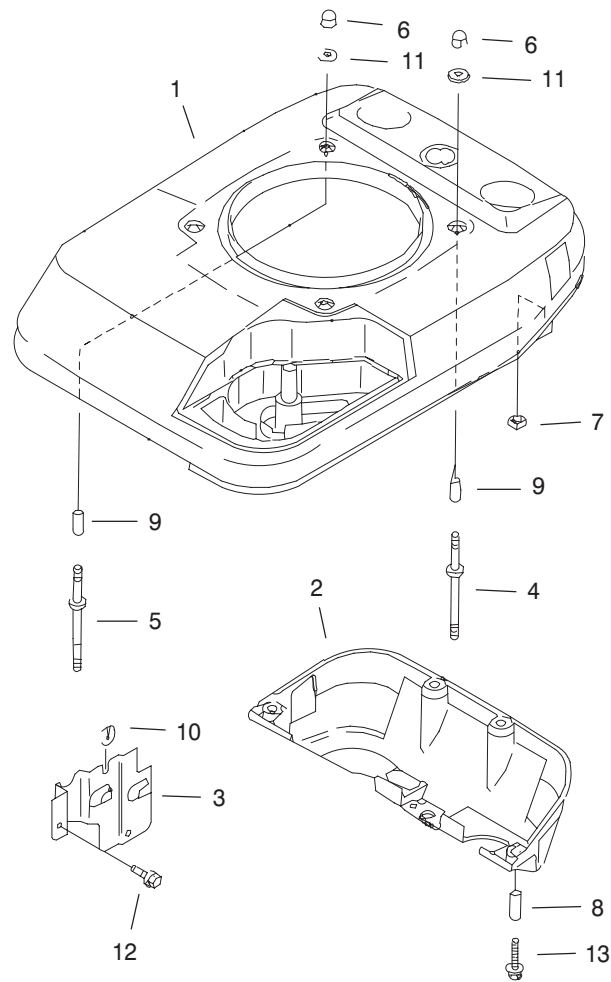 


Sheet No.: 12

Cover & Cooling Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover-Upper
2	100-2793	1	Cover-Lower
3	100-2794	1	Cover
4	100-2601	3	Stud
5	100-2602	1	Stud
6	100-2603	4	Nut
7	100-2604	4	Nut
8	100-2606	4	Spacer
9	100-2605	4	Spacer
10	100-2607	1	Grommet
11	100-2760	4	Washer
12	100-2609	2	Bolt-Flanged
13	100-2610	4	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

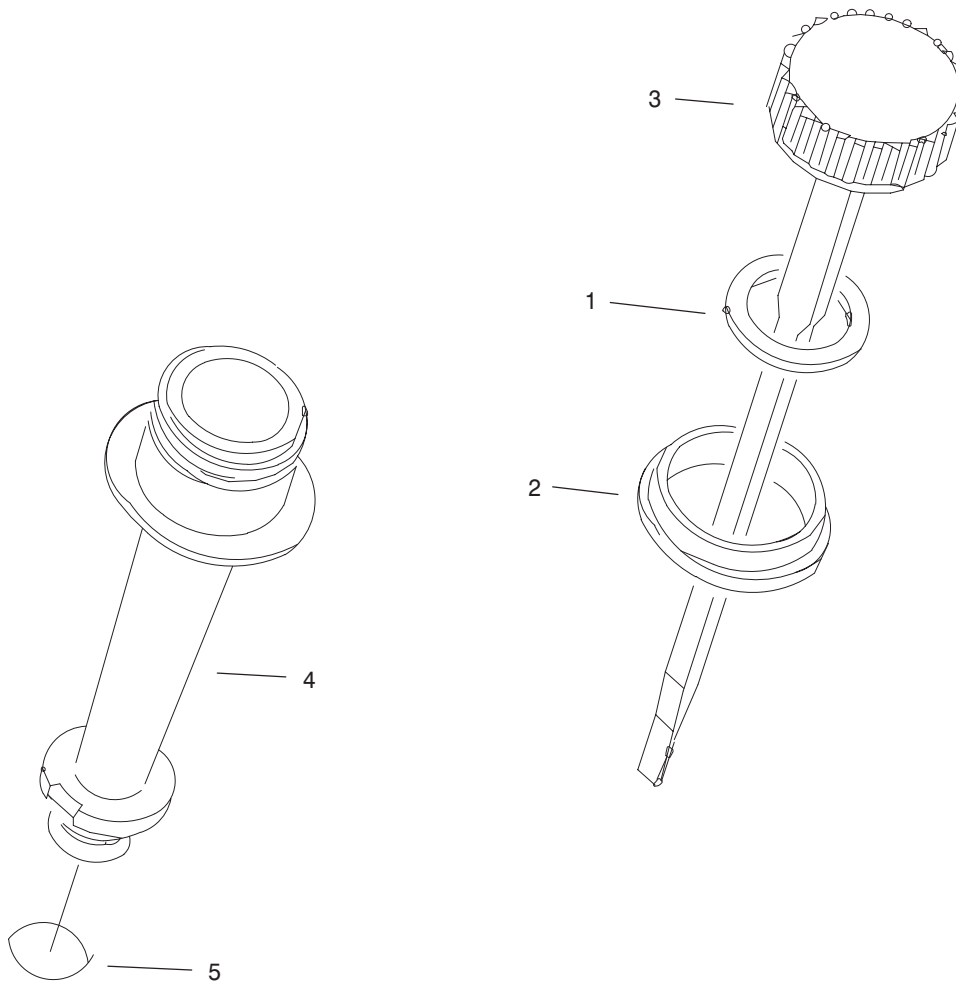 


Sheet No.: 13

Dipstick & Oil Filter Assembly

Ref. No.	Part No.	Qty.	Description
1	Kw10010	1	Gasket
2	100-2687	1	Guide
3	100-2688	1	Gauge
4	100-2689	1	Filler
5	100-2690	1	O-Ring

Ref. No.	Part No.	Qty.	Description

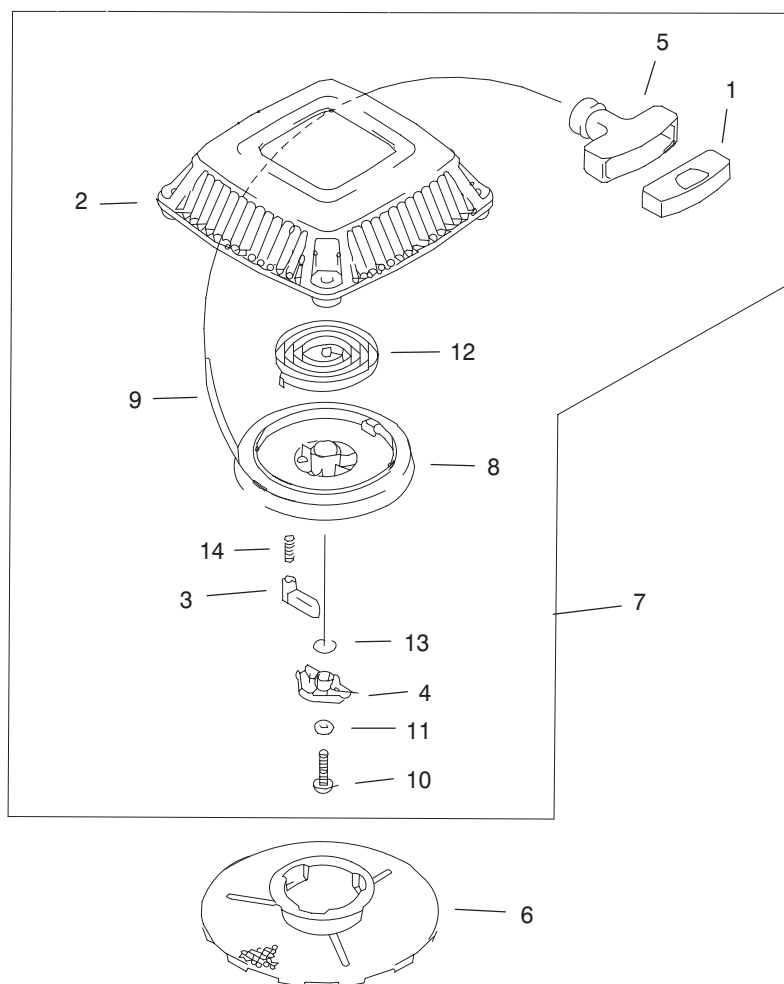 

Sheet No.: 14

Recoil Starter Assembly

Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap - Grip
2	100-2766	1	Holder
3	100-2767	1	Pawl-Starter, Recoil
4	100-2768	1	Retainer-Spring
5	100-2769	1	Grip-Starter, Recoil
6	100-2770	1	Pulley-Starting
7	100-2771	1	Starter-Recoil
8	100-2772	1	Reel-Starter, Recoil
9	100-2836	1	Rope Recoil 3.8x2610
10	100-2774	1	Screw
11	100-2775	1	Washer
12	100-2776	1	Spring-Recoil
13	100-2777	1	Spring
14	93-8555	1	Spring-return

Ref. No.	Part No.	Qty.	Description

