

LAWN-BOY®

SilverPro Series™ Walk-Behind Mower Model No. 10252-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket And Wheel Assembly	3	Engine Assembly No. 98-1395	6
Engine And Blade Assembly	4	Short Block Assembly No. 95-7636	8
Handle And Controls Assembly	5	Carburetor Assembly No. 98-7042	9


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Rear Bagging Kit	89800 (684690)
Leaf Bag	89804 (681001)	Leaf Shredder Kit	89860 (681684)
Leaf Bag Kit with Chute	89811		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

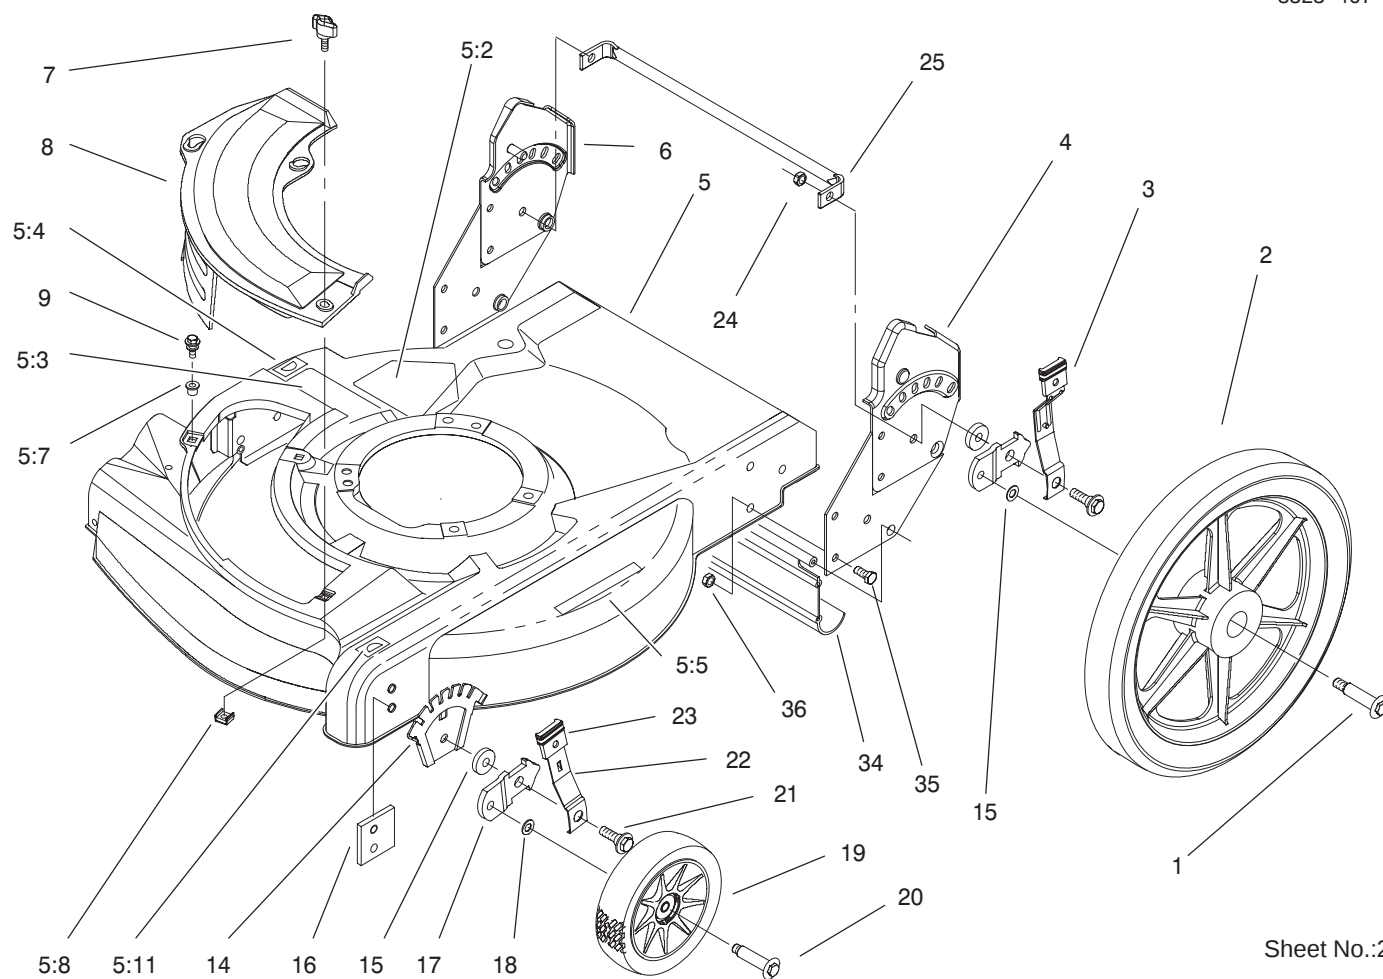


Sheet No.:2

Housing, Handle Bracket And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	99-5211	2	Shoulder Bolt
2	99-5220	2	Wheel
3	99-5224	2	Spring Arm ASM
4	99-5214	1	Bracket ASM-Handle, LH
5	98-4471	1	Housing ASM
5:2	43-8480	1	Decal-Danger
5:3	99-6018	1	Decal - Warning
5:4	92-2914	1	Decal - HOC, RH
5:5	93-7250	1	Decal-Warning
5:7	94-1610	2	Grommet - Plastic
5:8	613765	1	Nut-Cage
5:11	92-2915	1	Decal - HOC, LH
6	99-5213	1	Bracket ASM-Handle, RH
7	98-8332	1	Knob
8	92-8630	1	Plate-Mulch
9	614677	2	Screw- Sems
14	92-4881-03	2	Plate - Height Adjustment
15	92-4890	6	Washer - Wheel
16	92-7731	2	Plate - Baffle
17	95-7403-03	4	Bracket-Wheel Height Adjustment
18	40-1940	2	Washer
19	684776	2	Wheel & Tire ASM

Ref. No.	Part No.	Qty.	Description
20	92-1099	2	Bolt-Shoulder
21	614672	4	Bolt-Shoulder
22	614687	2	Arm-Front Spring
23	92-1008	4	Knob-Lever, Height Adjustment
24	3296-39	2	Nut-Lock, NI
25	99-5212-03	1	Brace-Handle Bracket
*31	95-7052	1	Plate - Chute Opening
34	92-8647	1	Shield - Trailing
35	322-3	4	Screw-HH
36	3296-29	4	Nut-Lock, NI


* Not illustrated

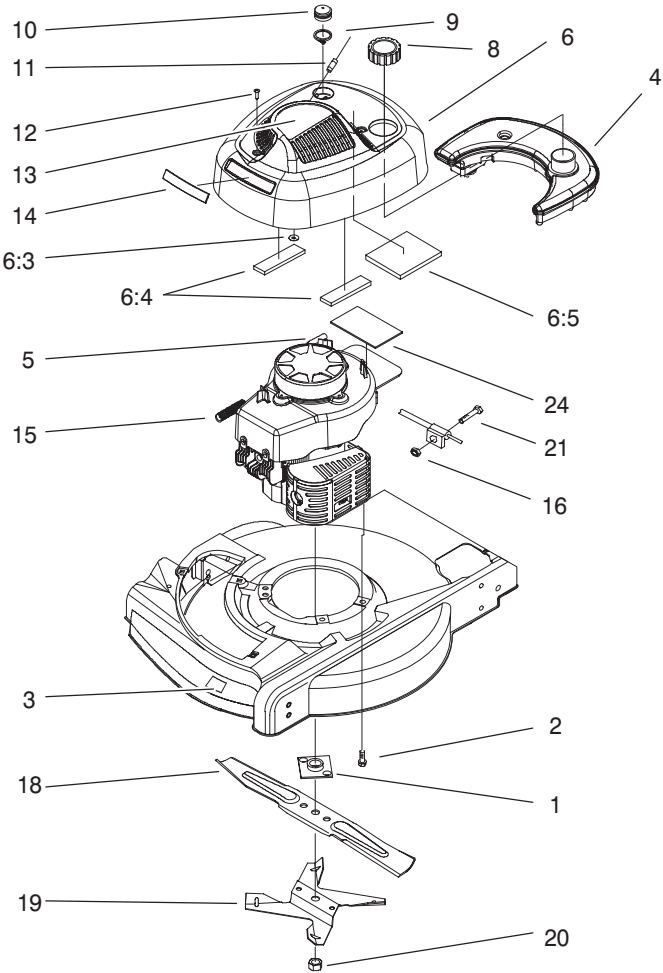

Sheet No.:3

Engine And Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM				
2	611774	3	Screw-HH				
3	100-6389	1	Decal-Deck				
4	95-1897	1	Tank				
5	612782	1	Fuel Line				
6	100-6398	1	Shroud & Recoil Cover ASM				
6:3	613329	2	Push Nut				
6:4	99-1522	2	Strip-Foam				
6:5	99-1521	1	Strip-Foam				
8	98-8344	1	Cap ASM-Fuel & Oil				
9	44-2750	1	Body-Primer				
10	66-7460	1	Bulb-Primer				
11	92-1701	1	Rope - Stop				
12	95-7621	3	Screw-Pan Sems				
13	95-7417	1	Decal - Recoil				
14	92-8615	1	Applique-Shroud				
15	93-4306	1	Spring - Compression				
16	306531	1	Nut-Hex				
18	612543	1	Blade				
19	99-6351-03	1	Fan - Mulching				
20	603164	1	Nut-Blade				
21	314576	1	Screw				
24	98-1386	1	Pad-Foam				

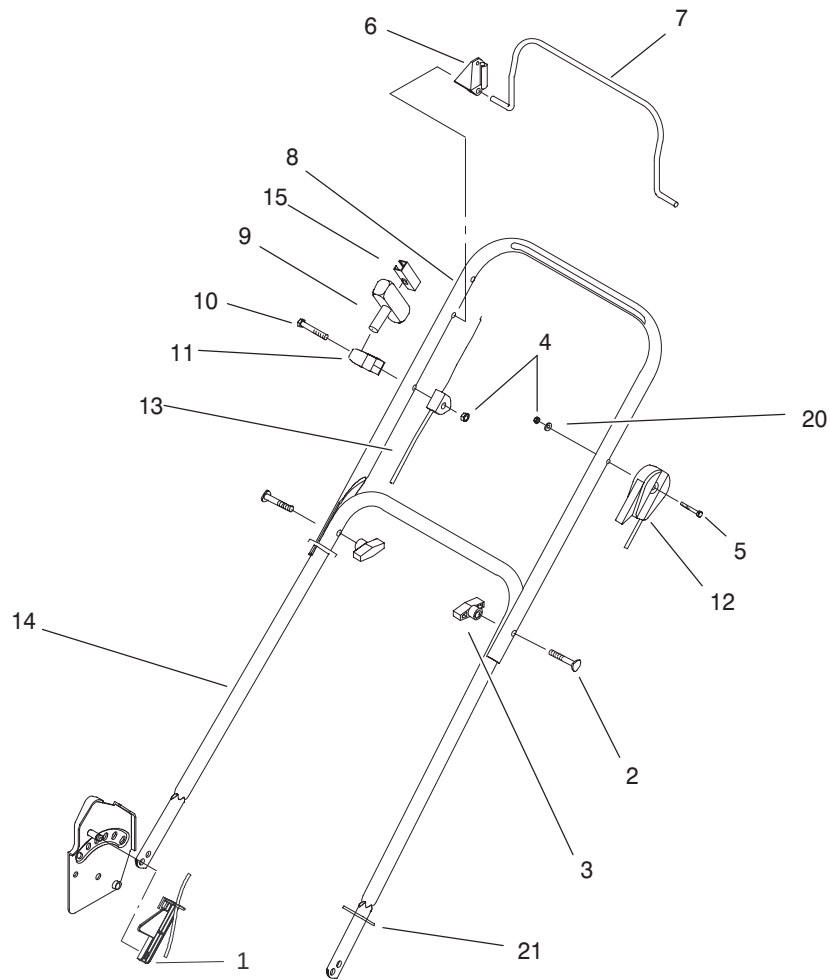

Sheet No.:4

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1013	1	Gaurd-Cable
2	614697	2	Screw
3	98-7134	2	Knob-Handle
4	3296-73	2	Nut-Lock, NI
5	321-48	1	Screw-HH
6	92-5412	1	Stop-Pivot
7	93-4184-03	1	Bail - Brake
8	100-2888-05	1	Handle-Upper
9	612825	1	Handle-Start
10	321-50	1	Screw-HH
11	93-7383	1	Rope - Guide
12	100-5987	1	Control ASM - Throttle
13	100-5991	1	Cable ASM - Brake
14	614643-05	1	Handle - Lower Section
15	612824	1	Starter-Clip
20	92-8632	1	Washer
21	614249	3	Tie Strap

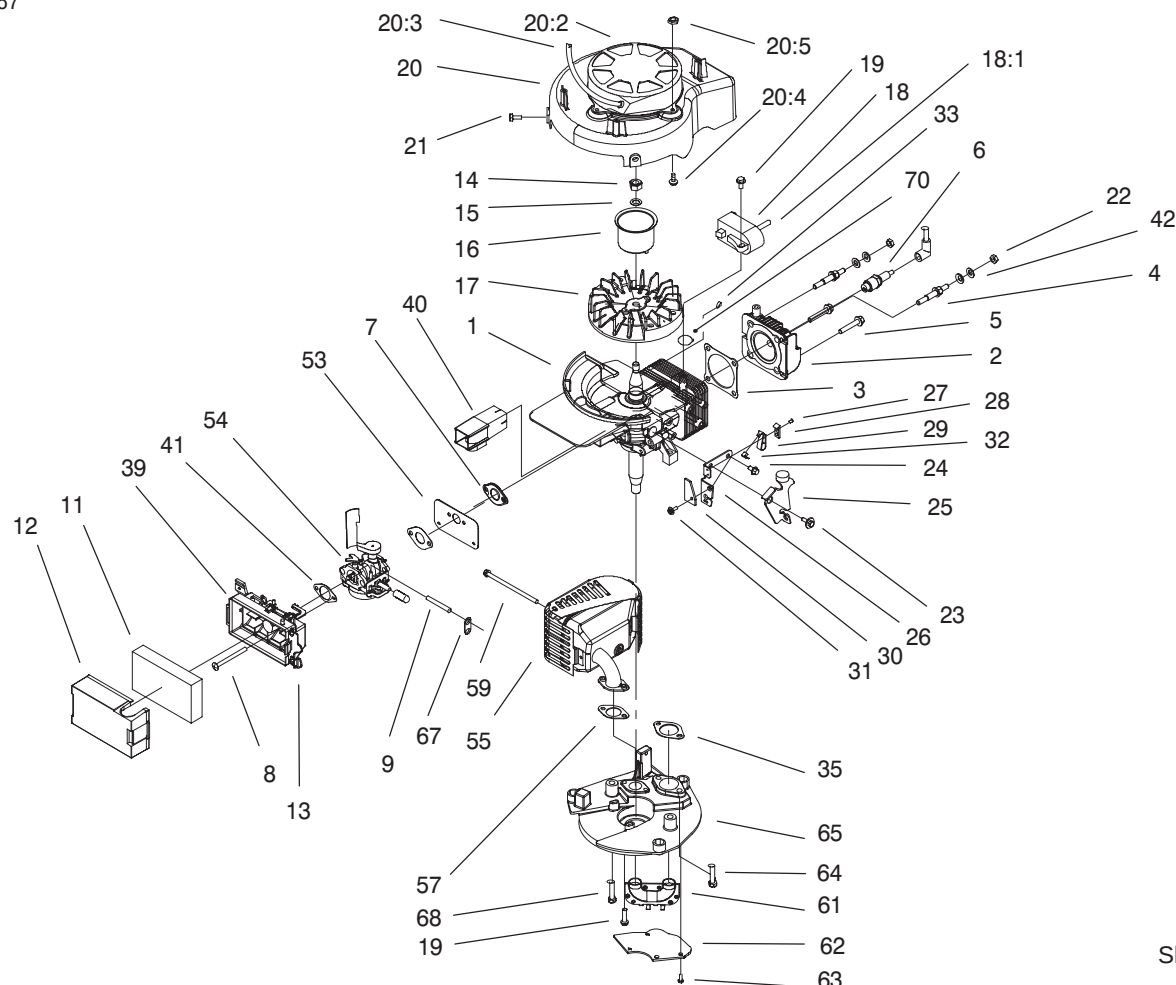


Sheet No.:2

Engine Assembly No. 98-1395

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter Cover
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ignition
18:1	99-6721	1	Clip-High Tension Lead
*18:2	99-6719	1	Lead-High Tension
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil And Decal ASM
20:3	613773	1	Rope
20:4	3290-321	4	Screw-HWH
20:5	3296-2	4	Nut-Lock

Ref. No.	Part No.	Qty.	Description
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate ASM
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Ground Strap
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Brake Switch
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
*51	609790	1	Sealer-Loctite 50cc
53	98-1388	1	Shield-Carburetor
54	98-7042	1	Carburetor ASM With Gaskets


* Not illustrated

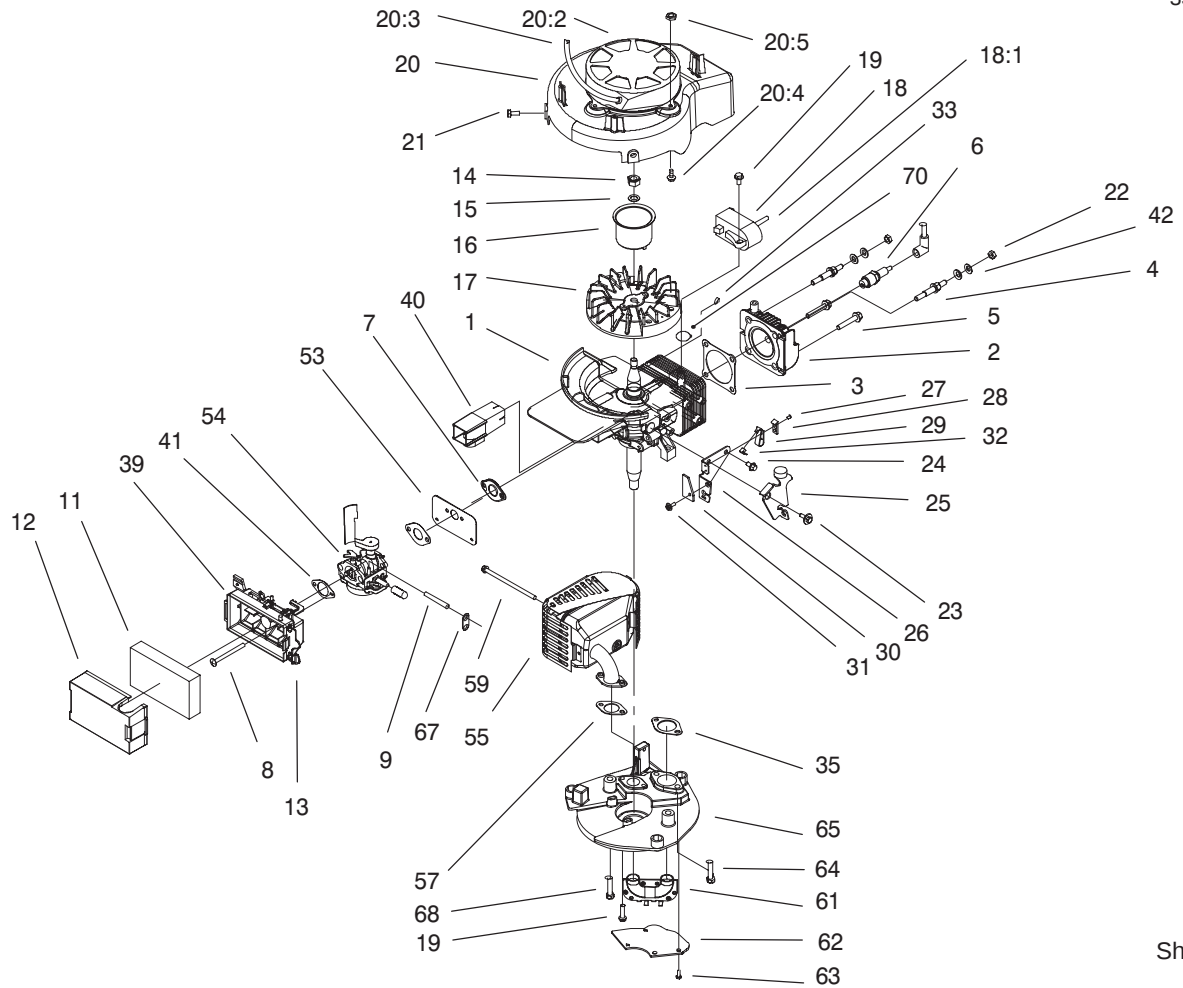

Sheet No.:2

Engine Assembly No. 98-1395 (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
55	100-9514	1	Muffler And Guard ASM				
57	98-1392	1	Gasket				
59	611228	1	Bolt-Console				
61	98-1557	1	Pipe-Transfer				
62	98-1591	1	Cover-Muffler				
63	700822	4	Screw-HH				
64	322-17	2	Screw-HH				
65	98-1384	1	Plate-Muffler				
67	95-7615	1	Hose-Retainer				
68	322-7	2	Screw-HH				
70	317893	1	Strap-Tie				

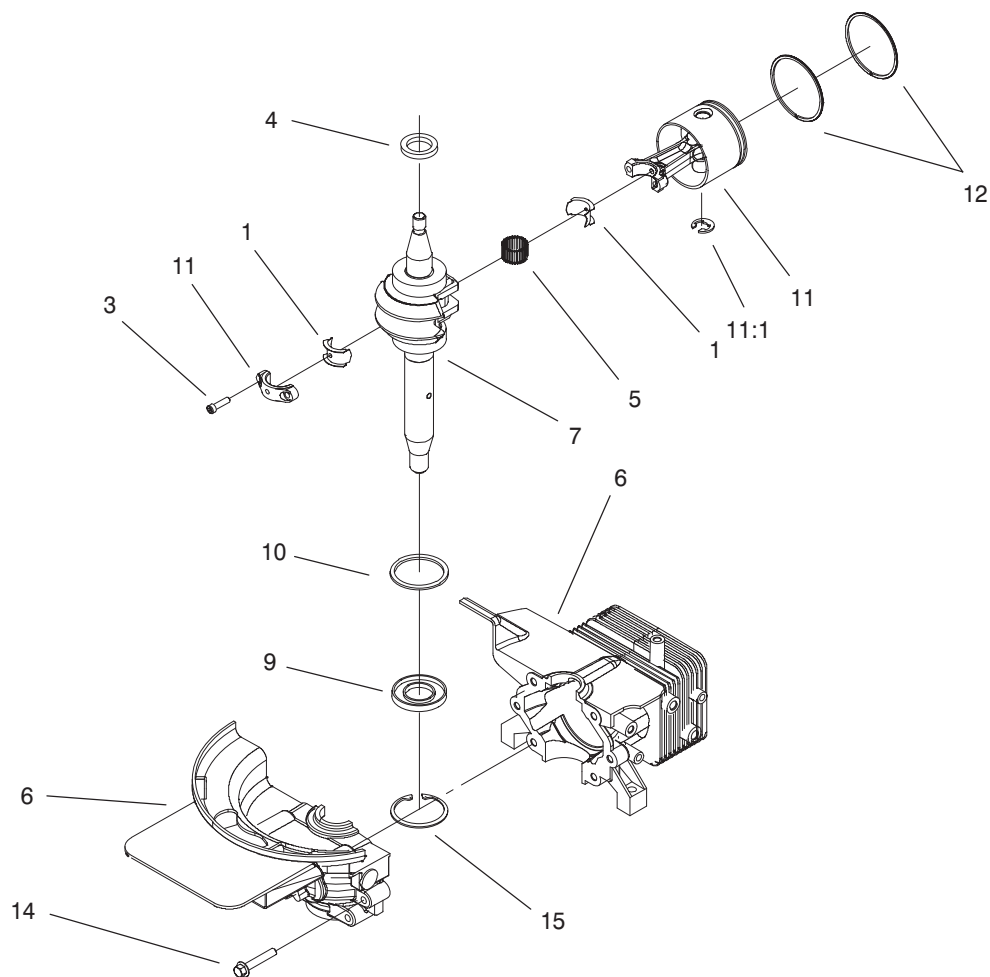


Sheet No.:A1

Short Block Assembly No. 95-7636

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	609790	1	Sealer–Loctite 50cc
*2	610372	1	Sealer–Loctite 6cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
*6:1	602587	1	Plate–Backup, Reed
*6:2	602588	1	Reed–Carburetor
*6:3	612872	2	Screw–HH
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11	95–7629	1	Connecting Rod ASM
11:1	303712	2	Ring – Retaining
*11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

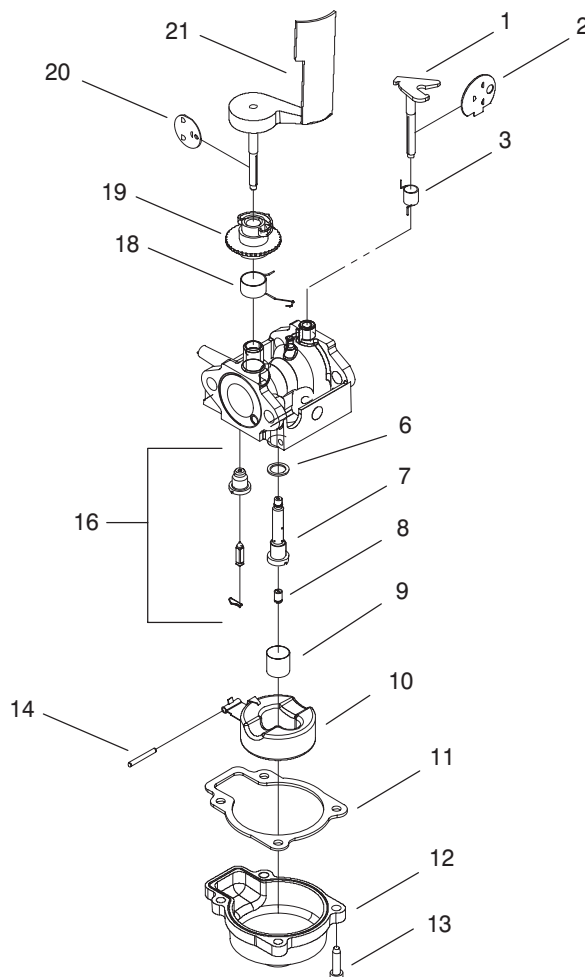

Sheet No.:A2

Carburetor Assembly No. 98-7042

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

Maintenance Record

[illegible]

LAWN-BOY®