

LAWN-BOY®

Silver Pro Series™

Walk-Behind Mower

Model No. 10247-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket & Wheel Assembly	3	Engine Assembly (cont.)	7
Engine & Blade Assembly	4	Short Block Assembly	8
Handles & Controls Assembly	5	Carburetor Assembly	9
Engine Assembly	6	Maintenance	10-11


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	Model No. 89817	Leaf Shredder Kit	Model No. 89860
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

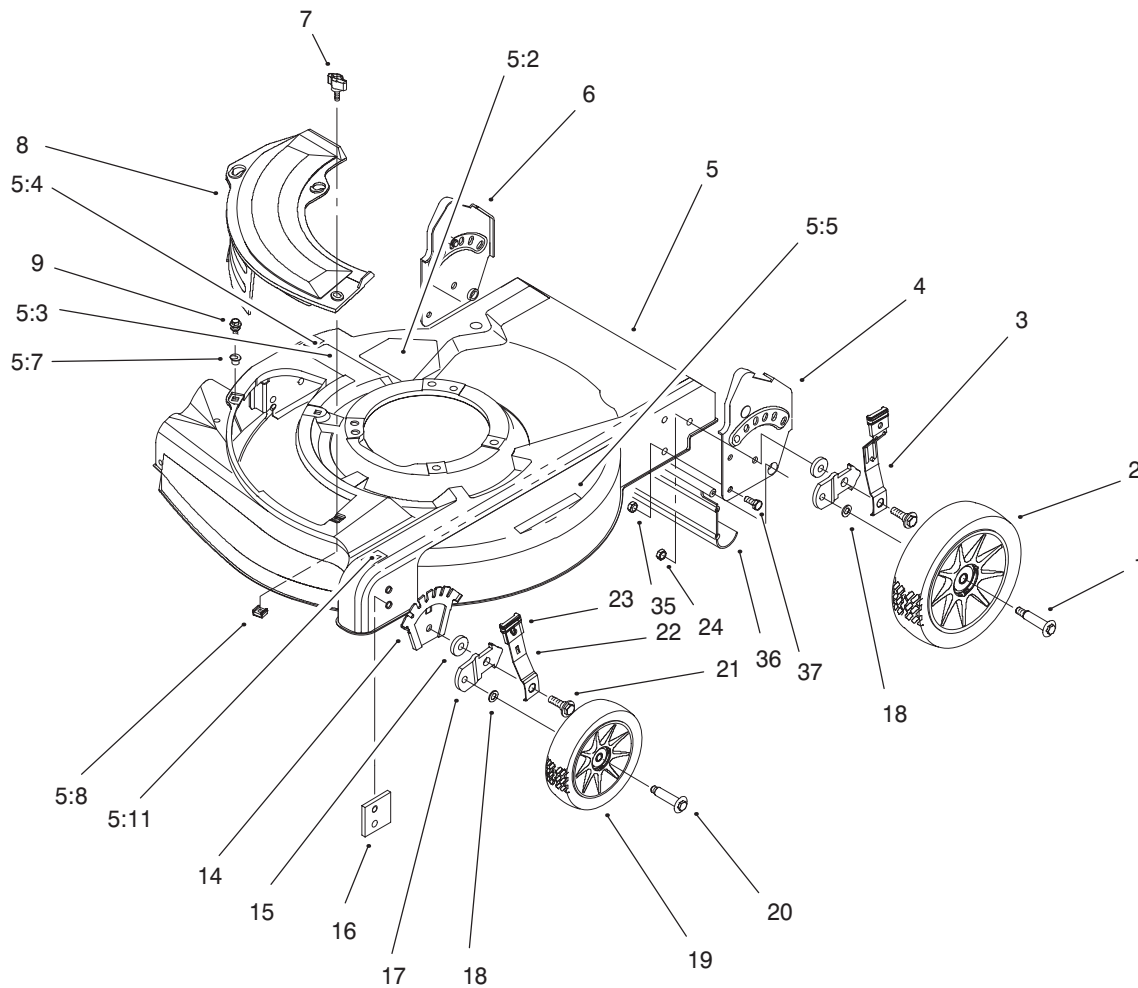


Sheet No.:2

Housing, Handle Bracket & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder	21	614672	4	Bolt-Shoulder
2	684777	2	8" Wheel & Tire ASM	22	614687	2	Arm-Front Spring
3	92-1005	2	Spring Arm ASM - Rear	23	92-1008	4	Knob-Height Adj Lever
4	92-7743	1	LH Handle Brkt ASM	24	3296-39	2	Nut-Lock NI
5	98-4471	1	ASM-Hsg/Baffle w/Decals	*31	95-7052	1	Plate - Chute Opening
5:2	43-8480	1	Decal-Danger	35	3296-29	4	Nut-Lock NI
5:3	99-6018	1	Decal-Warning	36	92-8647	1	Shield - Trailing
5:4	92-2914	1	Decal - HOC R	37	322-3	4	Screw-HH
5:5	93-7250	1	Decal-Warning				
5:7	94-1610	2	Grommet - Plastic				
5:8	613765	1	Nut-Cage				
5:11	92-2915	1	Decal - HOC L				
6	92-7742	1	RH Handle Brkt ASM				
7	98-8332	1	Knob				
8	92-8630	1	Plate-Mulch				
9	614677	2	Screw- Sems				
14	92-4881-03	2	Plate - Hght Adj				
15	92-4890	4	Washer - Wheel				
16	92-7731	2	Plate - Baffle				
17	95-7403-03	4	Bracket-Wheel Ht Adj				
18	40-1940	4	Washer-Wheel Bolt				
19	684776	2	6" Wheel & Tire ASM				
20	92-1099	2	Bolt-Shoulder 6" Wheel				


*Not illustrated

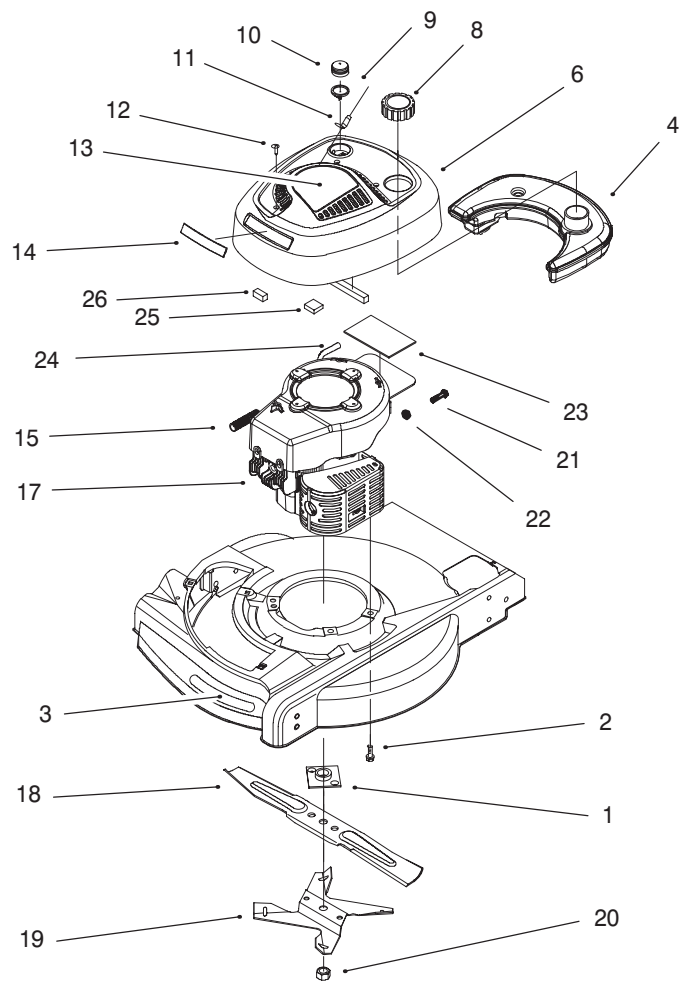

Sheet No.:3

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM				
2	611774	3	Screw-HH				
3	100-6388	1	Decal-Deck				
4	95-1897	1	Tank				
6	100-6398	1	ASM-Shroud/Recoil Cover				
8	98-8344	1	Assembly - Cap, Fuel/Oil				
9	44-2750	1	Body-Primer				
10	66-7460	1	Bulb-Primer				
11	92-1701	1	Rope - Stop				
12	95-7621	3	Screw-Pan Sems				
13	95-7417	1	Decal - Recoil				
14	92-8615	1	Applique-Shroud				
15	93-4306	1	Spring - Compression				
17		1	Engine Ay HP E Silver				
18	612543	1	Blade-21" Whirl				
19	99-6351-03	1	Fan - Mulching				
20	603164	1	Nut-Blade				
21	314576	1	Screw-Sems				
22	306531	1	Nut-Hex				
23	98-1386	1	Pad-Foam				
24	612782	1	Line-Gas				
25	99-1521	1	Strip-Foam				
26	99-1522	2	Strip-Foam				

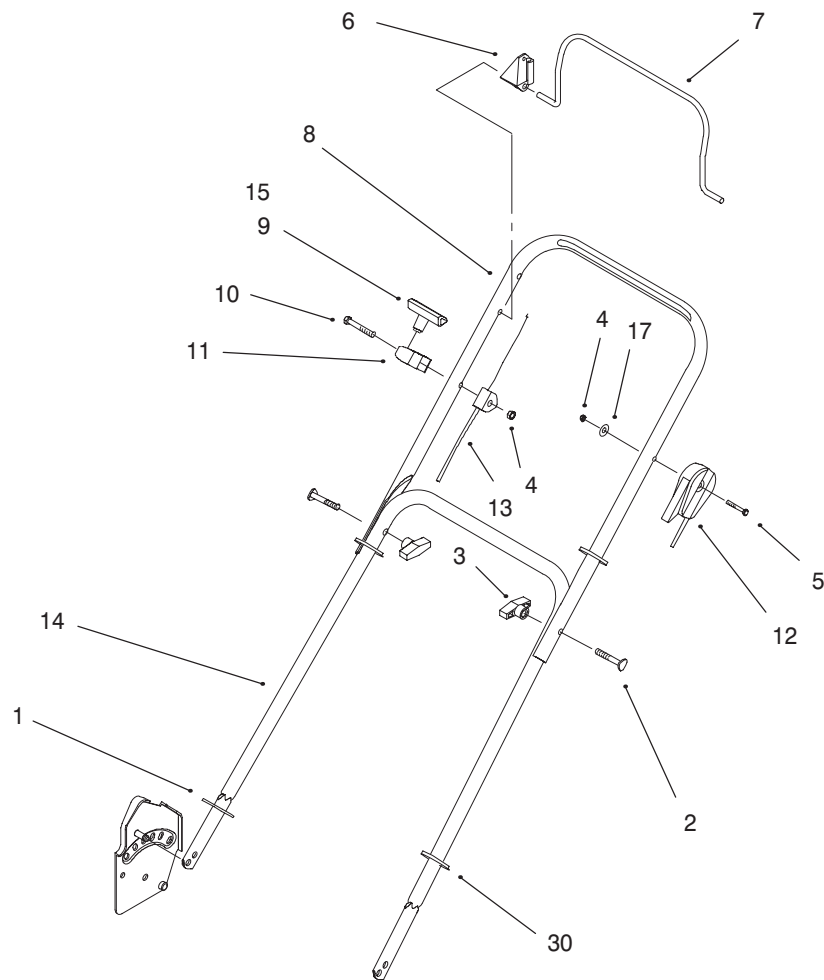

Sheet No.:4

Handles & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3653	1	Guard – Handle
2	614697	2	Screw–HH
3	98-7134	2	Knob–Handle
4	3296-73	2	Nut–Lock NI
5	321-48	1	Screw–HH
6	92-5412	1	Stop–Pivot
7	93-4184-03	1	Bail – Brake
8	100-2888-05	1	Handle – Upper
9	612825	1	Handle–Start Eat
10	321-50	1	Screw–HH
11	93-7383	1	Rope – Guide
12	100-5987	1	Cable – Throttle
13	100-5983	1	Cable – Flywheel Brake
14	614643-05	1	Section–Lower Handle
15	612824	1	Starter–Clip Eat
17	92-8632	1	Washer
30	614249	3	Tie Strap

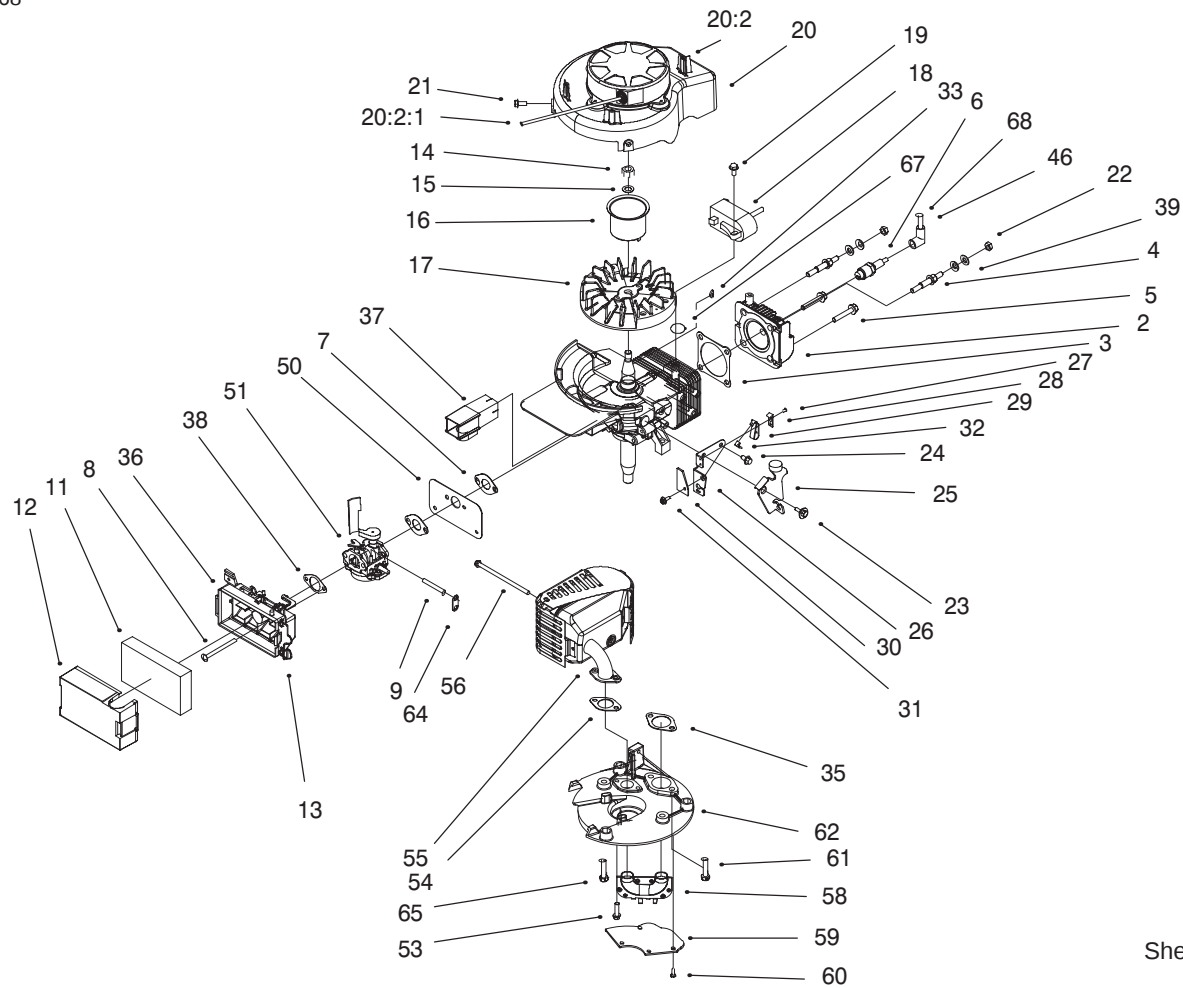


Sheet No.:A1

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	E-S/Block Ser. S
2	94-5776	1	Head-(Mach)
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud Ex
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw Xev
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Fil. Ev
14	130743	1	Nut Xev
15	316959	1	Washer-Lock Xev
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel Machined
18	92-1152	1	Ignition-Cd Ev
19	613208	4	Screw-Cd Mtg Xev
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil And Decal ASM
20:2:1	613773	1	Rope
21	700094	2	Screw-HH
22	146501	2	Nut Ex
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate Ay Ev


Ref. No.	Part No.	Qty.	Description
26	84-7820	1	Plate-Brake Mtg
27	3290-459	2	Rivet-Plastic Ev
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground Ev
30	100-2929	1	Stop-Gr Strap Ev
31	12-5450	1	Screw-Special Vex
32	98-7037	1	Wire - Lead E
33	607199	1	Key Xev
35	95-1778	1	Gasket-Exhaust
36	95-5588	1	Base Ay-(Air Filter)
37	95-5578	1	Tunnel E
38	95-7613	1	Gasket-Filter
39	3290-456	4	Washer-Belleville
46	684698	1	Cover & Term. Ay S
50	98-1388	1	Shield - Carb. E
51	98-7042	1	Carburetor ASM With Gaskets
53	613208	1	Screw-Hex Washer Hd
54	98-1392	1	Gasket
55	100-9514	1	Muffler & Guard ASM
56	611228	1	Bolt-Console E
58	98-1557	1	Pipe-Transfer
59	98-1591	1	Cover-Muffler
60	700822	4	Screw-HH
61	322-17	2	Screw-HH

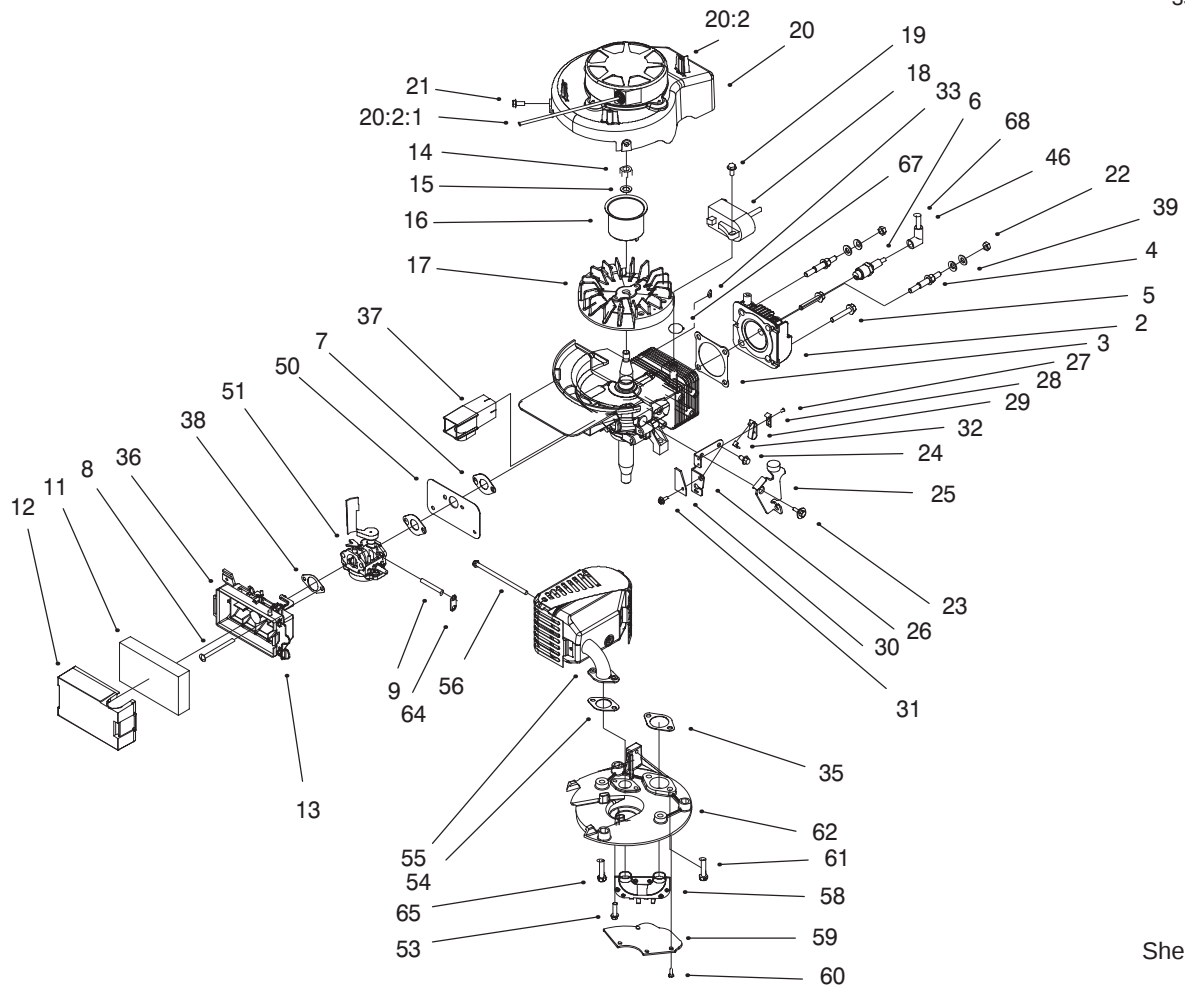

Sheet No.:A1

Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
62	98-1384	1	Plate-Muffler
64	95-7615	1	Hose-Retainer
65	322-7	2	Screw-HH
67	317893	1	Strap-Tie Xef
68	681678	1	Ht Lead&cover Xev

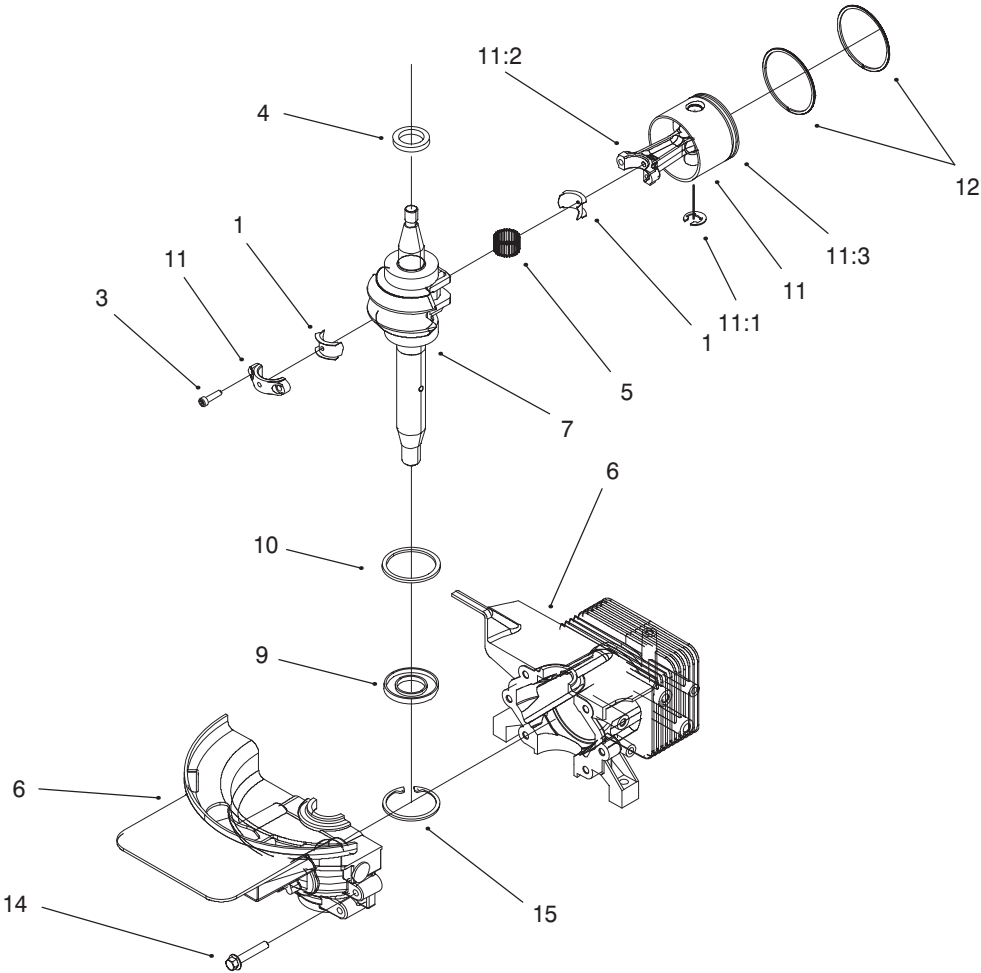


Sheet No.:A5

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner Ay
2	610372	2	Sealer-Loctite
2	609790	2	Sealant-50cc #2
3	611393	4	Screw-Rod
4	611396	1	Seal- Oil
5	683911	1	Bearing-Needle
6	95-7631	1	Cylinder And Crankcase ASM
7	99-2920	1	Crankshaft And Bearing ASM For Service
9	94-5764	1	Seal-Oil
10	94-5765	1	Ring-Retaining
11		1	Piston&rod Ay
11:1	303712	2	Ring- Retaining
11:2	95-7629	1	Connecting Rod ASM(Serial No. 200000001 -200004820)
11:2	100-2915	1	Connecting Rod ASM (Serial No. 200004821 & Up)

Ref. No.	Part No.	Qty.	Description
11:3	95-7628	1	Piston ASM With Piston Rings (Serial No. 200000001 -200004820)
11:3	100-2916	1	Piston ASM With Piston Rings (Serial No. 200004821 & Up)
12	95-7626	1	Ring Set - Service (Serial No. 200000001 -200004820)
12	100-2917	1	Ring Set - Service (Serial No. 200004821 & Up)
14	94-5781	12	Screw
15	98-7046	1	Ring - Retaining

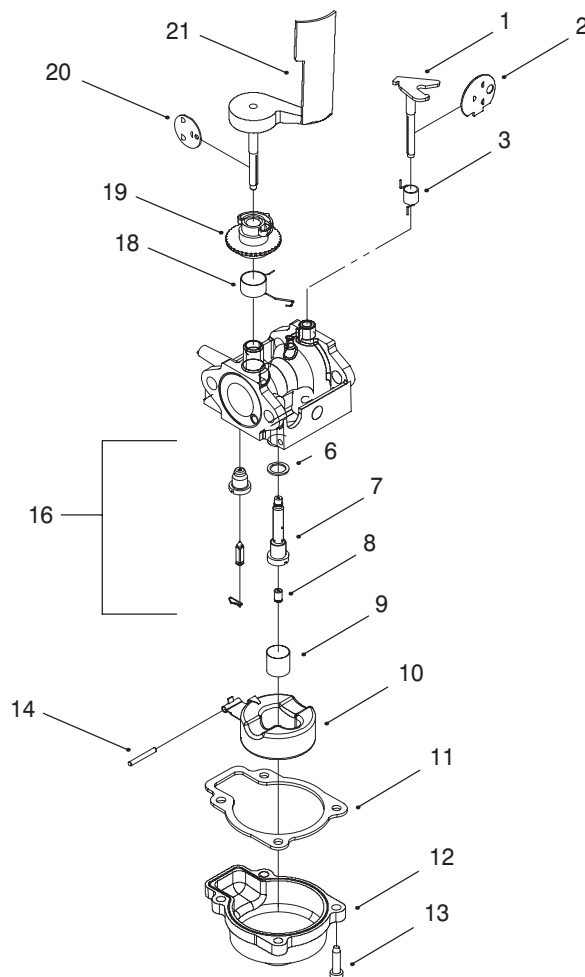

Sheet No.:A6

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc - Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet - Main 77.5				
9	94-5787	1	Filter - Fuel				
10	95-1899	1	Float&arm Ay				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Gov.				
19	610834	1	Airvane-Collar				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane&shaft				

Maintenance Record

[illegible]

