

LAWN-BOY®

SilverPro Series™ Walk-Behind Mower Model No. 10324-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket And Wheel Assembly	3	Grass Bagging Assembly	8
Gear Case Assembly No. 95-7412	4	Engine Assembly No. 98-1393	9
Engine And Blade Assembly	5	Short Block Assembly No. 95-7636	11
Rear Axle Assembly	6	Carburetor Assembly No. 98-7042	12
Handle And Controls Assembly	7		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Leaf Bag Kit with Chute	89811
Leaf Bag	89804 (681001)	Leaf Shredder Kit	89860

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

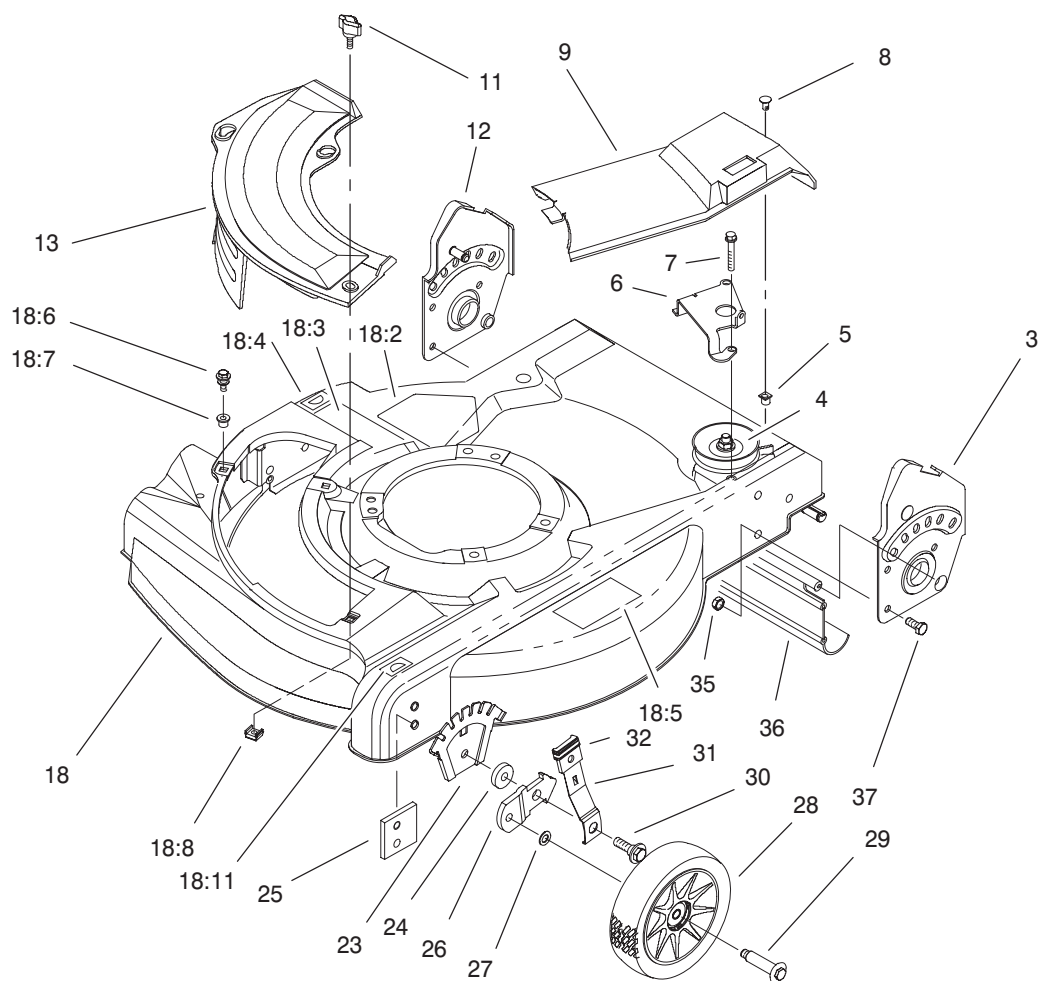


Sheet No.:2

Housing, Handle Bracket And Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
3	92-7724	1	LH Handle Bracket ASM	27	40-1940	2	Washer
4	95-7412	1	Gear Case ASM	28	684776	2	Wheel & Tire ASM
5	605120	1	Grommet	29	92-1099	2	Bolt-Shoulder
6	95-1732-03	1	Guide-Transmission	30	614672	2	Bolt-Shoulder
7	65-5221	2	Screw-HWHTF	31	614687	2	Arm-Front Spring
8	92-9665	1	Screw	32	92-1008	4	Knob-Lever, Height Adj
9	95-7413	1	Cover - Drive	35	3296-29	6	Nut-Lock, NI
11	98-8332	1	Knob	36	92-8647	1	Shield - Trailing
12	92-7723	1	RH Handle Bracket ASM	37	322-3	6	Screw-HH
13	92-8630	1	Plate-Mulch	*99	95-7052	1	Plate - Chute Opening
18	98-4472	1	Deck ASM				
18:2	43-8480	1	Decal-Danger				
18:3	99-6018	1	Decal - Warning				
18:4	92-2914	1	Decal - HOC, RH				
18:5	93-7250	1	Decal-Warning				
18:6	614677	2	Screw-Sems				
18:7	94-1610	2	Grommet - Plastic				
18:8	613765	1	Nut-Cage				
18:11	92-2915	1	Decal - HOC, LH				
23	92-4881-03	2	Plate - Height Adj				
24	92-4890	2	Washer - Wheel				
25	92-7731	2	Plate - Baffle				
26	95-7403-03	2	Bracket-Wheel Height Adj				

* Not illustrated

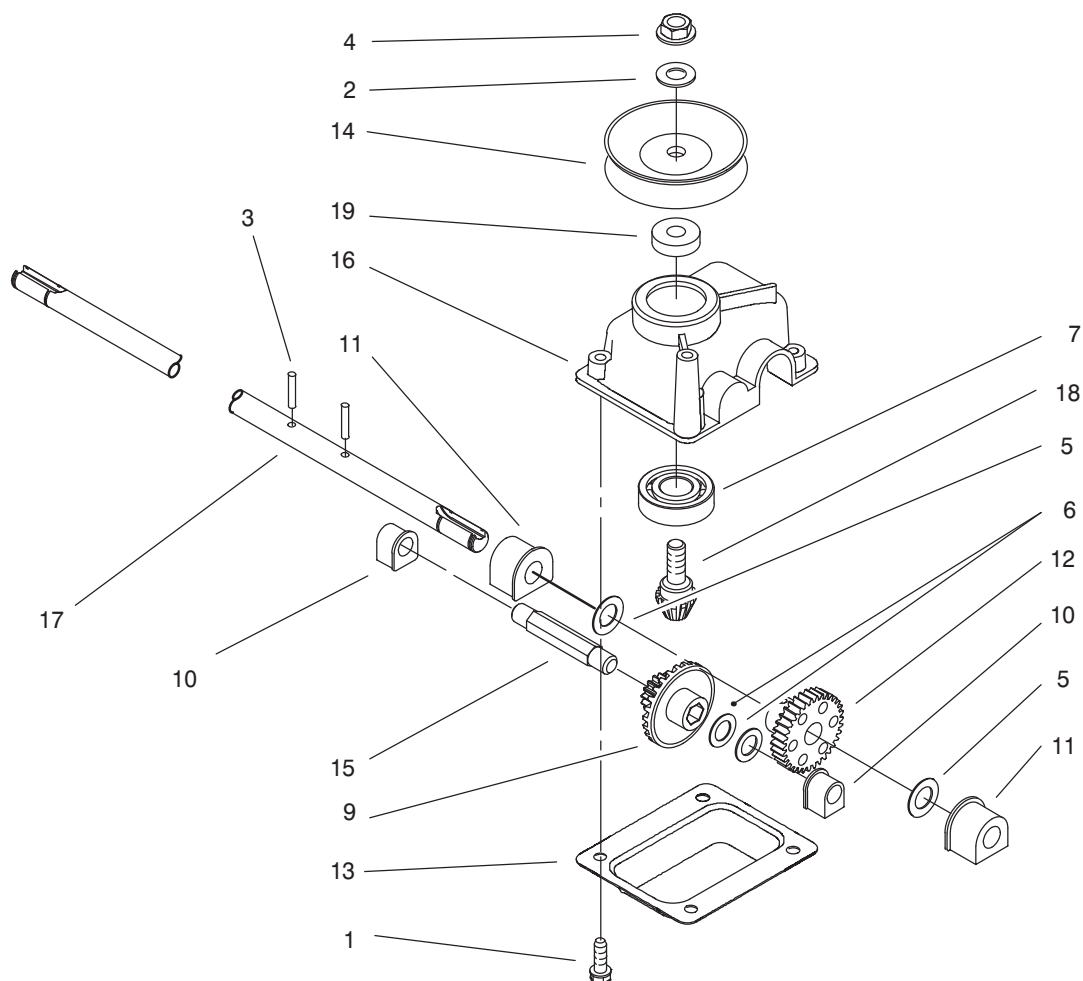


Sheet No.:A1

C-2956

Gear Case Assembly No. 95-7412

Ref. No.	Part No.	Qty.	Description
1	32144-4	4	Screw-HH
2	3256-24	1	Washer-Flat
3	3285-19	2	Pin-Groove
4	3296-5	1	Nut-Lock, NI
5	36-4780	2	Washer
6	36-4791	2	Washer-Thrust
7	38-7820	1	Bearing-Ball
9	55-3760	1	Gear-Bevel
10	60-8750	2	Bushing
11	60-8850	2	Bushing-Output
12	614596	1	Gear
13	614668-03	1	Cover-Gear Case
14	614669	2	Half-Pulley
15	614696	1	Shaft-Intermediate
16	92-7727	1	Gearcase
17	93-0239	1	Shaft - Output
18	95-1731	1	Pinion - Bevel
19	95-5550	1	Spacer - Pulley

Ref. No.	Part No.	Qty.	Description

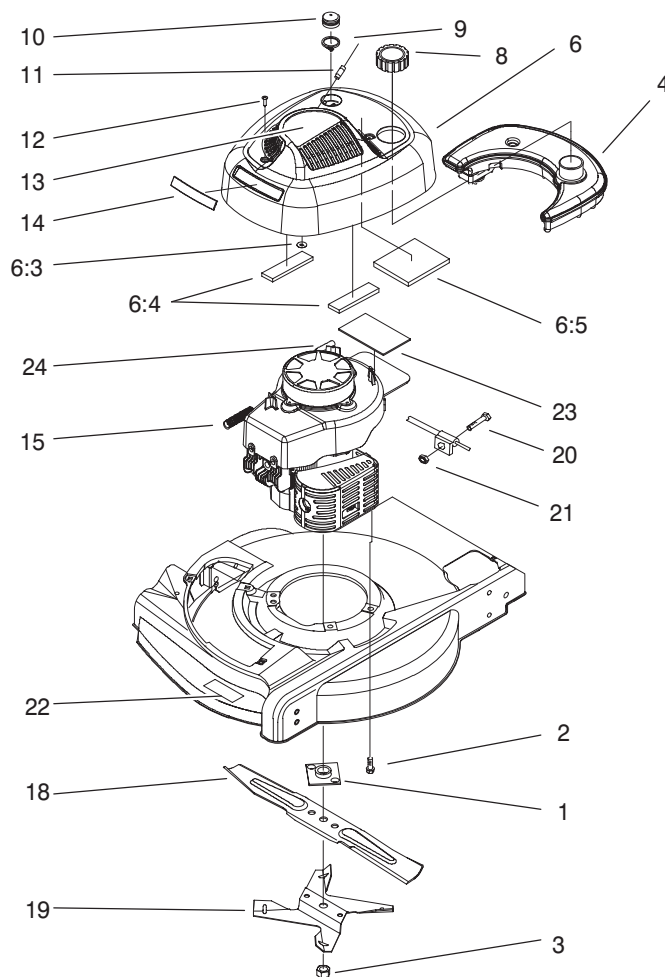

Sheet No.:3


Engine And Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM				
2	611774	3	Screw-HH				
3	603164	1	Nut-Blade				
4	95-1897	1	Tank				
6	100-6398	1	Shroud & Recoil Cover ASM				
6:3	613329	2	Push Nut				
6:4	99-1522	2	Strip-Foam				
6:5	99-1521	1	Strip-Foam				
8	98-8344	1	Cap ASM-Fuel & Oil				
9	44-2750	1	Body-Primer				
10	66-7460	1	Bulb-Primer				
11	92-1701	1	Rope - Stop				
12	95-7621	3	Screw-Pan Sems				
13	95-7417	1	Decal - Recoil				
14	92-8615	1	Applique-Shroud				
15	93-4306	1	Spring - Compression				
18	612543	1	Blade				
19	99-6351-03	1	Fan - Mulching				
20	314576	1	Screw				
21	306531	1	Nut-Hex				
22	100-6385	1	Decal-Deck				
23	98-1386	1	Pad-Foam				
24	612782	1	Fuel Line				

Sheet No.:4

Ref. No.	Part No.	Qty.	Description


6

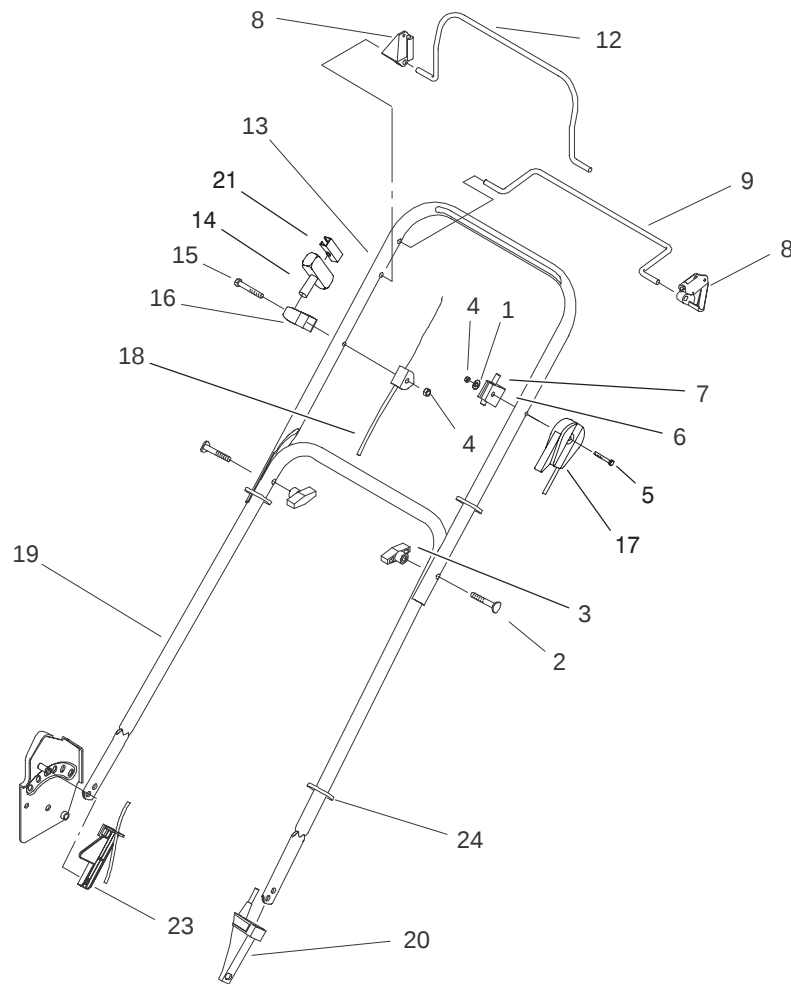

Sheet No.:5

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-1	1	Washer-Flat
2	614697	2	Screw
3	98-7134	2	Knob-Handle
4	3296-73	2	Nut-Lock, NI
5	321-49	1	Screw-HH
6	92-7729	1	Anchor-Upper, Cable
7	100-5990	1	Cable-Ground Speed
8	92-5412	2	Stop-Pivot
9	92-1001-03	1	Bail-Control
12	93-4184-03	1	Bail - Brake
13	100-2888-05	1	Handle-Upper
14	612825	1	Handle-Start
15	321-50	1	Screw-HH
16	93-7383	1	Rope - Guide
17	100-5987	1	Control ASM - Throttle
18	100-5983	1	Cable-Brake
19	614643-05	1	Handle - Lower Section
20	93-7380	1	Anchor - Cable
21	612824	1	Starter-Clip
23	104-1013	1	Guard-Cable
24	614249	3	Tie Strap

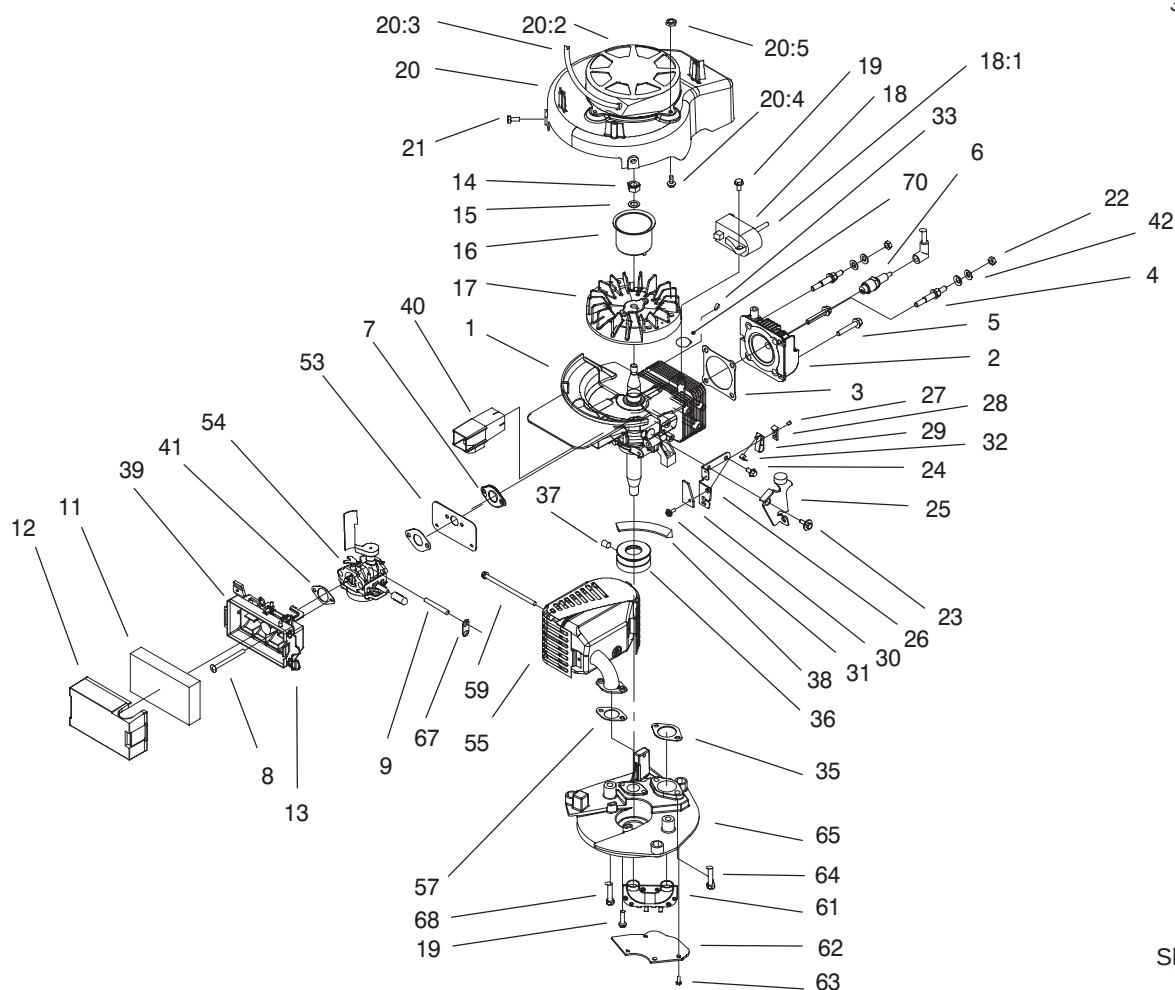


Sheet No.:2

Engine Assembly No. 98-1393

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM	21	700094	2	Screw-HH
2	94-5776	1	Head-Cylinder	22	146501	2	Nut
3	94-5778	1	Gasket-Head	23	95-1870	1	Screw-Shoulder
4	94-5779	2	Stud	24	95-1871	1	Screw-HWH
5	94-5780	2	Bolt - Head	25	93-4312	1	Brake Plate ASM
6	50-1170	1	Plug-Spark	26	84-7820	1	Plate-Brake
7	94-5795	2	Gasket-Intake	27	3290-459	2	Rivet-Plastic
8	612507	2	Screw	28	92-2925	1	Strap-Insulation
9	95-1861	1	Hose-Primer	29	60-9010	1	Strap-Ground
11	95-5574	1	Filter-Air	30	100-2929	1	Stop-Ground Strap
12	95-5577	1	Cover-Air Filter	31	12-5450	1	Screw
13	610383	1	Retainer-Filter Cover	32	98-7037	1	Lead Wire-Brake Switch
14	130743	1	Nut	33	607199	1	Key
15	316959	1	Washer-Lock	35	95-1778	1	Gasket-Exhaust
16	95-1786	1	Cup-Starter	36	95-1878	1	Pulley
17	95-1866	1	Flywheel	37	104-0214	1	Screw-Set,Cone Point
18	99-2911	1	Module-Ignition	38	92-1043	1	V-Belt
18:1	99-6721	1	Clip-High Tension Lead	39	95-5588	1	Air Base ASM
*18:2	99-6719	1	Lead-High Tension	40	95-5578	1	Tunnel-Inlet
19	613208	4	Screw	41	95-7613	1	Gasket-Filter
20	95-1868	1	Shroud-Recoil	42	3290-456	4	Washer-Belleville
20:2	99-6713	1	Recoil And Decal ASM	*51	609790	1	Sealer-Loctite 50cc
20:3	613773	1	Rope	53	98-1388	1	Shield-Carburetor
20:4	3290-321	4	Screw-HWH				
20:5	3296-2	4	Nut-Lock				

* Not illustrated

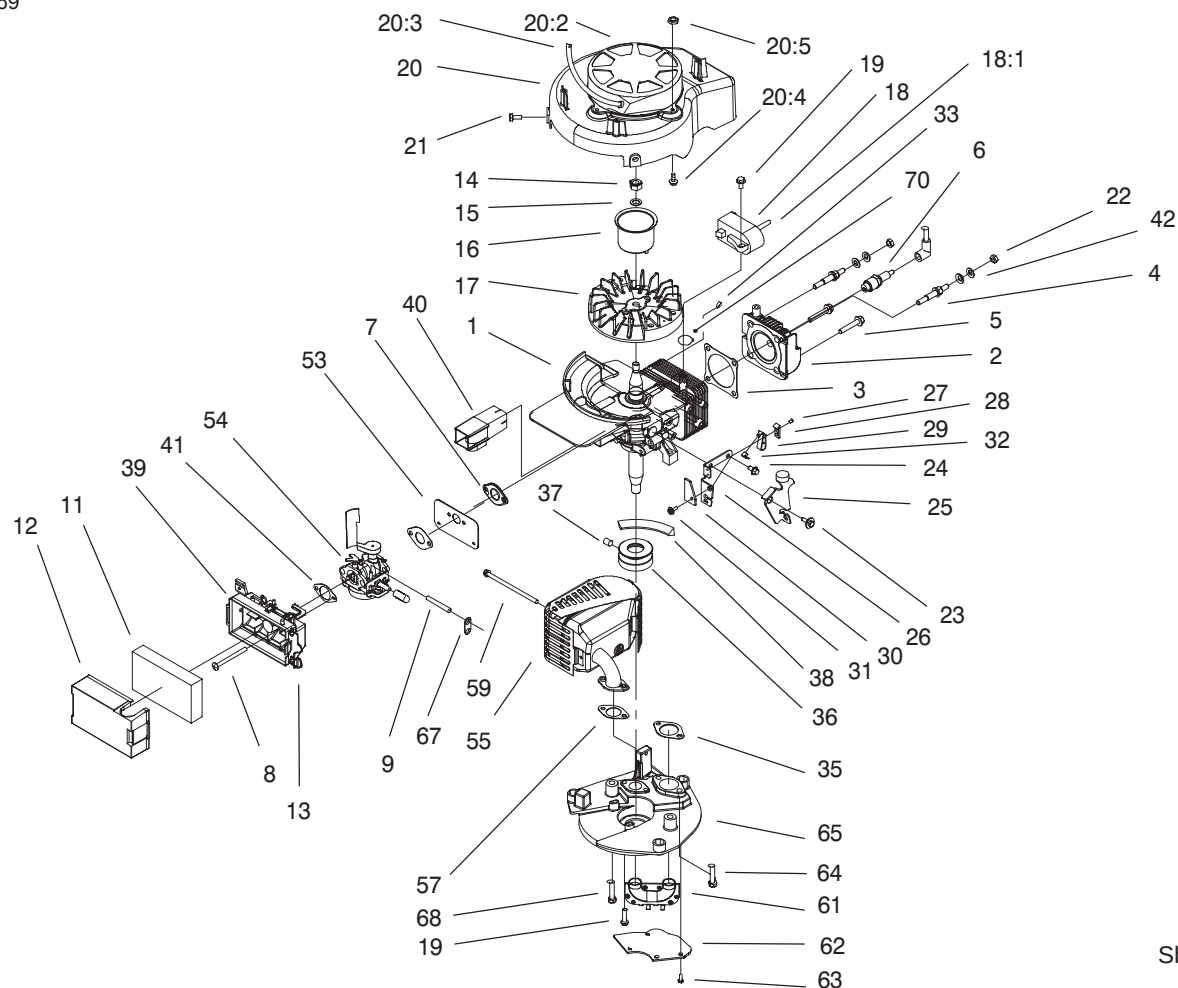


Sheet No.:2

Engine Assembly No. 98-1393 (Continued)

Ref. No.	Part No.	Qty.	Description
54	98-7042	1	Carburetor ASM With Gaskets
55	100-9514	1	Muffler And Guard ASM
57	98-1392	1	Gasket
59	611228	1	Bolt-Console
61	98-1557	1	Pipe-Transfer
62	98-1591	1	Cover-Muffler
63	700822	4	Screw-HH
64	322-17	2	Screw-HH
65	98-1384	1	Plate-Muffler
67	95-7615	1	Hose-Retainer
68	322-7	2	Screw-HH
70	317893	1	Strap-Tie

Ref. No.	Part No.	Qty.	Description

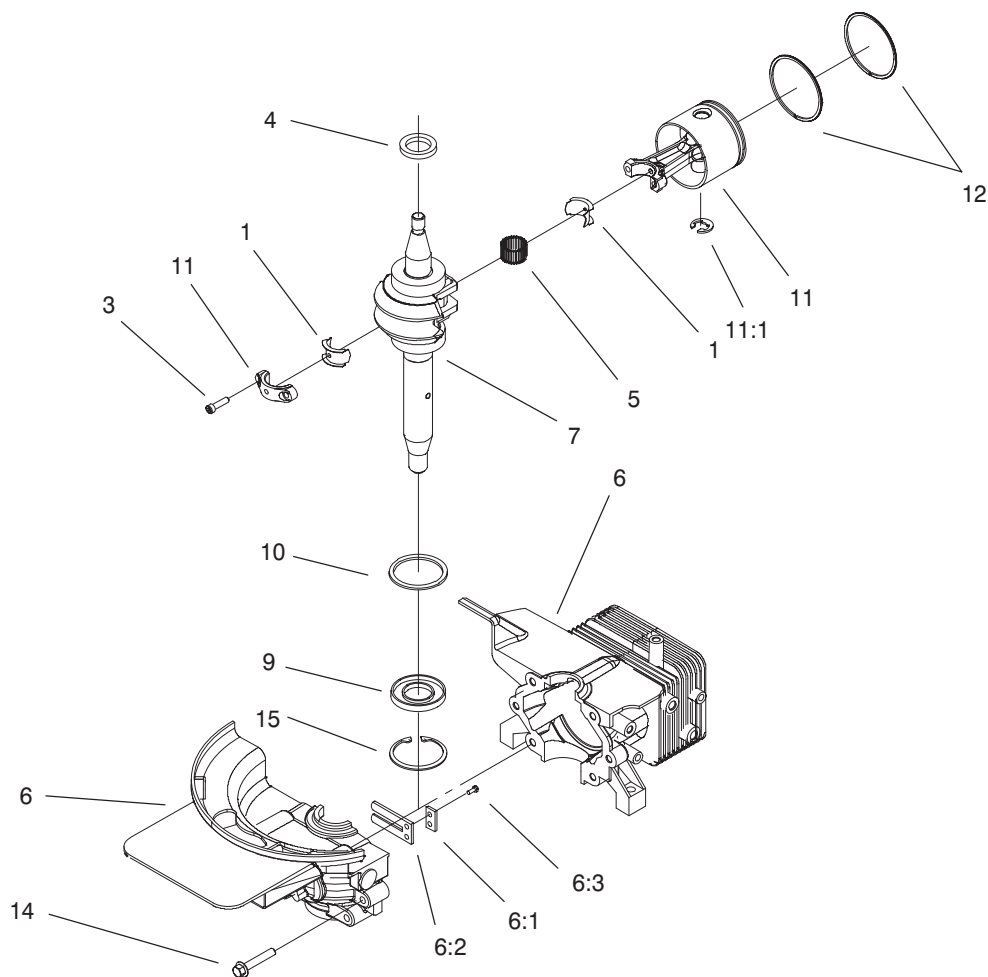


Sheet No.:A1
C-2958

Short Block Assembly No. 95-7636

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	609790	1	Sealer–Loctite 50cc
*2	610372	1	Sealer–Loctite 6cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
6:1	602587	1	Plate–Backup, Reed
6:2	602588	1	Reed–Carburetor
6:3	612872	2	Screw–HH
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11	95–7629	1	Connecting Rod ASM
11:1	303712	2	Ring – Retaining
*11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

* Not illustrated

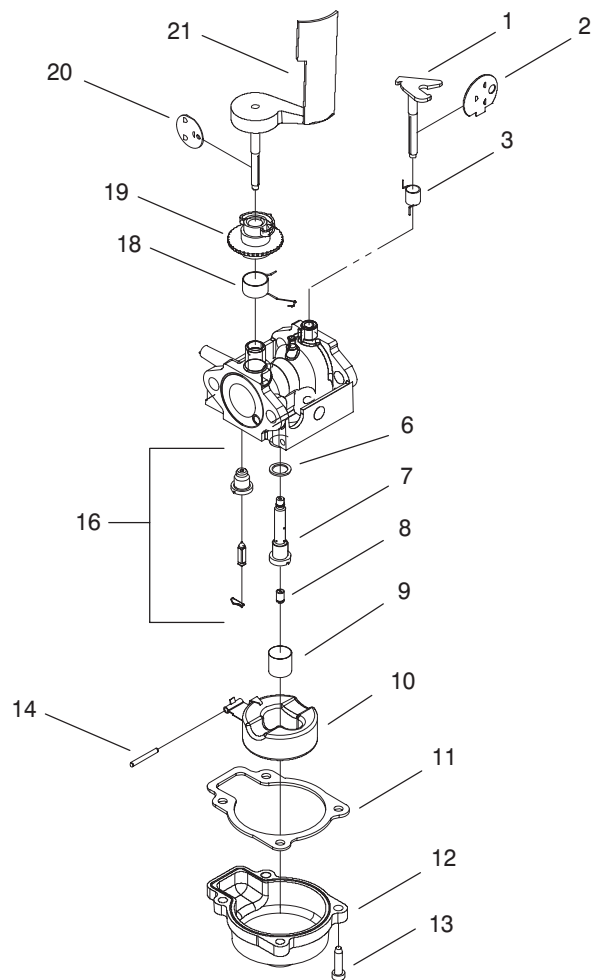

Sheet No.:A2

Carburetor Assembly No. 98-7042

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

Maintenance Record

[illegible]

LAWN-BOY®