

LAWN-BOY®

GoldPro Series™ Walk-Behind Mower Model No. 10525-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Handle And Controls Assembly	7
Gear Case Assembly No. 92–7869	4	Engine Assembly No. 98–1396	8
Engine And Blade Assembly	5	Short Block Assembly No. 95–7636	10
Rear Axle Assembly	6	Carburetor Assembly No. 98–7042	11


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	Model No. 89817	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

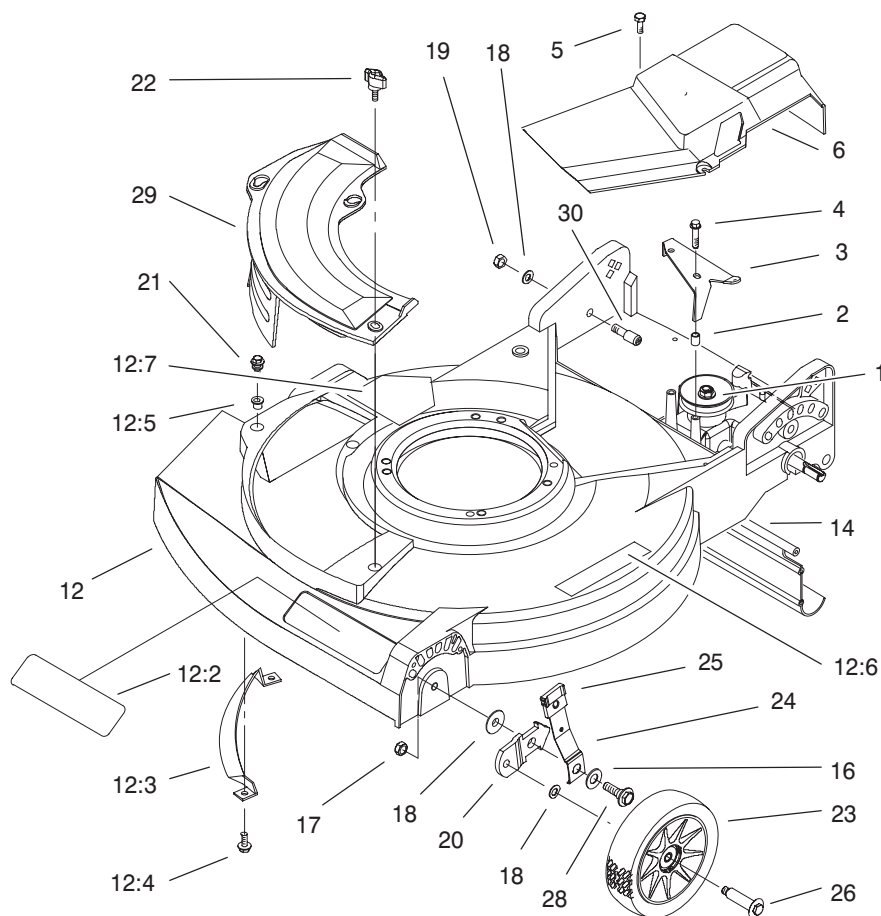


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-7869	1	Gear Case ASM	25	92-1008	4	Knob-Lever, Height Adjustment
2	46-5551	2	Spacer	26	92-1099	2	Bolt-Shoulder
3	92-7699-03	1	Bracket-Actuator	28	92-4856	2	Bolt-Shoulder
4	32144-110	2	Screw-HWH	29	92-8630	1	Plate-Mulch
5	12-5450	2	Screw	30	92-9673	2	Screw-Torx
6	98-4493	1	Cover - Drive	*99	614249	1	Tie Strap
12	99-1566	1	Housing	*99	95-7052	1	Plate - Chute Opening
12:2	95-7421	1	Decal - Deck				
12:3	608175	1	Toe Bar				
12:4	46-6811	2	Screw-HWH				
12:5	94-1610	3	Grommet - Plastic				
12:6	93-7250	1	Decal-Warning				
12:7	43-8480	1	Decal-Danger				
14	92-7736	1	Shield - Trailing				
16	3290-413	2	Washer-Belleville				
17	3296-39	2	Nut-Lock, NI				
18	40-1940	6	Washer				
19	603773	2	Nut				
20	95-7403-03	2	Bracket-Wheel Height Adjustment				
21	614677	2	Screw- Sems				
22	98-8332	1	Knob				
23	684776	2	Wheel & Tire ASM				
24	92-1006	2	Spring Arm ASM - Front				

* Not illustrated

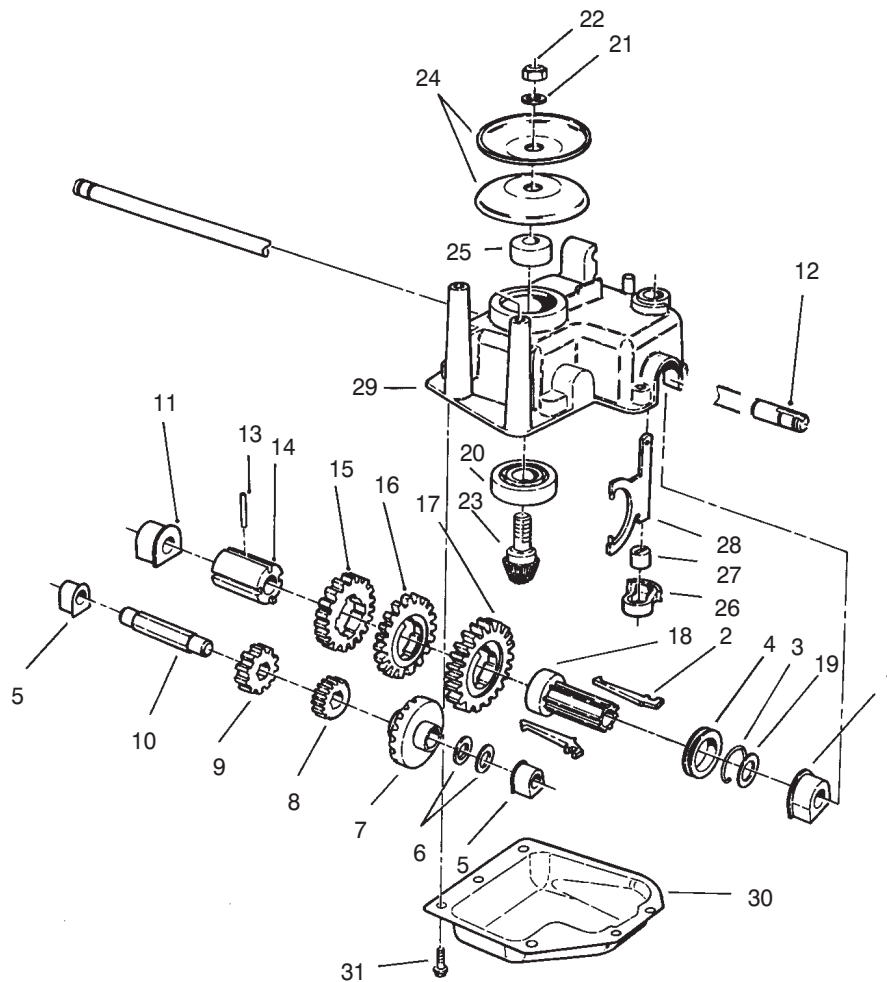


Sheet No.:A1

Gear Case Assembly No. 92-7869

Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing- Output
2	76-0760	2	Key-Shift
3	65-5250	1	Clip-Spring
4	76-0770	1	Collar-Shift
5	60-8750	2	Bushing
6	36-4791	2	Washer-Thrust
7	55-3760	1	Gear-15t Spur, 37t Bevel
8	55-3780	1	20 T Pinion
9	55-3800	1	25 T Pinion
10	60-8800	1	Shaft-Intermediate
11	60-8850	1	Bushing-Output
12	65-4770	1	Shaft-Output
13	3285-19	1	Pin-Groove
14	60-8790	1	Sleeve - Gear
15	55-3810	1	39 T Gear
16	55-3790	1	44 T Gear
17	55-3770	1	49 T Gear
18	76-0780	1	Sleeve-Key, Shift
19	36-4780	1	Washer
20	38-7820	1	Bearing-Ball
21	3256-24	1	Washer-Flat
22	3296-5	1	Nut-Lock, NI
23	92-5790	1	Pinion
24	100-1176	2	Half-Pulley
25	92-5791	1	Spacer

Ref. No.	Part No.	Qty.	Description
26	60-8810	1	Retainer- Shift Fork
27	29-9570	1	Bushing-Yoke
28	60-8870	1	Yoke-Shift
29	60-8710	1	Case-Gear, Upper
30	60-8730-03	1	Cover-Gear Case
31	49-2040	6	Screw-Taptite

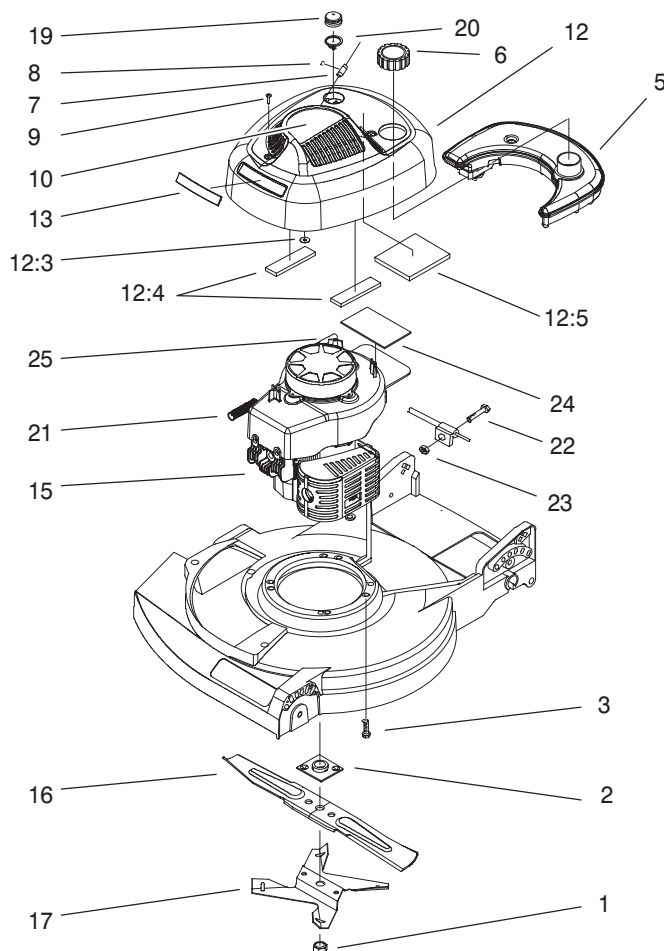


Sheet No.:3

Engine And Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade				
2	677525	1	Plate & Collar ASM				
3	98-4480	3	Screw-Sems				
5	95-1897	1	Tank				
6	98-8344	1	Cap ASM-Fuel & Oil				
7	47-2480	1	Stop-Rope				
†8	3290-443	1	Staple				
9	95-7621	3	Screw-Pan Sems				
10	95-7420	1	Decal - Recoil				
12	100-8750	1	Shroud & Recoil Cover ASM				
12:3	613329	2	Push Nut				
12:4	99-1522	2	Strip-Foam				
12:5	99-1521	1	Strip-Foam				
13	92-8615	1	Applique-Shroud				
16	612543	1	Blade				
17	99-6351-03	1	Fan - Mulching				
19	66-7460	1	Bulb-Primer				
20	44-2750	1	Body-Primer				
21	93-4306	1	Spring - Compression				
22	314576	1	Screw				
23	306531	1	Nut-Hex				
24	98-1386	1	Pad-Foam				
25	612782	1	Fuel Line				

† Obtain locally.

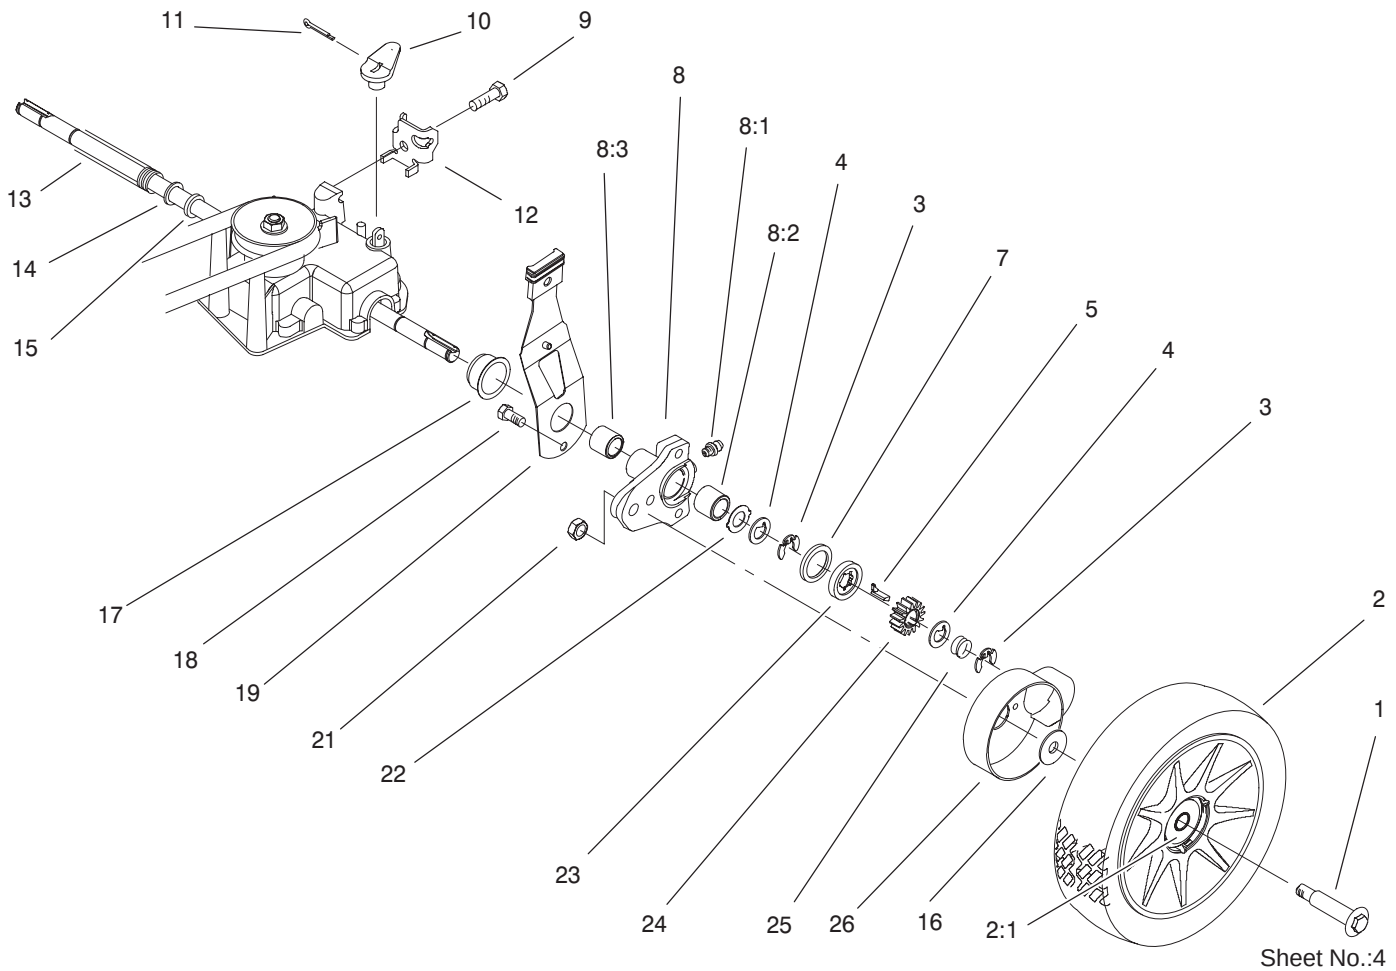


Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	8" Wheel & Tire ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip, Sp
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
*6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:1	302-56	1	Fitting-Zerk
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
9	32144-70	1	Screw-HH
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Clamp-Cable
13	24-7920	1	Cover-Shaft, Drive
14	303259	1	Washer
15	605255	1	Washer
16	614426	2	Washer-Stepped
17	92-6535	2	Ring - Isolator
18	32144-85	2	Screw-HH
19	92-6540	1	Rear Spring Arm

Ref. No.	Part No.	Qty.	Description
*20	92-6539	1	ASM-LH Rear Spring Arm ASM-RH
21	603773	2	Nut
22	65-4730	2	Washer-Arm, Pivot
23	65-4760	2	Washer
24	65-4750	2	Gear-Pinion
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel


* Not illustrated

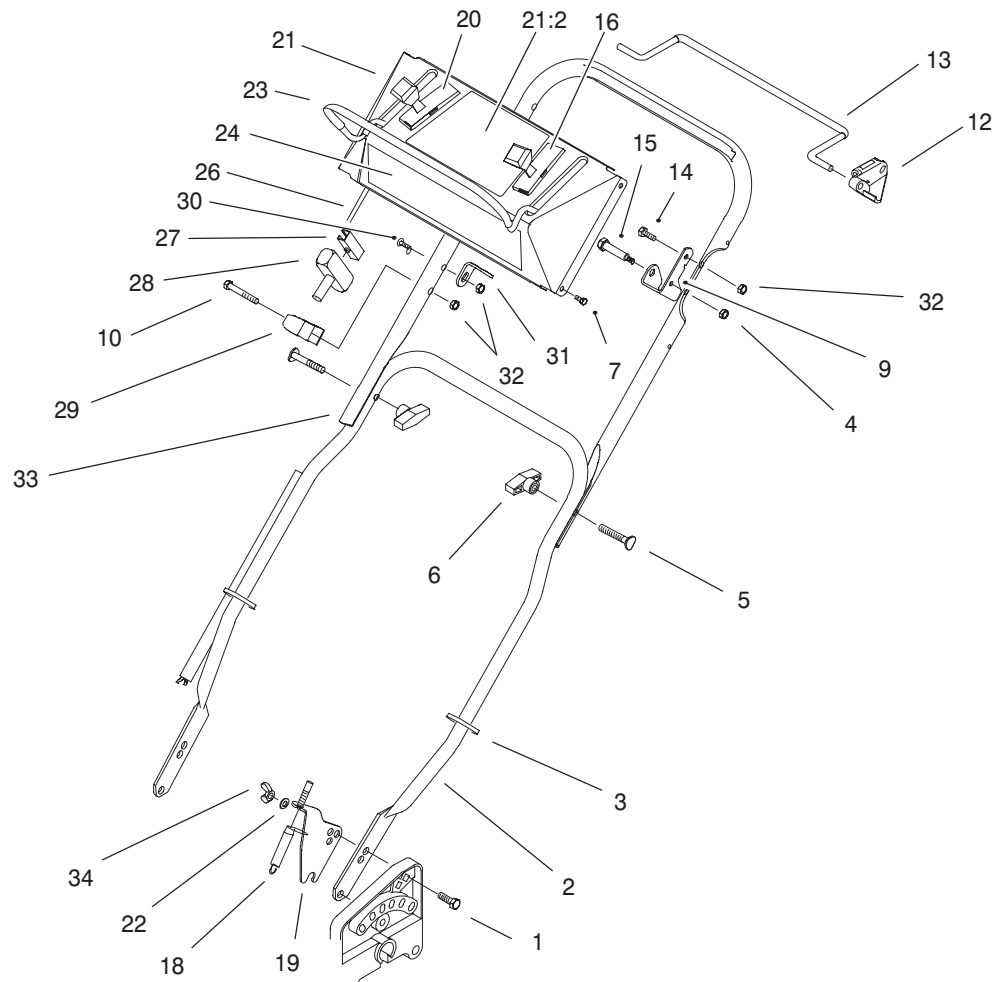

Sheet No.:5

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Screw-CARR	29	93-7383	1	Rope - Guide
2	100-2890-05	1	Handle-Lower	30	92-2268	1	Screw-Handle
3	614249	2	Tie Strap	31	92-2928	1	Bracket-Anchor, Cable
4	3296-56	1	Nut-Lock, NI	32	3296-73	3	Nut-Lock, NI
5	614697	2	Screw	33	100-2892-05	1	Handle-Upper
6	98-7134	2	Knob-Handle	34	32103-29	2	Nut-wing
7	92-9665	4	Screw				
9	92-1094	1	Bracket-Stop, Bail				
10	321-51	1	Screw-HH				
12	92-5412	1	Stop-Pivot				
13	92-1001-03	1	Bail-Control				
14	321-4	1	Screw-HH				
15	613050	1	Bolt				
16	100-5985	1	Control ASM-Throttle				
18	100-5981	1	Cable-Traction				
19	92-7899-03	1	Bracket-Traction Cable				
20	100-5984	1	Cable-Ground Speed				
21	100-8799	1	Control Panel ASM				
21:2	98-4469	1	Decal - Control Panel				
22	3253-33	2	Washer-Lock/Sp				
23	92-1093	1	Bail-Engine Control				
24	100-6391	1	Decal-Panel Sp				
26	100-5986	1	Brake Cable ASM				
27	612824	1	Starter-Clip				
28	612825	1	Handle-Start				

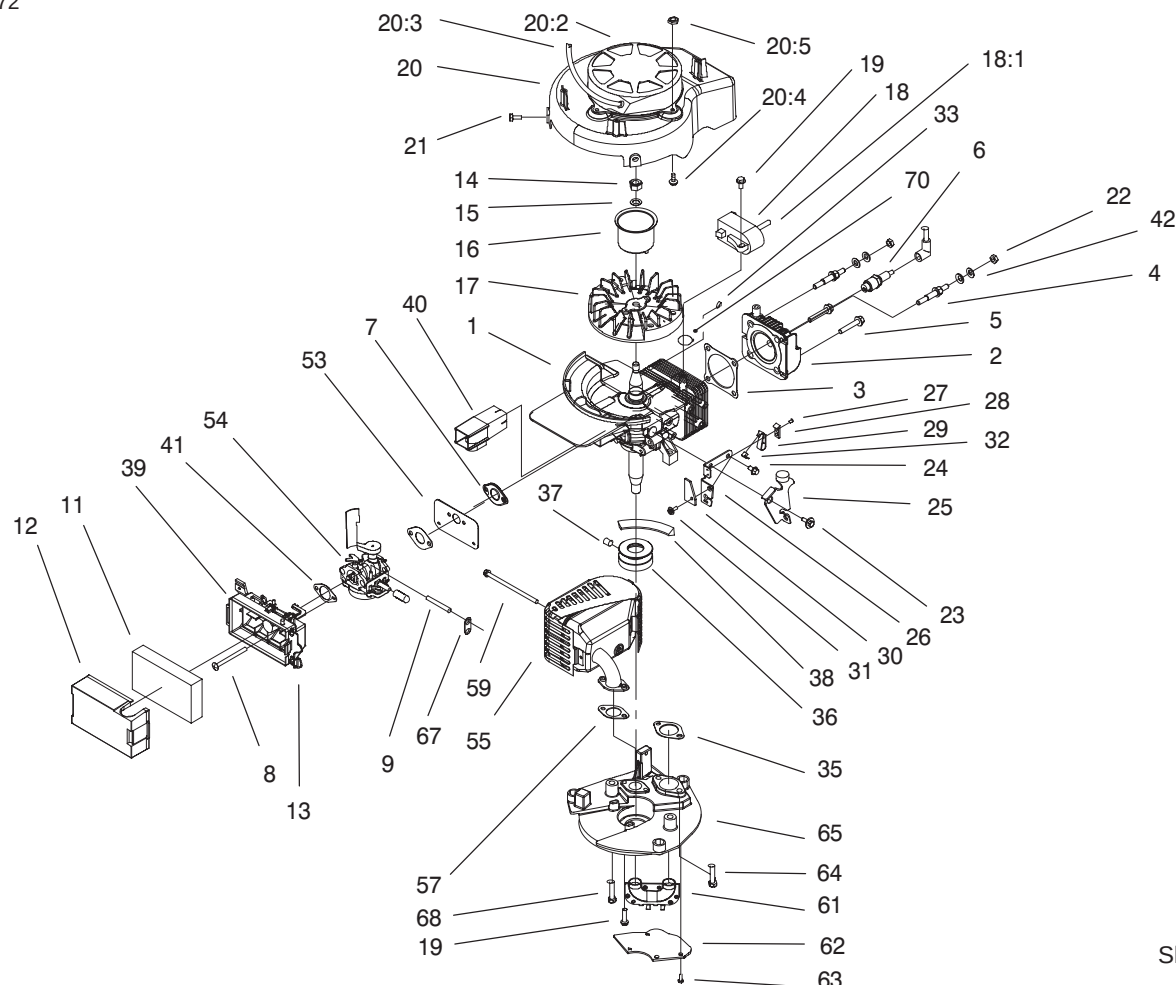


Sheet No.:2

Engine Assembly No. 98-1396

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter Cover
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ignition
18:1	99-6721	1	Clip-High Tension
*18:2	99-6719	1	Lead-High Tension
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil And Decal ASM
20:3	613773	1	Rope
20:4	3290-321	4	Screw-HWH
20:5	3296-2	4	Nut-Lock

Ref. No.	Part No.	Qty.	Description
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate ASM
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Ground Strap
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Brake
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	95-1878	1	Pulley
37	104-0214	1	Screw-Set, Cone Point
38	92-1043	1	V Belt
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
*51	609790	1	Sealer-Loctite 50cc
53	98-1388	1	Shield-Carburetor


* Not illustrated

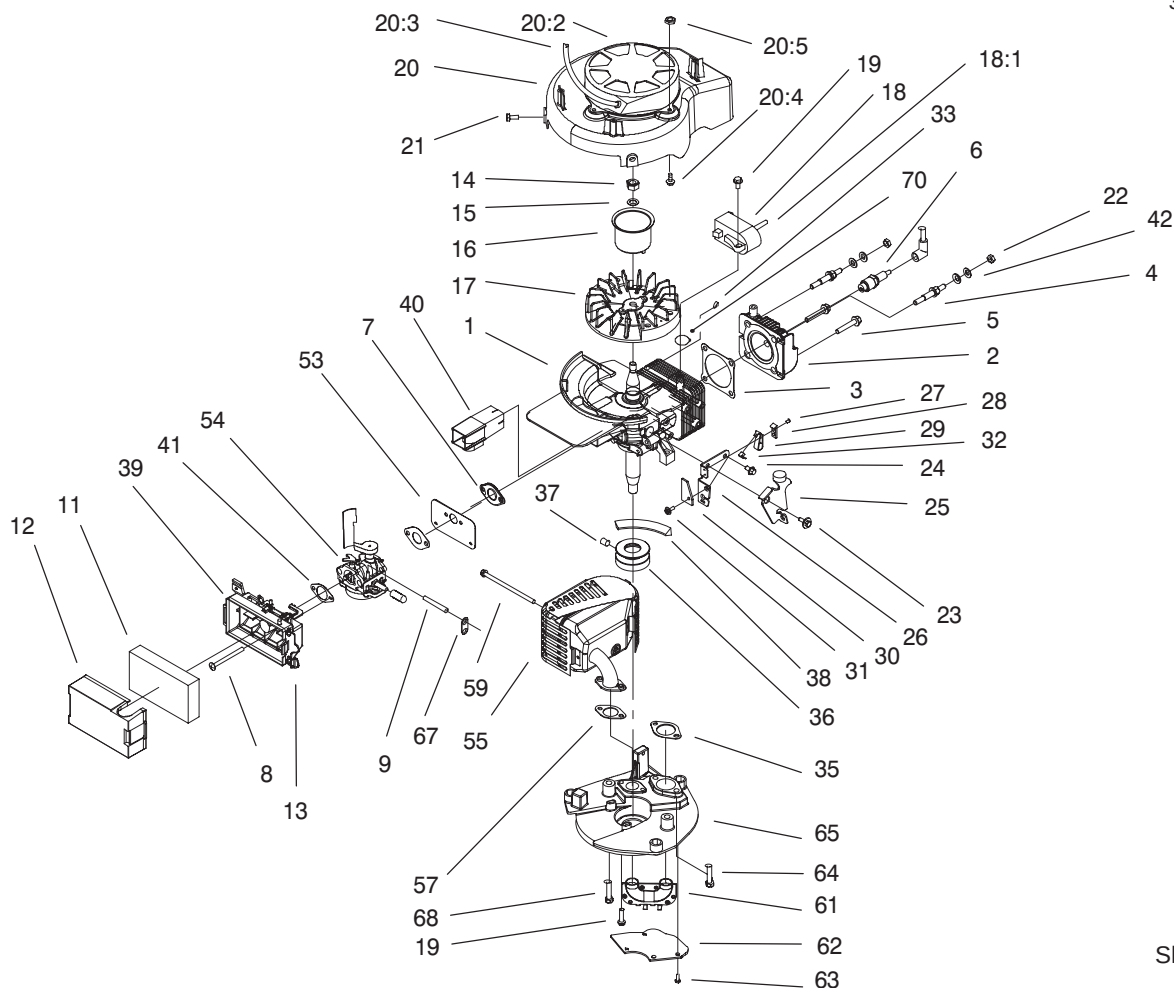

Sheet No.:2

Engine Assembly No. 98-1396 (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
54	98-7042	1	Carburetor ASM With Gaskets				
55	100-9514	1	Muffler And Guard ASM				
57	98-1392	1	Gasket				
59	611228	1	Bolt-Console				
61	98-1557	1	Pipe-Transfer				
62	98-1591	1	Cover-Muffler				
63	700822	4	Screw-HH				
64	322-17	2	Screw-HH				
65	98-1383	1	Plate-Mounting				
67	95-7615	1	Hose-Retainer				
68	613233	2	Screw				
70	317893	1	Strap-Tie				

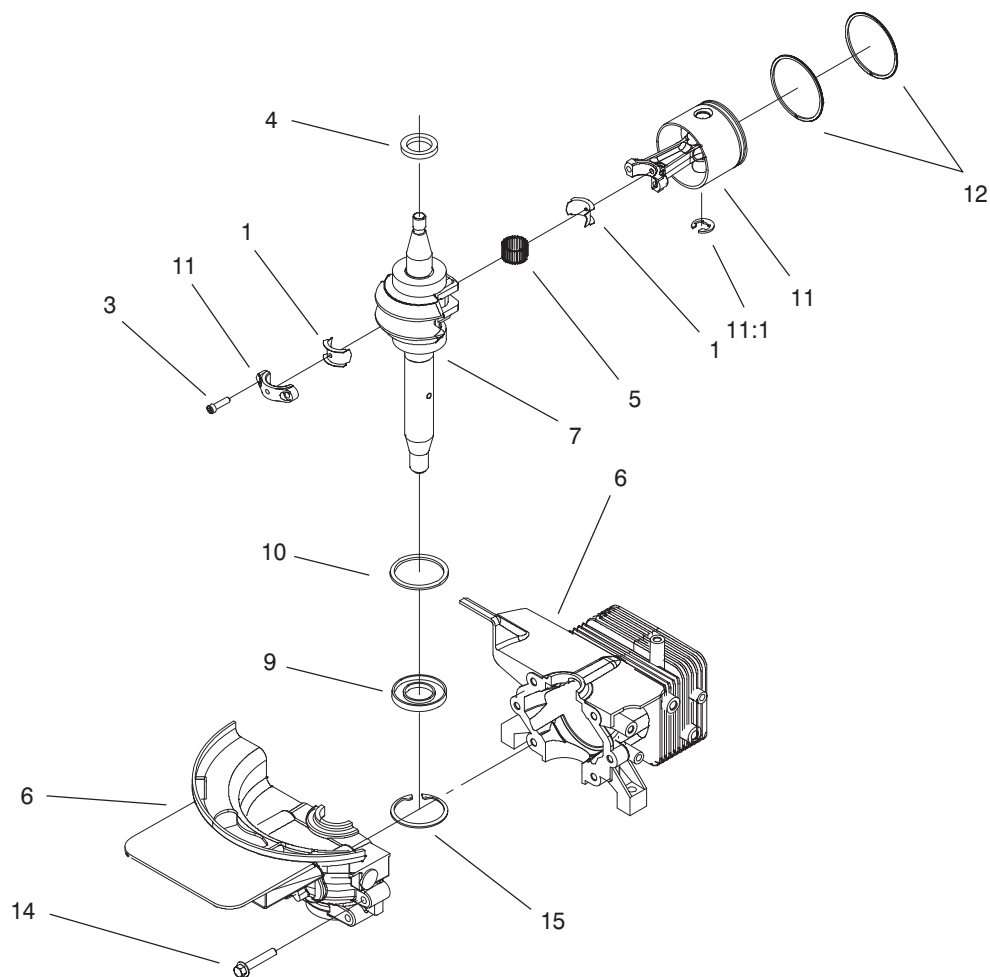


Sheet No.:A1

Short Block Assembly No. 95-7636

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	609790	1	Sealer–Loctite 50cc
*2	610372	1	Sealer–Loctite 6cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
*6:1	602587	1	Plate–Backup, Reed
*6:2	602588	1	Reed–Carburetor
*6:3	612872	2	Screw–HH
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11	100–2915	1	Piston And Connecting Rod ASM
11:1	303712	2	Ring – Retaining
*11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

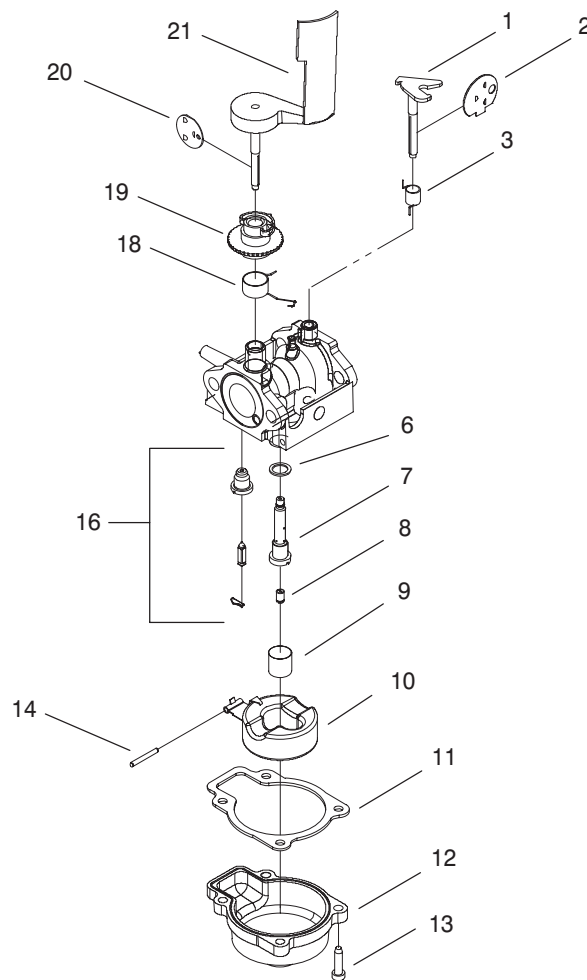

Sheet No.:A2

Carburetor Assembly No. 98-7042

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

LAWN-BOY®