

LAWN-BOY®

GoldPro Series™ Walk-Behind Mower Model No. 10547-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Engine Assembly No. 98–1398	8
Gear Case Assembly No. 92–7869	4	Engine Assembly No. 98–1398	9
Engine And Blade Assembly	5	Engine Assembly No. 98–1398	10
Rear Axle Assembly	6	Short Block Assembly No. 95–7637	11
Handle And Controls Assembly	7	Carburetor Assembly No. 98–7042	12


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	Model No. 89817	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

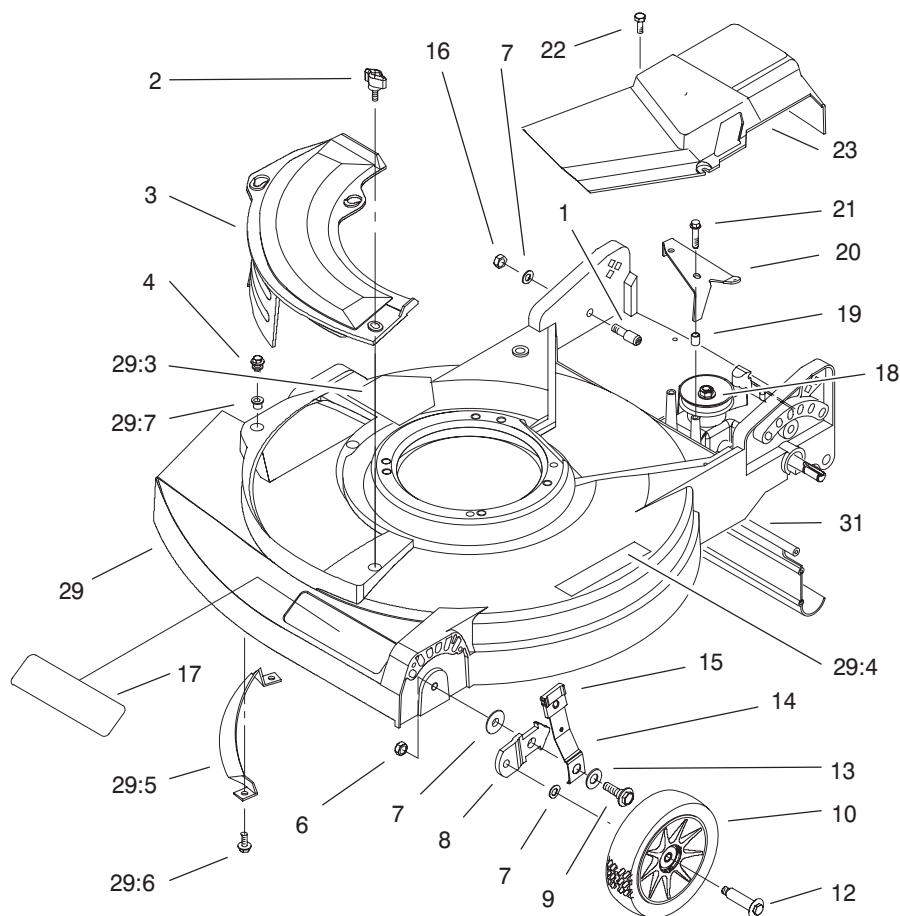


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-9673	2	Screw-Torx	29:3	43-8480	1	Decal-Danger
2	98-8332	1	Knob	29:4	93-7250	1	Decal-Warning
3	92-8630	1	Plate-Mulch	29:5	608175	1	Toe Bar
4	614677	2	Screw- Sems	29:6	46-6811	2	Screw-HWH
6	3296-39	2	Nut-Lock, NI	29:7	94-1610	3	Grommet - Plastic
7	40-1940	6	Washer	31	92-7736	1	Shield - Trailing
8	95-7403-03	2	Bracket-Wheel Height Adjustment	*99	95-7052	1	Plate - Chute Opening
9	92-4856	2	Bolt-Shoulder				
10	684776	2	Wheel & Tire ASM				
12	92-1099	2	Bolt-Shoulder				
13	3290-413	2	Washer-Belleville				
14	92-1006	2	Spring Arm ASM - Front				
15	92-1008	4	Knob-Lever, Height Adjustment				
16	603773	2	Nut				
17	95-7421	1	Decal - Deck				
18	92-7869	1	Gear Case ASM				
19	46-5551	2	Spacer				
20	92-7699-03	1	Bracket-Actuator				
21	32144-110	2	Screw-HWH				
22	12-5450	2	Screw				
23	98-4493	1	Cover - Drive				
*24	614249	1	Tie Strap				
29	99-1565	1	Housing				

* Not illustrated

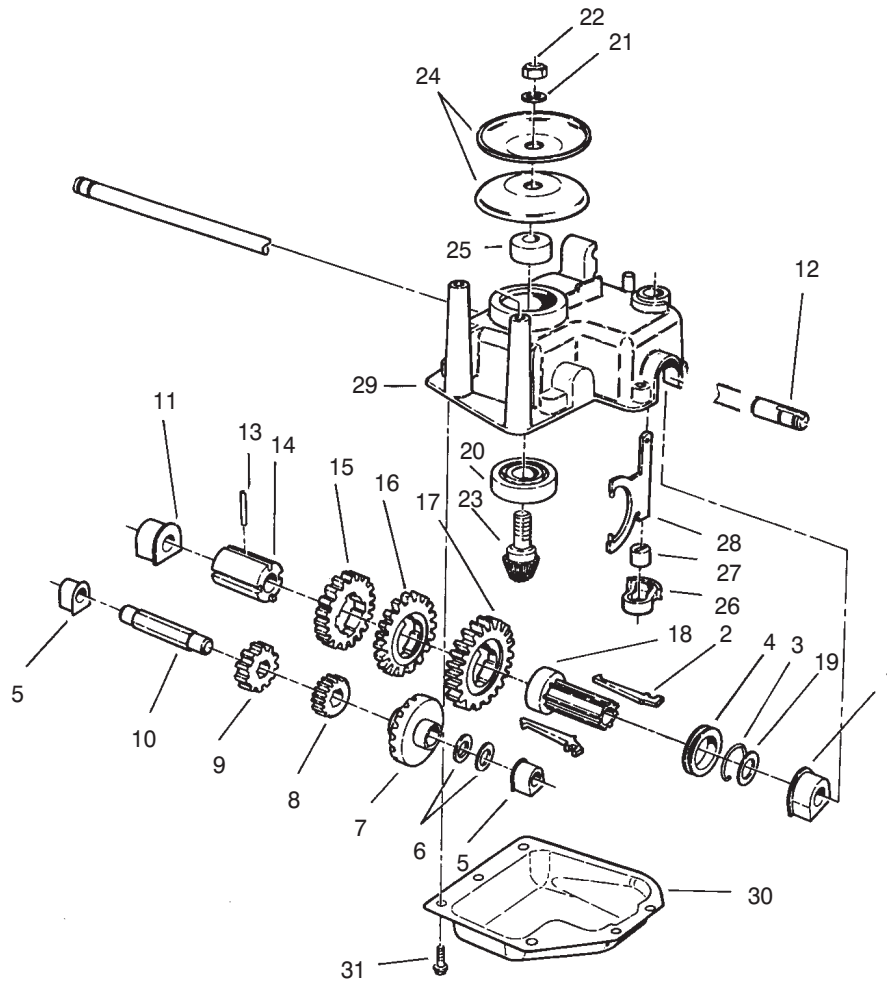


Sheet No.:A1
C-2957

Gear Case Assembly No. 92-7869

Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing- Output
2	76-0760	2	Key-Shift
3	65-5250	1	Clip-Spring
4	76-0770	1	Collar-Shift
5	60-8750	2	Bushing
6	36-4791	2	Washer-Thrust
7	55-3760	1	Gear-Bevel
8	55-3780	1	20 T Pinion
9	55-3800	1	25 T Pinion
10	60-8800	1	Shaft-Intermediate
11	60-8850	1	Bushing-Output
12	65-4770	1	Shaft-Output
13	3285-19	1	Pin-Groove
14	60-8790	1	Sleeve - Gear
15	55-3810	1	39 T Gear
16	55-3790	1	44 T Gear
17	55-3770	1	49 T Gear
18	76-0780	1	Sleeve-Key, Shift
19	36-4780	1	Washer
20	38-7820	1	Bearing-Ball
21	3256-24	1	Washer-Flat
22	3296-5	1	Nut-Lock, NI
23	92-5790	1	Pinion
24	100-1176	2	Pulley-Half
25	92-5791	1	Spacer
26	60-8810	1	Retainer- Shift Fork

Ref. No.	Part No.	Qty.	Description
27	29-9570	1	Bushing-Yoke
28	60-8870	1	Yoke-Shift
29	60-8710	1	Case-Gear, Upper
30	60-8730-03	1	Cover-Gear Case
31	49-2040	6	Screw-Taptite

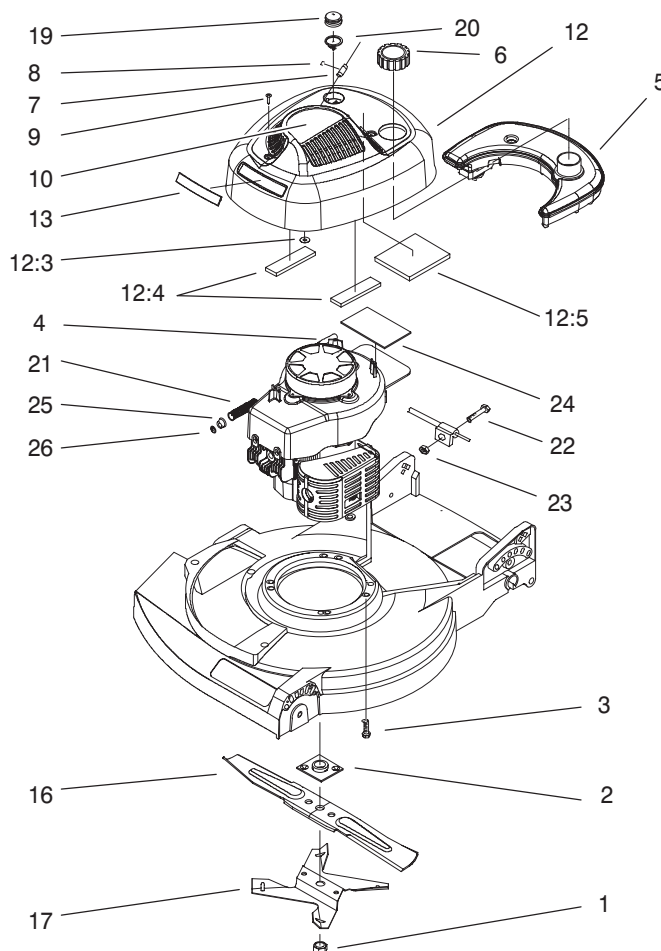


Sheet No.:3

Engine And Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut–Blade
2	677525	1	Plate & Collar ASM
3	98–4480	3	Screw–Sems
4	612782	1	Fuel Line
5	95–1897	1	Tank
6	98–8344	1	Cap ASM–Fuel & Oil
7	47–2480	1	Stop–Rope
8	3290–443	1	Staple
9	95–7621	3	Screw–Pan Sems
10	95–7420	1	Decal – Recoil
12	104–0221	1	Shroud–Electric Start
12:3	613329	2	Push Nut
12:4	99–1522	2	Strip–Foam
12:5	99–1521	1	Strip–Foam
13	92–8615	1	Applique–Shroud
16	612543	1	Blade
17	99–6351–03	1	Fan – Mulching
19	66–7460	1	Bulb–Primer
20	44–2750	1	Body–Primer
21	611214	1	Spring
22	314576	1	Screw
23	306531	1	Nut–Hex
24	98–1386	1	Pad–Foam
25	611509	1	Actuator–Brake Lever
26	611213	1	Retainer

‡ Obtain locally.

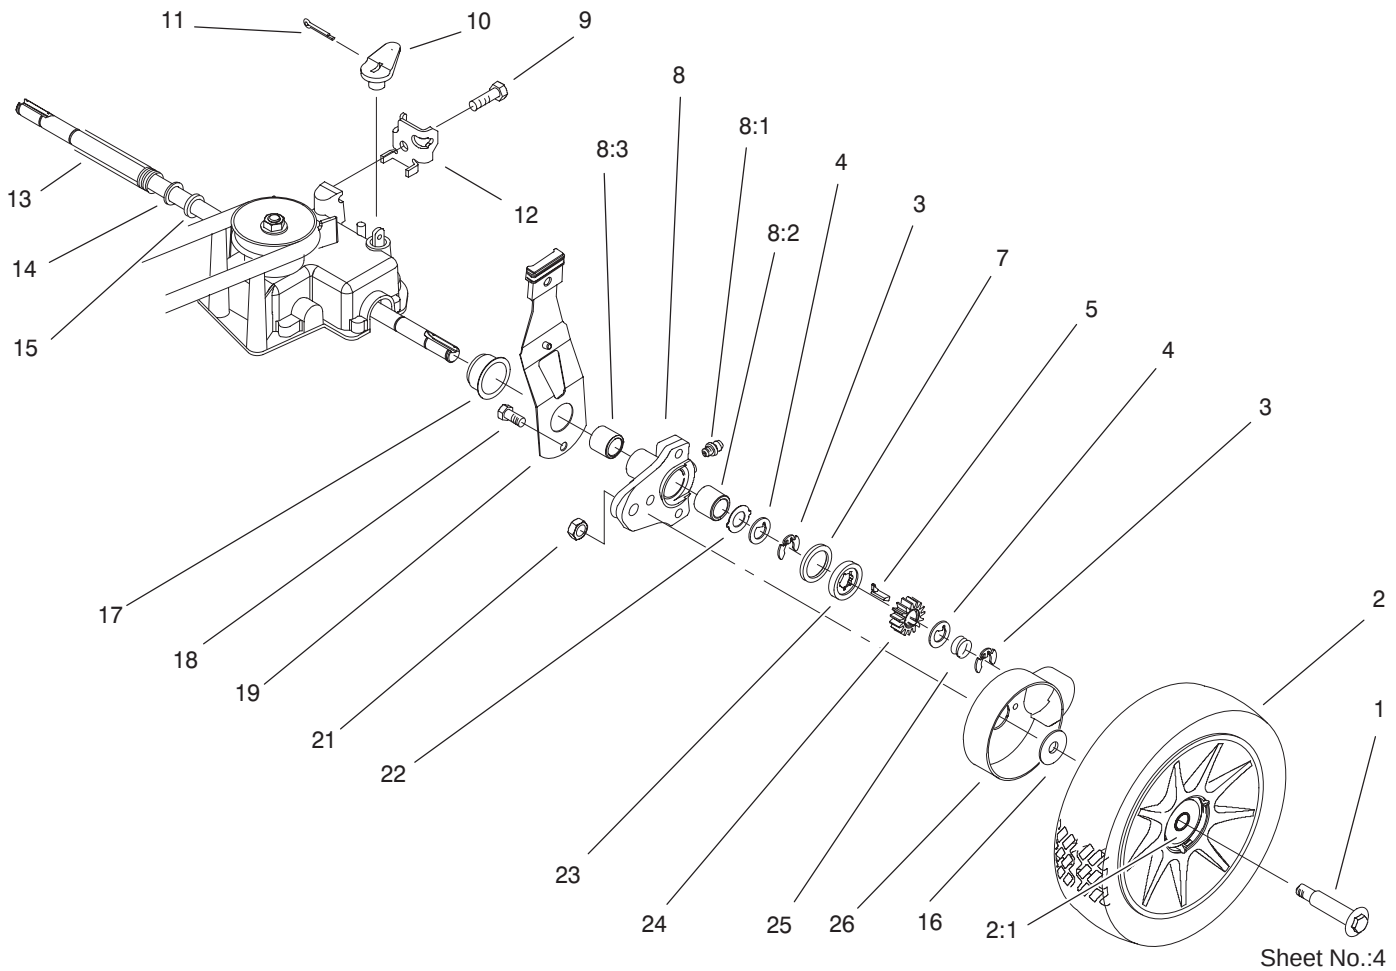


Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
*6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:1	302-56	1	Fitting-Zerk
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
9	32144-70	1	Screw-HH
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Clamp-Cable
13	24-7920	1	Cover-Shaft, Drive
14	303259	1	Washer
15	605255	1	Washer
16	614426	2	Washer-Stepped
17	92-6535	2	Ring - Isolator
18	32144-85	2	Screw-HH
19	92-6540	1	Rear Spring Arm ASM-LH

Ref. No.	Part No.	Qty.	Description
*20	92-6539	1	Rear Spring Arm ASM-RH
21	603773	2	Nut
22	65-4730	2	Washer-Arm, Pivot
23	65-4760	2	Washer-Clutch
24	65-4750	2	Gear-Pinion
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel

* Not illustrated

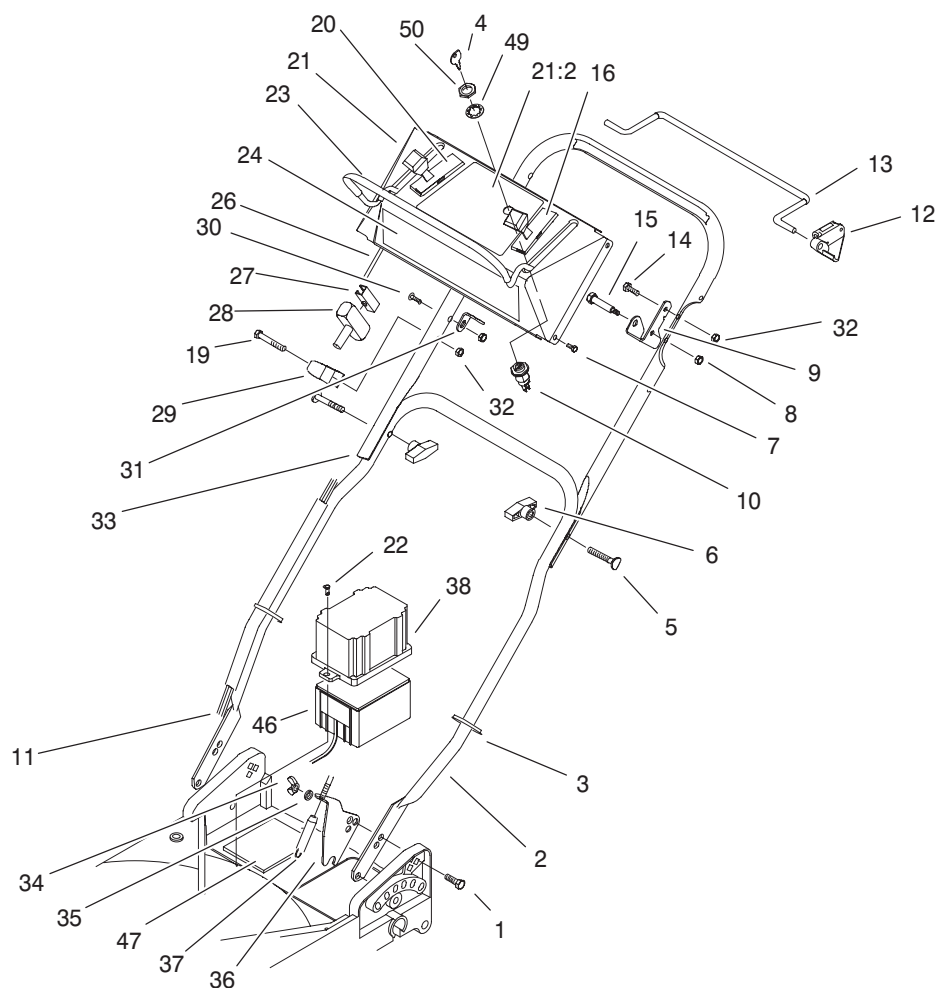


Sheet No.:5

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Screw-CARR	28	612825	1	Handle-Start
2	100-2890-05	1	Handle-Lower	29	93-7383	1	Rope - Guide
3	614249	2	Tie Strap	30	92-2268	1	Screw-Handle
4	98-4486	1	Key - Ignition	31	92-2928	1	Bracket-Anchor, Cable
5	614697	2	Screw	32	3296-73	3	Nut-Lock, NI
6	98-7134	2	Knob-Handle	33	100-2892-05	1	Handle-Upper
7	92-9665	4	Screw	34	32103-29	2	Nut-Wing
8	3296-56	1	Nut-Lock, NI	35	3253-33	2	Washer-Lock/Sp
9	92-1094	1	Bracket-Stop, Bail	36	92-7899-03	1	Bracket-Traction Cable
10	46-5780	1	Switch-Starter	37	100-5981	1	Cable-Traction
11	100-5042	1	Harness-Wire	38	98-4498	1	Case - Battery
12	92-5412	1	Stop-Pivot	46	55-7520	1	Battery Assembly
13	92-1001-03	1	Bail-Control	47	612510	1	Pad-Battery
14	321-4	1	Screw-HH	49	3254-5	1	Washer-Lock/Internal
15	613050	1	Bolt	50	218-461	1	Nut-HH
16	100-5985	1	Control ASM-Throttle	*99	94-9164	1	Charger-battery
19	321-51	1	Screw-HH				
20	100-5984	1	Control ASM-Ground Speed				
21	99-5200	1	Control Panel				
21:2	98-4468	1	Decal - Control Panel				
22	12-5450	2	Screw				
23	92-1093	1	Bail-Engine Control				
24	100-6394	1	Decal-Panel				
26	100-5997	1	Control ASM, Zone				
27	612824	1	Starter-Clip				

* Not illustrated

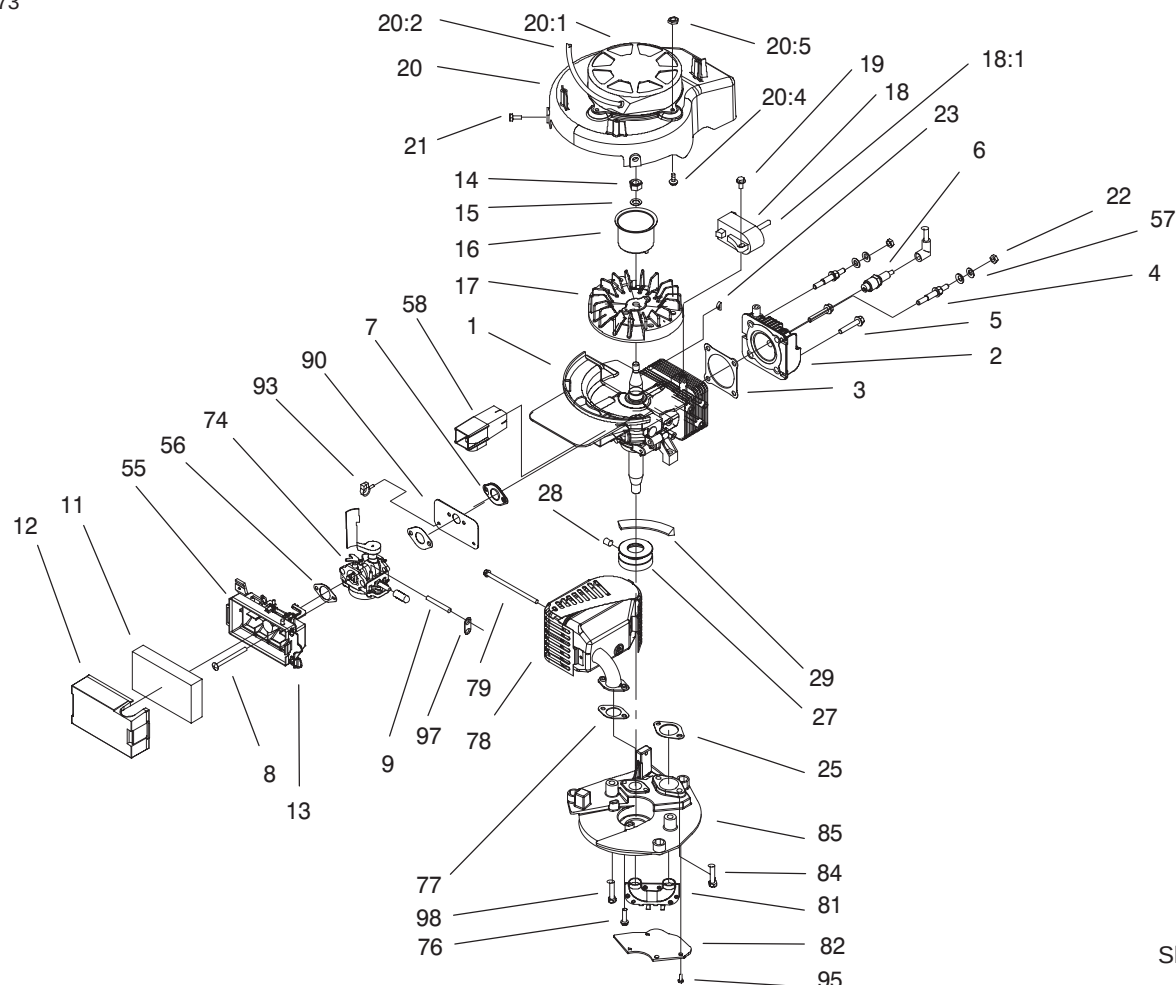


Sheet No.:2

Engine Assembly No. 98-1398

Ref. No.	Part No.	Qty.	Description
1	95-7637	1	ASM-Short Block
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter Cover
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1882	1	Flywheel
18	99-2911	1	Module-Ignition
18:1	99-6721	1	Clip-High Tension Lead
*18:2	99-6719	1	Lead-High Tension
19	613208	4	Screw
20	95-1880	1	Shroud-Recoil
20:1	99-6713	1	Recoil And Decal ASM
20:2	613773	1	Rope
20:4	3290-321	4	Screw-HWH
20:5	3296-2	4	Nut-Lock

Ref. No.	Part No.	Qty.	Description
21	700094	2	Screw-HH
22	146501	2	Nut
23	607199	1	Key
25	95-1778	1	Gasket-Exhaust
27	95-1878	1	Pulley
28	104-0214	1	Screw-Set, Cone Point
29	92-1043	1	V-Belt
55	95-5588	1	Air Base ASM
56	95-7613	1	Gasket-Filter
57	3290-456	4	Washer-Belleville
58	95-5578	1	Tunnel-Inlet
74	98-7042	1	Carburetor ASM With Gaskets
76	613208	2	Screw
77	98-1392	1	Gasket
78	100-9514	1	Muffler And Guard ASM
79	611228	1	Bolt-Console
81	98-1557	1	Pipe-Transfer
82	98-1591	1	Cover-Muffler
84	322-17	2	Screw-HH
85	98-1563	1	Muffler Plate
90	98-1388	1	Shield-Carburetor


* Not illustrated

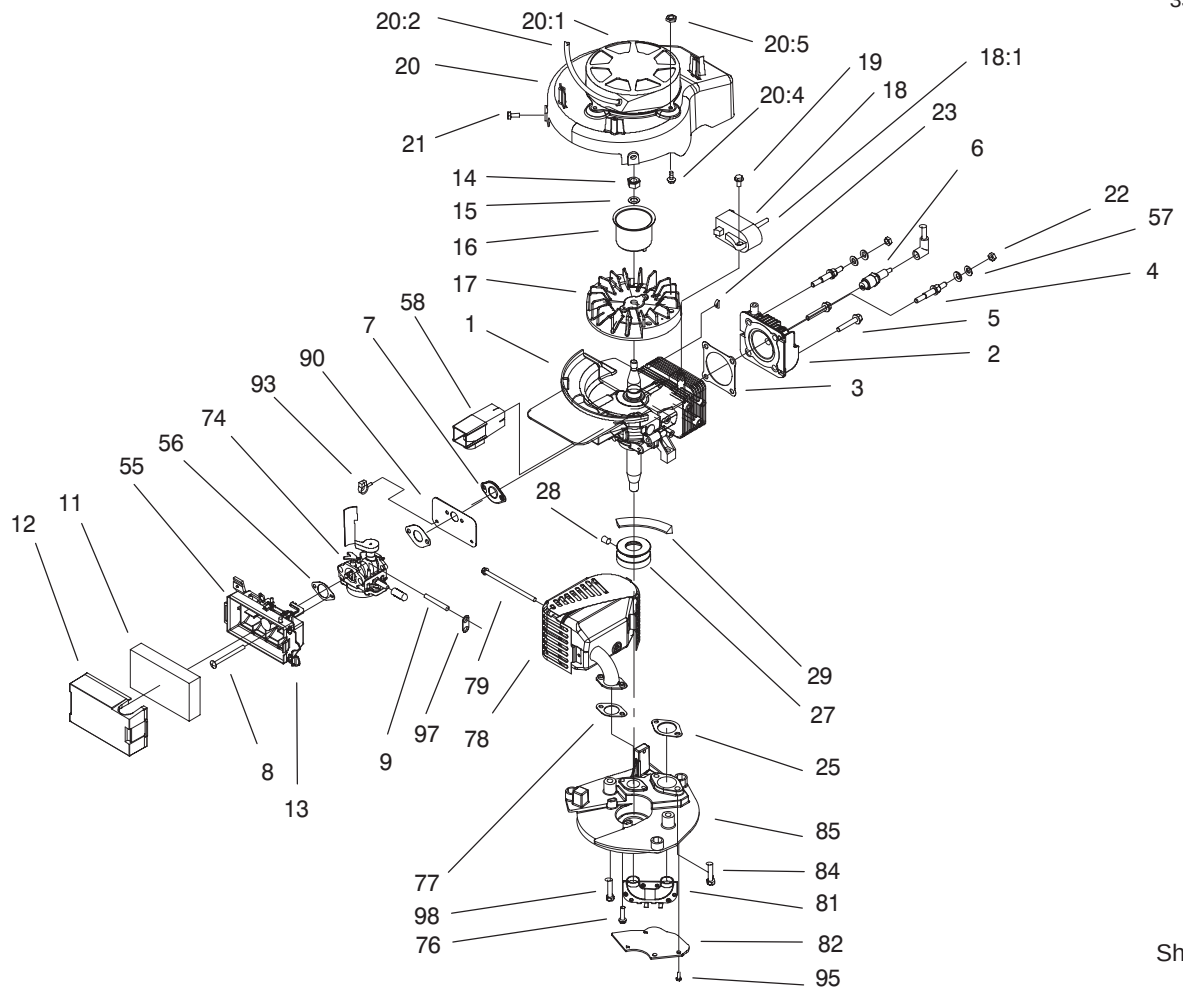

Sheet No.:2

Engine Assembly No. 98-1398 (Continued)

Ref. No.	Part No.	Qty.	Description
93	98-7012	2	Retainer-Wire
95	700822	4	Screw-HH
97	95-7615	1	Hose-Retainer
98	613233	2	Screw

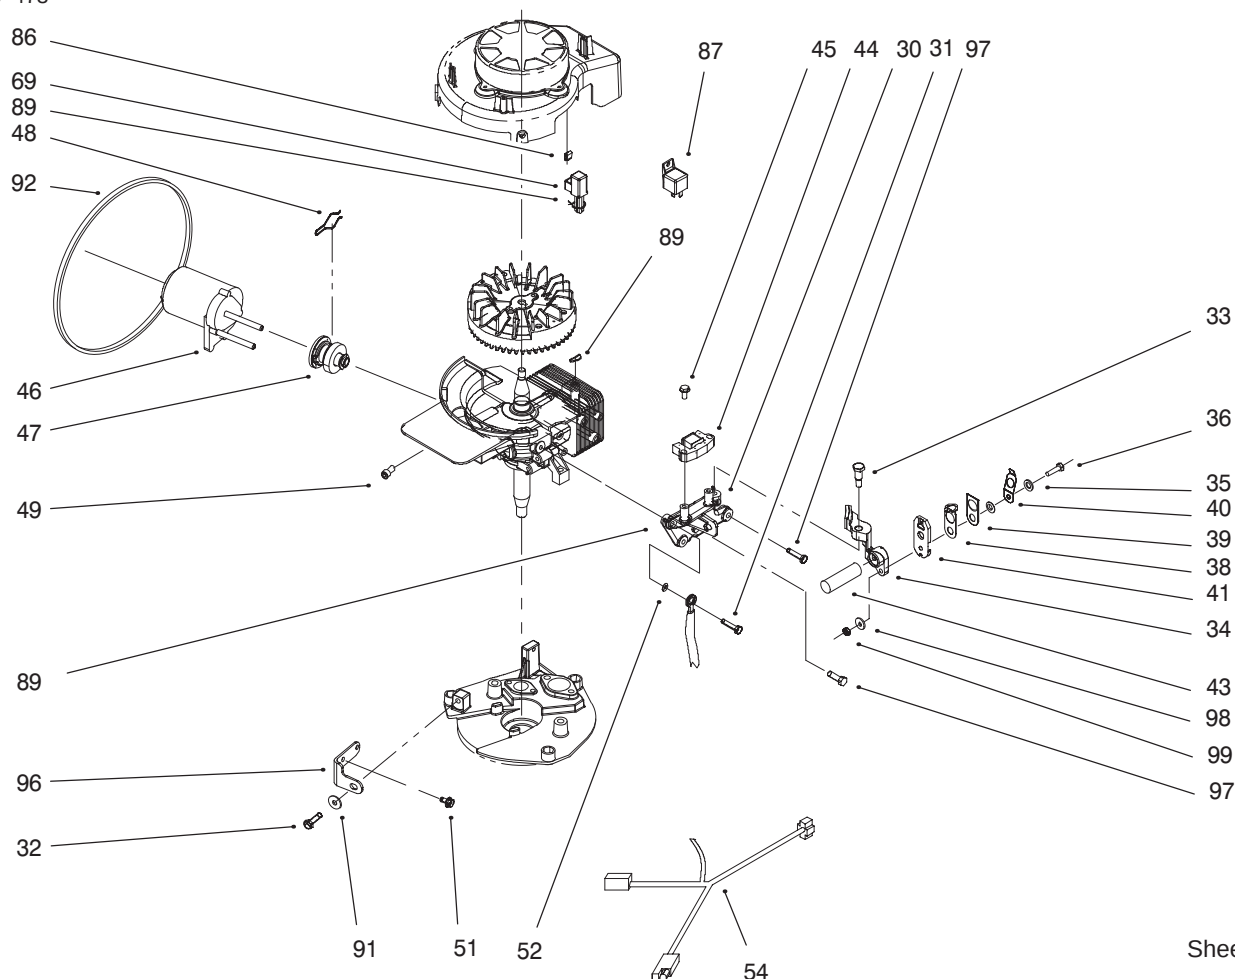


Sheet No.:3

Engine Assembly No. 98-1398 (Continued)

Ref. No.	Part No.	Qty.	Description
30	95-1884	1	Bracket-Alternator/ Brake
31	321-7	2	Screw-HH
32	3234-29	1	Screw-HHF
33	613529	1	Bolt
34	98-7008	1	Brake ASM
35	306407	2	Washer
36	321-6	1	Screw-HH
38	612841	1	Plate-Contact
39	612842	1	Shield
40	93-1239	1	Spring-Contact
41	93-4301	1	Case ASM
42	95-1886	1	Lead - Wire
43	611211	1	Spring-Brake
44	684115	1	Alternator ASM
45	613208	2	Screw
46	98-1370	1	Starter ASM
47	98-1371	1	Pinion ASM
48	613297	1	Spring - Drag
49	3274-10	1	Screw-HSH
51	700094	2	Screw-HH
52	306992	1	Washer-Lock
54	100-2926	1	Wire Harness
*68	609790	1	Sealer-Loctite 50cc
69	100-2927	1	Rectifier
86	98-7003	1	Mounting Clip

Ref. No.	Part No.	Qty.	Description
87	116397	1	Relay, Spdt
89	317893	3	Strap-Tie
91	99-2900	1	Washer - Flat
92	3290-379	1	Tie-Cable
96	98-1390	1	Bracket
97	322-5	2	Screw-HH
98	3255-7	1	Washer-Lock/Ext
99	602315	2	Locknut

* Not illustrated

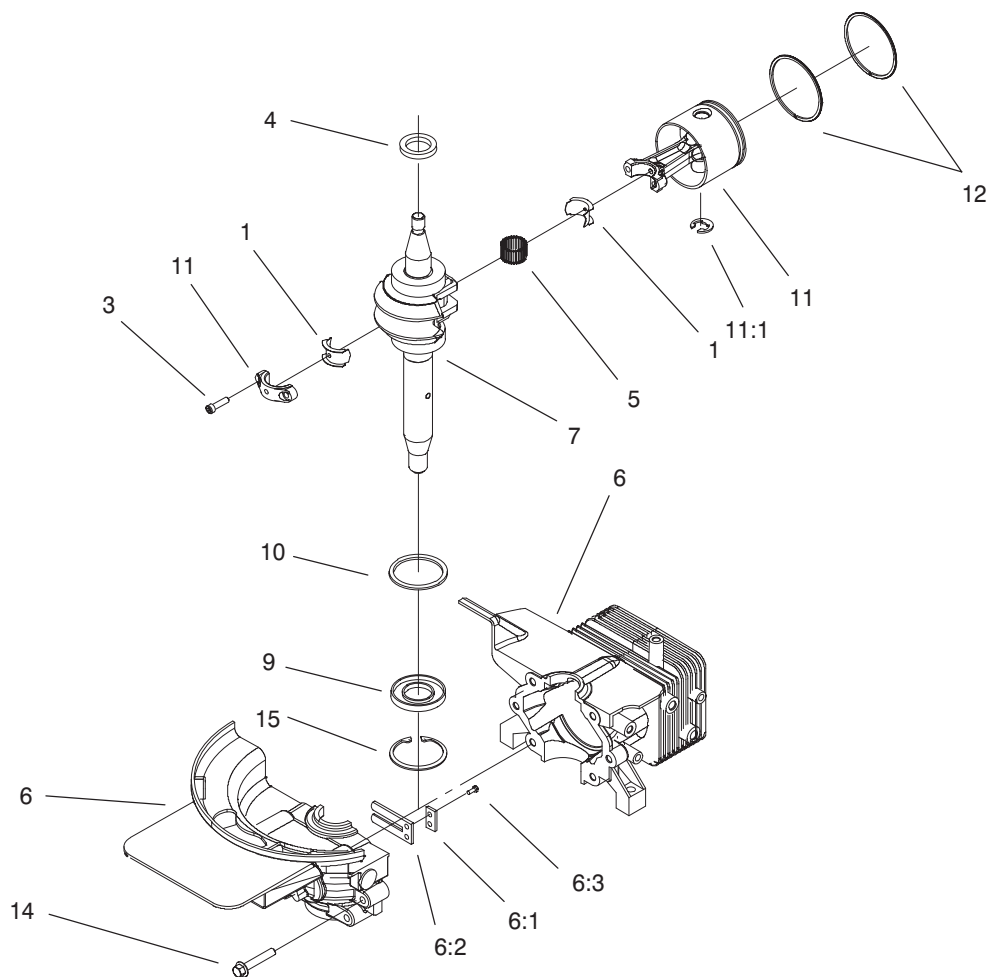


Sheet No.:A1
C-2958

Short Block Assembly No. 95-7637

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	610372	1	Sealer–Loctite 6cc
*2	609790	1	Sealer–Loctite 50cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7633	1	Cylinder And Crankcase ASM
6:1	602587	1	Plate–Backup, Reed
6:2	602588	1	Reed–Carburetor
6:3	612872	2	Screw–HH
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11	95–7629	1	Piston And Connecting Rod ASM
11:1	303712	2	Ring – Retaining
*11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

* Not illustrated

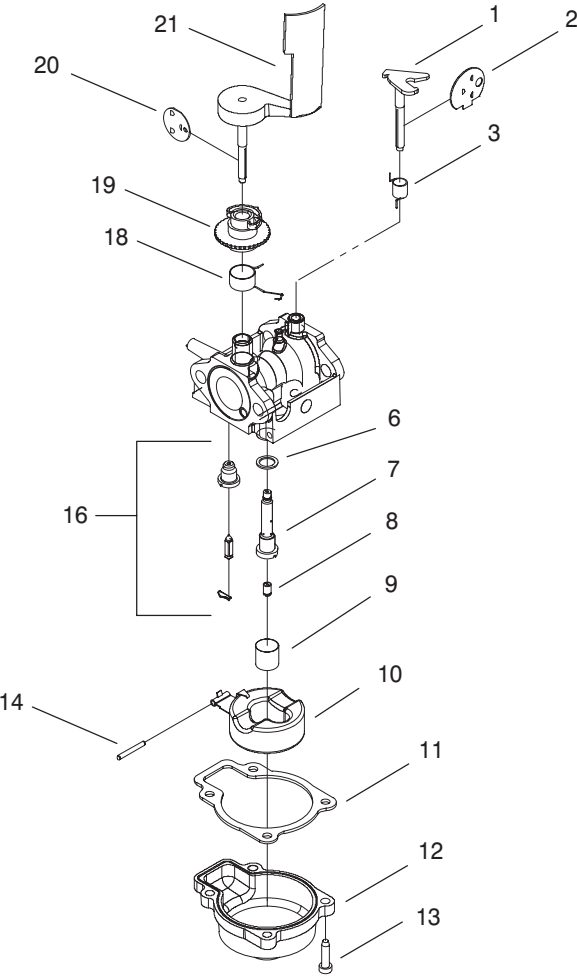

Sheet No.:A2

Carburetor Assembly No. 98-7042

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Valve/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

LAWN-BOY®