

LAWN-BOY®

Silver Series®

Walk-Behind Mower

Model No. 10260-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Housing & Handle Bracket Assembly	3
Engine & Blade Assembly	4
Handles & Controls Assembly	5
Carburetor No. 640118	6
Engine LEV100-345001B	7

Description	Page
Engine LEV100-345001B	8
Engine LEV100-345001B	9
Recoil Starter Assembly 590694	10
Recoil Starter Assembly 590737 (Optional)	11

Accessories

Description	Model / Part No.
Side bagging Kit	Model No. 89817
Rear Bagging Kit	Model No. 89800
Leaf Bag	Model No. 89804


Description	Model / Part No.
Leaf Shredder Kit	Model No. 89860
Leaf Bag Kit w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming


Abbreviation	Meaning
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

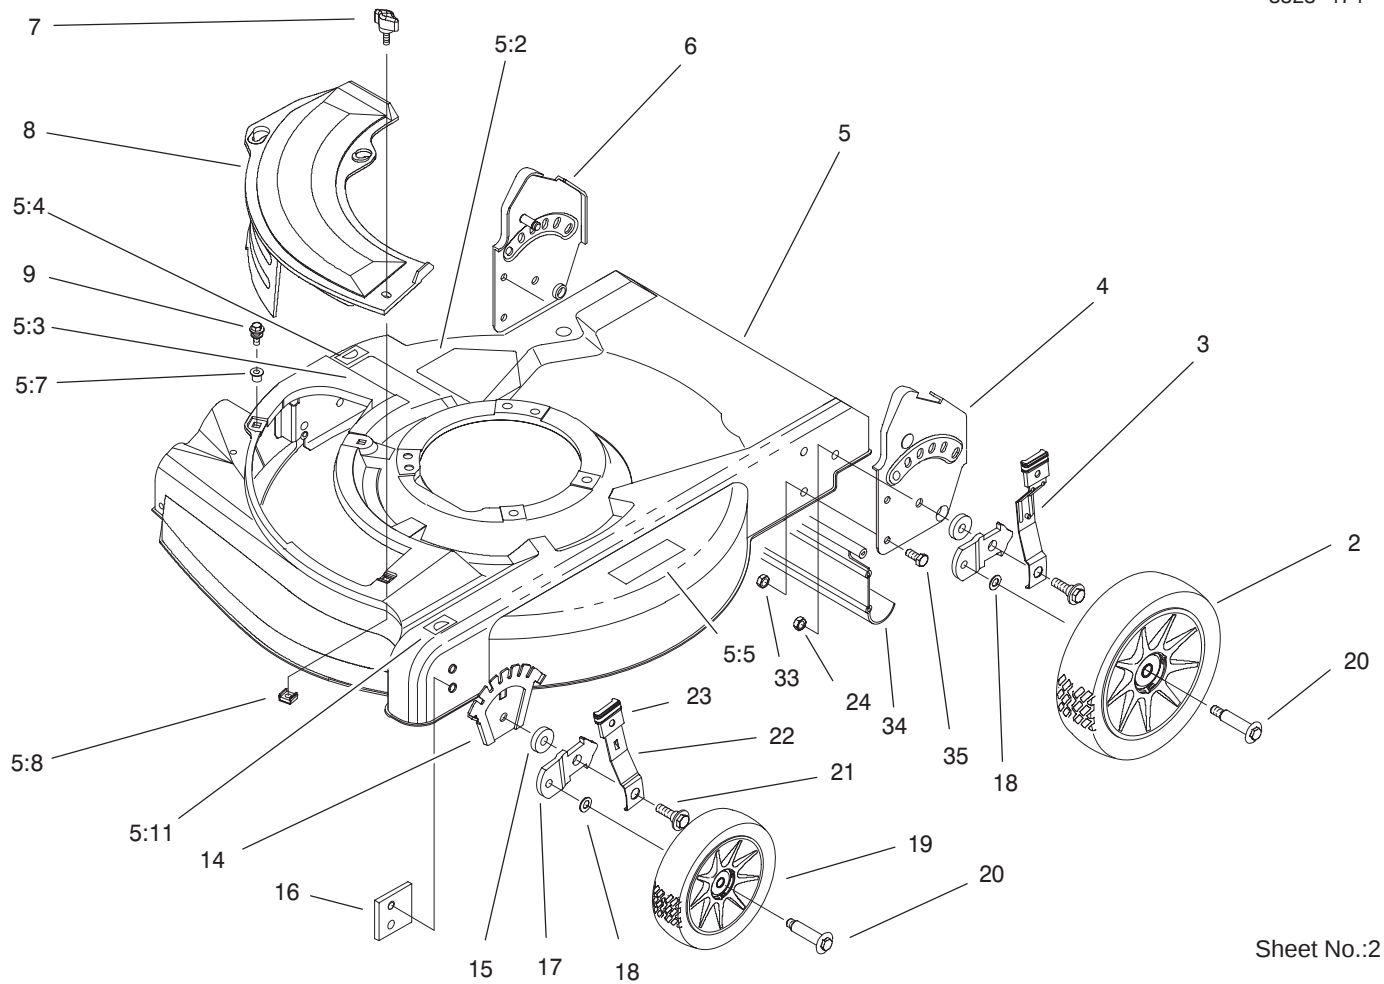

Sheet No.:2

Housing & Handle Bracket Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	95-7437	2	Tire-8"	22	614687	2	Arm-Front Spring
3	92-1005	2	Spring Arm ASM – Rear	23	92-1008	4	Knob-Height Adj. Lever
4	92-7743	1	LH Handle Brkt ASM	24	3296-39	2	Nut-Lock, NI
5	98-4471	1	ASM-Hsg/Baffle w/Decals	33	3296-29	4	Nut-Lock,NI
5:2	43-8480	1	Decal-Danger	34	92-8647	1	Shield – Trailing
5:3	99-6018	1	Decal – Warning	35	322-3	4	Screw-HH
5:4	92-2914	1	Decal – HOC R	*	95-7052	1	Plate – Chute Opening
5:5	93-7250	1	Decal – Safety Instruct				
5:7	94-1610	2	Grommet – Plastic				
5:8	613765	1	Nut-Cage				
5:11	92-2915	1	Decal – HOC L				
6	92-7742	1	RH Handle Brkt ASM				
7	98-8332	1	Knob				
8	92-8630	1	Plate-Mulch				
9	614677	2	Screw- Sems				
14	92-4881-03	2	Plate – Hght Adj				
15	92-4890	4	Washer – Wheel				
16	92-7731	2	Plate – Baffle				
17	95-7403-03	4	Bracket-Wheel Height Adj.				
18	40-1940	4	Washer-Bolt, Wheel				
19	95-7436	2	Tire-6"				
20	92-1099	4	Bolt-Shoulder				
21	614672	4	Bolt-Shoulder				

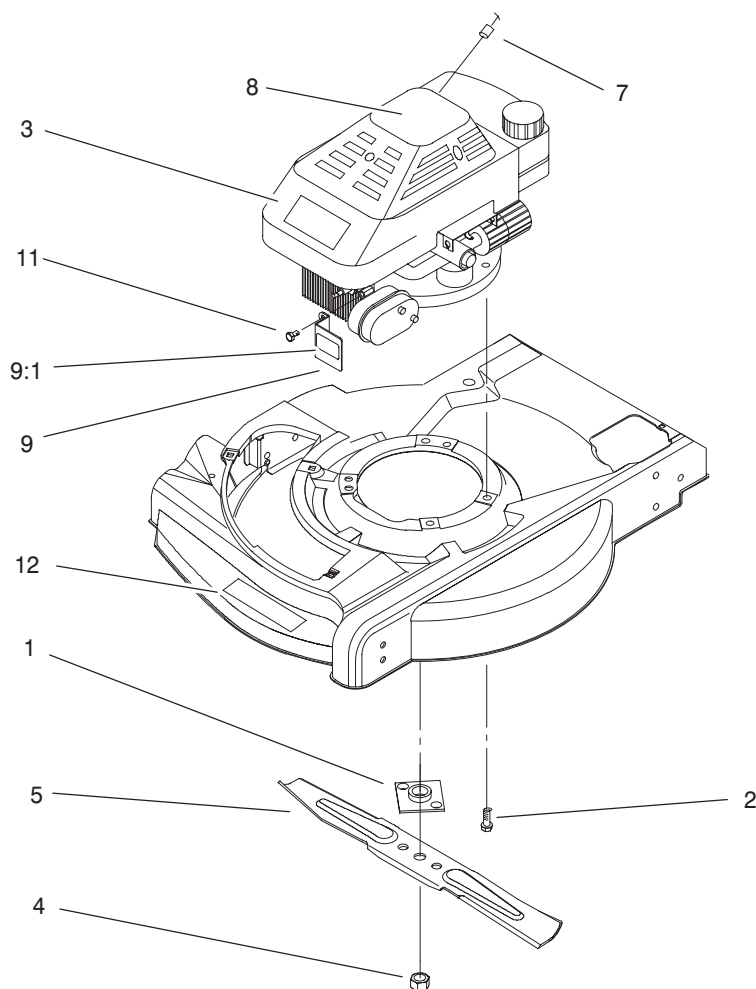


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM
2	95-1726	3	Screw-Taptite w/Patch
3	98-1593	1	Applique
4	603164	1	Nut-Blade
5	612543	1	Blade-21" Whirl
7	92-1701	1	Stop-Rope
8	95-7448	1	Decal - Recoil
9	95-5569	1	Guard - Muffler
9:1	65-2690	1	Decal-Surface, Hot
11	32144-85	1	Screw-HH
12	100-6388	1	Decal-Deck


Ref. No.	Part No.	Qty.	Description

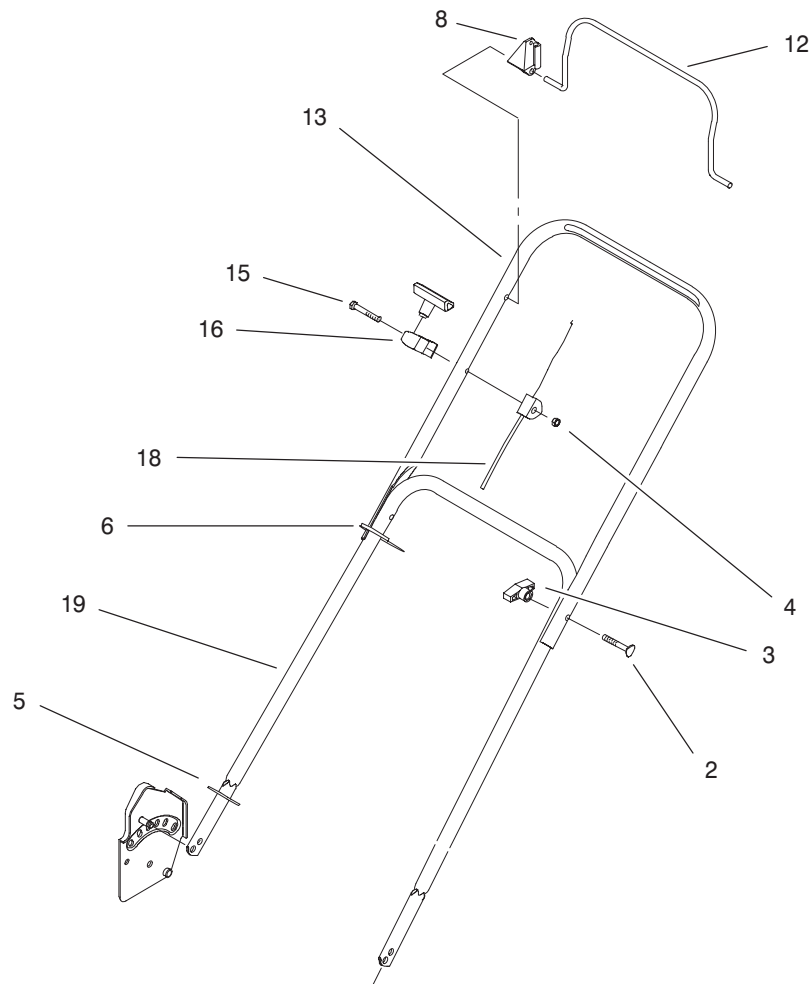

Sheet No.:4

Handles & Controls Assembly

Ref. No.	Part No.	Qty.	Description
2	614697	2	Screw-HH
3	98-7134	2	Knob-Handle
4	3296-73	1	Nut-Lock NI
5	93-3653	1	Guard - Handle
6	614249	2	Strap-Tie, Small
8	92-5412	1	Stop-Pivot
12	93-4184-03	1	Bail - Brake
13	100-2888-05	1	Handle-Upper
15	321-50	1	Screw-HH
16	93-7383	1	Rope - Guide
18	100-5989	1	Brake Cable ASM.
19	614643-05	1	Section-lower Handle

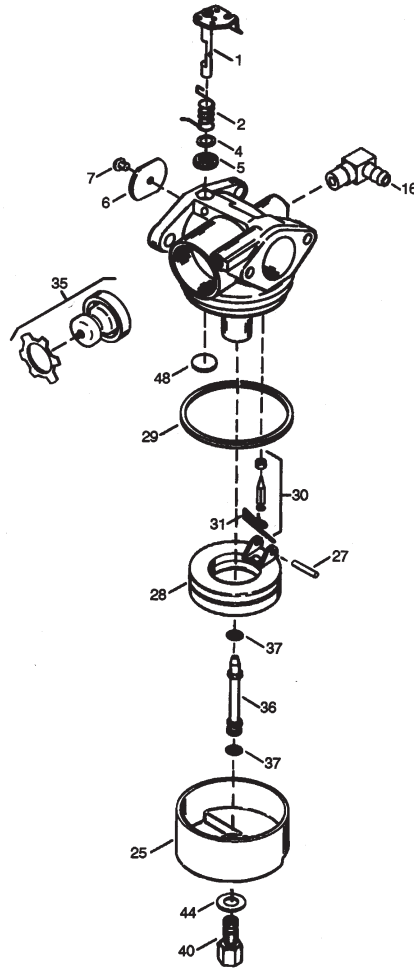


Carburetor No. 640118

Ref. No.	Part No.	Qty.	Description
0	640118	1	Carburetor
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	632504	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632019	1	Float
29	631028	1	Float Bowl "O" Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	36045A	1	Primer Bulb/Retainer Ring
36	632735	1	Main Nozzle Tube
37	632547	2	O-Ring, Main Nozzle Tube
40	632743	1	High Speed Bowl Nut
44	27110	1	Bowl Nut Washer
48	631027	1	Welch Plug, Atmospheric Vent

Ref. No.	Part No.	Qty.	Description

Engine LEV100-345001B

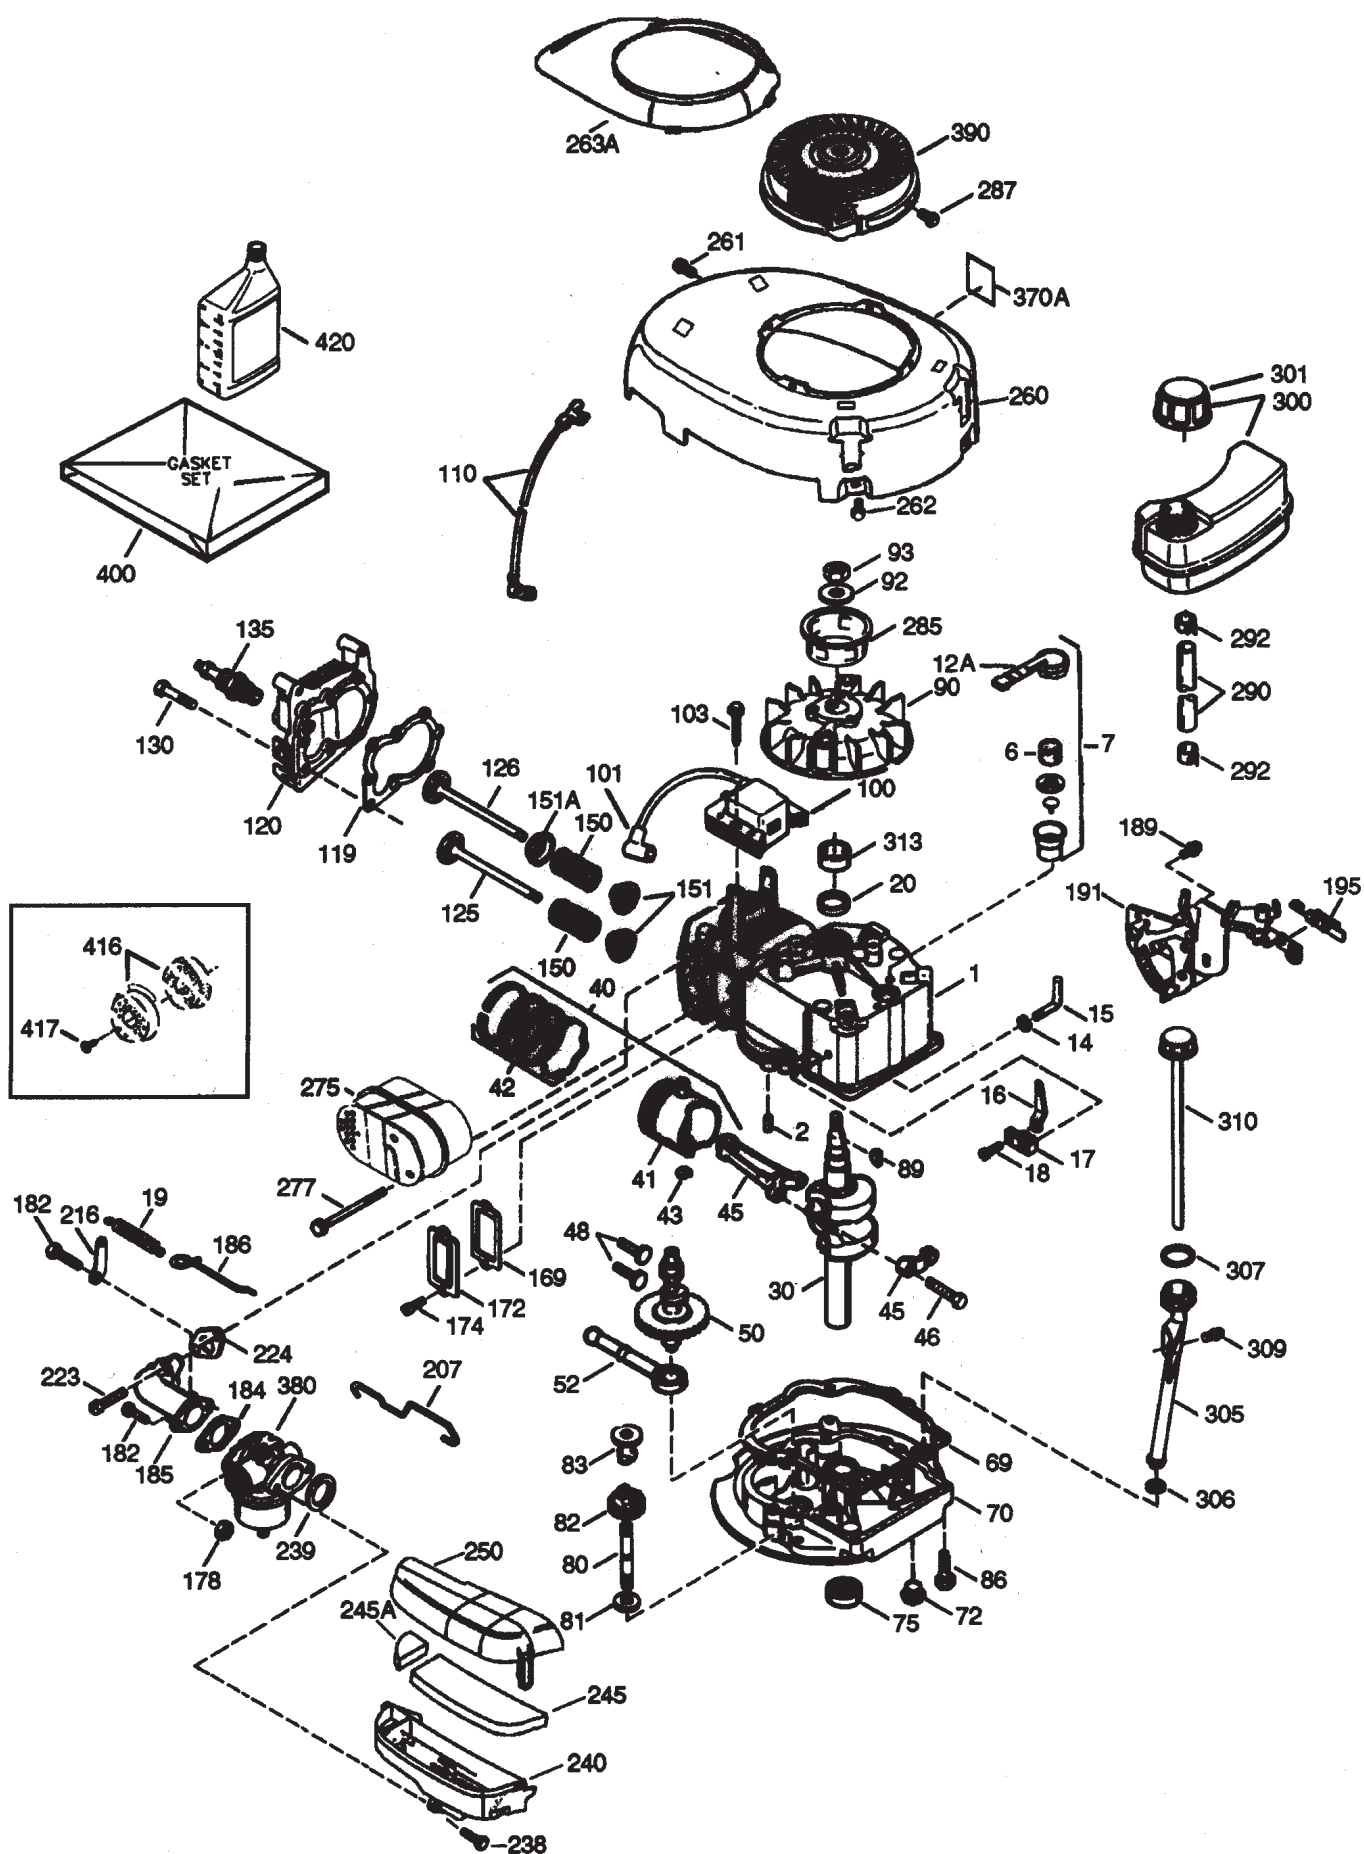


Engine LEV100-345001B

Ref. No.	Part No.	Qty.	Description
1	37027	1	Cylinder (Incl. 2 & 20)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	36557	1	Breather Body ASM
12A	36558	1	Breather Cover & Tube (Incl. 12B)
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	34839A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	651018	1	Screw
19	36281	1	Extension Spring
20	32600	1	Oil Seal
30	37124	1	Crankshaft
40	35544A	1	Piston, Pin & Ring Set (Std.)
40	33545A	1	Piston, Pin & Ring Set (.010" OS)
40	35546	1	Piston, Pin & Ring Set (.020" OS)
41	35541	1	Piston & Pin ASM (Std.) (Incl. 43)
41	35542	1	Piston & Pin ASM (.010" OS) (Incl. 43)
41	35543	1	Piston & Pin ASM (.020" OS) (Incl. 43)
42	35547A	1	Ring Set (Std.)
42	35548A	1	Ring Set (.010" OS)
42	35549	1	Ring Set (.020" OS)
43	20381	2	Piston Pin Retaining Ring
45	36777	1	Connecting Rod ASM (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	27241	2	Valve Lifter
50	37032	1	Camshaft (MCR)
52	29914	1	Oil Pump ASM
69	35261	1	Mounting Flange Gasket
70	36995	1	Mounting Flange (Incl. 72 thru 83)
72	36083	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear ASM (Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw
89	611004	1	Flywheel Key
90	611112	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443B	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	651007	2	Screw, Torx T-15
110	37047	1	Ground Wire
119	37028	1	Cylinder Head Gasket

Ref. No.	Part No.	Qty.	Description
120	36788	1	Cylinder Head
125	36779	1	Exhaust Valve (Std.) (Incl. 151)
125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)
126	36781	1	Intake Valve (Std.) (Incl. 151)
126	36782	1	Intake Valve (1/32" OS) (Incl. 151)
130	6021A	6	Screw
135	35395	1	Resistor Spark Plug (RJ19LM)
150	35991	2	Valve Spring
151	31673	2	Valve Spring Cap
151A	40017	1	Intake Valve Seal
169	36783	1	Valve Cover Gasket
172	36784	1	Valve Cover
174	30200	2	Screw
178	29752	2	Nut & Lock Washer
182	6201	2	Screw
184	26756	1	Carburetor To Intake Pipe Gasket
185	36785	1	Intake Pipe
186	32653	1	Governor Link
189	650839	2	Screw
191	36559	1	S.E. Brake Bracket (Incl. 195)
195	610973	1	Terminal
207	34336	1	Throttle Link
216	33086	1	R.P.M. Adjusting Lever
223	650451	2	Screw
224	36786	1	Intake Pipe Gasket
238	650806	2	Screw
239	34338	1	Air Cleaner Gasket
240	37115	1	Air Cleaner Body
245	37116	1	Air Cleaner Filter
245A	37117	1	Air Cleaner Filter
250	37118	1	Air Cleaner Cover
260	37125	1	Blower Housing
261	30200	2	Screw
262	650831	2	Screw
263A	36758	1	Starter Grill
275	36790	1	Muffler
277	650988	2	Screw
285	35000A	1	Starter Cup
287	650926	2	Screw
290	34357	1	Fuel Line
292	26460	2	Fuel Line Clamp
300	35586	1	Fuel Tank (Incl. 292 & 301)
301	36246	1	Fuel Cap
305	35577	1	Oil Fill Tube
306	36996	1	"O"-Ring
307	35499	1	"O"-Ring
309	650562	1	Screw
310	36801	1	Dipstick
313	34080	1	Spacer
370A	36261	1	Lubrication Decal
380	640118	1	Carburetor (Incl. 184)


Ref. No.	Part No.	Qty.	Description
390	590694	1	Rewind Starter (NOTE: This engine could have been built with 590737 starter.
400	37029	1	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #'s 26756 (1), 28833 (1), 34338 (1), 35261 (1), 36783 (1), 36786 (1), 36832 (1), 37128 (1).
416	36085	1	Spark Arrestor Kit (Incl. 417) (Optional)
417	650760	1	Screw (Optional)
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)

Ref. No.	Part No.	Qty.	Description

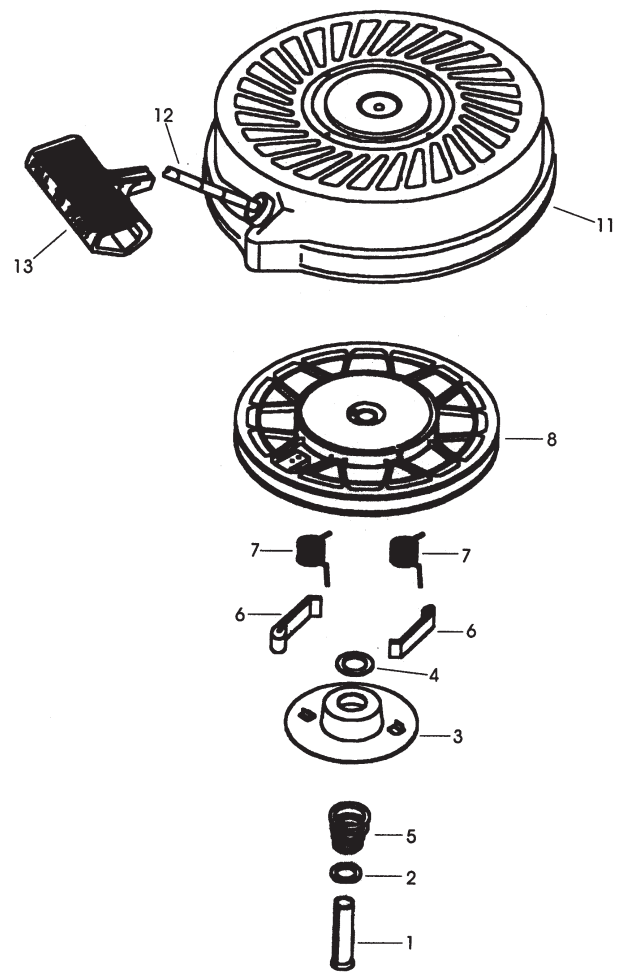

Recoil Starter Assembly 590694

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	590694	1	Recoil Starter				
1	590599A	1	Spring Pin (Incl. 4)				
2	590600	1	Washer				
3	590696	1	Retainer				
4	590601	2	Washer				
5	590697	1	Brake Spring				
6	590698	2	Starter Dog				
7	590699	2	Dog Spring				
8	590700	1	Pulley & Rewind Spring ASM				
11	590695	1	Starter Housing ASM (40 degree grommet)				
12	590535	1	Starter Rope (98" X 9/64" dia.)				
13	590701	1	Starter Handle				

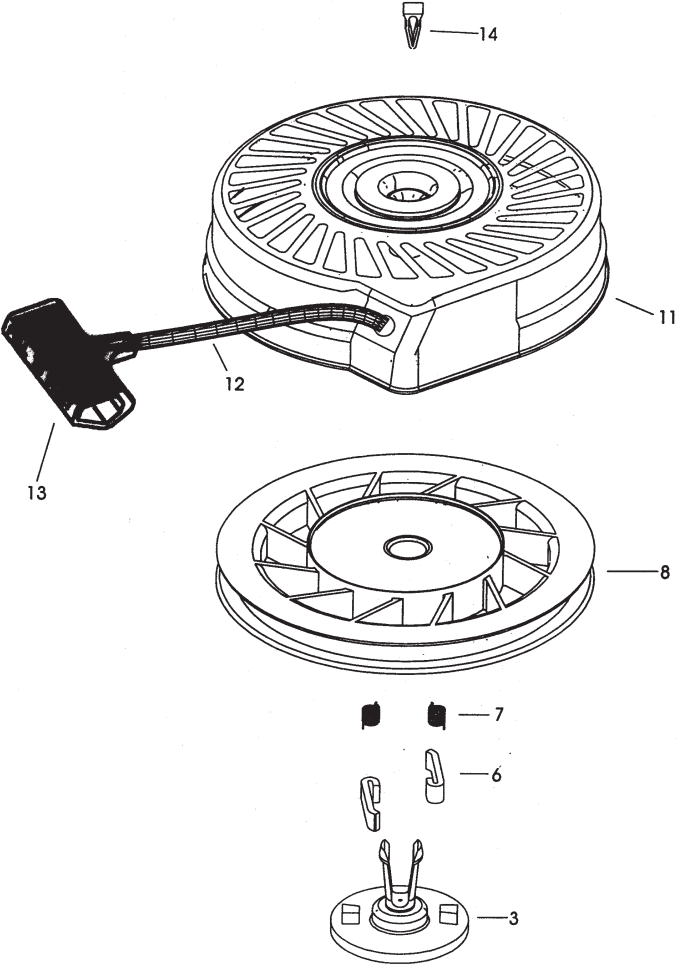

Recoil Starter Assembly 590737 (Optional)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	590737	1	Rewind Starter				
3	590740	1	Retainer				
6	590616	2	Starter Dog				
7	590617	2	Dog Spring				
8	590618A	1	Pulley & Rewind Spring ASM				
11	590637A	1	Starter Housing ASM (40 degree grommet)				
12	590535	1	Starter Rope (Length 98" x 9/64" dia.)				
13	590701	1	Starter Handle				
14	590741	1	Locking Tab				

