




Z-SPRAY®

Model No. ZSL3620—Serial No. 406294345 and Up

Picture below may not reflect actual product.

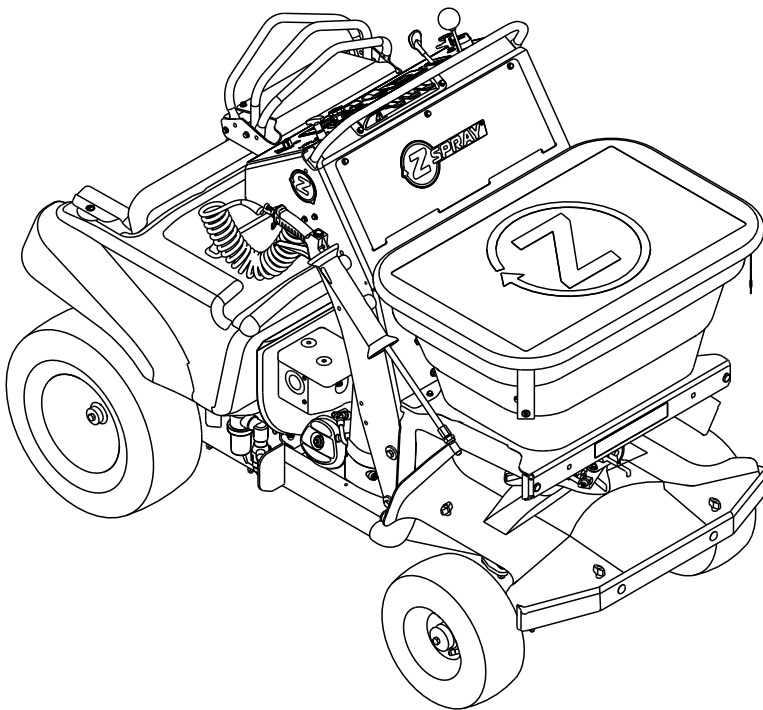

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly	4
Control Tower W/Decals Assembly	6
Knee Pad Assembly	8
Steering Assembly	10
Steering Linkage Assembly No. 126-7185	12
Spray System Assembly	14
Sprayer Tank Assembly	16
Strainer Assembly No. 126-4358	18
Control Valve Manifold and Hose Assembly	20
Control Valve Manifold Assembly No. 135-6362	22
Left Nozzle Assembly No. 126-3667	24
Right Nozzle Assembly No. 126-3669	26
Center Nozzle Assembly No. 126-3668	28
Spreader Assembly	30
Spreader Hopper Assembly	32
Side Deflector Assembly	34
Engine Assembly	36
Ground Drive Assembly	38
Transaxle Cover Assembly No. 126-1462	40
Electrical Assembly	42

Main Frame Assembly

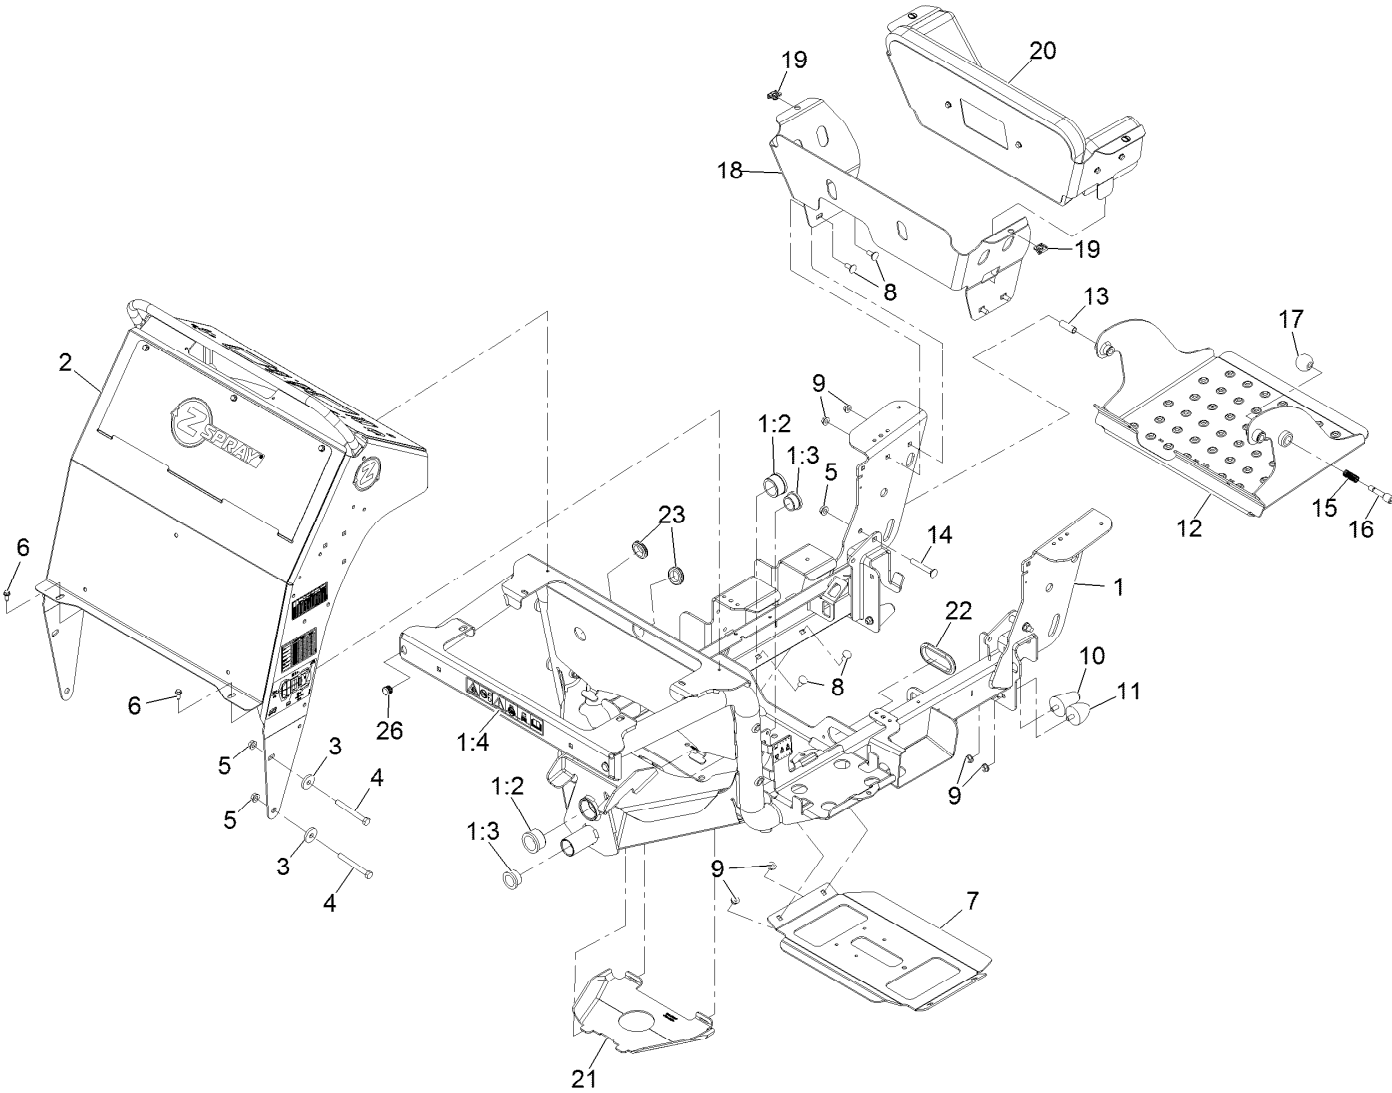


Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2788	1	Frame ASM	12	126-0435	1	Operator Platform ASM
1:2	126-3008	2	Bearing-Flanged	13	126-0434	2	Bushing-Pivot, Platform
1:3	126-3002	2	Bearing-Flanged	14	126-0702	2	Screw-CARR
1:4	126-4994	1	Decal-Down, Tie	15	114-5348	1	Spring
2	135-6467	1	Control Tower ASM	16	119-8650	1	Pin-Latch
3	126-3875	4	Washer	17	1-603175	1	Knob-Ball
4	126-2661	4	Screw-HH	18	126-1234-03	1	Mount-Pad, Knee
5	135-2882	6	Nut-HF	19	119-1730	2	Receptacle-Clip, Mini
6	32144-10	2	Screw-HWH 1/4-20 X .62	20		1	ASM-Pad ●
7	126-1415	1	Guard-Lower	21	126-2567	1	Shield-Dust
8	126-0695	8	Screw-CARR	22	237-164	2	Grommet
9	135-2881	12	Nut-HF	23	240-5	2	Grommet
10	114-1925	2	Bumper-Rubber	26	126-5147	2	Plug-Tube
11	114-1926	2	Bumper-Rubber				

● Not serviced separately


Control Tower W/Decals Assembly

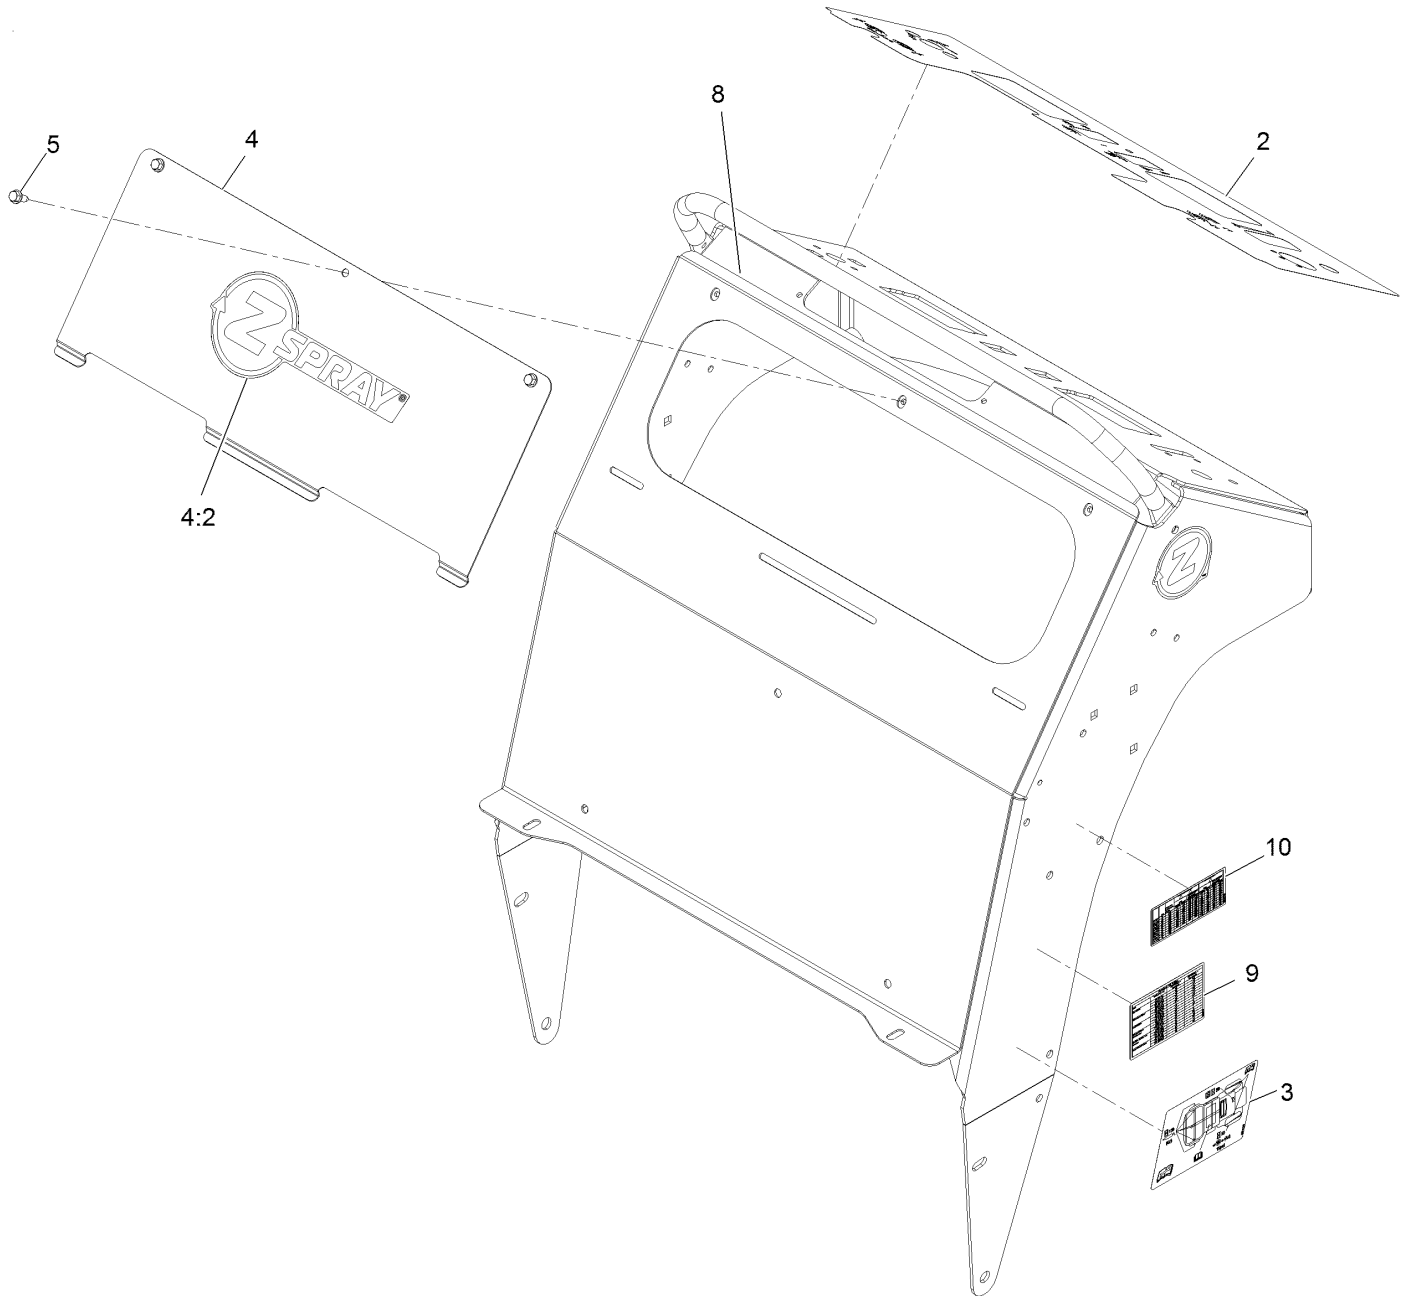

Control Tower W/Decals Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-7247	1	Decal-Control	5	32144-10	3	Screw-HWH 1/4-20 X .62
3	126-5186	1	Decal-Service Aid	8	142-3051	2	Decal-Z-Logo
4	142-2758	1	Access Panel W/ Decal	9	142-2770	1	Decal-Spread Chart
4:2	142-3053	1	Decal-Z-Spray	10	142-2769	1	Decal-Spray Chart


Knee Pad Assembly

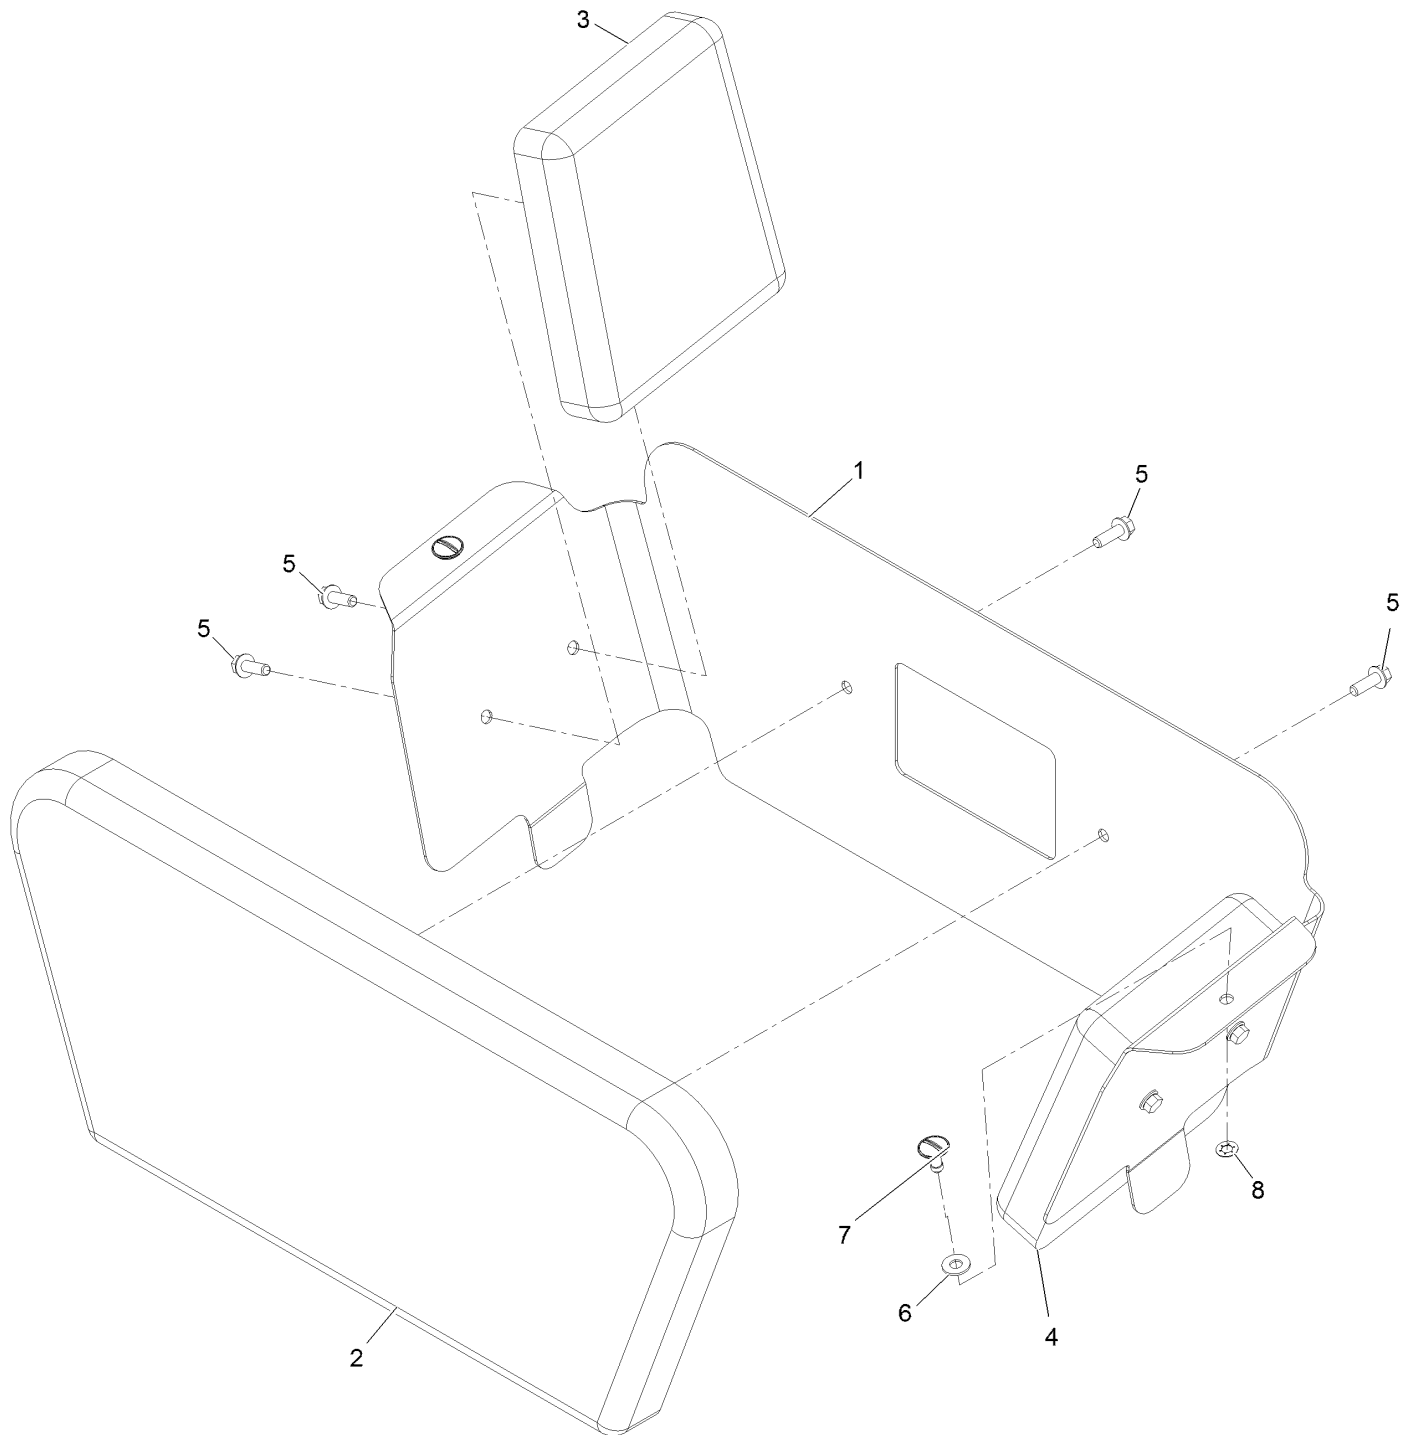

Knee Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	6	360-0140	2	Washer-Flat
2	142-2751	1	Pad-Knee, Center	7	119-1728	2	Stud-1/4 Turn
3	126-1250	1	Pad-Knee, LH Side	8	119-1729	2	Retainer-Stud
4	126-2773	1	Pad-Knee, RH Side				
5	117-8304	6	Screw-Hex Flange 1/4-20 X 3/4				

Steering Assembly

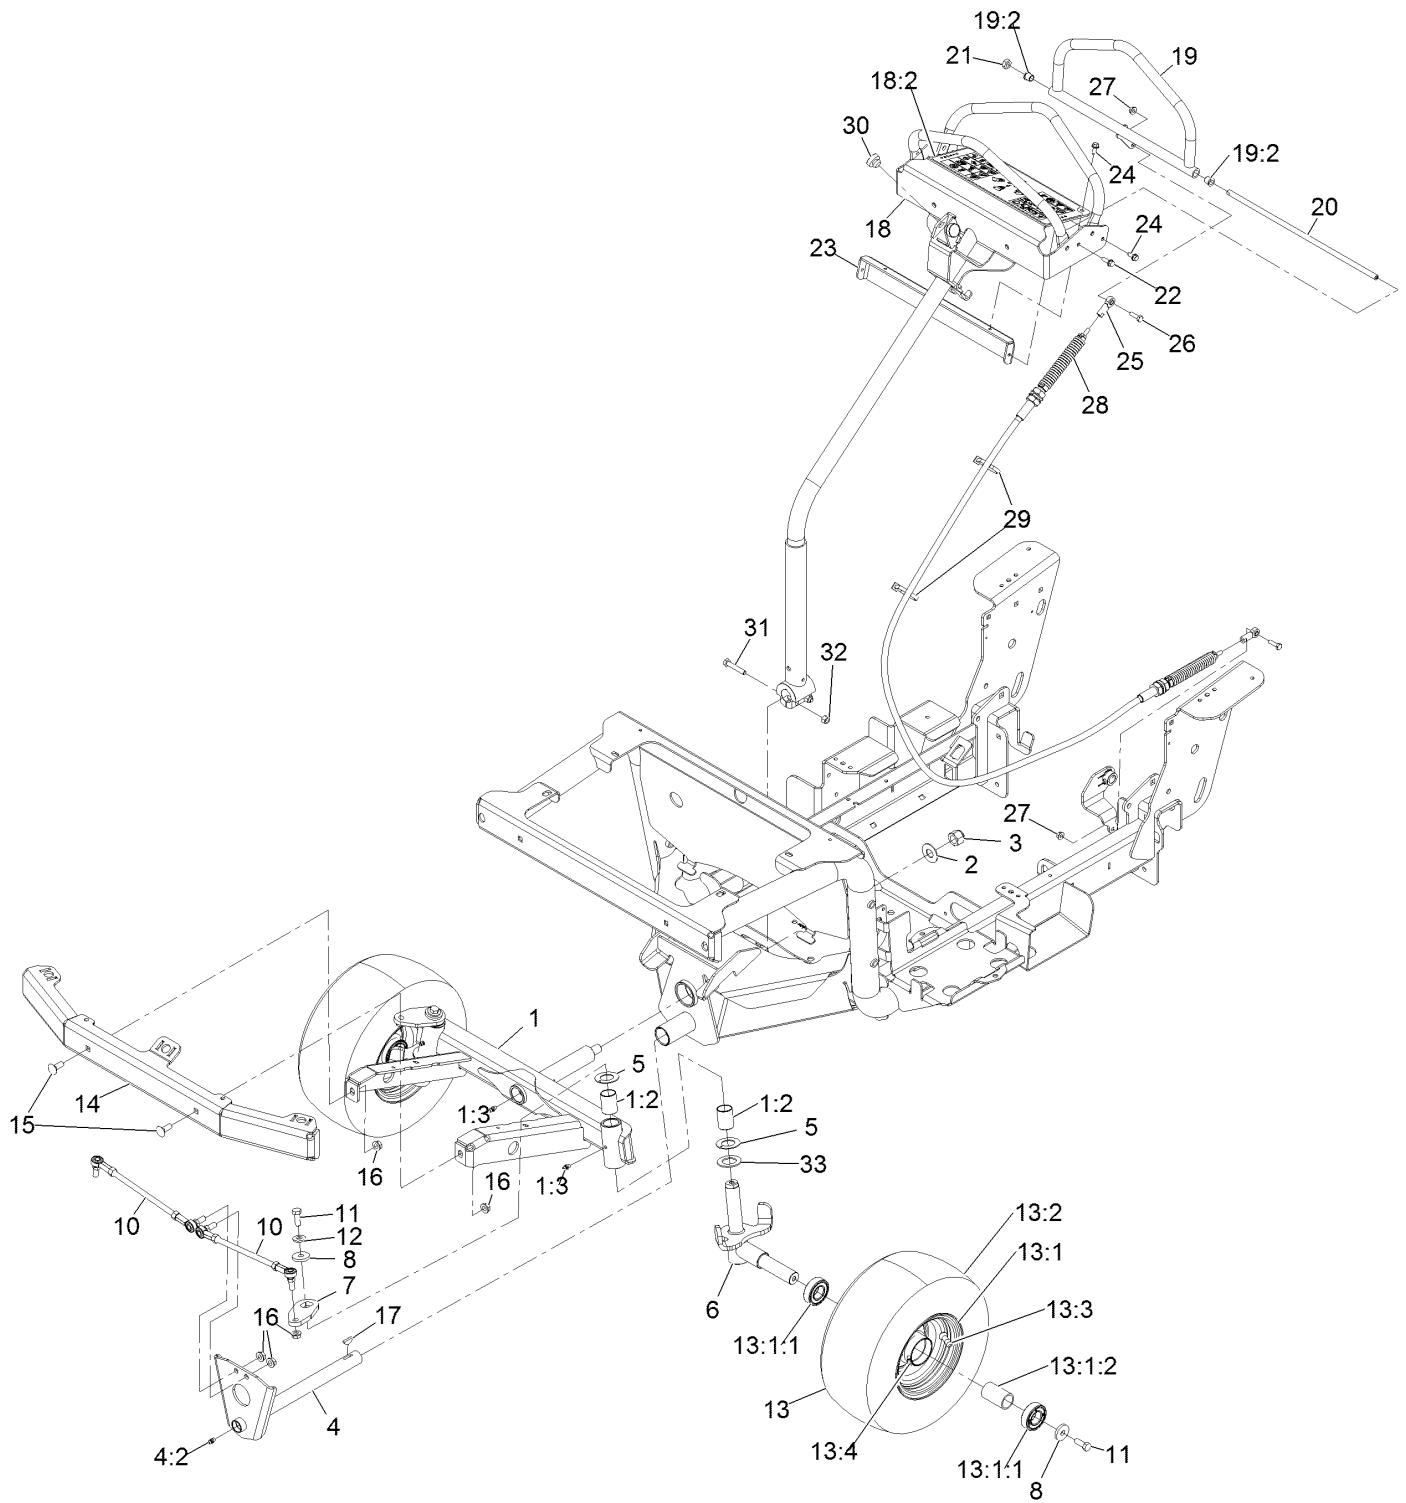


Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	16	135-2882	6	Nut-HF
1:2	126-7048	4	Bearing-Sleeve	17	3257-7	1	Key-Woodruff
1:3	126-1375	3	Zerk-Grease	18	135-3155	1	Motion Handle ASM
2	126-0656	1	Washer-Flat	18:2	135-2844	1	Decal-Warning
3	126-3841	1	Nut-Hex Nyloc 5/8-11 SS	19	142-2735	1	Motion Handle ASM
4	135-3156	1	Steering Shaft ASM	19:2	103-9928	2	Bearing
4:2	126-1375	1	Zerk-Grease	20	126-0496	1	Shaft-Pivot, Speed Control
5	126-7044	4	Washer-Thrust	21	116-4198	1	Spacer-Shaft, Drive Lever
6	126-6733	2	Front Axle ASM	22	117-8304	2	Screw-Hex Flange 1/4-20 X 3/4
7	126-7069	2	Arm-Steering	23	126-1604-03	1	Panel-Rear, Steering
8	126-3875	4	Washer	24	32144-10	4	Screw-HWH 1/4-20 X .62
10	126-7185	2	Steering Linkage ASM	25	2411-41	2	Rod End-Ball Joint
11	135-1711	4	Screw-HH	26	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
12	98-5975	2	Washer-Spring Disc 3/8	27	135-2880	2	Nut-HF
13	142-2736	2	Wheel And Tire ASM	28	126-2169	1	Cable-Motion
13:1		1	Wheel ASM ●	29	1-303335	2	Tie-Cable 7 15/16 (Large)
13:1:1	116-0720	2	Bearing-Ball	30	104-1412	2	Bumper-Rubber
13:1:2	126-7260	1	Spacer	31	3210-9	2	Screw-HH
13:2	126-1509	1	Tire	32	32152-5	2	Nut-Hex 5/16-24
13:3	232-27	1	Stem-Valve	33	126-7050	2	Spacer-Relief
13:4	302-62	1	Fitting-Grease				
14	116-9789	1	Bumper-Front				
15	126-0980	2	Screw-Carriage 3/8-16 X 1 SS				

● Not serviced separately

Steering Linkage Assembly No. 126-7185

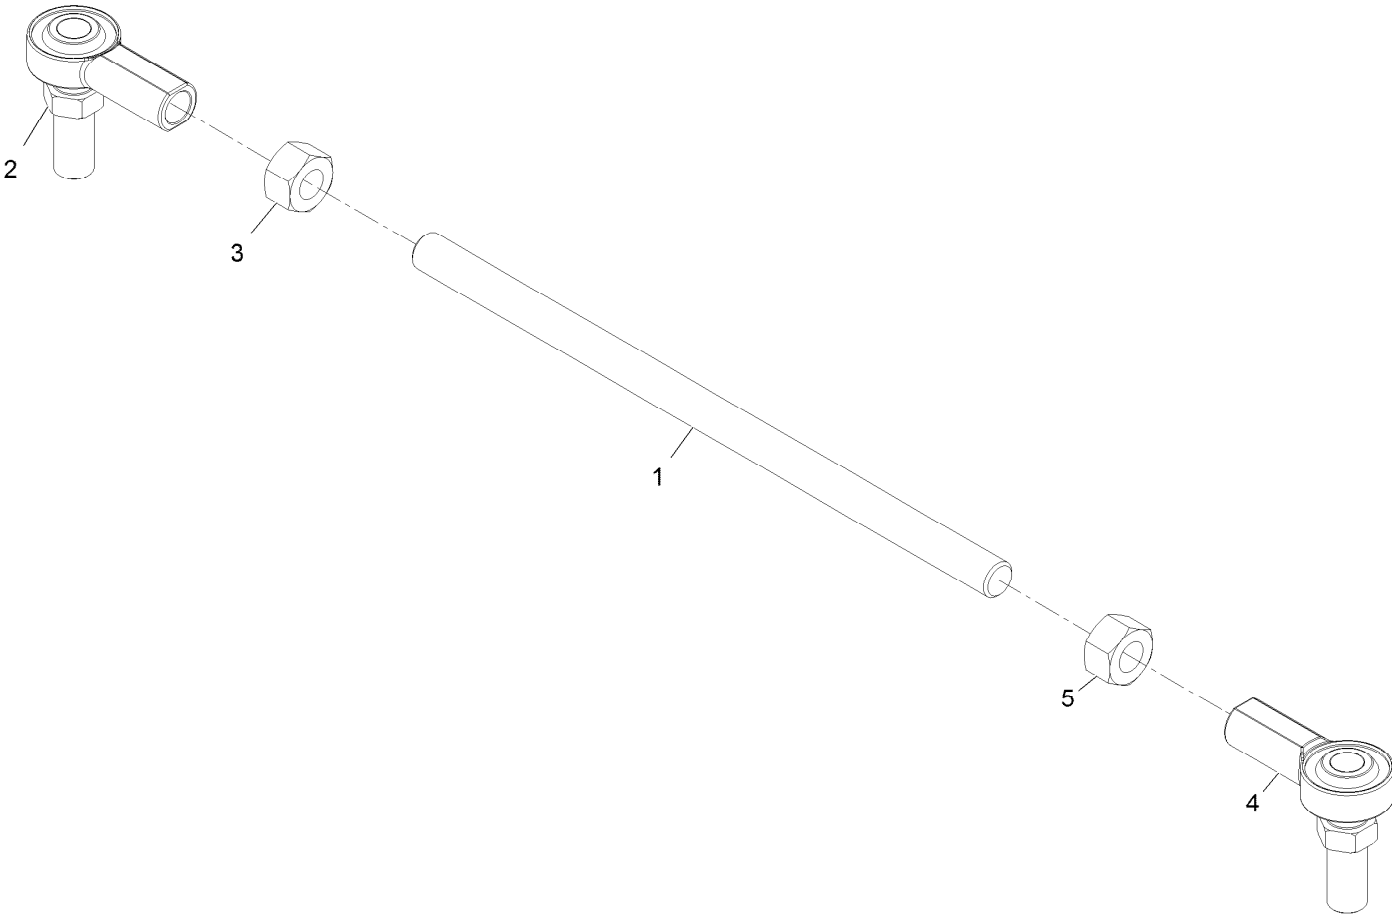


Steering Linkage Assembly No. 126-7185 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH

Spray System Assembly

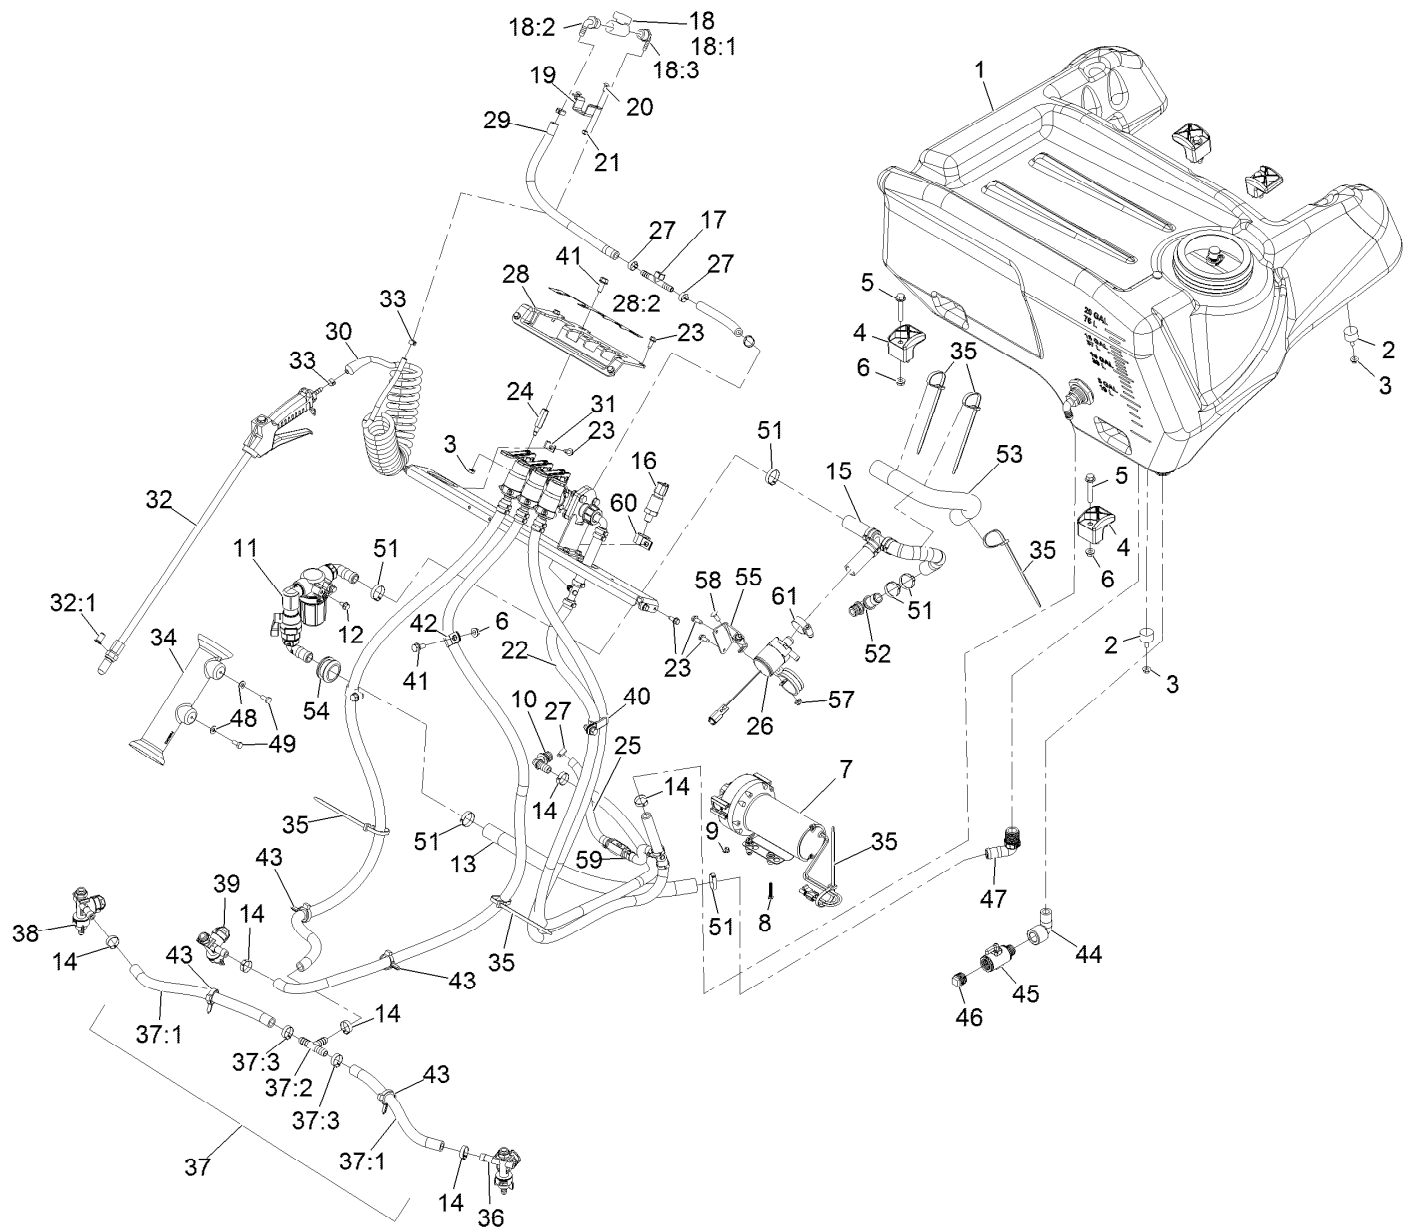


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2730	1	Tank-Sprayer	31	2412-89	1	Clamp-R
2	1-523420	4	Bumper	32	126-8000	1	Spray Wand ASM
3	135-2880	5	Nut-HF	32:1	126-3943	1	Strainer-Nozzle, 50M 5PSI
4	107-4543	4	Clamp				Check
5	126-2711	4	Screw-HHF	33	126-2707	2	Clamp
6	135-2881	7	Nut-HF	34	126-3987	1	Holder-Wand
7	142-2301	1	Pump-Diaphragm, 3.8 GPM	35	1-303335	5	Tie-Cable 7 15/16 (Large)
8	692501	4	Screw-SHWH	36	126-3667	1	Left Nozzle Sub ASM
9	126-2645	4	Nut-HF	37	126-2252	1	Hose ASM
10	126-0961	1	Fitting-Elbow, Barbed	37:1	126-2264	2	Hose-Water
11	126-4358	1	Strainer ASM	37:2	126-0968	1	Fitting-Tee
12	126-2713	2	Screw-HHF	37:3	126-4778	2	Clamp
13	126-4422	1	Hose-Water	38	126-3669	1	Right Nozzle Sub ASM
14	126-4778	8	Clamp	39	126-3668	1	Center Nozzle Sub ASM
15	142-2192	1	ASM-, 3/4 Pvc Reinforced Water Hose	40	120-1959	1	Clamp
16	135-6193	1	Transducer-Pressure	41	126-2712	4	Screw-HHF 5/16-18 X 3/4 SS
17	126-2348	1	Fitting-Tee	42	1-633396	2	Clip-Loom 5/8
18		1	Wand Control ASM ●	43	105-1853	4	Clamp-Hose
18:1	126-0242	1	Valve-Ball	44	108-3573	1	Elbow-90 DEG
18:2	126-4992	1	Fitting-Elbow-90	45	126-1494	1	Microvalve
18:3	126-4993	1	Fitting-Elbow-90	46	363-3125	1	Plug
19	126-0239-03	1	Bracket-Valve	47	119-0490	1	Elbow-Hosebarb
20	1-807513	2	Bolt-Carriage #10-24 X 1/2	48	360-0140	2	Washer-Flat
21	3296-2	2	Nut-Nyloc #10-24	49	126-1290	2	Screw-HH 1/4-20 X 5/8 SS
22		1	Manifold-Valve, Control ASM ●	51	126-4779	6	Clamp
23	32144-10	11	Screw-HWH 1/4-20 X .62	52	126-4420	1	Fitting-Elbow
24	135-6461	1	Spacer, Manifold Mount	53	126-5065	1	Sleeve-Corrugated, Split
25	142-2213	1	Hose-Water	54	126-7410	1	Grommet
26	135-7843	1	Pump-Centrifugal	55	135-7913-03	1	Brkt-Recir Pump
27	126-3749	5	Clamp	57	104-7201	2	Nut-HF
28	126-4180	1	Cover-Controls	58	3229-11	2	Screw-CARR
28:2	135-7256	1	Decal-Lever Control	59	142-2180	1	Valve-3/8 Check
29	126-5847	1	Hose-Water, 3/8 Pvc Red	60	110-0824	1	R-Clamp
30	126-1493	1	Hose-Coiled	61	2412-129	1	Clamp-Hose

● Not serviced separately


Sprayer Tank Assembly

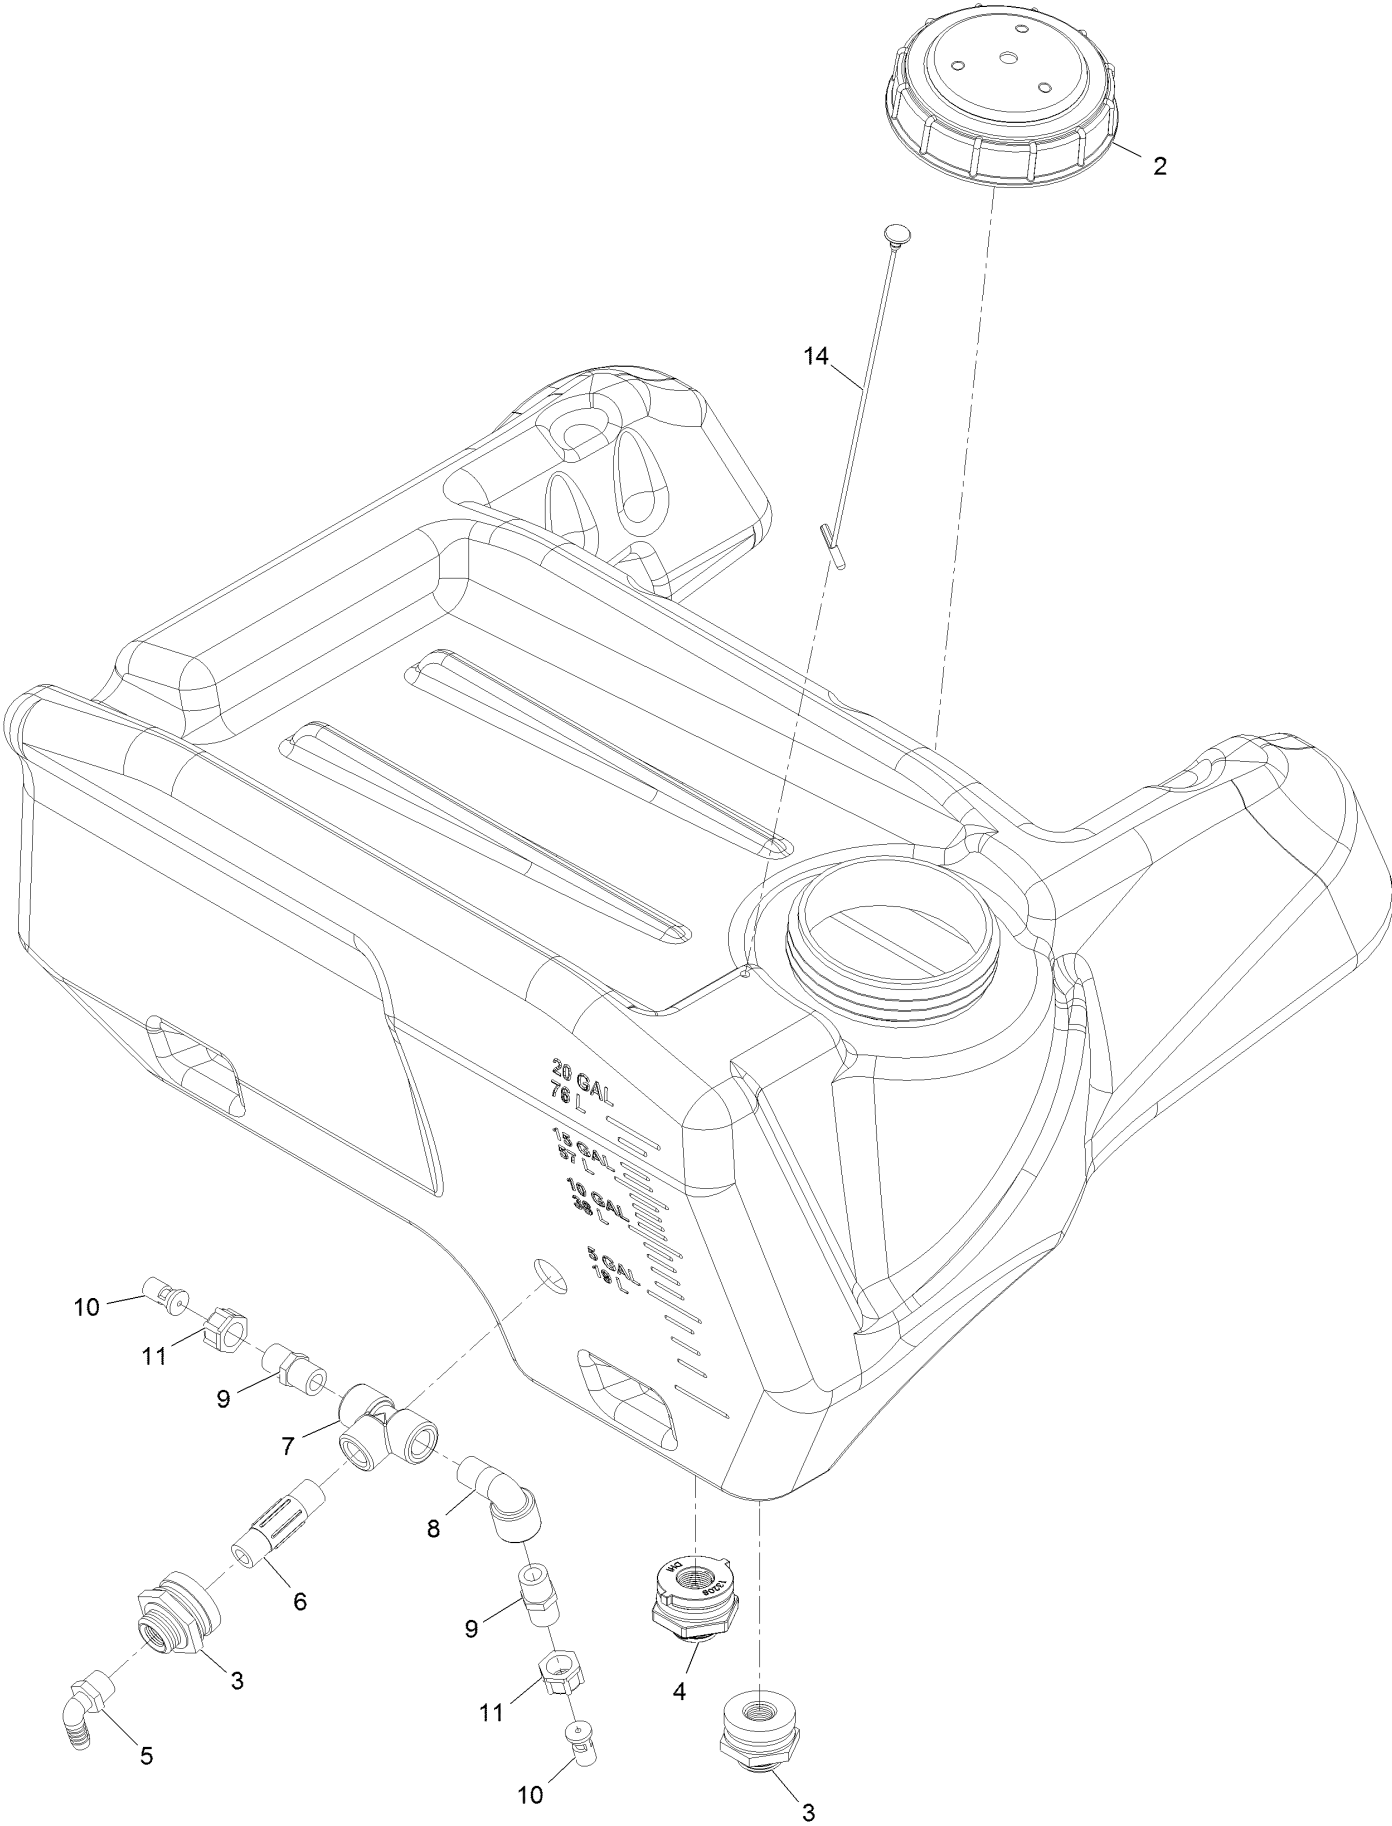

Sprayer Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-0285	1	Cap-Water, 5 Inch Vent	8	108-3573	1	Elbow-90 DEG
3	126-0400	2	Fitting-Bulkhead	9	108-3574	2	Nipple-Short
4	126-4393	1	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
5	42046	1	Elbow-90 DEG	11	99-0766	2	Nut
6	94-7103	1	Nipple	14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)
7	94-7100	1	Tee				


Strainer Assembly

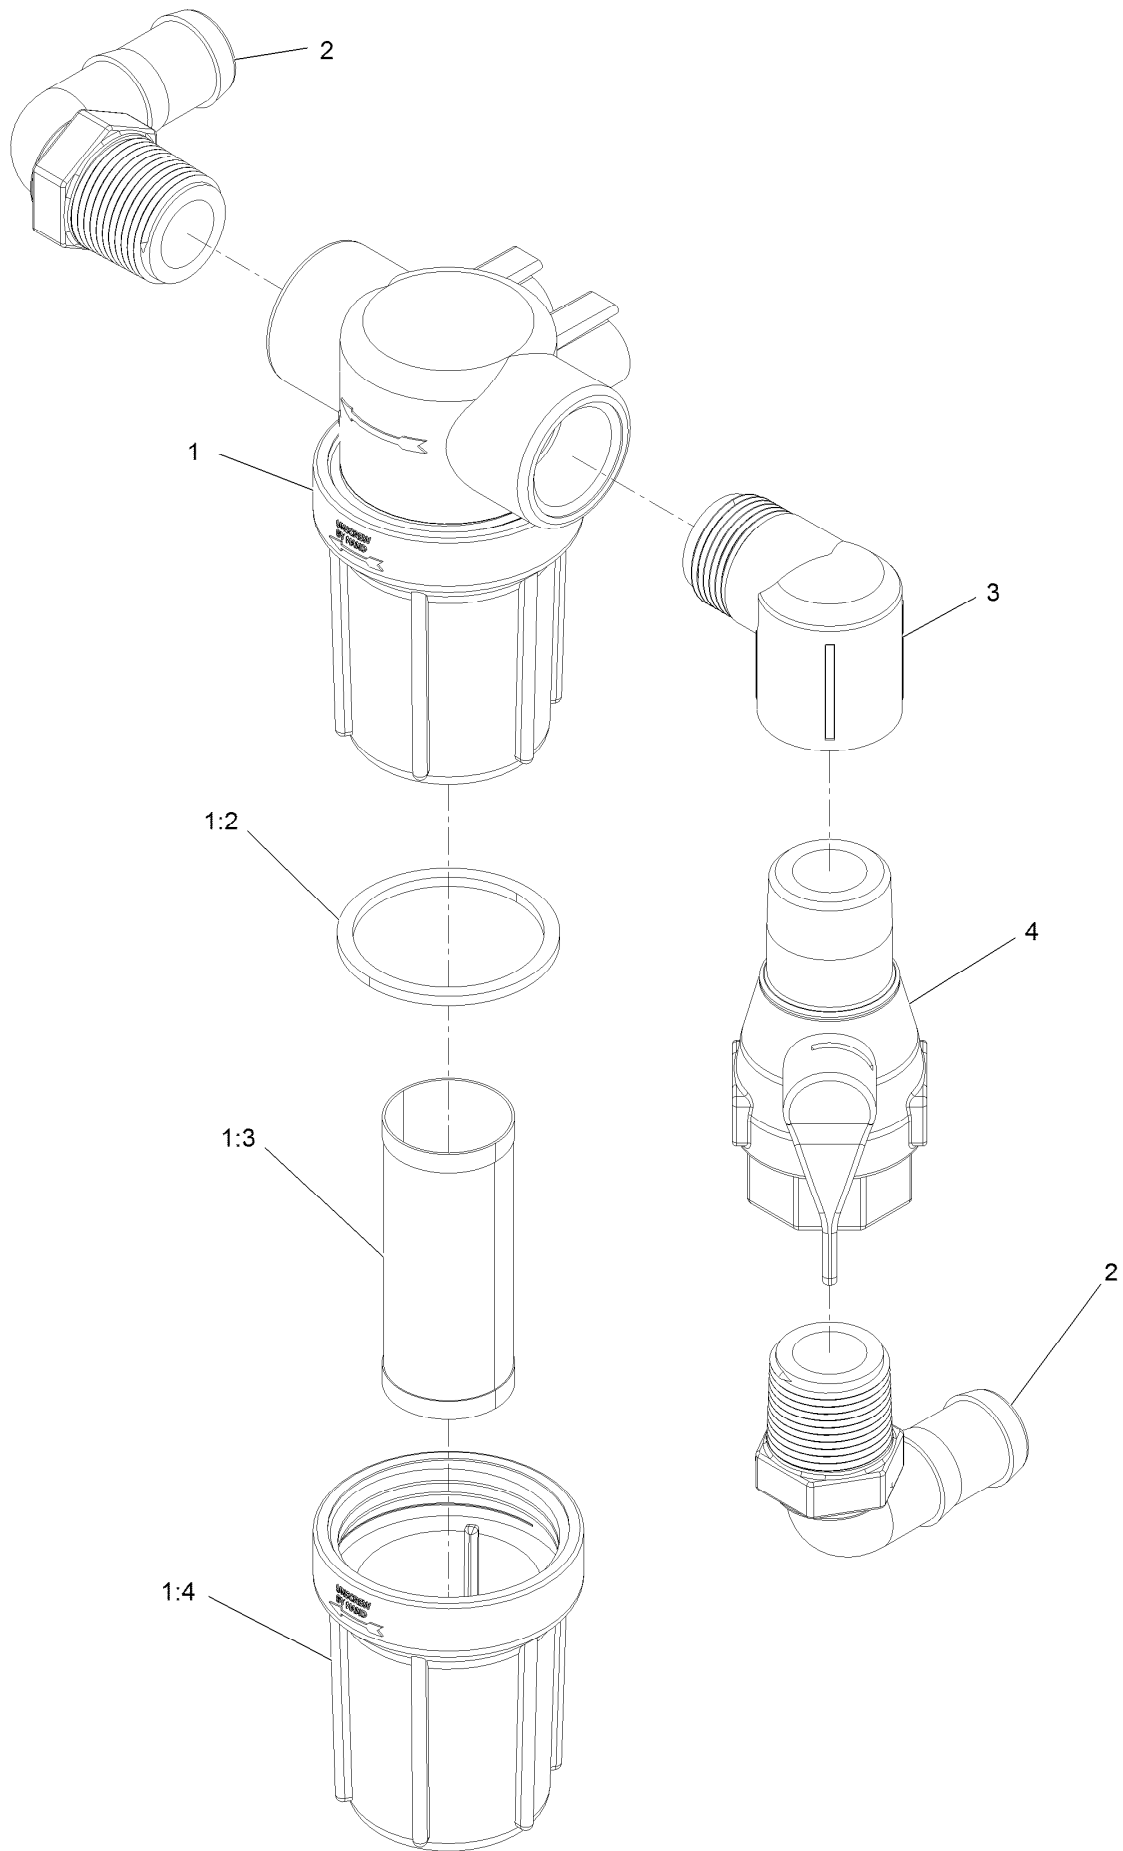

Strainer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line	1:4	126-7195	1	Bowl-Strainer
1:2	126-2272	1	Gasket-Head, Line Strainer	2	119-0490	2	Elbow-Hosebarb
1:3	126-2273	1	Screen-Strainer, 30 Mesh SS	3	102-4272	1	Elbow
				4	126-4451	1	Valve-Ball

Control Valve Manifold and Hose Assembly

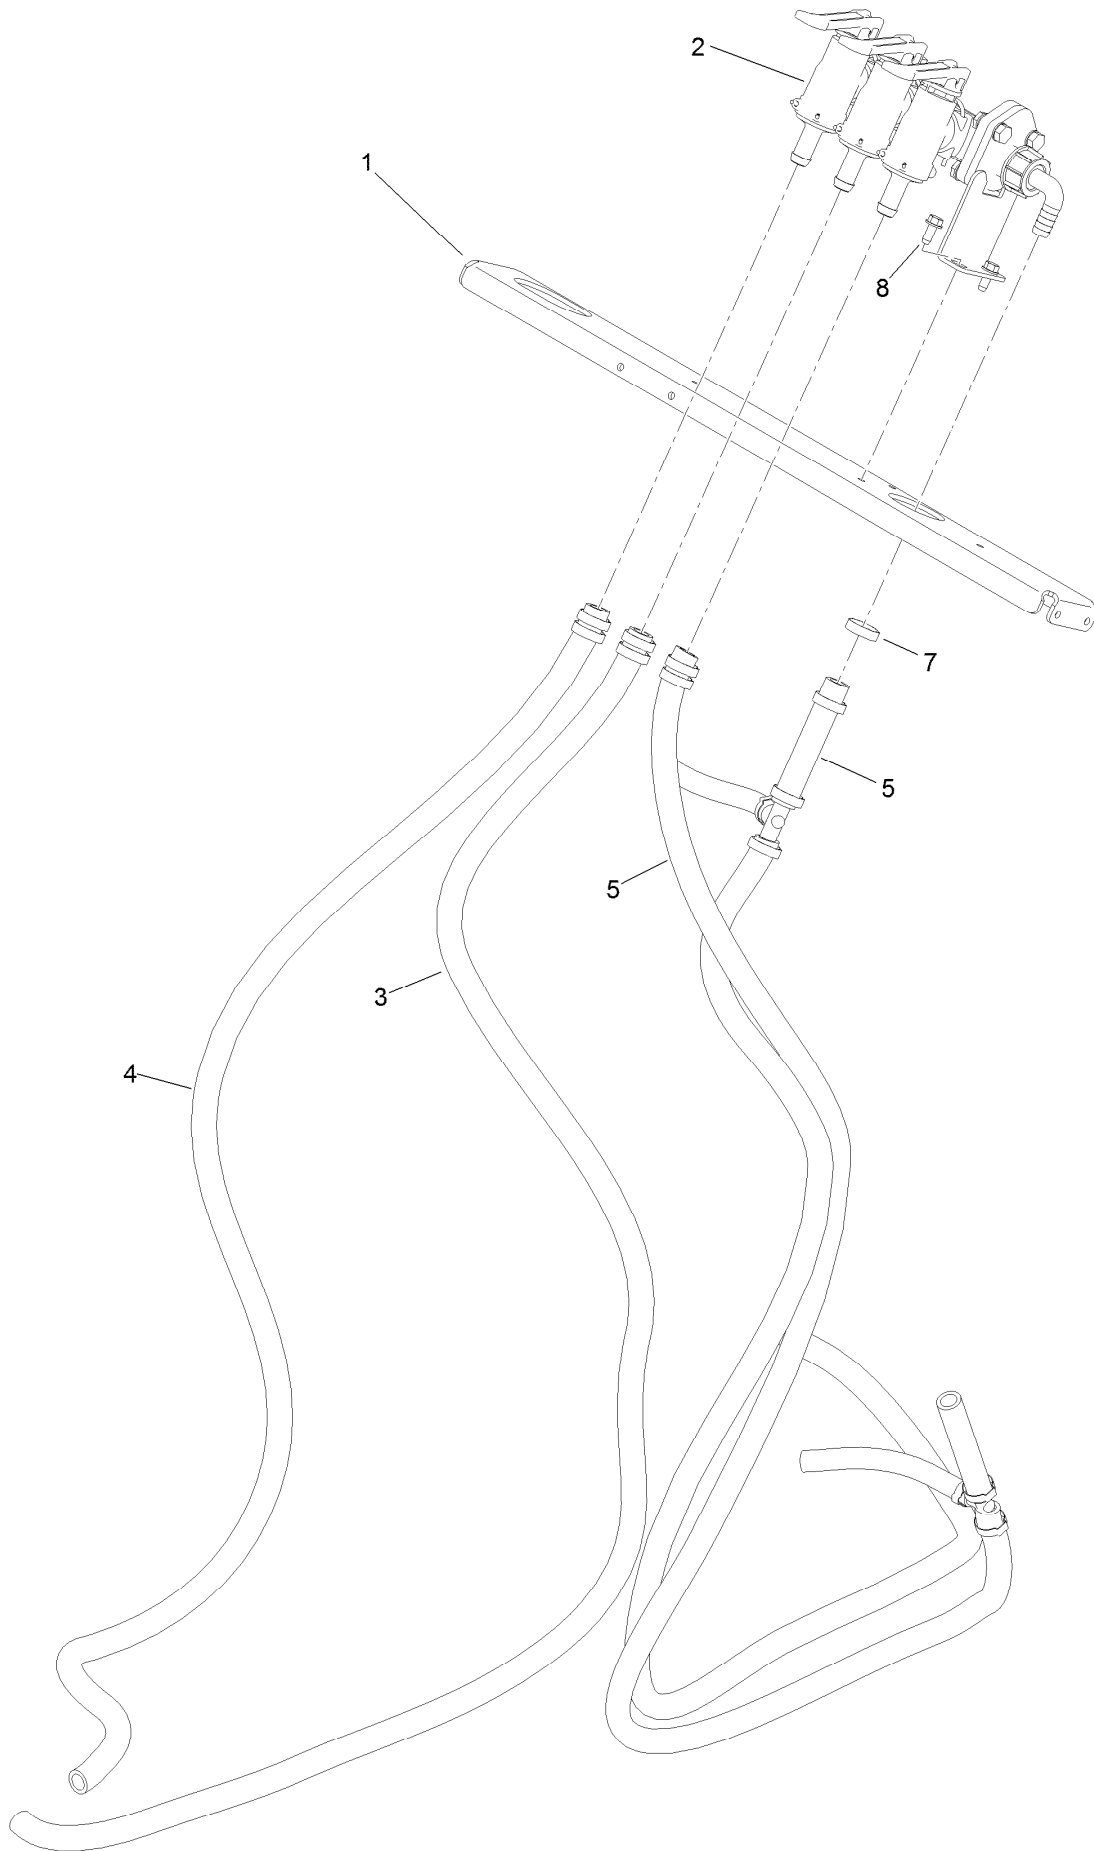


Control Valve Manifold and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-6360-03	1	Crossmember-Column
2	135-6362	1	Manifold-Valve, Control
3	126-2261	1	Hose-Water
4	126-2263	1	Hose-Water

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	142-3560	2	Hose ASM
7	126-4778	8	Clamp
8	32144-10	2	Screw-HWH


Control Valve Manifold Assembly No. 135-6362

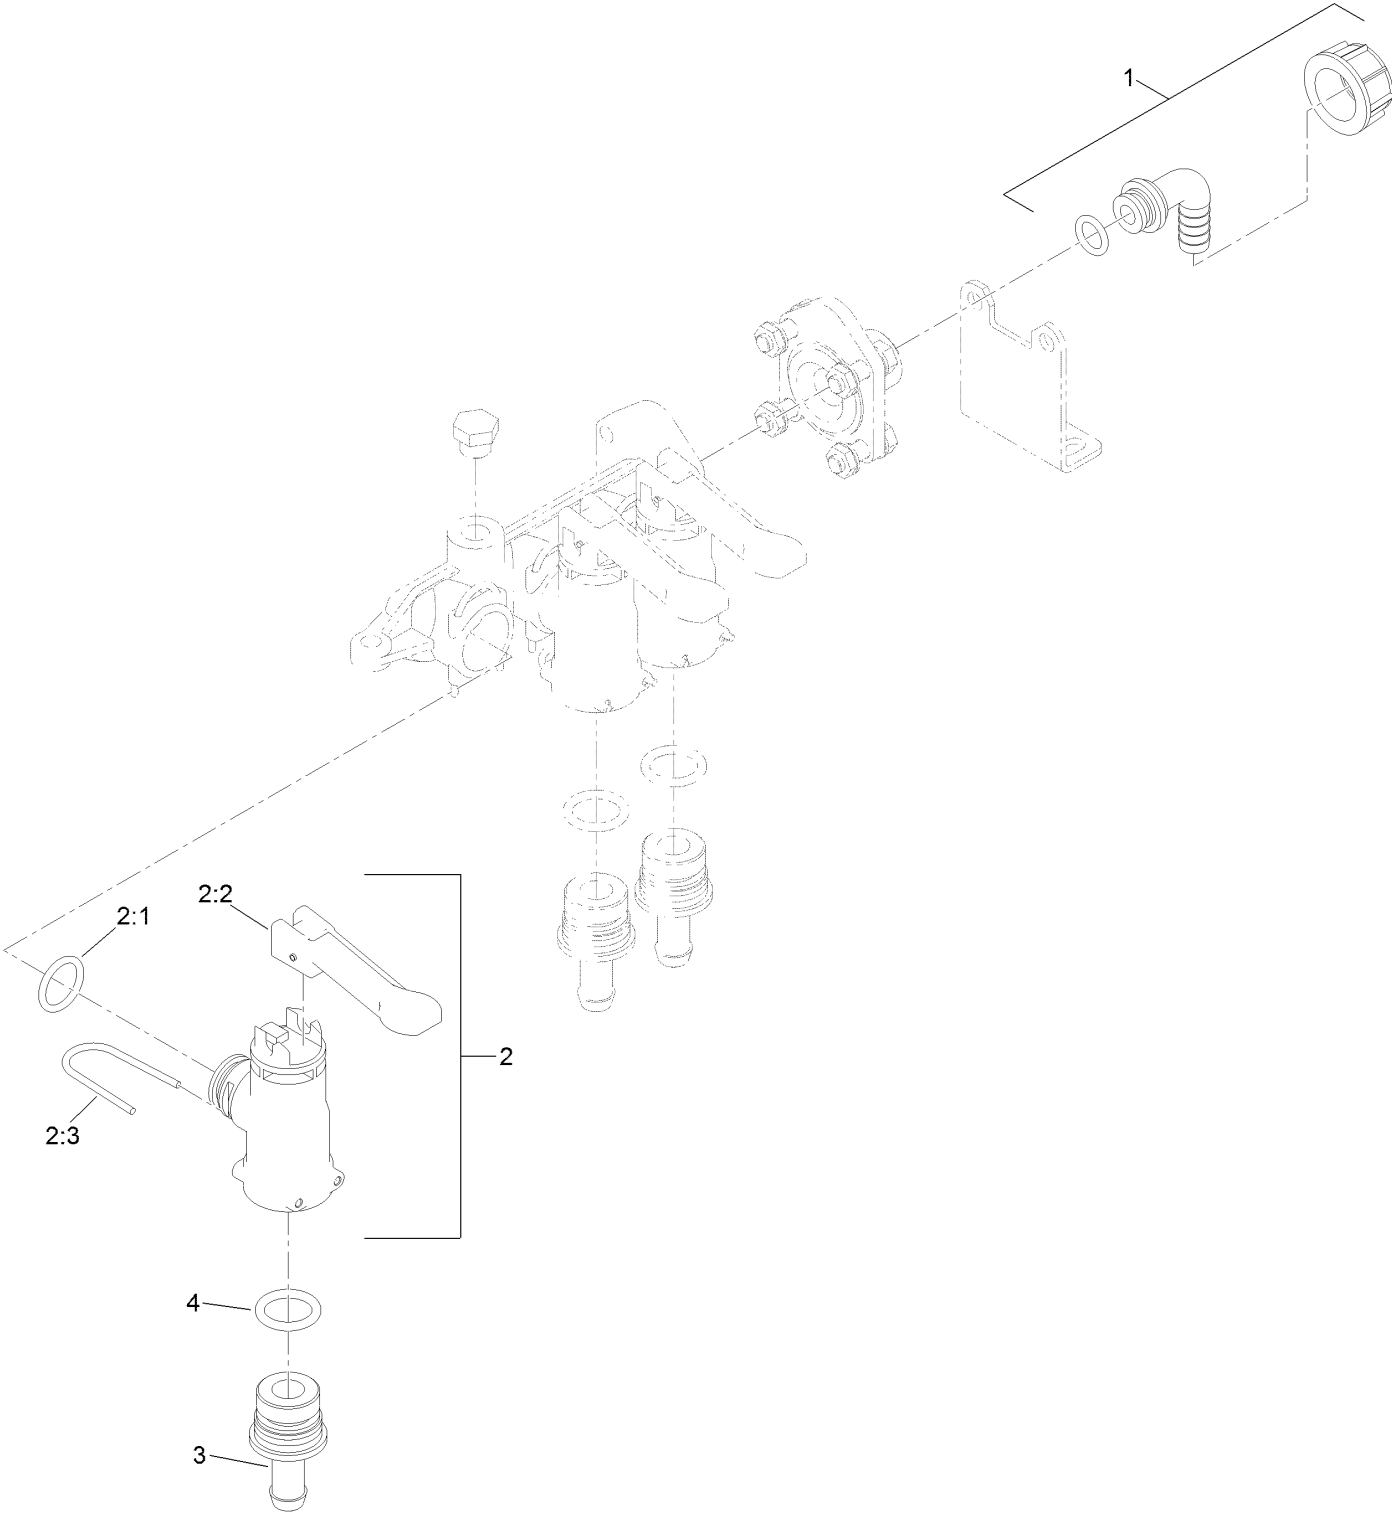

Control Valve Manifold Assembly No. 135-6362 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-6464	1	Flynut Assembly	2:3	126-6332	1	Wireform Retainer Kit
2	126-7641	1	Valve Assembly W/ O-Ring	3	126-6321	1	Hose Barb
2:1	126-6328	1	O-Ring Kit, Valve Inlet	4	126-6327	1	O-Ring Kit, Valve Outlet
2:2	126-6319	1	Lever And Pin Assembly				Barb

Left Nozzle Assembly No. 126-3667

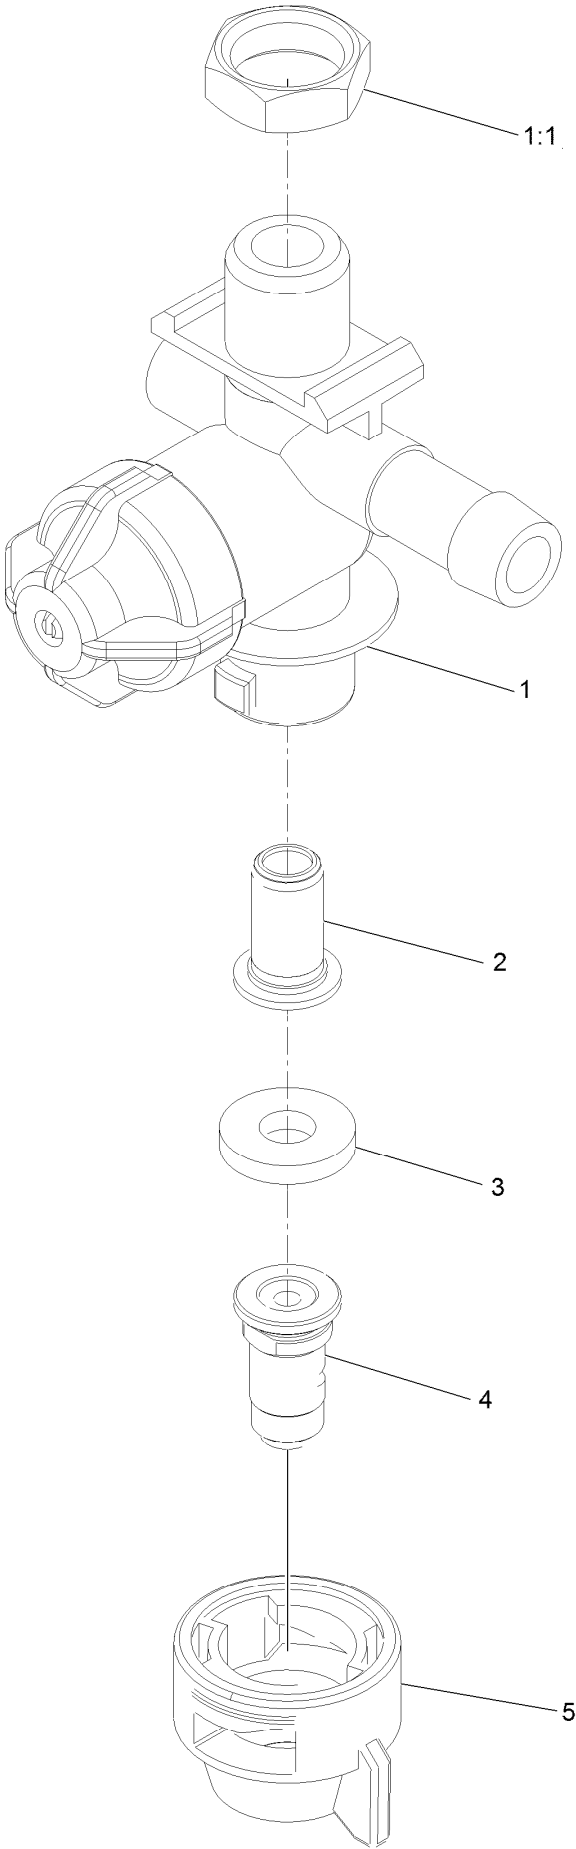


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

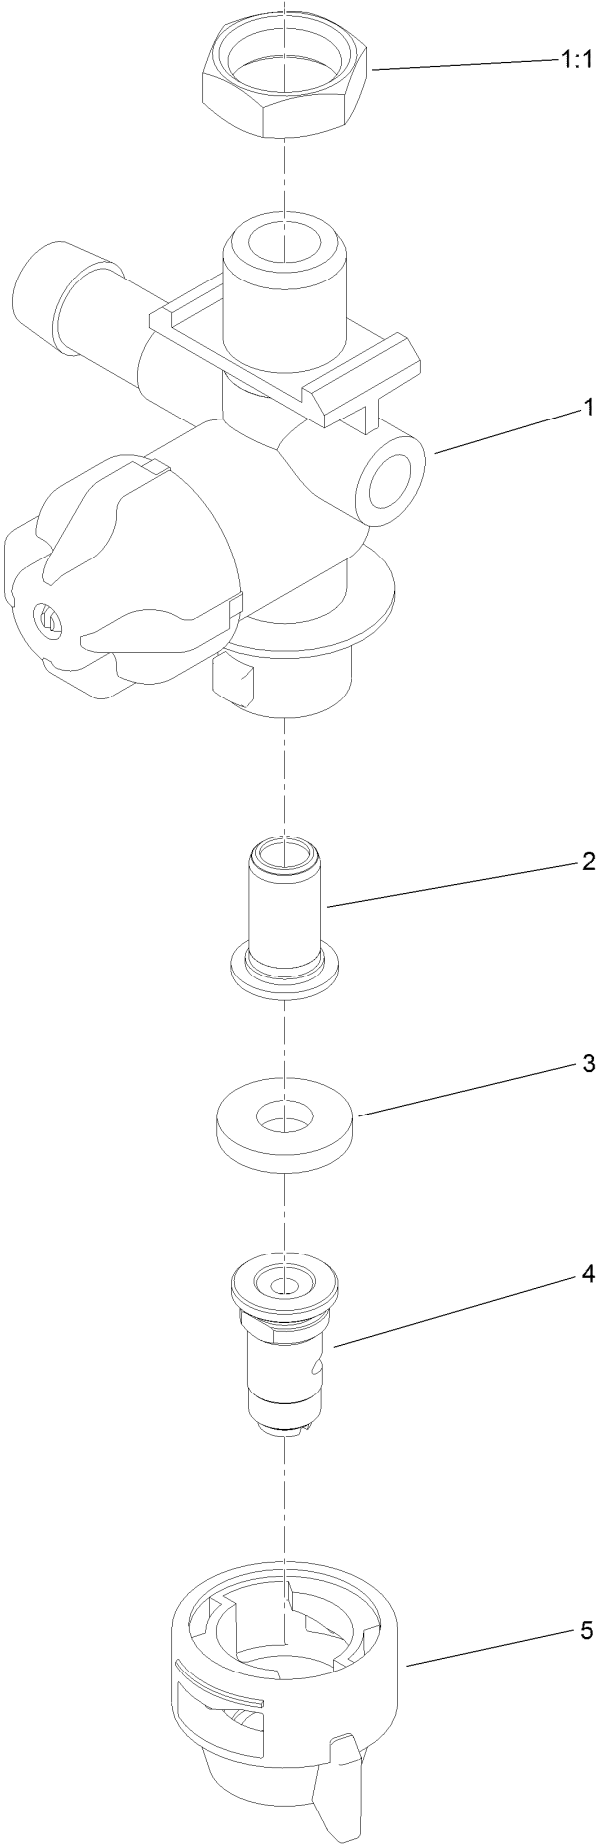


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Center Nozzle Assembly No. 126-3668

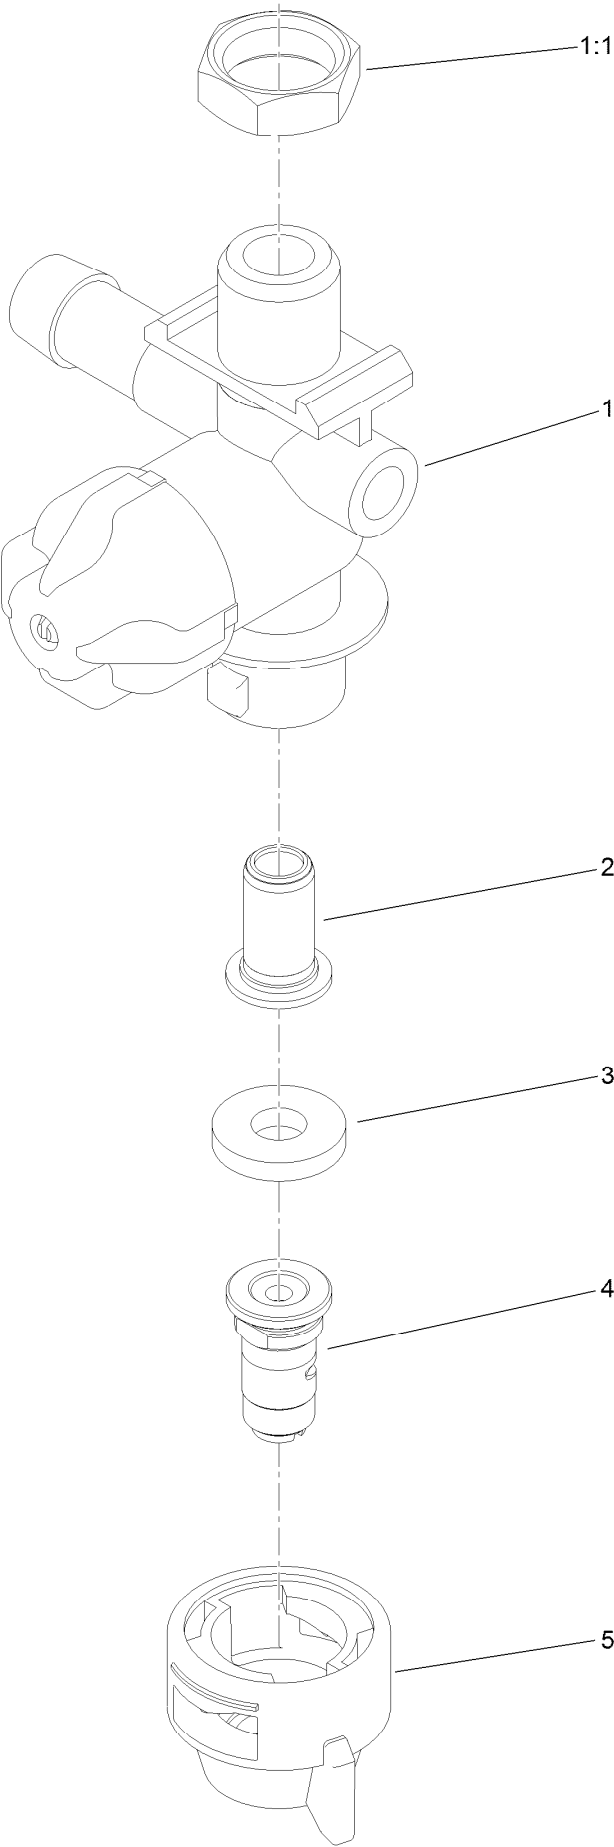

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Spreader Assembly

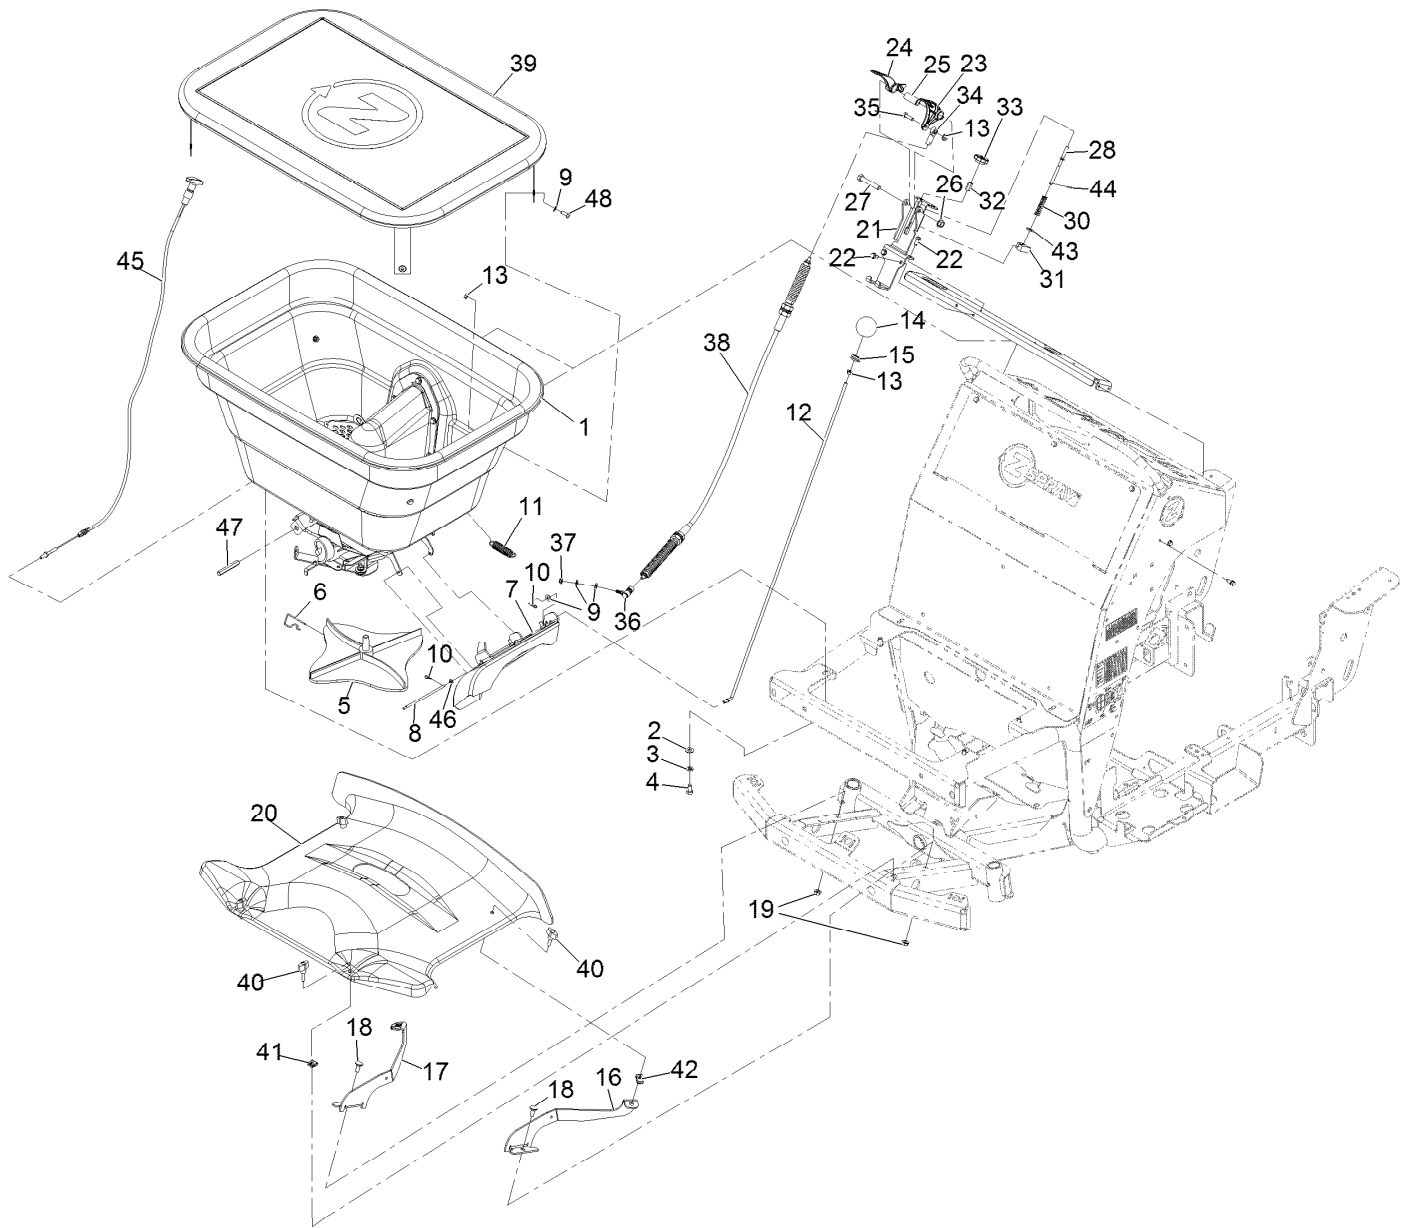


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	25	126-3984	1	Spacer
2	107-0279	4	Washer	26	135-2882	1	Nut-HF
3	107-0280	4	Washer-Lock	27	323-11	1	Screw-HH 3/8-16 X 2 1/4
4	126-2506	4	Screw-HH	28	126-3929	1	Link-Adjust, Narrow
5	126-0858	1	Spinner-Spreader	30	125-0547	1	Spring-Compression, Bail
6	126-1246	1	Clip-Spinner	31	126-3147	1	Stop-Spread, Narrow
7		1	Side Deflector ASM ●	32	126-4891	1	Nut-Coupler
8	135-2558	1	Pin-Deflector	33	126-3905	1	Knob
9	360-0140	9	Washer-Flat	34	2411-41	1	Rod End-Ball Joint
10	126-1631	2	Pin-Cotter, Hair	35	126-0498	1	Screw-HH 1/4-20 X 7/8 SS
11	126-2127	1	Spring-Extension	36	126-2005	1	Ball-Joint
12	126-2190	1	Rod-Control, Deflector	37	126-2725	1	Nut-Hex, NI
13	135-2880	6	Nut-HF	38	126-1783	1	Cable
14	121-1877	1	Knob-Rate, Flow	39	142-2732	1	Cover-Hopper, Clear Vinyl Window
15	1-633630	1	Grommet	40	126-5846	4	Knob-T
16	126-2145	1	Bracket-Cover, Front (LH)	41	126-3740	2	Nut-Retainer, U Style
17	126-2146	1	Bracket-Cover, Front (RH)	42	126-3739	2	Nut-Retainer
18	126-0695	2	Screw-CARR	43	3256-78	1	Washer
19	135-2881	2	Nut-HF	44	3272-5	1	Pin-Cotter 3/32 X 1/2
20	126-2063	1	Cover-Front, Spreader/Sprayer	45	126-4150	1	Cable-Control, Turn Lock
21	126-3133	1	Mount-Handle	46	126-0759	1	Washer-Flat
22	32144-10	3	Screw-HWH 1/4-20 X .62	47	126-4655	1	Post-Hex, Diffuser Guide
23	126-3947	1	Lever-Spread, Wide	48	126-1290	4	Screw-HH 1/4-20 X 5/8 SS
24	126-3948	1	Lever-Spread, Narrow				

● Not serviced separately

Spreader Hopper Assembly

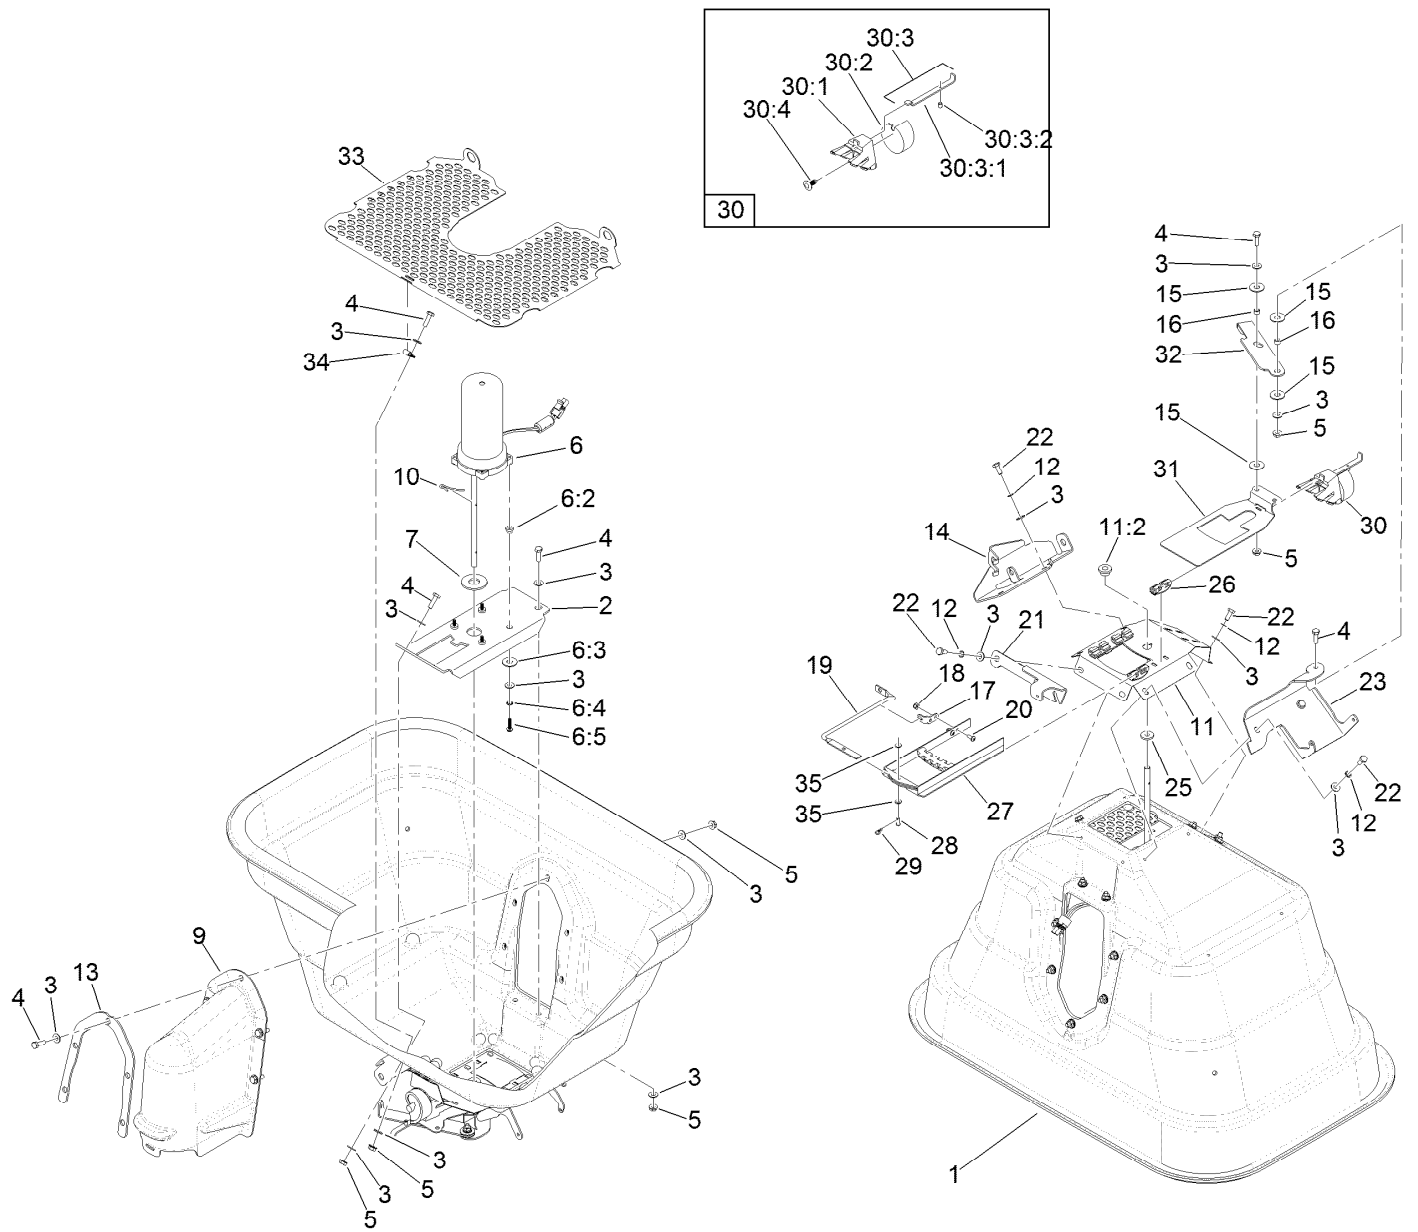


Spreader Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2734	1	Hopper-Spreader, 175 Lb	20	126-9586	2	Screw-PPH
2	126-4245	1	Bracket-Mount, Motor	21	126-2082	1	Bracket-Spring, Hopper Deflector
3	360-0140	34	Washer-Flat	22	126-1290	8	Screw-HH
4	126-0498	12	Screw-HH	23	126-1916	1	Bracket-Lever, Hopper Gate
5	135-2880	12	Nut-HF	25	126-1252	1	Washer-Felt
6	126-6231	1	Spreader Motor ASM	26	126-0990	4	Guide-Rate, Gate
6:2	135-3989	4	Spacer-Flanged	27	126-0991	1	Diffuser
6:3	360-0140	4	Washer-Flat	28	126-3729	1	Pin-Clevis
6:4	363-8641	4	Washer-Lock, Int	29	126-1631	1	Pin-Cotter, Hair
6:5	739001	4	Screw-SHWH	30	126-0998	1	Rate Dial ASM
7	83-2400	1	Spacer	30:1	126-0985	1	Mount-Dial
9	126-1348	1	Cover-Motor	30:2	126-0988	1	Dial
10	126-1247	1	Agitator	30:3		1	Rate Gate Link ASM ●
11	126-6284	1	Mulch Plate W/ Bearing ASM	30:3:1	126-0987	1	Link-Gate, Rate
11:2	126-0984	1	Bearing-Bottom, Hopper	30:3:2	126-4196	1	Screw-Shoulder, Slotted
12	363-8641	12	Washer-Lock, Int	30:4	126-0986	1	Clip
13	126-6334	1	Flange-Cover, Motor	31	126-1903	1	Gate-Rate
14	126-4650	1	Bracket-Hopper, Gate Controls	32	126-4112	1	Lever-Gate
15	93-1633	4	Washer	33	126-3242	1	Screen-Hopper, Small Hole
16	126-3684	2	Spacer	33	126-3240	1	Screen-Hopper, Medium Hole
17	126-1237	1	Bracket-Diffuser	33	126-3143	1	Screen-Hopper, Large Hole
18	364-0371	2	Nut-Hex	34	126-1624	1	Clamp-Loop
19	126-1646	1	Rod-Control, Diffuser	35	126-0759	2	Washer-Flat

● Not serviced separately

Side Deflector Assembly

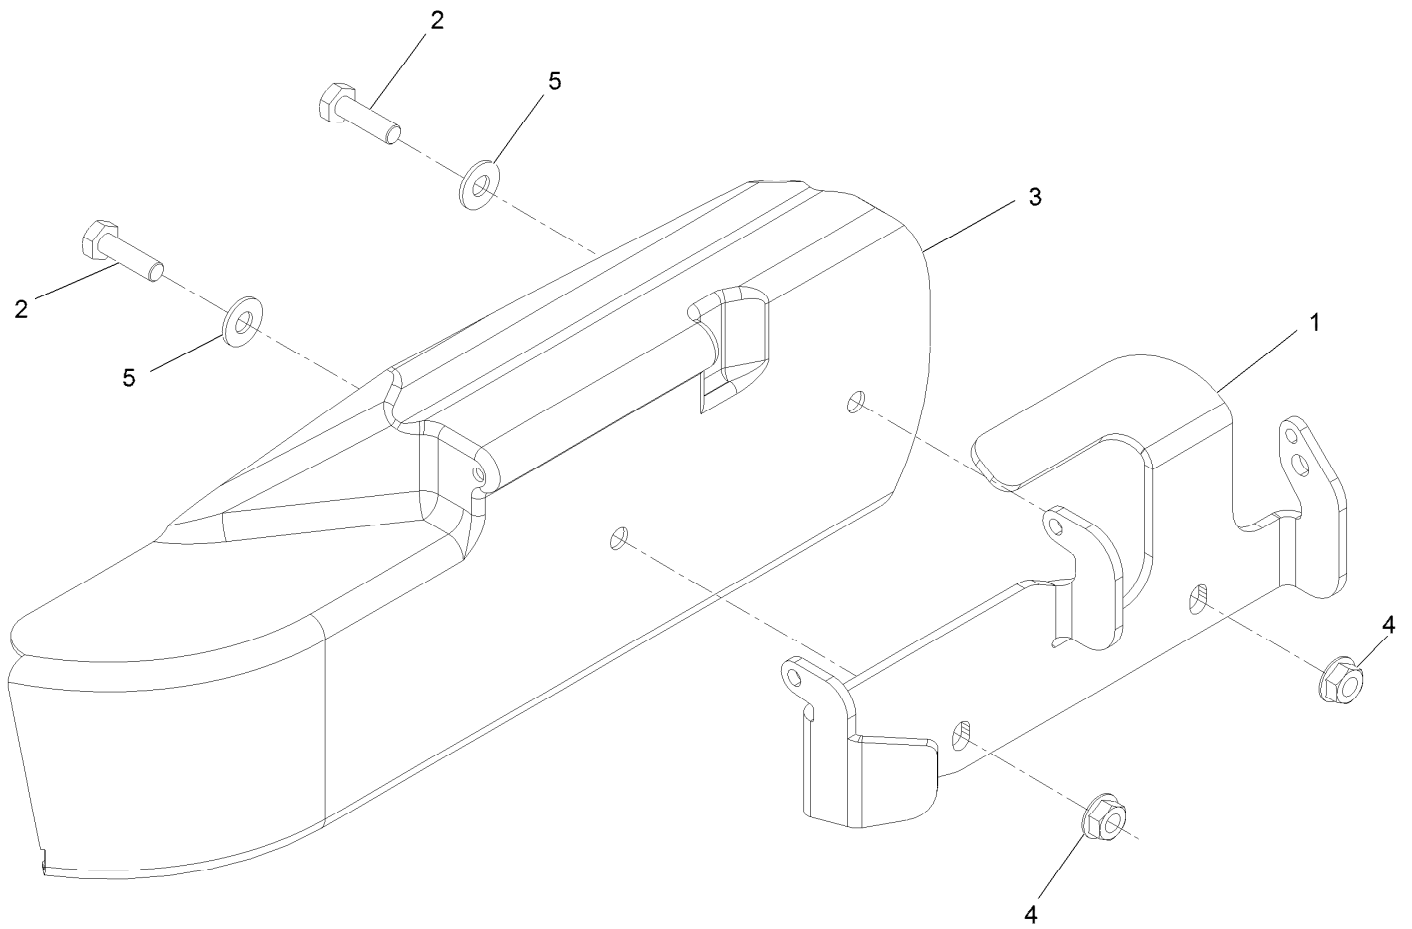


Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-2501	1	Bracket-Deflector, Side
2	126-0498	2	Screw-HH
3	126-1217	1	Deflector-Side

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	135-2880	2	Nut-HF
5	360-0140	2	Washer-Flat


Engine Assembly

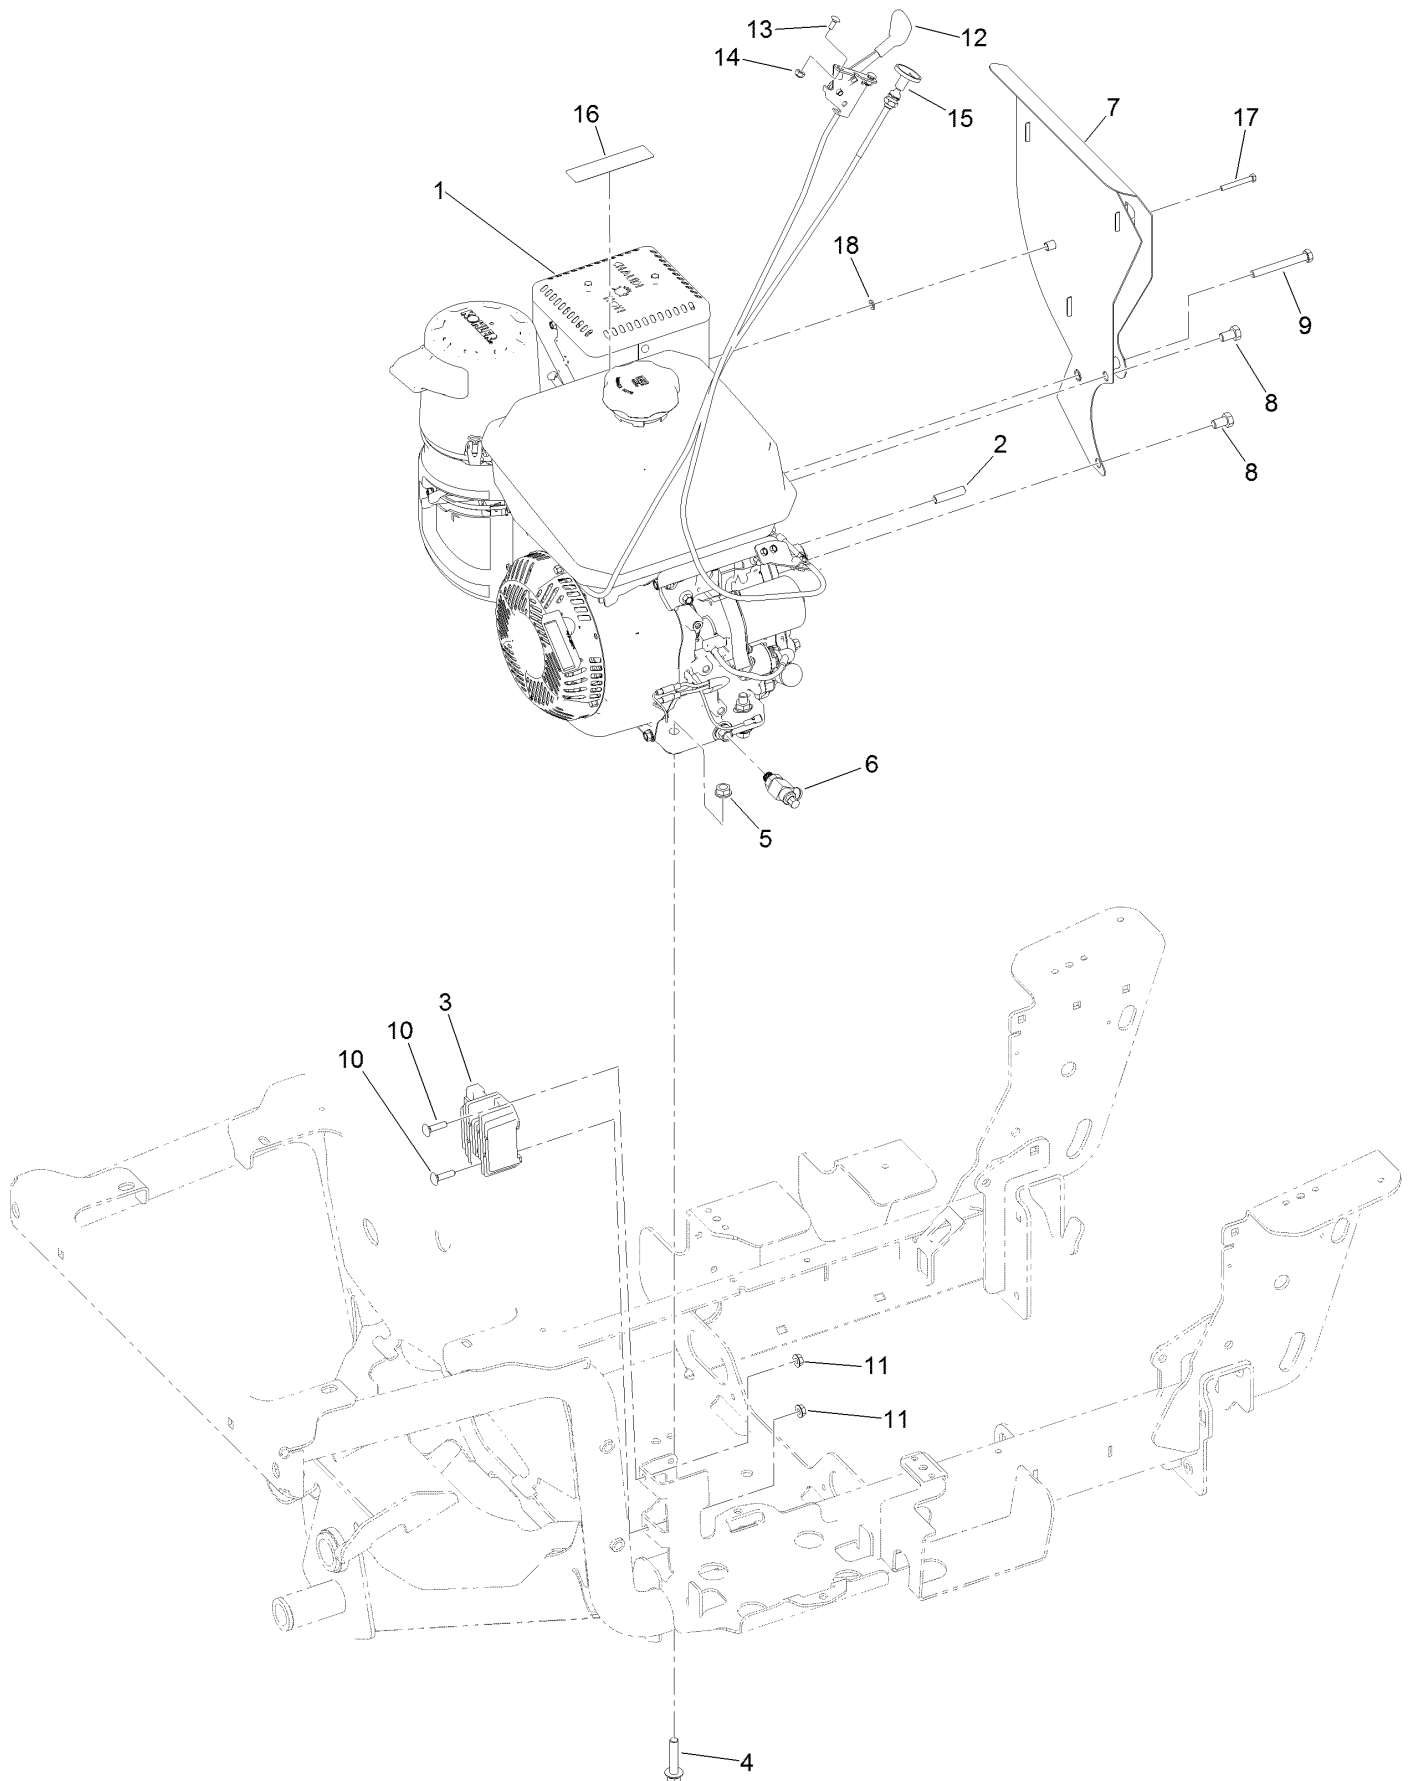

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1359	1	Engine-Kohler, Ch395	11	135-2880	2	Nut-HF
2	135-3980	1	Key-Square, 7Mm	12	135-3149	1	Control-Throttle
3	135-7026	1	Regulator-Trombetta, 18A	13	1-807513	2	Bolt-CARR
4	126-2710	4	Screw-HHF	14	3296-2	2	Nut-Lock, NI
5	135-2882	4	Nut-HF	15	135-3150	1	Cable-Choke, Push/Pull
6	126-9978	1	Valve-Drain, Oil	16	133-8062	1	Decal-Arrestor, Spark
7	126-2225	1	Heat Shield ASM	17	135-4328	1	Bolt-M5X0.8Mm X 40 Mm Long
8	115-8486	2	Screw-HH	18	126-0759	1	Washer-Flat
9	120-1177	1	Screw-HH				
10	126-1455	2	Screw-CARR				


Ground Drive Assembly

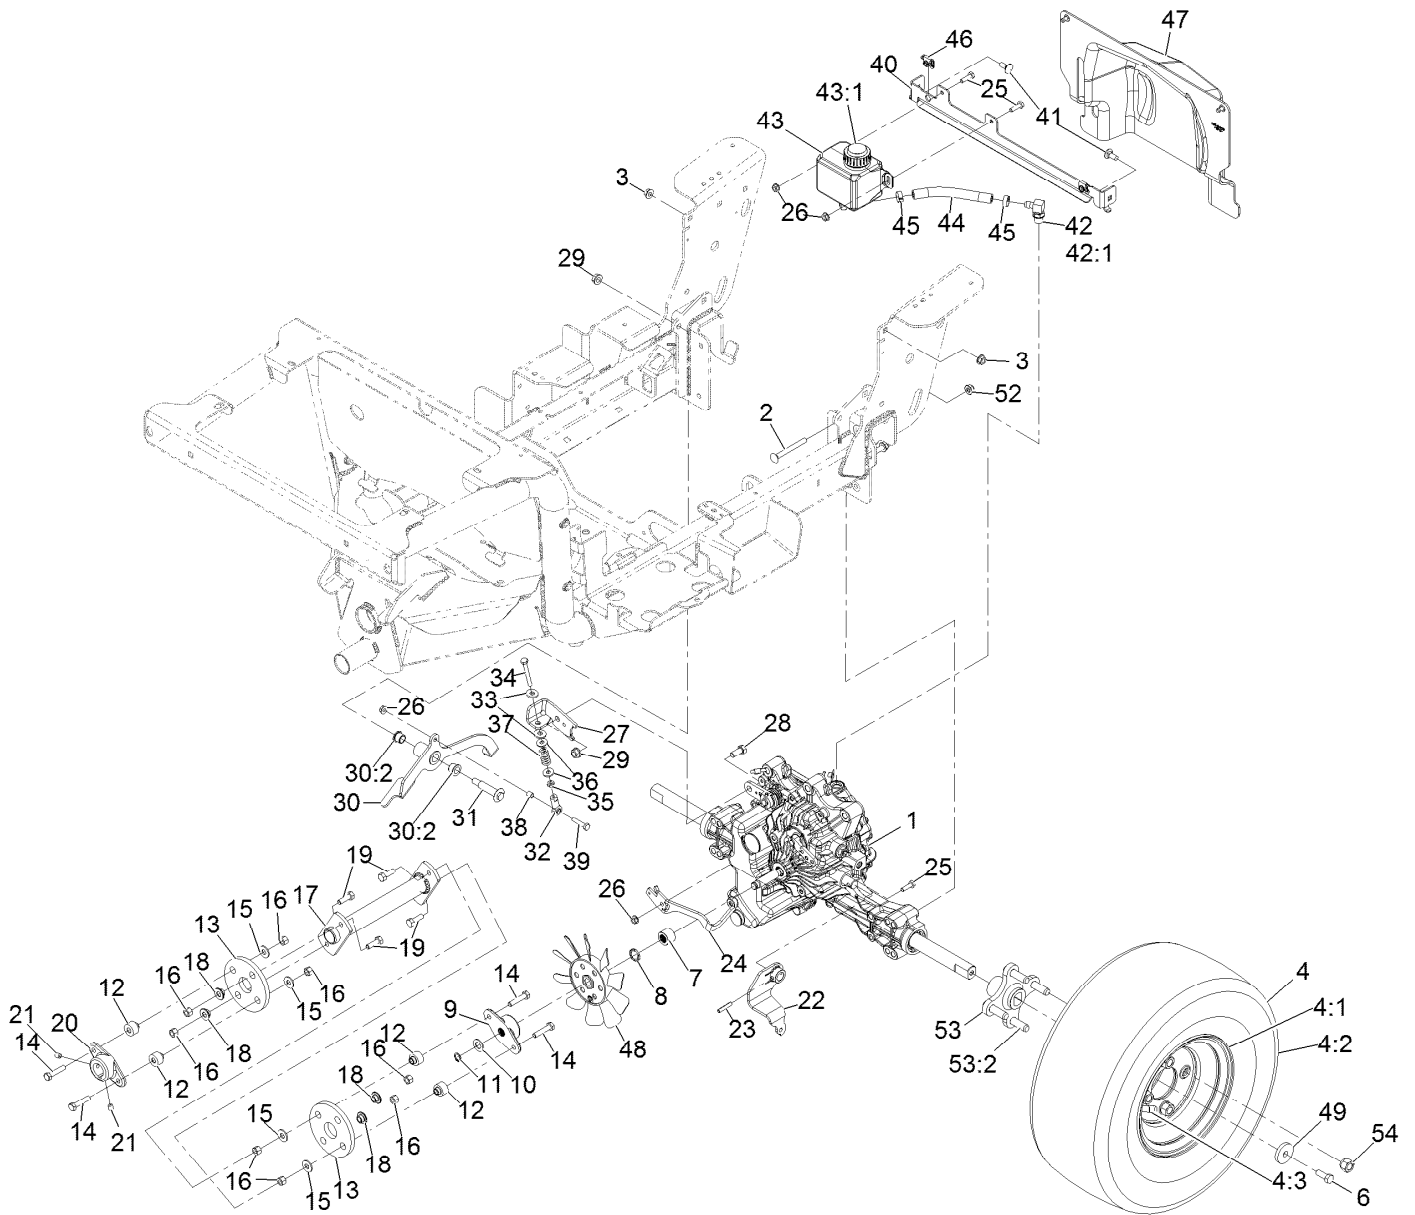

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	28	126-0520	1	Screw-HH
2	3230-26	4	Screw-CARR	29	135-2882	2	Nut-HF
3	135-2881	2	Nut-HF	30	126-0433	1	Brake Lever ASM
4	142-2738	2	Wheel And Tire ASM(18X7.5-8) Black	30:2	116-4279	2	Bearing-Flange
4:1	119-8907	1	Tire-4 Ply	31	92-1057	1	Bolt-Shoulder
4:2	142-2739	1	Wheel, 8 X 5.375	32	2411-41	1	Rod End-Ball Joint
4:3	232-27	1	Stem-Valve	33	1-303334	2	Washer-Spring Disc 5/16
6	135-1711	2	Screw-HH	34	126-4009	1	Screw-HH
7	126-2983	1	Spacer-Shaft, Input	35	3220-1	1	Nut-Jam 1/4-28
8	3290-317	1	Washer-Spring	36	3256-78	2	Washer
9	116-9787	1	Hub-Shaft, Transaxle	37	1-323245	1	Spring-Compression
10	605256	1	Spacer	38	612503	1	Spacer
11	32151-61	1	Ring-Retaining	39	321-8	1	Screw-HH 1/4-20 X 1 1/4
12	27-6590	4	Spacer-Coupling, Rubber	40	126-4423-03	1	Bracket-Mount, Tank
13	115-4523	2	Coupling-Rubber	41	126-0695	2	Screw-CARR
14	3210-8	4	Screw-HH 5/16-24 X 1 1/2	42	126-2927	1	Fitting-90 DEG
15	3256-3	4	Washer-5/16 Std	42:1	237-42	1	O-Ring
16	32152-5	8	Nut-Hex 5/16-24	43	126-2578	1	Tank ASM
17	135-5223-03	1	Shaft-Drive	43:1	126-2579	1	Cap-Tank
18	125-9249	4	Spacer-Coupler, Rubber	44	126-2842	1	Hose-Expansion
19	3210-5	4	Screw-HH	45	126-3749	2	Clamp
20	116-9788	1	Hub-Shaft, Engine	46	119-1730	2	Receptacle-Clip, Mini
21	3246-18	2	Setscrew-5/16-18 X 3/8	47	126-1462	1	Transaxle Cover ASM
22	126-6243-03	1	Arm-Motion	48	126-2980	1	Fan-7 Inch
23	126-4295	1	Pin-Spiral	49	1-543610	2	Washer
24	126-2811-03	1	Arm-Release	52	104-8300	4	Nut-Nyloc 5/16-18 Flg
25	126-0498	3	Screw-HH 1/4-20 X 7/8 SS	53	126-9884	2	Wheel Hub ASM
26	135-2880	4	Nut-HF	53:2	10-6830	4	Stud-Type, Drive
27	126-3937-03	1	Arm-Brake	54	242-50	4	Nut-Lug 1/2-20

Transaxle Cover Assembly No. 126-1462

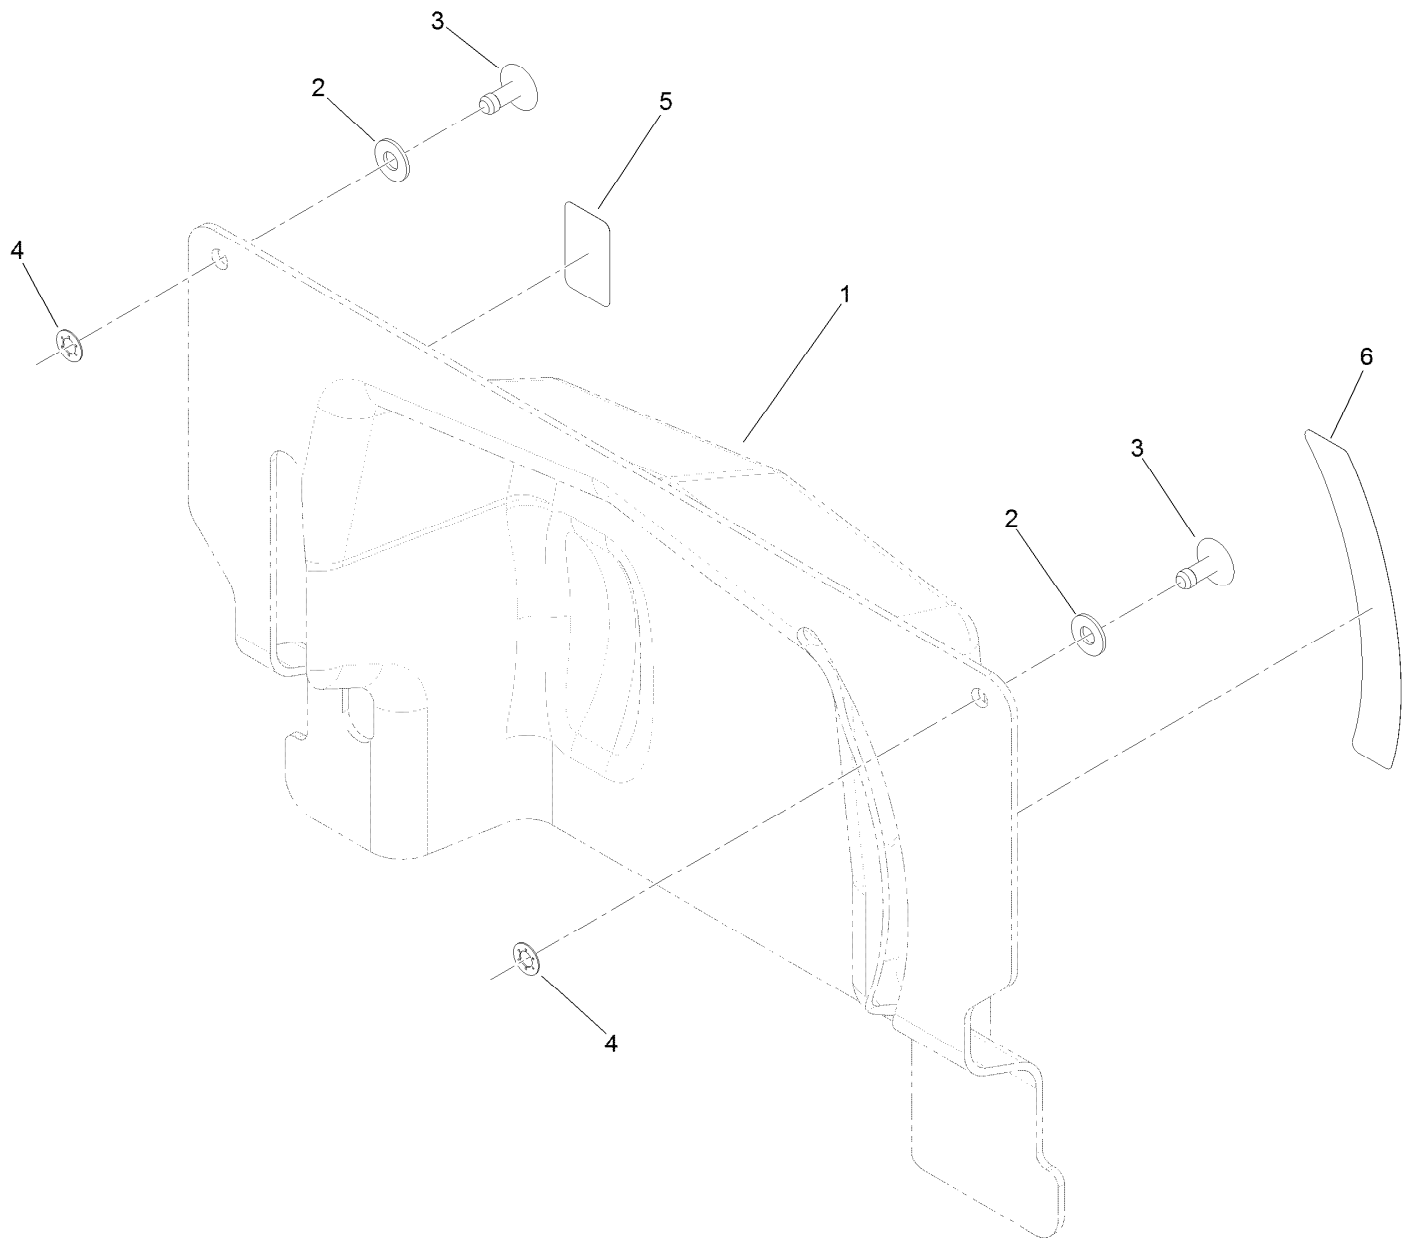


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately

Electrical Assembly

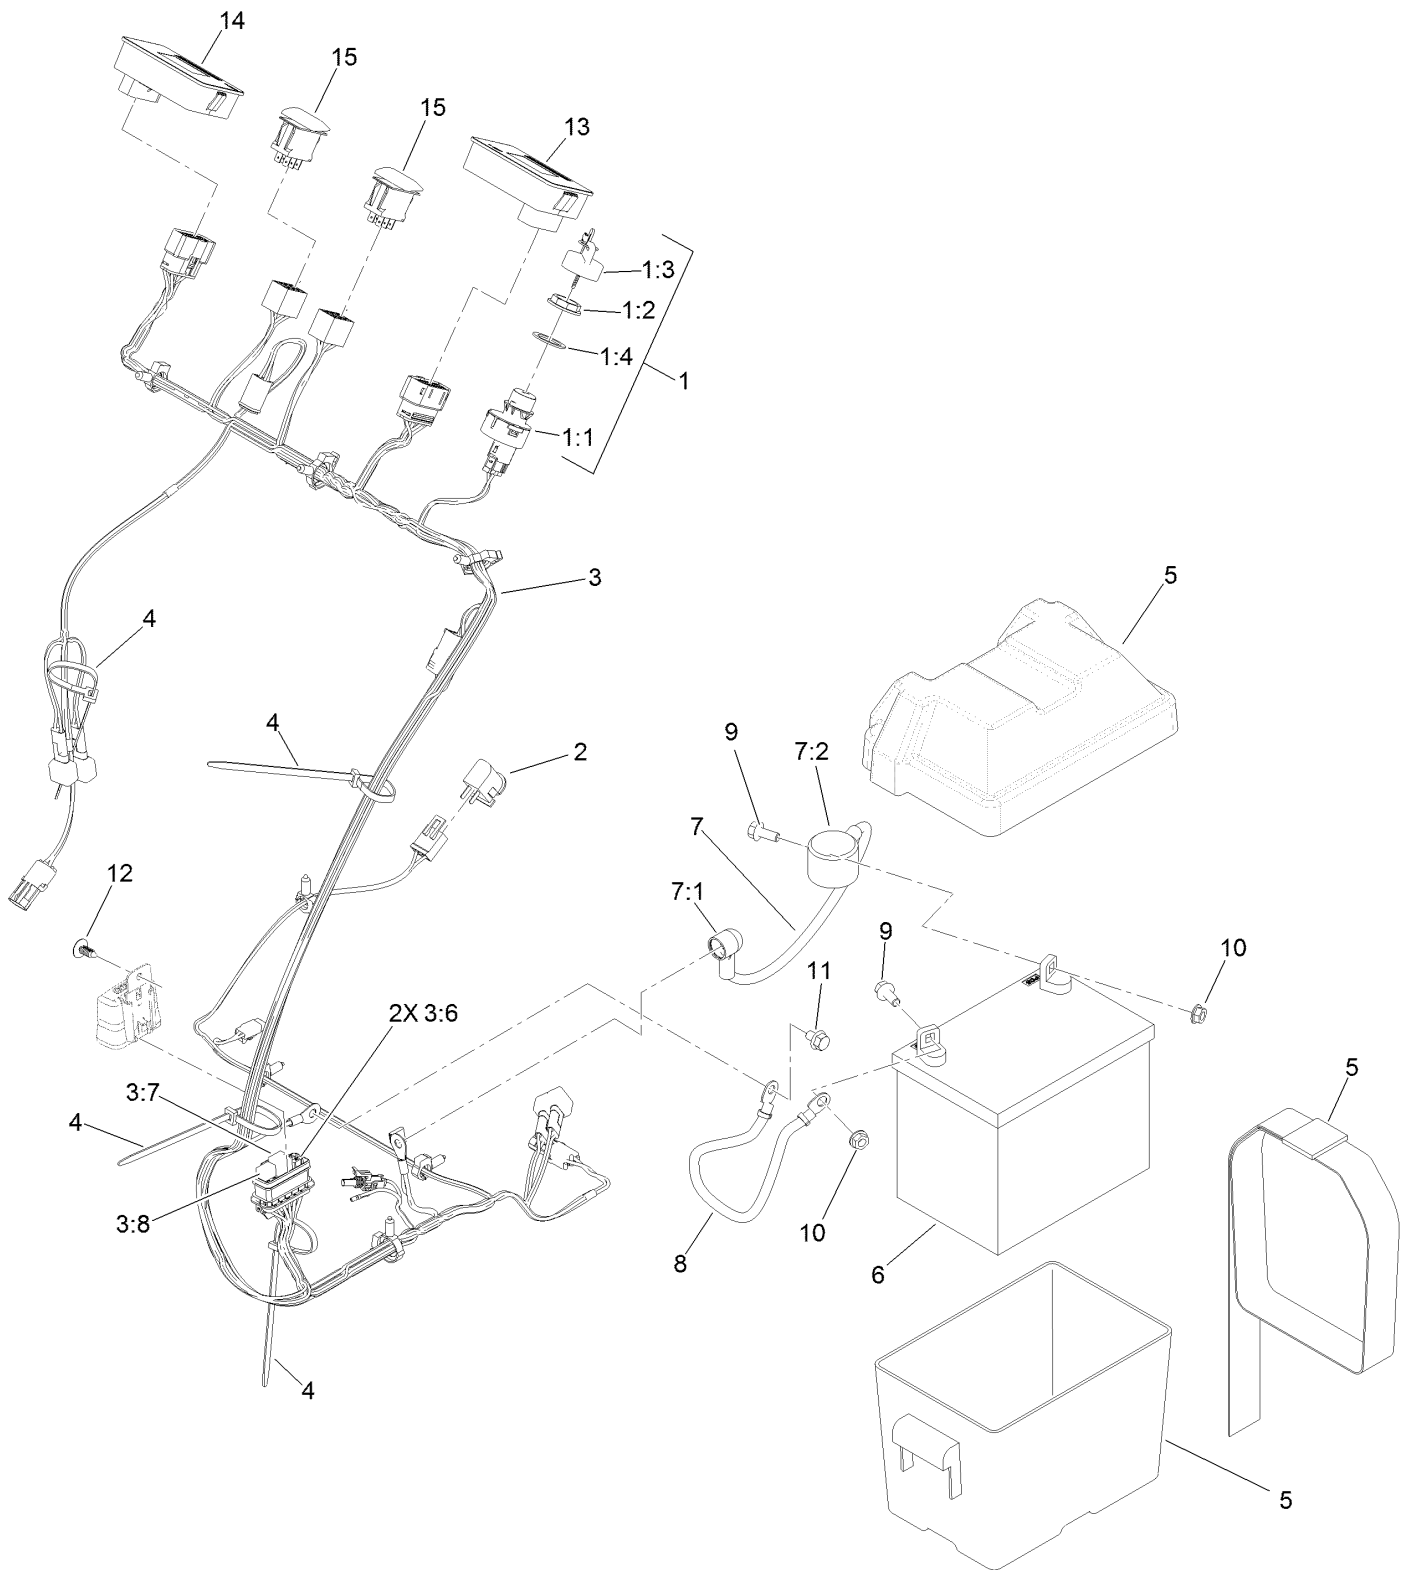

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6285	1	Ignition Switch ASM	7	135-4669	1	Positive Battery Cable ASM
1:1		1	Switch-Ignition ●	7:1	1-543393	1	Insulator-Solenoid
1:2	108-8660	1	Nut-Mounting	7:2	109-2407	1	Insulator-Battery
1:3	106-5270	1	Ignition Key Set	8	114-9715	1	Cable-Battery, Negative
1:4	108-8659	1	Washer-Backup	9	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
2	82-2190	1	Switch	10	135-2881	2	Nut-HF
3	135-6127	1	Harness-Wire	11	68-9410	1	Screw-HHF
3:6	121-8868	2	Fuse-Mini Blade, 20 Amp	12	117-2382	1	Plug-Plastic
3:7	126-3991	1	Relay-Micro	13	135-6674	1	Hour Meter ASM
3:8	135-5221	1	Relay-Coil, NC, Mp280	14	135-6675	1	Hour Meter ASM
4	1-303335	4	Tie-Cable 7 15/16 (Large)	15	100-1535	2	Switch-Rocker, (On)-Off-(On)
5	126-1424	1	Battery Box				
6		1	Battery ●				

● Not serviced separately



Z Turf Equipment is part of the Exmark® family of products.

©2019 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.

415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375 • Fax (402) 223-5489

www.zturfequipment.com

