



1232XL

Lawn Tractor

Model No. 71199-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Frame & Body Assembly	3
Hood & Tower Assembly	4
Rear Body & Seat Assembly	5
Steering Components Assembly	6
Fixed Steering Assembly	7
Engine Systems Components Assembly	8
Traction Clutching Components Assembly	9
Shifting Components Assembly	10
5 Speed Transaxle Assembly	11
32" Deck Components Assembly	12
32" Deck Blade Drive & Braking Components	

Description	Page
Assembly	13
Height of Cut Components Assembly	14
Electrical Components Assembly	15
Wire Schematic	16
Engine System Components Assembly	17
32" Deck Components Assembly	18
Engine Briggs & Stratton	
Model 284707–1148–E1	19–27
Peerless Transaxle Model MST 205–509 ...	28–29
Maintenance	30–31

Accessories

Description	Model / Part No.
Easy Empty Bagging Kit ..	Model 70095 or 79096
Twin Bag Bagger Kit	Model 79085 or 79086
Recycler Kit	Model 59167
Hi–Sail Bagging Blade (Std. on this Model)	Part No. 33–4750
Wet Grass Bagging Kit	Part No. 38–3750

 
Description	Model / Part No.
Tire Chains	Part No. 47–7220
Headlight Kit	Model 79180
42" Snowblade Kit	Model 79150
Wheel Weight Kit	Model 59159
Exhaust Deflector Kit	Part No. 94–6872

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming


Abbreviation	Meaning
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

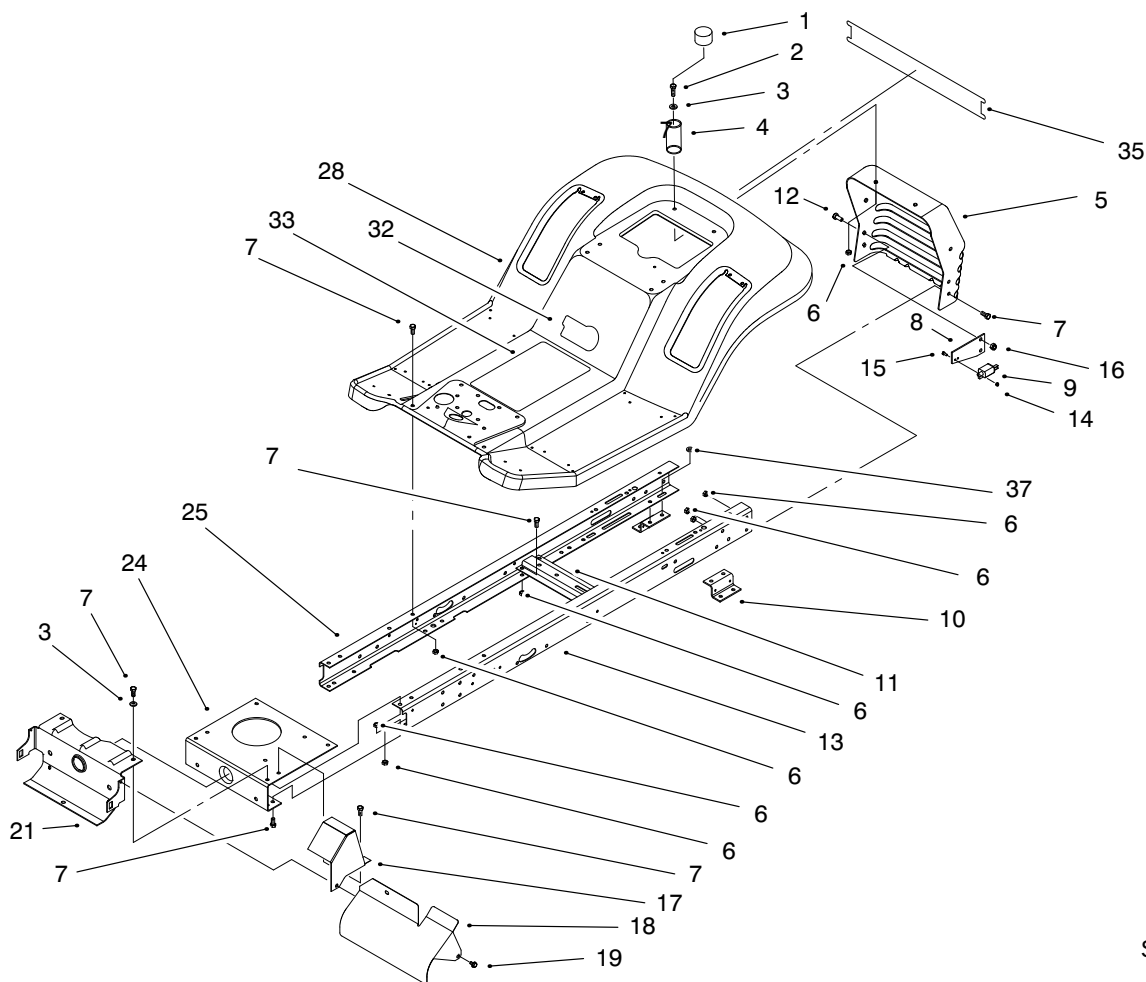

Sheet No.:2

Frame & Body Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector	33	99-6094	1	Decal – Instruction
2	322-5	2	Screw-HH	35	95-0809	1	Decal-Rear Body
3	3256-23	4	Washer-Flat	37	3256-23	2	Washer-Flat
4	88-6220	2	Spring – Compression				
5	99-2957-03	1	Panel-Rear Hitch				
6	3296-29	24	Nut-Lock				
7	322-3	22	Screw-HH				
8	99-2953-03	1	Plate-Switch				
9	95-1653	1	Switch – Single Pole				
10	94-1967-03	2	Brkt-Tran Mntg (Black)				
11	88-4620-03	1	Bracket-Idler Pivot				
12	322-3	2	Screw-HH				
13	99-2958-03	1	Rail- LH Frame				
14	3296-1	2	Nut-Lock Ni				
15	3290-392	2	Screw – Hex Head Slot				
16	3296-29	2	Nut-Lock				
17	88-4960-03	1	Shield-Exhaust Pipe				
18	88-6290-03	1	Shield-Muffler				
19	32104-76	1	Screw-Acorn Slot				
21	98-3575-03	1	Support-Front Axle				
24	88-4630-03	1	Plate-Eng Mtg				
25	99-2959-03	1	Rail- RH Frame				
28	99-2971	1	Body ASM-Rear				
32	76-1340	1	Decal – USA				

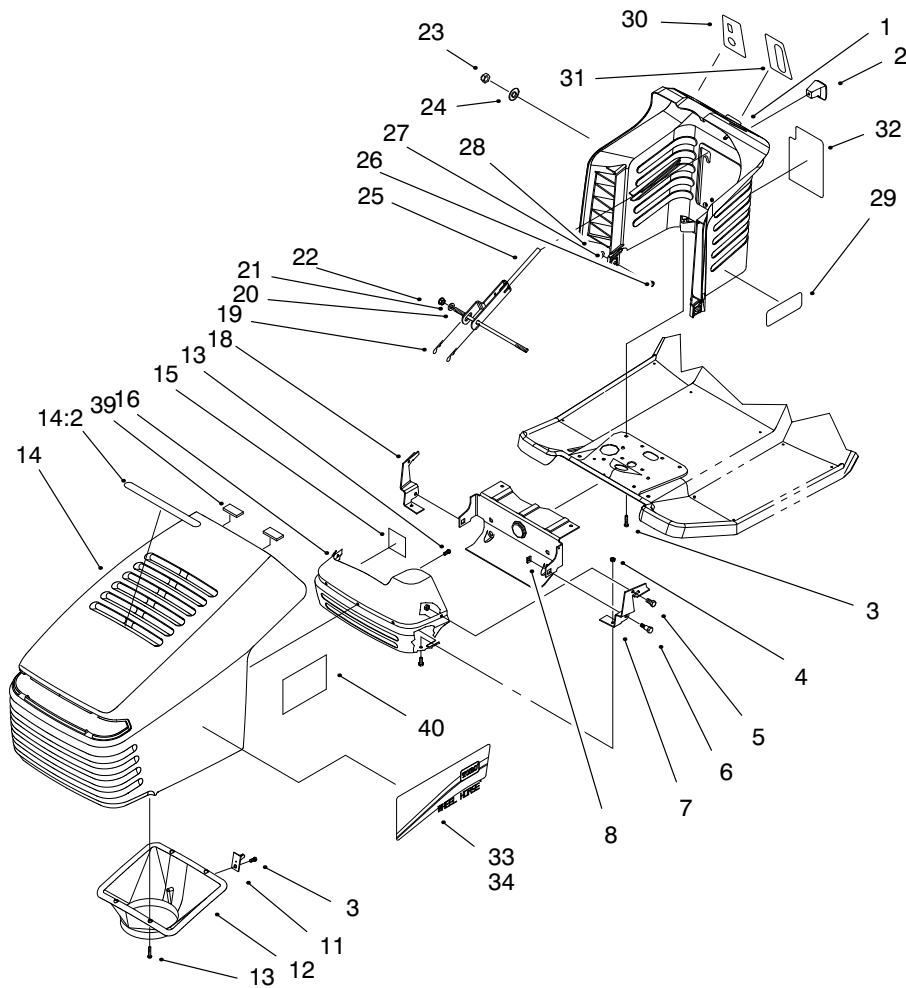 


Sheet No.:3

Hood & Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering
2	94-5565	1	Knob - Shift
3	46-8091	3	Special-HWH
4	3296-42	4	Nut-Lock
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-LH Hinge
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch - Pin
12	88-4050	1	Duct-Air
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood-V-Chassis
14		1	Toro
14:2	92-5748	1	Hood-w/Decal Toro
14:2	92-5782	1	Decal-Air Duct Toro
15	92-5782	3	Foil Tape
16	88-3930-03	1	Shield-Heat
18	88-6040-03	1	Bracket-RH Hinge
19	3290-307	2	Cotter-Hairpin
20	100-7401	1	Rod-Tower Pivot
21	3256-24	2	Washer-Flat
22	3218-3	2	Nut-Jam
23	100-7402	2	Nut-Cap
24	100-7403	2	Washer-Flat
25	88-5190-03	1	Deck Engage Lev Wa
26	3296-29	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
29	92-2480	2	Decal - 1232xl
30	99-8140	1	Decal-Ignition
31	92-2461	1	Decal - Throttle
32	92-2462	1	Decal - Deck Engage
33	95-0808	1	Decal - Hood Left
34	95-0807	1	Decal - Hood Right
39	94-1980	2	Foam - Hood
40	100-6220	1	Decal-Service, 71199

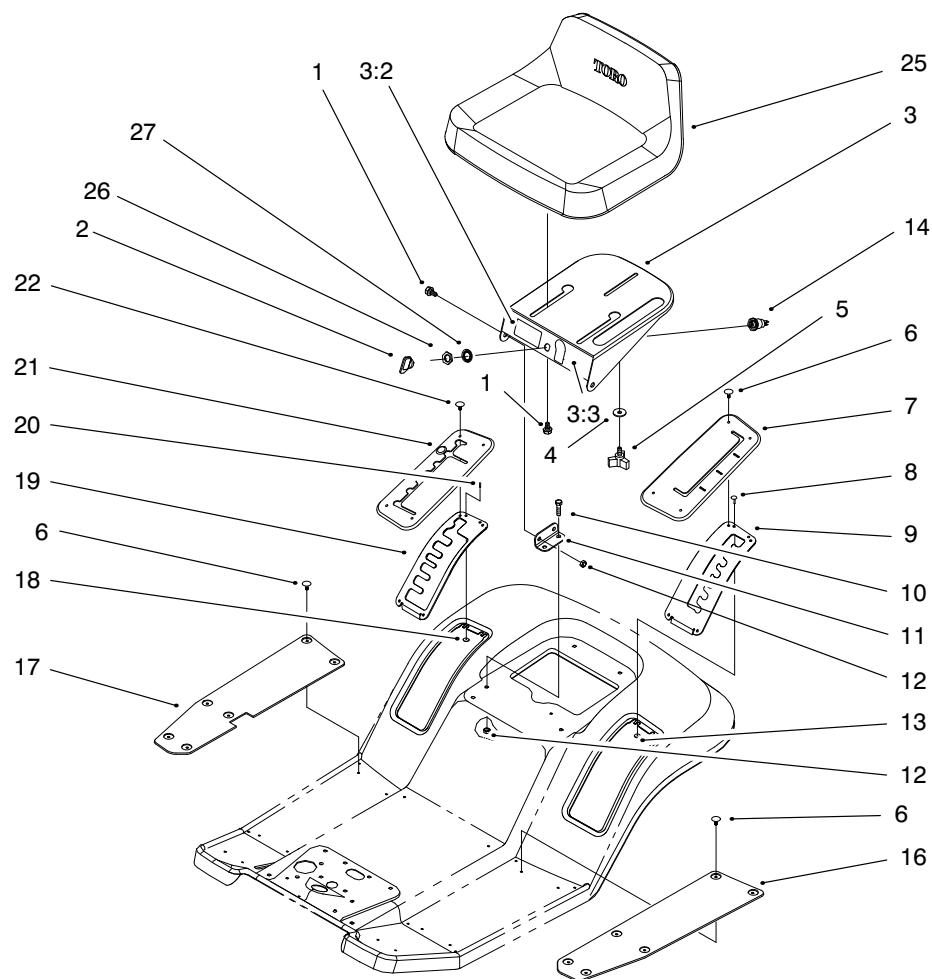 

Sheet No.:4

Rear Body & Seat Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder				
2	63-8360	1	Key-Ignition w/Shield				
3	99-5830	1	Support ASM-Seat				
3:2	99-2985	1	Decal-Danger				
3:3	99-5339	1	Decal-Nmir Switch				
4	5-4460	1	Washer-Pivot				
5	92-9674	1	Knob				
6	3290-479	16	Fastener-Panel				
7	88-5170	1	Cover - HOC				
8	3290-282	2	Rivet-Stl Pop				
9	88-5030-03	1	Gate-HOC				
10	322-3	4	Screw-HH				
11	88-4820-03	2	Bracket-Seat Hinge				
12	3296-29	6	Nut-Lock				
13	3269-26	2	Washer-Flat				
14	46-5780	1	Switch-Starter				
16	88-5240	1	Mat-LH Foot				
17	88-5220	1	Mat-RH Foot				
18	3269-26	2	Washer-Flat				
19	88-5020-03	1	Plate-Shift Gate				
20	3290-282	2	Rivet-Stl Pop				
21	88-5160	1	Cover-Shift Gate				
22	3290-479	4	Fastener-Panel				
25	88-4330	1	Seat				
26	218-461	1	Nut-HH				
27	3254-5	1	Washer-Lock/Int				

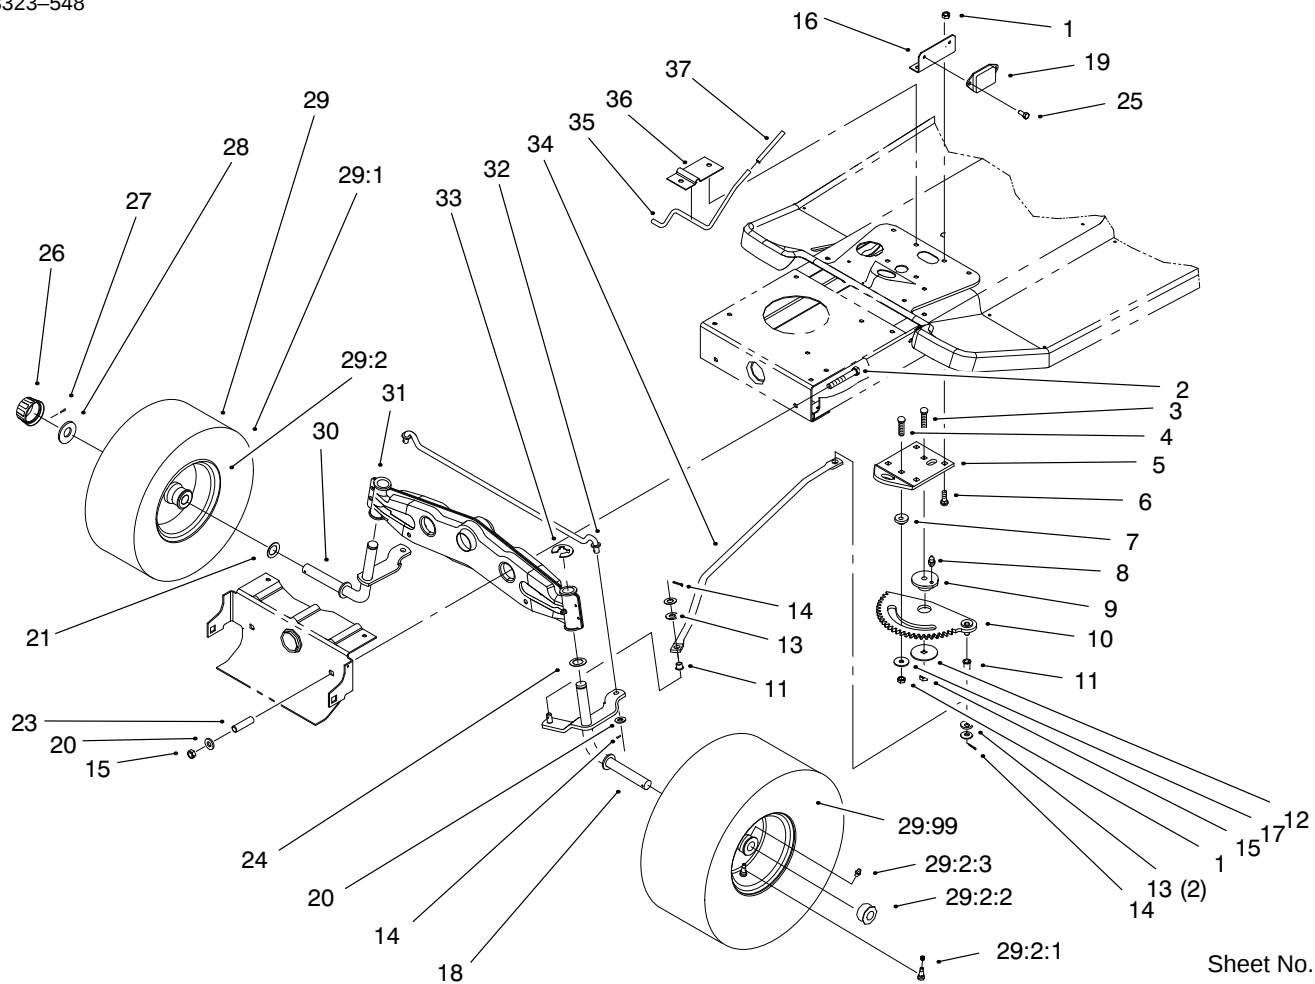 


Sheet No.:5

Steering Components Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Steering Rack
6	3230-2	4	Screw-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Zerk
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Steering Rack Wa *B
11	52-2891	2	Bushing-Steering Link
12	111419	1	Bearing-Washer
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock Ni
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	LH Spindle Wa
19	99-3700	1	Module-Nmir
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Front Axle
24	3-6498	4	Washer-Thrust
25	9266714	2	Screw-HWH


Ref. No.	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Wheel&tire ASM-Front
29:1	99-2992	1	Tire
29:2	88-4360	1	Rim Assembly
29:2:1	232-27	1	Stem-Valve
29:2:2	88-4400	2	Bearing - Wheel
29:2:3	302-5	1	Fitting-Lube
29:99	232-38	1	Tube
30	92-7889-03	1	RH Spindle Wa
31	94-1962-03	1	Axle Wa-Front
32	88-5380	1	Tie Rod - Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Parking Brake
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip-Bag Handle

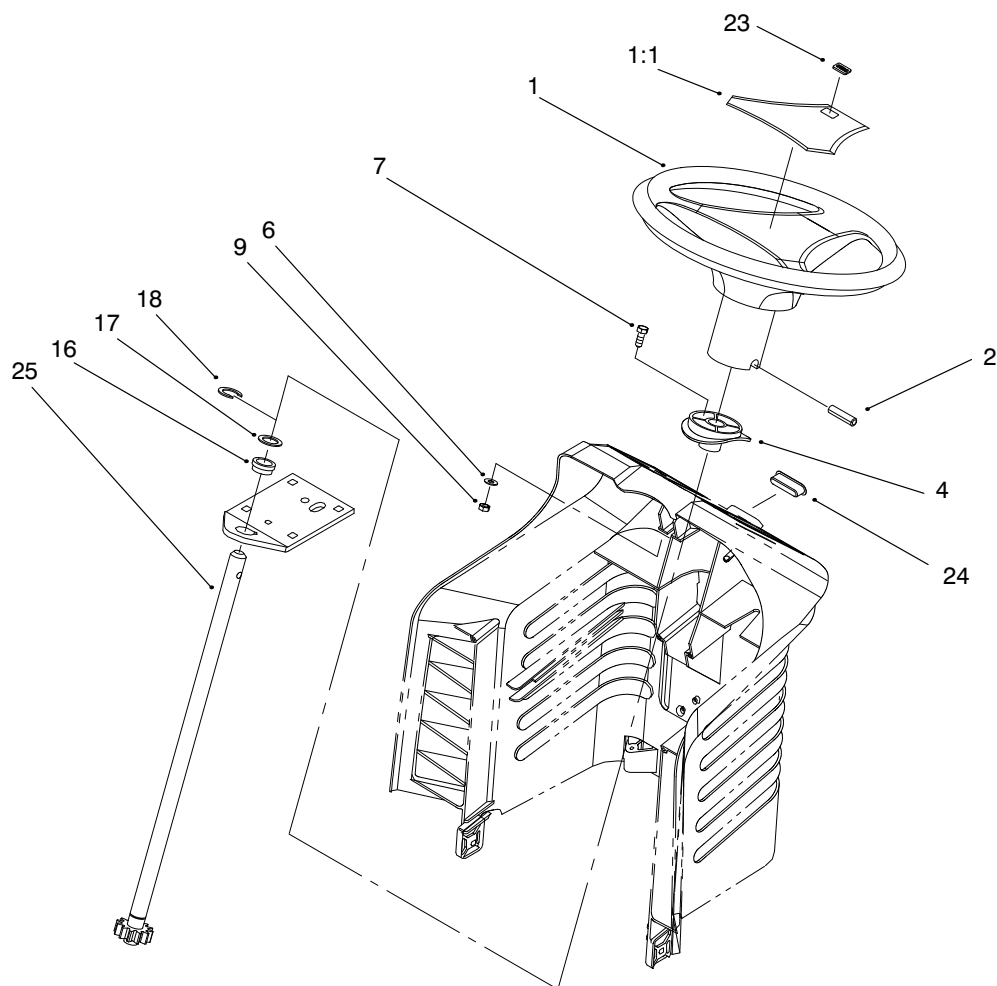 

Sheet No.:7

Fixed Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1467	1	Wheel – Steering
1:1	98-1468	1	Cover – Wheel, Steering
2	32121-111	1	Pin-Roll
4	88-4190	1	Bushing – Sliding
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
9	3296-42	2	Nut-Lock
16	88-5150	1	Bearing-Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	E-Ring
23	98-1459	1	Decal – Toro
24	88-4150	1	Plug
25	88-6380	1	Long Steering Shaft Wa

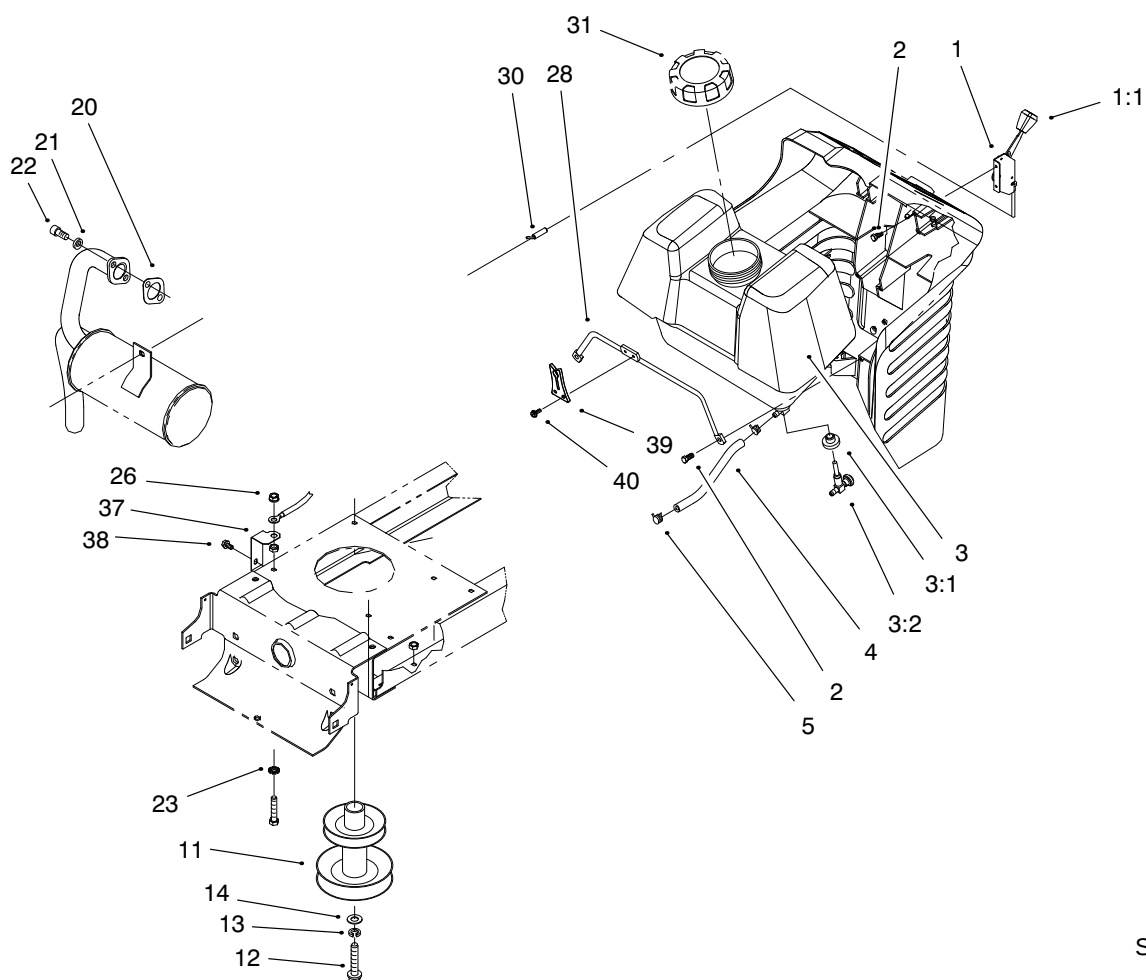 


Sheet No.:8

Engine Systems Components Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	104047	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Gas
5	2412-98	2	Clamp
11	88-5050	1	Pulley-Engine
12	62-3760	1	Screw-HH
13	3253-22	1	Washer-Lock/Sp
14	3256-25	1	Washer-Flat
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock/Sp
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock/Ext
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod - Gas Tank
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap Assembly
37	93-3809	1	Bracket- Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch - Hood
40	32144-112	2	Screw-Forming, Thread


Ref. No.	Part No.	Qty.	Description

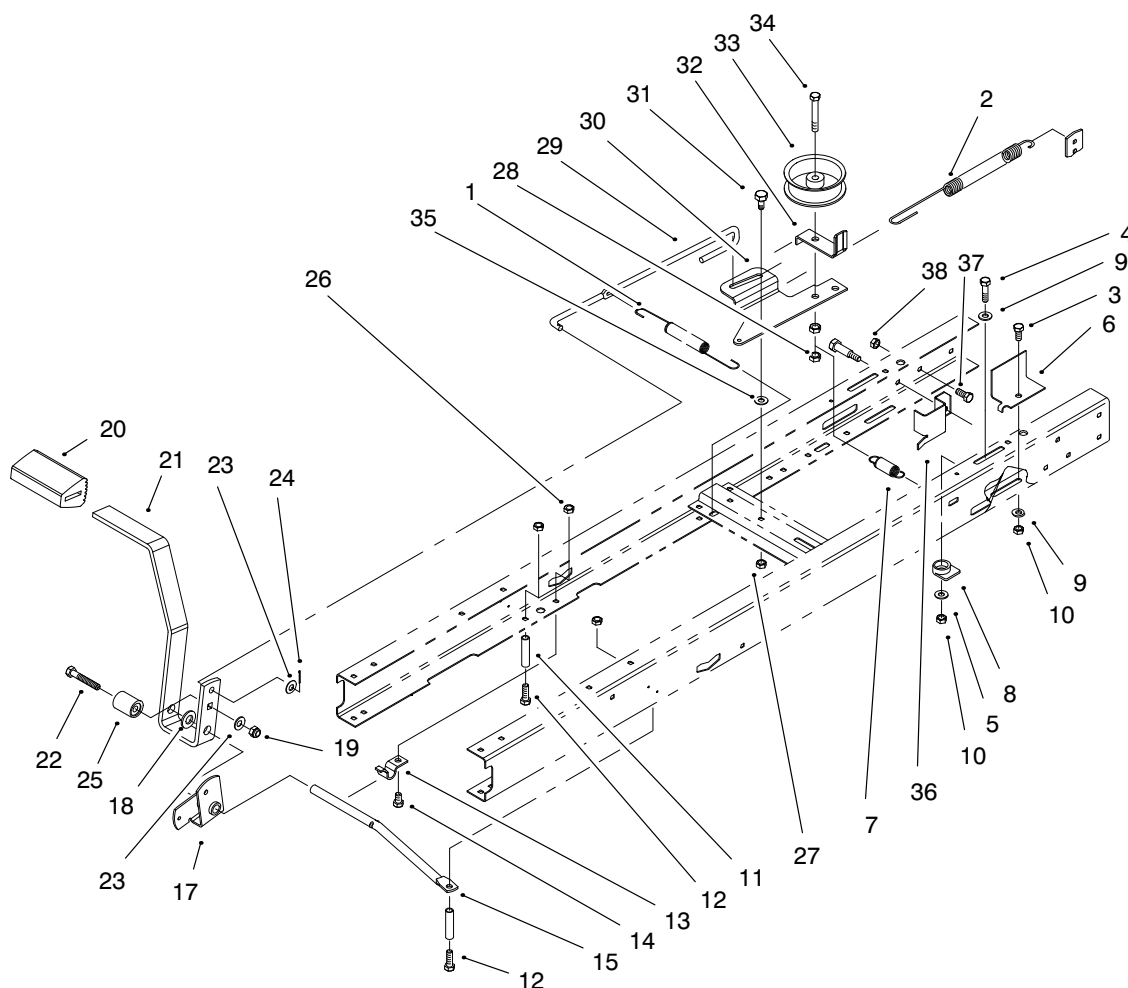 

Sheet No.:9

Traction Clutching Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring-Return	28	3296-59	2	Nut-Lock Ni
2	94-4295	1	Spring - Brake	29	88-5270	1	Rod-Clutch/Brake
3	322-3	1	Screw-HH	30	88-6070	1	Arm-Idler
4	322-6	1	Screw-HH	31	37-8770	1	Bolt-Shoulder
5	5-4460	1	Washer-Pivot	32	88-5560	1	Guide-Idler Belt
6	94-5433	1	Bracket - Belt Guide	33	88-5680	1	Pulley-Idler
7	88-6330	1	Spring - Extension	34	323-11	1	Screw-HH
8	84-5610	1	Guide-Cable	35	5-4460	1	Washer-Pivot
9	3256-23	2	Washer-Flat	36	94-4926	1	Bracket - Belt Guide
10	3296-29	2	Nut-Lock	37	322-3	1	Screw-HH
11	46-5590	2	Tubing-Spacer	38	3296-29	1	Nut-Lock
12	322-12	2	Screw-HH				
13	88-4810	1	Clamp-Shift Pivot				
14	322-3	1	Screw-HH				
15	88-5500	1	Rod-Pedal Pivot				
17	88-4800-03	1	Bellcrank				
18	3256-26	1	Washer-Flat				
19	3296-29	1	Nut-Lock				
20	65-2920	1	Pad-Pedal				
21	88-5000-03	1	Pedal-Clutch/Brake				
22	322-10	1	Screw-HH				
23	3256-23	2	Washer-Flat				
24	3272-10	1	Pin-Cotter				
25	99-6836	1	Spacer-Switch				
26	3296-29	3	Nut-Lock				
27	3296-29	1	Nut-Lock				

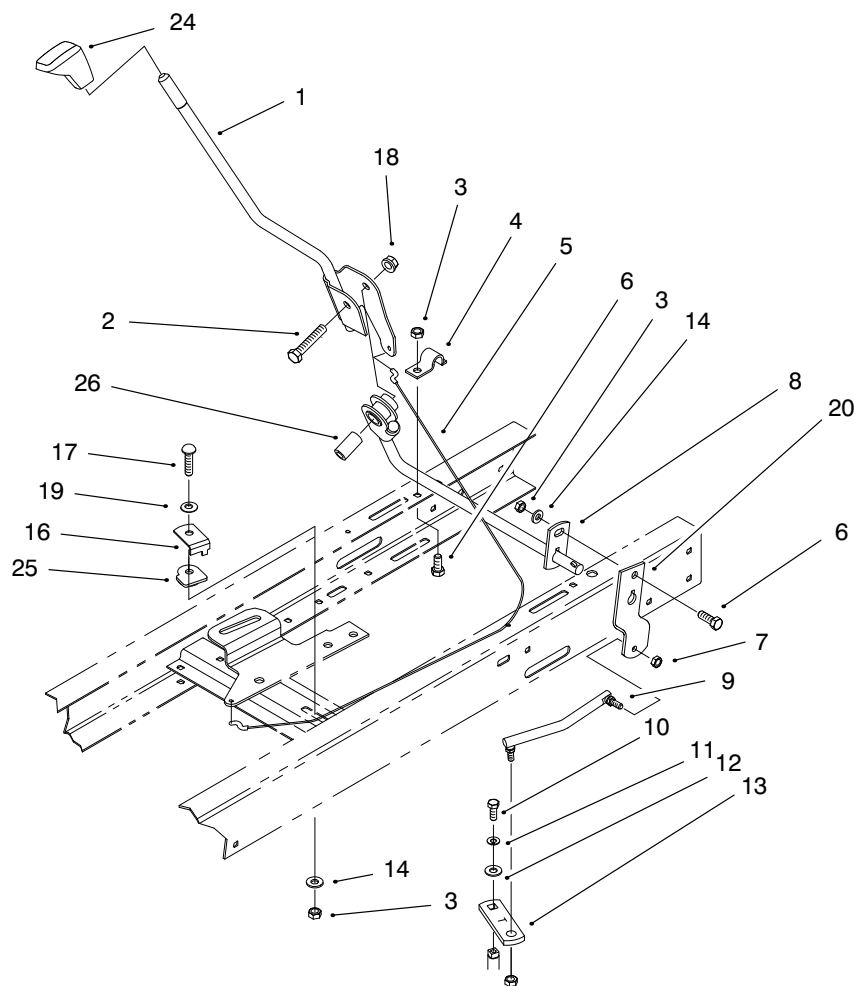 


Sheet No.:10

Shifting Components Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1991-03	1	Wa-Shift Lever (Black)
2	323-10	1	Screw-HH
3	3296-29	4	Nut-Lock
4	88-4810	2	Clamp-Shift Pivot
5	55-9321	1	Cable-Clutch
6	322-3	3	Screw-HH
7	3296-3	2	Nut-Lock Ni
8	94-1993-10	1	Wa-Shift Pivot*
9	94-5432	1	Link - Shift
10	329-23	1	Screw-HH
11	3253-3	1	Washer-Lock/Sp
12	7-5461	1	Spacer
13	88-5340	1	Lever-Shift
14	3256-23	2	Washer-Flat
16	88-5930	1	Keeper-Cable
17	3230-3	1	Screw-CARR
18	3296-39	1	Nut-Lock Ni
19	3256-25	1	Washer-Flat
20	94-1968	1	Lever-Shift Pivot
24	94-5565	1	Knob - Shift
25	84-5610	1	Guide-Cable
26	94-1997	1	Bushing - Shift Lever


Ref. No.	Part No.	Qty.	Description

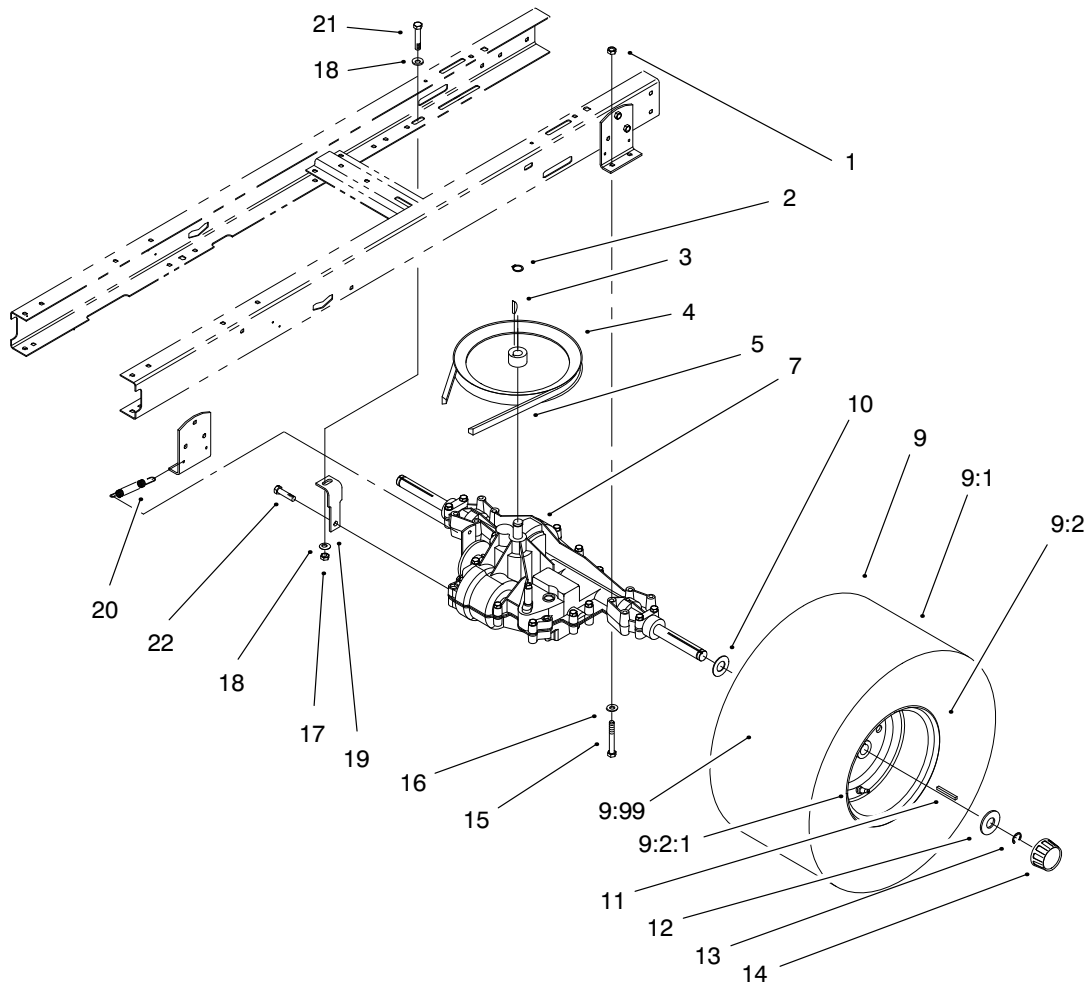 

Sheet No.:11

5 Speed Transaxle Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock				
2	32120-64	1	Ring-External Snap				
3	3257-23	1	Key-Woodruff				
4	88-4840	1	Pulley - Transmission				
5	94-4291	1	Belt - V Traction				
7	94-6022	1	Transaxle				
9		2	Wheel&tire				
			ASM-Rear				
9:1	99-2336	1	Tire				
9:2	88-4380	1	Rim Assembly				
9:2:1	232-27	1	Stem-Valve				
9:99	231-91	1	Tube				
10	3-6498	2	Washer-Thrust				
11	7-0036	2	Key				
12	28-2480	2	Washer				
13	32151-48	2	E-Ring				
14	61-9780	2	Cap-Hub				
15	322-12	4	Screw-HH				
16	3256-23	4	Washer-Flat				
17	3296-29	2	Nut-Lock				
18	3256-23	4	Washer-Flat				
19	94-1969	2	Strap - Torque				
20	26-6701	1	Spring-Brake Return				
21	322-3	2	Screw-HH				
22	32144-14	2	Screw-HWH				

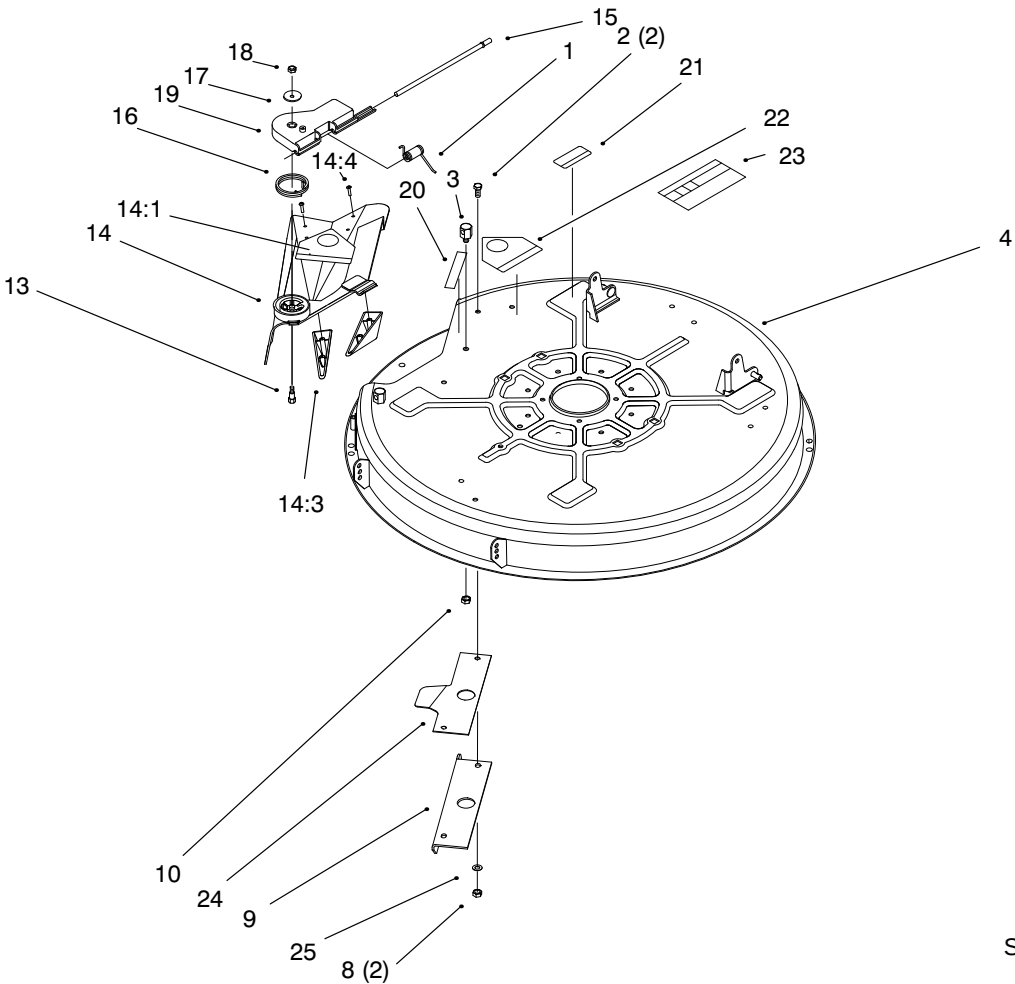 

Sheet No.:14

32" Deck Components Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-2493	1	Spring				
2	322-3	2	Screw-HH				
3	28-7350	1	Post-Pivot				
4	95-7482	1	ASM-Deck Dom (Service)				
8	3296-29	2	Nut-Lock				
9	44-5720-03	1	Baffle-Deck				
10	3296-59	1	Nut-Lock Ni				
13	92-8916	1	Bolt - Shoulder				
14	100-6200	1	ASM - Deflector, 32"				
14:1	93-1122	1	Decal - Danger				
14:3	93-7696	2	Kicker - Ce				
14:4	93-0231	4	Screw - PPH				
15	88-6150	1	Rod-Deflector Hinge				
16	88-6160	1	Spring-Torsion				
17	3256-58	1	Washer-Flat				
18	3296-42	1	Nut-Lock				
19	88-4540	1	Pivot-Hinge Deflector				
20	68-3650	1	Decal-Deflector Danger				
21	55-4300	2	Decal				
22	93-1122	1	Decal - Danger				
23	66-1340	1	Decal-Danger				
24	92-2494-03	1	Ramp-Deflector				
25	3256-23	2	Washer-Flat				

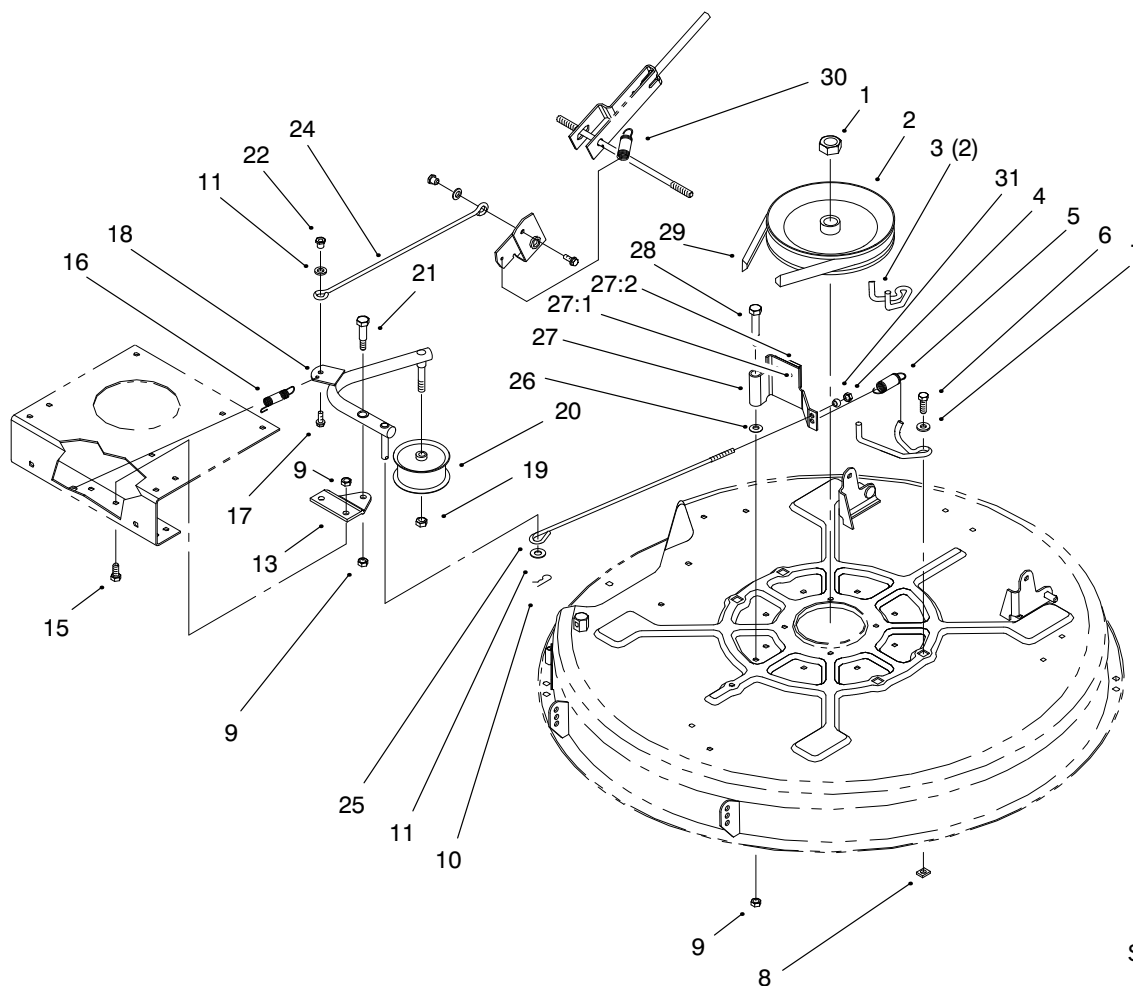 

Sheet No.:15

32" Deck Blade Drive & Braking Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex	27:2	56-9830	1	Pad-Brake
2	88-5060	1	Pulley-Deck	28	88-4590	1	Bolt-Shoulder
3	88-5760	2	Guide-Deck Belt	29	88-6260	1	V - Belt
4	3296-42	1	Nut-Lock	30	88-6420	1	Spring-Cable ASM
5	88-6330	1	Spring - Extension	31	67-0710	1	Ball-Swivel Stop
6	322-5	2	Screw-HH				
7	5-4460	2	Washer-Pivot				
8	3290-496	2	Nut-Retainer				
9	3296-29	4	Nut-Lock				
10	3290-307	1	Cotter-Hairpin				
11	3256-24	3	Washer-Flat				
13	88-5370-03	1	Plate-Idler Mtg				
15	322-3	2	Screw-HH				
16	26-6700	1	Spring-Brake Return				
17	3234-13	2	Screw-HHF				
18	88-5850-03	1	Idler Arm Wa				
19	3296-39	1	Nut-Lock Ni				
20	56-9870	1	Pulley-Idler				
21	7-0030	1	Bolt-Shoulder				
22	47-4990	2	Post-Linkage				
			Mounting				
24	88-5980	1	Rod-Deck Engage				
25	88-5690	1	Rod-Deck Brake				
26	3256-23	1	Washer-Flat				
27	88-6110	1	Brake Arm ASM				
27:1	3290-282	2	Rivet-Stl Pop				

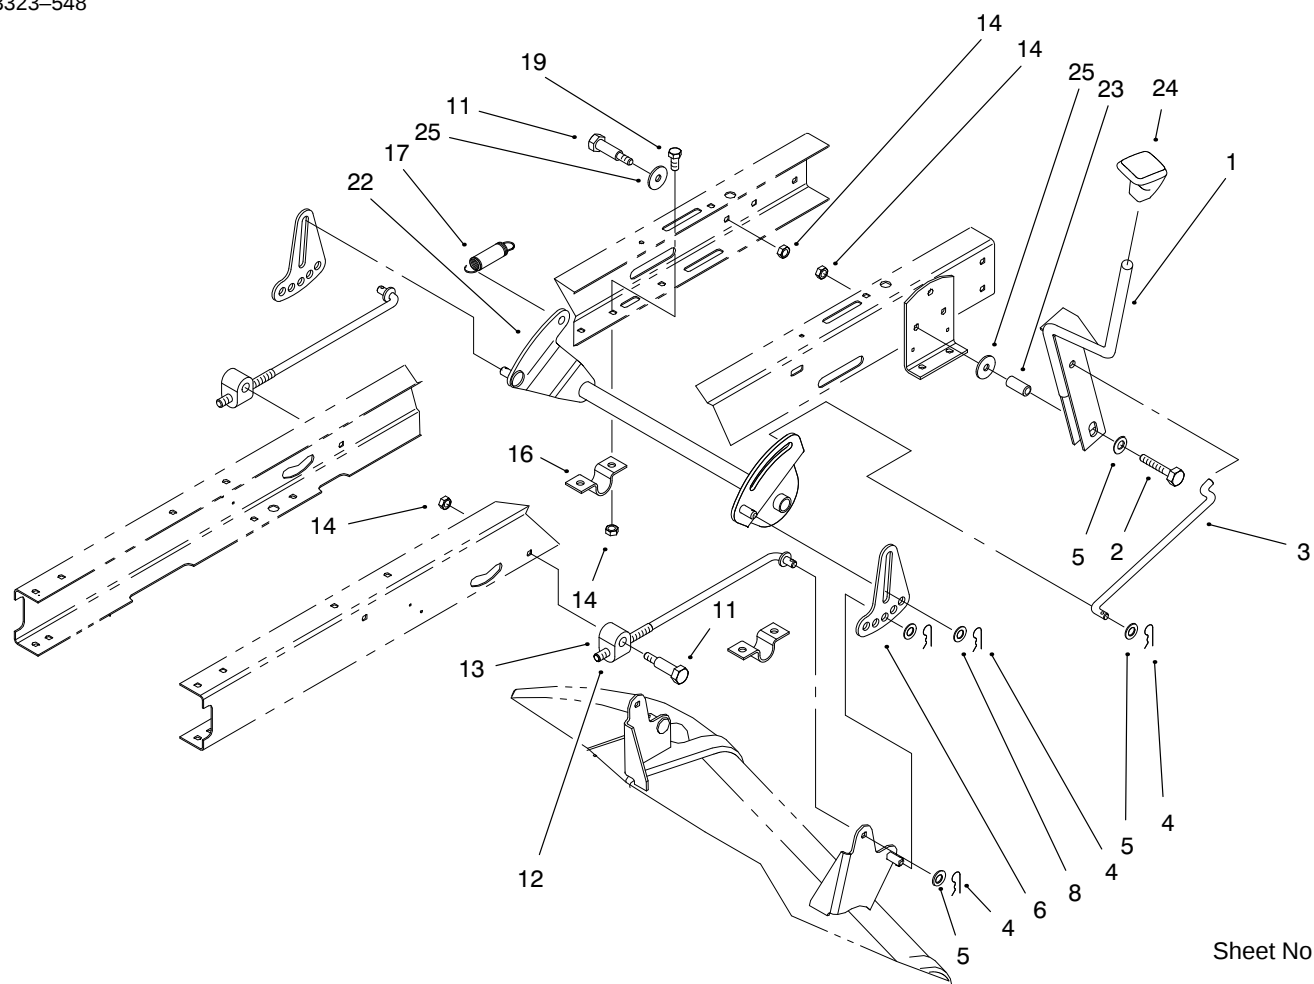 


Sheet No.:19

Height of Cut Components Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3822-03	1	Lever Wa
2	322-39	1	Screw-HH
3	88-5900	1	Link-HOC
4	3290-307	7	Cotter-Hairpin
5	3256-24	4	Washer-Flat
6	88-5570-03	2	Link-HOC Adjusting
8	80-6990	4	Washer-Hardened
11	7-0030	3	Bolt-Shoulder
12	88-5450	2	Rod-Hanger Rear
13	88-4230	2	Trunnion-HOC
14	3296-29	8	Nut-Lock
16	88-4730	2	Clamp-HOC Pivot
17	88-6460	1	Spring - Extension
19	322-3	4	Screw-HH
22	88-5110-03	1	Pivot Wa
23	65-7210	1	Spacer
24	94-5565	1	Knob - Shift
25	5-4460	2	Washer-Pivot


Ref. No.	Part No.	Qty.	Description

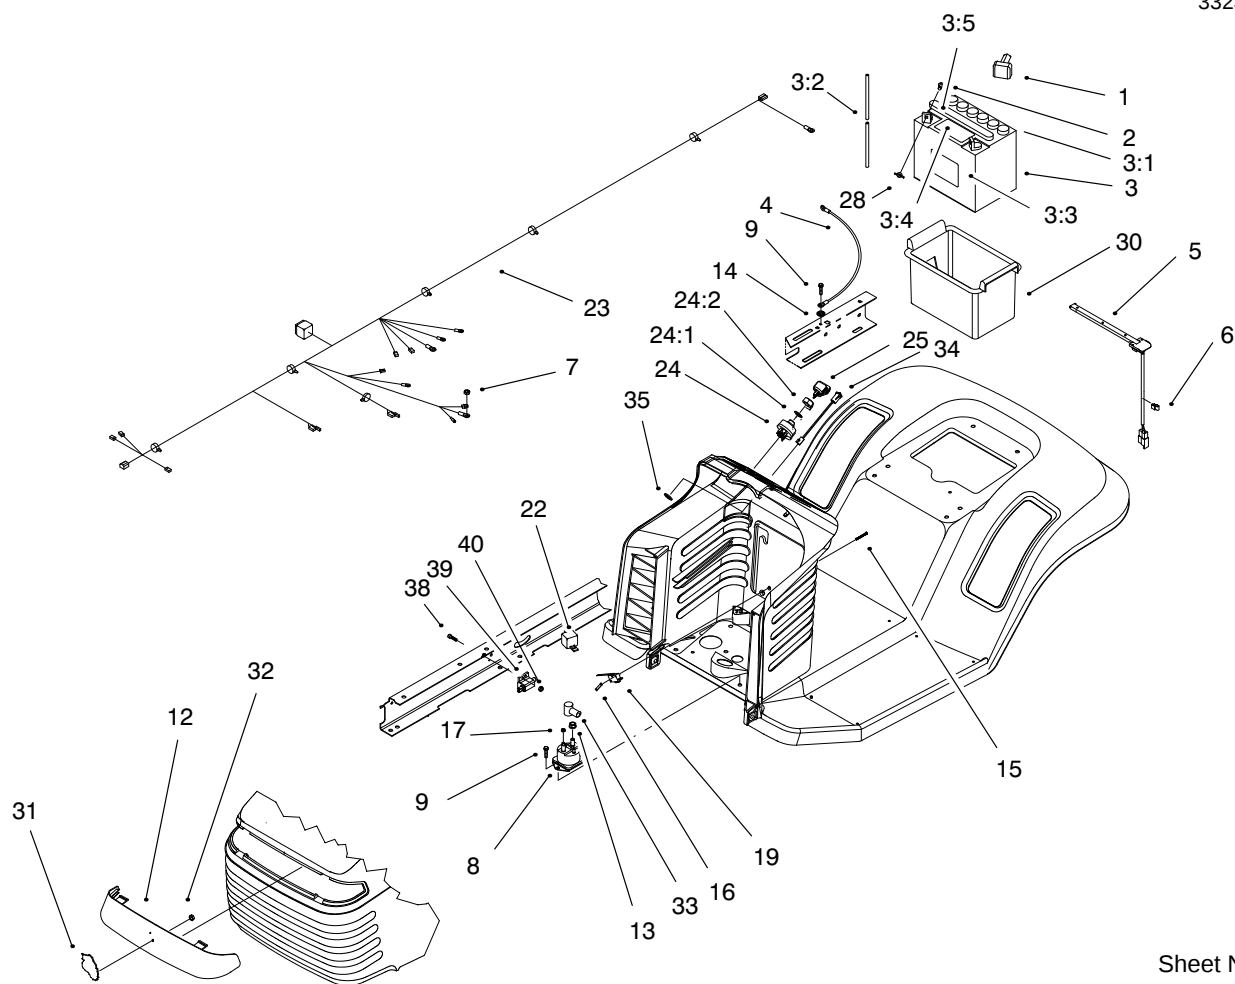 

Sheet No.:20

Electrical Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal	24:2	218-461	1	Nut-HH
2	321-4	2	Screw-HH	25	63-8360	1	Key-Ignition w/Shield
3	80-2600	1	Battery	28	32103-22	2	Nut-Wing
3:1	218-560	6	Cap-Battery	30	88-4040	1	Box-Battery
3:2	56-2540	1	Tube-Batt Drain/80-2600	31	80-2240	1	Emblem-Grille Whlhorse
3:3	93-6668	1	Decal - Battery	32	3290-299	1	Clip
3:4	93-7276	1	Decal - Danger	33	94-5362	1	Boot - Terminal Insulator
3:5	93-9354	1	Decal - Danger	34	95-7652	1	Light - Indicator
4	44-8110	1	Wire ASM	35	99-6059	1	Clip-Retainer
5	38-1420	1	Switch-Seat	38	3274-14	2	Screw-HSH
6	702366	1	Clip-Wire Retainer	39	65-7410	1	Switch - Single Pole
7	32149-2	1	Nut-Keps	40	3296-2	2	Nut-Lock
8	28-4210	1	Solenoid				
9	9266714	3	Screw-HWH				
12	88-3960	1	Lens-Headlight				
13	32149-1	2	Nut-Keps				
14	3255-7	2	Washer-Lock/Ext				
15	93-0539	2	Screw-HH				
16	3290-354	1	Nut-Speed				
17	32149-8	2	Keps Nut				
19	88-9932	1	Switch-Micro				
22	98-7249	1	Relay-Spdt				
23	99-6841	1	Harness-Wire, Gear				
24	88-9830	1	Switch-Ignition				
24:1	3254-5	1	Washer-Lock/Int				

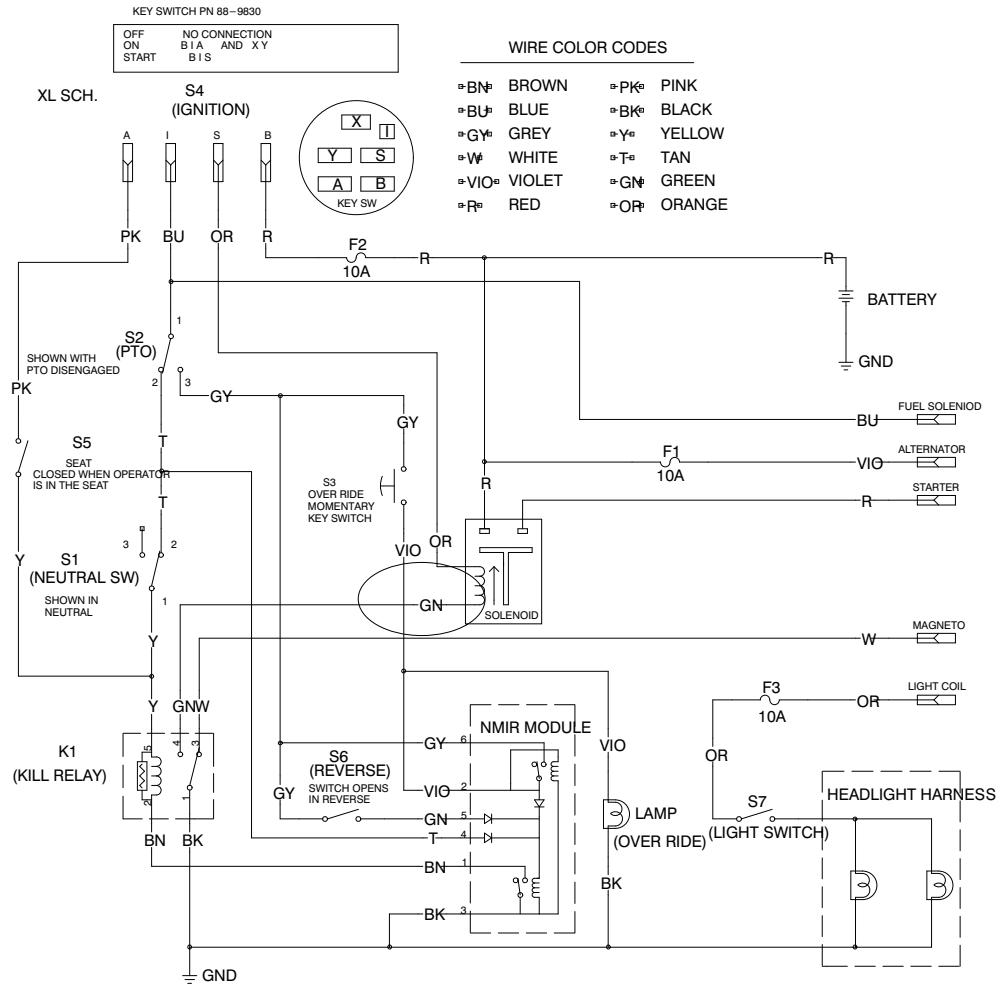 


Sheet No.:21

Wire Schematic

Ref. No.	Part No.	Qty.	Description
	218-578	3	Fuse-10a

Ref. No.	Part No.	Qty.	Description

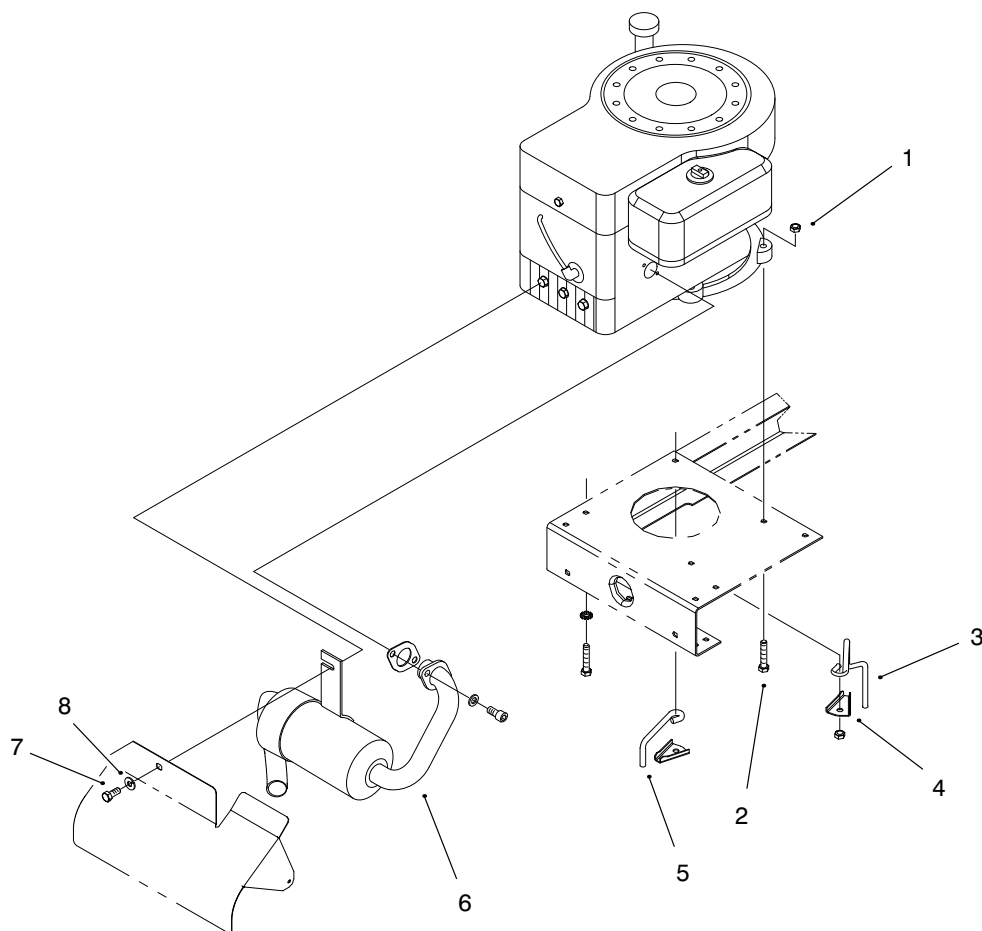 


Sheet No.:25

Engine System Components Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	3	Nut-Lock
2	322-9	4	Screw-HH
3	88-6060	1	Guide-LH Belt
4	76-3820	2	Anchor-Belt Guide
5	88-5490	1	Guide-Belt RH
6	88-6480	1	Muffler Wa
7	321-4	1	Screw-HH
8	3253-3	1	Washer-Lock/Sp

Ref. No.	Part No.	Qty.	Description

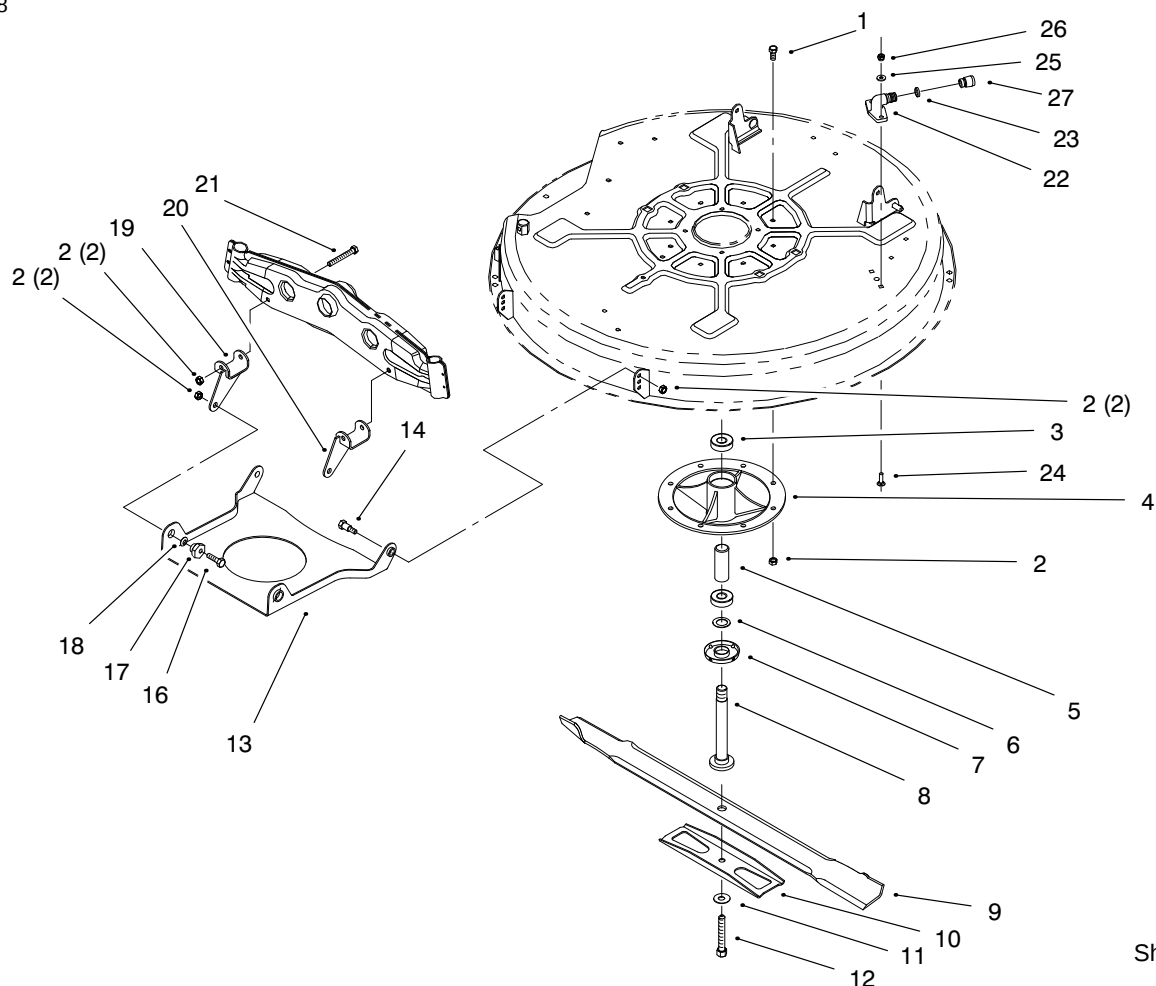 


Sheet No.:26

32" Deck Components Assembly

Ref. No.	Part No.	Qty.	Description
1	322-3	8	Screw-HH
2	3296-29	14	Nut-Lock
3	251-297	2	Bearing
4	56-7030	1	Spindle
5	83-7020	1	Spacer-Bearing
6	80-4390	1	Spacer-Hardned
7	80-4370	1	Shield - Bearing
8	80-4350	1	Shaft-Spindle
9	33-4750	1	Blade-31.35"
10	80-4570-03	1	Stiffener
11	3290-465	1	Washer-Belleville
12	26-0671	1	Screw-Blade
13	88-4940-03	1	Susp-Front Pan
14	28-0540	2	Bolt-Shoulder
16	322-6	2	Screw-HH
17	106661	2	Cam
18	3256-23	2	Washer-Flat
19	88-5640-03	1	RH Bracket Wa
20	88-5650-03	1	LH Bracket Wa
21	322-12	2	Screw-HH
22	95-2747	1	Fitting-Washout
23	46-6290	1	O-Ring
24	3229-1	2	Screw-CARR
25	3256-1	2	Washer-Flat
26	3296-16	2	Nut-Lock
27	95-3270	1	Connector-hose

Ref. No.	Part No.	Qty.	Description

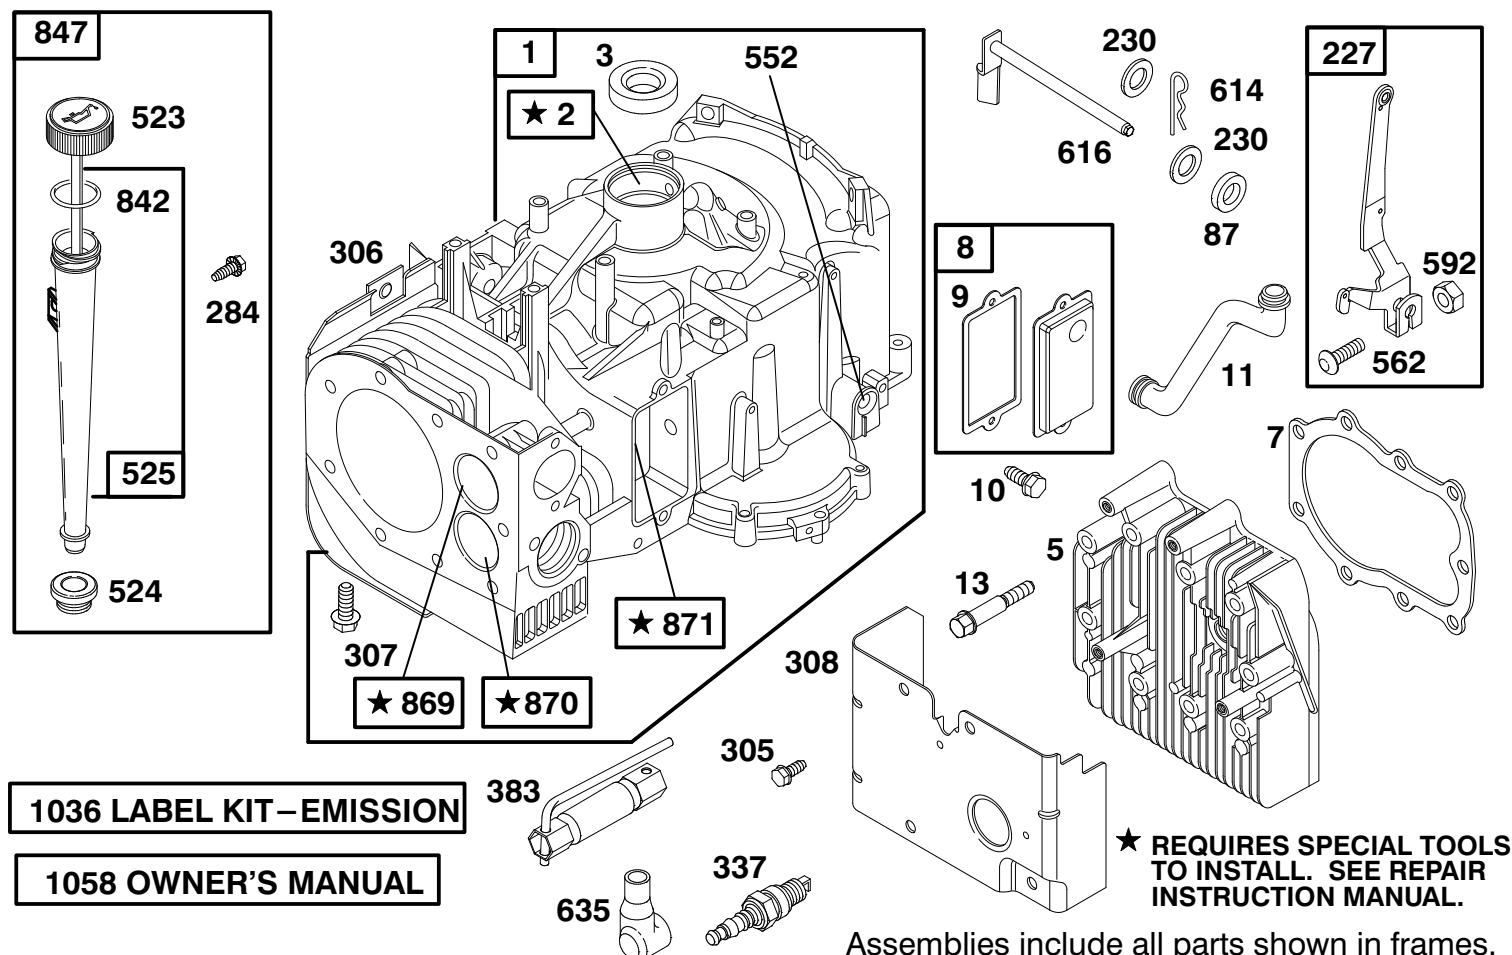 


ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bushing	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
†★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
†★9	27803	Gasket—Breather	1
10	94621	Screw—Sem	1
11	280100	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
★87	491323	Seal—Governor Shaft	1
227	493935	Lever—Governor	1
230	94927	Washer—Flat	1
284	94903	Screw—Shoulder	1
305	94786	Screw—Hex.	1
306	224545	Shield—Cylinder	1
307	94930	Screw—Hex. Head	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1
523	495230	Dipstick	1

Ref. No.	Part No.	Description	No. Used
★524	281370	Seal—Fill Tube	1
525	496113	Tube—Oil Fill	1
552	491986	Bushing—Gov. Crank Note: Includes Seal, Ref. No. 87	1
562	94907	Bolt—Governor Lever	1
592	231978	Nut—Hex.	1
614	93306	Pin—Cotter	1
616	495157	Crank—Governor	1
635	66538	Boot—Spark Plug	1
★842	270920	Seal—O-Ring	1
847	496415	Dipstick/Tube Assembly	1
869	261463	Seat—Intake Valve	1
870	262924	Seat—Exhaust Valve	1
871	261961	Bushing—Valve Guide (Exhaust) Note: 231218 Bushing— Valve Guide (Intake)	1
1036	499362	Label Kit—Emission	1
1058	273681	Owner's Manual	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

 - Included in Carburetor Kit—Part No. 499220.
- † Included in Valve Overhaul Gasket Set—Part No. 498539.

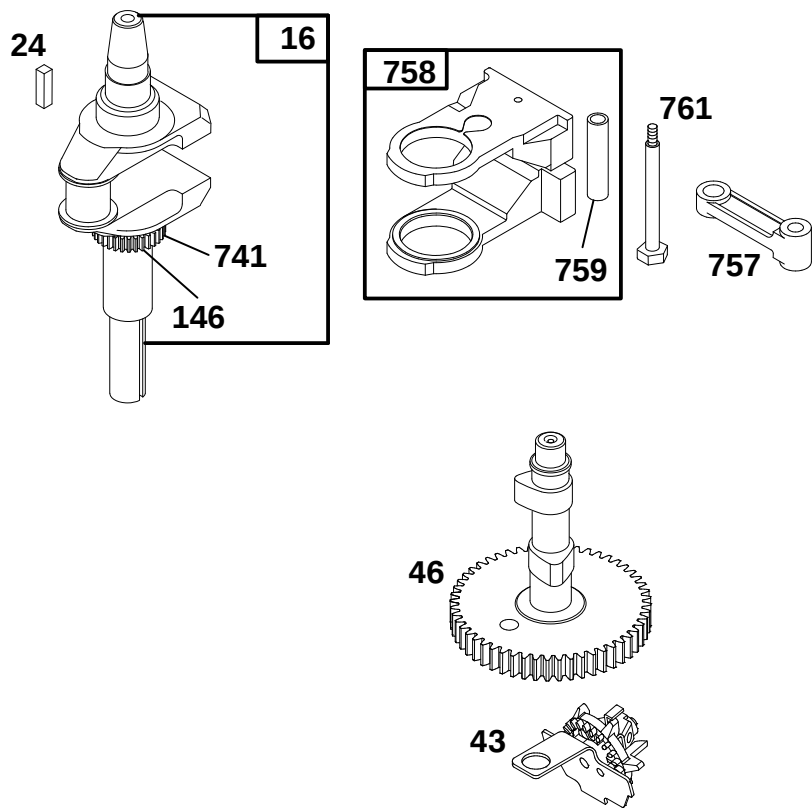


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	498971	Crankshaft	1	757	213998	Link - Counterweight	1
24	222698	Key - Flywheel	1	758	399891	Counterweight	1
43	490815	Governor/Oil Slinger	1	759	230787	Pin - Counterweight	1
46	212897	Gear - Cam	1	761	94593	Screw - Counterweight	1
146	94196	Key - Timing	1				
741	262932	Gear - Timing	1				

★ Included in Gasket Set - Part No. 494241.
◆ Included in Carburetor Gasket Set - Part No. 494385.

 ● Included in Carburetor Kit - Part No. 499220.
† Included in Valve Overhaul Gasket Set - Part No. 498539.

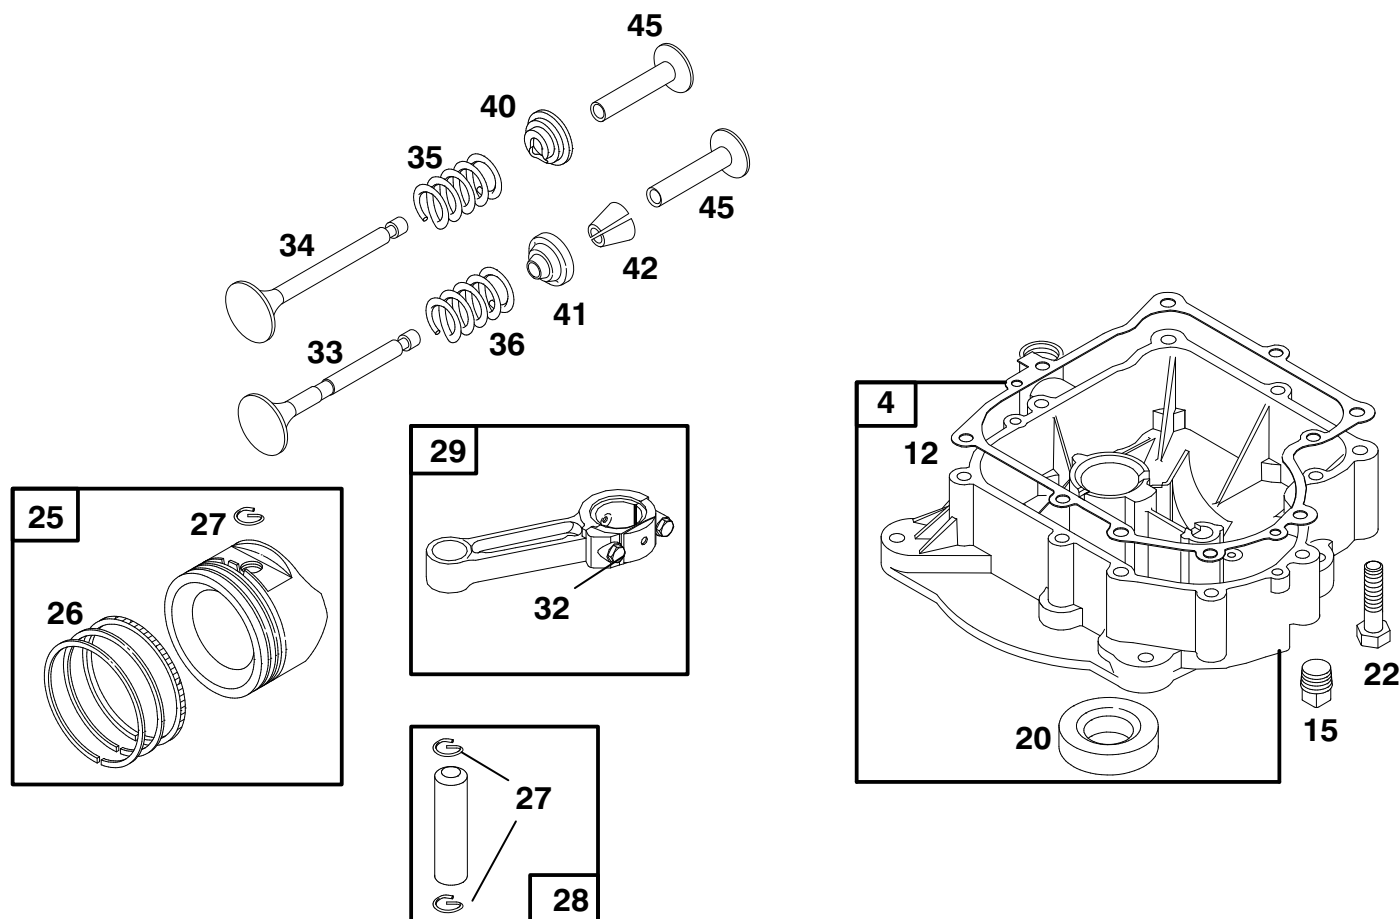

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
4	494238	Sump—Engine	1
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
15	94239	Plug—Oil Drain	1
★20	291675	Seal—Oil	1
22	94624	Screw—Base Mtg. Sem	1
25	499284	Piston Assy. (Std.)	1
	499288	Piston Assy. (.010" O.S.)	1
	499292	Piston Assy. (.020" O.S.)	1
	499296	Piston Assy. (.030" O.S.)	1
26	495854	Ring Set—Piston (Std.)	1
	495852	Ring Set—Piston (.010" O.S.)	1
	495852	Ring Set—Piston (.020" O.S.)	1
	495855	Ring Set—Piston (.030" O.S.)	1


★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

Ref. No.	Part No.	Description	No. Used
27	263129	Lock – Piston Pin	1
28	498319	Pin Assy. – Piston (Standard)	1
	498320	Pin Assy. – Piston (.005" O.S.)	1
29	490348	Rod Assembly – Connecting	1
	490469	Rod – Connecting (.020" U.S. Crankpin Bore)	1
32	95017	Screw – Connecting Rod	1
33	262246	Valve – Exhaust	1
34	262247	Valve – Intake	1
35	65906	Spring – Intake Valve	1
36	26828	Spring – Exhaust Valve	1
40	221596	Retainer – Intake Valve	1
41	292260	Retainer – Exhaust Valve	1
42	494553	Keeper – Valve	1
45	262248	Tappet – Valve	1

- Included in Carburetor Kit—Part No. 499220.

 † Included in Valve Overhaul Gasket Set—Part No. 498539.

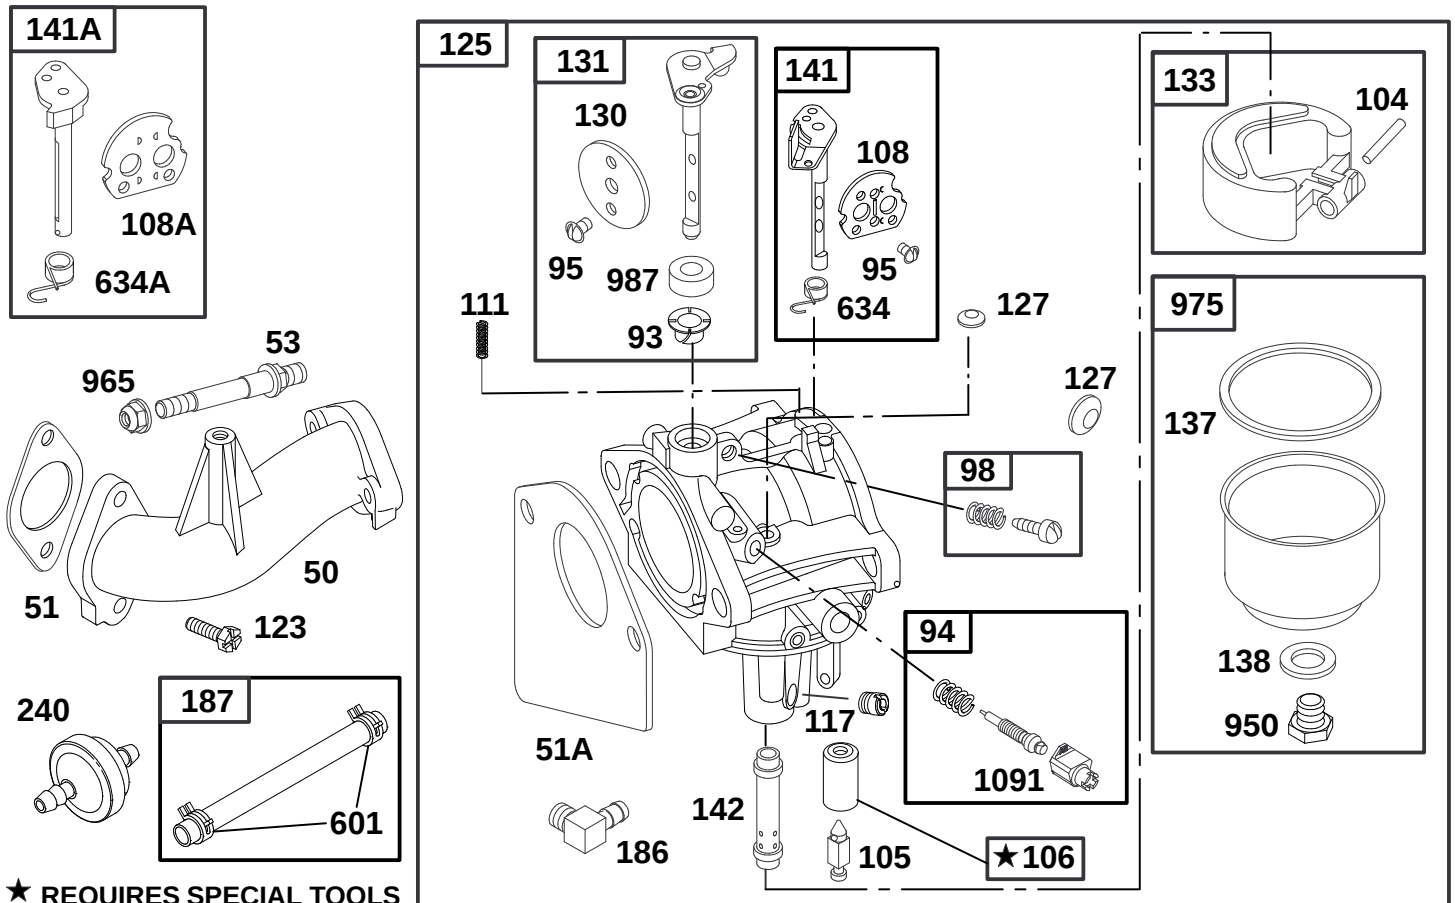

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold—Intake	1
◆51	272465	Gasket—Carburetor (Carb. to Manifold)	1
†★51A	272554	Gasket—Carburetor (Manifold to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●93	281346	Bushing—Throttle Shaft	1
94	498030	Valve—Needle	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve—Float Needle	1
●106	231854	Inlet Valve Seat	1
108	224558	Valve—Choke	1
108A	224540	Valve—Choke	1
123	94913	Screw—Elbow Mtg.	1
125	498027	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only)	1
130	224539	Valve—Throttle	1
131	494379	Shaft Kit—Throttle	1
133	494381	Float—Carburetor	1


Ref. No.	Part No.	Description	No. Used
◆◆137	281165	Gasket—Float Bowl	1
◆◆138	281164	Washer—Float Bowl Screw	1
141	495097	Shaft Kit—Choke (Manual)	1
141A	495931	Shaft Kit—Choke (Remote)	1
●142	497566	Nozzle—Carburetor (Standard)	1
	497567	Nozzle—Carburetor (High Alt.)	1
186	493496	Connector—Fuel	1
187	298049	Line—Fuel	1
240	394358	Filter—Fuel	1
601	93053	Clamp—Hose	1
●634	494453	Seal—Spring Assembly	1
●634A	494555	Seal—Spring Assembly	1
950	94642	Screw—Fuel Bowl	1
965	94010	Nut—Hex.	1
975	495933	Bowl—Float	1
●987	281166	Seal—Throttle Shaft	1
1091	281364	Cap—Limiter	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 499220.

 † Included in Valve Overhaul Gasket Set—Part No. 498539.

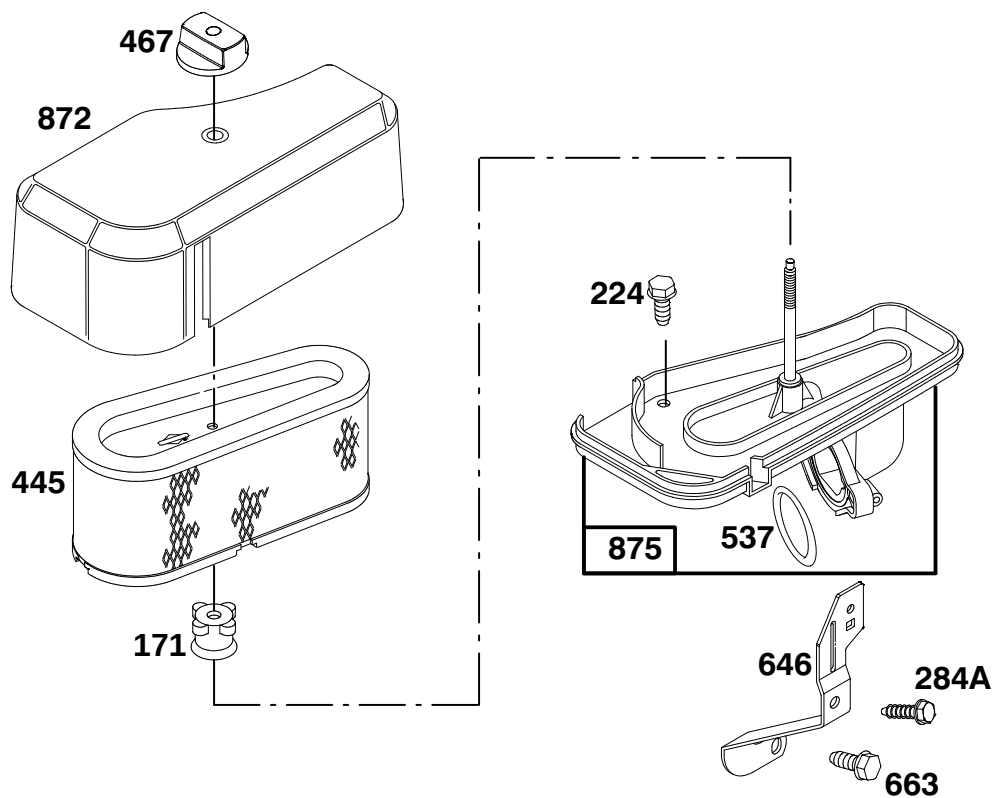

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
171	281051	Nut-Air Cleaner	1
224	94730	Screw-Hex. Head	1
284A	94704	Screw Hex. Head	1
445	496894	Filter-A/C Element	1
467	493903	Nut-Air Cleaner	1
†★537	281106	Gasket-Air Cleaner	1


Ref. No.	Part No.	Description	No. Used
646	224546	Brace-Air Cleaner	1
663	94929	Screw-Hex. Hd.	1
872	281104	Cover-Air Cleaner	1
875	494237	Base-Air Cleaner	1

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.

 † Included in Valve Overhaul Gasket Set-Part No. 498539.

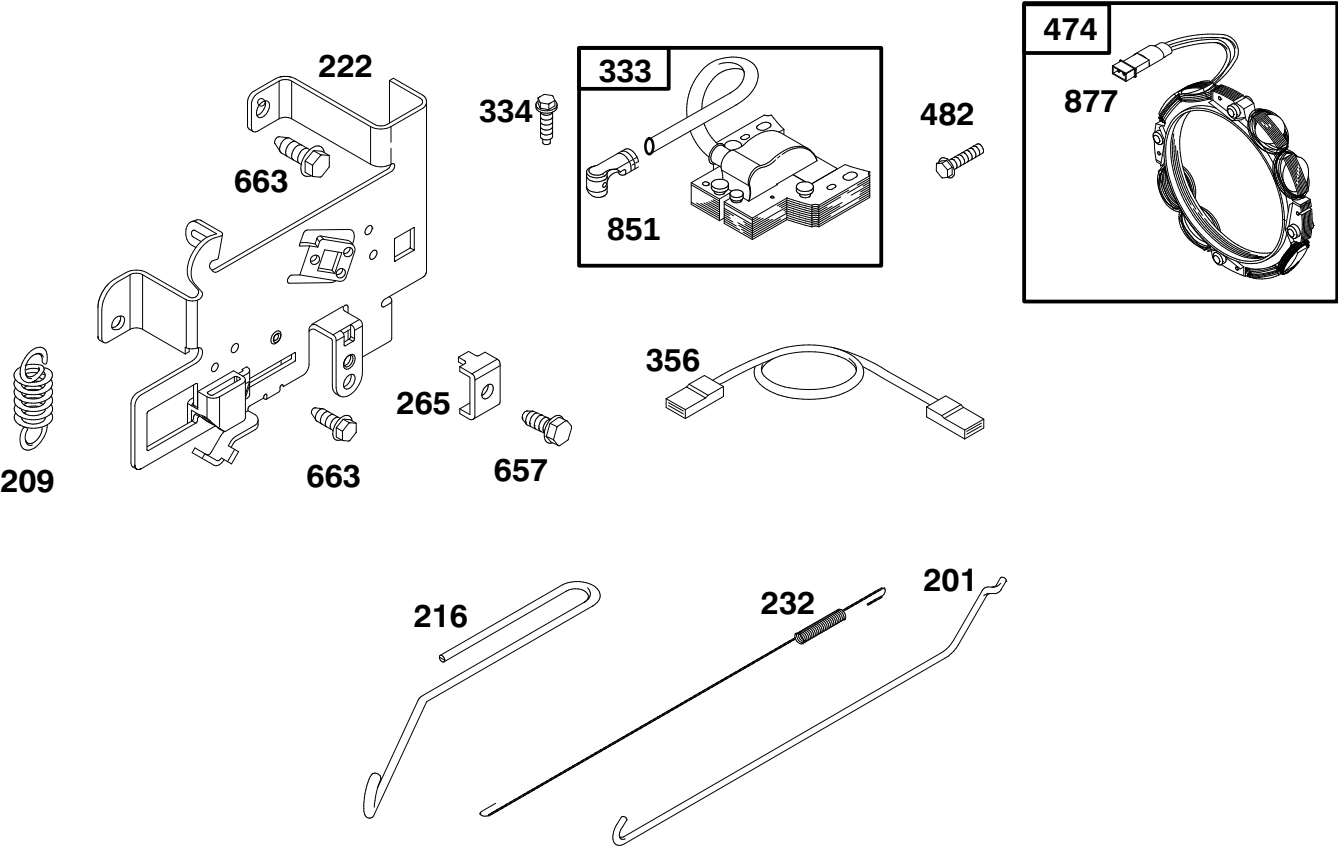

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	495611	Bracket-Control	1
232	262785	Spring-Link	1
265	221535	Clamp-Casing	1
333	492341	Armature-Magneto	1
334	94731	Screw-Hex.	1

Ref. No.	Part No.	Description	No. Used
356	494328	Wire-Stop	1
474	393474	Alternator	1
482	93621	Screw-Sem	1
657	94906	Screw-Sem	1
663	94929	Screw-Hex. Head	1
851	493880	Terminal-Ignition Cable	1
877	393456	Wire-Alternator	1

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

 ● Included in Carburetor Kit-Part No. 499220.
† Included in Valve Overhaul Gasket Set-Part No. 498539.

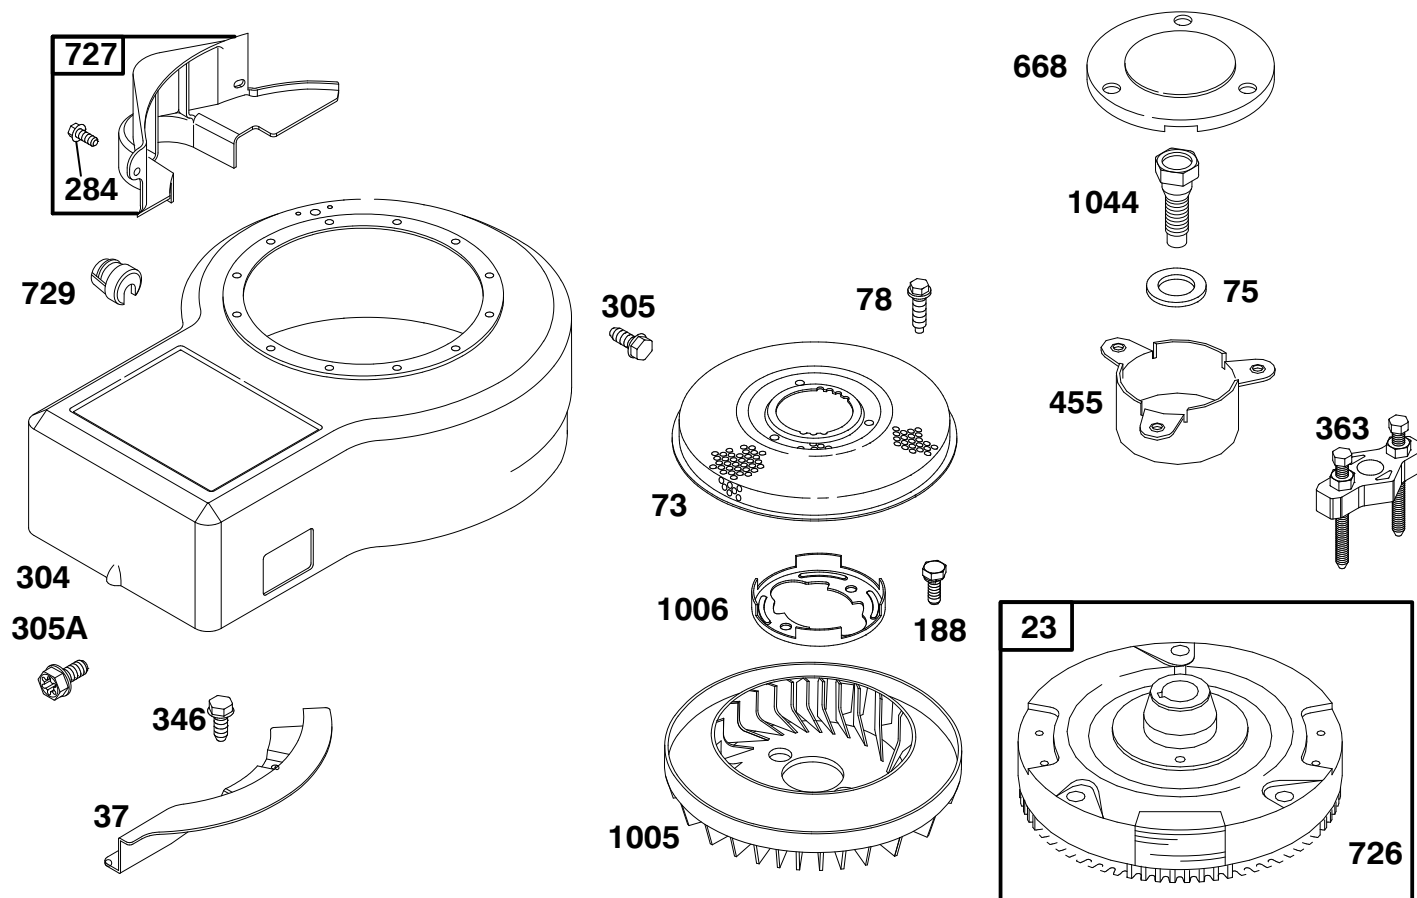

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard-Flywheel	1
73	224517	Screen-Rotating	1
75	225136	Washer-Flywheel	1
78	94626	Screw-Phillips	1
188	94627	Screw-Sem	1
284	94903	Screw-Shoulder	1
304	496319	Housing-Blower	1
305	94786	Screw-Hex.	1
305A	94905	Screw-Torx® Hex.	1
346	94896	Screw-Hex.	1


Ref. No.	Part No.	Description	No. Used
363	19203	Puller-Flywheel	1
455	222561	Cup-Flywheel	1
668	280848	Spacer	1
726	399676	Gear-Ring (Includes Mtg Hardware)	1
727	490324	Cover-Starter Drive	1
729	281159	Clip-Wire	1
1005	280687	Fan-Flywheel	1
1006	224413	Retainer-Fan	1
1044	94673	Screw-Shoulder	1

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.

 † Included in Valve Overhaul Gasket Set-Part No. 498539.

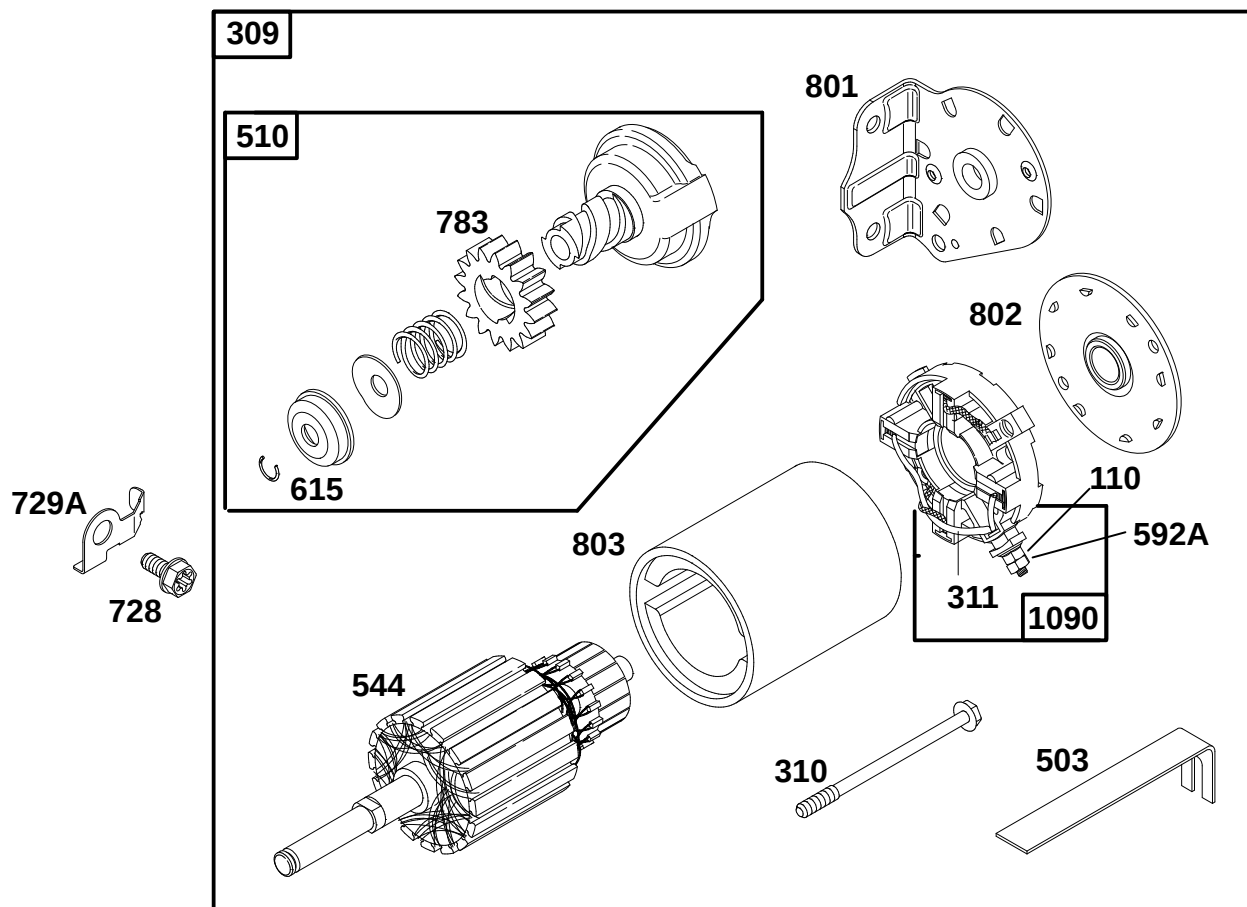

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
110	225137	Washer-Flat	1
309	497595	Motor-Starter	1
310	94003	Bolt-Thru	1
311	497608	Brush Set	1
503	806000	Strap-Starter	1
510	497606	Drive-Starter	1
544	497603	Armature-Starter	1
592A	92278	Nut-Hex.	1
615	263080	Ring-Retaining	1





Ref. No.	Part No.	Description	No. Used
728	94951	Screw-Torx®	1
729A	225170	Clip-Wire	1
783	280104	Gear-Starter	1
801	394856	Cap-Drive	1
802	497607	Cap-End	1
803	497604	Housing-Starter	1
1090	497605	Retainer-Brush	1

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.

    † Included in Valve Overhaul Gasket Set-Part No. 498539.

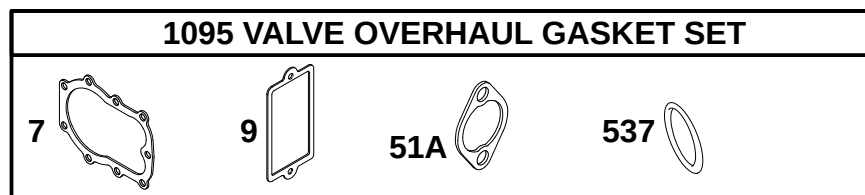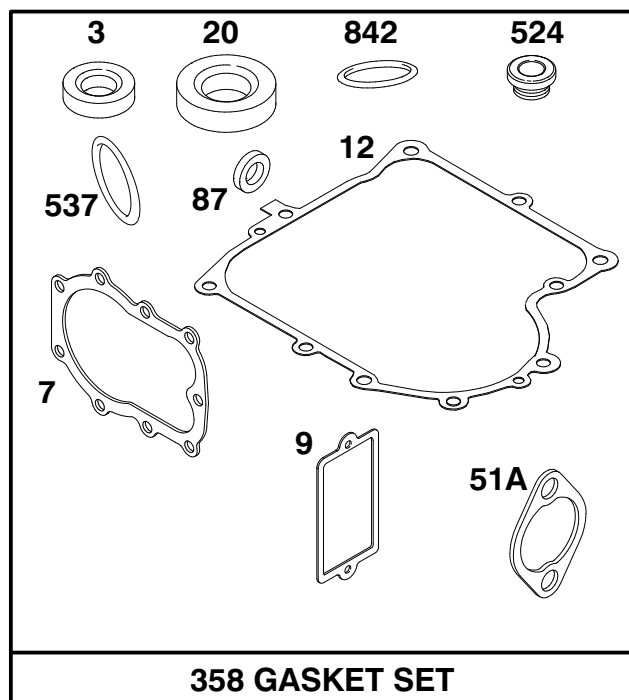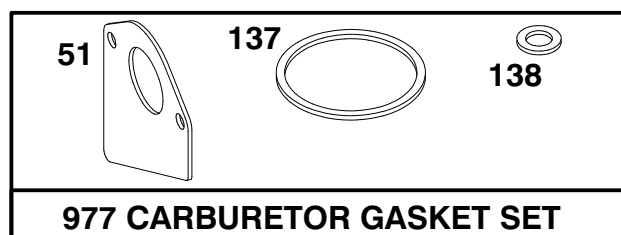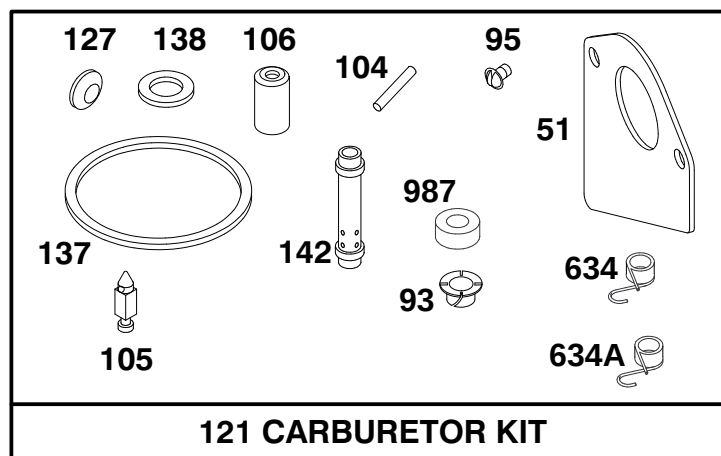

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 284707-1148-E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★†7	271866	Gasket—Cylinder Head	1
★†9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
★20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★†51A	272554	Gasket—Carburetor (Manifold to Cylinder)	1
★87	491323	Seal—Governor Shaft	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve—Float Needle	1

Ref. No.	Part No.	Description	No. Used
●106	231854	Seat—Inlet	1
121	499220	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	497566	Nozzle—Carburetor	1
358	494241	Gasket Set	1
★524	281370	Seal—Fill Tube	1
★†537	281106	Gasket—Air Cleaner	1
●634	494453	Seal—Spring Assembly	1
●634A	494555	Seal—Spring Assembly	1
★842	270920	Seal—O-Ring	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1
1095	498539	Gasket Set—Valve Overhaul	1

 
★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 499220.

† Included in Valve Overhaul Gasket Set—Part No. 498539.

PEERLESS TRANSAXLE MODEL MST 205-509

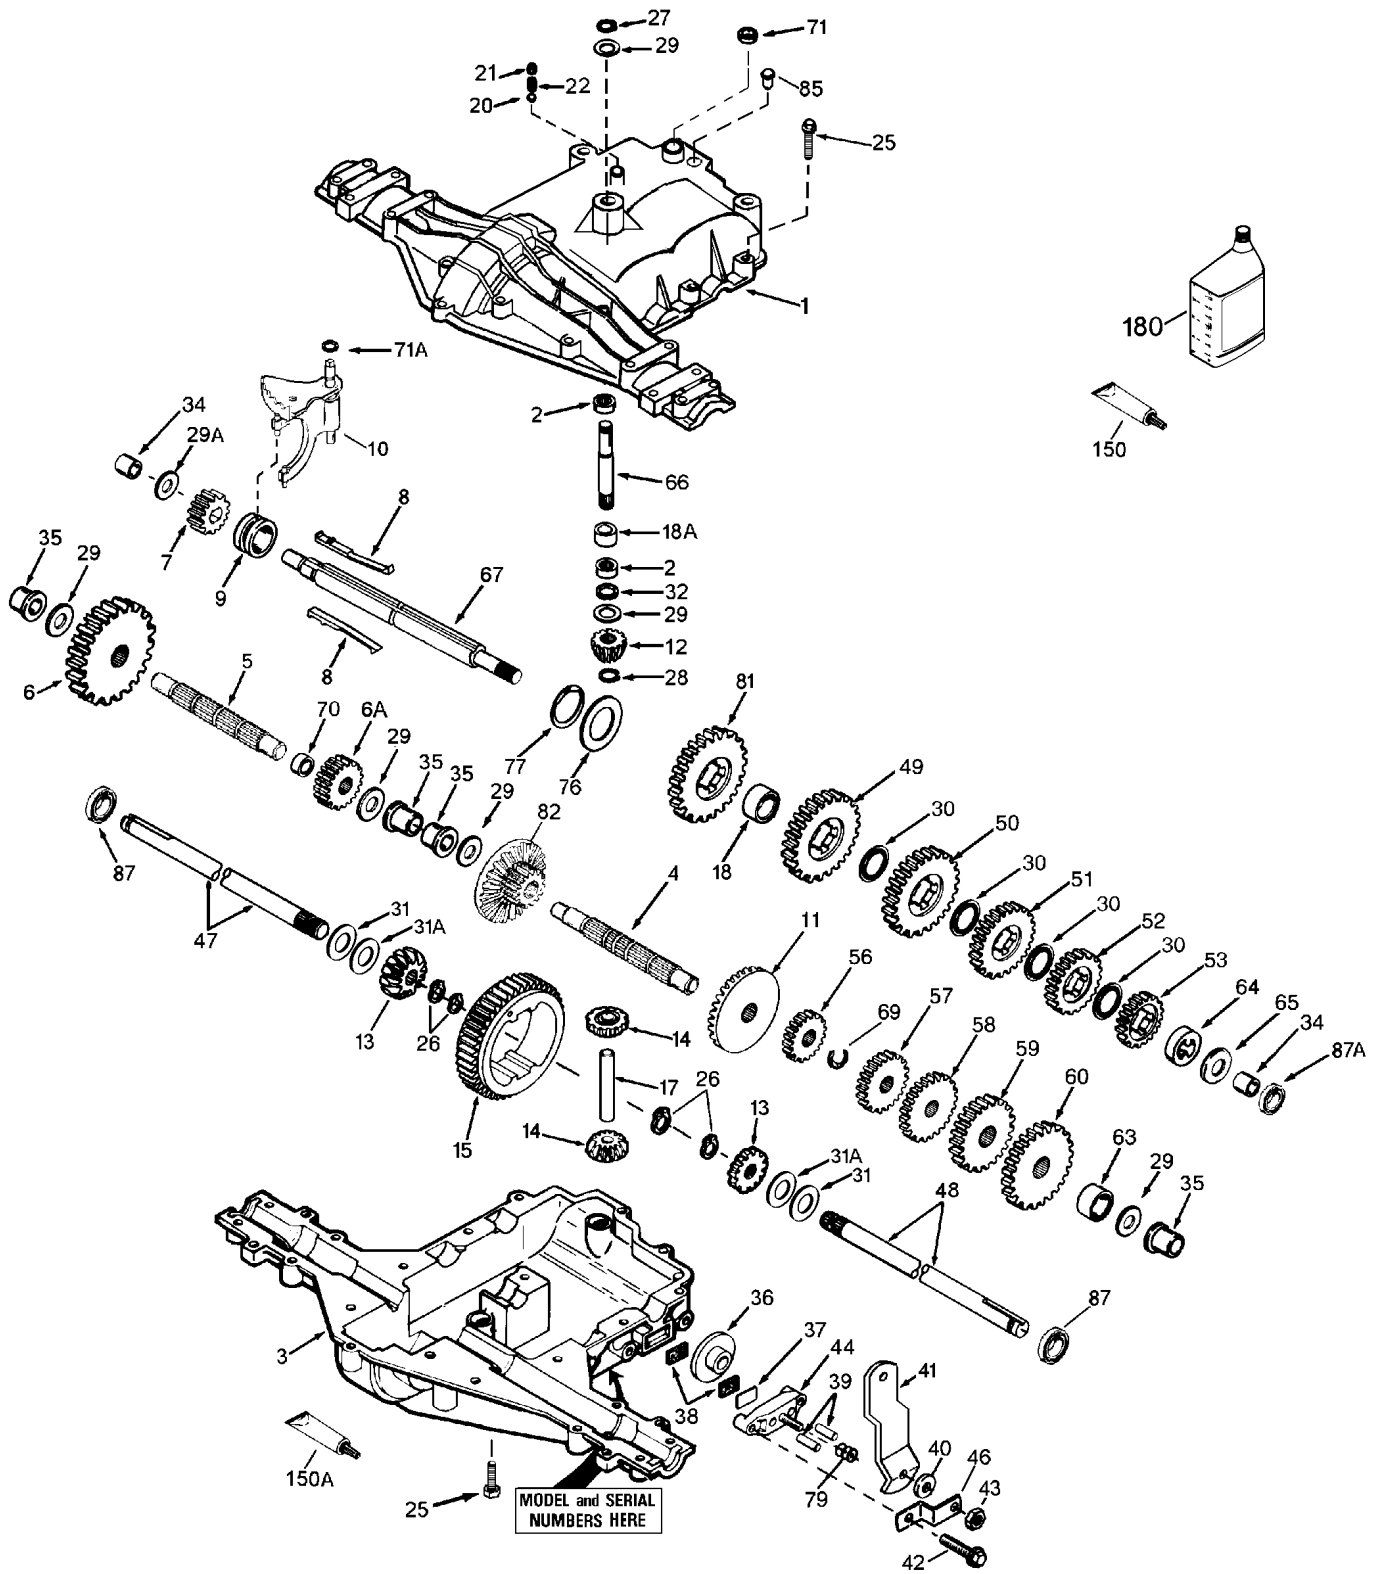

PEERLESS TRANSAXLE MODEL MST 205–509

Ref. No.	Part No.	Description	No. Used
1	772137	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770123	Transaxle Case	1
4	776395	Countershaft	1
5	776397	Output Shaft	1
6	778331	Spur Gear (38 teeth)	1
6A	778332	Spur Gear (15 teeth–steel)	1
7	778330	Spur Gear (11 teeth–steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth–steel)	2
		(Incl. 14)	
14	778327	Bevel Gear (16 teeth–steel)	2
		(Incl. 13)	
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16" dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide)	2
		(USE AS NEEDED)	
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	4
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1
38	799021	Brake Pad (pkg of 2)	2

Ref. No.	Part No.	Description	No. Used
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11–15/16" long)	1
48	774691	Axle (16–1/2" long)	1
49	778356	Spur Gear (29 teeth–steel)	1
50	778354	Spur Gear (23 teeth–steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth–steel)	1
53	778346	Spur Gear (15 teeth–steel)	1
56	778355	Spur Gear (11 teeth–steel)	1
57	778353	Spur Gear (17 teeth–steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth–steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786172	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	"O" Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
81	778338	Spur Gear (27 teeth)	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
85	792154	Pipe Plug	1
87	788088	Oil Seal	2
87A	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
150A	788094	Liquid Gasket Loctite #242	1
180	730229A	Gear Oil 80W90	1

Maintenance Record

[illegible]

