

LAWN-BOY®

Walk-Behind Mower

Model No. 22260—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Engine Assembly	6
Engine and Blade Assembly	4	Short Block Assembly	8
Handle Assembly	5	Carburetor Assembly	9


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	#89814 (683789)	Rear Bagging Kit	#89906 (100-6363)
Leaf Bag	#89804 (681001)	Mulching Plate	#89864 (681906)
Leaf Shredder Kit	#89860 (681684)	Leaf Bag w/Chute	#89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

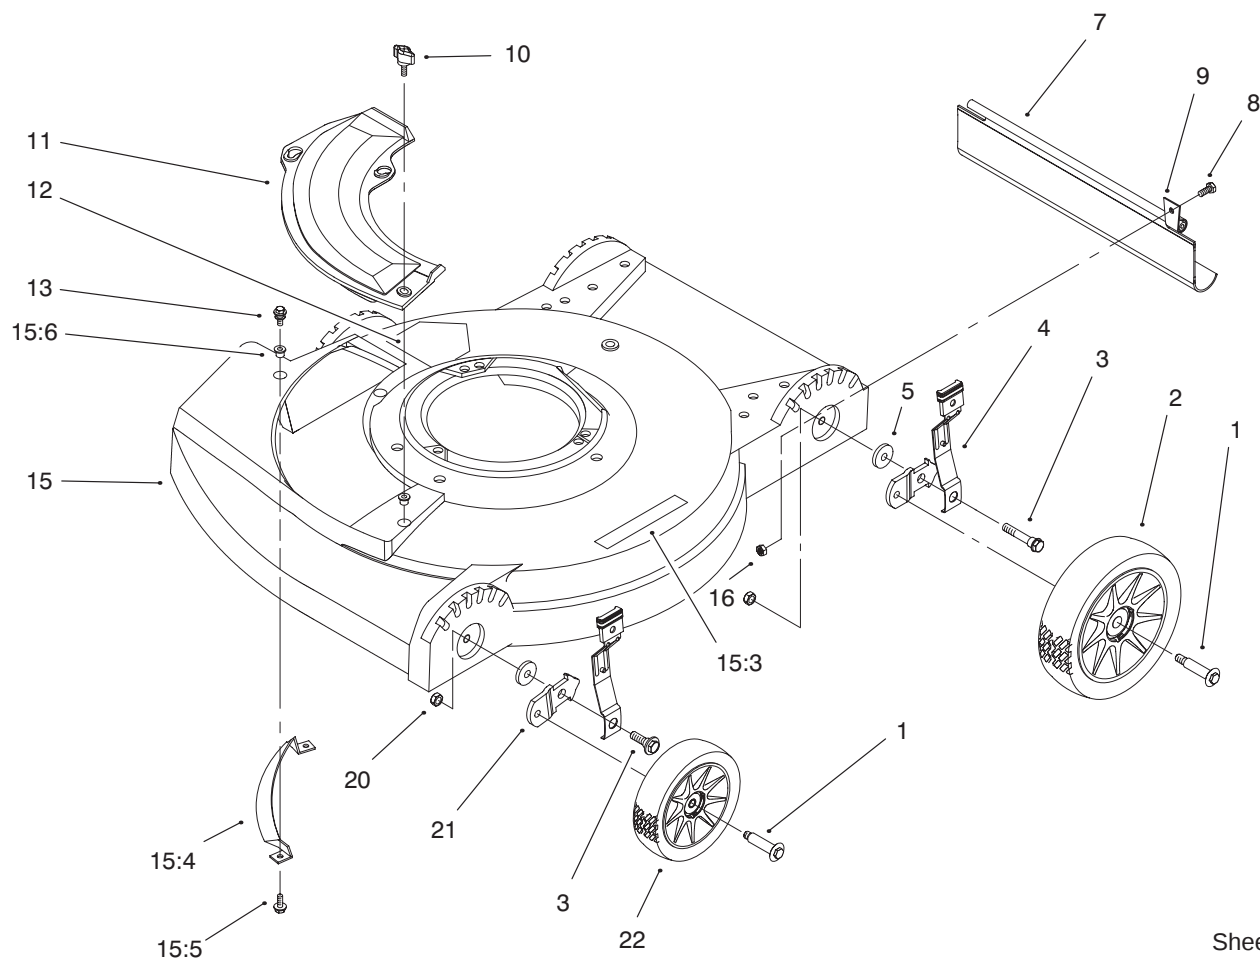


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	603567	4	Bolt
2	683464	2	Wheel/Tire ASM
3	610646	4	Bolt
4	153444	4	Spring Arm ASM
5	608834	4	Washer
7	93-7368	1	Shield – Trailing
8	321-3	2	Screw-HH
9	93-7693	2	Clamp – Shield
10	98-8332	1	Knob
11	95-7052	1	Plate – Chute Opening
13	614677	2	Screw- Sems
15	99-5201	1	Housing ASM
15:2	39-5770	1	Decal-Danger
15:3	93-7250	1	Decal-Warning
15:4	608175	1	Toe Bar
15:5	46-6811	2	Screw & Washer ASM
15:6	94-1610	3	Grommet – Plastic
16	3296-56	2	Nut-Lock, NI
20	3296-39	4	Nut-Lock, NI
21	608833-03	4	Bracket-Wheel Height
22	684159	2	Wheel/Tire ASM


Ref. No.	Part No.	Qty.	Description

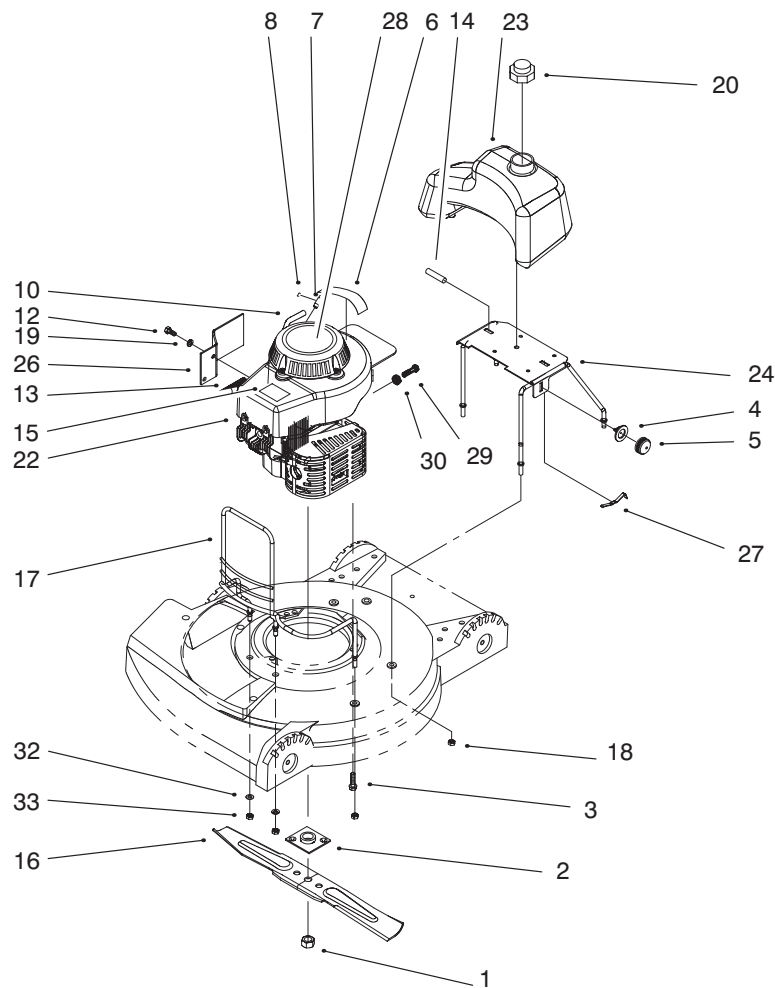

Sheet No.:3

Engine and Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade	32	68-5920	2	Washer-Hood Pivot
2	677525	1	Plate & Collar ASM	33	3296-39	2	Nut-Lock, NI
3	98-4480	3	Screw-Sems				
4	44-2750	1	Body-Primer				
5	66-7460	1	Bulb-Primer				
6	99-1518	1	Decal-Fuel Mix				
7	47-2480	1	Stop-Rope				
8	3290-443	1	Staple				
10	612782	1	Fuel Line				
12	322-3	2	Screw-HH				
13	93-4306	1	Spring - Compression				
14	2410-76	1	Plug-Cap				
15	99-1517	1	Decal-Lawn Boy				
16	612543	1	Blade				
17	98-1598	1	Guard-Muffler				
18	608311	5	Nut-Lock				
19	3253-4	2	Washer				
20	98-8344	1	Cap ASM-Fuel/Oil				
22	99-2910	1	Engine ASM				
23	98-4497	1	Tank - Fuel				
24	98-4458-03	1	Tank Bracket ASM				
26	99-1515-03	1	Guard-Brake				
27	609830	2	Spring				
28	98-8342	1	Decal - Recoil				
29	314576	1	Screw				
30	306531	1	Nut-Hex				

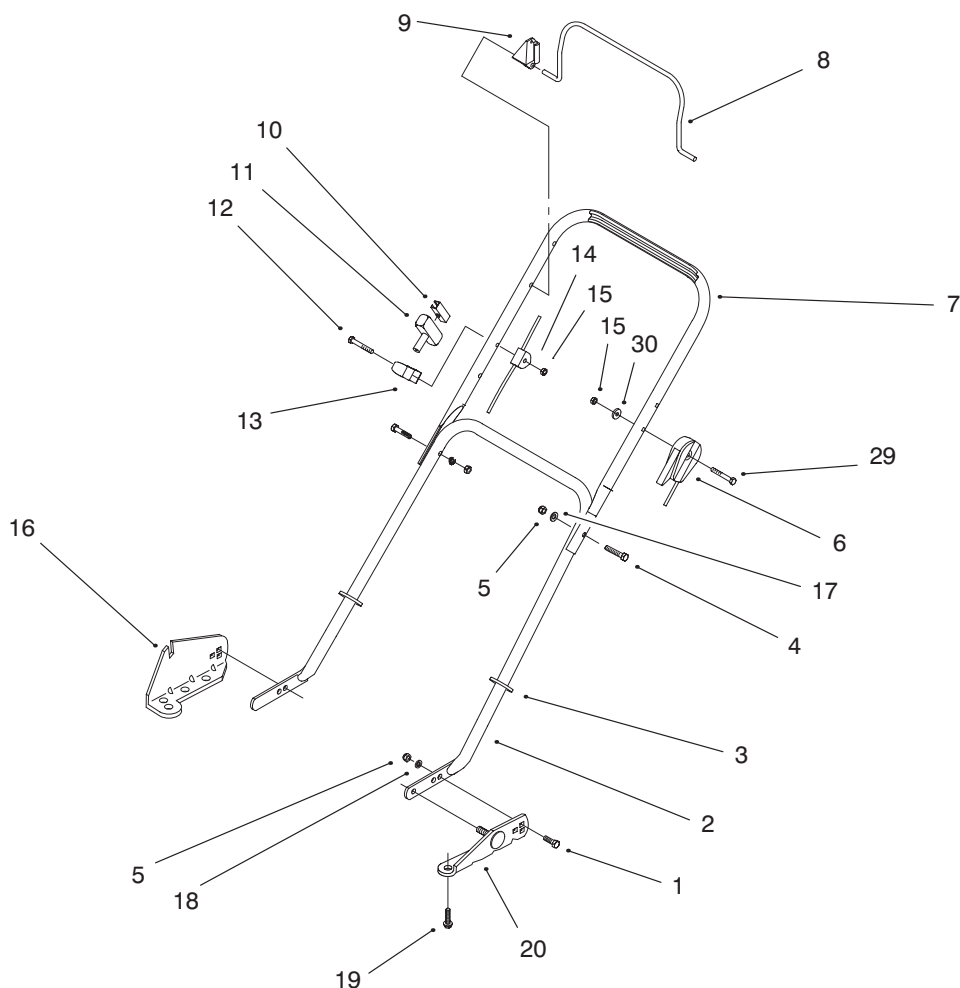

Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Screw-CARR
2	613048-05	1	Handle Section-Lower
3	614249	2	Tie Strap
4	322-9	2	Screw-HH
5	3296-29	4	Nut-Lock,NI
6	100-1172	1	Cable-Throttle
7	100-2897-05	1	Handle-Upper
8	100-1174	1	Bail Control Lever ASM
9	92-5412	1	Stop-Pivot
10	612824	1	Starter-Clip
11	612825	1	Handle-Start
12	321-49	1	Screw-HH
13	93-7383	1	Rope - Guide
14	100-1173	1	Cable-Brake
15	3296-73	2	Nut-Lock NI
16	684057-03	1	RH Bracket & Pin ASM
17	609739	2	Washer - Curved
18	3253-33	2	Washer-Lock/Sp
19	607188	4	Screw
20	684058-03	1	LH Bracket & Pin ASM
29	321-48	1	Screw-HH
30	92-8632	1	Washer

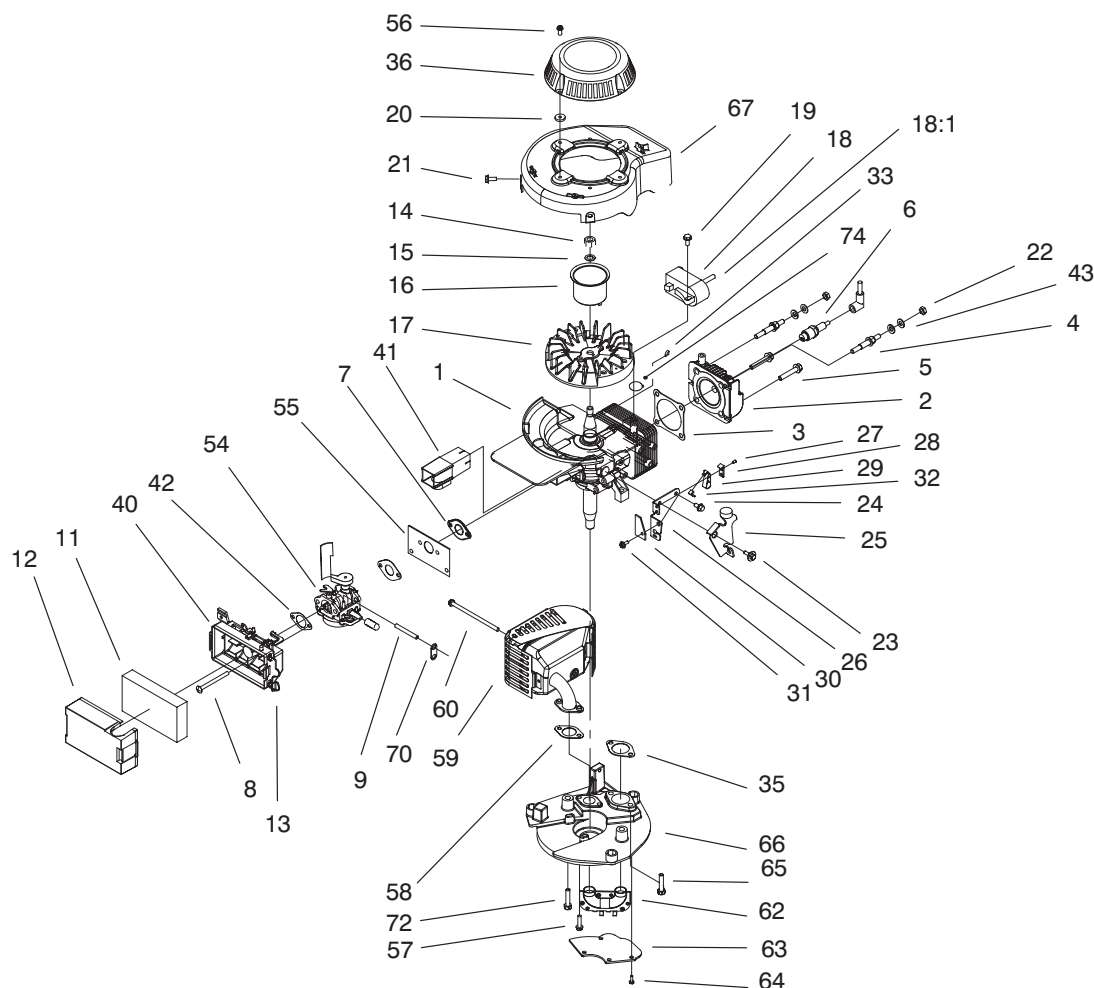


Sheet No.:2

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	44-3170	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter Cover
14	130743	1	Nut
15	316959	1	Washer-Lock
16	612949	1	Hub-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ignition
18:1	99-6721	1	Clip-High Tension
*18:2	99-6719	1	Lead
19	613208	2	Lead-High Tension
20	98-4478	4	Spacer
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH

Ref. No.	Part No.	Qty.	Description
25	93-4312	1	Brake Plate ASM
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Ground Strap
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Brake
			Switch
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	684566	1	Starter ASM
*36:1	612950	1	Pulley
*36:2	613773	1	Rope
*36:3	683897	1	Spring-Recoil
*36:4	684567	1	Starter Housing &
			Shaft
*36:5	683899	1	Dog Kit
40	95-5588	1	Air Base ASM
41	95-5578	1	Tunnel-Inlet
42	95-7613	1	Gasket-Filter
43	3290-456	4	Washer-Belleville
54	98-7042	1	Carburetor ASM With
			Gaskets
55	98-1388	1	Shield-Carburetor
56	98-4484	4	Screw


* Not illustrated

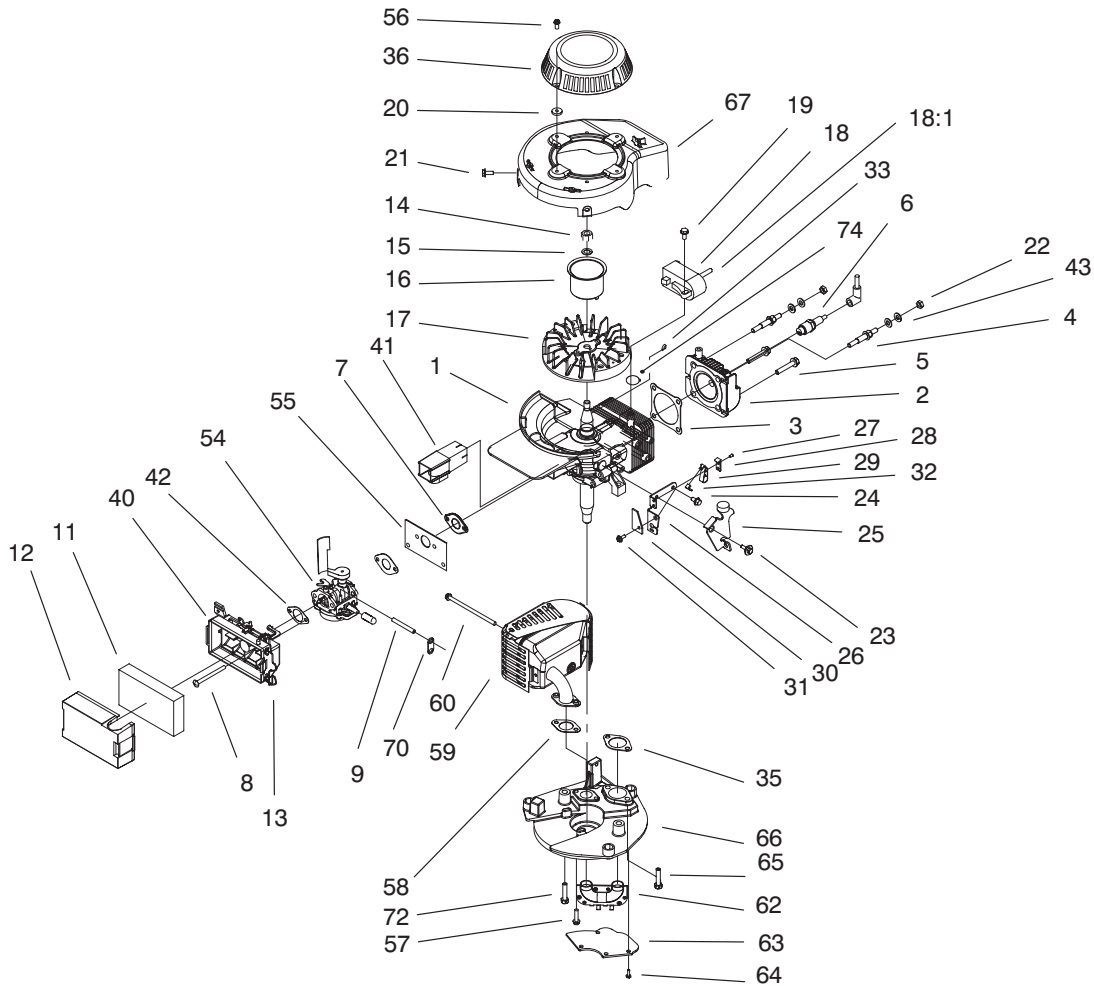

Sheet No.:2

Engine Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
57	613208	2	Screw				
58	98-1392	1	Gasket				
59	100-9514	1	Muffler And Guard ASM				
60	611228	1	Bolt-Console				
62	98-1557	1	Pipe-Transfer				
63	98-1591	1	Cover-Muffler				
64	700822	4	Screw-HH				
65	322-17	2	Screw-HH				
66	98-1383	1	Plate-Mounting				
67	98-4467	1	Assembly - Shroud				
70	95-7615	1	Hose-Retainer				
72	613233	2	Screw				
74	317893	1	Strap-Tie				

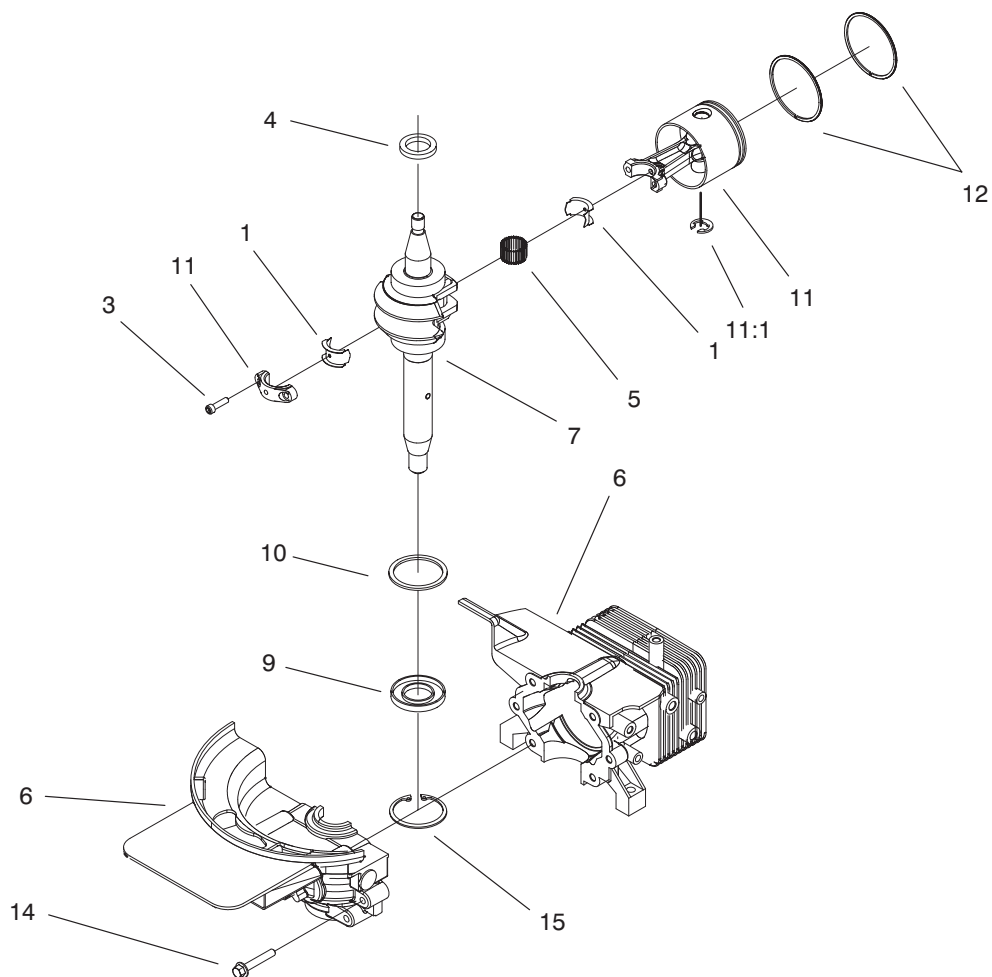


Sheet No.:A1

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	610372	1	Sealer—Loctite 6cc
*2	609790	1	Sealer—Loctite 50cc
3	611393	2	Screw—HSH Cap
4	611396	1	Seal—Oil
5	683911	1	Bearing—Needle
6	95—7631	1	Cylinder And Crankcase ASM
6		1	Cylinder And Crankcase ASM
*6:1	602587	1	Plate—Backup, Reed
*6:2	602588	1	Reed—Carburetor
*6:3	612872	2	Screw—HH
7	99—2920	1	Crankshaft And Bearing ASM
9	94—5764	1	Seal—Oil
10	94—5765	1	Ring—Retaining
11	100—2915	1	Piston And Connecting Rod ASM
11:1	303712	2	Ring— Retaining Vex
*11:5	100—2916	1	Piston And Rings ASM
12	100—2917	1	Ring Set
14	94—5781	6	Screw
15	98—7046	1	Ring — Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

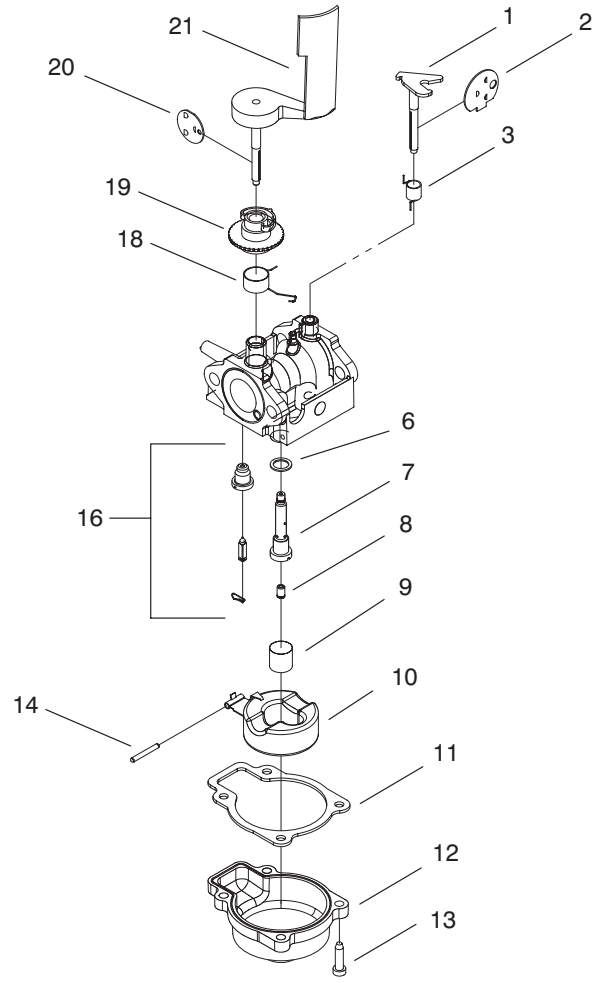

Sheet No.:A2

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

Maintenance Record

[illegible]

LAWN-BOY®