



Form No. 3405-675 Rev E

Count on it.

Parts Catalog

52in TITAN® HD 2000 Series Riding Mower

Model No. 74461—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Roll-Over Protection System and Wheel Assembly	4
Fork and Caster Wheel Assembly	6
Wheel and Tire Assembly No. 126-7592	8
Roll-Over Protection System Assembly No. 126-9526	10
Hydraulic Assembly	12
LH Transaxle Assembly No. 126-2883	14
RH Transaxle Assembly No. 126-2884	16
Control Console and Guard Assembly	18
Fuel Tank and Vent Hose System Assembly	20
Fuel Tank Assembly No. 126-4724	22
Seat Mount Assembly	24
Seat Pan and Latch Assembly No. 126-7309	26
Seat Assembly No. 126-8293	28
Motion Control Assembly	30
LH Motion Control Assembly	32
RH Motion Control Assembly	34
Electrical System Assembly	36
Harness Assembly No. 126-5803	38
Deck Lift Assembly	40
Deck Strut Assembly No. 126-8365	42
Engine Assembly	44
Deck Assembly	46
Deflector Assembly No. 120-2451	48
Deck Decal Assembly No. 126-8957	50
Attachments and Accessories	52

Frame, Roll-Over Protection System and Wheel Assembly

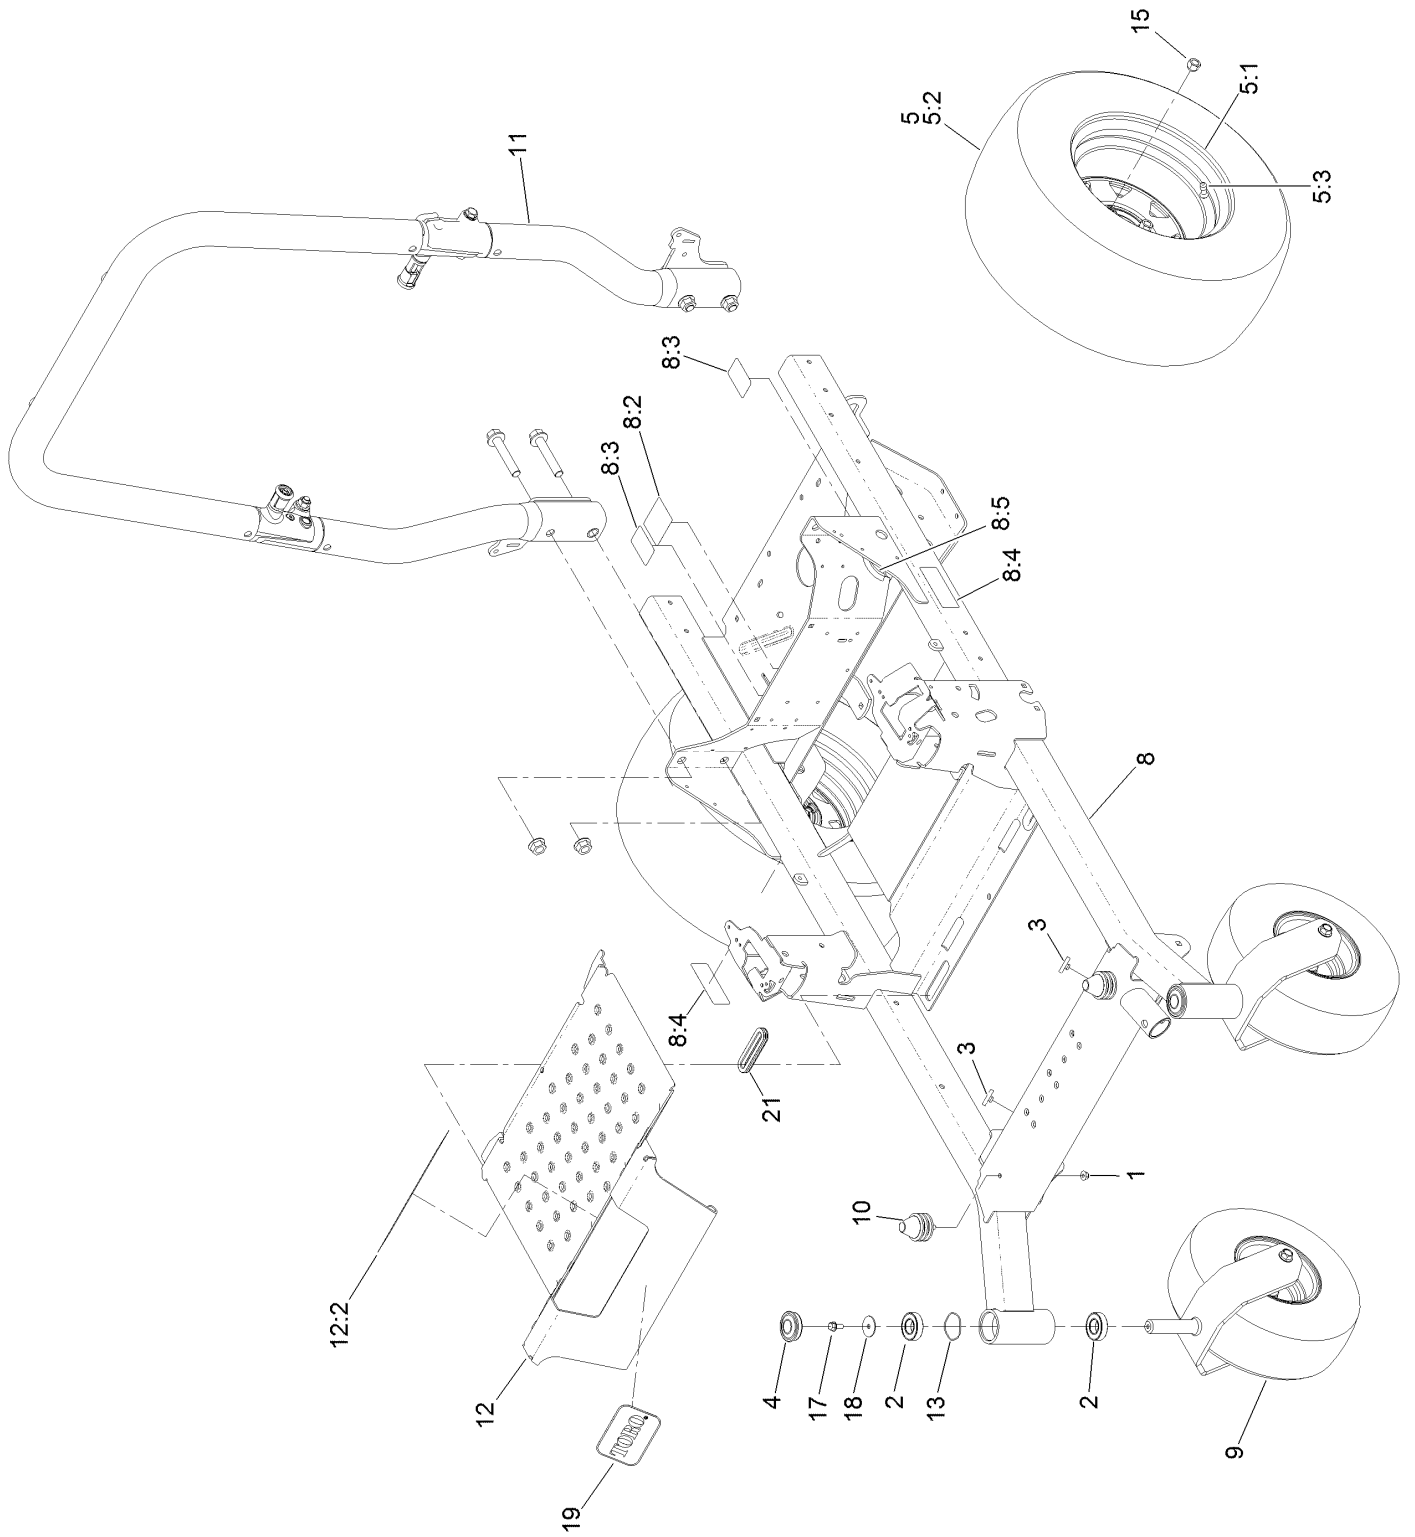


Frame, Roll-Over Protection System and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8300	2	Nut-HF, NI	9		2	Front Caster ASM (W/Fork)
2	109-3678	4	Bearing-Ball			●	
3	109-9233	2	Bumper-Push-In, Rubber	10	126-5491	2	Isolator
4	116-4348	2	Cap-Grease	11	126-9526	1	ROPS ASM
5	126-7829	2	Wheel And Tire ASM	12	126-5872	1	Pan-Floor
5:1	126-7828	1	Rim-Wheel	12:2	126-8383	1	Decal-Danger
5:2	126-3288	1	Tire	13	126-5897	2	Spring
5:3	232-27	1	Stem-Valve	15	242-50	8	Nut-Lug
8	126-4699	1	Frame ASM	17	3234-5	2	Screw-HHF
8:2	109-6014	1	Decal-Routing, Belt	18	3256-68	2	Washer-Flat
8:3	116-8588	2	Decal-Release, Drive	19	67-1300	1	Decal
8:4	126-4363	2	Decal-Warning	21	126-7065	2	Grommet-Rubber
8:5	127-6618	1	Strip-Seal				

● Not serviced separately

 Fork and Caster Wheel Assembly

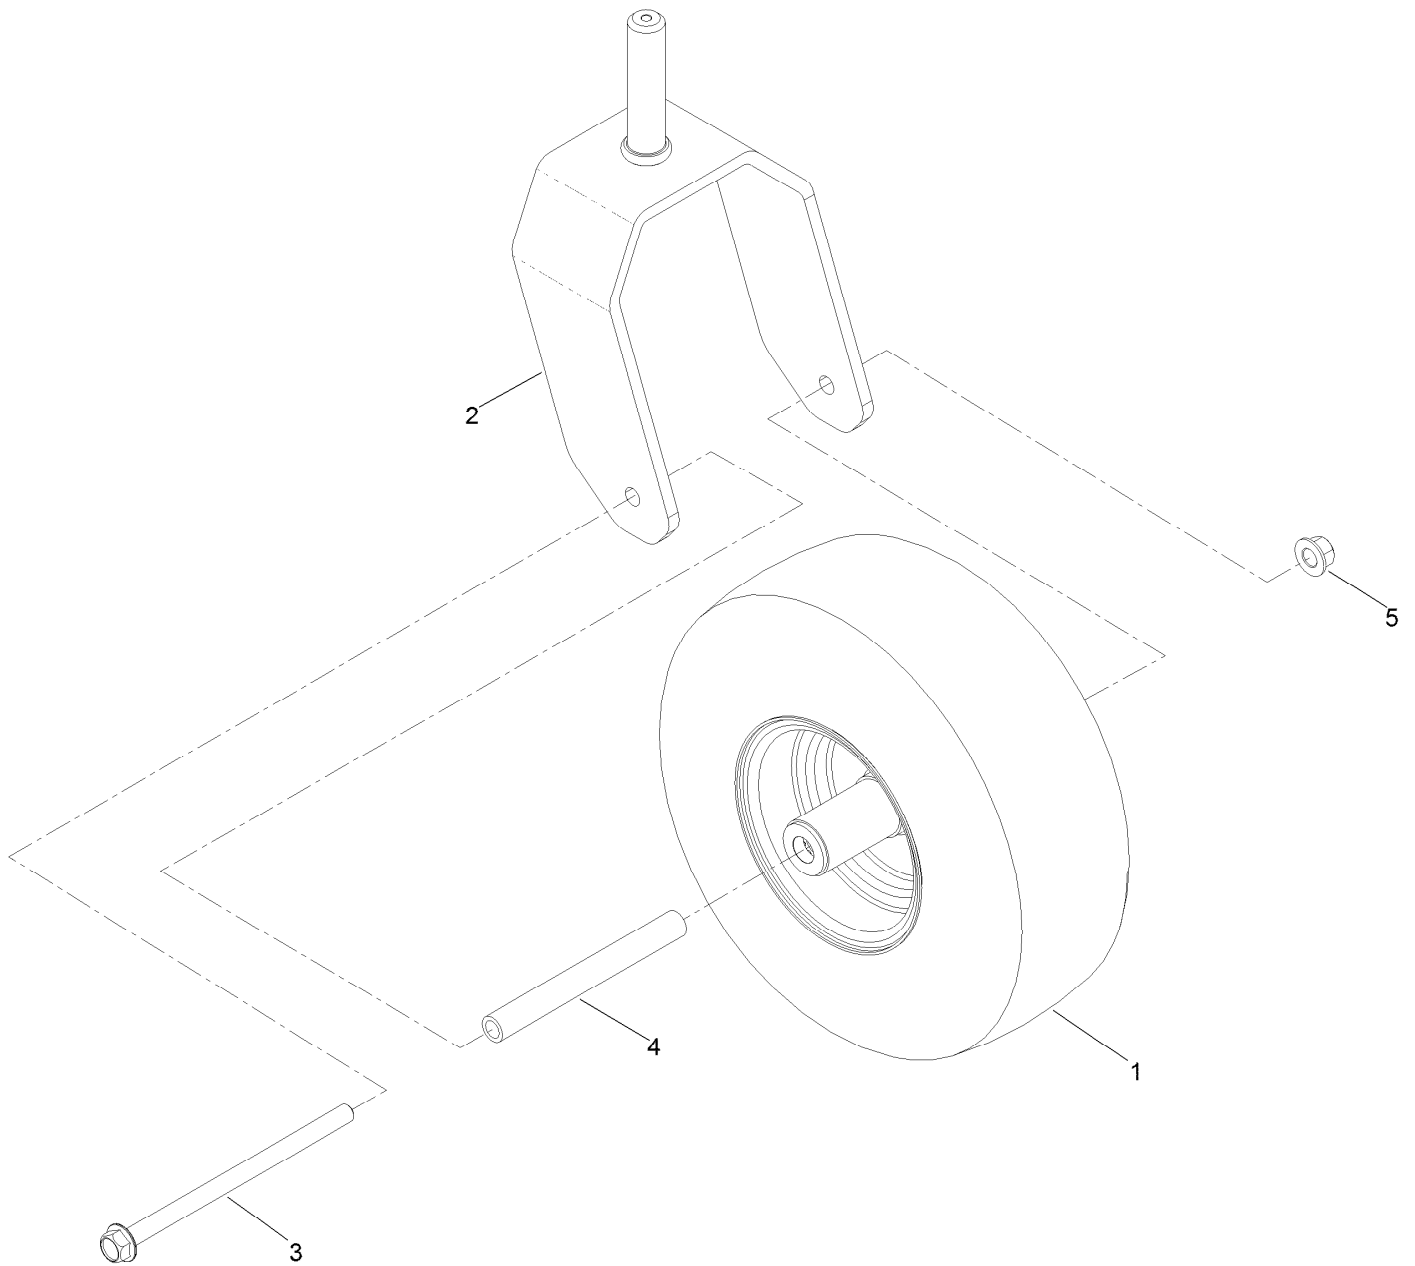


Fork and Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7592	1	Wheel And Tire ASM
2	126-4312-01	1	Fork-Caster
3	126-5389	1	Screw-HHF

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	127-0068	1	Spanner-Wheel, Caster
5	99-5107	1	Nut-Lock

 Wheel and Tire Assembly No. 126-7592

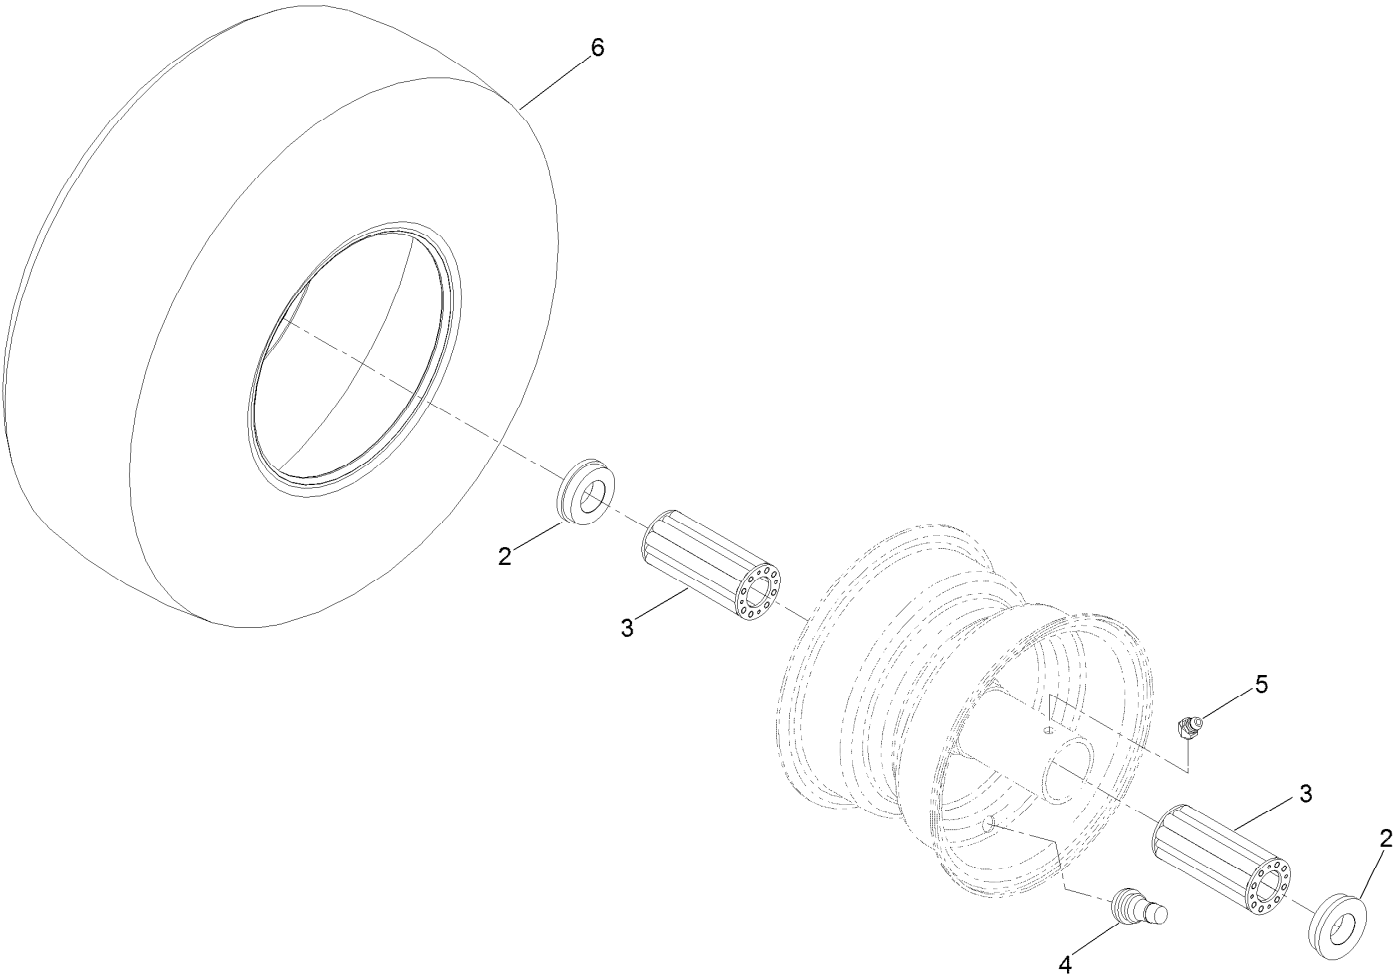


Wheel and Tire Assembly No. 126-7592 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	130-0705	2	Bushing-Flange
3	135-4489	2	Bearing-Roller, Wheel
4	5108	1	Valve

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	120-7125	1	Fitting-Zerk
6	126-5959	1	Tire

Roll-Over Protection System Assembly

 No. 126-9526

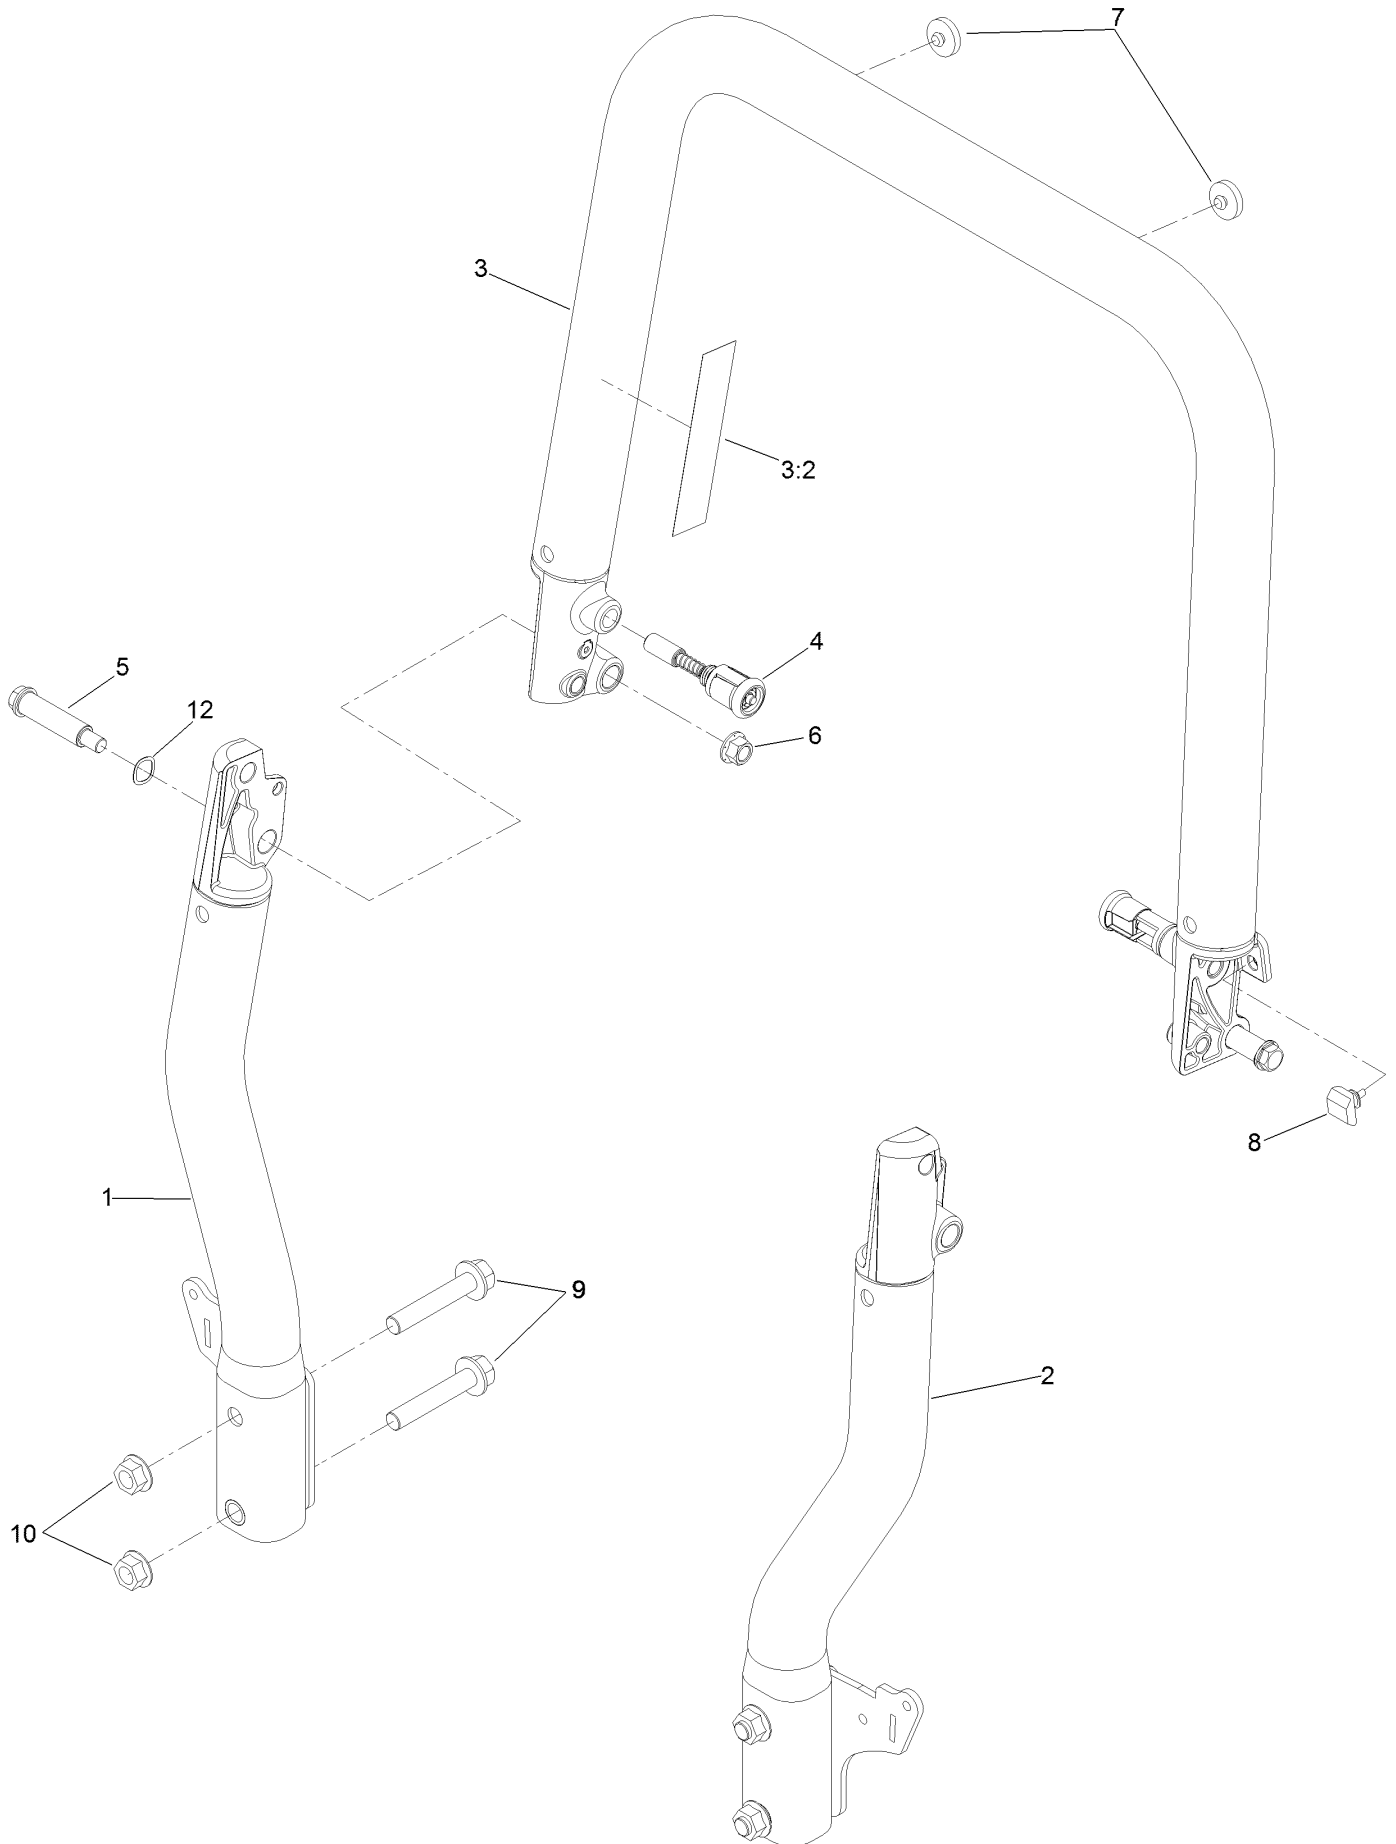


Roll-Over Protection System Assembly

No. 126-9526 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tube-Upright, RH ●	6	99-5107	2	Nut-Lock
2		1	Tube-Upright, LH ●	7	109-9233	2	Bumper-Push-In, Rubber
3		1	Top Tube ASM ●	8	126-9966	2	Bumper-ROPS
3:2	107-3069	1	Decal-Warning	9	126-9488	4	Screw-HHF
4	116-0104	2	Pin-Spring	10	32128-50	4	Nut-Flange
5	126-9209	2	Bolt-Shoulder	12	119-4164	2	Washer-Wave

● Not serviced separately

 Hydraulic Assembly

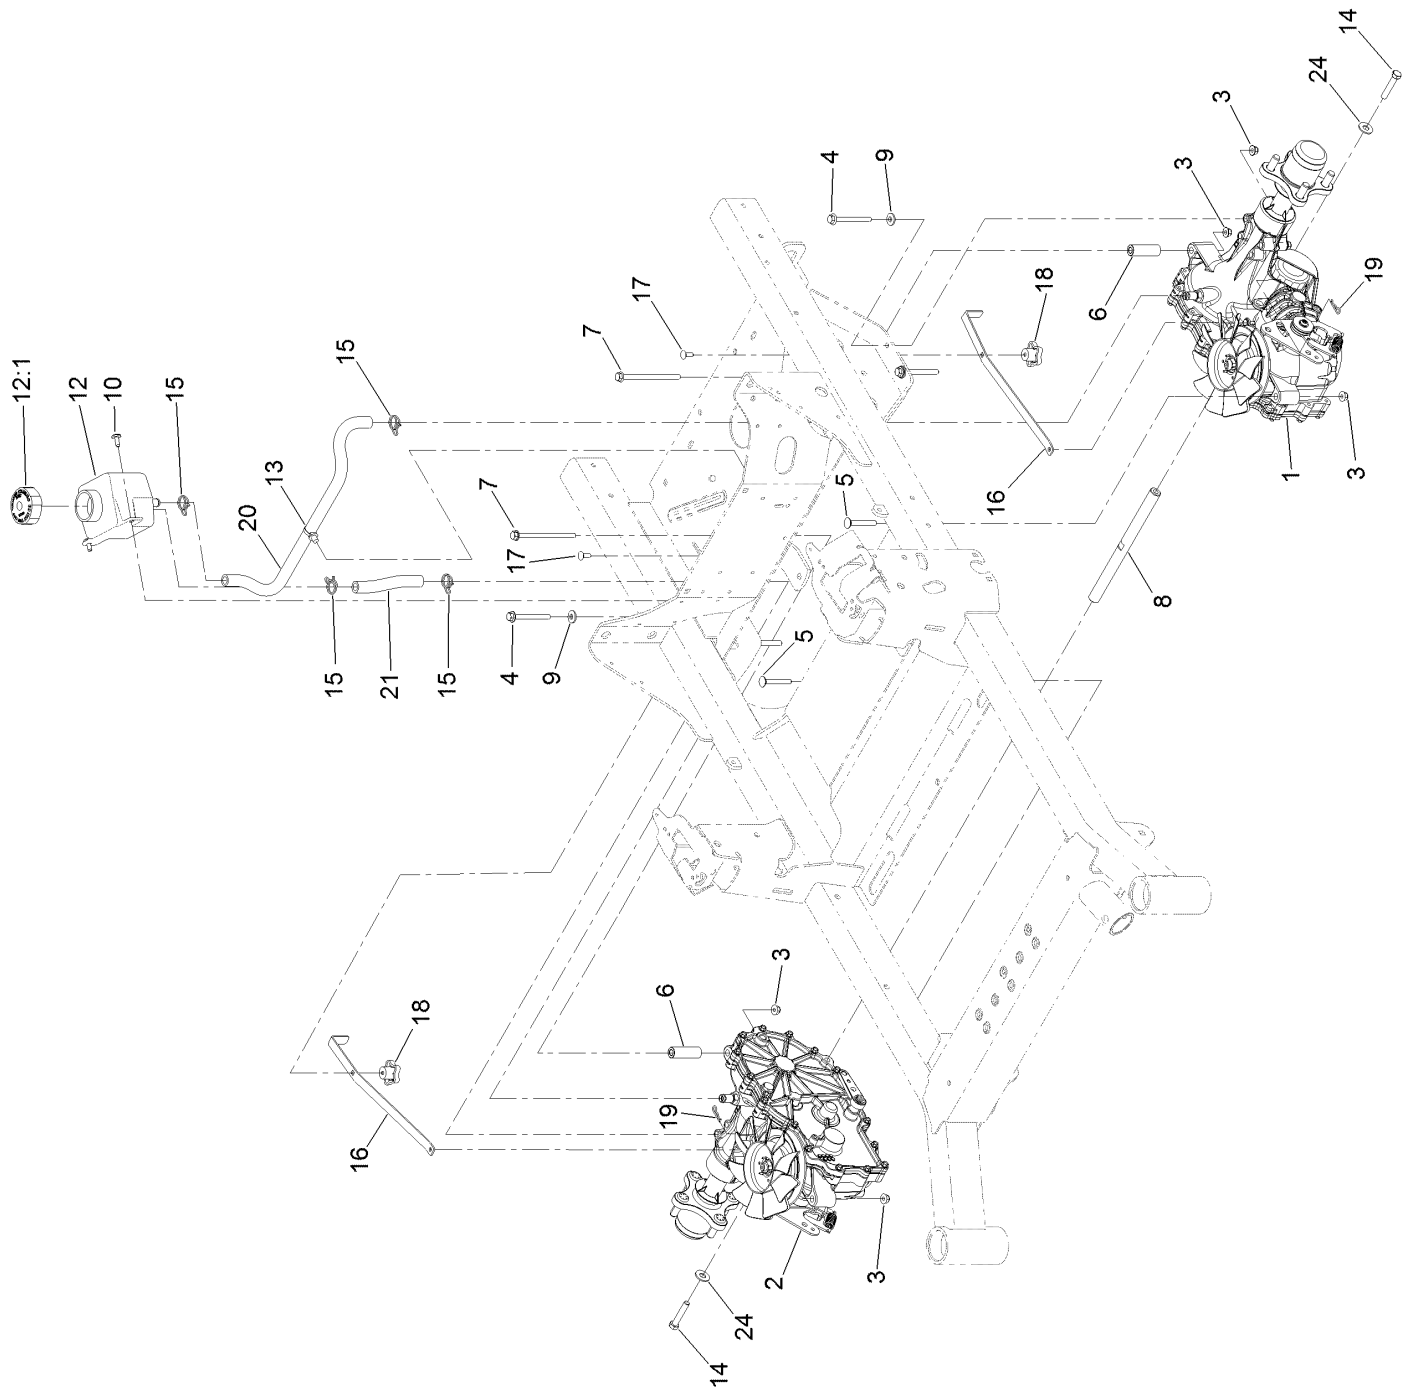


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2883	1	LH Transaxle ASM	12:1	109-3320	1	Cap-Reservoir, HYD
2	126-2884	1	RH Transaxle ASM	13	32180-118	1	Clip-Tie
3	104-8300	8	Nut-HF, NI	14	94-7972	2	Screw-HH W/Loctite ●
4	126-4687	4	Screw-HHF	15	126-0327	4	Clamp-Hose
5	3230-7	2	Bolt-CARR	16	109-5395	2	Arm-Bypass, Hydro
6	116-5809	2	Spacer-Hydro	17	3229-1	2	Bolt-CARR
7	126-5896	2	Screw HHF	18	108-6402	2	Knob-Handle
8	116-6833	1	Shaft-Spacer	19	1-806003	2	Pin-Cotter
9	1-303334	4	Washer-Spring	20	126-5668	1	Hose-Hydraulic
10	126-6266	2	Screw-Torx	21	126-5669	1	Hose-Hydraulic
12	109-2250	1	Tank-HYD	24	3256-4	2	Washer-Flat

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

 LH Transaxle Assembly No. 126-2883

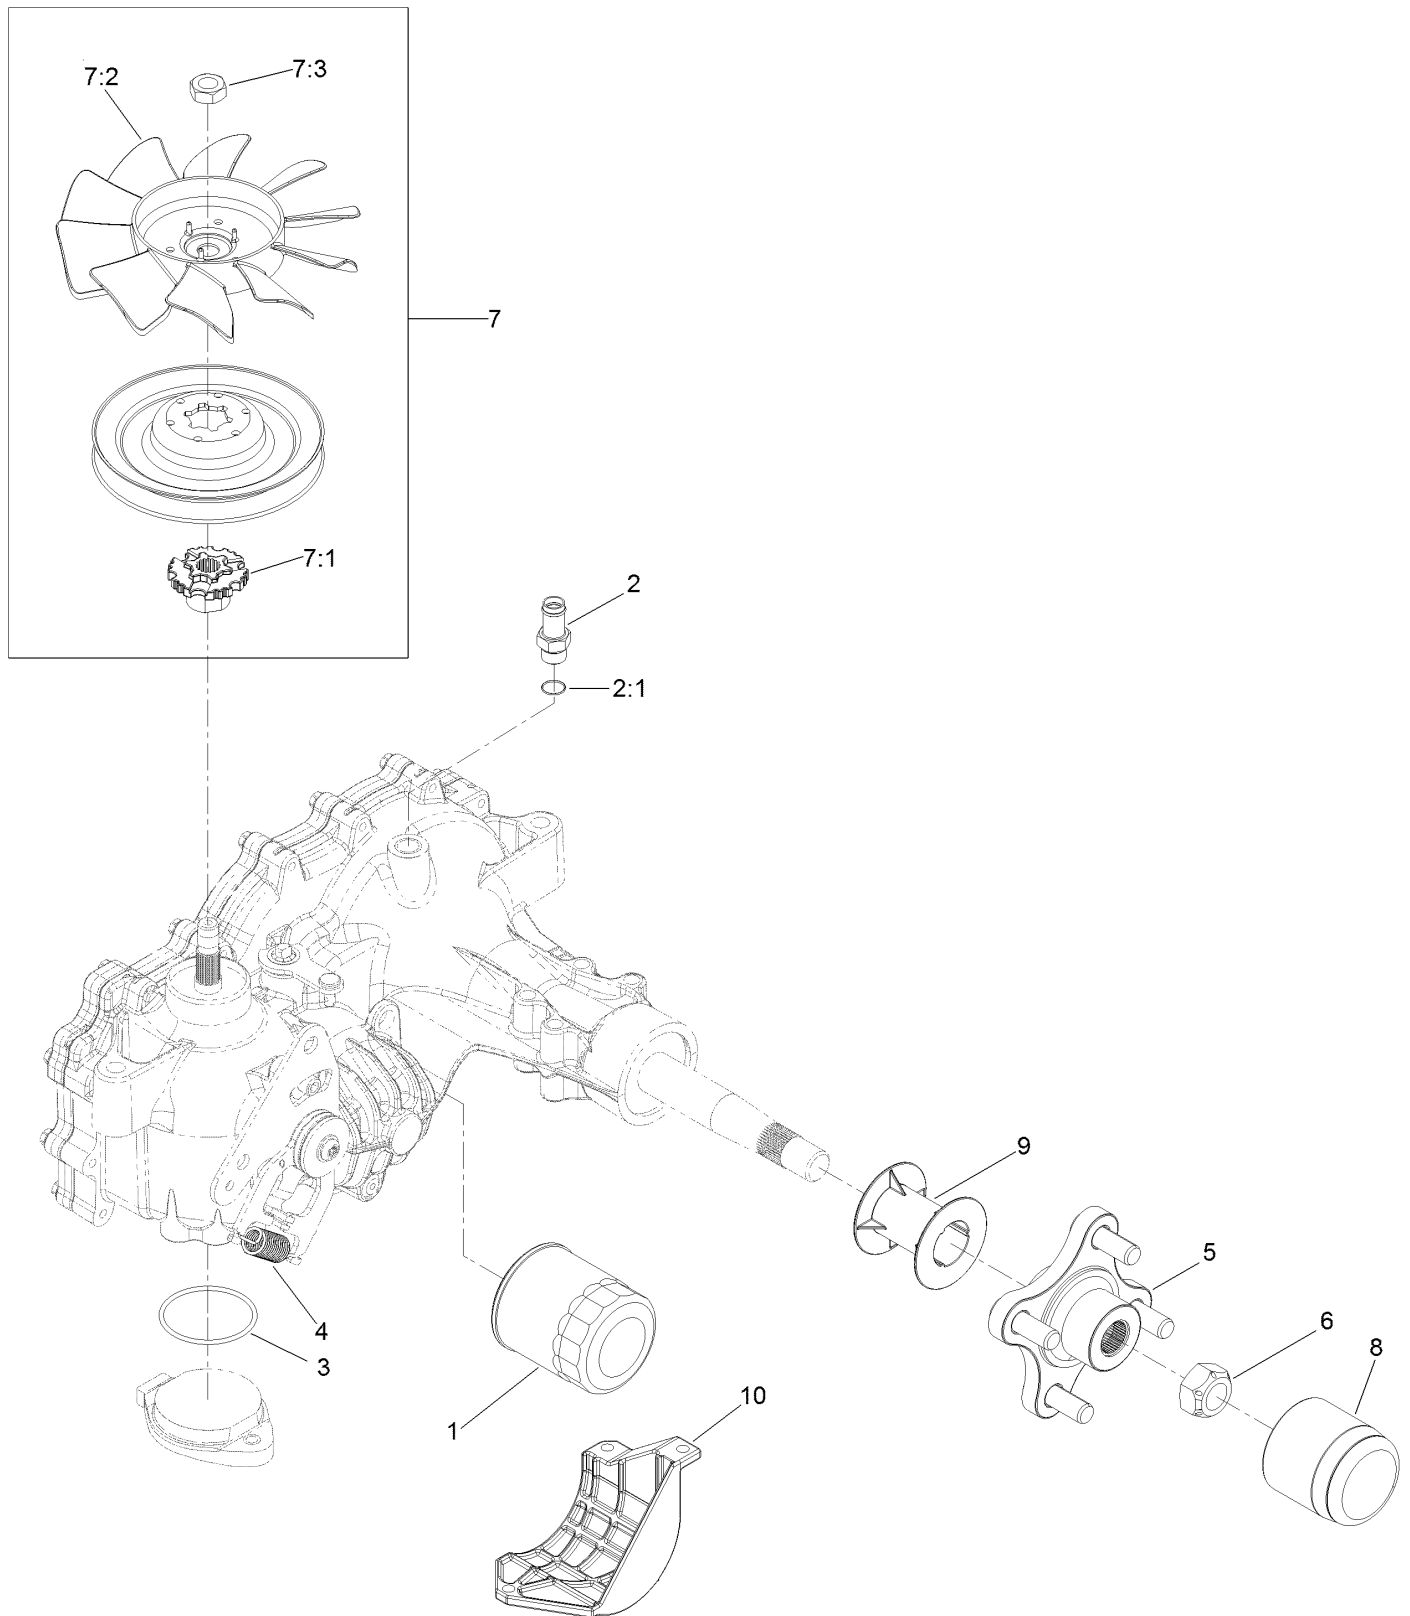


LH Transaxle Assembly No. 126-2883 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
11	121-3243	1	Seal Kit ●

● Not illustrated

 RH Transaxle Assembly No. 126-2884

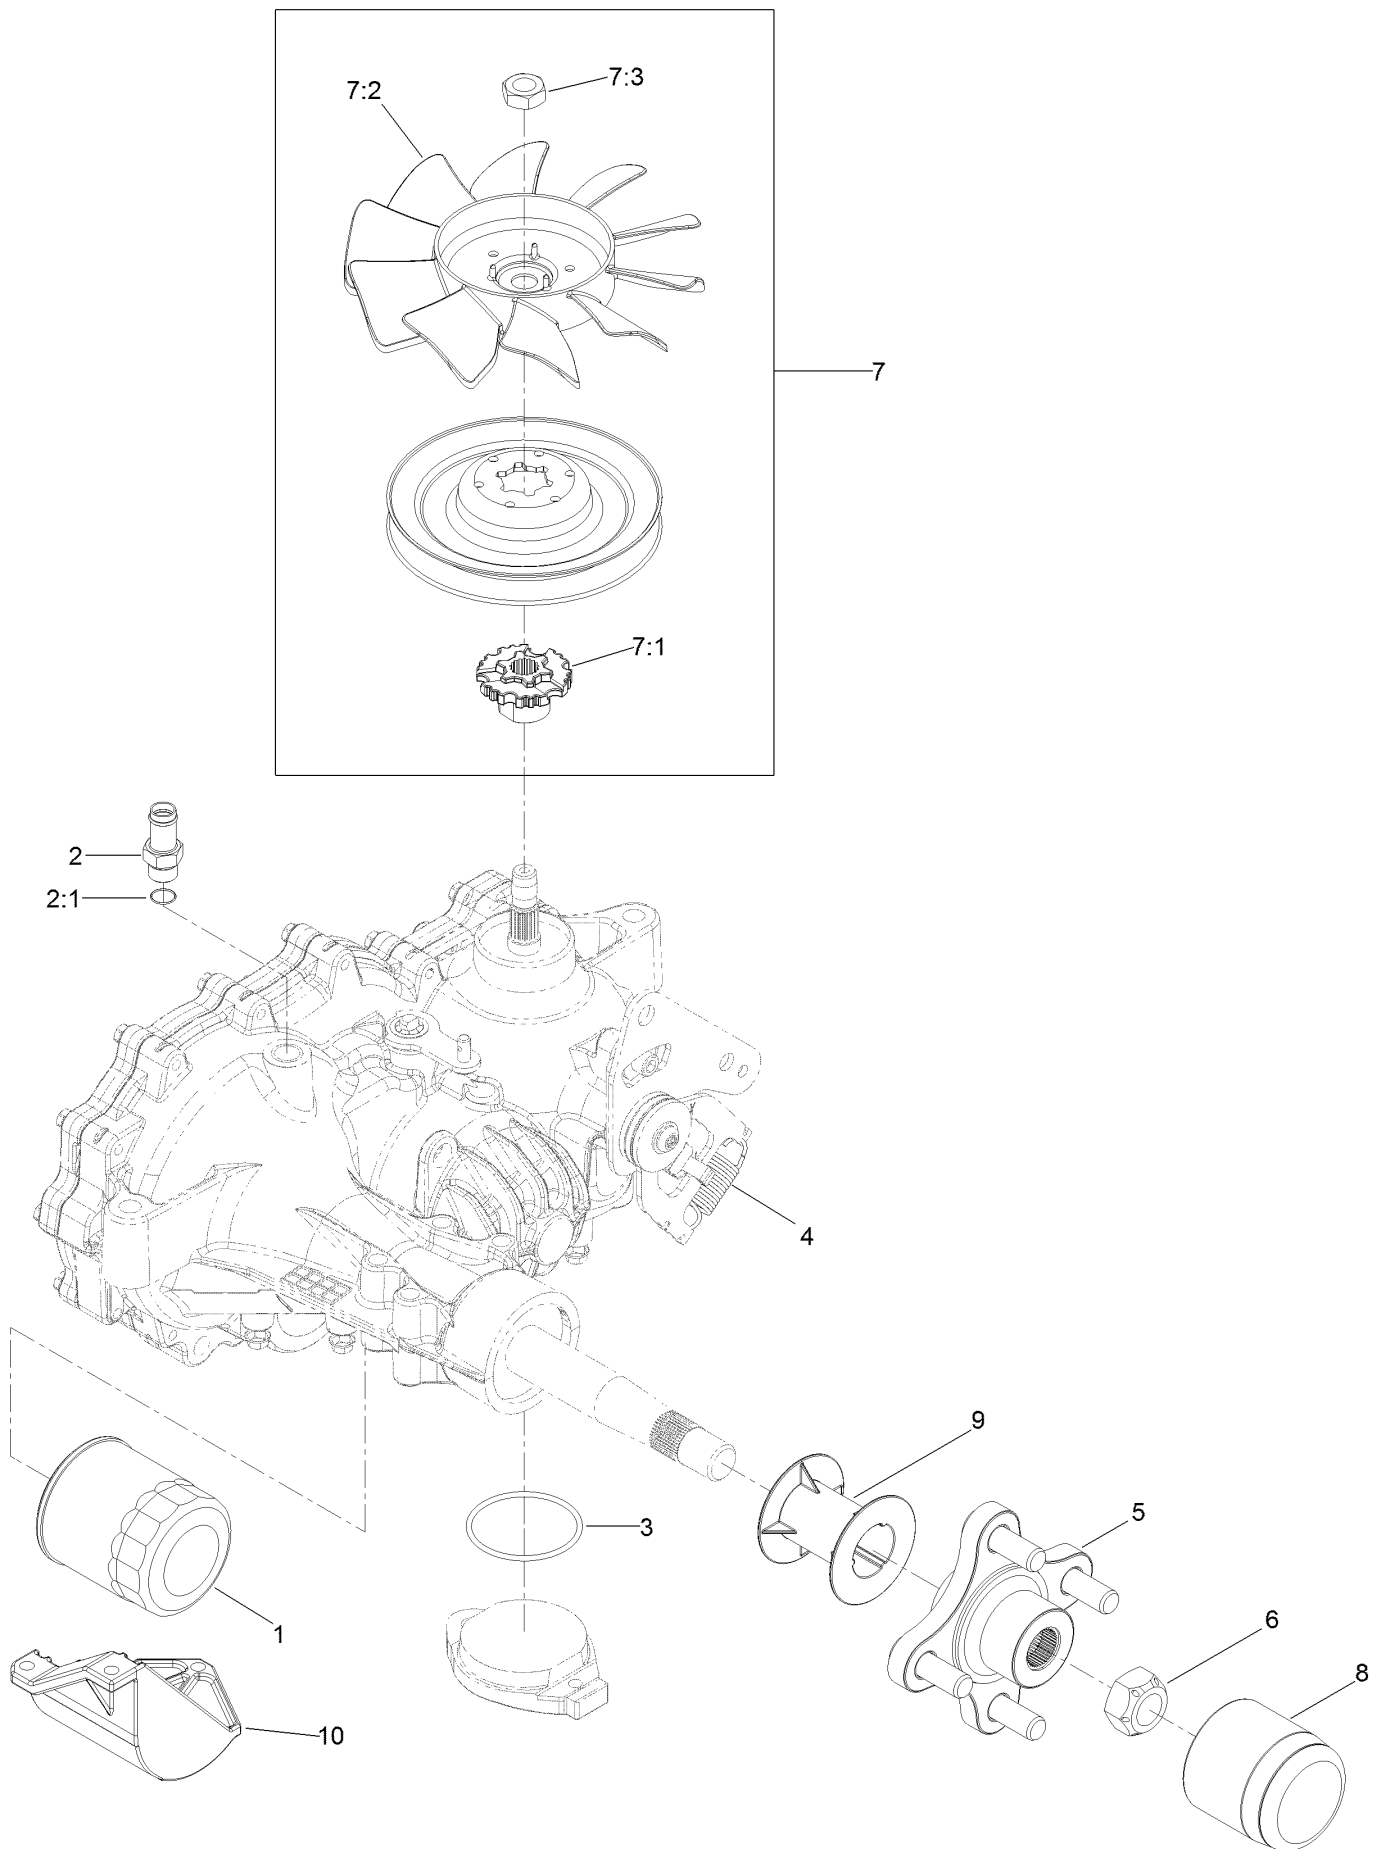


RH Transaxle Assembly No. 126-2884 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
11	121-3243	1	Seal Kit ●

● Not illustrated

 
Control Console and Guard Assembly

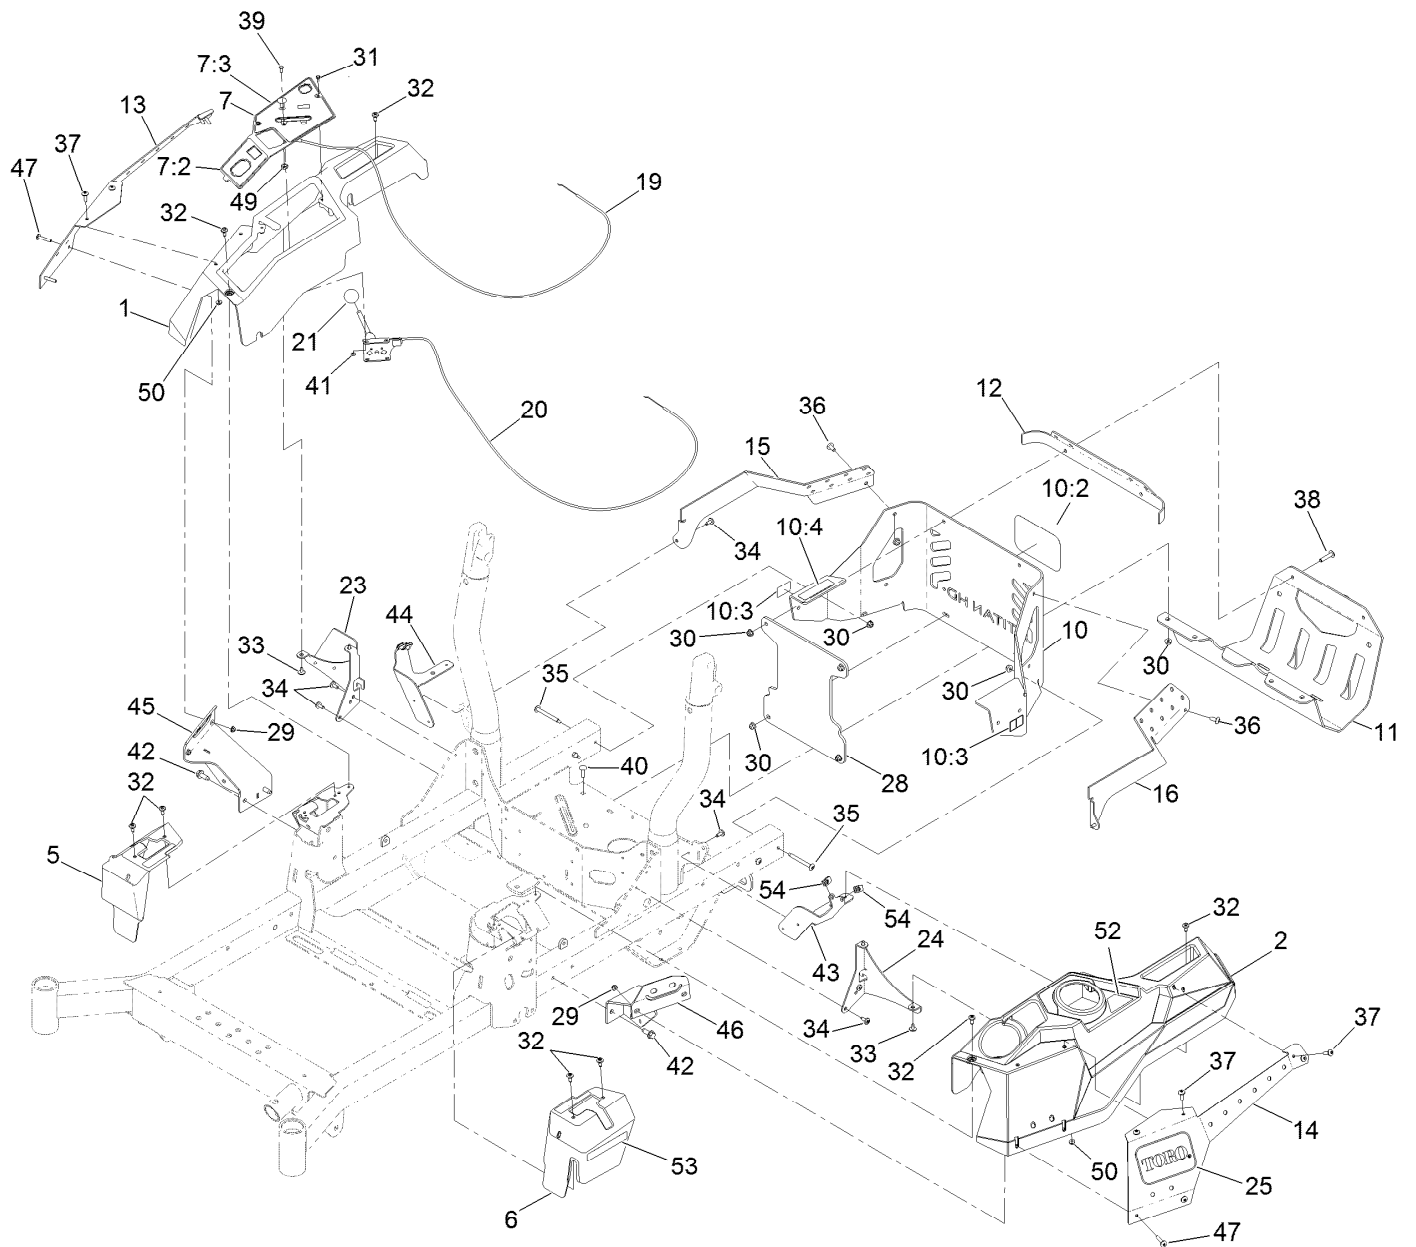

Control Console and Guard Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4983	1	Console-RH	29	104-7201	4	Nut-HF
2	126-4984	1	Console-LH	30	104-8300	12	Nut-HF, NI
5	126-7371	1	Cover-Control, Motion (RH)	31	117-5036	2	Screw-Plastic, HWH
6	126-7372	1	Cover-Control, Motion (LH)	32	120-7950	8	Screw
7	136-1673	1	Control Panel ASM	33	126-5544	4	Screw-Torx
7:2	126-9115	1	Decal-Panel, Control	34	126-6266	8	Screw-Torx
7:3	136-1305	1	Decal-Panel, Control	35	126-6267	4	Screw-Torx
10	126-7803	1	Rear Guard ASM	36	126-6268	2	Screw-Torx
10:2	99-4693	1	Decal	37	126-6269	8	Screw-Truss
10:3	106-5517	2	Decal-Warning	38	126-7439	4	Screw-Torx
10:4	117-2718	1	Decal-Arrester, Spark	39	1-807513	2	Bolt-CARR
11	126-7664-03	1	Guard-Muffler	40	3230-22	2	Screw-CARR
12	126-6260-01	1	Trim-Upper, Rear	41	3296-2	2	Nut-Lock, NI
13	136-1745-01	1	Cover-Pod, RH	42	126-1696	4	Screw-Forming, Thread
14	136-1746-01	1	Cover-LH	43	126-9808-03	1	Bracket-Support, Left Pod
15	126-9023-01	1	Bracket-Guard, RH	44	126-9809-03	1	Bracket-Support, Right Pod
16	126-9022-01	1	Bracket-Guard, LH	45	126-9104-01	1	Support-Pod, RH
19	126-6947	1	Cable-Control, Choke	46	126-9105-01	1	Support-Pod, LH
20	126-6946	1	Cable-Control, Throttle	47	126-8232	4	Screw-Truss
21	1-603175	1	Knob-Ball	49	3220-3	1	Nut-HJ
23	126-9945	1	Support-Console, RH	50	32149-2	4	Nut-Keps
24	126-5532-03	1	Bracket-Console, LH	52	126-9939	1	Decal-Fill, Fuel
25	68-3640	2	Decal	53	126-9299	2	Decal
28	126-9165-01	1	Weight-Rear	54	126-3739	4	Nut-Retainer

 Fuel Tank and Vent Hose System Assembly

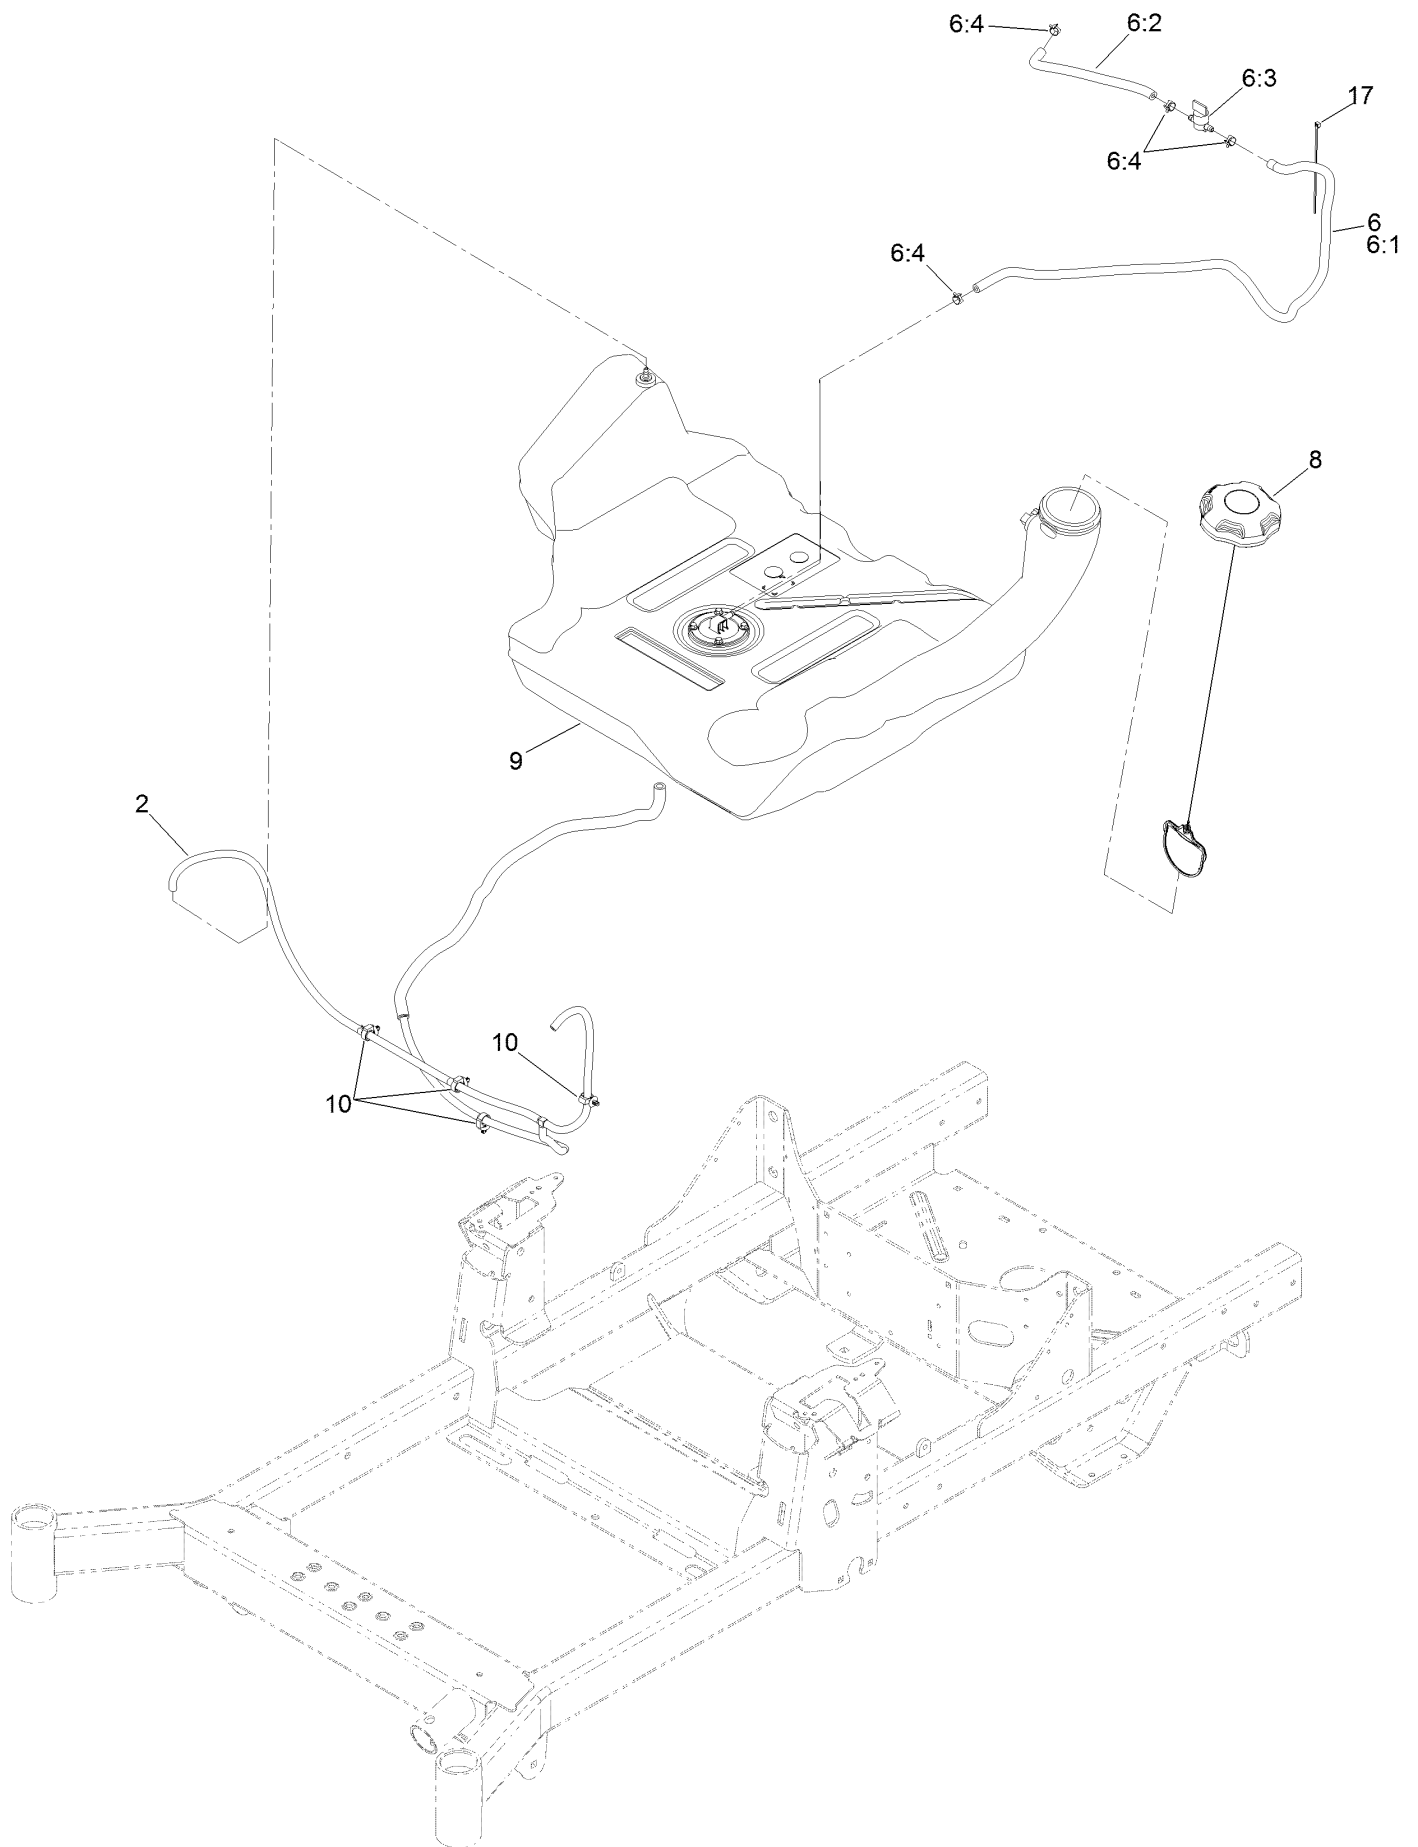


Fuel Tank and Vent Hose System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-8735	1	Hose-Vent
6	126-8739	1	Fuel Hose ASM
6:1	110-5702	1	Hose-Fuel
6:2	109-0282	1	Hose-Fuel
6:3	1-603770	1	Valve-Fuel

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6:4	2412-98	4	Clamp-Hose
8	126-4723	1	Cap-Fuel
9	126-4724	1	Tank-Fuel
10	126-5523	4	Clip
17	1-303287	1	Tie-Cable

 Fuel Tank Assembly No. 126-4724

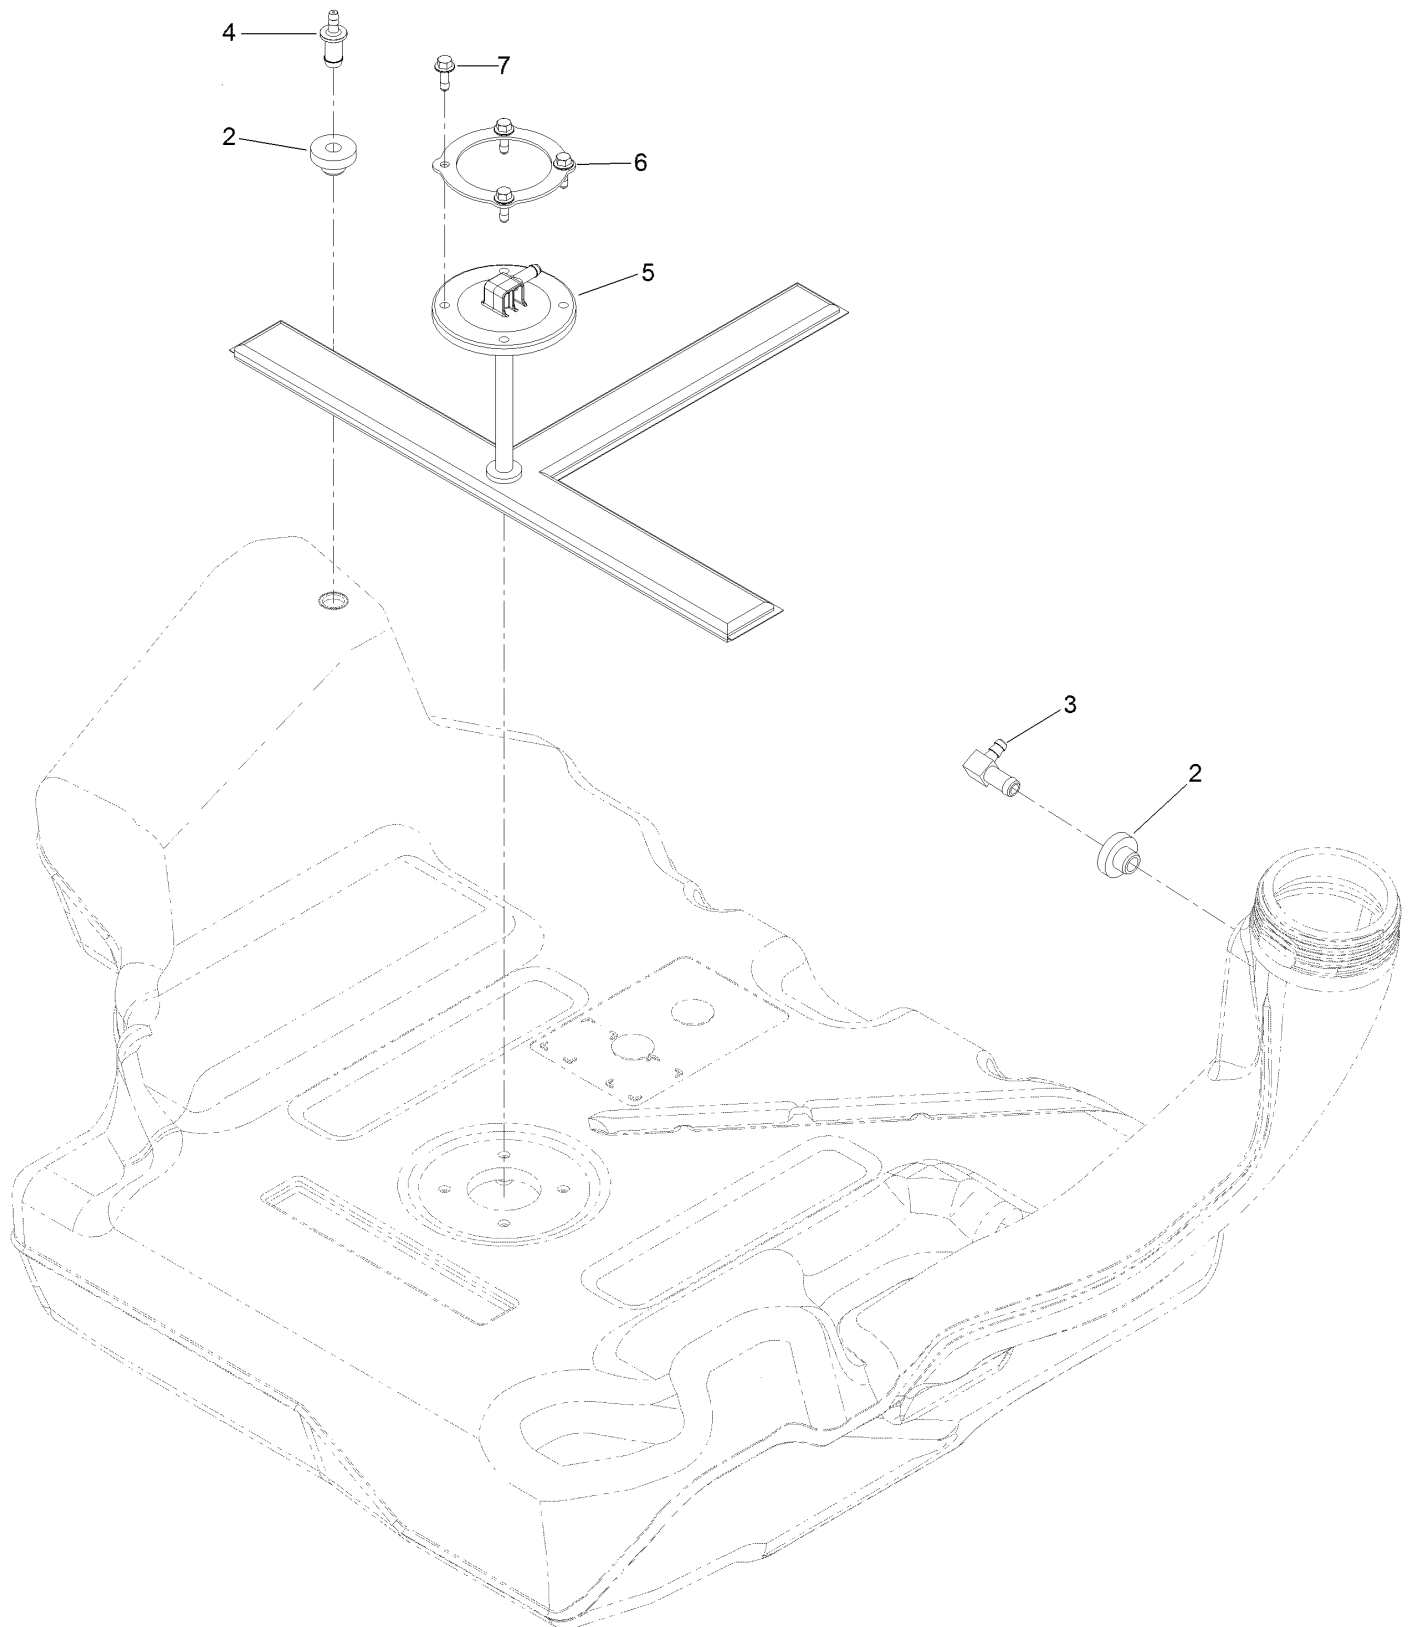


Fuel Tank Assembly No. 126-4724 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	126-5528	1	Pickup-Fuel
6	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt

 
Seat Mount Assembly

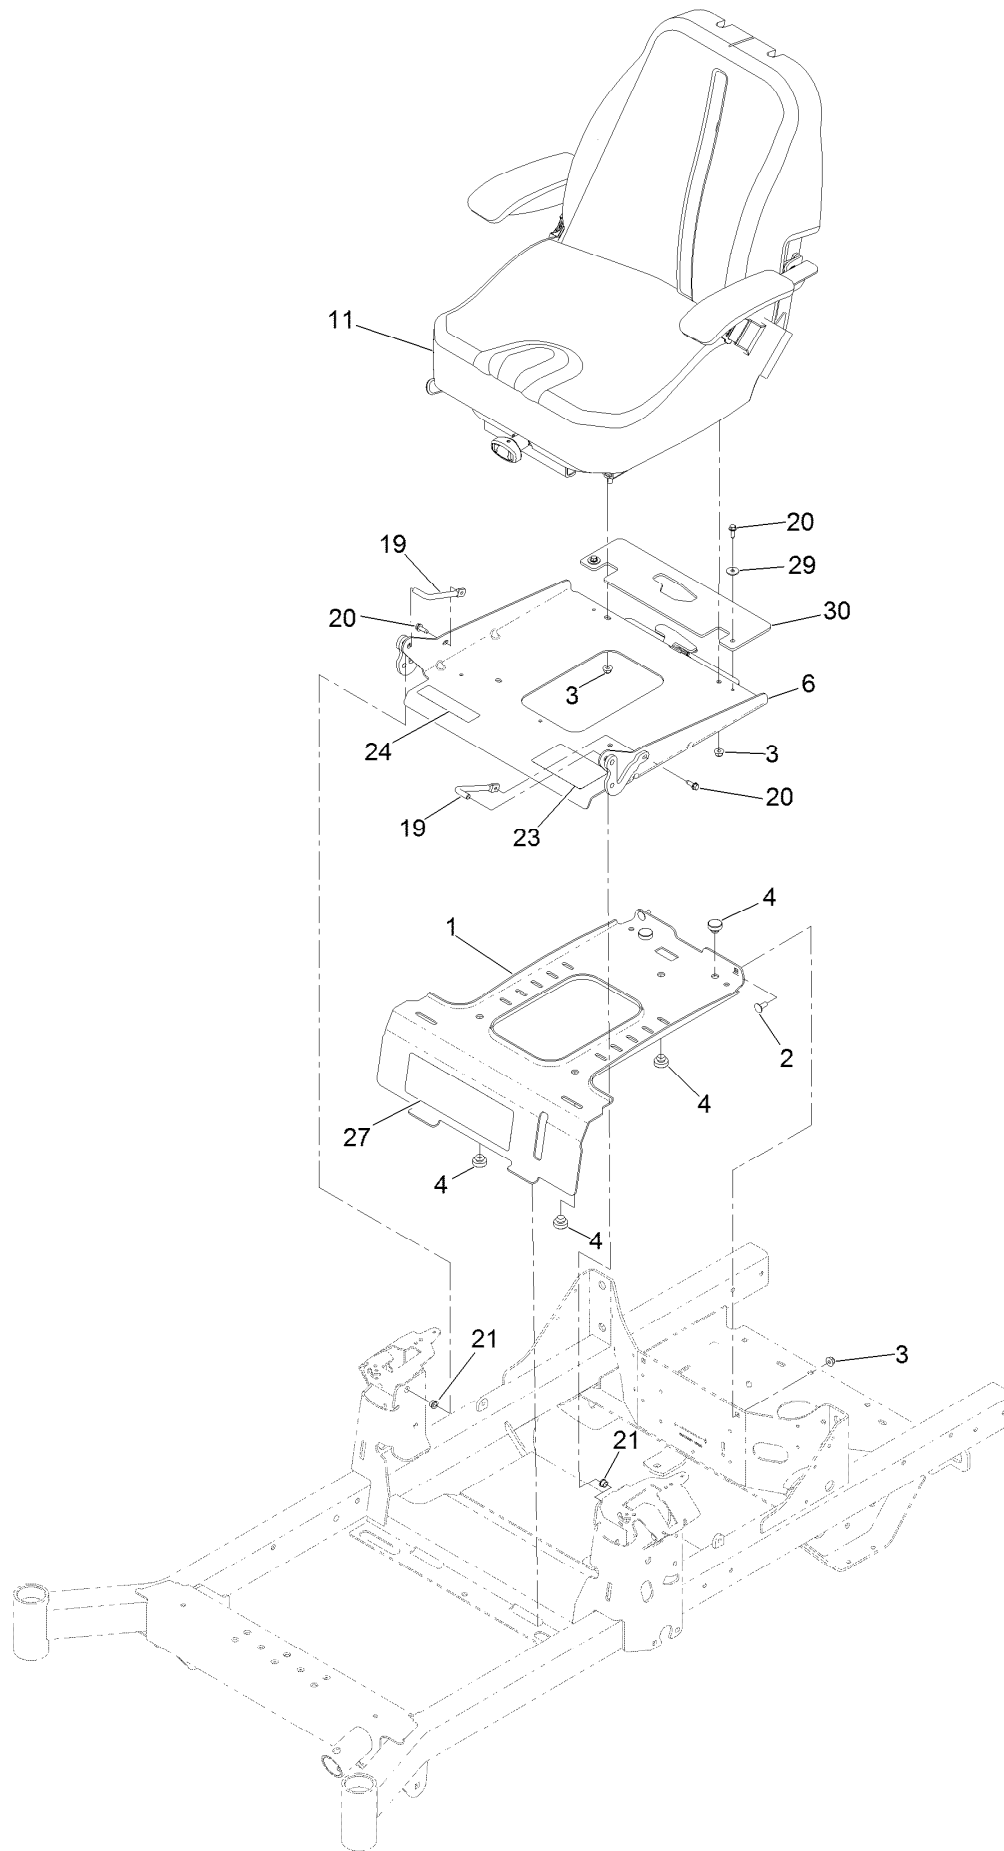

Seat Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4082-03	1	Plate-Retainer, Tank	20	32144-44	4	Screw-HWH, Thread Roll
2	3230-23	2	Screw-CARR	21	1-603735	2	Bushing-Flanged
3	104-8300	6	Nut-HF, NI	23	126-8151	1	Decal-Aid, Service
4	104-1412	5	Bumper-Rubber	24	126-8161	1	Decal-Latch, Seat
6	126-7309	1	Seat Pan And Latch ASM	27	126-9273	1	Decal
11	126-8293	1	Seat ASM	29	3256-67	2	Washer
19	126-5914	2	Pin-Pivot, Seat	30	135-0214	1	Guard-Seat, Rubber

 Seat Pan and Latch Assembly No. 126-7309

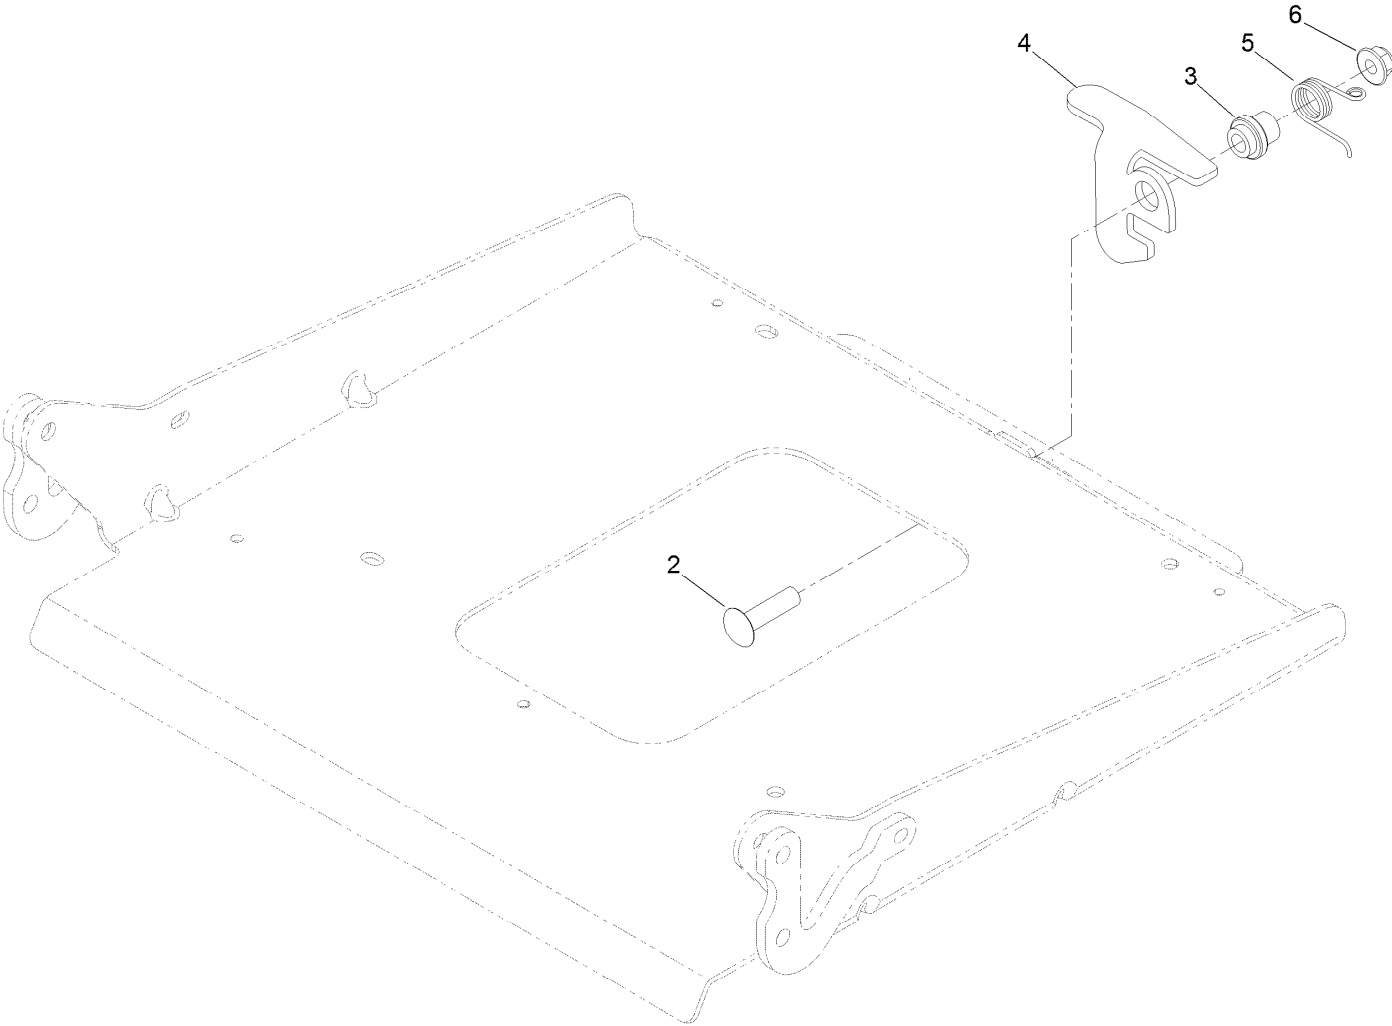


Seat Pan and Latch Assembly No. 126-7309 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	3231-26	1	Screw-CARR
3	107-0075	1	Bushing-Latch, Seat
4	126-6739	1	Latch-Catch, Single

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	126-8923	1	Spring-Torsion, Latch
6	104-8301	1	Nut-HF, NI

 Seat Assembly No. 126-8293

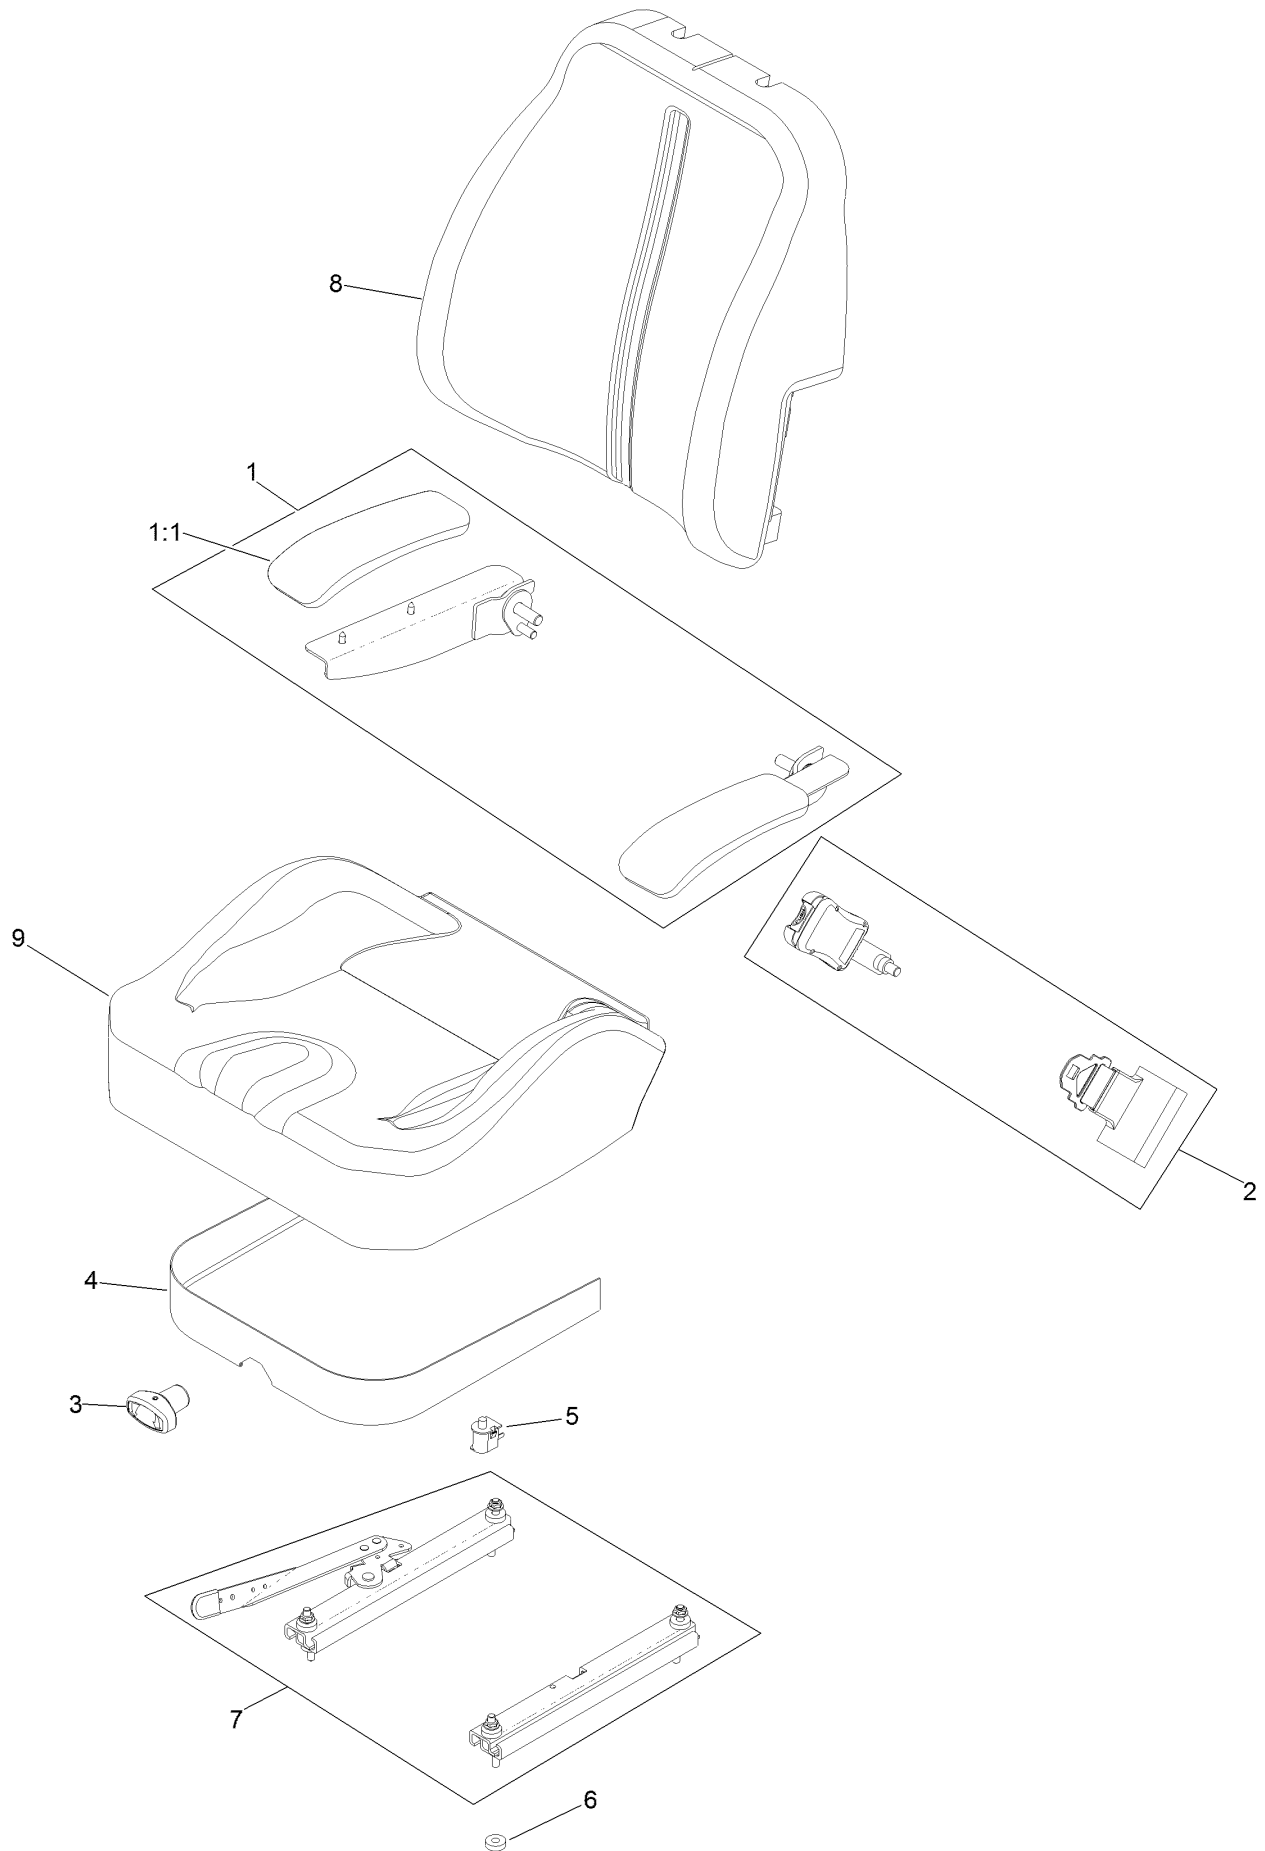


Seat Assembly No. 126-8293 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2058	1	Armrest Kit
1:1	110-4163	2	Cushion-Rest, Arm
2	130-0845	1	Seat Belt Kit
3	130-0846	1	Knob-Adjuster
4	126-3506	1	Cover-Skirt W/Fasteners

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	82-2190	1	Switch-Bail
6	26-4840	4	Spacer-Pin, Mounting
7	130-0844	1	Track Set
8	126-8569	1	Cover-Back, Seat
9	126-8568	1	Cover-Seat, Bottom

 Motion Control Assembly

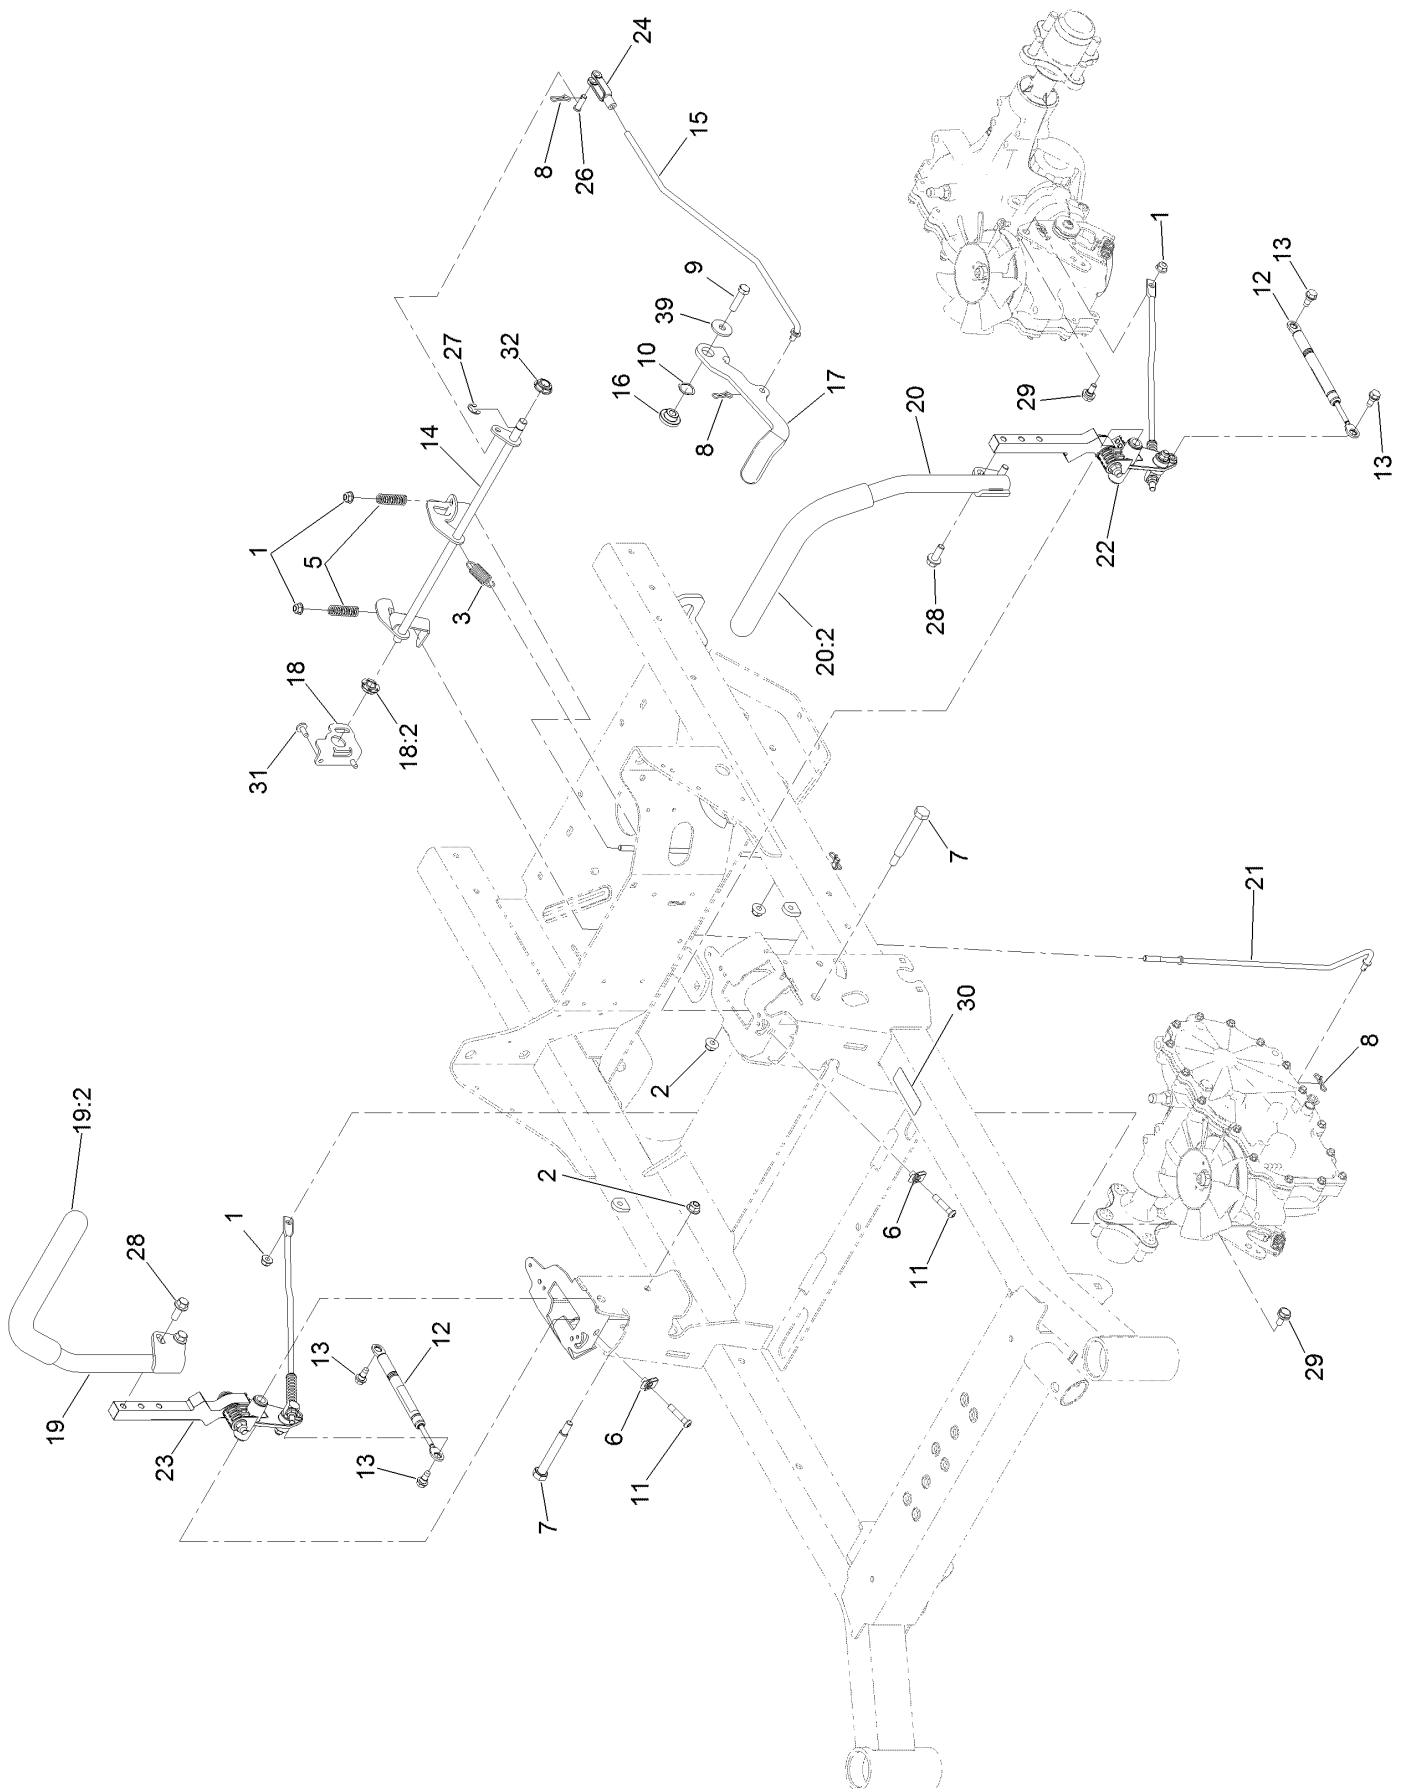


Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8300	4	Nut-HF, NI	18:2	126-5820	1	Bearing-Spherical
2	104-8301	3	Nut-HF, NI	19	126-9191	1	RH Control Handle ASM
3	107-1045	2	Spring-Extension	19:2	126-7359	1	Grip
5	109-7694	2	Spring-Compression	20	126-9192	1	LH Control Handle ASM
6	112-3306	2	Nut	20:2	126-7359	1	Grip
7	115-5099	2	Bolt-Pivot	21	126-7217	2	Linkage-Brake, Lower
8	119-1415	4	Pin-Cotter, Locking	22		1	LH Motion Control ASM ●
9	323-8	1	Screw-HH	23		1	RH Motion Control ASM ●
10	119-4164	1	Washer-Wave	24	1-303105	1	Yoke-Adjustable
11	126-4299	2	Screw-HSBH	26	1-808280	1	Pin-Clevis
12	126-4322	2	Damper	27	32120-47	1	Ring-Retaining, External
13	126-4424	4	Screw-Shoulder	28	3234-42	4	Screw-HHF
14	126-5813	1	Shaft-Brake	29	37-8771	2	Bolt-Shoulder, HF
15	126-5819	1	Linkage-Brake, Upper	30	115-9625	1	Decal-Brake, Parking
16	126-5989	1	Pivot-Flange	31	126-6266	2	Screw-Torx
17	126-9490	1	Lever-Brake (With Grip)	32	126-5820	1	Bearing-Spherical
18	126-6456	1	Bracket-Brake	39	2844	1	Washer

● Not serviced separately

 
LH Motion Control Assembly

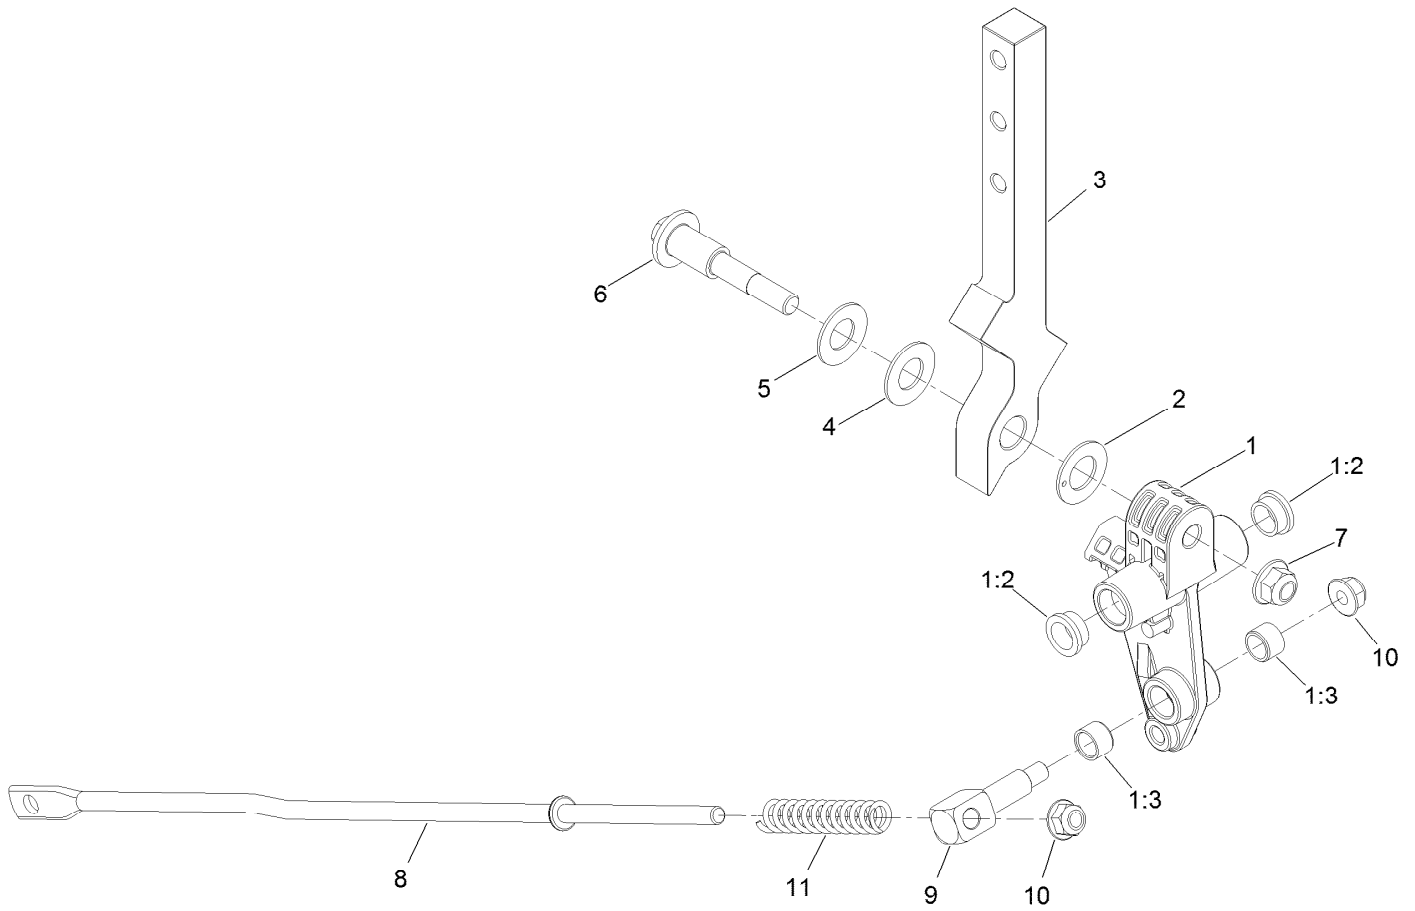

LH Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-3773	1	Control Arm ASM	6	117-1198	1	Bolt-Pivot
1:2	126-8909	2	Bushing	7	104-8301	1	Nut-HF, NI
1:3	1-413152	2	Bushing-Sleeve	8	126-5435	1	Link-Control
2	126-7296	1	Washer-Friction	9	126-5434	1	Swivel
3	126-8182	1	Arm-Control	10	104-8300	2	Nut-HF, NI
4	117-1240	1	Washer	11	126-8195	1	Spring-Return, Neutral
5	119-8925	1	Washer-Belleville				

 
RH Motion Control Assembly

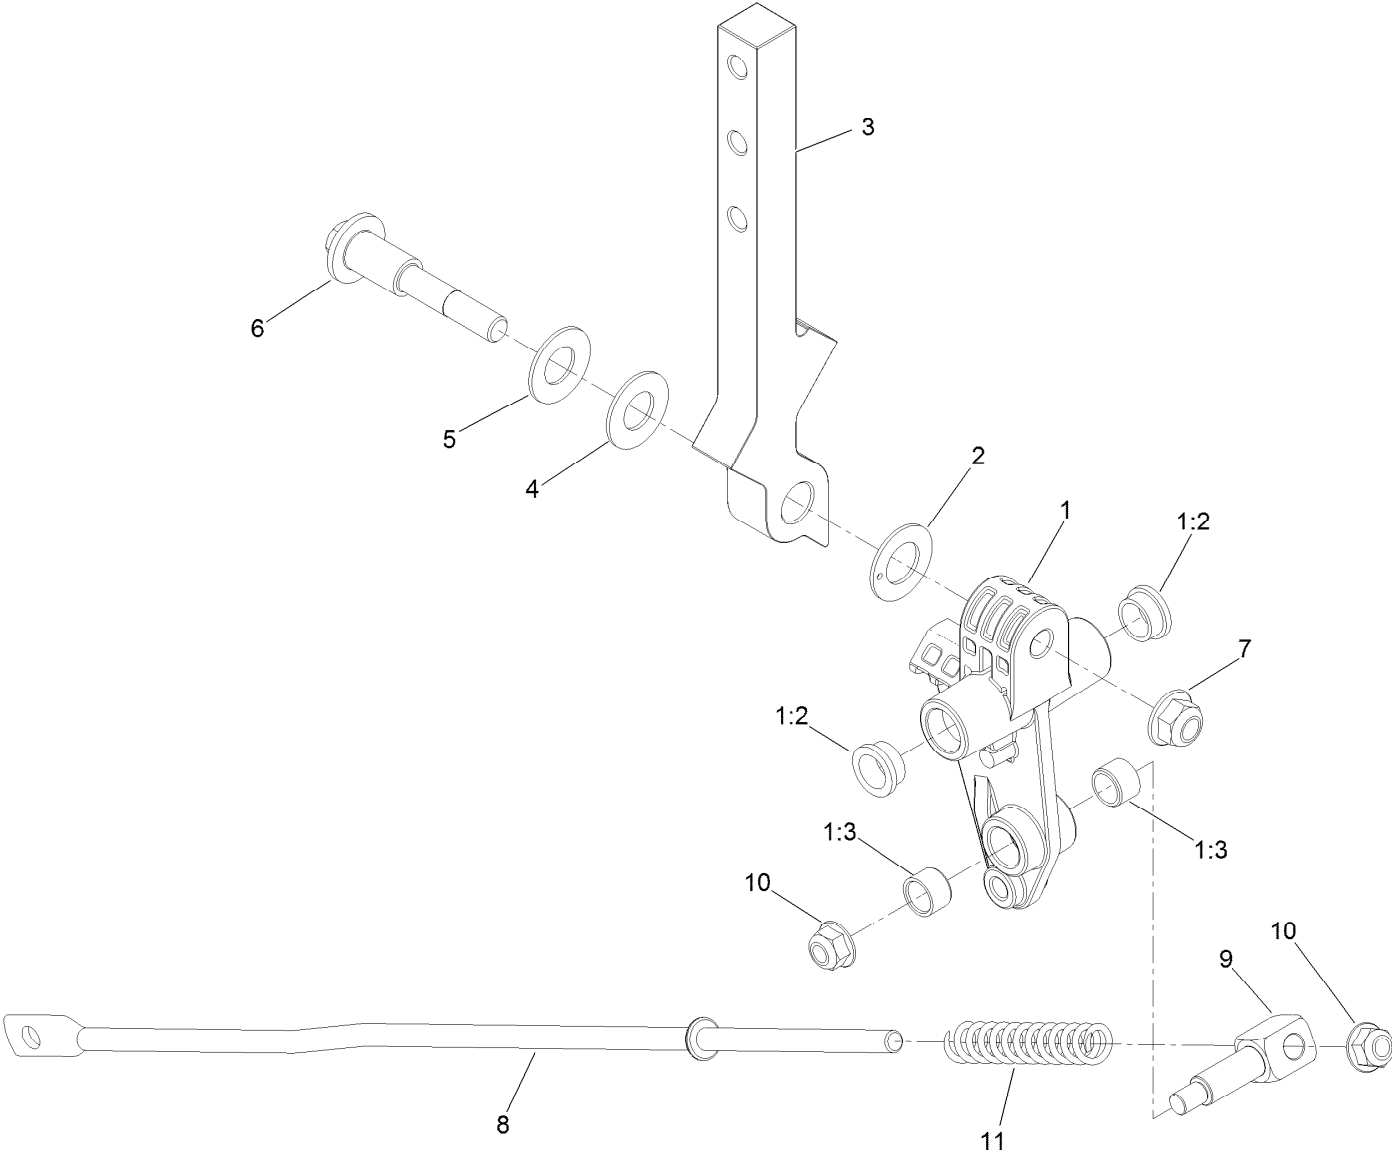

RH Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-3773	1	Control Arm ASM	6	117-1198	1	Bolt-Pivot
1:2	126-8909	2	Bushing	7	104-8301	1	Nut-HF, NI
1:3	1-413152	2	Bushing-Sleeve	8	126-5435	1	Link-Control
2	126-7296	1	Washer-Friction	9	126-5434	1	Swivel
3	126-8182	1	Arm-Control	10	104-8300	2	Nut-HF, NI
4	117-1240	1	Washer	11	126-8195	1	Spring-Return, Neutral
5	119-8925	1	Washer-Belleville				

 Electrical System Assembly

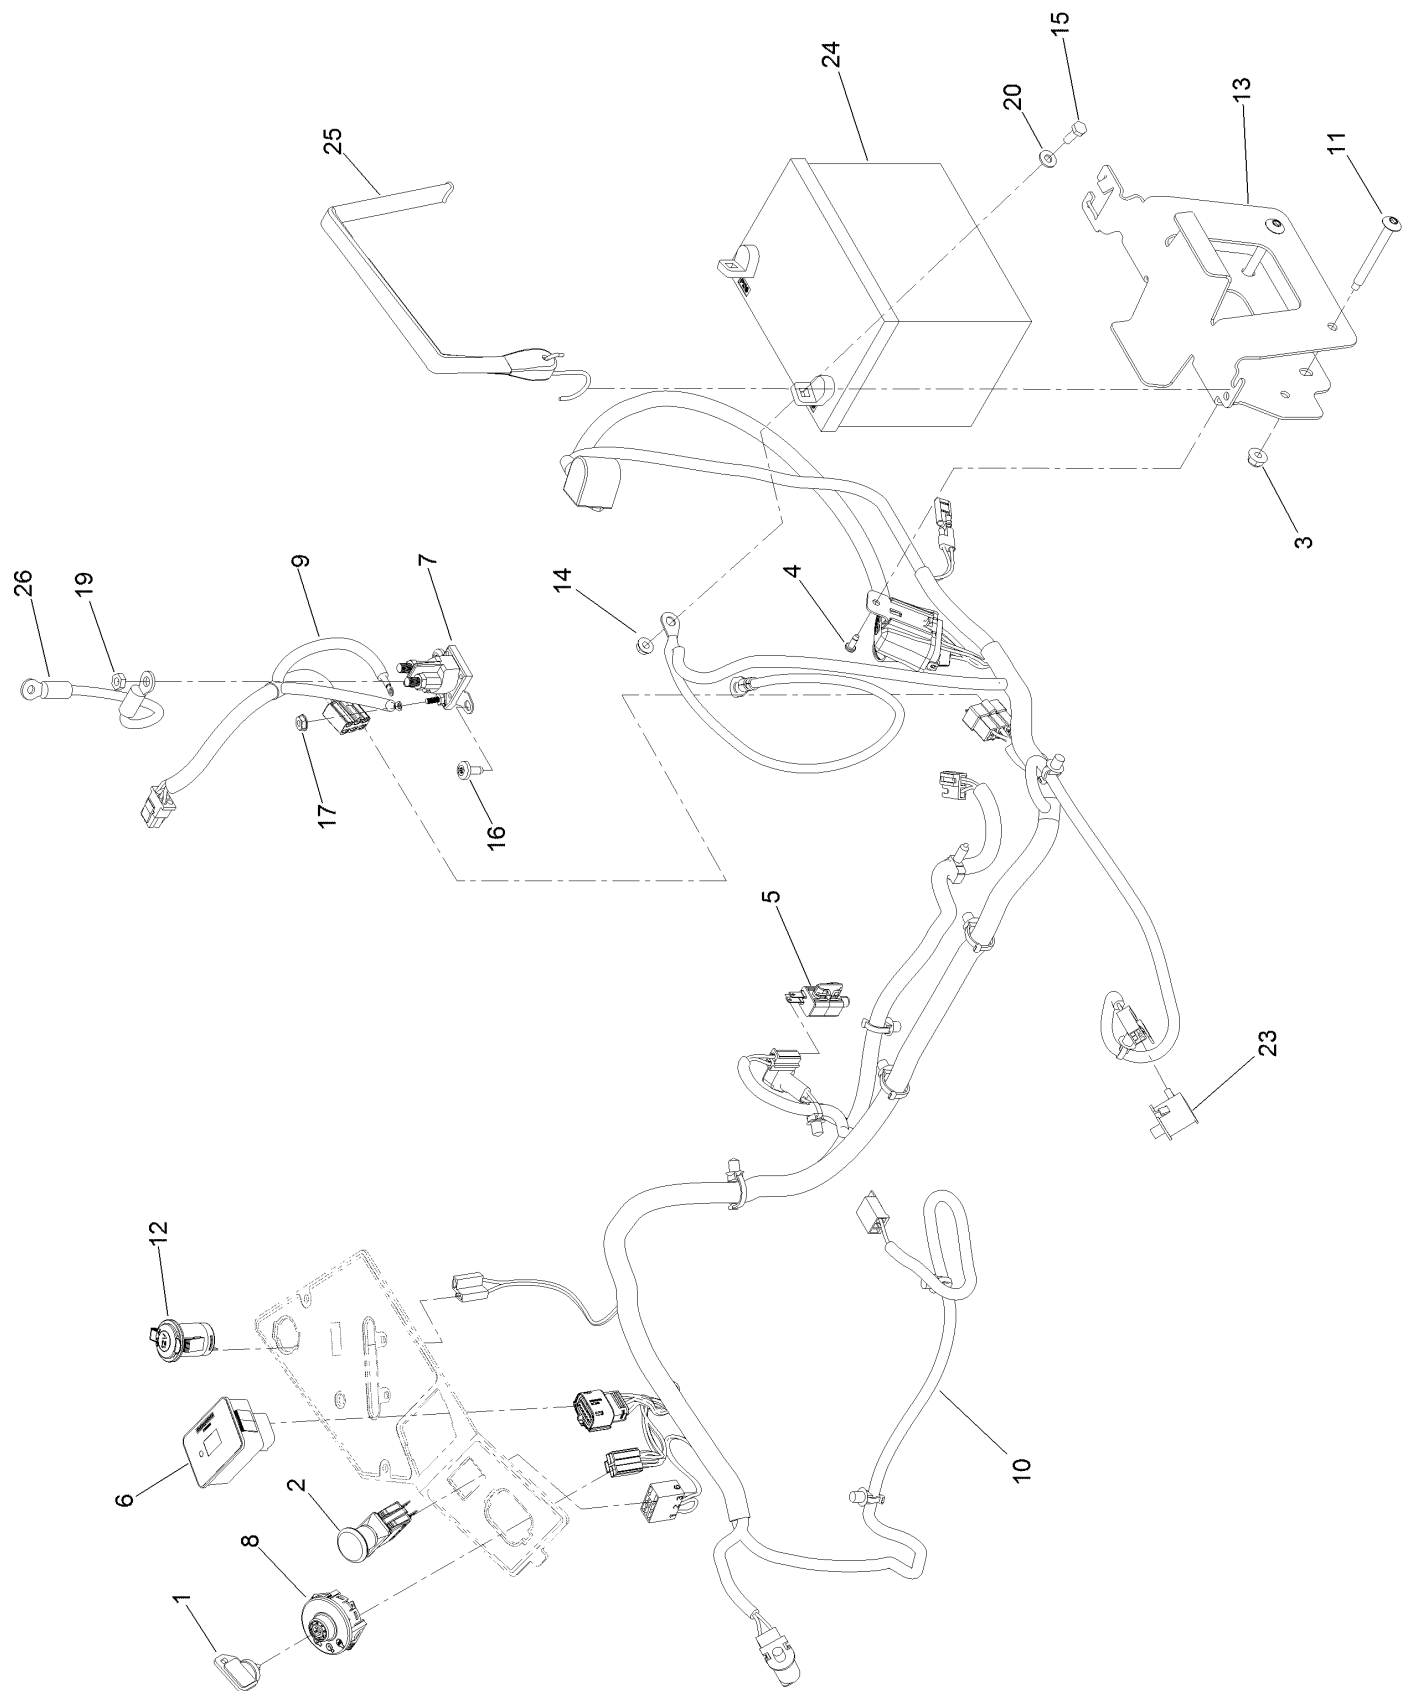

Electrical System Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	63-8360	1	Key-Ignition	13	126-6725-03	1	Tray-Battery
2	103-5221	1	Switch-PTO	14	32128-33	2	Nut-HF
3	104-8300	2	Nut-HF, NI	15	321-4	2	Screw-HH
4	105-6849	1	Screw-Forming, Thread	16	126-6266	2	Screw-Torx
5	110-6765	1	Switch	17	32149-8	2	Nut-Keps
6	116-5609	1	Module ASM	19	3220-2	1	Nut-Jam
7	117-1197	1	Solenoid	20	3256-22	2	Washer-Flat
8	117-2221	1	Switch-Ignition	23	82-2190	2	Switch-Bail
9	126-5036	1	Adapter-Harness, Wire	24		1	Battery (300 CCA, Wet) ●■
10	126-5803	1	Harness-Wire ▲	25	126-7627	1	Strap-Bungee
11	126-6267	2	Screw-Torx	26	100-3540	1	Cable-Battery, Positive
12	126-6499	1	Port-Power, 12V				

● Obtain locally.

■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

 Harness Assembly No. 126-5803

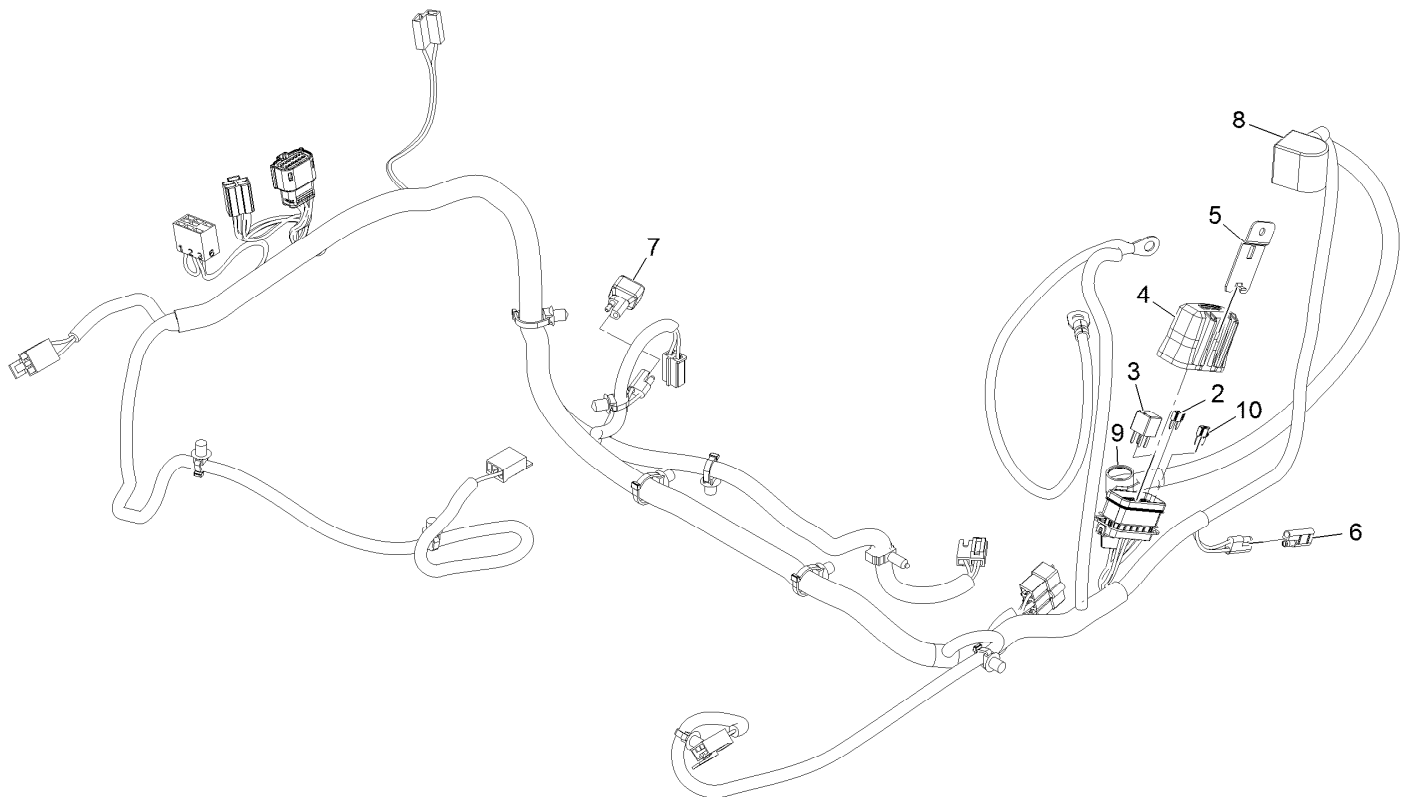


Harness Assembly No. 126-5803 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp

 
Deck Lift Assembly

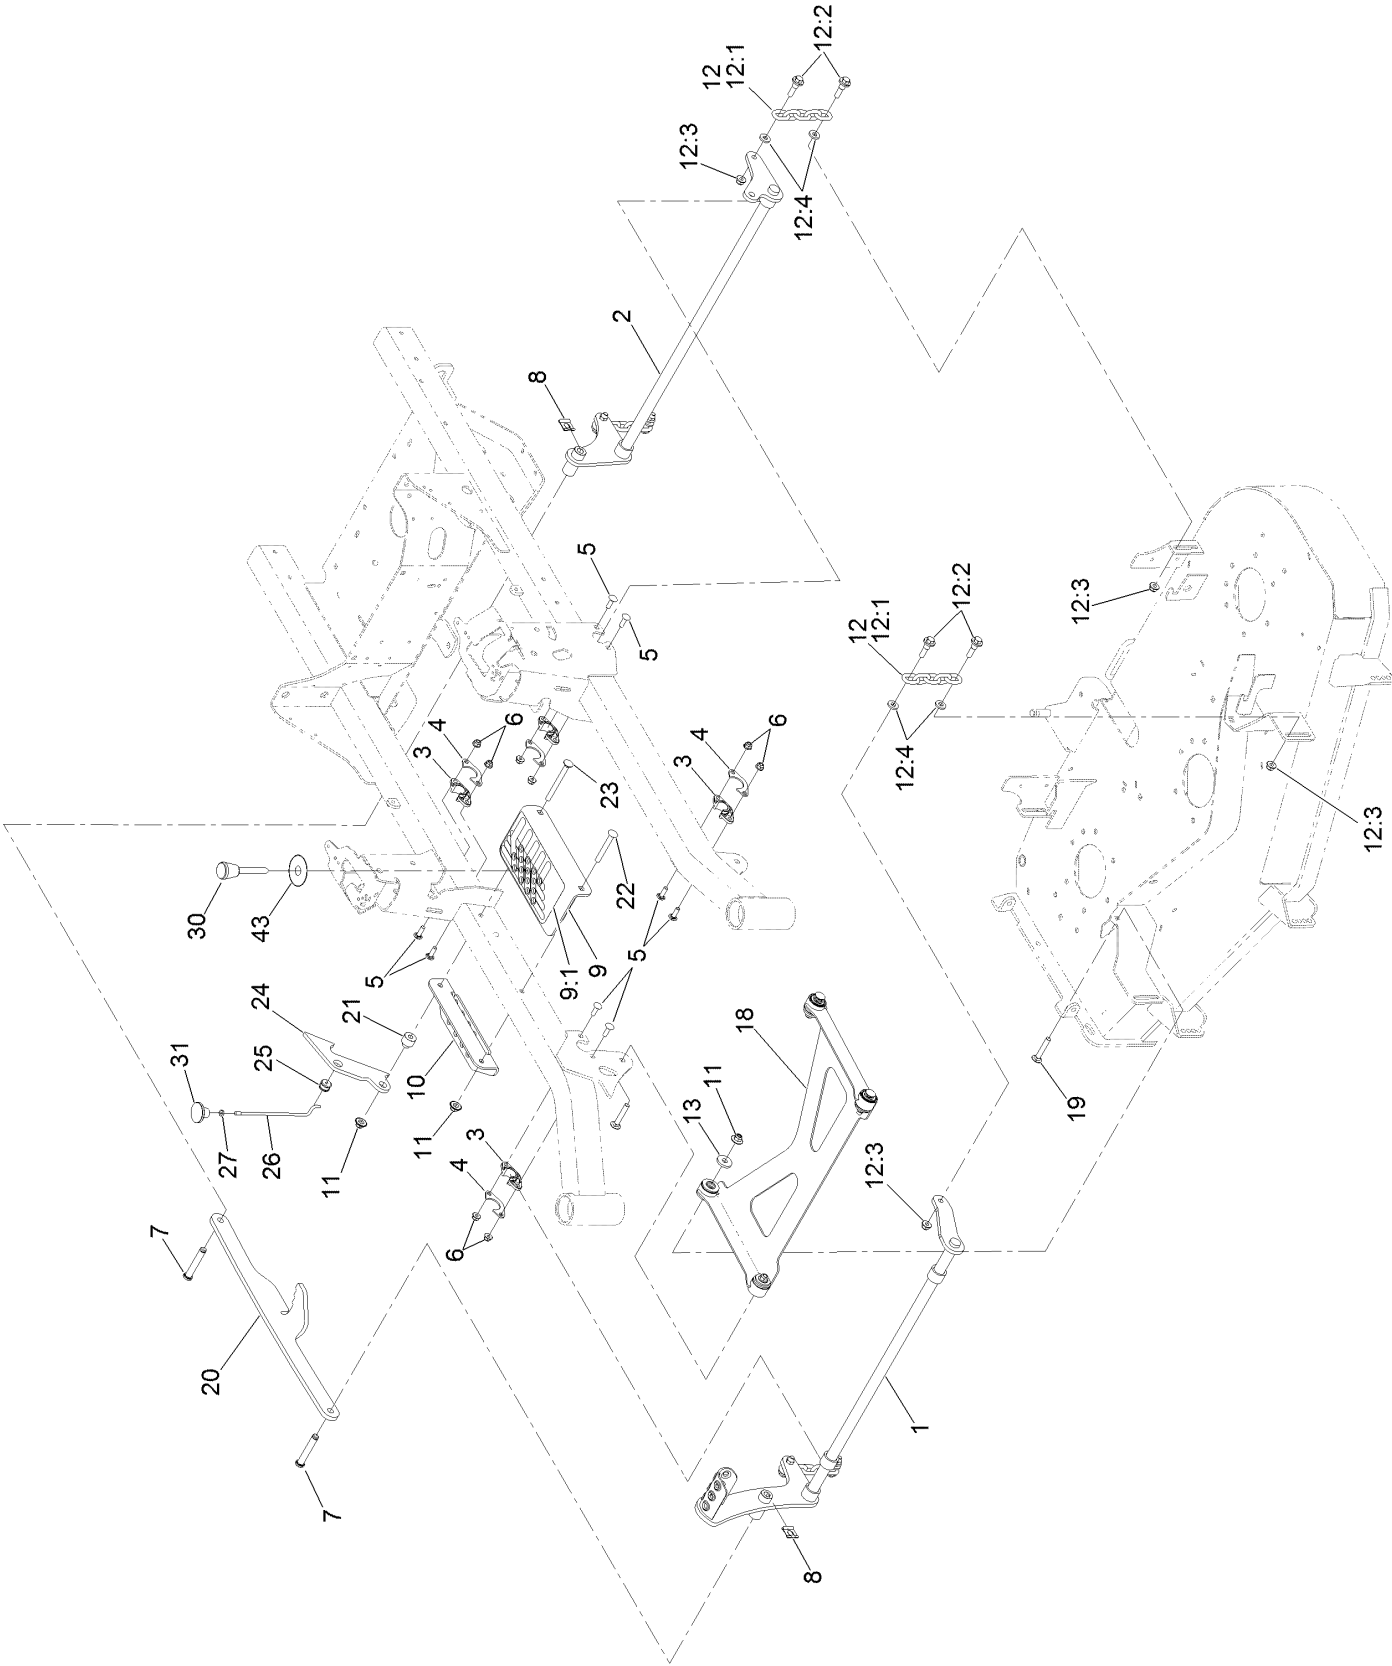

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-3342-03	1	Shaft-Lift, Deck	12:4	43-0940	2	Spacer
2	126-3343-03	1	Shaft-Lift, Deck (Rear)	13	1-373034	2	Washer
3	115-5065	4	Bushing-Flange	18	126-8365	1	Deck Strut ASM
4	116-2887	4	Gusset-Lift, Deck	19	3231-7	2	Screw-CARR
5	3230-22	8	Screw-CARR	20	126-4639-03	1	Link-Lift
6	104-8300	8	Nut-HF, NI	21	126-5221	1	Spacer-Stepped
7	126-9181	2	Pin-Clevis	22	3231-42	1	Screw-CARR
8	95-4064	2	Clip-Pin	23	3231-37	1	Screw-CARR
9	126-4535	1	Bracket ASM	24	126-5222	1	Plate-Lock, Transport
9:1	126-4784	1	Decal-HOC	25	126-5593	1	Grommet
10	126-4640-03	1	Angle-HOC, Lower	26	126-5223	1	Rod-Lock, Transport
11	109-6658	4	Nut-Flange, NI	27	3218-1	1	Nut-Jam
12	126-8877	4	Deck Chain ASM	30	126-5401	1	Pin-HOC
12:1	1-633447	1	Chain-Lift, Deck	31	126-7019	1	Knob
12:2	130-0742	2	Bolt-Shoulder	43	126-8353	1	Tag-Retention, Magnetic
12:3	104-8301	2	Nut-HF, NI				

 Deck Strut Assembly No. 126-8365

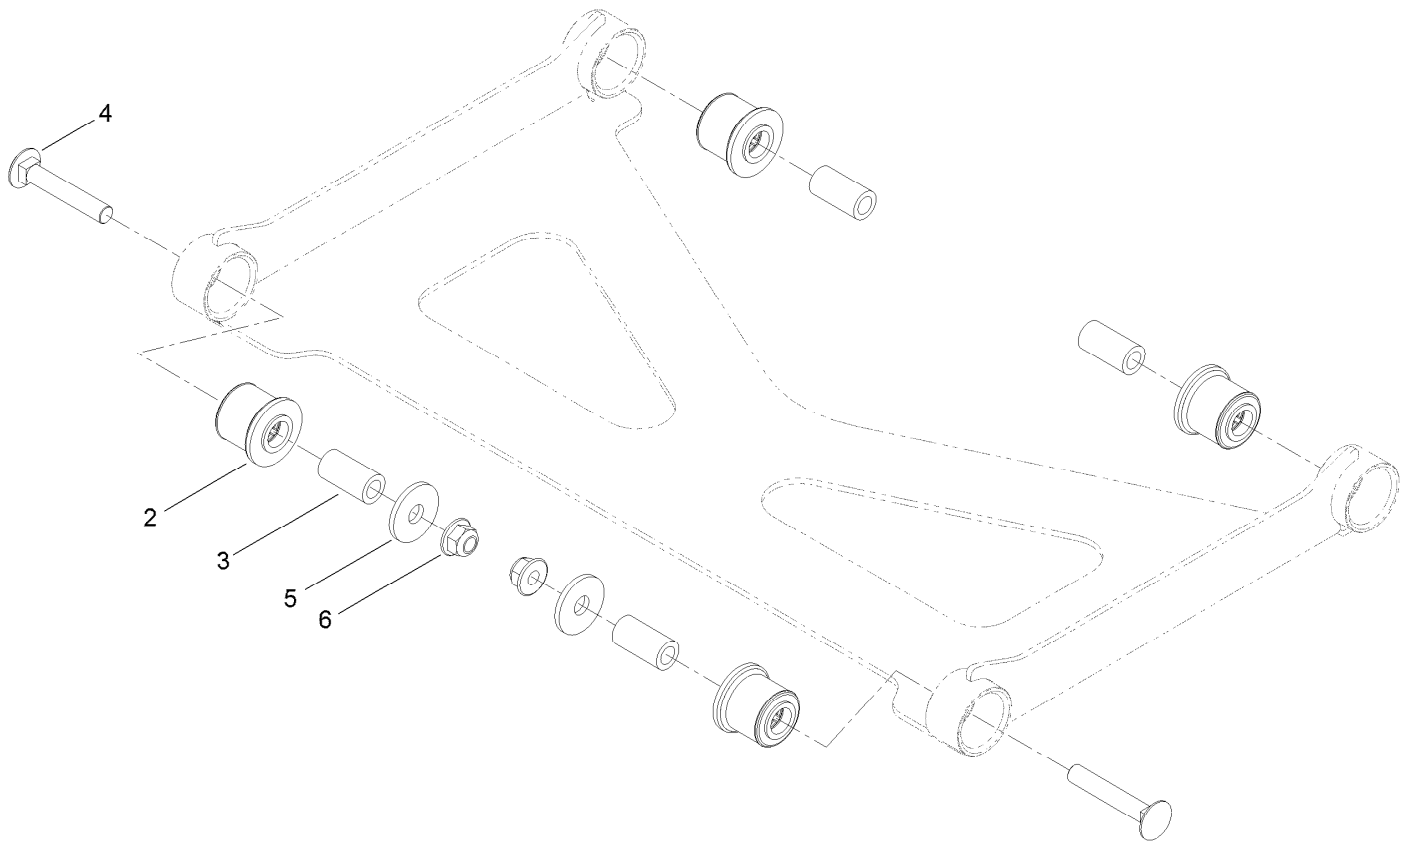

Deck Strut Assembly No. 126-8365 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are labeled with numbers and sub-labels:

- Top Assembly:**
 - 42:** Main housing or cover, with sub-labels 42:1, 42:2, 42:3, and 42:4 indicating different sections or features.
 - 10:** A cable or hose with a connector.
 - 10:2:** A small connector or fitting.
 - 59:** A component, possibly a sensor or actuator, mounted on the side of the housing.
 - 23:** A cylindrical component, possibly a filter or a part of the fluid path.
 - 6:** Small circular components, possibly O-rings or seals, located around the cylindrical part 23.
- Base and Mounting Structure:**
 - 54:** A large, complex mounting bracket or base plate.
 - 1:** A small pin or screw used for mounting.
 - 57:** A vertical pin or screw.
 - 49:** A horizontal pin or screw.
- Internal Components and Assembly:**
 - 30:** A bracket or support arm.
 - 48:** A pulley or wheel.
 - 2:** A component, possibly a bearing or a part of the drive mechanism.
 - 33:** A component, possibly a bearing or a part of the drive mechanism.
 - 46:** A small pin or screw.
 - 32:** A vertical pin or screw.
 - 14:4:** A component, possibly a spring or a part of the drive mechanism.
 - 45:** A coiled spring.
 - 14:2:** A small pin or screw.
 - 14:3:** A component, possibly a spring or a part of the drive mechanism.
 - 14:** A component, possibly a spring or a part of the drive mechanism.
 - 56:** A small pin or screw.
 - 50:** A vertical pin or screw.
 - 27:** A long, flexible hose or cable.
 - 8:** A pulley or wheel.

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8301	3	Nut-HF, NI	42:2		1	Kohler 25 050 44-S Engine
2	109-3386	1	Sheave-Split Steel				Oil Filter ♦ ▲
6	1-653291	2	Gasket-Exhaust	42:3		1	Kohler 24 050 13-S Fuel
8	116-2456	2	Pulley-Flat Idler				Filter ♦ ▲
10	116-5108	1	Oil Drain Hose ASM ■	42:4		1	Kohler 25 083 04-S Safety
10:2	353-508	1	Plug-HH ●				Filter ♦ ▲
10:2:1	237-42	1	O-Ring	44	1-603384	1	Bushing-Pivot, Idler
14	126-0973	1	Idler Arm ASM	45	1-603402	1	Spring-Extension
14:2	1-513034	2	Sleeve-Bearing	46	1-603610	2	Washer-Spring
14:3	302-40	1	Fitting-Grease, 90 DEG	48	1-807259	1	Key
14:4	32144-11	1	Screw-HWH	49	32144-102	4	Screw-HWH
23	126-4359	1	Muffler-Kohler Aes	50	323-15	1	Screw-HH
27	126-5993	1	Belt-V	54	3231-29	2	Screw-CARR
30	126-6687-03	1	Anchor-Clutch	56	3256-4	1	Washer-Flat
32	126-7198	1	Screw-HH W/Loctite □	57	98-5975	4	Washer-Belleville
33	127-3410	1	Clutch-PTO	59	32128-33	1	Nut-HF
42		1	Engine - Kohler Zt730 ▲				
42:1		1	Kohler 16 083 01-S Engine				
			Air Filter ♦ ▲				

● Torque to 24-26 ft-lb

 
▲ Not serviced separately

□ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Torque to 17-23 ft-lb

♦ Obtain parts from www.kohlerplus.com


Deck Assembly

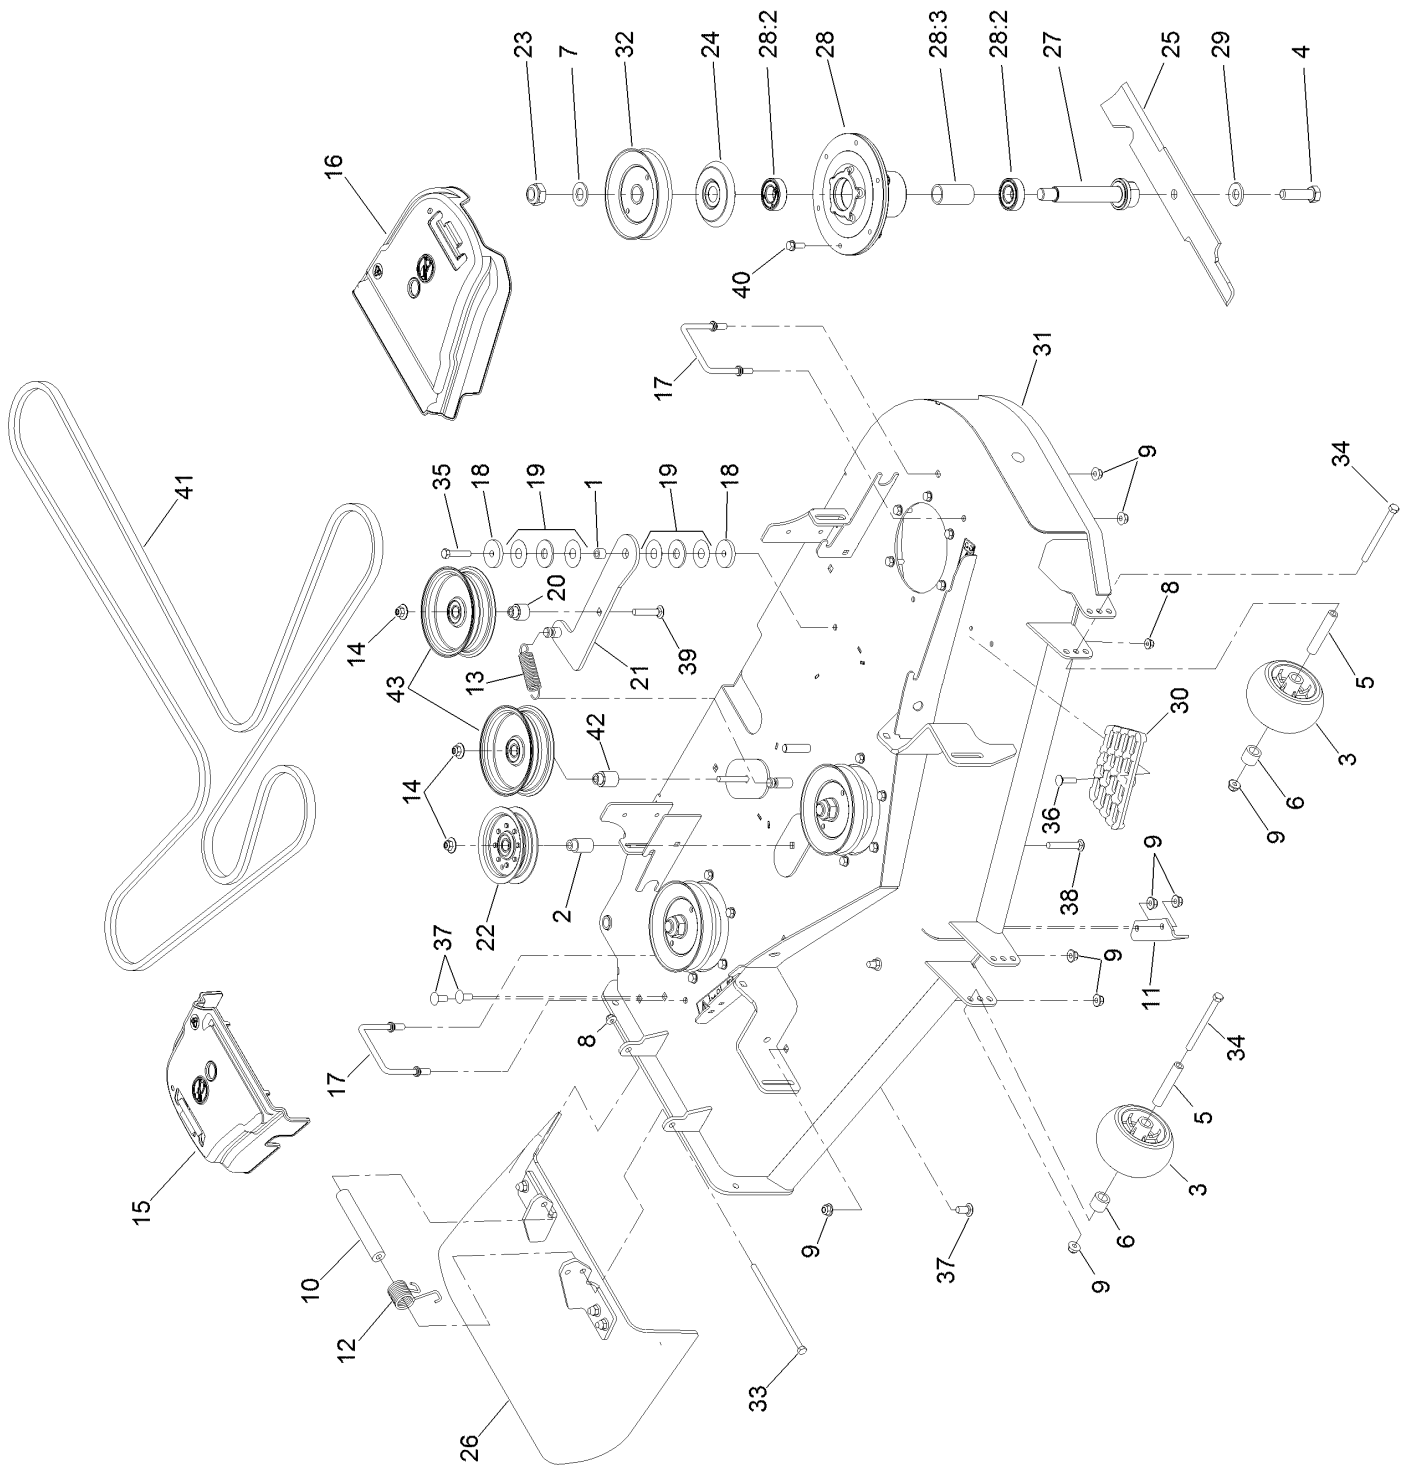

Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-413088	1	Bushing-Lever, Lift	24	117-7210	3	Shield-Bearing
2	1-413113	1	Bushing-Idler	25	133-2134	3	Blade-Rotary, 18.0In (Hi Flow)
3	1-603299	2	Roller-Scalp, Anti	26	120-2451	1	Deflector ASM
4	51-4060	3	Screw-Blade	27	126-7629	3	Shaft-Spindle
5	98-7912	2	Tube-Spanner	28	120-5477	3	Spindle ASM
6	98-7913	2	Tube-Spacer	28:2	116-0720	2	Bearing-Ball
7	92-5836	3	Washer	28:3	115-2641	1	Spacer-Bearing
8	104-8300	2	Nut-HF, NI	29	125-1736	3	Washer-Belleville
9	104-8301	12	Nut-HF, NI	30	126-4781-03	1	Step-Deck
10	105-4622	1	Spacer	31	126-8957	1	Deck Decal ASM
11	107-8541-01	1	Baffle-Discharge	32	126-6612	3	Pulley
12	108-4052	1	Spring-Torsion	33	322-50	1	Screw-HH
13	139-3616	1	Spring-Extension	34	323-23	2	Screw-HH
14	109-6658	4	Nut-Flange, NI	35	323-9	1	Screw-HH
15	109-6935	1	Cover-Belt, RH	36	3230-3	1	Screw-CARR
16	109-6936	1	Cover-Belt, LH	37	3231-27	6	Screw-CARR
17	109-6982	2	Wireform-Cover	38	3231-31	2	Screw-CARR
18	110-9981	2	Washer-Plain	39	3231-6	1	Screw-CARR
19	114-0463	2	Washer-Friction, Composite	40	32144-41	18	Screw-Taptite
20	126-7684	1	Bushing-Idler	41	126-7732	1	Belt-Drive, Deck
21	115-5054	1	Arm-Idler	42	126-7683	1	Bushing-Idler
22	116-3626	1	Pulley-Idler	43	116-4669	2	Idler-Pulley, Flat
23	3296-67	3	Nut-Lock, NI				

 Deflector Assembly No. 120-2451

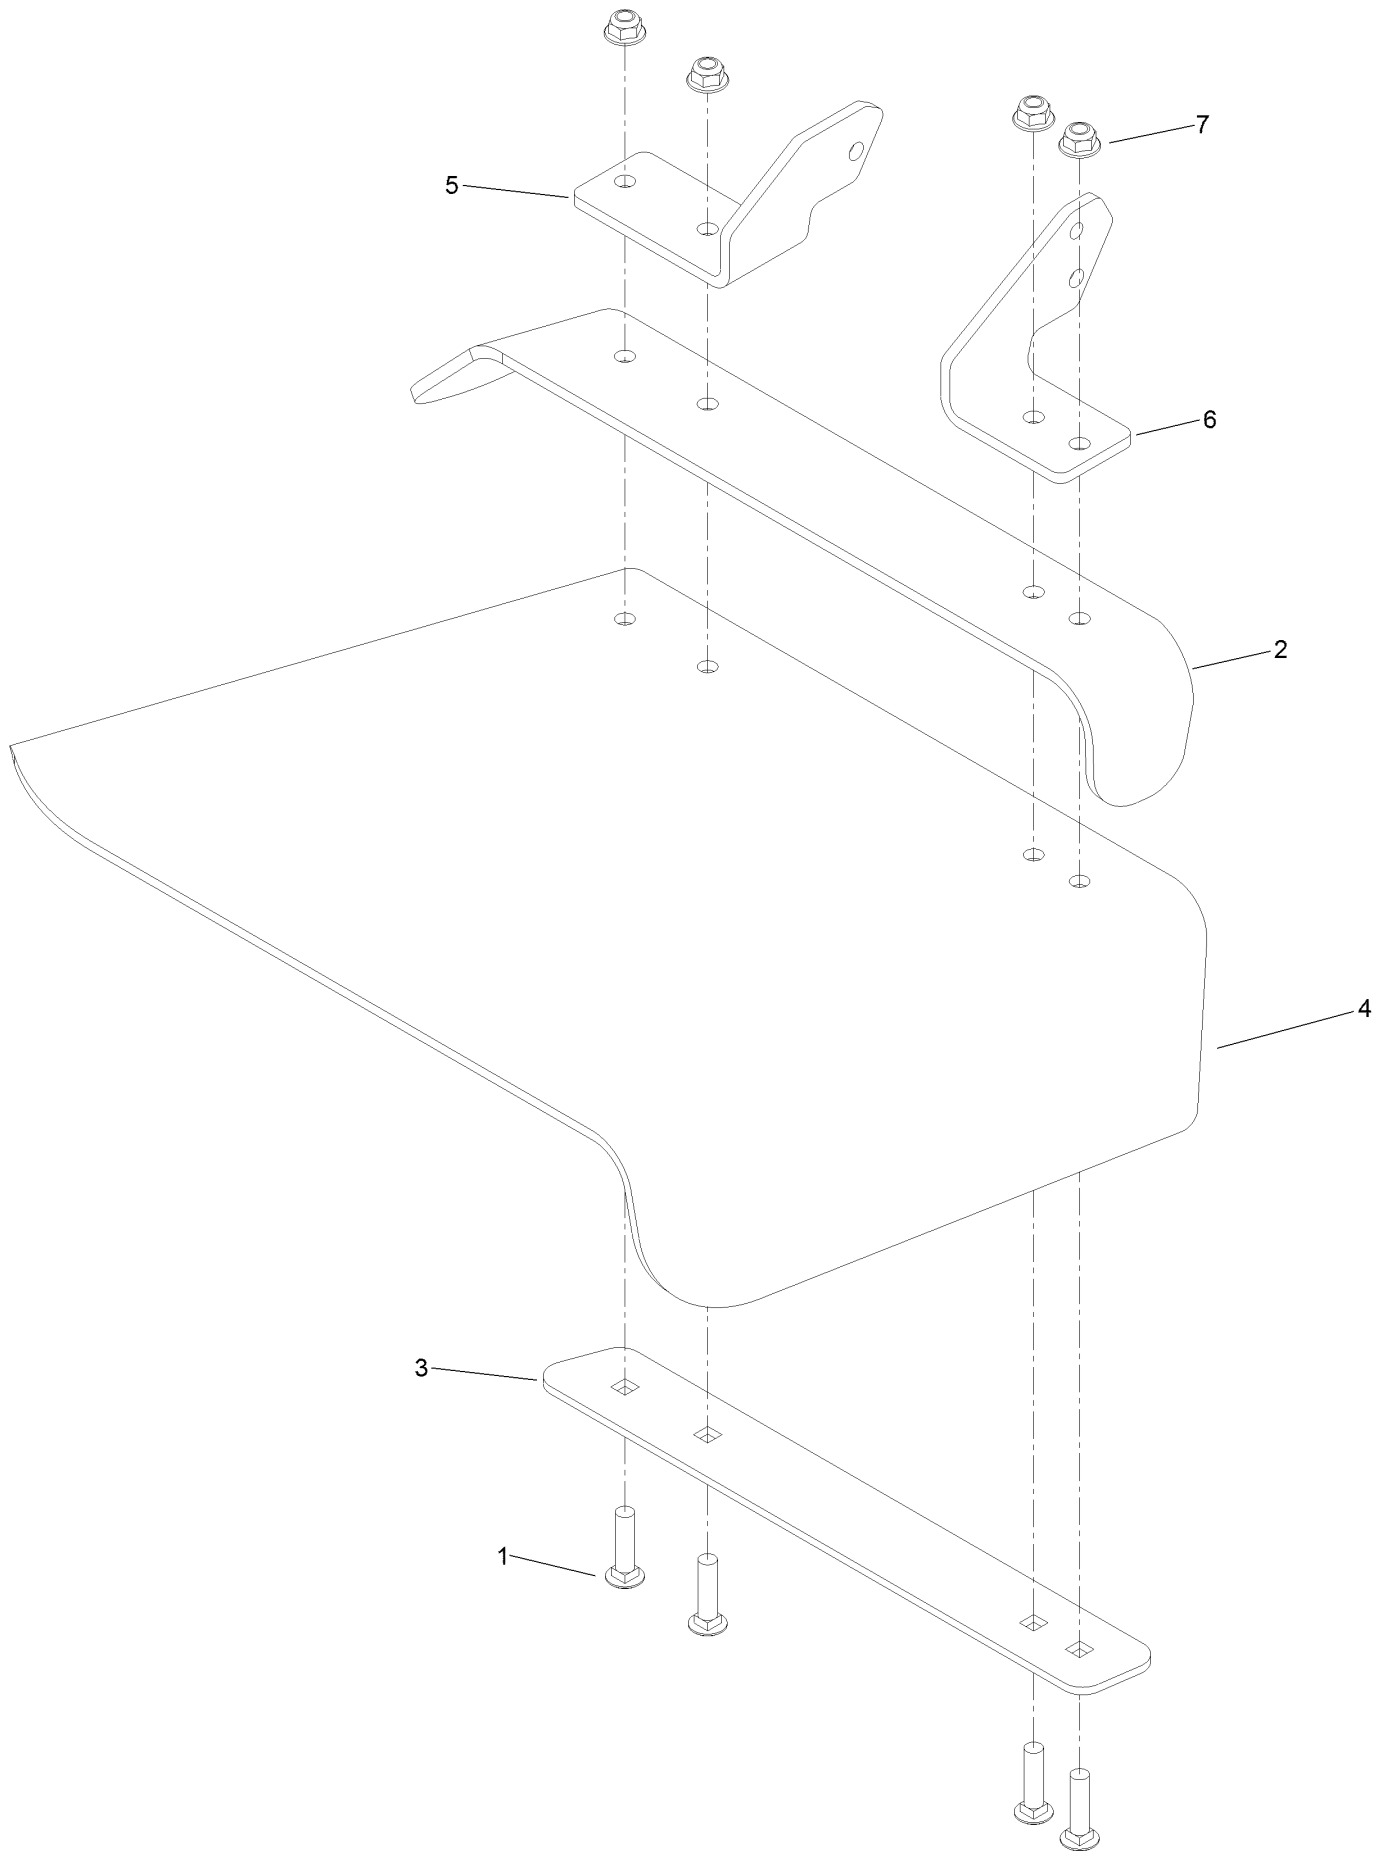


Deflector Assembly No. 120-2451 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

 Deck Decal Assembly No. 126-8957

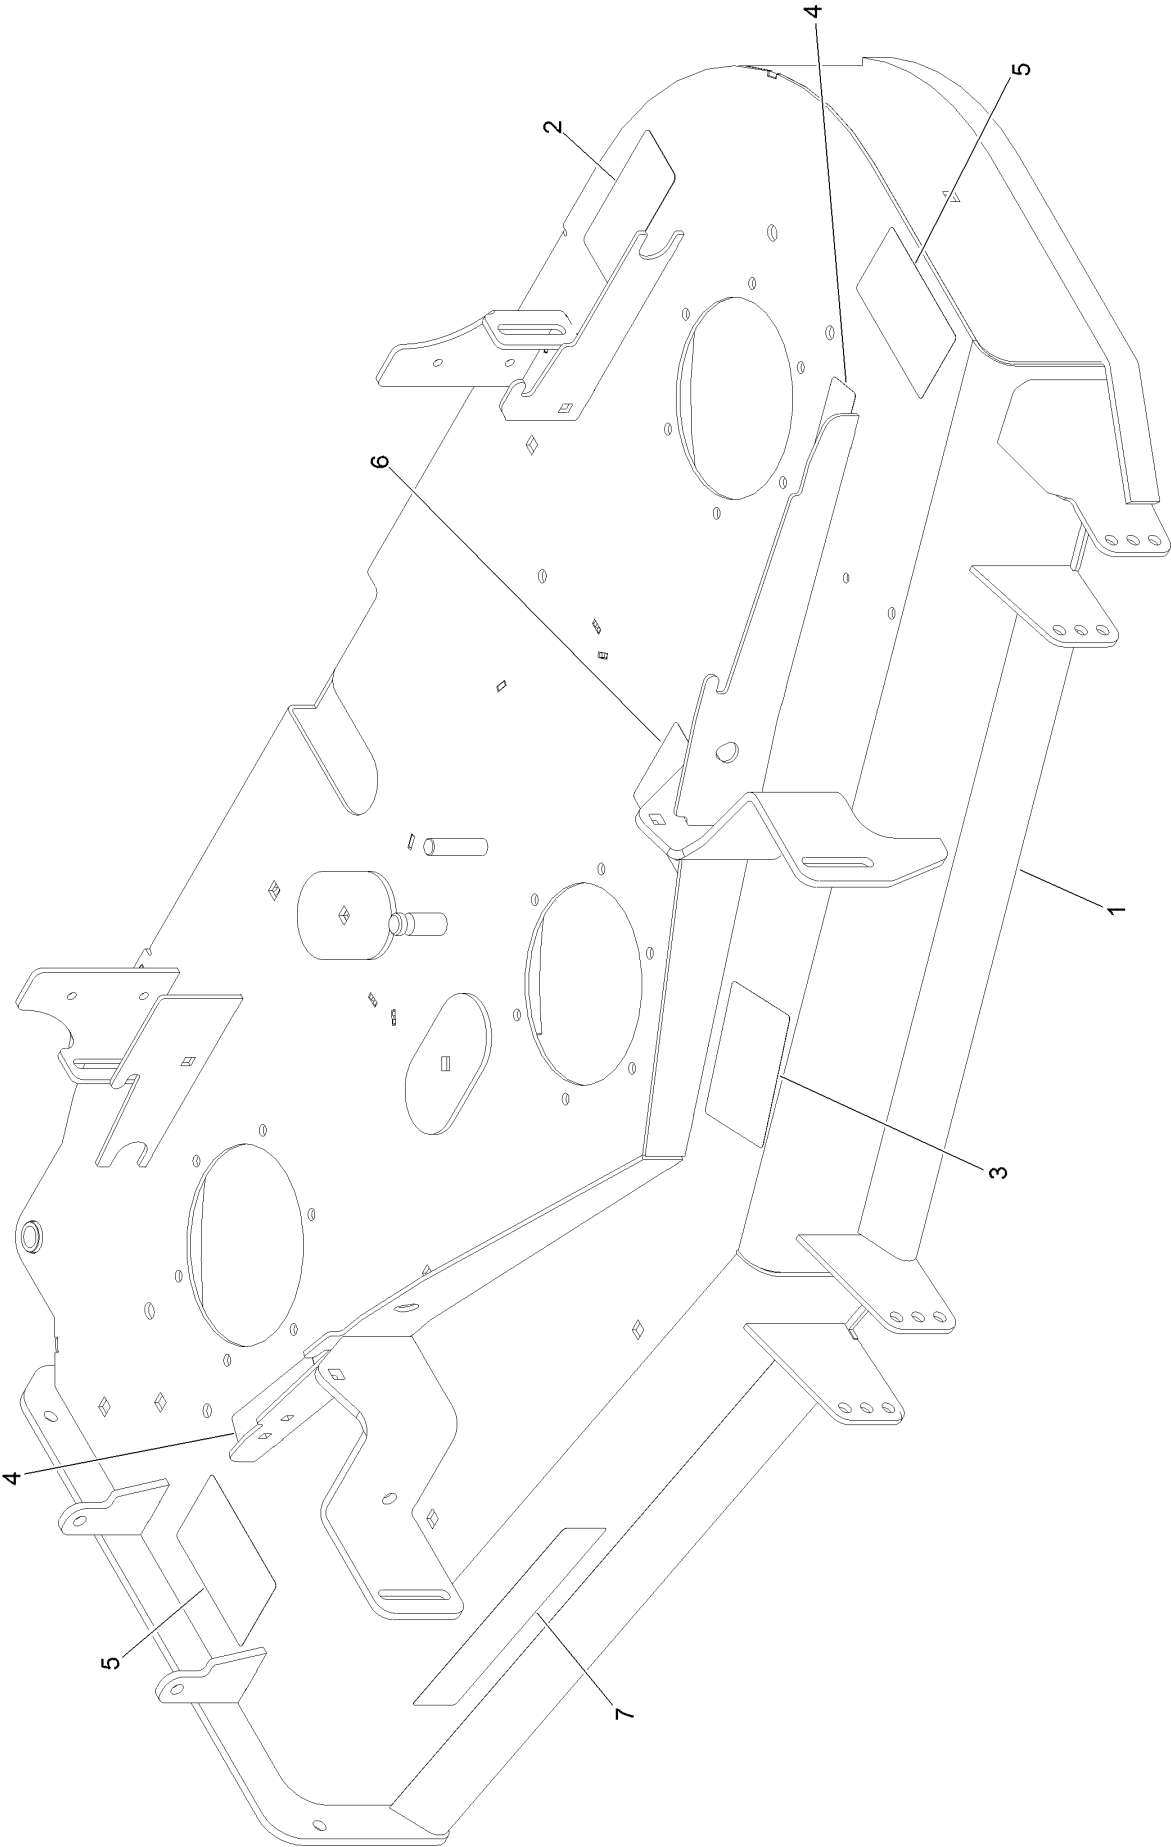

Deck Decal Assembly No. 126-8957 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Deck Decal ASM ●	5	117-3848	2	Decal-Danger
2	93-7818	1	Decal-Torque, Blade Bolt	6	117-1194	1	Decal-Routing, Belt
3	112-3858	1	Decal-Scalp, Anti	7	121-3205	1	Decal
4	112-9028	2	Decal-Cover, Missing				

● Not serviced separately

Attachments and Accessories

For 74461 52in TITAN HD 2000 Series Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715
Toro Hydro Kit.....	121-3783
LED Light Kit.....	126-5382
Front Bucket Bracket Kit	126-7011
Striper Kit.....	126-7882
Sunshade Kit	126-8077
Cover-Hitch.....	126-8299
Trash Container Kit.....	126-8379
Weight Caster Kit.....	126-8639
52in Recycler Kit.....	126-8702
Flat Free Wheel and Bearing Kit	126-9368
Jack Kit	127-6666
MVP Belt and Blade Kit.....	127-6794
Engine Maint Kohler ZT Kit	133-1306
Hi-Back Seat Cover	133-1308
Blade-Rotary, 18.0in (hi Flow).....	133-2134
Blade-Rotary, Atomic 18.0	133-2159
Blade-Rotary, Recycling 18.0in.....	133-2162
Blade (6 Pack) 18in Hi Flow	133-2175
Blade (6 Pack) 18in Recycle	133-2178
Blade (6 Pack) 18in Atomic.....	133-2181
5 Gallon Bucket	133-2533
Trimmer Mount Kit	136-1682
ROPS Pin Kit	136-1683
Bucket Mount Kit.....	136-9045
Universal Mount Kit Mower	136-9046
Titan HD Triple Threat Attachment Kit.....	136-9047
Extended Control Levers Kit, Dedicated-Bagging Riding Mower.....	138-6020
Toro Deluxe Rider Cover.....	490-7319
Heavy Duty Bagger Kit	78431
52in Completion Kit (Heavy Duty Bagger).....	78434
Standard EZ Vac Bagger	78481
52in Completion Kit (Standard Bagger)	78484

Notes:

Notes:

Notes:



Count on it.