



Soil Cultivator

For Dingo[®] Compact Utility Loader

Model No. 23101—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	3	Scraper and Roller Assembly	5
Drive Assembly	4	Hydraulic Assembly	6


Accessories

Description	Model / Part No.	Description	Model / Part No.
Rotadairon Kit	100–4704		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

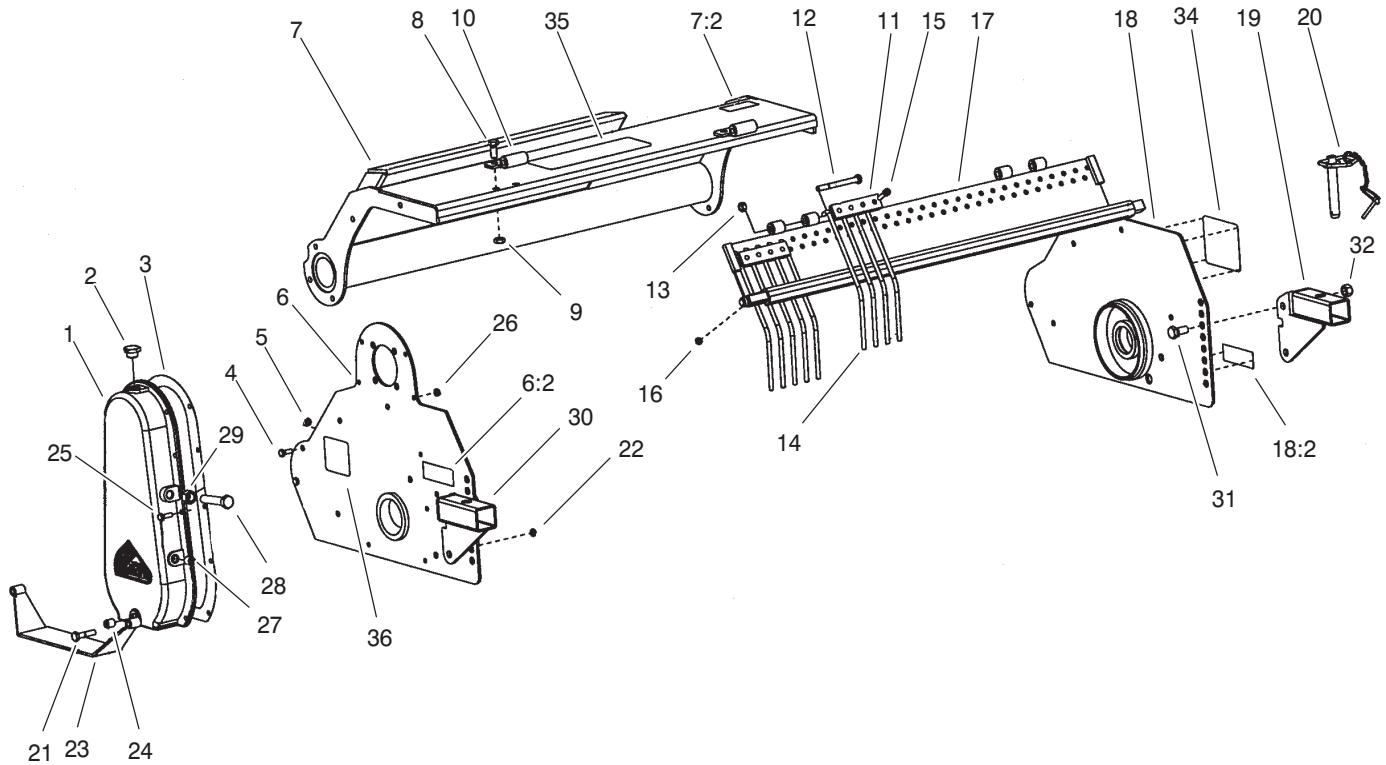


Sheet No.:2

C-2949

Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4709	1	Case-Chain	24	100-4725	1	Plug-Brass
2	100-4710	1	Plug	25	60-6750	10	Bolt
3	100-4711	1	Gasket-Cork	26	33024-00	10	Nut-Lock, NI
4	48-7780	10	Screw	27	100-4725	1	Plug-Brass
5	48-9520	10	Nut	28	33118-080	1	Screw-HH
6	100-4726	1	Left Side ASM	29	60-6770	1	Nut
6:2	93-7321	1	Decal - Danger	30	100-4741	1	Plate-Fitting, Left
7	100-4731	1	Frame Chassis ASM	31	43-3210	4	Capscrew-HH
7:2	100-4708	1	Decal-Warning	32	93-5590	4	Nut-Hex
8	42-9250	4	Bolt	34	100-4762	1	Decal-Dingo
9	33026-00	4	Nut-Lock, NI	35	100-8828	1	Decal-Dingo, Front
10	100-4719	2	Hinge	36	99-4349	1	Decal-Logo, Siteworks
11	100-4720	8	Flange				
12	33115-130	2	Screw-HH				
13	48-9520	2	Nut				
14	100-4721	31	Rod-Screening				
15	104-1850	30	Bolt-HSH				
16	33024-00	30	Nut-Lock, NI				
17	100-4722	1	Plate-Rod, Screening				
18	100-4730	1	Right Side ASM				
18:2	93-7321	1	Decal - Danger				
19	100-4727	1	Plate-Fitting, Right				
20	100-4728	2	Pin-Drift				
21	53-5840	2	Screw				
22	48-9520	2	Nut				
23	100-4729	1	Plate-Protector				

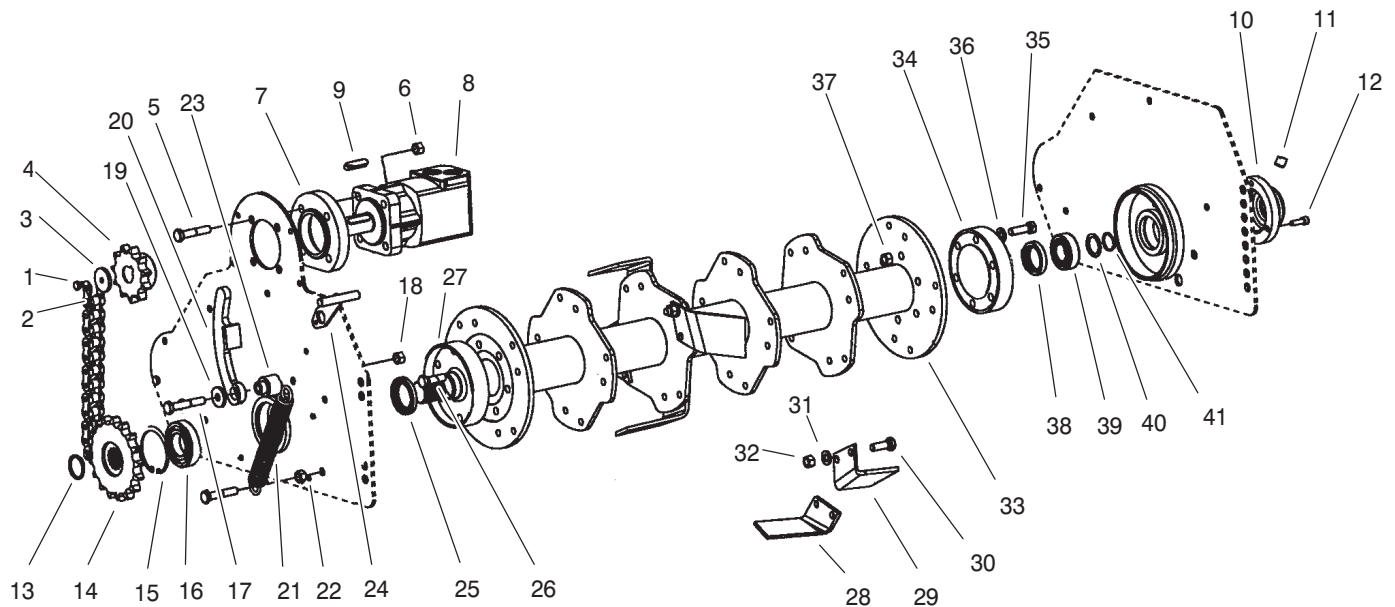

Sheet No.:3


C-2950

Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	57-6380	1	Screw (Engine)
2	100-4712	1	Chain-Roller
3	104-1859	1	Washer
4	100-4713	1	Gear-11 Tooth
5	33116-060	4	Screw-HH
6	33026-00	4	Nut-Lock, NI
7	100-4715	1	Washer-Fixing, Motor
8	100-4716	1	Motor-Hydraulic
*8:1	56-6890	1	Kit-Seal
9	100-4717	1	Key-Motor
10	100-4724	1	Cap-End
11	100-4725	1	Plug-Brass
12	104-1851	3	Bolt-HSH
13	100-4734	1	Circlip-40e
14	100-4735	1	Gear-17 Tooth
15	100-4736	1	Circlip-8oi
16	100-4737	1	Bearing ASM
17	33116-060	1	Screw-HH
18	33026-00	1	Nut-Lock, NI
19	33096-00	1	Washer-Flat
20	100-4738	1	Tightener-Chain
21	100-4739	1	Spring-Extension
22	51-2070	1	Nut
23	100-4740	1	Bracing-Tubular
24	100-4742	1	Handle-Spring
25	100-4743	1	Ring-Packing

Ref. No.	Part No.	Qty.	Description
26	104-1852	6	Bolt
27	100-4765	1	Shaft-Drive
28	100-4766	10	Blade-Left
29	100-4767	10	Blade-Right
30	104-1853	40	Bolt-HH
31	3253-6	40	Washer-Lock/Sp
32	3217-8	40	Nut-Hex
33	100-4768	1	Rotor
34	100-4769	1	Disc
35	325-6	6	Screw-HH
36	3253-7	6	Washer-Lock/Sp
37	3217-23	6	Nut-Hex
38	100-4770	1	Ring-Packing
39	100-4771	1	Bearing ASM
40	104-1854	1	Washer
41	100-4772	1	Circlip-30e

* Not Illustrated.

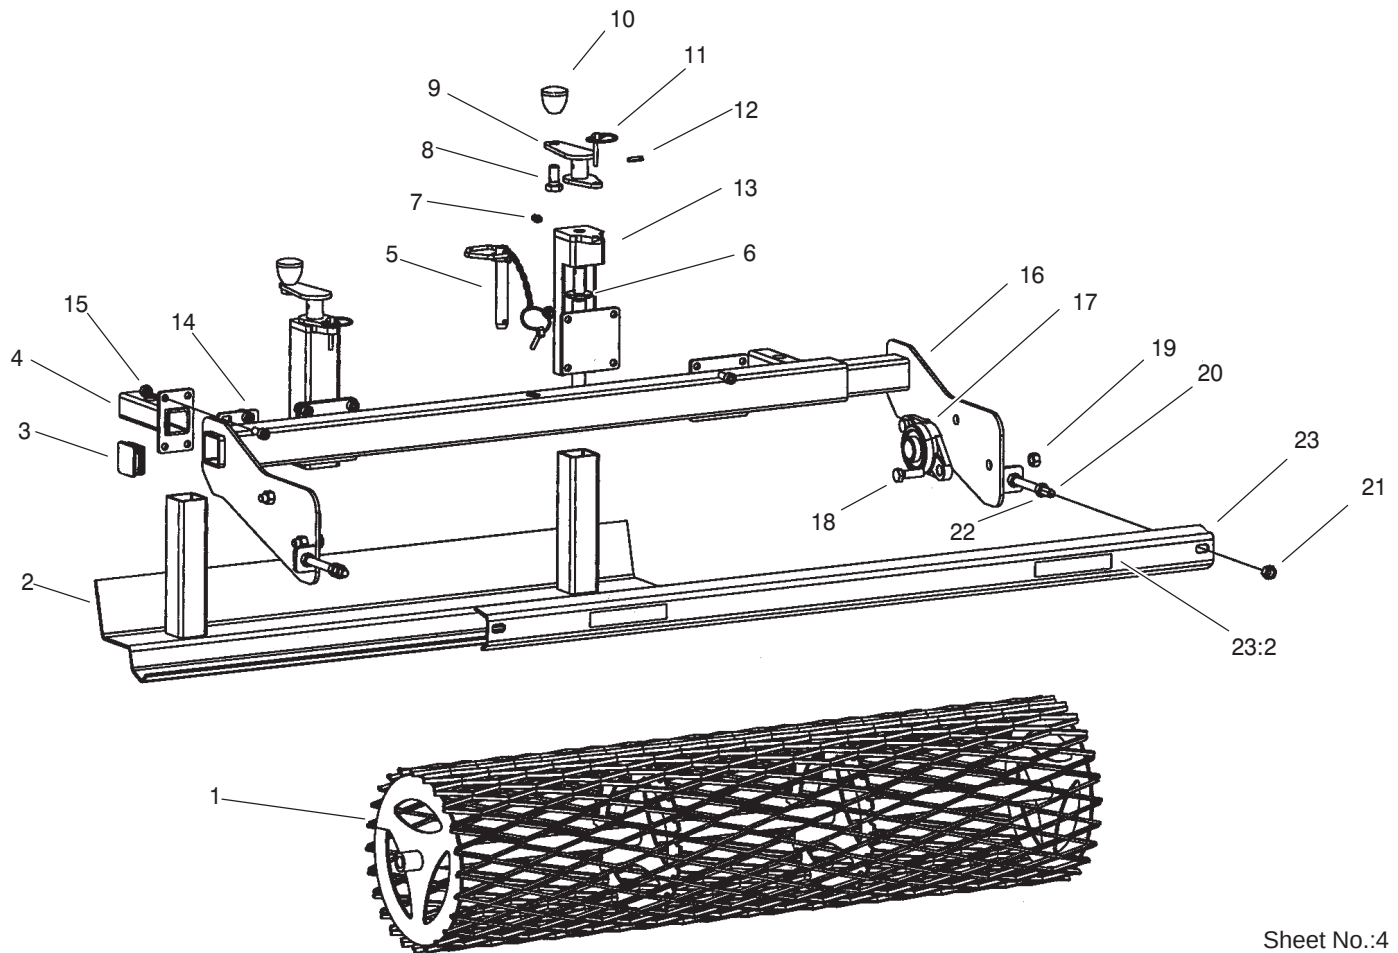

Sheet No.:4
C-2951

Scraper and Roller Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4773	1	Roller-Mesh				
2	100-4774	1	Blade-Grader				
3	100-4775	2	Cap				
4	100-4776	1	Arm-Male				
5	100-4777	1	Pin-Drift				
6	104-1855	2	Screw-Lg				
7	100-4778	2	Zerk-Grease				
8	43-3210	2	Cap-screw-HH				
9	100-4779	2	Crank				
10	100-4780	2	Handle				
11	100-4781	2	Pin-Locking				
12	100-4782	2	Peg				
13	100-4783	2	Tube-Handle, Female				
14	3273-41	8	Screw				
15	33025-00	8	Nut-Lock, NI				
16	100-4784	1	Roller Frame ASM				
17	100-4785	2	Bearing ASM				
18	104-1856	4	Bolt-HH				
19	93-5590	4	Nut-Hex				
20	33116-130	2	Screw-HH				
21	33026-00	2	Nut-Lock, NI				
22	51-2070	2	Nut				
23	100-4732	1	Scraper Plate ASM				
23:2	93-9367	2	Decal-Warning				

