



Greensmaster® 3050

Two Wheel Drive Traction Unit

Model No. 04351—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Control Pedal Assembly	3	Engine Installation Assembly	18
Traction Controls Assembly	5	Hydraulic Pump Installation Assembly	19
Front Wheel And Brake Assembly	6	Frame Assembly	21
Hydraulic Drive Motor Assembly No. 92–9199 ..	7	Rear Wheel Assembly	22
Steering Arm Assembly	8	Instrument Panel Assembly	23
Right Hand Pull Frame Assembly	9	Hydraulic Reservoir Assembly	24
Left Hand Pull Frame Assembly	10	Fuel Tank Assembly	25
Hydraulic Cylinder Assembly No. 99–8159	11	Real Motor Installation Assembly	26
Rear Pull Frame Assembly	12	Reel Motor No. 94–3506	27
Hydraulic Cylinder No. 99–8160	13	Wiring Assembly	28
Seat Assembly	14		
Control Valve Installation Assembly	16		


Accessories

Description	Model / Part No.	Description	Model / Part No.
..			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

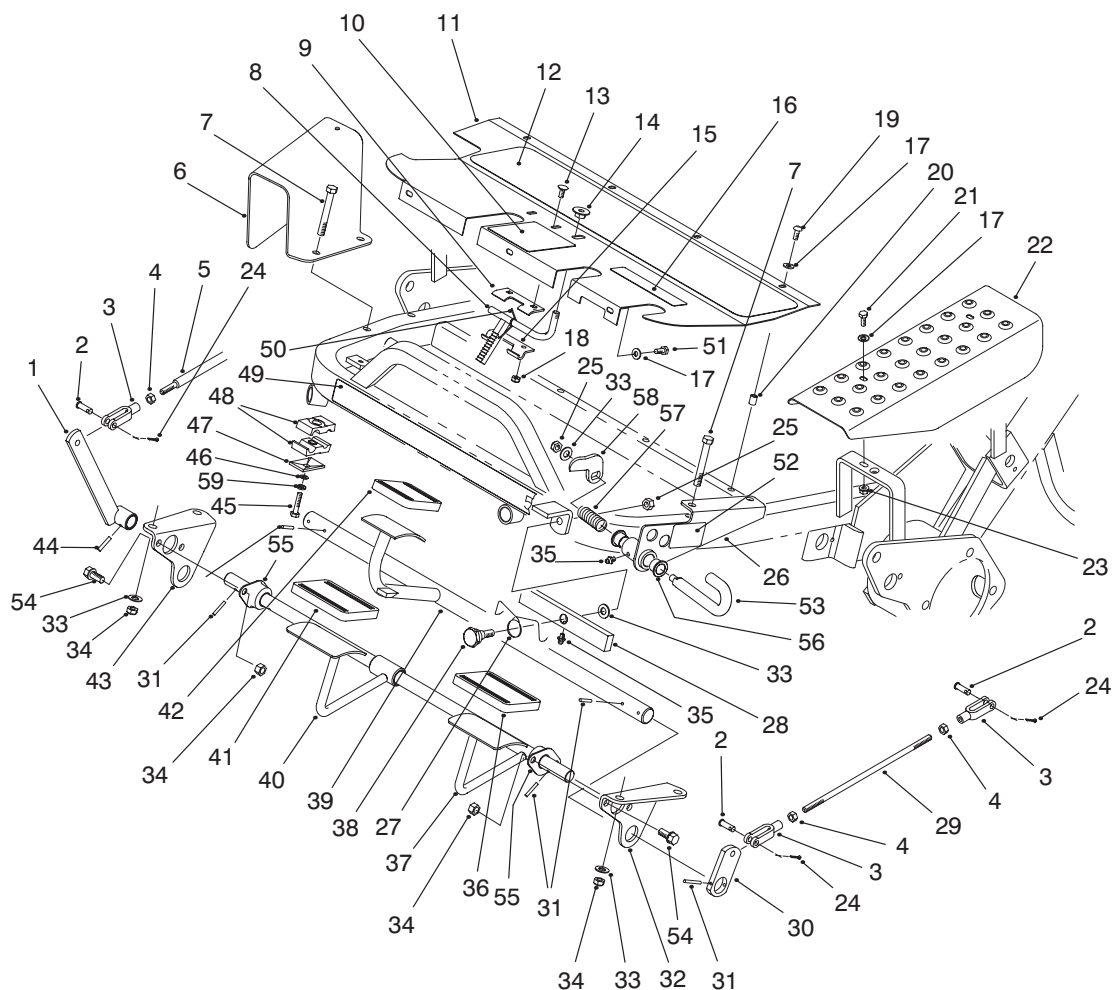

Sheet No.:2

Control Pedal Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	49-6200-01	1	Lever-Cutting	27	83-0080	1	Spring-Pivot, Lift
2	283-61	5	Pin-Yoke	28	83-0060	1	Lift - Pivot
3	282-2	5	Yoke	29	27-2270	2	Rod-Brake Adjustment
4	3220-2	5	Nut-Jam	30	10-8100-01	2	Strap-Brake Shaft
5	49-5430	1	Control Rod	31	32121-35	8	Pin-Roll
6	49-6110-01	1	Guard	32	88-9640-01	1	Bracket-LH Lift Pivot
7	323-13	4	Screw-HH	33	3256-38	6	Washer-Flat
8	10-7850	1	Latch-Parking Brake	34	3296-59	8	Nut-Lock, NI
9	95-1628	1	Hinge - Upper	35	302-5	2	Fitting-Lube
10	93-8062	1	Decal-Parking Brake	36	93-7631	1	Lift Foot Pad
11	83-0640-01	1	Footrest Plate	37	88-9660	1	Shaft-Cut Control
12	49-6120	1	Footrest Pad	38	83-2590	1	Shoulder Bolt-Pivot
13	3229-11	2	Screw-CARR	39	83-0160	1	Shaft-Brake
14	32141-111	1	Nut-Adjusting	40	83-0140	1	Pedal-Mow
15	95-1629	1	Hinge - Lower	41	93-7630	1	Pad-Foot
16	93-8075	1	Decal-Mow/Lift	42	93-7629	1	Foot Pad - Brake
17	3256-1	9	Washer-Flat	43	88-9630-01	1	Bracket-RH Lift Pivot
18	3296-16	2	Nut-Lock, NI	44	32121-6	1	Pin-Roll
19	3274-31	4	Screw-HSBH	45	321-11	1	Screw-HH
20	32148-6	8	Nut-Insert	46	3256-22	1	Washer-Flat
21	321-4	2	Screw-HH	47	69-9760	1	Coverplate
22	83-0200-01	1	L/H Cover Plate	48	56-7970	2	Tube Clamp
23	32128-33	2	Nut-HF	49	95-5997	1	Decal - Gr 3050
24	3272-6	5	Pin-Cotter	50	10-8140	1	Bracket-Spring, Latch
25	3296-39	2	Nut-Lock, NI	51	321-3	3	Screw-HH
26	93-9901-01	1	Bracket-Lockout, Mow				

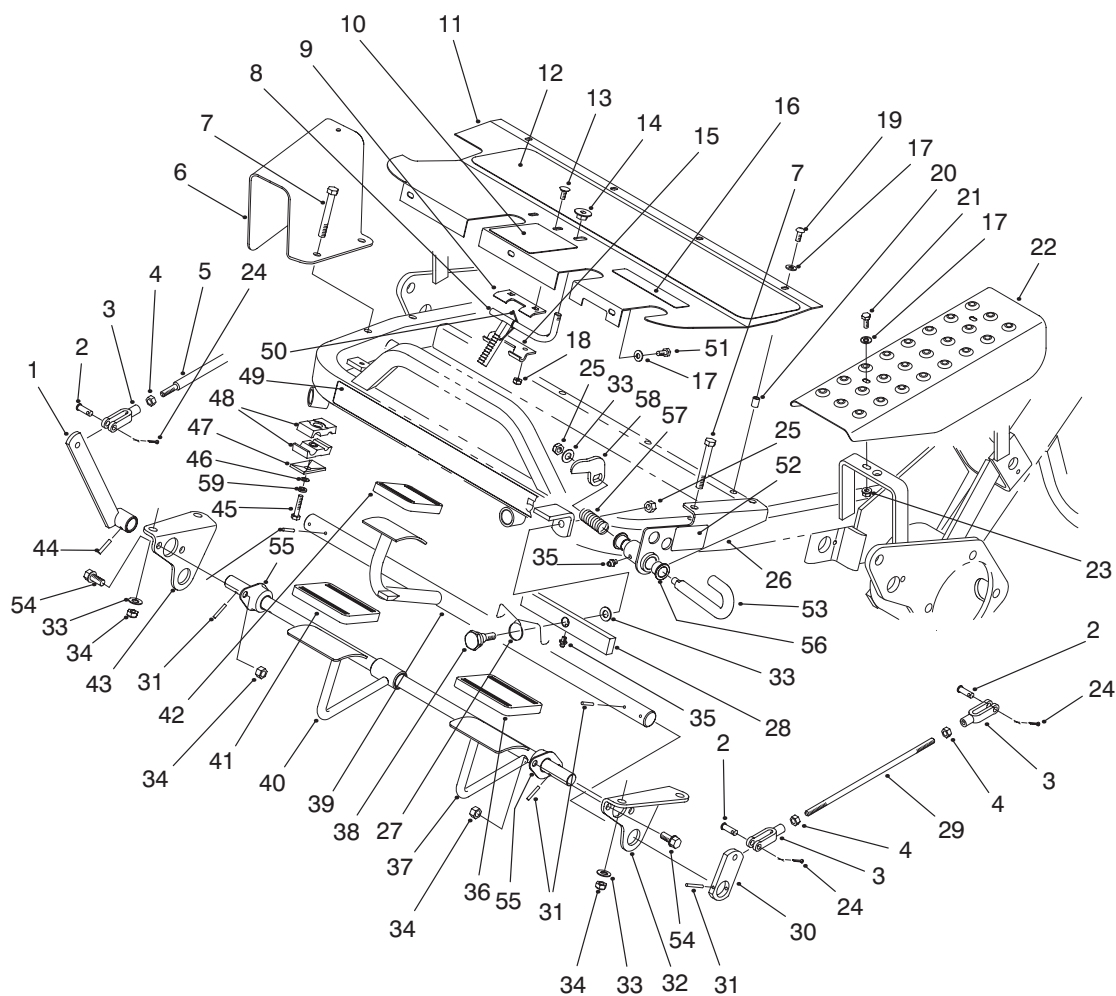


Sheet No.:2

Control Pedal Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
52	93-9898	1	Decal – Lock
53	93-9903	1	Pin – Lockout Mow
54	3234-1	4	Screw-HHF
55	27-2320	2	Bearing ASM
56	3-1506	2	Bushing
57	76-0410	1	Spring Comp
58	93-9904	1	Arm – Lockout Mow


Ref. No.	Part No.	Qty.	Description

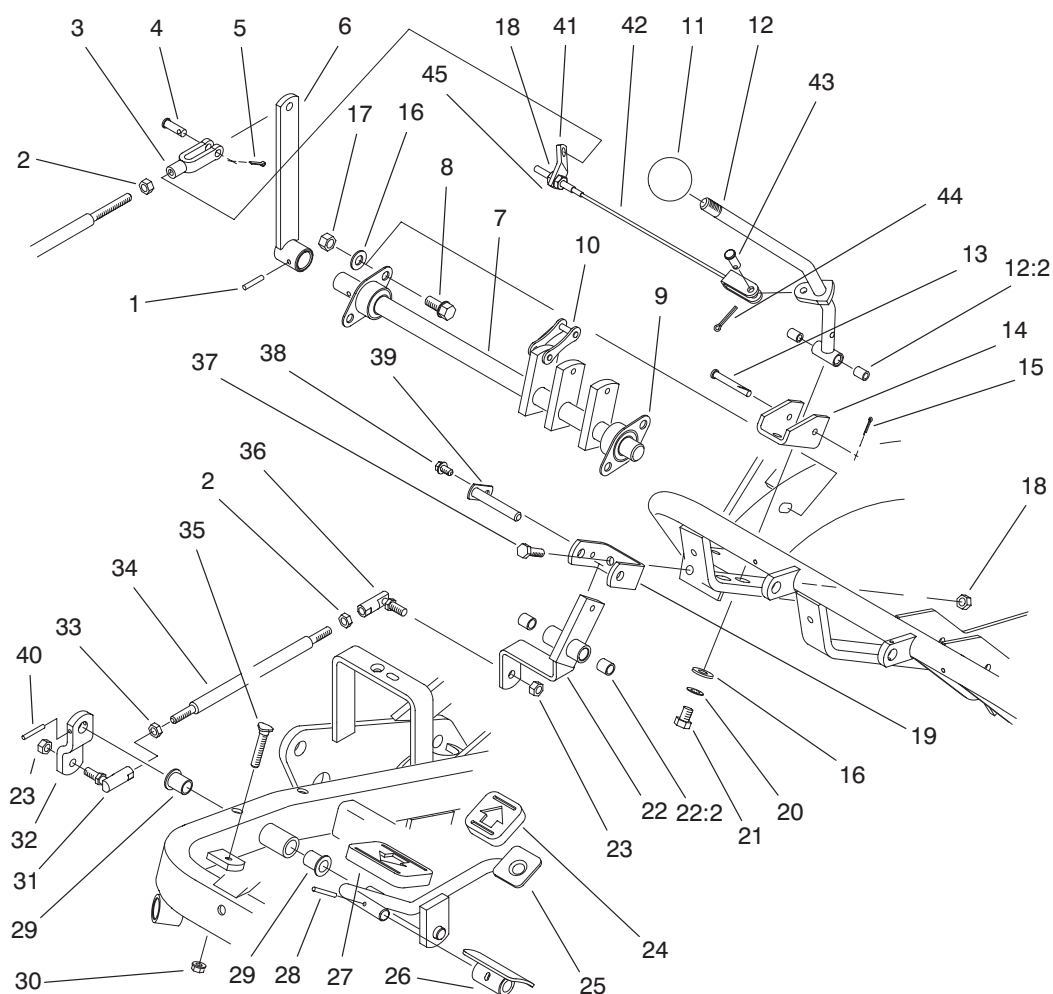

Sheet No.:3

Traction Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32121-6	1	Pin-Roll	25	83-0540-01	1	Traction Pedal ASM
2	3220-2	2	Nut-Jam	26	49-6440-03	1	Pedal-Forward
3	282-2	1	Yoke	27	74-9100	1	Pad-Pedal, Forward
4	283-61	1	Pin-Yoke	28	32121-45	1	Pin-Spring
5	3272-6	1	Pin-Cotter	29	256-155	2	Bushing-Flange
6	47-5320-01	1	Lever	30	32128-20	1	Nut-HF
7	44-0870	1	Cam Shaft ASM	31	2411-42	1	Ball Joint, LH
8	3234-1	4	Screw-HHF	32	83-0630	1	Traction Pivot Arm
9	27-2320	4	Bearing ASM	33	3220-20	1	Nut-Jam LH
10	57-6220	5	Link-Connecting	34	83-0580	1	Rod - Traction Control
11	233-48	1	Knob	35	17-9420	1	Screw - Handle
12	93-9934	1	Handle-Traction	36	2411-43	1	Ball Joint
12:2	256-251	2	Bushing	38	12-3270	1	Screw
13	283-57	1	Pin	39	49-6290	1	Pivot Shaft ASM
14	49-6220	1	Bracket-Control Arm	40	32121-51	1	Pin-Roll
15	3272-4	1	Pin-Cotter	41	93-9936	1	Bracket - Traction Return
16	3256-24	6	Washer-Flat	42	93-9937	1	Cable ASM - Traction
17	3296-59	4	Nut-Lock, NI	43	283-62	1	Pin-Clevis
18	3296-29	3	Nut-Lock, NI	44	3272-10	1	Pin-Cotter
19	49-6250	1	Bracket-Pivot	45	3217-6	1	Nut-Hex
20	3254-6	2	Washer-Lock/Int				
21	3211-2	2	Screw-HH				
22	49-6260	1	Pivot ASM				
22:2	256-2	2	Bushing				
23	3296-4	2	Nut-Lock NI				
24	74-9110	1	Pad-Pedal, Reverse				

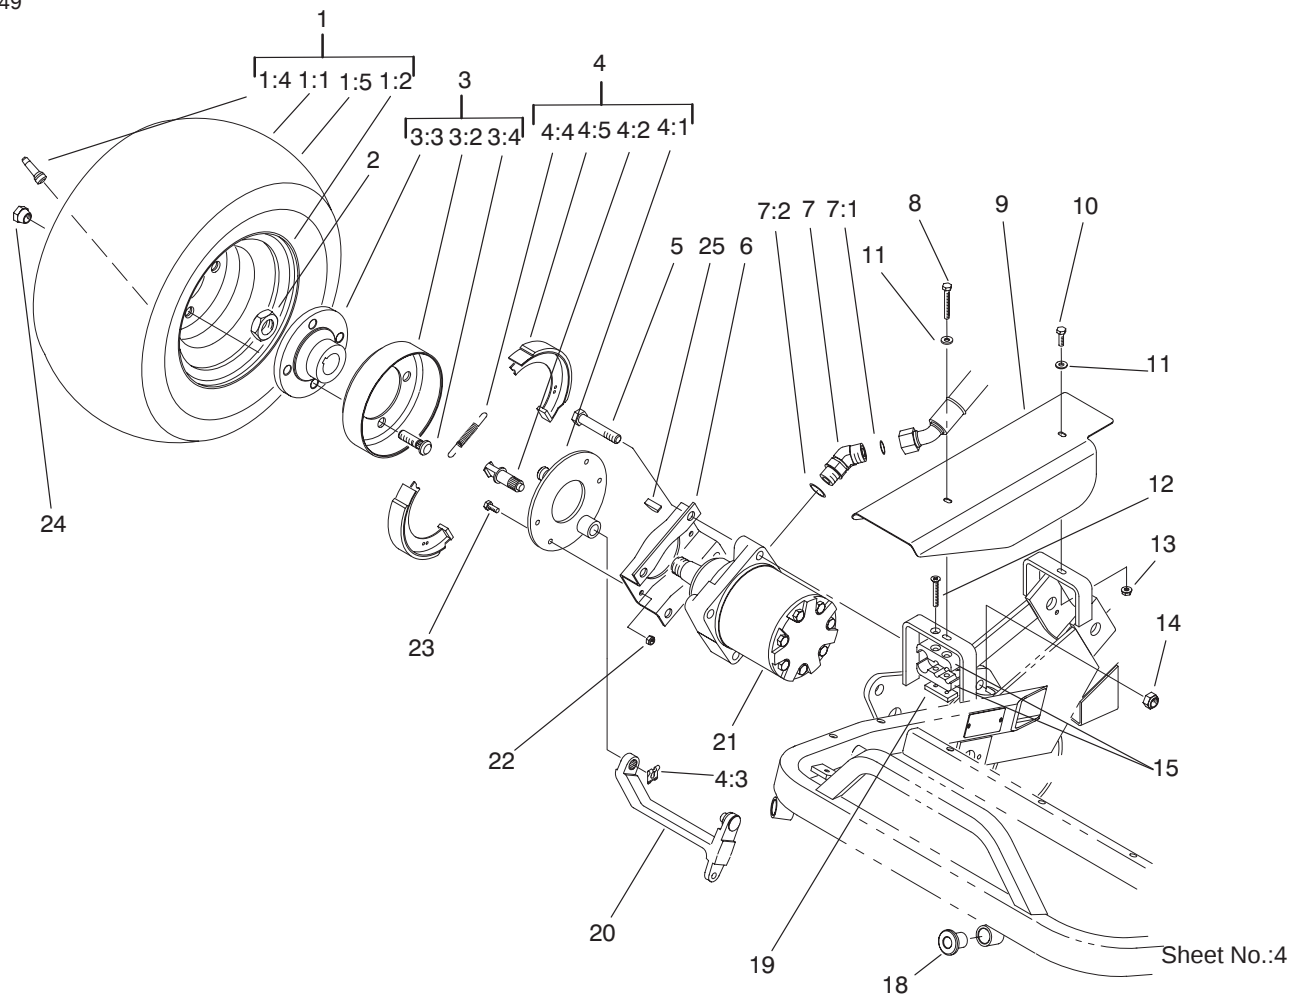


Front Wheel And Brake Assembly

Ref. No.	Part No.	Qty.	Description
1		2	Wheel & Tire ASM
1:1	28-3680	1	Tire
1:2	217-60	1	Rim
1:4	232-24	1	Stem-Valve
*1:5	232-37	1	Tube
2	26-3790	2	Nut-Lock
3	10-6821	2	Brake Drum ASM
3:2	10-6850	1	Drum-Brake
3:3	10-6870-03	1	Wheel Hub
3:4	85-6540	4	Stud-Drive
4	71-1500	2	Brake Assembly
4:1	70-9870	1	Plate-Backing
4:2	70-9860	1	Cam-Brake
4:3	70-9850	1	Clip-Retaining
4:4	70-9880	2	Spring-Return
4:5	70-9840	2	Shoe-Brake
5	325-11	8	Screw-HH
6	84-2000-03	2	Bracket-Brake
7	340-14	4	Fitting-Hydraulic 45 DEG
7:1	237-65	1	O-Ring
7:2	237-80	1	O-Ring
8	321-11	1	Screw-HH
9	83-0190-01	1	Cover-RH
10	321-4	1	Screw-HH
11	3256-22	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
12	32108-100	1	Screw-FH
13	32128-33	1	Nut-HF
14	3296-23	8	Nut-Lock, NI
15	57-6140	2	Clamp Half-Tube
17	3290-415	2	Rivet
18	83-1700	3	Bushing - Flange
19	83-1220	1	Plate-Clamp
20	93-2096	2	Lever - Brake
21	92-9199	2	Motor-Hydraulic
22	3296-42	8	Nut-Lock
23	321-5	8	Screw-HH
24	242-50	8	Nut-Lug
25	3257-42	2	Key-Woodruff
30	70-9850	2	Clip-Retaining

* Not illustrated

Ref. No.	Part No.	Qty.	Description
11	76-0860	1	Shaft-Coupling
12	76-0850	1	Bearing-Thrust
13	92-9761	1	Link - Drive
14	92-9762	7	Screw - Cap, Hex Hd
17	3257-42	1	Key-Woodruff
18	76-0870	1	Wear Plate
22	76-0840	1	Manifold
24	76-0940	1	End Cover ASM
*25	92-9763	1	Rotor Set
*26	76-0880	1	Commutator ASM
*27	94-8178	1	Kit-Seal
*28	76-0810	1	Housing ASM-Wheel Motor

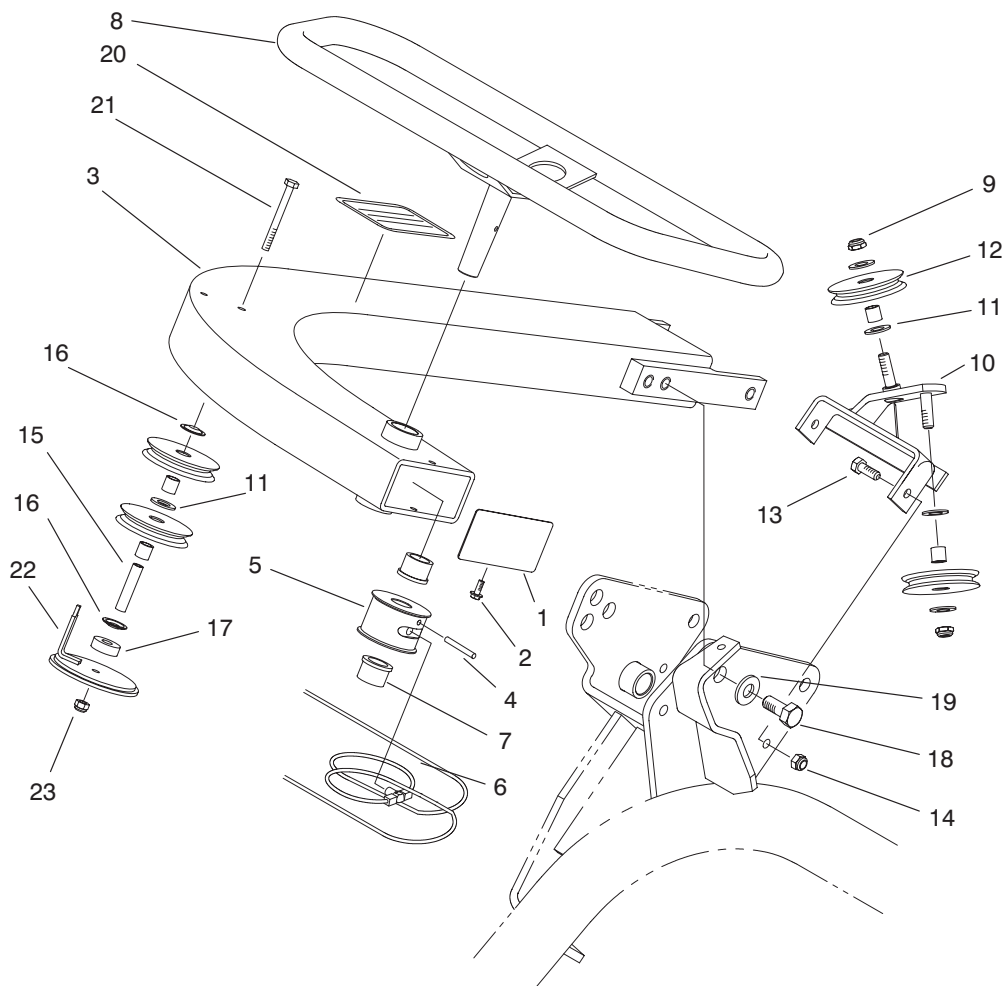


Sheet No.:5

Steering Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7140-01	1	Tube Cap ASM
2	32104-76	2	Screw-Acorn Slot
3	95-2941-01	1	Steering Arm
4	32121-44	1	Pin - Roll
5	95-7149	1	Pulley - Front Steering
6	95-5965	1	Cable - Steering
7	256-113	2	Flg Bshg
8	49-5900	1	Steering Wheel ASM
9	3296-59	2	Nut-Lock, NI
10	95-2932	1	Pulley Bracket
11	3256-4	5	Washer-Flat
12	5-2653	4	Pulley ASM
13	322-4	2	Screw-HH
14	3296-29	2	Nut-Lock,NI
15	10-7240	1	Strg Pulley Sleeve
16	3290-314	2	Tinnerman
17	95-5963	1	Spacer - Pulley
18	325-2	4	Screw-HH
19	3256-26	4	Washer-Flat
20	93-8063	1	Decal-Warning
21	321-15	1	Screw-HH
22	95-5959-01	1	Pulley Support
23	3296-16	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

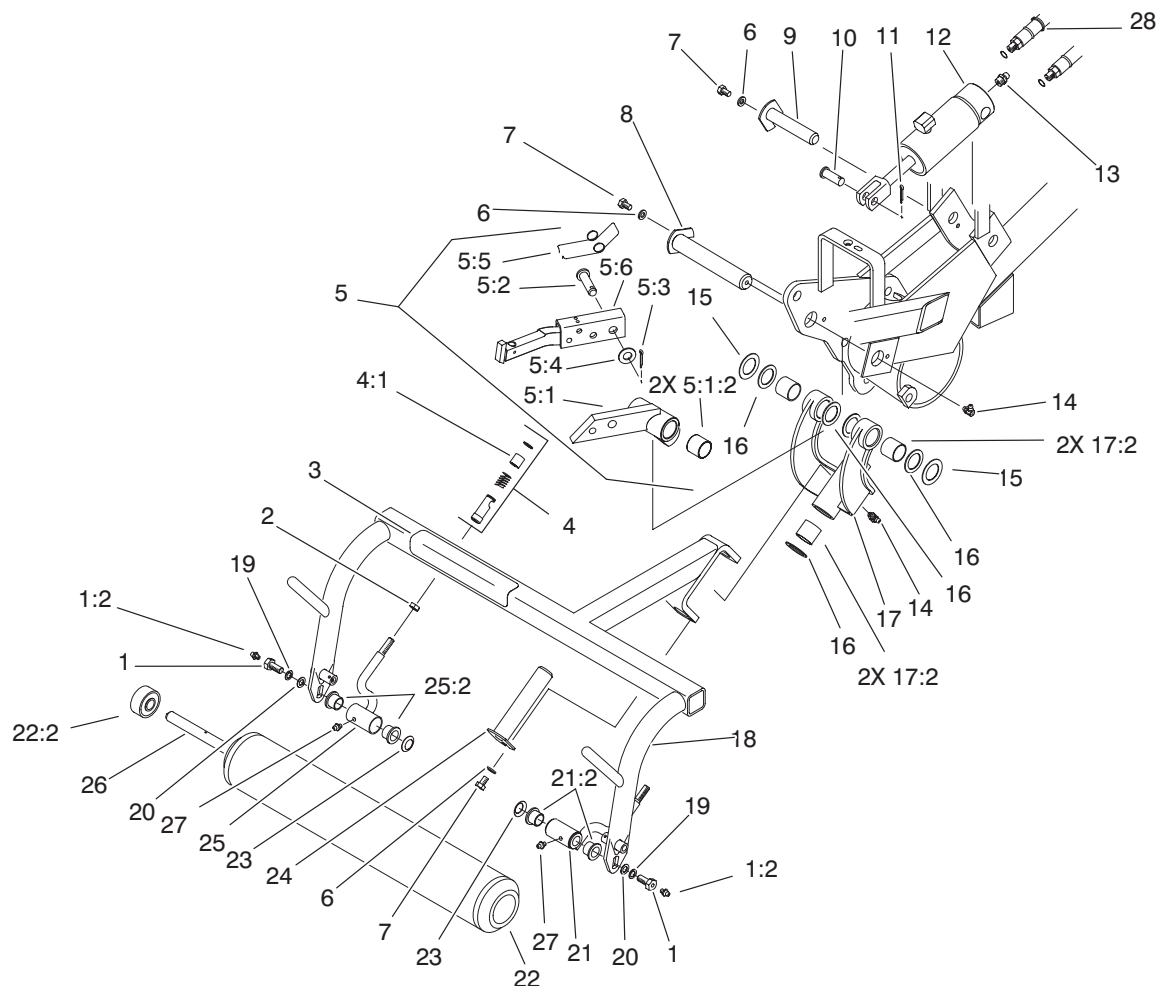


Sheet No.: 6

T-3358

Right Hand Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11-0160	2	Roller Shaft Screw	15	5-1226	2	Washer
1:2	302-5	1	Fitting-Lube	16	10-8110	6	Washer-Thrust
2	3220-3	2	Nut-Jam	17	10-7820	1	Pivot Hinge ASM
3	93-8064	1	Decal-Danger	17:2	3-0348	4	Bushing
4	99-1460	2	Ball Joint Receiver	18	92-9177-01	1	Frame-Pull, RH
			ASM	19	3253-21	2	Washer-Lock/Sp
4:1	99-1461	1	Sleeve - Ball Joint	20	3256-24	2	Washer-Flat
5	94-5590	1	RH Lift Arm ASM	21	92-0586	1	Pull Arm ASM
5:1	62-2440	1	Lift Arm ASM	21:2	3-1506	2	Bushing
5:1:2	3-0348	2	Bushing	22	52-2720	1	Roller ASM
5:2	63-8750	1	Pivot Pin	22:2	251-141	2	Bearing-Ball
5:3	3272-11	1	Pin-Cotter	23	3290-317	2	Washer-Spring
5:4	3256-26	1	Washer-Flat	24	10-6090	1	Pin-Pivot
5:5	57-7650	1	Spring-Torsion	25	92-0585	1	Pull Arm ASM
5:6	94-5588-01	1	Bar-Lift, R/H	25:2	3-1506	2	Bushing
6	3256-23	3	Washer-Flat	26	21-8470	1	Shaft-Roller
7	322-1	3	Screw-HH	27	302-5	2	Fitting-Lube
8	10-6110	1	Pin-Hinge	28	3290-378	1	Tie-Cable
9	10-6060	1	Pin-Pivot, Ram	29:1	237-78	1	O-Ring
10	283-8	1	Pin-Clevis				
11	3272-11	1	Pin-Cotter				
12	99-8159	1	Hydraulic Cylinder				
	ASM						
13	302-2	1	Fitting-Grease				
14	302-60	2	Fitting-Lube				

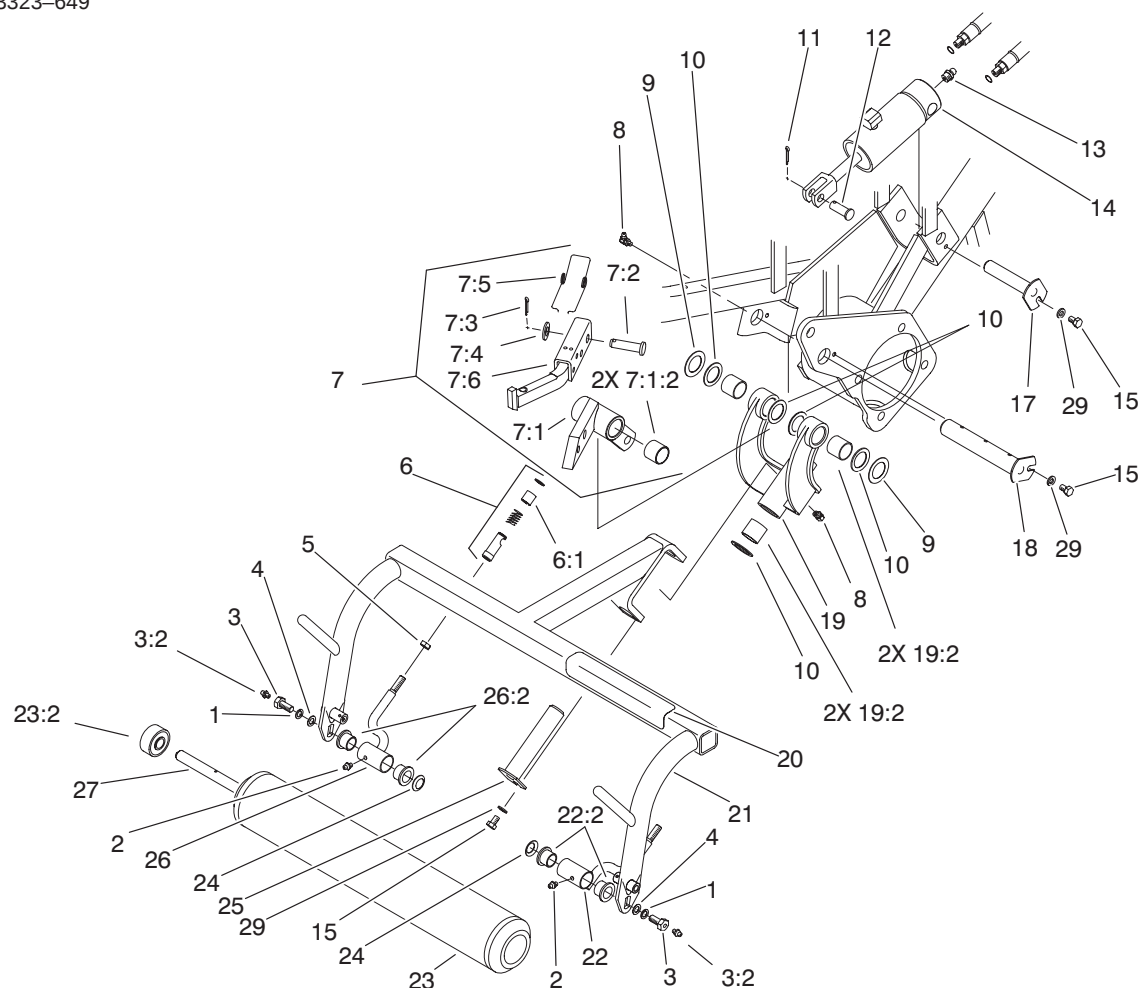

Sheet No.: 7


T-3360

Left Hand Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3253-21	2	Washer-Lock/Sp
2	302-5	2	Fitting-Lube
3	11-0160	2	Roller Shaft Screw ASM
3:2	302-5	1	Fitting-Lube
4	3256-24	2	Washer-Flat
5	3220-3	2	Nut-Jam
6	99-1460	2	Ball Joint Receiver ASM
6:1	99-1461	1	Sleeve - Ball Joint
7		1	LH Lift Arm ASM
7:1	62-2460	1	Lift Arm ASM
7:1:2	3-0348	2	Bushing
7:2	63-8750	1	Pivot Pin
7:3	3272-11	1	Pin-Cotter
7:4	3256-26	1	Washer-Flat
7:5	57-7650	1	Spring-Torsion
7:6	94-5586-01	1	Bar-Lift, LH
8	302-60	2	Fitting-Lube
9	5-1226	2	Washer
10	10-8110	6	Washer-Thrust
11	3272-11	1	Pin-Cotter
12	283-8	1	Pin-Clevis
13	302-2	1	Fitting-Grease
14	99-8159	1	Hydraulic Cylinder ASM

Ref. No.	Part No.	Qty.	Description
14:2	32152-10	1	Locknut – Top Deform
14:3	52-1990	1	Piston-Hyd Cylinder
14:13	76-1850	1	Clevis
14:14	3220-6	1	Nut-Jam
*14:15	99-8163	1	Kit – Seal Repair
15	322-1	3	Screw-HH
17	10-6060	1	Pin-Pivot, Ram
18	10-6110	1	Pin-Hinge
19	10-7820	1	Pivot Hinge ASM
19:2	3-0348	4	Bushing
20	93-8064	1	Decal-Danger
21	92-9176-01	1	Frame-Pull, LH
22	92-0586	1	Pull Arm ASM
22:2	3-1506	2	Bushing
23	52-2720	1	Roller ASM
23:2	251-141	2	Bearing-Ball
24	3290-317	2	Washer-Spring
25	10-6090	1	Pin-Pivot
26	92-0585	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	21-8470	1	Shaft-Roller
29	3256-23	3	Washer-Flat
30:1	237-78	1	O-Ring
31:1	237-78	1	O-Ring

* Not illustrated

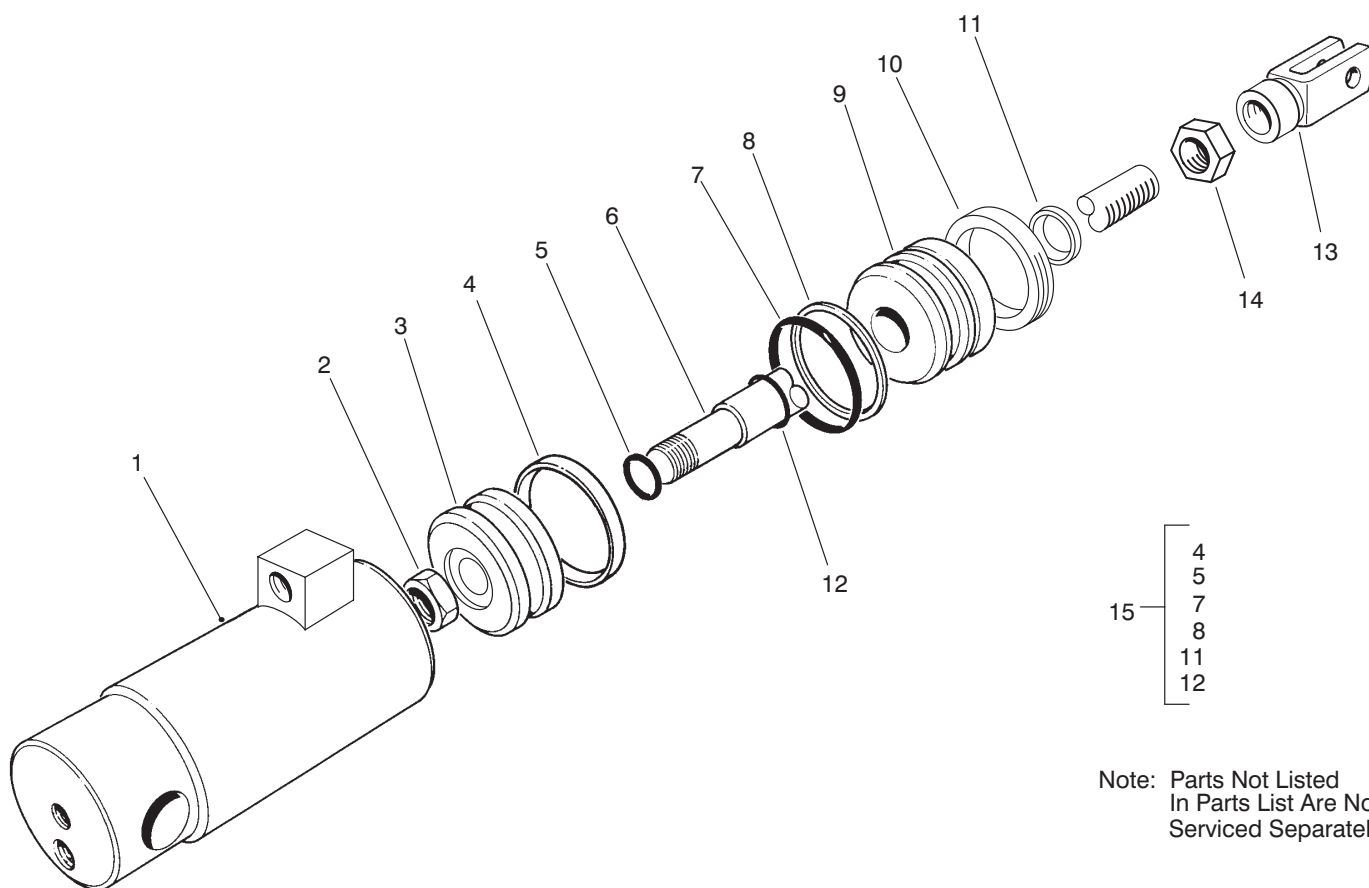

Note: Parts Not Listed
In Parts List Are Not
Serviced Separately.

Sheet No.: A2


T-3359

Hydraulic Cylinder Assembly No. 99-8159

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut – Top Deform
3	52-1990	1	Piston-Hyd Cylinder
13	76-1850	1	Clevis
14	3220-6	1	Nut-Jam
*15	99-8163	1	Kit – Seal Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated

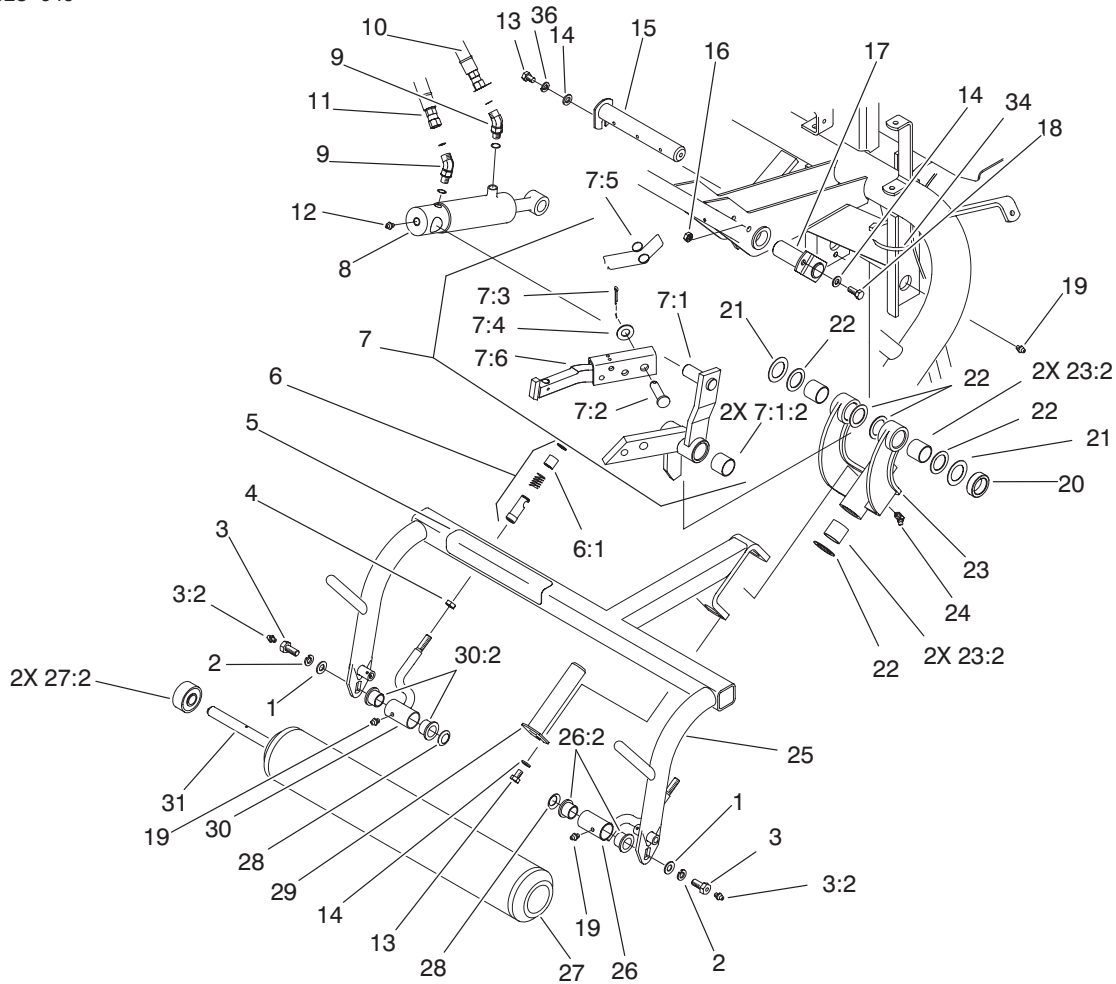


Sheet No.: 8
T-3361

Rear Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-24	2	Washer-Flat
2	3253-21	2	Washer-Lock/Sp
3	11-0160	2	Roller Shaft Screw
3:2	302-5	1	Fitting-Lube
4	3220-3	2	Nut-Jam
5	93-8064	1	Decal-Danger
6	99-1460	2	Ball Joint Receiver
6:1	99-1461	1	Sleeve - Ball Joint
7	68-5280	1	Center Lift Arm ASM
7:1	68-5380	1	Center Lift Arm ASM
7:1:2	3-0348	2	Bushing
7:2	63-8750	1	Pivot Pin
7:3	3272-11	1	Pin-Cotter
7:4	3256-26	1	Washer-Flat
7:5	57-7650	1	Spring-Torsion
7:6	62-2420-01	1	Bar-Lift
8	99-8160	1	Hydraulic Cylinder
9	340-103	2	Fitting
10	83-1680	1	Hose-Hydraulic
11	88-9700	1	Hose-Hydraulic
12	302-2	1	Fitting-Grease
13	322-1	2	Screw-HH
14	3256-23	3	Washer-Flat

Ref. No.	Part No.	Qty.	Description
15	27-2550	1	Pin-Hinge
16	3296-29	1	Nut-Lock,NI
17	68-5560	1	Pin-Cylinder,Pivot
18	322-3	1	Screw-HH
19	302-5	3	Fitting-Lube
20	93-2384	1	Spacer - Carrier
21	5-1226	2	Washer
22	10-8110	6	Washer-Thrust
23	10-7820	1	Pivot Hinge ASM
23:2	3-0348	4	Bushing
24	302-60	1	Fitting-Lube
25	86-9820-01	1	Frame-Pull, R/H & Rr
26	92-0586	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	52-2720	1	Roller ASM
27:2	251-141	2	Bearing-Ball
28	3290-317	2	Washer-Spring
29	10-6090	1	Pin-Pivot
30	92-0585	1	Pull Arm ASM
30:2	3-1506	2	Bushing
31	21-8470	1	Shaft-Roller
34	3290-379	1	Tie-Cable
36	3253-4	1	Washer-Lock/Sp

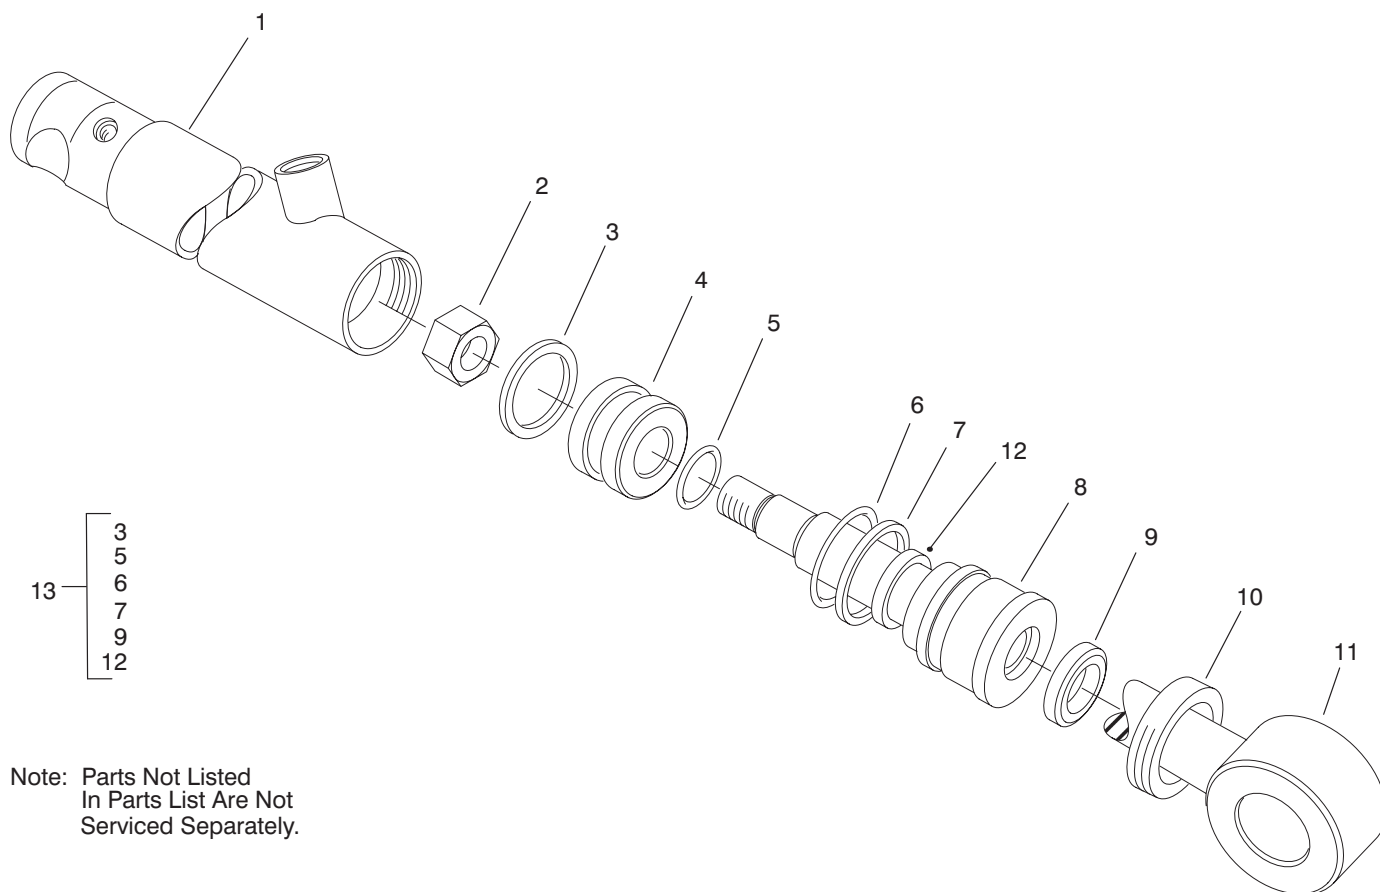

Note: Parts Not Listed
In Parts List Are Not
Serviced Separately.


Sheet No.: A3
T-3362

Hydraulic Cylinder No. 99-8160

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut – Top Deform
4	70-2780	1	Piston
*13	99-8162	1	Kit – Seal Repair, 1.50
* Not illustrated			

	* Not illustrated
--	-------------------

Ref. No.	Part No.	Qty.	Description

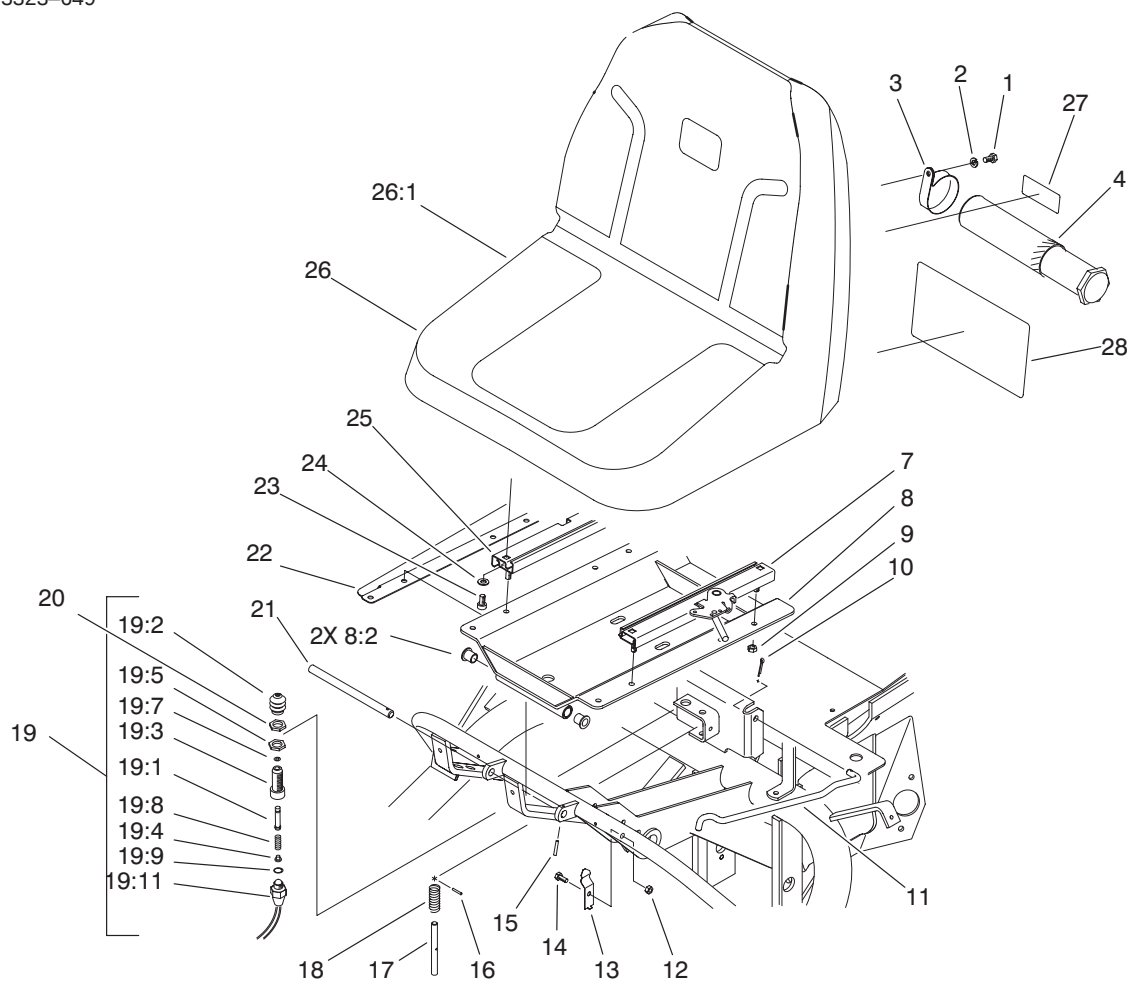


Sheet No.: 9
T-3363

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	322-2	2	Screw-HH
2	3253-4	2	Washer-Lock/Sp
3	2412-133	2	R-Clamp
4	74-0720	1	Tube-Manual
7	51-0790	1	L/H Seat Adjuster-4"
8	83-1270	1	Seat Support ASM
8:2	256-155	2	Bushing-Flange
9	3296-29	4	Nut-Lock, NI
10	3272-11	1	Pin-Cotter
11	68-5100	1	Prop Seat Rod
12	3296-16	1	Nut-Lock, NI
13	68-5310	1	Prop Rod Clip
14	321-3	1	Screw-HH
15	32121-45	1	Pin-Spring
16	3284-3	1	Groove Pin
17	51-0350	1	Seat Spring Pin
18	3-6685	1	Spring
19	43-9071	1	Limit Switch ASM
19:1	43-8860	1	Switch Plunger
19:2	43-8870	1	Switch Boot
19:3	43-8620	1	Guide-Pin, Switch
19:4	43-8610	1	Guide
19:5	218-461	1	Nut-HH
19:7	237-7	1	O Ring
19:8	43-8600	1	Spring-Compression
19:9	237-30	1	O-Ring

Ref. No.	Part No.	Qty.	Description
19:11	72-4320	1	Switch
20	218-461	1	Nut-HH
21	49-5880	1	Shaft-Support, Seat
22	83-1840-01	1	R/H Valve Cover
23	3274-12	4	Screw-HSH
24	3256-23	4	Washer-Flat
25	51-0780	1	Slider-Seat
26	100-3187	1	Seat ASM
26:1	92-6534	1	Shell
*26:2	351-80	1	Clip
*26:3	351-78	1	Edging
*26:4	100-6411	1	Cushion-Replacement
27	93-8067	1	Decal-Hydraulic Oil
28	95-7131	1	Decal - Service (Finn)
28	95-7132	1	Decal - Service (Dan)
28	95-7133	1	Decal - Service (Dut)
28	95-7143	1	Decal - Service, Japanese
28	95-7130	1	Decal - Service (Norw)
28	95-7113	1	Decal - Service
28	95-7124	1	Decal - Service (Span)
28	95-7125	1	Decal - Service (Fren)
28	95-7126	1	Decal - Service (Ger)


* Not illustrated

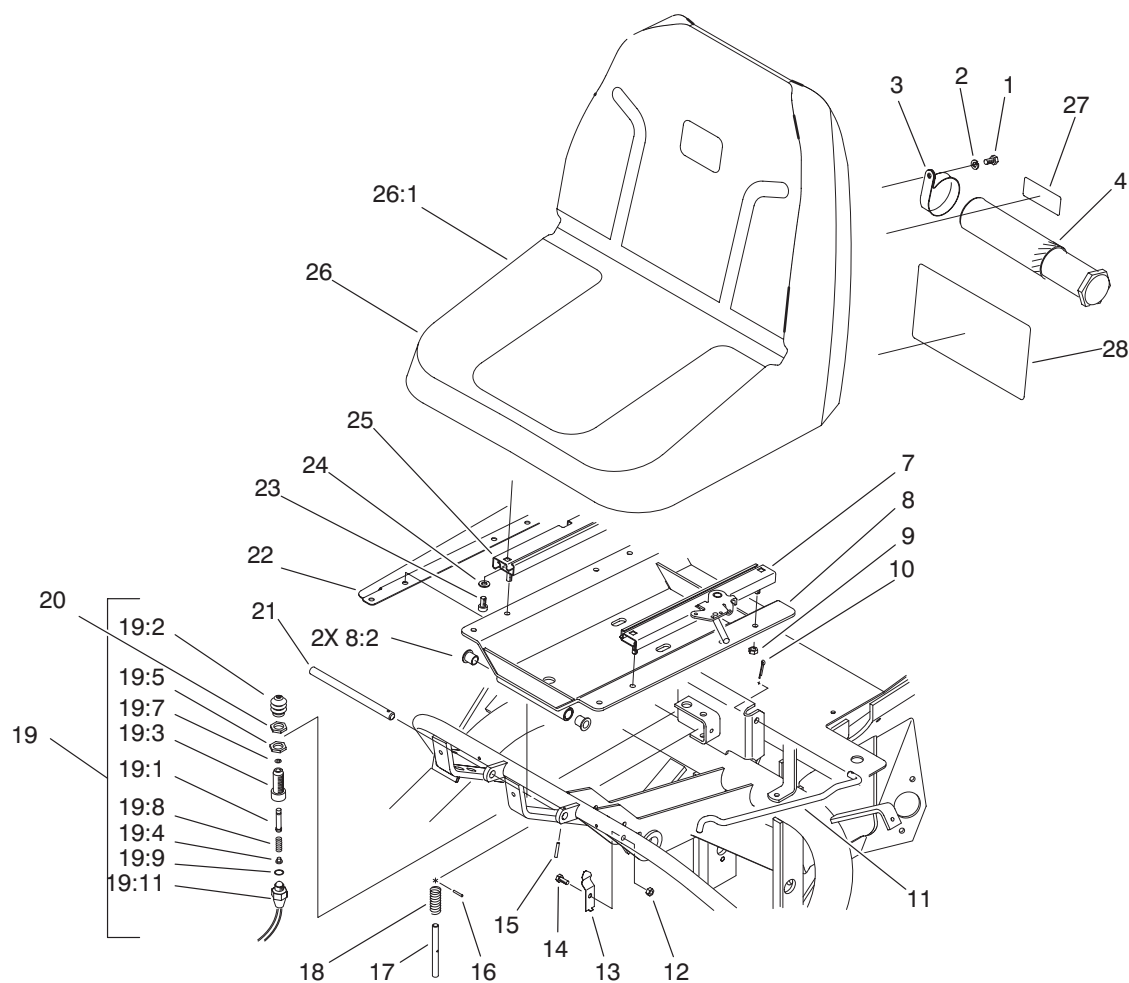

Sheet No.: 9
T-3363

Seat Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
28	95-7127	1	Decal -, Service (Swed)
28	95-7128	1	Decal - Service (Ital)
28	95-7129	1	Decal - Service (Port)

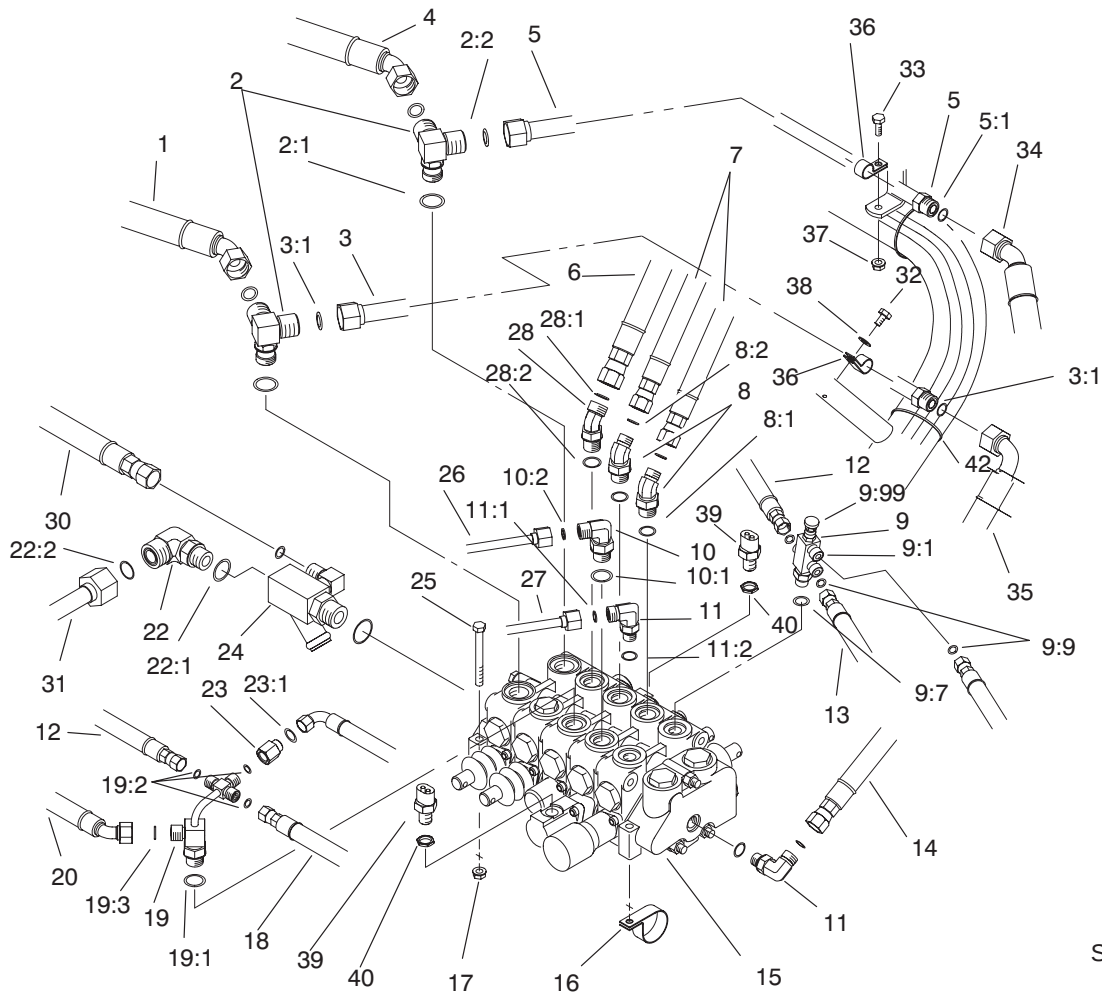


Sheet No.:10

Control Valve Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	98-0647	1	Hose-Hydraulic
2	63-4050	2	Fitting
2:1	237-80	1	O-Ring
2:2	237-65	2	O-Ring
3	70-7130	1	Tube Line
3:1	237-65	2	O-Ring
4	98-0646	1	Hose-Hydraulic
5	83-1200	1	Tube-Traction, LH Lower
5:1	237-65	1	O-Ring
6	98-2151	1	Hose-Hydraulic
7	98-0649	2	Hose-Hydraulic
8	340-138	2	Fitting
8:1	237-79	1	O-Ring
8:2	237-22	1	O-Ring
9	93-2556	1	Needle Valve ASM
9:1	93-2555	1	Fitting - Body
9:7	237-42	1	O-Ring
9:9	237-21	3	O Ring
9:99	93-2554	1	Needle ASM
10	340-18	1	Fitting
10:1	237-79	1	O-Ring
10:2	237-22	1	O-Ring
11	340-77	2	Fitting-Hyd. 90°
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring


Ref. No.	Part No.	Qty.	Description
12	92-9767	2	Hose
13	83-1690	1	Hose-Hydraulic
14	98-2150	1	Hose-Hydraulic
15	84-2203	1	Control Valve-5 Spool
16	304-61	1	Clamp-Hose
17	32128-20	3	Nut-HF
18	63-3850	1	Hose ASM
19	83-1670	1	Fitting ASM
19:1	237-79	1	O-Ring
19:2	237-22	1	O-Ring
19:3	237-21	3	O Ring
20	95-5986	1	Hose-Hydraulic
22	340-16	1	Fitting
22:1	237-80	1	O-Ring
22:2	237-58	1	O-Ring
23	71-0990	1	Orifice
23:1	237-21	1	O Ring
24	63-4080	1	Manifold Fitting
25	322-14	3	Screw-HH
26	63-4030	1	Hydraulic Tube
27	63-4020	1	Hydraulic Tube
28	340-101	1	Fitting
28:1	237-30	1	O-Ring
28:2	237-79	1	O-Ring
30	95-5987	1	Hose-Hydraulic
31	63-4040	1	Tube-Hydraulic

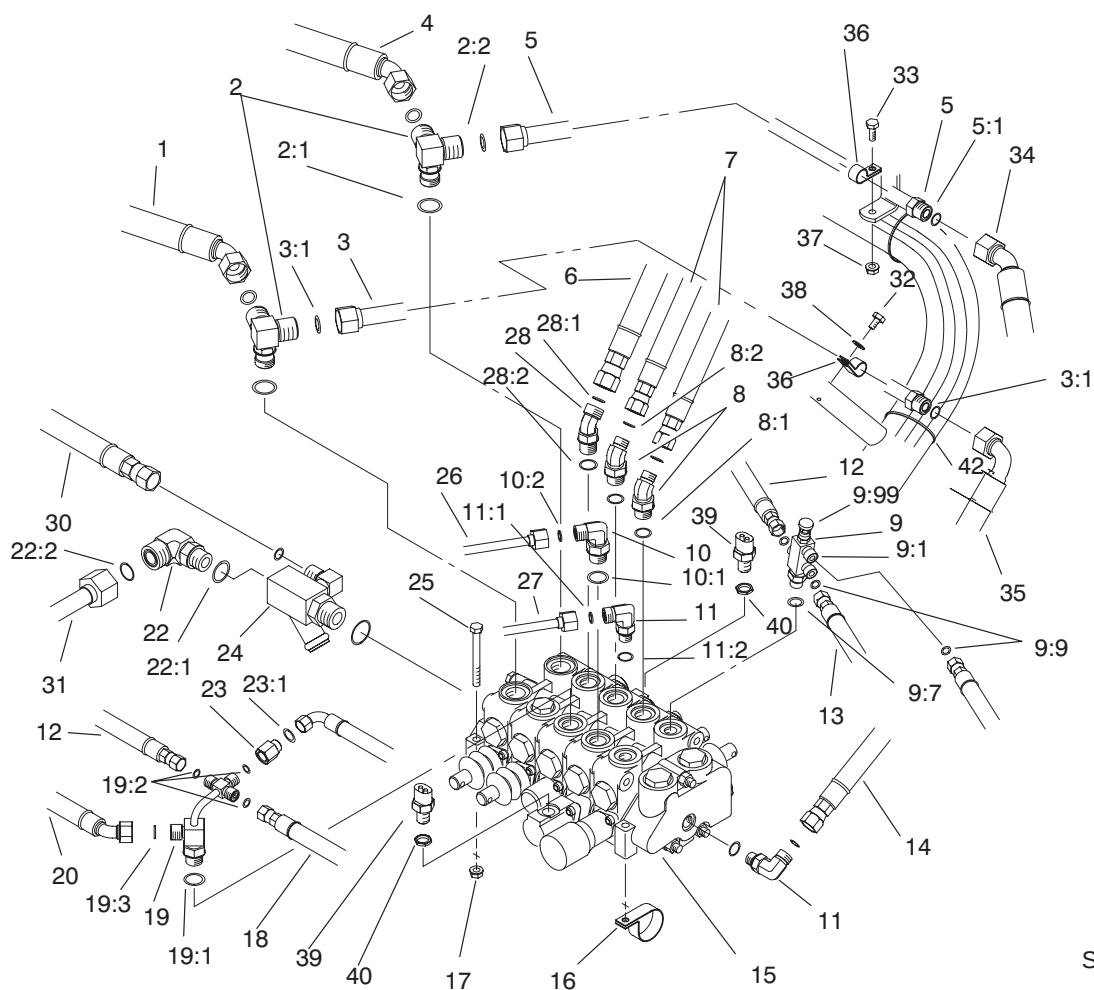

Sheet No.:10

Control Valve Installation Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
32	12-3270	1	Screw
33	3234-4	1	Screw-Hfh
34	98-0648	1	Hose ASM – Hyd
35	98-2153	1	Hose ASM – Hyd
36	2412-41	2	Clamp
37	3296-16	1	Nut-Lock, NI
38	3256-22	1	Washer-Flat
39	83-1890	2	Switch-Ball
40	38-0410	2	Hex Nut

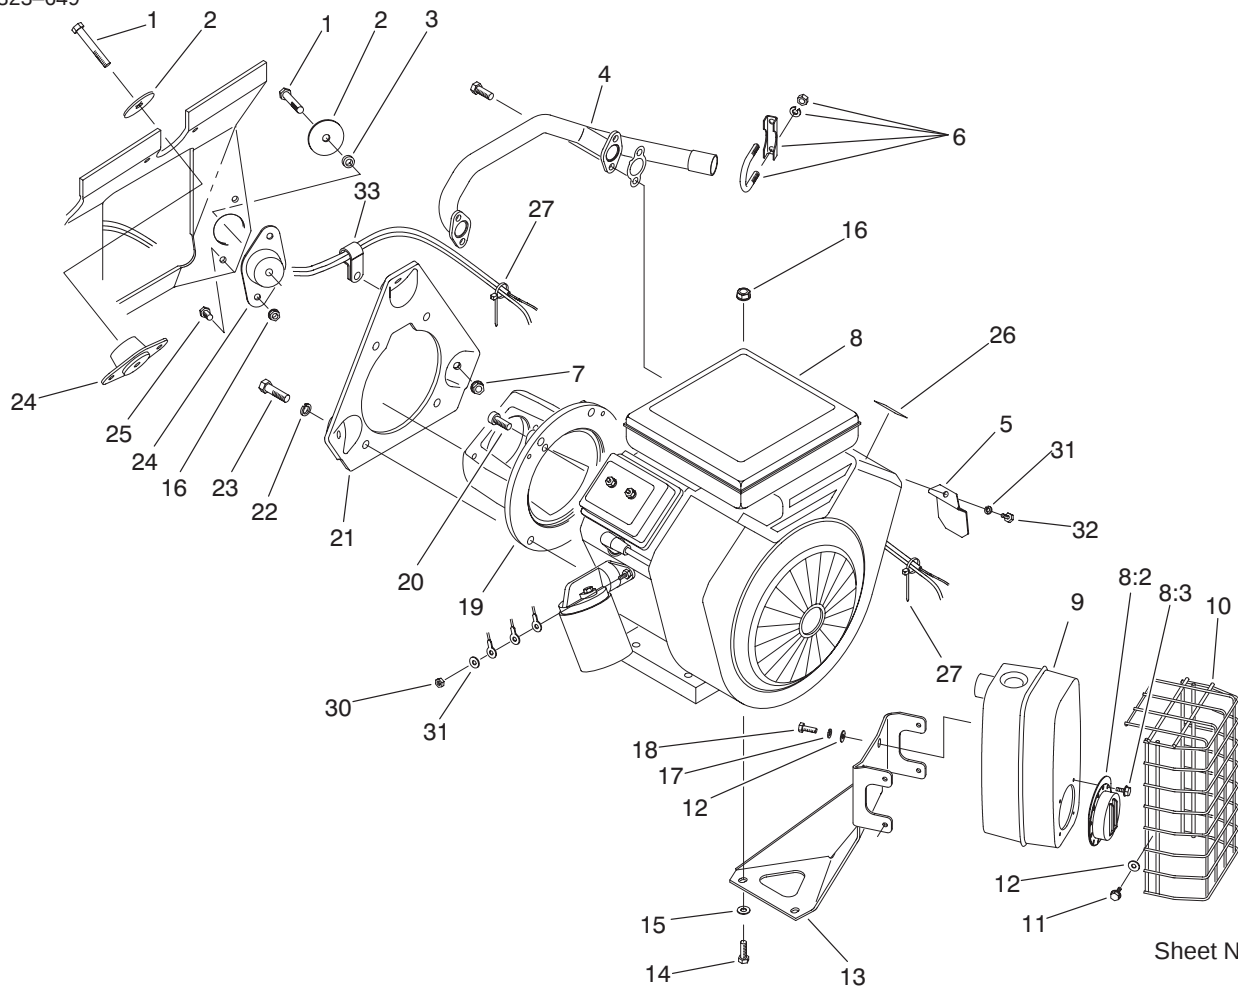


Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	323-12	3	Screw-HH
2	83-1040	3	Washer - Flat
3	83-1050	2	Spacer
4	83-1080	1	Exhaust Manifold ASM
5	83-2310	1	Shield - Regulator
6	2112-11	1	Muffler Clamp
7	3290-357	3	Nut-Flange, Lock
8	98-0636	1	Engine ASM
8:2	83-2220	1	Deflector-Exhaust
8:3	83-2230	4	Screw-HH
9	98-0616	1	Muffler ASM
10	83-1400-03	1	Muffler Shield
11	12-3270	4	Screw
12	3256-1	8	Washer-Flat
13	83-1630-03	1	Bracket-Muffler Support
14	322-8	2	Screw-HH
15	3256-23	2	Washer-Flat
16	32128-20	8	Nut-HF
17	3253-3	4	Washer-Lock/Sp
18	49-2040	4	Screw-Taptite
19	83-1060-03	1	Adapter-Pump
20	3274-7	2	Screw-HSH
21	85-8120-03	1	Plate-Engine Mount
22	3253-6	4	Washer-Lock/Sp
23	324-7	4	Screw-HH

Ref. No.	Part No.	Qty.	Description
24	83-1030	3	Mount-Engine
25	322-3	6	Screw-HH
26	93-8069	1	Decal-Hot Surface
27	3290-379	1	Tie-Cable
28	83-2220	1	Deflector-Exhaust
29	83-2230	4	Screw-HH
30	43-2830	1	Hex Nut
31	43-5930	2	Spring Washer
32	33113-016	1	Screw-HH
33	2412-81	1	Clamp
34	3290-378	2	Tie-Cable
99	98-3443	1	Manual - Engine
99	94-9121	1	Wire - Tie F/W
99	94-9120	1	Tag - Caution F/W

Sheet No.: 11

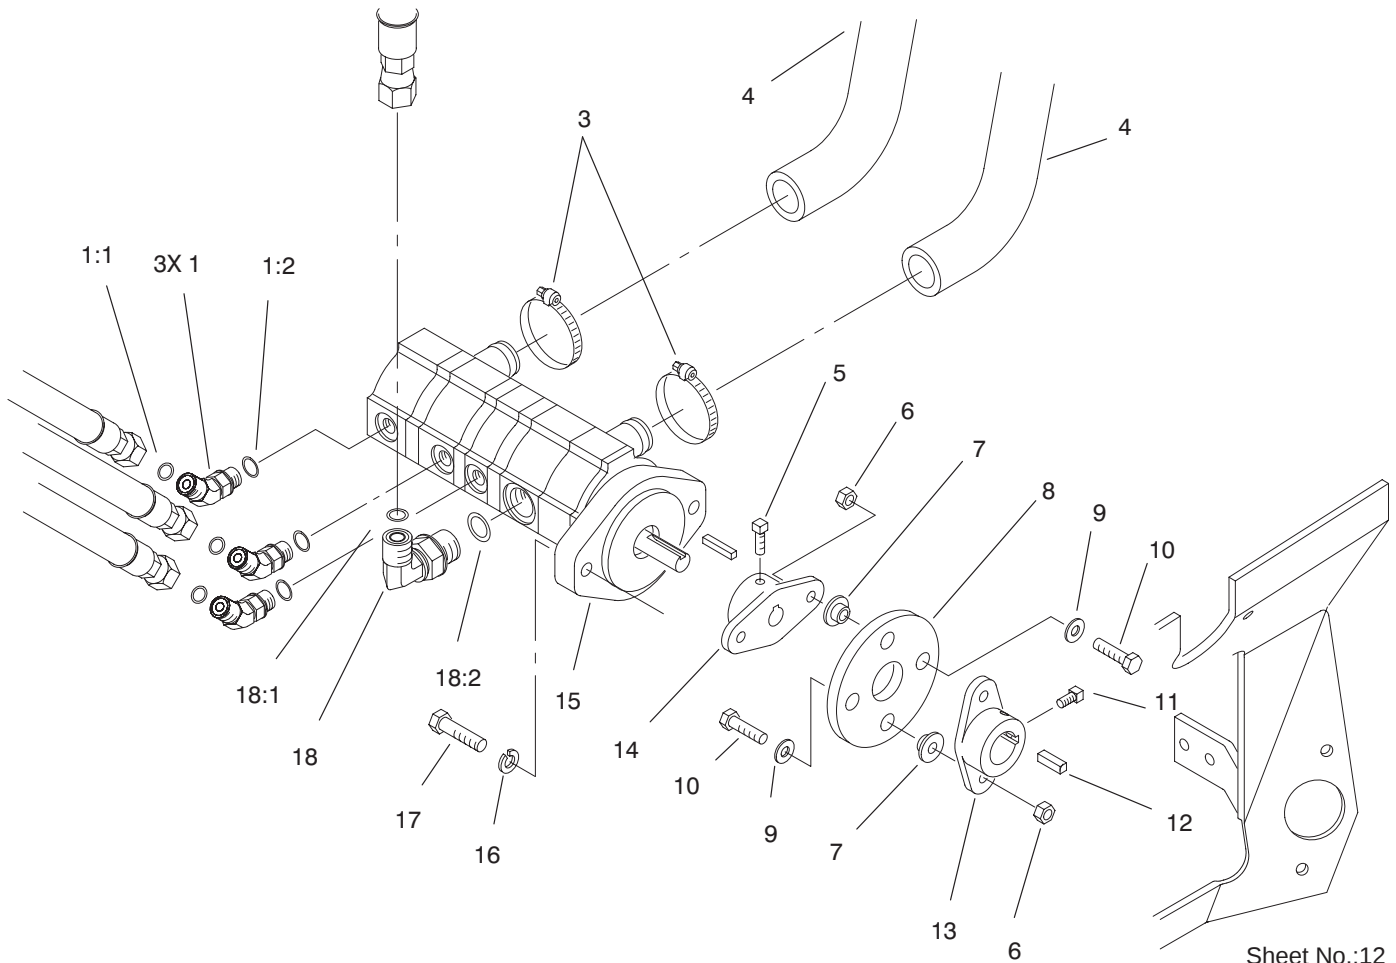

Sheet No.:12

Hydraulic Pump Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	340-87	3	Fitting-Hyd., 45°
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
3	2412-34	2	Clamp-Hose
4	95-5966	2	Hose - Pump Inlet
5	3241-6	2	Screw, Sq Hd
6	3296-29	4	Nut-Lock, NI
7	27-6600	4	Spacer-Coupling
8	44-2230	1	Coupling-Rubber
9	3256-23	4	Washer-Flat
10	322-6	4	Screw-HH

Ref. No.	Part No.	Qty.	Description
11	3241-2	2	Screw-SQH
12	10-7070	1	Key-Square
13	27-1960	1	Hub-Engine
14	27-1970	1	Hub-Pump
15	95-5976	1	Gear Pump - 4 Section
16	3253-21	2	Washer-Lock/Sp
17	323-8	2	Screw-HH
18	340-105	1	Fitting-Hyd., 90°
18:1	237-30	1	O-Ring
18:2	237-80	1	O-Ring


This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The components are numbered 1 through 19. The assembly starts with a long shaft (1) passing through a series of housing components (2, 3, 4, 5, 6, 7). The shaft is supported by bearings (8, 9) and has a gear (10) mounted on it. The gear is part of a gear train that includes gears 11, 12, 13, 14, 15, 16, 17, 18, and 19. The housing components are shown in a disassembled state, allowing for the identification of each part and its position within the overall assembly.

T-2699-2

HYDRAULIC PUMP NO. 95-5976

Ref. No.	Part No.	Description	No. Used
1	354-16	Washer - Lock	4
2	98-0614	Stud - Threaded	4
3	354-11	Pin - Dowel	4
4	98-0610	Pin - Dowel	4
5	98-0608	Idler Shaft	1
6	353-919	Plate - Gear Pump B	1
7	98-0611	Body Assembly	1
8	5-0946	Key - Square	1
9	354-15	Seal - Shaft	1
10	353-886	Ring - Retaining	4
11	353-884	Key - Woodruff	5
12	98-0609	Shaft - Drive	1
13	92-9773	Gear - 59B	2
14	353-3	Bearing Plate Assembly	1
15	353-922	Seal - Ring	8
16	353-967	Gear - 33B	6
17	353-969	Plate - Gear 33B	3
18	98-0612	Bearing Plate Assembly	2
19	98-0613	Cover Assembly	1


Ref. No.	Part No.	Description	No. Used

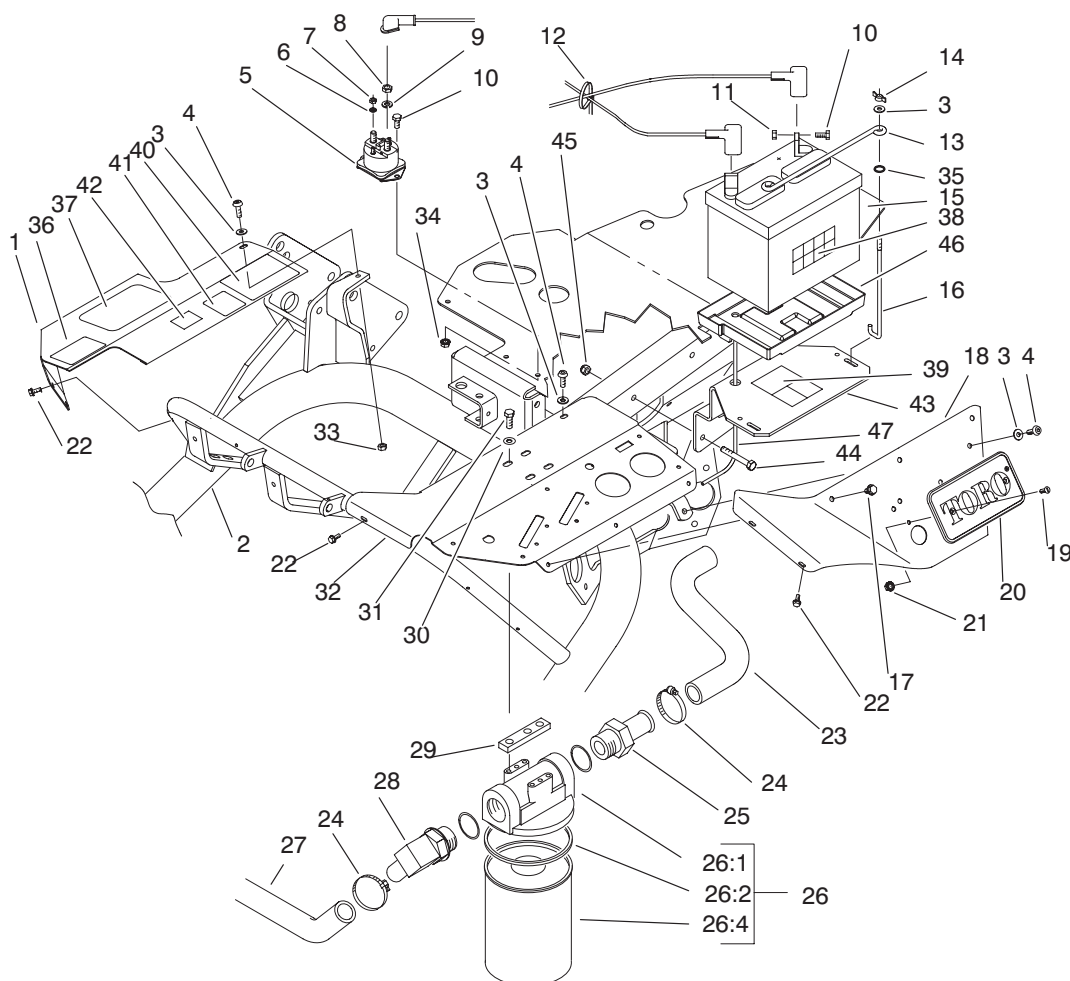

Sheet No.:13

Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-2694-01	1	Cover-RH	26:1	44-5560	1	Head-Oil Filter
2	95-5981-01	1	Frame ASM – Wa R	26:2	72-3850	1	Seal- Oil Filter
3	3256-22	5	Washer-Flat	26:4	74-3570	1	Filter
4	3274-69	3	Screw-HSBH	27	68-5880	1	Hose-Hydraulic
5	28-4210	1	Solenoid	28	353-564	1	Fitting-90°
6	3254-1	2	Washer-Lock/Int	29	27-2380	2	Spacer
7	3219-14	2	Nut-Hex	30	3256-23	4	Washer-Flat
8	3218-13	2	Nut-Jam	31	322-4	4	Screw-HH
9	3253-4	2	Washer-Lock/Sp	32	83-0830-01	1	Upper Control Panel
10	321-3	4	Screw-HH	34	32149-2	2	Nut-Keps
11	3217-5	2	Nut-Hex	35	237-143	2	O-Ring
13	72-4790	1	Battery Hold Down	36	93-8065	1	Decal-Traction
14	32103-12	2	Nut-Wing	37	67-1300	1	Decal – Toro
15	92-1677	1	Battery-Dry	38	93-7276	1	Decal – Danger
16	56-7720	2	Post-Battery	39	93-6668	1	Decal – Battery
17	46-8560	3	Screw-Flange	40	92-5524	1	Decal-Noise Rating
18	83-0840-01	1	Valve Cover Shield	41	63-9920	1	Decal-Noise Level
19	3290-470	2	Screw-HSFH	42	93-7252	1	Decal-C.e. Mark
20	61-3310	1	Plate-Logo	43	95-7122-03	1	Battery Base ASM
21	32149-7	2	Nut-Keps	44	322-11	2	Screw-HH
22	32104-76	5	Screw-Acorn Slot	45	3296-29	2	Nut-Lock,NI
23	95-7119	1	Hose – Return Line	46	106948	1	Tray-Battery
24	2412-34	3	Clamp-Hose	47	98-0601	1	Tube – Battery Drain
25	353-563	1	Fitting-Hydraulic, Straight				
26	74-3600	1	Filter & Head ASM				

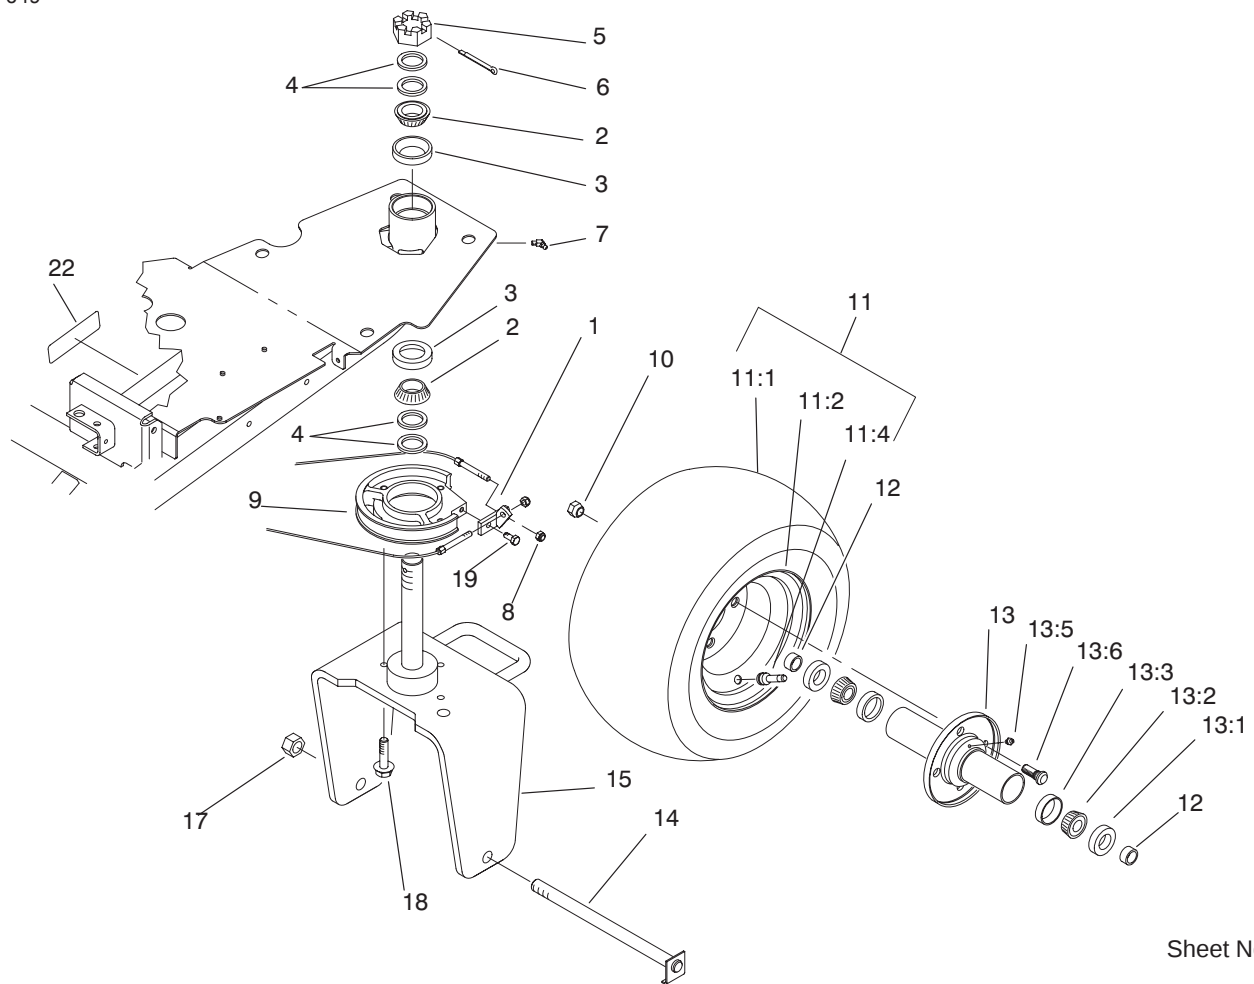


Sheet No.:14

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	95-5956	1	Cable Anchor ASM
2	254-70	2	Cone-Bearing
3	254-61	2	Cup-Bearing
4	18-6320	4	Washer-Steering
5	32136-9	1	Nut Hex Slot
6	3272-37	1	Pin, Cotter
7	302-11	1	Fitting-Lube, 45°
8	3296-4	2	Nut-Lock NI
9	95-5955-01	1	Drum-Steering, Mach R
10	242-50	4	Nut-Lug
11	10-6790	1	Wheel & Tire ASM
11:1	28-3680	1	Tire
11:2	217-60	1	Rim
11:4	232-24	1	Stem-Valve
*11:5	232-37	1	Tube
12	74-3730	2	Spacer - Rear Spindle
13	72-9710	1	Hub - Sully Tire
13:1	253-111	2	Oil Seal
13:2	254-78	2	Cone-Bearing
13:3	254-79	2	Bearing-Roller, Cup
13:4	75-9440	1	Hub ASM
13:5	302-55	1	Zerk
13:6	10-6830	4	Stud-Type, Drive
14	5-3934	1	Bolt-Caster
15	95-5952-01	1	Fork-Caster

Ref. No.	Part No.	Qty.	Description
17	3296-67	1	Nut-Lock NI
18	3234-24	3	Screw
19	322-3	1	Screw-HH


* Not illustrated

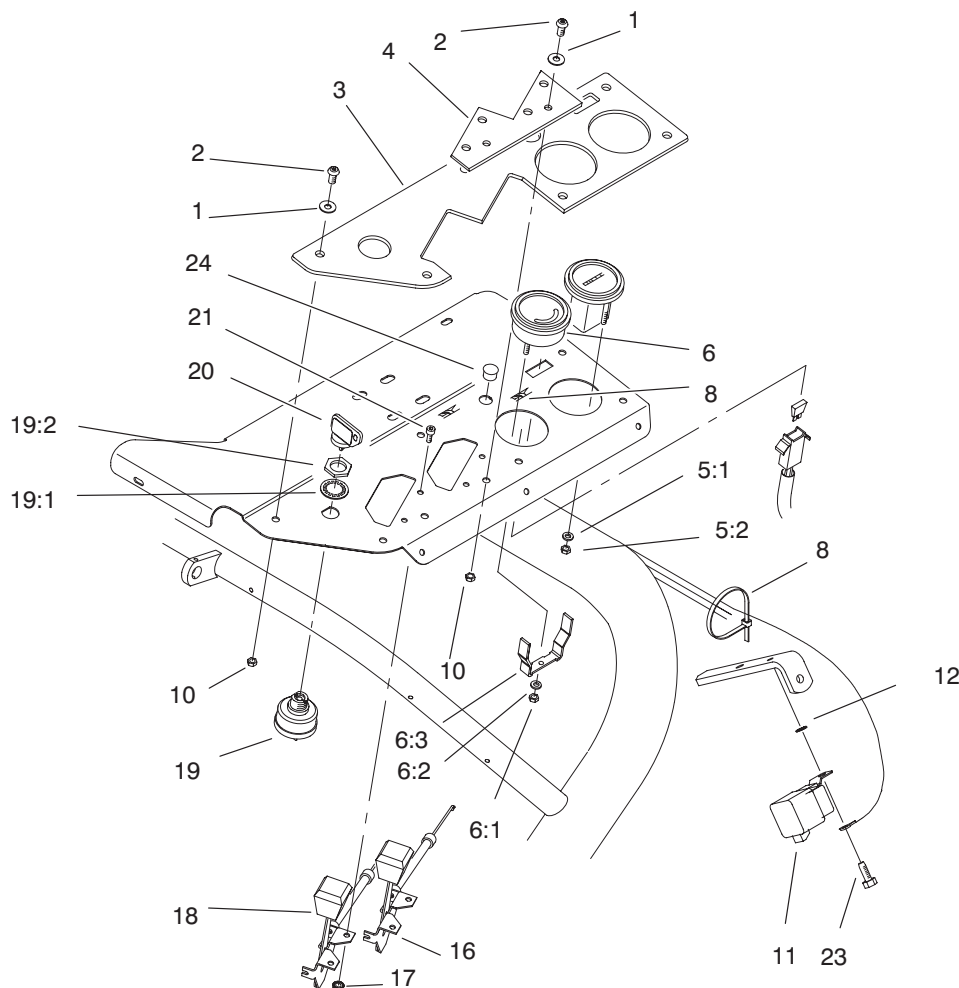

Sheet No.:15

Instrument Panel Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3256-1	8	Washer-Flat				
2	3274-69	8	Screw-HSBH				
3	93-8061	1	Panel - Control				
4	83-2030	1	Plate-Filler				
5	66-2950	1	Gauge-Hourmeter				
5:1	3255-20	2	Washer-Lock, Ext. Tooth				
5:2	3217-25	2	Nut-Hex				
6	98-2160	1	Voltmeter				
6:1	3217-27	1	Nut-Hex				
6:2	3255-25	1	Washer-Lock/Ext				
6:3	78-0080	1	Clamp-Mounting				
8	3290-378	3	Tie-Cable				
10	3296-16	8	Nut-Lock, NI				
11	70-1480	1	Relay				
12	3255-7	1	Washer-Lock/Ext				
16	83-0040	1	Control - Choke				
17	3296-27	4	Nut-Lock NI				
18	83-0030	1	Control - Throttle				
19	88-9830	1	Switch-Ignition				
19:1	3254-5	1	Washer-Lock/Int				
19:2	218-461	1	Nut-HH				
20	63-8360	2	Key-Ignition				
21	3273-26	4	Hex Soc Screw				
23	32104-95	1	Screw-HWH				
24	2410-64	1	Plug-Button				

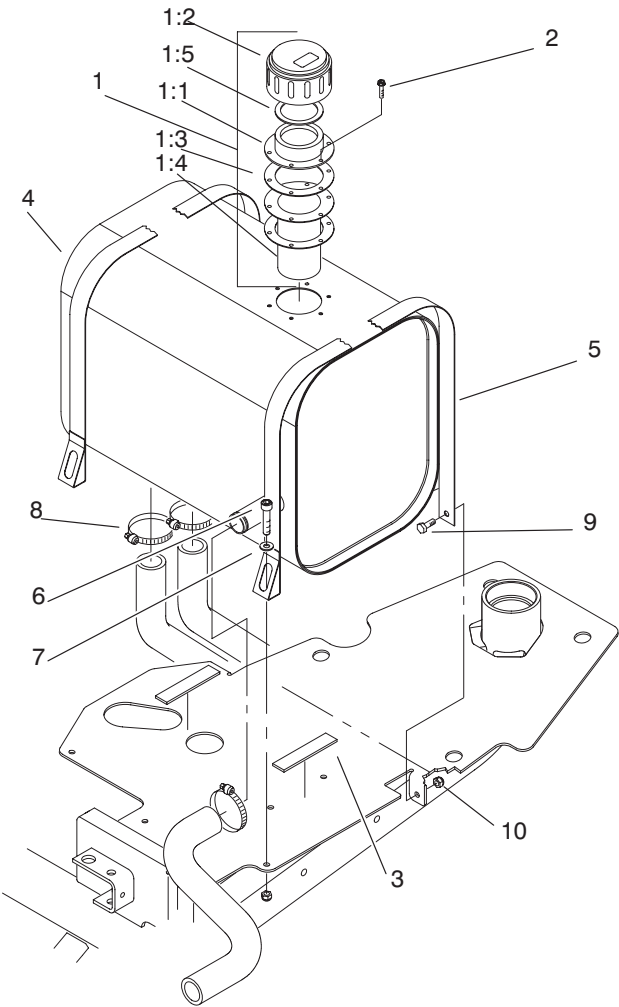

Sheet No.:16

Hydraulic Reservoir Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	62-2570	1	Filler Cap ASM				
1:1	353-961	1	Flange				
1:2	353-962	1	Cap Assembly				
1:3	353-963	2	Gasket				
1:4	62-2610	1	Filler Cap Strainer				
1:5	76-1720	1	Gasket - Filler Cap				
2	32144-34	6	Screw-Forming, Thread				
3	95-5951	2	Strip - Seal				
4	95-7118	1	Tank - Hyd				
5	27-2400	2	Reservoir Strap ASM				
6	3274-19	2	Screw-HSH				
7	3256-22	2	Washer-Flat				
8	2412-34	3	Clamp-Hose				
9	321-3	2	Screw-HH				
10	3296-16	6	Nut-Lock, NI				

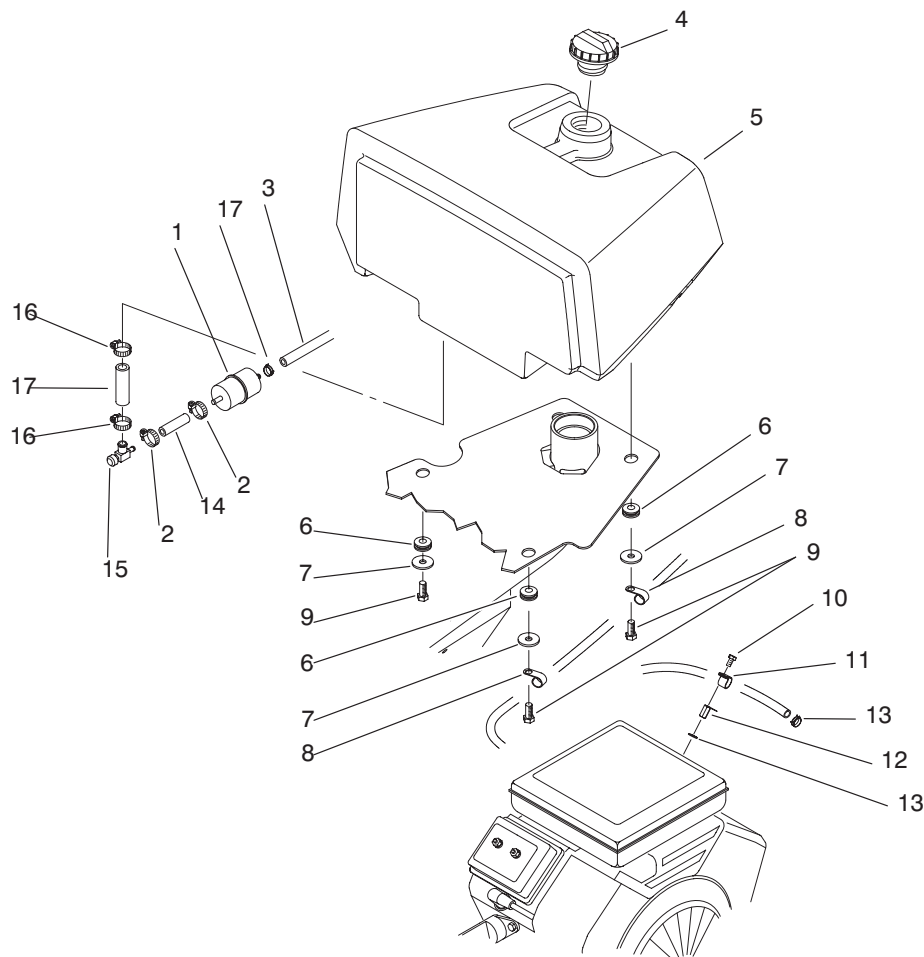

Sheet No.:17

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	94-2690	1	Filter-Fuel
2	2412-108	2	Clamp-Worm
3	83-2041	1	Hose-Fuel
4	93-7170	1	Cap-Fuel
5	92-7189	1	Tank - Gas
6	240-11	4	Grommet
7	63-8410	4	Washer
8	2412-41	3	Clamp
9	323-6	4	Screw-HH
10	33113-012	1	Screw-HH
11	2412-94	1	Clamp
12	83-2200	1	Nut
13	3256-63	1	Washer-Flat
14	83-2040	1	Hose - Gas Line
15	83-1390	1	Fitting - Fuel Shut-Off
16	2412-36	2	Clamp-Hose
17	56-2230	1	Hose-Fuel
18	2412-98	2	Clamp

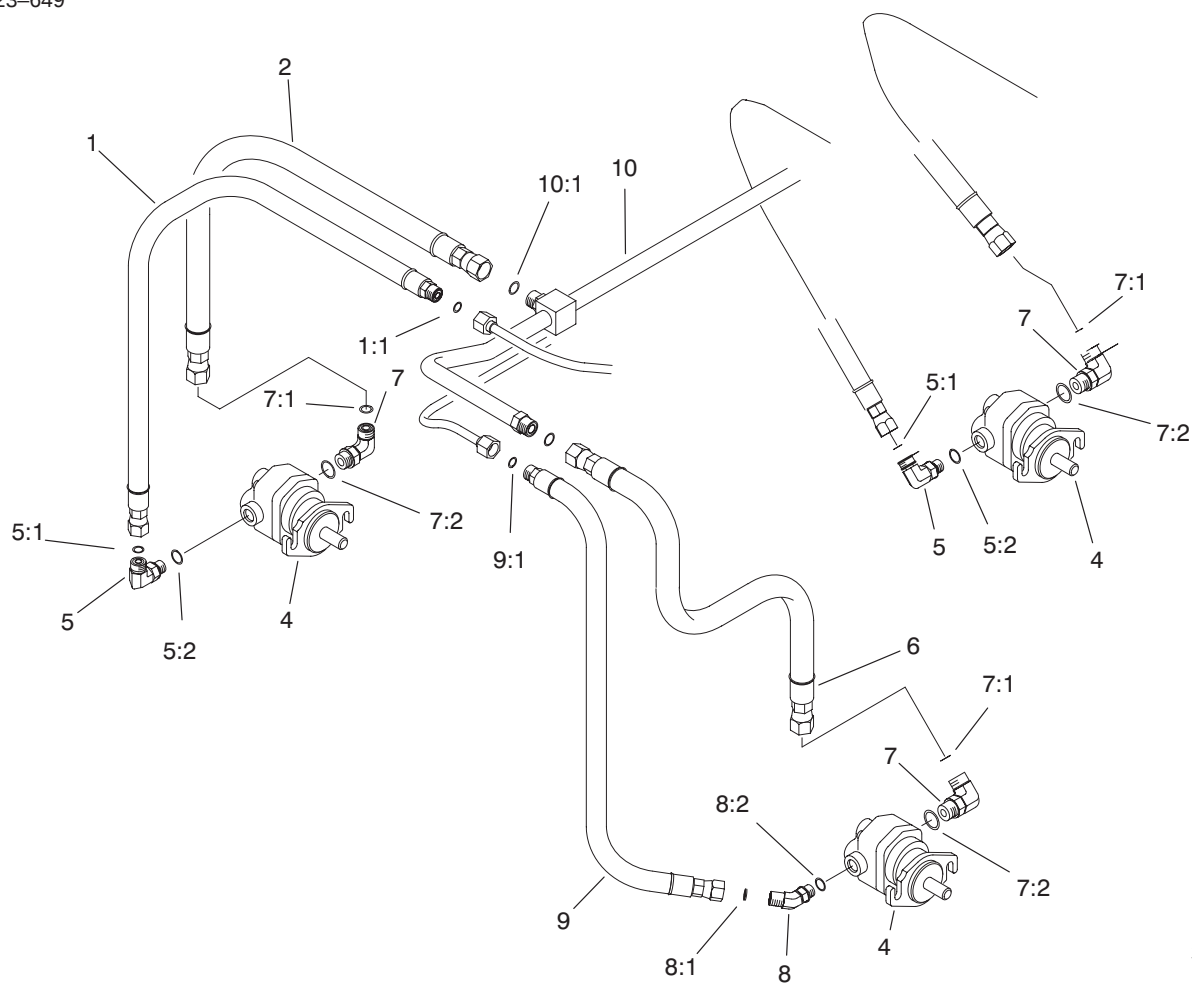


Sheet No.:18

T-3372

Real Motor Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	95-5984	1	Hose-Hydraulic
1:1	237-22	1	O-Ring
2	95-5985	1	Hose-Hydraulic
4	94-3506	3	Reel Motor
5	340-77	2	Fitting-Hyd. 90°
5:1	237-22	2	O-Ring
5:2	237-42	2	O-Ring
6	95-5989	1	Hose-Hydraulic
7	340-98	3	Fitting-90°
7:1	237-30	3	O-Ring
7:2	237-79	3	O-Ring
8	340-87	1	Fitting-Hyd., 45°
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-5988	1	Hose-Hydraulic
9:1	237-22	1	O-Ring
10:1	237-30	2	O-Ring
28	93-6691	3	Decal-Bolt, Eccentric
30	37-8130	3	Grass Basket
31	65-8320	1	Gauge Bar
32	32122-22	1	Screw-HH
33	3219-14	1	Nut-Hex
34	3290-379	3	Tie-Cable
35	3290-378	1	Tie-Cable

Ref. No.	Part No.	Qty.	Description

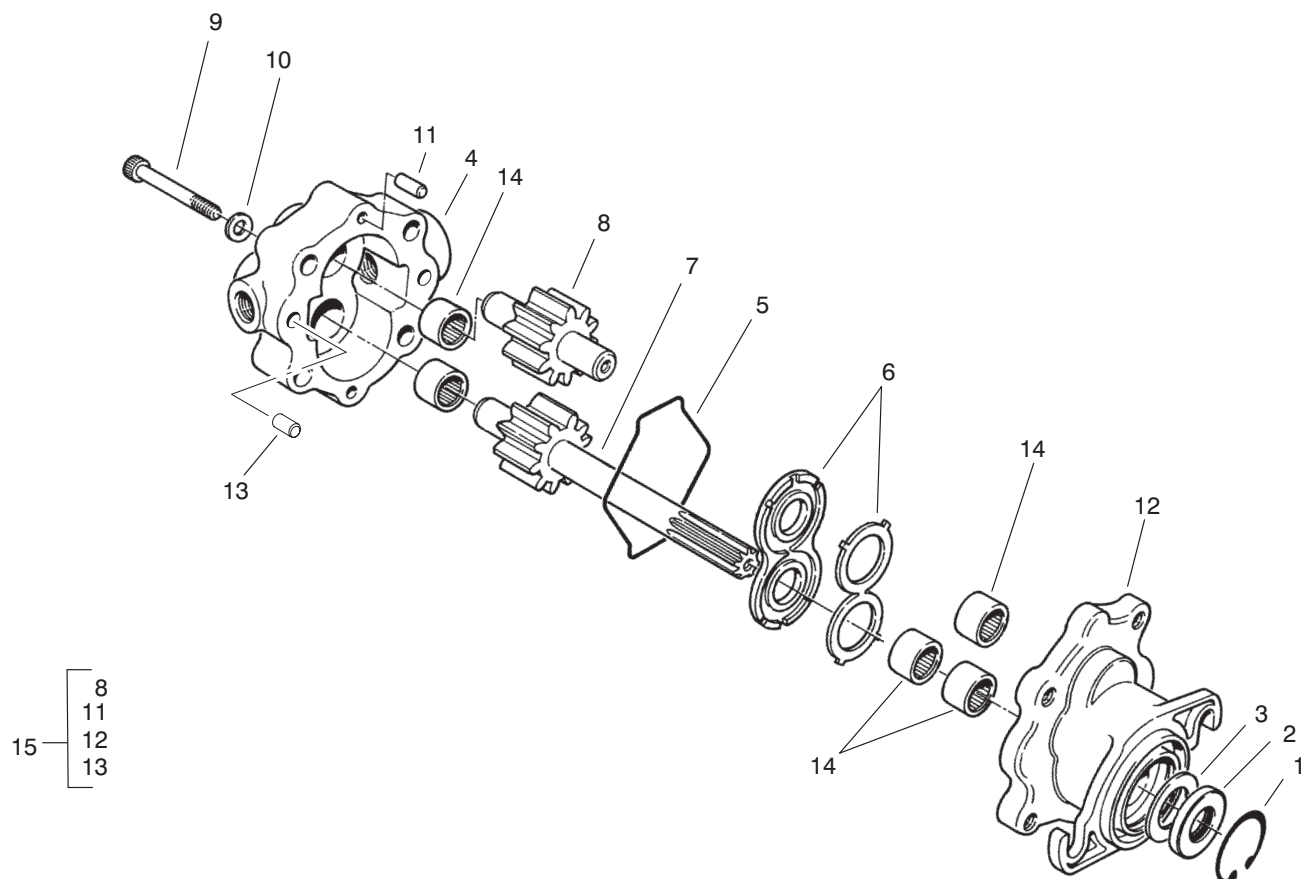

Note: Parts Not Listed
In Parts List Are Not
Serviced Separately.

Sheet No.: A5
T-3373

Reel Motor No. 94-3506

Ref. No.	Part No.	Qty.	Description
1	32151-41	3	Snap Ring
3	353-590	3	Spacer
4	94-3507	3	Cover ASM
5	354-46	3	Seal Ring
6	74-3810	3	Load Plate ASM
7	94-3508	3	Driveshaft & Gear ASM
8	94-3509	3	Shaft & Gear ASM – Idler
9	354-50	12	Screw – Hex Socket Hd
10	354-51	12	Washer
11	353-599	6	Dowel Pin
12	92-8795	3	Body ASM
13	92-8796	6	Pin – Dowel
15	92-8863	3	Repair Kit

Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
1	98-2163	1	Wire Harness – Main
3	98-2161	1	Wire ASM
4	95-7144	1	Cable ASM – Positive
*4:2	28-8080	1	Boot-Terminal
*4:3	83-2430	1	Boot – Terminal
5	98-0604	1	Cable Assy – Negative
*5:2	98-0603	1	Boot – Terminal
6	83-1150	1	Wire ASM-engine Ground


Ref. No.	Part No.	Qty.	Description

28

HYDRAULIC SCHEMATIC

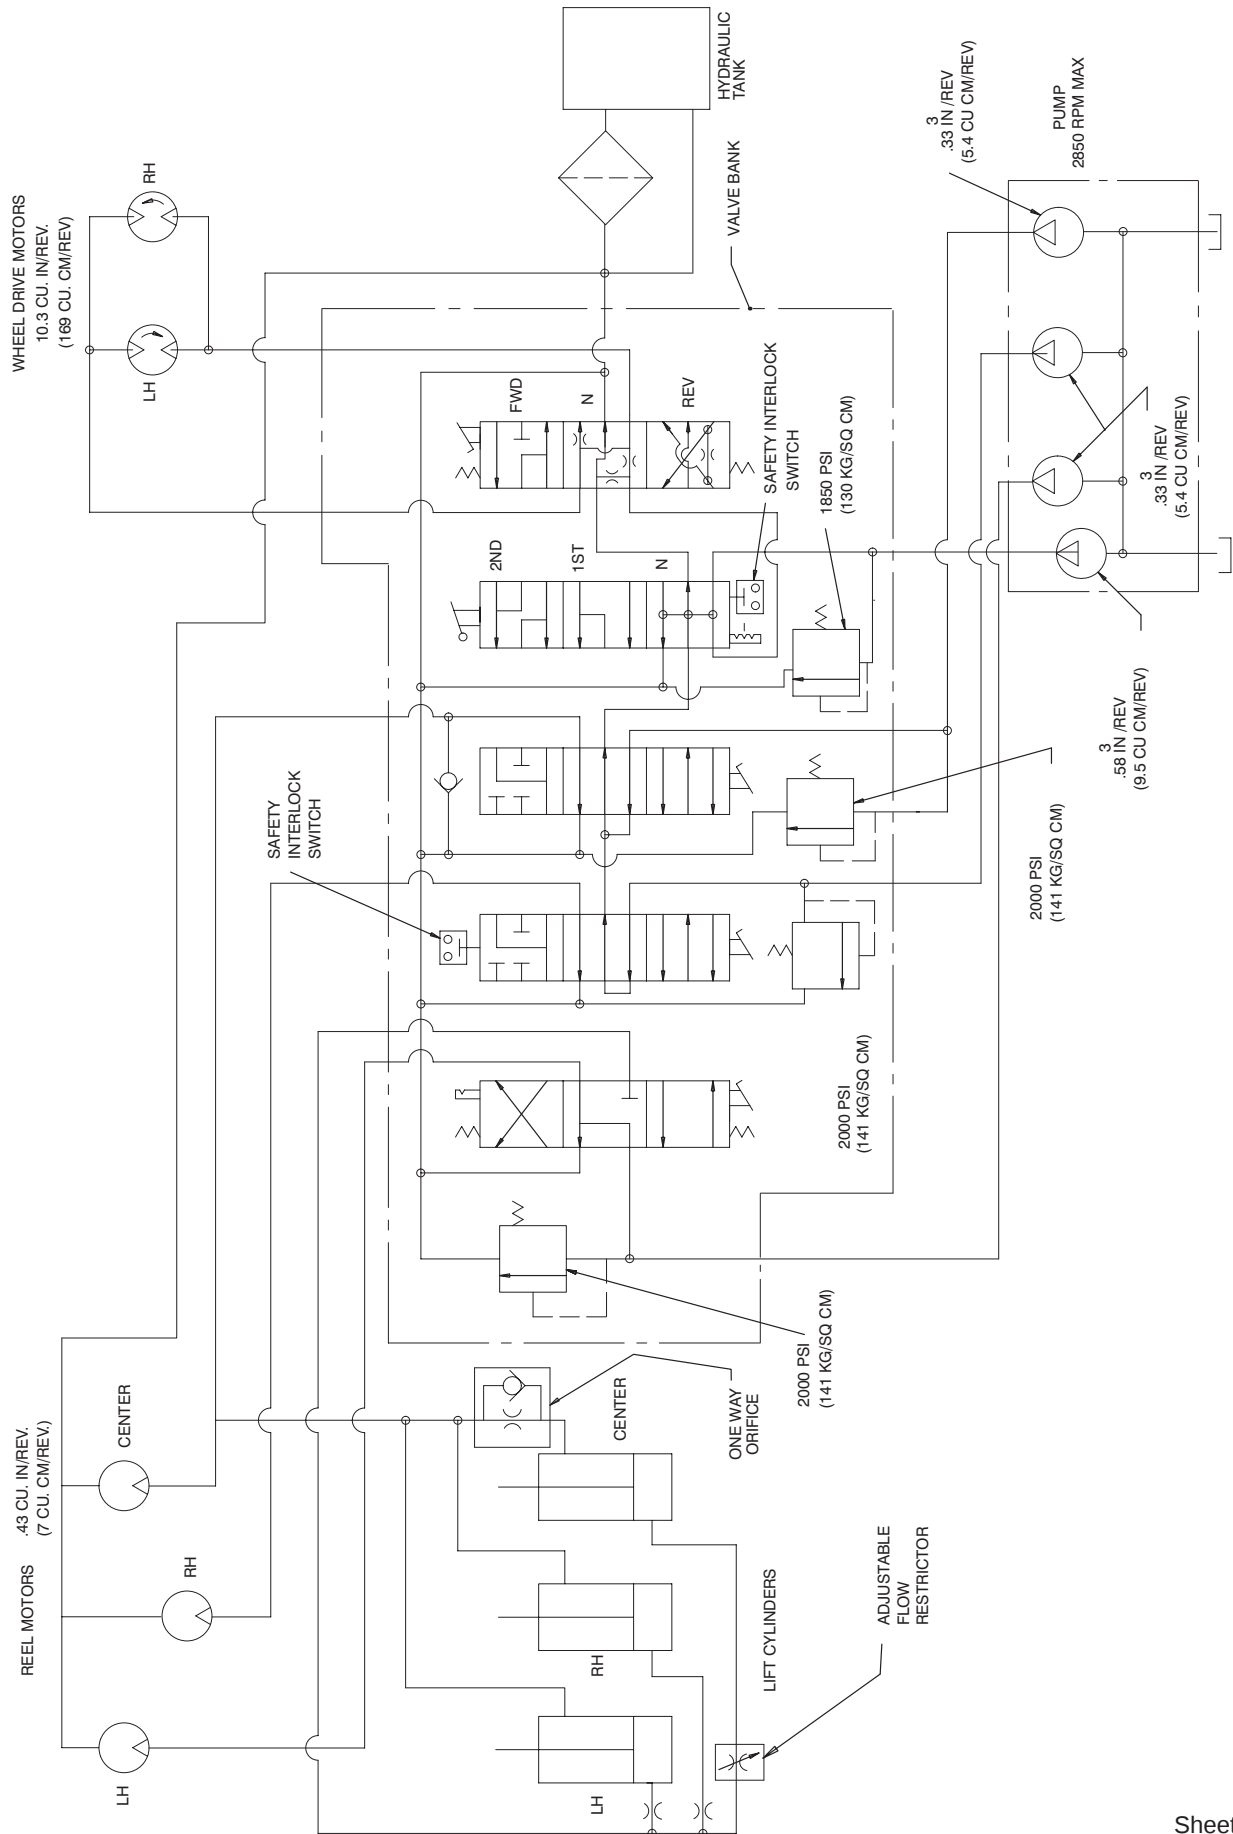

55	6 13 19	58	40 49	59	1 4 50	60	6 8 12 19	63	24 26
----	---------------	----	----------	----	--------------	----	--------------------	----	----------

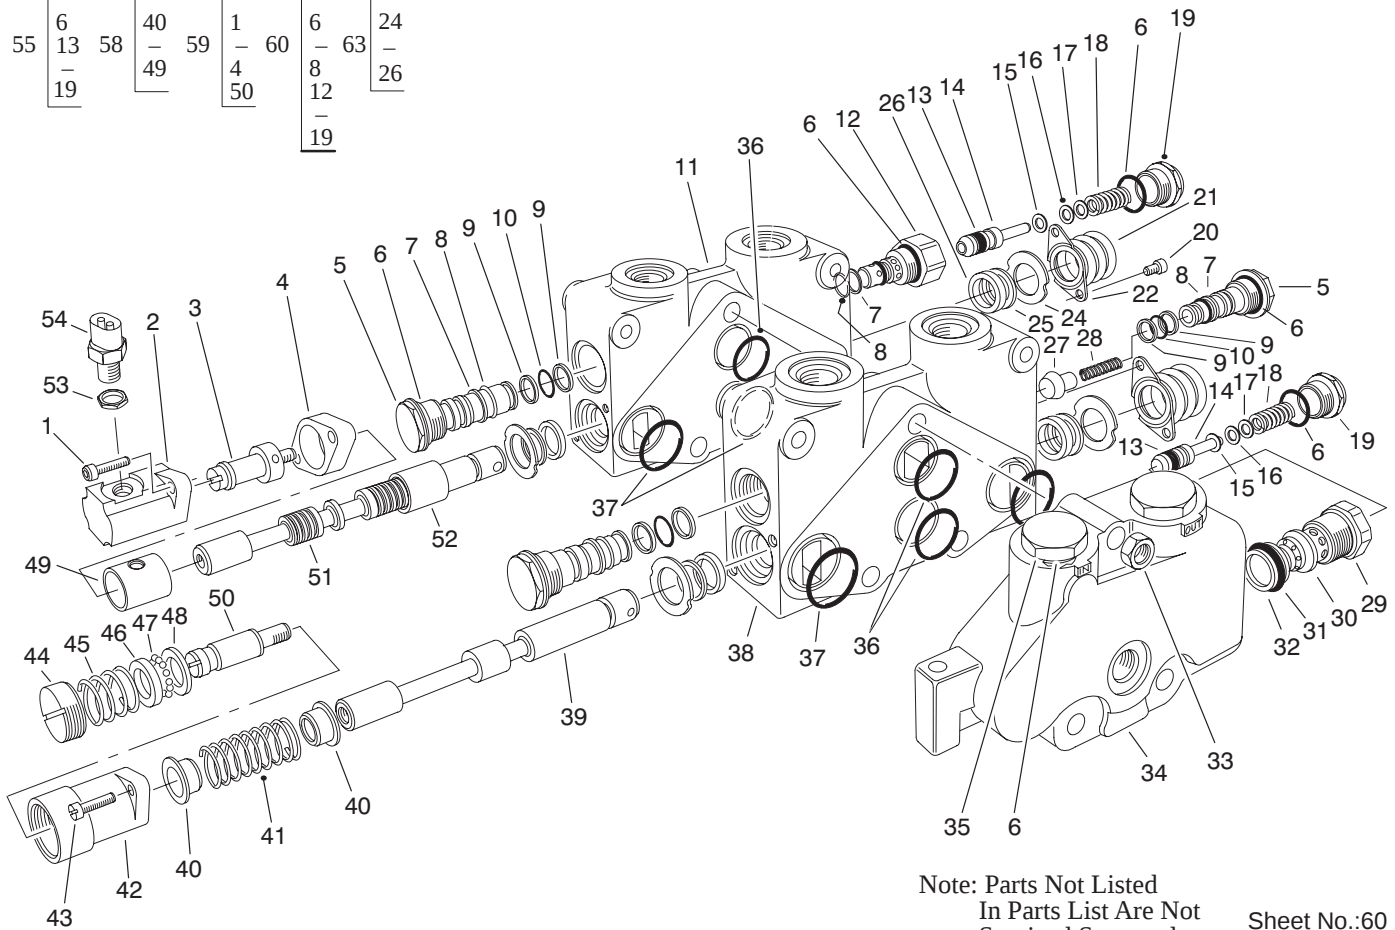

Note: Parts Not Listed
In Parts List Are Not
Serviced Separately.


Sheet No.:60

T-1318

Control Valve Assembly No. 84- 2203 (Sections 1 & 2)

Ref. No.	Part No.	Qty.	Description
1	3274-70	2	Screw-HSH
2	353-727	1	Special Bonnet
3	353-729	1	Detent Stud
4	353-733	1	Bonnet Spacer
5	353-481	3	Lift Check ASM
6	237-54	8	O Ring
7	353-306	4	Backup Washer
8	353-305	4	O Ring
9	353-303	6	Backup Washer
10	353-302	3	O Ring
12	353-851	1	Relief Body
13	353-392	2	Piston Ring
14	353-531	2	Poppet & Ring ASM
15	353-328	2	.040 Shim
16	353-329	2	.020 Shim
17	353-330	2	.010 Shim
18	353-855	2	Spring
19	353-334	2	Relief Cap
20	3274-52	4	Screw-HSH
21	353-575	2	Boot
22	93-3651	2	Retainer - Boot
24	92-2547	4	Seal - Retainer
25	92-2546	4	Wiper - Seal
26	353-957	4	Seal Cup
27	353-301	1	Poppet Lift Check
28	353-304	1	Lift Check Spring

Ref. No.	Part No.	Qty.	Description
29	353-331	1	O Ring Seal
30	353-760	1	Body Relief
31	353-758	1	O-Ring Seal
32	353-952	1	Back-Up Seal
33	3217-7	3	Nut-Hex
34	353-772	1	Left Cover
35	353-721	2	Plug
40	353-417	2	Stop Collar
41	99-6850	1	Spring-Compression
42	99-8181	1	Bonnet-R Det
43	3274-15	2	Screw-HSH
44	353-763	1	Adj Cap
45	99-1475	1	Spring - Compression
46	42-2680	1	Ball Race
47	52-5880	12	Detent Ball
48	354-29	1	Trust Plate
49	353-728	1	Sleeve
50	353-762	1	Spud - Det Out
52	353-732	1	Detent Sleeve
53	38-0410	1	Hex Nut
54	83-1890	1	Switch-Ball
55	353-766	1	Relief Cart
56	99-8182	1	Sec 1-V20c Spl ASM
57	353-837	1	Section #2
58	99-8180	1	Positioner-R Det O/Asy

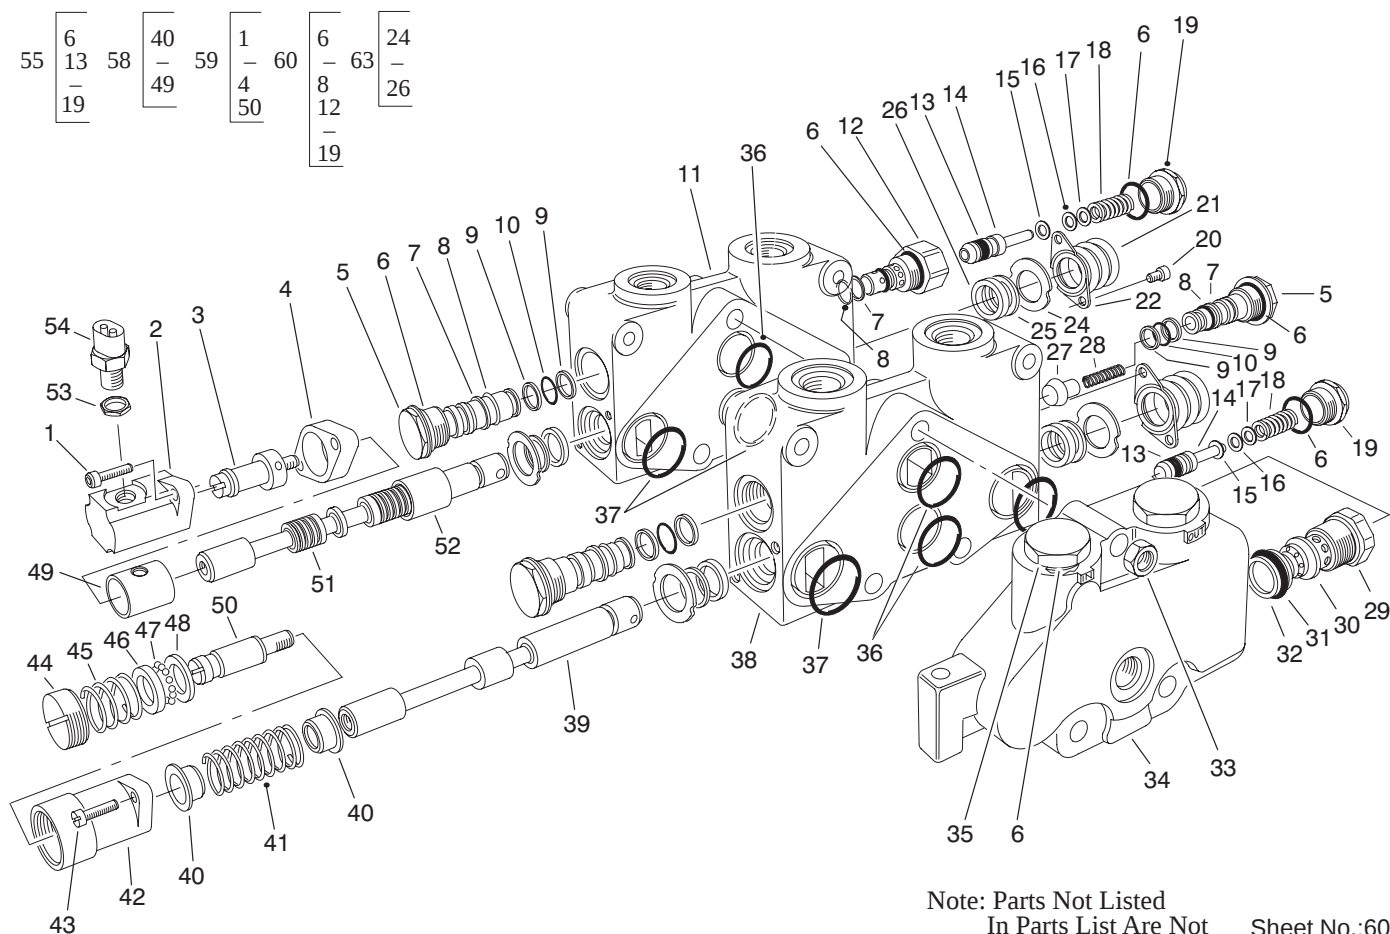


Note: Parts Not Listed
In Parts List Are Not
Serviced Seperately.

Sheet No.:60
T-1318

Control Valve Assembly No. 84- 2203 (Sections 1 & 2) (Continued)

Ref. No.	Part No.	Qty.	Description
59	353-839	1	Bonnet ASM
60	353-642	2	Relief Cartridge
61	93-3652	2	Dust Boot
62	353-835	1	Section Seal
63	92-2548	1	Kit – Spool Set
64	92-2545	1	Kit – Spool Set (Entire Valve Set)

Ref. No.	Part No.	Qty.	Description

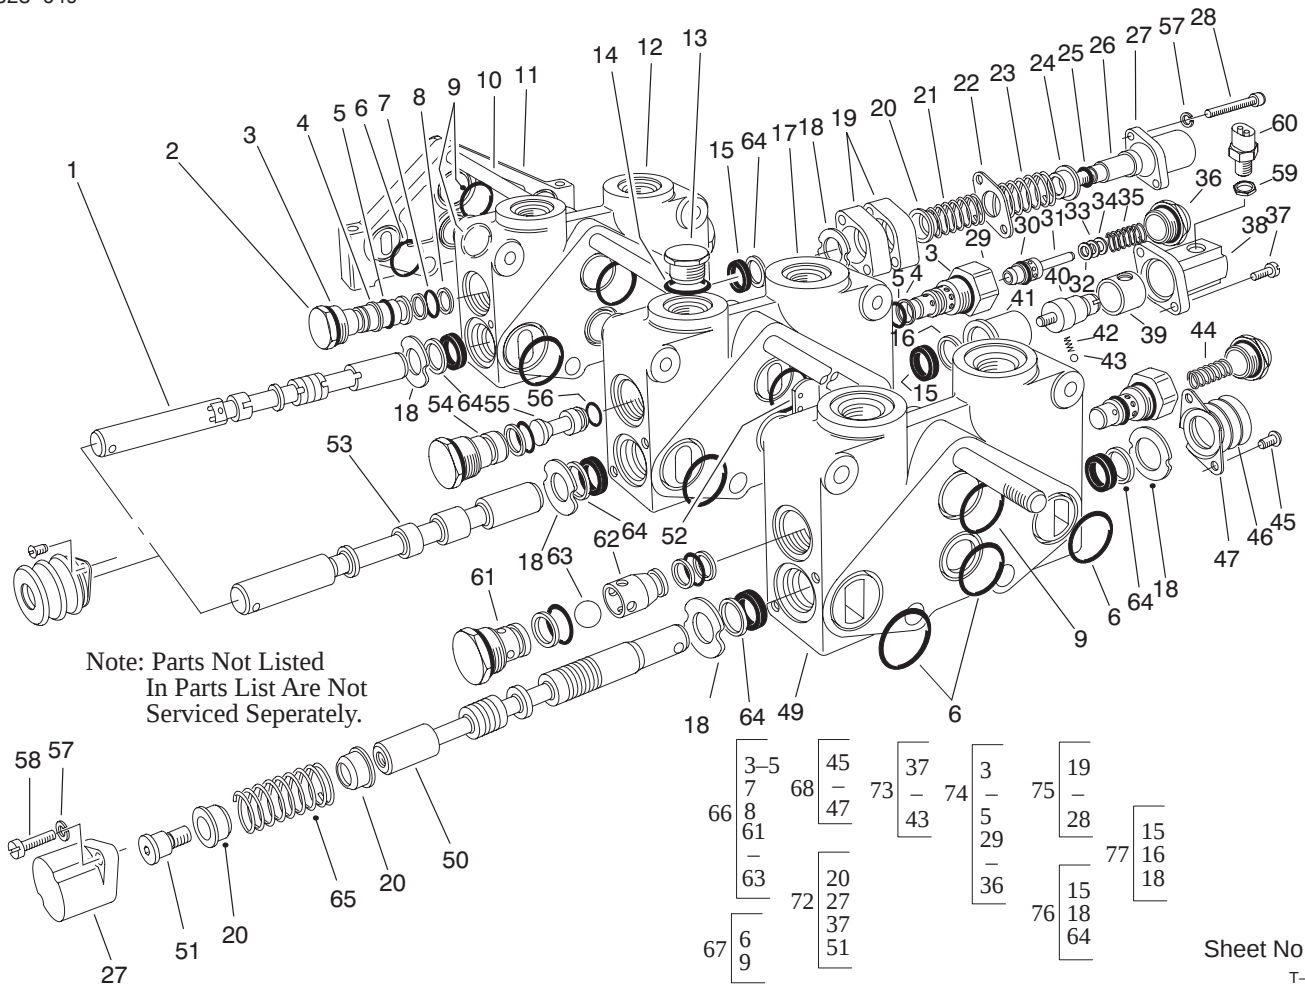

Sheet No.:61

T-1319


Control Valve Assembly No. 84-2203 (Sections 3 Thru 5)

Ref. No.	Part No.	Qty.	Description
1	94-5434	1	Spool
2	353-481	3	Lift Check ASM
3	237-54	6	O Ring
4	353-306	5	Backup Washer
5	353-305	5	O Ring
7	353-302	3	O Ring
8	353-303	6	Backup Washer
10	353-853	3	Bolt
11	353-668	1	Cover Plate
13	353-550	1	Plug-Hydraulic
14	353-848	1	O-Ring
15	353-957	6	Seal Cup
16	353-958	1	Washer
18	92-2547	5	Seal - Retainer
19	353-733	2	Bonnet Spacer
20	353-417	3	Stop Collar
21	353-831	1	Spring
22	353-529	1	Plate - Seal Retainer
23	92-3148	1	Spring - Traction
24	353-808	1	Spring Collar
25	353-830	1	O-Ring Seal
26	94-4248	1	Spool Collar
27	99-6895	2	Bonnet
28	354-28	2	Hex Socket Screw
29	353-851	2	Relief Body
30	353-392	2	Piston Ring

Ref. No.	Part No.	Qty.	Description
31	353-531	2	Poppet & Ring ASM
32	353-328	2	.040 Shim
33	353-329	2	.020 Shim
34	353-330	2	.010 Shim
35	353-398	1	Spring
36	353-334	2	Relief Cap
37	52-5900	4	Screw
38	353-847	1	Bonnet
39	353-849	1	Sleeve
40	353-846	1	Spud
41	353-845	1	Detent Sleeve
42	353-730	1	Spring
43	353-731	1	1/4 Dia Ball
44	353-855	1	Spring
45	3274-52	6	Screw-HSH
46	353-575	3	Boot
47	93-3651	3	Retainer - Boot
51	52-5860	1	Spool Collar
52	354-122	1	Spool #4
54	353-953	1	Plug ASM
55	353-844	1	Plug
56	353-850	1	O-Ring Seal
57	3253-3	4	Washer-Lock/Sp
58	3274-84	4	Screw-HSH
59	38-0410	1	Hex Nut
60	83-1890	1	Switch-Ball

SPECIAL TOOLS


REEL MOTOR SEAL INSTALLATION TOOLS

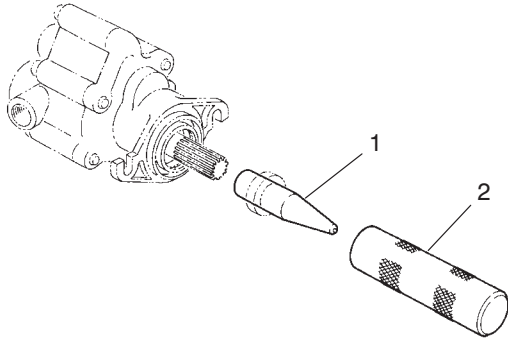

T-0727

Ref. No.	Part No.	Description	No. Used
1	TOR491430	Protector – Seal	1
2	TOR491450	Installer – Seal	1


BED KNIFE SCREW TOOL NO. TOR510880

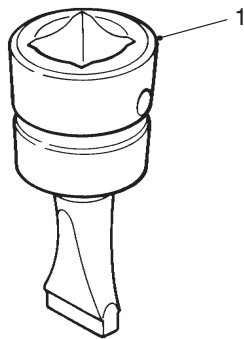

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bed Knife Screw	1


BEARING REPLACEMENT TOOL KIT NO. TOR238900

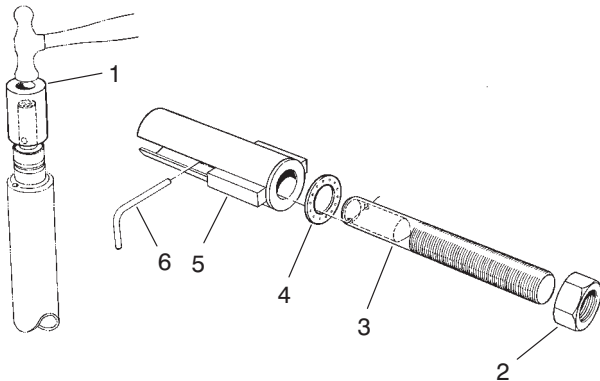

T-0730

Ref. No.	Part No.	Description	No. Used
1	23-8880	Driver – Bearing	2
2	3219-18	Nut – Hex.	1
3	23-8840	Puller – Bolt	1
4	22-6090	Washer – Thrust	1
5	23-8850	Tube – Support	1
6	23-8860	Pin – Bearing Rplcmnt.	1

BACKLAPPING BRUSH ASSEMBLY NO. 29-9100

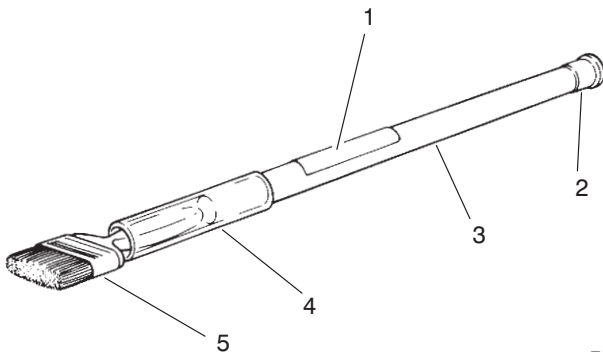


T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1

Note: Special tools may be ordered from: Owatonna Tool Company 2013 4th St. NW Owatonna, MN 55060

SPECIAL TOOLS (Continued)


ALIGNMENT TOOL NO. TOR200120

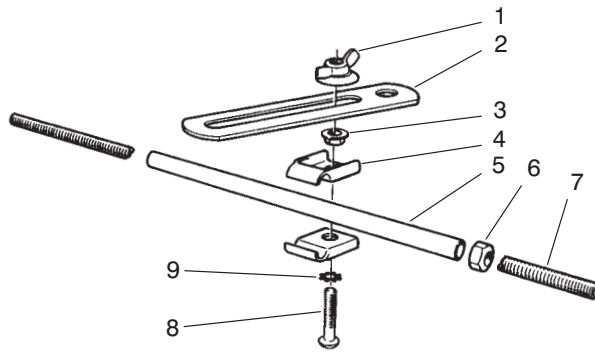

T-0732

Ref. No.	Part No.	Description	No. Used
1	3-4808	Nut – Wing	1
2	20-0110	Bracket – Alignment	1
3	32128-20	Nut – Lock, Flange	1
4	3-6657	Clip – Skid	2
5	20-0070	Tube	1
6	3219-2	Nut – Hex.	1
7	20-0080	Rod	1
8	32122-35	Screw – Truss Head	1
9	3255-8	Washer – Lock, Int. Tooth	1

Note: Special tools may be ordered from: Owatonna Tool Company
2013 4th St. NW
Owatonna, MN 55060

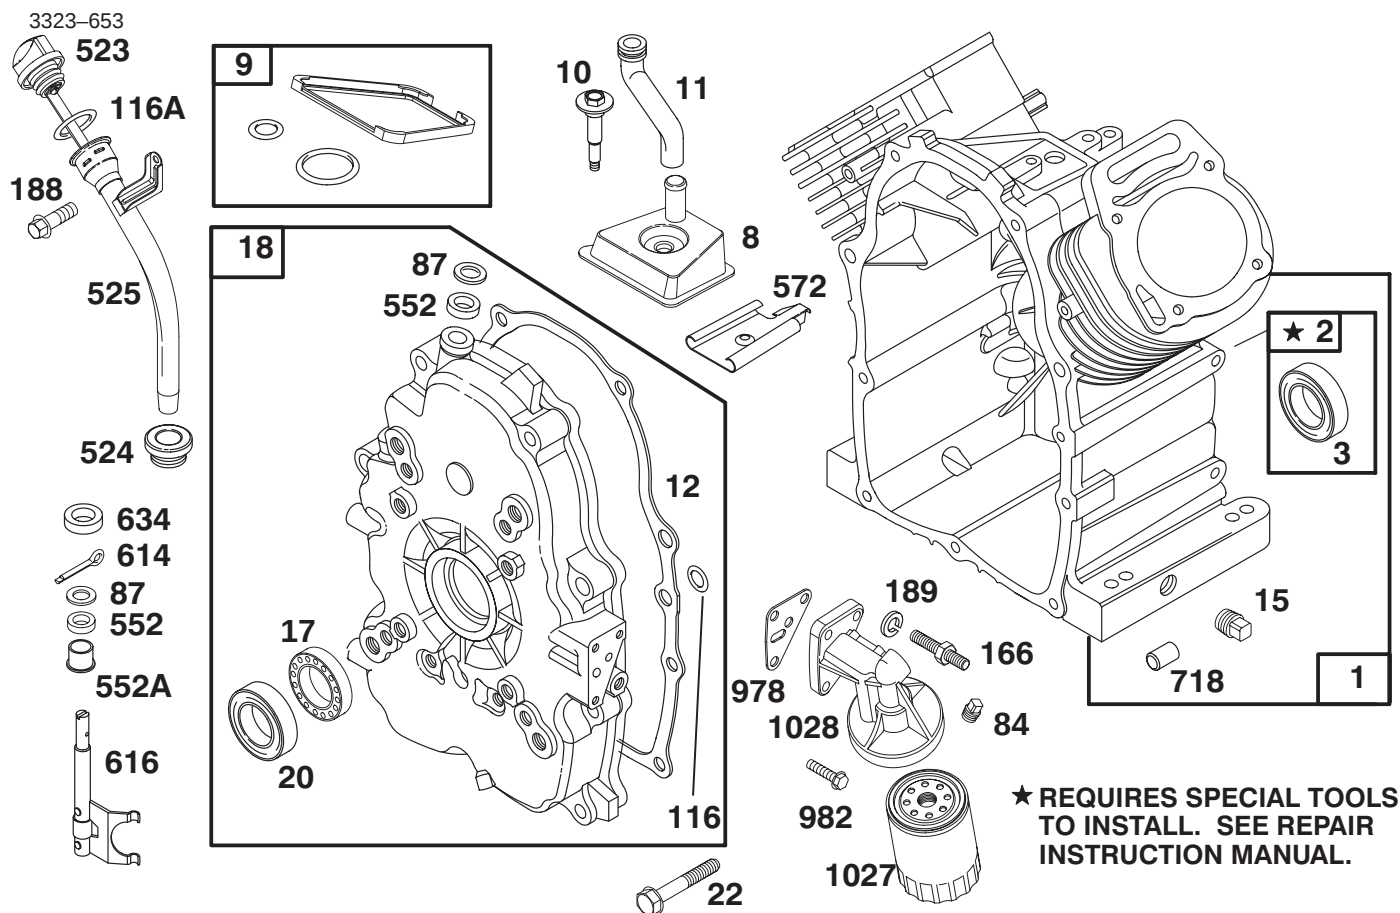


Assemblies include all parts shown in frames.

Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
1	808440	1	Cylinder Assembly
2	808534	1	Bearing-Cylinder
*3	805101	1	Seal - Oil
8	807795	1	Breather Assembly
*9	807688	1	Gasket - Breather
10	805751	1	Screw - Hex. Washer Head
11	806083	1	Tube - Breather
12	806190	1	Gasket - Crankcase Cover
15	805048	1	Plug - Oil Drain
17	805754	1	Bearing - Ball
18	808502	1	Cover Assy. - Crankcase
*20	805049	1	Seal - Oil
22	805696	1	Screw - Crankcase Cover
84	91488	1	Plug - Pipe
*87	805054	1	Seal - Governor Shaft
116	806191	1	O-Ring (Crankcase Cover)
*116A	805386	1	O Ring (Dipstick)
166	805073	1	Stud - Oil Filter Adapter
188	805247	1	Screw - Hex. Head
189	805449	1	Lockwasher

Ref. No.	Part No.	Qty.	Description
523	807977	1	Dipstick
*524	281370	1	Seal - Fill Tube
525	807584	1	Tube - Oil Fill
552	805412	1	Bushing - Governor Shaft
552A	805413	1	Bushing - Governor Shaft
572	805197	1	Baffle - Breather
614	806096	1	Pin - Cotter
616	807596	1	Fork - Governor
634	805416	1	Washer - Governor Shaft
718	805103	1	Dowel - Crankcase
*978	805250	1	Gasket - Oil Filter Adapter
982	805030	1	Screw
1027	492932	1	Filter - Oil
1028	808325	1	Adapter - Oil Filter
1058	273685	1	Owner's Manual

*Included in Gasket Set - Part No. 808390.

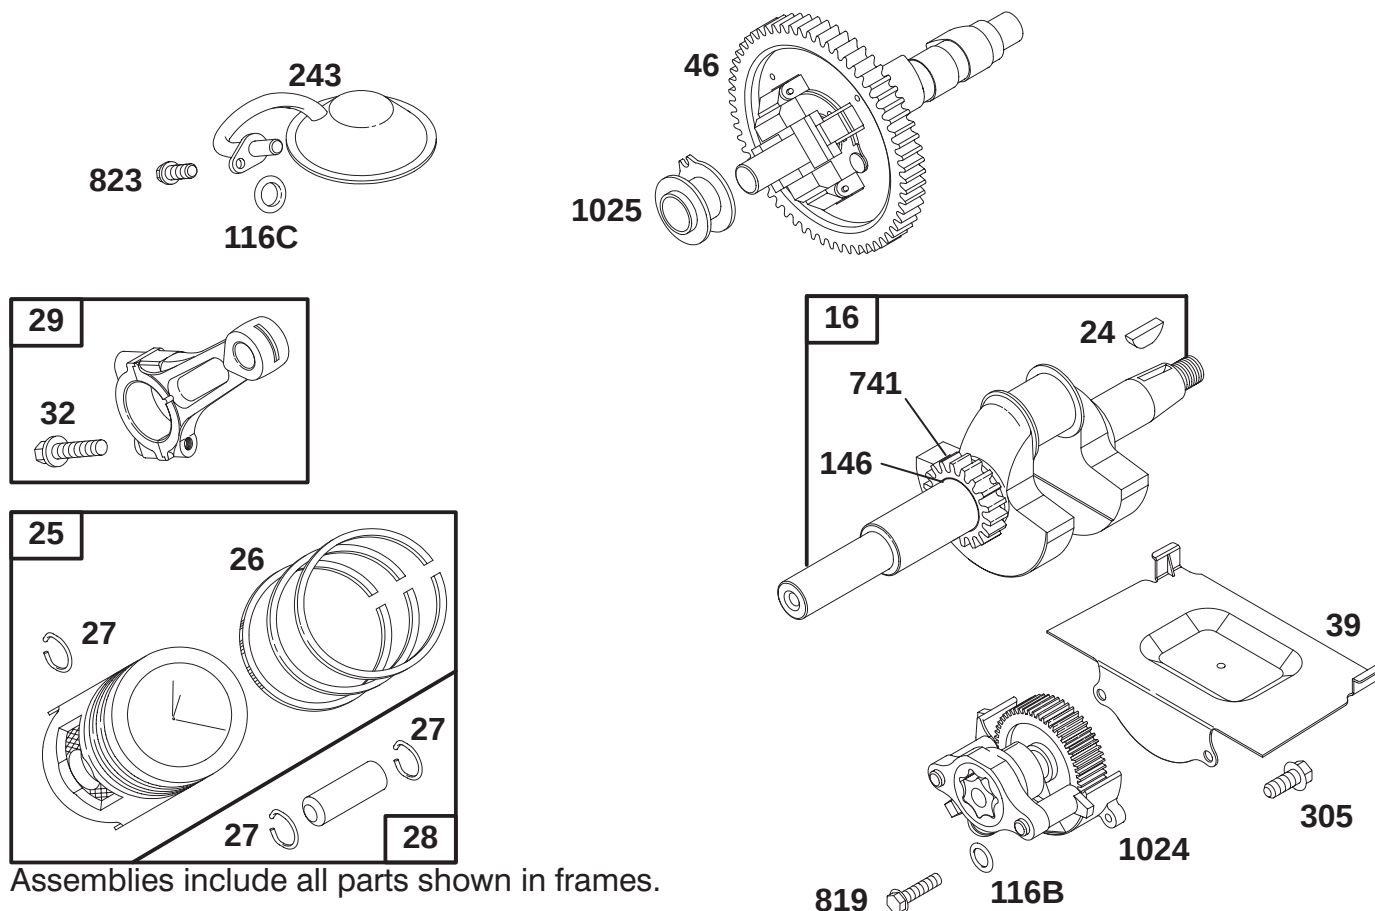


Engine Briggs & Stratton Model 303447–1179–E1

Ref. No.	Part No.	Qty.	Description
16	808417	1	Crankshaft
24	806066	1	Key – Flywheel
25	807619	1	Piston Assembly (Standard)
	807807	1	Piston Assembly (.010 O.S.)
	807809	1	Piston Assembly (.020 O.S.)
	807811	1	Piston Assembly (.030 O.S.)
26	807620	1	Ring Set – Piston (Standard)
	807808	1	Ring Set – Piston (.010 O.S.)
	807810	1	Ring Set – Piston (.020 O.S.)
	807812	1	Ring Set – Piston (.030 O.S.)
27	805099	1	Lock – Piston Pin
28	807621	1	Piston Pin Assembly
29	807900	1	Connecting Rod Assembly
	807809	1	Rod – Connecting (.020 U.S.)
32	805395	1	Screw – Connecting Rod

Ref. No.	Part No.	Qty.	Description
39	805654	1	Deflector – Oil
46	807542	1	Gear – Cam
*116B	805058	1	O–Ring (Oil Pump)
*116C	805316	1	O–Ring (Pick – Up Tube)
146	94196	1	Key – Timing
243	807598	1	Screen – Oil Pump Pick–Up
305	805406	1	Screw
741	805984	1	Gear – Timing
819	805057	1	Screw
823	805317	1	Screw – Mounting
1024	807644	1	Oil Pump Assembly
1025	805313	1	Slider – Governor

*Included in Gasket Set – Part No. 808390.

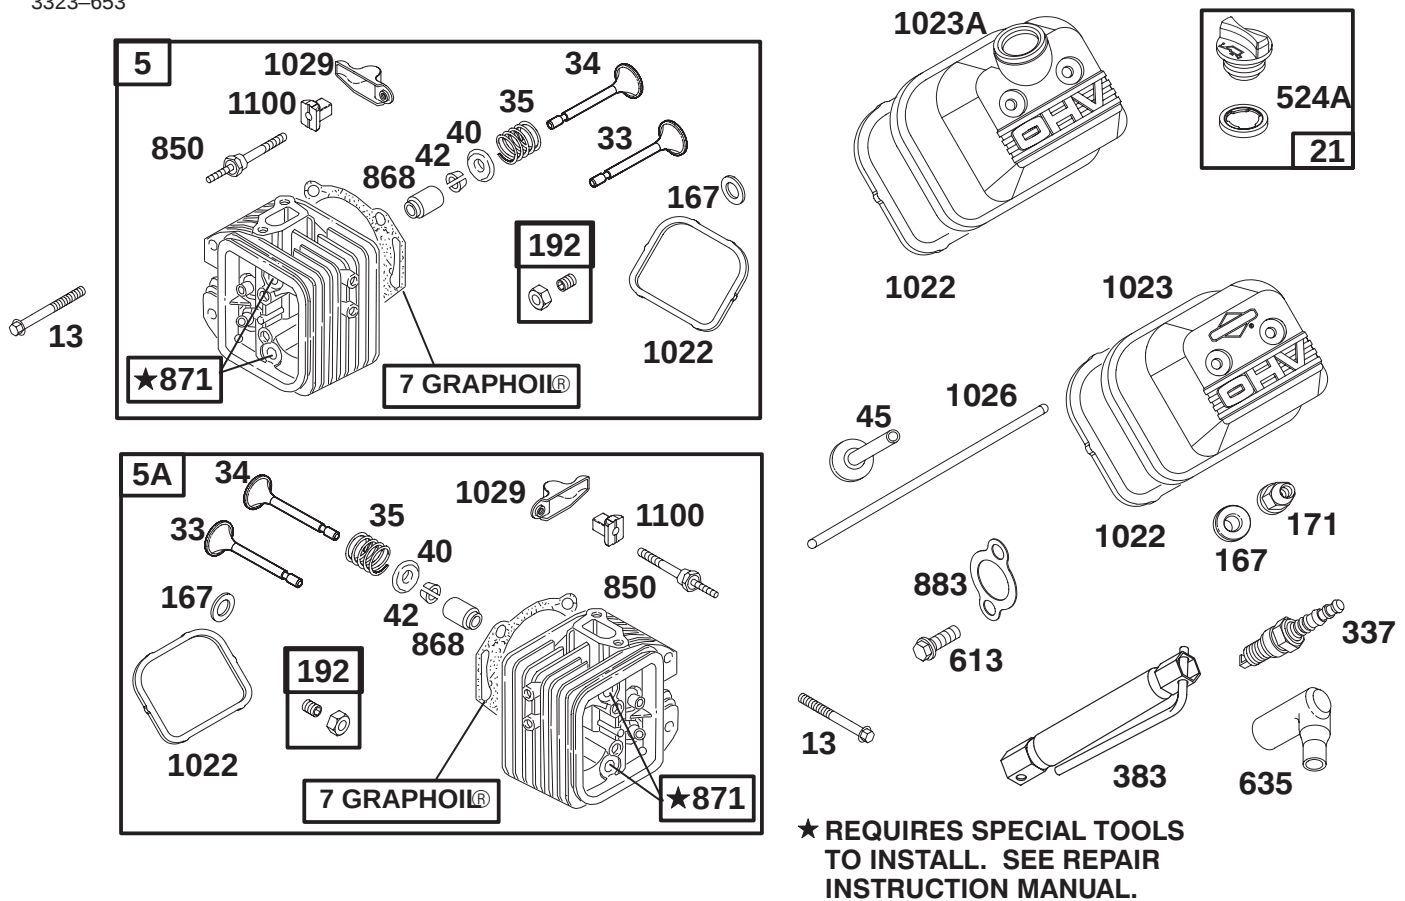

Assemblies include all parts shown in frames.


Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
5	808381	1	Head – Cylinder (Cyl. #1)
5A	808382	1	Head – Cylinder (Cyl. #2)
*†7	806085	1	Gasket – Cylinder Head
13	805097	1	Screw – Cylinder Head
21	491832	1	Plug – Oil Filler
33	807681	1	Valve – Exhaust
34	807680	1	Valve – Intake
35	805937	1	Spring – Valve
40	805092	1	Retainer – Valve Spring
42	807683	1	Retainer – Valve
45	262679	1	Tappet – Valve
*†167	805420	1	Washer – Valve Cover
†171	805019	1	Nut – Nylock
192	807623	1	Screw – Valve Adjustment
337	496018	1	Plug – Spark
383	19374	1	Wrench – Spark Plug
*†524A	271983	1	Seal – Filler Plug
613	805158	1	Screw – Hex.
635	805529	1	Elbow – Spark Plug
868	805094	1	Seal – Valve Guide
871	805084	1	Guide – Valve
*†883	805024	1	Gasket – Exhaust

Ref. No.	Part No.	Qty.	Description
			Manifold
850	806037	1	Stud – Rocker Arm
*†1022	806039	1	Gasket – Valve Cover
1023	805100	1	Cover – Valve
1023A	808032	1	Cover – Valve
1026	805352	1	Rod – Push (Intake Valve) Note: 805617 Rod – Push (Exhaust Valve)
1029	806036	1	Arm – Rocker
1100	806038	1	Pivot – Rocker Arm

*Included in Gasket Set – Part No. 808390.

†Included in Valve Overhaul Kit – Part No. 808392.

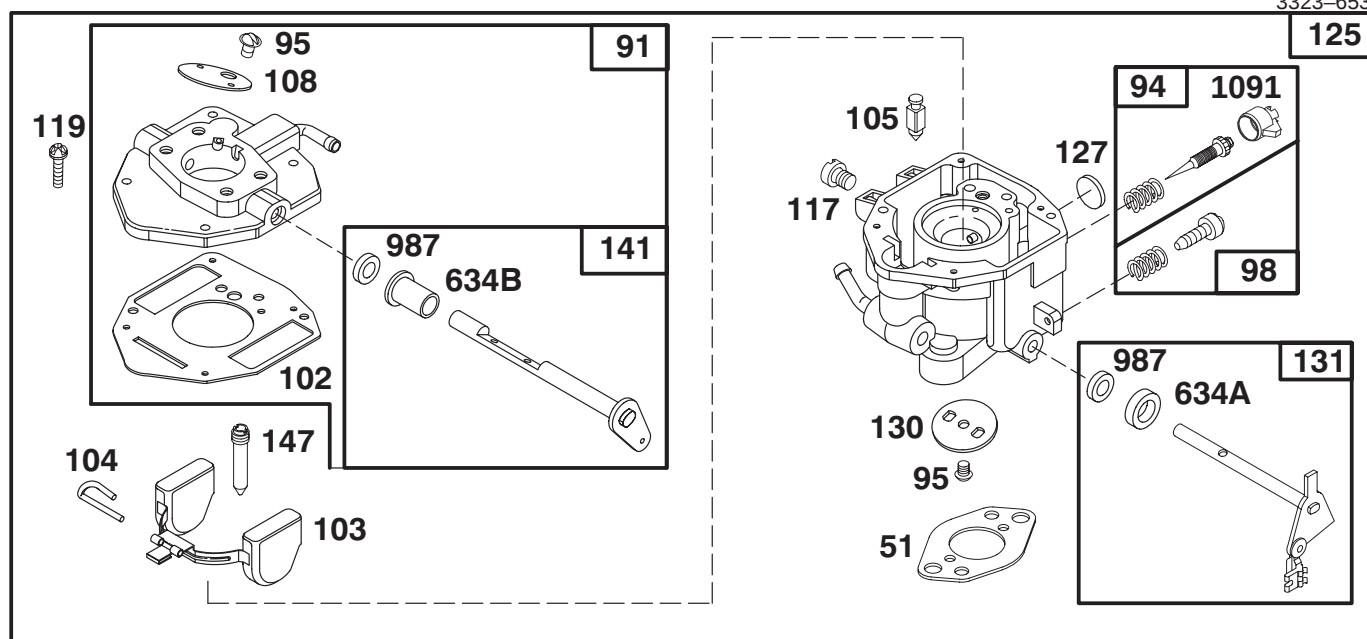

Assemblies include all parts shown in frames.


Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
*51	805700	1	Gasket – Carburetor Mtg.
91	807919	1	Body – Upper Carburetor
95	805538	1	Screw – Valve Mtg.
98	808177	1	Screw – Throttle Adj.
†102	805541	1	Gasket – Carburetor Body
103	805546	1	Float Assembly
†104	805545	1	Pin – Float Hinge
†105	805547	1	Valve – Fuel Inlet
108	805539	1	Valve – Choke
117	805852	1	Jet – Main
	805537	1	Jet – Main (High Altitude)
†94	808257	1	Valve – Idle Adjust
119	805540	1	Screw – Upper Body Mtg.
125	808251	1	Carburetor Assembly
†127	805559	1	Plug – Welch
130	805554	1	Valve – Throttle
131	807720	1	Shaft – Throttle
141	807722	1	Shaft – Choke
†147	805553	1	Jet – Slow Speed
187	296004	1	Line – Fuel (Cut to Required

Ref. No.	Part No.	Qty.	Description
307	805025	1	Screw – Hex. Hd. Length)
387	491922	1	Pump – Fuel
601	93053	1	Clamp – Hose
†634A	805557	1	Collar – Throttle
†634B	805543	1	Collar – Choke
788	807685	1	Bracket – Fuel Pump
823	805317	1	Screw – Mounting
918	393815	1	Line – Vacuum (Cut to Required Length)
947	807664	1	Solenoid
†987	805544	1	Seal – Shaft
1091	805862	1	Cap – Limiter

*Included in Gasket Set – Part No. 808390.

†Included in Carburetor Kit – Part No. 808273.

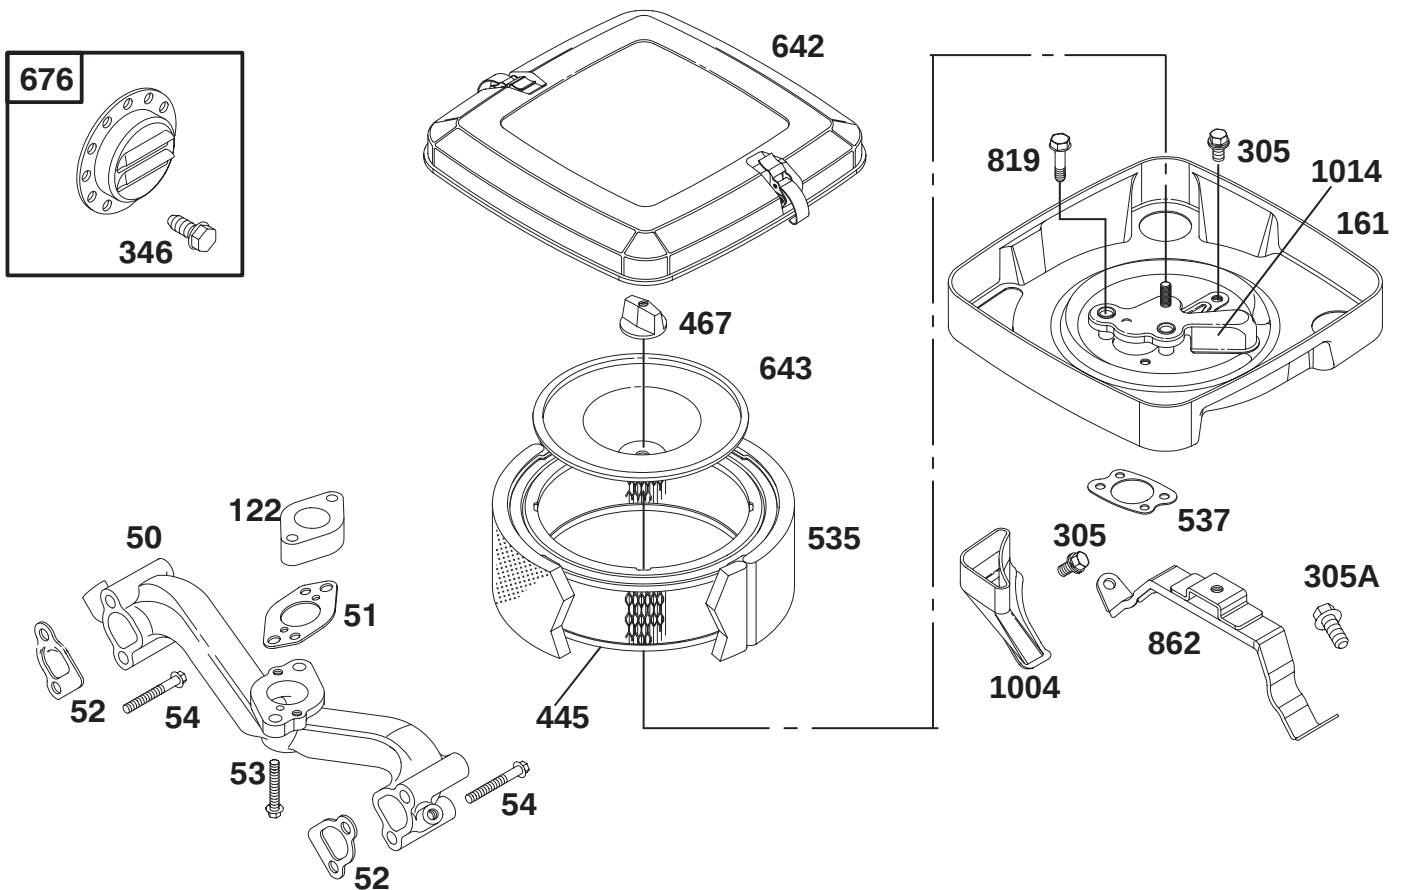


Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
50	805772	1	Manifold – Intake
*51	805700	1	Gasket – Carburetor Mtg.
*‡52	805023	1	Gasket – Intake Manifold
53	805466	1	Screw
54	805006	1	Screw
122	805328	1	Spacer – Carburetor
161	807857	1	Base – Air Cleaner
305	805406	1	Screw – Hex. (M6 x 12mm)
305A	805902	1	Screw – Hex. (M6 x 16mm)
346	94896	1	Screw – Hex.
445	394018	1	Filter– Air
467	491875	1	Knob – Air Cleaner
535	272490	1	Filter– Air
*537	805655	1	Gasket – Air Cleaner
642	807862	1	Cover – Air Cleaner
643	805631	1	Plate – Air Cleaner
676	397630	1	Deflector – Muffler
819	805057	1	Screw – Hex. Hd.
862	807796	1	Bracket – Air Cleaner
1004	805632	1	Strap – Cleaner Mounting

Ref. No.	Part No.	Qty.	Description
1014	807797	1	Shield – Carburetor

*Included in Gasket Set – Part No. 808390.


‡Included in Valve Overhaul Kit – Part No. 808392.

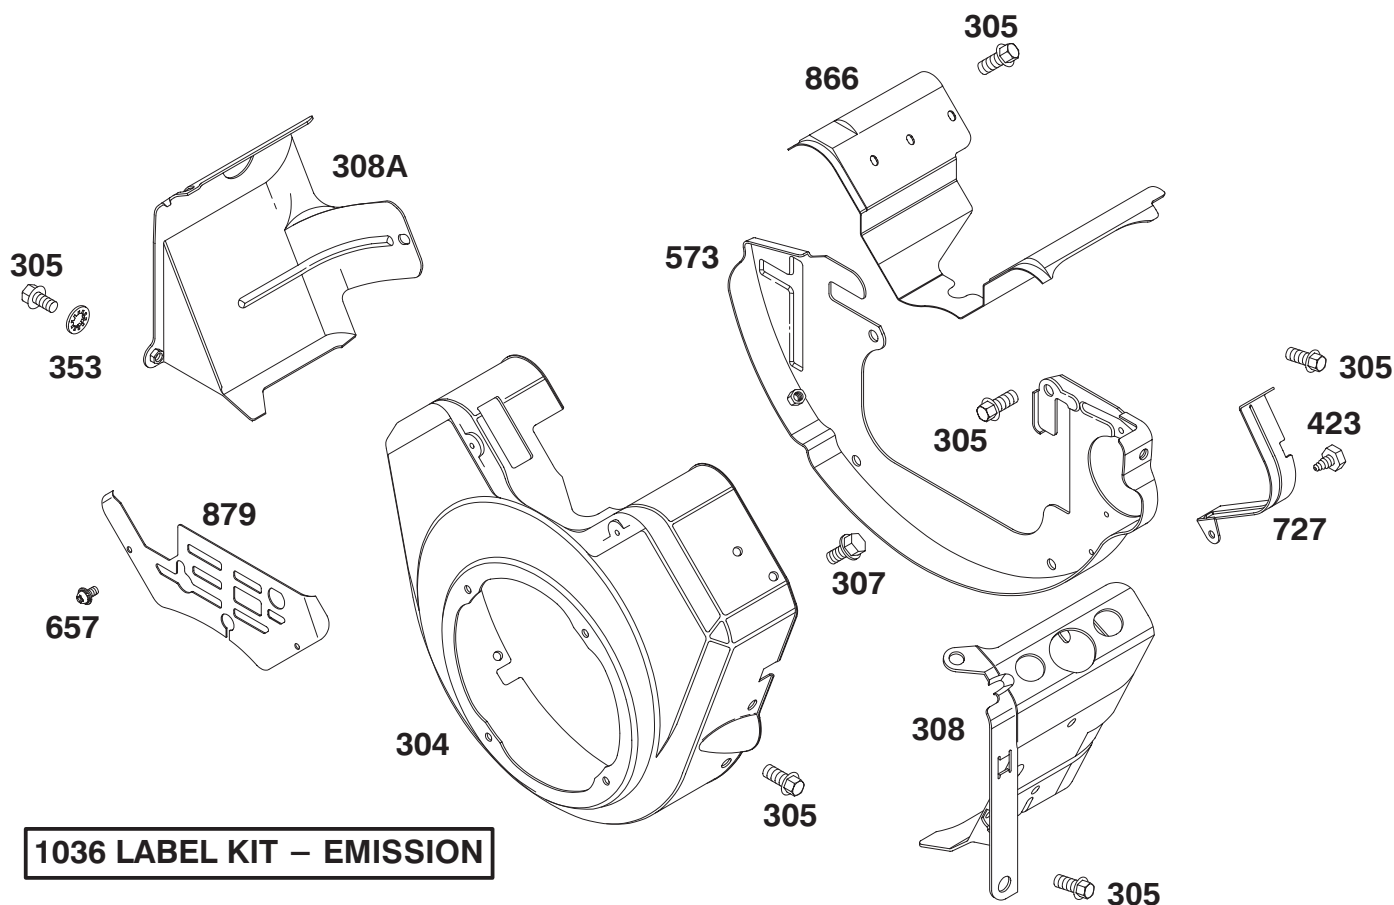

Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
304	807898	1	Housing – Blower
305	805406	1	Screw – Hex. Head
307	805025	1	Screw – Hex. Head
308	808309	1	Cover – Air Guide (Cyl. #1)
308A	808098	1	Cover – Air Guide (Cyl. #2)
353A	806101	1	Washer – Lock
423	805260	1	Screw – Hex. Head
573	807663	1	Back Plate Assembly
657	805009	1	Screw – Hex. Head
727	805505	1	Shield – Starter
866	805738	1	Valley Cover – Air Guide
879	805841	1	Cover – Carburetor
1036	499366	1	Label Kit – Emission

Ref. No.	Part No.	Qty.	Description

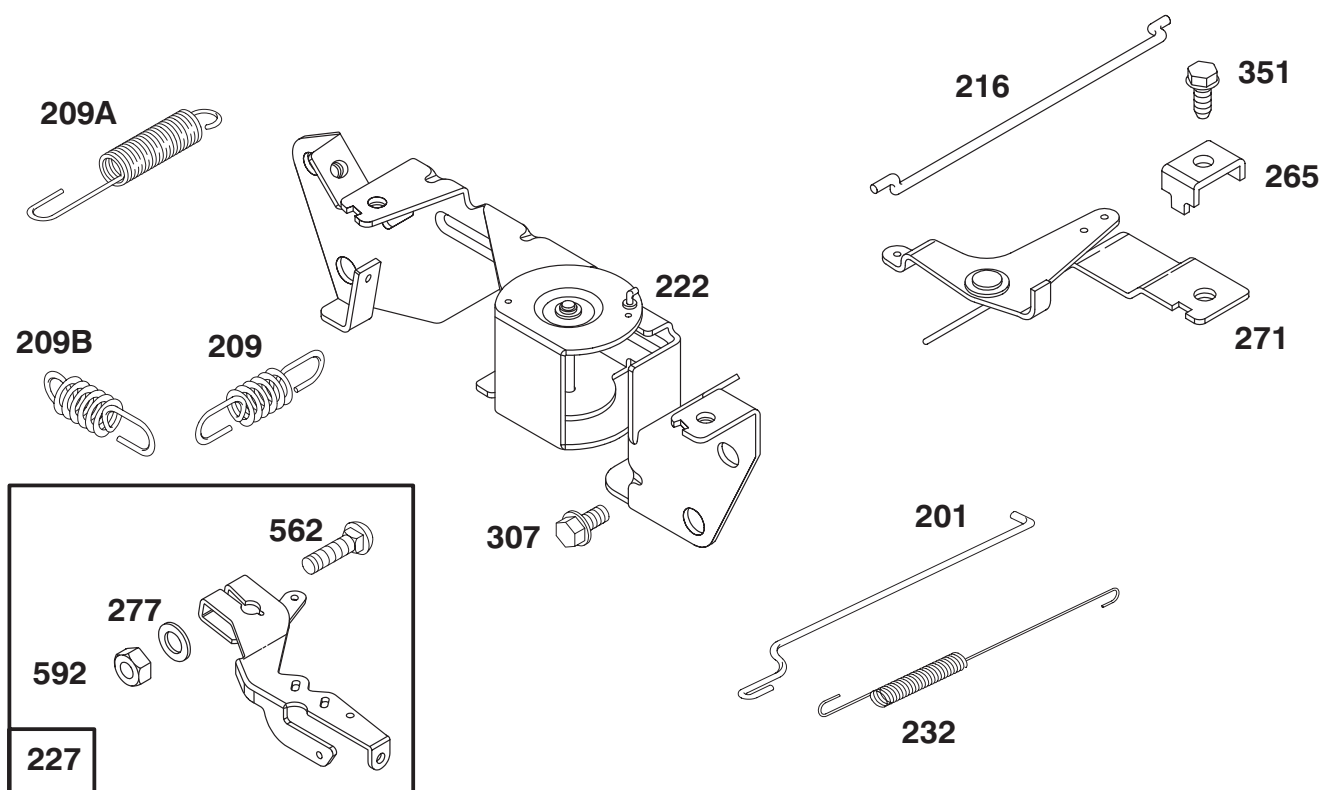


Assemblies include all parts shown in frames.

Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
201	805480	1	Link – Governor
209	805464	1	Spring – Governor
209A	805450	1	Spring – Governed Idle
209B	806105	1	Spring – Governor
216	805439	1	Link – Choke
222	808195	1	Bracket – Governor Control
227	807528	1	Lever Assembly – Governor
232	805465	1	Spring – Governor Link
265	221535	1	Clamp – Casing
271	808145	1	Bracket – Choke Control
277	805018	1	Washer
307	805025	1	Screw – Hex. Head
351	805169	1	Screw – Hex. Head
562	805381	1	Bolt – Carriage
592	805383	1	Nut – Hex.

Ref. No.	Part No.	Qty.	Description

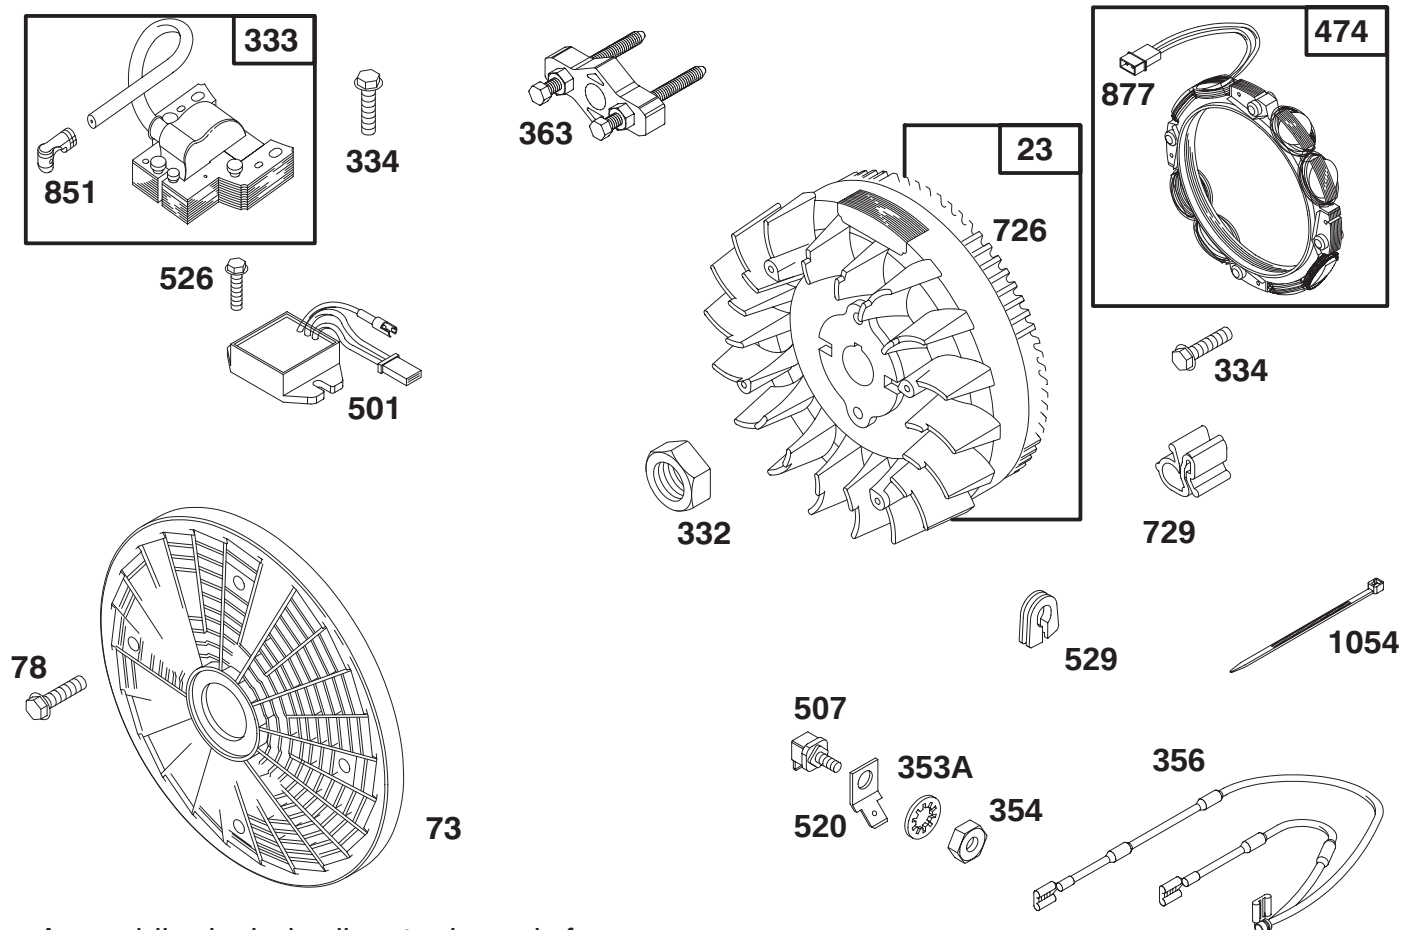


Assemblies include all parts shown in frames.

Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
23	808128	1	Flywheel – Magneto
73	494439	1	Screen – Rotating
78	805447	1	Screw – Hex. Hd.
332	806028	1	Nut – Hex.
333	492341	1	Armature – Magneto
334	805407	1	Screw – Hex. Hd.
353	92791	1	Washer – Lock (Internal Tooth)
354	90576	1	Nut – Hex.
356	493792	1	Wire – Assy.
363	19203	1	Puller – Flywheel
474	393295	1	Stator – Alternator
501	394890	1	Regulator – Alternator
507	398525	1	Insulator
520	93722	1	Terminal – Spade
526	805448	1	Screw – Hex. Hd.
529	805641	1	Grommet
726	808162	1	Gear – Flywheel Ring Includes Mounting Hardware
729	280470	1	Clip – Wire
851	493880	1	Terminal – Ignition Cable
877	393537	1	Wire – Alternator
1054	280275	1	Tie – Cable



Ref. No.	Part No.	Qty.	Description

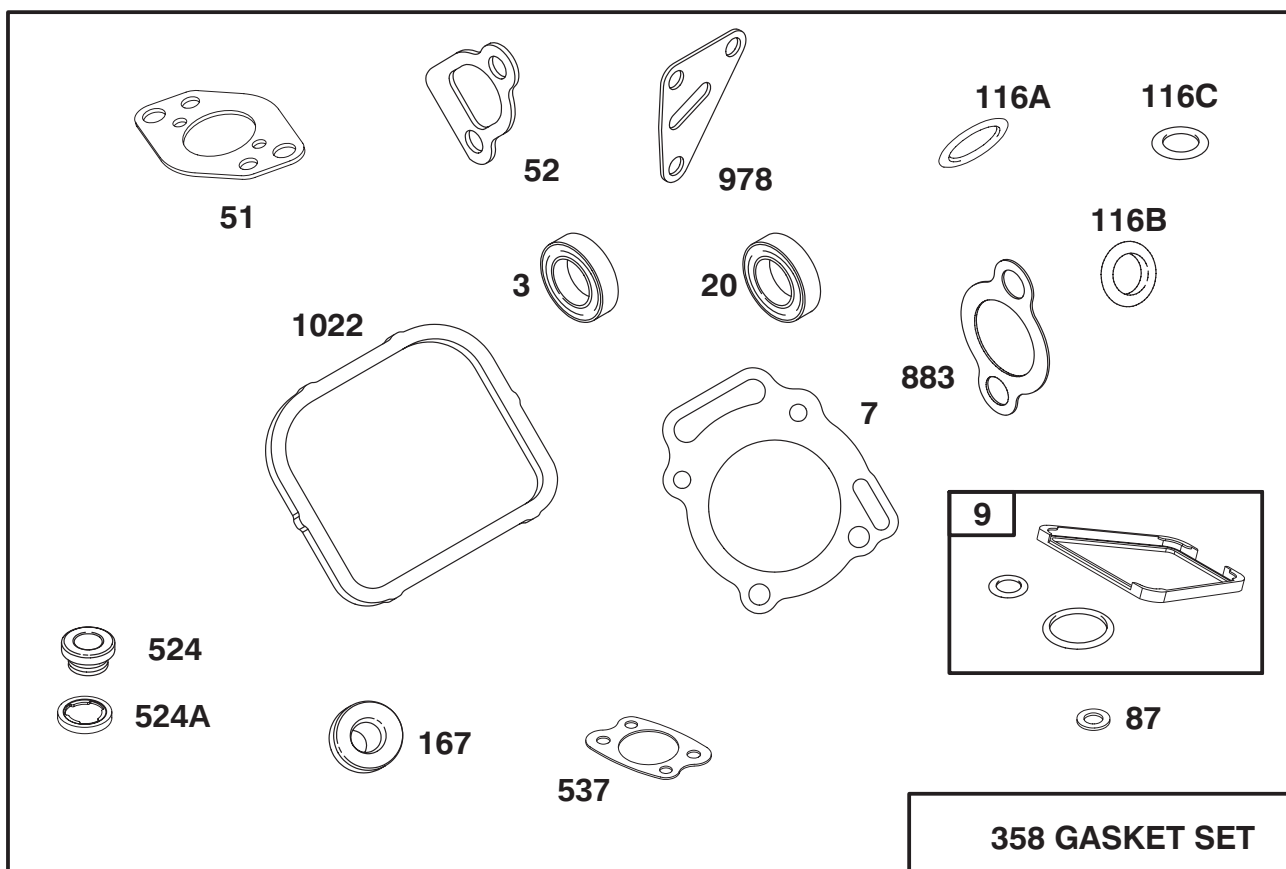



Assemblies include all parts shown in frames.

Engine Briggs & Stratton Model 303447-1179-E1

Ref. No.	Part No.	Qty.	Description
*3	805101	1	Seal – Oil
*‡7	806085	1	Gasket – Cylinder Head
*9	807688	1	Gasket – Breather
*20	805049	1	Seal – Oil
*51	805700	1	Gasket – Carburetor Mtg.
‡*52	805023	1	Gasket – Intake Manifold
*87	805054	1	Seal – Governor Shaft
*116A	805386	1	O–Ring (Dipstick)
*116B	805058	1	O–Ring (Oil Pump)
*116C	805316	1	1O–Ring (Pick – Up Tube)
*‡167	805420	1	Washer – Valve Cover
358	808390	1	Gasket Set
*524	281370	1	Seal – Fill Tube
*‡524A	271983	1	Seal – Filler Plug
*537	805655	1	Gasket – Air Cleaner
*883	805024	1	Gasket – Exhaust Manifold
*978	805250	1	Gasket – Oil Filter Adapter
*‡1022	806039	1	Gasket – Valve Cover

*Included in Gasket Set – Part No. 808390.

‡Included in Valve Overhaul Kit – Part No. 808392.

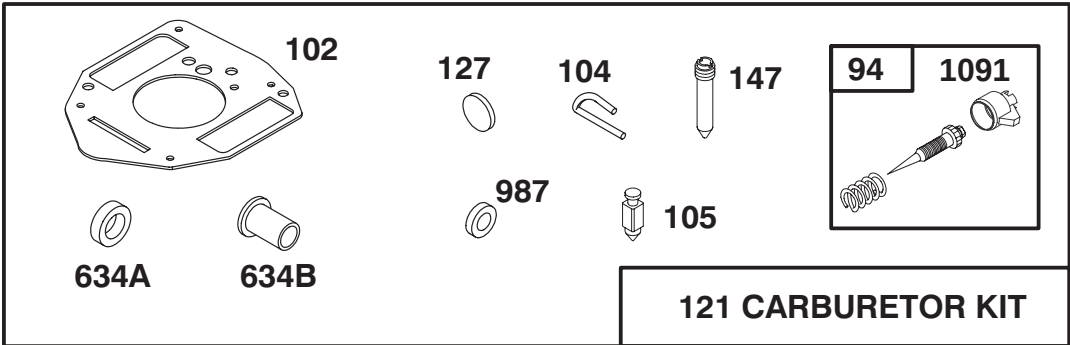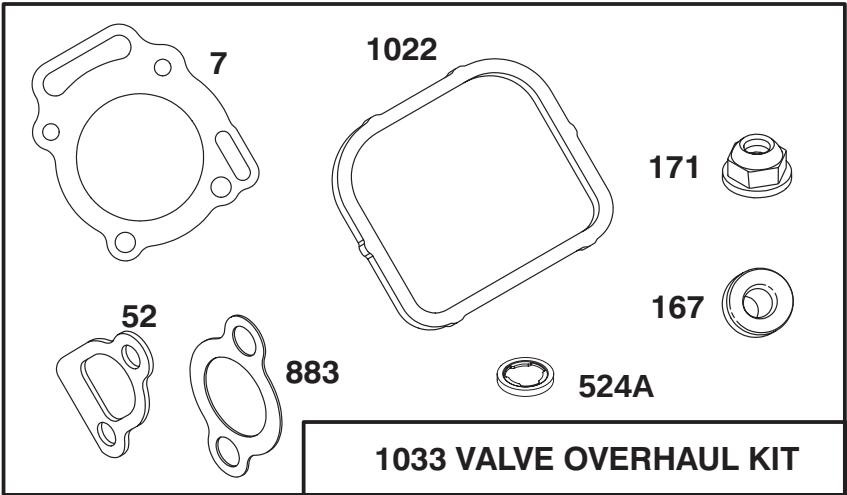

Assemblies include all parts shown in frames.

Engine Briggs & Stratton Model 303447–1179–E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*†‡7	806085	1	Gasket – Cylinder Head				
*†‡52	805023	1	Gasket – Intake Manifold				
†94	808257	1	Valve – Idle Adjust				
†102	805541	1	Gasket – Carburetor Body				
†104	805545	1	Pin – Float Hinge				
†105	805547	1	Valve – Fuel Inlet				
121	808273	1	Carburetor Kit				
†127	805559	1	Plug – Welch				
†147	805553	1	Jet – Slow Speed				
*†‡167	805420	1	Washer – Valve Cover				
‡171	805019	1	Nut – Nylock				
*†‡524A	271983	1	Seal – Filler Plug				
†‡634A	805557	1	Collar – Throttle				
†‡634B	805543	1	Collar – Choke				
*†‡883	805024	1	Gasket – Exhaust Manifold				
†987	805544	1	Seal – Shaft				
*†‡1022	806039	1	Gasket – Valve Cover				
1033	808392	1	Overhaul Kit – Valve				
†1091	805862	1	Cap – Limiter				

*Included in Gasket Set – Part No. 808390.
†Included in Carburetor Kit – Part No. 808273.
‡Included in Valve Overhaul Kit – Part No. 808392.

Date								
------	--	--	--	--	--	--	--	--

