



Count on it.

Form No. 3393-955 Rev B

Parts Catalog

Diesel-Powered FM 330 Fluid Mixer

Model No. 23897—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Engine and Frame Assembly	4
Hopper Assembly	6
Valve and Plumbing Assembly	8
Ship Kit Hose and Clamp Assembly No. AU10MM1225	10
Discharge Hose Assembly No. AU10MM1017	12
Cylinder Block Assembly	14
Drain Plug Assembly	16
Label Assembly	18
Cylinder Head and Cover Assembly	20
Air Cleaner Assembly	22
Exhaust Muffler Assembly	24
Camshaft Assembly	26
Crankshaft Assembly	28
Flywheel Assembly	30
Piston and Connecting Rod Assembly	32
Balancer Shaft Assembly	34
Lubrication Oil Pump and Governor Assembly	36
Cover Assembly	38
Cooling Fan Case Assembly	40
Fuel Injection Pump and Fuel Valve Assembly	42
Fuel Tank and Fuel Pipe Assembly	44
Control Device Assembly	46
Recoil Starter Assembly	48
Starter Motor Assembly	50
Electric Parts Assembly	52
Key Switch Assembly	54
Dynamo Assembly	56
Gasket Set	58
Attachments and Accessories	60


Engine and Frame Assembly

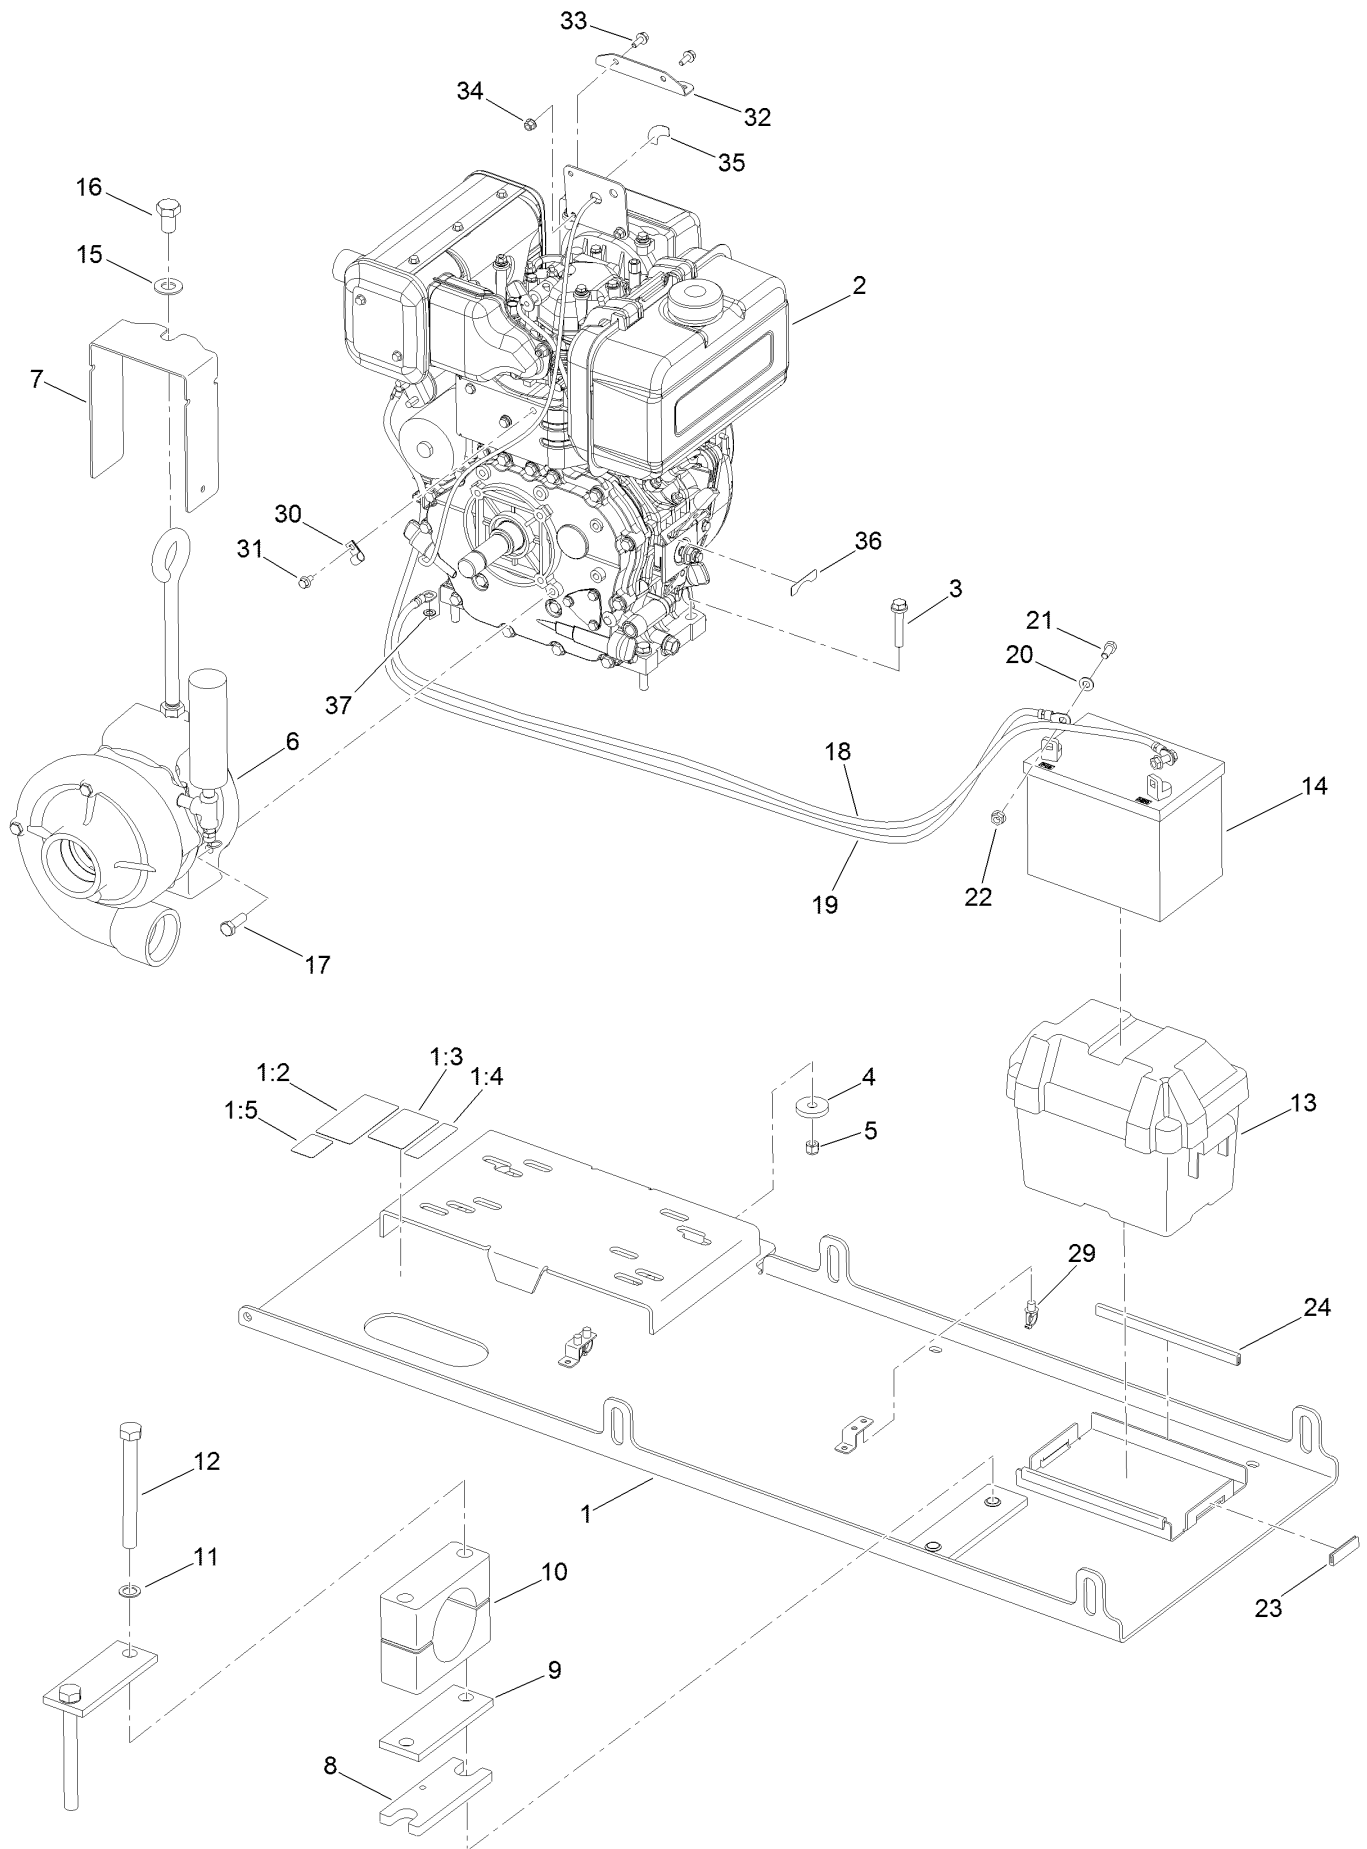

Engine and Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5653	1	Base Frame ASM	15	3256-27	1	Washer-Flat
1:2	125-6155	1	Decal-Warning, Mixer	16	327-2	1	Screw-HH
1:3	125-6156	1	Decal-Drain	17	120-9635	4	Screw-HH
1:4	119-0217	1	Decal-Danger	18	122-0215	1	Cable-Battery, Negative
1:5	130-2845	1	Decal-Ultra Low Sulfur Diesel	19	122-0214	1	Cable-Battery, Positive
2	132-5654	1	Engine-Yanmar, L100W	20	3256-23	2	Washer-Plain
3	108-3742	4	Screw-HHF	21	322-3	2	Screw-HH
4	1-543610	4	Washer-Clutch	22	109-5715	2	Nut-HHF, Smooth
5	112-0236	4	Nut-Lock	23	127-0997	2	Trim-Strap, Battery
6	AU10MM3304	1	Pump ASM	24	127-5315	2	Trim-Tank
7	AU10MM3204-01	1	Guard-Coupler, Rotating	29	32180-030	4	Clip-Tie
8	AU10MM3505-03	1	Spacer	30	2412-89	1	Clamp-R
9	125-4503-03	2	Plate-Clamp	31	33103-012	1	Screw-HHF
10	125-4502	1	Clamp-Pipe	32	131-9020	1	Bracket-Switch, Key
11	3256-69	2	Washer-Flat	33	33103-016	2	Screw-HHF
12	1-800344	2	Screw	34	81-0130	2	Nut-Flange, NI
13	116-6673	1	Battery Box ASM	35	125-6185	1	Decal-Ignition
14	99-7421	1	Battery	36	125-6186	1	Decal-Throttle
				37	3255-9	1	Washer-Lock

 
Hopper Assembly

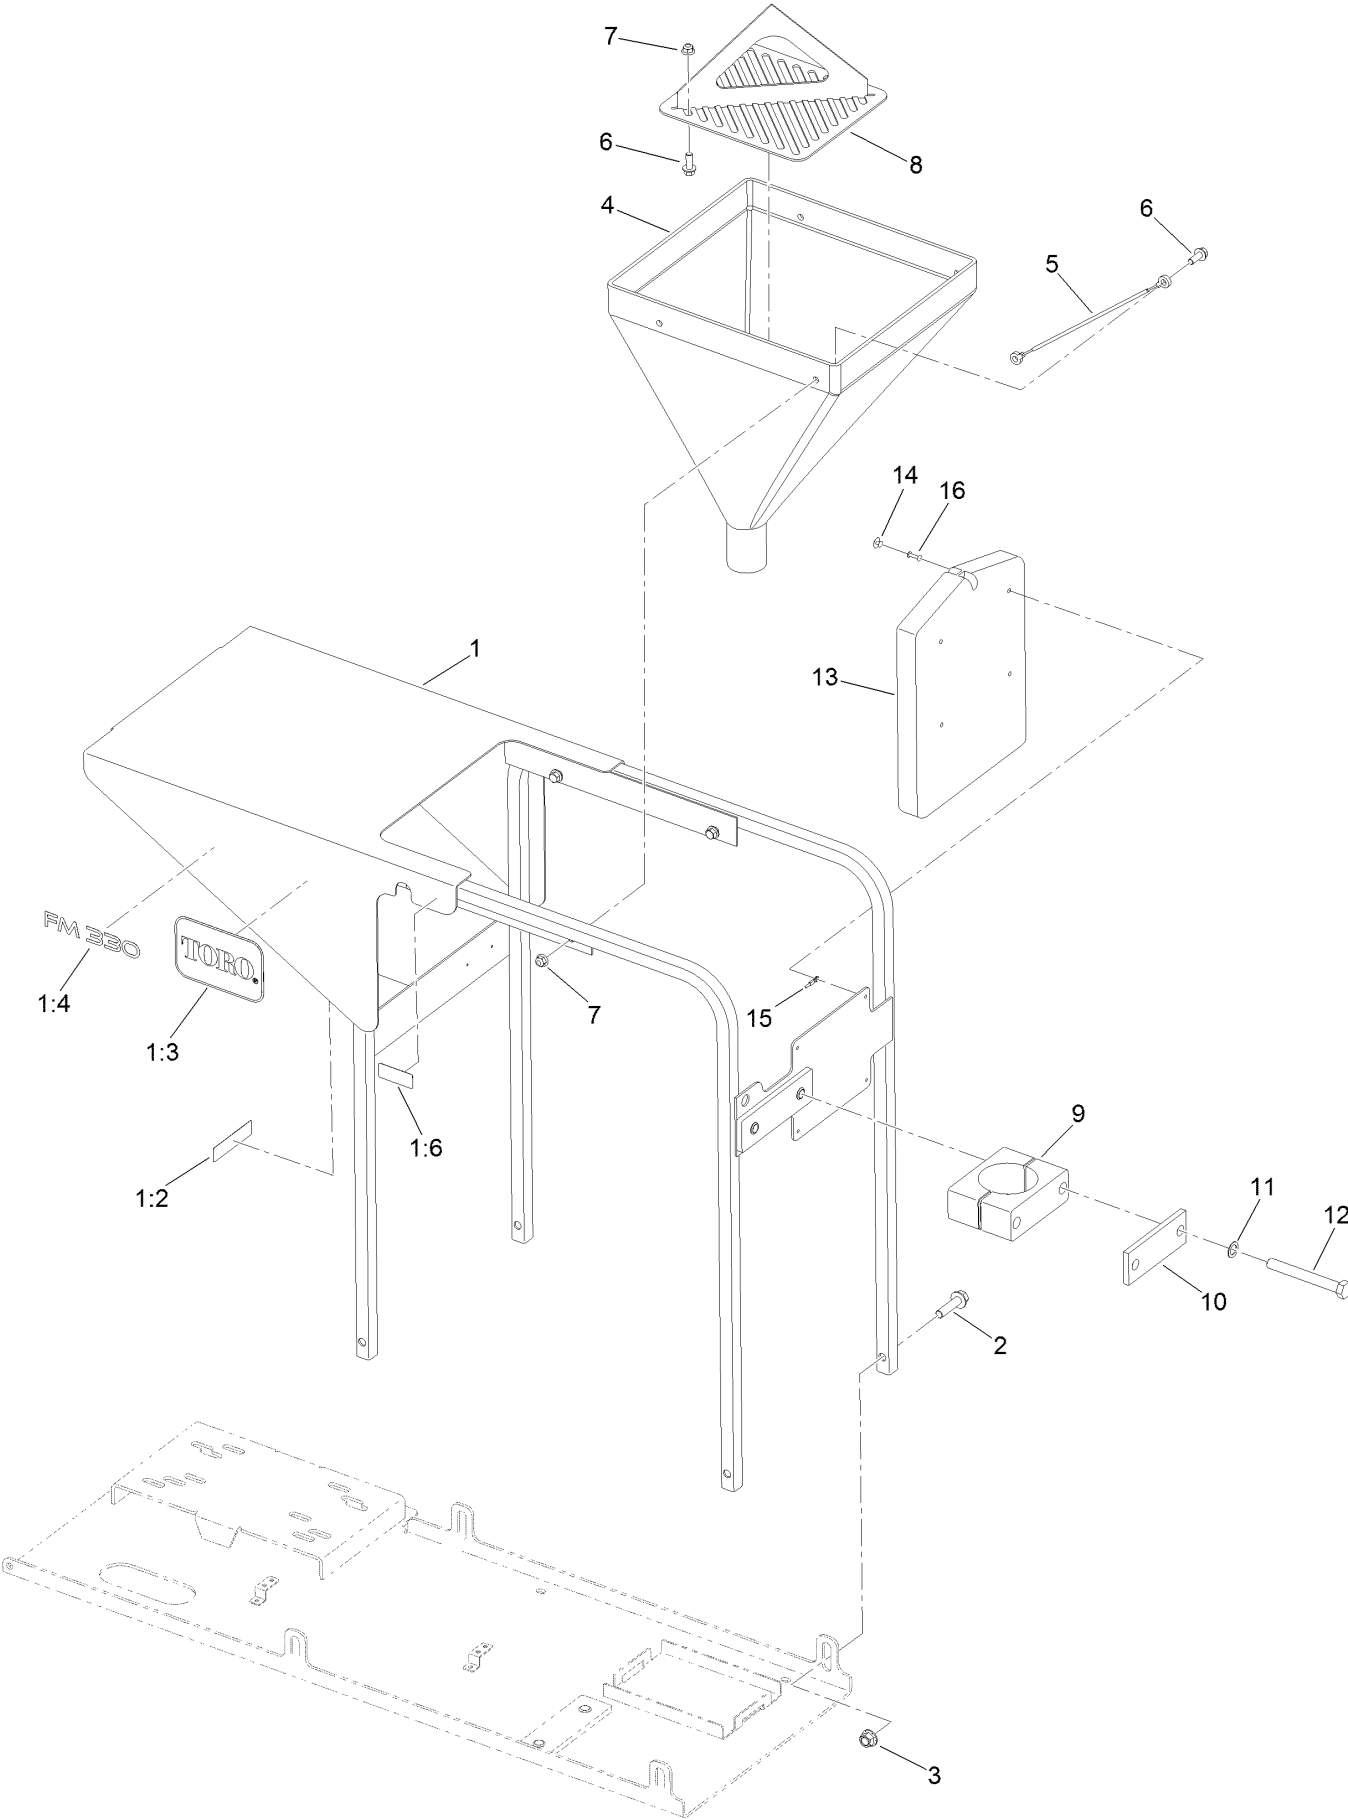

Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-5340	1	Hopper Support ASM	7	104-8301	5	Nut-HF, NI
1:2	117-2718	1	Decal-Arrester, Spark	8	AU10MM3235-01	1	Cutter-Bag
1:3	62-5550	2	Decal	9	125-4502	1	Clamp-Pipe
1:4	125-6170	2	Decal	10	125-4503-03	1	Plate-Clamp
1:6	125-6171	2	Decal-Warning, Puncture	11	3256-69	2	Washer-Flat
2	3234-27	4	Screw-HHF	12	127-5336	2	Screw-HH
3	99-5107	4	Nut-Lock	13	AU103216	1	Holder-Manual, Operator
4	AU10MM3230	1	Hopper-Mix	14	AU151-522	4	Rivet
5	92-5971	1	Lanyard-Gate	15	AUR46465	1	Lanyard
6	3234-42	5	Screw-HHF	16	AUR46463	1	Post-Manual

 Valve and Plumbing Assembly

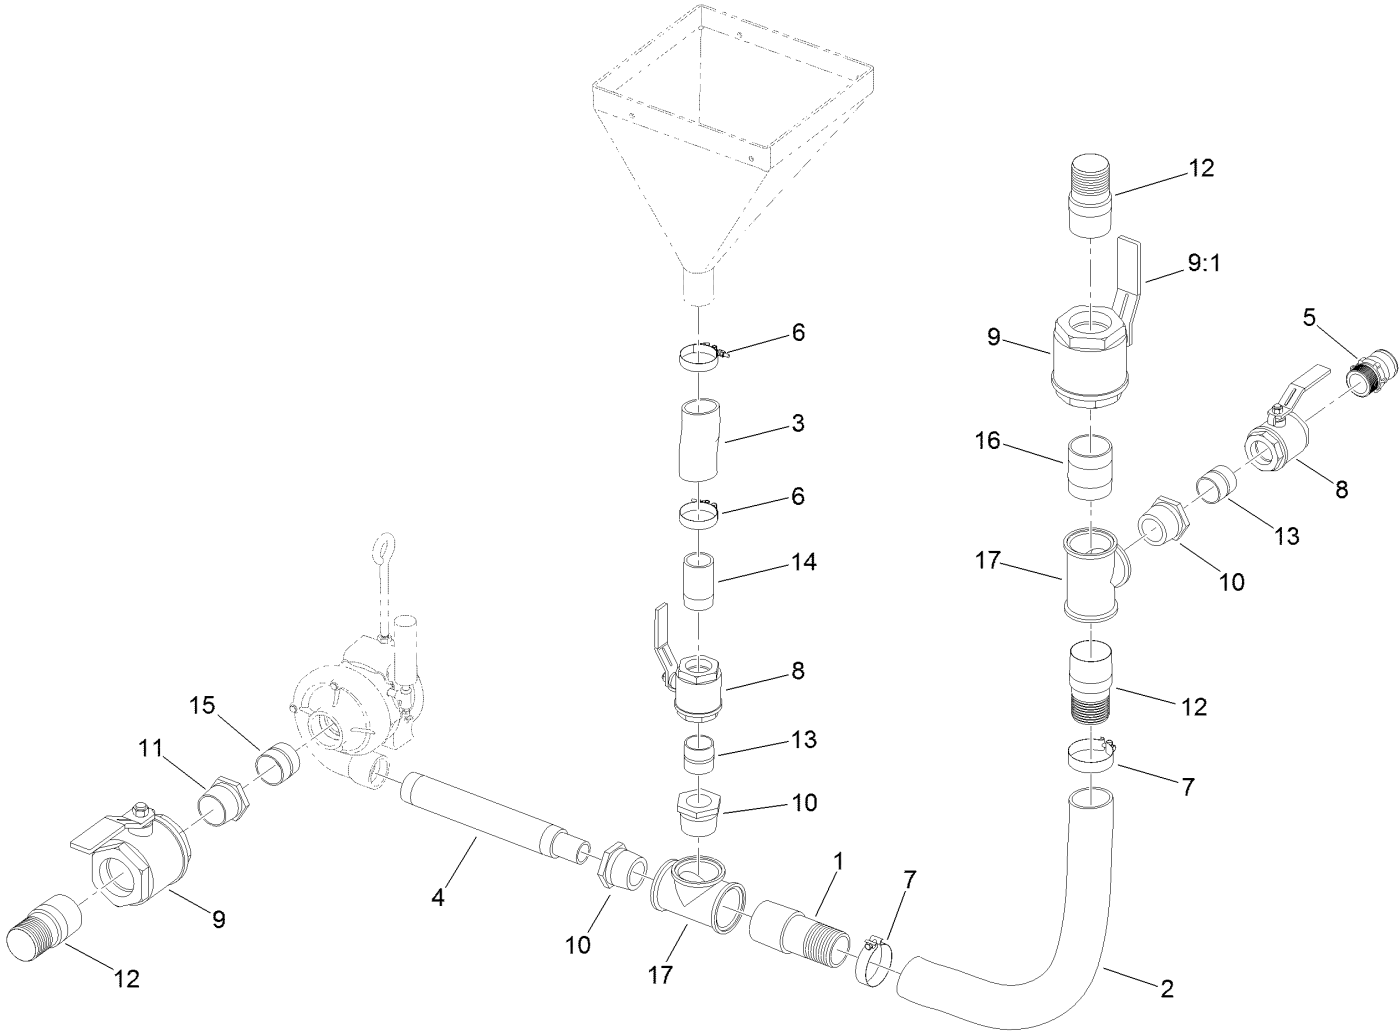


Valve and Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-5343	1	Tube-Venturi
2	127-5344	1	Hose-Suction, Water
3	127-5346	1	Hose-Suction, Water
4	127-5349	1	Tube-Jet
5	AU110378	1	Adapter-Male
6	AU8CL14040	2	Clamp, T-Bolt
7	AU8CL15048	2	Clamp-T Bolt
8	AU8HV21032	2	Valve-Ball (2.0)
9	AU8HV21048	2	Valve-Ball (3.0)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9:1	AU8HV21048-01	1	Handle-Ball, 3.0 Valve
10	AU8PB14832	3	Bushing-Pipe
11	AU8PB14840	1	Bushing-Pipe
12	AU8PN11348	3	Nipple-Combination
13	AU8PN23200	2	Nipple-Pipe
14	AU8PN23208	1	Nipple-Pipe
15	AU8PN24000	1	Nipple-Pipe
16	AU8PN24800	1	Nipple-Pipe
17	AU8PT10048	2	Tee-Pipe

Ship Kit

 Hose and Clamp Assembly No. AU10MM1225

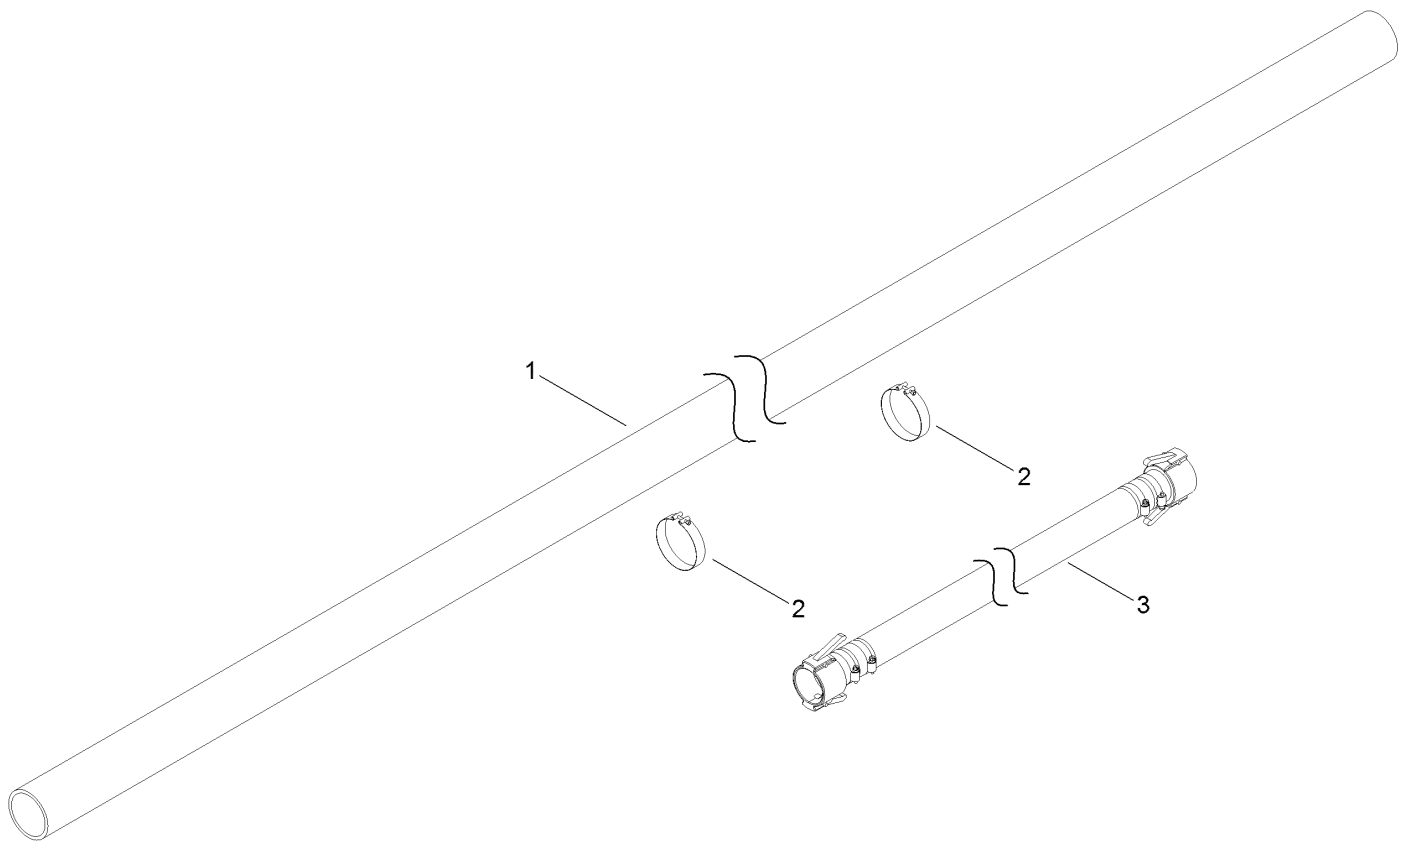


Ship Kit

Hose and Clamp Assembly No. AU10MM1225 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-5278	1	Hose-Suction, Water
2	AU8CL15048	2	Clamp-T Bolt
3	AU10MM1017	1	Discharge Hose ASM

 
Discharge Hose Assembly No. AU10MM1017

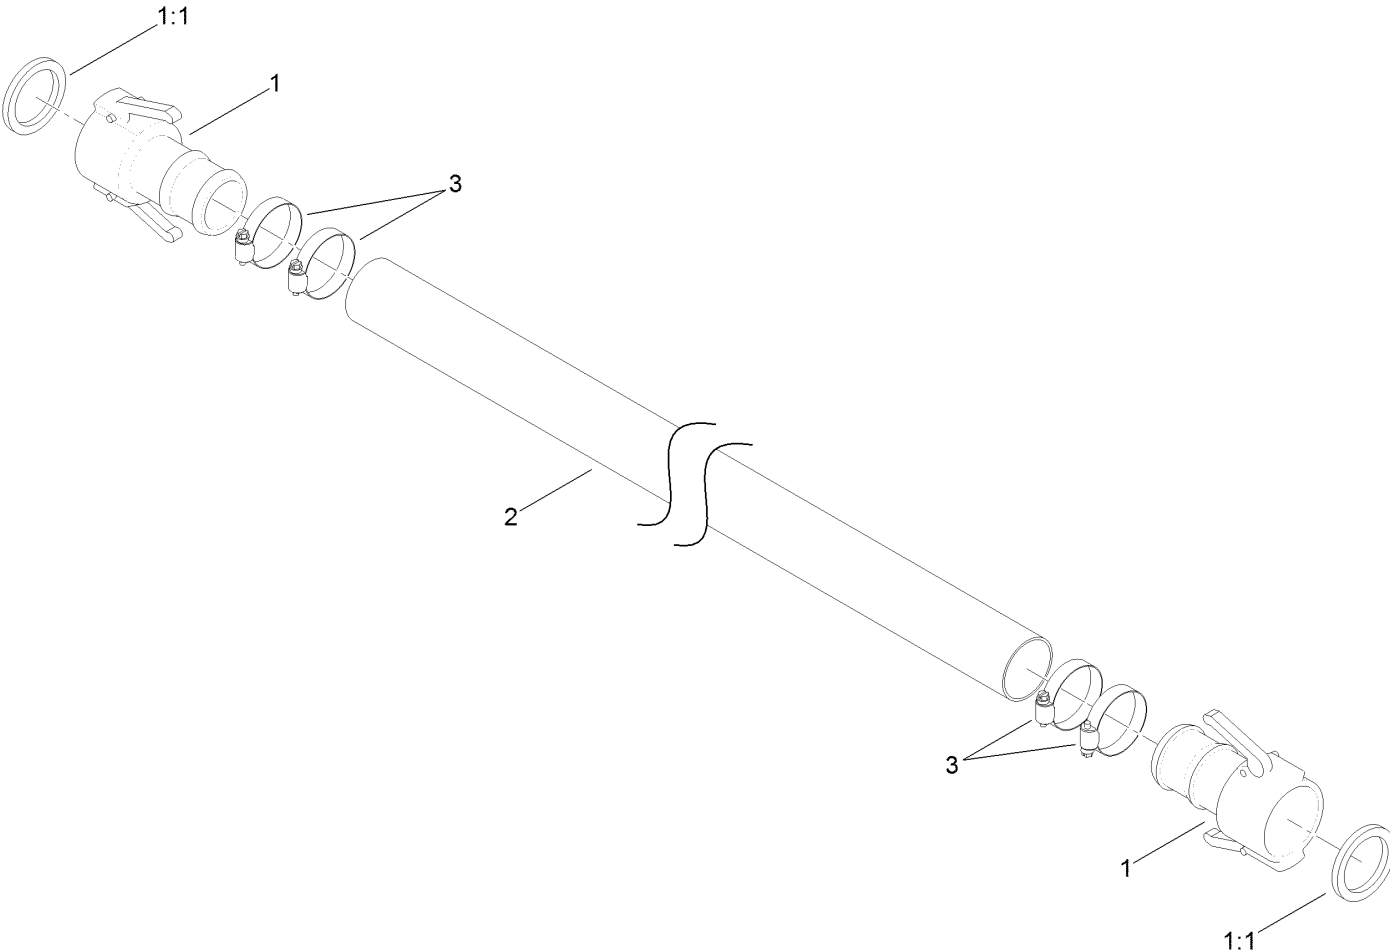

Discharge Hose Assembly No. AU10MM1017 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-4369	2	Coupler-Lock, Cam	2	130-4469	1	Hose-Discharge
1:1	114-4375	1	Gasket	3	2412-139	4	Clamp-Hose

 
Cylinder Block Assembly

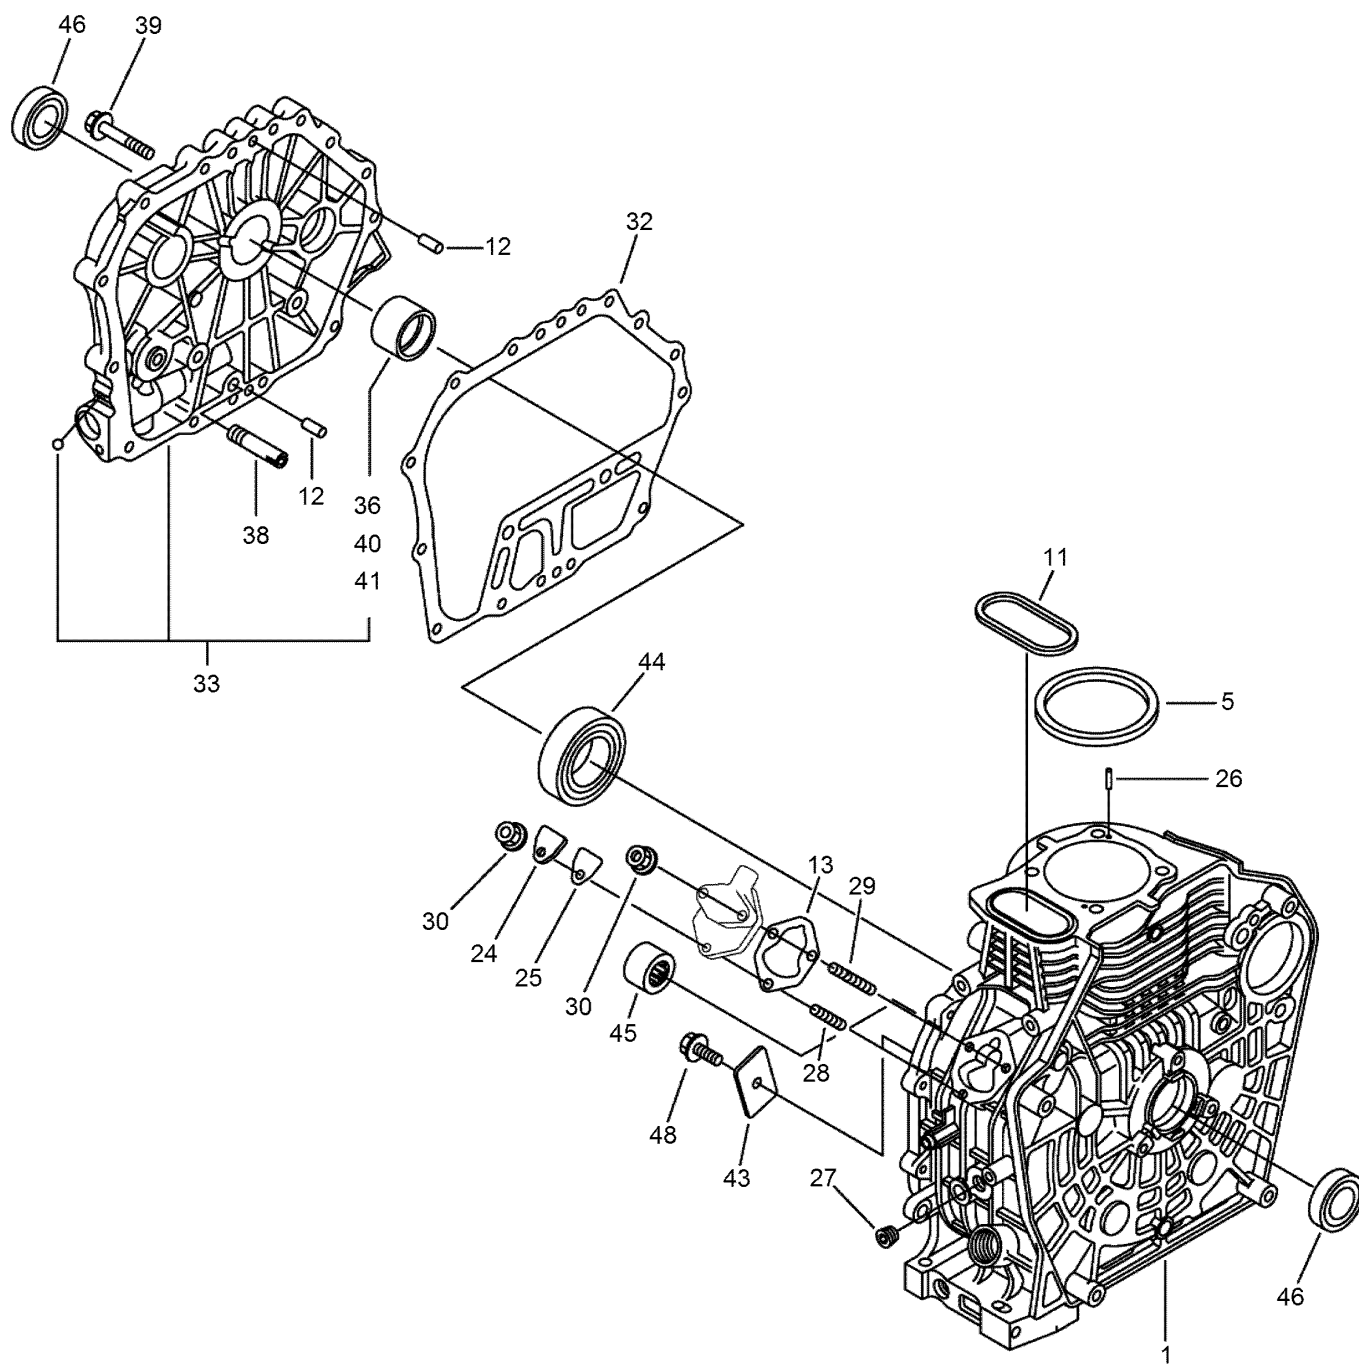

Cylinder Block Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8114	1	Cylinder Block ASM	32	136-8194	1	Gasket-Case, Crank
5	136-8192	1	Gasket-Head, Cylinder	33	136-8117	1	Cover-Case, Crank
11	136-8193	1	O Ring-Tappet	36	136-8186	1	Bearing-Main
12	136-8087	2	Pin	38	136-8101	1	Pipe-Inlet, Oil
13	136-8089	1	Shim Set	39	125-7217	16	Bolt
24	136-8090	1	Cover-Pump	40	136-8188	1	Metal-Main, 0.25
25	136-8077	1	Gasket-Cover	41	136-8189	1	Metal-Main, 0.5
26	136-8239	2	Pin	43	136-8092	1	Retainer-Bearing
27	127-3175	1	Plug	44	136-8187	1	Bearing
28	136-8260	1	Stud-Bolt	45	136-8247	1	Bearing-Needle
29	136-8261	2	Stud-Bolt	46	136-8253	2	Seal-Oil
30	125-7231	3	Nut	48	125-7212	1	Bolt

 Drain Plug Assembly







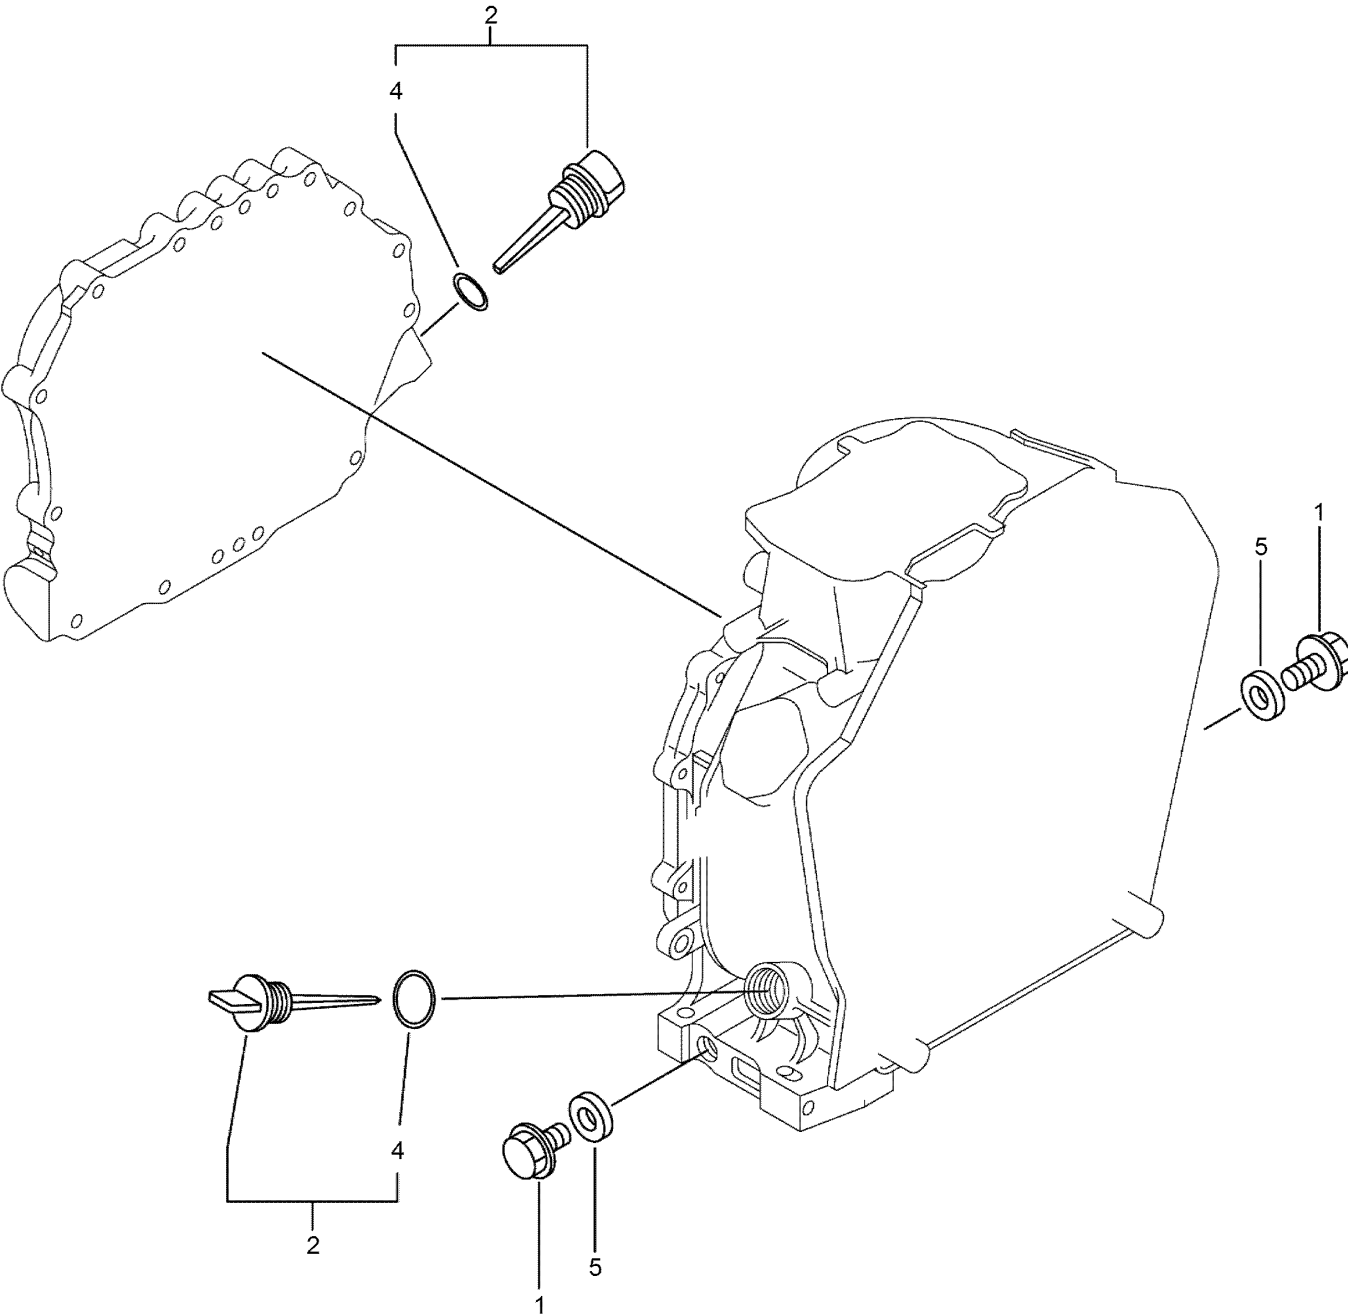


Drain Plug Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8088	2	Plug-Drain
2	136-8195	2	Cap ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	136-8091	2	O-Ring
5	136-8236	2	Washer-Seal

       
Label Assembly

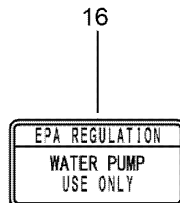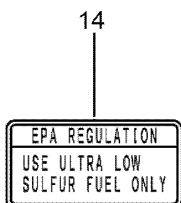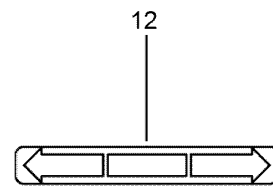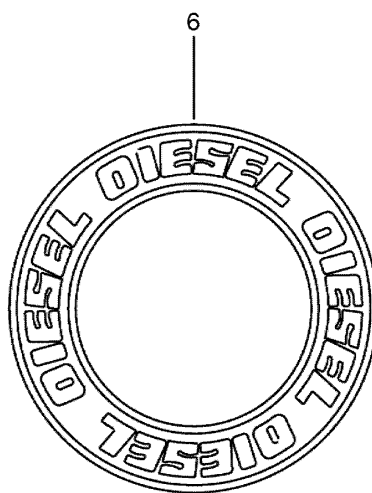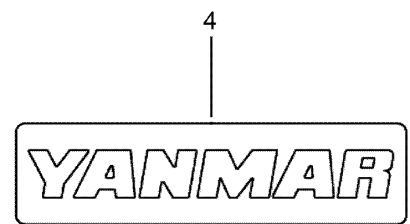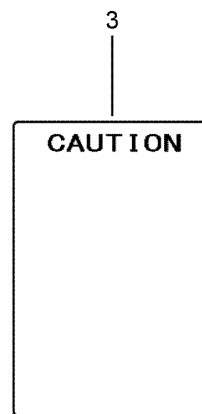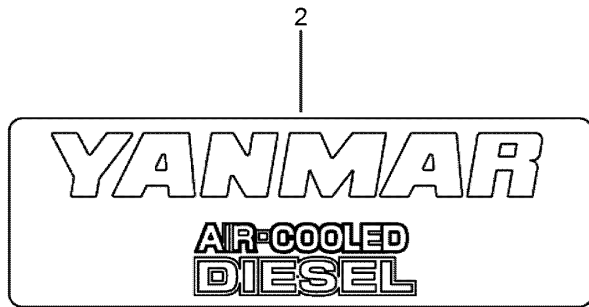

Label Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	136-8094	1	Label-Yanmar	6	136-8096	1	Label-Diesel
3	136-8112	1	Label-Caution	12	136-8232	1	Label-Operation
4	136-8095	1	Label-Yanmar	14	125-6900	1	Label-Caution, Fuel Oil
5	136-8059	1	Label-How To Start	16	136-8057	1	Label-Water Pump

 
Cylinder Head and Cover Assembly

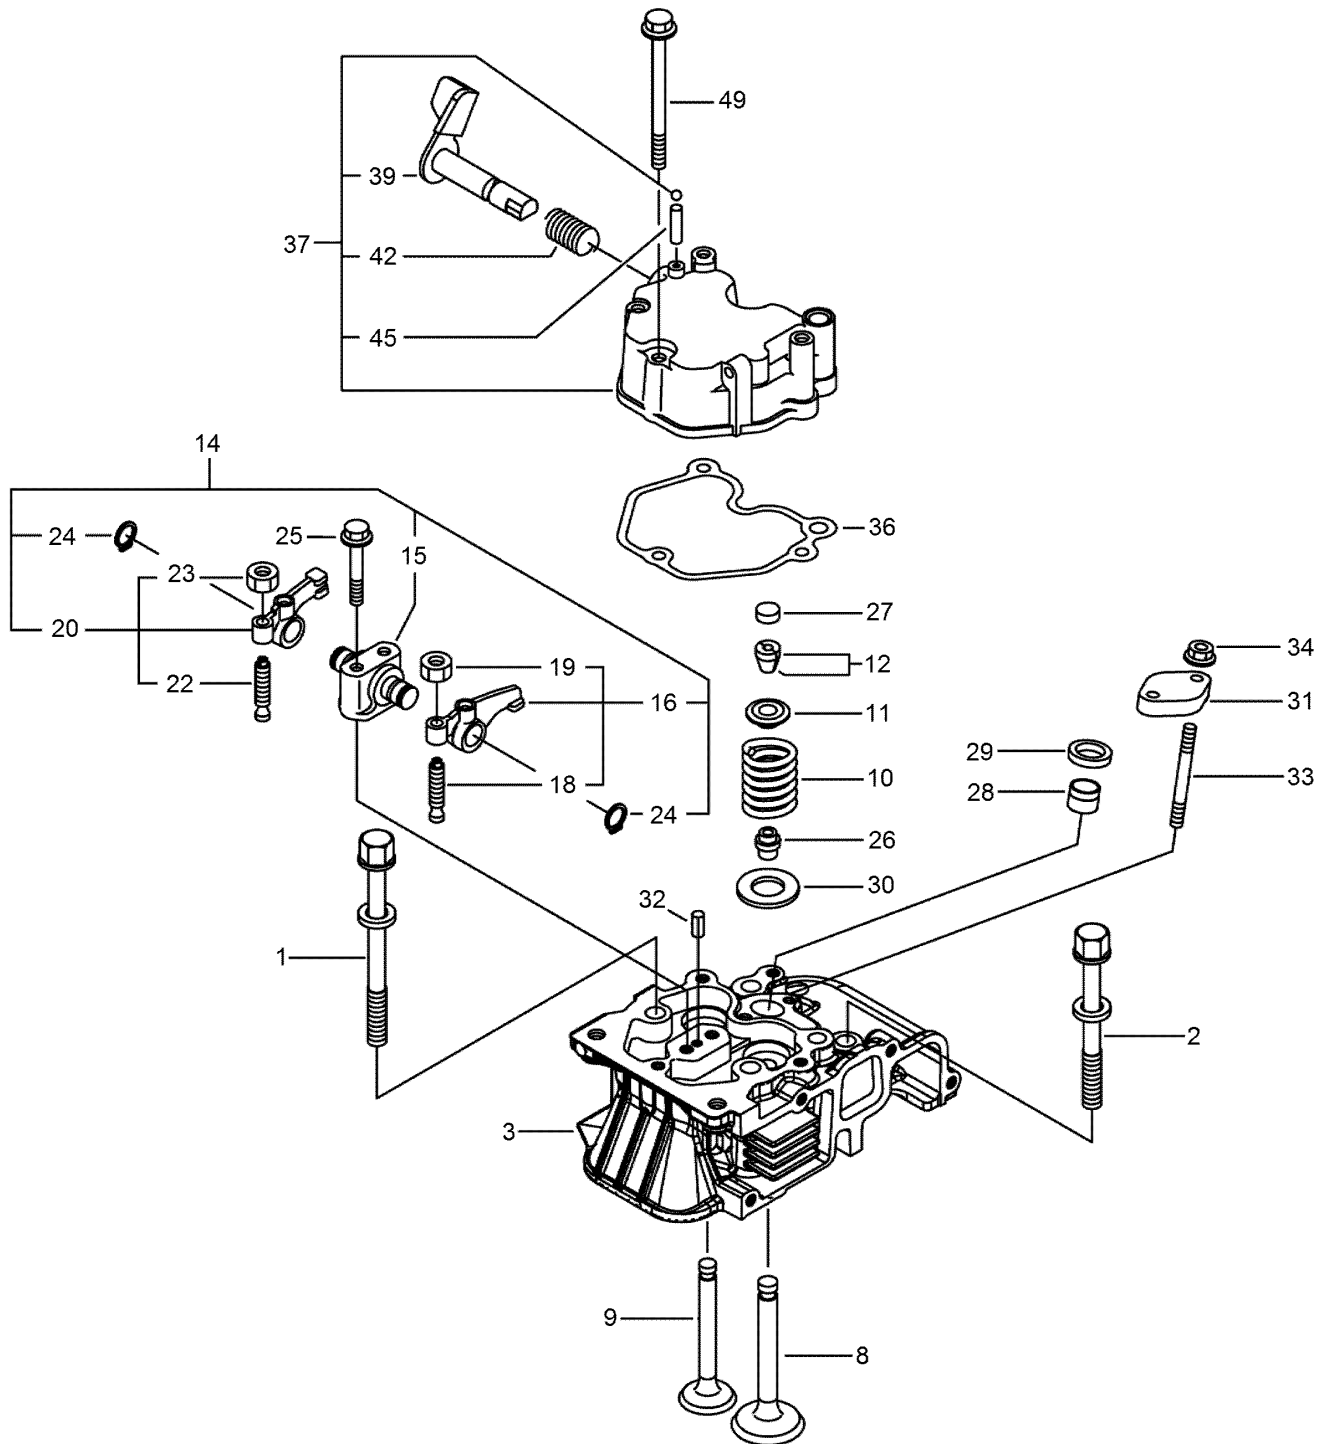

Cylinder Head and Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8115	2	Bolt-Head A, Cylinder	25	136-8120	2	Bolt-Support
2	136-8116	2	Bolt-Head B, Cylinder	26	136-8190	2	Seal-Stem, Valve
3	136-8154	1	Cylinder Head ASM	27	136-8053	2	Cap-Valve
8	136-8140	1	Valve-Intake	28	136-8074	1	Protector-Nozzle
9	136-8141	1	Valve-Exhaust	29	136-8075	1	Seat-Nozzle
10	136-8118	2	Spring-Valve	30	136-8196	2	Washer-Spring, Valve
11	136-8119	2	Retainer-Spring	31	136-8060	1	Retainer-Nozzle
12	136-8122	2	Cotter ASM	32	136-8242	1	Pin-Spring
14	136-8142	1	Rocker Arm Support ASM	33	136-8263	2	Stud-Bolt
15	136-8143	1	Support-Arm, Rocker	34	125-7231	2	Nut
16	136-8144	1	Intake Rocker Arm ASM	36	136-8121	1	Gasket-Cover
18	136-8078	1	Screw-Adjusting, Valve	37	136-8123	1	Head Cover ASM
19	136-8267	1	Nut	39	136-8058	1	Decompression Shaft ASM
20	136-8145	1	Exhaust Rocker Arm ASM	42	136-8093	1	Spring-Decompression
22	136-8078	1	Screw-Adjusting, Valve	45	136-8238	1	Pin-Parallel
23	136-8267	2	Nut	49	136-8257	3	Bolt
24	136-8237	2	Ring				

 Air Cleaner Assembly

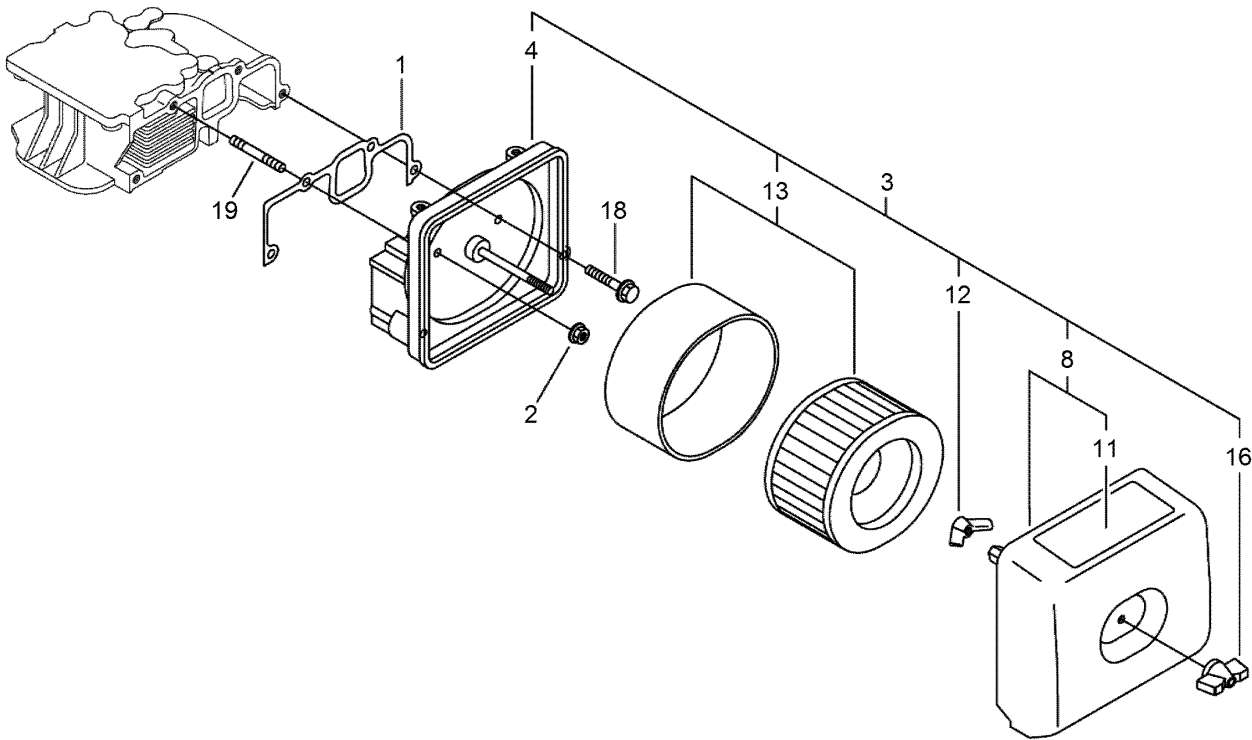


Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8125	1	Gasket-Cleaner, Air
2	136-8097	3	U-Nut
3	136-8126	1	Air Cleaner ASM
4	136-8124	1	Air Cleaner Body ASM
8	136-8061	1	Air Cleaner Cover ASM
11	136-8065	1	Label-Cleaner, Air

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	136-8062	1	Nut-Wing
13	136-8063	1	Air Element ASM
16	136-8064	1	Knob-Locking
18	125-7211	1	Bolt
19	136-8262	3	Stud-Bolt

 
Exhaust Muffler Assembly

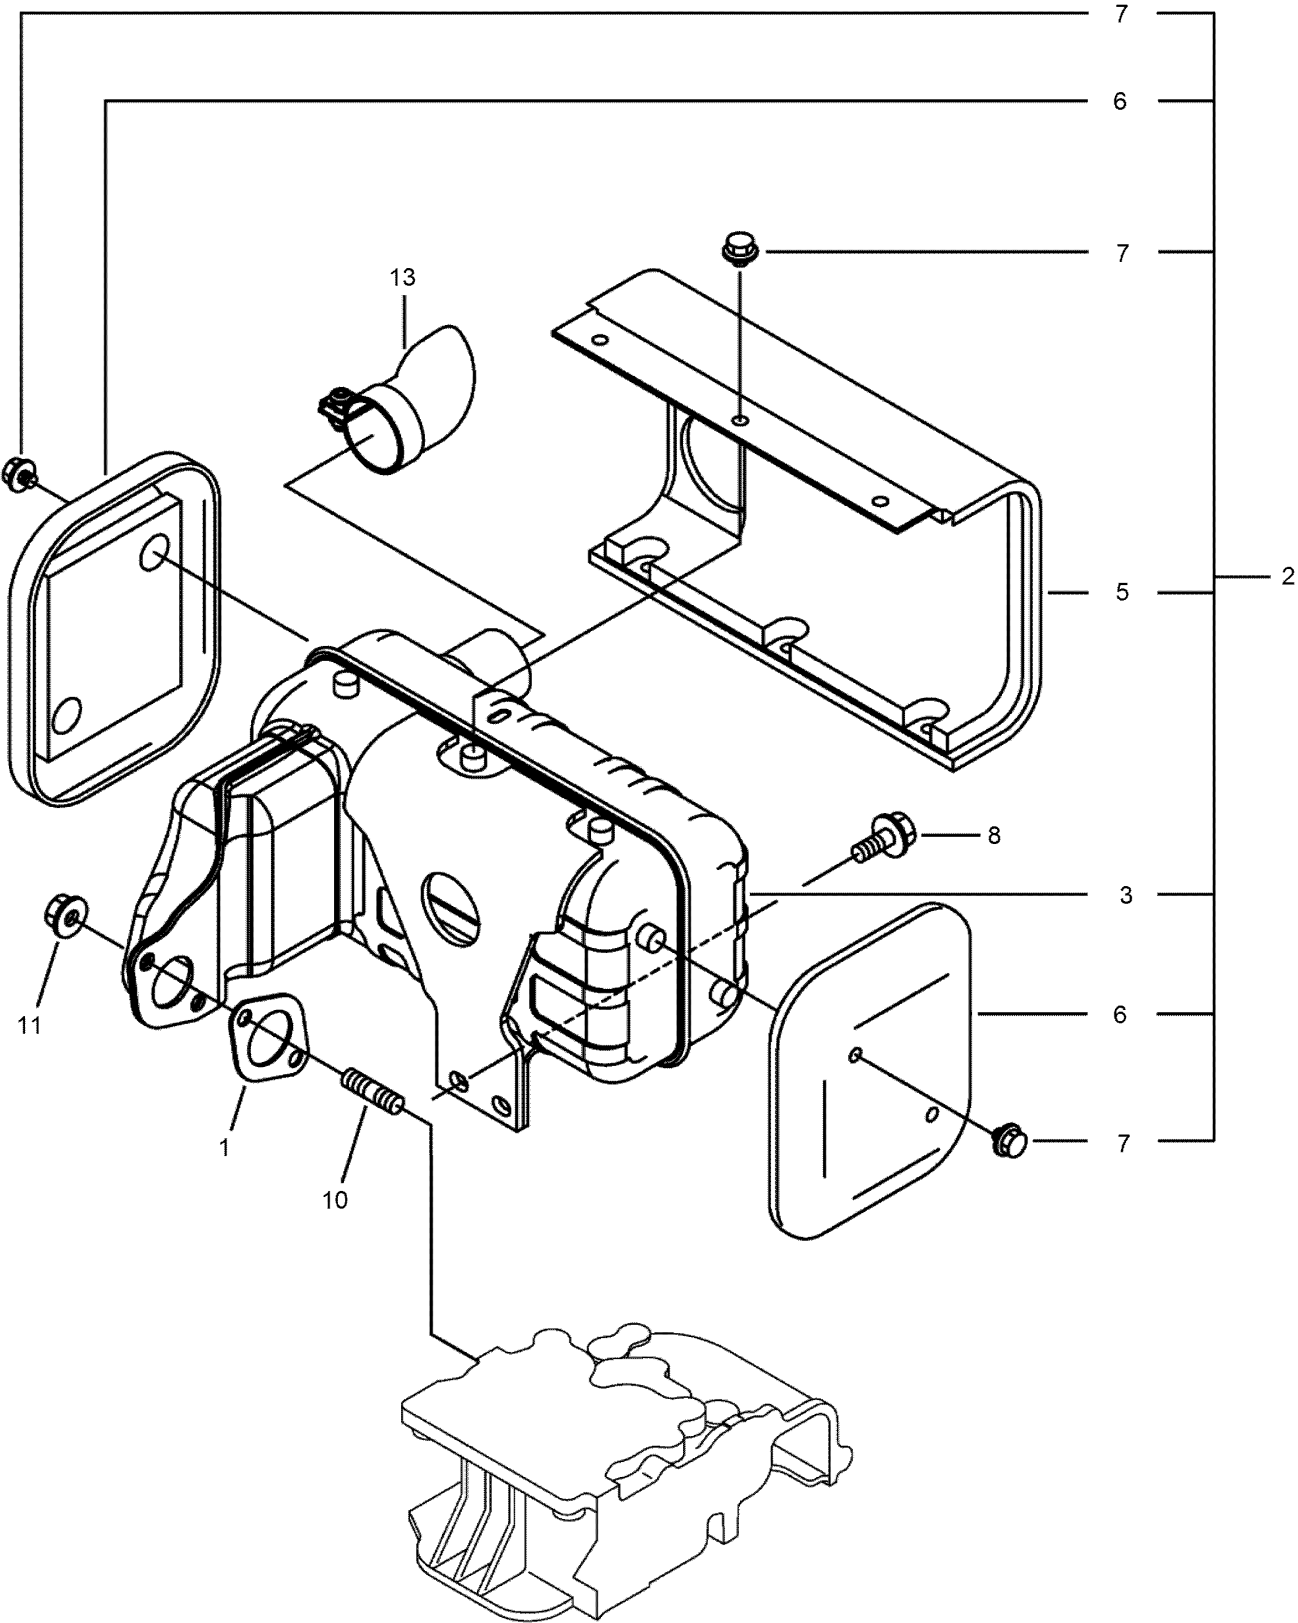

Exhaust Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8127	1	Gasket-Muffler	7	136-8083	10	Bolt
2	136-8181	1	Muffler ASM	8	125-7595	2	Bolt
3	136-8182	1	Muffler	10	136-8259	2	Stud-Bolt
5	136-8183	1	Cover-Muffler A	11	125-7229	2	Nut
6	136-8184	2	Cover-Muffler B	13	136-8148	1	Exhaust Deflector ASM

 Camshaft Assembly

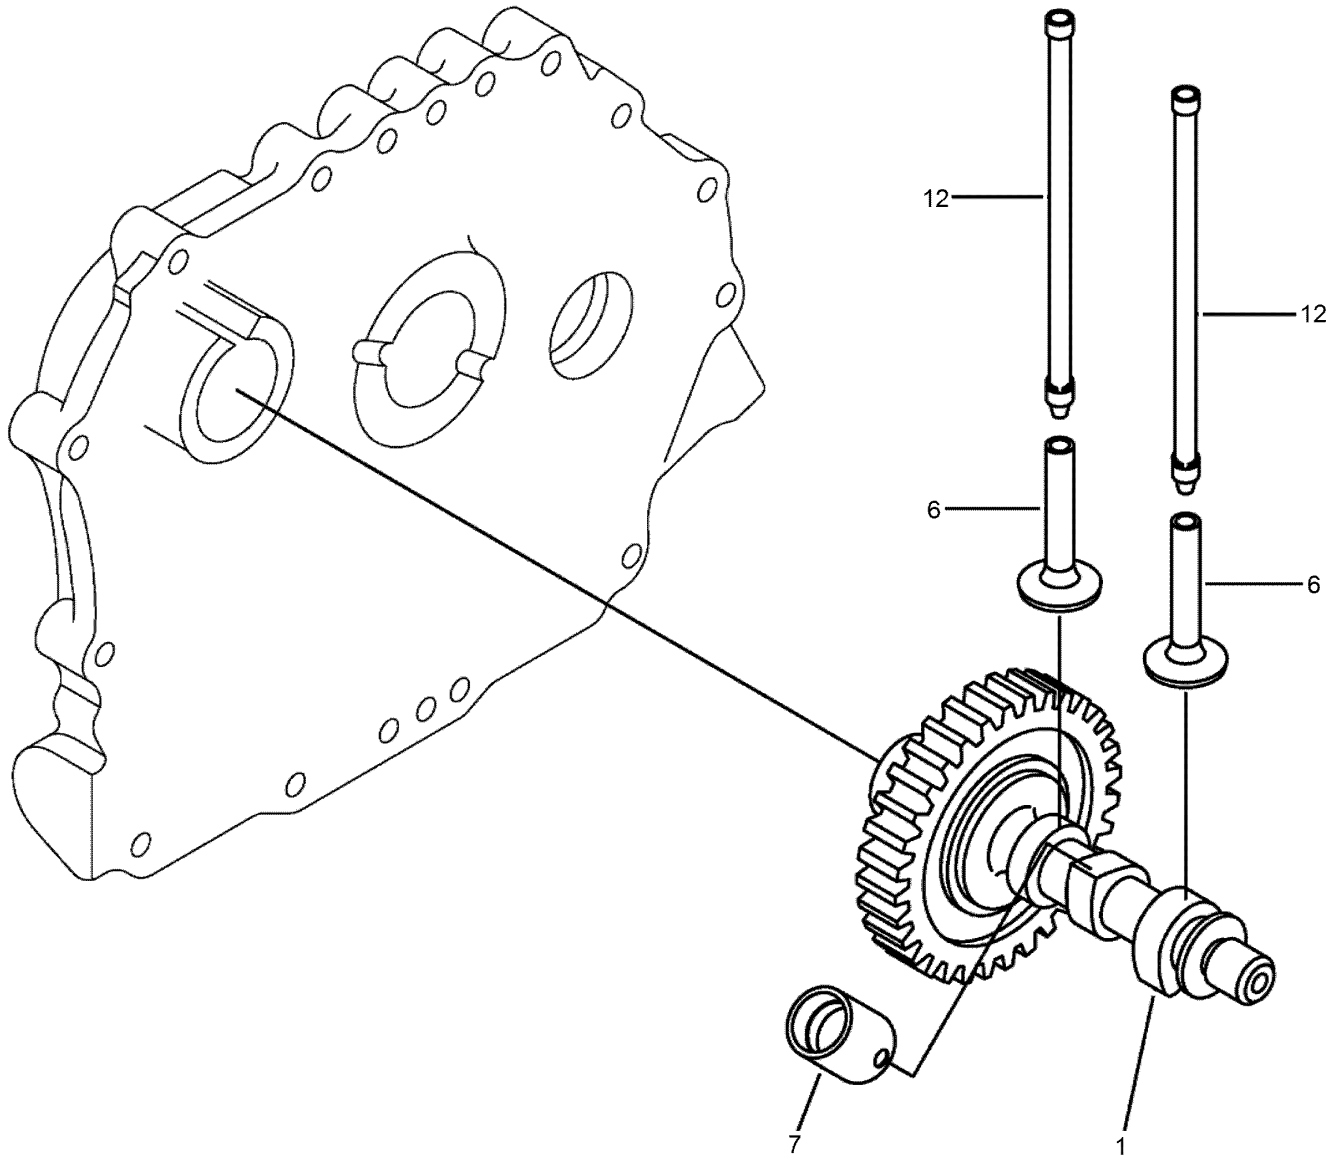


Camshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8275	1	Camshaft ASM
6	136-8128	2	Tappet

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	136-8066	1	Tappet Roller ASM
12	136-8129	2	Push Rod ASM

 Crankshaft Assembly

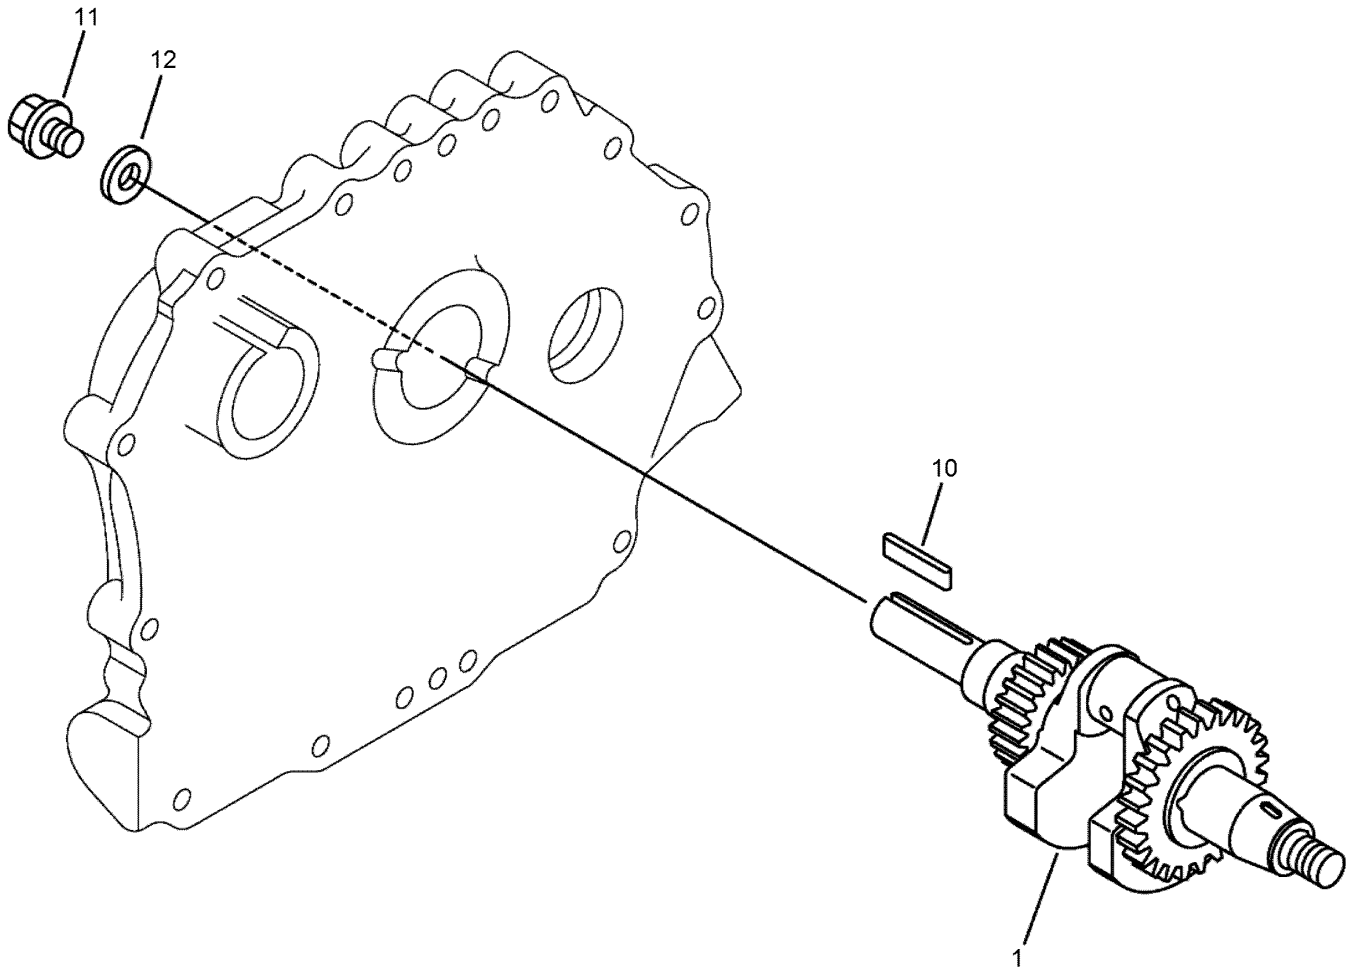


Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8146	1	Crankshaft ASM
10	136-8229	1	Key

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	136-8230	1	Bolt
12	136-8231	1	Washer-Pulley

 
Flywheel Assembly

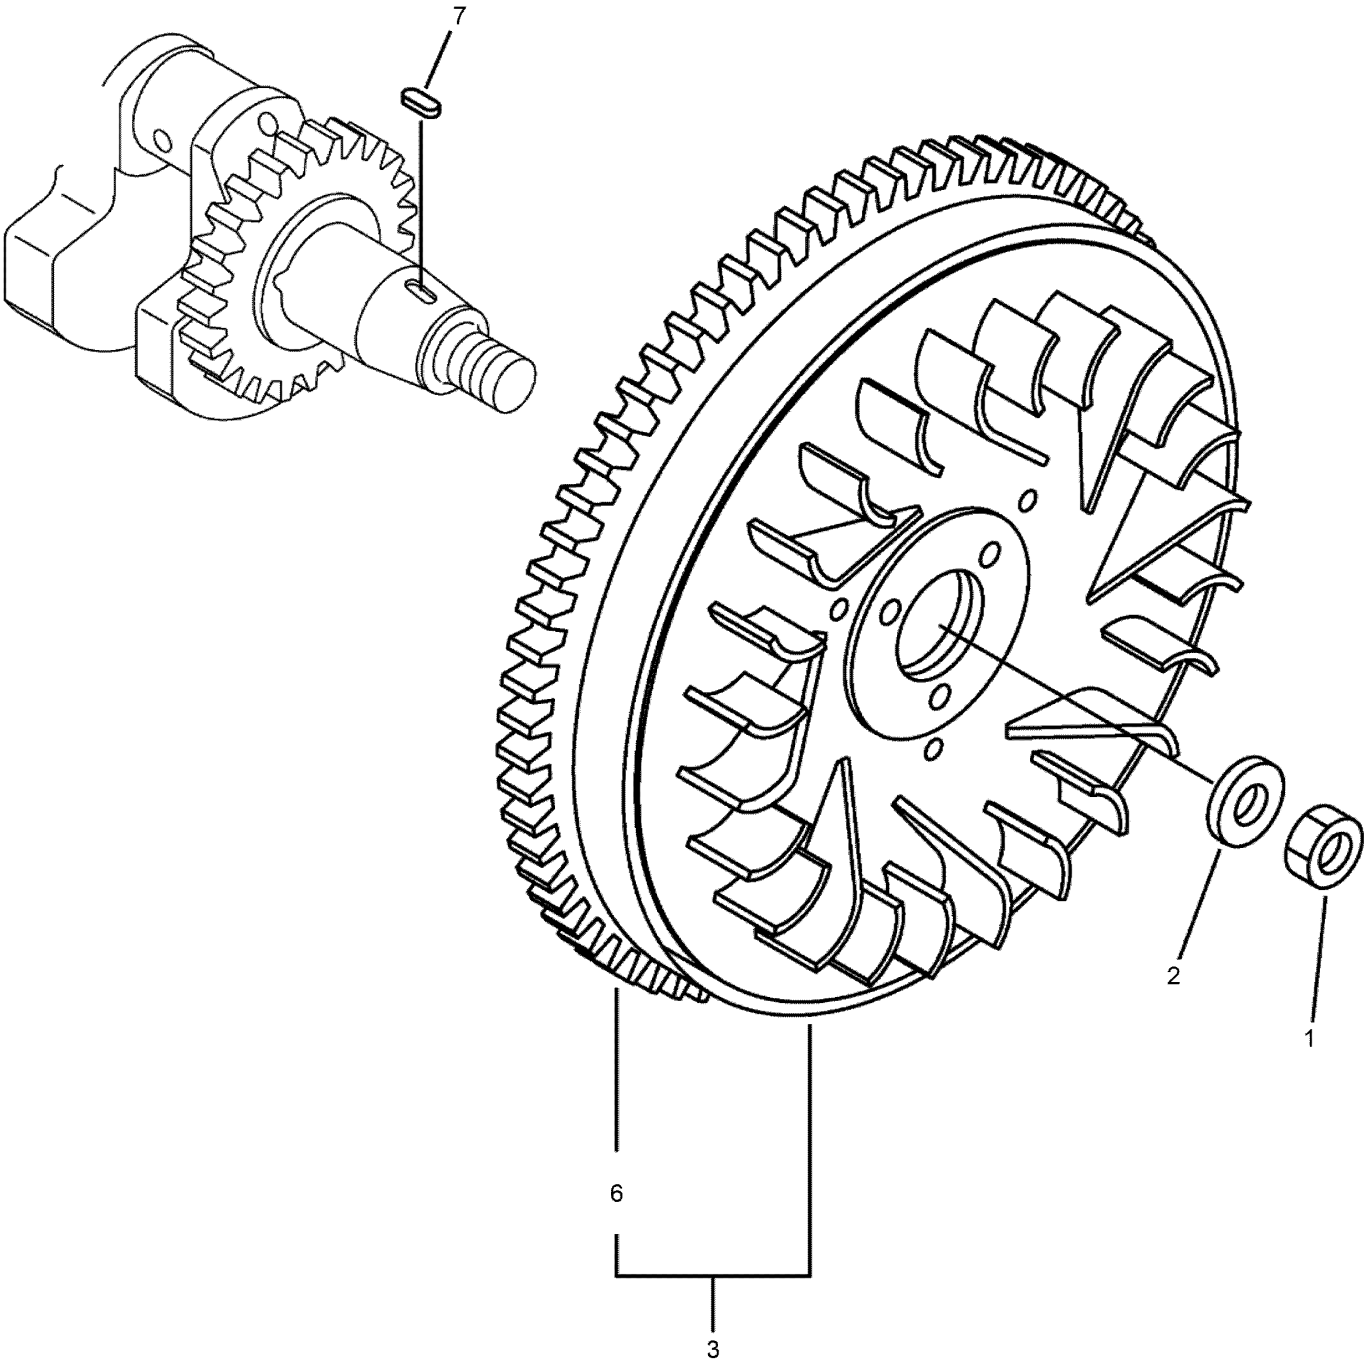

Flywheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8198	1	Nut-Wheel	6	136-8201	1	Gear-Ring
2	136-8199	1	Washer-Flywheel	7	136-8244	1	Key
3	136-8200	1	Flywheel ASM				

 
Piston and Connecting Rod Assembly

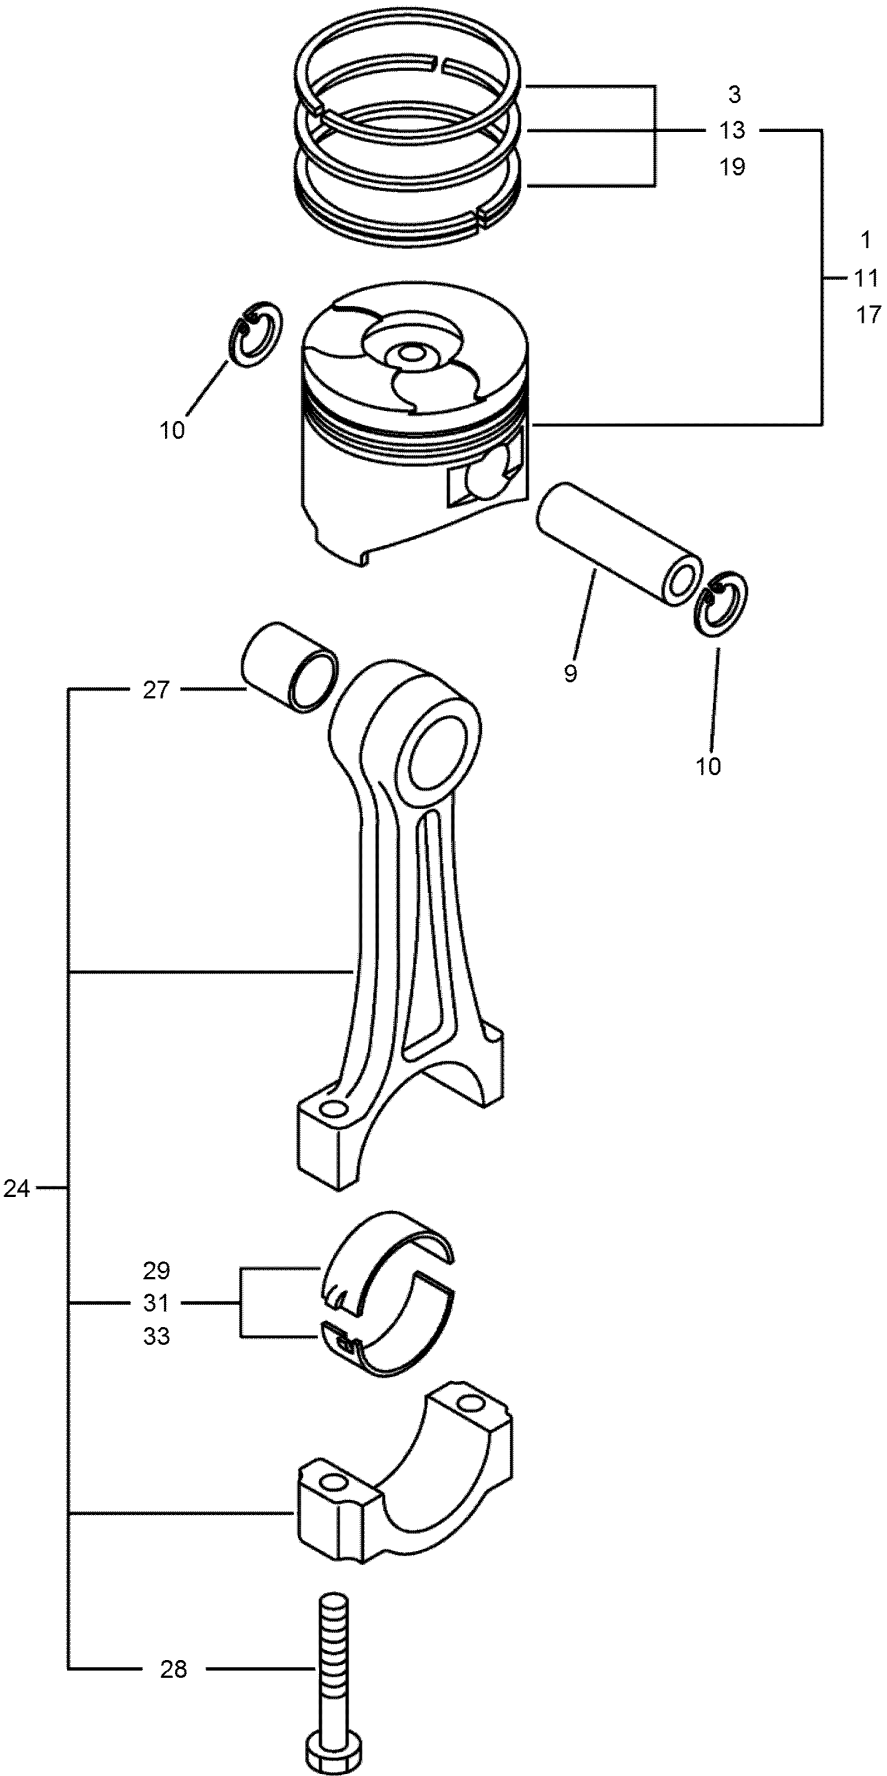

Piston and Connecting Rod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8278	1	Piston W/Rings	19	136-8272	1	Ring Set (O S=0.50)
3	136-8270	1	Piston Ring Set	24	136-8274	1	Connecting Rod ASM
9	136-8202	1	Pin-Piston	27	136-8224	1	Bushing-Pin, Piston
10	136-8130	2	Ring-Seeger	28	136-8131	2	Bolt-Rod, Connecting
11	136-8277	1	Piston W/Ring (.25 O S)	29	136-8281	1	Bearing-Pin, Crank
13	136-8271	1	Ring Set (O S=0.25)	31	136-8282	1	Bearing ASM (0.25)
17	136-8276	1	Piston W/Ring (.50 O S)	33	136-8283	1	Bearing (0.50 U S)

 
Balancer Shaft Assembly

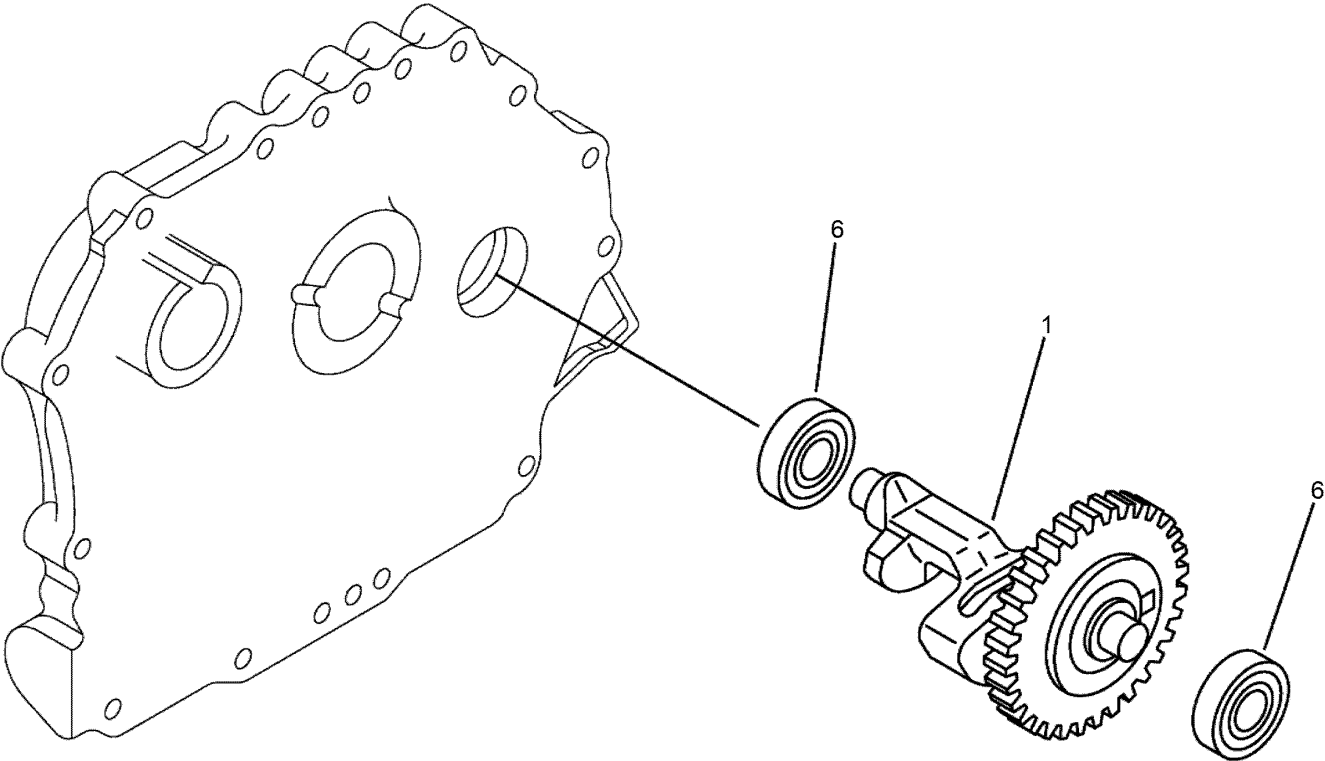

Balancer Shaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8273	1	Balancer Shaft ASM
6	136-8246	2	Bearing-Ball

 Lubrication Oil Pump and Governor Assembly

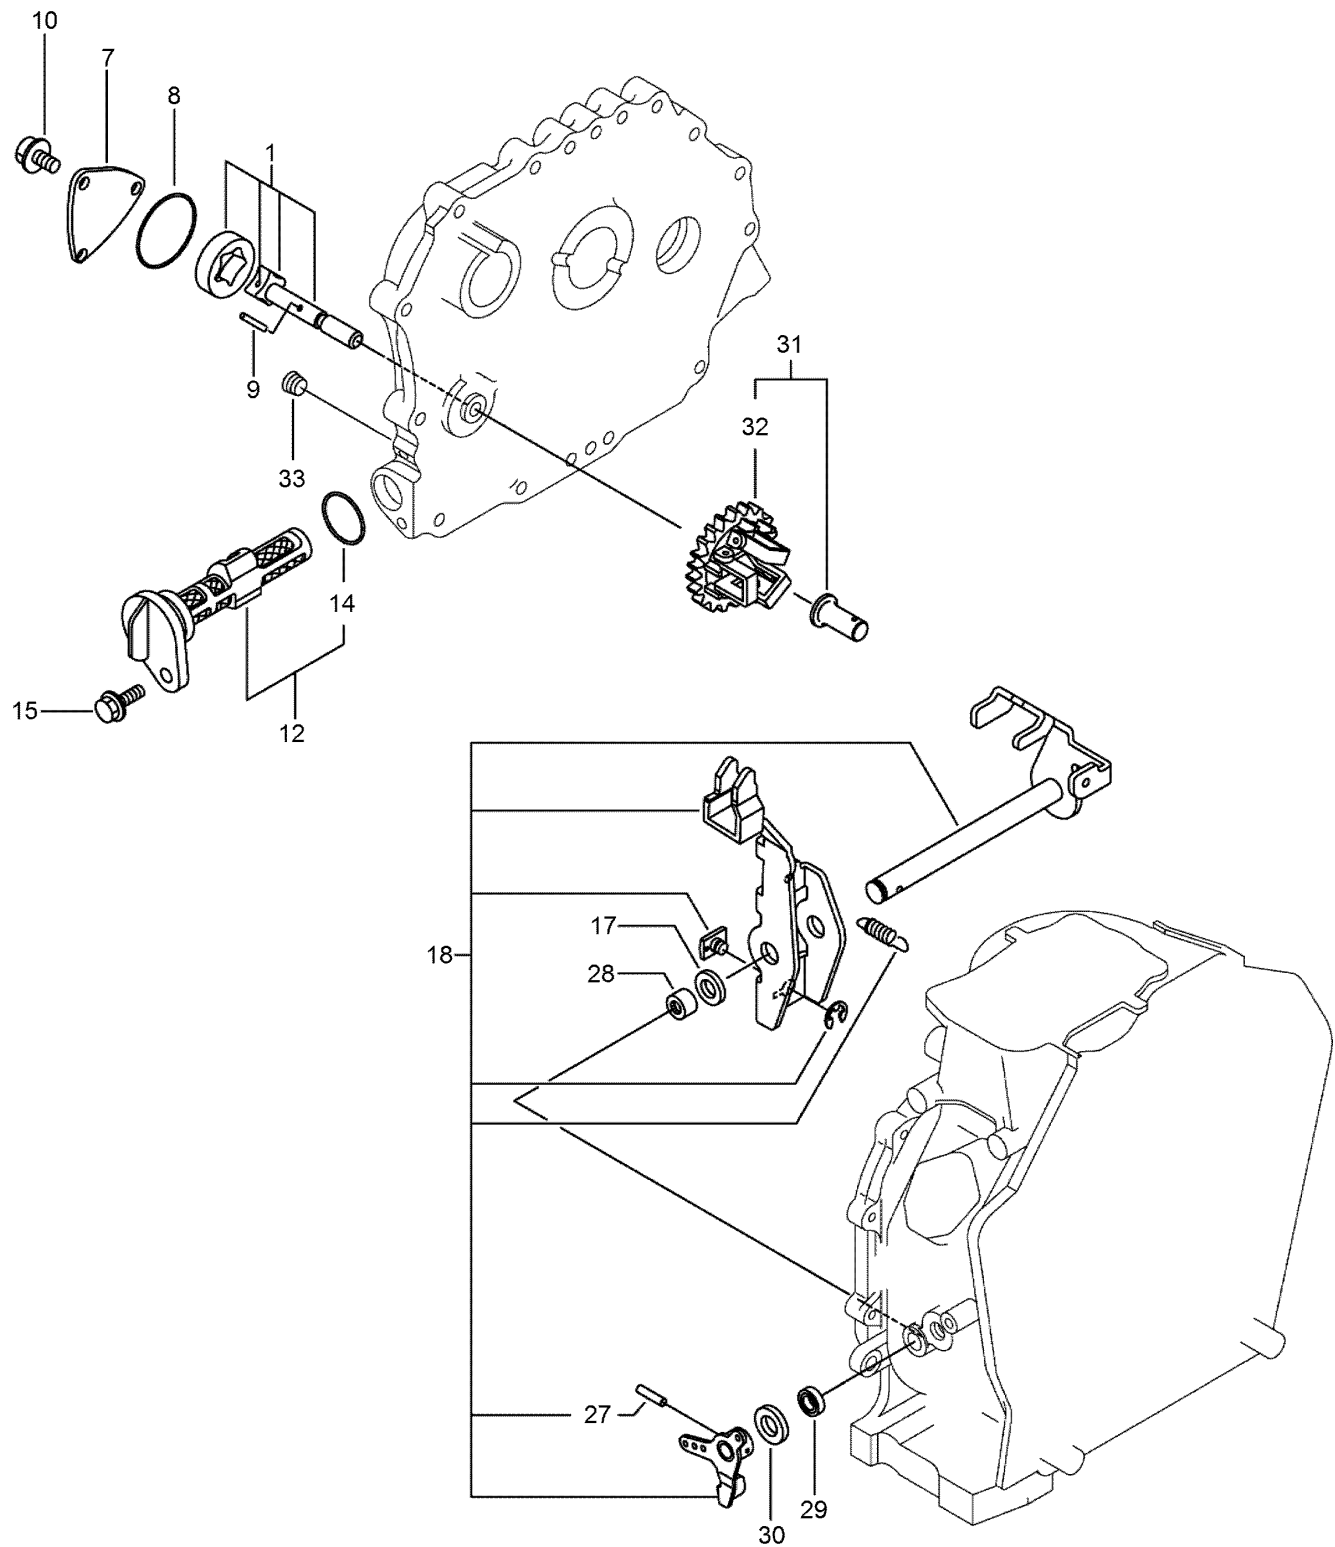


Lubrication Oil Pump and Governor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8191	1	Oil Pump ASM
7	136-8098	1	Cover-Pump, Oil
8	136-8099	1	O-Ring
9	136-8238	1	Pin-Parallel
10	125-7206	3	Bolt
12	136-8100	1	Oil Filter ASM
14	136-8252	1	O-Ring
15	125-7208	1	Bolt
17	136-8109	1	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
18	136-8139	1	Governor Lever ASM
27	136-8240	1	Pin-Taper
28	136-8217	2	Bearing-Needle
29	136-8110	1	Seal-Oil
30	136-8218	1	Washer-Thrust
31	136-8269	1	Governor ASM
32	136-8069	1	Governor Weight ASM
33	125-7195	1	Plug

 
Cover Assembly

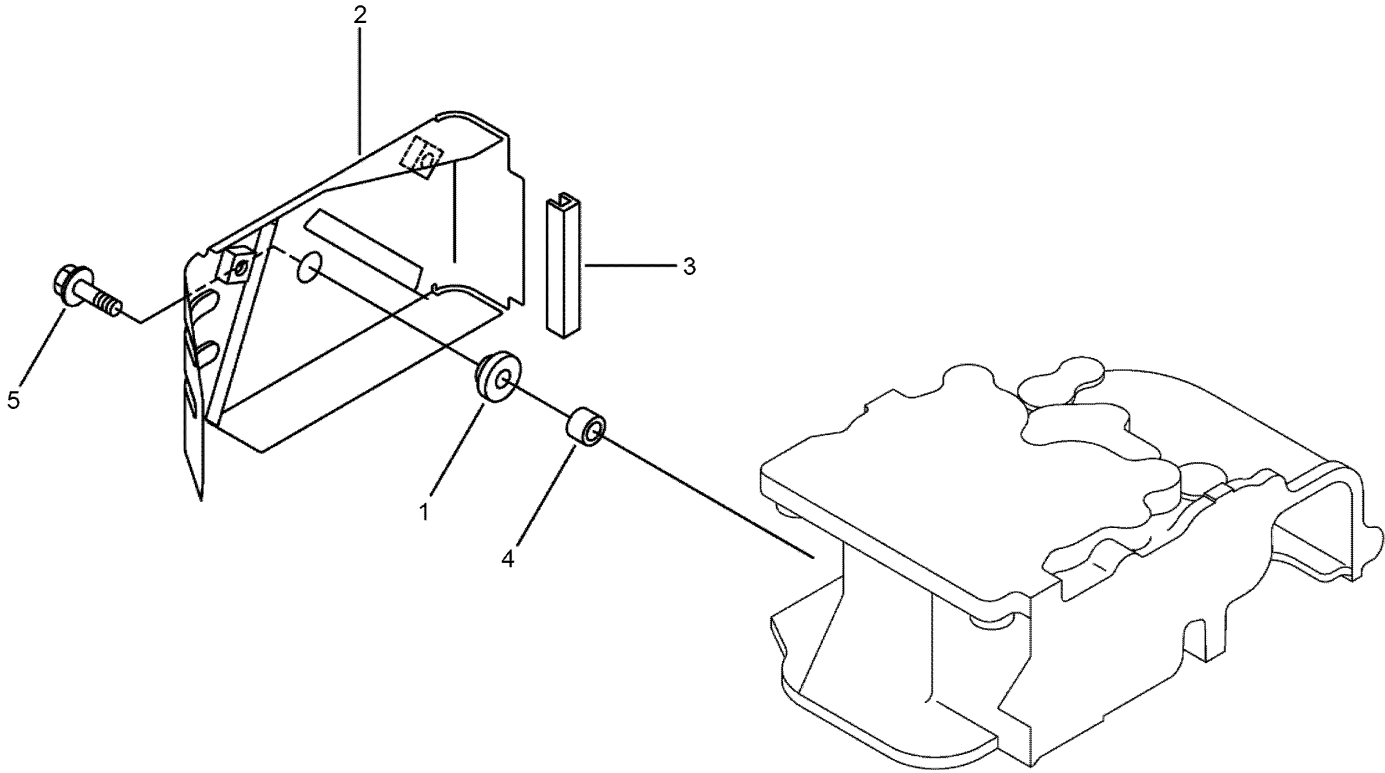

Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8102	1	Grommet	4	136-8163	1	Collar
2	136-8133	1	Cover-Side, B	5	125-7209	1	Bolt
3	136-8162	1	Rubber, Seal				

 
Cooling Fan Case Assembly

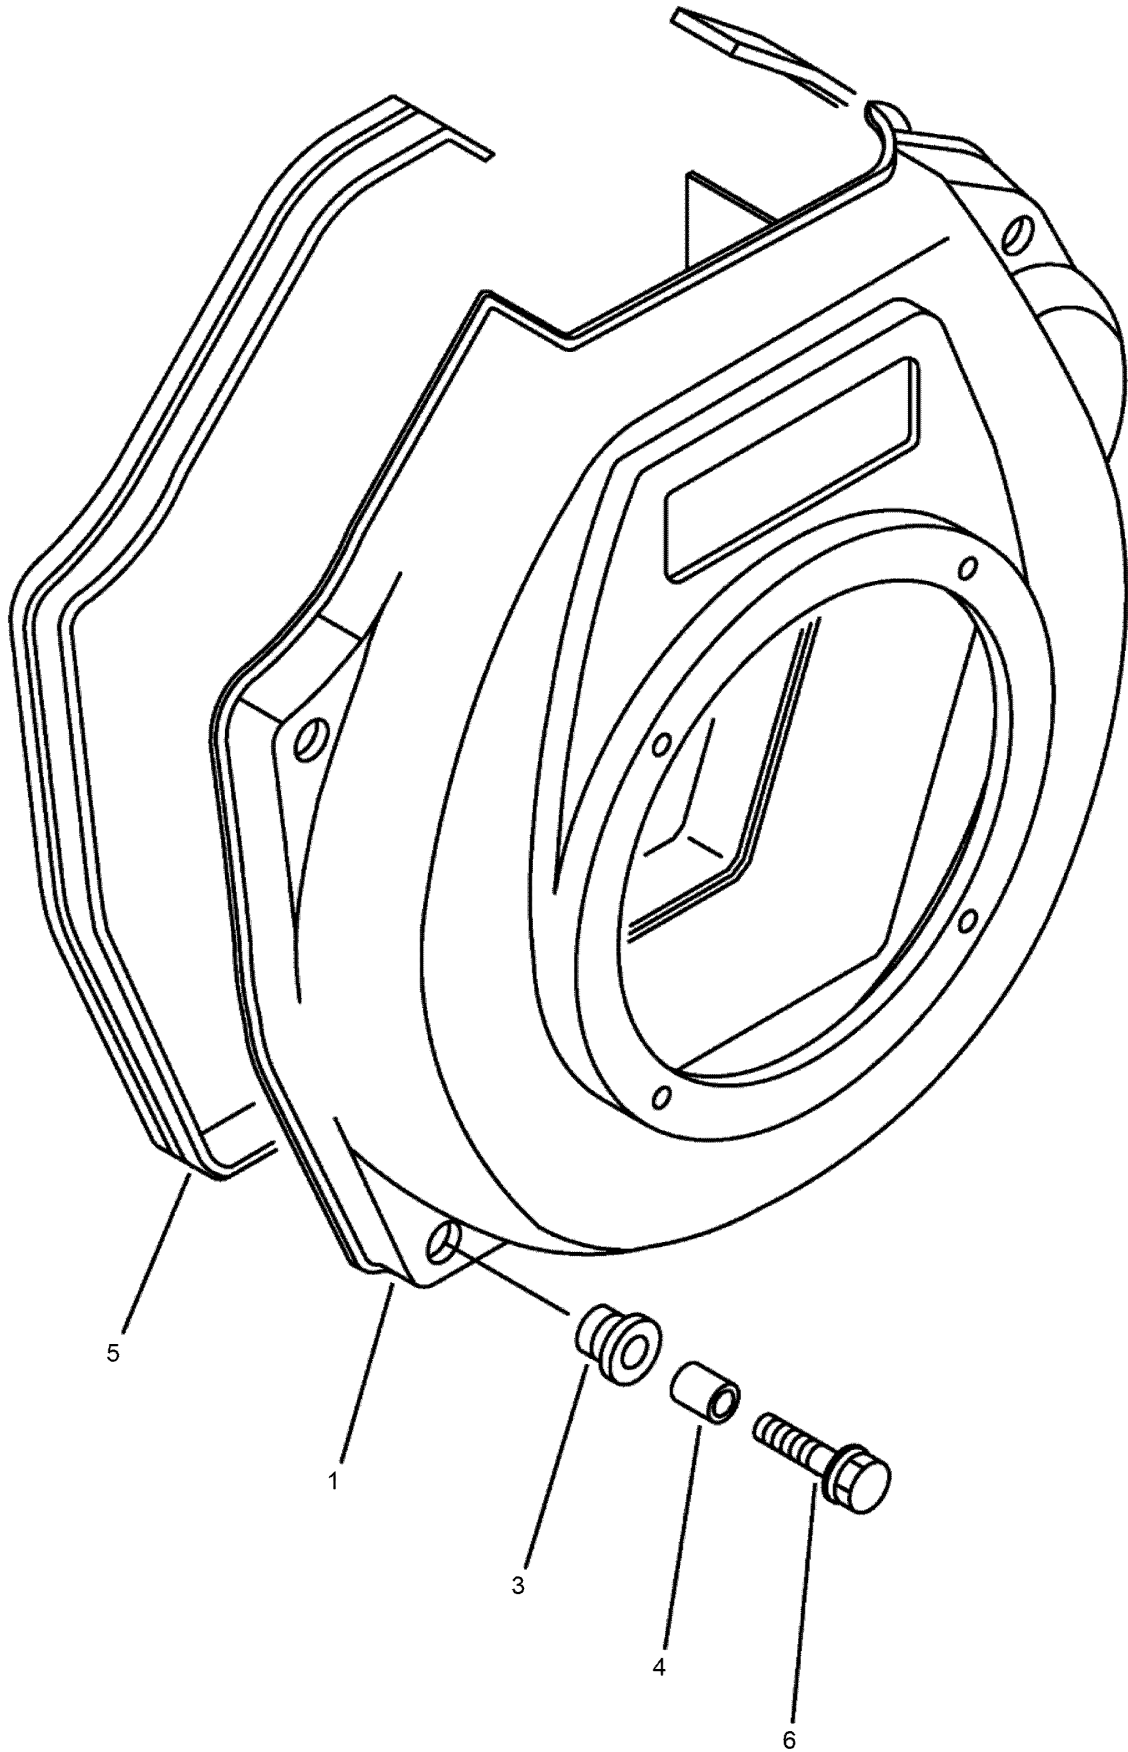

Cooling Fan Case Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8132	1	Case-Fan, Cooling	5	136-8203	1	Seal-Case, Fan
3	136-8103	4	Cushion-Rubber	6	136-8105	4	Bolt
4	136-8104	4	Collar				

 
Fuel Injection Pump and Fuel Valve Assembly

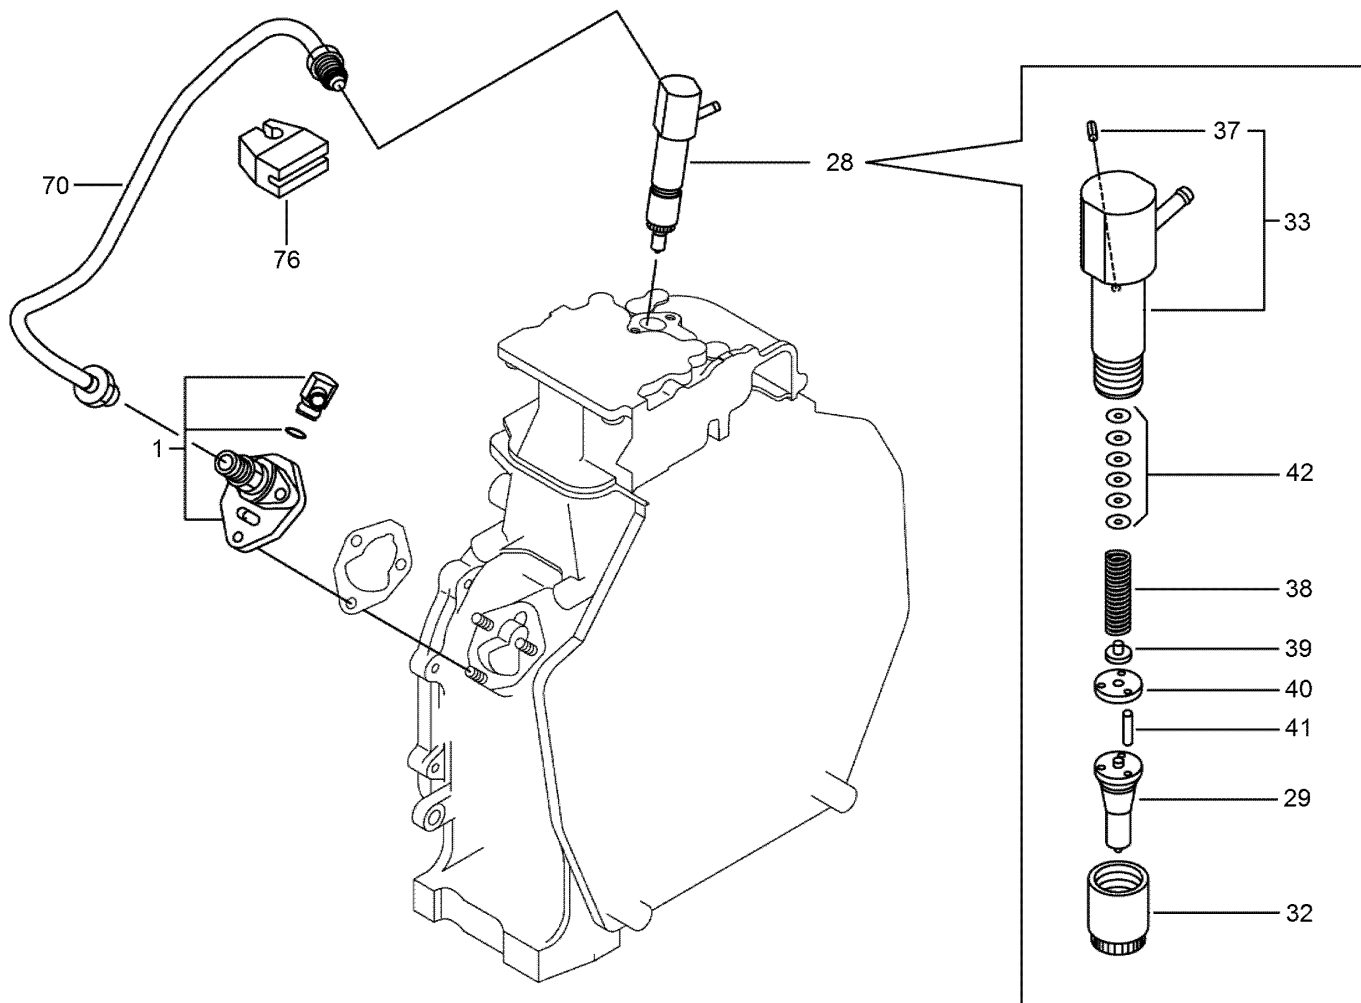

Fuel Injection Pump and Fuel Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8279	1	Fuel Injector Pump ASM	39	125-6903	1	Seat-Spring
28	136-8280	1	Fuel Injecton Valve ASM	40	125-6904	1	Plate
29	136-8157	1	Fuel Injecton Nozzle ASM	41	125-6905	2	Pin
32	125-6901	1	Nut	42	125-6939	1	Shim Set
33	136-8155	1	Nozzle Holder ASM	70	136-8137	1	Pipe-Injection, Fuel
37	136-8241	1	Pin-Spring	76	136-8204	1	Support-Pipe
38	125-6902	1	Spring				

 
Fuel Tank and Fuel Pipe Assembly

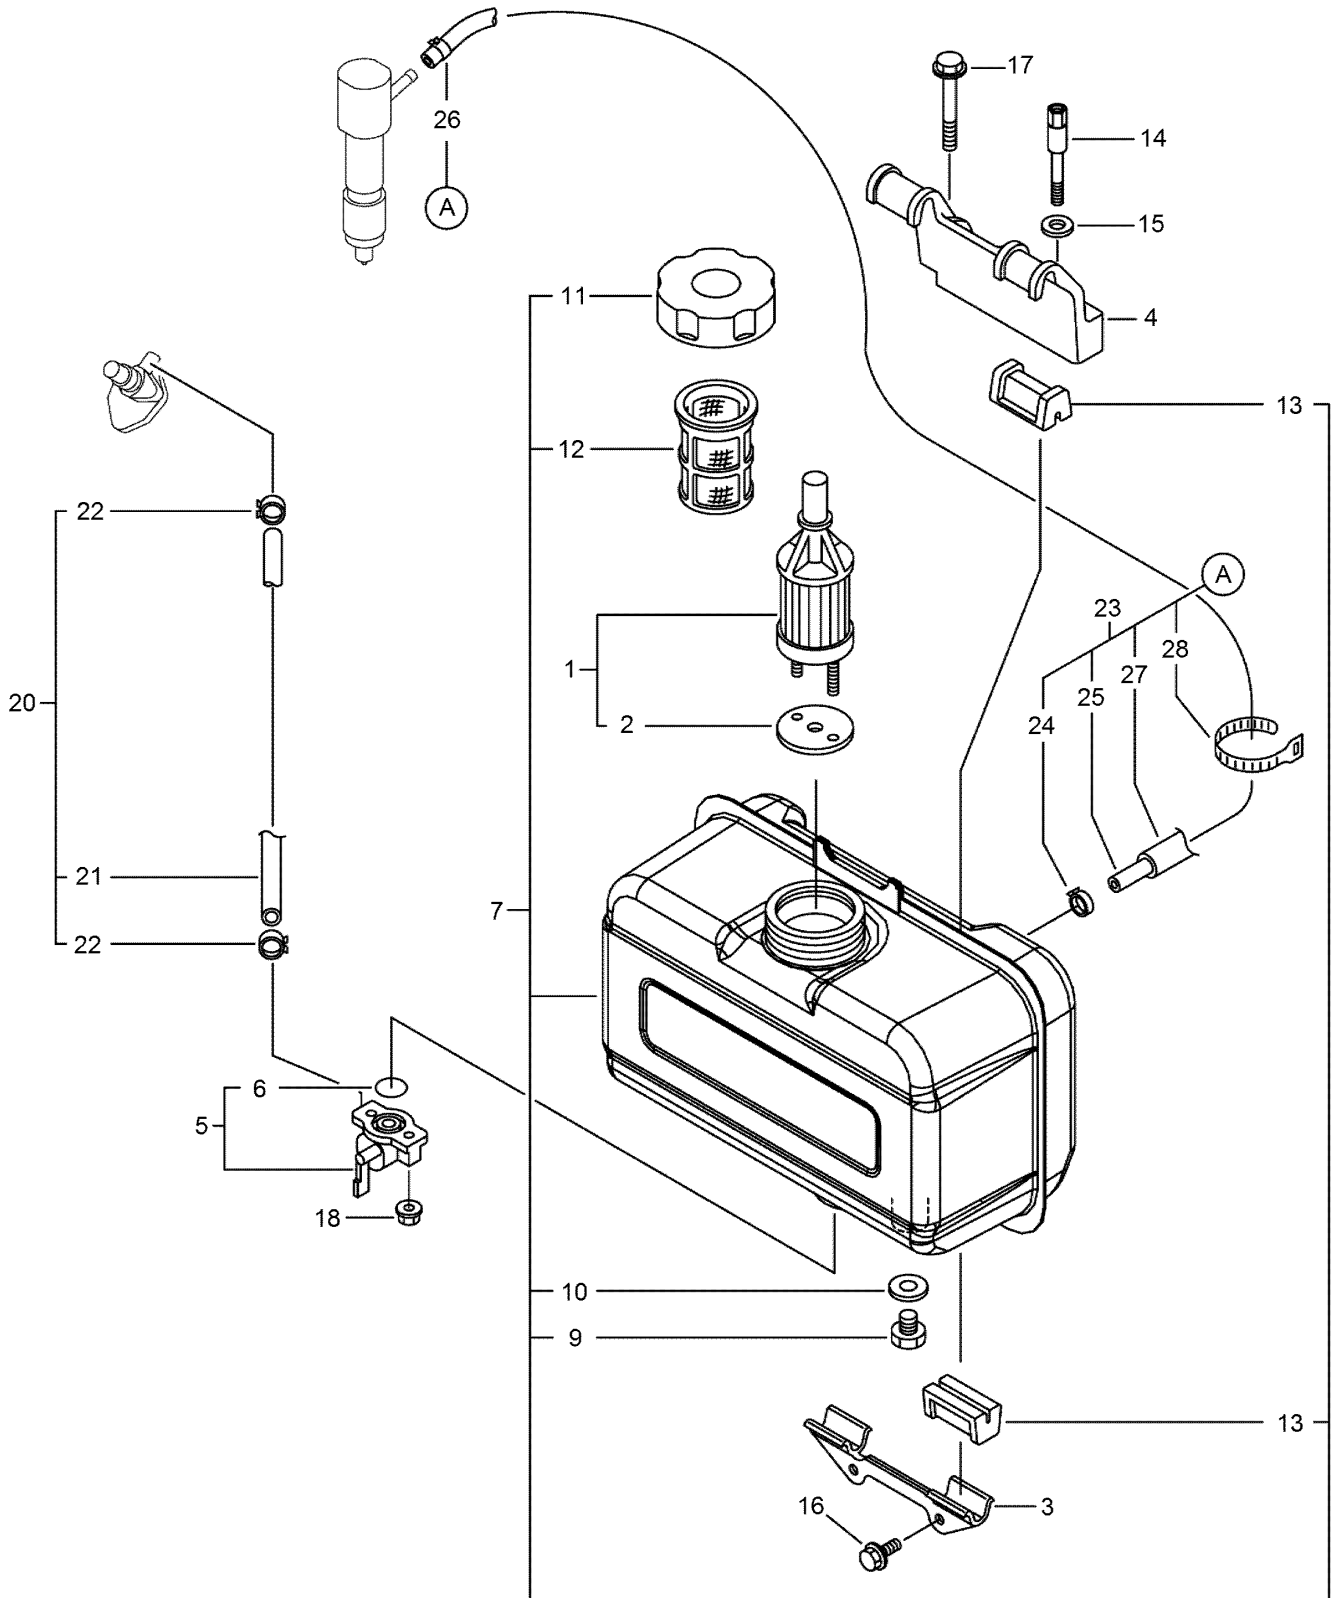

Fuel Tank and Fuel Pipe Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8079	1	Fuel Filter ASM	15	136-8235	1	Washer
2	136-8080	1	Gasket	16	125-7208	2	Bolt
3	136-8067	1	Stay A-Tank, Fuel	17	125-7219	1	Bolt
4	136-8134	1	Stay B-Tank, Fuel	18	125-7231	2	Nut
5	136-8076	1	Fuel Cock ASM	20	136-8221	1	Fuel Pipe ASM
6	136-8248	1	O-Ring	21	136-8222	1	Pipe-Fuel
7	136-8147	1	Fuel Tank ASM	22	136-8245	2	Clamp-Hose
9	136-8107	1	Plug-Drain	23	136-8156	1	Return Pipe ASM
10	125-7192	1	Gasket	24	136-8226	1	Clamp-Hose
11	136-8106	1	Fuel Tank Cap ASM	25	136-8135	1	Pipe-Return, Fuel
12	136-8108	1	Filter-Fuel	26	136-8225	1	Clamp-Hose
13	136-8081	4	Damper-Tank, Fuel	27	136-8136	1	Protector-Tube
14	136-8068	1	Bolt-Lifting	28	127-2981	1	Band

 
Control Device Assembly

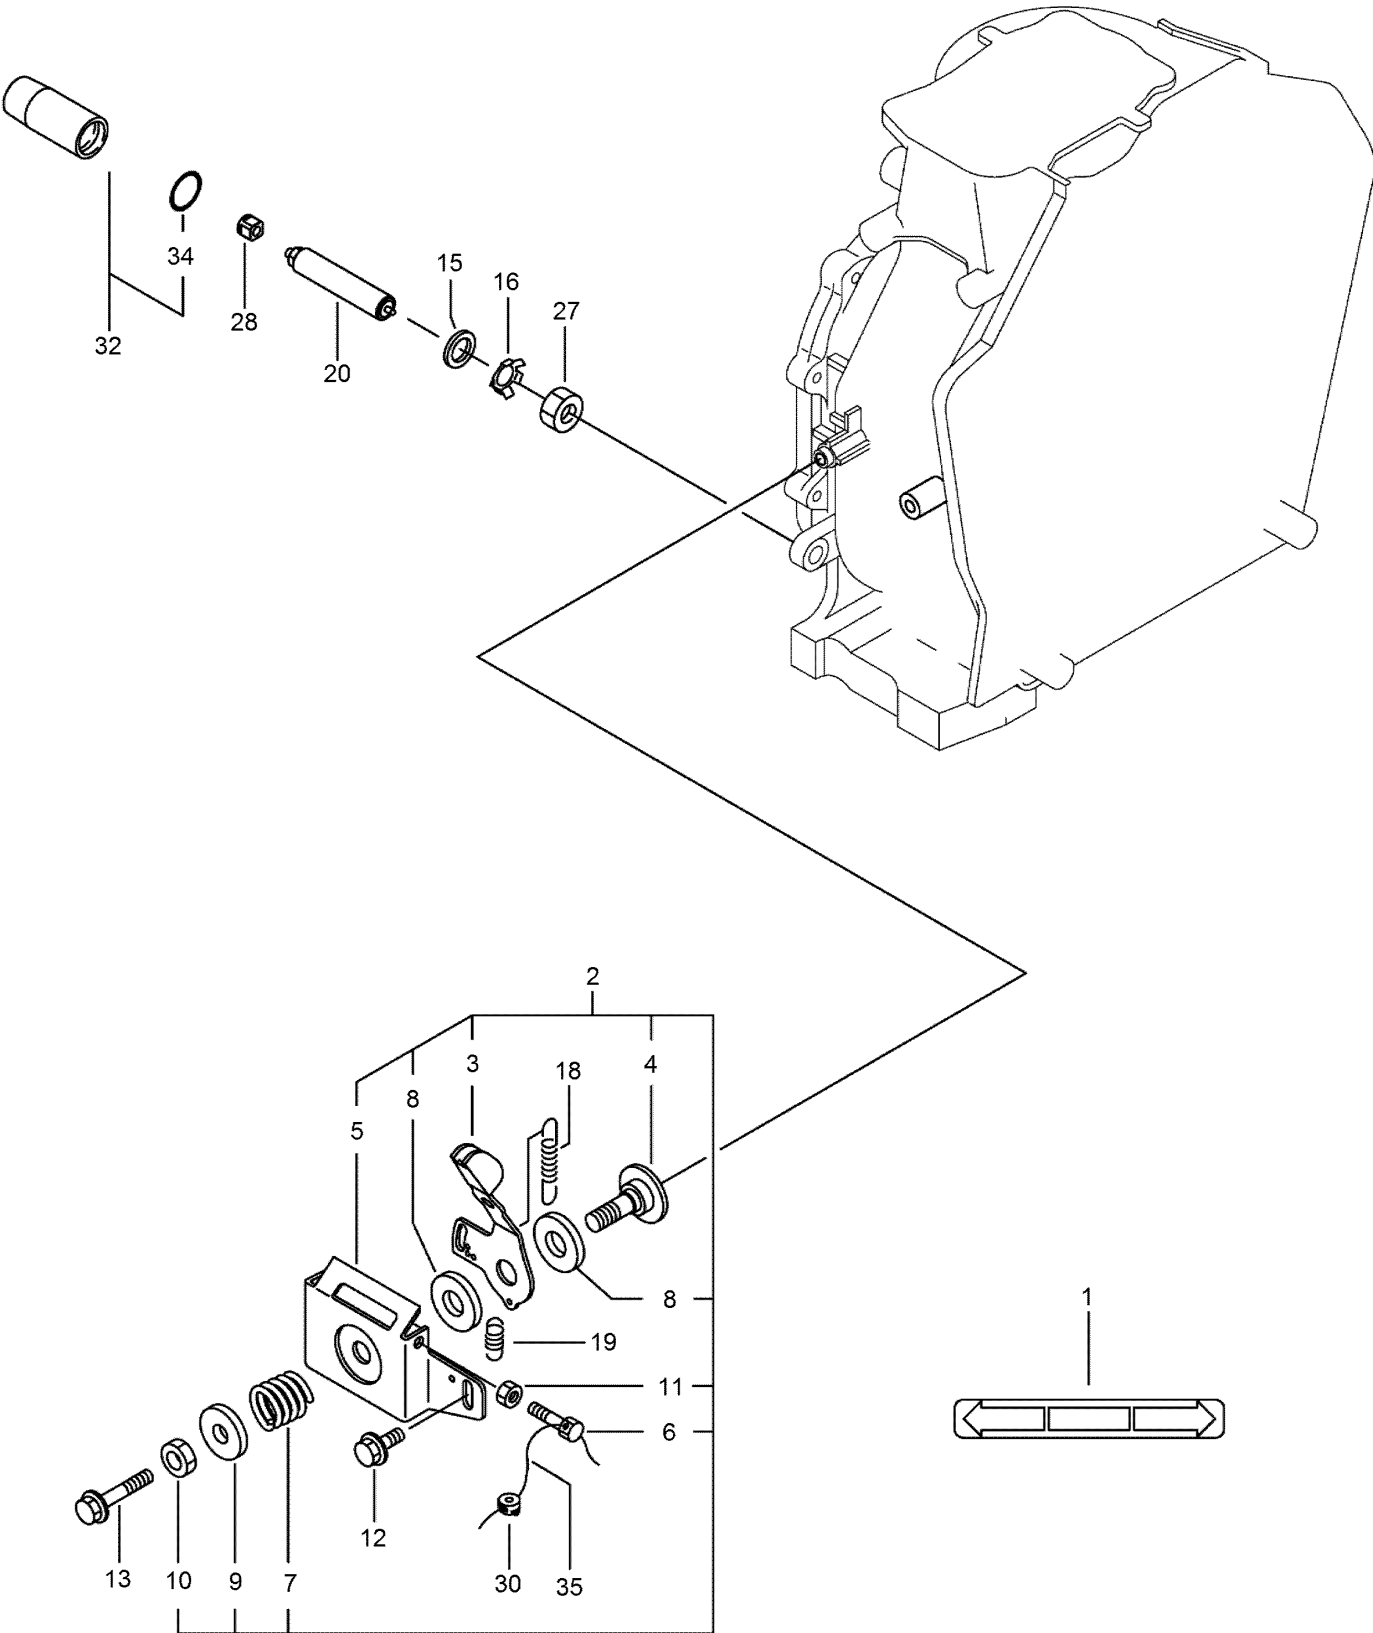

Control Device Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8232	1	Label-Operation	13	136-8256	1	Bolt
2	136-8072	1	Bracket ASM	15	136-8084	1	Washer-Plain
3	137-8302	1	Bracket ASM	16	136-8220	1	Plate
4	136-8233	1	Shaft-Handle	18	136-8138	1	Spring-Regulator
5	136-8071	1	Bracket-Handle	19	136-8111	1	Spring-Return
6	136-8082	1	Bolt-Adjusting	20	136-8185	1	Limiter ASM
7	136-8050	1	Spring-Handle	27	136-8086	1	Nut
8	136-8051	2	Plate-Friction	28	136-8113	1	Cap-Limiter
9	136-8052	1	Washer	30	136-8223	1	Tin
10	136-8264	1	Nut	32	136-8085	1	Protector ASM
11	136-8266	1	Nut	34	136-8249	1	O-Ring
12	125-7207	1	Bolt	35	136-8243	1	Wire

 
Recoil Starter Assembly

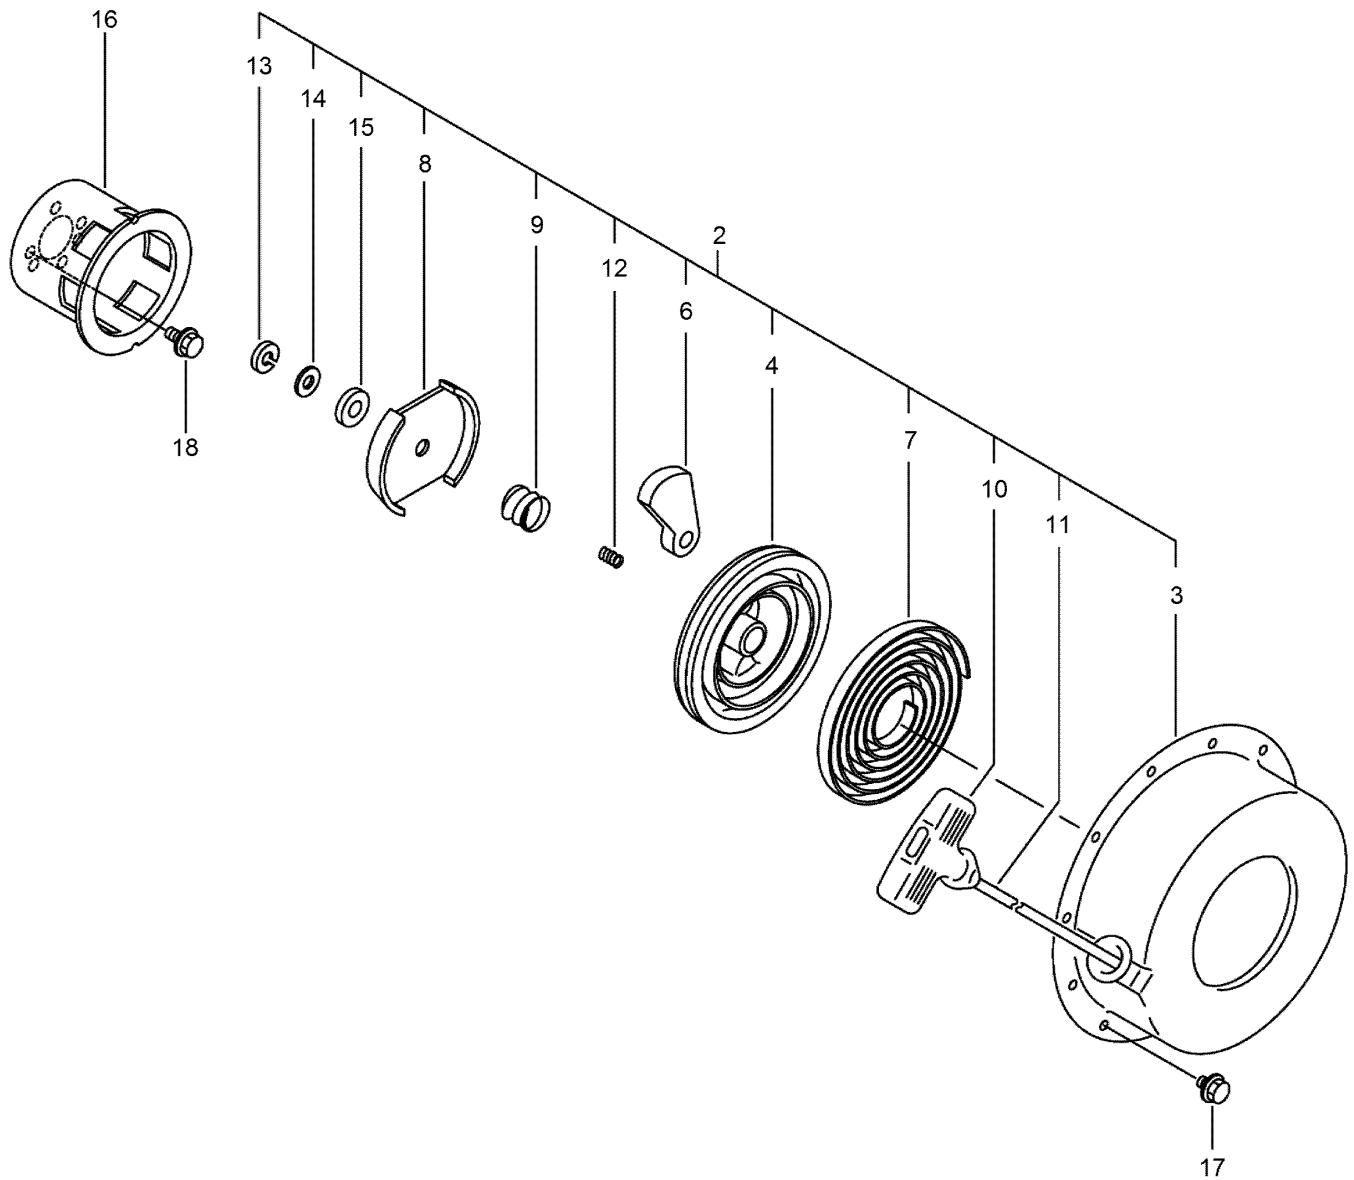

Recoil Starter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	136-8205	1	Recoil ASM	11	136-8212	1	Rope-Starter
3	136-8206	1	Case-Starter	12	136-8213	1	Spring-Return
4	136-8207	1	Reel-Recoil	13	136-8214	1	Circlip
6	136-8208	2	Ratchet	14	136-8215	1	Washer
7	136-8164	1	Spring-Spiral	15	136-8216	1	Washer
8	136-8209	1	Guide-Ratchet	16	136-8211	1	Pulley-Starter
9	136-8210	1	Spring-Friction	17	136-8255	4	Bolt
10	136-8165	1	Knob-Starter	18	125-7206	3	Bolt

 
Starter Motor Assembly

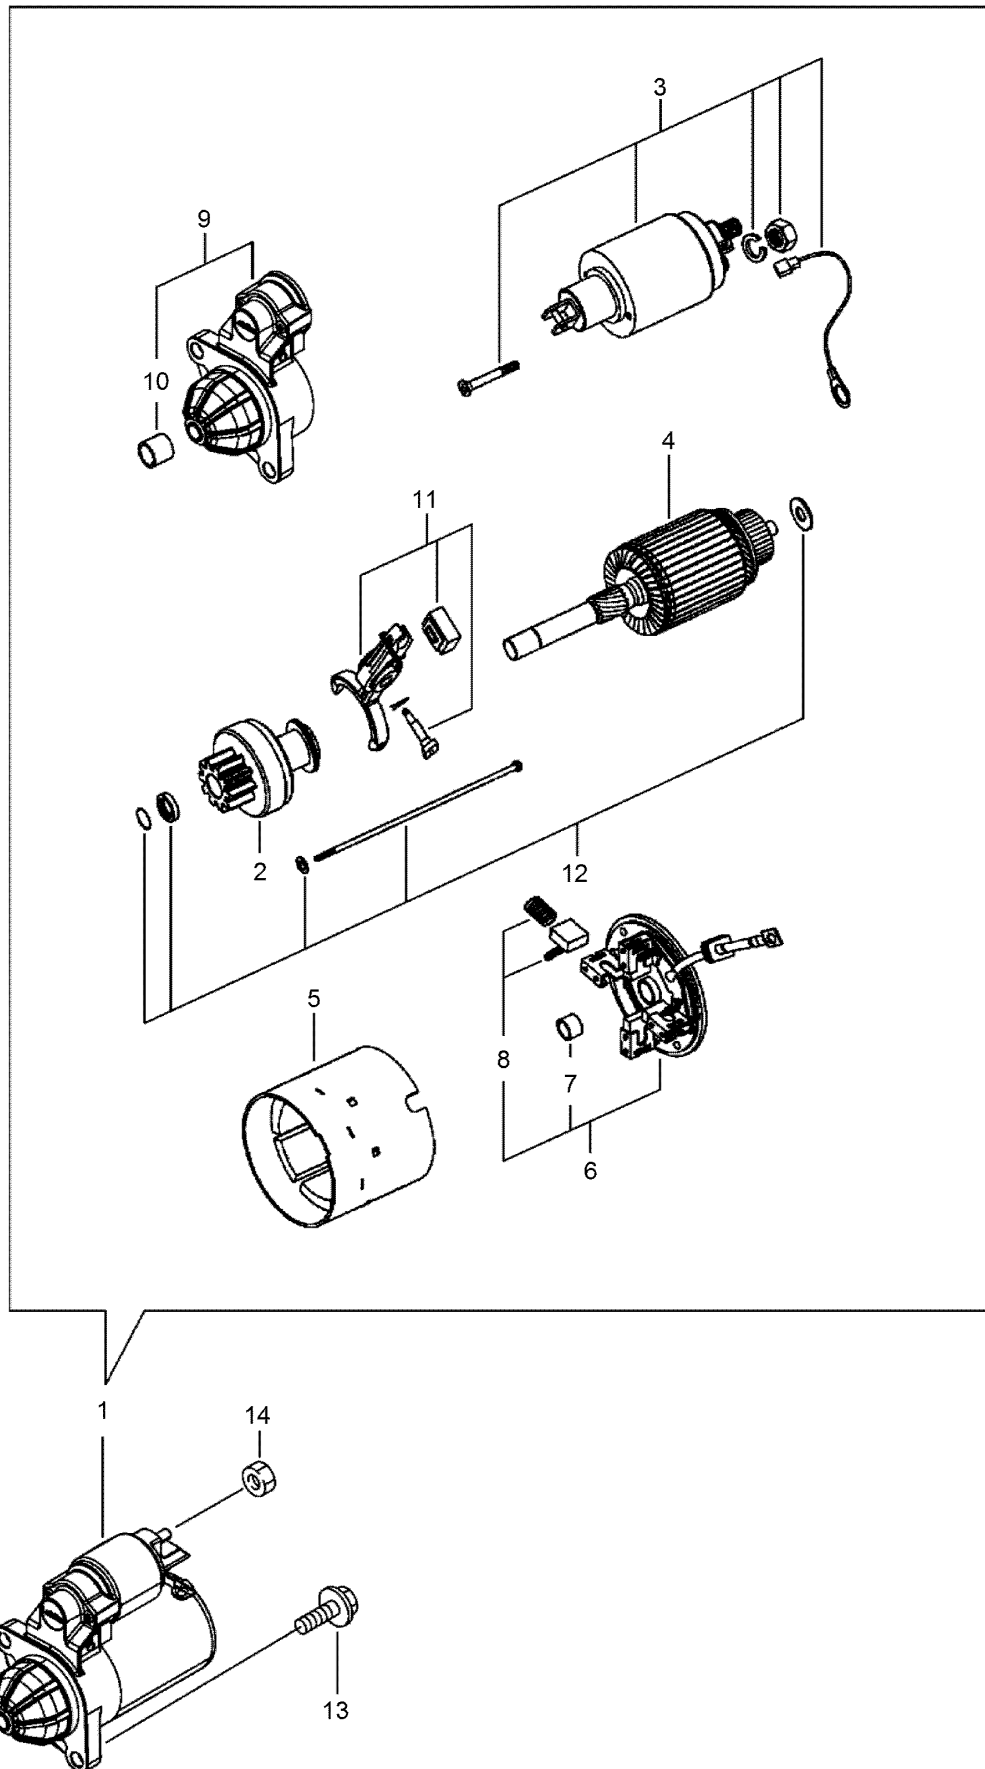

Starter Motor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8149	1	Starter Motor ASM	8	136-8172	4	Brush Holder ASM
2	136-8167	1	Pinion Clutch ASM	9	136-8171	1	Gear Case ASM
3	136-8169	1	Magnetic Switch ASM	10	136-8166	1	Bushing-Side, Top
4	136-8150	1	Armature ASM	11	136-8173	1	Shift Lever Kit
5	136-8151	1	Yoke ASM	12	136-8152	2	Through Bolt ASM
6	136-8170	1	Rear Cover ASM	13	136-8258	2	Bolt
7	136-8168	1	Bushing-Rear Side	14	136-8265	1	Nut

 
Electric Parts Assembly

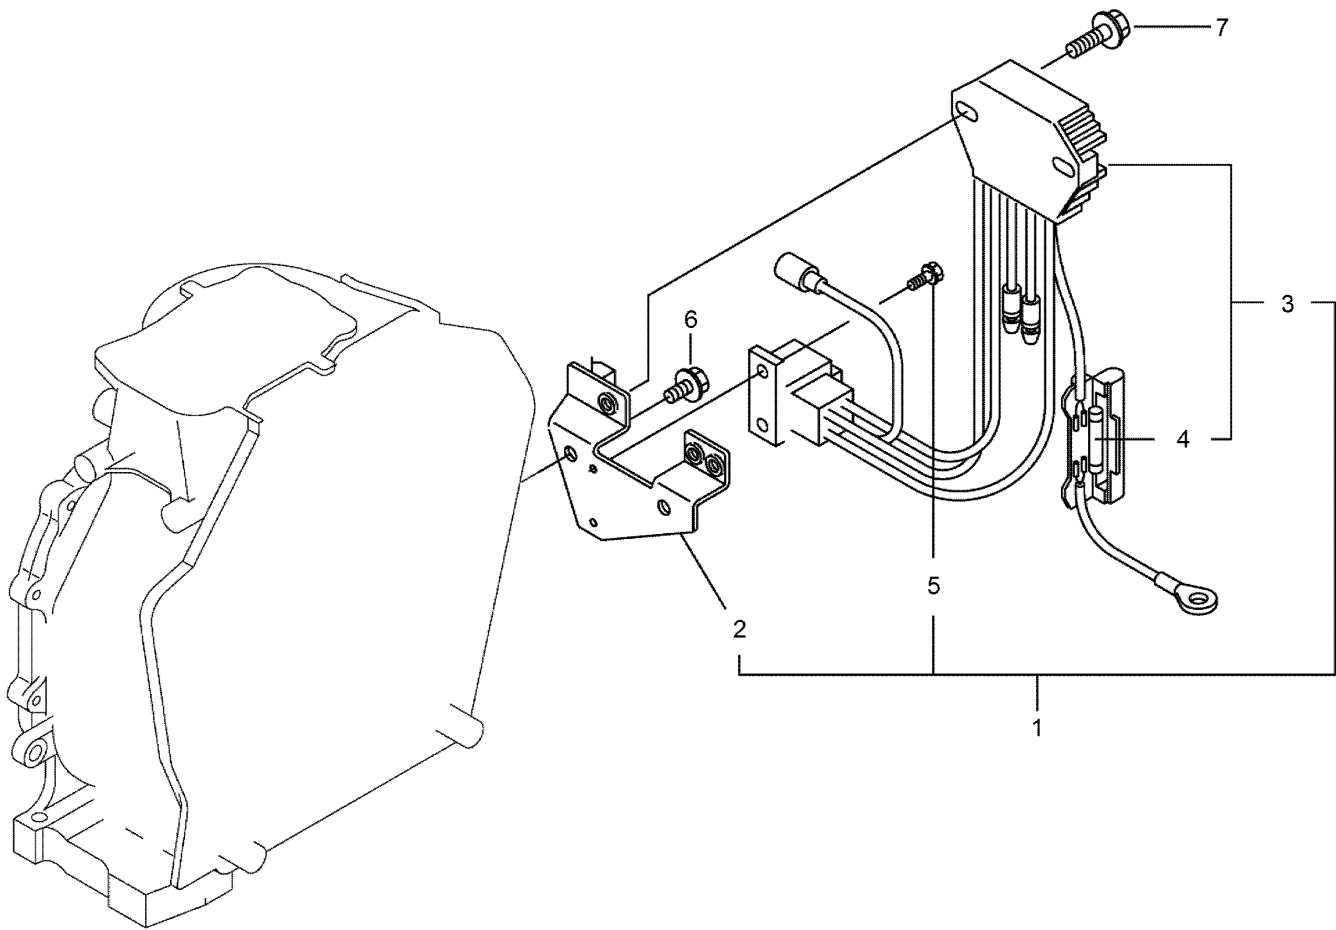

Electric Parts Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8175	1	Regulator And Harness ASM	4	136-8177	1	Fuse-20A
2	136-8174	1	Bracket-Harness	5	136-8254	2	Screw
3	136-8176	1	Regulator	6	125-7206	2	Bolt
				7	125-7209	2	Bolt

 
Key Switch Assembly

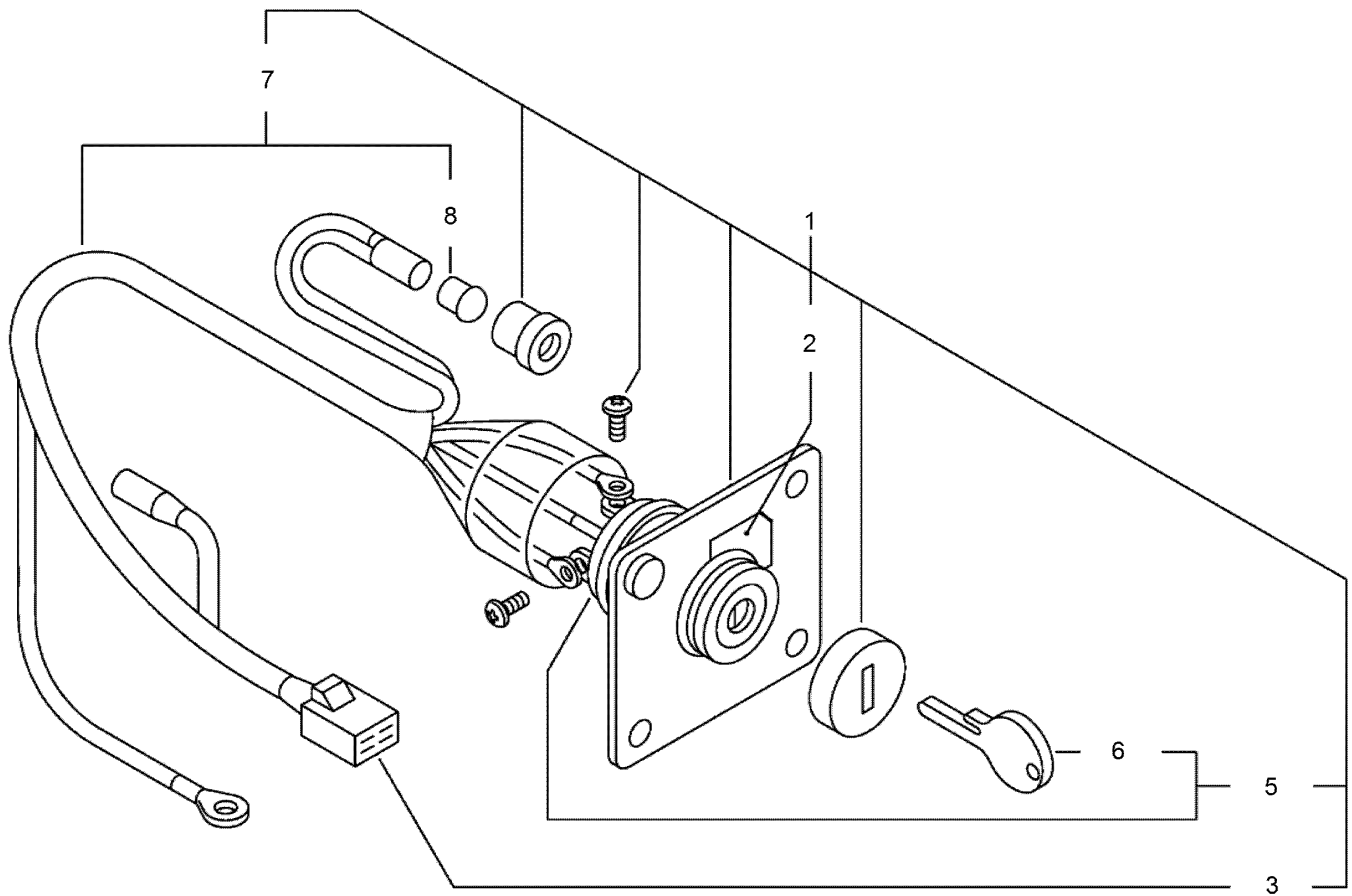

Key Switch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8158	1	Switch Panel ASM	6	136-8056	1	Key-Switch
2	136-8054	1	Label-Start Switch	7	136-8160	1	Harness-Wire
3	136-8159	1	Coupler	8	136-8268	1	Bulb
5	136-8055	1	Switch And Key ASM				

 
Dynamo Assembly

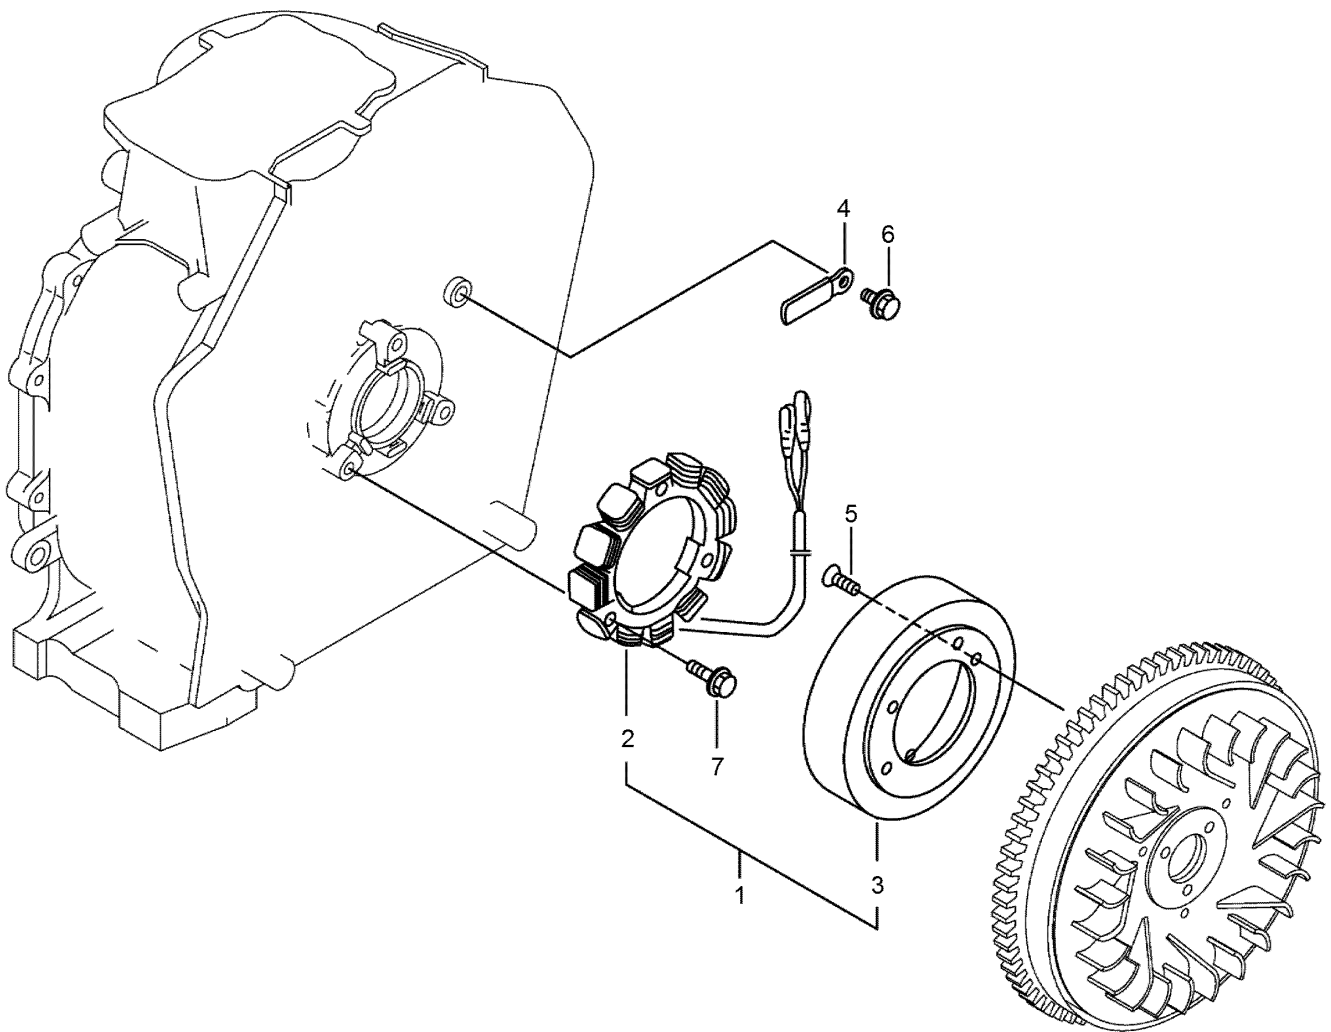

Dynamo Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8178	1	Dynamo ASM	5	136-8073	3	Screw-Csk
2	136-8179	1	Stator ASM	6	125-7206	1	Bolt
3	136-8180	1	Wheel-Dynamo	7	125-7209	3	Bolt
4	136-8228	1	Clamp-Cord				

 Gasket Set

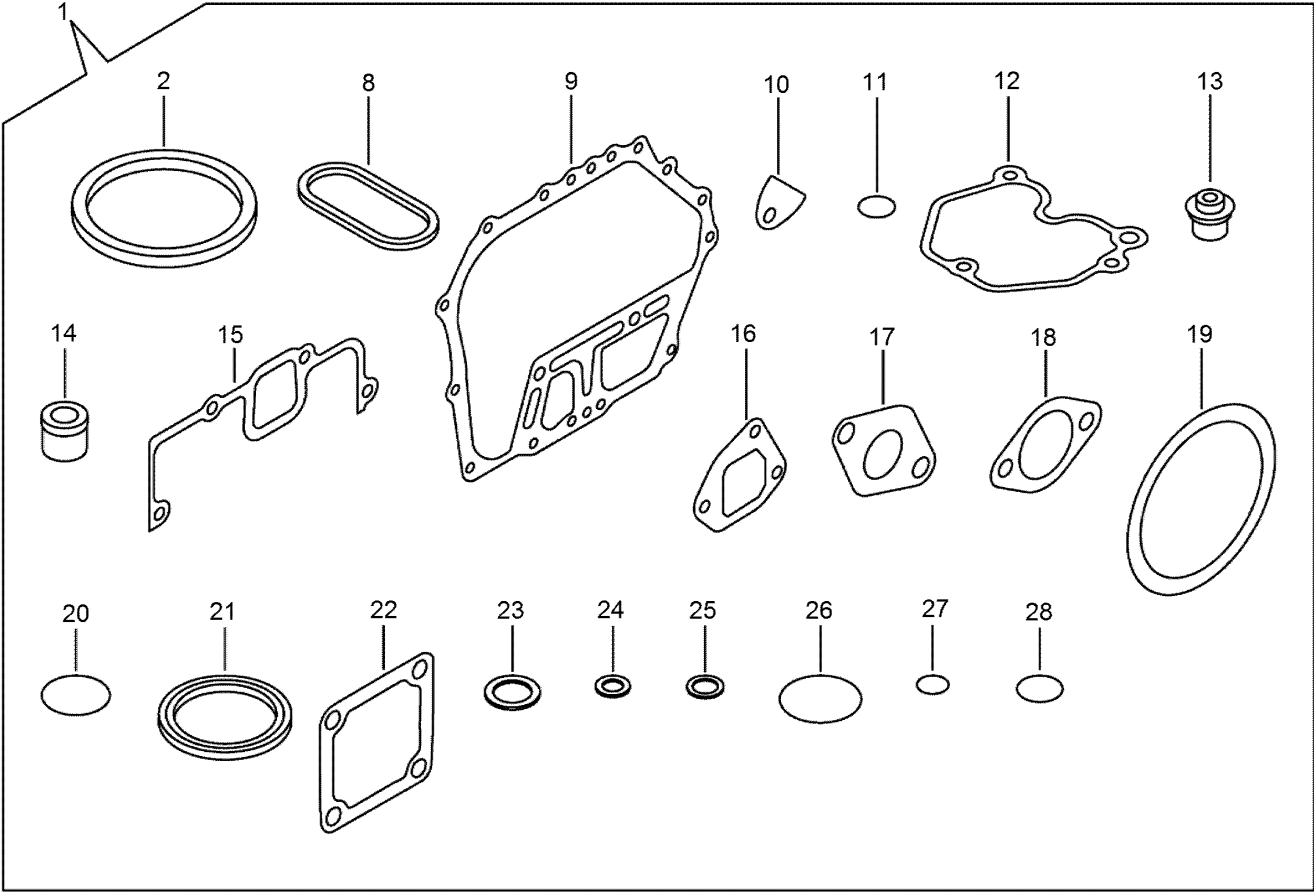

Gasket Set (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-8153	1	Gasket Set	18	136-8234	1	Gasket-Muffler
2	136-8192	1	Gasket-Head, Cylinder	19	136-8161	1	Gasket
8	136-8193	1	O Ring-Tappet	20	136-8099	1	O-Ring
9	136-8194	1	Gasket-Case, Crank	21	136-8227	4	Gasket
10	136-8077	1	Gasket-Cover	22	125-7000	3	Gasket
11	136-8091	2	O-Ring	23	136-8236	2	Washer-Seal
12	136-8121	1	Gasket-Cover	24	125-7192	1	Gasket
13	136-8190	2	Seal-Stem, Valve	25	127-3174	1	Gasket
14	136-8219	1	Gasket-Nozzle	26	136-8250	1	O-Ring
15	136-8125	1	Gasket-Cleaner, Air	27	136-8251	2	O-Ring
16	136-8197	2	Gasket-Cleaner, Air	28	136-8252	1	O-Ring
17	136-8127	1	Gasket-Muffler				

Attachments and Accessories

For 23897 Diesel-Powered FM 330 Fluid Mixer

Product Name	Model/Part
RV Antifreeze	106-1201
All Season Synthetic Oil (10W30, QT)	117-0066
500 Gallon Single Mixing Tank.....	23893
1000 Gallon Single Mixing Tank.....	23894
Two Tank Setup Kit	23895
10w30 4-Cycle Engine Oil (32oz Bottle).....	38280
Grease-Mobil, CM-W	505-162

Notes:

Notes:

Notes:



Count on it.