



44" Recycler Cutting Unit

For Lawn Tractors

Model No. 79108-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Spindle And Blade Assembly	3	Pulley And Brake Assembly	5
Chute And Recycler Assembly	4	Miscellaneous Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

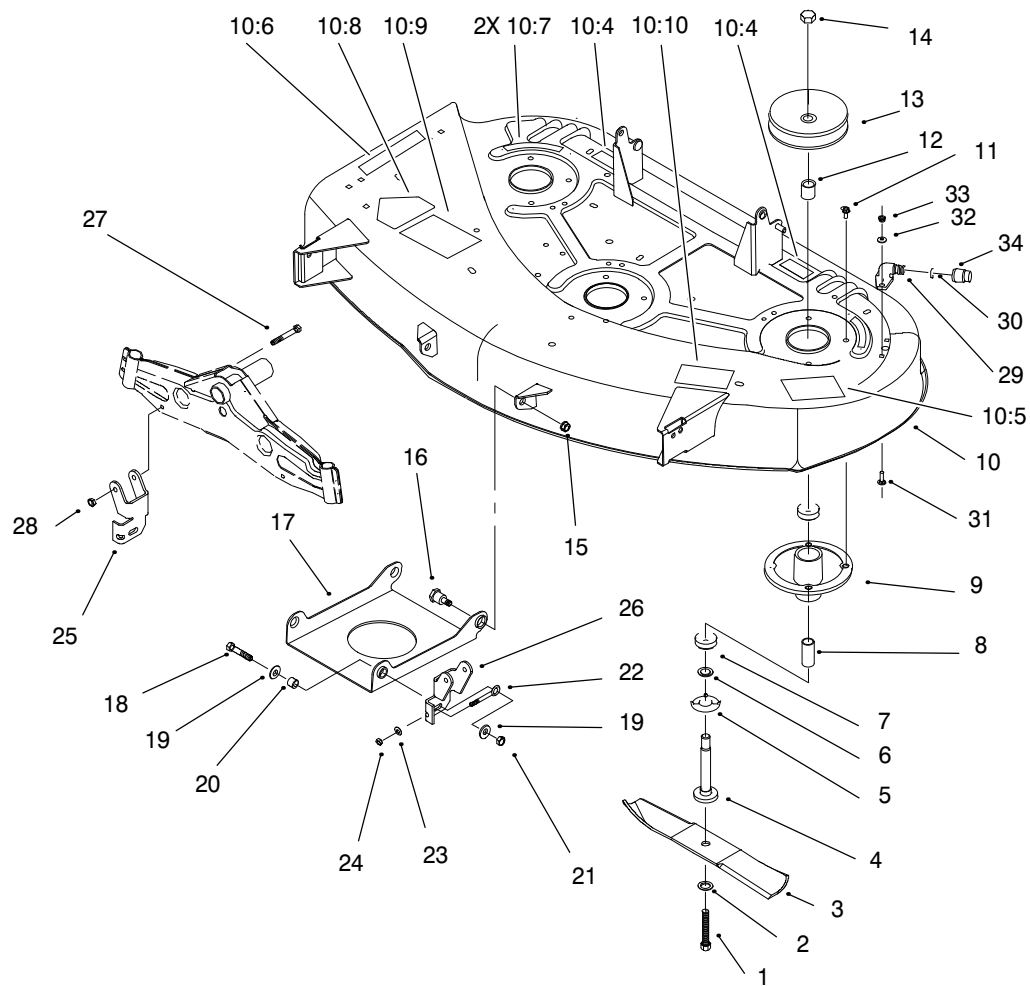


Sheet No.:2
C-2891

Spindle And Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	26-0671	3	Screw-Blade
2	3290-465	3	Washer-Belleville
3	92-7952	3	Blade-Recycler
4	80-4342	3	Shaft-Spindle
5	80-4360	3	Shield-Bearing
6	80-4380	3	Spacer
7	38-7820	6	Bearing-Ball
8	62-3661	3	Spacer-Bearing
9	88-4510	3	Splindle
10	95-6107	1	Deck ASM
10:4	55-4300	2	Decal
10:5	66-1340	1	Decal-Danger
10:6	68-3650	1	Decal-Deflector
			Danger
10:7	68-3660	2	Decal-Shield Danger
10:8	93-1122	1	Decal - Danger
10:9	93-3777	1	Decal, Belt Install
10:10	93-7282	1	Decal-Wheel
			Adjustment
11	32144-41	12	Screw-Taptite
12	88-5360	3	Spacer
13	88-5330	3	Pully-Deck
14	3219-6	3	Nut-Hex
15	3296-23	2	Nut-Lock, NI
16	94-5823	2	Bolt-Shoulder

Ref. No.	Part No.	Qty.	Description
17	93-3881-03	1	Pan-Front Deck, Suspension
18	323-9	2	Screw-HH
19	80-6990	4	Washer-Hardened
20	93-9847	2	Spacer
21	3296-39	2	Nut-Lock, NI
22	61-9980	2	Screw-Adjusting
23	3256-22	2	Washer-Flat
24	3296-42	2	Nut-Lock
25	93-9849-03	1	Bracket-RH
26	93-9848-03	1	Bracket-LH
27	322-12	2	Screw-HH
28	3296-29	2	Nut-Lock
29	95-2747	1	Fitting-Washout
30	46-6290	1	O-Ring
31	3229-1	2	Screw-CARR
32	3256-1	2	Washer-Flat
33	3296-16	2	Nut-Lock
34	95-3270	1	Connector-Hose

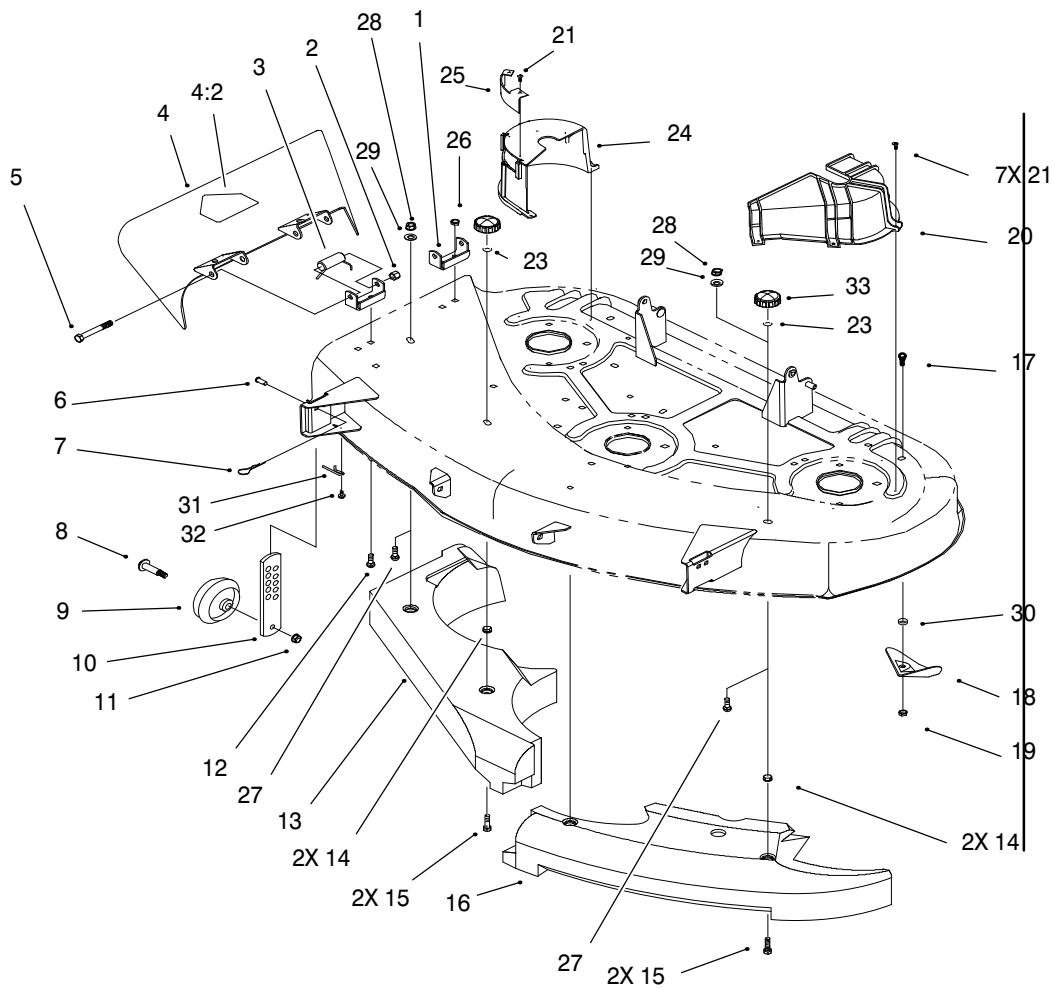


Sheet No.:3

Chute And Recycler Assembly

Ref. No.	Part No.	Qty.	Description
1	29-5590-03	2	Bracket-Pivot
2	3296-5	2	Nut-Lock, NI
3	40-6230	2	Spring
4	100-6206	1	Deflector ASM
4:2	43-8480	1	Decal-Danger
5	3211-15	2	Screw-HH
6	283-2	2	Pin-Clevis
7	3290-307	2	Hairpin
8	56-6591	2	Bolt-Wheel
9	701756	2	Wheel-Gage
10	93-8010	2	Plate-Gage Wheel
11	3296-59	2	Nut-Lock, NI
12	3230-23	4	Screw-CARR
13	93-7651	1	Baffle-RH
14	32149-1	4	Nut-Keps
15	322-6	4	Screw-HH
16	93-7652	1	Baffle-LH
17	3230-23	4	Screw-CARR
18	84-5760	4	Plate-Kicker
19	3296-29	4	Nut-Lock
20	93-3866	1	Cover-Belt, LH
21	32104-76	9	Screw-Acorn Slot
23	3290-456	4	Washer-Belleville
24	93-3865	1	Cover-Belt, RH
25	93-3876-03	1	Insert-Belt Cover
26	3296-29	4	Nut-Lock


Ref. No.	Part No.	Qty.	Description
27	3231-21	2	Screw-CARR
28	3296-39	2	Nut-Lock, NI
29	3256-5	2	Washer-Flat
30	59-4310	4	Spacer
31	94-1981	2	Spring-Gage Wheel
32	32104-76	2	Screw-Acorn Slot
33	94-5583	4	Knob

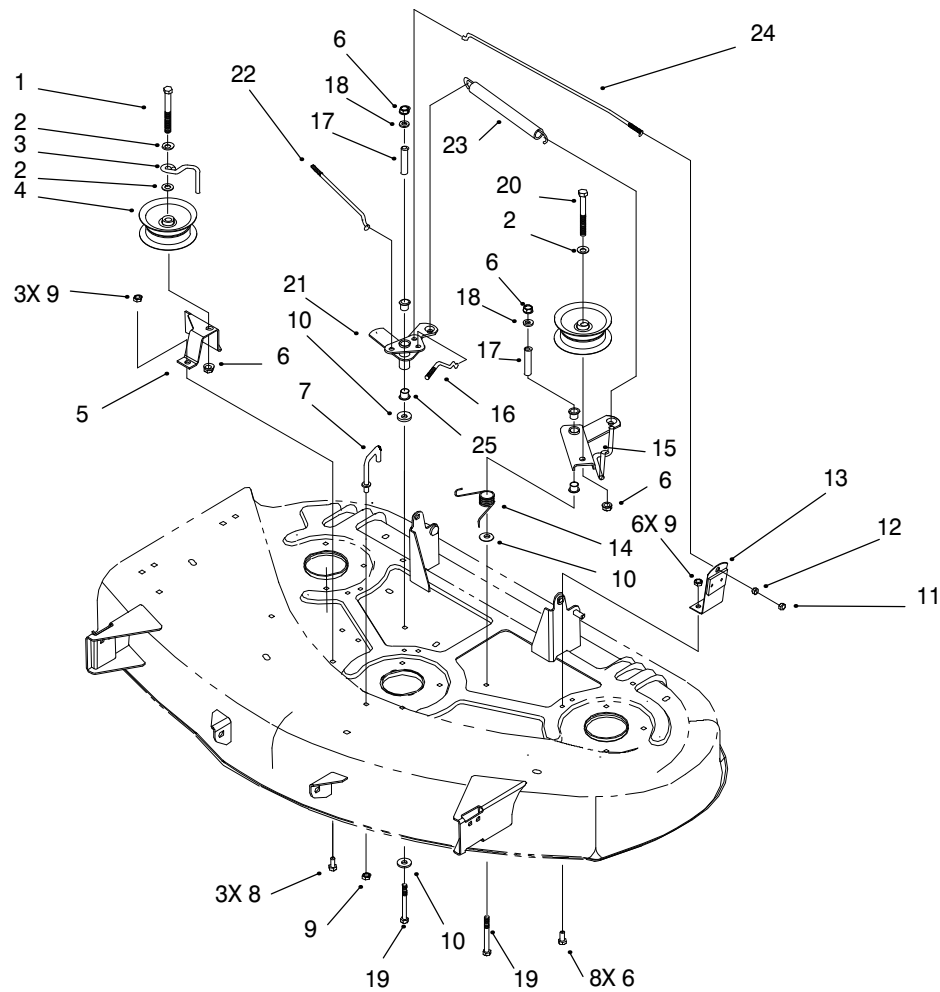

Sheet No.:4

Pulley And Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	323-12	1	Screw-HH				
2	3256-24	3	Washer-Flat				
3	88-5070	1	Guide-Idler, Belt				
4	88-5630	2	Pulley-Idler, Flat				
5	93-3860-03	1	Bracket-Idler				
6	3296-39	4	Nut-Lock, NI				
7	88-5960	1	Guide-Trans Belt, LH				
8	322-3	9	Screw-HH				
9	3296-29	10	Nut-Lock				
10	80-6990	3	Washer-Hardened				
11	3296-42	3	Nut-Lock				
12	67-0710	3	Ball-Swivel Stop				
13	93-3841	3	Brake ASM				
14	93-9342	1	Spring-Torsion				
15	94-1986-03	1	Bellcrank				
16	93-3852	1	Rod-Center Brake				
17	94-1988	2	Spacer-Pivot				
18	3256-24	2	Washer-Flat				
19	323-14	2	Screw-HH				
20	323-10	1	Screw-HH				
21	94-1989-03	1	Bellcrank				
22	93-3853	1	Rod-Brake, RH				
23	93-3850	1	Spring-Deck Engage				
24	93-3851	1	Rod-Brake, LH				
25	256-257	4	Flange-Nyliner				

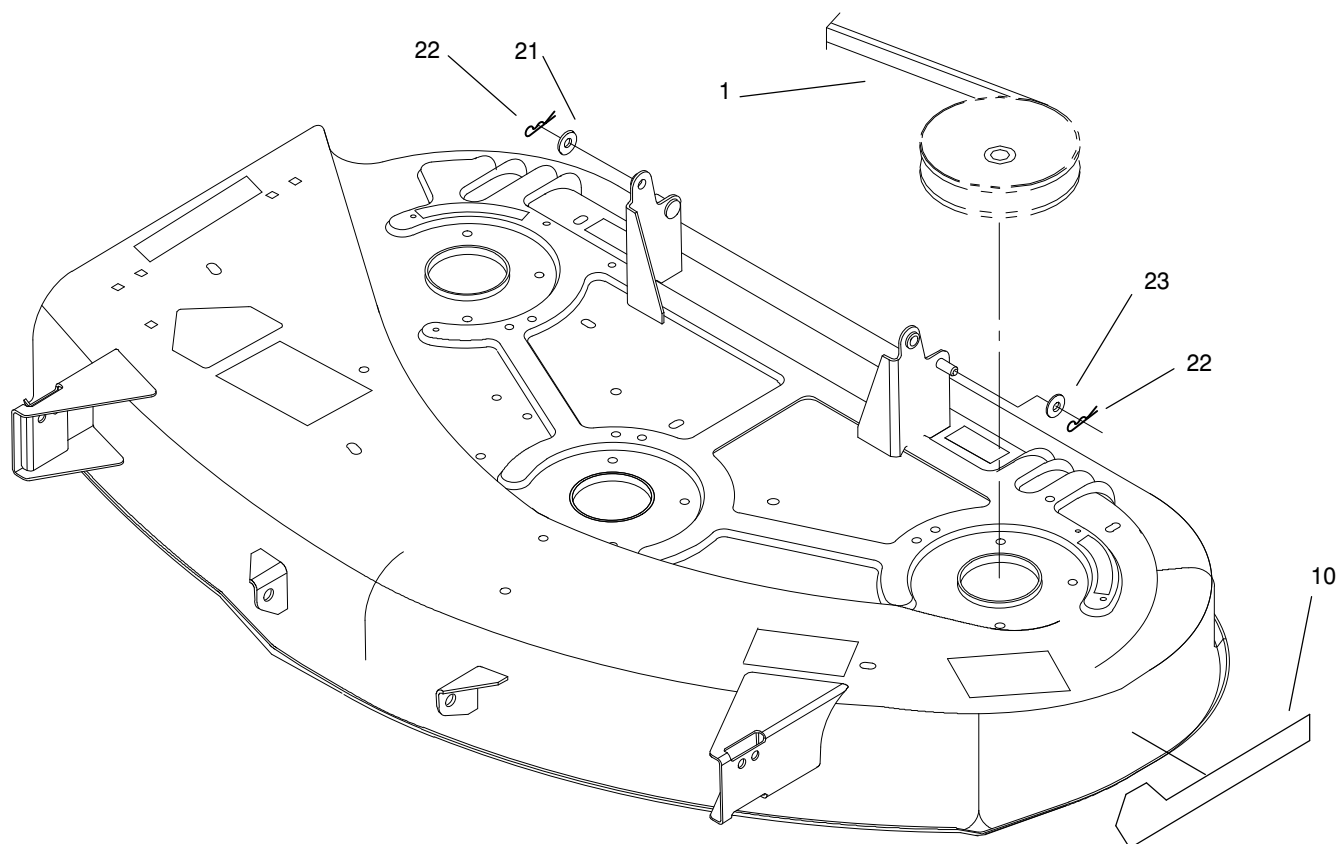

Sheet No.:5
c-2892

Miscellaneous Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3884	1	V-Belt, Deck
10	100-6204	1	Decal - Recycler, 44"
21	3256-24	2	Washer-Flat
22	3290-307	4	Hairpin
23	80-6990	2	Washer-hardened

Ref. No.	Part No.	Qty.	Description

