



84" Guardian[®] Recycler[®] Mower

Model No. 30384—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Housing, Gear Box, And Mount Assembly	3	Castor Wheels And Arms Assembly	8
Gear Box Assembly No. 100–1355	4	Lift Arm Assembly	9
Drive Shaft Assembly No. 93–4524	5	Cover And Chamber Assembly	10
Idlers, Skids, And Rollers Assembly	6	Housing And Decals Assembly	11
Spindle Assembly	7		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

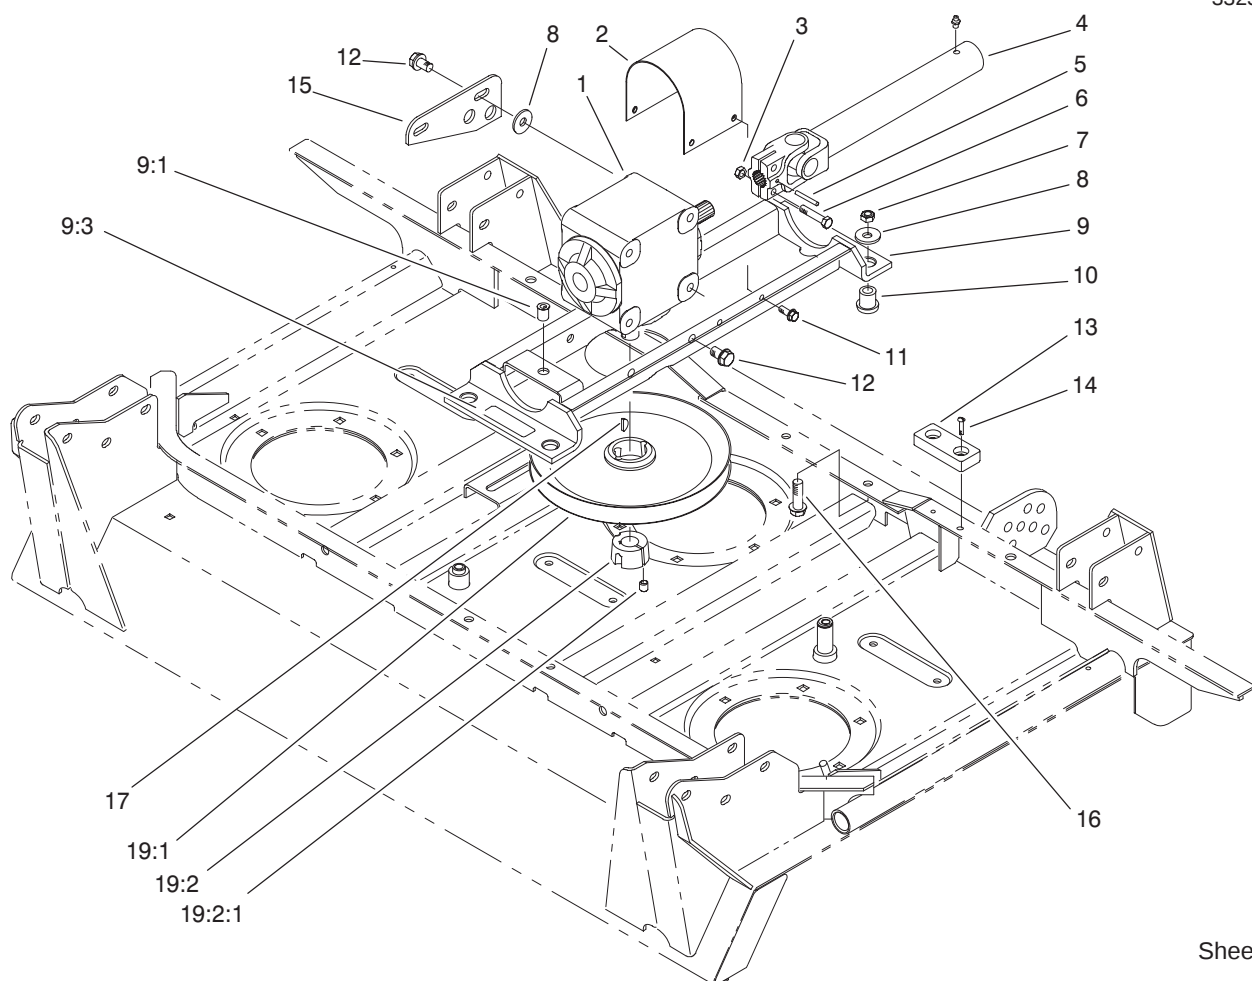


Sheet No.:2

Housing, Gear Box, And Mount Assembly

Ref. No.	Part No.	Qty.	Description
1	100–1355	1	Gearbox ASM
2	93–4638–03	1	Shield–Universal
3	33024–00	2	Nut–Lock, NI
4	93–4524	1	Drive Shaft ASM
5	32121–34	1	Pin–Roll
6	33114–040	2	Screw–HH
7	33025–00	4	Nut–Lock, NI
8	93–4637	6	Washer – Flat
9	93–4820	1	Mount ASM–Gearbox
9:1	32148–9	1	Nut–Insert
9:3	93–6697	1	Decal – Lube
10	63–9750	4	Mount
11	32104–95	4	Screw–HWH
12	33105–020	6	Screw–HHF
13	86–5350	2	Bumper–Rubber
14	3269–11	4	Rivet
15	93–5606	1	Plate – Latch
16	33115–040	4	Screw–HH
17	3257–5	1	Key–Woodruff
☆*19		1	Pulley ASM–Gearbox
19:1	93–4871	1	Pulley ASM–Gearbox
19:2	23–1640	1	Bushing–Taperlock
19:2:1	3247–4	2	Screw–Set

* Not illustrated

☆ Not serviced

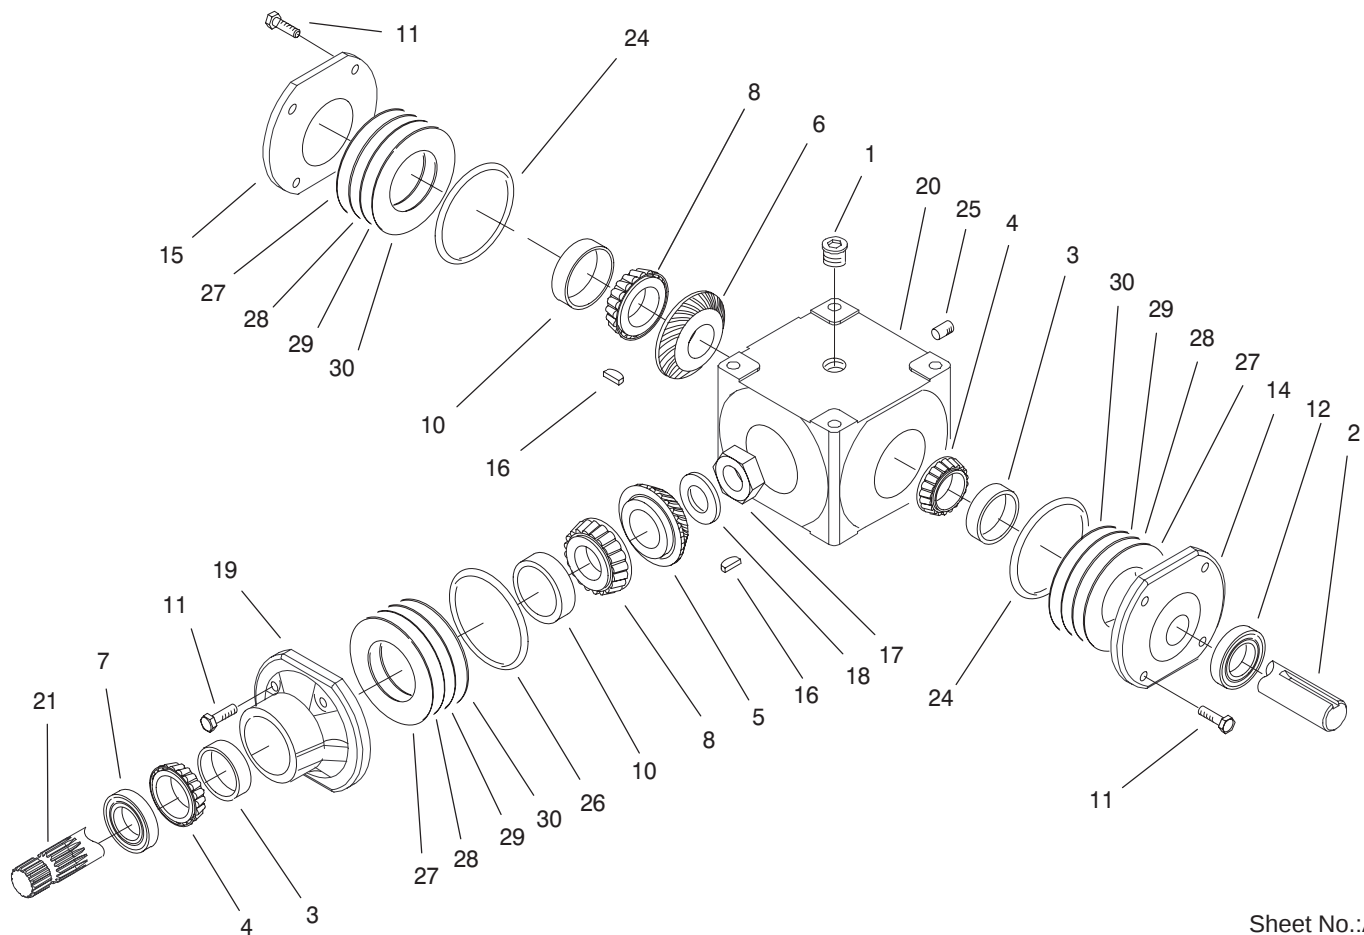

Sheet No.:A1
T-3404

Gear Box Assembly No. 100-1355


Ref. No.	Part No.	Qty.	Description
1	100-5812	3	Plug
2	100-1377	1	Shaft-Cross
3	100-4571	2	Bearing – Cup
4	100-4572	2	Bearing – Cone
5	100-1368	1	Gear-Spiral, RH
6	100-1369	1	Gear-Spiral, LH
7	100-1370	1	Seal-Viton
8	100-5816	2	Cone – Bearing
10	100-5817	2	Cup – Bearing
11	100-5818	12	Screw-HH
12	100-1371	1	Seal-Viton
14	100-1378	1	Cap-End
15	100-1379	1	Cap-End, Closed
16	100-5822	2	Key
17	100-1391	1	Nut – Lock
18	100-5824	1	Washer
19	100-1392	1	Housing-Pinion
20	100-1380	1	Case
21	100-1381	1	Shaft-Pinion
24	100-1372	2	O-Ring
25	100-4595	1	Plug – Magnetic
26	100-1393	1	O-Ring
27	100-1394	1	Shim – Green, (.003)
28	100-1395	1	Shim – Blue, (.005)
29	100-1396	1	Shim – Brown, (.010)
30	100-1397	1	Shim – Yellow, (.020)

Ref. No.	Part No.	Qty.	Description

T-2250

Ref. No.	Part No.	Qty.	Description
1	302-58	1	Fitting-Grease
2	54-9040	1	Yoke-End
3	54-9180	2	Kit-U-Joint
4	62-3820	2	Fitting-Grease
5	93-4633	1	Yoke ASM-Auto Lok
6	93-4634	1	Shaft-Slip Yoke
7	93-4635	1	Tube - Slip Yoke

Ref. No.	Part No.	Qty.	Description

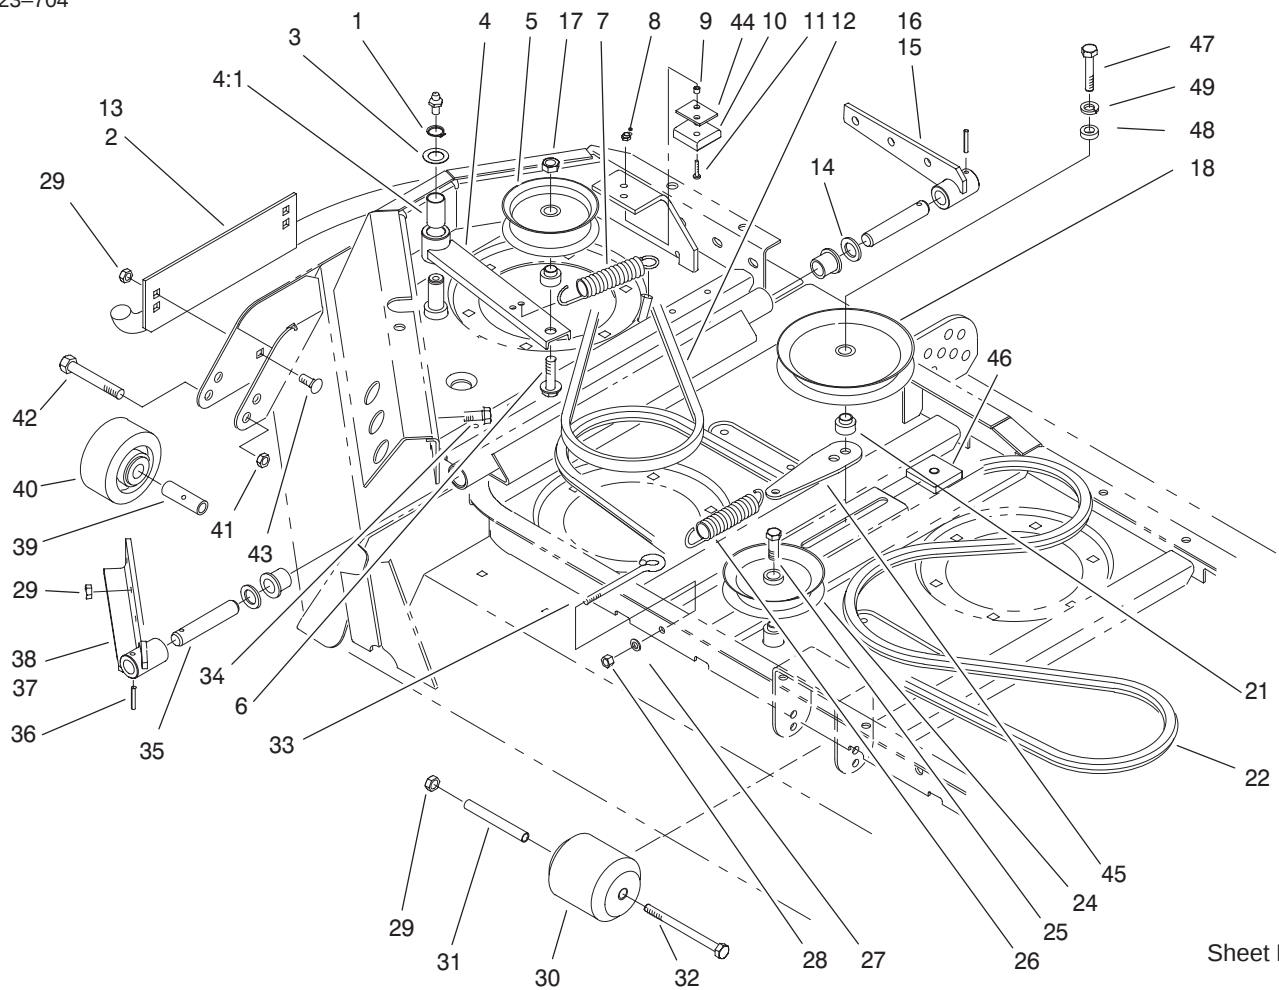


Sheet No.:3

Idlers, Skids, And Rollers Assembly

Ref. No.	Part No.	Qty.	Description
1	32120-72	2	Ring-Snap
2	93-4519-01	1	Skid - RH
3	3-6498	2	Washer-Thrust
4	69-6610-01	2	Idler Arm
4:1	256-188	1	Bushing
5	69-5430-03	2	Pulley - Flat Idler
6	33116-050	2	Screw-HH
7	76-1670-03	2	Spring-Extension
8	3296-2	4	Nut-Lock
9	40-9520	4	Spacer
10	40-0330	2	Cushion-Rubber
11	3250-27	4	Screw-PPH
12	93-4839	2	V-Belt
13	93-4522-01	1	Skid-LH
14	256-305	4	Washer-Thrust, Oilite
15	93-4620-01	1	Hinge-Rear, RH
16	93-4622-01	1	Hinge-Rear, LH
17	33026-00	2	Nut-Lock NI
18	93-4662-01	1	Pulley - Idler
21	69-6970	3	Spacer-Idler, Flat
22	93-4838	1	Hex Belt
24	63-1540-03	1	Pulley-Idler
25	33116-030	1	Screw-HH
26	93-4802	1	Spring - Extension
27	3256-23	1	Washer-Flat
28	33024-00	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
29	33025-00	19	Nut-Lock, NI
30	93-4803	3	Roller - Deck
31	93-4685	3	Spacer
32	33115-130	3	Screw-HH
33	93-4804	1	Rod - Tension
34	33105-025	12	Screw-HHF
35	93-4650	4	Shaft-Hinge
36	32121-6	4	Pin-Roll
37	93-4624-01	1	Hinge-Front, RH
38	93-4626-01	1	Hinge-Front, LH
39	93-4764	2	Spanner-Wheel
40	93-4747	2	Wheel-Gage
41	3296-19	2	Nut-Lock NI
42	93-4806	2	Wheel Bolt/Axle
43	33125-025	4	Screw-CARR
44	42-6200	2	Cushion Shim
45	93-4550-01	1	Strap
46	93-4644	1	Nut - Hold Down
47	33116-060	1	Screw-HH
48	95-5690	1	Spacer
49	48-8070	1	Washer-Lock

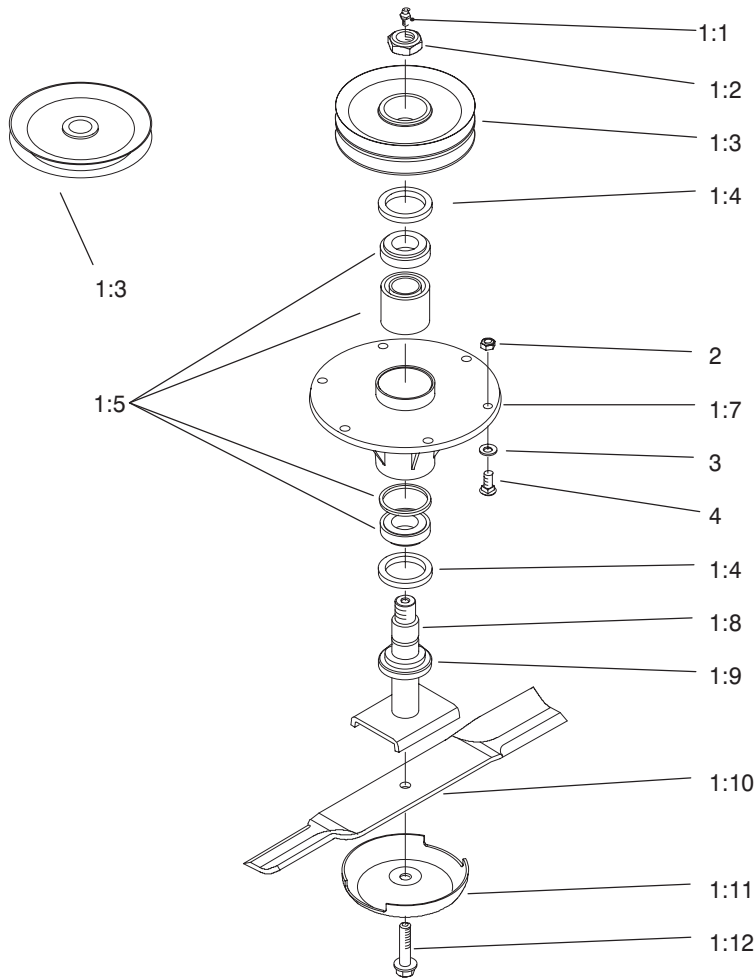


Sheet No.:4
T-3405

Spindle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆*1		1	Spindle ASM-Single				
☆*1		4	Spindle ASM-Double				
1:1	302-2	5	Fitting-Grease				
1:2	93-4658	5	Nut-Lock, NI				
1:3	93-4836	4	Pulley ASM-Double				
1:3	93-4837	1	Pulley ASM-Single				
1:4	253-154	10	Seal - Oil				
1:5	93-4825	5	Kit-Spacer & Bearing				
1:7	93-4503	5	Housing-Spindle				
1:8	93-4516	5	Shaft-Spindle				
1:9	92-9800	5	Spacer-Shaft, Spindle				
1:10	86-0010	5	Blade				
1:11	72-9361	5	Cup-Scalp, Anti				
1:12	92-5816	5	Bolt-Blade				
2	33025-00	30	Nut-Lock, NI				
3	3256-24	1	Washer-Flat				
4	33125-030	30	Screw-CARR				

* Not illustrated

☆ Not serviced

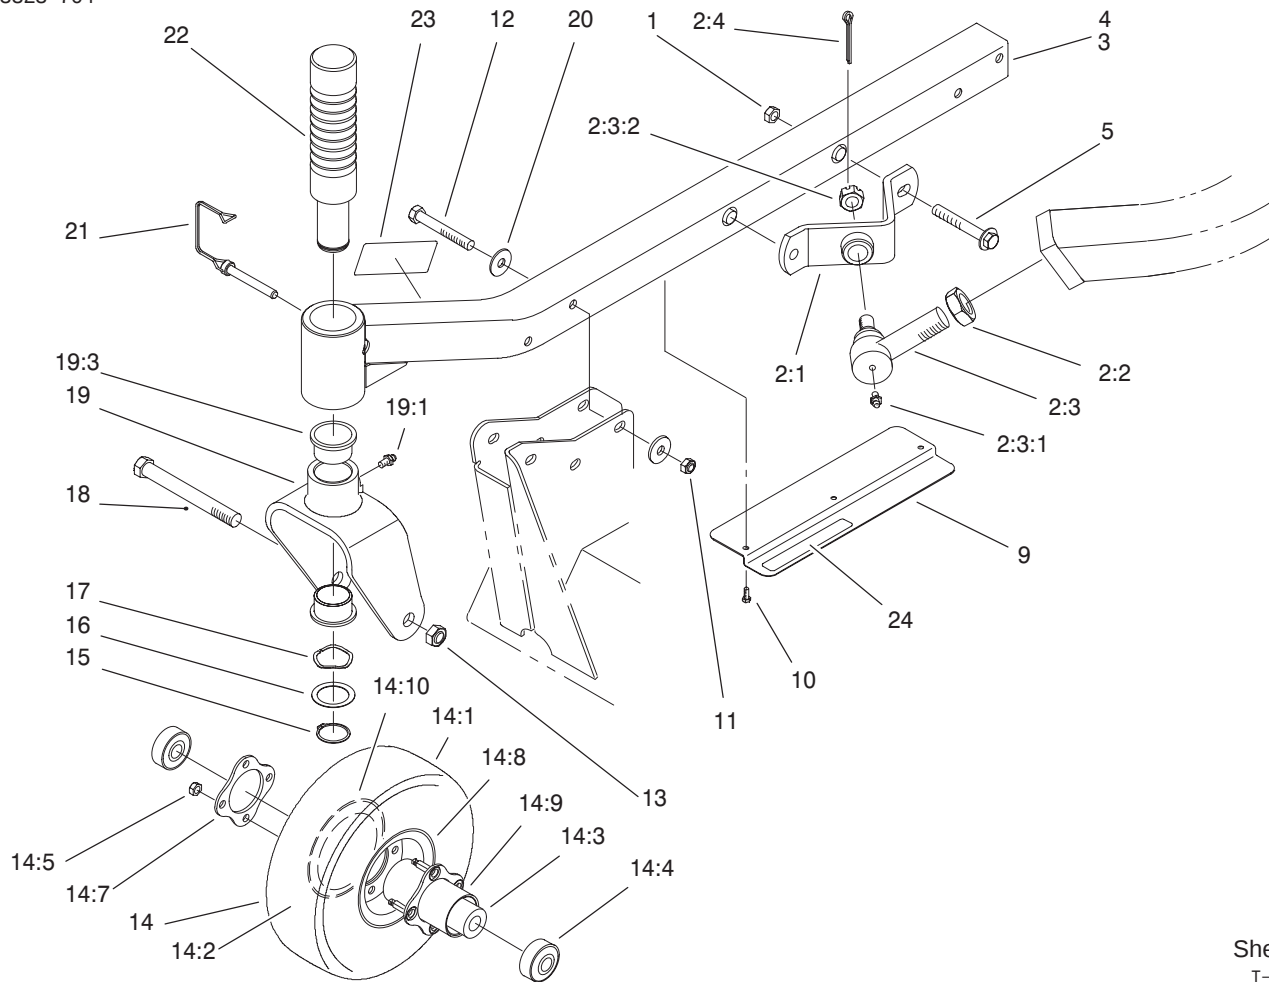

Sheet No.:5


T-2218-1

Castor Wheels And Arms Assembly

Ref. No.	Part No.	Qty.	Description
1	33026-00	4	Nut-Lock NI
*2		2	Ball Joint ASM
2:1	21-3020	1	Mount-Ball Joint, RH
2:2	21-3000	1	Nut-Jam, Push Arm
2:3	86-8100	1	Balljoint
2:3:1	302-5	1	Fitting-Lube
2:3:2	32136-2	1	Nut-SHH
2:4	3272-11	1	Pin-Cotter
3	93-4828-01	1	Arm-Caster, LH
4	93-4826-01	1	Arm-Caster, RH
5	33106-080	4	Screw-HHF
9	93-4655-03	2	Plate-Cover
10	32104-60	6	Screw-HH
11	33025-00	10	Nut-Lock, NI
12	33115-080	10	Screw-HH
13	33028-00	2	Nut-Lock NI
14	93-4240	2	Wheel ASM
14:1	93-4243	1	Tire
14:2	93-4244	1	Innertube
14:3	93-4241	1	Spacer - Bearing, Inner
14:4	93-4237	2	Bearing
14:5	32128-16	4	Nut-HHF
14:7	93-4242	1	Plate
14:8	93-4239	1	Rim-Wheel, Half
14:9	93-5980	1	Hub

Ref. No.	Part No.	Qty.	Description
14:10	95-2741	1	Rim-Wheel, Half (w/ Valve Stem Hole)
15	32120-84	2	Ring-Snap, External
16	93-4628	2	Washer
17	93-4632	2	Washer - Wavey
18	33118-140	2	Screw-HH
19	93-4824	2	Fork-Caster, Guardian
19:1	302-5	1	Fitting-Lube
19:3	93-4510	2	Bushing-Caster
20	93-4637	20	Washer - Flat
21	93-4696	2	Pin - Snapper
22	93-4582	2	Shaft - Castor
23	93-4690	2	Decal - HOC, Front
24	93-4894	2	Decal - Cover


*Not Illustrated

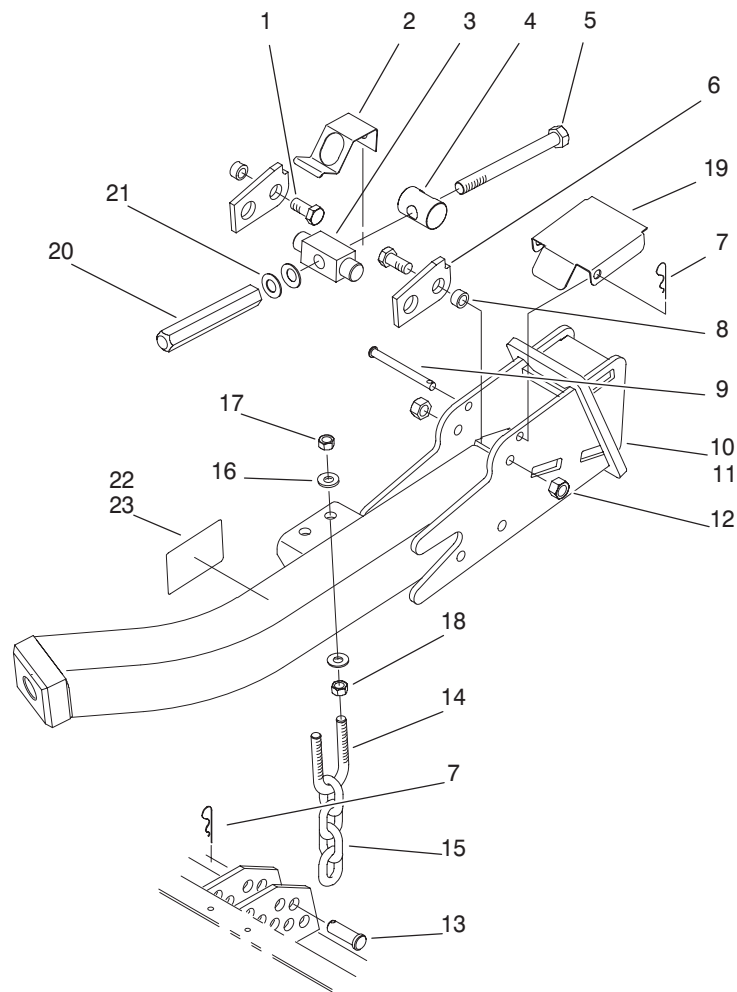

Sheet No.:6

Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	33115-025	4	Screw-HH
2	93-4818	2	Spring – Lever
3	93-4677	2	Hub – Release
4	93-4676	2	Shaft-Latch
5	3213-24	2	Screw-HH
6	93-4675	4	Plate – Release
7	3290-467	4	Pin-Hair
8	93-4618	4	Spacer – Pivot
9	283-88	2	Pin-Clevis
10	99-5771-01	1	Arm ASM-LH
11	99-5770-01	1	Arm ASM-RH
12	33025-00	4	Nut-Lock, NI
13	283-55	2	Pin-Clevis
14	96-1259	2	U-Bolt
15	95-6231	2	Chain – HOC
16	3256-24	8	Washer-Flat
17	3296-6	4	Nut-Lock, NI
18	3219-3	4	Nut-Hex
19	99-5769-01	2	Cover-Latch
20	93-4678	2	Lever – Release
21	3290-413	4	Washer-Belleville
22	94-3392	1	Decal – Rear HOC, RH
23	93-4691	1	Decal – Rear HOC, LH

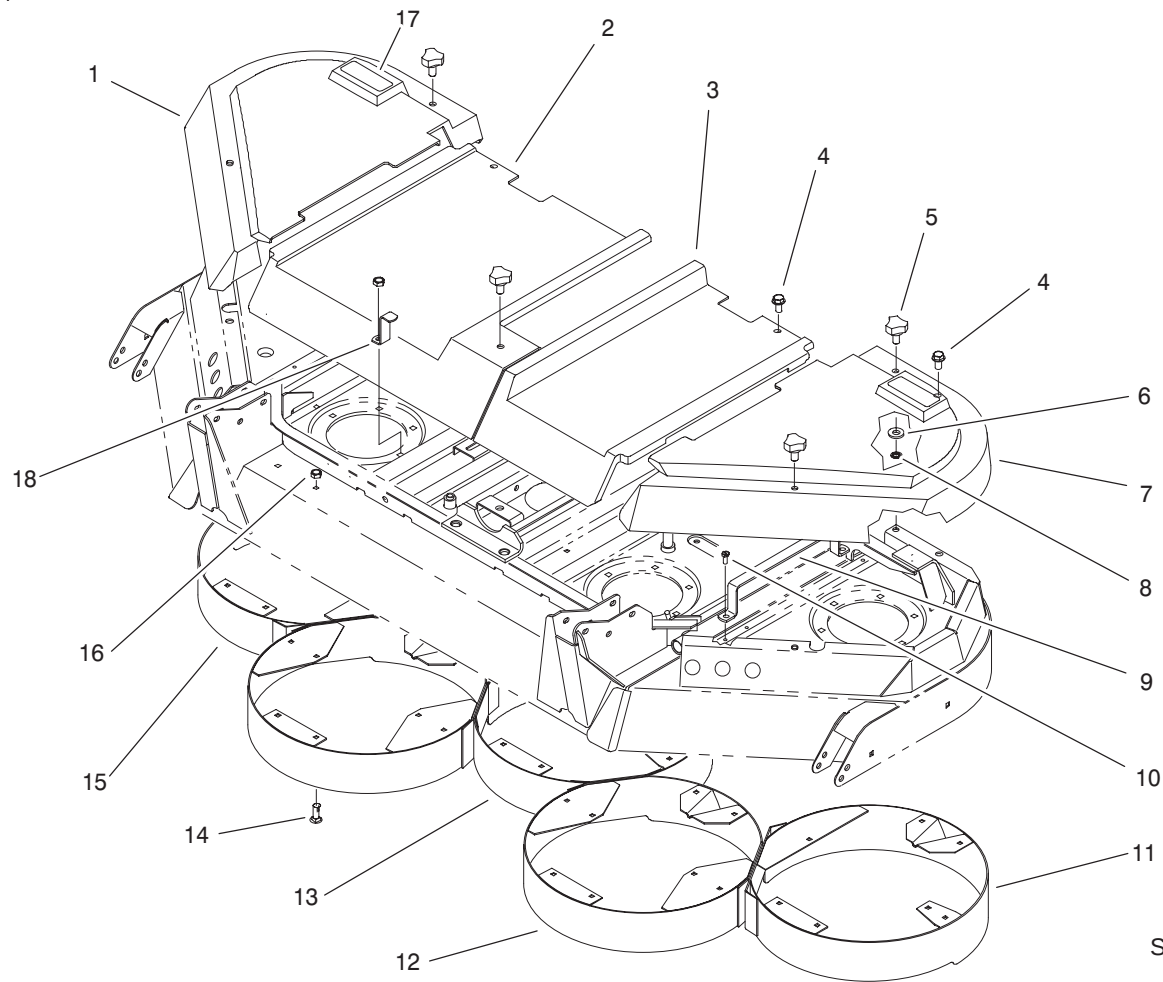


Sheet No.:7

Cover And Chamber Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4642	1	Cover – RH
2	93-4641	1	Cover – Center, RH
3	93-4646	1	Cover–Center, LH
4	33104-016	4	Screw–HHF
5	95-9648	5	Knob
6	3256-3	5	Washer–Flat
7	93-4643	1	Cover – LH
8	32151-72	5	Ring–Retaining
9	93-4652-01	2	Bracket–Cover

Ref. No.	Part No.	Qty.	Description
10	32104-82	4	Screw
11	93-4606-01	1	Chamber–Wing, LH
12	93-4611-01	2	Chamber
13	93-4608-01	1	Chamber–Center
14	33124-020	30	Screw–CARR
15	93-4600-01	1	Chamber–Wing, RH
16	33024-00	30	Nut–Lock, NI
17	93-0299	2	Decal – No Step
18	93-4860	1	Support – Cover

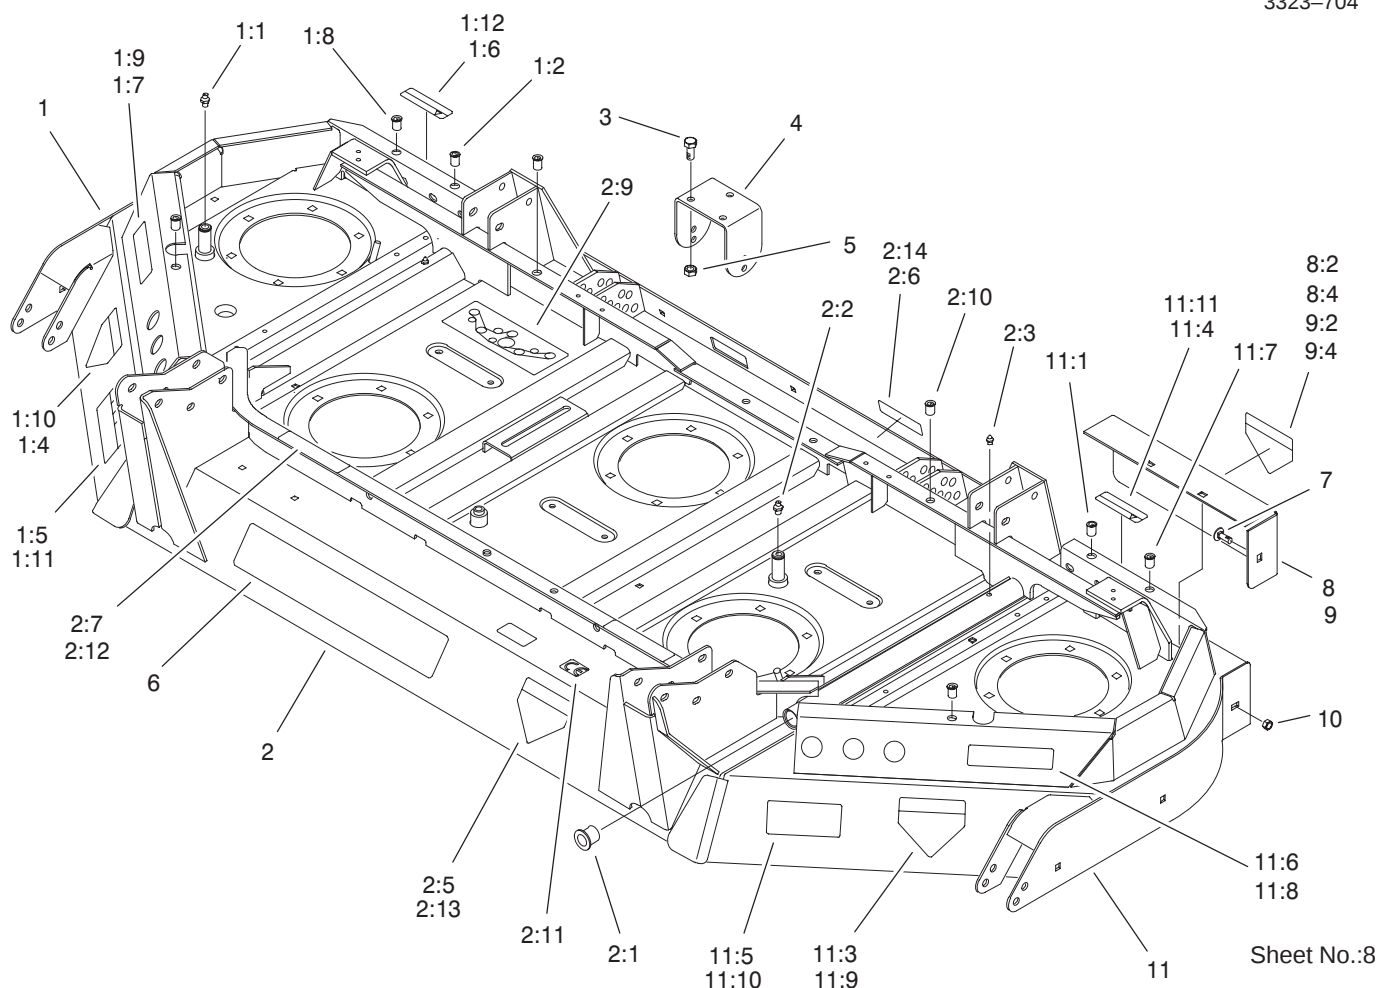

Housing And Decals Assembly

Ref. No.	Part No.	Qty.	Description
1	95-6207	1	Deck ASM-RH
1:1	302-2	1	Fitting-Grease
1:2	32148-9	2	Nut-Insert
1:4	43-8480	1	Decal-Danger
1:5	66-1340	1	Decal-Danger
1:6	66-6380	1	Decal-Danger
1:7	85-6410	1	Decal-Danger
1:8	93-5449	1	Nut-Clinch
1:9	93-7814	1	Decal-Danger, Int'l
1:10	93-7815	1	Decal-Danger, Int'l
1:11	93-7824	1	Decal-Danger, Int'l
1:12	93-7828	1	Decal-Danger, Int'l
2	95-6209	1	Deck ASM-Center
2:1	256-117	4	Bushing
2:2	302-2	1	Fitting-Grease
2:3	302-5	2	Fitting-Lube
2:5	43-8480	1	Decal-Danger
2:6	66-6380	1	Decal-Danger
2:7	85-6410	2	Decal-Danger
2:9	93-4688	1	Decal - Belt
2:10	93-5449	2	Nut-Clinch
2:11	93-7252	1	Decal, Int'l
2:12	93-7814	2	Decal-Danger, Int'l
2:13	93-7815	1	Decal-Danger, Int'l
2:14	93-7828	1	Decal-Danger, Int'l
3	33115-025	6	Screw-HH

Ref. No.	Part No.	Qty.	Description
4	95-6240-01	2	Bracket - Roller
5	33025-00	6	Nut-Lock, NI
6	93-4689	1	Decal - Guardian 84
7	33124-020	6	Screw-CARR
8	93-4890	1	Cover ASM-RH
8:2	43-8480	1	Decal-Danger
8:4	93-7815	1	Decal-Danger, Int'l
9	93-4892	1	Cover ASM-LH
9:2	43-8480	1	Decal-Danger
9:4	93-7815	1	Decal-Danger, Int'l
10	33004-00	6	Nut-HF
11	95-6208	1	Deck ASM-LH
11:1	32148-9	2	Nut-Insert
11:3	43-8480	1	Decal-Danger
11:4	66-6380	1	Decal-Danger
11:5	68-8340	1	Decal-Torque, Blade Bolt
11:6	85-6410	1	Decal-Danger
11:7	93-5449	1	Nut-Clinch
11:8	93-7814	1	Decal-Danger, Int'l
11:9	93-7815	1	Decal-Danger, Int'l
11:10	93-7818	1	Decal-Torque, Blade Bolt (Int'l)
11:11	93-7828	1	Decal-Danger

