



36" Midsize Cutting Unit

Model No. 30135—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Deck Assembly	3	Spindle Housing Assembly No. 27–0870	6
Carrier Frame And Castor Assembly	4	Spindle Housing Assembly No. 54–7781	7
Spindle And Idler Assembly	5		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

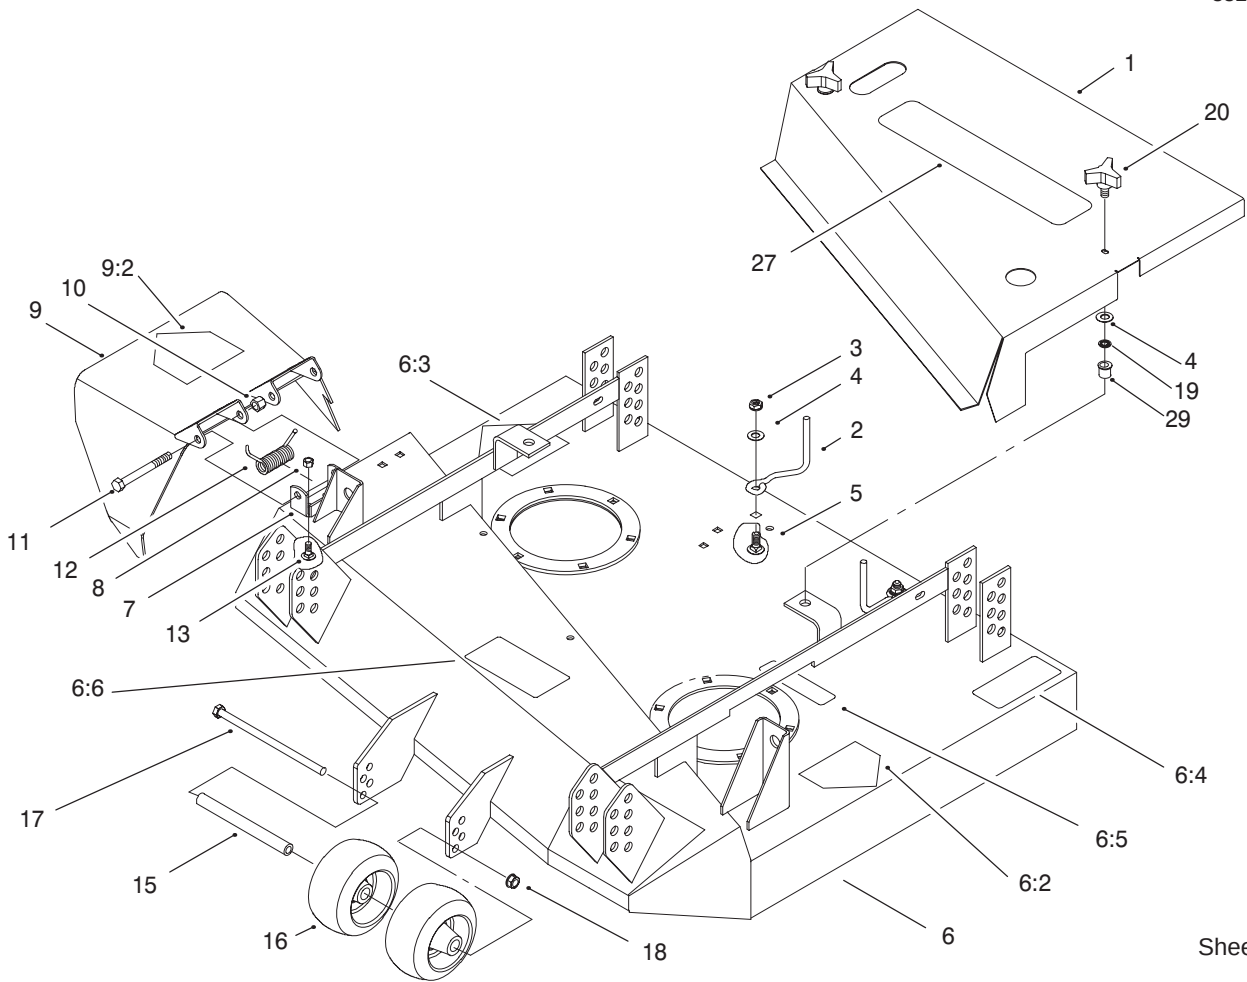


Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	82-5460-01	1	Cover
2	52-4780	2	Belt Rod
3	32128-21	2	Nut-HF
4	3256-24	4	Washer-Flat
5	3231-22	2	Screw-CARR
6	99-8524	1	Deck ASM
6:2	43-8480	1	Decal-Danger
6:3	93-1122	1	Decal-Danger
6:4	68-8340	1	Decal-Torque, Blade Bolt
6:5	67-5360	1	Decal-Danger
6:6	66-1340	1	Decal-Danger
7	29-5590-01	2	Bracket-Pivot
8	32152-1	4	Nut-Lock, NI
9	99-8526	1	Deflector ASM
9:2	93-1122	1	Decal-Danger
10	3296-5	2	Nut-Lock, NI
11	3211-15	2	Screw-HH
12	40-6230	2	Spring
13	3230-18	4	Screw-CARR
15	98-5967	1	Spacer-Wheel
16	68-2730	2	Wheel-Gage
17	322-50	1	Screw-Cap
18	3296-29	1	Nut-Lock, NI
19	32151-72	2	Ring-Retaining
20	62-6520	2	Knob

Ref. No.	Part No.	Qty.	Description
27	98-8038	1	Decal-36"
29	32148-10	2	Nut-Insert

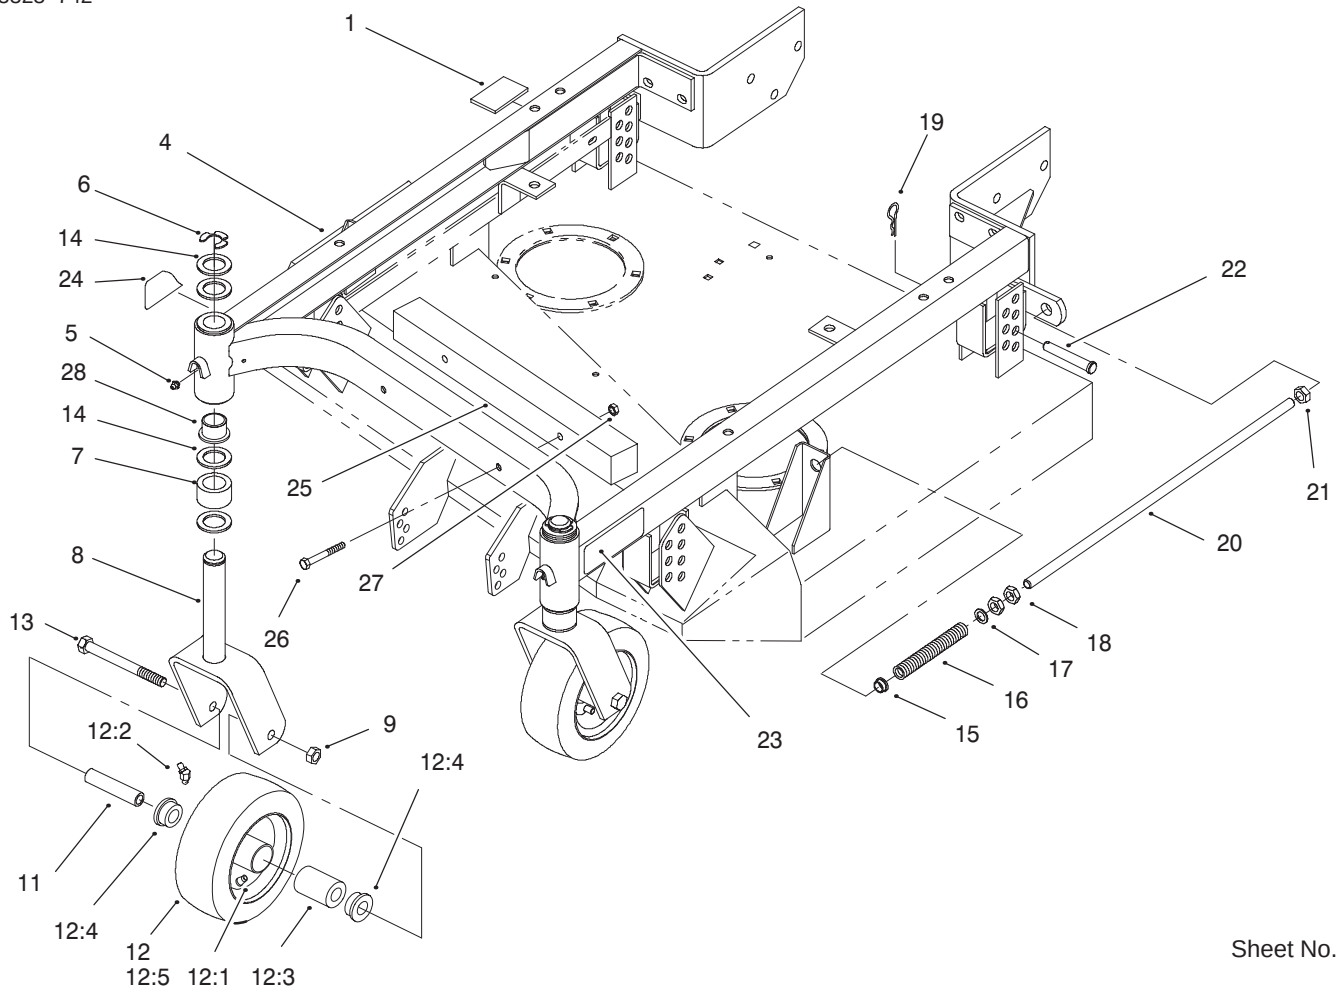


Sheet No.:3

Carrier Frame And Castor Assembly

Ref. No.	Part No.	Qty.	Description
1	74-0350	4	Cushion-Rubber
4	17-5999-01	1	36" Carrier Frame
5	302-5	2	Fitting-Lube
6	E809020	2	Ring-Retaining
7	93-1166	2	Spacer-Castor
8	100-6455-01	2	Castor Fork ASM
9	32153-5	2	Nut-Lock
11	100-6453	2	Bushing-Spanner
12	100-6451	2	Castor Wheel ASM
12:1	232-27	1	Stem-Valve
12:2	302-11	1	Fitting-Lube,45°
12:3	83-4740	1	Bearing
12:4	62-5580	2	Bearing-Outside
12:5	100-6452	1	Tire-Tubeless
13	325-19	2	Screw-HH
14	3-6781	8	Washer-Thrust
15	256-156	2	Bushing-Flange
16	74-0290	2	Spring
17	41-8440	2	Washer
18	3218-5	4	Nut-Jam
19	3290-355	4	Pin-Hair
20	74-0310	2	Shaft-Adjusting
21	3296-45	2	Nut-Lock, NI
22	283-55	4	Pin-Clevis
23	85-7450	1	Decal - Left HOC
24	85-7460	1	Decal - Right HOC


Ref. No.	Part No.	Qty.	Description
25	80-3340-01	1	Weight-Front
26	322-12	2	Screw-HH
27	3296-29	2	Nut-Lock,NI
28	94-1291	4	Bushing-Special

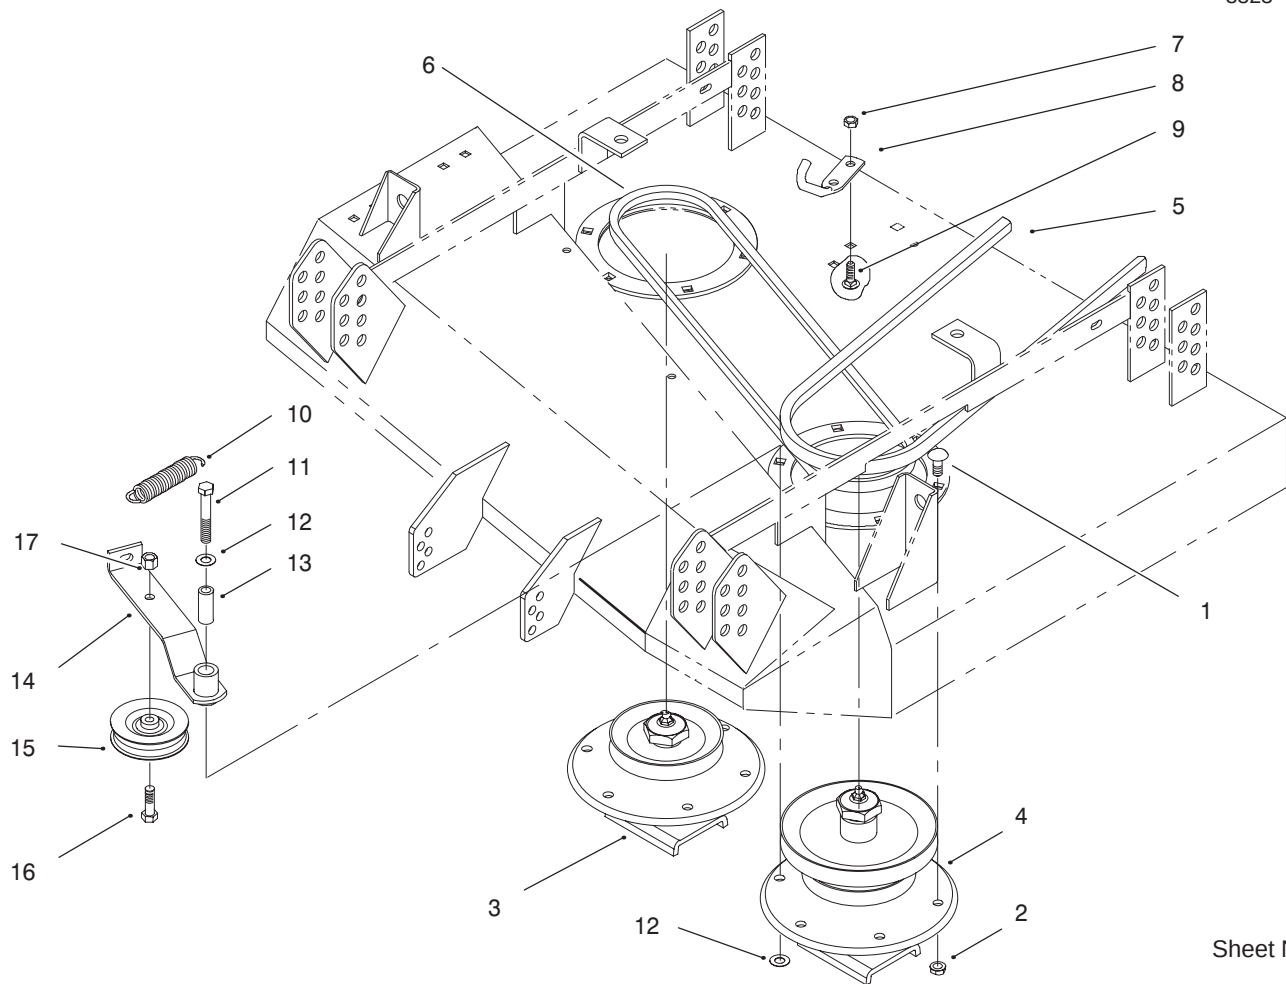

Sheet No.:4

Spindle And Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	3231-22	11	Screw-CARR
2	32128-21	12	Nut-HF
3	27-0870	1	Spindle ASM
4	54-7781	1	Spindle ASM
5	55-7660	1	V-Belt
6	51-3530	1	V-Belt-Deck, Drive
7	3296-29	2	Nut-Lock, NI
8	56-4360	1	Rod - Spring
9	3230-22	2	Screw-CARR
10	51-3650-01	1	Spring - Extension
11	323-12	1	Screw-HH
12	3256-24	2	Washer-Flat
13	51-3641	1	Idler-Pivot Sleeve
14	56-4341-03	1	Idler Arm-Deck
15	51-3660	1	Pulley-Idler
16	3211-5	1	Screw-HH
17	3296-5	1	Nut-Lock, NI

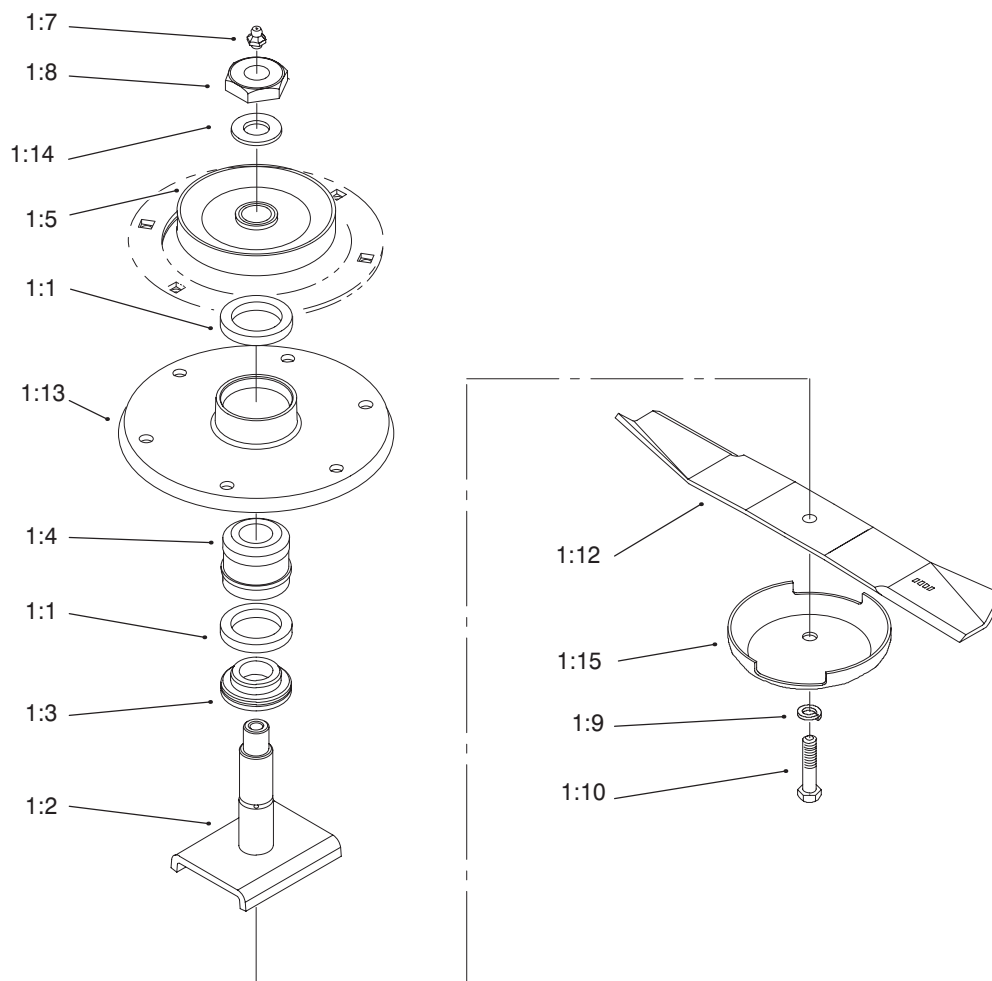


Sheet No.:A1

c-2909

Spindle Housing Assembly No. 27-0870

Ref. No.	Part No.	Qty.	Description
1:1	253-139	2	Seal-Oil
1:2	27-0920	1	Shaft-Spindle
1:3	27-0950	1	Spacer-Bearing, Spindle
1:4	27-0960	1	Bearing ASM
1:5	27-0970-03	1	Pulley ASM
1:7	302-2	1	Fitting-Grease
1:8	32146-20	1	Nut-Jam
1:9	3253-7	1	Washer-Lock/Sp
1:10	44-2200	1	Blade Screw
1:12	56-2390	1	Blade
1:13	61-4160	1	Spindle
1:14	7-4150	1	Washer-Pinion
1:15	72-9361	1	Cup-Scalp, Anti

Ref. No.	Part No.	Qty.	Description

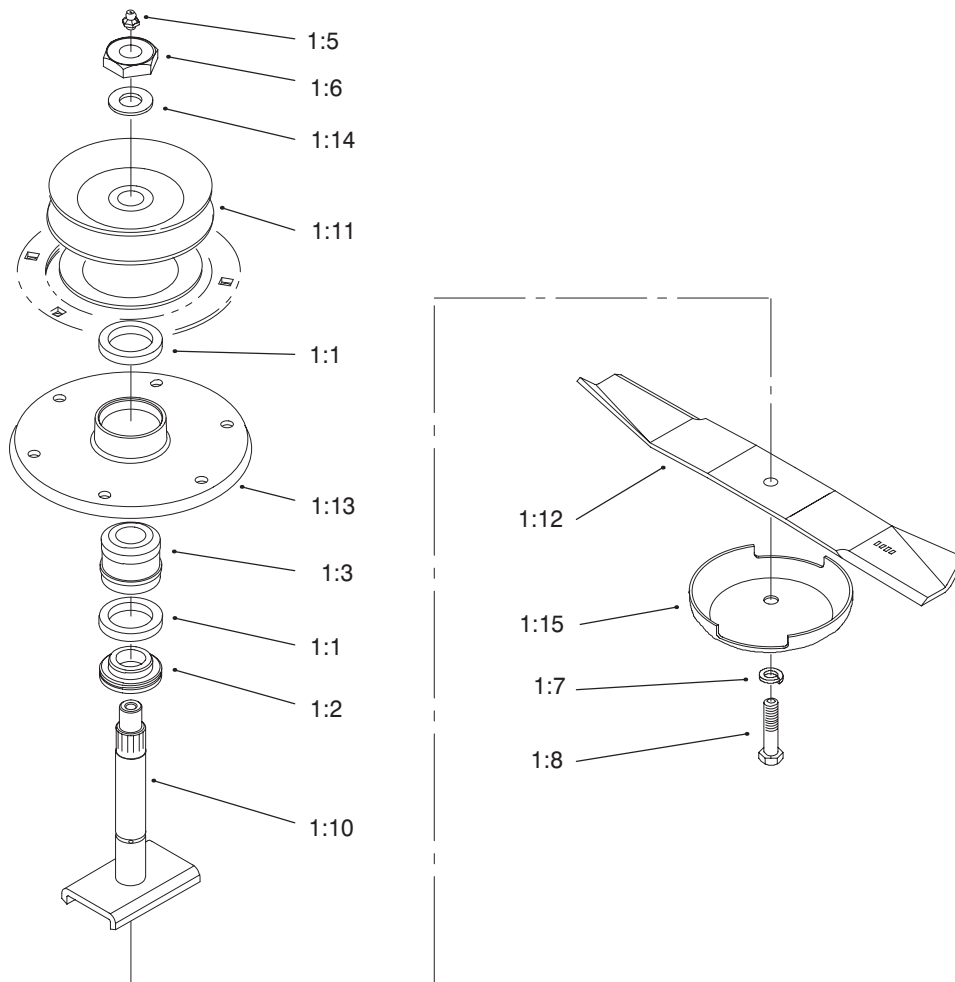

Sheet No.:A2
c-2910

Spindle Housing Assembly No. 54-7781

Ref. No.	Part No.	Qty.	Description
1:1	253-139	2	Seal-Oil
1:2	27-0950	1	Spacer-Bearing, Spindle
1:3	27-0960	1	Bearing ASM
1:5	302-2	1	Fitting-Grease
1:6	32146-20	1	Nut-Jam
1:7	3253-7	1	Washer-Lock/Sp
1:8	44-2200	1	Blade Screw
1:10	51-3551	1	Shaft-Spindle
1:11	55-7610-03	1	Pulley ASM
1:12	56-2390	1	Blade
1:13	61-4160	1	Spindle
1:14	92-5836	1	Washer - Axle
1:15	72-9361	1	Cup-Scalp, Anti

Ref. No.	Part No.	Qty.	Description

