



92cm Side Discharge Mower

Model No. 30138—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Deck And Pulleys Assembly	3	Spindle Housing Assembly No. 27–0870	5
Frame Belt And Wheel Assembly	4	Spindle Housing Assembly No. 54–7781	6


Accessories

Description	Model / Part No.	Description	Model / Part No.
Bagging Kit	Model 30125		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

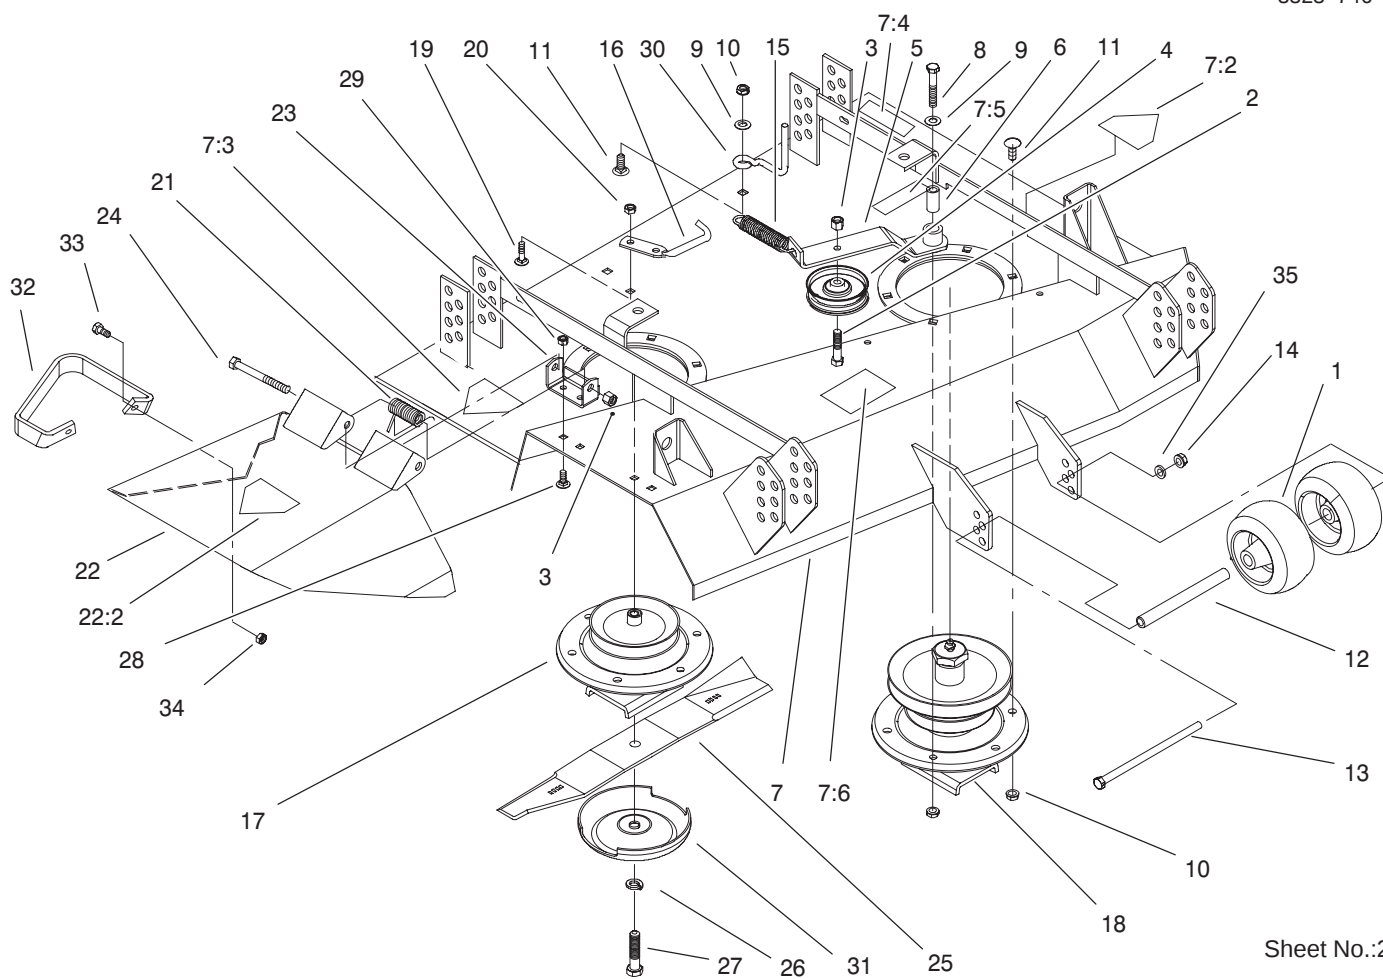


Sheet No.:2

Deck And Pulleys Assembly

Ref. No.	Part No.	Qty.	Description
1	68-2730	2	Wheel-Gage
2	3211-5	1	Screw-HH
3	3296-5	3	Nut-Lock, NI
4	51-3660	1	Pulley-Idler
5	56-4341-03	1	Idler Arm-Deck
6	51-3641	1	Idler-Pivot Sleeve
7	99-8524	1	Deck ASM
7:2	43-8480	1	Decal-Danger
7:3	93-1122	1	Decal-Danger
7:4	68-8340	1	Decal-Torque, Blade Bolt
7:5	67-5360	1	Decal-Danger
7:6	66-1340	1	Decal-Danger
8	323-12	1	Screw-HH
9	3256-24	2	Washer-Flat
10	32128-21	14	Nut-HF
11	3231-22	13	Screw-CARR
12	98-5967	1	Spacer-Wheel
13	322-50	1	Screw-HH
14	3296-29	1	Nut-Lock, NI
15	51-3650	1	Spring - Extension
16	56-4360	1	Rod - Spring
17	28-0870	1	Spindle ASM
18	54-7781	1	Spindle ASM
19	3230-22	2	Screw-CARR
20	3296-29	2	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
21	40-6230	2	Spring
22	99-8526	1	Deflector
22:2	93-1122	1	Decal-Danger
23	29-5590-01	2	Bracket-Pivot
24	3211-15	2	Screw-HH
25	56-2390	1	Blade
26	3253-7	1	Washer-Lock/Sp
27	44-2200	1	Screw-Blade
28	3230-18	4	Screw-CARR
29	32152-1	4	Nut-Lock, NI
30	52-4780	2	Rod-Belt
31	72-9361	1	Cup-Scalp, Anti
32	93-9480-01	1	Guard - Deflector
33	322-3	2	Screw-HH
34	3296-47	2	Nut-Lock, NI
35	3256-23	2	Washer-Flat
*99	3256-24	2	Washer-Flat
*99	3256-2	2	Washer-Flat

* Not illustrated

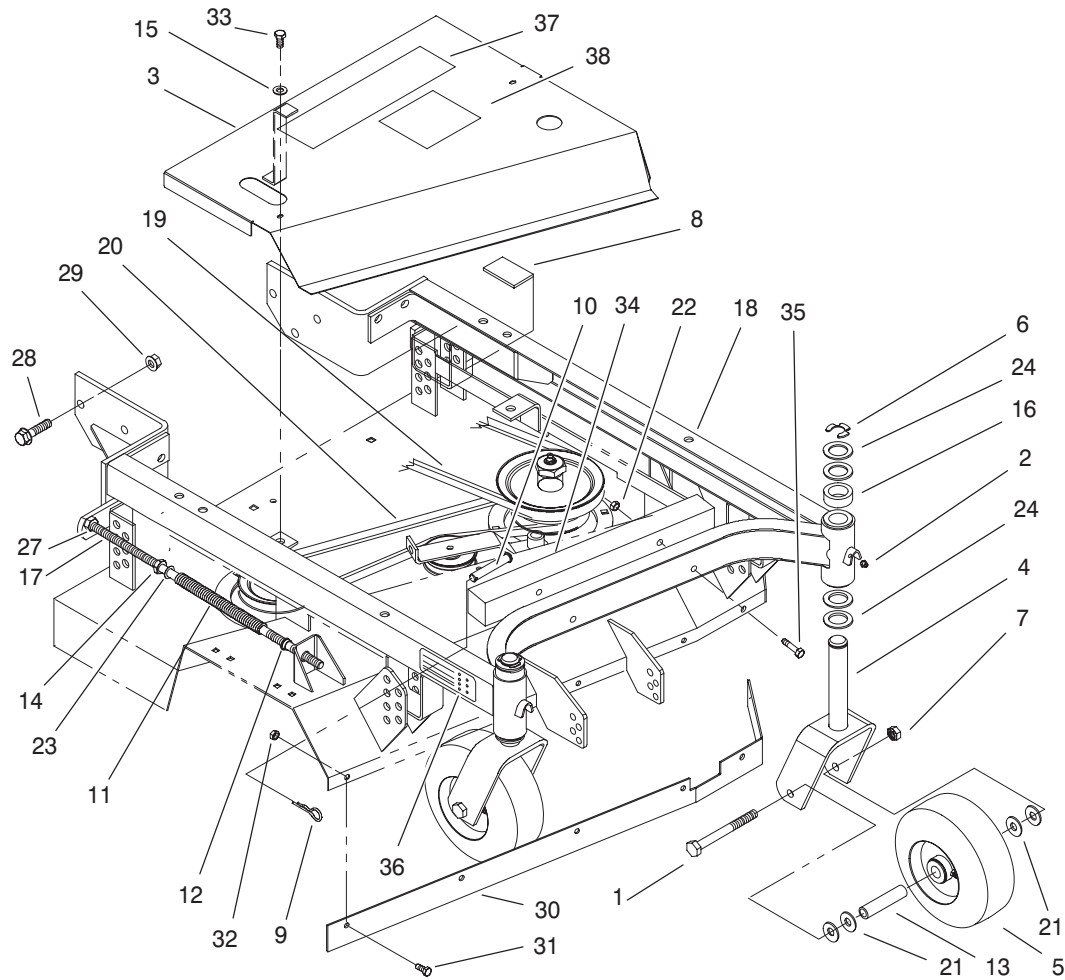

Sheet No.:3

Frame Belt And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	325-19	2	Screw-HH
2	302-5	2	Fitting-Lube
3	82-5460-01	1	Cover
4	98-2857-01	2	Caster Fork
5	98-2859	2	Castor Wheel ASM
*5:1	98-2877	1	Tire - Tubeless
*5:3	62-5580	2	Bearing-Outside
*5:4	62-5570	1	Bearing-Roller
*5:5	232-27	1	Stem-Valve
*5:6	302-11	1	Fitting-Lube, 45°
6	32151-91	2	Ring-Retaining
7	32153-5	2	Nut-Lock
8	74-0350	4	Cushion-Rubber
9	3290-355	4	Pin-Hair
10	283-55	4	Pin-Clevis
11	74-0290	2	Spring
12	256-156	2	Bushing-Flange
13	68-8980	2	Spanner-Tire
14	3218-5	4	Nut-Jam
15	3256-24	2	Washer-Flat
16	93-1167-01	2	Spacer-Castor
17	74-0310	2	Shaft-Adjusting
18	95-2821	1	Frame-Carrier
19	55-7660	1	V-Belt
20	51-3530	1	V-Belt, Deck Drive
21	3256-6	8	Washer-Flat

Ref. No.	Part No.	Qty.	Description
22	3296-29	2	Nut-Lock, NI
23	41-8440	2	Washer
24	3-6781	8	Washer-Thrust
27	3296-45	2	Nut-Lock, NI
28	3234-6	6	Screw-HHF
29	32128-23	6	Nut-HF
30	93-9479-01	1	Baffle - Front
31	322-3	6	Screw-HH
32	3296-47	6	Nut-Lock, NI
33	323-4	2	Screw-HH
34	80-3340-01	1	Weight-Front
35	322-12	2	Screw-HH
36	93-7819	2	Decal-HOC
37	74-2080	1	Decal-Proline
38	99-4595	1	Decal-92cm




* Not illustrated

This diagram shows an exploded view of a cylindrical assembly. It consists of several components arranged vertically along a central axis. From top to bottom, the parts are: a top cap with a flange and internal structure; a ring with a series of vertical slots; a solid ring; a smaller solid ring; a central shaft; a ring with a series of vertical slots; a solid ring; and a bottom cap with a flange and internal structure. The components are shown in a disassembled state to illustrate their relative positions and how they fit together.

C-2909

Ref. No.	Part No.	Qty.	Description
1	253-139	2	Seal-Oil
2	27-0920	1	Shaft-Spindle
3	27-0950	1	Spacer-Bearing, Spindle
4	46-8530	1	Bearing ASM
5	27-0970-03	1	Pulley ASM
7	302-2	1	Fitting-Grease
8	32146-20	1	Nut-Jam
13	61-4160	1	Spindle
14	7-4150	1	Washer-Pinion

Ref. No.	Part No.	Qty.	Description

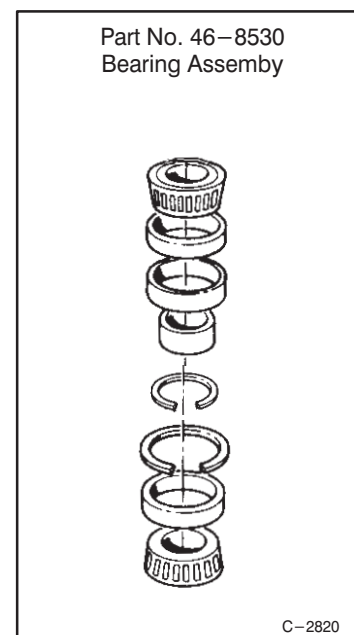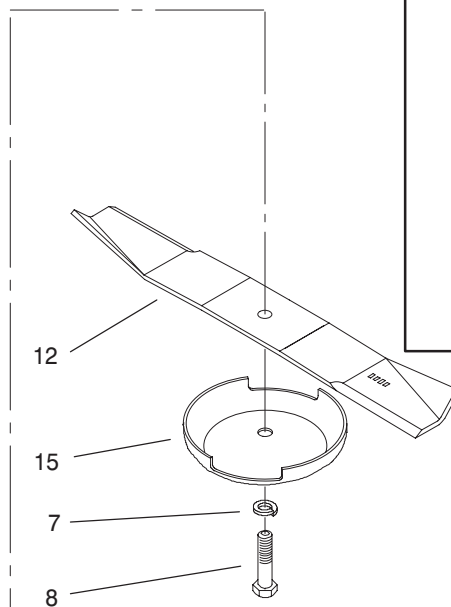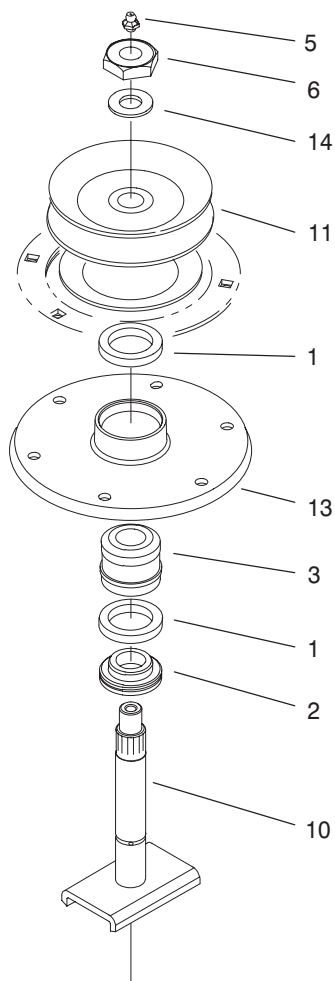

Sheet No.:A2
C-2910

Spindle Housing Assembly No. 54-7781

Ref. No.	Part No.	Qty.	Description
1	253-139	2	Seal-Oil
2	27-0950	1	Spacer-Bearing, Spindle
3	46-8530	1	Bearing ASM
5	302-2	1	Fitting-Grease
6	32146-20	1	Nut-Jam
7	3253-7	1	Washer-Lock/Sp
8	44-2200	1	Screw - Blade
10	51-3551	1	Shaft-Spindle
11	55-7610-03	1	Pulley ASM
12	56-2390	1	Blade
13	61-4160	1	Spindle
14	92-5836	1	Washer - Axle
15	72-9361	1	Cup-Scalp, Anti

Ref. No.	Part No.	Qty.	Description

