



Proline 15HP

Mid Size Traction Unit

Model No. 30168-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Fuel Tank & Idler Pulley Assembly	3	Clutch Assembly	9
Transmission & Drive Pulley Assembly	4	Engine Assembly	10–27
Wheel & Brake Assembly	5	Peerless Transmission Model 700–082	28
Wheel Assembly	6	Schematic	29
Handle & Controls Assembly	7	Maintenance	30–31
Engine & Muffler Assembly	8		


Accessories

Description	Model / Part No.	Description	Model / Part No.
-------------	------------------	-------------	------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

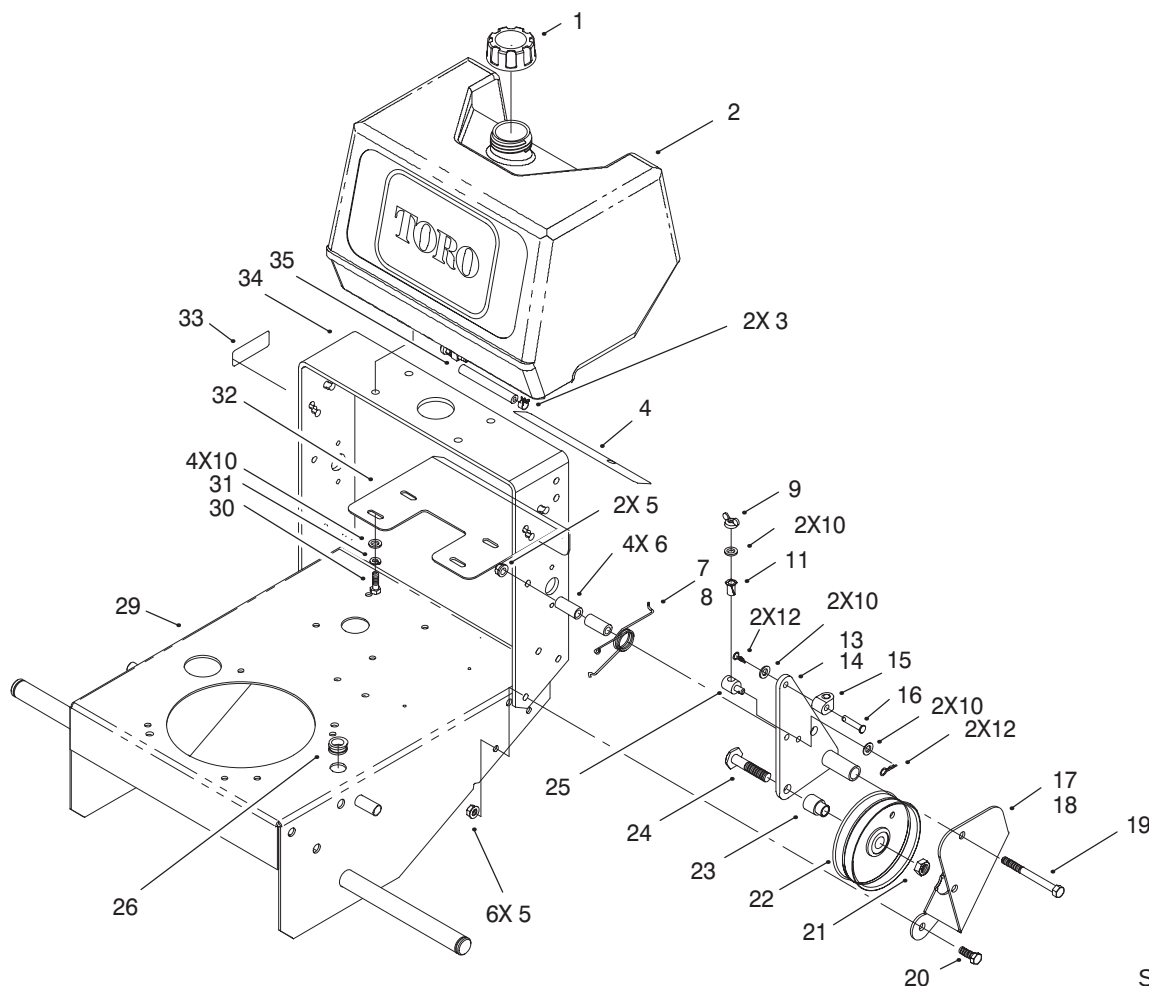

Sheet No.:2

Fuel Tank & Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3570	1	Gas Cap Assembly	29	93-1156-01	1	Frame Wa
2	95-2802	1	Tank - Fuel	30	322-4	4	Screw-HH
3	2412-98	2	Clamp	31	3253-4	4	Washer-Lock/Sp
4	82-7750	1	Decal-Ground Speed	32	66-7400-01	1	Plate-Control
5	3296-39	8	Nut-Lock, NI	33	95-2814	1	Decal - Fuel Shut Off
6	74-0040	4	Spacer-Idler Pivot	34	74-0360-01	1	Frame-Rear
7	51-4370	1	Spring-RH Torsion	35	47-2962	1	Hose - Fuel
8	51-4380	1	Spring-LH Torsion				
9	32103-25	2	Nut-Wing				
10	3256-23	10	Washer-Flat				
11	52-2890	2	Bushing-Nylon				
12	3290-307	4	Hairpin				
13	74-0230-01	1	Bracket-RH Idler				
14	74-0220-01	1	Bracket-LH Idler				
15	74-0521	2	Fitting-Rod				
16	283-6	2	Pin-Clevis				
17	67-6370-01	1	Bracket-RH Support				
18	67-6380-01	1	Bracket-LH Support				
19	323-16	2	Screw-HH				
20	323-6	6	Screw-HH				
21	3296-23	2	Nut-Lock, NI				
22	95-2800	2	Pulley - Idler				
23	95-2801	2	Spacer - Pulley				
24	51-4450	2	Screw-Leveler				
25	68-9690	2	Fitting-Rod				
26	237-124	1	Grommet				

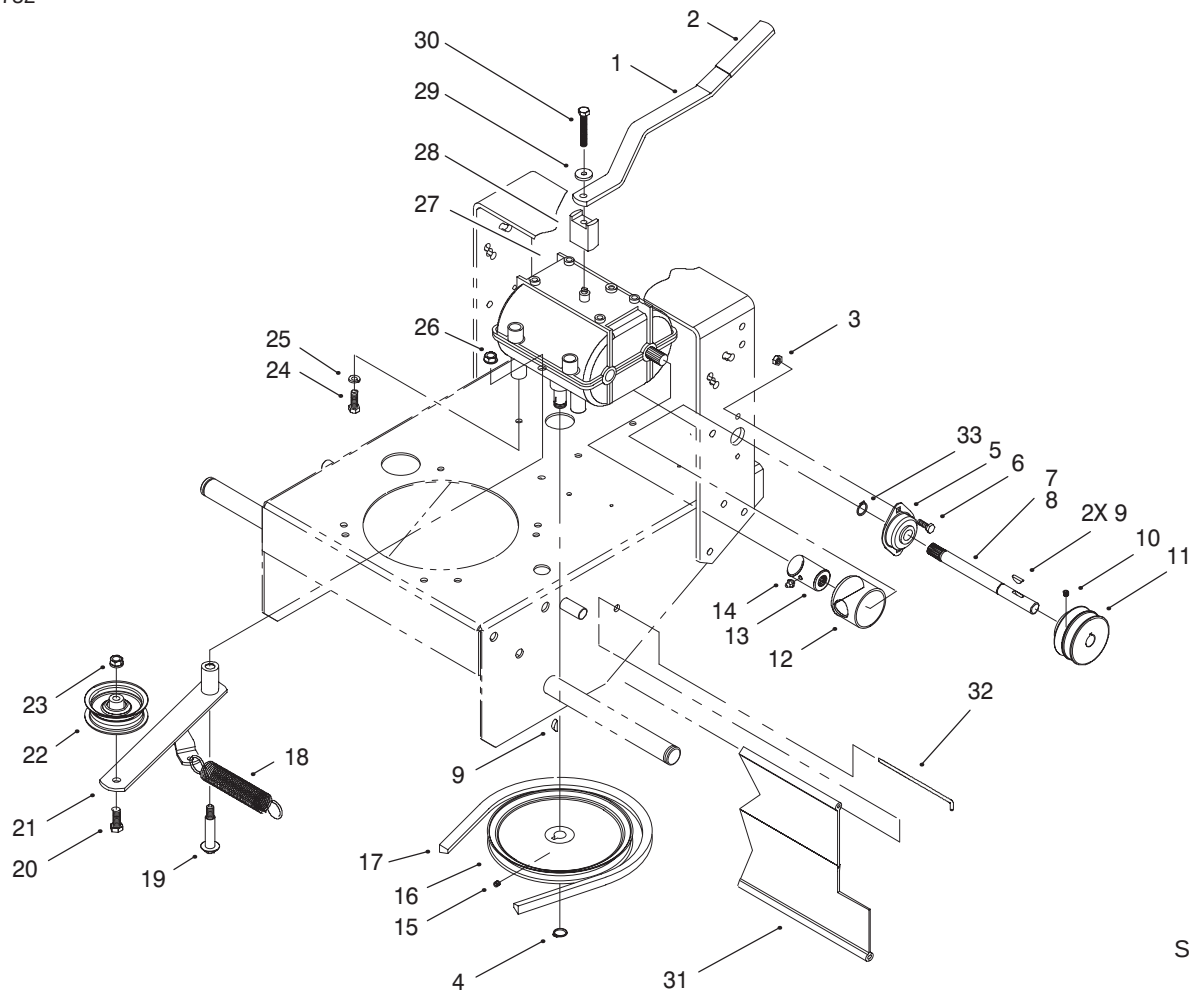


Sheet No.:3

Transmission & Drive Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74-0320-01	1	Lever-Shift
2	47-1970	1	Grip-Engagement
3	3296-42	4	Nut-Lock
4	32120-64	1	Ring-External Snap
5	51-4270	2	Bearing-External
6	321-4	4	Screw-HH
7	98-0788	1	Shaft - Extension, RH
8	98-0787	1	Shaft - Extension, LH
9	3257-5	3	Key-Woodruff
10	3245-3	2	Screw-Hex Socket Set
11	74-0480	2	Drive Pulley Assembly
12	51-4220	2	Guard-Coupler
13	98-0789	2	Coupler
14	302-5	2	Fitting-Lube
15	3245-1	1	Screw-Set, HSH
16	51-4190	1	Pulley-Driven
17	26-9671	1	V-Belt
18	68-2190	1	Spring-Extension
19	27-6230	1	Bolt-Wheel
20	323-8	1	Screw-HH
21	16-7509	1	Lever-Idler w/Bushings
22	62-4540	1	Pulley
23	3296-39	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
24	322-2	4	Screw-HH
25	3253-4	4	Washer-Lock/Sp
26	3296-6	1	Nut-Lock, NI
27	98-0791	1	Transmission
28	72-2190	1	Mount-Shift Lever
29	7-5461	1	Spacer
30	329-10	1	Screw-HH
31	95-1526	1	Shield - Trailing
32	95-1529	1	Rod - Shield
33	32151-62	2	Ring-Retaining

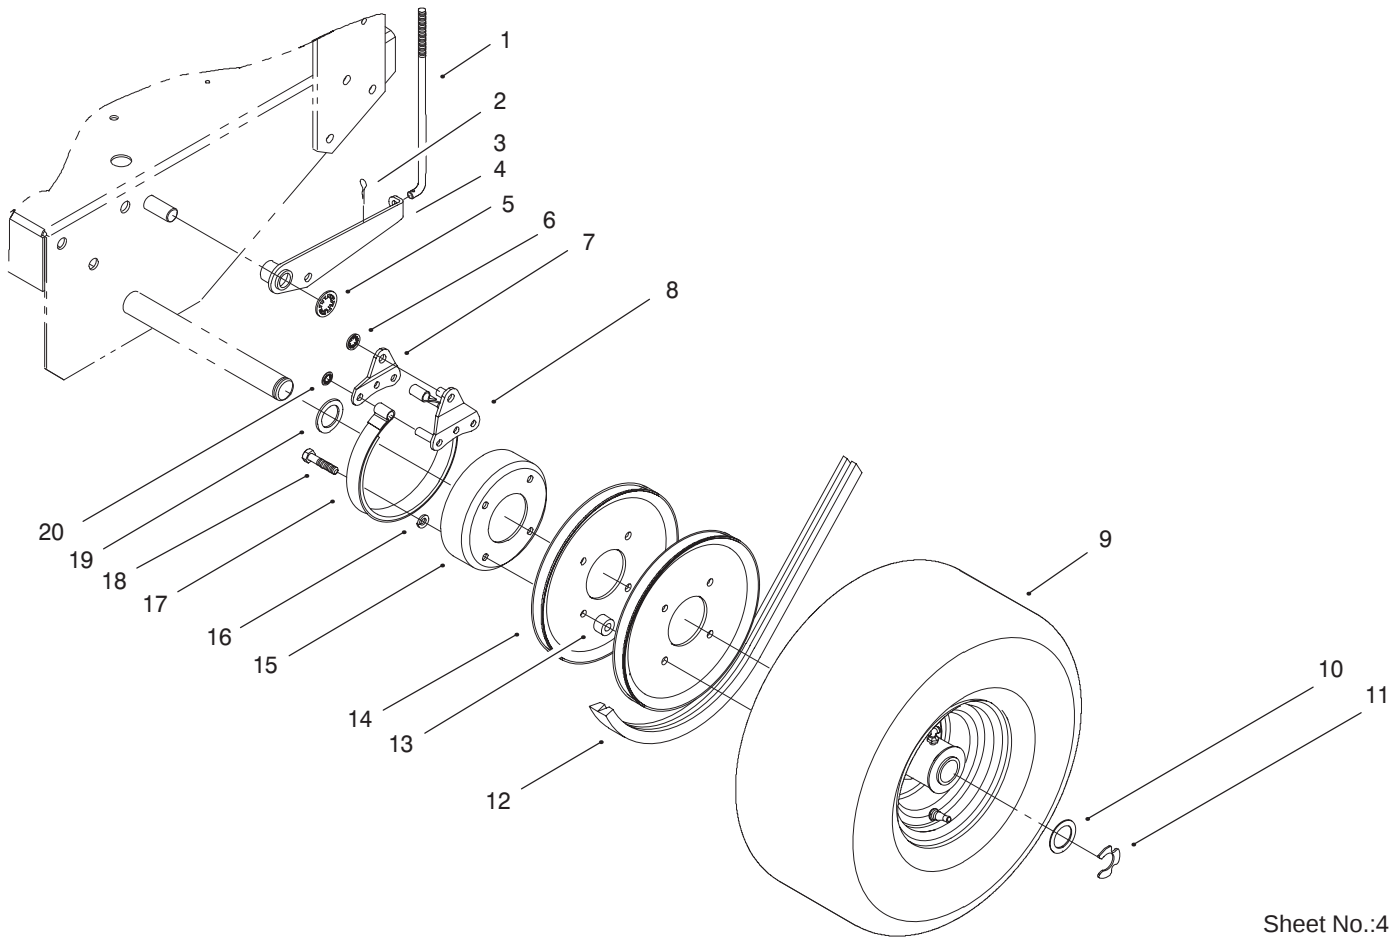


Sheet No.:4

Wheel & Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	51-4580	2	Rod-Brake
2	3290-307	2	Hairpin
3	51-4600-01	1	Arm-RH Brake
4	51-4610-01	1	Arm-LH Brake
5	32151-40	2	Ring-Retaining
6	32151-56	2	Ring-Retaining, Ext
7	51-4660-01	2	Plate-Brake Link
8	51-4650-01	2	Link-Brake
10	10-8110	8	Washer-Thrust
11	32151-91	2	Ring-Retaining
12	51-4290	2	Belt-Drive
13	51-4170	8	Spacer-Pulley
14	51-4160-03	4	Pulley-Wheel
15	51-4180-03	2	Drum-Brake
16	3253-4	8	Washer-Lock/Sp
17	51-4700	2	Band-Brake
18	322-7	8	Screw-HH
19	51-4230	2	Washer-Wheel
20	32151-72	4	Ring-Retaining


Ref. No.	Part No.	Qty.	Description

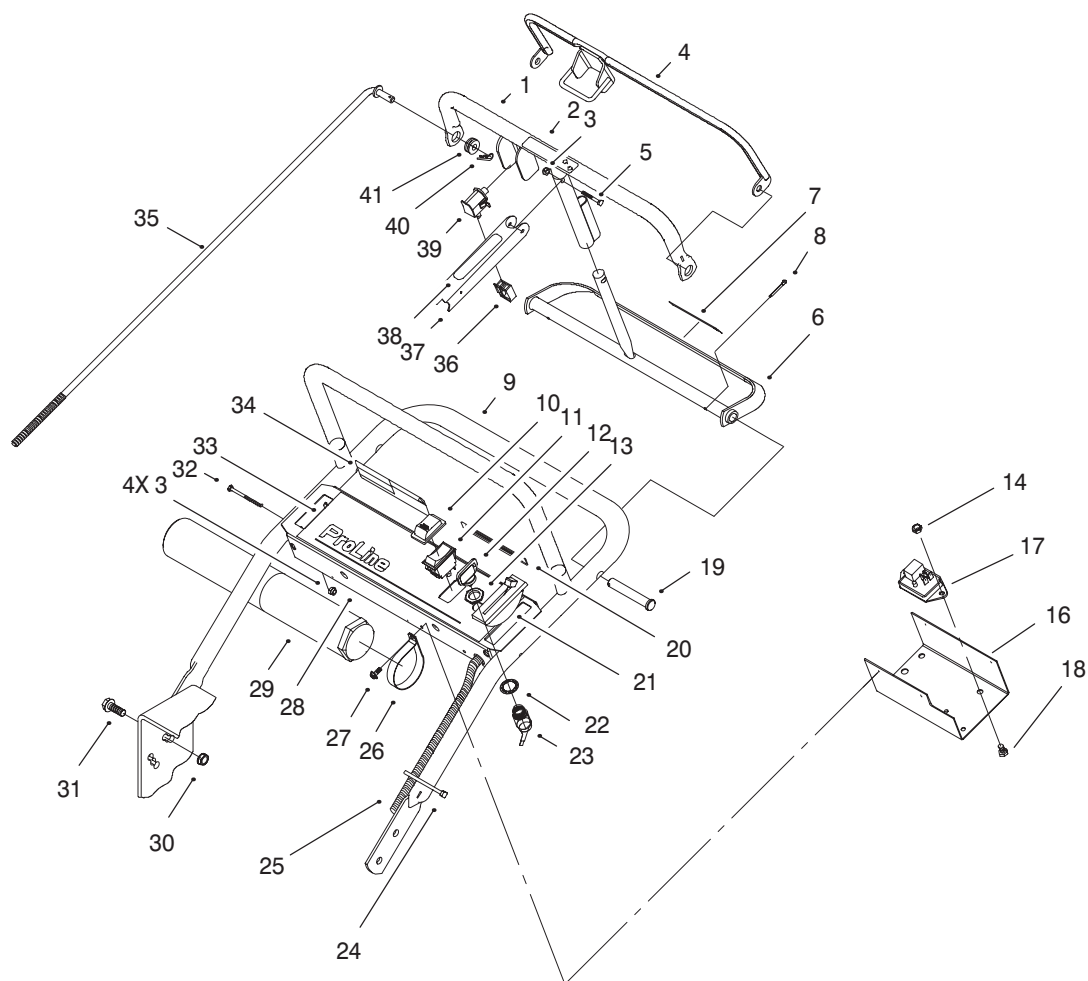

Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	82-7690-03	1	Bar-Control	27	32104-76	4	Screw-Slot, Acorn
2	82-2290	1	Decal - Control Bar	28	82-2180-03	1	Panel-Control
3	3296-2	5	Nut-Lock	29	74-0720	1	Tube-Manual
4	82-7680-03	1	Bail Wa	30	32128-21	4	Nut-HF
5	32105-1	1	Screw-Srh	31	3234-11	4	Screw-HHF
6	99-8501-03	1	Control-Pivot	32	32105-14	4	Screw-Slotted Hd
7	82-2280	1	Decal-Reverse Handle	33	82-7730	1	Decal - Control Panel
8	3272-11	2	Pin-Cotter	34	71-1280	1	Decal - Safety Instruct
9	67-6440-01	1	Handle-Upper	35	82-7631	2	Rod-Control
10	82-3820	1	Boot-Switch	36	218-595	1	Connector-Body
11	82-2300	1	Switch	37	51-4850-03	1	Lever-Parking Brake
12	63-8360	2	Key-Ignition	38	52-2010	1	Decal-Parking Lever
13	218-461	1	Nut-HH	39	82-2190	1	Switch-Bail
14	3296-42	1	Nut-Lock	40	3290-307	2	Hairpin
16	93-1187-03	1	Panel - Bottom	41	237-141	2	Grommet-Rubber
17	100-6170	1	Module- Delay				
18	321-2	1	Screw-HH				
19	283-55	2	Pin-Clevis				
20	65-3090	1	Decal - Instruction				
21	100-6450	1	Control- Throttle				
22	3254-5	1	Washer-Lock/Int				
23	29-5560	1	Switch-On Off				
24	3290-378	2	Tie-Cable				
25	100-3294	1	Harness- Wire				
26	2412-120	2	R-Clamp				

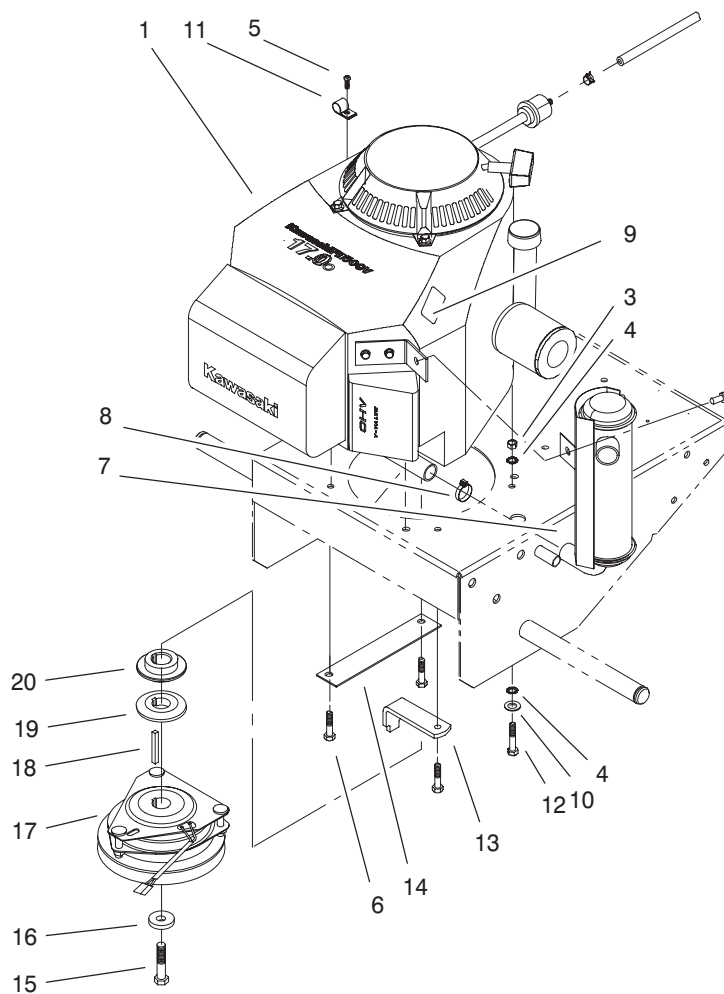


Sheet No.:6

Engine & Muffler Assembly

Ref. No.	Part No.	Qty.	Description
1	100-6464	1	Engine-15 Kawasaki
3	32152-1	2	Nut-Lock, NI
4	3255-8	2	Washer-Lock/Ext
5	3296-29	3	Nut-Lock,NI
6	322-7	2	Screw-HH
7	100-6467	1	Muffler-Kawasaki15& 7,Furn w/Engine
8	100-6468	1	Clamp-Muffler Kaw 15&17,Furn w/Engine
9	63-8440	1	Decal - Hot Surface
10	3256-23	1	Washer-Flat
11	2412-93	1	Clamp-R
12	322-9	2	Screw-HH
13	51-4540-03	1	Retainer-Clutch
14	94-5847-01	1	Cover - Pulley
15	3212-9	1	Screw-HH
16	112843	1	Washer
17	54-3200	1	Clutch/Brake
18	608006	1	Key
19	74-0050	1	Sheave-Lower Half
20	74-0060	1	Sheave-Upper Half

Ref. No.	Part No.	Qty.	Description

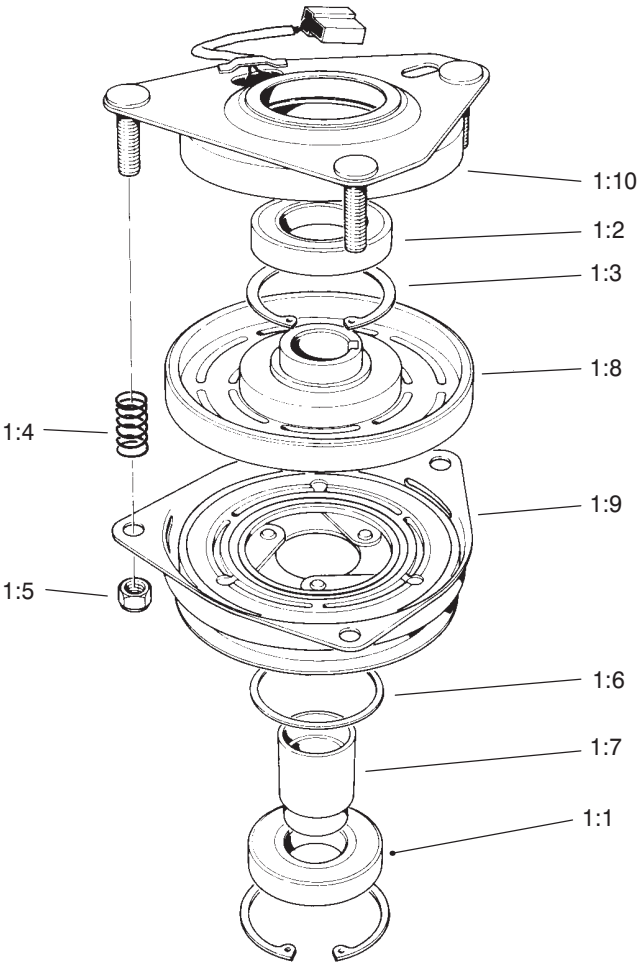


Sheet No.:A1

Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1		1	Deck Clutch				
1:1	251-291	1	Pulley Brg				
1:2	251-292	1	Field Brg				
1:3	44-8310	2	Retaining Ring				
1:4	44-8320	3	Spring				
1:5	3296-6	3	Nut-Lock, NI				
1:6	44-8330	1	Pulley Brg Spacer				
1:7	44-8340	1	Bearing Collar				
1:8	44-8360	1	Field Coil,Rotor/Brg ASM				
1:9	44-8370	1	Armature/Pulley/Brg				
1:10	54-0230	1	Field ASM/Brg				


Cylinder/Crankcase Assembly Kawasaki FH500V-AS08

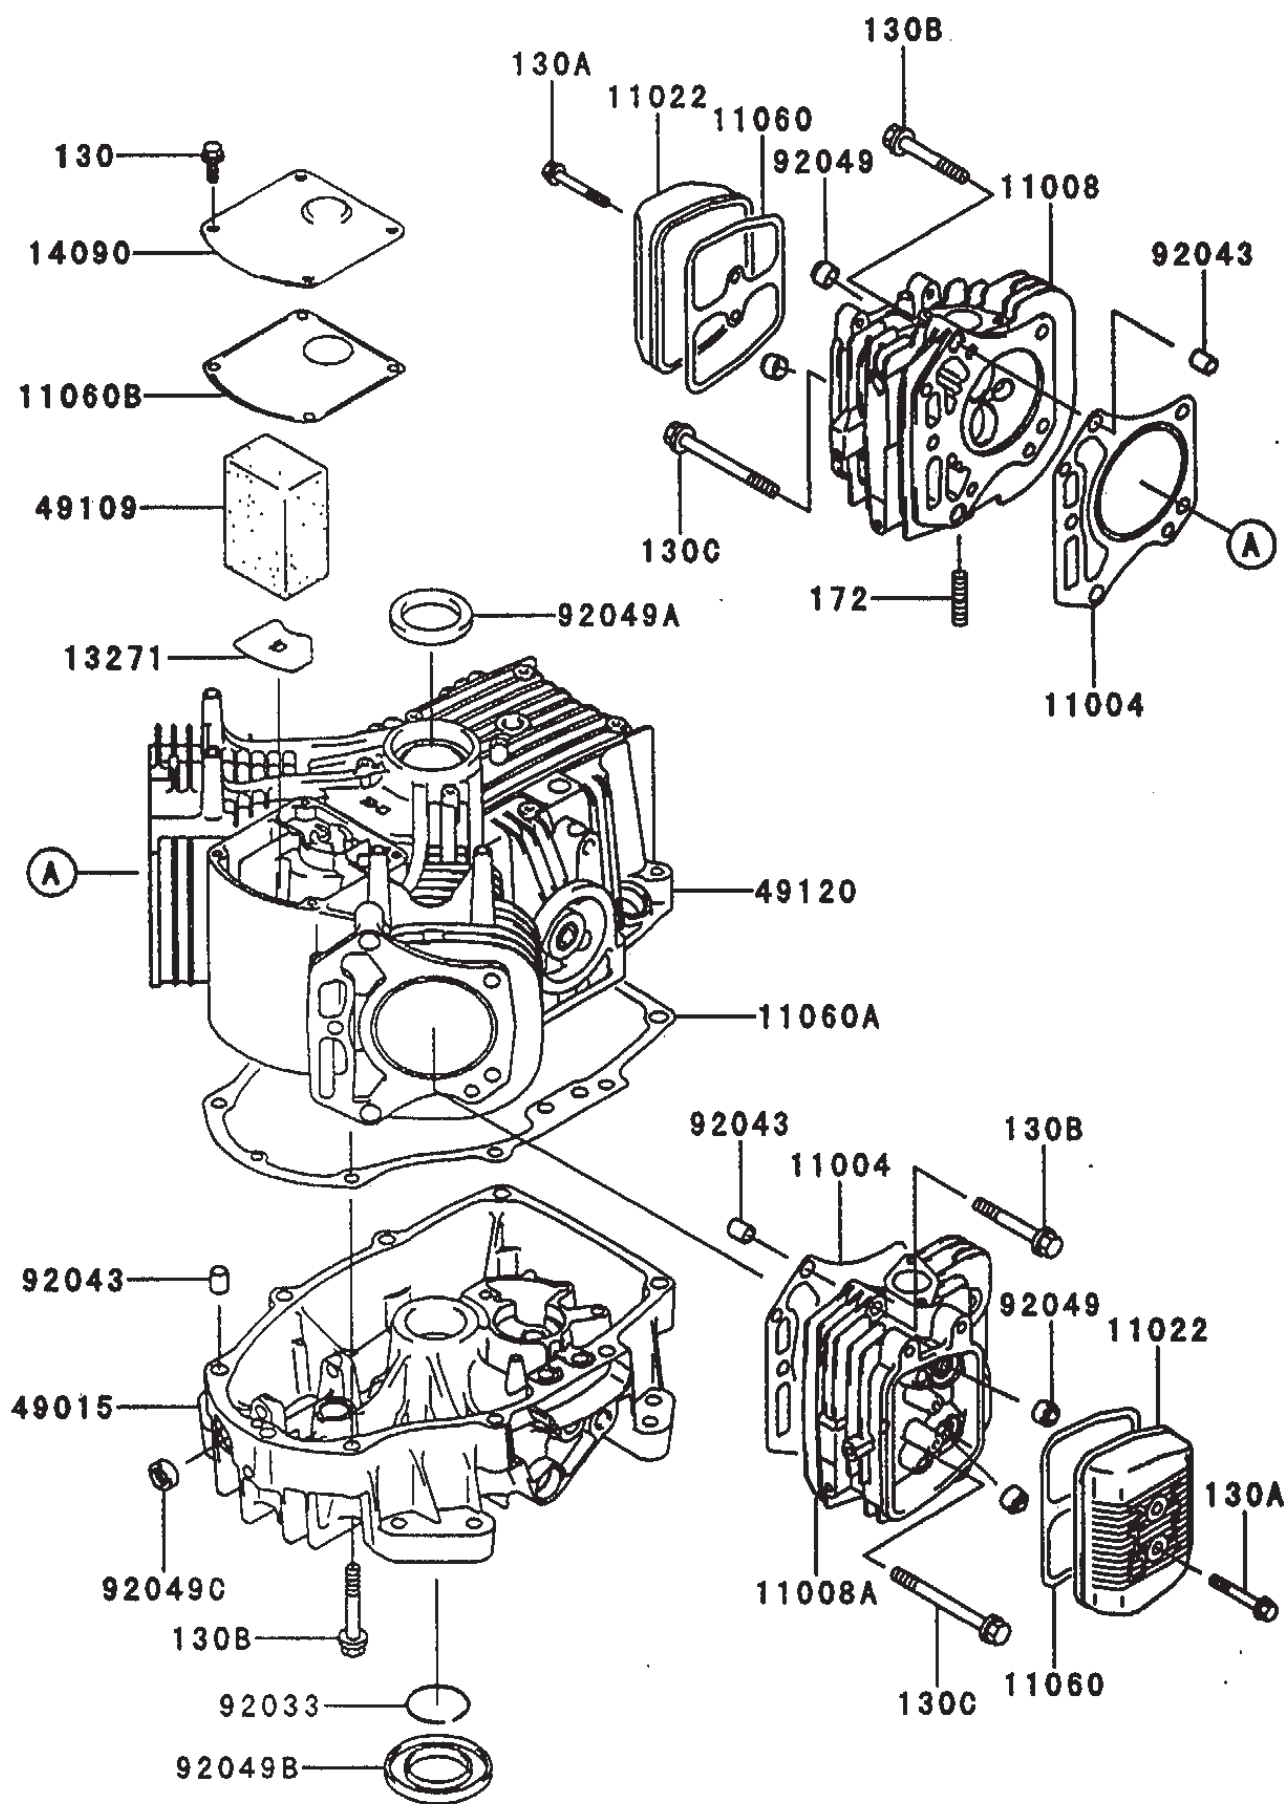

Cylinder/Crankcase Assembly Kawasaki FH500V-AS08


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11004	11004-7005	2	Gasket-Head				
11008	11008-7005	1	Head-Comp-Cylinder No. 1				
11008A	11008-7006	1	Head-Comp-Cylinder No. 2				
11022	11022-7003	2	Case-Rocker				
11060	11060-7001	2	Gasket, Rocker Case				
11060A	11060-7008	1	Gasket, Crankcase Cover				
11060B	11060-7015	1	Gasket, Breather				
14090	14090-7001	1	Cover, Breather				
49015	49015-6223	1	Cover-Crankcase				
49109	49109-7002	1	Element-Breather				
49120	49120-6119	1	Crankcase-Comp				
92033	92033-7003	1	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil				
92049A	92049-7002	1	Seal-Oil				
92049B	92049-7004	1	Seal-Oil				
92049C	92049-7005	1	Seal-Oil				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				
13271	13271-7016	1	Plate				

Valve/Camshaft Assembly Kawasaki FH500V-AS08

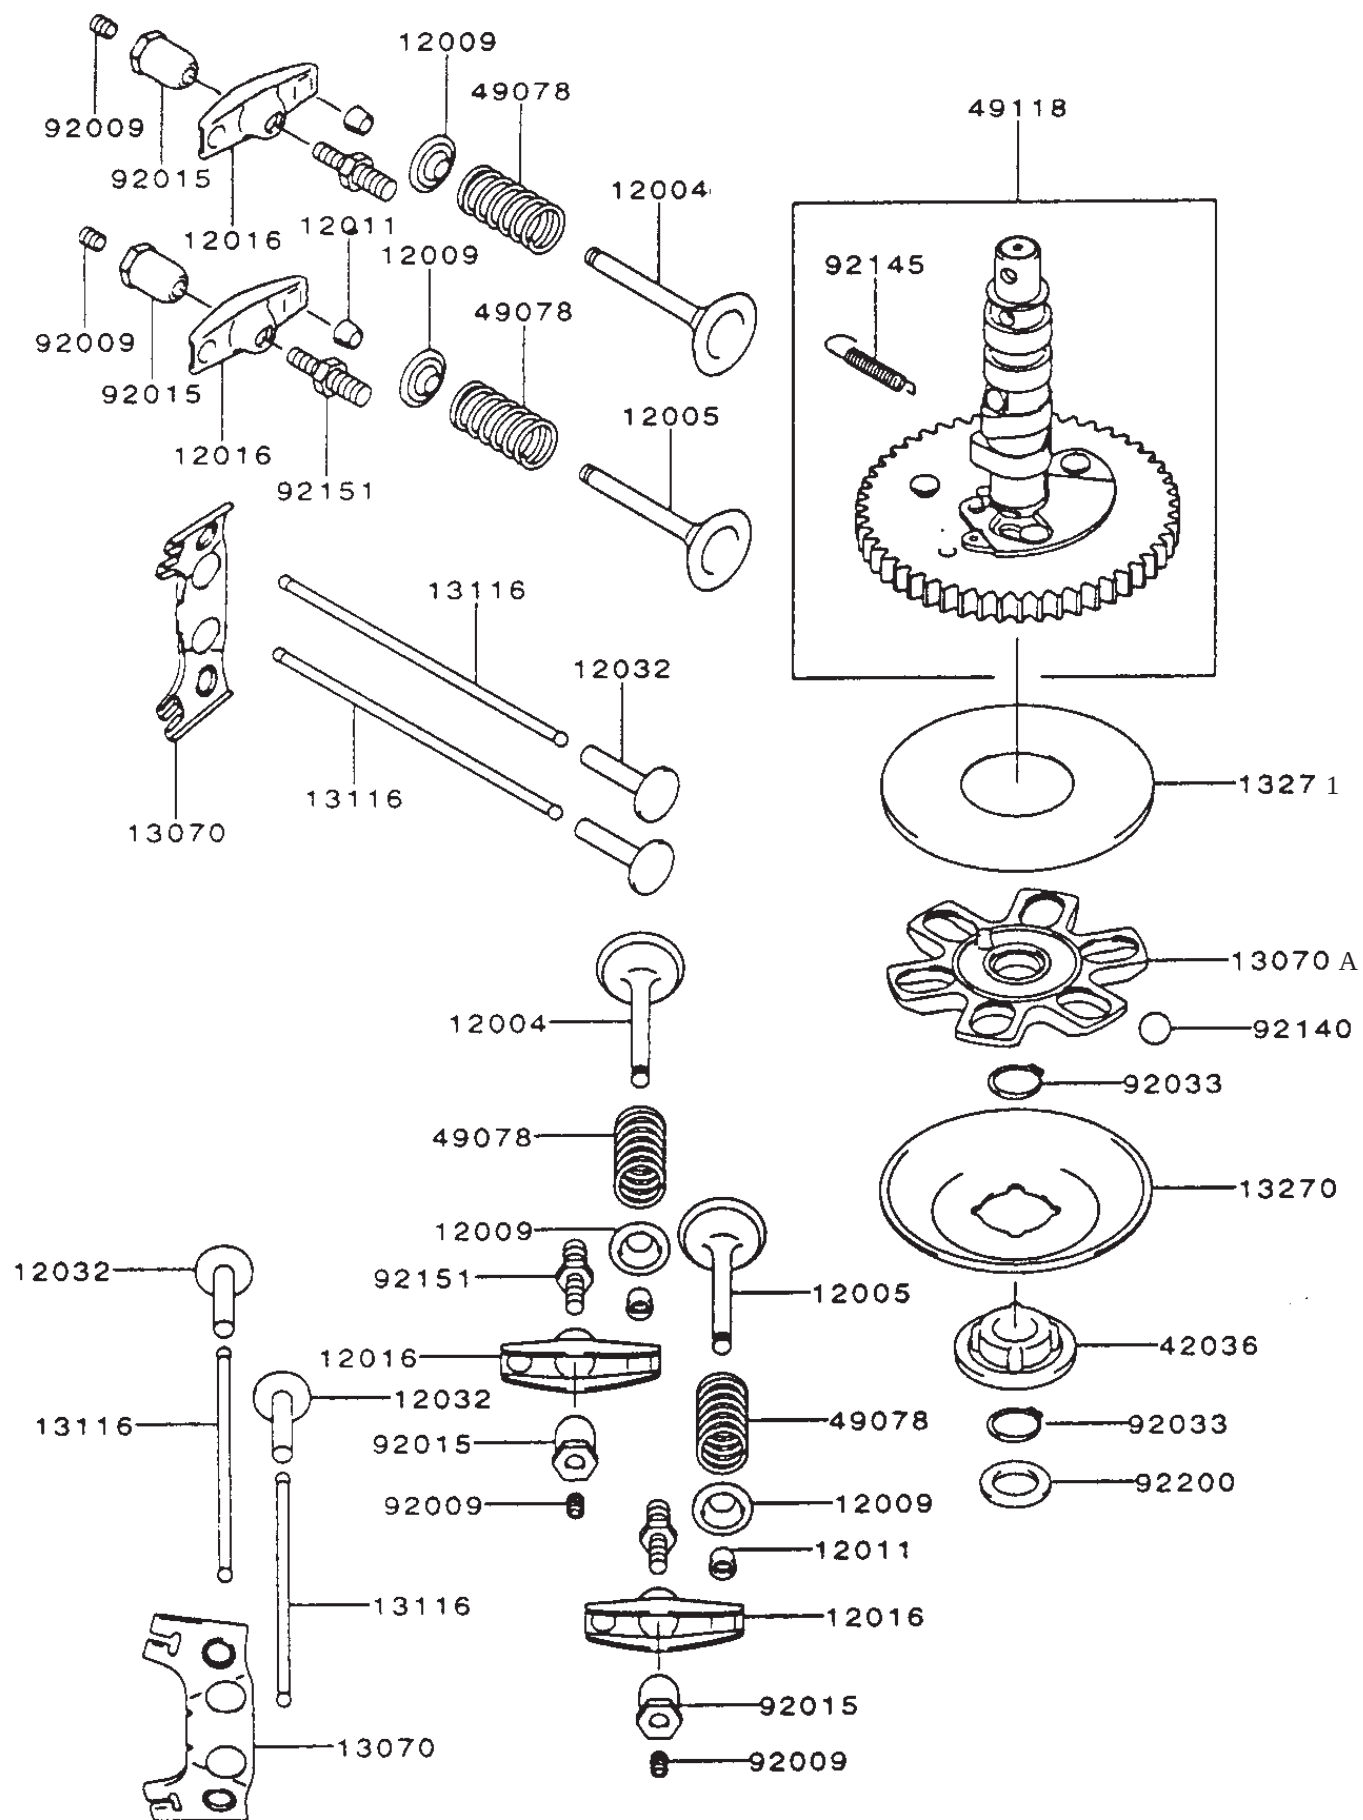

Ref. No.	Part No.	Qty.	Description
12004	12004-7001	2	Valve-Intake
12005	12005-7001	2	Valve-Exhaust
12009	12009-7001	4	Retainer-Valve Spring
12011	12011-2056	8	Collet
12016	12016-7001	4	Arm-Rocker
12032	12032-7001	4	Tappet
13070	13070-7001	2	Guide
13070A	13070-7004	1	Guide
13116	13116-2057	4	Rod-Push
13270	13270-7002	1	Plate
13271	13271-7007	1	Plate
42036	42036-7001	1	Sleeve
49078	49078-7001	4	Spring-Engine Valve
49118	49118-7002	1	Camshaft-Comp
92009	92009-2341	4	Screw
92015	92015-2253	4	Nut
92033	92033-7001	2	Ring-Snap
92140	92140-7002	6	Ball
92145	92145-7001	1	Spring
92151	92151-7001	4	Bolt
92200	92200-7001	1	Washer


Ref. No.	Part No.	Qty.	Description

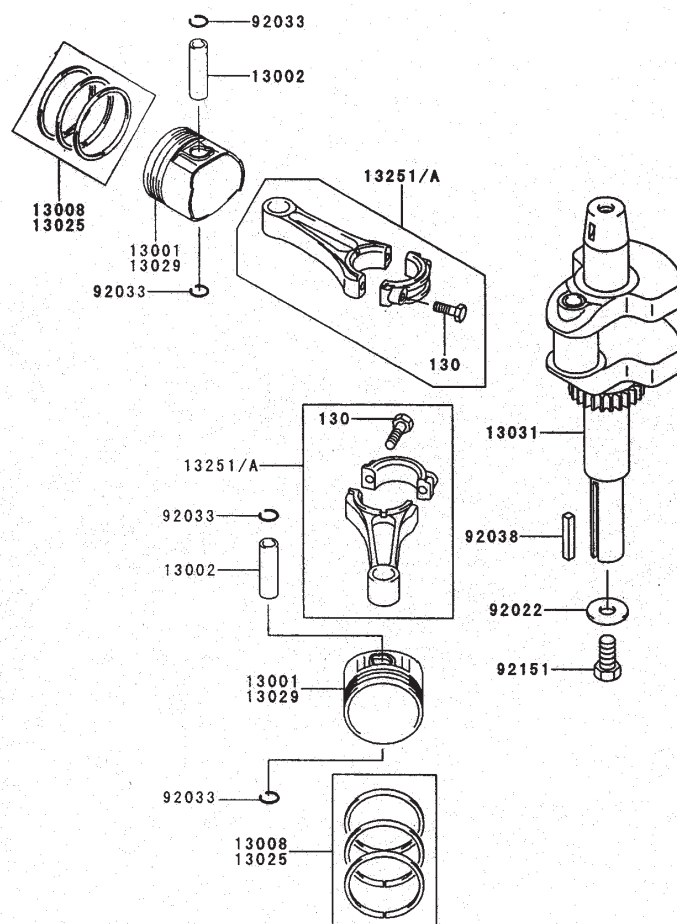

Piston/Crankshaft Assembly Kawasaki FH500V-AS08

Ref. No.	Part No.	Qty.	Description
13001	13001-7001	2	Piston-Engine
13002	13002-7001	2	Pin-Piston
13008	13008-6055	2	Ring-Set-Piston
13025	13025-7001	A/R	Ring Set-Piston L, 0.50
13029	13029-7001	A/R	Piston-Engine L, 0.50
13031	13031-7001	1	Crankshaft-Comp
13251	13251-7003	2	Rod-Assy-Connecting
13251A	13251-7004	2	Rod ASM-Connecting
92022	92022-1982	1	Washer, 12.5 x 32 x 3.2
92033	92033-7002	4	Ring-Snap
92038	92038-2101	1	Key
92151	92151-7010	1	Bolt, 7/16-20 UNF
130	130G0630	4	Bolt-Flanged


Ref. No.	Part No.	Qty.	Description

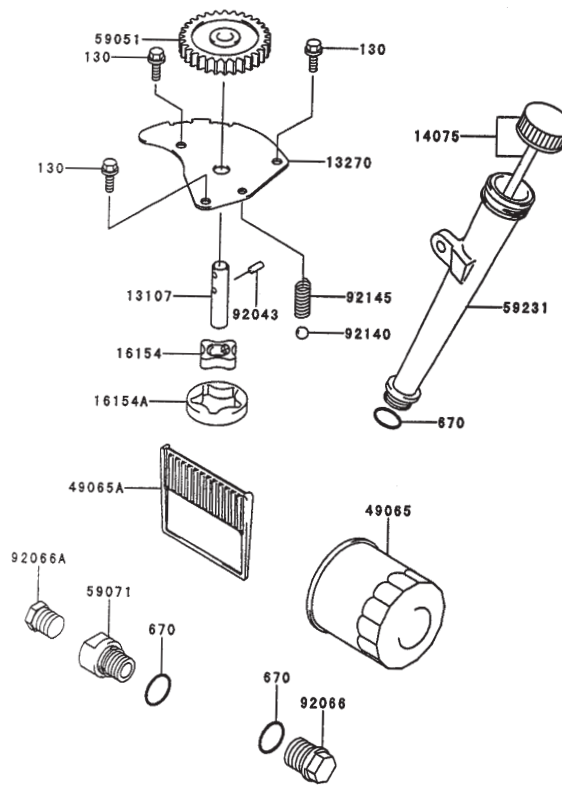

Lubrication-Equipment Assembly Kawasaki FH500V-AS08

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-2099	1	Shaft, Oil Pump				
13270	13270-7004	1	Plate				
14075	14075-7001	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump, Out				
16154A	16154-2054	1	Rotor-Pump, Out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7004	1	Filter-Oil				
59051	59051-7004	1	Gear-Spur				
59071	59071-7004	1	Joint				
59231	59231-7001	1	Filler				
92043	92043-7003	1	Pin				
92066	92066-7003	1	Plug				
92066A	92066-7006	1	Plug				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	3	O-Ring				


Cooling-Equipment Assembly Kawasaki FH500V-AS08

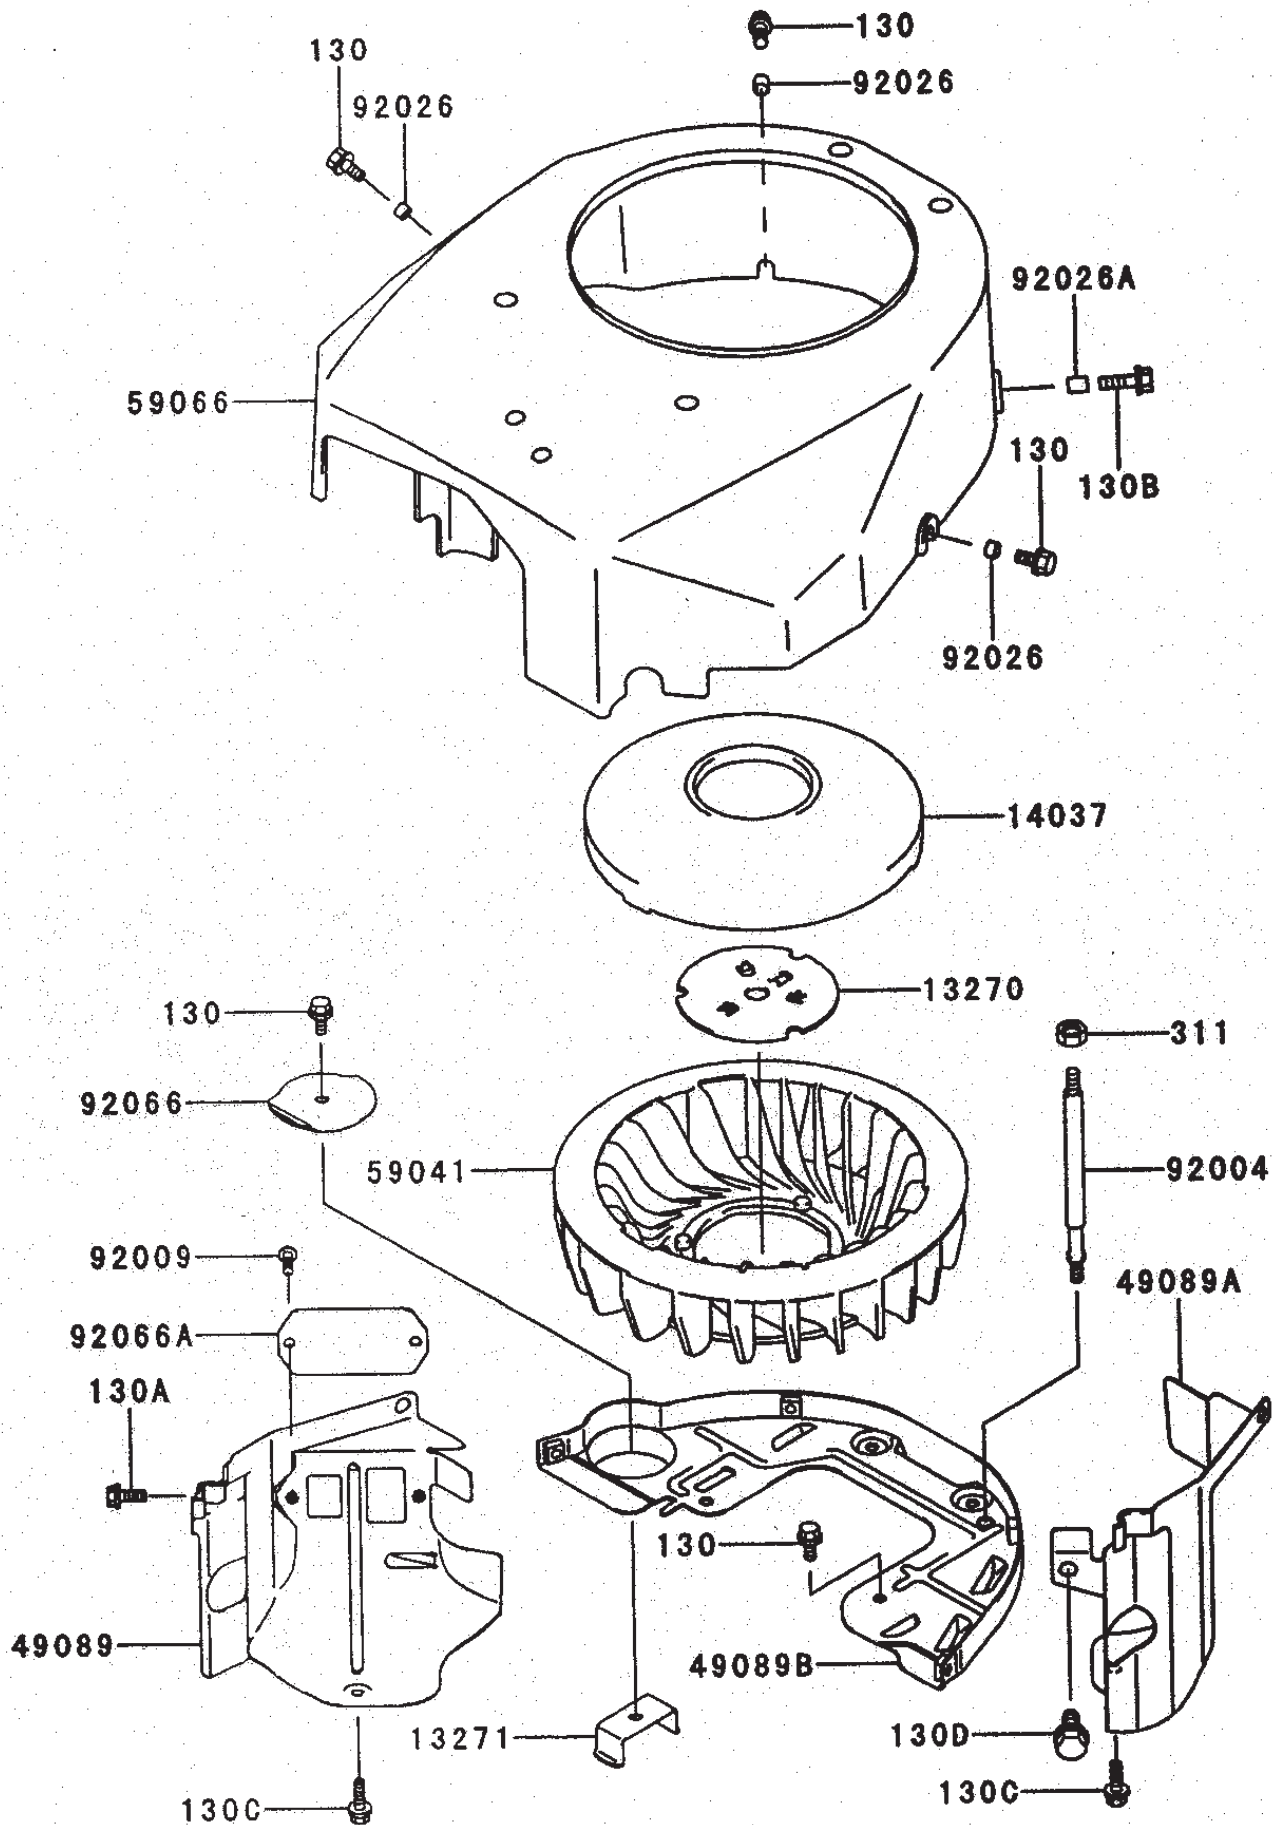

Ref. No.	Part No.	Qty.	Description
130	130B0612	6	Bolt–Flanged
130A	130B0616	2	Bolt–Flanged
130B	130B0620	1	Bolt–Flanged
130C	130B0625	2	Bolt–Flanged
130D	130B0816	1	Bolt–Flanged
13270	13270–7007	1	Plate
13271	13271–7002	1	Plate
14037	14037–7006–9H	1	Screen
311	311B0600	2	Nut–Hex
49089	49089–7001	1	Shroud–Engine
49089A	49089–7002	1	Shroud–Engine
49089B	49089–7003	1	Shroud–Engine
59041	59041–7001	1	Fan
59066	59066–7002	1	Housing–Fan
92004	92004–7006	2	Stud
92009	92009–2308	2	Screw
92026	92026–7001	3	Spacer, 6.2x7.9x5
92026A	92026–7003	1	Spacer, 6.5x7.9x10.5
92066	92066–7004	1	Plug
92066A	92066–7005	1	Plug

Ref. No.	Part No.	Qty.	Description

Electric-Equipment Assembly Kawasaki FH500V-AS08

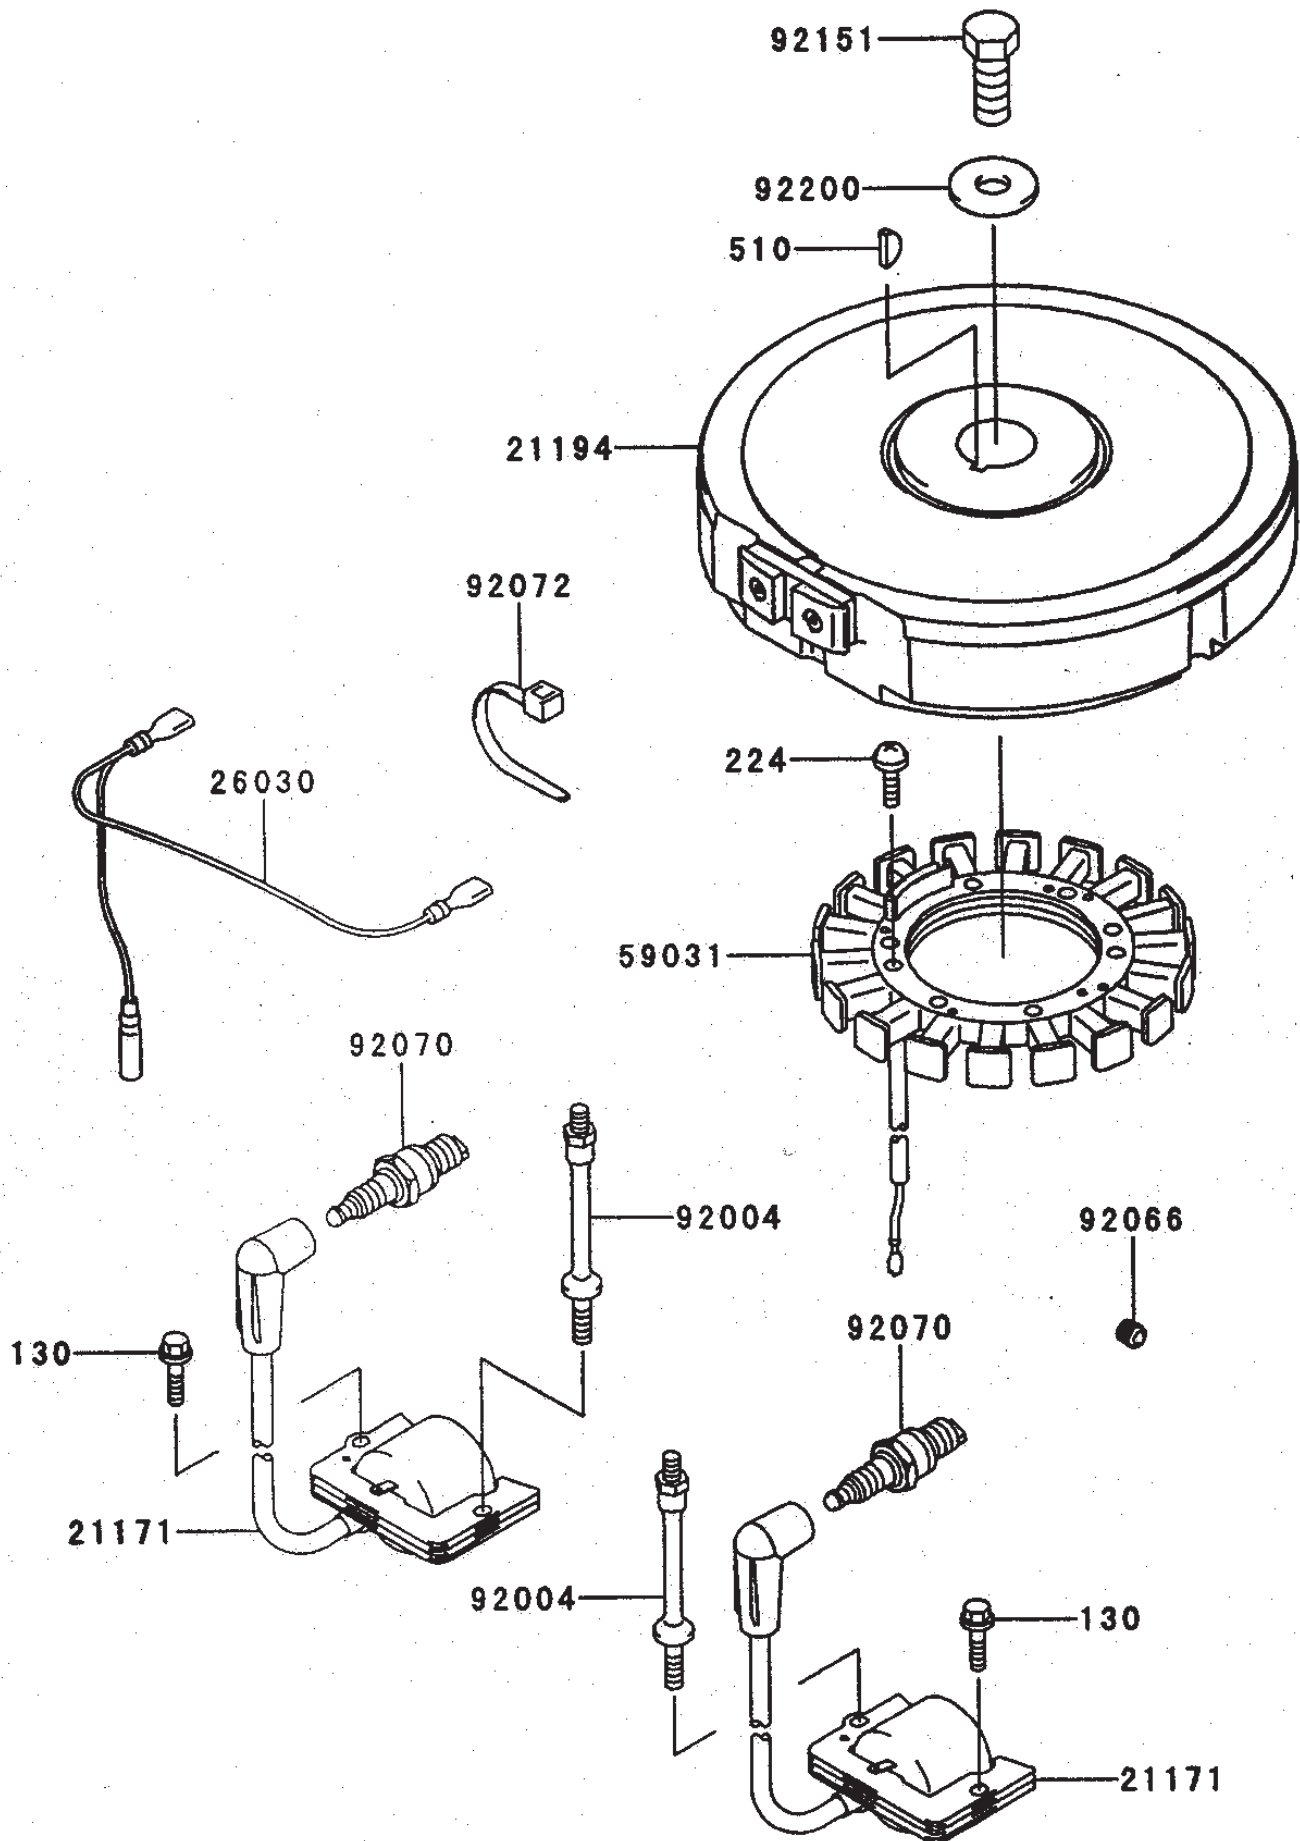


Electric-Equipment Assembly Kawasaki FH500V-AS08

Ref. No.	Part No.	Qty.	Description
21171	21171-7001	2	Coil-Assy-Ignition
21194	21194-7001	1	Flywheel-Comp
26030	26030-7001	1	Harness
59031	59031-7002	1	Coil-Charging
92004	92004-2147	2	Stud
92066	92066-7002	1	Plug
92070	92070-7003	2	Plug-Spark (RCJ8Y)
92072	92072-7003	2	Band
92151	92151-2097	1	Bolt, 12x30
92220	92220-7002	1	Washer
130	130B0620	2	Bolt-Flanged
224	224B0520	4	Screw-Pan-WP-Cros
510	510A5100	1	Key-Woodruff

Ref. No.	Part No.	Qty.	Description


Control-Equipment Assembly Kawasaki FH500V-AS08

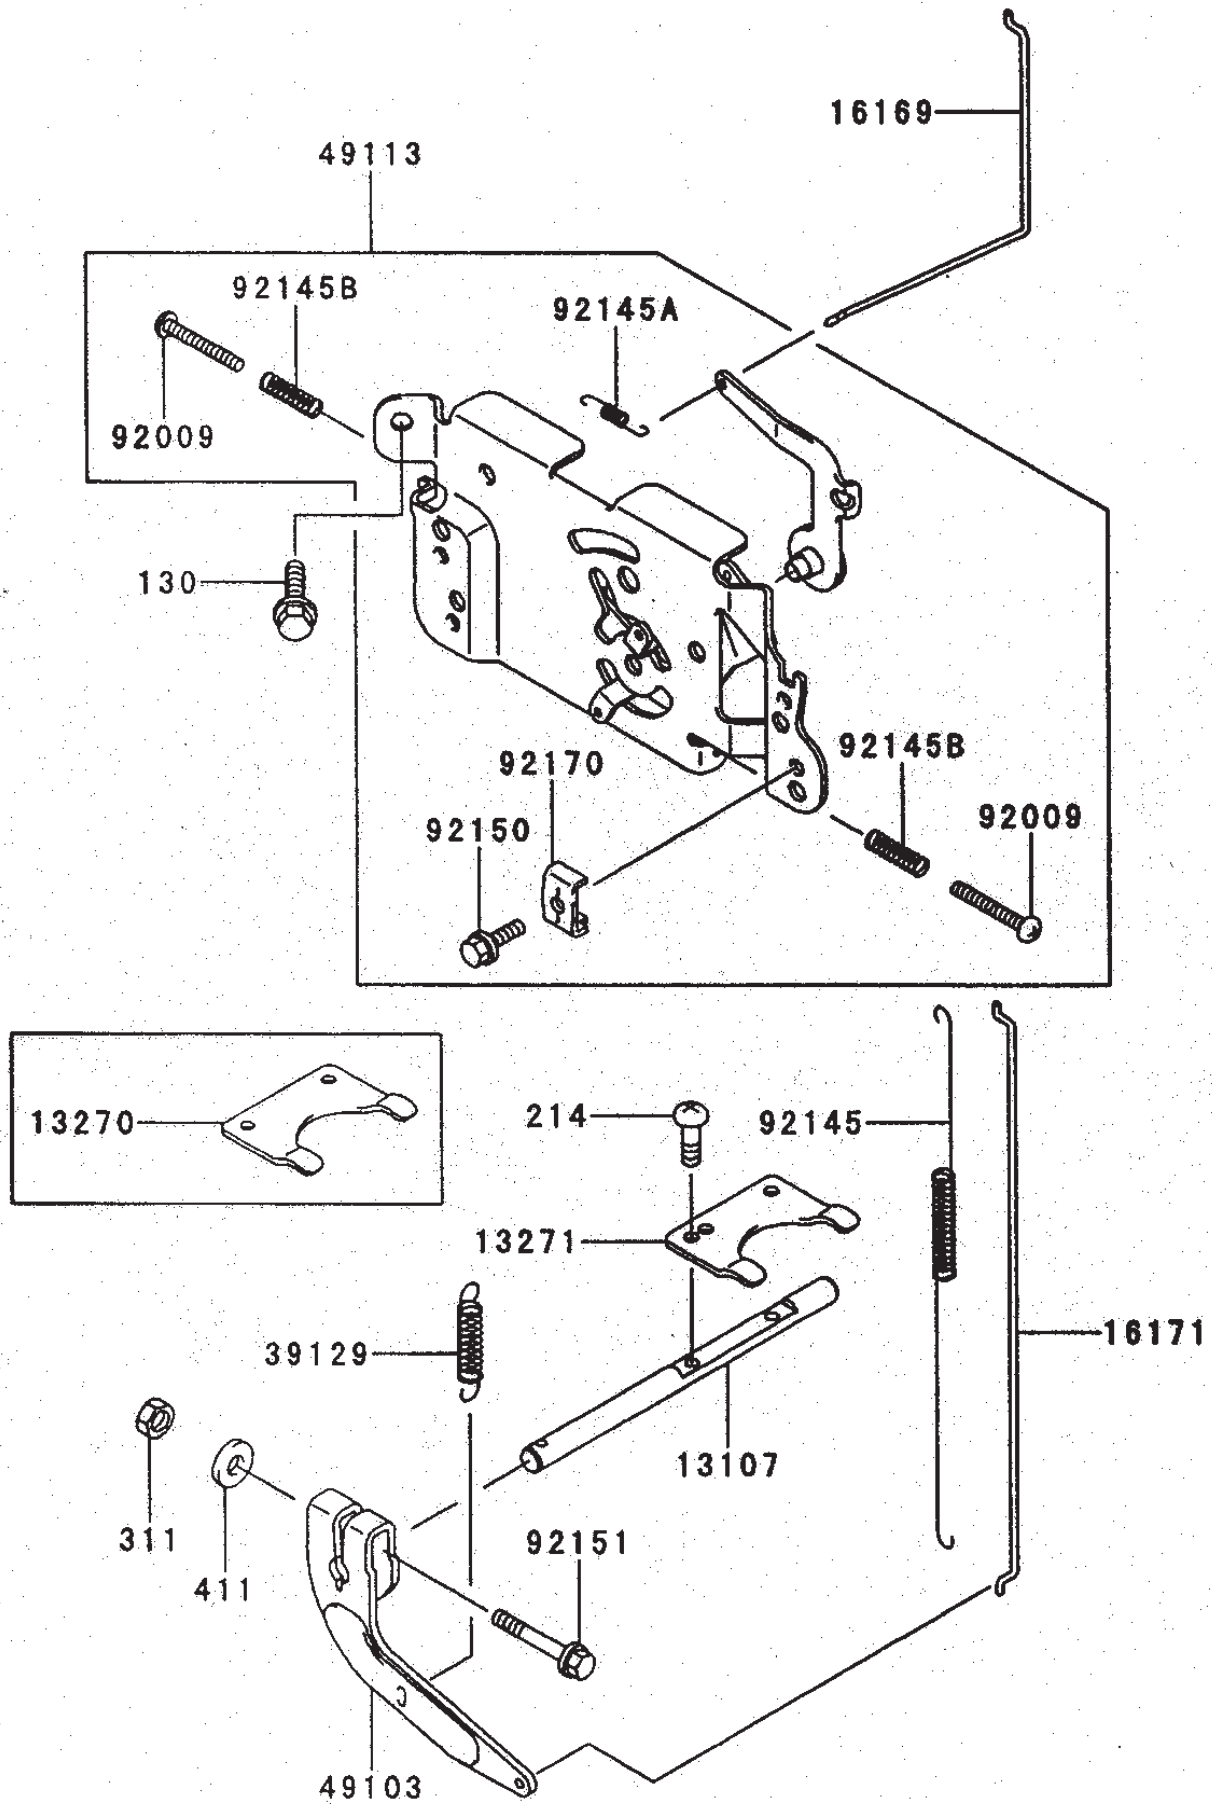

Ref. No.	Part No.	Qty.	Description
13107	13107-7002	1	Shaft
13270	13270-7006	1	Plate
13271	13271-7018	1	Plate
16169	16169-7001	1	Link-Choke
16171	16171-7001	1	Link
39129	39129-7003	1	Spring-Governor
49103	49103-7002	1	Arm-Governor
49113	49113-7005	1	Panel-Comp-Control
92009	92009-7002	2	Screw, 4x30
92145	92145-7003	1	Spring
92145A	92145-7004	1	Spring
92145B	92145-7005	1	Spring
92150	92150-2182	1	Bolt, 5x18
92151	92151-7006	1	Bolt, 6x30
92170	92170-7001	1	Clamp
130	130B0612	2	Bolt-Flanged
214	214B0408	2	Screw-Pan
311	311B0600	1	Nut-Hex
411	411B0600	1	Washer-Plain


Ref. No.	Part No.	Qty.	Description

Carburetor Assembly Kawasaki FH500V-AS08

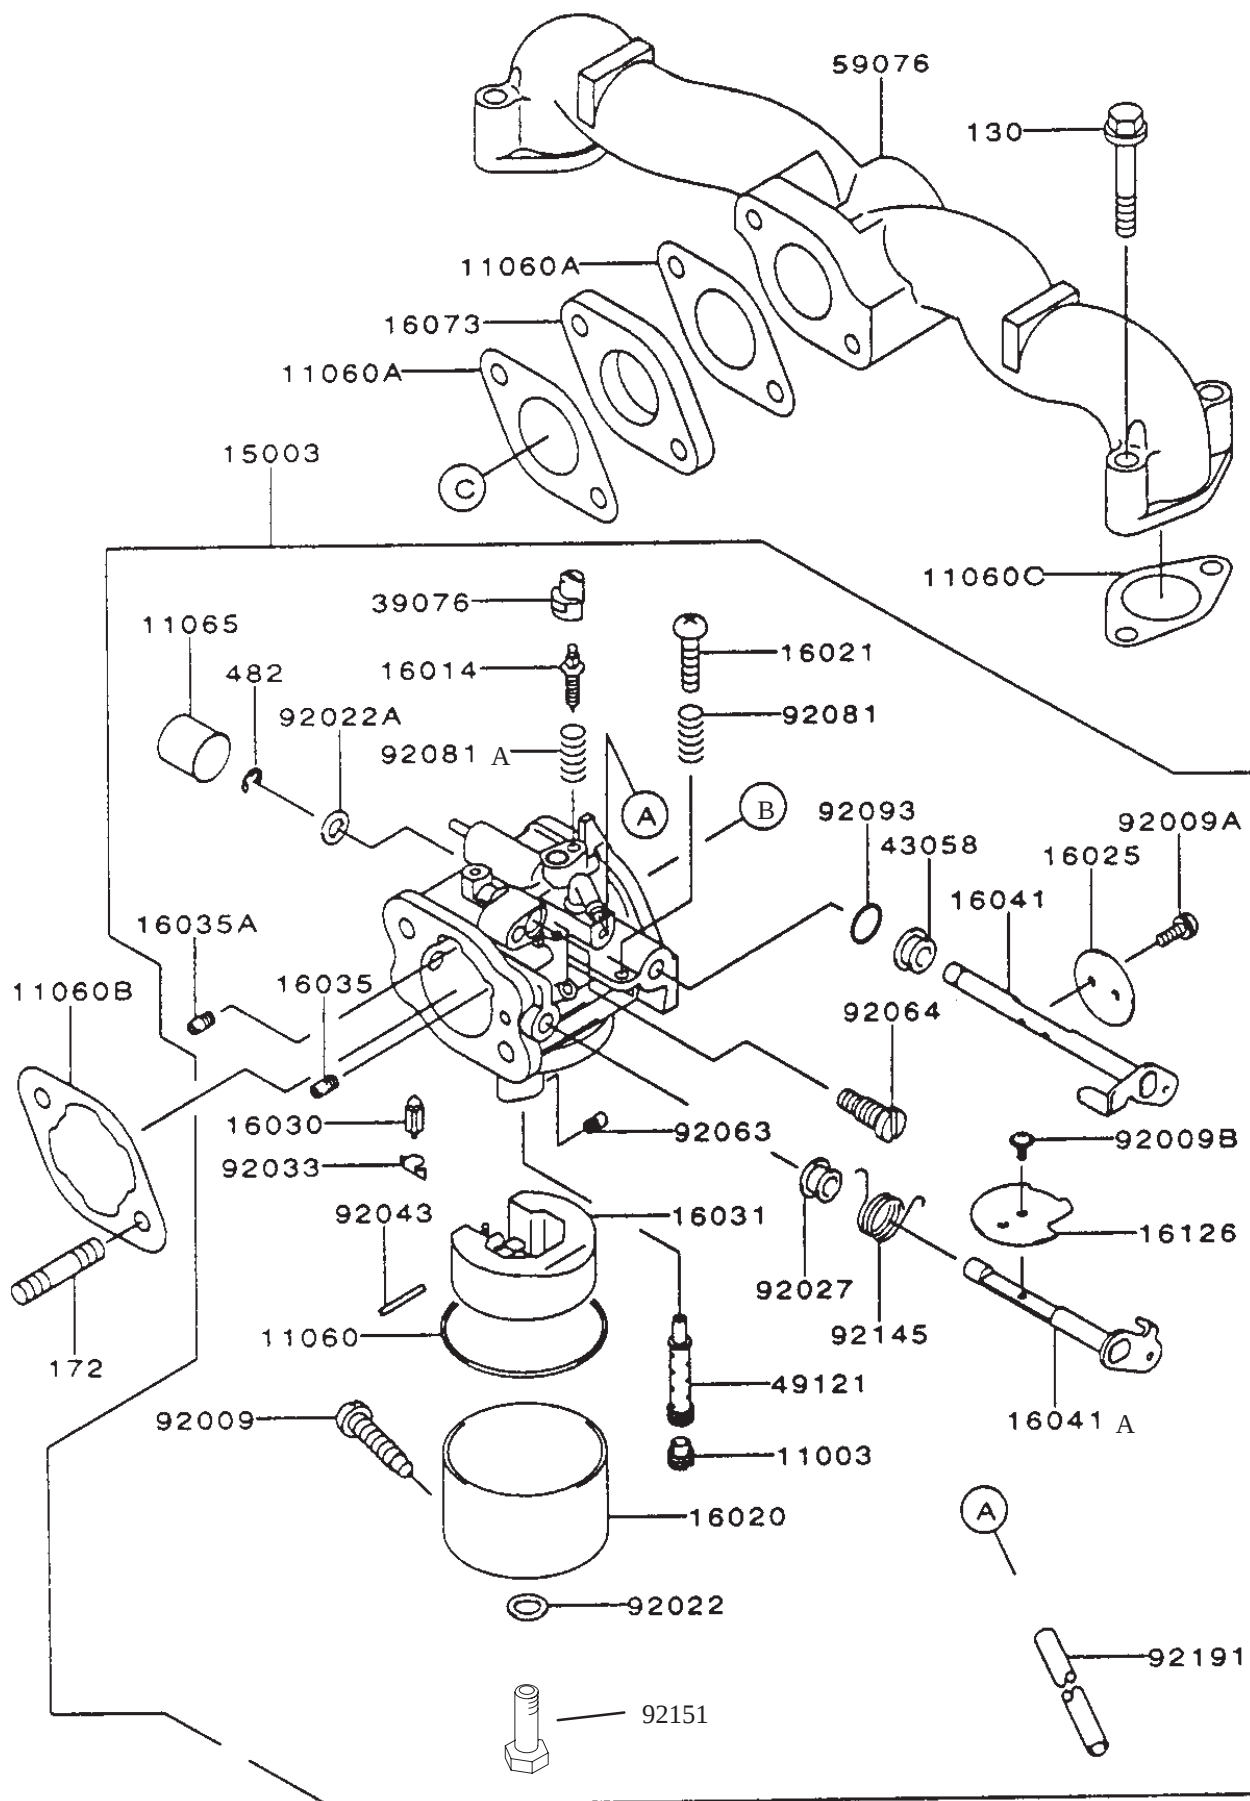

Carburetor Assembly Kawasaki FH500V-AS08


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11003	11003-2105	1	Seat-Valve				
11060	11060-2406	1	Gasket				
11060A	11060-7003	2	Gasket, Insulator				
11060B	11060-7004	1	Gasket, Air Filter				
11060C	11060-7005	2	Gasket				
11065	11065-2061	1	Cap				
15003	15003-7017	1	Carburetor-Assy				
16014	16014-2080	1	Screw-Pilot Air				
16020	16020-2141	1	Chamber-Float				
16021	16021-2060	1	Screw-Throttlestop				
16025	16025-2193	1	Valve-Throttle, #130				
16030	16030-2067	1	Valve-Float				
16031	16031-2066	1	Float				
16035	16035-2060	1	Jet-Air, #1.7				
16035A	16035-2061	1	Jet-Air, #1.2				
16041	16041-7005	1	Shaft-Carburetor, Choke				
16041A	16041-7006	1	Shaft-Carburetor Throttle				
16073	16073-7001	1	Insulator				
16126	16126-7007	1	Valve				
39076	39076-2053	1	Limiter				
43058	43058-3716	1	Ring				
49121	49121-2222	1	Nozzle-Main				
59076	59076-7001	1	Manifold-Intake				
92009	92009-2015	1	Screw				
92009A	92009-2024	2	Screw				
92009B	92009-2081	2	Screw				
92022	92022-2231	1	Washer				
92022A	92022-2239	1	Washer				
92027	92027-2025	1	Collar				
92033	92033-2067	1	Ring-Snap				
92043	92043-2226	1	Pin				
92063	92063-2358	1	Jet-Main				
92064	92064-2125	1	Jet-Pilot				
92081	92081-2009	1	Spring				
92081A	92081-2256	1	Spring				
92093	92093-2002	1	Seal				
92145	92145-2061	1	Spring				
92151	92151-2092	1	Bolt				
92191	92191-7008	1	Tube				
130	130B0635	4	Bolt-Flanged				
172	172G0685	2	Bolt-Stud				
482	482L4000	1	Circlip-Type-E				

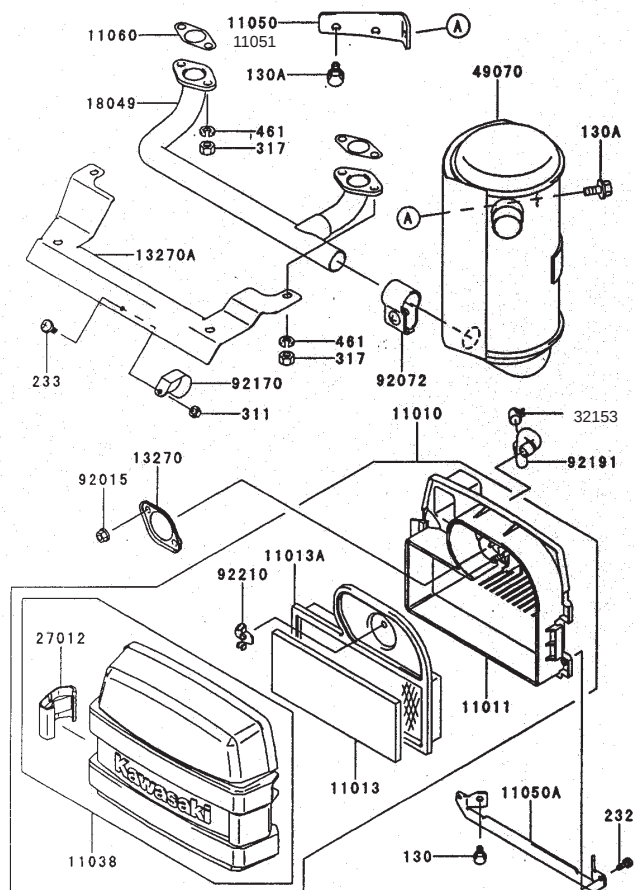

Air-Filter/Muffler Assembly Kawasaki FH500V-AS08


Ref. No.	Part No.	Qty.	Description
11010	11010-7001	1	Filter-Assy-Air
11011	11011-7001	1	Case-Air Filter
11013	11013-7001	1	Element-Air Filter
11013A	11013-7002	1	Element-Air Filter
11038	11038-7001	1	Case-Assy-Air Filter
11050	11050-7004	1	Bracket
11050A	11050-7006	1	Bracket
11051	11051-7005-9H	1	Bracket
11060	11060-7021	2	Gasket, Muffler
13270	13270-7001	1	Plate
13270A	13270-7008	1	Plate
18049	18049-7001	1	Pipe-Exhaust
27012	27012-7001	2	Hook, Air Filter
32153	32153-7001	1	Pipe
49070	49070-7002	1	Muffler-Comp
92072	92072-7002	1	Band
92015	92015-1193	2	Nut
92170	92170-7002	1	Clamp
92191	92191-7001	1	Tube
92210	92210-7004	1	Nut
130	130B0612	2	Bolt-Flanged
130A	130B0816	2	Bolt-Flanged
232	232B0514	2	Screw-Pan-WS
233	233B0416	1	Screw-Pan WP
311	311B0400	1	Nut-Hex
317	317R0800	4	Nut-Hex-Small

Ref. No.	Part No.	Qty.	Description
461	461F0800	4	Washer-Spring

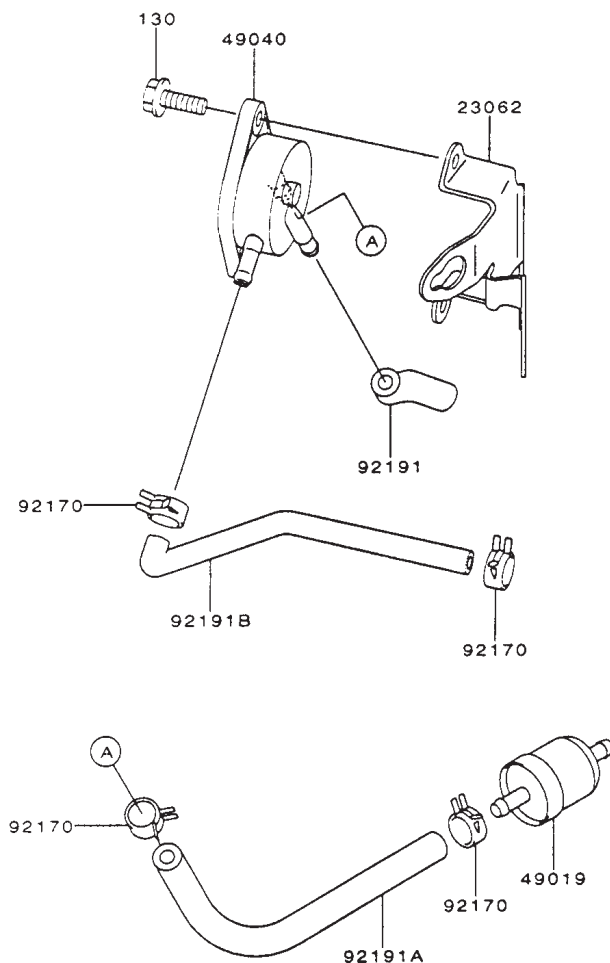


Fuel-Tank/Fuel-Valve Assembly Kawasaki FH500V-AS08

Ref. No.	Part No.	Qty.	Description
23062	23062-7001-9H	1	Bracket-Comp
49019	49019-7001	1	Filter-Fuel
49040	49040-2075	1	Pump-Fuel
92170	92170-2088	4	Clamp
92191	92191-7002	1	Tube
92191A	92191-7003	1	Tube,6.35x12.7x160
92191B	92191-7004	1	Tube
130	130B0620	2	Bolt-Flanged

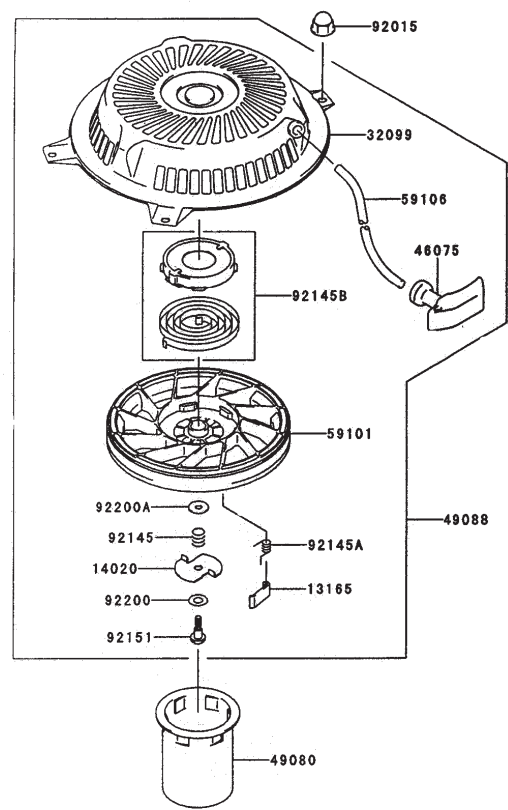

Starter-Kawasaki FH500V-AS08

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13165	13165-700	2	Pawl, Recoil Starter				
14020	14020-7001	1	Retainer				
32099	32099-7001	1	Case, Recoil Starter				
46075	46075-7001	1	Grip-Recoil Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7001	1	Starter-Recoil				
59101	59101-7001	1	Reel, Recoil Starter				
59106	59106-7001	1	Rope				
92015	92015-1170	4	Nut				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				

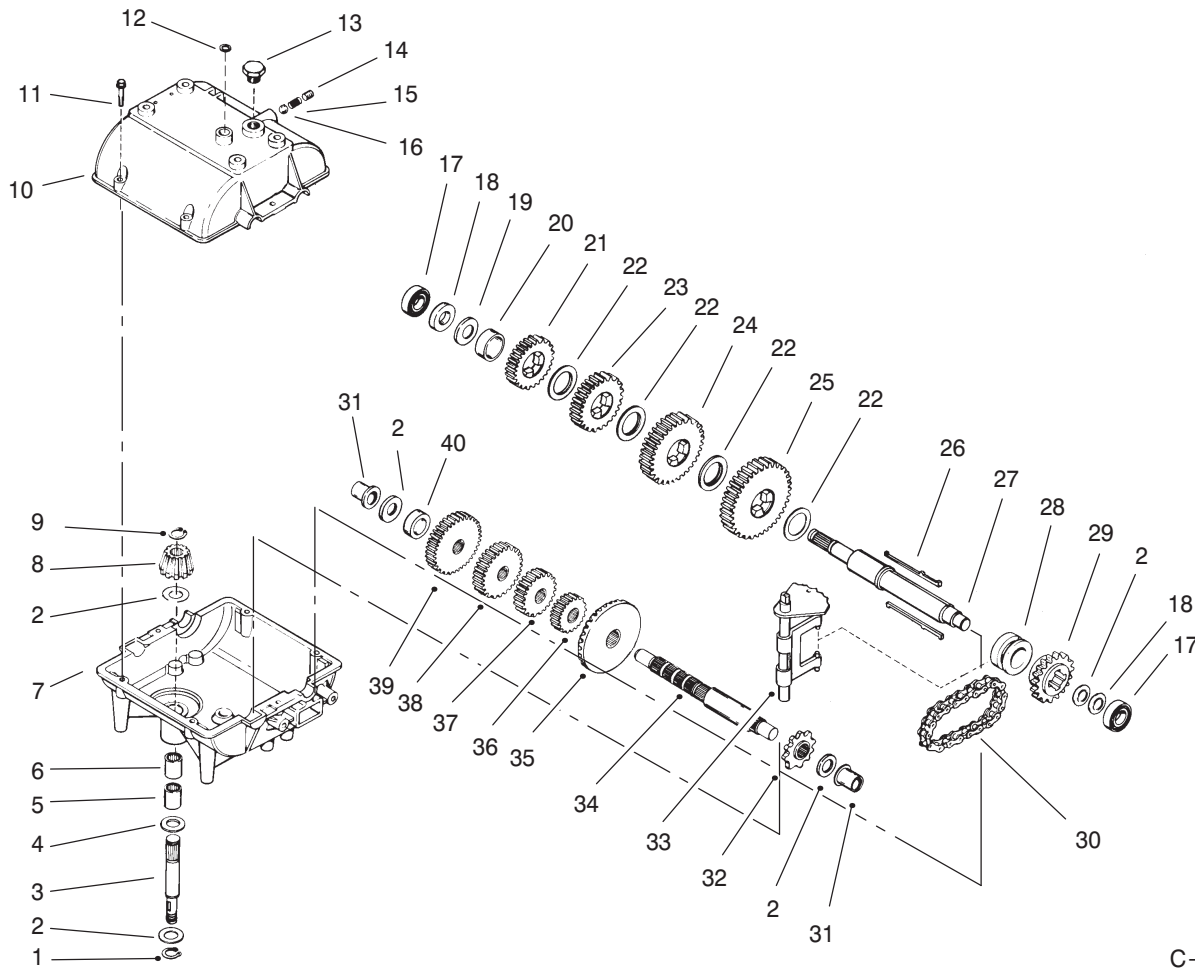


C-1776

PEERLESS TRANSMISSION MODEL 700-082

Ref. No.	Part No.	Description	No. Used
1	792035	Ring – Retaining	1
2	780072	Washer – Thrust	5
3	776135	Shaft – Input	1
4	792001	"O"Ring	2
5	780142	Bearing – Needle	1
6	780086A	Bearing – Needle	1
7	770090A	Case – Transmission	1
8	778153	Bevel Pinion – Input	1
9	788040	Ring – Retaining	1
10	772099A	Cover – Transmission	1
11	792073A	Screw – Self Tapping	6
12	788069	Seal – Square Cut	1
13	792074	Plug – Threaded	1
14	792078	Screw – Set	1
15	792079	Spring	1
16	792077A	Ball – Steel	1
17	780092	Bearing – Ball	2
18	780065	Washer – Thrust	2
19	780139	Washer – Thrust	1
20	786072	Spacer	1
21	778123A	Gear – Spur (25 Teeth)	1
22	780108	Washer – Thrust	4

Ref. No.	Part No.	Description	No. Used
23	778250	Gear – Spur (27 Teeth)	1
24	778124A	Gear – Spur (30 Teeth)	1
25	778125	Gear – Spur (35 Teeth)	1
26	792089A	Key	4
27	776421	Shaft – Shifter & Brake	1
28	784266	Collar – Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain – Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing – Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Asm – Shift	1
34	776134	Shaft – Counter	1
35	778154	Gear – Bevel (42Teeth)	1
36	778136	Gear – Spur (15 Teeth)	1
37	778126A	Gear – Spur (20 Teeth)	1
38	778249	Gear – Spur (23 Teeth)	1
39	778127A	Gear – Spur (25 Teeth)	1
40	786071	Spacer	1
*	788067B	Grease 32oz Bottle	1
*	510334	Grease Eliminator	1

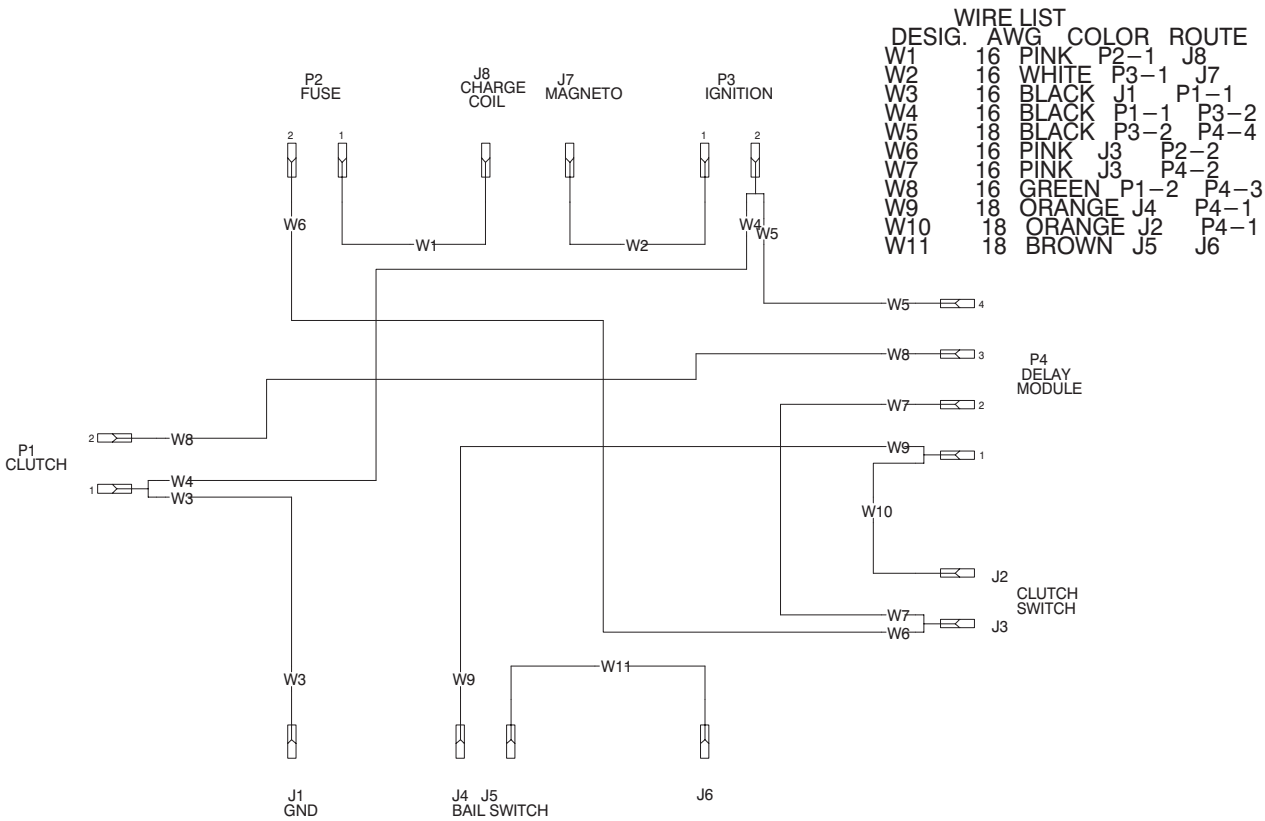

Sheet No.:7

Electrical Schematic

Ref. No.	Part No.	Qty.	Description

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

